

Software User Manual

Operator screens for production image `tdisplay_s3_prod` on the LilyGo T-Display-S3 (Board A).

The LCD and the phone web page share one controller state.

1. Overview
2. Main
3. Calibration
4. Diagnostics
5. Settings

Software — operator UI

Production image `tdisplay_s3_prod` on the LilyGo T-Display-S3 (Board A). The LCD and the phone web page share one controller state. The EC11 knob, the web keypad, the rockers, and the bottle-door key all go through one command arbiter.

Draft. These pages describe the operator screens as built. Each option has a 320 × 170 panel shot. Every label on that shot is named in a field table on Main, Calibration, Diagnostics, and Settings. The web page adds tabs and a keypad; figure 1 is a full-chrome example. Pixel source: UI mockups. Motion, obstruction, and NVS names remain specified in `Production_Software.md` and `T-Display-S3_Firmware_Config.md`.

No application login. Anyone who can reach the controller on the joined LAN, or join its fallback SoftAP, can monitor, configure, and command the door. HTTP is port 80. Do not expose that network to the public internet.

1. Surfaces

View the LCD with USB-C on the left and the EC11 on the right. Firmware uses `Arduino_GFX` rotation 3. The logical panel is 320 wide by 170 tall. Origin (0, 0) is the operator-facing top-left.

The web page is the same state tree plus chrome the LCD does not have: tabs across the top, a keypad on the right that maps to the knob. Use it in landscape on a phone. The layout scales to fill the viewport without clipping. STA in the header means the ESP32 joined site Wi-Fi as a station. AP means the fallback SoftAP is serving.

Surface	Role
LCD (ST7789)	In-box operator panel. Off means GPIO38 backlight and GPIO15 panel power only. The MCU stays up.
Web (port 80)	Same screens. Tabs jump to Main, Calibration, Diagnostics, Settings, or Docs. Keypad on the right: turn – / +, press (Return), hold (back). Figure 1.
EC11	TURN scroll or adjust. PRESS open or accept. HOLD back or cancel.
GPIO14	On-board T-Display button. Same PRESS / HOLD window as the knob switch. Does not revert a recent turn.

1.1 Full web page

On site Wi-Fi, open `http://private-reserve.local` or the STA address on port 80. On the fallback AP, join PrivateReserve with password reserved, then open `http://192.168.4.1/`. The LCD shows only the 320 × 170 panel. The web page adds tabs on top and a keypad on the right. This shot is Documentation. The panel inside the bezel is the same DOC screen as Main figure 8.

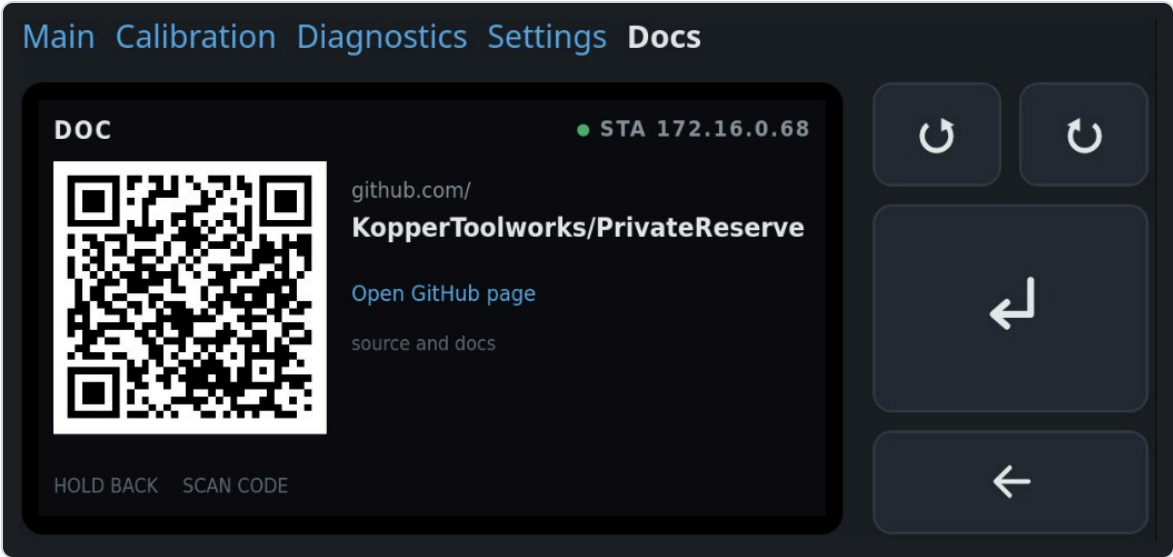


Figure 1. Full web UI in landscape. Tabs jump modes. The keypad maps to the EC11.

On screen	Meaning
Main · Calibration · Diagnostics · Settings · Docs	Top tabs. Jump to that page. They turn the LCD on if it was blank. Same destinations as the mode menu.
Docs in white	Active tab. Other tabs stay blue. The controller is on the Documentation page.
Bezel, 320 × 170	The LCD panel. Same state tree as the physical display. Header here is DOC with STA 172.16.0.68.
QR · github.com/ · KopperToolworks/PrivateReserve	Public project page. The web copy adds a blue Open GitHub page link the LCD does not have.
Top pair, circular arrows	TURN – (CCW) and TURN + (CW). Same as the knob.
Tall Return arrow	PRESS. On Documentation this does nothing.
Wide left arrow	HOLD back. From Documentation this returns to the mode menu.

2. Knob map

HOLD fires once when the push has been down for `ec11_hold_min_ms` (default 400 ms). It does not wait for release. A shorter down is PRESS. Staying down past `ec11_hold_max_ms` does not fire a second HOLD.

Pressing the knob can twist CLK/DT. If the highlight moved within `ec11_press_revert_ms` (100 ms) of an EC11 press, firmware restores the previous item, then handles PRESS. Rotation is ignored while SW is down.

On bottle key, limit markers, and override rockers, TURN selects one of two choices. The highlight stops at the end instead of wrapping. Extra clicks in that direction do nothing. One click moves once.

Gesture	Typical meaning	Web keypad
TURN – / +	Scroll a list or change a pending value	Top pair, circular arrows
PRESS	Open a screen, start a stage, or accept	Large Return arrow
HOLD	Back one screen, or cancel a live procedure	Wide left arrow

3. Command priority

Hard overcurrent and sensor or limit faults outrank all commands. Obstruction handling outranks ordinary commands. Among ordinary sources the order is **EC11** → **web** → **rocker** → **hall**. At most one state-changing command runs per control cycle.

A live calibration or diagnostic-jog step owns the motor. Hall and rocker events may show on the screen. They cannot preempt that step. Main accepts hall and rocker triggers. Diagnostic jog is a timed EC11 (or web keypad) queue. PRESS while idle edits duty (5–25%) and time per detent (200–1000 ms). It does not need the shaft encoder, markers, or current sensor. Current still draws as a live graph when the ACS712 is sampling.

There is no operator Stop on Main. Cancel exists only for a running calibration or diagnostic procedure. Cancel removes PWM, waits for current decay, leaves K1 unchanged, discards incomplete results, and returns to that mode's menu.

Never write NVS while the motor runs. Config writes need an idle motor.

4. Boot, blanking, Wi-Fi

The screen is on at boot. Default idle timeout is 5 minutes (`display_timeout_ms = 300000`). Any EC11 turn or press, GPIO14, or web command resets the timer. Wake from a blanked panel returns to Main.

Calibration, diagnostics, faults, and any prompt that needs an answer inhibit blanking. A latched `PositionUnknown` on Main does not hold the panel on forever. That fault is the default boot state until origin is found.

STA join uses the stored SSID and password. If the SSID is empty or join fails, firmware starts a SoftAP.

Fallback AP	Default
Name (SSID)	PrivateReserve
Join password	reserved (WPA2, eight characters)
Main page	http://192.168.4.1/
Set site Wi-Fi	http://192.168.4.1/wifi

Type the join password on the phone. Then open the main page. The LCD shows that password on Settings → Network, on Diagnostics → Network while SoftAP is up, and on the Wi-Fi-cleared result. Station (house) password stays masked. When STA joins, HTTP is on the STA address and http://private-reserve.local. The steel lid can block the onboard antenna. That note belongs on the network diagnostic screen.

Settings → Service can clear the stored station SSID and password. That write is immediate. The live STA session stays until reboot. After reboot, empty SSID skips STA and starts SoftAP. Fallback AP name and password stay. The same Service list can reboot the controller (PRESS twice). PRESS on the Wi-Fi-cleared result screen also reboots. See Settings figures 11 and 12.

No automatic resume after reset. A watchdog, brownout, operator reboot, or power cycle forces PWM off and cancels the prior command.

5. Modes

Default after boot is **Main** (Standard Operating Mode in the spec). Settings and Documentation are not extra operating modes. They are menu pages reached the same way as Calibration and Diagnostics. Motion is idle while settings are edited.

Page	Header	Panel shots	What it is
Main	MAIN or NEEDS SETUP	8	Live door. Mode menu: Main, Diagnostics, Calibration, Settings, Documentation.
Calibration	CAL · ...	13	Guided stages. Path-clear before any move. Save is one NVS write on Review.
Diagnostics	DIAG · ...	14	One screen per input or output. Jog is a timed EC11 nudge that owns the motor. PRESS edits duty % and step ms. Current is a live graph. Obstruction test owns the motor. Bottle key, limit markers, and override rockers can inject a cooked signal from PRESS.
Settings	SET · ...	12	Staged edits. Review commits. Service actions are destructive and confirm twice, including reboot and clear station Wi-Fi.
Documentation	DOC	1	QR and URL for the public GitHub page. HOLD returns to the mode menu. PRESS does nothing.

Entry screens for each mode:

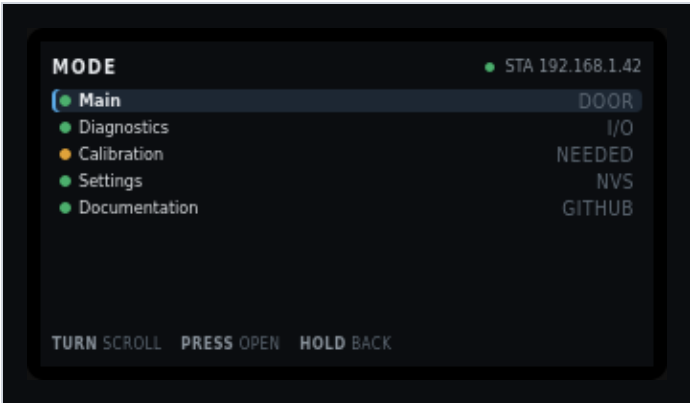


Figure 2. Mode menu on Main. PRESS opens the highlighted item.

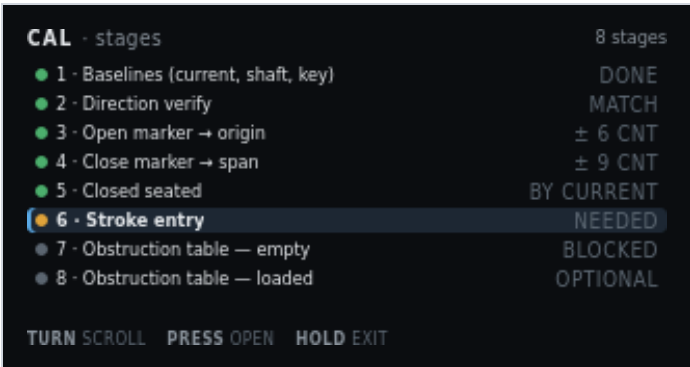


Figure 3. Calibration stage list. See Calibration for every stage.

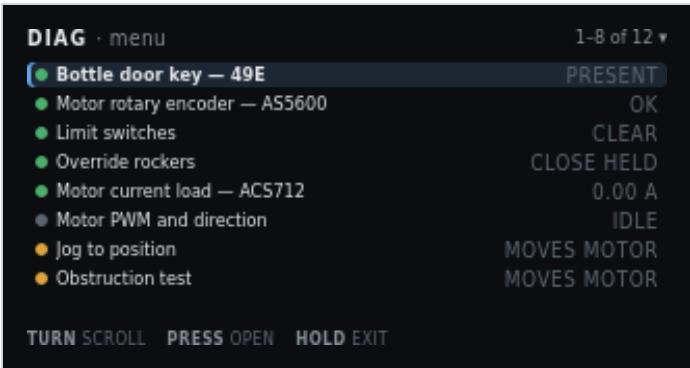


Figure 4. Diagnostics menu. See Diagnostics for all twelve items.

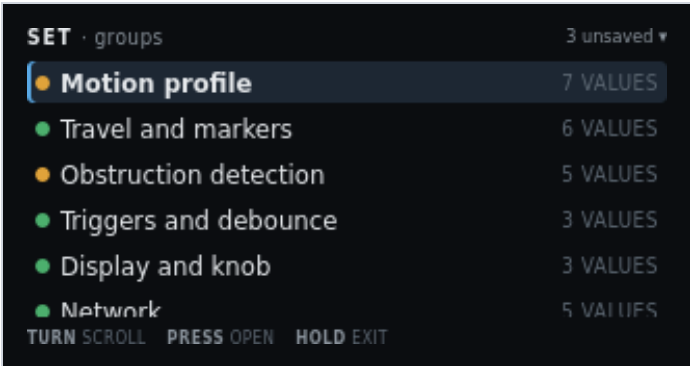


Figure 5. Settings groups. See Settings for edit, review, service, Wi-Fi clear, and reboot.

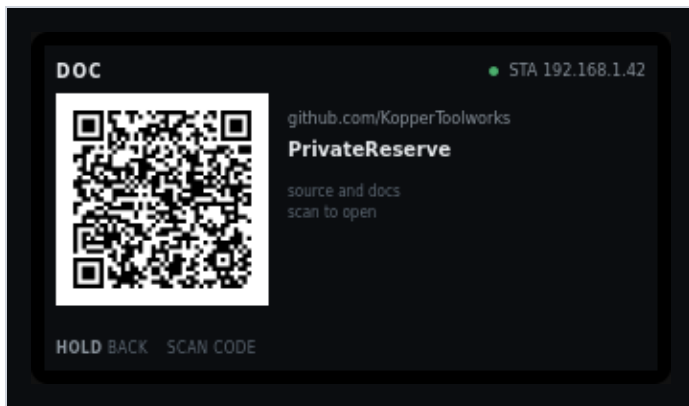


Figure 6. Documentation panel only. See Main · Documentation for every label on this panel. The full web chrome is figure 1.

Every label on these shots is named in the field table on the linked page.

6. Field I/O the screens name

Position is AS5600 counts from the open origin. Inches appear only after stroke entry. The three analog sensors stay independent.

Name	Part	GPIO / Board A	Job
Bottle door key	49E / SS49E	GPIO1, T23	Magnet present or absent. Automatic open/close.
Shaft encoder	AS5600	GPIO43/44, T10/T9	Door position as accumulated counts.
Current load	ACS712-05B	GPIO2, T22	Motor current. Envelope and snug.
Open marker	NC switch	GPIO17, T7	Near-end flag, open side.
Close marker	NC switch	GPIO3, T21	Near-end flag, close side.
Override rockers	two paralleled stations	GPIO10 T20, GPIO18 T8	Edge-trigger open/close. Centre does nothing.
Knob	EC11	GPIO11–13, on-board	Menu, settings, cancel, acknowledge.

7. Needs setup

If origin, marker spans, or the calibration format is invalid, Main blocks automatic motion. Only guided calibration and limited diagnostic jog may move the motor. Jog still runs without a trusted shaft position. Duty and step are edited on that page. Hall and rocker triggers stay disabled.

The AS5600 is single-turn. The stroke spans several turns. After power loss the firmware enters PositionUnknown and needs a guided seek to the open marker. Direction verify must pass before any limit seek.

With an invalid obstruction table, automatic Main motion stays blocked. Recovery uses the 2.50 A hard ceiling until a relearn arms the table.

Main

Live door state. The spec name is Standard Operating Mode. The operator label is **Main**. This is the default screen after boot and after wake from a blanked panel.

Draft. Pixel layout: UI/index.html (320 × 170). LCD and web draw the same state tree. The web keypad sits to the right of the panel. Full chrome: overview figure 1 and figure 9 below.

Needs setup blocks automatic motion. Until origin, markers, and an armed obstruction table exist, hall and rocker triggers stay off. The header reads NEEDS SETUP. The hero is a red POSITION UNKNOWN banner. Run Calibration.

1. Live screen chrome

Every live Main state uses the same regions. A latched fault replaces the hero and the current meter with a red banner. GPIO numbers, duty, phase timers, bin index, and drift live in Diagnostics, not here.

Region	What it shows
Header left	MAIN when setup is complete, or NEEDS SETUP.
Header right	Link state. Green pip and STA plus the IP, or amber pip and AP plus the SoftAP name (default PrivateReserve). The join password is not in the header.
Hero	Current action in the largest type. A latched fault replaces this with a red banner.
Current	Live amps against the learned trip for the bin the door is in. The red tick is that bin's trip. The hard 2.50 A ceiling is the right edge. Hidden when a fault banner occupies the hero.
Travel	Share of the measured span in AS5600 counts. Ticks are the two near-end markers. Outer ends are open-seated and closed-seated. The grey line under the bar is percent and counts, or position unknown.
Tiles	Bottle key, open marker, close marker, shaft rev/s. The close-marker title clips to CLOSE MARK... on the 320-pixel panel.
Footer	TURN menu · PRESS menu. Either gesture opens the mode menu.

1.1 Needs setup — position unknown

Default after power loss until guided calibration finds origin. Automatic hall and rocker triggers stay off.



Figure 1. Main · needs setup. Position unknown. SoftAP serving.

On screen	Meaning
NEEDS SETUP	Header left. Origin, markers, or the calibration format is invalid. Automatic motion is blocked.
Amber pip + AP PrivateReserve	Header right. Station join failed or SSID is empty. Fallback SoftAP is serving. Default name is PrivateReserve. Default join password is reserved. The header does not show the password. Read it on Settings → Network or Diagnostics → Network. Then open http://192.168.4.1/ .
POSITION UNKNOWN	Red banner title. The AS5600 is single-turn. After reset the firmware does not know which turn the door is on.
Automatic motion blocked · run calibration to find origin	Banner detail. Hall and rocker triggers stay disabled until Calibration finds origin.
OPEN / CLOSED	Travel ends. Open is the left of the bar. Closed is the right.
Empty travel track, grey thumb	No fill and no marker ticks in this state. Position is not known, so the bar cannot show a share of span.
position unknown	Left scale under the bar. Replaces percent until origin exists.
– (right of the scale)	Count field. Empty because there is no origin to accumulate from.
BOTTLE KEY · grey pip · ABS · uncal	Hall reads absent. Key levels are not yet captured, so the grey line is uncal instead of an ADC count.
OPEN MARKER · grey pip · CLEAR · travel	Open near-end switch is not made. travel means the door is not at that end (or the end is unknown).
CLOSE MARK... · grey pip · CLEAR · travel	Close near-end switch is not made. Title is Close marker. The tile clips the word.
SHAFT · 0.0 rev/s · –	Motor at rest. Direction dash means no rotation this cycle.
TURN menu · PRESS menu	Either gesture opens the mode menu. Position Unknown is not an acknowledge-away fault.

1.2 Opening

Setup is complete. The bottle key went absent. The door is in cruise toward open.

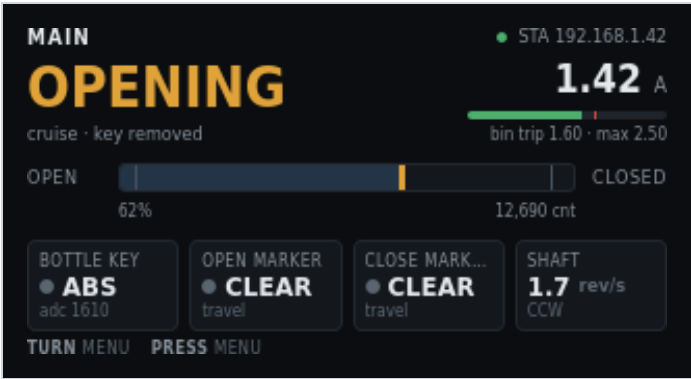


Figure 2. Main · opening. Cruise, key removed.

On screen	Meaning
MAIN	Header left. Setup is complete. Automatic motion is allowed.
Green pip + STA 192.168.1.42	Header right. ESP32 joined site Wi-Fi as a station. HTTP is on this address.
OPENING (amber)	Hero. Current action. Amber means the motor is moving.
cruise · key removed	Motion phase and why the move started. Cruise is the middle of the profile. The bottle key is absent.
1.42 A	Live motor current from the ACS712 after scale.
Green fill on the current bar	Live amps as a share of the 2.50 A hard ceiling. Green because 1.42 A is under this bin's trip.
Red tick on the current bar	This bin's learned trip (1.60 A). Not the hard ceiling.
bin trip 1.60 · max 2.50	Numeric trip for the bin the door is in, then the compile-time ceiling at the right edge of the bar.
OPEN / CLOSED	Travel ends.
Blue fill to 62%, yellow thumb, two marker ticks	Door is 62% of the measured span toward closed. Marker ticks sit near each end. Neither tick is hot.
62%	Share of measured span. Percent is the headline. Counts sit on the right.
12,690 cnt	AS5600 counts from the open origin.
BOTTLE KEY · grey pip · ABS · adc 1610	Key absent. Raw ADC is the diagnostic value for this tile.
OPEN MARKER · grey pip · CLEAR · travel	Open switch not made. Door is in mid travel.
CLOSE MARK... · grey pip · CLEAR · travel	Close switch not made.
SHAFT · 1.7 rev/s · CCW	Shaft speed and direction. On this build CCW is toward open.
TURN menu · PRESS menu	Open the mode menu. There is no Stop on Main.

1.3 Idle — closed and seated

Move finished. Seal is loaded. Motor is at rest.

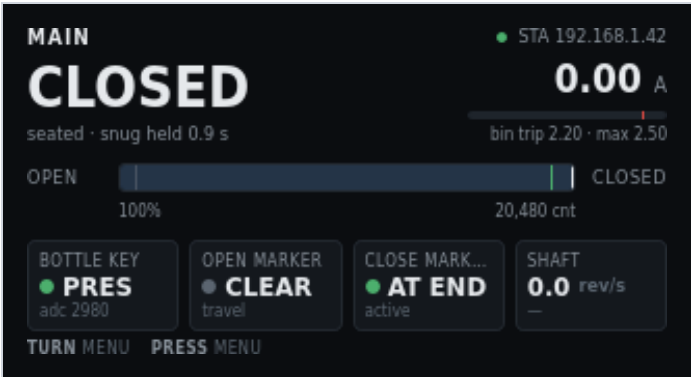


Figure 3. Main · idle closed. Seated, snug held.

On screen	Meaning
MAIN	Header left. Setup complete.
Green pip + STA 192.168.1.42	Station Wi-Fi, HTTP on this IP.
CLOSED	Hero. Door is at the closed-seated end. White, not amber, because the motor is idle.
seated · snug held 0.9 s	How the stop was held. Snug is current-rise seating past the close marker. 0.9 s is hold time this cycle.
0.00 A	Motor current at rest.
Empty current bar, red tick near the right	Live fill is zero. The tick is this bin's trip (2.20 A).
bin trip 2.20 · max 2.50	Closed-end bin trip, then the 2.50 A ceiling.
OPEN / CLOSED	Travel ends.
Fill to the closed end, close-marker tick hot	Door is at 100% of span. The close-marker tick is active because the switch is made.
100% · 20,480 cnt	At closed seated. Counts include travel past the close-marker edge.
BOTTLE KEY · green pip · PRES · adc 2980	Bottle in the recess. Green pip means present on this polarity.
OPEN MARKER · grey pip · CLEAR · travel	Open switch not made.
CLOSE MARK... · green pip · AT END · active	Close switch is made. AT END is the cooked label. active is the raw switch state.
SHAFT · 0.0 rev/s · —	At rest. No rotation this cycle.
TURN menu · PRESS menu	Open the mode menu.

1.4 Closing — creep and snug

Past the close marker. The profile has left cruise and is seating the seal.

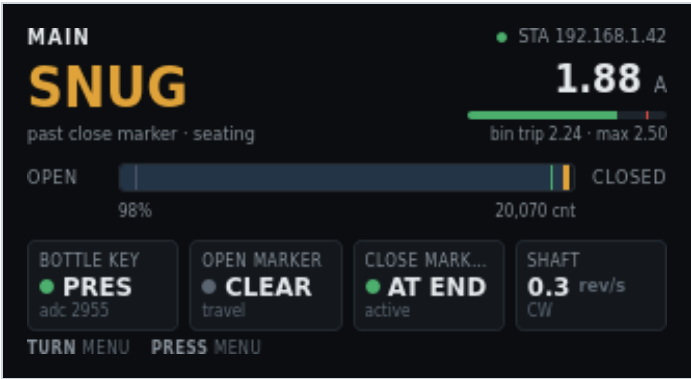


Figure 4. Main · snug. Past close marker, seating.

On screen	Meaning
MAIN	Header left.
Green pip + STA 192.168.1.42	Station Wi-Fi.
SNUG (amber)	Hero. Creep-and-seat phase after the close marker. Motor is still moving.
past close marker · seating	Why snug is showing. Operational snug is a current-rise stop, not a home.
1.88 A	Live current. Seal loading raises amps above cruise.
Green fill, red tick near the right	1.88 A is still under this bin’s 2.24 A trip.
bin trip 2.24 · max 2.50	Near-closed bin trip, then the hard ceiling.
OPEN / CLOSED	Travel ends.
Fill at 98%, close-marker tick hot	Almost seated. Close switch is made.
98% · 20,070 cnt	Share of span and counts from origin.
BOTTLE KEY · green pip · PRES · adc 2955	Bottle present. Close was commanded with the key in.
OPEN MARKER · grey pip · CLEAR · travel	Open switch not made.
CLOSE MARK... · green pip · AT END · active	Close switch made.
SHAFT · 0.3 rev/s · CW	Slow creep toward closed. CW is toward closed on this build.
TURN menu · PRESS menu	Open the mode menu. The move ends at seated, a reverse trigger, a fault, or obstruction handling.

1.5 Obstruction — reversing

Close current crossed the bin trip. Firmware reversed toward open. Obstruction handling outranks ordinary commands.

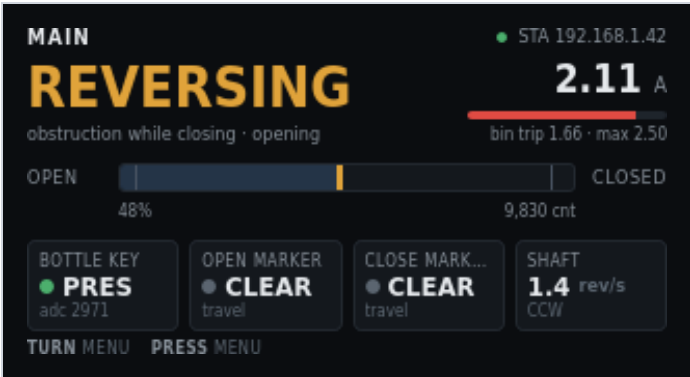


Figure 5. Main · reversing. Obstruction while closing.

On screen	Meaning
MAIN	Header left.
Green pip + STA 192.168.1.42	Station Wi-Fi.
REVERSING (amber)	Hero. Close obstruction. The door is opening to clear the path.
obstruction while closing · opening	Cause and the commanded direction now.
2.11 A	Live current. Above this bin's trip, so the fill is red.
Red fill past the red tick	Live amps exceeded the learned trip (1.66 A). That is why reverse started.
bin trip 1.66 · max 2.50	Mid-travel bin trip, then the hard ceiling. Reverse used the learned trip, not the 2.50 A ceiling.
OPEN / CLOSED	Travel ends.
Fill at 48%, neither marker hot	Mid travel. Both switches clear.
48% · 9,830 cnt	Position when reverse is in progress.
BOTTLE KEY · green pip · PRES · adc 2971	Bottle still present. Close had been the automatic command.
OPEN MARKER · grey pip · CLEAR · travel	Not yet at the open end.
CLOSE MARK... · grey pip · CLEAR · travel	Not at the close end.
SHAFT · 1.4 rev/s · CCW	Opening. CCW toward open on this build.
TURN menu · PRESS menu	Open the mode menu. Reverse still owns the motor until it finishes or faults.

1.6 Fault — second close obstruction

A second close obstruction in the retry window latches a fault. The current meter leaves the panel. PRESS acknowledges when firmware allows it.

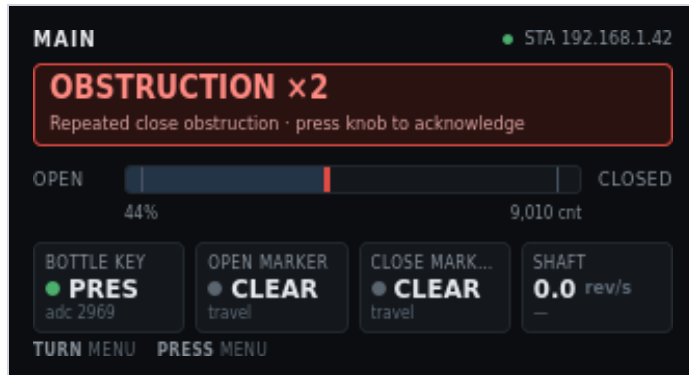


Figure 6. Main · latched obstruction fault. Press to acknowledge.

On screen	Meaning
MAIN	Header left. Setup is still complete. This is a motion fault, not Needs Setup.
Green pip + STA 192.168.1.42	Station Wi-Fi.
OBSTRUCTION x2	Red banner title. Second close obstruction. The door stopped instead of reversing again.
Repeated close obstruction · press knob to acknowledge	Banner detail. PRESS clears this banner when the firmware allows it. TURN still opens the mode menu.
OPEN / CLOSED	Travel ends. The current meter is hidden while the fault banner occupies the hero.
Red thumb at 44%	Position where the second trip stopped the door. Red track because this is a fault state.
44% · 9,010 cnt	Stopped position.
BOTTLE KEY · green pip · PRES · adc 2969	Bottle still present.
OPEN MARKER · grey pip · CLEAR · travel	Not at the open end.
CLOSE MARK... · grey pip · CLEAR · travel	Not at the close end.
SHAFT · 0.0 rev/s · —	Motor stopped after the fault.
TURN menu · PRESS menu	On this fault, PRESS acknowledges. TURN opens the mode menu. Position Unknown is the fault that cannot be acknowledged away.

2. Mode menu

TURN or PRESS on the live Main screen opens this list. Five items. TURN scrolls. PRESS opens. HOLD returns to the live Main screen.

2.1 Five destinations

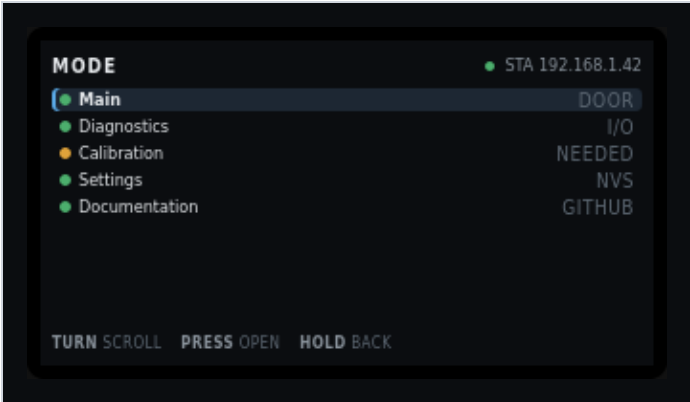


Figure 7. Mode menu. Five items. Calibration pip is amber because setup is still needed. Documentation is the fifth row.

On screen	Meaning
MODE	Header left. Same screen family as Main. Not a fourth operating mode.
Green pip + STA 192.168.1.42	Header right. Same link state as Main.
Blue highlight + left bracket on Main	Selected row. PRESS opens the live Main screen.
Green pip + Main + DOOR	Live door. Value column is the subject of that page.
Green pip + Diagnostics + I/O	Opens the diagnostic menu.
Amber pip + Calibration + NEEDED	Opens the stage list. Amber pip and NEEDED mean origin or later stages are missing. After a full save this row shows green and a status such as armed.
Green pip + Settings + NVS	Opens settings groups. Value is NVS when stored, or unsaved when staged edits exist. If the motor is running, Settings Locked instead.
Green pip + Documentation + GitHub	Opens the Documentation page. QR code for the public project URL.
TURN scroll	Move the highlight.
PRESS open	Enter the highlighted item.
HOLD back	Return to the live Main screen without changing mode.

Web nav tabs send the same jumps: Main, Calibration, Diagnostics, Settings, Docs. They turn the LCD on if it was blank.

2.2 Documentation

Not an operating mode. A read-only page from the mode menu. Header is DOC. The panel shows a QR code for the public project page and the same path as text. This page does not command the motor. PRESS does nothing. HOLD returns to the mode menu.

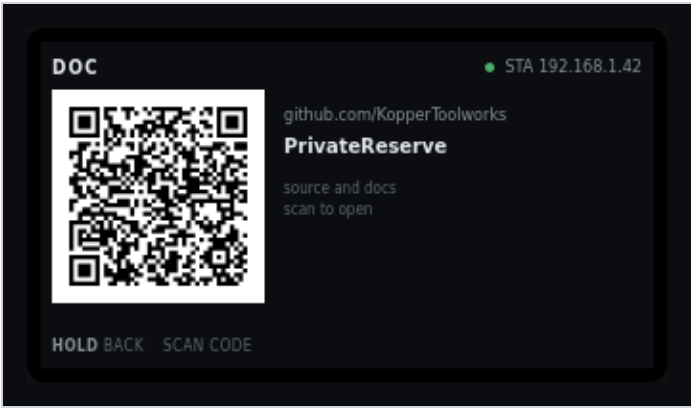


Figure 8. DOC. QR and path for the public GitHub page.

On screen	Meaning
DOC	Header left. Documentation page.
Green pip + STA 192.168.1.42	Header right. Same link state as Main. Amber pip and AP when the fallback SoftAP is serving.
QR code (left)	Encodes https://github.com/KopperToolworks/PrivateReserve . Scan with a phone camera. The enclosure sticker uses the same URL.
github.com/KopperToolworks	Host, as text, if the QR is hard to scan.
PrivateReserve	Repository name.
source and docs	What the page holds. Source, operator docs, and enclosure notes.
scan to open	How to use the QR. On the web copy of this screen, a blue link labelled Open GitHub page opens the same URL. The full web chrome (tabs and keypad) is overview figure 1 and figure 9 below.
HOLD back	Return to the mode menu.
SCAN code	Footer hint. Not a knob gesture. PRESS on this page does nothing.

Pixel source: Main mockup (Documentation state). The enclosure sticker uses the same URL; see DIN/enclosure.md. The repo must stay public or the QR is useless.

3. Knob on Main

Gesture	Action
TURN or PRESS (live screen)	Open the mode menu.
PRESS on Documentation	No-op. The QR is the action.
HOLD on Documentation	Return to the mode menu.
PRESS on a latched fault that can be acknowledged	Clear the banner when the firmware allows it. Position Unknown is not an acknowledge-away fault. It needs calibration.
Hall / rocker	Open or close when setup is ready. Edges, not hold-to-run. Open wins if both rocker throws hit in the same cycle.

There is no Stop on this screen. A move ends at destination, snug, a reverse trigger, a fault, or obstruction handling.

4. Web page

The LCD shows only the 320 × 170 panel. The phone page adds tabs on top and a keypad on the right. Use landscape. The shell scales to the viewport. There is no application login.

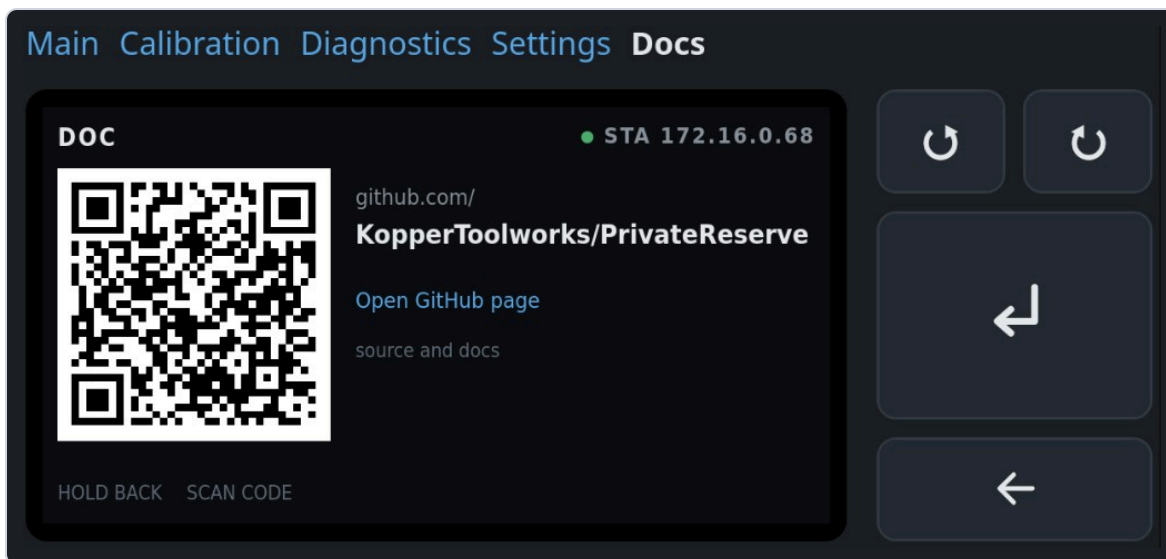


Figure 9. Full web UI on Documentation. Same chrome on every page. Overview figure 1 names every chrome label.

Chrome	Command
Tabs: Main · Calibration · Diagnostics · Settings · Docs	Jump to that page. Active tab is white. They turn the LCD on if it was blank.
Left circular arrow	TURN – (matches CCW on the physical knob)
Right circular arrow	TURN + (matches CW on the physical knob)
Large Return arrow	PRESS
Wide left arrow	HOLD back

On Documentation the web panel also shows Open [GitHub](#) page. That link is not on the LCD. PRESS on this page does nothing. HOLD returns to the mode menu.

Calibration

Initial setup and later recals. A full first run does every stage. A later run can open one process. Header prefix is CAL ·.

Draft. Pixel layout: UI/calibration.html. Hardware procedures: Limit_Marker_And_Snug.md, Load_Bin_Obstruction_Calibration.md.

The door will move. Path-clear must pass before any stage that commands the motor. There is no physical E-stop. HOLD cancels: PWM off, wait for current decay, leave K1 unchanged, discard the partial result, return to the stage list. Never write NVS mid-motion. Review is the single save.

1. Stage list

Entry for a full setup and for a single recalibration. Status words name stale or missing work so you do not run a later stage on a bad earlier one. Six compact rows fit. TURN windows the list. All eight stages are on this shot.

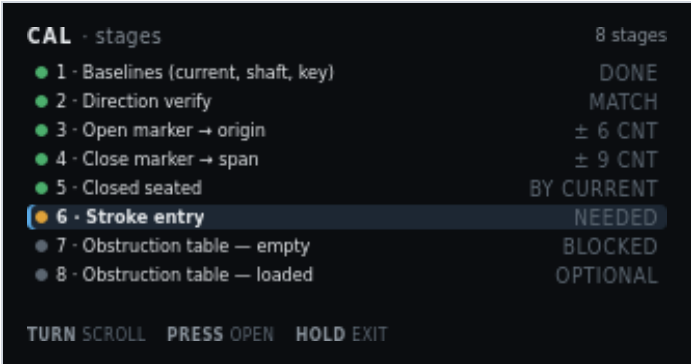


Figure 1. CAL · stages. Stroke entry selected. Stages 7–8 blocked until stroke exists.

On screen	Meaning
CAL · stages	Header left. Calibration mode, stage list.
8 stages	Header right. Count of guided processes. Review is a ninth screen after these, not a stage.
Green pip + 1 · Baselines (current, shaft, key) + DONE	Stage 1 complete. Three rest captures: ACS712 zero, AS5600 jitter, 49E levels.
Green pip + 2 · Direction verify + MATCH	Commanded direction agreed with the shaft. Invert flag is good. Gates all seeks.
Green pip + 3 · Open marker → origin + ± 6 CNT	Open-edge probes accepted. Spread across repeats is 6 counts. That edge is count 0.
Green pip + 4 · Close marker → span + ± 9 CNT	Close-edge probes accepted. Spread 9 counts. Edge minus origin is the measured span.
Green pip + 5 · Closed seated + BY CURRENT	Seated found by current rise, not stall. Confirmation, not a home.
Amber pip + highlight + 6 · Stroke entry + NEEDED	Selected row. Operator inches are missing. Required before learn runs, not before marker seeks.
Grey pip + 7 · Obstruction table – empty + BLOCKED	Cannot start until stroke exists. Empty-rack learn.
Grey pip + 8 · Obstruction table – loaded + OPTIONAL	Second table with racks at max expected load. Skip is allowed.
TURN scroll	Move the highlight. Window the list if more rows exist than fit.
PRESS open	Enter the highlighted stage. Moving stages show path-clear first.
HOLD exit	Return to Main. Incomplete RAM results stay until Review saves or you discard them there.

2. Path-clear gate

Shown before any stage that commands the motor. A checklist, not a single OK. The door does not move until every line is ticked.



Figure 2. CAL · confirm, before stage 3. Third line still unticked.

On screen	Meaning
CAL · confirm	Header left. Gate, not a capture screen.
before stage 3	Header right. This shot is the gate for open-marker seek. Other moving stages show their own number.
THE DOOR WILL MOVE	Amber banner title. Condition before command.
140 V motor · no physical E-stop installed	Banner detail. HOLD is the only cancel. There is no E-stop on this build.
Green pip + Travel path clear of tools and people	Ticked. Operator has acknowledged a clear path.
Green pip + Both marker switches wired and reading LOW	Ticked. NC markers at rest read LOW on this polarity. A HIGH rest would mean a cut wire or a made switch.
Grey pip + highlight + Racks empty for this stage	Not yet ticked. Selected line. TURN moves among lines. This line appears when the stage requires empty racks.
TURN tick	Toggle the highlighted checklist line.
PRESS start	Start the stage when every line is ticked. Does nothing while a line is still grey.
HOLD cancel	Return to the stage list. No motion.

3. Stage 1a — current zero

Captured with PWM at zero. ACS712 offset only. It shares nothing with the shaft or key baselines.

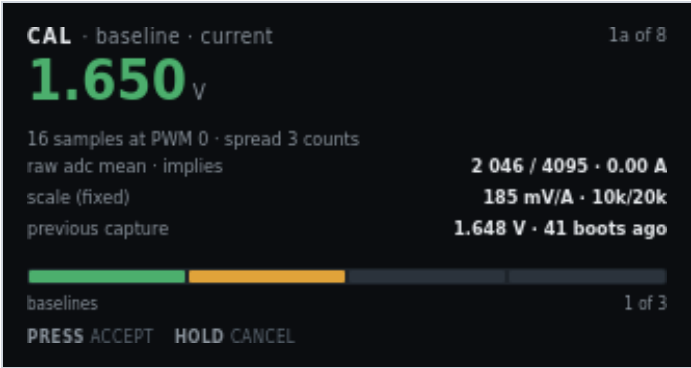


Figure 3. CAL · baseline · current. Motor at rest.

On screen	Meaning
CAL · baseline · current	Header left. First of three baseline captures.
1a of 8	Header right. Stage 1, first sensor, of eight stages.
1.650 V (green)	Hero. Mean ACS712 output at PWM 0. Green means the spread is acceptable.
16 samples at PWM 0 · spread 3 counts	How the mean was taken. Spread is ADC counts, not amps.
raw adc mean · implies · 2 046 / 4095 · 0.00 A	Raw mean of 4095, and the cooked amp reading that offset implies (zero at rest).
scale (fixed) · 185 mV/A · 10k/20k	ACS712-05B sensitivity and the Board A divider. Not an operator edit.
previous capture · 1.648 V · 41 boots ago	Last stored zero, for comparison. No RTC. Age is boot count.
Progress bar, first segment amber, baselines · 1 of 3	Three baseline screens. This is the first. Green segments are done. Amber is now. Grey is remaining.
PRESS accept	Keep this zero in RAM and go to shaft jitter.
HOLD cancel	Discard this capture. Return to the stage list.

4. Stage 1b — shaft jitter band

Measured at rest. This band sets stall minimum progress and the accumulation deadband.



Figure 4. CAL · baseline · shaft. Rest jitter over 2.0 s.

On screen	Meaning
CAL · baseline · shaft	Header left. Second baseline.
1b of 8	Header right.
± 3 cnt (green)	Hero. Peak-to-peak AS5600 counts at rest.
peak-to-peak at rest · 2.0 s window	How long the band was watched.
samples · magnet · 200 at 10 ms · OK	Sample count and magnet status from the AS5600.
sets stall minimum progress · 8 cnt / 500 ms	Stall check needs more motion than rest jitter. Derived from this band, not guessed.
sets accumulation deadband · 3 cnt	Counts inside this band do not walk idle position.
Progress, two green + one amber, baselines · 2 of 3	Current zero accepted. Shaft is now. Key remains.
PRESS accept · HOLD cancel	Keep the band, or discard and return to the list.

5. Stage 1c — bottle key levels

Two captures: bottle out, then bottle in. Enter and exit thresholds are derived from the gap.



Figure 5. CAL · baseline · key. Second capture, bottle in the recess.

On screen	Meaning
CAL · baseline · key	Header left. Third baseline.
1c of 8	Header right.
2 980 (green)	Hero. Present-level ADC this capture.
capture 2 of 2 – bottle IN the recess	Operator has placed the bottle. Capture 1 was absent.
absent 1 605	Right of the hero. First capture, bottle out.
captured 00:41 ago	Age of the absent capture this session.
gap between levels · 1 375 counts	Present minus absent. A small gap means a weak magnet or a bad placement.
derived enter / exit · dead zone · 2 400 / 2 100 · 300	Hysteresis pair and the dead zone between them. Not a single threshold.
polarity for this build · absent → OPEN	Default handbook polarity. Place the bottle to close. Change it in Settings if this cabinet is wired the other way.
Progress, three green + one amber, baselines · 3 of 3	Last baseline. Amber segment is this capture.
PRESS accept · HOLD cancel	Keep both levels, or discard.

6. Stage 2 — direction verify

Runs before any seek. A wrong invert flag would send the first seek at the far end of travel. Slow duty, short move. The operator confirms the door went the way the screen says.



Figure 6. CAL · direction. Match. Invert is unchanged.

On screen	Meaning
CAL · direction	Header left.
2 of 8	Header right.
MATCH (green)	Hero. Commanded OPEN and the shaft turned the expected way.
commanded OPEN · shaft turned CCW	What firmware asked and what the encoder saw.
+412 cnt	Net counts during the short move.
duty 96 · 1.4 s	Creep duty and how long the probe ran.
invert flag · false (unchanged)	Mapping of K1 to shaft sense. False means the compiled default already matches this cabinet.
current during move · 0.62 A peak	Peak amps on this short move. A stall here is a wiring or bind problem, not a direction problem.
door moved toward · OPEN — confirm on the door	Look at the physical door. The encoder can match a wrong invert if you never look.
Amber line: If the door moved to CLOSE, press to set the invert flag and repeat.	Mismatch path. PRESS sets invert and runs the probe again.
PRESS invert	Flip the invert flag and repeat the short move.
TURN accept	Keep MATCH (or the new invert after a repeat).
HOLD cancel	Discard. Return to the stage list.

7. Stage 3 — open marker and origin

Repeat probes of the same edge from the same direction. The spread is the pass criterion. The accepted actuation edge becomes count zero.



Figure 7. CAL · open marker. Third probe complete. Spread 6 counts.

On screen	Meaning
CAL · open marker	Header left.
3 of 8	Header right.
PROBE 3 / 3 (amber)	Hero. Last of three approaches. Amber because the motor just moved.
creep · back off 400 cnt · re-approach	Probe method. Operational snug does not apply during calibration seeks.
probe 1 — actuate / release · 402 / 361 cnt	First pair. Actuation and release differ because the switch has hysteresis. Approach from the same direction each time.
probe 2 — actuate / release · 398 / 358 cnt	Second pair.
probe 3 — actuate / release · 404 / 363 cnt	Third pair.
spread · tolerance · 6 · 20 cnt	Actuate spread across repeats versus the allowed band. 6 is inside 20.
origin will be set at · actuate edge → 0	Accepted open actuation becomes count zero for everything downstream.
PRESS accept origin	Keep the origin in RAM.
HOLD cancel	Discard a half-probed edge. Partial marker data is not usable.

8. Stage 4 — close marker and span

Same probe method at the other end. The accepted edge minus origin is the measured span. Obstruction bins divide this span.

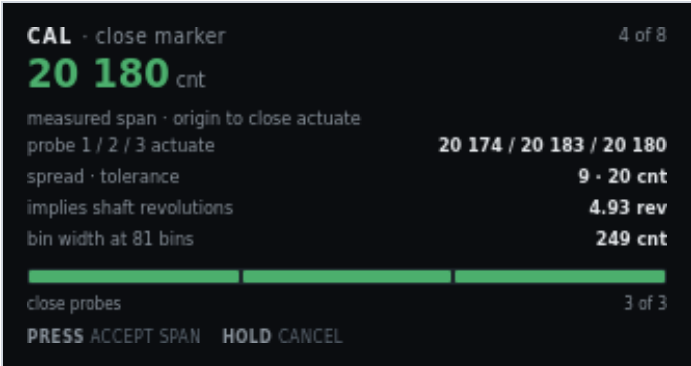


Figure 8. CAL · close marker. Measured span accepted if you press.

On screen	Meaning
CAL · close marker	Header left.
4 of 8	Header right.
20 180 cnt (green)	Hero. Measured span from origin to close actuation.
measured span · origin to close actuate	What the hero number is. Not seated. Seated is stage 5, past this edge.
probe 1 / 2 / 3 actuate · 20 174 / 20 183 / 20 180	Three actuation edges. Release edges were captured. This row shows actuate only.
spread · tolerance · 9 · 20 cnt	Spread inside tolerance.
implies shaft revolutions · 4.93 rev	Span divided by 4096 counts/rev. Sanity check against the mechanical stroke.
bin width at 81 bins · 249 cnt	Span divided into 81 obstruction bins.
Progress, three green, close probes · 3 of 3	All three close probes done.
PRESS accept span · HOLD cancel	Keep the span, or discard the half-probed edge.

9. Stage 5 — closed seated

Past the close marker on creep. How the stop was found is stored: a current rise means the seal is loading. A stall without one means the door hit something solid.

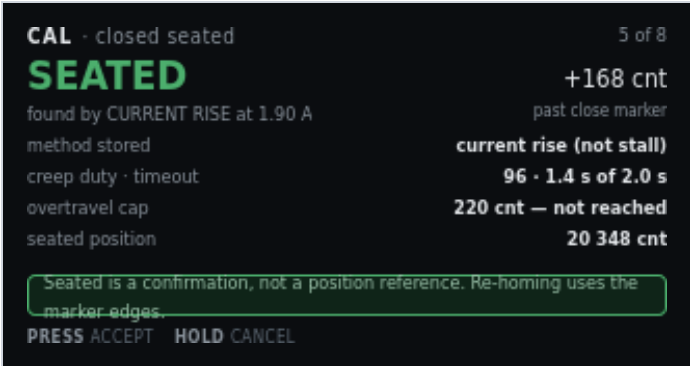


Figure 9. CAL · closed seated. Found by current rise, 168 counts past the marker.

On screen	Meaning
CAL · closed seated	Header left.
5 of 8	Header right.
SEATED (green)	Hero. Physical closed stop found.
found by CURRENT RISE at 1.90 A	Method. Prefer current-draw rise (snug). Else record stall.
+168 cnt	Counts past the close-marker actuation.
past close marker	Seated is beyond the near-end flag, not at it.
method stored · current rise (not stall)	Written with the capture so Diagnostics can show why seated was accepted.
creep duty · timeout · 96 · 1.4 s of 2.0 s	Duty used and how much of the seek timeout was consumed.
overtravel cap · 220 cnt — not reached	Hard cap past the marker. A hit here is a fault, not a seated capture.
seated position · 20 348 cnt	Origin-relative counts of the seated stop.
Green line: Seated is a confirmation, not a position reference. Re-homing uses the marker edges.	Do not treat seated as a home. Power-loss recovery seeks the open marker.
PRESS accept · HOLD cancel	Keep seated, or discard.

10. Stage 6 — stroke entry

The only operator-typed number, and the only place inches enter the system. It gates learn runs because bin widths are reported in centimetres. It never widens a safety limit.

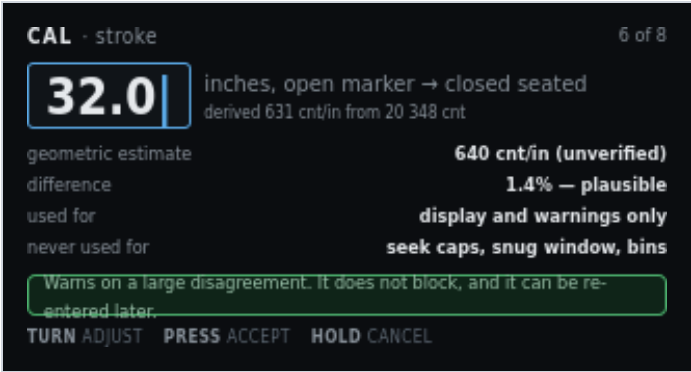


Figure 10. CAL · stroke. 32.0 in, derived 631 cnt/in.

On screen	Meaning
CAL · stroke	Header left.
6 of 8	Header right.
32.0 with caret	Pending inches, open marker to closed seated. TURN adjusts.
inches, open marker → closed seated	What the number measures. Not overall cabinet width.
derived 631 cnt/in from 20 348 cnt	Seated counts divided by the typed inches. Display only.
geometric estimate · 640 cnt/in (unverified)	Independent estimate from the mechanical drawing. Unverified means it is not a measured fact.
difference · 1.4% — plausible	Typed stroke versus the geometric estimate. A large disagreement warns. It does not block.
used for · display and warnings only	Inches and counts-per-inch never feed a seek cap.
never used for · seek caps, snug window, bins	Those limits stay in counts from stages 3–5.
Green line: Warns on a large disagreement. It does not block, and it can be re-entered later.	You can fix a typo without repeating marker probes.
TURN adjust	Change the pending inches.
PRESS accept	Keep the stroke in RAM. Unblocks stage 7.
HOLD cancel	Leave the previous stroke (or none).

11. Stage 7 — obstruction table, empty racks

Three clear runs each way at the production profile. Obstruction reverse is off. The 2.50 A ceiling stays on. A trip discards that run instead of teaching it.

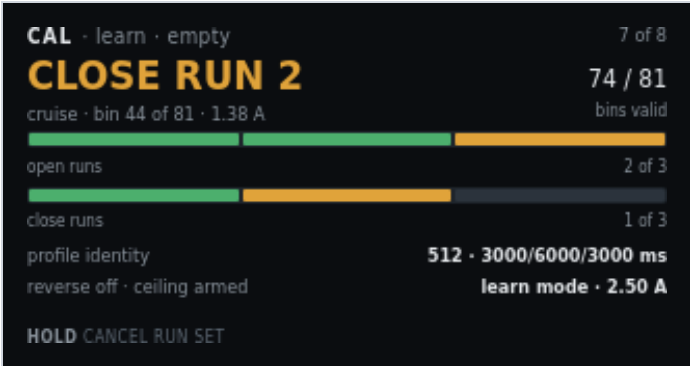


Figure 11. CAL · learn · empty. Second close run in cruise.

On screen	Meaning
CAL · learn · empty	Header left. Empty-rack table.
7 of 8	Header right.
CLOSE RUN 2 (amber)	Hero. Second of three close strokes. Motor live.
cruise · bin 44 of 81 · 1.38 A	Profile phase, current bin, live amps.
74 / 81	Bins that already have a valid sample this run set.
bins valid	Learn runs stop at the marker, so some end bins stay unvisited.
Open-run pips, two green + one amber, open runs · 2 of 3	Open-direction progress. This shot is mid close-run, so the open bar may already be ahead.
Close-run pips, one green + one amber + one grey, close runs · 1 of 3	Close-direction progress. Run 2 is live.
profile identity · 512 · 3000/6000/3000 ms	Cruise duty and accel / cruise / decel times. Stored with the table so a later profile change can invalidate it.
reverse off · ceiling armed · learn mode · 2.50 A	Obstruction reverse is off so a bind is not taught as load. The hard ceiling still trips and discards the run.
HOLD cancel run set	PWM off, current decay, K1 unchanged, discard the incomplete table. Return to the stage list. There is no PRESS on this live run.

12. Stage 8 — obstruction table, loaded racks

Optional second table with racks at maximum expected load. Which table arms in service is still an open spec decision, so the screen states it.



Figure 12. CAL · learn · loaded. Gate before the loaded run set.

On screen	Meaning
CAL · learn · loaded	Header left.
8 of 8	Header right.
LOAD THE RACKS	Amber banner title. Do not start this set empty.
Fill to maximum expected capacity before starting this set	Banner detail. Max expected load, not an overload test.
empty table · stored · armed	Stage 7 already produced a usable empty-rack envelope.
loaded table · not yet learned	This stage has not run.
arming rule · undecided — see spec	Which table Main uses in service is not chosen on this panel. See Production_Software.md.
runs required · 3 open · 3 close	Same run count as the empty table.
PRESS start	After racks are loaded, start the run set (path-clear still applies).
HOLD skip	Leave the loaded table unlearned. Review will show it as optional skipped.

13. Review and save

Single NVS write. Everything above lived in RAM until this screen. The blob carries the profile identity that will later invalidate it. Motor must be idle.



Figure 13. CAL · review. One optional stage skipped. Motor idle.

On screen	Meaning
CAL · review	Header left.
save	Header right. This is the write point.
READY TO SAVE (green)	Hero. Completeness check passed.
8 stages complete · 1 optional skipped	Loaded-rack table was skipped. Empty table is enough to leave Needs Setup.
origin · span · seated · 0 · 20 180 · 20 348 cnt	The three count references from stages 3–5.
marker spread (open / close) · 6 / 9 cnt	Probe quality from stages 3 and 4.
stroke → derived · 32.0 in → 631 cnt/in	Typed stroke and the display-only scale.
tables · blob · empty armed · v3 3.6 kB	Which envelope is armed, format version, and blob size.
Green line: Motor is idle and current has decayed. NVS is never written while the motor runs.	If the motor is still spinning, this screen will not write.
PRESS save	One NVS write. Then return toward Main.
HOLD discard	Drop the RAM results. Stored NVS is unchanged.

14. Knob on a live stage

Gesture	Typical meaning
TURN	Jog or adjust where the stage allows it (stroke entry, direction accept, checklist tick).
PRESS	Capture, accept, or start the next sample.
HOLD	Cancel the live procedure. Return to the stage list.

When an earlier value changes, mark dependent later steps stale. There is no RTC. Metadata uses run count and relative millis only. Never reverse K1 without PWM blanking.

Diagnostics

One screen per input or output. Focused content is large. Every detail page names the GPIO and Board A terminal and shows the live level. Supporting values stay small. Header prefix is DIAG ·.

Draft. Pixel layout: UI/diagnostics.html. Terminal numbers match Board A.

Jog and the obstruction test own the motor. They carry an amber banner while live. Hall and rocker cannot preempt them. HOLD cancels: PWM off, current decay, K1 unchanged. Jog is a timed EC11 (or web keypad) nudge. PRESS while idle edits duty (5–25%) and step (200–1000 ms). It does not need the shaft encoder, markers, or current sensor. Leftover queue time expires on its own, so a closed tab cannot leave the motor latched.

1. Menu

Twelve items. Eight fit. TURN windows the list. Pips flag anything already unhealthy. PRESS opens. HOLD exits to Main. Items 9–12 are off this shot. Each has its own figure below.

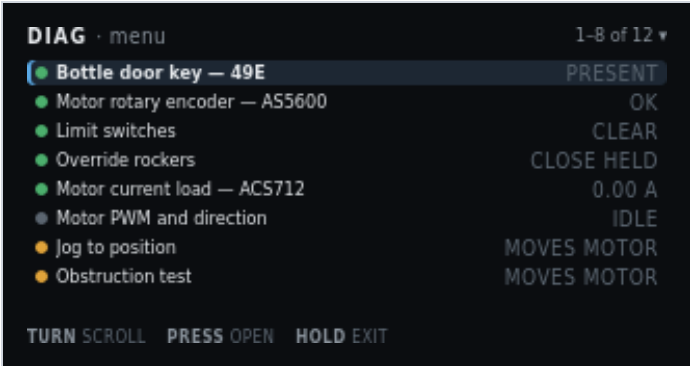


Figure 1. DIAG · menu. First window, bottle key selected.

On screen	Meaning
DIAG · menu	Header left.
1-8 of 12 ▾	Header right. This window is the first eight rows. The triangle means more items below.
Green pip + highlight + Bottle door key — 49E + PRESENT	Selected. Hall sensor. Value is live cooked state.
Green pip + Motor rotary encoder — AS5600 + OK	Shaft magnet detected, I ² C good.
Green pip + Limit switches + CLEAR	Neither marker is made.
Green pip + Override rockers + CLOSE HELD	Close throw is made right now. Centre does nothing. PRESS on that page pulses a throw through the same path as the hardware.
Green pip + Motor current load — ACS712 + 0.00 A	Live amps at rest.
Grey pip + Motor PWM and direction + IDLE	Duty zero. Grey pip is idle, not a fault.
Amber pip + Jog to position + MOVES MOTOR	Amber because opening this page can command the motor.
Amber pip + Obstruction test + MOVES MOTOR	Same warning. Plastic-bottle test. Does not write the learned table.
TURN scroll · PRESS open · HOLD exit	Window the list, enter the highlighted item, or return to Main.

TURN past item 8 to reach:

#	Menu item	Value column	Opens
9	Obstruction table	graphs	Close-direction graph first. TURN swaps to open.
10	EC11 knob and button	live detents	Quadrature, detent scale, display timeout remaining.
11	Network and OTA	STA or AP	Address, mDNS, antenna note.
12	Stored calibration	armed / stale	Which steps are valid and why a stale one failed.

Every detail page keeps a pin strip: GPIO, terminal, function, live level or raw value. HOLD back returns to this menu. Bottle key, limit markers, and override rockers can inject a cooked signal from PRESS. The pin strip stays the real GPIO.

2. Bottle door key — 49E

Present and absent are two calibrated levels with separate enter and exit thresholds. Polarity is stated in words because it is configurable. PRESS can pulse the cooked state without moving the bottle.

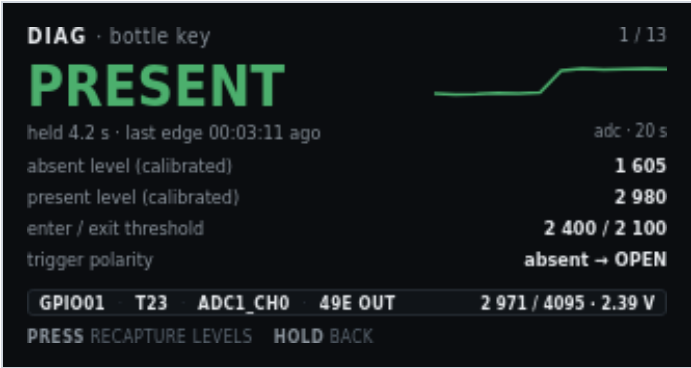


Figure 2. DIAG · bottle key. Present, last edge 3 min 11 s ago.

On screen	Meaning
DIAG · bottle key	Header left.
1 / 13	Header right. First of thirteen detail screens. The menu is not numbered here.
PRESENT (green)	Hero. Cooked state after hysteresis. Amber plus SIM when PRESS has forced the state.
pulse · adc 2971 · last edge ...	Selected action (pulse or recapture), live ADC, and age of the last cooked edge. Sparkline is the real ADC, newest at the right.
Sparkline + adc · 8 s	Raw ADC, newest at the right (dot). About 8 seconds once the strip is full. The trace scrolls left. The step up is the bottle going in.
absent level (calibrated) · 1 605	Stage 1c absent capture.
present level (calibrated) · 2 980	Stage 1c present capture.
enter / exit threshold · 2 400 / 2 100	Hysteresis pair derived from those levels.
trigger polarity · absent → OPEN	Automatic Main command when the key leaves the recess.
Pin strip: GPIO01 · T23 · ADC1_CH0 · 49E OUT	MCU pin, Board A terminal, ADC channel, sensor output name. Always the real pin, even during a pulse.
2 971 / 4095 · 2.39 V	Live raw and volts at the pin.
TURN action	Pulse the key, or recapture levels. Pulse is the default. The highlight stops at each end. Extra clicks do not wrap.
PRESS pulse	Toggle cooked present/absent. Fires the same open/close edge as the hall sensor. Does not fake the ADC.
PRESS recapture	After TURN: capture absent, then PRESS again with the bottle in. Same two-step as Calibration 1c.
HOLD back	Return to the diagnostic menu. Clears a simulated key state.

3. Motor rotary encoder — AS5600

The only source of door position. It also carries the jitter band and the drift from the last marker re-sync.



Figure 3. DIAG · shaft encoder. 62% of span, magnet OK.

On screen	Meaning
DIAG · shaft encoder	Header left.
2 / 13	Header right.
12 690 cnt	Hero. Accumulated counts from the open origin.
62% of span · 3.10 rev from origin	Share of measured span, and shaft revolutions since origin.
Angle dial	Single-turn AS5600 angle inside the current revolution. Not the multi-turn door position.
148.3°	That single-turn angle in degrees.
1.7 rev/s CCW	Live shaft speed and direction.
raw angle · magnet · 1 687 · OK	12-bit raw angle (0–4095) and magnet quality.
AGC · status · 128 · detected	Automatic gain and magnet-detected flag from the chip.
jitter band at rest · ± 3 cnt	Stage 1b capture. Growing band is an early warning for a weak magnet.
drift last re-sync (open / close) · -12 / +7 cnt	Correction applied the last time each marker was seen. Growing drift means lost turns or a slipping magnet.
Pin strip: GPIO43/44 · T10/T9 · I²C 0x36 · 12-bit	SCL/SDA, terminals, bus address, resolution.
4096 cnt/rev · 100 kHz	Counts per mechanical revolution and I²C clock.
PRESS zero drift log	Clear the displayed per-marker drift totals. Does not change origin.
HOLD back	Return to the menu.

4. Limit switches

HIGH is the marker state. A cut wire is indistinguishable from a made switch, so the screen says so. Both markers active is a fault, shown here rather than as a silent refusal to start. PRESS can force a marker without blocking the optical path.

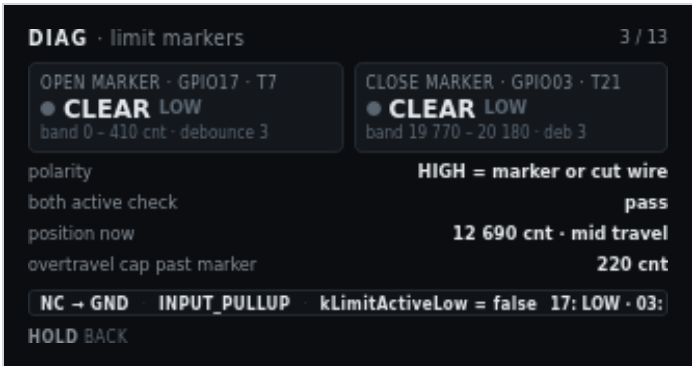


Figure 4. DIAG · limit markers. Both clear, mid travel.

On screen	Meaning
DIAG · limit markers	Header left.
3 / 13	Header right.
Open marker · GPIO17 · T7	Left tile title. Pin and Board A terminal.
Grey pip + CLEAR LOW	Open switch not made. Electrical level is LOW.
band 0 - 410 cnt · debounce 3	Count window where an open-marker actuation is accepted, and debounce samples.
Close marker · GPIO03 · T21	Right tile title.
Grey pip + CLEAR LOW	Close switch not made.
band 19 770 - 20 180 · deb 3	Close-marker acceptance window and debounce.
polarity · HIGH = marker or cut wire	NC to GND with pull-up. HIGH means the loop is open: at the end, or the wire is cut.
both active check · pass	Both markers made at once is a fault. Pass means that is not happening.
position now · 12 690 cnt · mid travel	Live counts and a cooked region name.
overtravel cap past marker · 220 cnt	Hard cap after a marker. A seek that passes this is a fault.
Pin strip: NC → GND · INPUT_PULLUP · kLimitActiveLow = false	Wiring and the firmware polarity constant.
17: LOW · 03: LOW	Live GPIO17 and GPIO3 levels. Stays the real pin during a force.
TURN select · PRESS force	Highlight open or close. The highlight stops at each end. Extra clicks do not wrap. PRESS latches that marker as if the switch were made. Amber pip and SIM on the tile. PRESS again clears that force. A forced destination marker will stop a move already in progress.
HOLD back	Return to the menu. Clears a forced marker.

5. Override rockers

Two paralleled stations act as one logical switch. Each throw is shown separately. A stuck throw is invisible if you only display the combined result. Both throws at once is a defined tie-break, not a fault. PRESS pulses the selected throw through the same path as the hardware.



Figure 5. DIAG · override rockers. Close throw held.

On screen	Meaning
DIAG · override rockers	Header left.
4 / 13	Header right.
Open throw · GPIO10 · T20	Left tile. Open side of both paralleled stations.
Grey pip + OFF HIGH	Open throw not made. Pulled up.
edges 14 · last 00:02:41	Accepted edges since boot, and age of the last open edge.
Close throw · GPIO18 · T8	Right tile.
Green pip + MADE LOW	Close throw is held to ground right now.
edges 11 · last 00:00:03	Close-edge count and the edge three seconds ago.
command model · edge trigger · centre does nothing	Rocker centre is idle. Hold-to-run is not the model.
both throws made · tie-break: OPEN wins	If both throws hit in the same cycle, firmware commands open.
debounce · 25 ms	Switch debounce. Same family as Settings → Triggers.
last accepted command · CLOSE · ignored, already closed	Last edge that passed debounce, and why it did not start a move.
Pin strip: active-low → GND · INPUT_PULLUP · 2 stations	Wiring. Two stations in parallel hide a stuck mate unless this page splits the throws.
10: HIGH · 18: LOW	Live GPIO10 and GPIO18. Stays the real pin during a pulse.
TURN select · PRESS pulse	Highlight open or close. The highlight stops at each end. Extra clicks do not wrap. PRESS injects a short made-edge on that throw, the same command as the physical rocker. It can start a move. Amber pip and SIM while the pulse is live.
HOLD back	Return to the menu. Drops a pulse that has not expired.

6. Motor current load — ACS712-05B

Live amps against the learned envelope for the bin the door is in. Trip is a time-plus-threshold decision, so inrush skip and hold time are on the same page.

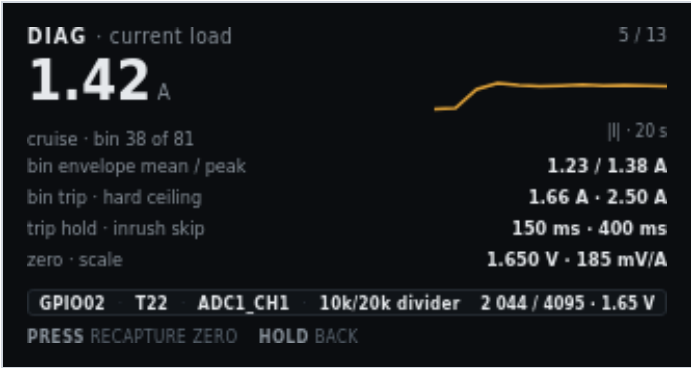


Figure 6. DIAG · current load. Live 1.42 A in cruise.

On screen	Meaning
DIAG · current load	Header left.
5 / 13	Header right.
1.42 A	Hero. Cooked motor current.
cruise · bin 38 of 81	Motion phase and which obstruction bin the door is in.
Sparkline + I · 8 s	Absolute current, newest at the right (dot). About 8 seconds once the strip is full. The trace scrolls left. The step up is the start of cruise.
bin envelope mean / peak · 1.23 / 1.38 A	Learned mean and peak for bin 38.
bin trip · hard ceiling · 1.66 A · 2.50 A	This bin’s trip, then the compile-time ceiling.
trip hold · inrush skip · 150 ms · 400 ms	How long current must stay over trip, and how long after PWM-on the envelope is ignored.
zero · scale · 1.650 V · 185 mV/A	Stage 1a zero and the fixed ACS712-05B scale.
Pin strip: GPIO02 · T22 · ADC1_CH1 · 10k/20k divider	Pin, terminal, ADC channel, Board A divider.
2 044 / 4095 · 1.65 V	Live raw and volts. Near the rest zero, plus load.
PRESS recapture zero	Jump to Calibration stage 1a. Motor must be at rest.
HOLD back	Return to the menu.

7. Motor PWM and direction

Duty and K1 are separate blocks. Duty must reach zero and current must decay before the relay moves, so the blank timers are on this page.

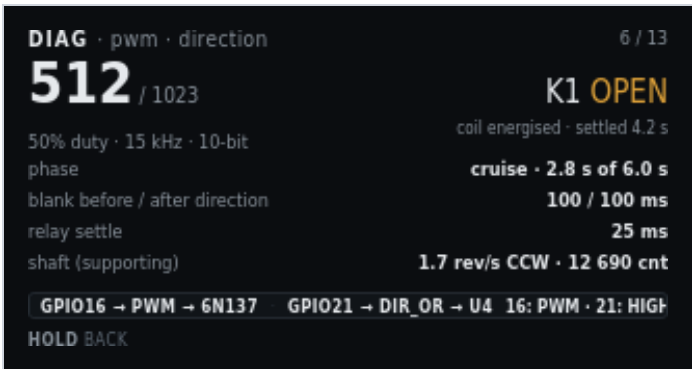


Figure 7. DIAG · pwm · direction. 50% duty, K1 open.

On screen	Meaning
DIAG · pwm · direction	Header left.
6 / 13	Header right.
512 / 1023	Hero. Live duty in 10-bit counts.
50% duty · 15 kHz · 10-bit	Percent, carrier, resolution. Carrier is compile-time. It is not a setting.
K1 OPEN (amber)	Direction relay commanded open. Amber because the coil is energised.
coil energised · settled 4.2 s	K1 has been in this state long enough to be settled.
phase · cruise · 2.8 s of 6.0 s	Profile phase and how much of cruise time has elapsed.
blank before / after direction · 100 / 100 ms	PWM-off windows around a K1 change. Never reverse K1 without this blanking.
relay settle · 25 ms	Wait after K1 before PWM may rise.
shaft (supporting) · 1.7 rev/s CCW · 12 690 cnt	Encoder as a supporting signal on this page. The focused page is PWM.
Pin strip: GPIO16 → PWM → 6N137 · GPIO21 → DIR → U4	PWM path onto Board B, and direction into U4.
16: PWM · 21: HIGH	GPIO16 is toggling. GPIO21 is HIGH for open on this build.
HOLD back	Return to the menu. This page does not command the motor.

8. Jog to position

Owens the motor. Each EC11 detent (or web - / +) queues a fixed run time at jog duty. Same-direction clicks add to that queue. Opposite clicks subtract; when the queue is gone, that click reverses through the normal PWM-off, decay, blank, and K1 settle windows. PRESS while idle cycles the two live settings: duty as a percent (5–25%) and time per detent (200–1000 ms). Shaft encoder, markers, and learned envelope do not start, stop, or abort the move. Current is a live 0–2.50 A graph when the ACS712 is sampling; it is display-only. Travel shows unknown if origin is not trusted.



Figure 8. DIAG · jog. Timed queue, duty as percent, live 0–2.50 A graph. PRESS while idle edits duty and step.

On screen	Meaning
DIAG · jog	Header left.
7 / 13	Header right.
MOTOR LIVE — JOG	Amber banner title. This page owns the motor. Hall and rocker cannot preempt it.
EC11 only — opposite blanks before reverse	Banner detail. Only the knob or web keypad commands this page. A reverse never hot-switches K1.
OPEN / CLOSED	Travel ends.
Blue fill to 62%, yellow thumb, two marker ticks	Same travel widget as Main when position is trusted. Door is at 62% of span. Missing encoder: unknown and -.
62% · 12 690 cnt	Share of span and counts from origin, if the shaft magnet is good.
jog duty · direction · 9 % · CLOSE	Jog PWM as a percent of 10-bit full scale (5–25%). K1 for this jog. PRESS while idle highlights this row; TURN changes it.
step · remaining · 400 ms · 800 ms	Time added per detent (200–1000 ms, 50 ms steps) and how much powered time is still queued. PRESS again highlights this row. Queue caps at 4 s.
Live amp strip · 0.41 A · 0–2.50 scale	ACS712 history, last ~8 s. Red line is the 2.50 A ceiling. Not used to run or stop the jog.
Pin strip: GPIO16 · GPIO21 · T5 / T6	PWM and direction pins, Board A motor terminals.
12 690 cnt or enc --	Shaft counts when the magnet is good. Display-only.
TURN jog or TURN duty / TURN step	Default: CW queues close, CCW queues open. Same way extends. Opposite shortens, then blanks and reverses. With a setting highlighted, TURN changes that value.
PRESS stop or PRESS edit / PRESS next	While moving: drop PWM. While idle: cycle Jog → duty % → step ms → Jog. Writes the value when you leave a field.
HOLD exit	Stop if moving, save a pending edit, then return to the menu.

9. Obstruction test

Plastic bottle between the doors. Same envelope rules as Main. Does not write the learned table. Learn runs assume a clear path. This test is not a substitute for them.



Figure 9. DIAG · obstruction test. Close trip, reversed, opening.

On screen	Meaning
DIAG · obstruction test	Header left.
8 / 13	Header right.
TRIPPED — REVERSED	Amber banner title. Close obstruction fired. Reverse is in progress or just finished.
Close obstruction at bin 41 · 2.11 A vs trip 1.65 A	Where and how far over trip.
test load · plastic bottle between doors	Specified test article. Not a body part, not a tool.
expected close / open · reverse once / fault first trip	Close reverses once. Open faults on the first trip. Same as Main.
result this run · reversed, then opened to marker	What this test actually did.
table writes · hard ceiling · disabled · 2.50 A armed	A deliberate obstruction cannot be taught as load. The ceiling stays on.
Pin strip: GPIO02 current · GPIO16 pwm · GPIO21 dir	Signals this test uses.
1.02 A · opening	Live current and direction after reverse.
PRESS run again	Start another close into the bottle.
HOLD exit	Cancel if live, then return to the menu.

10. Obstruction table — close direction

Learned envelope as a curve. Breakaway at the open end and seal loading at the close end are the shape you want. A bump in the middle is a bind. The grey block past the close marker is travel the learn runs never enter, because snug is a separate window.

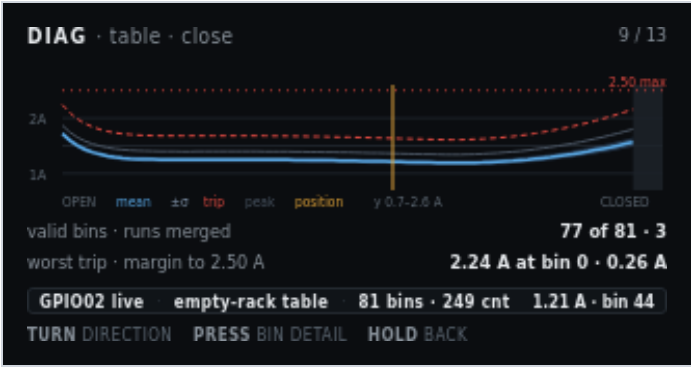


Figure 10. DIAG · table · close. Empty-rack table, live at bin 44.

On screen	Meaning
DIAG · table · close	Header left. Close-direction envelope.
9 / 13	Header right. Menu item 9 is this pair of graphs.
1A / 2A on the Y axis	Current scale. The window is 0.7–2.6 A so the curve is readable on 170 pixels.
Dashed red line + 2.50 max	Compile-time hard ceiling. Not a learned value.
Blue mean curve	Merged mean current per bin from the learn runs.
Grey band $\pm\sigma$	One-sigma band around the mean.
Dashed red trip curve	Per-bin trip used on Main.
Thin grey peak curve	Highest sample merged into that bin.
Vertical amber position line	Live door position on this graph.
Dark block near CLOSED	Bins past the close marker. Learn runs never visit them. Snug is a separate window.
Legend: OPEN · mean · $\pm\sigma$ · trip · peak · position · y 0.7–2.6 A · CLOSED	X ends and the plotted series. Y window is stated so the clipped axis is not mistaken for 0–2.50 A.
valid bins · runs merged · 77 of 81 · 3	Bins with data, and how many strokes were merged.
worst trip · margin to 2.50 A · 2.24 A at bin 0 · 0.26 A	Highest trip on this table (breakaway at the open end) and room left to the ceiling.
Pin strip: GPI002 live · empty-rack table · 81 bins · 249 cnt	Which table is drawn, bin count, and bin width in counts.
1.21 A · bin 44	Live current and the bin under the position line.
TURN direction	Swap to the open-direction graph.
PRESS bin detail	Numeric values for the bin under the cursor (not a separate mockup in this set).
HOLD back	Return to the menu.

11. Obstruction table — open direction

Same table, other direction. Breakaway is now at the closed end, where the door pulls out of the seal. The unvisited block moves to the open end. Two independent tables are why both views exist.

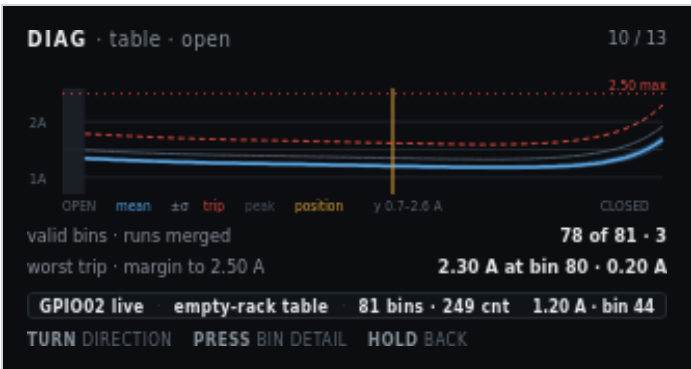


Figure 11. DIAG · table · open. Breakaway at the closed end.

On screen	Meaning
DIAG · table · open	Header left.
10 / 13	Header right.
Graph, Y labels, 2.50 max, legend	Same series as the close graph. Shape differs: peak at the closed end.
Dark block near OPEN	Bins before the open marker. Open-direction learn runs never visit them.
valid bins · runs merged · 78 of 81 · 3	Open-direction bins with data (bins at and after the open marker) and merged run count.
worst trip · margin to 2.50 A · 2.30 A at bin 80 · 0.20 A	Highest open-direction trip (breakaway at the closed end) and room left to the ceiling.
Pin strip: GPIO002 live · empty-rack table · 81 bins · 249 cnt	Same table family as the close view.
1.20 A · bin 44	Live current and the bin under the position line, read against the open envelope.
TURN direction · PRESS bin detail · HOLD back	Same gestures as the close graph.

12. EC11 knob and button

An input with no other home. Detent scale is bench-calibrated, so raw quadrature and the scaled count sit side by side.

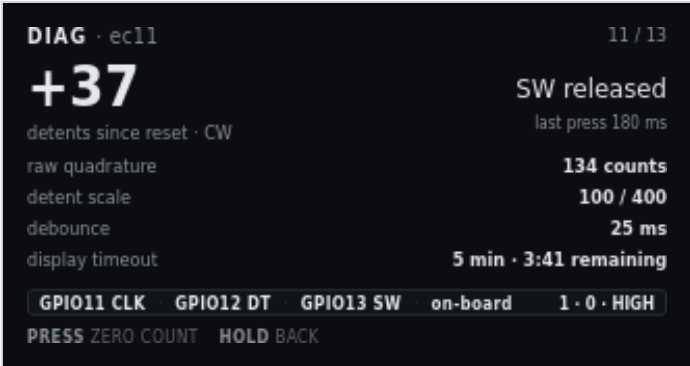


Figure 12. DIAG · ec11. Detent scale 100 / 400. Display timeout 5 min.

On screen	Meaning
DIAG · ec11	Header left.
11 / 13	Header right.
+37	Hero. Scaled detents since reset. Sign is CW positive on this shot.
detents since reset · CW	What the hero counts, and last turn sense.
SW released	Knob switch is up.
last press 180 ms	Duration of the last PRESS (under the HOLD threshold).
raw quadrature · 134 counts	Unscaled CLK/DT edges. Compare with the detent hero to check the scale.
detent scale · 100 / 400	Quadrature-to-detent fraction from ec11_calibration.h (kEc11DetentScaleNumerator / kEc11DetentScaleDenominator). 100/400 is one detent per four edges.
debounce · 25 ms	SW debounce.
display timeout · 5 min · 3:41 remaining	Idle blanking setting and time left until GPIO38 backlight and GPIO15 panel power drop. Default is 5 minutes.
Pin strip: GPIO11 CLK · GPIO12 DT · GPIO13 SW · on-board	EC11 on the T-Display-S3, not a Board A terminal.
1 · 0 · HIGH	Live CLK, DT, SW. SW HIGH is released with pull-up.
PRESS zero count	Reset the detent hero to 0. Does not change calibration constants.
HOLD back	Return to the menu.

13. Network and OTA

Setup surface. The steel lid can block the onboard antenna, so that note is on the screen, not only in the build docs. When SoftAP is serving, this page shows the join password in clear (default reserved). The AP name defaults to PrivateReserve. After join, open <http://192.168.4.1/>. PRESS rejoin retries the stored STA SSID. To drop that SSID, use Settings → Service → Clear station Wi-Fi, then reboot.

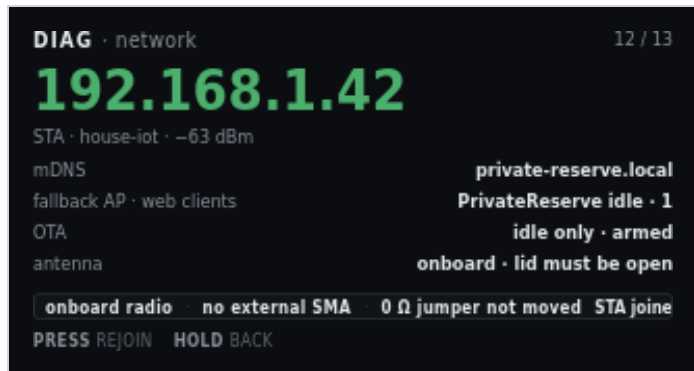


Figure 13. DIAG · network. STA joined, OTA idle-only.

On screen	Meaning
DIAG · network	Header left.
12 / 13	Header right.
192.168.1.42 (green)	Hero. Station address when STA joined.
STA · house-iot · -63 dBm	Role, stored SSID, RSSI.
mDNS · private-reserve.local	mDNS name for HTTP on the joined LAN.
fallback AP · web clients · PrivateReserve idle · 1	SoftAP name, idle because STA joined, and one HTTP client. If SoftAP is the live link, this row is join password and the WPA2 PSK (default reserved) instead.
OTA · idle only · armed	OTA is allowed only while the motor is idle. Armed means the endpoint is listening.
antenna · onboard · lid must be open	No external SMA. Close the steel lid and RSSI can collapse.
Pin strip: onboard radio · no external SMA · 0 Ω jumper not moved	Antenna path as shipped. Do not move the 0 Ω jumper unless you fit an external antenna.
STA joined	Live radio role.
PRESS rejoin	Retry STA join with the stored SSID. If join fails, SoftAP starts. This does not clear the stored password. To wipe station credentials, use Settings → Service → Clear station Wi-Fi, then reboot from that result screen or from Reboot controller.
HOLD back	Return to the menu.

14. Stored calibration

Answers whether this controller may run automatically, and why not. Stale entries name the value that invalidated them.



Figure 14. DIAG · calibration. Loaded table stale after cruise duty 512 → 544.

On screen	Meaning
DIAG · calibration	Header left.
13 / 13	Header right. Last detail screen.
Green pip + Direction · origin · span + OK	Stages 2–4 stored and valid.
Green pip + Marker edges (both) + ± 6 CNT	Open/close probe spread still inside tolerance. The value column shows the open-side figure on this shot.
Green pip + Closed seated · by current + OK	Stage 5 method still current-rise.
Green pip + Stroke 32.0 in → 631 cnt/in + OK	Stage 6 still matches the stored span.
Green pip + Obstruction table – empty racks + ARMED	Empty envelope is in service.
Amber pip + highlight + Obstruction table – loaded racks + STALE	Selected. Loaded table is not usable.
Grey pip + stale since cruise duty 512 → 544	Why. A motion-profile change invalidates both tables. This row names the field that did it.
Pin strip: NVS · format v3 · written 41 boots ago	Where the blob lives, format, age in boots (no RTC).
3.6 kB blob	Stored size.
PRESS open	Jump to the matching Calibration stage for the highlighted row.
HOLD back	Return to the menu.

Settings

Not a fourth operating mode. A menu reached from Main, the same way as Calibration and Diagnostics. Header prefix is SET · . Motion is idle while values are edited. Service holds the destructive actions: erase tables, restore defaults, clear calibration, **clear station Wi-Fi**, and **reboot the controller**.

Draft. Pixel layout: UI/settings.html. NVS names and defaults: T-Display-S3_Firmware_Config.md.

Never write NVS while the motor runs. If you open Settings during a move, the panel shows SETTINGS LOCKED. Pending edits stay in RAM. Retry when idle. A profile or travel change that invalidates learned tables says so on its own screen and again on confirm.

1. Groups

Grouped by effect, not by NVS layout. The count on the right is how many values sit in each group. An amber pip marks a group that holds an unsaved change. Six rows fit. Service is the seventh row, off this shot until you TURN.

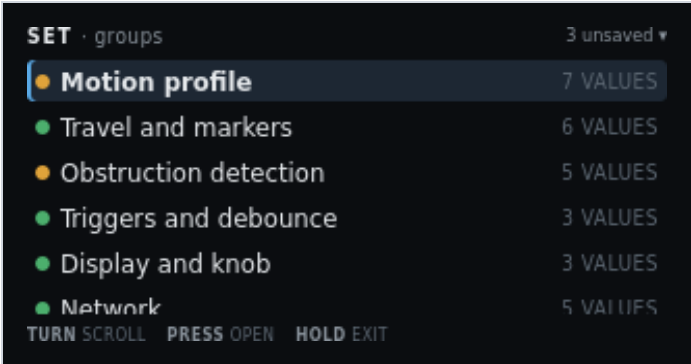


Figure 1. SET · groups. Three unsaved changes. Motion profile selected.

On screen	Meaning
SET · groups	Header left. Settings root.
3 unsaved ▾	Header right. Three staged field edits. The triangle means more groups below.
Amber pip + highlight + Motion profile + 7 VALUES	Selected. Cruise, floors, creep, jog, accel, cruise time, decel. Amber because cruise duty is staged 512 → 544.
Green pip + Travel and markers + 6 VALUES	Caps, probe tolerance, resync drift. Some rows open a locked derived page.
Amber pip + Obstruction detection + 5 VALUES	Inrush skip, snug amps, envelope knobs. Amber because this group also holds a staged edit in this example.
Green pip + Triggers and debounce + 3 VALUES	Bottle-key polarity and switch debounce. Saving polarity re-arms from the current sensor level. It does not command a move.
Green pip + Display and knob + 3 VALUES	Display timeout (minutes, default 5), HOLD min ms, HOLD max ms.
Green pip + Network + 5 VALUES	STA SSID, STA password, join timeout, AP name, AP password. Station password is web-only. Fallback AP password is shown in clear (default reserved). This row is clipped at the bottom of the panel.
Service and defaults + 5 ACTIONS (off-screen)	Seventh group. TURN to it. Destructive. Figure 11. Clear station Wi-Fi is the fourth action; Reboot controller is the fifth. PRESS twice.
TURN scroll	Move the highlight. Window the list.
PRESS open	Enter the highlighted group.
HOLD exit	Return to Main. Staged edits stay in RAM until Review saves or discards them.

2. Motion profile group

A value list, not a form. Pending edits show the new value in amber next to the stored one. Decelerate is the seventh row, off this shot.



Figure 2. SET · motion. Cruise duty staged 512 → 544.

On screen	Meaning
SET · motion	Header left.
7 values	Header right. Count in this group.
Highlight + Cruise duty + 512 → 544 (544 amber)	Selected. Stored 512, pending 544. Changing this invalidates both learned tables.
Minimum moving duty · 64	Floor while the profile is moving. Below this the motor may not break away.
Creep duty · 96	Duty for marker seeks, snug, and short calibration moves.
Jog duty · 96	10-bit duty for each timed detent on the diagnostic jog page. That page edits it as 5–25% and step as 200–1000 ms.
Accelerate · 3000 MS	Time to climb from moving floor to cruise. Changing it invalidates tables.
Cruise time · 6000 MS	Time at cruise duty. Changing it invalidates tables. Clipped at the bottom of this shot.
Decelerate · 3000 MS (off-screen)	Seventh value. TURN to it. Time to drop from cruise to creep. Changing it invalidates tables.
TURN scroll · PRESS edit · HOLD back	Move, open the edit screen, or return to groups.

3. Edit — cruise duty

The sharpest setting on the controller. Range, default, and step are on the panel. The consequence line is stated before the edit is accepted.

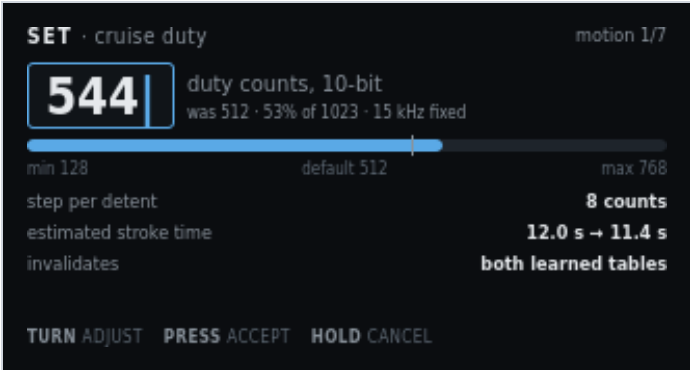


Figure 3. SET · cruise duty. Pending 544. Invalidates both tables.

On screen	Meaning
SET · cruise duty	Header left. Field name.
motion 1/7	Header right. First field in the motion group.
544 with caret, blue box	Pending value. TURN changes it.
duty counts, 10-bit	Unit. Same 0–1023 scale as the PWM diagnostic.
was 512 · 53% of 1023 · 15 kHz fixed	Stored value, percent of full scale, and the compile-time carrier. 15 kHz is not editable.
Blue fill on the range bar, white tick	Fill is the pending value. The tick is the default (512).
min 128 · default 512 · max 768	Allowed range and factory default. Max is below 1023 so cruise cannot sit on the rail.
step per detent · 8 counts	How much TURN changes the pending value.
estimated stroke time · 12.0 s → 11.4 s	Advisory. Faster cruise shortens the move. Not a safety limit.
invalidates · both learned tables (amber)	Accepting this drop both envelopes to stale. Until a relearn, trip is the 2.50 A ceiling only.
TURN adjust · PRESS accept · HOLD cancel	Change, keep the pending value (then confirm), or restore 512.

4. Confirm — consequence of the edit

Shown when an accepted edit invalidates learned data. Dropping to the hard ceiling is a real reduction in protection, so it is spelled out and needs a second press.

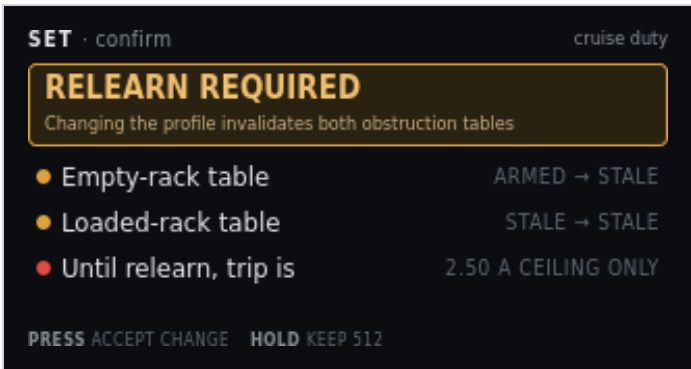


Figure 4. SET · confirm. Cruise duty will stale both obstruction tables.

On screen	Meaning
SET · confirm	Header left.
cruise duty	Header right. Which field triggered this gate.
RELEARN REQUIRED	Amber banner title.
Changing the profile invalidates both obstruction tables	Banner detail. Cruise duty, accel, cruise time, and decel all do this.
Amber pip + Empty-rack table + ARMED → STALE	Empty envelope is in service now. After this save it will not be.
Amber pip + Loaded-rack table + STALE → STALE	Already stale. Stays stale.
Red pip + Until relearn, trip is + 2.50 A CEILING ONLY	Protection drops to the hard ceiling. Main still runs, with less discrimination.
PRESS accept change	Keep the pending cruise duty. Tables mark stale on Review save, not on this press alone.
HOLD keep 512	Drop the pending edit. Stored 512 stays.

5. Edit — display timeout

A benign value, shown for contrast. No consequence line, no confirm step. Units are minutes because that is how an operator thinks about a screen going dark.

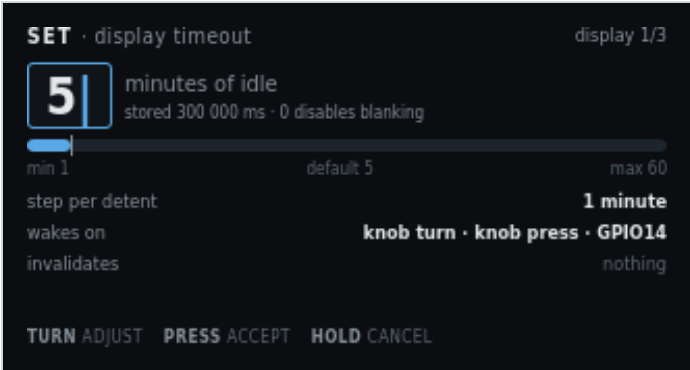


Figure 5. SET · display timeout. Default 5 minutes. Invalidates nothing.

On screen	Meaning
SET · display timeout	Header left.
display 1/3	Header right. First of three Display and knob fields.
5 with caret	Pending minutes of idle before blanking.
minutes of idle	Unit on the panel. Firmware stores milliseconds.
stored 300 000 ms · 0 disables blanking	NVS value for 5 minutes. Zero means the panel stays on.
Range bar, min 1 · default 5 · max 60	Allowed minutes. Default matches the factory 300000 ms.
step per detent · 1 minute	TURN step.
wakes on · knob turn · knob press · GPIO14	What resets the timer and what wakes a blanked panel. Web commands also reset it. Wake returns to Main.
invalidates · nothing	This field does not stale calibration or tables. Dim on purpose.
TURN adjust · PRESS accept · HOLD cancel	Same edit gestures as cruise duty. No confirm step after PRESS.

6. Edit — trigger polarity

An enumerated choice, so it is a two-item pick list rather than a number. Saving re-arms the trigger from the level the sensor is reading now, which is why that line is on the screen.

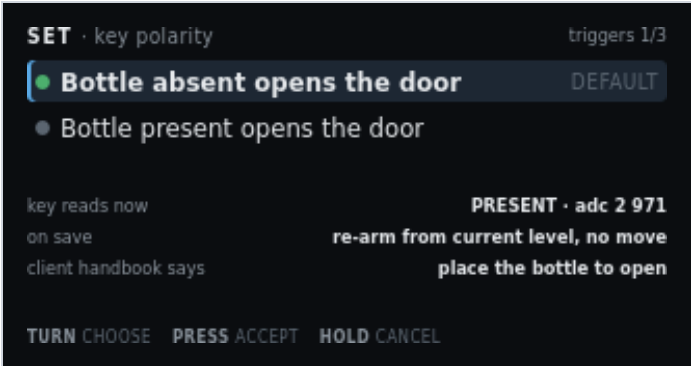


Figure 6. SET · key polarity. Default: absent opens. Key reads PRESENT now.

On screen	Meaning
SET · key polarity	Header left.
triggers 1/3	Header right. First of three Triggers and debounce fields.
Green pip + highlight + Bottle absent opens the door + DEFAULT	Selected choice. Handbook polarity. Place the bottle to close.
Grey pip + Bottle present opens the door	Inverted polarity. Use only if this cabinet is wired that way.
key reads now · PRESENT · adc 2 971	Live cooked state and raw ADC, so you can see what re-arm will start from.
on save · re-arm from current level, no move	Firmware adopts the new polarity from the present reading. It does not command open or close.
client handbook says · place the bottle to open (amber)	Published client instruction. Compare it with the selected row before you accept. Absent-opens means remove the bottle to open. Present-opens means place the bottle to open.
TURN choose · PRESS accept · HOLD cancel	Move the highlight, stage the choice, or keep the previous polarity.

7. Network group

Text entry through one knob is a trap, so the LCD shows the values and points at the web page. The station password is masked. The fallback AP password is shown in clear (default reserved) so a phone can join PrivateReserve before /wifi exists. Then open `http://192.168.4.1/`. The web View of this screen adds a clickable Set SSID and password link, the same idea as Docs adding Open GitHub page. That form is hosted by the controller at /wifi and is not drawn on the LCD. Scan takes a few seconds. The page stays live. The screen states that the web interface has no login. To drop the stored STA network, do not edit this list: use Service → Clear station Wi-Fi, then reboot.

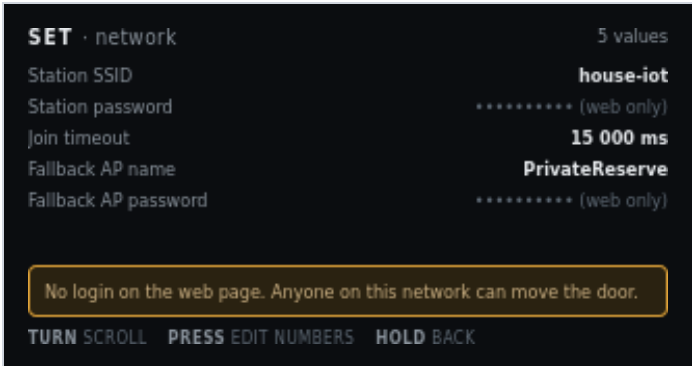


Figure 7. SET · network. Station password masked. Fallback AP password in clear. No application login.

On screen	Meaning
SET · network	Header left.
5 values	Header right.
Station SSID · house-iot	Stored STA network name. Shown in clear.
Station password · ***** (web only)	Masked. The LCD cannot edit it. On the web View of this screen, open Set SSID and password. That is a separate page at /wifi on the controller, with a phone keyboard and a Scan list. Scan takes a few seconds; the page stays live. It is not on the LCD.
Join timeout · 15 000 ms	How long STA join may run before SoftAP starts. This is a number. PRESS can edit it from the knob.
Fallback AP name · PrivateReserve	SoftAP SSID when STA is empty or join fails. Default name is PrivateReserve.
Fallback AP password · reserved	Shown in clear. You need this before the web page exists. Default is reserved. Empty means an open AP. Change it later on /wifi.
Amber line: No login on the web page. Anyone on this network can move the door.	HTTP is port 80 with no application login. Do not expose that LAN.
TURN scroll	Move among rows.
PRESS edit numbers	Edit join timeout (and other numeric fields). SSID and passwords do not open a knob editor. On the web, a blue Set SSID and password link opens /wifi. To drop the stored STA network, use Service → Clear station Wi-Fi.
HOLD back	Return to groups.

8. Derived and locked values

Read-only by design. Counts-per-inch came from a measured span and a typed stroke. The ceiling and the PWM carrier are hardware facts. Showing them with a lock stops somebody hunting for an edit screen.

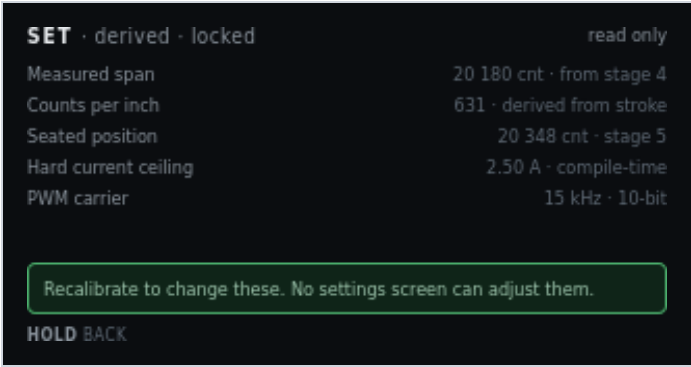


Figure 8. SET · derived · locked. Recalibrate to change these.

On screen	Meaning
SET · derived · locked	Header left.
read only	Header right. No edit affordance.
Measured span · 20 180 cnt · from stage 4	Close-marker actuation minus origin. Dim because it is not editable here.
Counts per inch · 631 · derived from stroke	Display scale only. Never a seek cap.
Seated position · 20 348 cnt · stage 5	Closed seated counts.
Hard current ceiling · 2.50 A · compile-time	Not an NVS setting. Firmware constant.
PWM carrier · 15 kHz · 10-bit	Not an NVS setting. Hardware/firmware fact.
Green line: Recalibrate to change these. No settings screen can adjust them.	Span and seated change only through Calibration. Ceiling and carrier do not change in the field.
HOLD back	Return. There is no PRESS.

9. Review and save pending changes

The single write point, mirroring Calibration review. It lists every staged change with old and new value. It will not write while the motor is running.

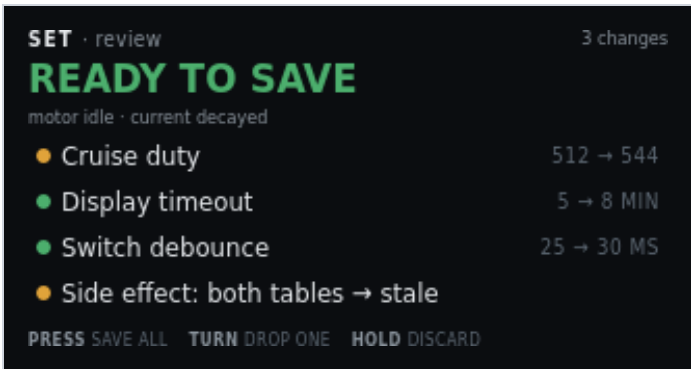


Figure 9. SET · review. Three field edits plus the table-stale side effect.

On screen	Meaning
SET · review	Header left.
3 changes	Header right. Three field writes in this set. The side-effect row is extra.
READY TO SAVE (green)	Hero. Motor idle, current decayed.
motor idle · current decayed	Write precondition. Same rule as Calibration review.
Amber pip + Cruise duty + 512 → 544	First staged write. Amber because it invalidates tables.
Green pip + Display timeout + 5 → 8 MIN	Second staged write. Benign.
Green pip + Switch debounce + 25 → 30 MS	Third staged write.
Amber pip + Side effect: both tables → stale	Not a field you typed. Consequence of cruise duty. Named so it cannot be missed.
PRESS save all	One NVS write of the remaining rows.
TURN drop one	Remove the highlighted row from this set. It stays at the stored value.
HOLD discard	Drop the whole set. Stored NVS is unchanged.

10. Edit blocked — motor busy

A defined refusal, not an error. Configuration cannot change under a running profile or an active calibration stage. The screen names which one is holding the lock.

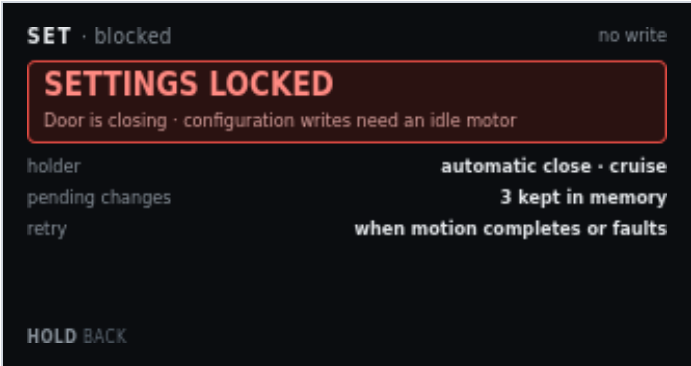


Figure 10. SET · blocked. Door closing. Three pending edits kept in RAM.

On screen	Meaning
SET · blocked	Header left.
no write	Header right. This screen will not commit NVS.
SETTINGS LOCKED	Red banner title.
Door is closing · configuration writes need an idle motor	Banner detail. Why, and the rule.
holder · automatic close · cruise	Which activity owns the motor. Could also name a calibration or jog step.
pending changes · 3 kept in memory	Staged edits survive. They are not discarded by the lock.
retry · when motion completes or faults	Open Settings again after idle. Review can then save.
HOLD back	Leave. No PRESS. There is nothing to accept.

11. Service and defaults

Destructive actions live together, away from ordinary edits. Each states its blast radius. PRESS confirm twice. Motor must be idle. Full factory erase is USB-only. It is not on this menu.

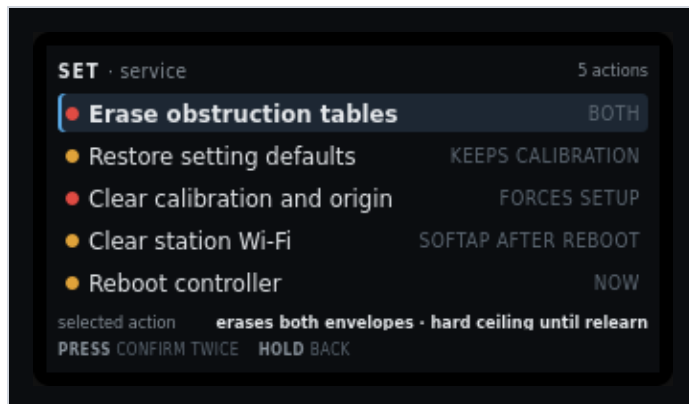


Figure 11. SET · service. Five actions. Erase tables selected. Confirm twice. Clear station Wi-Fi and Reboot controller are the fourth and fifth rows.

On screen	Meaning
SET · service	Header left.
5 actions	Header right. Not values. Actions.
Red pip + highlight + Erase obstruction tables + BOTH	Selected. Drops empty and loaded envelopes. Origin stays. Hard ceiling until relearn.
Amber pip + Restore setting defaults + KEEPS CALIBRATION	Settings struct reset. Keeps calibration. Keeps Wi-Fi strings.
Red pip + Clear calibration and origin + FORCES SETUP	Main shows Needs Setup. Automatic motion blocks until Calibration runs again.
Amber pip + Clear station Wi-Fi + SOFTAP AFTER REBOOT	Zeros stored STA SSID and password. Fallback AP name and password stay. The live STA session stays until reboot. Next boot skips STA and starts SoftAP.
Amber pip + Reboot controller + NOW	Stops PWM and resets the ESP32. Same as a power cycle. Motion does not resume. PRESS twice, motor idle.
selected action · erases both envelopes · hard ceiling until relearn	Blast radius of the highlighted row, restated under the list.
PRESS confirm twice	First PRESS arms. Second PRESS runs. HOLD at either step aborts. TURN after the first PRESS cancels the arm.
HOLD back	Return to groups without running an action.

12. Station Wi-Fi cleared

Shown after Clear station Wi-Fi runs. The write is already in NVS. PRESS reboots now so SoftAP can start. HOLD returns to Settings if you want to reboot later from Service.



Figure 12. SET · wifi. Station SSID empty. PRESS reboots. HOLD leaves this session on the old STA address.

On screen	Meaning
SET · wifi	Header left.
reboot	Header right. The change is stored. SoftAP starts on the next boot.
WIFI CLEARED	Warn banner. Station SSID and password are empty.
PRESS reboot · SoftAP on next boot	This session can stay on the old STA address until you PRESS or power-cycle.
Station SSID · (empty - AP only)	Boot will skip STA join.
Fallback AP name · PrivateReserve	Unchanged. Join this AP after reboot, then set a new SSID on the web.
Join password · reserved	WPA2 PSK for that AP. Type it on the phone. Shown here because the web page is not reachable until you join.
After reboot · join AP, then set SSID on the web	SoftAP starts. Then open http://192.168.4.1/wifi . The live STA link, if any, stays until this reboot.
PRESS reboot	Stops PWM and resets the ESP32. One PRESS. Motor must be idle.
HOLD back	Return to Settings groups without rebooting.