

Spinomatic X7 — Cordless Drill User Manual - TorqueWorks Ltd.

Version 1.0, 2025-09-10

Table of Contents

1. Safety Information	2
1.1. General Safety	2
1.2. Electrical & Battery Safety	2
1.3. Operation Safety	2
1.4. After Use	2
2. Product Overview	3
2.1. Package Contents	3
2.2. Parts & Controls	4
2.3. Exploded View (reference)	4
3. Assembly & Setup	5
3.1. Attaching/Removing the Battery	5
3.2. Inserting Drill/Driver Bits	6
4. Operating Instructions	7
4.1. Bit & Material Selection	7
4.2. Speed & Torque	7
4.3. Pilot Holes (Guideline)	7
4.4. Basic Drilling Technique	7
4.5. Screw Driving Technique	8
5. Charging & Maintenance	9
5.1. Charging	9
5.2. Battery Health	10
5.3. Tool Maintenance	10
5.4. Cleaning	10
5.5. Storage	10
5.6. Consumables & Parts	10
6. Troubleshooting	11
6.1. When to Contact Service	11
7. Technical Specifications	12
8. Warranty & Support	13
Appendix A: Compliance & Disposal	14

*This manual explains safe use, setup, operation, maintenance, and troubleshooting for the **Spinomatic X7** cordless drill (TorqueWorks Ltd.).*

This is a portfolio sample

All company names, addresses, and contact details are fictional. This document is created for demonstration purposes only.

Chapter 1. Safety Information



Power tools can cause serious injury if used improperly. Read and keep this manual. Do not allow children to operate the drill.

1.1. General Safety

- Wear PPE: safety goggles, hearing protection, and work gloves.
- Keep work area clean, dry, and well lit. Do not operate near flammable vapors.
- Maintain stable footing and balance at all times.
- Secure the workpiece (vise or clamps); never hold material in your hand.
- Do not modify the tool. Use only accessories rated for the drill.

1.2. Electrical & Battery Safety

- Use only charger **CHG-18V** and battery **BAT-18V** (or approved equivalents).
- Do not short-circuit, crush, heat above 60 °C, or incinerate battery packs.
- Charge only indoors, between 5 °C and 35 °C. Unplug the charger when not in use.
- Inspect battery and charger before each use; replace if cracked, deformed, or leaking.



Temperature Monitoring: If battery becomes hot during use (too hot to hold comfortably), stop work immediately and allow cooling for 15 minutes minimum. Continued use of overheated batteries can cause permanent damage or fire risk.

1.3. Operation Safety

- Remove adjusting keys and wrenches before powering on.
- Select the correct speed/torque and bit for the material before contact.
- Keep hands, hair, and clothing away from rotating parts.
- If the tool smokes, vibrates excessively, or overheats, stop and investigate.

1.4. After Use

- Turn off and remove the battery before changing bits, adjusting, cleaning, or storage.
- Allow the tool to cool. Store in a dry location out of children's reach.

Chapter 2. Product Overview

The **Spinomatic X7** by TorqueWorks Ltd. is a versatile 18V cordless drill designed for DIY enthusiasts and light professional use.

2.1. Package Contents

- Drill body (x1)
- 18V Li-Ion battery (x1)
- Charger (x1)
- Carry case (x1)

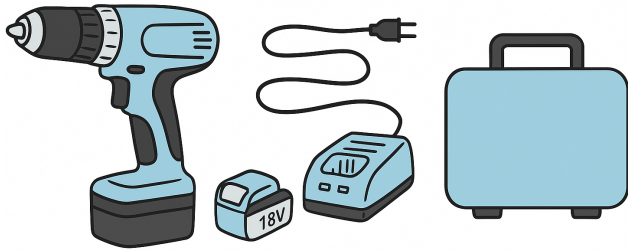


Figure 1. Package contents

2.2. Parts & Controls

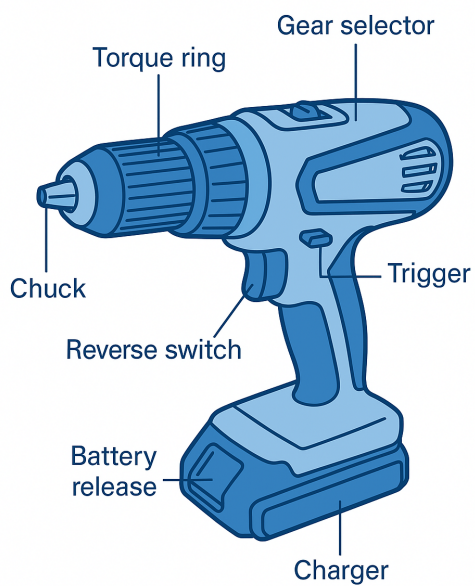


Figure 2. Drill parts and controls

1. Chuck
2. Torque ring
3. Gear selector
4. Trigger & reverse switch
5. Battery release

Tip: Use this diagram to locate controls referenced throughout the manual.

2.3. Exploded View (reference)

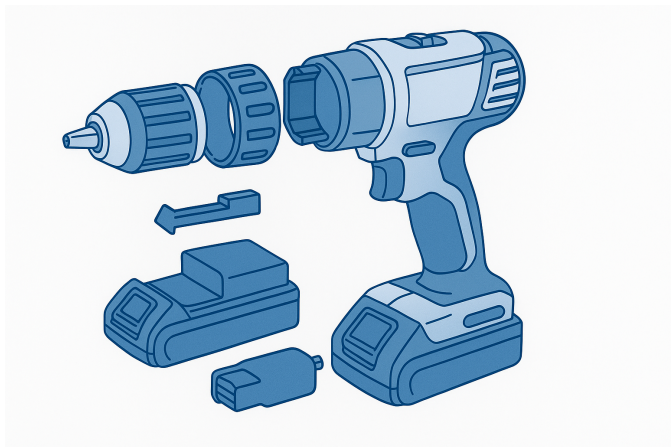


Figure 3. Exploded assembly (major external components)

Chapter 3. Assembly & Setup

3.1. Attaching/Removing the Battery

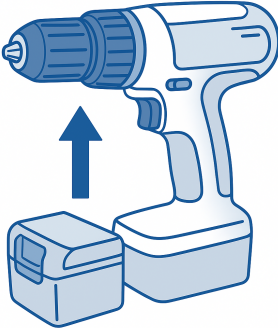


Figure 4. Battery attachment (slide until it clicks)

1. Slide battery until it **clicks**.
2. Verify it is seated and cannot pull free.

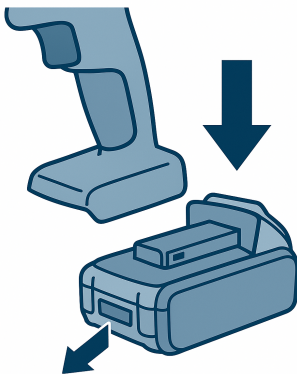


Figure 5. Battery removal (press latch, pull downward)

1. Press the latch.
2. Pull the battery downward to remove.

3.2. Inserting Drill/Driver Bits

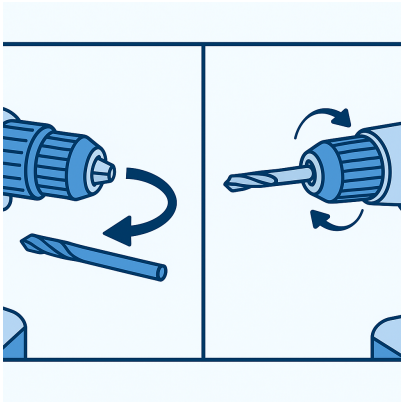


Figure 6. Chuck open → insert bit → tighten clockwise

1. Rotate chuck counter-clockwise to open jaws.
2. Insert bit; tighten clockwise.
3. Verify bit is secured.

Chapter 4. Operating Instructions

4.1. Bit & Material Selection

Material	Recommended Bit	Notes
Softwood	Wood twist, brad-point	Low torque, high speed.
Hardwood	Brad-point	Pre-drill pilot holes; moderate speed.
Metal	HSS twist	Lubricate; low speed, steady pressure.
Masonry	Masonry bit	Use hammer mode if available; low speed.

4.2. Speed & Torque

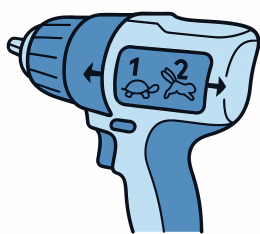


Figure 7. Gear selector: 1 = high torque / low speed, 2 = high speed / lower torque

- **Gear 1** → High torque / low speed (screws, large bits).
- **Gear 2** → Low torque / high speed (small holes in wood/soft material).
- Start low; increase torque only if the bit stalls or the screw cams out.



Use the lowest speed that produces a clean cut. Excess speed overheats bits and dulls edges.

4.3. Pilot Holes (Guideline)

Screw Size	Pilot Diameter
3 mm (≈#4)	2.0-2.2 mm
4 mm (≈#8)	3.0-3.2 mm
5 mm (≈#10)	3.5-4.0 mm

4.4. Basic Drilling Technique



Always mark your drilling point and secure your workpiece before starting. Loose materials can cause injury.

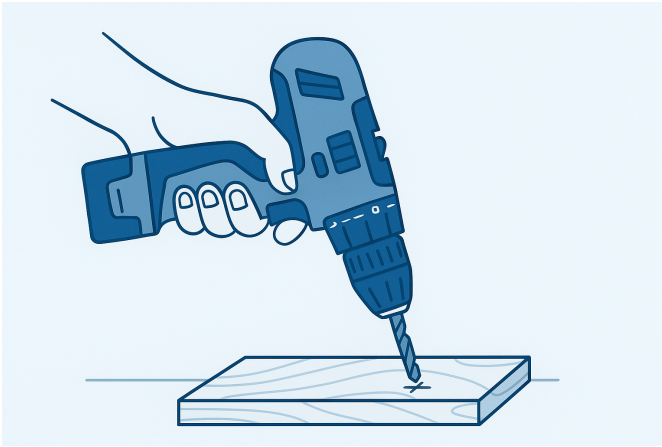


Figure 8. Correct stance and perpendicular approach

Step-by-step drilling procedure:

1. **Prepare the work area:** Clear debris, ensure adequate lighting, and secure the workpiece in a vise or with clamps.
2. **Mark the drilling point:** Use a center punch on metal surfaces to prevent bit wandering.
3. **Position the drill:** Hold the drill perpendicular to the surface with both hands. Brace your wrist for stability.
4. **Start slowly:** Squeeze the trigger gently to begin drilling at low speed.
5. **Apply steady pressure:** Increase speed gradually as needed, maintaining consistent downward pressure.
6. **Before breakthrough:** Reduce pressure when nearing the far side to prevent tear-out and splintering.



Kickback Prevention: If the bit binds, release the trigger immediately and reverse the drill to back out the bit. Never force the tool or attempt to free a bound bit by increasing pressure.

4.5. Screw Driving Technique

Proper screw driving procedure:

1. **Select correct bit:** Ensure driver bit fully fits the screw head with no gaps.
2. **Set appropriate torque:** Start with low torque setting; increase only if screws cam out.
3. **Pre-drill pilot holes:** Use pilot hole chart (above) for proper sizing.
4. **Drive steadily:** Maintain perpendicular angle and steady pressure.
5. **Stop at clutch click:** When clutch engages, the screw is properly seated.



Overtightening screws can strip heads, crack materials, or damage the drill's clutch mechanism.

Chapter 5. Charging & Maintenance

5.1. Charging

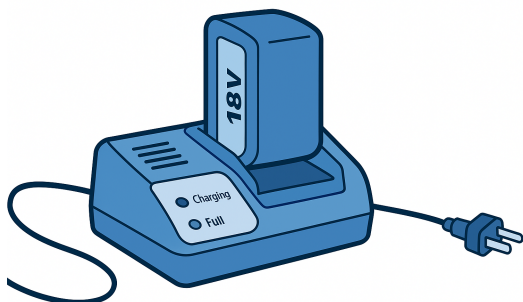


Figure 9. Charger with battery pack and LED indicators

1. Place charger on a flat, ventilated surface.
2. Connect charger to mains.
3. Insert the battery pack until it clicks; ensure contacts are clean/dry.
4. When complete, remove the battery and unplug the charger.

Indicator	Meaning
Solid red	Charging in progress
Solid green	Fully charged
Flashing red	Temperature/fault detected — allow to cool; check contacts and vents
No light	No power — check outlet/cable

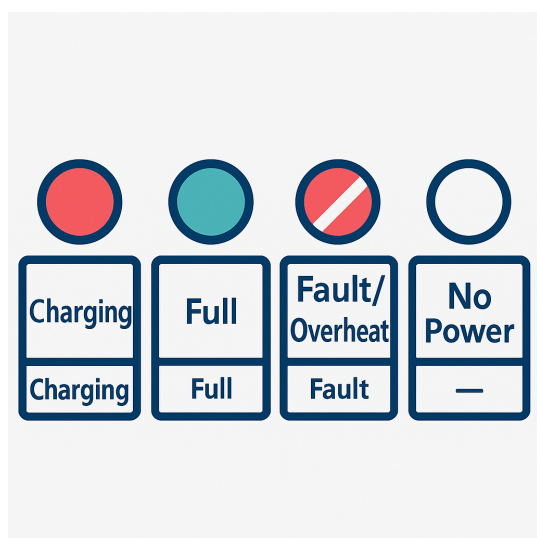


Figure 10. LED states (legend)



Charge only between 5 °C and 35 °C. Do not cover the charger; keep vents clear.

Typical time: ~60-90 min for a 2.0 Ah pack.

5.2. Battery Health

- Store at ~50% charge if unused for > 1 month.
- Avoid full discharge; recharge when power drops noticeably.
- Keep packs dry and away from metal objects; transport with terminal covers.

5.3. Tool Maintenance

- Inspect chuck jaws and remove debris.
- Check ventilation slots; clear dust with dry brush or air.
- Tighten exterior screws if loosened by vibration.
- Do **not** open the tool body or lubricate internal parts.

5.4. Cleaning

- Remove the battery before cleaning.
- Wipe with a dry or slightly damp cloth; avoid solvents and compressed air near bearings.

5.5. Storage

- Dry, indoor location at **10-25 °C**.
- Remove battery from tool for storage/transport.

5.6. Consumables & Parts

Item	Example
Battery pack	BAT-18V (2.0 Ah / 4.0 Ah)
Charger	CHG-18V
Driver bits	PH2, PZ2, T20, hex 3-6 mm

Chapter 6. Troubleshooting

Icon note: Use the warning triangle where safety-critical symptoms appear.



Problem	Possible Cause	Corrective Action
Drill does not start when trigger is pulled	Battery not seated / discharged	Remove and reinsert battery until it clicks; recharge or try a known-good pack.
Power cuts out intermittently during use	Dirty battery contacts or debris in trigger	Power off and remove battery; clean contacts with dry cloth; blow out trigger area gently.
Chuck slips and bit spins freely	Bit not fully seated or jaws dirty	Reseat bit and tighten; clean jaws; replace worn bits.
Screw head strips or bit slips out	Wrong driver bit size or excessive torque	Use correct bit size/profile; reduce torque or switch to Gear 1.
Drill cuts slowly or stalls frequently	Wrong gear selection, dull bit, or insufficient pressure	Switch to Gear 1 for more torque; maintain steady pressure; replace bit; for metal, use cutting lubricant and slower speed.
Overheating / hot housing	Prolonged heavy load or blocked vents	Stop and allow to cool; clear ventilation slots; use appropriate speed/bit.
Unusual vibration/noise	Bent bit or loose accessory	Stop immediately; remove battery; replace bit and check accessories are tight.

6.1. When to Contact Service

- Housing cracked, burning smell, or visible arcing.
- Battery leaking, swollen, or excessively hot after cooling.
- Repeated fault after following the corrective actions above.

Chapter 7. Technical Specifications

Parameter	Value
Voltage	18 V (Li-ion)
Battery capacity	2.0 Ah (example)
No-load speed	0-450 / 0-1600 RPM (2-speed)
Max torque	45 Nm
Clutch settings	20 + drill
Chuck capacity	1.5-13 mm
Charging time	~60-90 min (2.0 Ah)
Weight (with battery)	~1.6 kg
Operating temperature	0-40 °C (tool)
Charging temperature	5-35 °C (battery/charger)
Manufacturer	TorqueWorks Ltd., 221B Tool Street, Inventon, NY 10001

Chapter 8. Warranty & Support

The **Spinomatic X7** is warranted against defects for 24 months from the purchase date. Retain proof of purchase.

Manufacturer: TorqueWorks Ltd.

Head Office: 221B Tool Street, Inventon, NY 10001, USA

Phone: +1-800-555-7746

Email (Support): support@torqueworks.example

Email (Info): info@torqueworks.example

Website: www.torqueworks.example

Appendix A: Compliance & Disposal

This product is manufactured by TorqueWorks Ltd., a fictional company established for demonstration purposes.