

Cordless Drill — User Manual

Version 1.0, 2025-09-07

Table of Contents

1. Safety Information	2
1.1. General Safety	2
1.2. Electrical & Battery Safety	2
1.3. Operation Safety	2
1.4. After Use	2
2. Product Overview	3
2.1. Package Contents	3
2.2. Parts & Controls	3
3. Assembly & Setup	4
3.1. Attaching/Removing the Battery	4
3.2. Inserting Drill/Driver Bits	4
4. Operating Instructions	5
4.1. Bit & Material Selection	5
4.2. Speed & Torque	5
4.3. Pilot Holes (Guideline)	5
4.4. Technique	5
5. Charging & Maintenance	6
5.1. Charging	6
5.2. Battery Health	6
5.3. Tool Maintenance	6
5.4. Cleaning	6
5.5. Storage	6
5.6. Consumables & Parts	7
6. Troubleshooting	8
6.1. When to Contact Service	8
7. Technical Specifications	9
8. Warranty & Support	10
Appendix A: Compliance & Disposal	11

This manual explains safe use, setup, operation, maintenance, and troubleshooting for the Cordless Drill (Model CDR-18V). Read all instructions before use.

Chapter 1. Safety Information



Power tools can cause serious injury if used improperly. Read and keep this manual. Do not allow children to operate the drill.

1.1. General Safety

- Wear PPE: safety goggles, hearing protection, and work gloves.
- Keep work area clean, dry, and well lit. Do not operate near flammable vapors.
- Maintain stable footing and balance at all times.
- Secure the workpiece (vise or clamps); never hold material in your hand.
- Do not modify the tool. Use only accessories rated for the drill.

1.2. Electrical & Battery Safety

- Use only charger **CHG-18V** and battery **BAT-18V** (or approved equivalents).
- Do not short-circuit, crush, heat above 60 °C, or incinerate battery packs.
- Charge only indoors, between 5 °C and 35 °C. Unplug the charger when not in use.
- Inspect battery and charger before each use; replace if cracked, deformed, or leaking.

1.3. Operation Safety

- Remove adjusting keys and wrenches before powering on.
- Select the correct speed/torque and bit for the material before contact.
- Keep hands, hair, and clothing away from rotating parts.
- If the tool smokes, vibrates excessively, or overheats, stop and investigate.

1.4. After Use

- Turn off and remove the battery before changing bits, adjusting, cleaning, or storage.
- Allow the tool to cool. Store in a dry location out of children's reach.


Chapter 2. Product Overview

2.1. Package Contents

- Drill body (x1)
- 18V Li-Ion battery (x1)
- Charger (x1)
- Carry case (x1)

2.2. Parts & Controls

cordless drill (placeholder diagram)

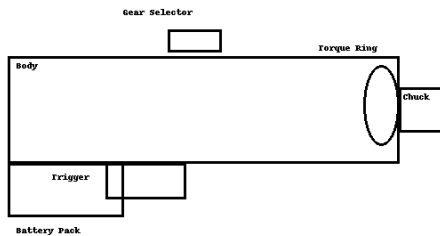

1. Chuck
2. Torque ring
3. Gear selector
4. Trigger & reverse switch
5. Battery release

Chapter 3. Assembly & Setup

3.1. Attaching/Removing the Battery

1. Slide battery until it clicks.
2. To remove, press the latch and pull downward.

3.2. Inserting Drill/Driver Bits

1. Rotate chuck counter-clockwise to open jaws.
2. Insert bit; tighten clockwise.
3. Verify bit is secured.

Chapter 4. Operating Instructions

4.1. Bit & Material Selection

Material	Recommended Bit	Notes
Softwood	Wood twist, brad-point	Low torque, high speed.
Hardwood	Brad-point	Pre-drill pilot holes; moderate speed.
Metal	HSS twist	Lubricate; low speed, steady pressure.
Masonry	Masonry bit	Use hammer mode if available; low speed.

4.2. Speed & Torque

- **Gear 1** → High torque / low speed (screws, large bits).
- **Gear 2** → Low torque / high speed (small holes in wood/soft material).
- Start low; increase torque only if the bit stalls or the screw cams out.



Use the lowest speed that produces a clean cut. Excess speed overheats bits and dulls edges.

4.3. Pilot Holes (Guideline)

Screw Size	Pilot Diameter
3 mm (≈#4)	2.0–2.2 mm
4 mm (≈#8)	3.0–3.2 mm
5 mm (≈#10)	3.5–4.0 mm

4.4. Technique

1. Mark the hole; use a center punch on metal to prevent wandering.
2. Hold the drill perpendicular to the surface; brace your wrist.
3. Squeeze the trigger gently to start; increase only as needed.
4. Ease pressure before breaking through the far side to prevent tear-out.
5. For screws: select a driver bit that fully fits the screw head; stop when the clutch clicks.



Kickback risk: if the bit binds, release the trigger immediately and back the bit out. Do not force the tool.

Chapter 5. Charging & Maintenance

5.1. Charging

1. Place charger on a flat, ventilated surface.
2. Connect charger to mains.
3. Insert the battery pack until it clicks; ensure contacts are clean/dry.
4. When complete, remove the battery and unplug the charger.

Indicator	Meaning
Solid red	Charging in progress
Solid green	Fully charged
Flashing red	Temperature/fault detected — allow to cool; check contacts and vents
No light	No power — check outlet/cable



Charge only between 5 °C **and** 35 °C. Do not cover the charger; keep vents clear.

Typical time: ~60–90 min for a 2.0 Ah pack.

5.2. Battery Health

- Store at ~50% charge if unused for > 1 month.
- Avoid full discharge; recharge when power drops noticeably.
- Keep packs dry and away from metal objects; transport with terminal covers.

5.3. Tool Maintenance

- Inspect chuck jaws and remove debris.
- Check ventilation slots; clear dust with dry brush or air.
- Tighten exterior screws if loosened by vibration.
- Do **not** open the tool body or lubricate internal parts.

5.4. Cleaning

- Remove the battery before cleaning.
- Wipe with a dry or slightly damp cloth; avoid solvents and compressed air near bearings.

5.5. Storage

- Dry, indoor location at **10–25 °C**.

- Remove battery from tool for storage/transport.

5.6. Consumables & Parts

Item	Example
Battery pack	BAT-18V (2.0 Ah / 4.0 Ah)
Charger	CHG-18V
Driver bits	PH2, PZ2, T20, hex 3–6 mm

Chapter 6. Troubleshooting

Problem	Possible Cause	Corrective Action
Drill does not start	Battery not seated / discharged	Remove and reinsert battery until it clicks; recharge or try a known-good pack.
Intermittent power loss	Dirty battery contacts or debris in trigger	Power off and remove battery; clean contacts with dry cloth; blow out trigger area gently.
Chuck slips / bit spins	Bit not fully seated or jaws dirty	Reseat bit and tighten; clean jaws; replace worn bits.
Screw head cam-out	Wrong driver bit or excessive torque	Use correct bit size/profile; reduce torque or switch to Gear 1.
Slow or stalling in wood/metal	Too high gear/speed or dull bit	Switch to Gear 1; use steady pressure; replace or sharpen bit; lubricate for metal.
Overheating / hot housing	Prolonged heavy load or blocked vents	Stop and allow to cool; clear ventilation slots; use appropriate speed/bit.
Unusual vibration/noise	Bent bit or loose accessory	Stop immediately; remove battery; replace bit and check accessories are tight.

6.1. When to Contact Service

- Housing cracked, burning smell, or visible arcing.
- Battery leaking, swollen, or excessively hot after cooling.
- Repeated fault after following the corrective actions above.

Chapter 7. Technical Specifications

Parameter	Value
Voltage	18 V (Li-ion)
Battery capacity	2.0 Ah (example)
No-load speed	0–450 / 0–1600 RPM (2-speed)
Max torque	45 Nm
Clutch settings	20 + drill
Chuck capacity	1.5–13 mm
Charging time	~60–90 min (2.0 Ah)
Weight (with battery)	~1.6 kg
Operating temperature	0–40 °C (tool)
Charging temperature	5–35 °C (battery/charger)

Chapter 8. Warranty & Support

This product is warranted against defects for 24 months from the purchase date. Retain proof of purchase.

Support: support@exampletools.com

Appendix A: Compliance & Disposal

This tool complies with applicable directives. Dispose of batteries according to local regulations.