

Kitchen Blender — Quick-Start Guide

This quick-start shows the essentials to set up and use your Kitchen Blender (Model BLN-700). For full safety and care instructions, see the User Manual.

Table of Contents

Unboxing	1
Safety Warnings	1
Setup	2
First Run (Example Smoothie)	2
First Run (Example Smoothie)	2
Controls Overview	2
Cleaning & Care	3
Quick Troubleshooting	3

Unboxing

Verify that all parts are present and undamaged: * Motor base * Pitcher with lid (locking) * Blade assembly (pre-installed) * Tamper (if included) * Quick-start guide



If any part is missing or damaged, do not use the appliance. Contact support before first use.

Safety Warnings



Read all safety instructions before use. Keep hands and utensils away from moving blades. Never operate without the lid locked.

- Place the base on a flat, dry surface with at least 10 cm of clearance for ventilation.
- Do **not** immerse the motor base in water; unplug before cleaning.
- Keep hair, clothing, jewelry, and utensils away from the blade area.
- Do **not** blend hot liquids with a sealed lid; release steam to avoid pressure buildup.
- Ensure the pitcher is fully seated and the lid locks before pressing **START**.

Setup

1. Rinse the pitcher, lid, and tamper with warm soapy water; dry thoroughly.
2. Place the motor base on a flat, dry surface with ~10 cm clearance for ventilation.
3. Seat the pitcher on the base until it **locks** (no wobble).
4. Insert the lid; press down until the latch clicks. Keep the cap closed unless adding ingredients mid-blend.
5. Plug the power cord into a grounded outlet.



The blender will not start unless the pitcher is fully seated and the lid is locked (safety interlock).

First Run (Example Smoothie)

Ingredients (serves 2): - 1 cup cold liquid (water or milk) - 1 banana (peeled, in chunks) - 1 cup frozen berries - 1 cup ice (optional)

Steps

1. Add liquid first, then soft items, then frozen/ice (do not exceed the MAX line).
2. Select the **SMOOTHIE** program (or speed 3–4 if using manual speed).
3. Press **START**. Blend ~45 seconds (or until desired texture).
4. Press **STOP**, remove the lid, and serve.




If ingredients stick to the sides, press **STOP** first. Use the tamper through the lid cap while blending, or pulse in short bursts.

First Run (Example Smoothie)

1. Add 1 cup liquid + fruit + ice (max fill line).
2. Select **SMOOTHIE** program.
3. Press **START**. Blend for ~45 seconds.
4. Turn **OFF**, remove lid, and serve.

Controls Overview

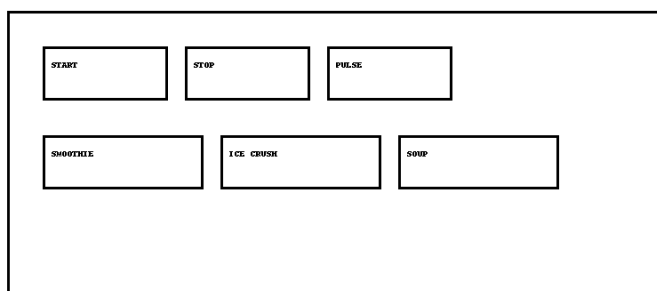

- **START/STOP** — Begin or end blending.
- **PULSE** — Short bursts for chopping or clearing air pockets.
- **Programs** — Pre-set time/speed profiles:
 - **SMOOTHIE** — Soft fruit + liquid; gradual ramp-up.
 - **ICE CRUSH** — Short high-power pulses; best for ice/frozen items.
 - **SOUP** — Extended blend for smooth, hot-ready textures (use vented lid; do not seal steam).
- **Safety Interlock** — The blender won't start unless the pitcher is fully seated and the lid is locked.

If ingredients ride high on the sides, press **STOP**, reseal the lid, and use **PULSE** or the tamper.

Cleaning & Care

- Unplug the blender before cleaning.
- Rinse pitcher and lid immediately after use to prevent buildup.
- Dishwasher-safe: pitcher and lid (top rack only). Hand-wash blades carefully.
- Wipe the motor base with a damp cloth; do **not** immerse or spray the base.
- Do not use abrasive pads or solvents on any part.



Always remove the pitcher from the base before cleaning. Inspect the lid seal regularly; replace if cracked or deformed.

Quick Troubleshooting

Symptom	Possible Cause	Fix
Won't start	Pitcher/lid not locked (interlock)	Reseat pitcher; lock lid until it clicks.
Unusual noise	Foreign object or mis-seated lid	Press STOP ; inspect pitcher, remove obstructions; reseal lid.

Symptom	Possible Cause	Fix
Poor blend / ingredients ride high	Overfilled or program mismatch	Reduce volume; use SMOOTHIE for soft items; ICE CRUSH for ice/frozen.
Overheats / smell	Extended high load	Press STOP ; allow to cool; blend in shorter cycles.
Leaks at lid	Lid cap or seal not seated	Remove, clean, and reseal cap and seal; replace if worn.