

K-Oven 12 Pro — Electric Convection Range with Gas Hob — User & Maintenance Manual

IronClad Home Appliances

Version 1.0, 2026-10-04

Table of Contents

1. Introduction	2
2. Safety Information	3
2.1. General Safety	3
2.2. PPE (Personal Protective Equipment)	3
3. Installation	4
3.1. Pre-Installation Checklist	4
3.2. Step-by-Step Installation Procedure	4
3.2.1. Prepare Installation Location	4
3.2.2. Anti-Tip Bracket	5
3.2.3. Electrical Connection	6
3.2.4. Gas Connection	6
3.2.5. Positioning and Leveling	7
3.2.6. Initial Power-On and Testing	7
3.3. Post-Installation Verification Checklist	7
3.4. Initial Break-In Procedure	8
4. Operation	9
4.1. Control Panel Overview	9
4.2. Using the Gas Hob	9
4.3. Cooking Modes & Procedures	10
4.3.1. Bake Mode (Conventional Baking)	10
4.3.2. Broil Mode (High Heat from Top)	11
4.3.3. Convection Mode (Fan-Assisted)	11
4.3.4. Self-Clean Mode	12
4.4. Food Safety Guidelines	12
5. Cleaning & Maintenance	14
5.1. Daily	14
5.2. Monthly	14
5.3. As Needed	14
5.4. Annual	14
6. Troubleshooting	16
6.1. What You Can Check	16
6.2. Service Technician Only	18
6.3. Error Code Reference	19
6.4. When to Contact Service	20
6.5. Parts & Service Information	20
7. Warranty & Support	21
8. References & Standards	22
Appendix A: Controlled Document Info	23

*This manual covers installation, operation, safety, cleaning, and troubleshooting for the fictional **IronClad K-Oven 12 Pro**, a freestanding range combining an electric convection oven with a four-burner gas hob. Prepared as a portfolio sample.*

This is a portfolio sample

All company names, addresses, and contact details are fictional. This document is created for demonstration purposes only.

Chapter 1. Introduction

Manufacturer: IronClad Home Appliances, 101 Hearth Street, Springfield, USA

Support: support@ironclad-home.example · +1-800-555-0199

Intended audience: This manual has two audiences. [Installation](#) and the technician-only parts of [Troubleshooting](#) are for qualified installers (licensed electrician and licensed gas installer) and service technicians. All other chapters are for the household user.

Scope: safe installation, operation of the oven and gas hob, periodic cleaning, troubleshooting, and recordkeeping.

Chapter 2. Safety Information

DANGER

If you smell gas — fire or explosion hazard. Gas escaping near an ignition source can explode or burn, causing death, serious injury, or property damage.



- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Extinguish any open flame, leave the building, and keep others out.
- Immediately call your gas supplier from a neighbor's phone or from outside. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

WARNING



Fire, electric shock, and burn hazards. Improper installation, maintenance, or use can cause fire, electric shock, serious burns, or death. Read and follow all instructions in this manual before operating this appliance.

2.1. General Safety

- Disconnect power at the circuit breaker before cleaning behind the range or replacing the oven light.
- Keep combustible materials (towels, curtains, paper, packaging) away from the hob and the oven vent at all times, and maintain the installation clearances in [\[clearances\]](#).
- Do not operate with a damaged power cord, plug, gas connector, or control panel.
- Never use the range or oven to heat the room.
- Never leave a lit hob burner unattended.

2.2. PPE (Personal Protective Equipment)

- Heat-resistant oven mitts
- Eye protection when servicing interior components
- Protective clothing to avoid burns

Chapter 3. Installation



WARNING

Fire, gas, and electrical hazards. Incorrect installation can cause fire, explosion, carbon monoxide poisoning, or electric shock. Electrical work must be performed by a licensed electrician, and the gas hob must be connected and leak-tested by a licensed gas installer before first use. Improper installation also voids the warranty.

3.1. Pre-Installation Checklist

1. **Verify electrical supply:** 240/208 V AC, 60 Hz, 4-wire, on a dedicated 40 A circuit.
2. **Verify gas supply:** natural gas at the supply pressure listed on the rating plate, with an accessible manual shutoff valve. For LP (propane) gas, order the LP conversion kit before installation.
3. **Check installation space:** measure clearances and ensure adequate ventilation (a range hood vented to the outdoors is recommended).
4. **Gather required tools:** level, drill, screwdrivers, adjustable wrench, electrical tester, measuring tape, leak-detection solution.
5. **Review local codes:** installation must comply with the National Electrical Code (NFPA 70), the National Fuel Gas Code (ANSI Z223.1/NFPA 54), and all local codes.

3.2. Step-by-Step Installation Procedure

3.2.1. Prepare Installation Location

1. **Clear the area:** remove packaging and inspect the range for shipping damage.
2. **Measure space:** verify the minimum clearances in the table below.
3. **Check flooring:** ensure the floor can support the range (approx. 80 kg / 176 lb) plus the weight of cookware and food.



Figure 1. Minimum installation clearances (not to scale)



The illustration is schematic and not to scale. The table below lists all required clearances, including side walls above hob level.

Location	Minimum Clearance	Reason
Rear wall	4 in (100 mm)	Room for the gas connector, power cord, and anti-tip bracket
Side walls (below hob level)	2 in (50 mm) each	Room to slide the range in and out for service
Combustible side walls above hob level	6 in (152 mm)	Fire hazard from burner flames and hot cookware
Top — hob surface to combustible overhead cabinets	30 in (762 mm)	Fire hazard; reaching over lit burners
Front	24 in (610 mm)	Door opening and safe operation

3.2.2. Anti-Tip Bracket



WARNING

Tip-over hazard. A child or adult can tip the range and be killed or seriously burned. Install the anti-tip bracket supplied with the range, and engage the range with the bracket. Re-engage the bracket whenever the range is moved.

1. Mark the bracket position using the template supplied with the range.
2. Fasten the bracket to the floor (or to the wall plate) with the supplied screws, into solid wood or concrete anchors.
3. When you slide the range into place (see [Positioning and Leveling](#)), make sure the rear leveling leg slides fully under the bracket.
4. **Verify engagement:** grasp the top rear edge of the range and tilt it gently forward. The bracket must stop the range from lifting.

3.2.3. Electrical Connection



DANGER

Electric shock hazard. Contact with live 240 V conductors will cause death or serious injury. Switch the circuit breaker OFF and lock it out, then verify absence of voltage with a tested electrical tester before making any connection.

1. **Install dedicated circuit:** 240/208 V, 60 Hz, 40 A, protected by a 2-pole breaker.
2. **Use proper wiring:** 8 AWG copper minimum for the 40 A circuit.
3. **Connect ground wire:** green or bare copper equipment-grounding conductor to the ground terminal (mandatory). Do not bond neutral to the range frame.
4. **Install outlet:** NEMA 14-50R 4-wire grounded receptacle, positioned behind the range where the range cord reaches it without strain.
5. **Provide GFCI protection** where required by NEC 210.8 and local code.

Electrical Verification Steps

1. Measure voltage between the two hot terminals: 240 V $\pm 10\%$ expected (208 V $\pm 10\%$ on 208 V systems). Each hot to neutral: 120 V $\pm 10\%$.
2. Verify ground continuity: $< 1 \Omega$ resistance to ground.
3. If the circuit is GFCI-protected, press the TEST button; the device must trip immediately.
4. Reset the GFCI and verify that power is restored.

3.2.4. Gas Connection

The range is shipped set up for **natural gas**. Conversion to **LP (propane) gas** must be performed by a qualified installer using the IronClad LP conversion kit, and the conversion label must be completed and attached next to the rating plate.

1. Close the manual shutoff valve on the gas supply.
2. Connect the range to the supply with a new, design-certified flexible gas connector. Do not reuse an old connector.

3. Apply pipe-thread sealant rated for natural and LP gas to all male threads (not to flare fittings).
4. Open the shutoff valve and check every connection with a leak-detection solution. Bubbles indicate a leak: close the valve, tighten, and retest.



WARNING

Fire or explosion hazard. Never check for gas leaks with an open flame. Use only a leak-detection solution.

3.2.5. Positioning and Leveling

1. **Position the range:** slide it into its final location, keeping the required clearances and engaging the anti-tip bracket.
2. **Check stability:** the range should not rock when the door is opened.
3. **Adjust leveling legs:** use an adjustable wrench to level the range in both directions.
4. **Verify level:** place a spirit level on an oven rack; the bubble should be within the center marks.

Leveling Specifications

- Maximum deviation: $\pm 1/16$ in (2 mm) over range width and depth
- Door closes smoothly without forcing
- No gaps $> 1/8$ in (3 mm) between door and frame when closed

3.2.6. Initial Power-On and Testing

1. **Connect power:** plug the range cord firmly into the grounded receptacle and switch the breaker ON.
2. **Initial startup:** press the power button. The display illuminates.
3. **Test all oven modes:** cycle through Bake, Broil, Convection, and Self-Clean.
4. **Verify door lock:** start Self-Clean briefly and confirm the door locks, then cancel the cycle.
5. **Check interior lighting:** the light should switch on when the door opens.
6. **Test hob burners:** light each burner (see [Using the Gas Hob](#)) and confirm a steady blue flame.

3.3. Post-Installation Verification Checklist

Test Item	Pass/Fail
Anti-tip bracket installed and engaged	☐
No gas leaks at any connection (leak-detection solution)	☐
Each hob burner lights within 4 seconds with a steady blue flame	☐
Power indicator illuminates when power is connected	☐
All mode buttons respond and display correctly	☐
Temperature dial adjusts display reading	☐

Test Item	Pass/Fail
Timer counts down properly	☐
Interior light activates with door opening	☐
Door seals properly with no visible gaps	☐
Range remains level when door is fully opened	☐
No unusual vibration during convection fan operation	☐
Self-Clean mode activates and locks door	☐
All clearances maintained per specification	☐

3.4. Initial Break-In Procedure

Before first use, perform the break-in procedure to remove manufacturing residues:

1. **Set to Bake mode** at 400 °F (200 °C) for 30 minutes with the oven empty.
2. **Ventilate the kitchen.** A slight odor from protective coatings is normal.
3. **Clean the interior** with a damp cloth after cooling to remove any residue.
4. **Record the installation date** in the warranty documentation.

Chapter 4. Operation

4.1. Control Panel Overview



Figure 2. Control panel

- 1. Power button
- 2. Mode selector (Bake, Broil, Convection, Self-Clean)
- 3. Temperature dial
- 4. Digital timer/display
- 5. Child lock button
- 6. Left hob burner controls (front and rear burners)
- 7. Right hob burner controls (front and rear burners)

Controls 6 and 7 are concentric (stacked) knobs: on each side, the inner knob operates the front burner and the outer ring operates the rear burner. See [Using the Gas Hob](#).

4.2. Using the Gas Hob

The hob has four sealed gas burners with electronic spark ignition. The range is supplied for natural gas; LP (propane) operation requires conversion by a qualified installer (see [Gas Connection](#)).

Burner	Control	Typical Use
Front-left	Knob 6, inner knob	Frying, boiling
Rear-left	Knob 6, outer ring	Simmering, sauces
Front-right	Knob 7, inner knob	Rapid boiling, searing
Rear-right	Knob 7, outer ring	General cooking

Lighting a burner

1. Make sure the burner cap is correctly seated on the burner base.
2. Push in the knob or ring for the burner and turn it counterclockwise to **LITE**. The igniter clicks.
3. When the flame lights, turn the control to the desired setting. The igniter stops clicking.
4. If the burner does not light within 4 seconds, turn the control to **OFF**, wait 5 minutes for the gas to dissipate, and try again.

Flame check

- A correct flame is steady and blue, with a small, well-defined inner cone.
- Yellow or orange tips, a noisy or lifting flame, or soot on cookware indicate a problem. Turn the burner off and contact service.
- Adjust the flame so that it does not extend beyond the bottom of the cookware.

Relighting and power failure

- If a flame goes out during cooking, turn the control to **OFF**, wait 5 minutes, then relight.
- During a power failure, the igniters do not work. You can light a burner by holding a lit long match to the burner ports and then turning the control to **LITE**. The oven does not operate during a power failure.



WARNING

Carbon monoxide poisoning hazard. Burning gas produces carbon monoxide, which can cause illness or death in a poorly ventilated room. Run a range hood vented to the outdoors (or open a window) while using the hob, never use the range to heat the room, and install a carbon monoxide alarm in the home.

4.3. Cooking Modes & Procedures

4.3.1. Bake Mode (Conventional Baking)

Temperature range: 300–480 °F (150–250 °C)

Best for: Bread, cakes, casseroles, roasts

Procedure

1. Preheat the oven to the desired temperature (typically 10–15 minutes).
2. Place food on the center rack for even heating.
3. For best results, use light-colored, dull-finish pans.



Each door opening lowers the oven temperature by about 20–25 °F (10–15 °C). Open the door only when necessary.

Recommended settings:

Food Type	Oven Temperature	Time	Minimum Safe Internal Temperature
Bread/Quick breads	350–400 °F (175–200 °C)	25–45 min	N/A
Cakes (layer)	350 °F (180 °C)	25–35 min	N/A
Cookies	350–375 °F (175–190 °C)	8–12 min	N/A
Roast chicken (3.3 lb / 1.5 kg)	375 °F (190 °C)	About 1.5 hours	165 °F (74 °C)
Roast beef	350 °F (180 °C)	About 9 min/lb (20 min/kg)	145 °F (63 °C) + 3-minute rest
Casseroles	350 °F (180 °C)	30–45 min	165 °F (74 °C) at center

4.3.2. Broil Mode (High Heat from Top)

Temperature: Fixed at 480 °F (250 °C)

Best for: Browning, crisping, thin cuts of meat

Procedure

1. Position the rack 2–6 in (5–15 cm) from the top element (closer = faster browning).
2. Preheat the broiler for 5 minutes.
3. Use a broiler pan with a slotted top to allow fat drainage.
4. Turn foods once, halfway through the cooking time.



Broiling cooks quickly. Stay with the oven and watch the food throughout.

Broiling guide:

Food	Rack Position	Time per Side	Notes
Fish fillets (3/4 in / 2 cm)	4 in (10 cm) from element	4–6 minutes	Do not turn thin fillets; cook to 145 °F (63 °C)
Chicken breast	6 in (15 cm) from element	7–10 minutes	Turn once; cook to 165 °F (74 °C)
Steaks (1 in / 2.5 cm)	4 in (10 cm) from element	5–8 minutes	Cook to at least 145 °F (63 °C), then rest 3 minutes
Vegetables	6 in (15 cm) from element	5–8 minutes	Brush with oil first

4.3.3. Convection Mode (Fan-Assisted)

Temperature range: 285–445 °F (140–230 °C)

Best for: Multiple racks, even browning, faster cooking

Advantages

- Up to 25% shorter cooking times at the recipe temperature
- More even browning and heating
- Ability to use multiple racks simultaneously
- Better for cookies, pastries, and roasting

Procedure

1. Adjust the conventional recipe in **one** of two ways, not both:
 - reduce the temperature by 25 °F (15 °C) and keep the recipe time, **or**
 - keep the recipe temperature and reduce the time by about 25%.
2. Check the food a few minutes before the adjusted time is up, then adjust as needed.
3. Use low-sided pans for better air circulation.
4. Leave space between pans on multiple racks.

4.3.4. Self-Clean Mode

Temperature: about 900 °F (485 °C)

Duration: 3 hours

Frequency: every 3–4 months with normal use



WARNING

Burn and fume hazard. Oven cavity temperatures exceed 750 °F (400 °C) during Self-Clean, and the cycle releases fumes. Do not attempt to open the door during the cycle. Ventilate the kitchen, and move pet birds to another well-ventilated room: their respiratory systems are highly sensitive to the fumes.

Self-Clean Procedure

1. Remove all racks, pans, broiler pan, and aluminum foil from the oven.
2. Wipe up large spills with a damp cloth (small residue burns off normally).
3. Close the door and select Self-Clean mode.

The door locks automatically when the cycle begins.

4. Wait for the cycle to finish and for the 1-hour cooldown to end.

The door unlocks automatically when the cavity has cooled.

5. Wipe the ash residue with a damp cloth.

4.4. Food Safety Guidelines

USDA safe minimum internal temperatures

- Poultry (whole or parts): 165 °F (74 °C)

- Ground meat (beef, pork, lamb, veal): 160 °F (71 °C)
- Beef, pork, lamb, and veal steaks, roasts, and chops: 145 °F (63 °C), then rest 3 minutes before carving or eating
- Fish and shellfish: 145 °F (63 °C)
- Leftovers and casseroles: 165 °F (74 °C)

These are food-safety minimums, not doneness preferences. Recipes that call for "rare" or "medium" doneness below these temperatures do not meet USDA food-safety guidance.

Use a reliable food thermometer. Insert it into the thickest part of the food without touching bone.

Chapter 5. Cleaning & Maintenance

5.1. Daily

- Wipe spills with a damp cloth after the oven and hob have cooled.
- Avoid abrasive cleaners.
- Wipe the burner caps and grates when cool; keep burner ports clear.

5.2. Monthly

- Inspect and clean the door gasket.

5.3. As Needed

- **Replace the oven light bulb** (E14, 25 W, high-temperature appliance type) when it fails:
 1. Switch off power at the circuit breaker and let the oven cool completely.
 2. Remove the glass cover, replace the bulb, and refit the cover.
 3. Restore power and check that the light works.

5.4. Annual

- Professional inspection recommended for heating elements, control circuits, and gas connections.

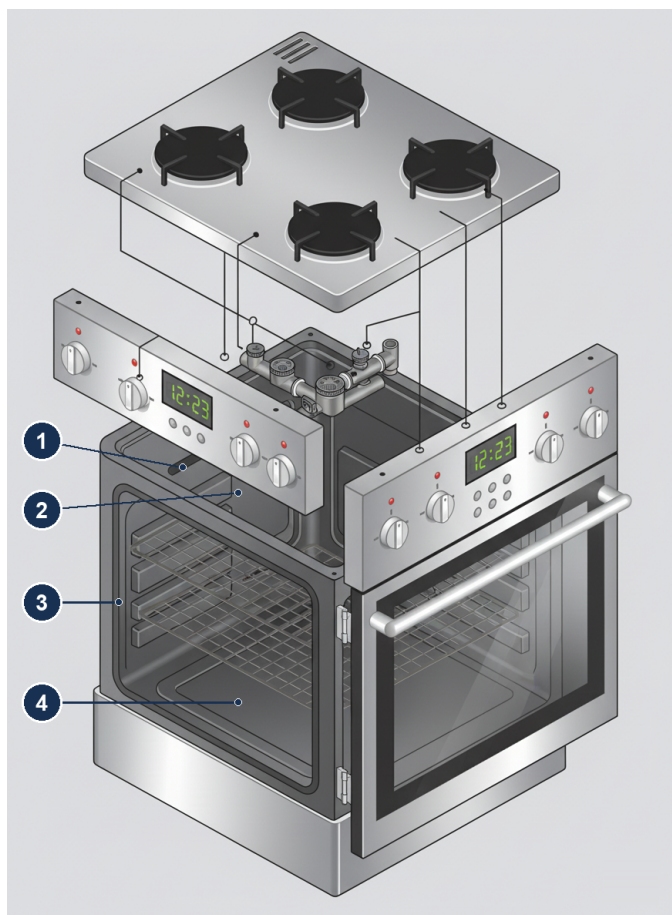


Figure 3. Exploded view — serviceable parts

1. Light bulb — replace with rated type only
2. Convection fan (behind rear wall) — clean blades, check bearings
3. Door gasket — replace if torn or hardened
4. Heating element (under cavity floor) — replace if cracked or not heating

Items 2 and 4 are serviced only by a qualified service technician.

Chapter 6. Troubleshooting

Use [What You Can Check](#) first. Anything that requires removing panels or measuring voltages is listed in [Service Technician Only](#) and must be performed only by a qualified service technician.

6.1. What You Can Check

Symptom	Possible Cause	What You Can Do	Error Code
Oven not heating at all	No power to unit; tripped GFCI or breaker	Check that the range cord is plugged in; reset the GFCI or circuit breaker. If it trips again, call service.	—
Heating element not glowing	Failed heating element; loose connection	Look for visible cracks or breaks in the element (oven cool). Call service.	E2
Uneven baking/hot spots	Blocked convection fan; damaged door seal; overloaded rack	Remove foil or pans blocking the fan; inspect the door gasket for tears; reduce the load; rotate pans halfway through; use the center rack position.	—
Convection fan not running	Motor failure; blocked fan; loose wiring	In convection mode, listen for fan noise; check for obstructions (oven cool). If the fan still does not run, call service.	E3
Door won't open after Self-Clean	Cooldown not complete; door lock malfunction	Wait an additional 30 minutes. Never force the door. If it is still locked, call service.	E4
Display shows incorrect temperature	Temperature sensor drift	Compare the display with an oven thermometer on the center rack. If the difference exceeds 25 °F (15 °C), call service.	—
Interior light not working	Burned-out bulb; door switch fault	Replace the bulb (see As Needed). If the new bulb does not light, call service.	—

Symptom	Possible Cause	What You Can Do	Error Code
Excessive smoke during cooking	Spilled food burning; incorrect temperature; poor ventilation	Clean spills when the oven is cool; check the temperature setting against the recipe; run the range hood; remove grease buildup.	—
Door won't close properly or latch fault	Obstruction in door frame; damaged gasket; misaligned hinges; latch switch not detecting closed door	Remove any obstruction; inspect the gasket. If the door still does not close fully or E5 persists, call service.	E5
Timer not counting down	Control board fault; display issue	Test other functions; switch off at the breaker for 60 seconds, then restore power. If persistent, call service.	E6
Unusual noises during operation	Loose fan blades; worn bearings; rattling components	Note where the noise comes from (fan, door, racks); reseal racks and pans. Call service for fan or bearing noise.	—
Self-Clean cycle won't start	Door not fully closed; oven too dirty; safety lockout	Close the door completely; remove excessive debris; after repeated failed attempts, wait 24 hours before retrying.	E7
Error code E8 displayed	Communication fault between control board and display	Switch off at the breaker for 60 seconds, then restore power. If persistent, call service.	E8
Oven turns off during cooking	Overheating protection; voltage fluctuation; control fault	Check that vents are not blocked; allow a cooling period. If recurring, call service.	E9
Hob burner does not light	Burner cap misaligned; wet or dirty igniter; power failure	Turn the control OFF; reseal the cap; dry and clean the igniter and ports; wait 5 minutes and retry. During a power failure, light with a match.	—

Symptom	Possible Cause	What You Can Do	Error Code
Yellow, noisy, or lifting burner flame	Misaligned cap; clogged ports; incorrect gas type or pressure	Turn the burner OFF; reseal the cap and clean the ports. If the flame is still wrong, call service.	—

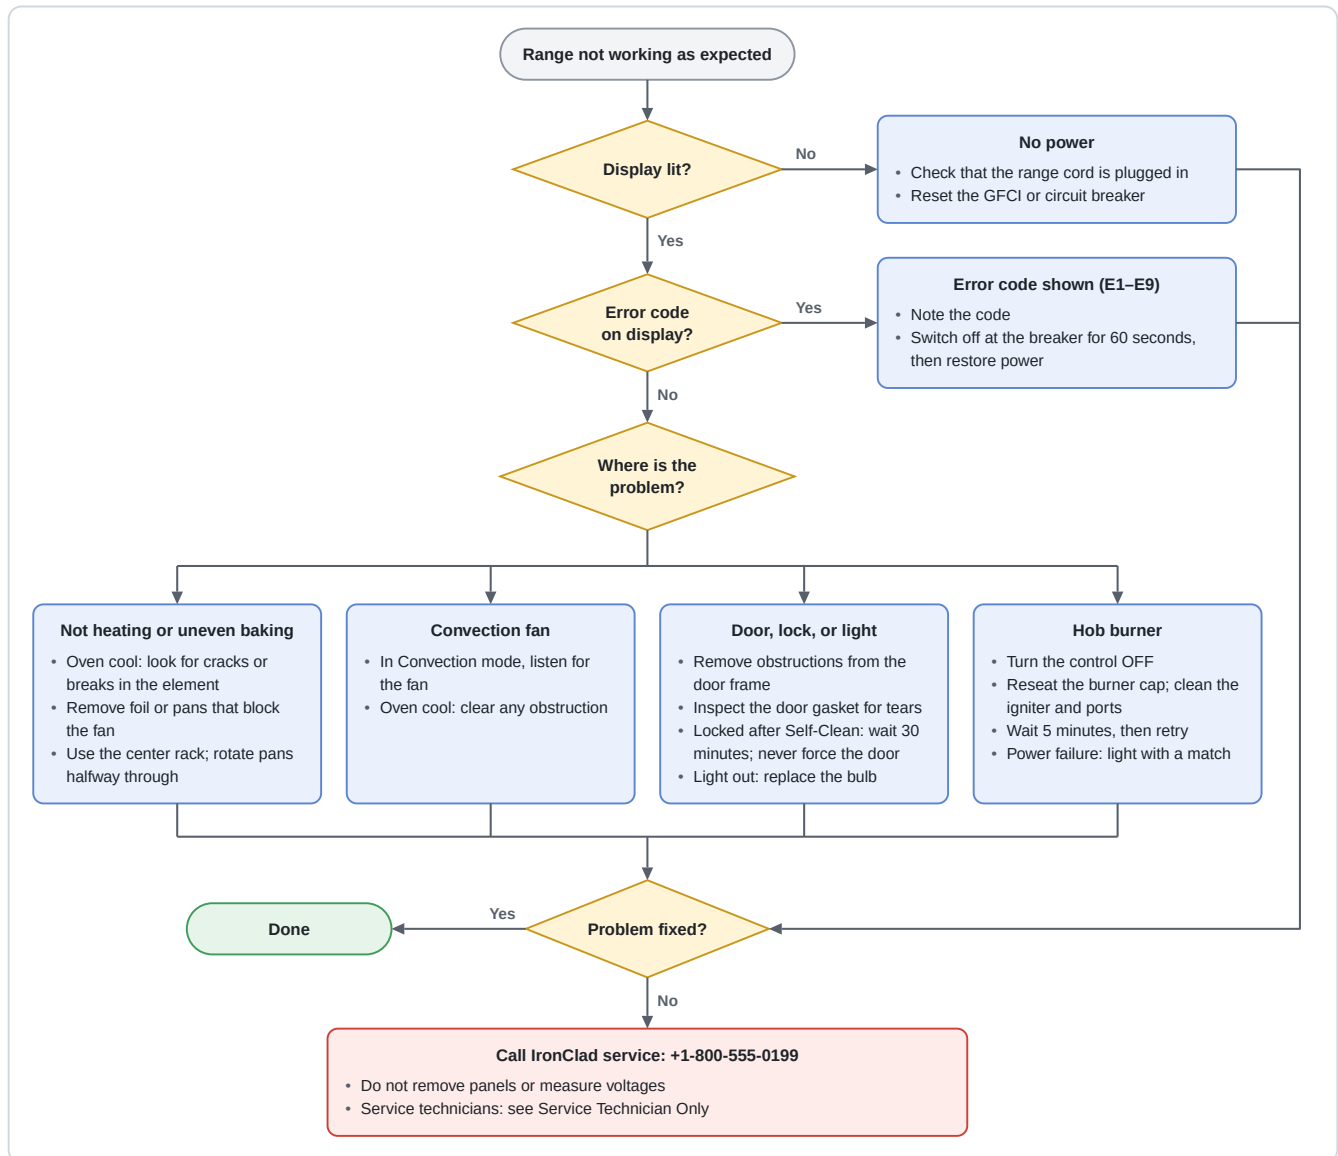


Figure 4. Troubleshooting flowchart (user checks)

6.2. Service Technician Only



DANGER

Electric shock hazard. Internal components carry 240 V and 120 V; contact will cause death or serious injury. These checks must be performed only by a qualified service technician. Disconnect power and lock out the breaker before removing any panel; take live measurements only where the procedure requires them, using insulated probes.

Symptom / Code	Technician Procedure
No power (—)	Verify 240 V $\pm$ 10% (208 V on 208 V systems) at the receptacle and 120 V hot-to-neutral.
Element not heating (E2)	Check element resistance (open circuit = faulty); verify 240 V at the element terminals during a call for heat; replace element (Part #KO-ELEM-001).
Convection fan not running (E3)	The fan motor runs on line voltage (120 V AC), not low voltage. Verify 120 V at the motor connector during convection mode; replace fan assembly (Part #KO-FAN-001) if supply is present and the motor does not run.
Door lock (E4)	Check lock actuator and lock switch with the oven fully cooled; replace actuator. Never defeat or bypass the Self-Clean door lock.
Overheating / incorrect temperature (E1)	Test sensor resistance: approx. 1100 Ω at 77 °F (25 °C); check sensor wiring; replace sensor (Part #KO-TEMP-001) if the error exceeds 25 °F (15 °C) after calibration in service mode.
Door latch switch fault (E5)	Check hinge alignment and latch switch actuation and wiring; replace switch or gasket as needed.
Interior light (—)	Verify 120 V at the light socket with the door open; check the door switch.
Display/communication (E8)	Check ribbon cable connections behind the control panel; replace control board/display assembly.
Oven turns off (E9)	Verify stable supply voltage under load; inspect control board for burnt components.
Burner flame problems (—)	Verify manifold pressure and orifice size for the gas type (natural or LP); correct the conversion if required.

6.3. Error Code Reference

Code	Meaning	Action Required
E1	Temperature sensor fault	Call service: replace temperature sensor (Part #KO-TEMP-001)
E2	Heating element failure	Call service: test element resistance; replace if open circuit
E3	Convection fan motor fault	Call service: check motor wiring; replace fan assembly
E4	Door lock malfunction	Wait 30 minutes; if still locked, call service to check or replace the lock actuator

Code	Meaning	Action Required
E5	Door latch switch fault	Close the door firmly; if persistent, call service to check the latch switch
E6	Timer/control fault	Power cycle at the breaker; call service if persistent
E7	Self-Clean safety lockout	Clear excessive debris; ensure the door is fully closed
E8	Display communication error	Power cycle at the breaker; call service if persistent
E9	Overheating protection	Check ventilation; allow cooldown; call service if recurring

6.4. When to Contact Service

Call IronClad service (+1-800-555-0199) when:

- Multiple error codes appear simultaneously
- Electrical components show signs of burning or melting
- The range trips the household circuit breaker repeatedly
- Temperature accuracy cannot be restored
- Self-Clean cycle repeatedly fails to complete
- A burner flame stays yellow, noisy, or lifting after cleaning

If you smell gas, do not call from inside the building: follow the **If you smell gas** instructions at the start of [Safety Information](#).

6.5. Parts & Service Information

Common Replacement Parts

- Temperature sensor (KO-TEMP-001): \$35
- Heating element (KO-ELEM-001): \$65
- Convection fan assembly (KO-FAN-001): \$85
- Door gasket (KO-SEAL-001): \$25
- Interior light bulb (KO-BULB-001): \$8

Service Schedule

- Annual inspection recommended for heavy-use environments
- Door seal replacement every 3–4 years
- Heating element typically lasts 8–10 years with normal use

Chapter 7. Warranty & Support

- 2-year limited warranty (parts & labor)
- Excludes damage from misuse or unauthorized repairs
- Support available Mon–Fri, 09:00–17:00 (local time)

Contact: **IronClad Home Appliances, 101 Hearth Street, Springfield, USA**

Chapter 8. References & Standards

- UL 858 — Household Electric Ranges
- ANSI Z21.1/CSA 1.1 — Household Cooking Gas Appliances
- ANSI Z223.1/NFPA 54 — National Fuel Gas Code
- NFPA 70 — National Electrical Code (NEC)
- ANSI Z535.6 — Product Safety Information in Product Manuals, Instructions, and Other Collateral Materials
- USDA FSIS — Safe Minimum Internal Temperature Chart
- ISO 13732-1 — Ergonomics of the thermal environment — Methods for the assessment of human responses to contact with surfaces — Hot surfaces

Appendix A: Controlled Document Info

Doc ID: KOVEN-12PRO-UM-01

Revision: 1.0 (Portfolio Sample)

Manufacturer: IronClad Home Appliances

Note: For portfolio demonstration use only — all names and contacts are fictional.