

Spinomatic X7 — Cordless Drill User Manual - TorqueWorks Ltd.

Version 1.0, 2025-09-08

Table of Contents

1. Safety Information	2
1.1. General Safety	2
1.2. Electrical & Battery Safety	2
1.3. Operation Safety	2
1.4. After Use	2
2. Product Overview	3
2.1. Package Contents	3
2.2. Parts & Controls	3
2.3. Exploded View (reference)	4
3. Assembly & Setup	6
3.1. Attaching/Removing the Battery	6
3.2. Inserting Drill/Driver Bits	7
4. Operating Instructions	9
4.1. Bit & Material Selection	9
4.2. Speed & Torque	9
4.3. Pilot Holes (Guideline)	9
4.4. Technique	10
5. Charging & Maintenance	11
5.1. Charging	11
5.2. Battery Health	12
5.3. Tool Maintenance	12
5.4. Cleaning	12
5.5. Storage	13
5.6. Consumables & Parts	13
6. Troubleshooting	14
6.1. When to Contact Service	14
7. Technical Specifications	15
8. Warranty & Support	16
Appendix A: Compliance & Disposal	17

*This manual explains safe use, setup, operation, maintenance, and troubleshooting for the **Spinomatic X7** cordless drill (TorqueWorks Ltd.).*

Chapter 1. Safety Information



Power tools can cause serious injury if used improperly. Read and keep this manual. Do not allow children to operate the drill.

1.1. General Safety

- Wear PPE: safety goggles, hearing protection, and work gloves.
- Keep work area clean, dry, and well lit. Do not operate near flammable vapors.
- Maintain stable footing and balance at all times.
- Secure the workpiece (vise or clamps); never hold material in your hand.
- Do not modify the tool. Use only accessories rated for the drill.

1.2. Electrical & Battery Safety

- Use only charger **CHG-18V** and battery **BAT-18V** (or approved equivalents).
- Do not short-circuit, crush, heat above 60 °C, or incinerate battery packs.
- Charge only indoors, between 5 °C and 35 °C. Unplug the charger when not in use.
- Inspect battery and charger before each use; replace if cracked, deformed, or leaking.

1.3. Operation Safety

- Remove adjusting keys and wrenches before powering on.
- Select the correct speed/torque and bit for the material before contact.
- Keep hands, hair, and clothing away from rotating parts.
- If the tool smokes, vibrates excessively, or overheats, stop and investigate.

1.4. After Use

- Turn off and remove the battery before changing bits, adjusting, cleaning, or storage.
- Allow the tool to cool. Store in a dry location out of children's reach.

Chapter 2. Product Overview

The **Spinomatic X7** by TorqueWorks Ltd. is a versatile 18V cordless drill designed for DIY enthusiasts and light professional use.

2.1. Package Contents

- Drill body (x1)
- 18V Li-Ion battery (x1)
- Charger (x1)
- Carry case (x1)

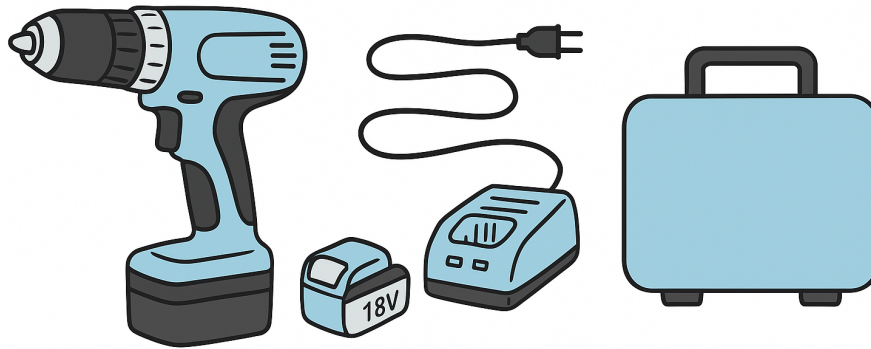


Figure 1. Package contents

2.2. Parts & Controls

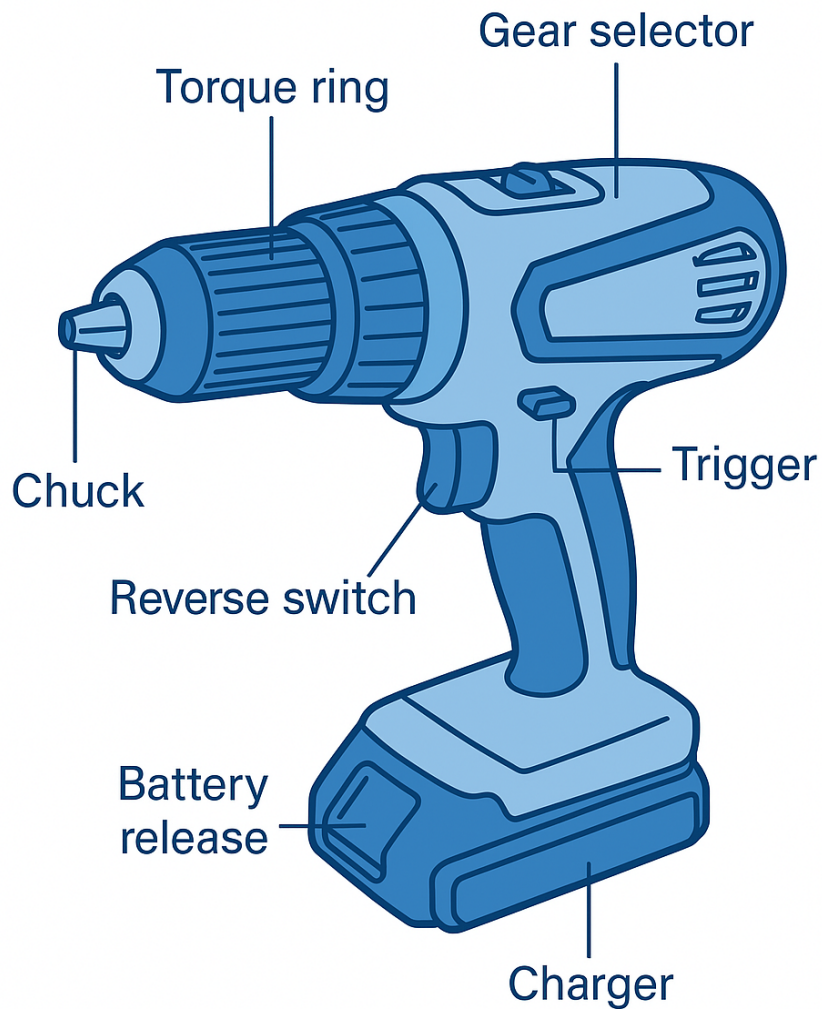


Figure 2. Drill parts and controls

1. Chuck
2. Torque ring
3. Gear selector
4. Trigger & reverse switch
5. Battery release

Tip: Use this diagram to locate controls referenced throughout the manual.

2.3. Exploded View (reference)

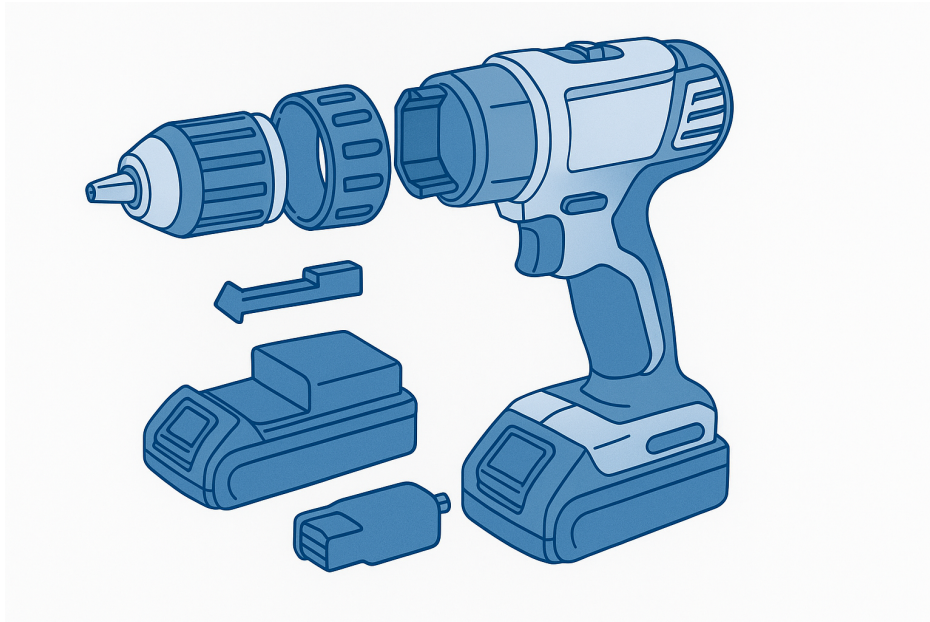


Figure 3. Exploded assembly (major external components)

Chapter 3. Assembly & Setup

3.1. Attaching/Removing the Battery

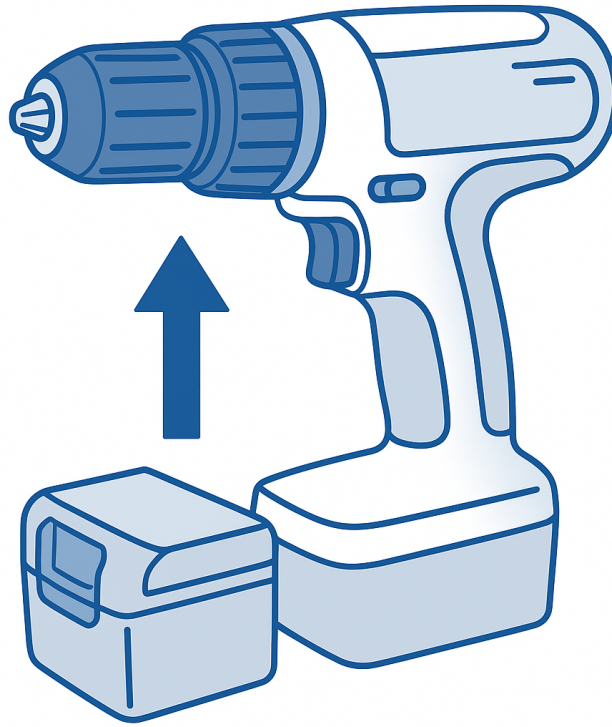


Figure 4. Battery attachment (slide until it clicks)

1. Slide battery until it **clicks**.
2. Verify it is seated and cannot pull free.

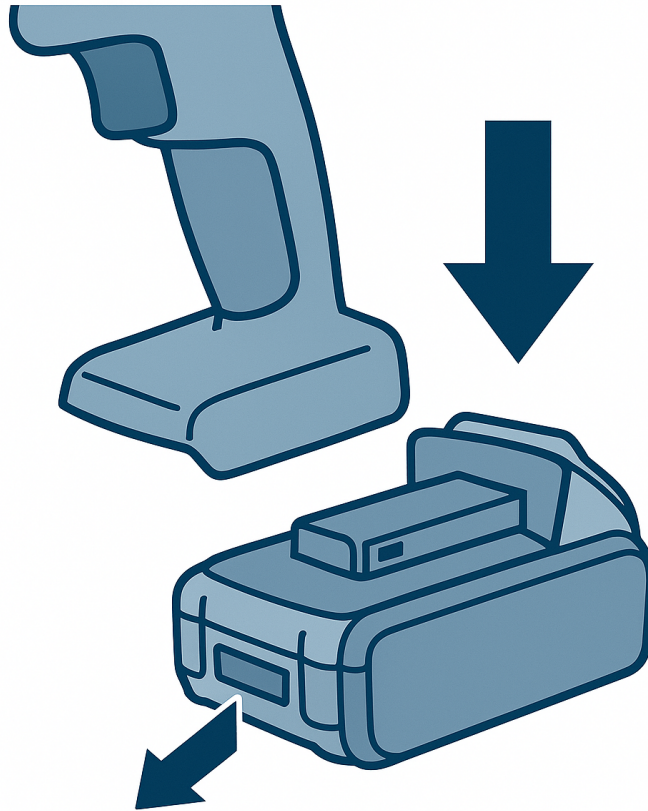


Figure 5. Battery removal (press latch, pull downward)

1. Press the latch.
2. Pull the battery downward to remove.

3.2. Inserting Drill/Driver Bits

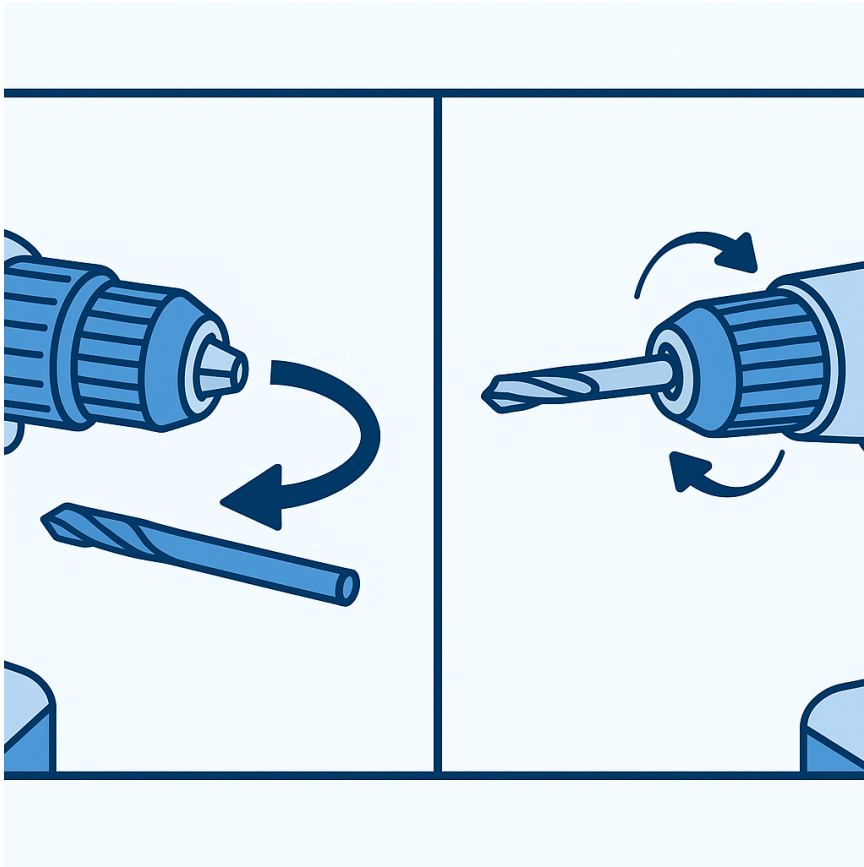


Figure 6. Chuck open → insert bit → tighten clockwise

1. Rotate chuck counter-clockwise to open jaws.
2. Insert bit; tighten clockwise.
3. Verify bit is secured.

Chapter 4. Operating Instructions

4.1. Bit & Material Selection

Material	Recommended Bit	Notes
Softwood	Wood twist, brad-point	Low torque, high speed.
Hardwood	Brad-point	Pre-drill pilot holes; moderate speed.
Metal	HSS twist	Lubricate; low speed, steady pressure.
Masonry	Masonry bit	Use hammer mode if available; low speed.

4.2. Speed & Torque

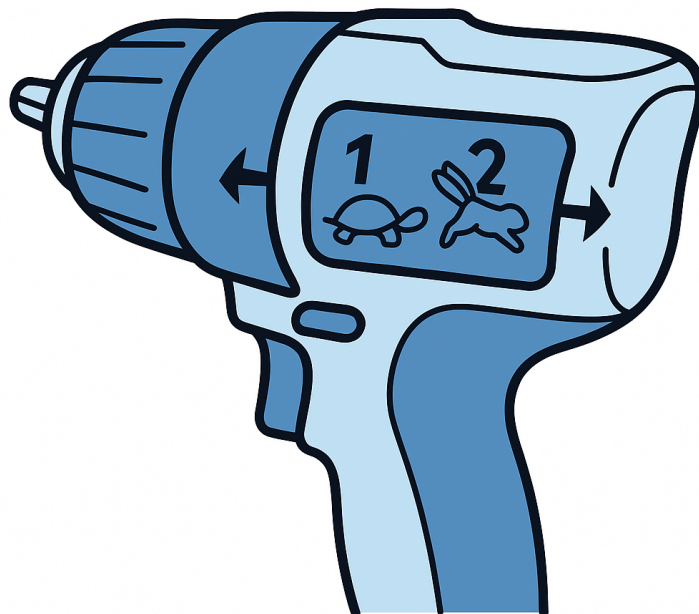


Figure 7. Gear selector: 1 = high torque / low speed, 2 = high speed / lower torque

- **Gear 1** → High torque / low speed (screws, large bits).
- **Gear 2** → Low torque / high speed (small holes in wood/soft material).
- Start low; increase torque only if the bit stalls or the screw cams out.



Use the lowest speed that produces a clean cut. Excess speed overheats bits and dulls edges.

4.3. Pilot Holes (Guideline)

Screw Size	Pilot Diameter
3 mm (≈#4)	2.0–2.2 mm
4 mm (≈#8)	3.0–3.2 mm
5 mm (≈#10)	3.5–4.0 mm

4.4. Technique

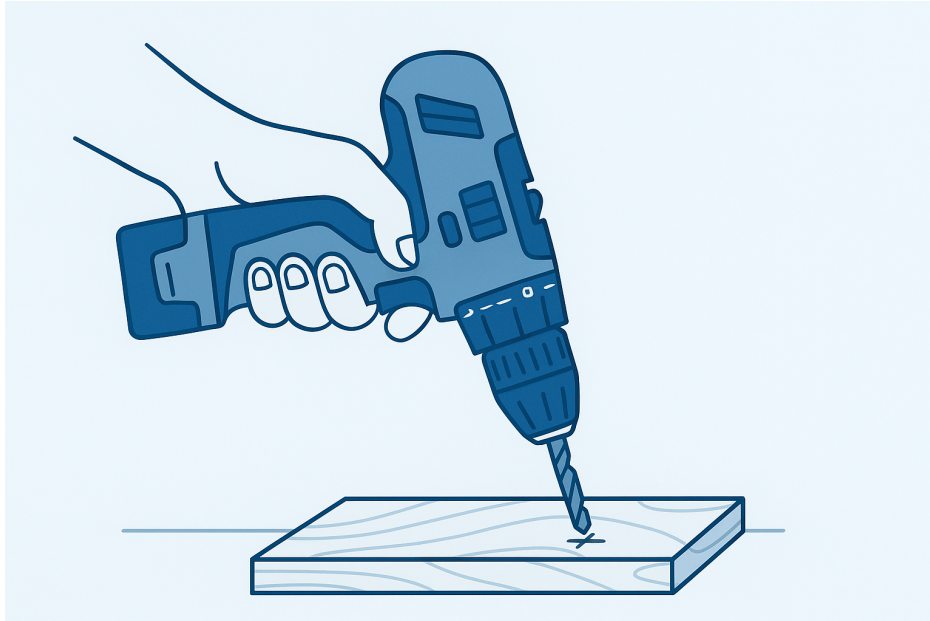


Figure 8. Correct stance and perpendicular approach

1. Mark the hole; use a center punch on metal to prevent wandering.
2. Hold the drill perpendicular to the surface; brace your wrist.
3. Squeeze the trigger gently to start; increase only as needed.
4. Ease pressure before breaking through the far side to prevent tear-out.
5. For screws: select a driver bit that fully fits the screw head; stop when the clutch clicks.



Kickback risk: if the bit binds, release the trigger immediately and back the bit out. Do not force the tool.

Chapter 5. Charging & Maintenance

5.1. Charging

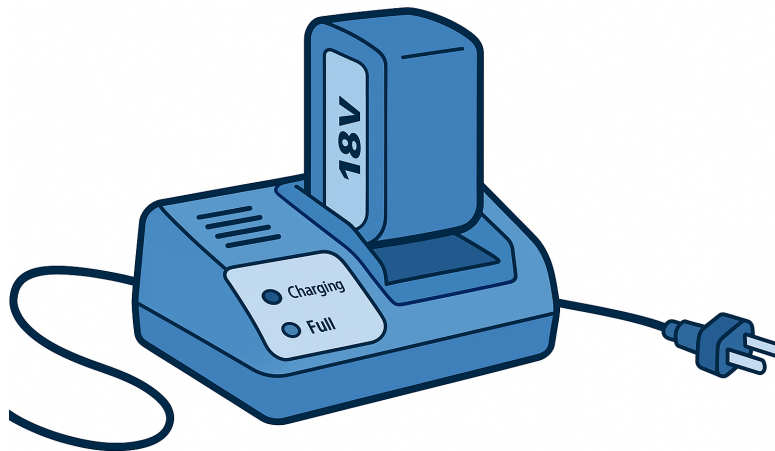


Figure 9. Charger with battery pack and LED indicators

1. Place charger on a flat, ventilated surface.
2. Connect charger to mains.
3. Insert the battery pack until it clicks; ensure contacts are clean/dry.
4. When complete, remove the battery and unplug the charger.

Indicator	Meaning
Solid red	Charging in progress
Solid green	Fully charged
Flashing red	Temperature/fault detected — allow to cool; check contacts and vents
No light	No power — check outlet/cable

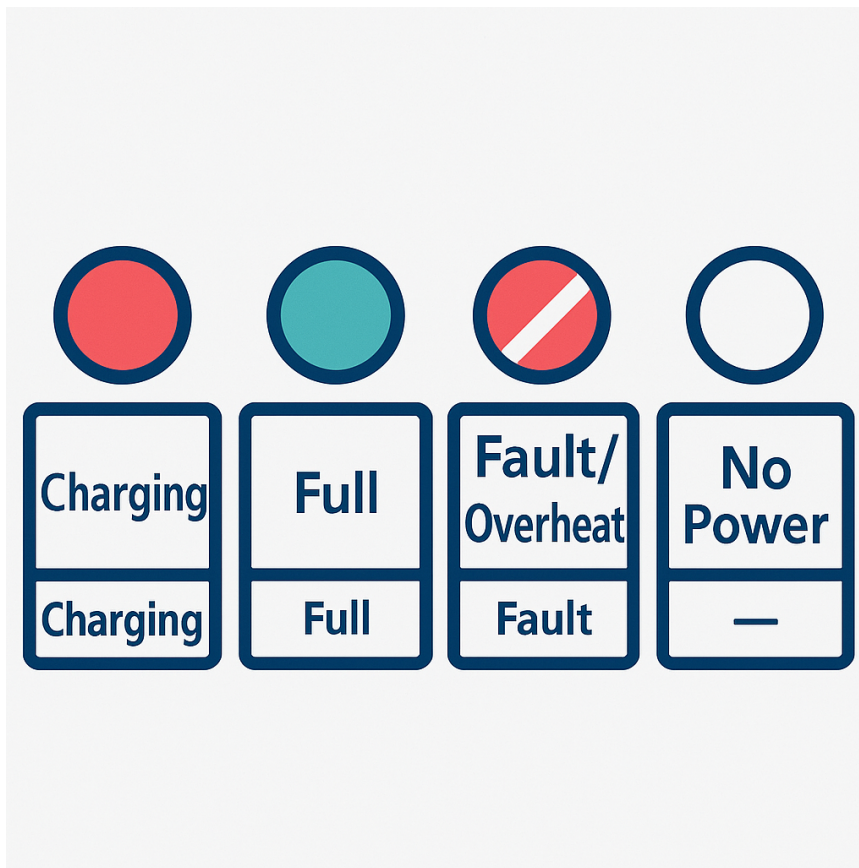


Figure 10. LED states (legend)



Charge only between 5 °C **and** 35 °C. Do not cover the charger; keep vents clear.

Typical time: ~60–90 min for a 2.0 Ah pack.

5.2. Battery Health

- Store at ~50% charge if unused for > 1 month.
- Avoid full discharge; recharge when power drops noticeably.
- Keep packs dry and away from metal objects; transport with terminal covers.

5.3. Tool Maintenance

- Inspect chuck jaws and remove debris.
- Check ventilation slots; clear dust with dry brush or air.
- Tighten exterior screws if loosened by vibration.
- Do **not** open the tool body or lubricate internal parts.

5.4. Cleaning

- Remove the battery before cleaning.
- Wipe with a dry or slightly damp cloth; avoid solvents and compressed air near bearings.

5.5. Storage

- Dry, indoor location at **10–25 °C**.
- Remove battery from tool for storage/transport.

5.6. Consumables & Parts

Item	Example
Battery pack	BAT-18V (2.0 Ah / 4.0 Ah)
Charger	CHG-18V
Driver bits	PH2, PZ2, T20, hex 3–6 mm

Chapter 6. Troubleshooting

Icon note: Use the warning triangle where safety-critical symptoms appear.



Problem	Possible Cause	Corrective Action
Drill does not start	Battery not seated / discharged	Remove and reinsert battery until it clicks; recharge or try a known-good pack.
Intermittent power loss	Dirty battery contacts or debris in trigger	Power off and remove battery; clean contacts with dry cloth; blow out trigger area gently.
Chuck slips / bit spins	Bit not fully seated or jaws dirty	Reseat bit and tighten; clean jaws; replace worn bits.
Screw head cam-out	Wrong driver bit or excessive torque	Use correct bit size/profile; reduce torque or switch to Gear 1.
Slow or stalling in wood/metal	Too high gear/speed or dull bit	Switch to Gear 1; use steady pressure; replace or sharpen bit; lubricate for metal.
Overheating / hot housing	Prolonged heavy load or blocked vents	Stop and allow to cool; clear ventilation slots; use appropriate speed/bit.
Unusual vibration/noise	Bent bit or loose accessory	Stop immediately; remove battery; replace bit and check accessories are tight.

6.1. When to Contact Service

- Housing cracked, burning smell, or visible arcing.
- Battery leaking, swollen, or excessively hot after cooling.
- Repeated fault after following the corrective actions above.

Chapter 7. Technical Specifications

Parameter	Value
Voltage	18 V (Li-ion)
Battery capacity	2.0 Ah (example)
No-load speed	0–450 / 0–1600 RPM (2-speed)
Max torque	45 Nm
Clutch settings	20 + drill
Chuck capacity	1.5–13 mm
Charging time	~60–90 min (2.0 Ah)
Weight (with battery)	~1.6 kg
Operating temperature	0–40 °C (tool)
Charging temperature	5–35 °C (battery/charger)
Manufacturer	TorqueWorks Ltd., 221B Tool Street, Invention, NY 10001

Chapter 8. Warranty & Support

The **Spinomatic X7** is warranted against defects for 24 months from the purchase date. Retain proof of purchase.

Manufacturer: TorqueWorks Ltd.

Head Office: 221B Tool Street, Inventon, NY 10001, USA

Phone: +1-800-555-7746

Email (Support): support@torqueworks.example

Email (Info): info@torqueworks.example

Website: www.torqueworks.example

Appendix A: Compliance & Disposal

This product is manufactured by TorqueWorks Ltd., a fictional company established for demonstration purposes.