

Google Chromebit Setup at stores

1. Plug Chromebit into any HDMI port on TV. If necessary, use the supplied HDMI extension cord.

HDMI (Port on TV)



(NOTE: **Write down the number** <u>located next to the HDMI Port</u> that you plug the Chromebit in to. You can use any available Port that's marked "HDMI." HDMI ports can be located on the bottom and/or the side of the TV.)

2. Plug the power cable (from the Chromebit box) into the Chromebit.

Power Cable plugged into Chromebit that's plugged into an HDMI Port on the TV



3. **Plug** the **USB dongle** for your keyboard and mouse **into the USB port on the Chromebit**. (The dongle can usually be found inside of the battery compartment of either the keyboard or the mouse.)

Dongle



USB Port on the Chromebit (plug dongle in here)




4. Plug the Chromebit into electrical an outlet.

- 5. Turn on the TV.
- 6. Change the **input** using the TV's remote control to the correct **HDMI input number** (as labeled next to the port you plugged the Chromebit into that you wrote down in Step 1).
- 7. Go to the Leader's Casual Furniture website https://leadersfurniture.com/ and let our website play on the showroom's TV throughout each day as usual.
- 8. When cleaning or remerchandising your store, please do not move your TV to an area that does not have an electrical outlet that the chromebit can plug into.
- The user name for Chromebit is : restricted@patio.ninjaThe Password is : Leaders321
- 10. If the TV is timing out during the day your TV may be signed in under the incorrect user name.

To check what user name you are logged in as ...click on the time oval at the bottom right of your screen:



Then, hover over the circle indicated below with the red arrow.

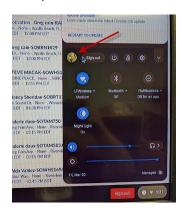

This will then show you what user name you are logged in as.

If you are not logged in as <u>restricted@patio.ninja</u>, then then log out and log back in with the correct user and pasword listed above in point 9. If you still need assistance- email IT.

11. ENJOY!