
Thank you for your purchase of Treasure Garden's AKZ13 Cantilever Umbrella.

Please remove all contents from the package, inspect and review checklist. **CAUTION:** To reduce personal injury and damage to your AKZ13, read and follow this assembly and operation guide We recommend a two-person team for assembly and

disassembly. Save information for future reference.

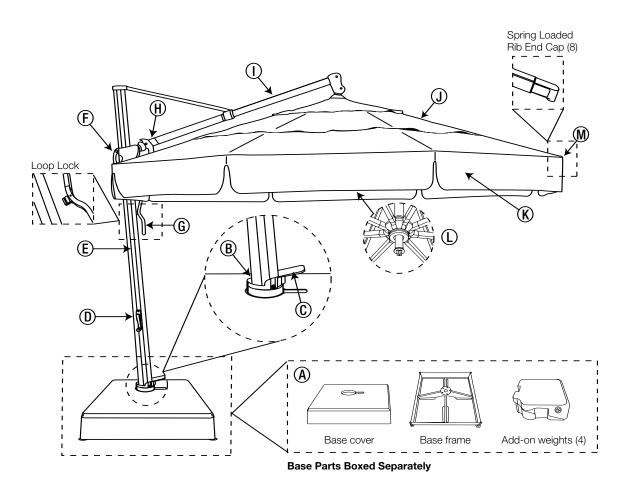

AKZ13 CHECKLIST

- A Base Cover, Frame and Add-on Weights
- B 360° Rotating Hub
- C Base Pedal
- D Crank Lift Handle
- E Main Frame Stand
- F Main Frame Grip
- G Tilt Lever

- H Tilt Degree Scale
- I Canopy Support Beam
- J Canopy Double Wind Vent
- **K** Valance (optional)
- L Vega[™] Light Adapter (light sold separtely)
- M Spring Loaded Rib End Cap

AKZ13 PART LIST			
Part		Description	Qty.
		Base Cover	1
2		Steel Base Frame	1
3		Add-On Weight Containers	4
4		Feet	4
5		Screws	4
6	2	Wrench	1
7		Bolts	5
8	0	Washers	5
9		Medium Hexagon Wrench	1
10	(FLAVORODIO) SAMP	Playground Sand (not included)	400 lbs.
		AKZ13 Main Frame	1
12		Large Hexagon Wrench	1
13		Crank Lift Handle	1
14		Small Hexagon Wrench	1

IMPORTANT: Prior to assembly it is important to decide on the location of the AKZ13 umbrella. The umbrella measures approximately 10 ft. in height and 13 ft. in width.

- Allow ample height to avoid damage to your umbrella during assembly and usage.
- Choose a location that is level and sturdy.
- Avoid any sloping or soft ground.
- Consider a location that will maximize the umbrella's rotating swivel function. Placing the AKZ13 between two entertaining areas is ideal.

NOTE: Some parts may be included in the styrofoam packaging. DO NOT discard any packaging or box until assembly is complete.

REQUIRED FOR ASSEMBLY:

• 400 lbs. playground sand (not included).