

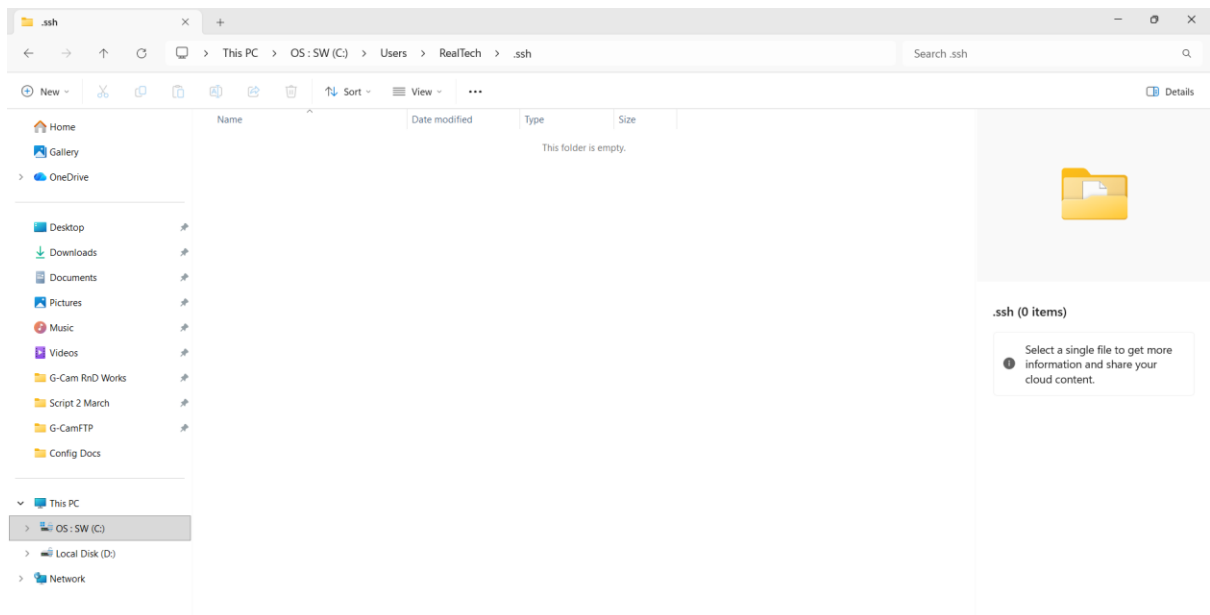


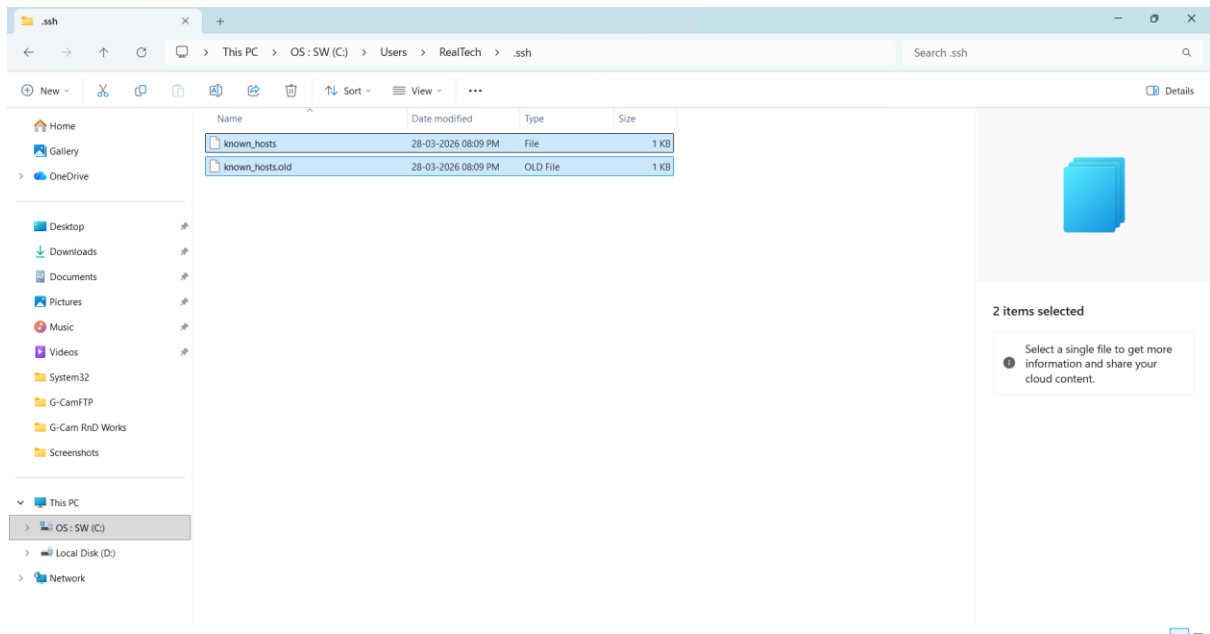

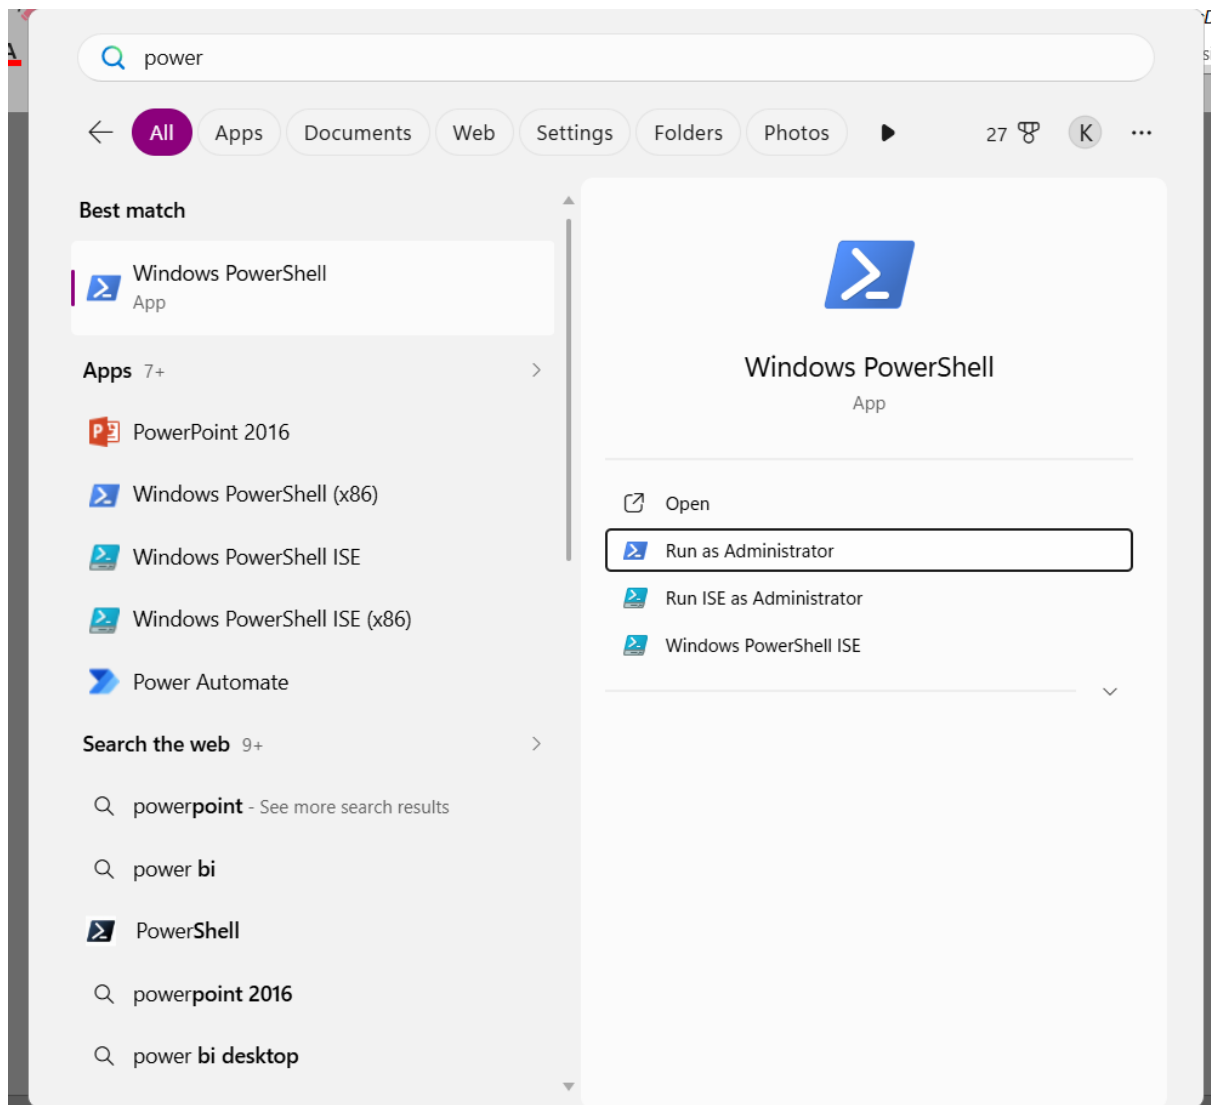

```
Administrator: Windows PowerShell
Windows PowerShell
Copyright (C) Microsoft Corporation. All rights reserved.

Install the latest PowerShell for new features and improvements! https://aka.ms/PSWindows

PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32>
```

```
Administrator: Windows PowerShell
Windows PowerShell
Copyright (C) Microsoft Corporation. All rights reserved.

Install the latest PowerShell for new features and improvements! https://aka.ms/PSWindows

PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32> ssh gcam@192.168.22.101
```

```
Administrator: Windows PowerShell
Windows PowerShell
Copyright (C) Microsoft Corporation. All rights reserved.

Install the latest PowerShell for new features and improvements! https://aka.ms/PSWindows

PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32> ssh gcam@192.168.22.101
The authenticity of host '192.168.22.101 (192.168.22.101)' can't be established.
ED25519 key fingerprint is SHA256:GIwLV10x2MsyJYelmZDORoJ7VLTdem6aSukVEyx/9U.
This key is not known by any other names.
Are you sure you want to continue connecting (yes/no/[fingerprint])? yes
```

Administrator: Windows PowerShell

Windows PowerShell

Copyright (C) Microsoft Corporation. All rights reserved.

Install the latest PowerShell for new features and improvements! <https://aka.ms/PSWindows>

PS C:\WINDOWS\system32>

PS C:\WINDOWS\system32>

PS C:\WINDOWS\system32>

PS C:\WINDOWS\system32> ssh gcam@192.168.22.101

The authenticity of host '192.168.22.101 (192.168.22.101)' can't be established.

ED25519 key fingerprint is SHA256:GIwLV10x2MsyJYelmZDORoJ7VLTdem6aSukVEyx/9U.

This key is not known by any other names.

Are you sure you want to continue connecting (yes/no/[fingerprint])? yes

Warning: Permanently added '192.168.22.101' (ED25519) to the list of known hosts.

gcam@192.168.22.101's password:

gcam@G-Cam: ~

Windows PowerShell

Copyright (C) Microsoft Corporation. All rights reserved.

Install the latest PowerShell for new features and improvements! <https://aka.ms/PSWindows>

PS C:\WINDOWS\system32> ssh gcam@192.168.22.100

The authenticity of host '192.168.22.100 (192.168.22.100)' can't be established.

ED25519 key fingerprint is SHA256:QKoQu/ZDodqWA82HIpNHhYBDyoMZL5Ne3pBIkjFL4fY.

This key is not known by any other names.

Are you sure you want to continue connecting (yes/no/[fingerprint])? yes

Warning: Permanently added '192.168.22.100' (ED25519) to the list of known hosts.

gcam@192.168.22.100's password:

Linux G-Cam 6.12.47+rpt-rpi-2712 #1 SMP PREEMPT Debian 1:6.12.47-1+rpt1 (2025-09-16) aarch64

The programs included with the Debian GNU/Linux system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.


Last login: Sat Mar 28 23:48:05 2026 from 192.168.22.101




gcam@G-Cam:~ \$

gcam@G-Cam:~ \$

gcam@G-Cam:~ \$

gcam@G-Cam:~ \$ sudo raspi-config

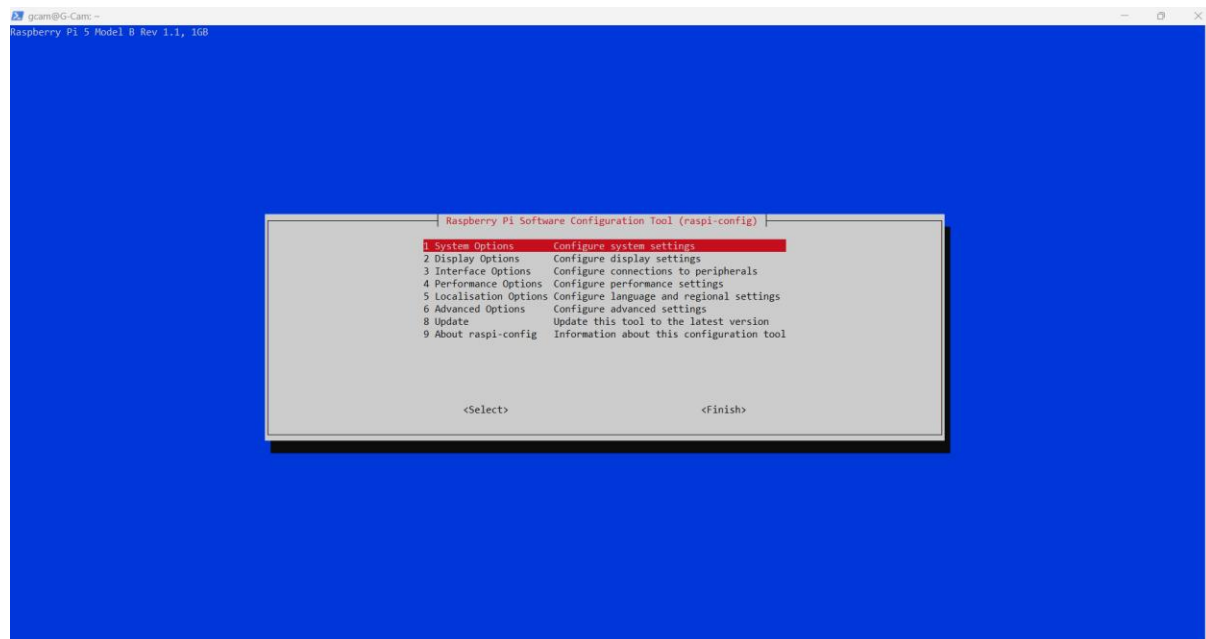

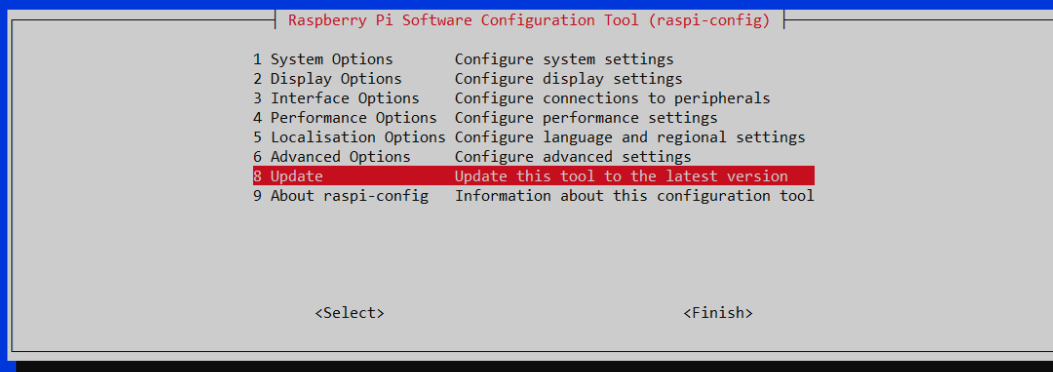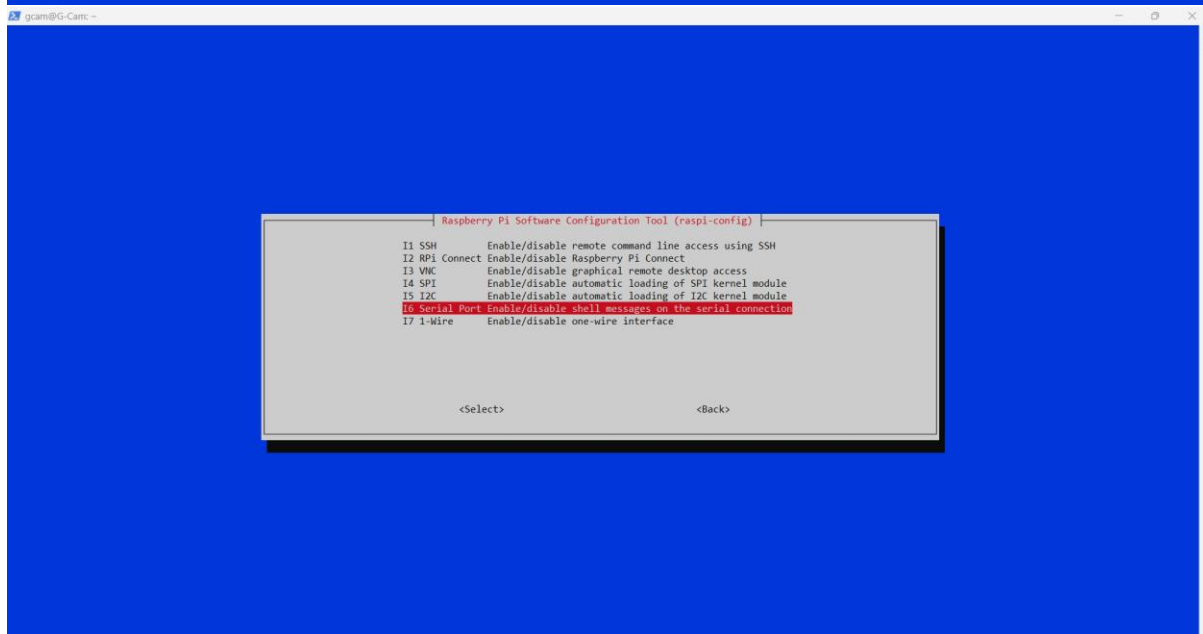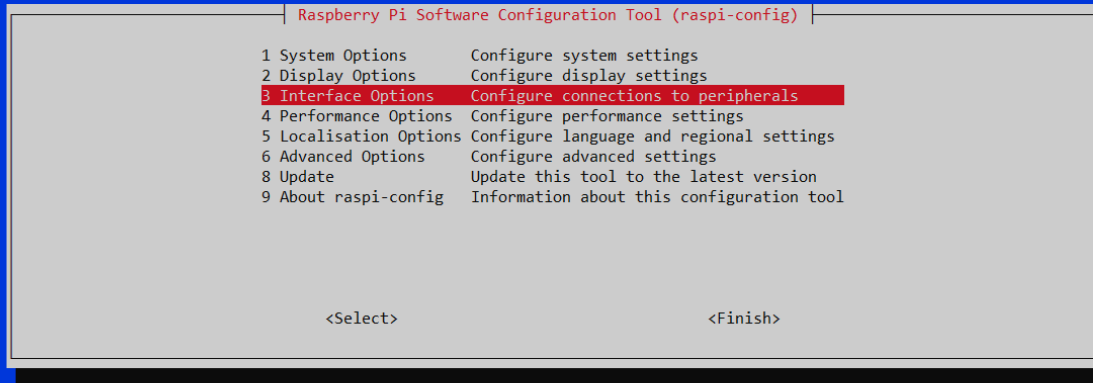

```

gcam@G-Cam: ~
Windows PowerShell
Copyright (C) Microsoft Corporation. All rights reserved.

Install the latest PowerShell for new features and improvements! https://aka.ms/PSWindows

PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32> ssh gcam@192.168.22.101
The authenticity of host '192.168.22.101 (192.168.22.101)' can't be established.
ED25519 key fingerprint is SHA256:GIwLV10x2MsyJYelmnZD0RoJ7VLTdem6aSukVEyx/9U.
This key is not known by any other names.
Are you sure you want to continue connecting (yes/no/[fingerprint])? yes
Warning: Permanently added '192.168.22.101' (ED25519) to the list of known hosts.
gcam@192.168.22.101's password:
Linux G-Cam 6.12.47+rpt-rpi-2712 #1 SMP PREEMPT Debian 1:6.12.47-1+rpt1 (2025-09-16) aarch64

The programs included with the Debian GNU/Linux system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.
Last login: Thu Apr  9 12:59:36 2026 from 192.168.22.101
gcam@G-Cam:~ $
gcam@G-Cam:~ $
gcam@G-Cam:~ $
gcam@G-Cam:~ $

```

scp "C:\Users\RealTech\Downloads\install.sh" gcam@192.168.22.101:/tmp/install.sh

```

PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32> scp "C:\Users\RealTech\Downloads\install.sh" gcam@192.168.22.100:/tmp/install.sh
gcam@192.168.22.100's password:
install.sh
PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32>

```

100% 161KB 1.7MB/s 00:00

ssh gcam@192.168.22.101

chmod +x /tmp/install.sh

sudo bash /tmp/install.sh

```
gcam@G-Cam:~ $  
gcam@G-Cam:~ $  
gcam@G-Cam:~ $ chmod +x /tmp/install.sh  
sudo bash /tmp/install.sh  
=====
```

G-Cam Full Clean Reinstall - V6 FIXED
Live + Person + Garbage + MQTT Audio + Data Status
+ Open/Close Software + Camera Temp URL
+ USB Audio Fix + Person False Detection Fix
+ Near Full Screen Garbage ROI

```
=====
```

Enter Device ID [RTGCAMx]:

```
MQTT configuration
Enter MQTT Host [3.111.78.82]:
Enter MQTT Port [1883]:
Enter MQTT Username [realiot]:
Enter MQTT Password [realmqtt@123]:
Enter MQTT Garbage Topic [RTGCAMx/garbage_level]: RTGCAM12/garbage_level
Enter MQTT Camera Event Topic [RTGCAMx/camera_event]: RTGCAM12/camera_event
Enter MQTT Command Topic [RTGCAMx/command]: RTGCAM12/command
Enter MQTT Response Topic [RTGCAMx/device_response]: RTGCAM12/device_response
Enter MQTT Command Token [GCAM_SECRET_123]:

SFTP configuration
IMPORTANT: Enter REAL LINUX PATH like /home/ftpuuser/ftp/files/RTGCAMx
Enter SFTP Host [3.111.78.82]:
Enter SFTP Port [22]:
Enter SFTP Username [ftpuuser]:
Enter SFTP Password [ftp123!@#]:
Paste Main SFTP Path [/home/ftpuuser/ftp/files/RTGCAMx]: /home/ftpuuser/ftp/files/RTGCAM12
Paste Person SFTP Path [/home/ftpuuser/ftp/files/RTGCAMx/Person]: /home/ftpuuser/ftp/files/RTGCAM12/Person
Paste Person Video SFTP Path [/home/ftpuuser/ftp/files/RTGCAMx/Video/Person_Video]: /home/ftpuuser/ftp/files/RTGCAM12/Video/Person_Video
Paste Garbage SFTP Path [/home/ftpuuser/ftp/files/RTGCAMx/Garbage]: /home/ftpuuser/ftp/files/RTGCAM12/Garbage
Paste Audio SFTP Path [/home/ftpuuser/ftp/files/RTGCAMx/Audio]: /home/ftpuuser/ftp/files/RTGCAM12/Audio

Battery interface disabled.

Maintenance and reboot schedule
Enter full Pi reboot time #1 [03:30:00]:
Enter full Pi reboot time #2 [15:30:00]:
Enter router reboot GPIO time #1 [03:25]:
Enter router reboot GPIO time #2 [15:25]:
```

```
PS C:\WINDOWS\system32
PS C:\WINDOWS\system32
PS C:\WINDOWS\system32
PS C:\WINDOWS\system32
PS C:\WINDOWS\system32
PS C:\WINDOWS\system32
PS C:\WINDOWS\system32
PS C:\WINDOWS\system32
PS C:\WINDOWS\system32
PS C:\WINDOWS\system32
PS C:\WINDOWS\system32 scp "C:\Users\RealTech\Downloads\warning.wav" gcam@192.168.22.101:/tmp/warning.wav
gcam@192.168.22.101's password:
warning.wav 100% 455KB 2.3MB/s 00:00
PS C:\WINDOWS\system32
PS C:\WINDOWS\system32
PS C:\WINDOWS\system32 ssh gcam@192.168.22.101
gcam@192.168.22.101's password:
```

Select gcam@G-Cam: ~

```
gcam@G-Cam:~ $
gcam@G-Cam:~ $
gcam@G-Cam:~ $ cat > /tmp/fix_usb_audio.sh <<'BASH'
#!/usr/bin/env bash
set -euo pipefail
sudo systemctl stop gcam.service || true
echo "Playback devices:"
aplay -l
echo "Setting USB audio as default: hw:0,0"
sudo tee /etc/asound.conf > /dev/null <<'EOF'
pcm.!default {
    type plug
    slave.pcm "hw:0,0"
}

ctl.!default {
    type hw
    card 0
}
EOF
amixer -c 0 set Speaker 100% unmute || true
amixer -c 0 set PCM 100% unmute || true
amixer -c 0 set Master 100% unmute || true

sudo pkill -9 aplay || true
sudo pkill -9 ffplay || true
sleep 2
echo
echo "Testing USB speaker with speaker-test..."
speaker-test -D plughw:0,0 -c 2 -t wav -l 1 || true

echo
echo "Testing USB speaker with warning.wav..."
aplay -D plughw:0,0 /opt/gcam/assets/warning.wav

echo
echo "Testing default ALSA device..."
aplay /opt/gcam/assets/warning.wav

sudo systemctl restart gcam.service

echo
echo "Done. Current /etc/asound.conf:"
cat /etc/asound.conf
BASH

chmod +x /tmp/fix_usb_audio.sh
bash /tmp/fix_usb_audio.sh
```

cat > /tmp/fix_usb_audio.sh <<'BASH'

#!/usr/bin/env bash

set -euo pipefail

```
sudo systemctl stop gcam.service || true

echo "Playback devices:"

aplay -l

echo "Setting USB audio as default: hw:0,0"

sudo tee /etc/asound.conf > /dev/null <<'EOF'

pcm.!default {
    type plug
    slave.pcm "hw:0,0"
}

ctl.!default {
    type hw
    card 0
}

EOF

amixer -c 0 set Speaker 100% unmute || true
amixer -c 0 set PCM 100% unmute || true
amixer -c 0 set Master 100% unmute || true

sudo pkill -9 aplay || true
sudo pkill -9 ffplay || true

sleep 2

echo

echo "Testing USB speaker with speaker-test..."
speaker-test -D plughw:0,0 -c 2 -t wav -l 1 || true

echo

echo "Testing USB speaker with warning.wav..."
aplay -D plughw:0,0 /opt/gcam/assets/warning.wav

echo
```

```
echo "Testing default ALSA device..."
```

```
aplay /opt/gcam/assets/warning.wav
```

```
sudo systemctl restart gcam.service
```

```
echo
```


```
echo "Done. Current /etc/asound.conf:"
```

```
cat /etc/asound.conf
```

```
BASH
```

```
chmod +x /tmp/fix_usb_audio.sh
```

```
bash /tmp/fix_usb_audio.sh
```

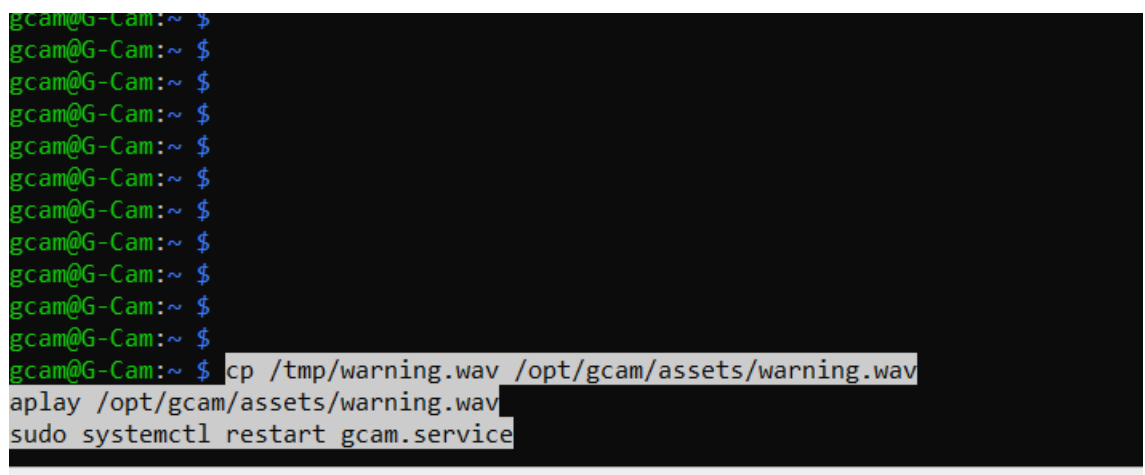
A terminal window with a black background and green text. It shows a series of shell prompts 'gcam@G-Cam:~ \$' followed by three commands: 'cp /tmp/warning.wav /opt/gcam/assets/warning.wav', 'aplay /opt/gcam/assets/warning.wav', and 'sudo systemctl restart gcam.service'. Each command is highlighted with a light gray rectangular selection box.

```
gcam@G-Cam:~ $  
gcam@G-Cam:~ $  
gcam@G-Cam:~ $  
gcam@G-Cam:~ $  
gcam@G-Cam:~ $  
gcam@G-Cam:~ $  
gcam@G-Cam:~ $  
gcam@G-Cam:~ $  
gcam@G-Cam:~ $  
gcam@G-Cam:~ $  
gcam@G-Cam:~ $  
gcam@G-Cam:~ $ cp /tmp/warning.wav /opt/gcam/assets/warning.wav  
aplay /opt/gcam/assets/warning.wav  
sudo systemctl restart gcam.service
```

```
cp /tmp/warning.wav /opt/gcam/assets/warning.wav
```

```
aplay /opt/gcam/assets/warning.wav
```

```
sudo systemctl restart gcam.service
```

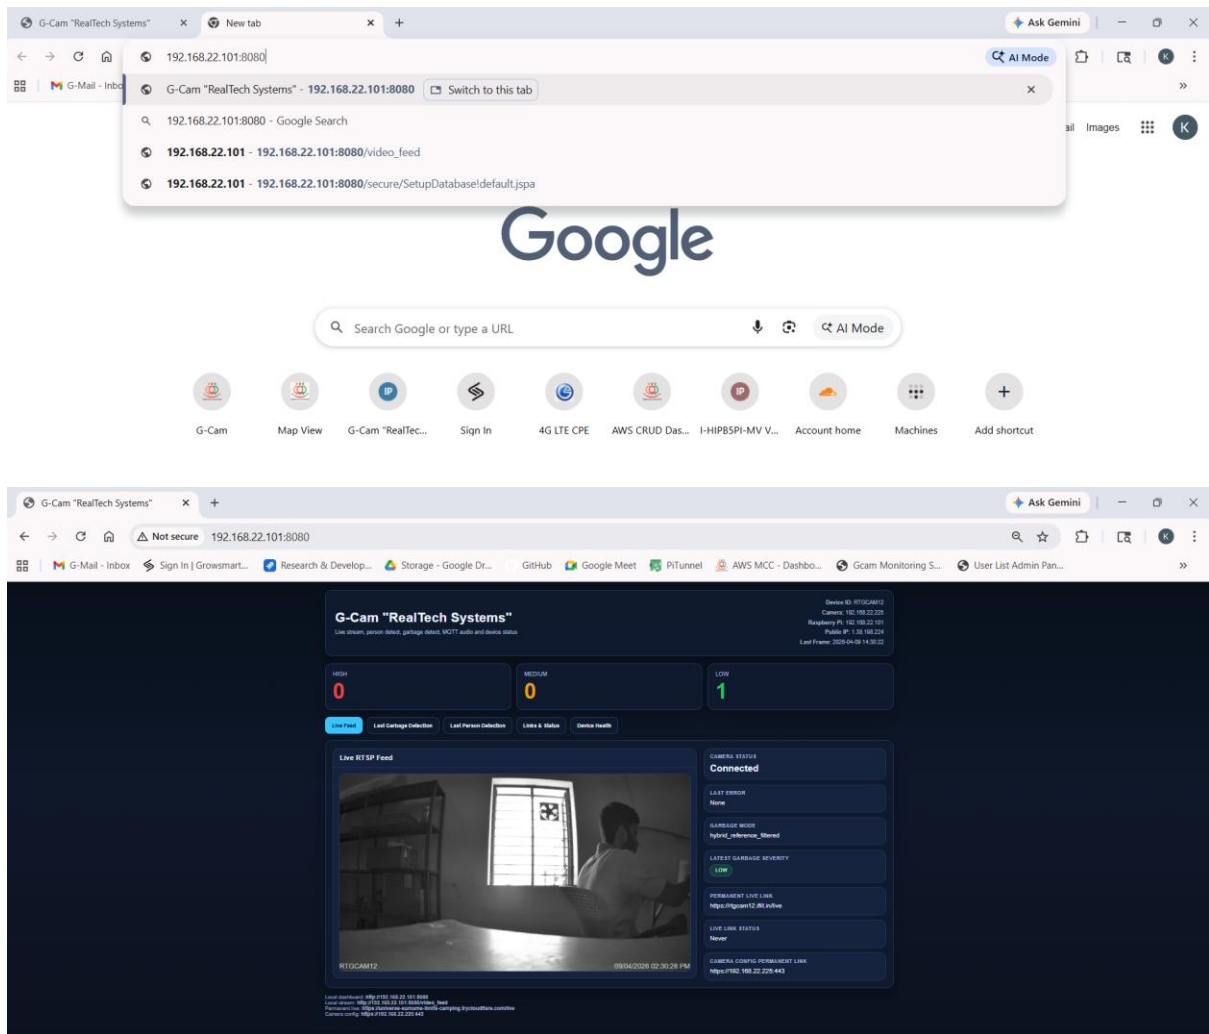

```
sudo nano /boot/firmware/config.txt
```

```
arm_freq=2000
```

```
usb_max_current_enable=1
```

Cntl + O

Enter

Cntl + X

```
gcam@G-Cam:~ $
gcam@G-Cam:~ $
gcam@G-Cam:~ $
gcam@G-Cam:~ $
gcam@G-Cam:~ $ sudo nano /boot/firmware/config.txt
```

1 36°C

```
gcam@G-Cam:~
GNU nano 8.4 /boot/firmware/config.txt
# For more options and information see
# http://rptl.io/configtxt
# Some settings may impact device functionality. See link above for details

# Uncomment some or all of these to enable the optional hardware interfaces
dtparam=i2c_arm=on
dtparam=i2s=on
dtparam=spi=on

# Enable audio (loads snd_bcm2835)
dtparam=audio=on

# Additional overlays and parameters are documented
# /boot/firmware/overlays/README

# Automatically load overlays for detected cameras
camera_auto_detect=1

# Automatically load overlays for detected DSI displays
display_auto_detect=1

# Automatically load initramfs files, if found
auto_initramfs=1

# Enable DRM VC4 V3D driver
dtoverlay=vc4-kms-v3d
max_framebuffers=2

# Don't have the firmware create an initial video= setting in cmdline.txt.
# Use the kernel's default instead.
disable_fw_kms_setup=1

# Run in 64-bit mode
arm_64bit=1

# Disable compensation for displays with overscan
disable_overscan=1

# Run as fast as firmware / board allows
arm_boost=1

[m4]
# Enable host mode on the 2711 built-in XHCI USB controller.
# This line should be removed if the legacy DWC2 controller is required
# (e.g. for USB device mode) or if USB support is not required.

Read 51 lines
Help      Write Out  Where Is  Cut       Execute   Location  Undo      Set Mark  To Bracket Previous  Back      Prev Word
Exit      Read File  Replace   Paste     Justify   Go To Line Redo      Copy      Where Was Next     Forward   Next Word
```

```
gcam@G-Cam: ~  
GNU nano 8.4 /boot/firmware/confi  
  
# Enable audio (loads snd_bcm2835)  
dtparam=audio=on  
  
# Additional overlays and parameters are documented  
# /boot/firmware/overlays/README  
  
# Automatically load overlays for detected cameras  
camera_auto_detect=1  
  
# Automatically load overlays for detected DSI displays  
display_auto_detect=1  
  
# Automatically load initramfs files, if found  
auto_initramfs=1  
  
# Enable DRM VC4 V3D driver  
dtoverlay=vc4-kms-v3d  
max_framebuffers=2  
  
# Don't have the firmware create an initial video= setting in cmdline.txt.  
# Use the kernel's default instead.  
disable_fw_kms_setup=1  
  
# Run in 64-bit mode  
arm_64bit=1  
  
# Disable compensation for displays with overscan  
disable_overscan=1  
  
# Run as fast as firmware / board allows  
arm_boost=1  
  
[cm4]  
# Enable host mode on the 2711 built-in XHCI USB controller.  
# This line should be removed if the legacy DWC2 controller is required  
# (e.g. for USB device mode) or if USB support is not required.  
otg_mode=1  
  
[cm5]  
dtoverlay=dwc2,dr_mode=host  
  
[all]  
  
^G Help      ^O Write Out  ^F Where Is   ^K Cut        ^T Execute    ^C Location   M-U Undo  
^X Exit      ^R Read File  ^\ Replace    ^U Paste      ^J Justify    ^_ Go To Line  M-E Redo
```

```
gcam@G-Cam: ~
GNU nano 8.4
# Enable audio (loads snd_bcm2835)
dtparam=audio=on

# Additional overlays and parameters are documented
# /boot/firmware/overlays/README

# Automatically load overlays for detected cameras
camera_auto_detect=1

# Automatically load overlays for detected DSI displays
display_auto_detect=1

# Automatically load initramfs files, if found
auto_initramfs=1

# Enable DRM VC4 V3D driver
dtoverlay=vc4-kms-v3d
max_framebuffers=2

# Don't have the firmware create an initial video= setting in cmdline.txt.
# Use the kernel's default instead.
disable_fw_kms_setup=1

# Run in 64-bit mode
arm_64bit=1

# Disable compensation for displays with overscan
disable_overscan=1

# Run as fast as firmware / board allows
arm_boost=1

[cm4]
# Enable host mode on the 2711 built-in XHCI USB controller.
# This line should be removed if the legacy DWC2 controller is required
# (e.g. for USB device mode) or if USB support is not required.
otg_mode=1

[cm5]
dtoverlay=dwc2,dr_mode=host

[all]

arm_freq=2000
usb_max_current_enable=1

^G Help      ^O Write Out  ^F Where Is   ^K Cut        ^T Execute    ^C Locat
^X Exit      ^R Read File  ^\ Replace    ^U Paste      ^J Justify    ^_ Go To
```

sudo rpi-eepprom-config --edit

PSU_MAX_CURRENT=5000

Cntl + O

Enter

Cntl + X

sudo reboot

```
gcam@G-Cam:~$  
gcam@G-Cam:~$  
gcam@G-Cam:~$ sudo rpi-eeeprom-config --edit
```

```
gcam@G-Cam: ~  
GNU nano 8.4 /tmp/tmpcbdd1o14/boot.conf *  
[all]  
BOOT_UART=1  
BOOT_ORDER=0xf461  
NET_INSTALL_AT_POWER_ON=1  
PSU_MAX_CURRENT=5000
```

```

gcam@G-Cam:~$ sudo rpi-eeeprom-config --edit
Updating bootloader EEPROM
  image: /usr/lib/firmware/raspberrypi/bootloader-2712/default/pieeprom-2025-11-05.bin
 config_src: blconfig device
 config: /tmp/tmpcbddloj4/boot.conf
#####
[all]
BOOT_UART=1
BOOT_ORDER=0xf461
NET_INSTALL_AT_POWER_ON=1
PSU_MAX_CURRENT=5000

#####
*** CREATED UPDATE /tmp/tmpcbddloj4/pieeprom.upd ***

    CURRENT: Mon  8 Dec 19:29:54 UTC 2025 (1765222194)
    UPDATE: Wed  5 Nov 17:37:18 UTC 2025 (1762364238)
    BOOTFS: /boot/firmware
'/tmp/tmp.3yrlhc5iQo' -> '/boot/firmware/pieeprom.upd'

UPDATING bootloader. This could take up to a minute. Please wait

*** Do not disconnect the power until the update is complete ***

If a problem occurs then the Raspberry Pi Imager may be used to create
a bootloader rescue SD card image which restores the default bootloader image.

flashrom -p linux_spi:dev=/dev/spidev10.0,spispeed=16000 -w /boot/firmware/pieeprom.upd
Verifying update
VERIFY: SUCCESS
UPDATE SUCCESSFUL
gcam@G-Cam:~$

```

```

gcam@G-Cam:~$ 
gcam@G-Cam:~$ 
gcam@G-Cam:~$ 
gcam@G-Cam:~$ sudo nano /boot/firmware/config.txt
gcam@G-Cam:~$ 
gcam@G-Cam:~$ 
gcam@G-Cam:~$ 
gcam@G-Cam:~$ sudo rpi-eeeprom-config --edit
Updating bootloader EEPROM
  image: /usr/lib/firmware/raspberrypi/bootloader-2712/default/pieeprom-2025-11-05.bin
 config_src: blconfig device
 config: /tmp/tmpcbddloj4/boot.conf
#####
[all]
BOOT_UART=1
BOOT_ORDER=0xf461
NET_INSTALL_AT_POWER_ON=1
PSU_MAX_CURRENT=5000

#####
*** CREATED UPDATE /tmp/tmpcbddloj4/pieeprom.upd ***

    CURRENT: Mon  8 Dec 19:29:54 UTC 2025 (1765222194)
    UPDATE: Wed  5 Nov 17:37:18 UTC 2025 (1762364238)
    BOOTFS: /boot/firmware
'/tmp/tmp.3yrlhc5iQo' -> '/boot/firmware/pieeprom.upd'

UPDATING bootloader. This could take up to a minute. Please wait

*** Do not disconnect the power until the update is complete ***

If a problem occurs then the Raspberry Pi Imager may be used to create
a bootloader rescue SD card image which restores the default bootloader image.

flashrom -p linux_spi:dev=/dev/spidev10.0,spispeed=16000 -w /boot/firmware/pieeprom.upd
Verifying update
VERIFY: SUCCESS
UPDATE SUCCESSFUL
gcam@G-Cam:~$ 
gcam@G-Cam:~$ 
gcam@G-Cam:~$ 
gcam@G-Cam:~$ sudo reboot

```


```
gcam@G-Cam:~$  
gcam@G-Cam:~$ sudo reboot  
gcam@G-Cam:~$ client_loop: send disconnect: Connection reset  
PS C:\WINDOWS\system32>  
PS C:\WINDOWS\system32>  
PS C:\WINDOWS\system32>  
PS C:\WINDOWS\system32>  
PS C:\WINDOWS\system32>
```


```
PS C:\WINDOWS\system32>  
PS C:\WINDOWS\system32>  
PS C:\WINDOWS\system32>  
PS C:\WINDOWS\system32>  
PS C:\WINDOWS\system32> ssh gcam@192.168.22.101  
gcam@192.168.22.101's password:  
Linux G-Cam 6.12.47+rpt-rpi-2712 #1 SMP PREEMPT Debian 1:6.12.47-1+rpt1 (2025-09-16) aarch64  
  
The programs included with the Debian GNU/Linux system are free software;  
the exact distribution terms for each program are described in the  
individual files in /usr/share/doc/*/copyright.  
  
Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent  
permitted by applicable law.  
Last login: Thu Apr 9 14:25:41 2026 from 192.168.22.100  
gcam@G-Cam:~$  
gcam@G-Cam:~$  
gcam@G-Cam:~$ sudo nmtui
```

```
ssh: connect to host 192.168.22.101 port 22: Connection refused
PS C:\WINDOWS\system32> scp "C:\Users\RealTech\Downloads\warning.wav" gcam@192.168.22.100:/tmp/warning.wav
gcam@192.168.22.100's password:
warning.wav
PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32>
PS C:\WINDOWS\system32> ssh gcam@192.168.22.100
gcam@192.168.22.100's password:
Linux G-Cam 6.12.47+rpt-rpi-2712 #1 SMP PREEMPT Debian 1:6.12.47-1+rpt1 (2025-09-16) aarch64

The programs included with the Debian GNU/Linux system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.
Last login: Sat Mar 28 23:52:02 2026 from 192.168.22.101
gcam@G-Cam:~ $
gcam@G-Cam:~ $ sudo nmtui
```

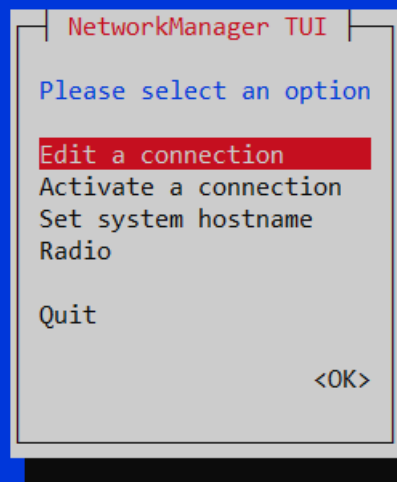

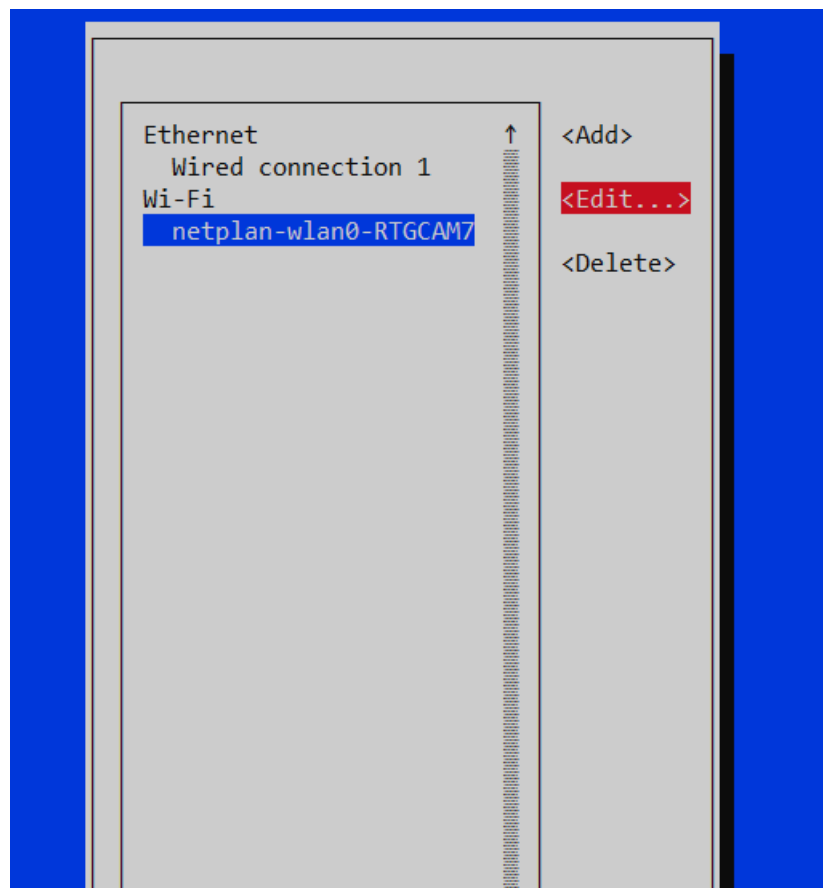

		Edit Connection	
Profile name		netplan-wlan0-RTGCAM7	
Device			
WI-FI		<Hide>	
SSID		RTGCAM7	
Mode		<Client>	
Security		<WPA & WPA2 Personal>	
Password		*****	
		[] Show password	
BSSID			
Cloned MAC address			
MTU		(default)	
= IPv4 CONFIGURATION		<Automatic>	<Show>
= IPv6 CONFIGURATION		<Ignore>	<Show>
[X] Automatically connect			
[X] Available to all users			
<Cancel> <OK>			

Edit Connection

Profile name

netplan-wlan0-RTGCAM7

Device

WI-FI

SSID

RTGCAM7

Mode

<Client>

Security

<WPA & WPA2 Personal>

Password

[] Show password

BSSID

Cloned MAC address

MTU

(default)

= IPv4 CONFIGURATION

= IPv6 CONFIGURATION

[X] Automatically connect

[X] Available to all users

Disabled

Automatic

Link-Local

Manual

Shared

<Hide>

<Show>

<Show>

<Cancel>

<OK>

Edit Connection

Profile name netplan-wlan0-RTGCAM7

Device

WI-FI

<Hide>

SSID RTGCAM7

Mode <Client>

Security <WPA & WPA2 Personal>

Password *****

☐ Show password

BSSID

Cloned MAC address

MTU (default)

IPv4 CONFIGURATION <Manual>

<Hide>

Addresses <Add...>

Gateway

DNS servers <Add...>

Search domains <Add...>

Routing (No custom routes) <Edit...>

☐ Never use this network for default route

☐ Ignore automatically obtained routes

☐ Ignore automatically obtained DNS parameters

☐ Require IPv4 addressing for this connection

= IPv6 CONFIGURATION <Ignore>

<Show>

☒ Automatically connect

☒ Available to all users

<Cancel> <OK>

Edit Connection

Profile name netplan-wlan0-RTGCAM7

Device

<Hide>

WI-FI

<Hide>

SSID RTGCAM7

Mode <Client>

Security <WPA & WPA2 Personal>

Password *****

☐ Show password

BSSID

Cloned MAC address

MTU (default)

IPv4 CONFIGURATION

<Hide>

Addresses 192.168.22.101 <Remove>

<Add...>

Gateway 192.168.22.1

DNS servers <Add...>

Search domains <Add...>

Routing (No custom routes) <Edit...>

☐ Never use this network for default route

☐ Ignore automatically obtained routes

☐ Ignore automatically obtained DNS parameters

☐ Require IPv4 addressing for this connection

IPv6 CONFIGURATION

<Show>

☒ Automatically connect

☒ Available to all users

<Cancel>
<OK>

```

gcam@G-Cam:~ $
gcam@G-Cam:~ $ sudo nmtui
gcam@G-Cam:~ $ gcam@G-Cam:~ $
gcam@G-Cam:~ $
gcam@G-Cam:~ $
gcam@G-Cam:~ $ sudo reboot
client_loop: send disconnect: Connection reset
PS C:\WINDOWS\system32>

```