

Raspberry Pi Imager v1.9.6



Raspberry Pi

Raspberry Pi Device

CHOOSE DEVICE


Operating System


CHOOSE OS

Storage

CHOOSE STORAGE

NEXT

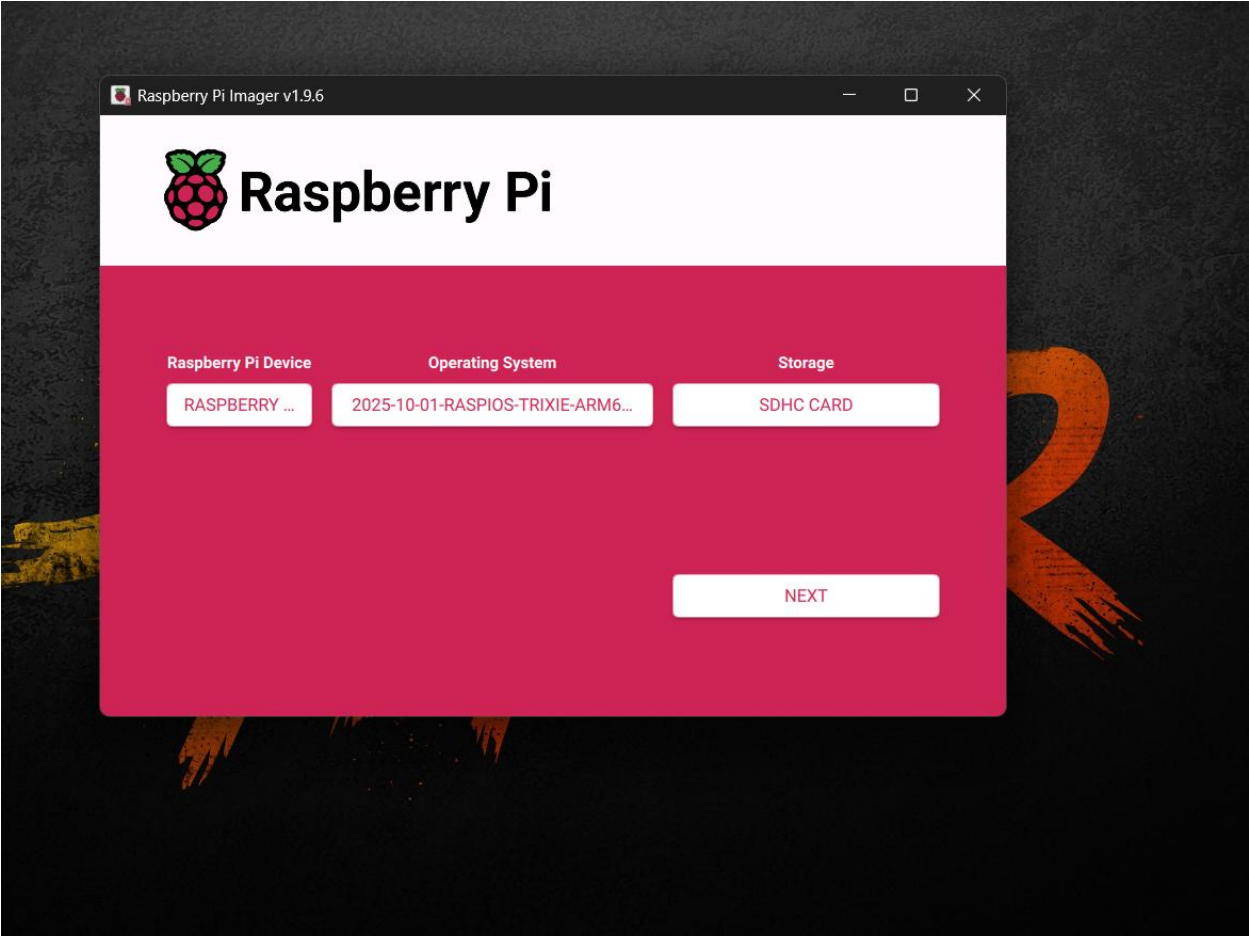

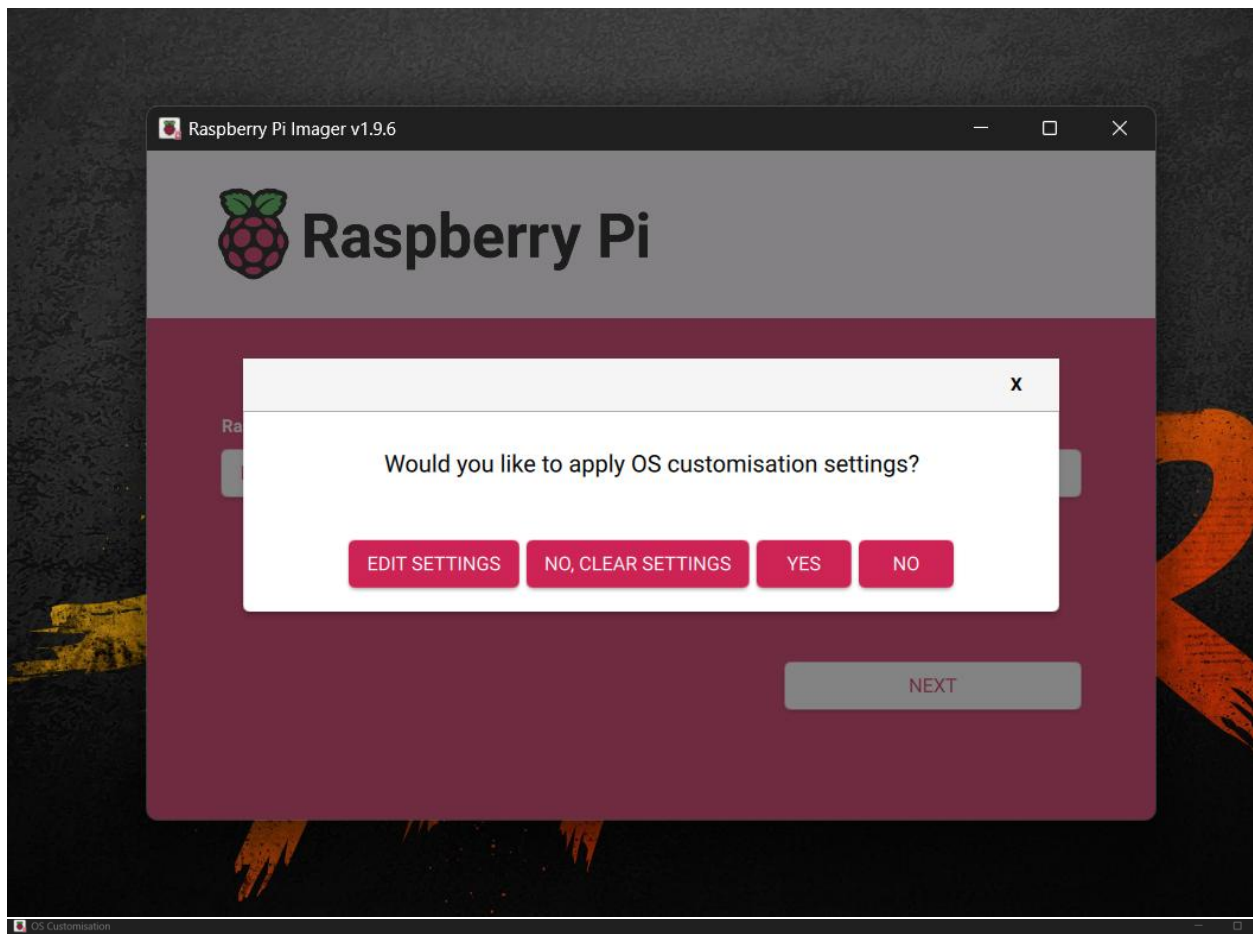

OS Customisation

General Services Options

☒ Set hostname: IoTDashboard .local

☒ Set username and password

Username: iotdashboard

Password:

☒ Configure wireless LAN

SSID: RealTech - IoT

Password:

☐ Hidden SSID



Wireless LAN country: IN

☒ Set locale settings

Time zone: Asia/Calcutta

Keyboard layout:

CANCEL SAVE

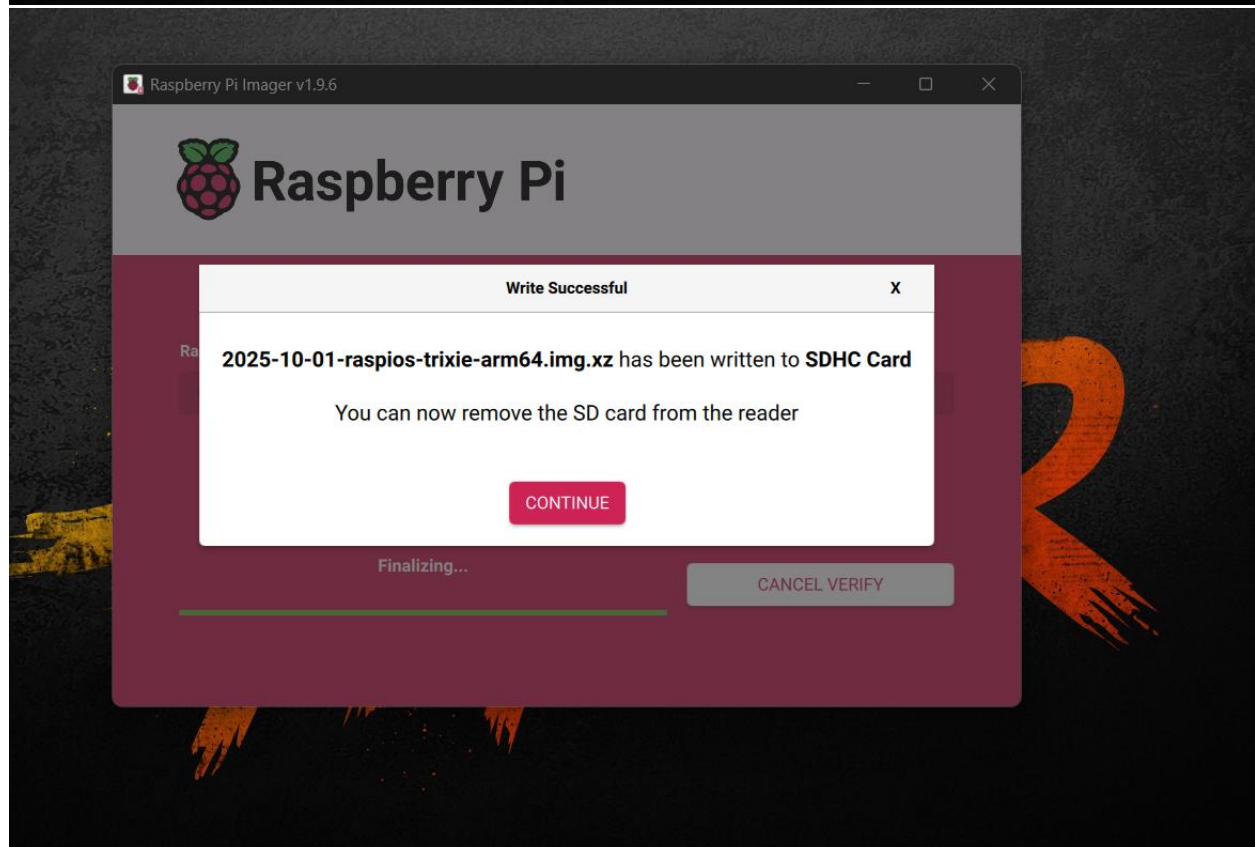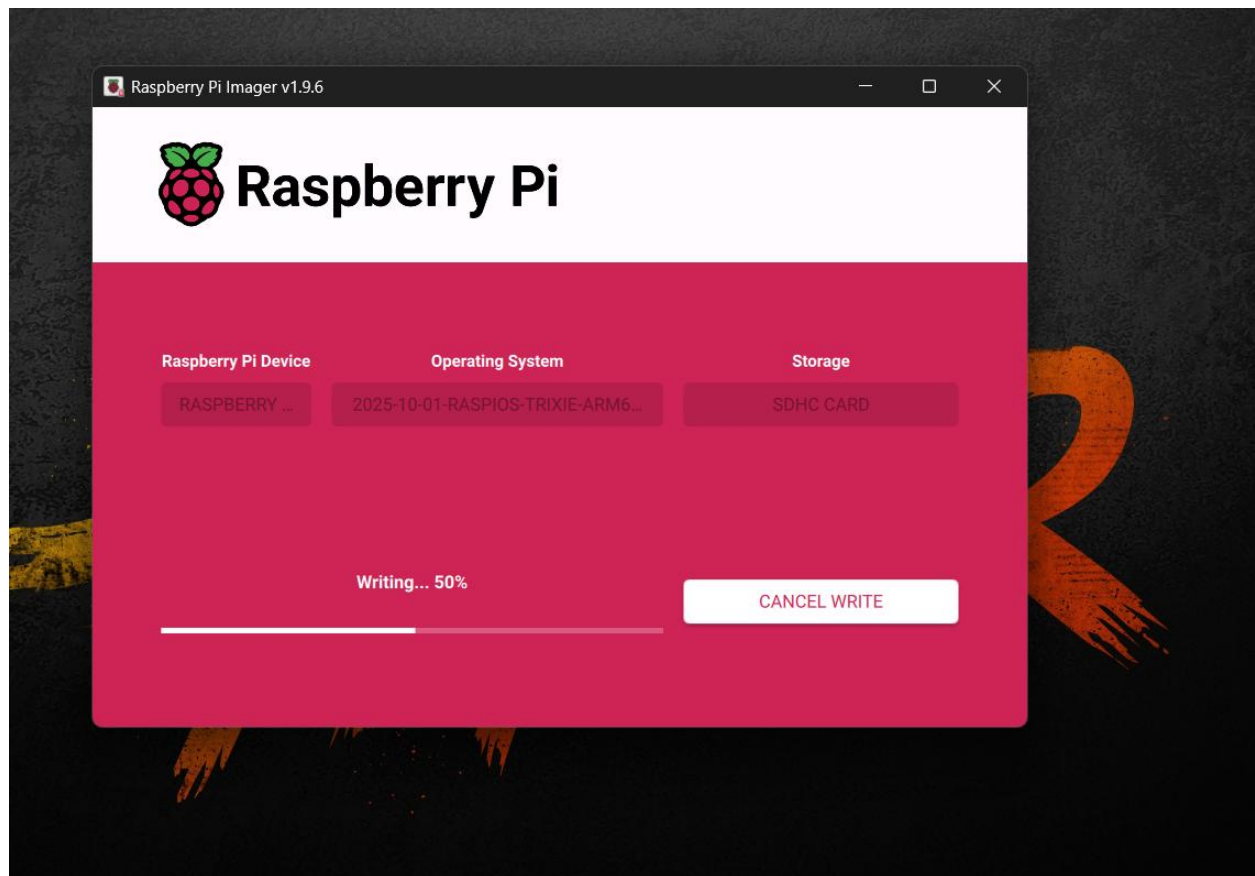

COFE
PEACE FOR LIFE

Overview

Network settings

Connection Settings

APN

WiFi settings

Data management

System settings

LAN settings

Static routing

Change password

PIN management

SNTP

Restart reset

No Service

English

LAN settings

* IP address

192.168.22.1

* Subnet mask

255.255.255.0

DHCP server

Enable

Disable

* DHCP ip pool

192.168.22.100

-

192.168.22.200

DHCP lease time

24

hour(s)

Apply

COFE
PEACE FOR LIFE

Overview

Network settings

Connection Settings

APN

WiFi settings

Data management

System settings

LAN settings

Static routing

Change password

PIN management

SNTP

Restart reset

No Service

English

Wi-Fi settings

Set up wireless hotspot so that your mobile phone or laptop could access network via it

Infrastructure

Advanced settings

WLAN MAC filter

WLAN

Enable

Disable

* Network name(SSID)

RealTech - IoT

SSID broadcast

* Pass phrase

Security mode

WPA2(AES)-PSK


Max station number

32

Save

POWER SHELL CMD:

SSH Connect : ssh iotdashboard@192.168.34.144

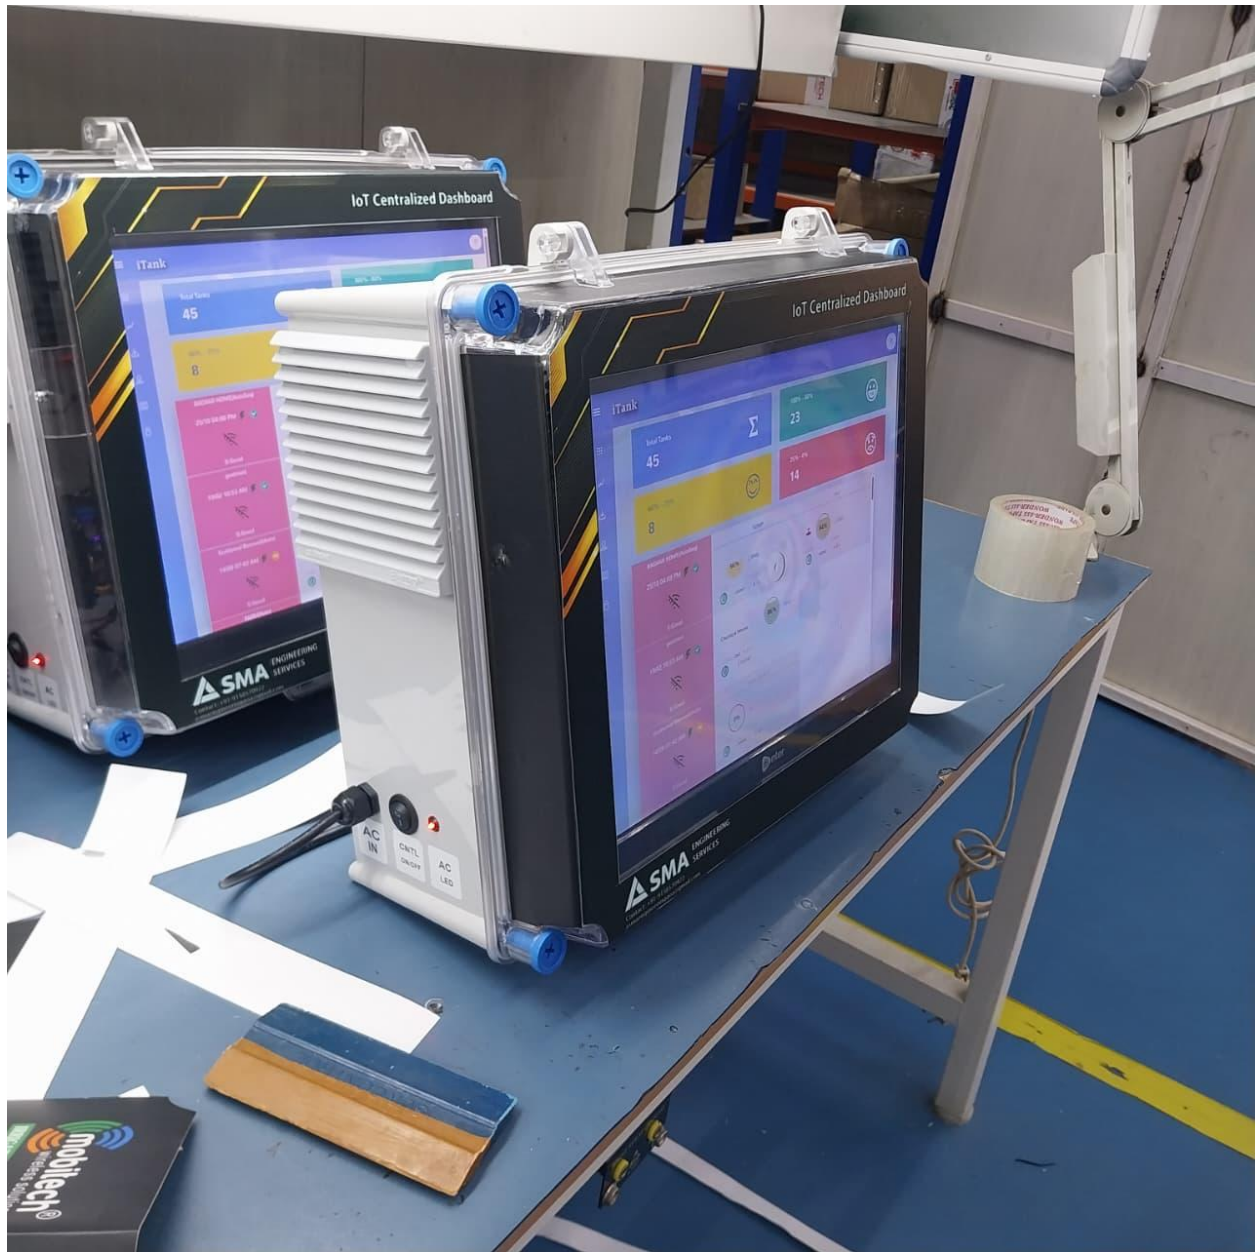

IoT Centralized Dashboard



SMA ENGINEERING SERVICES
Contact: +91-9158570922
asmaengineeringgoa@gmail.com

