

AWS FLOW CHART

Rev.date : 28-12-23


Doc.no : 001

* AWS Application install flow chart

* Connect Ethernet in Box PC



Install SADP Hikvision tool

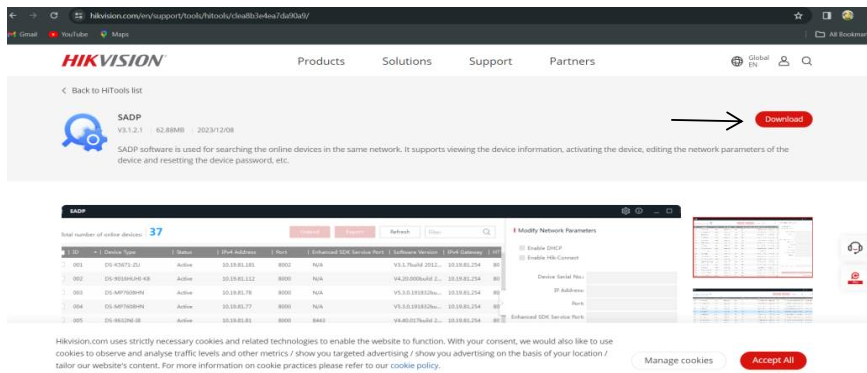


Configure camera

step 1:

Create New password


New password : Admin@123

Confirm password : Admin@123

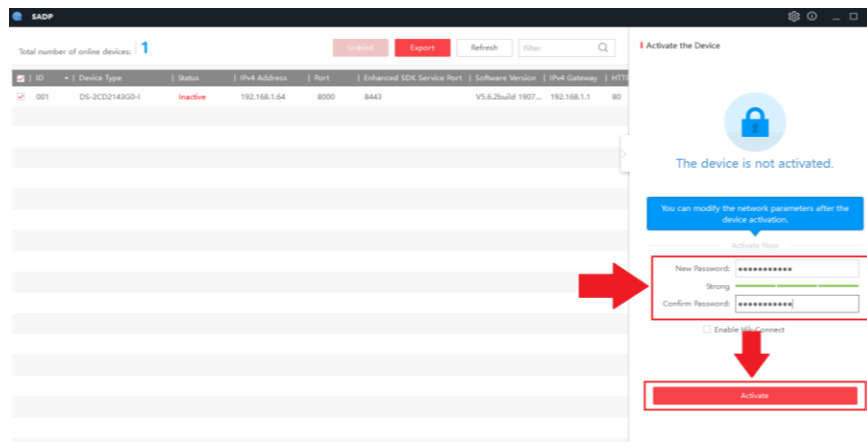

Step 2:

Modify Network parameter

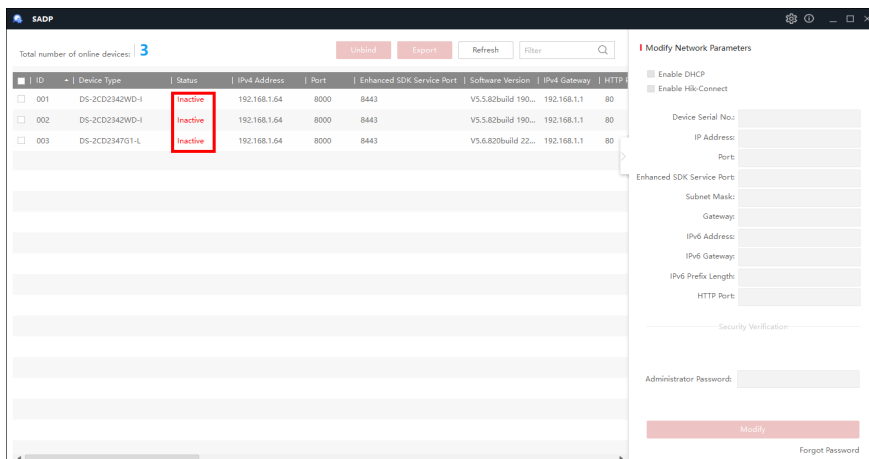

IP Address : 192.168.22.221,222,223,224

Gateway : 192.168.22.1

Administrator password : Admin@123

Step 3:

Verification Tips

Tips

To enable Hik-Connect service, you need to create a verification code or change the verification code.

Verification Code

6 to 12 letters (a to z, A to Z) or numbers (0 to 9), case sensitive. You are recommended to use a combination of no less than 8 letters or numbers.

Confirm Verification Code

The Hik-Connect service will require internet access. Please read the [Terms of Service](#) and [Privacy Policy](#) before enabling the service.

Confirm

Cancel

verification code : Admin123

Confirm verification code : Admin123

Step 4:

- * Set security Question and Answer

Export GUID/Set Security Question

Mode: Security Question Mode

Security Question 1: 1. Your father's name.

Answer 1:

Security Question 2: 1. Your father's name.

Answer 2:

Security Question 3: 1. Your father's name.

Answer 3:

Confirm Cancel

Set the security Answer:

Answer 1 : appa

Answer 2 : amma

Answer 3 : marry

Cofe Modem

Change Cofe modem IP Address

IP Defalt:192.168.150.100

COFE PRIDE FOR LIFE

FDD_LTE 40484

Advanced settings

Router

IP Address * 192.168.22.1

Subnet Mask * 255.255.255.0

DHCP Server ☒ Enable ☐ Disable

DHCP IP Pool * 192.168.22.100 - 192.168.22.250

DHCP Lease Time * 24 hour(s)

Apply

IP Address: 192.168.22.1

DHCP : 192.168.22.100 - 192.168.22.250

* To change wifi password:

Wifi setting---->Change Password ----> awswifi123---->Apply

PC Ethernet setting



To change IP Address

- * Ethernet
- * Network connection
- * Change Adaptor Option


(OR)

Windows + R


Command : **ncpa.cpl**

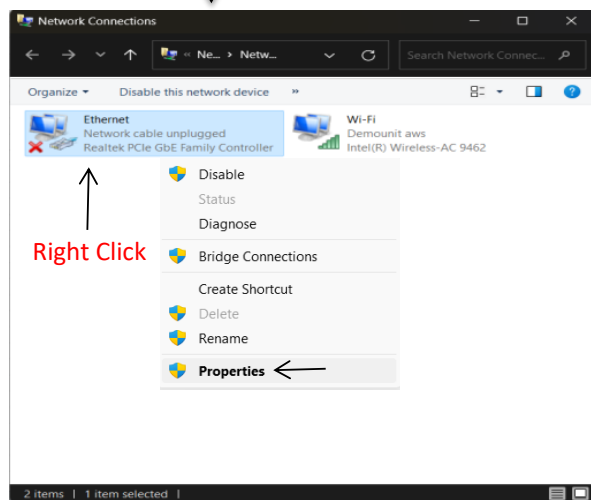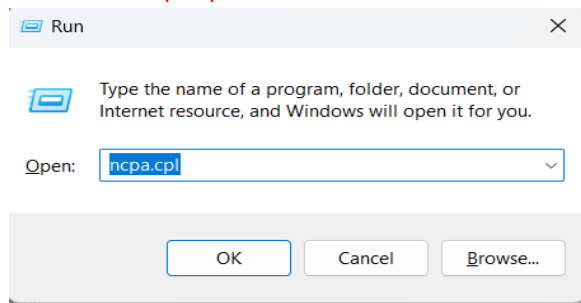


Properties

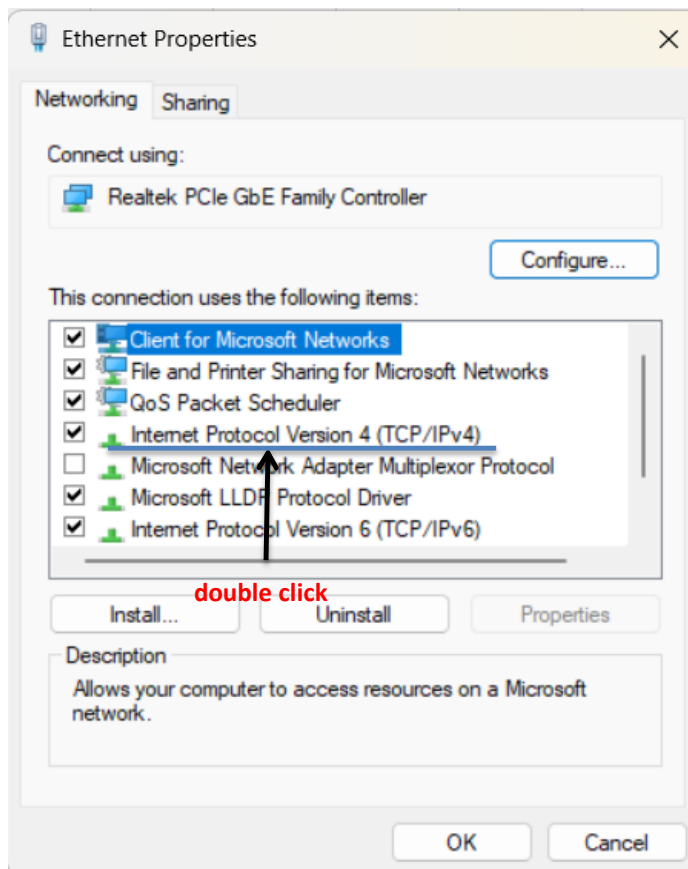


* Change IP Address Given Figers

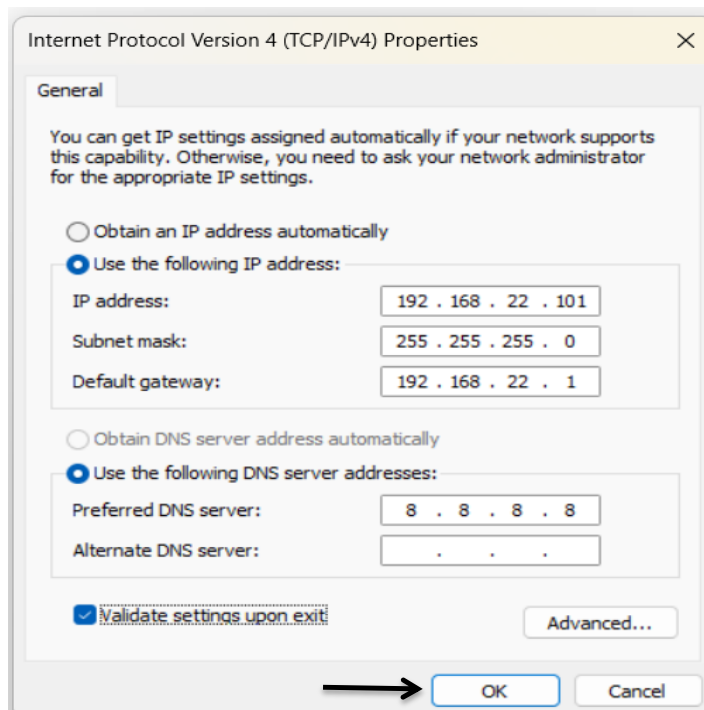

Open New tab

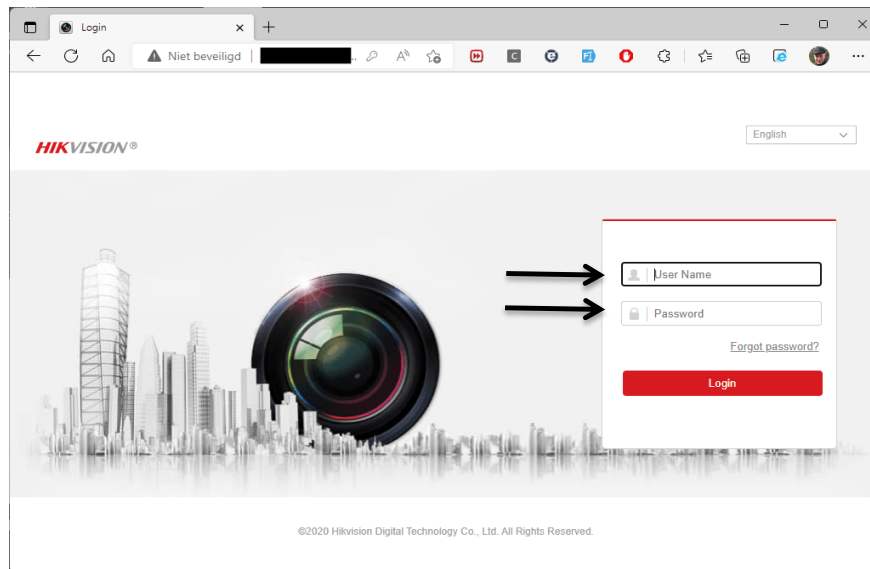


(i) Login camera IP address: **192.168.22.221**
User Name: **admin**
Password : **Admin@123**

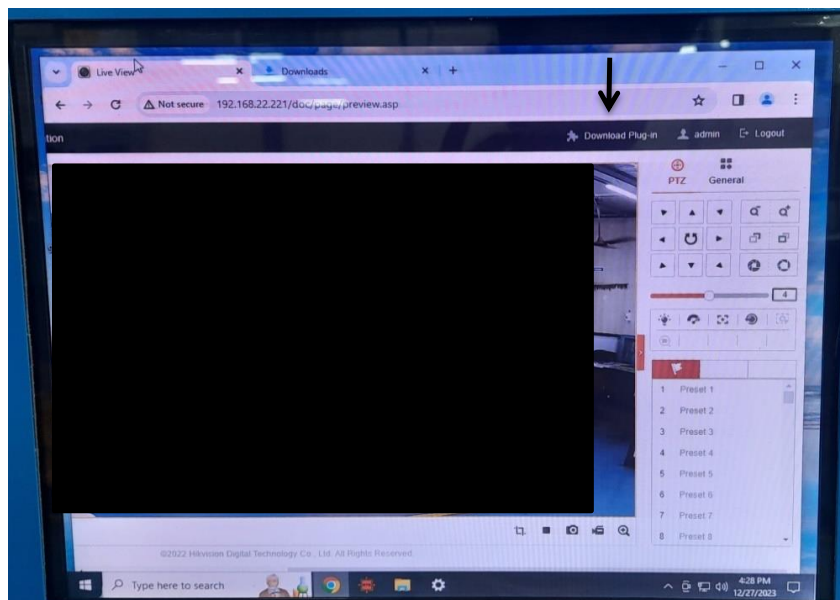


* Scroll right side And Download Plug-in and RUN



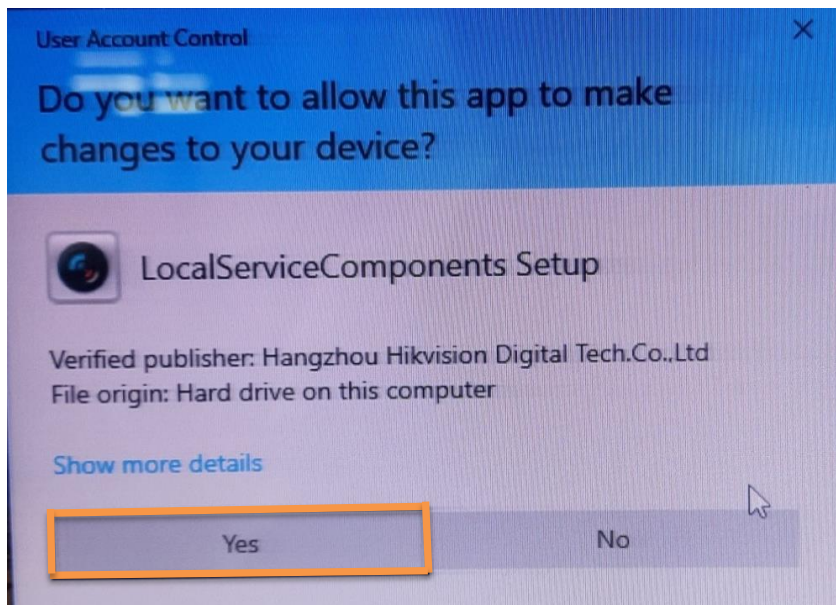

* Refresh the tab camera show in figer

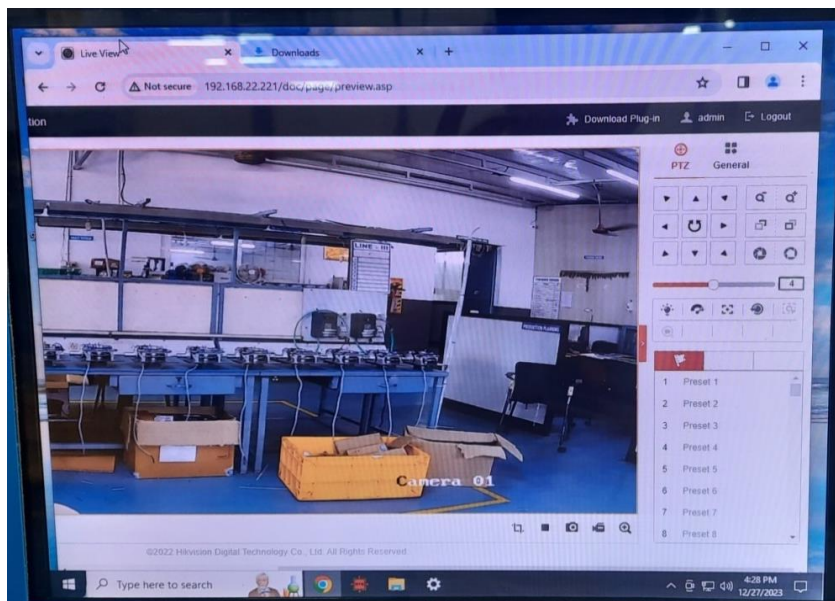

* Next open new tab enter camers IP address : 192.168.222
: 192.168.223
:192.168.224

* Camera configuration

- 1) Systems ----> System Settings ----> Time Settings ----> NTC ----> Change time &Date ----> Save
- 2) Video/Audio ----> Video ----> Resolution 1280*720P Set ----> Frame 10 fps ----> Save