


C:\Users\IQC\Desktop\IDT_88_Serial_SDK\Demo\Csharp\UHFReader18demomain\bin\x86\Debug

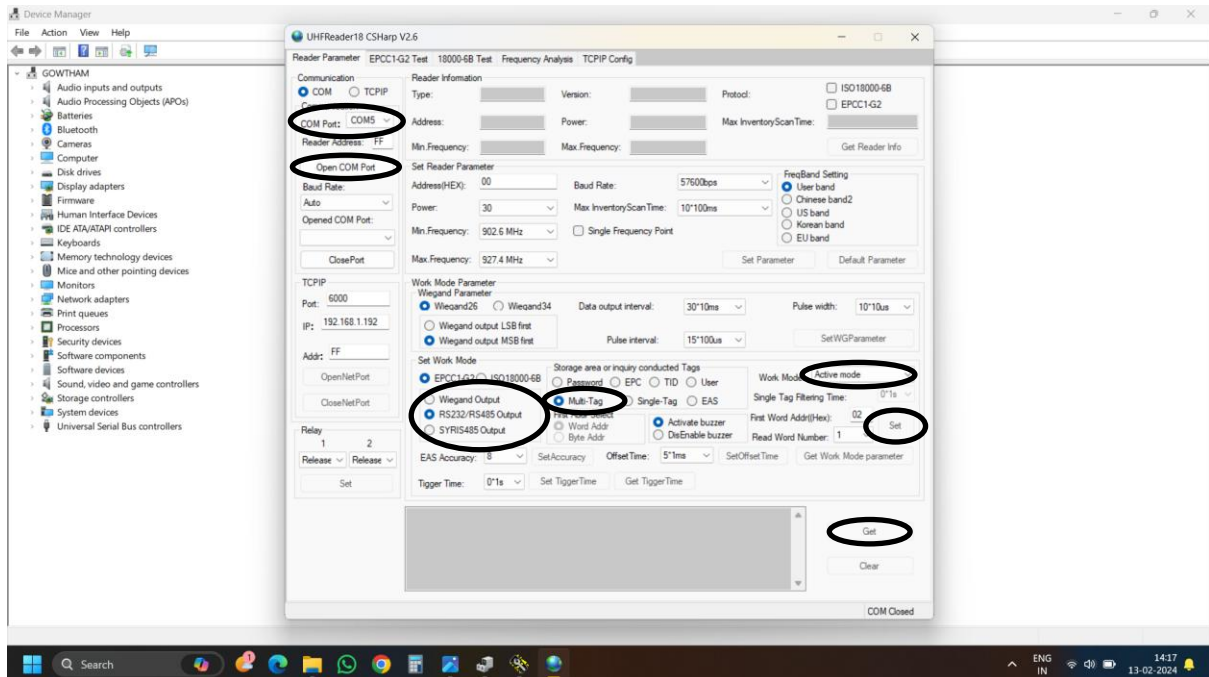

- Select COM Port (COM5)
- Click open port
- Set work mode as Answer mode into Active Mode
- Select RS232/RS485 Output ----- select Multi-Tag
- Click Set and get.