



TP-Link – tl-480+ Configuration steps for fields and testing.



192.168.150.1 – COFE MODEM DEFAULT IP

COFE MODEM 1 (INTERNET SOURCE – WAN-1)


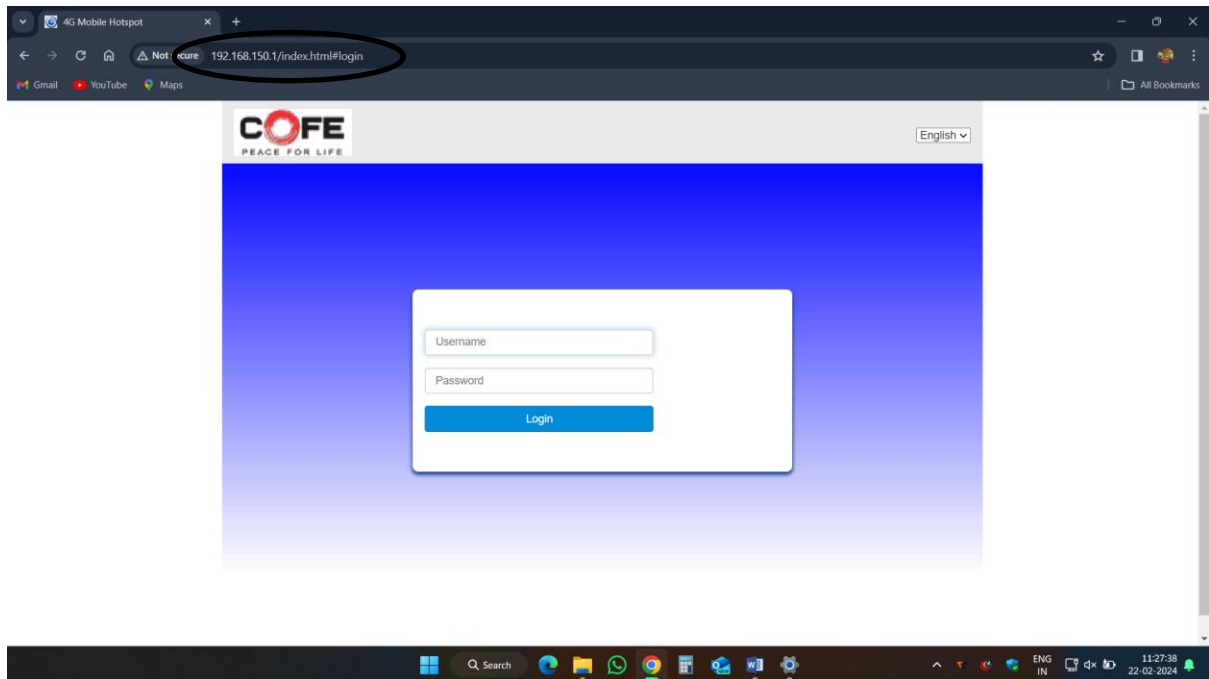


In advanced setting , the changes will be changed.

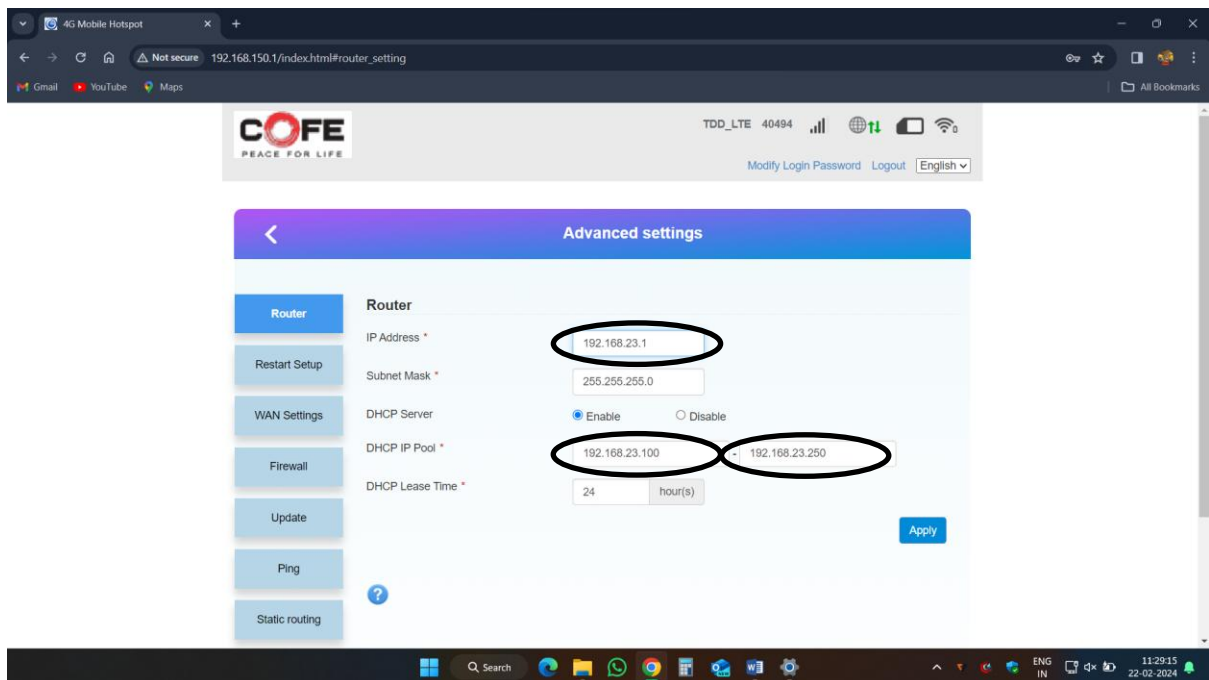


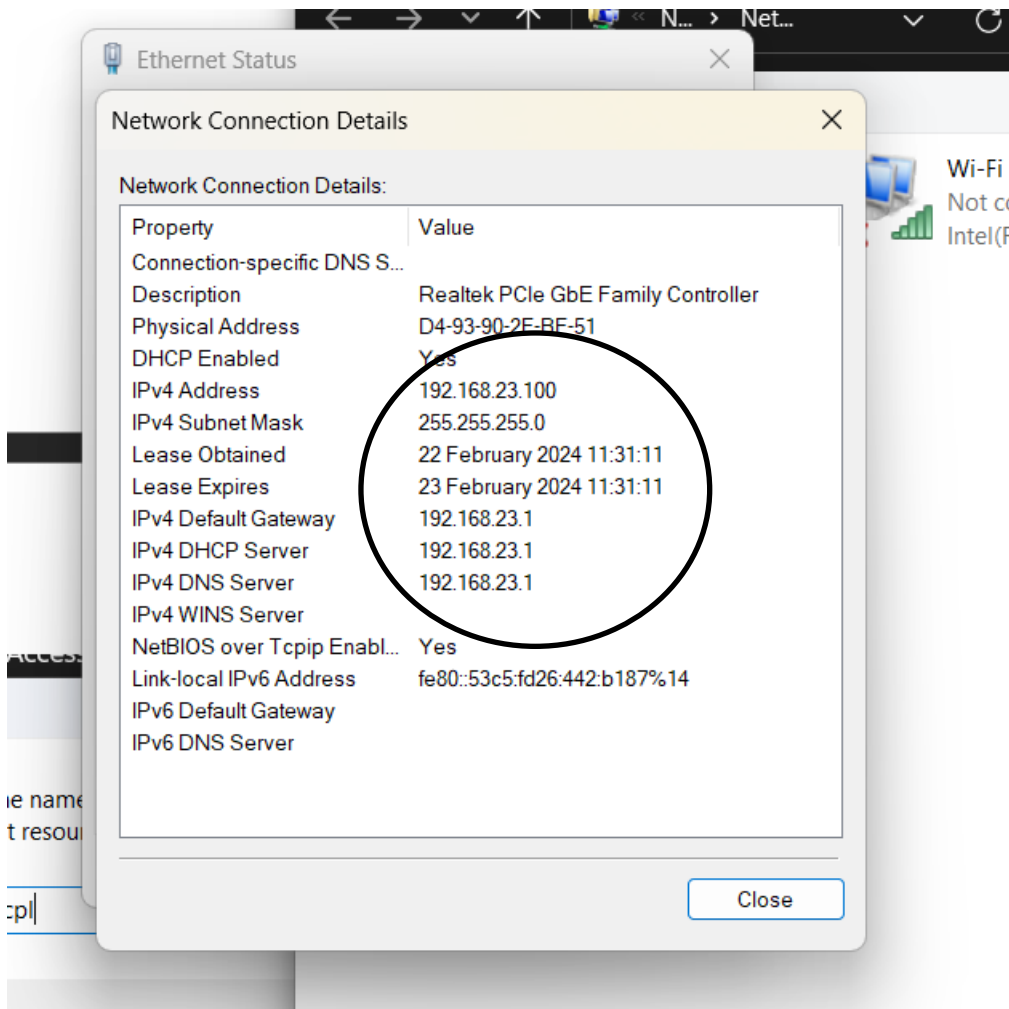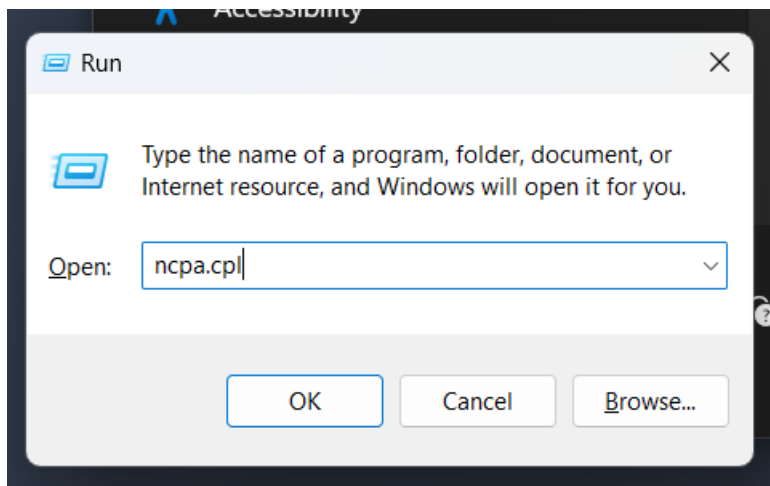

COFE MODEM 2 (INTERNET SOURCE – WAN-2)

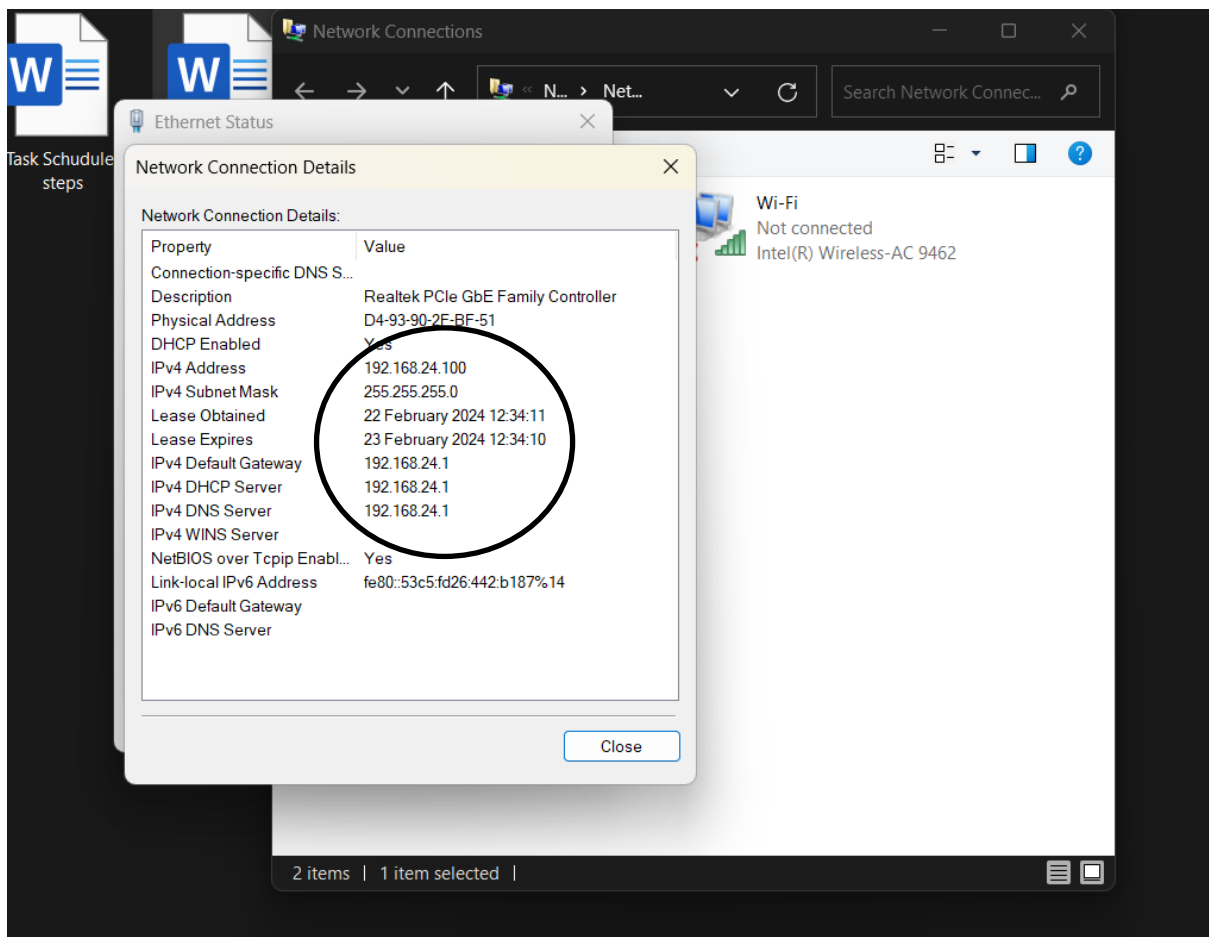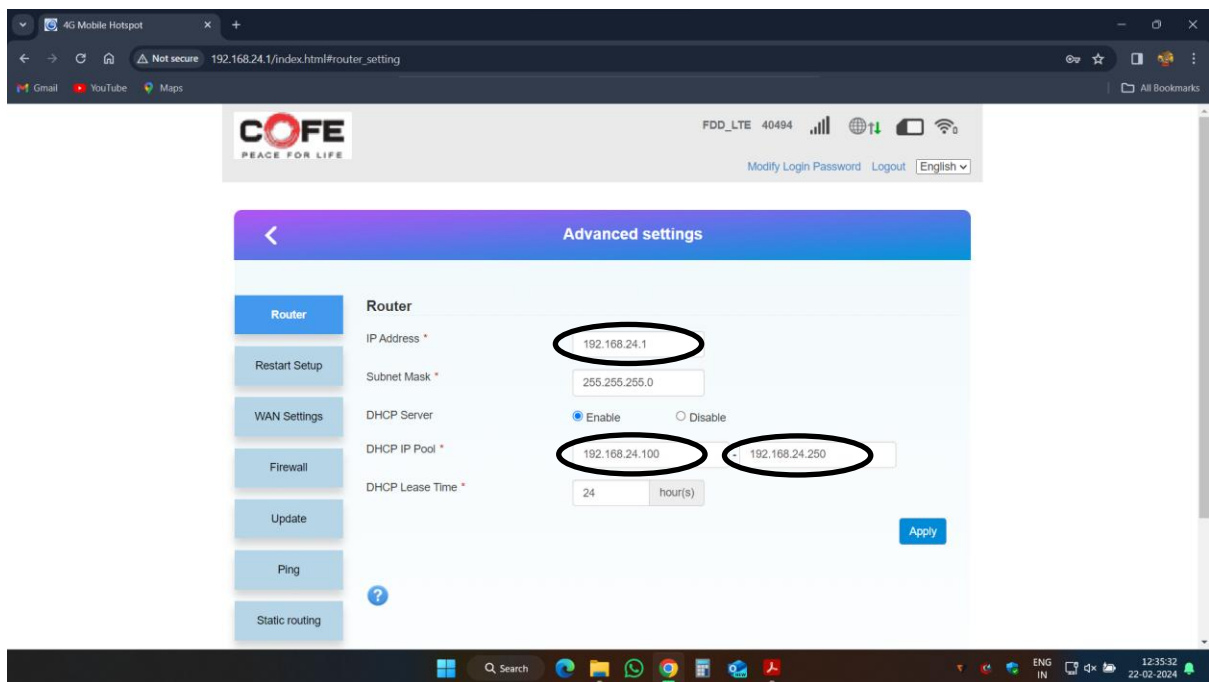


Default TP-LINK IP – 192.168.0.1

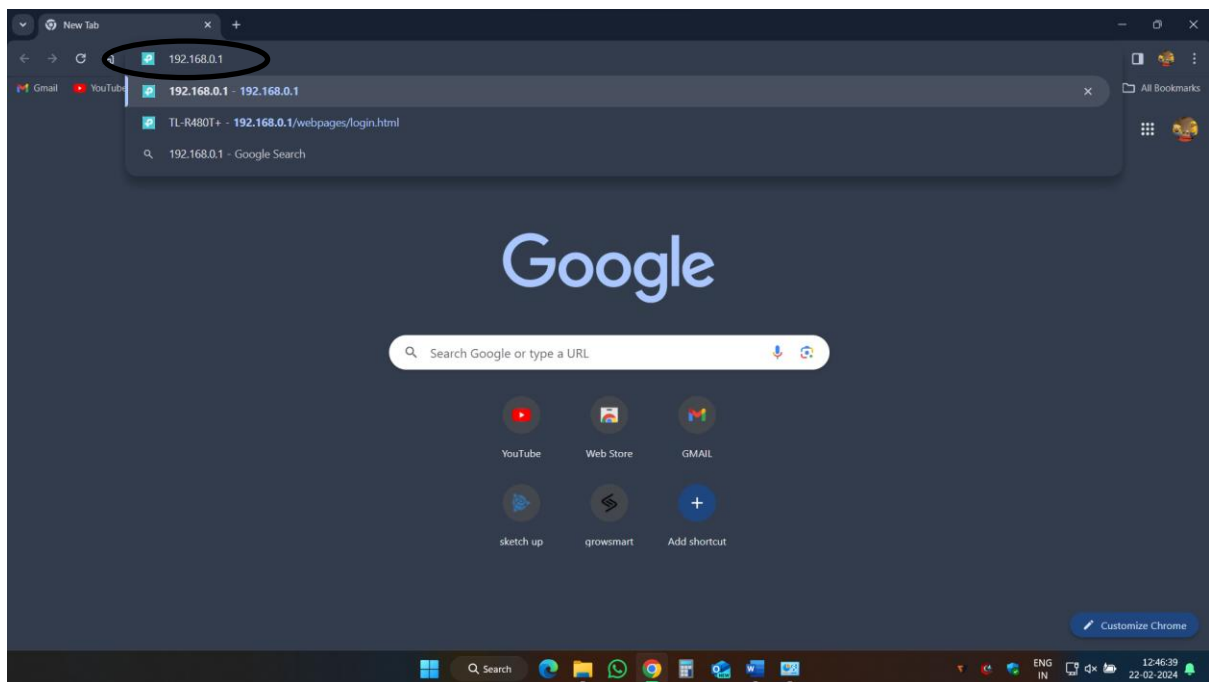

Set Username and Password:

Username – admin

Password – admin@123

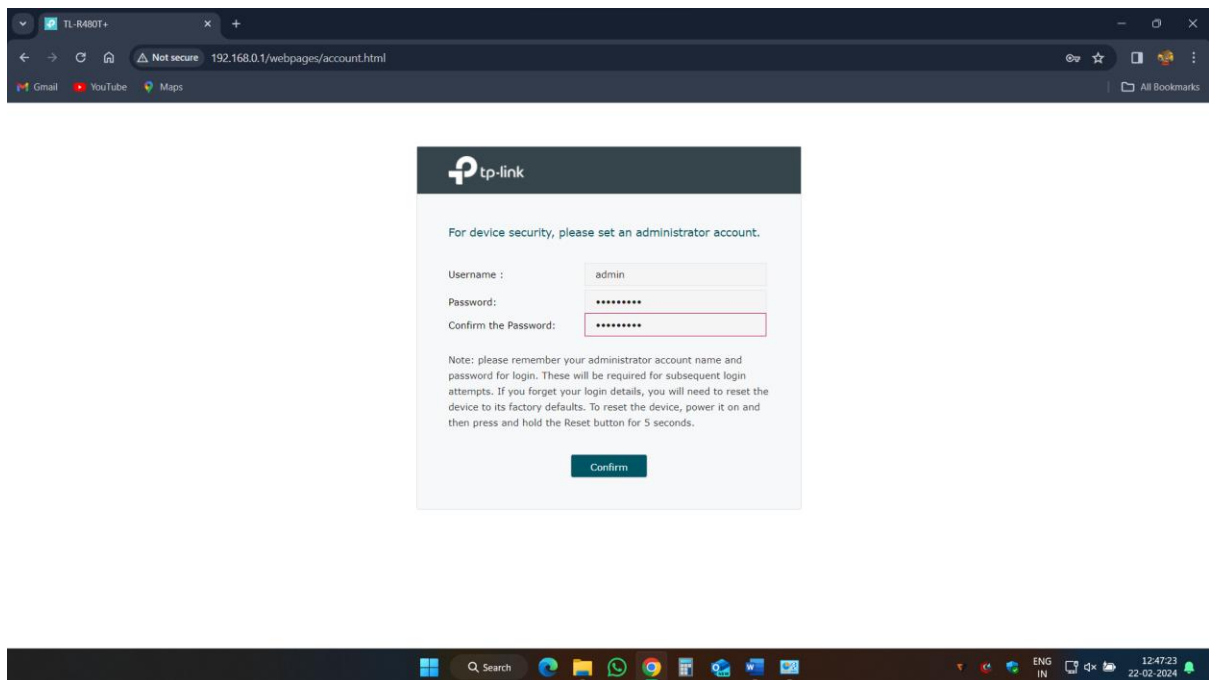



tp-link

Username: admin


Password: *****


Log In Clear




IN Network – LAN

Change IP Address as 192.168.22.1

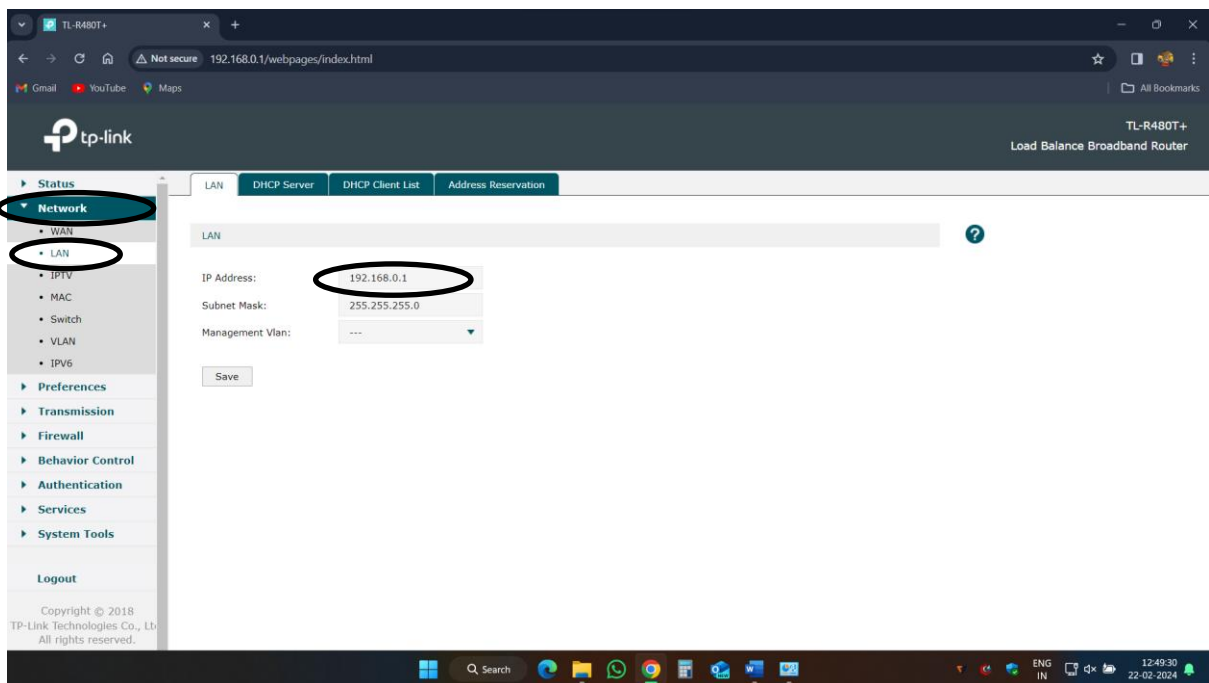


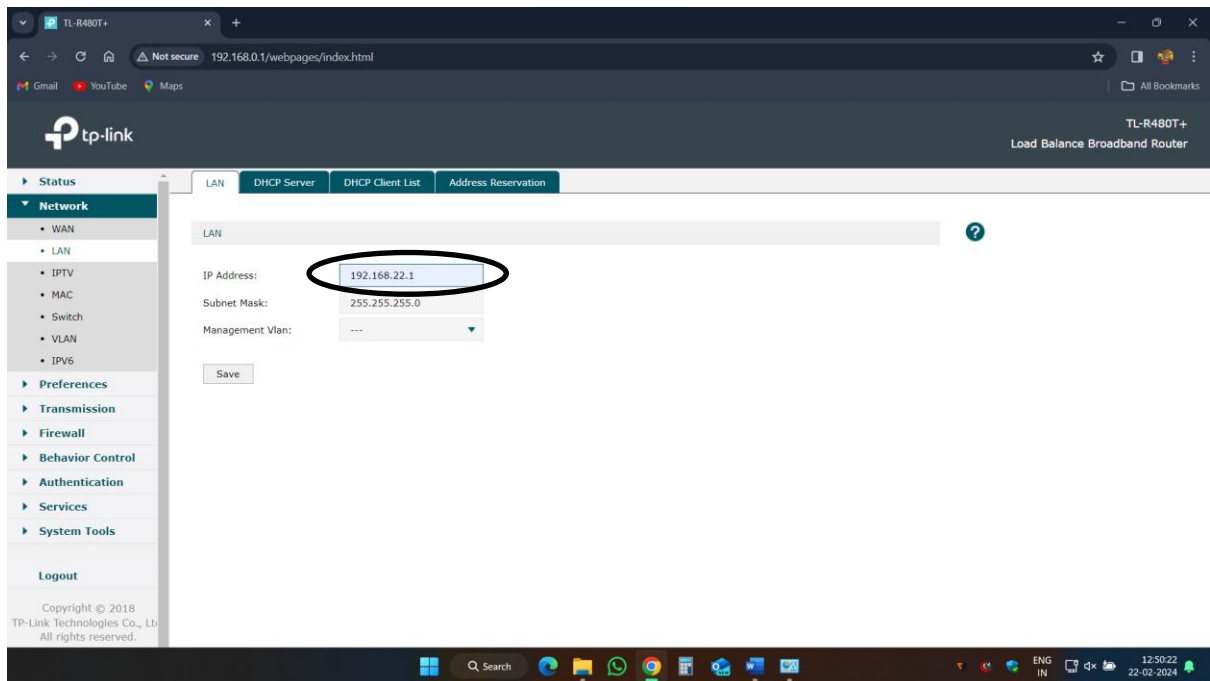


Then Disable the ETHERNET and enable it.

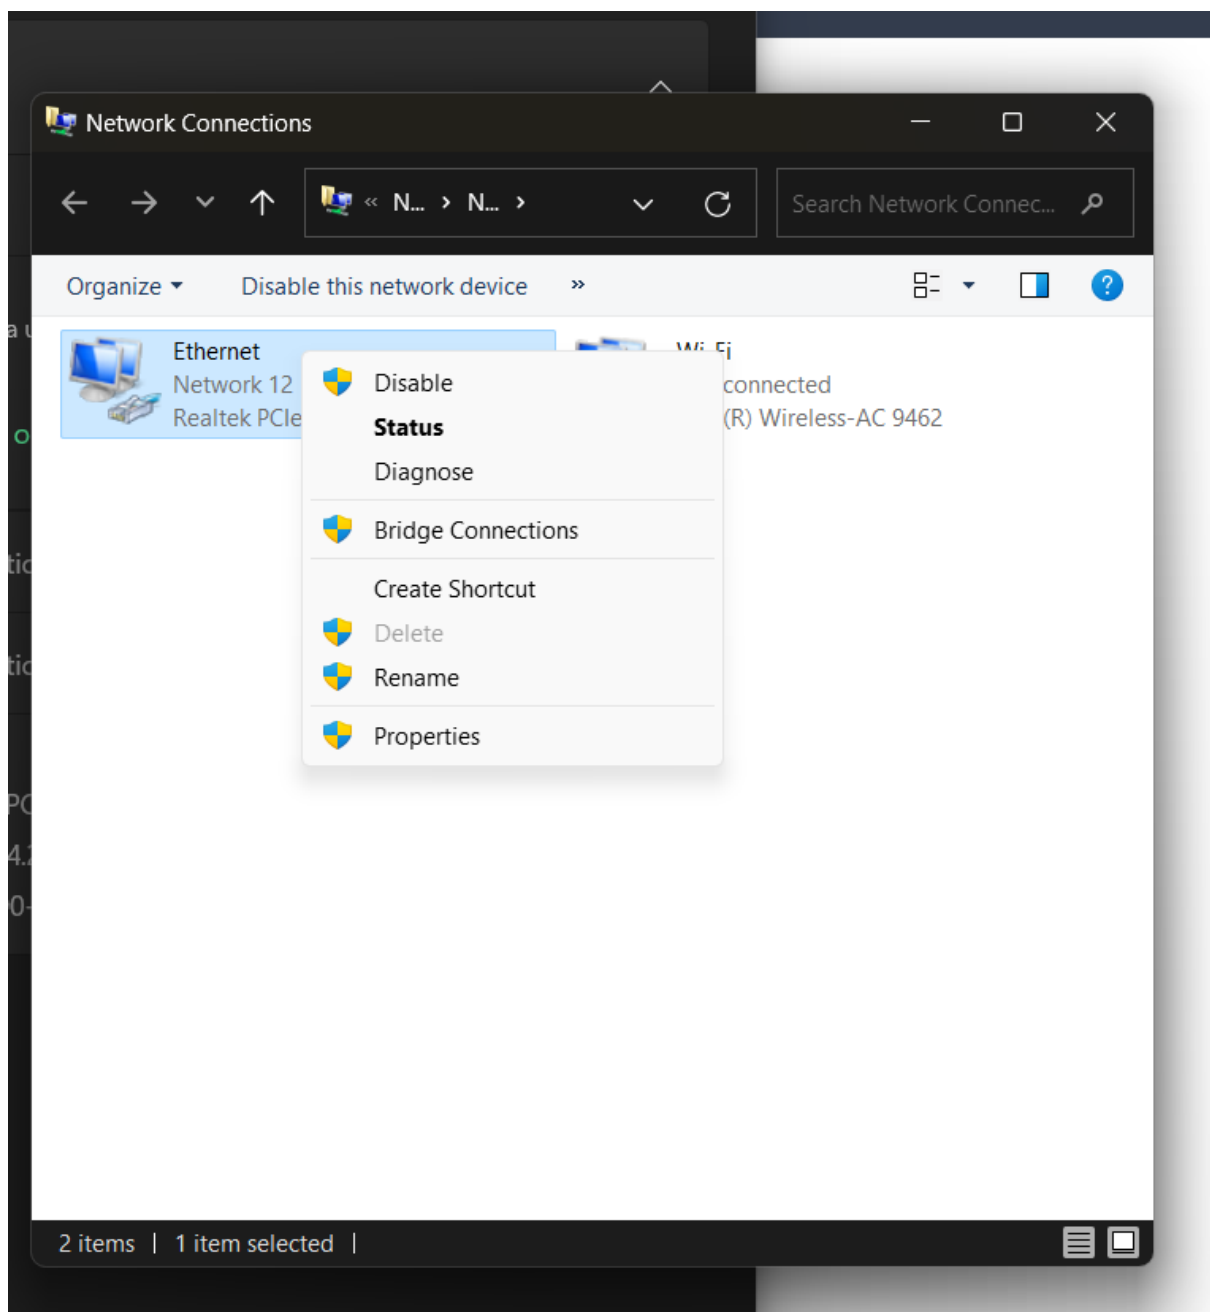

New IP FOR TP-LINK – 192.168.22.1

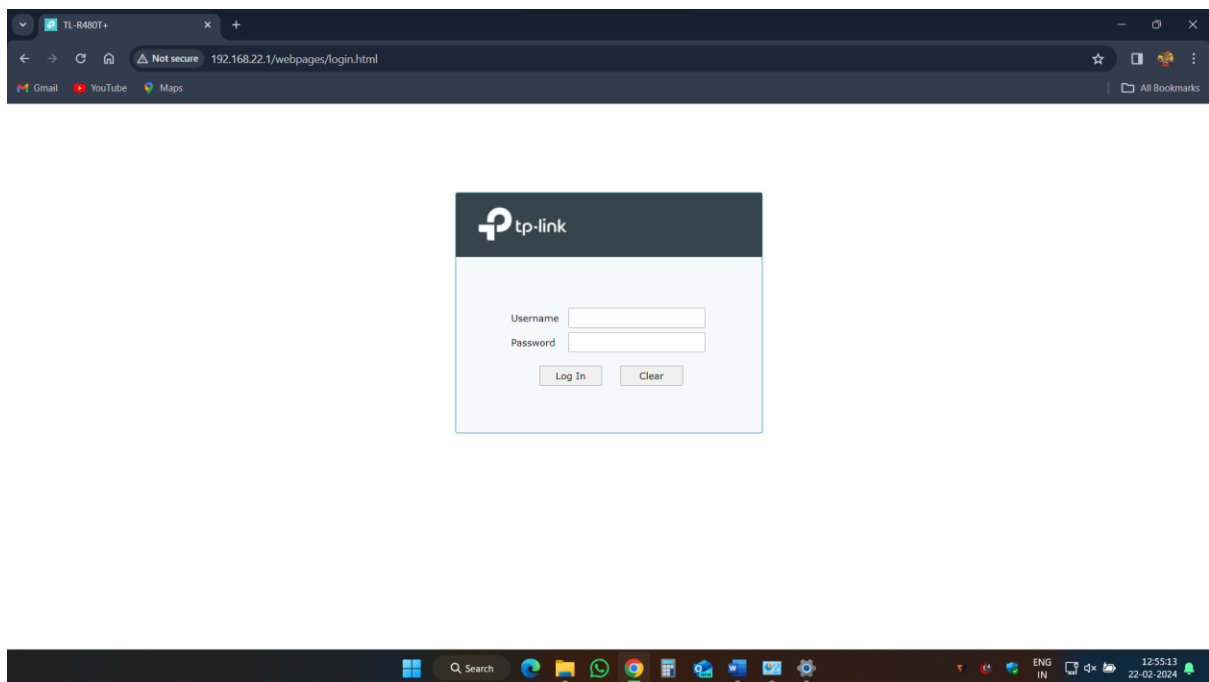

NETWORK – WAN – WAN MODE – select the number of WAN.

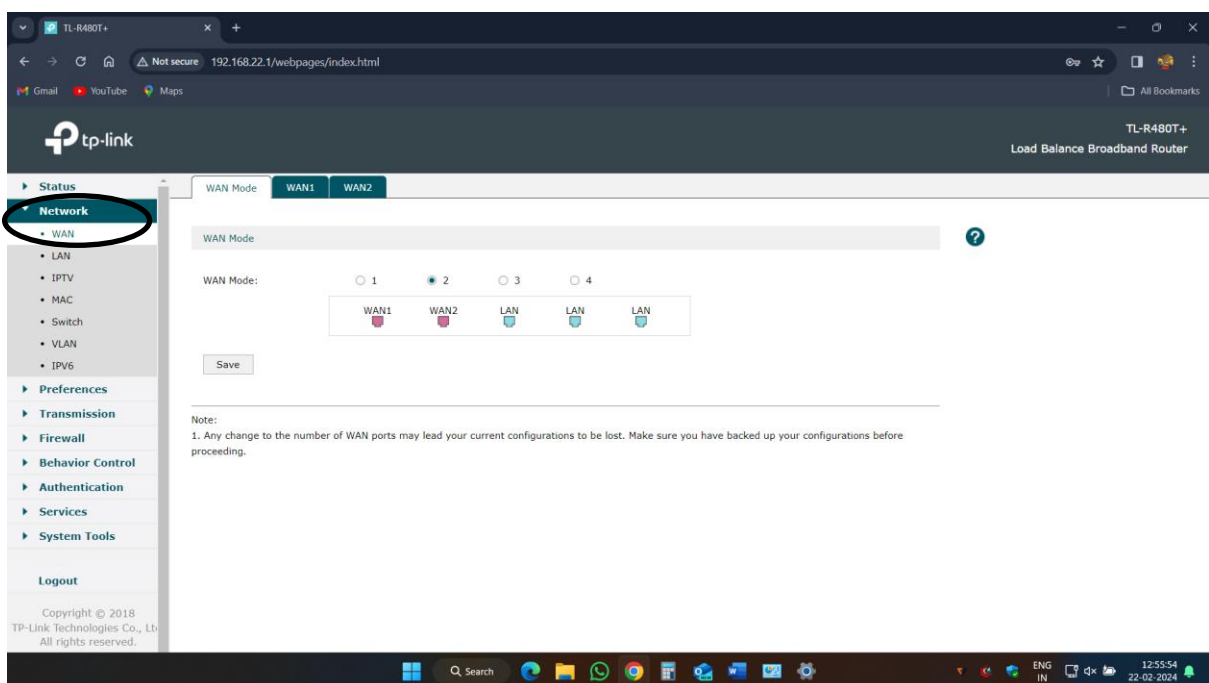

TL-R480T+

Not secure 192.168.22.1/webpages/index.html

GmailYouTubeMaps

All Bookmarks

tp-link

TL-R480T+
Load Balance Broadband Router

Status

System Status

Traffic Statistics

Network

Preferences

Transmission

Firewall

Behavior Control

Authentication

Services

System Tools

Logout

Copyright © 2018
TP-Link Technologies Co., Ltd.
All rights reserved.

System Status

Device Info

Hardware Version: TL-R480T+ v9.0Firmware Version: 9.0.3 Build 20200313 Rel.38262

System Time

System Time: 02/21/2024 23:34:07 WednesdayRunning Time: 0 Day, 0 Hour, 19 Min, 33 Sec

WAN IPv4

Interface Name	Connection Type	Connection Status	IP Address	Subnet Mask	MAC Address	Default Gateway	Primary DNS
WAN1	Dynamic IP	Link Up	192.168.23.100	255.255.255.0	5C-62-8B-32-A1-E8	192.168.23.1	192.168.23.1
WAN2	Dynamic IP	Link Up	192.168.24.100	255.255.255.0	5C-62-8B-32-A1-EC	192.168.24.1	192.168.24.1

Resource Utilization

15%95%

CPU

Search

ENG IN

13:04:11
22-02-2024