



Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

Luxury Gift Paper Bag Machine

Maintenance Book





Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

To ensure your equipment operates continuously with high efficiency and quality, and to extend its service life, please strictly adhere to the content of this guide for regular equipment maintenance and care. Thank you for choosing equipment from Zhejiang Ounuo Machinery Technology Co., Ltd.

1. Manual Instructions and Safety Warnings

1.1. Important Safety Warnings

Before performing any operation, maintenance, or repair, be sure to read and understand the entire content of this manual!

Power Disconnection and Isolation: Before performing any maintenance operation, you must ensure the machine is completely disconnected from power, air, and liquid supplies, and hang a "Do Not Operate, Men at Work" warning sign.

Personal Protective Equipment (PPE): Operators and maintenance personnel must wear appropriate personal protective equipment based on risk assessment, such as safety glasses, gloves, safety shoes, hearing protection, etc.

Professional Training: Only trained and authorized personnel are permitted to perform maintenance and repair operations.

Use Genuine Spare Parts: To ensure machine performance and safety, please be sure to use spare parts provided by our company and recommended lubricants/greases, such as those from "Shell", "Mobil", "Esso", etc.

Keep Records: All maintenance and repair work must be recorded and archived for reference.

1.2. Maintenance Cycles

Due to variations in equipment usage rates, please base maintenance cycles on the actual operating hours displayed on the human-machine interface. Specific reference is as follows:

Calculation basis: Assuming two shifts per day, 8 hours per shift, with 5 hours of actual equipment usage per shift, resulting in approximately 10 hours of actual daily operation. Specific cycles are as follows:

Daily Maintenance: Perform once per shift.

Weekly Maintenance: Perform once per week or every 50 hours.



Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

Monthly Maintenance: Perform approximately once per month or every 200 hours.

Semi-Annual Maintenance: Perform approximately once every six months or every 1200 hours.

Annual Maintenance: Perform approximately once per year or every 2400 hours.

1.3. Cleaning Precautions

1.3.1 Use kerosene or gasoline to clean the equipment's platform, moving platform surface, and metal mechanical parts.

1.3.2 When cleaning painted surfaces such as the equipment casing, strictly prohibit using solvents like acetone that can dissolve, dilute, or react chemically with the paint.

1.3.3 Use chemical solvents cautiously when cleaning non-metallic parts.

1.3.4 Do not use chemical solvents when cleaning acrylic glass windows.

1.3.5 When cleaning optical sensors (electric eyes), use a soft brush, soft cloth, or compressed air to clean their surfaces. Strictly prohibit using any chemical solvents.

1.3.6 Wear rubber gloves and other protective measures when using solvents.

2. Daily Maintenance

Equipment Appearance Check: Clean dust, oil stains, and debris from the machine surface and surrounding area to maintain cleanliness.

Air Pressure Check: Check that all pressure gauges are within the rated range (typically 0.5-0.7 MPa).

Abnormal Noise/Odor Check: Listen for any abnormal sounds, vibrations, or burning smells during operation.

Safety Device Check: Test the effectiveness of emergency stop buttons, protective door switches, etc.

Worktable Cleaning: Clean the worktable and remove debris and adhesive residue from the table surface before the end of the shift to keep the work surface tidy.

Optical Sensor Check: Check that all optical sensors are working correctly. Clean the surfaces of sensors near areas with significant debris daily using a soft brush or compressed air to ensure proper operation.



Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

Conveyance System Check: Ensure the conveyor belt runs smoothly without deviation or foreign objects. Check for any blockages and use an air gun to blow away dust.

Spray Glue Check: Ensure the adhesive shows no signs of charring and the spray channels are unblocked to guarantee accurate glue volume and start-up timing. If problems occur, use professional tools and alcohol to clean the nozzle and purge all waste adhesive.

Fixture Check: Check fixtures for residual adhesive or damage, and clean them. Ensure fixture movements are flexible, without looseness or residual material.

Note: If any other abnormalities occur during equipment operation, stop the machine immediately and report them to the supervisor or contact maintenance personnel.

3. Weekly Maintenance

Transmission Mechanism: Check the tension of chains, belts, and timing belts, and adjust if necessary. Ensure smooth transmission without excessive slack or jumping.

Bearings and Guides: Apply an appropriate amount of high-speed lubricating oil to moving parts such as linear guides and bearings. Ensure smooth operation without sticking or abnormal noise.

Pneumatic System: Check the Air Treatment Unit (Filter, Regulator, Lubricator). Drain accumulated water from the filter, check the oil level in the lubricator, and add lubricating oil promptly. Ensure the air source is clean and dry, and the oil level is within the normal range. Drain dirty water from the filter cup weekly (50H), and monthly (200H), remove, clean the filter cup, and reinstall it. **Note:** Before draining water or removing the filter cup, you must shut off the compressed air and depressurize the system! Increase the drainage frequency if the air source humidity is high.

Electrical Connections: (After power disconnect) Check for loose wiring terminals. Ensure connections are secure, without false connections or exposed wires. Clean the electrical cabinet using compressed air to maintain good working condition and heat dissipation.

4. Monthly Maintenance

Mechanical Structure: Check all fastening screws and nuts for looseness, especially on key parts such as the machine frame, cylinder supports, and optical sensor brackets. Ensure all fasteners are tight and the equipment structure is stable.



Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

Equipment Leveling: Check and adjust the equipment's leveling feet to ensure the machine is level. Ensure the equipment runs smoothly without abnormal vibration.

Guide and Ball Screw Lubrication: Clean the guides and ball screws, and manually apply lubricating grease.

Check Transmission Belts: Check belt tension and wear, adjust or replace if necessary.

5. Semi-Annual and Annual Maintenance

Motor Maintenance: Check the operating current, temperature, and insulation performance of the main motor and servo motors.

Comprehensive Tightening and Cleaning: Perform a more thorough internal cleaning of the machine and a full-line fastener check.

Comprehensive Inspection and Diagnosis: Conduct a comprehensive inspection and diagnosis of the mechanical, electrical, and pneumatic systems.

Replacement of Parts: Replace wear-prone parts such as bearings, belts, and aging hoses based on wear conditions.

Safety Check: Perform thorough testing and inspection of all safety functions (safety doors, emergency stops, power switches, etc.).



Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

6. Common Faults and Troubleshooting Methods

Table 1. Common Faults and Troubleshooting Methods

Symptom	Cause	Solution
Poor adhesion at seams/handles	1. Inconsistent adhesive application (too little or too much) 2. Insufficient pressure 3. Low air pressure	1. Clean glue gun nozzle and remove residual adhesive 2. Adjust cylinder pressure and push/pull speed 3. Check and adjust air pressure
Abnormal noise during operation	1. Lack of lubrication in transmission components 2. Loose fasteners 3. Damaged bearings	1. Lubricate moving parts 2. Inspect and tighten screws 3. Contact after-sales service for bearing replacement
Cylinder movement is unresponsive	1. Air line blockage or insufficient air pressure 2. Cylinder malfunction	1. Inspect air lines, filters, and air pressure 2. Contact professionals for repair or replacement
Bag positioning is inaccurate	1. Loose or misaligned clamps 2. Photoelectric sensor malfunction or contamination	1. Adjust or tighten clamps 2. Clean sensor lens and verify alignment accuracy

7. Precautions

Use Genuine Consumables: It is recommended to use consumables such as adhesive, cylinders, and guides provided by our company to ensure optimal performance and avoid equipment damage.

Environmental Requirements: Keep the equipment's working environment clean and dry to prevent dust and moisture from affecting equipment lifespan and product hygiene.

Long-Term Shutdown: If the equipment is planned for long-term shutdown, clean it thoroughly, apply anti-rust oil to exposed metal parts, disconnect all power and air sources, and cover it with a dust-proof cloth.

Professional Repair: When encountering complex faults that cannot be resolved, stop operation immediately and contact our professional maintenance personnel. Do not attempt disassembly blindly on your own.

8. Maintenance Record Form

Table 2. Maintenance Record Form

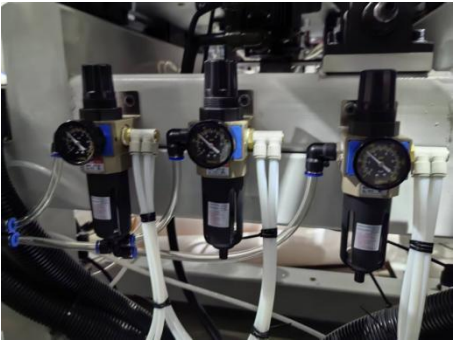
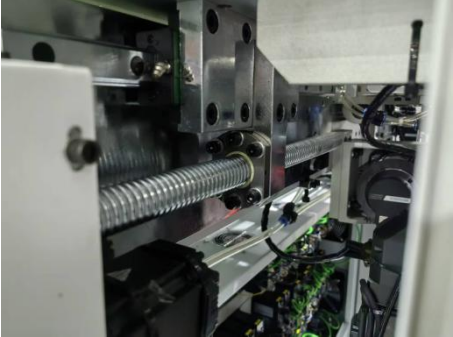
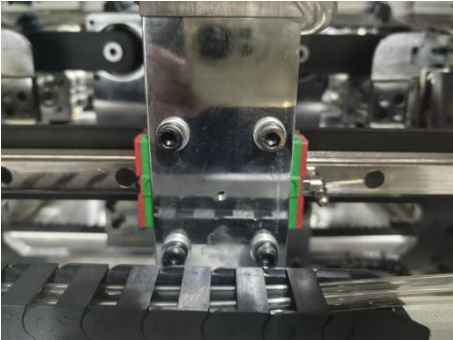
Date	Maintenance Type (Daily/Weekly/Monthly/Annual)	Maintenance Task	Performer	Remarks (Abnormal Records)

(This form can be expanded or kept as a separate booklet. It is recommended to print this form and hang it near the equipment for easy recording and traceability.)

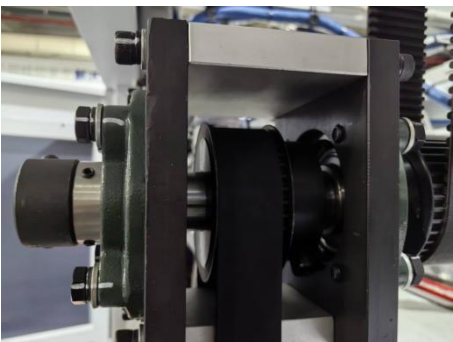
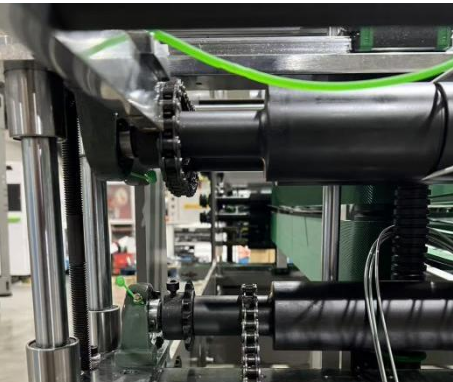
9. Maintenance Parts

Table 3. Maintenance Parts Table

Picture	Part	Maintenance Items
	Feed Chain	Ensure proper tension and adequate lubrication

	Filter	Regularly drain accumulated water from the filter
	Electrical Box	Keep clean and ensure unobstructed heat dissipation
	Shifting Screw Rod	Ensure screw lubrication and smooth movement without obstruction
	Cross Bar	Ensure lubrication of each guide rail, movement without abnormal noise or resistance

	Flip Bar	Periodically inspect and replace bearings, ensure smooth movement without resistance, ensure no adhesive residue on inner lining plate and flip plate
	Glue Gun	Periodically clean glue channel, ensure uniform glue flow, quick start/stop response
	Forming Table	Ensure cleanliness with no residual materials or adhesive
	Mold Lifting Drive Components	Ensure bearing lubrication and proper timing belt tension

	Mold	Ensure lubrication and rust prevention for gear jaws, telescopic screws, and worm gears
	Base Support	Ensure bearing lubrication and proper timing belt tension
	Bag Sorting Chain	Ensure sufficient lubrication between chain links and proper tension

Note: For optical sensor location maintenance, refer to the Debugging Manual content.



Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

Appendix:

Table 4. Operating Cylinder Life Table

Position	Cylinder Model	Service Life
1	VUVG-L14-M52-AT-G18-1H2L-W1	100 million times
2	VUVS-L25-M52-AD-G14-F8-1C1	100 million times
3	MSSD-EB	*
4	ADN-32-20-I-P-A	20 million times
5	ADN-40-40-I-P-A	20 million times
6	DGTZ-GF-25-20-P-A	20 million times
7	DSNU-40-200-P-A	20 million times
8	DSNU-20-25-P-A	20 million times
9	DSNU-25-20-P-A	20 million times
10	DSBC-50-25-PPVA-N3	20 million times
11	DSNU-S-16-25-P-A-MQ	20 million times
12	DSNU-S-16-40-P-A-MQ	20 million times