

Luxury Gift Paper Bag Machine Manual Book





Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

catalogue

1. Brief Introduction	- 3 -
2. Bag machine function introduction	- 5 -
2.1. Key technical specifications	- 5 -
2.2. Feeder Components	- 6 -
2.3. Transition feed component	- 13 -
2.4. Headband Card	- 15 -
2.5. Threaded component	- 16 -
2.6. Glue Module	- 19 -
2.7. Jiggle component	- 20 -
2.8. Material Grabber	- 24 -
2.9. Lifting mold assembly	- 24 -
2.10. Base component	- 28 -
2.11. Bottom Insert Component	- 29 -
2.12. Side Panel	- 31 -
2.13. Push Button	- 33 -
2.14. Unbag component	- 35 -
2.15. Bump machine	- 37 -
2.16. M-base component	- 40 -
2.17. Bagger	- 41 -
3. Signal element installation and debugging instructions	- 44 -
4. Control Panel Parameters	- 58 -
4.1. Feeder Control Interface	- 58 -
4.2. Threader	- 59 -
4.3. Headband	- 65 -
4.4. Host Control Panel	- 69 -
4.5. Rack Control Panel	- 93 -

1. Brief Introduction

The waistline free paper bag machine has the following functions:

1	Auto retrieve	2	Auto Heading Card
3	Auto Cut	4	Auto-flip
5	Automatic glue spraying	6	Bag forming
7	Auto Edge (Pointed Bottom & M Bottom)		Auto compress and organize

Through the above series of functions, the automatic production from paper to paper bag can be realized, and the paper bag process flow is shown in Figure 1.1.

Innovation leads the era, technology changes life. The birth of three-dimensional paper bag forming machine greatly reduces the input of labor cost, greatly improves the production efficiency and the beauty of paper bags, and provides a more new, environmentally friendly and intelligent choice for the packaging industry.

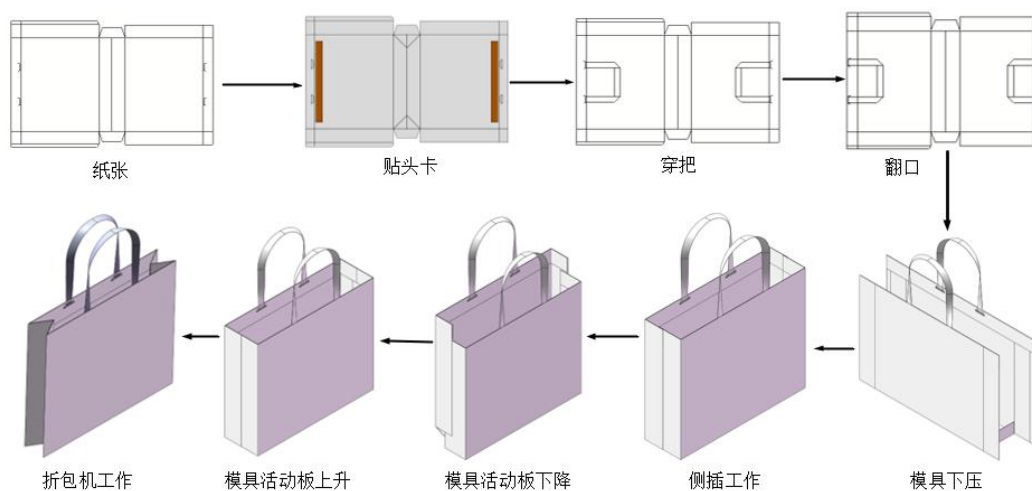


Figure 1.1 Paper bag process flow

This manual is used to guide beginners to debug the paper bag machine without waist line. The recommended learning steps are as follows:

1. Starting from Section 2.2, the Feeder components are sequentially arranged according to the paper bag production process sequence. This logical structure enables quick understanding of each component's name, specific location, and function.

2. Based on the functional overview (including debugging operations, please read carefully) and the



Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

debugging process, complete the debugging of each component correctly in a function-oriented manner.

3. Debugging steps:

- (1) Complete the installation and debugging of all proximity switches. (The main unit's heat-sealing push rod proximity switch and the bottom plug proximity switch fail to illuminate, preventing the mold from lifting or lowering)
- (2) Complete the debugging of all components of the host;


2. Bag machine function introduction

2.1. Key technical specifications

SN	Item	Specification(Great 3.0)
1	Paper sheet length	650-1190mm
2	Paper sheet width	360-740mm
3	Bag making speed	30-45pcs/min
4	Bag Width	240-500mm
5	Bag Height	240-450mm
6	Gusset	80-200mm
7	Handle width	20-30mm
8	Handle length	420-560mm
9	Power supply	380V±10% 50Hz 3-Phase 4-Wire
10	Machine power	85KW
11	Air Supply	0.75Mpa (15KW screw-type compressor is suggested)
12	Overall size	L8060*6491*2400mm
13	Weight of Machine	8000KG
14	Material Thickness	180-300g
15	Suitable Material	White Cardboard/ Gold and Silver Cardboard(sheets)

2.2. Feeder Components

2.2.1. Material feeding mechanism and pre-stacking paper mechanism

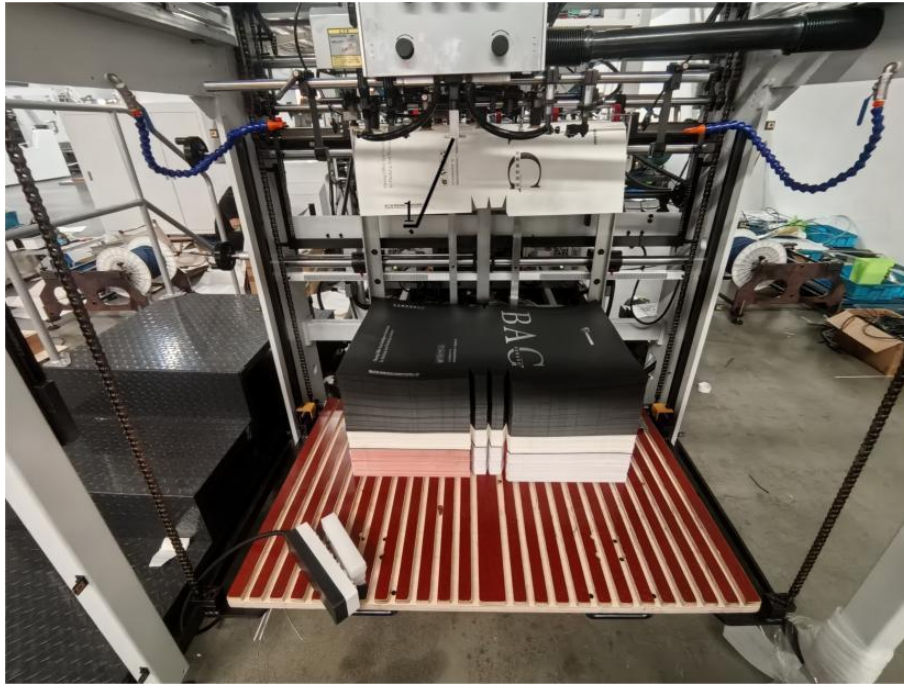


1-Support foot

Figure 2.1 Material support mechanism

The tray mechanism is used for paper feeding. When filling the paper, the tray is lowered to the lower position, and the paper is manually transported to the target position. The paper is knocked and sorted by a wooden hammer, and then lifted to the highest position after completion.

Debugging procedure: Rotate the left handle to adjust the side panel spacing to match the paper length. Advance the paper to press it against the front panel, ensuring the support feet don't press the entire palm surface but only a small portion (about 1/3 length) of the paper. If the paper is concave, insert a wedge to level it.

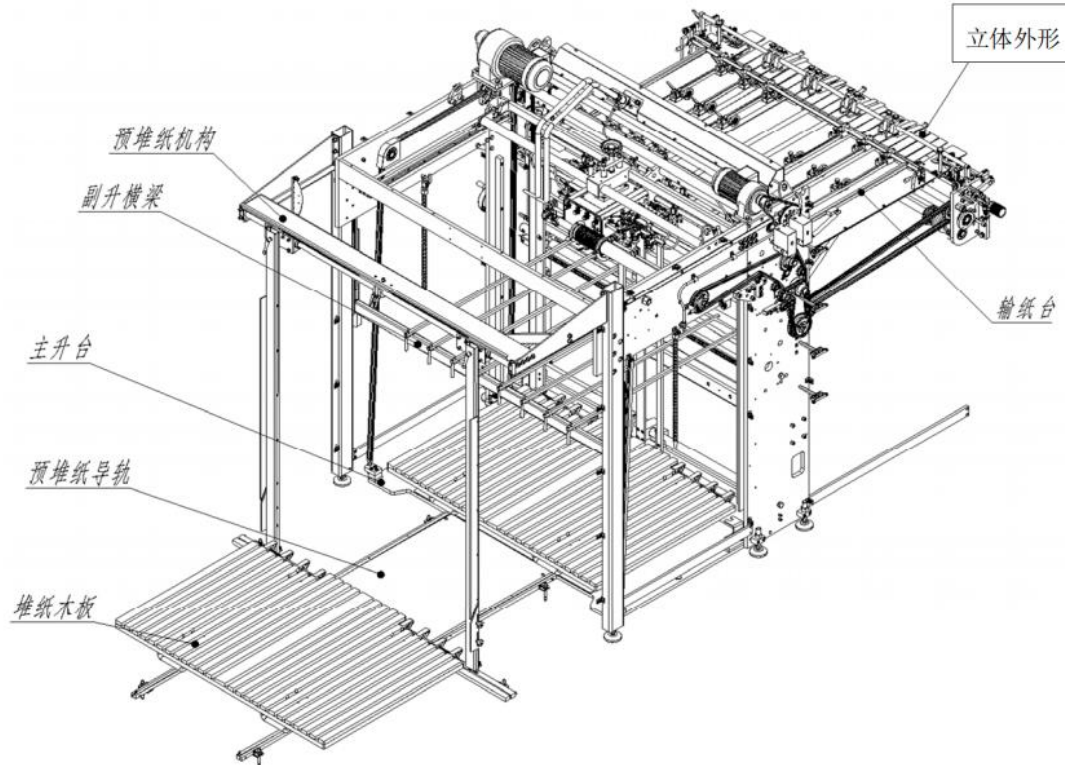

The pre-stack paper guide rail requires disassembly and transportation, with on-site installation being mandatory. During installation, first lower the main lifting platform to ground level. Adjust both the main platform and footrest to proper positions, then secure the footrest to the ground using expansion bolts. When installing the guide rail, ensure both wheel tracks are perfectly aligned and of uniform height. Depending on installation conditions, use shims to adjust the height as needed, and finally fasten everything with expansion bolts.

Pre-stack paper steps:

- (1) Move the standard paperboard positioning block and standard paperboard to the fixed position according to the paper size;
- (2) Move the wooden board to the standard cardboard and stack the paper, and the height and weight of the paper must be within the technical parameters;
- (3) Slide the corrugated board to the extreme positions on both sides and push the paper stack to the paper table.

Use paper plug without stopping the machine:


- (1) The paper tray consists of a main tray and a secondary tray. The secondary tray, designed for paper replenishment without machine downtime, features two cross beams and a plug rod.
- (2) Insert the pin into the slot of the wooden board, and evenly distribute the pin according to the paper size.

Then, the auxiliary paper table is raised by the button, and the auxiliary paper table crossbeam and the pin are lifted. At this time, the lifting is switched to the auxiliary paper table step-up.

- (3) The main paper table, with the wooden board, is lowered to the ground by the button;
- (4) Push the paper stacked in the pre-pile paper place into the main paper table, lift the paper stack by pressing the button, and lift the pin and the paper stack on it a little. At this time, the lifting is switched to the step rise of the main paper table;
- (5) Push the rod in the middle of the paper pile apart from the middle to the sides into a V-shape,
- (6) Then pull out the rods one by one, starting from the inside and out.

2.2.2. Pulp feeding unit



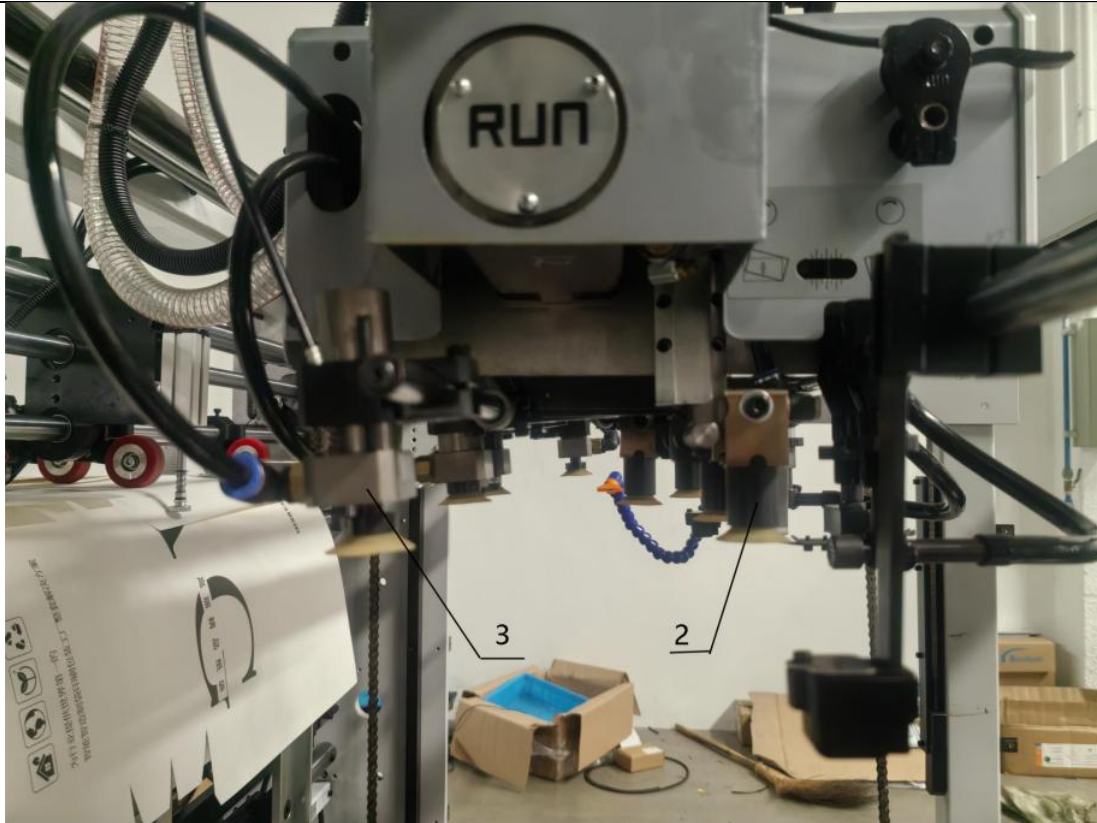

1-Pressure plate, 2-Rear suction nozzle, 3-Front suction nozzle

Figure 2.2 Feed mechanism

The paper suction mechanism is designed to handle paper separation and movement. During operation, the support legs first extend. The rear suction nozzle (2) lifts a single sheet of paper, after which the support legs lower to secure the next sheet, preventing the previous sheet from shifting forward and disrupting the position of the subsequent sheet. Simultaneously, as the rear nozzle releases, the front suction nozzle (3) draws in the paper, propelling it forward. The material-blocking cylinder extends to prevent the next sheet from moving forward.

The gas to be introduced has a pressure range of positive pressure $0.06 \sim 0.08\text{MPa}$ to negative pressure $-0.06 \sim -0.08\text{MPa}$. The gas pump is an oil-free composite vacuum pump with a pressure of $\geq 60\text{kPa}$ and a displacement of $\geq 80\text{m}^3/\text{h}$, as shown in Figure 2.3 below.


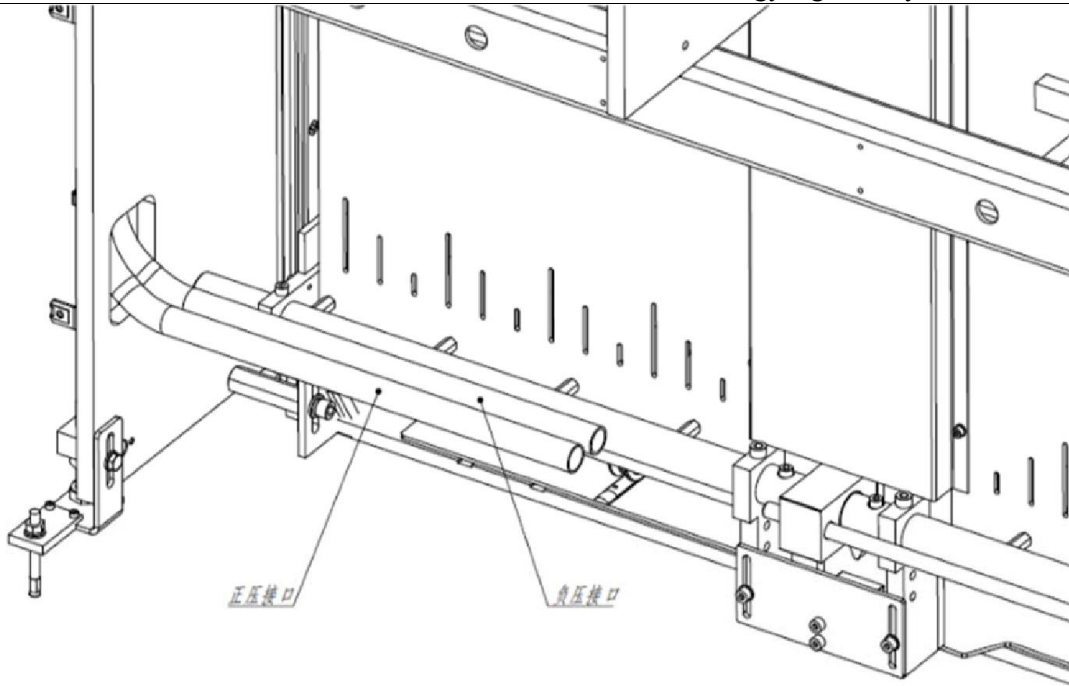


Figure 2.3 Nozzle airway connection diagram

2.2.3. Double check

The dual-sheet detection mechanism monitors bearing contact paper height variations to verify Feeder's single-sheet feeding accuracy. Should single or multiple sheets be detected, the main unit shall be shut down. Equipment must be properly calibrated before restarting.

2.2.4. Feeder Conveying Platform

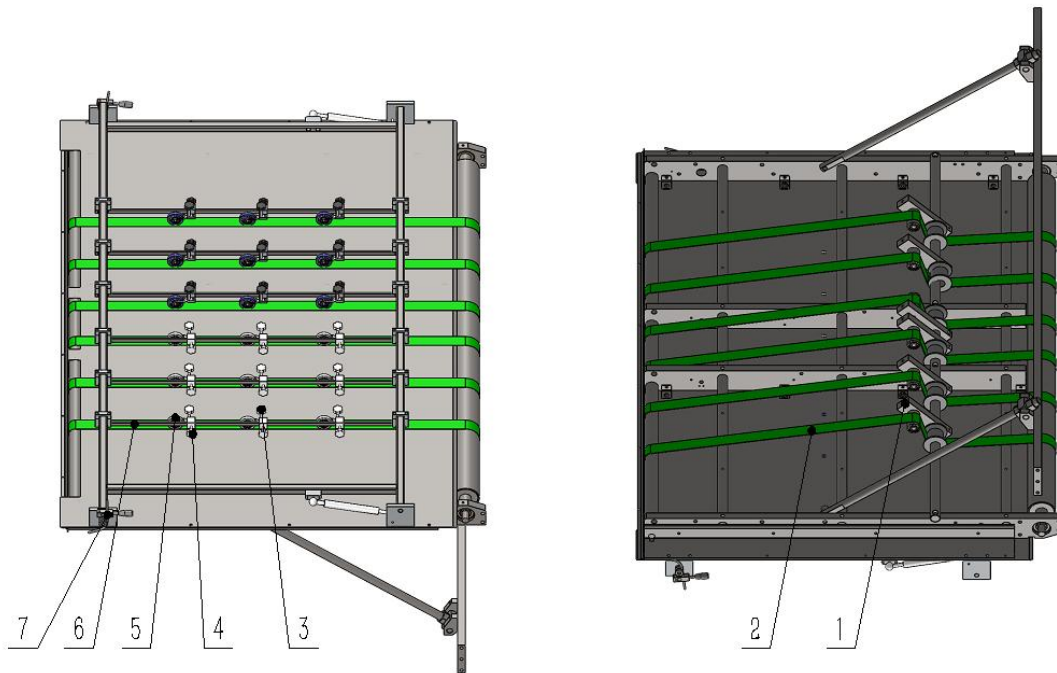


1-tension wheel, 2-belt, 3-lateral handle, 4-vertical handle, 5-pressure wheel, 6-transverse strip, 7-handle

Figure 2.4 Feeder conveyor platform

The Feeder conveyor table is used for material transfer. Through the cooperation of the pressure wheel disc and the bottom belt, the paper stacked in layers is moved forward simultaneously.


Troubleshooting Procedure: 1. Rotate the tension wheel (1) using the adjustable wrench to tighten the belt (2). 2. Loosen the screws on both sides of the crossbar (6) and position it along the belt's centerline. 3. Release the lateral handle (3) and adjust the pressure wheel to align with the overlapping edge line when the paper stops. 4. Rotate the vertical handle (4) to secure the pressure wheel (5) against the belt. 5. Rotate the handle (7) to open the Feeder conveyor platform.

2.2.5. Positive gauge

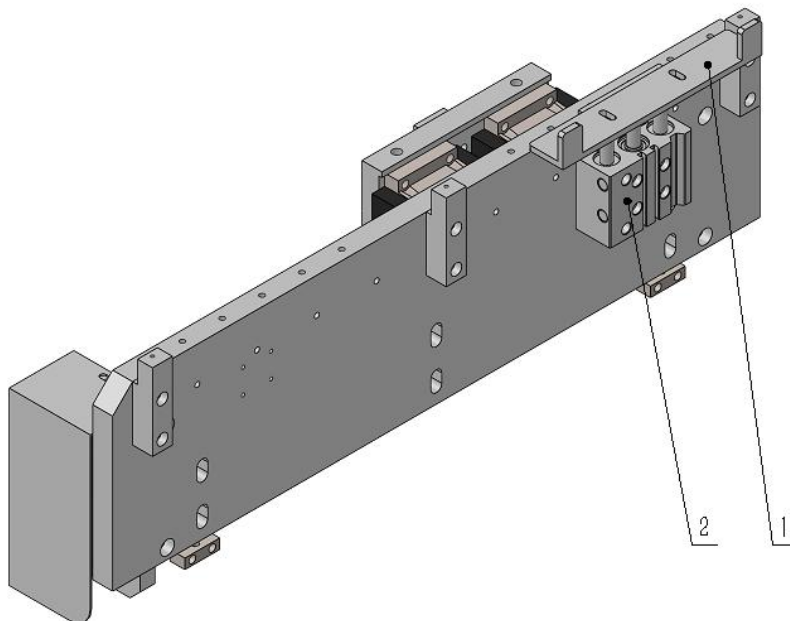

1-front stop, 2-cylinder

Figure 2.5 Front gauge

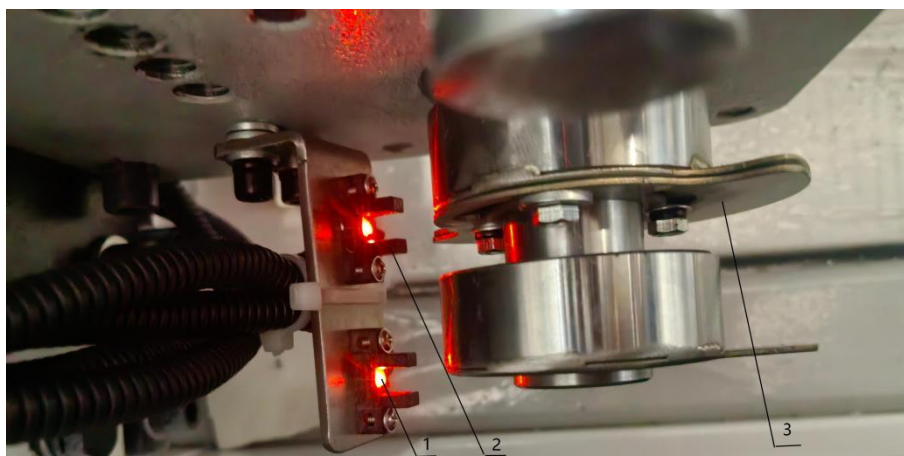

1. Material guide slot photoelectric, 2. Stop gauge slot photoelectric, 3. Induction travel extension plate

Figure 2.6 Barrier control signal

The positive edge stop is used for transverse positioning (parallel to the discharge direction). The cylinder (2) controls the extension time according to the time when the sensing sheet illuminates the trough photoelectric. If the response time of the cylinder needs to be extended, the fan-shaped area of the sensing sheet can be adjusted.

Debugging Procedure: Adjust the position of the straight edge stop (1) to align it parallel to the paper edge while ensuring parallel alignment between both stops. Set the starting position of the slot-type photoelectric sensor (2) and the sector area of the sensing plate (3) to activate the front stop when the paper arrives. Position the puller slot-type photoelectric sensor (1) at the rotating end of the sensing plate to control

the material pulling initiation. This ensures paper positioning is completed and the stops drop when the gripper reaches the paper edge.

2.2.6. Side stop


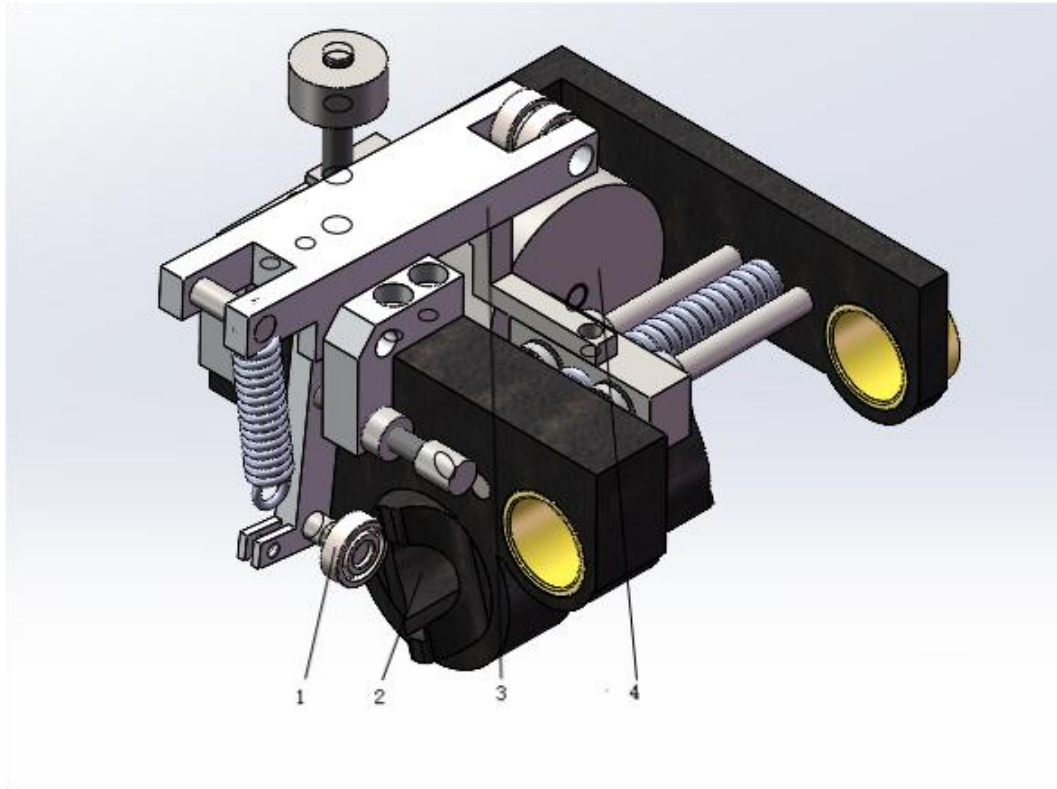


Figure 2.7 Side gauge

The side stopper is designed for longitudinal positioning (perpendicular to the discharge direction). When cam (2) rotates, it drives the rocker arm (3) to oscillate vertically. The cam's opposing surface then rotates the roller (4). As the paper enters the side stopper's working area, the rocker arm depresses, clamping the paper between the pressure roller and roller (4). The outward rotation of the rollers achieves longitudinal positioning of the paper.


Debugging process: Release the knob and adjust the longitudinal position on the side (vertical discharge direction) to ensure that the paper can pass through the upper and lower pressure wheels without colliding with other parts.

2.3. Transition feed component

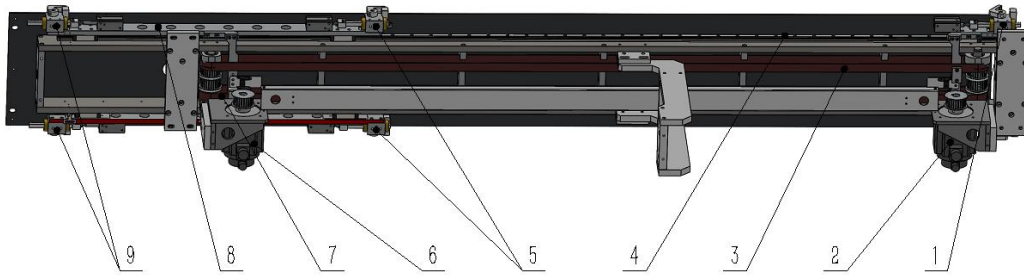

1-Head material clamp, 2-Material pulling motor, 3-Synchronous belt, 4-Guide rail, 5-Handle material pulling clamp
 6-Transition feed motor, 7-synchronous belt, 8-connection plate, 9-flip feed clamp

Figure 2.8 Fixed-point material transfer assembly

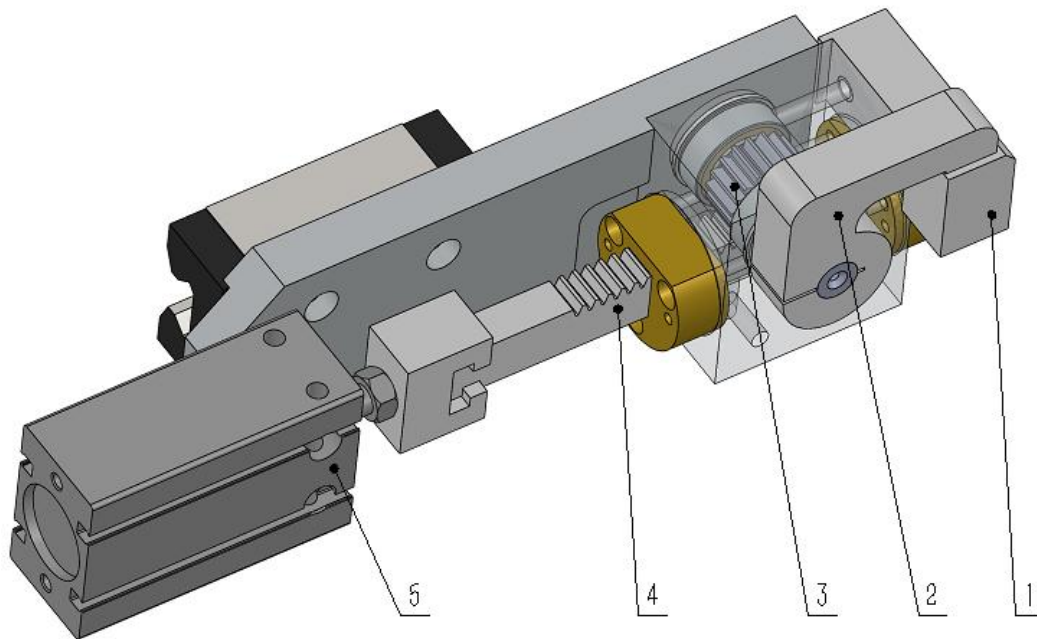

1-Clamping seat, 2-Clamping fixture, 3-Gear, 4-Rack, 5-Cylinder


Figure 2.9 Puller clamp

The transitional feeding mechanism utilizes a cylinder-driven rack-and-pinion system to control the clamps' opening/closing sequence, thereby gripping paper edges. Motor (2) drives the synchronous belt (3), which pulls the paper feeding clamp (1) along guide rails (4) until it reaches the adhesive station. Simultaneously, Motor (6) operates the synchronous belt (7) to synchronize the shuttle feeder clamp (5) and the flap feeder clamp (9). The shuttle feeder moves paper from the adhesive station to the shuttle position, while the flap feeder transfers paper from the shuttle position to the flap station.

Debugging Procedure: Loosen the locking screw on the clamp. Adjust the cylinder's initial rotation position to ensure the clamp fits snugly against the holder without detaching the paper. Set the screen parameters for the head material center distance and head material movement distance to align the paper center with the head material assembly center. Configure the transition material center distance and transition

material distance on the screen to position the first paper center with the threading assembly center and the second paper center with the flapper assembly.

2.4. Headband Card

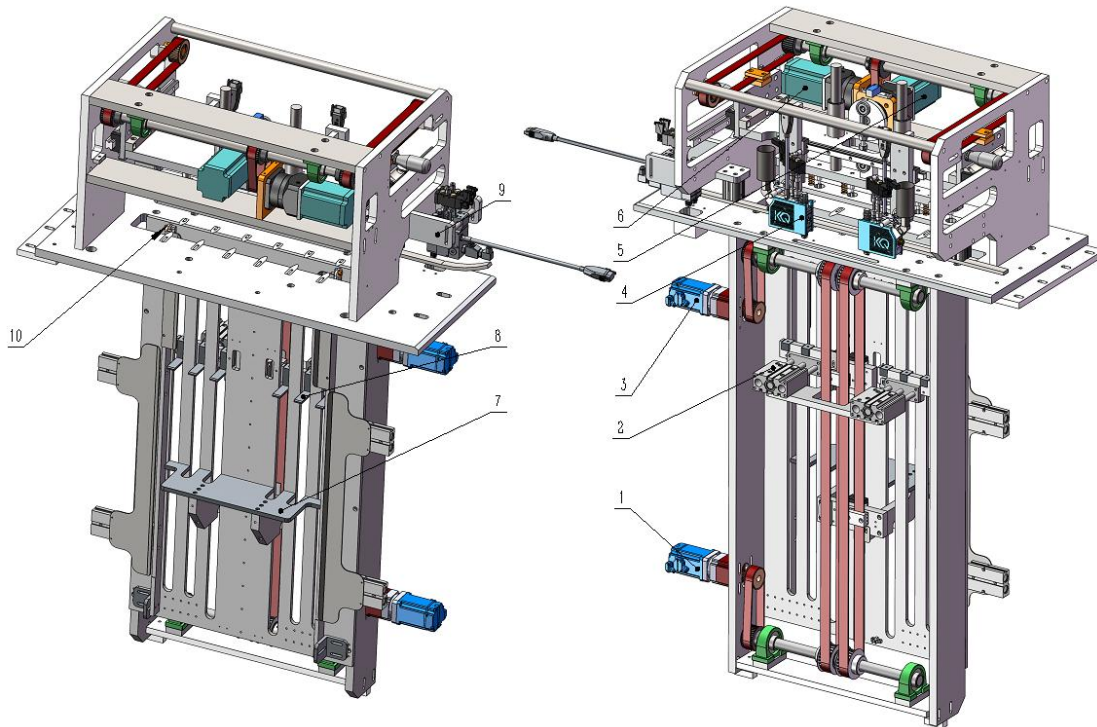

1-Main stage lifting motor, 2-Auxiliary stage cylinder, 3-Auxiliary stage lifting motor, 4-Handheld glue gun, 5-Head pickup clamp motor

6-Transfer motor, 7-Main stage, 8-Auxiliary stage, 9-Adhesive gun, 10-Fiber optic beam sensor

Figure 2.10 Headband

The head clip assembly is designed to attach head clips at the bag opening to enhance paper flatness. The glue gun (9) applies adhesive beneath the bag opening fold. The head clip motor (5) drives the suction nozzle through an eccentric wheel and connecting rod to pick up the head clip, while the material transfer motor (6) transports it to the fold area, achieving the attachment effect as shown in Figure 2.9. For manual attachment, the glue gun (4) applies adhesive spot-on the head clip. Head clips are stored on the main platform (7). When the main platform rises to illuminate the trough-type photoelectric seat on the auxiliary platform, the auxiliary platform cylinder (2) extends, transferring remaining head clips from the auxiliary platform (8) to the main platform. The main platform then descends to the bottom loading position. When the head clip blocks the incoming material detection photoelectric sensor, the auxiliary platform retracts, and the main platform transfers the remaining head clips from the auxiliary platform to resume operation.


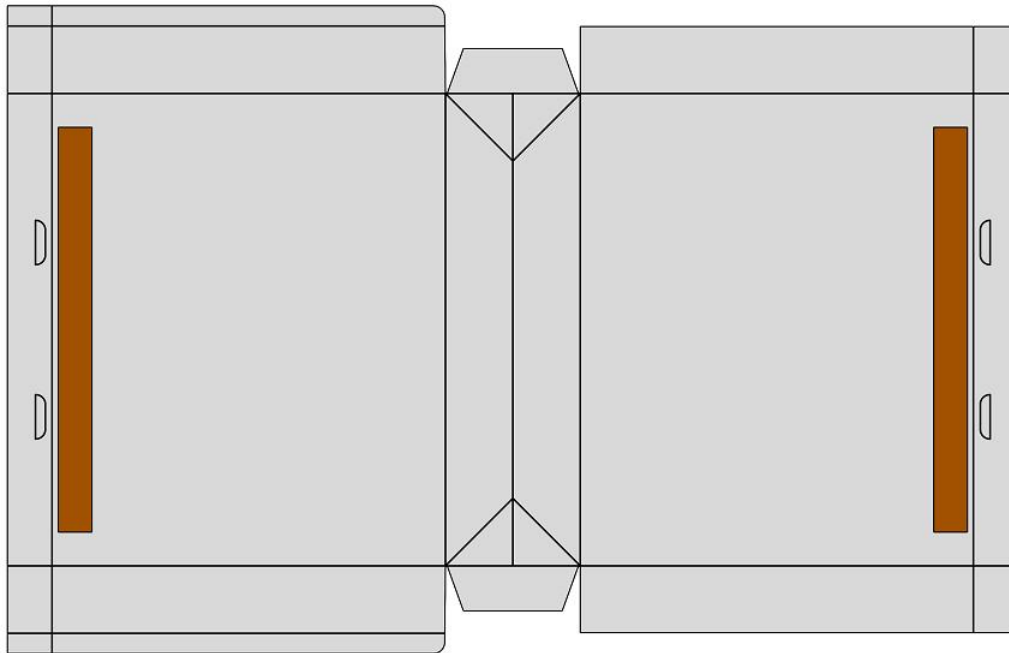


Figure 2.11 Adhesive head clamp

Debugging Procedure: 1. Press the right-side button to activate the cylinder. 2. Position the head clamp neatly on the main stage. 3. Raise the stage until the head clamp aligns with the stage surface. 4. Gently press the sharp edges of the spring tabs on both sides of the stage to secure the head clamp. 5. Adjust the optical fiber amplifier sensitivity to focus the counter-propagating fiber sensor on the target object. This ensures the head clamp remains perfectly aligned with the stage surface after being suctioned.

2.5. Threaded component

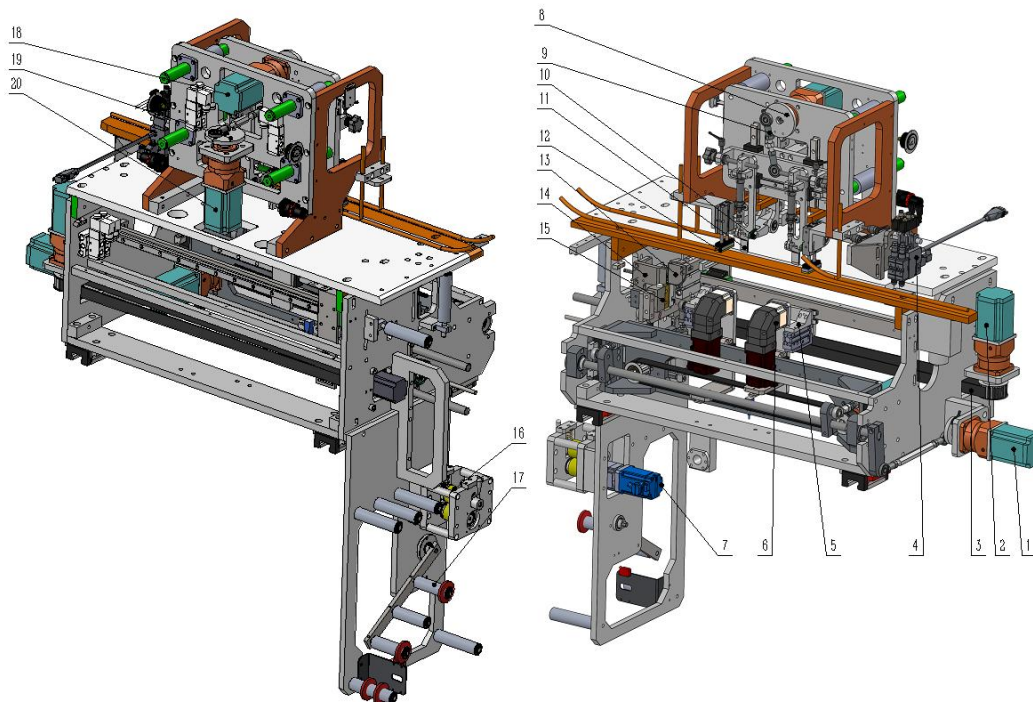

1-Inner Advance/Retreat Motor, 2-Belt Pulling Motor, 3-Synchronous Belt, 4-Glue Gun, 5-Rotating Clipper, 6-Dual Material Handling Motor, 7-Feeding Motor, 8-Eccentric Wheel, 9-Connecting Rod, 10-Glue Wheel, 11-Vertical Belt Clamping Device, 12-Press Plate, 13-Horizontal Material Handling Clipper, 14-Stripping Positioner, 15-Hot Blade, 16-Glue Roller, 17-Storage Roller, 18-Upper/Lower Material Handling Motor, 19-Eccentric Wheel, 20-Material Handling Advance/Retreat Motor

Figure 2.12 Crossbar machine

The paper threading mechanism is responsible for the adhesive application on the paper holder. When the paper reaches the threading machine, the pull band motor (2) drives the transverse pull clamp (13) to advance the strip forward. Simultaneously, the cylinder raises the hot blade (15) and moves it vertically (perpendicular to the discharge direction) to cut the strip. After the rotating clamp (5) horizontally grips the strip, the dual-clamping motor (6) rotates the clamp upward 90°. The motor (18) vertically pulls the pull clamp (11) upward through the paper threading hole, while the cylinder presses down the rubber roller (16). The motor (20) drives the pull clamp (11) and rubber roller (16) inward via a connecting rod and eccentric wheel (19), ensuring the strip adheres to the paper adhesive. The internal feed motor (1) moves the rotating clamp inward through the connecting rod, allowing the transverse pull clamp to retract and preventing damage to the threading hole. After completing the threading process, the adhesive gun (4) sprays adhesive along the bag opening surface (as shown by the pink lines in Figure 2.11) during paper movement to fold and secure the bag.

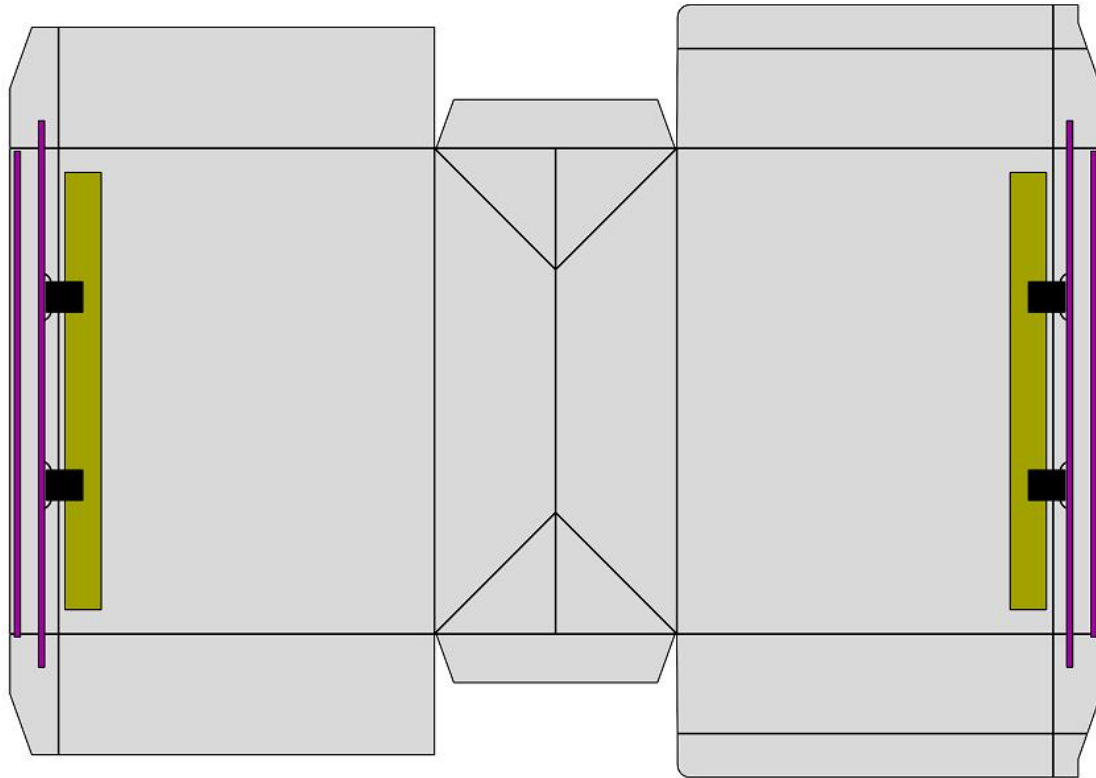


Figure 2.13 Bag opening glue spraying position

Debugging Procedure: Complete material threading according to Figure 2.12. Set the pusher position to ensure equal end clearance when the rotary clamp grips the strip. If excess material appears on the left side, adjust the pusher toward the origin. Configure the proximity switch at the rotary clamp base to verify vertical downward engagement. If the strip deviates rightward from the vertical clamp, adjust the switch leftward. Adjust the screw at the internal feed motor to maintain sufficient clearance for retraction while ensuring vertical downward engagement of the upper/lower clamps.


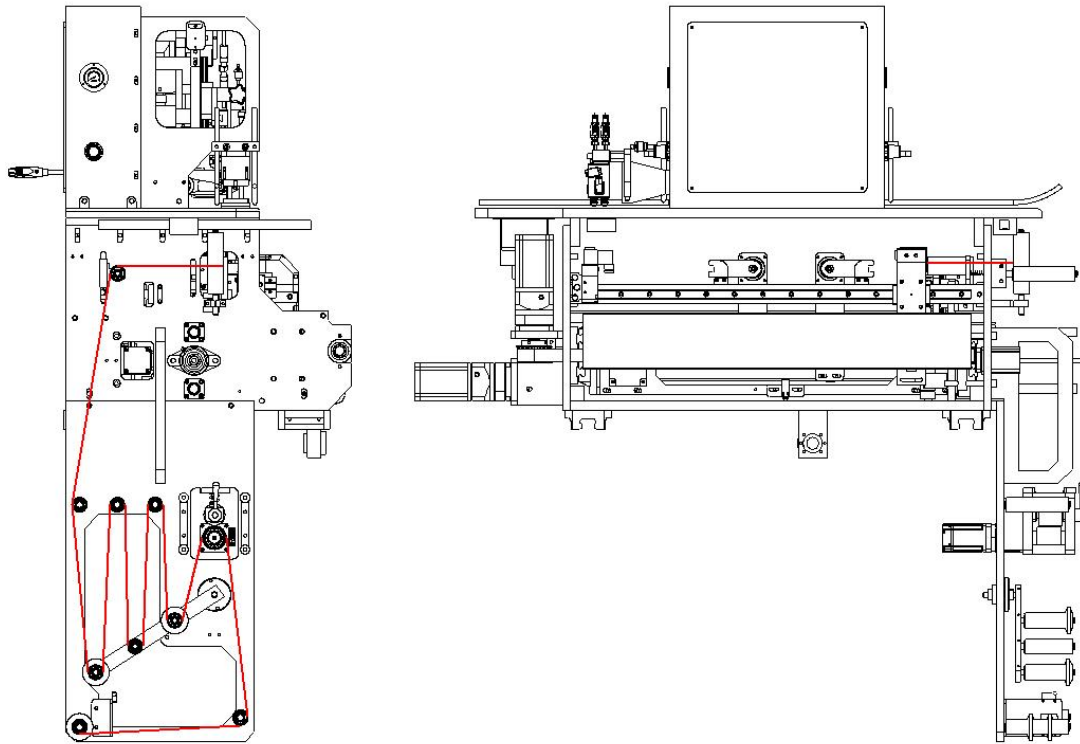


Figure 2.14 Material Passage Diagram

2.6. Glue Module

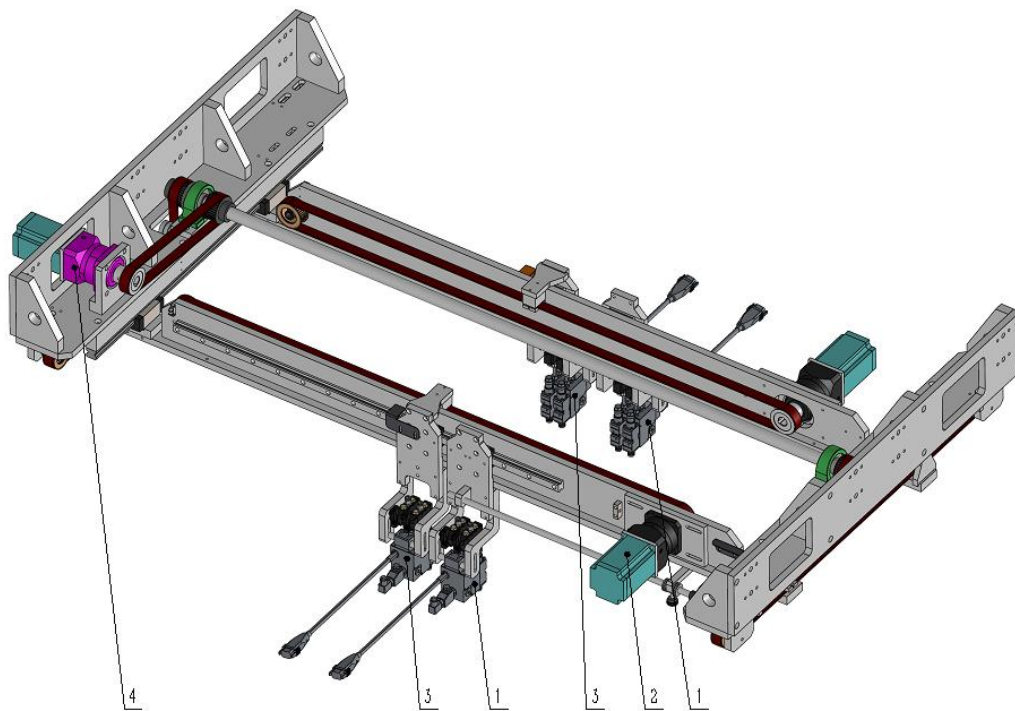

1-right glue gun, 2-lateral motor, 3-left glue gun, 4-vertical motor

Figure 2.15 Spray adhesive assembly

The adhesive assembly is used for applying side adhesive (red line) and base adhesive (green line), as

shown in Figure 2.13. Motor (2) drives the left-side adhesive applicator (3) from the bag opening to the bag bottom to complete the side adhesive spraying, while motor (4) drives the left and right side adhesive applicators (3) and (1) to move toward each other to complete the base adhesive spraying.


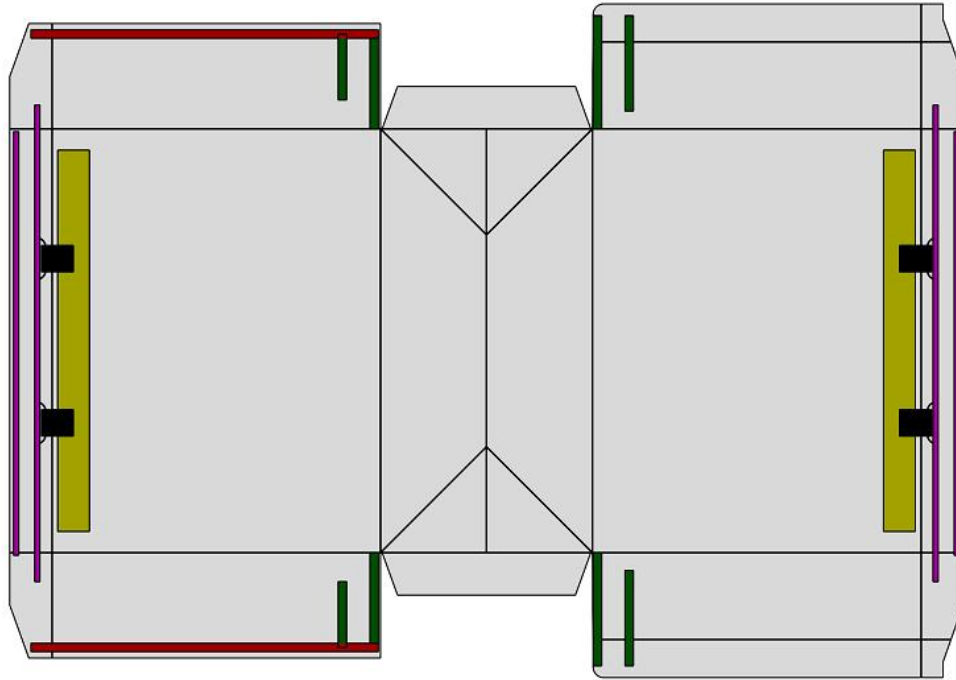


Figure 2.16 Spray glue position diagram

Debugging process: Ensure the nozzle of the glue gun is perpendicular to the table, manually adjust the position of the glue gun (1), and achieve the effect of symmetrical spraying on both sides of the bottom and as close as possible to the bottom of the bag.

2.7. Jiggle component

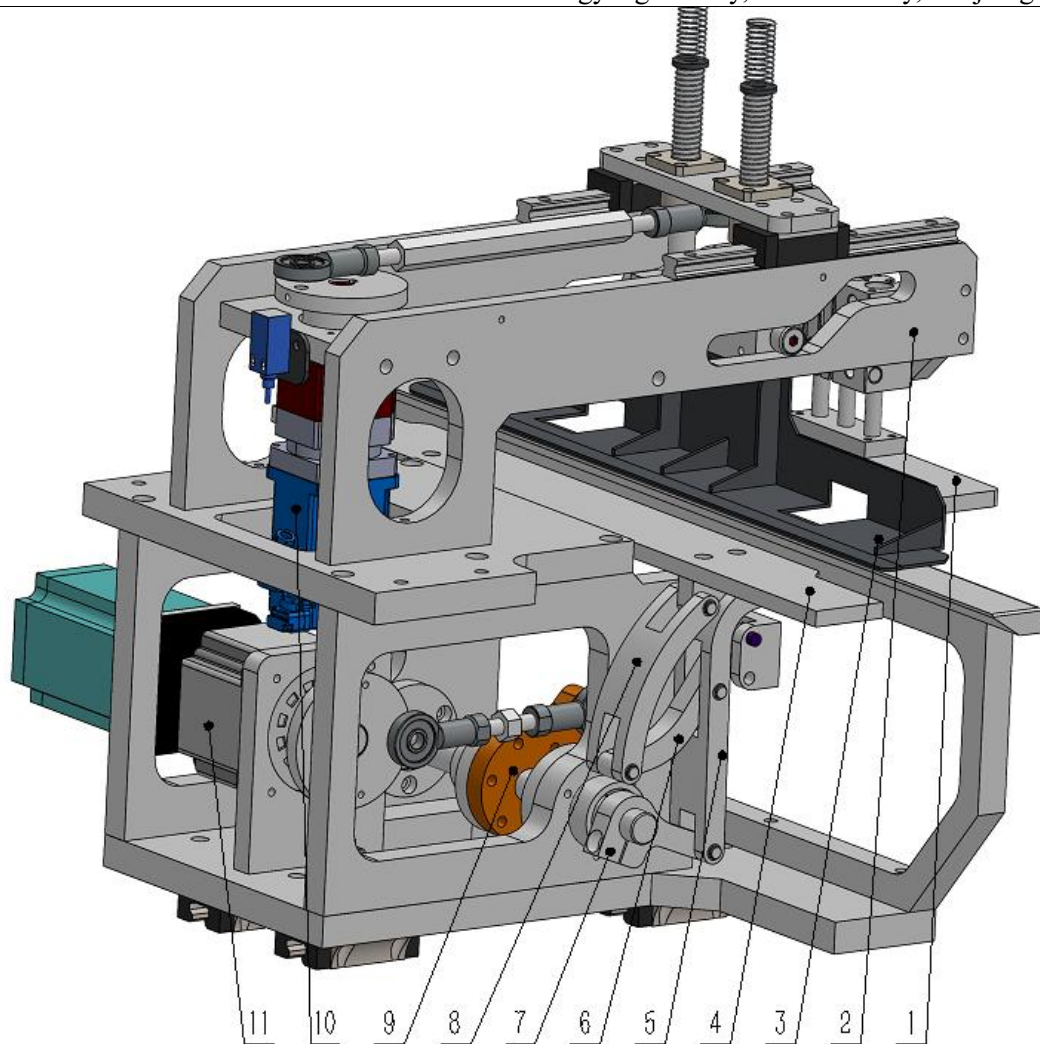

1-Pressure plate, 2-Guide rail plate, 3-Internal support plate, 4-Flip plate, 5-Lower arm
 6-middle arm, 7-auxiliary arm, 8-upper arm, 9-main arm, 10-mobile motor, 11-rotating motor

Figure 2.17 Folded assembly

The folding mechanism controls bag opening. The motor drives the main arm (8) via an eccentric wheel and connecting rod, transmitting power through the shaft to the auxiliary arm (7). This rotation sequentially actuates the lower arm (5), intermediate arm (6), and upper arm (8), rotating the flap (4) 180°. The arm's motion trajectory is illustrated in Figure 2.17, while the paper bag manufacturing process is shown in Figure 2.18.

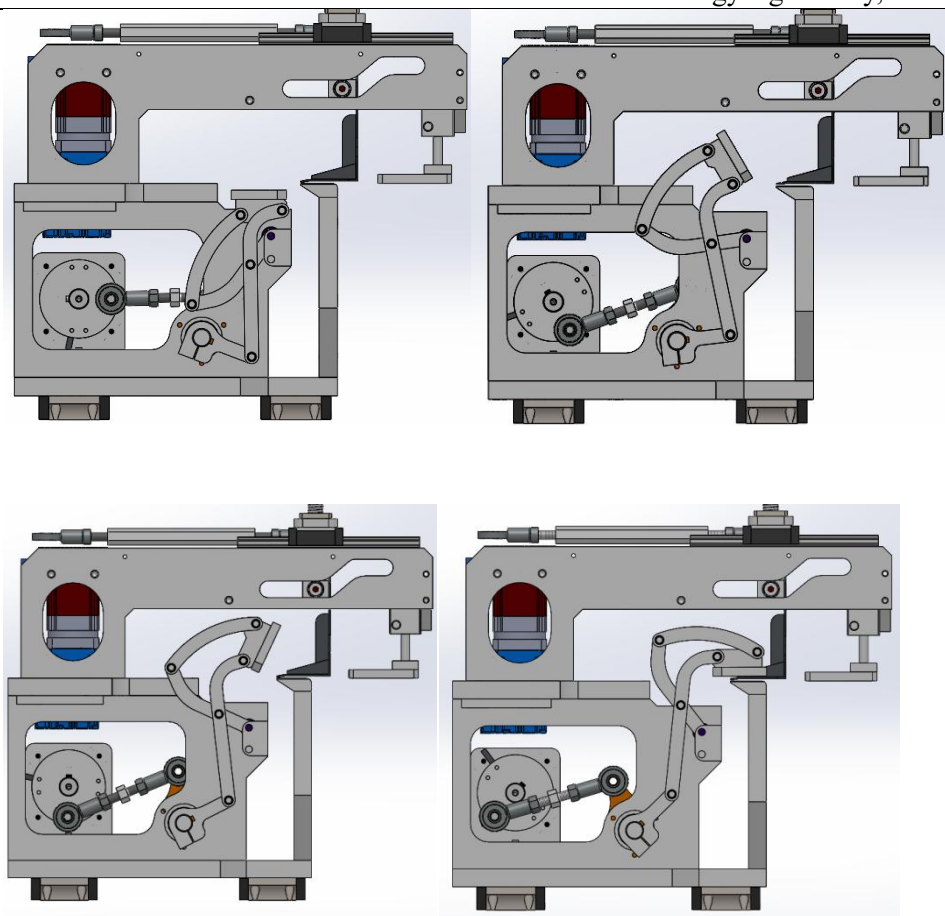


Figure 2.18 Arm motion trajectory

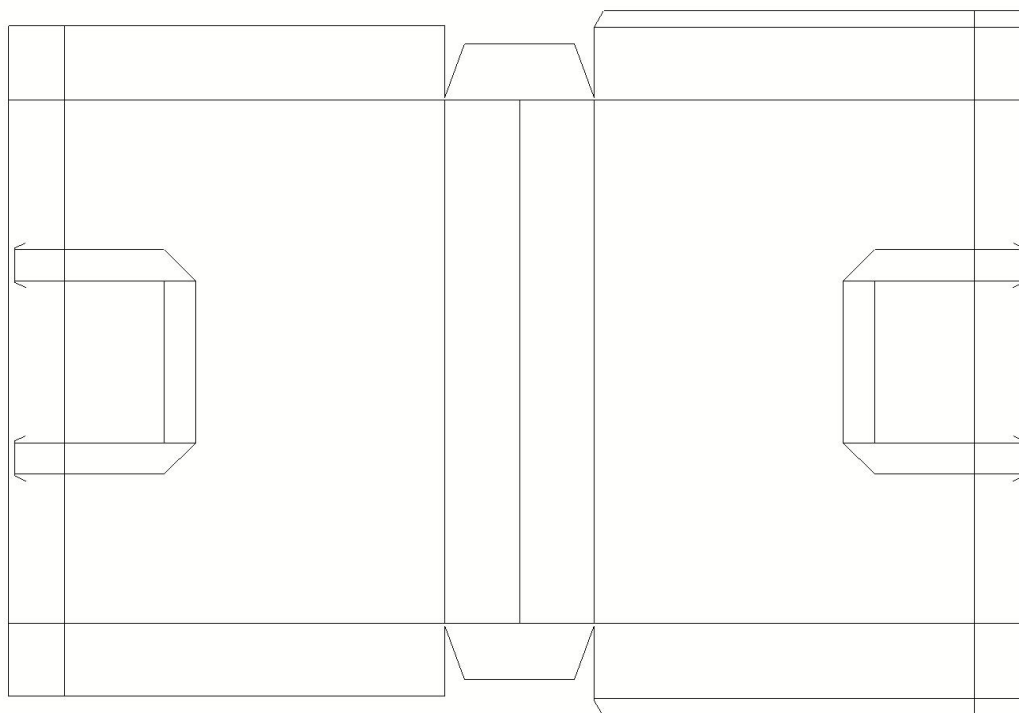


Figure 2.19 Paper bag process status (bag opening flange assembly)




Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

Debugging Procedure: Adjust the locking screw on pressure plate (1) to achieve a secure grip on the paper without detachment. Set the height of the inner lining plate and adjust the screw at motor (10) to ensure the inner lining plate (3) precisely aligns with the flip plate (4) when the cam descends to its lowest position, with both outer edges perfectly aligned. Finally, adjust the screw at rotary motor (11) to complete one full rotation of the motor, which corresponds to one working cycle of the flip plate (1/3 rotation pressing against the work surface, followed by 2/3 rotation retracting to its original position).

2.8. Material Grabber

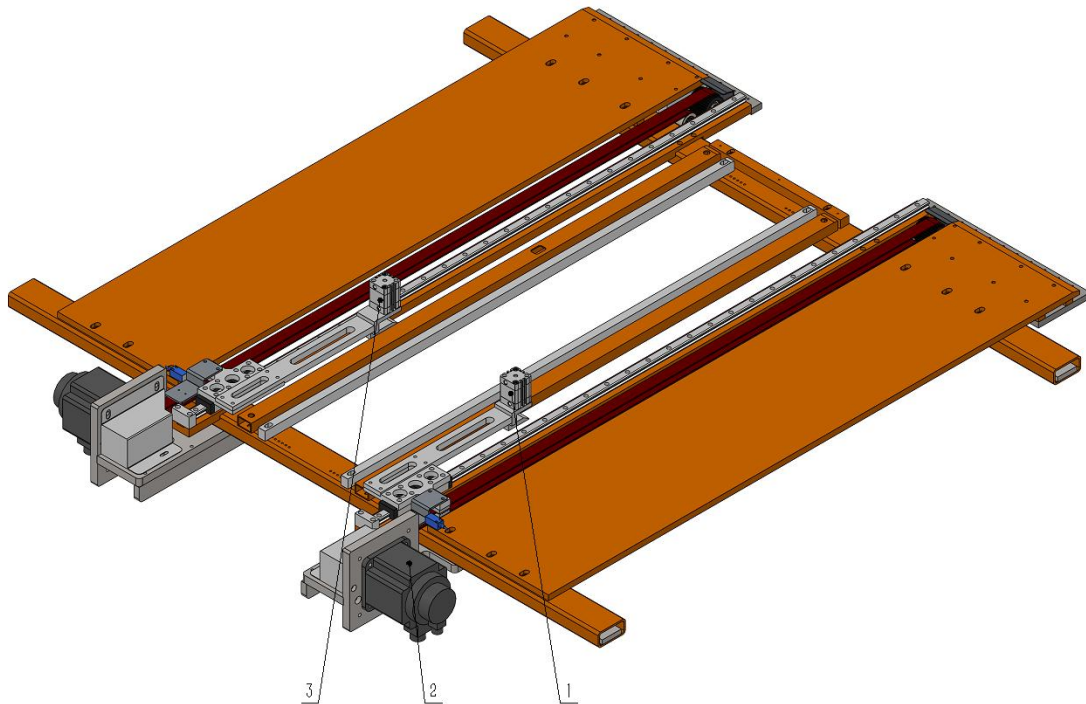

1-right claw, 2-forming drawing motor, 3-left claw


Figure 2.20 Material Grab Assembly

The paper grab component is used to move the paper. The motor (2) drives the cylinder to the flipper to grab the paper. The brush cylinder below the mold is retracted to prevent the glue from being wiped off when the paper is moved to the bottom of the mold.

Debugging process: Set the movement range of the left and right claws to ensure that the left claw (3) does not touch the glue when picking up the paper.

2.9. Lifting mold assembly

2.9.1. elevating

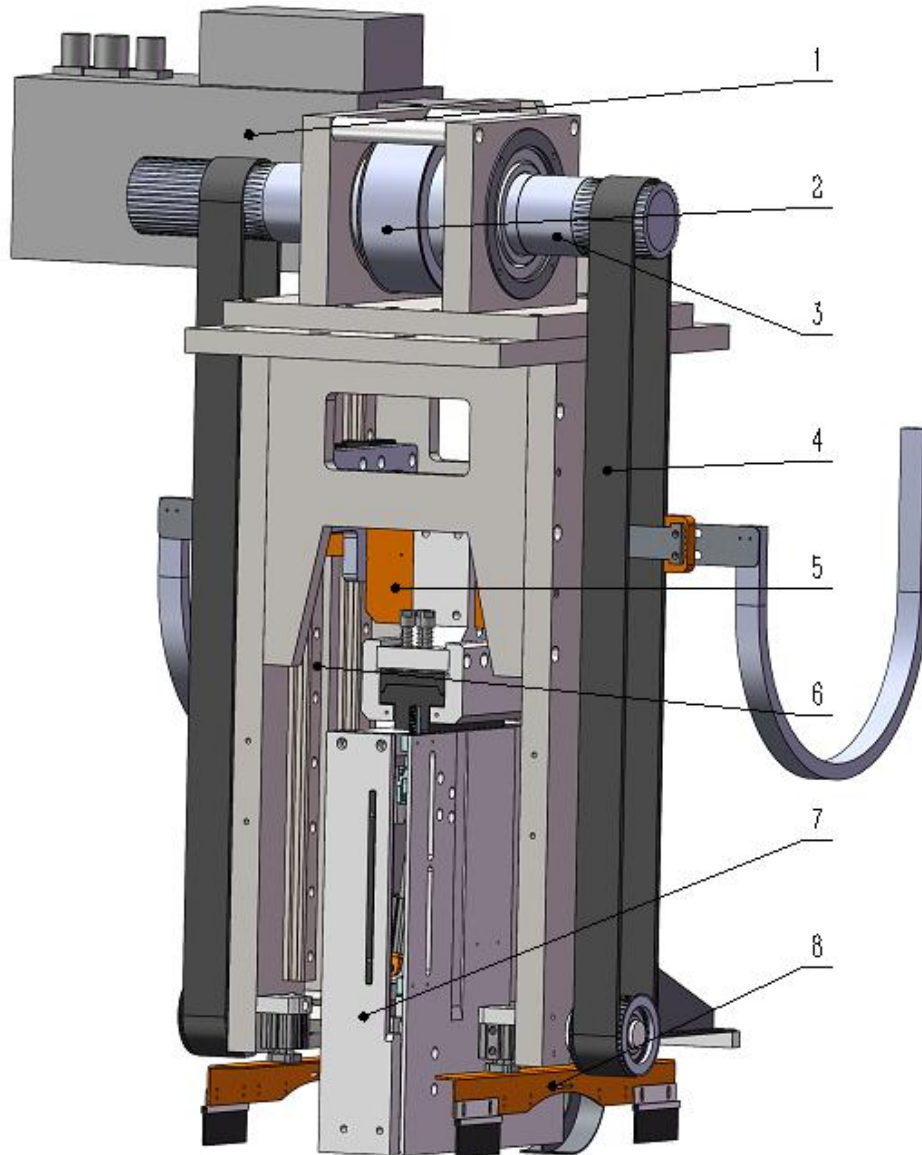

1-14KW lifting servo motor, 2-80×960 synchronous belt, 3-drive shaft
 4-8M synchronous belt 60×2056, 5-die lifting plate, 6-guide rail, 8-brush


Figure 2.21 Lifting mechanism

The lifting mold assembly is used for mold lifting. The motor (1) transmits kinetic energy by synchronous belt (2) and synchronous wheel shaft (3), drives the synchronous belt (4) on both sides to rotate, and pulls the mold lifting plate (5) to move along the guide rail (6), so as to realize the lifting of mold (7).

Debugging process: Adjust the height of the mold photoelectric to achieve the bottom of the mold 10mm away from the table. According to the paper size, determine whether the brush should be installed on the inside or outside, and whether the hole should be on the top or the bottom. The basis is whether it will rub

the glue.

2.9.2. Mold function

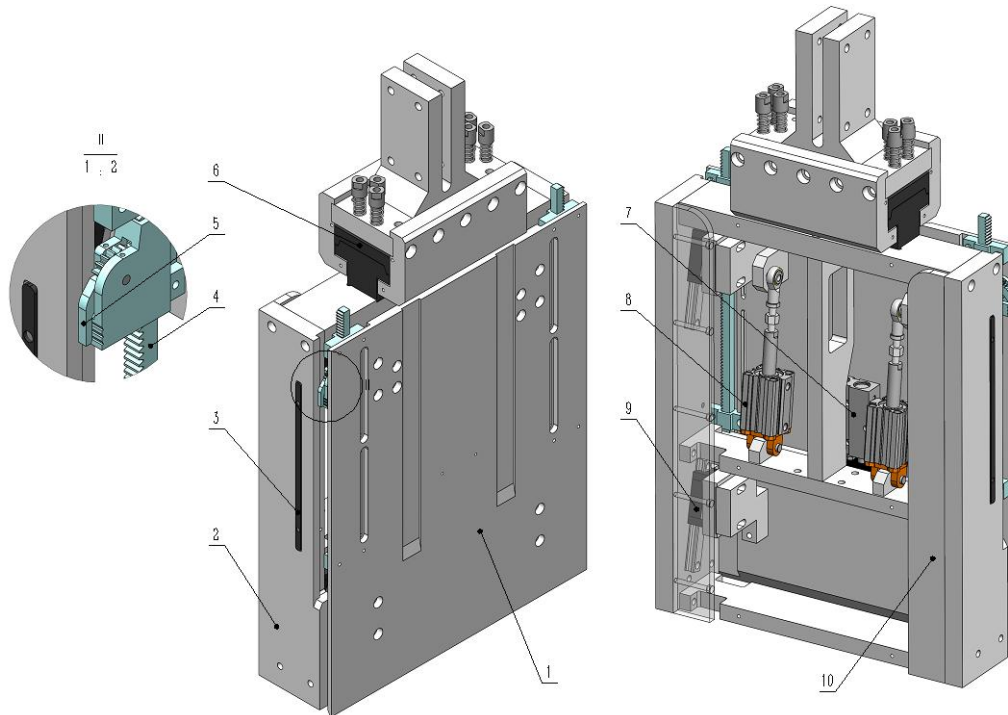

1-Panel, 2-Side panel, 3-Press strip, 4-Rack, 5-Gear clamp

6-Upper Press Plate, 7-Panel Cylinder, 8-Clamping Cylinder, 9-Guide Rail, 10-Bag Release Plate

Figure 2.22 Mold structure

Creating a high-low opening: After the side insertion is completed, cylinder (7) drives the two side racks (4) to move up and down, and the gear gripper (5) closes to clamp the bag opening. Cylinder (8) drives the panel to move down along the guide rail (9) and close inward, creating a high-low opening, as shown in Figure 2.22.

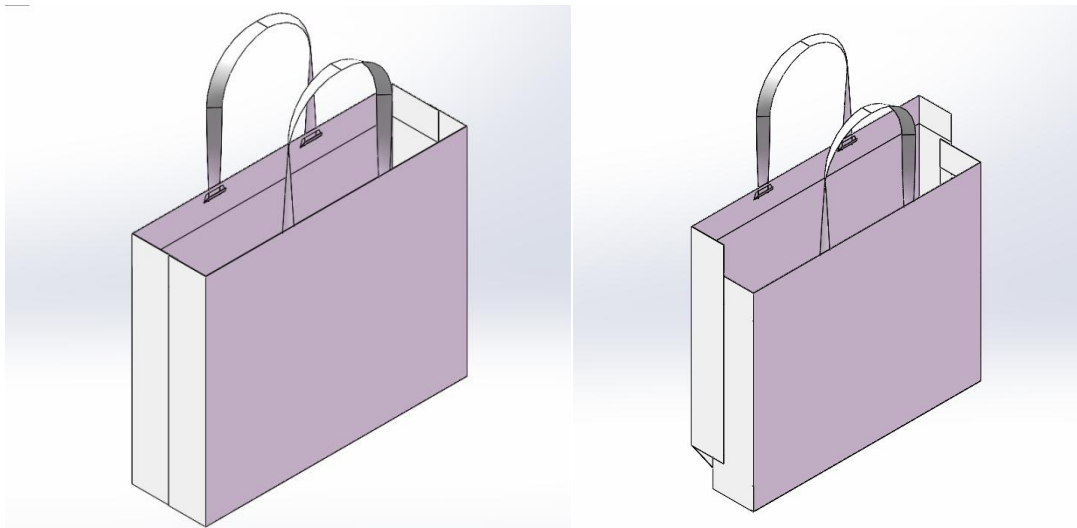


Figure 2.23 High and low bag openings

Side pocket edge: The cylinder (8) drives the panel to move upward along the guide rail, and the fold at the panel (1) is pressed by the spring strip (3), which helps the fold at the panel to be inserted into the fold on the other side.


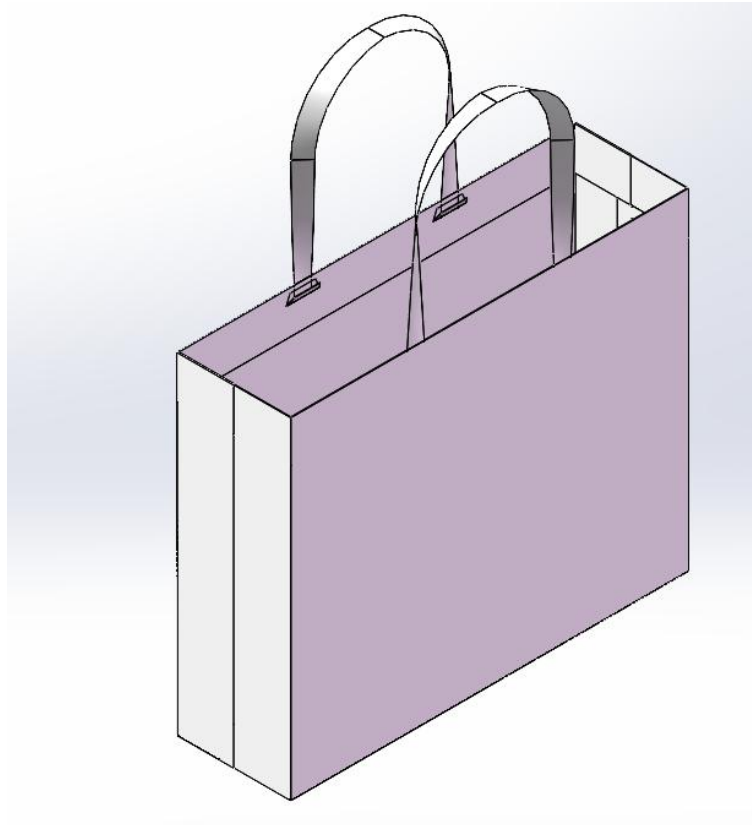


Figure 2.24 Side bag edge binding

Debugging process:

1. Adjust the position of the gear jaw on the rack, and ensure that the jaw can close and clamp the bag opening according to the height of the bag;
2. Adjust the screw rod at the panel cylinder (7) to achieve the effect that the fold of the panel is lower than the fold of the other side when it is retracted;
3. When changing the specification, loosen the four top screws of the upper pressure plate, push out the mold, change the target specification and lock it. Note that there are 6 O-ring seals at the bottom of the lower pressure plate, do not lose them.

2.10. Base component

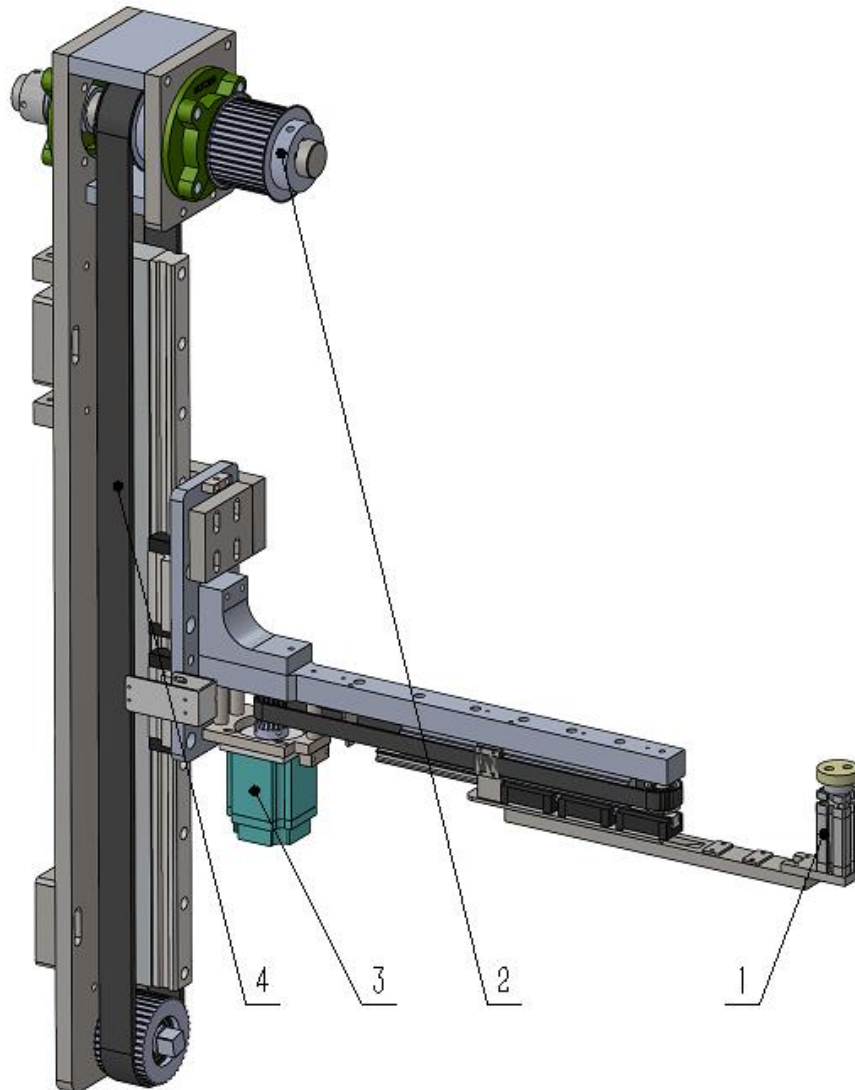

1-bottom support cylinder, 2-synchronizer wheel, 3-bottom support advance and retreat motor, 4-synchronizer belt


Figure 2.25 Base support assembly

The base support assembly is designed to securely hold the bag bottom, preventing gaps between the bag and mold base when the mold presses down. Connected via a timing belt, the base support synchronizes with the mold's vertical movement through its lifting drive shaft and timing pulley (2). When the mold presses down the paper, the base support's advance/retreat motor (3) drives the cylinder (1) along the guide rail to precisely position it beneath the mold. As the cylinder extends, it lifts and supports the bag bottom, effectively eliminating any clearance between the bag and mold base.

Debugging process: Adjust the top screw of the vertical mounting plate to ensure that there is no gap when the bottom support cylinder extends to press the bag.

2.11. Bottom Insert Component

2.11.1. Function Overview

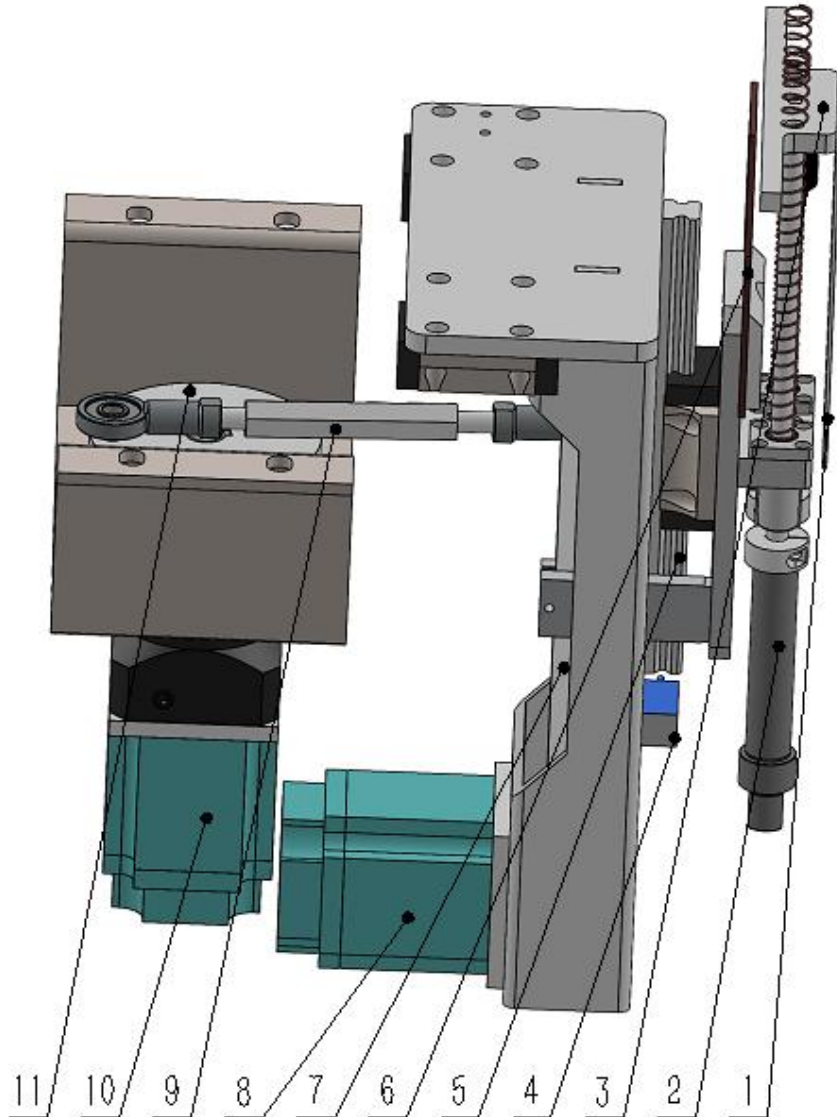

1-spring seat auxiliary plate, 2-lift cylinder, 3-spring seat, 4-proximity switch, 5-guide rail, 6-bottom insert plate, 7-synchronous belt

8-lift motor, 9-link rod, 10-forward/reverse motor, 11-excentric wheel

Figure 2.26 Bottom insert assembly

Bottom Edge Folding: The bottom insertion assembly controls the bottom insertion plate to fold the paper's bottom edge, as shown in Figure 2.17. Before the mold presses down the material, the lifting motor (8) drives the synchronous belt (7), causing the spring seat (3) and bottom insertion plate (6) to move upward along the guide rail (2). Simultaneously, the advance/retreat motor (10) drives the eccentric wheel (11) and

connecting rod (9), positioning the bottom insertion plate to approach the mold along the guide rail until it is 1.5-2mm away from the mold. This ensures the bottom insertion plate won't puncture the paper during the mold's downward press.

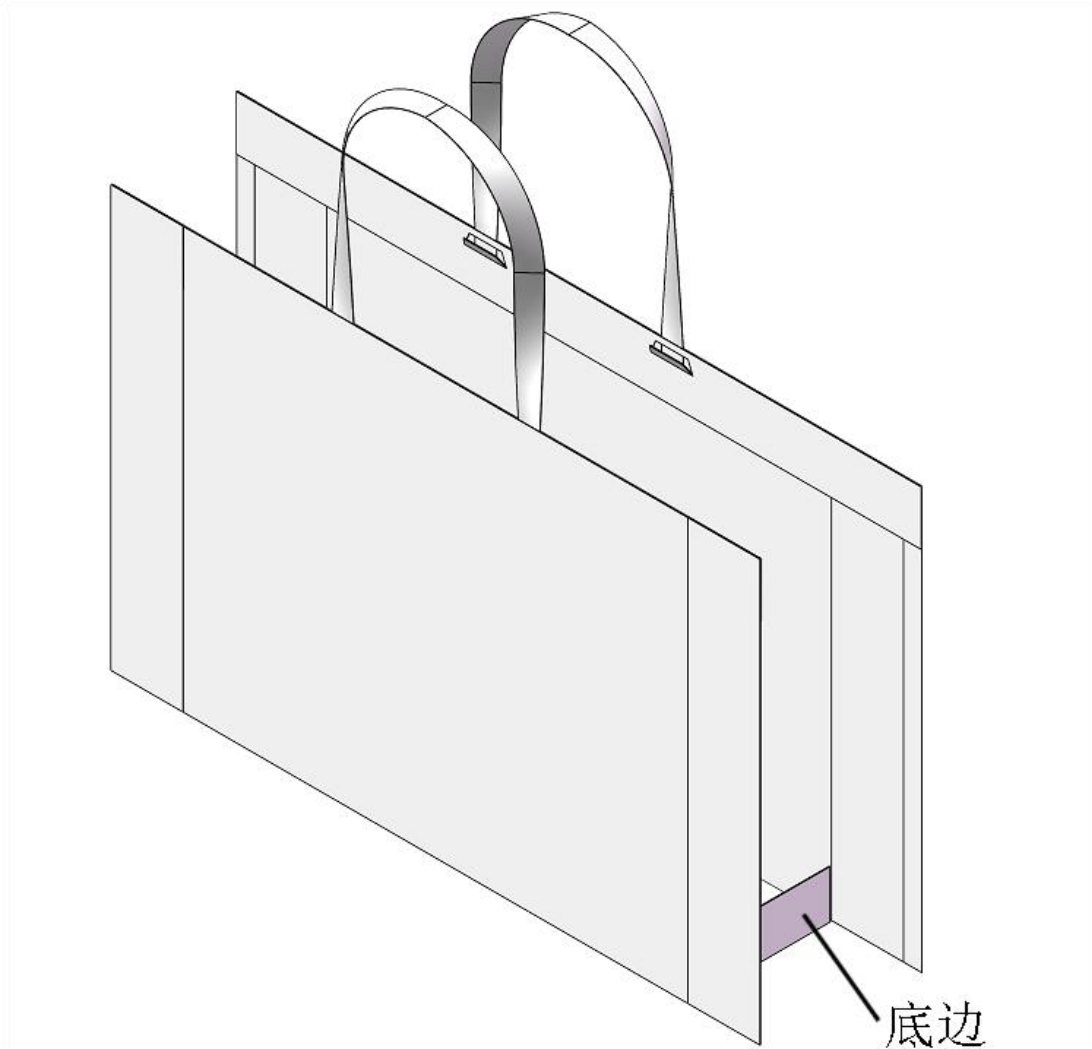


Figure 2.27 Paper bag process status (bottom insert)


Bag bottom support: Prevents gaps between the bag bottom and mold bottom when the mold is pressed down. When the mold is pressed down, the spring seat (3) repeatedly extends and retracts to support the bag bottom, eliminating the gap between the bag and the mold bottom.

Debugging process:

1. Confirm the specifications of the bottom insert plate (6): The width of the bottom insert plate is 3~5mm narrower than the side width of the mold. For example, if the side width of the mold is 110mm, the width of the bottom insert plate is 105mm.

2. Bottom insert adjustment: Adjust the origin position of the bottom insert. Ensure the bottom insert plate maintains a 1-2mm gap with the mold side plate after completing its full travel upward and forward.

2.12. Side Panel

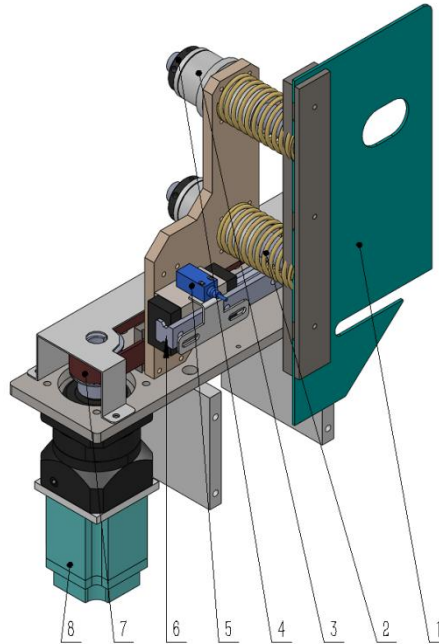


1-left side plug plate, 2-spring, 3-shaft sleeve, 4-locking wheel, 5-proximity switch

6-Guide rail 25×260 mm, 7-5M synchronous belt 25×690 mm, 8-Servo motor 750W

Figure 2.28 Side-inserted component

The side-insertion mechanism folds the paper bag's edge. When the base-insertion mechanism withdraws, motor (8) drives the synchronous belt (7), which moves the side-insertion plate (1) along the guide rail toward the mold. This action folds the paper edge toward the mold side. The gap between the side-insertion plate and the mold side plate is maintained at 1mm. By rotating the locking wheel, the spring compression can be adjusted to control the gap between the side-insertion plate and the mold side plate.

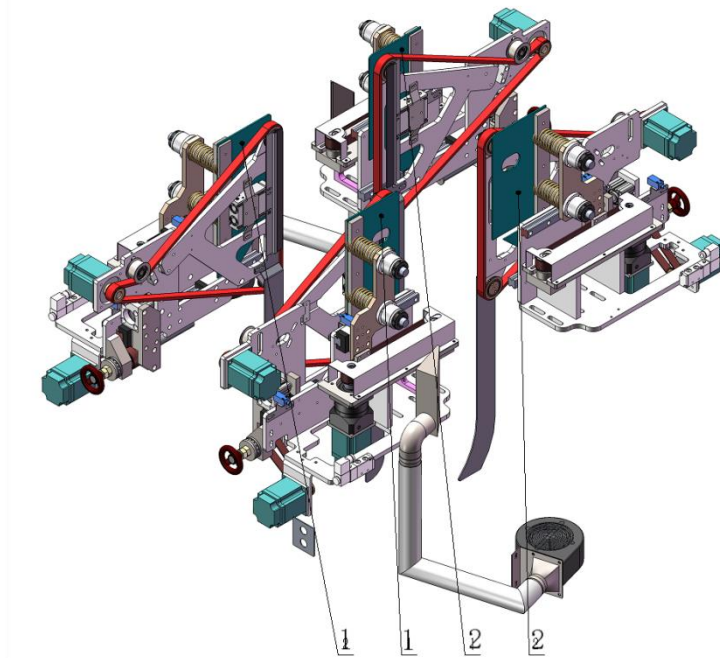

1-Side Insert 1, 2-Side Insert 2

Figure 2.29 Total Side Insert Component (Facing the Home Screen Direction)

The side insert 1 plate enters first, followed by the side insert 2 plate, as the side fold at the movable mold plate requires alignment with the opposite side fold. At this stage, the paper bag is nearly complete, requiring only the next step of applying adhesive to the seam with the push seat assembly. The paper bag's process status is shown in Figure 2.21.


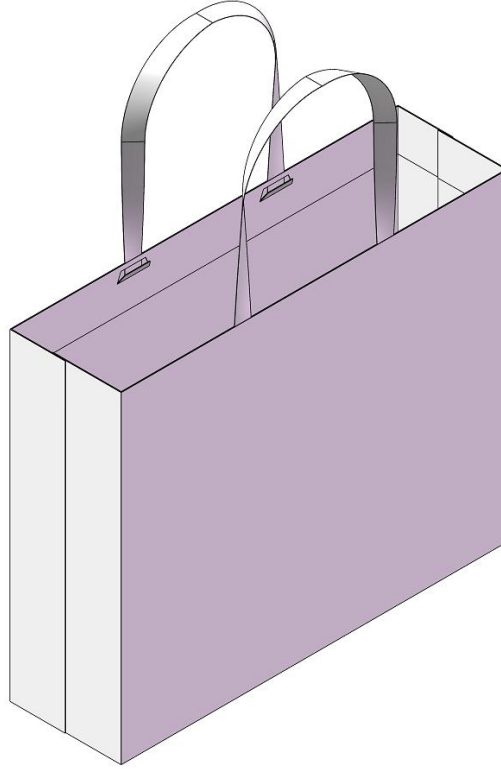


Figure 2.30 Paper bag process status (side insert)

Debugging process:

1. Install the side insert plate: The outer edge of the side insert plate should align with the mounting plate's edge, while the inner edge remains parallel to the mold's bag-release plate. The lower edge should be positioned 1-2mm below the bottom component.
2. Adjust the relative position between the side insert plate and the mold: Tighten the locking wheel to control the outward movement of the side insert plate, so that the distance between the side insert plate and the bottom insert (at this time the bottom insert is in contact with the mold) is 1mm.

2.13. Push Button

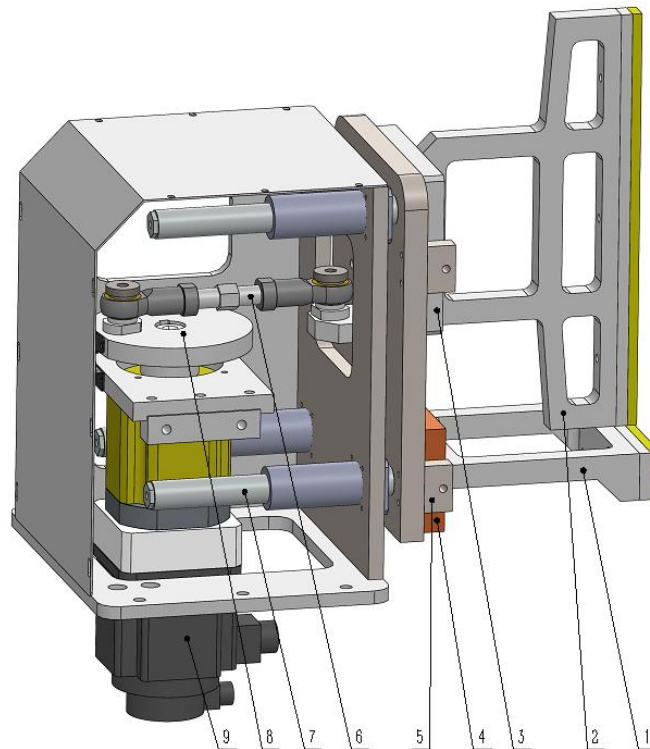


1-lower pressure plate, 2-upper pressure plate, 3-upper pressure plate mounting bracket, 4-lower ultrasonic plate
 5-Base, 6-Connecting rod, 7-Guide rod, 8-Eccentric wheel, 9-Advance/Retreat motor

Figure 2.31: Left side heat-sealing assembly (facing the main screen)

The push assembly applies adhesive to the paper bag seams. When the four side inserts reach their target positions, the bottom insert assembly synchronously retreats and descends. The advance-retreat motor (9) drives the upper and lower pressing plates (2 and 1) through the eccentric wheel (8) and connecting rod (6), pressing the pre-applied adhesive seams against the mold side plates. This completes the formation process for a three-dimensional paper bag.

Debugging process: Adjust the top seat of the upper pressure plate to ensure it is in the middle of the side plate of the mold; adjust the length of the two sides of the screw to achieve the same maximum stroke of the two sides of the push seat.


2.14. Unbag component

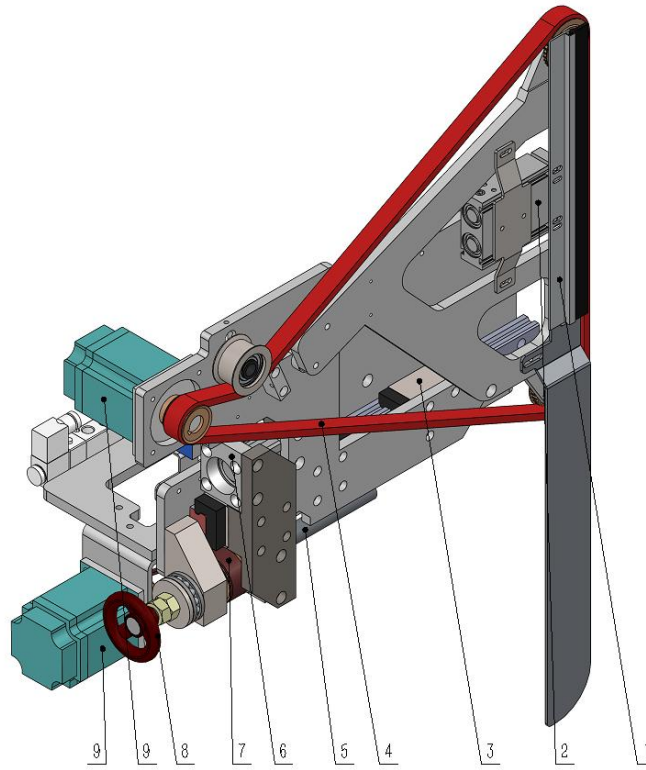

1-brush, 2-cylinder, 3-guide rail 25×460, 4-synchronous belt 20×1685 (thickened)

5-Ball screw, 6-Cylinder STA40×5, 7-5M synchronous belt 20×415, 8-Handwheel, 9-Motor 750W

Figure 2.32 Bag removal assembly

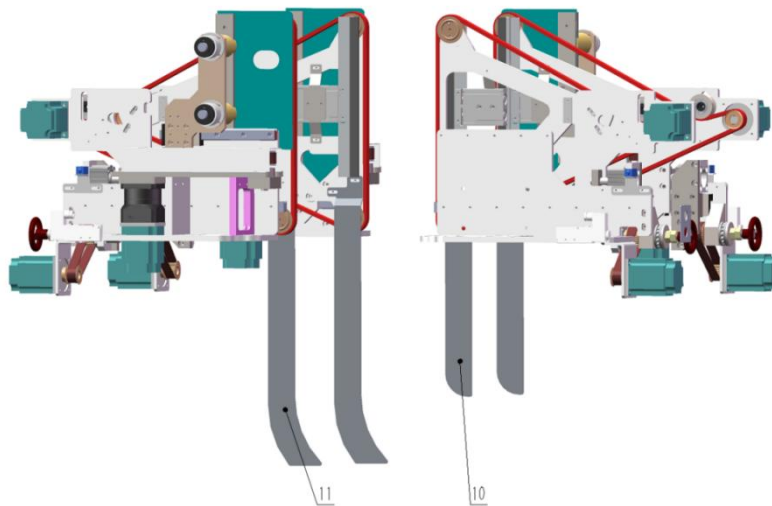

1-Straight guard plate, 2-L-shaped guard plate

Figure 2.33 Total bag removal assembly

Paper alignment: The lower motor (9) drives the bag removal assembly along the guide rail (3) to the working position, 3mm away from the mold bag removal plate. The cylinder (2) drives the brush (1) to extend

and adhere to the bag removal plate. When the mold presses down the fabric, the four brushes align the paper to prevent it from bursting.

Paper Bag Detachment: After the paper bag is formed, cylinder (2) retracts the brush (1). The lower motor (9) drives the ball screw (5) via the synchronous belt (7), causing the belt (4) to advance 3mm. Cylinder (6) then applies increased pressure between the belt and the bag-removal plate. Simultaneously, the upper motor (9) rotates the belt, effectively detaching the paper bag.

Control the drop direction of the paper bag: After being dropped by the bag removal assembly, the paper bag drops along the straight guard plate (10) and L-shaped guard plate (11), so that the bottom of the paper bag is facing the main screen.

Debugging process:



order number	name	function
1	Tap	To debug the bag removal process, click 'Remove Bag' (move closer to the mold)
2	Tap to exit	Debug unbagging by clicking Unbag

1. Adjusting the bag discharge angle: Align the discharge belt with the mold's discharge plate, then adjust

the belt's mounting plate angle to maintain a 0.5-1mm gap above and ensure proper alignment with the mold's belt.


2. Bag-removal photoelectric adjustment: Move the bag-removal proximity switch to the outermost position, press the button on the host screen to extend the four bag-removal units outward by 70mm, and adjust the proximity switch until it illuminates properly.

3. Bag-removal brush adjustment: Access the bag-removal module. Advance the screw rod inward by 67mm until the brush contacts the plate snugly without deformation.

4. Adjustment of the bag removal and retraction cylinder: The bag removal and retraction cylinder should extend and retract smoothly without resistance, which can be achieved by adjusting the speed valve.

2.15. Bump machine

2.15.1. Conveyor Assembly

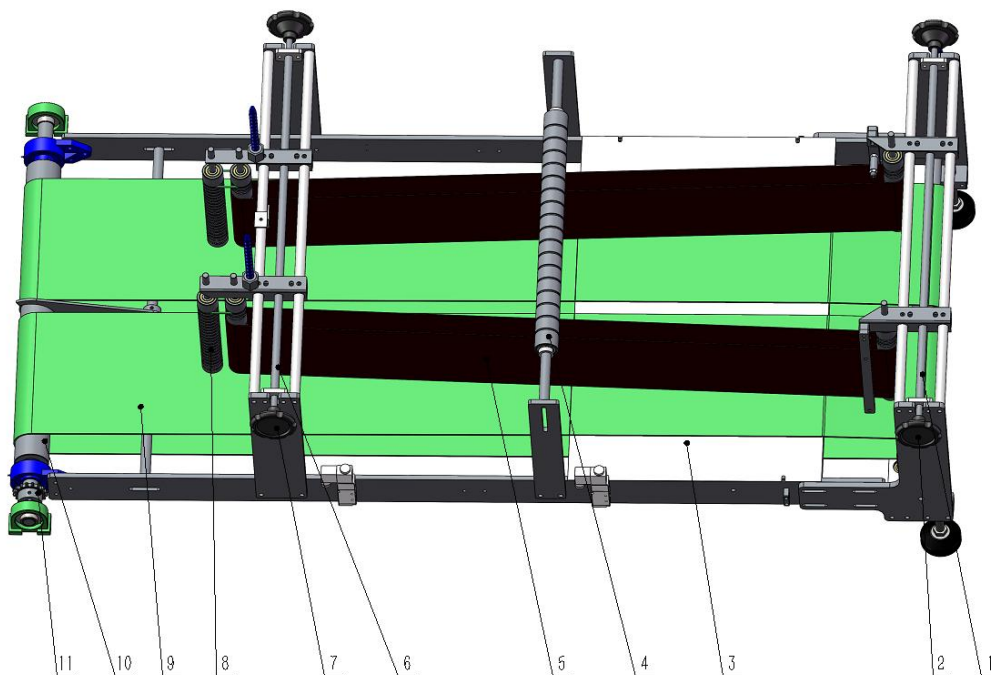

1-handwheel, 2-import adjustment screw, 3-support plate, 4-spring roller, 5-tension band

6-Export adjustment screw, 7-Handwheel, 8-Spring roller, 9-Conveyor belt, 10-Conveyor roller, 11-Chain wheel

Figure 2.34 Conveying platform assembly


Paper Bag Handling and Conveying: The conveyor platform assembly is positioned beneath the mold. When the central position of pallet (3) aligns with the main machine frame, a chain transfers kinetic energy from the bag folding machine to conveyor roller (10), driving belt (9) rotation. A tension spring then transmits this energy to spring roller (8), which rotates side tension belt (5). Finally, another tension spring transfers the

kinetic energy to spring roller (4).

The inlet is adjusted by turning the screw (2) with the handwheel (1) to regulate the opening size, and the outlet is also adjusted by turning the screw (6) with the handwheel (7) to regulate the opening size. The inlet is slightly wider than the bag, and the outlet is equal to the bag width. The bag falling off the mold drops on the conveyor table, and is conveyed to the bag folding assembly.

2.15.2. Bump pack component

2.15.2.1. Import Adjustment Agency

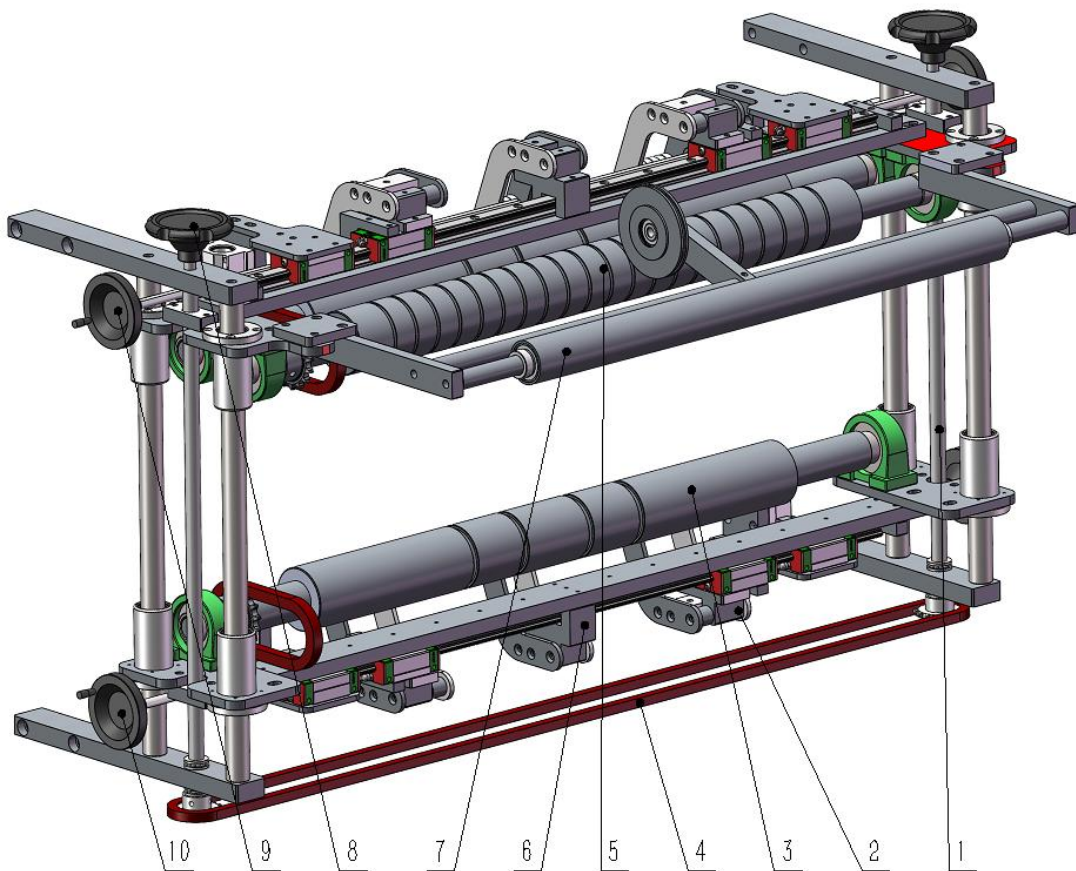

1-screw, 2-wide pressure wheel, 3-bottom conveyor roller, 4-chain, 5-top conveyor roller

6-Pressing Wheel (Narrow), 7-Spring Roller, 8-Import Split-And-Fuse Handle, 9-Handwheel 1, 10-Handwheel 2


Figure 2.35 Import adjustment mechanism

Bag receiving mechanism: The spring roller (8) is connected to the upper conveyor roller (6) via a tension spring (10), suspended above the conveyor platform assembly. The lower conveyor roller (3) is linked to the platform's conveyor rollers through a chain. By rotating the handle (10), the screw rod (1) drives the upper and lower shafts to engage or disengage, thereby adjusting the inlet height—the vertical distance between the upper conveyor roller (6) and the lower conveyor roller (3). This height adjustment accommodates bags of

varying side widths, ensuring the inlet height matches the bag's side width.

Adjusting belt spacing: The pressure wheel is used to tighten the six belts on the front of the bag. The narrow pressure wheel (7) is always kept in the middle. Turn the handle (9) and (10), and the screw drives the wide pressure wheel (2) on both sides to open and close, so as to adapt to different widths of the bag.

2.15.2.2. Width adjustment mechanism

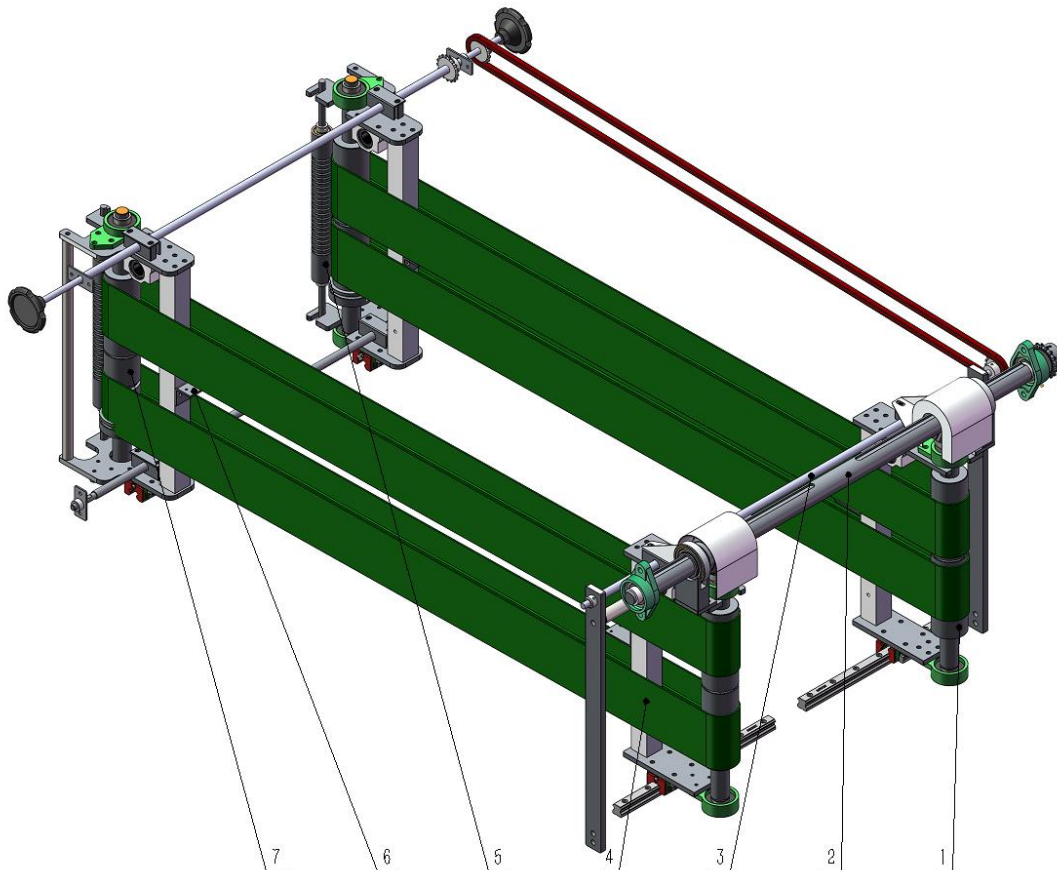


1-Front roller, 2-Drive shaft, 3-Screw, 4-Belt, 5-Spring roller, 6-Insert plate support frame, 7-Rear roller

Figure 2.36 Side width adjustment mechanism

Bag Conveying System: The motor drives the drive shaft (2), which rotates the belts (4) on the front roller (1) and rear roller (7). The bags are conveyed and positioned by the side belts. A PU ring belt connects the rear roller to the spring roller (5), while a tension spring links the spring roller to the conveyor platform, transmitting kinetic energy.

Side width adjustment: Rotate the screw (3) on the handle to adjust the spacing between the two front rollers. The kinetic energy is transmitted through the chain to adjust the spacing between the two rear rollers, adapting to bags of different widths. The inlet and outlet widths of the side width adjustment mechanism are identical, equal to the bag's width.

2.15.2.3. Side-in mechanism

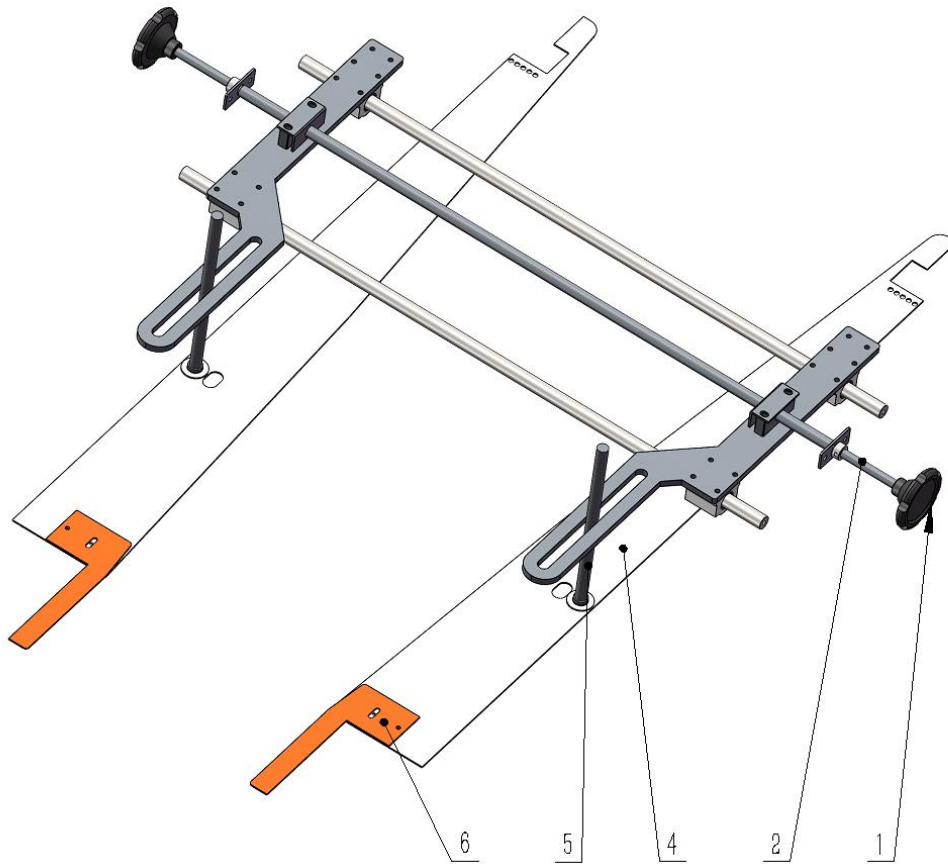


1-handwheel, 2-screw, 4-side insert plate, 5-screw, 6-side insert auxiliary plate

Figure 2.37 Side insertion mechanism

Side folding: The side insert plate (4) is located between the upper and lower belts of the side width adjustment mechanism and between the front conveyor belt. When the bag passes through the front and side conveyor belts, the side of the paper bag is attached to the side insert plate on both sides and folded along the midline.

1. The spacing between side panels equals the bag's main width minus its side width. Pro tip: Set the side panel spacing slightly smaller to allow the main mechanism to create a fabric bag that locks into place, then adjust the spacing until the fabric bag barely gets stuck.

2.16. M-base component

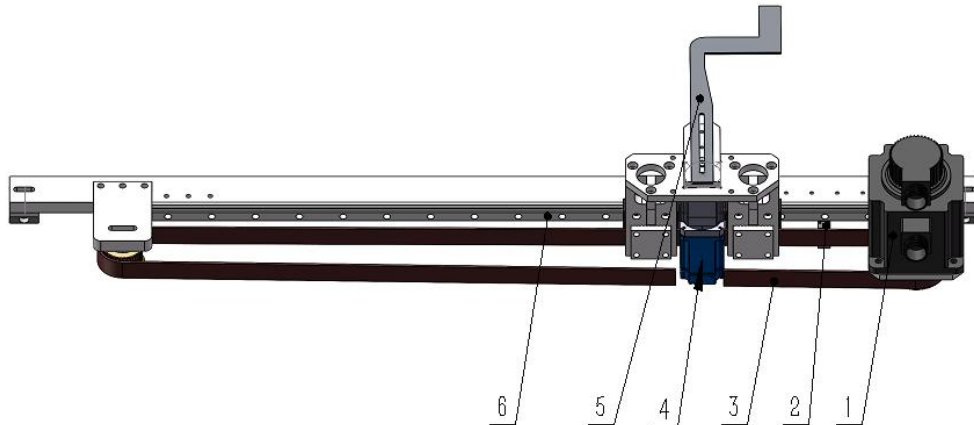

1-motor, 2-proximity switch, 3-synch belt, 4-rotor motor, 5-base hook, 6-guide rail

Figure 2.38: Right M Bottom (Facing the discharge direction)

A pair of M-base components are positioned at both ends of the folding bag machine. The base hook is slightly lower than the side insertion plate of the side insertion mechanism. The M-base origin is located near the machine's inlet, where a photoelectric sensor detects bag entry.

The M-bottom assembly is responsible for forming the M-bottom. When the photoelectric sensor detects the paper bag entering the folding machine, motor (1) drives the bottom hook (5) via synchronous belt (3) from the origin (2). The bottom hook moves a distance ($M\text{-bottom speed} < \text{folding machine belt speed}$) following the paper bag while simultaneously securing its side with the side-insert mechanism. After forming the M-bottom, motor (4) rapidly rotates the bottom hook outward to return to the origin, awaiting the next bag while simultaneously retracting inward.

2.17. Bagger

2.17.1. Belt and roller mechanism


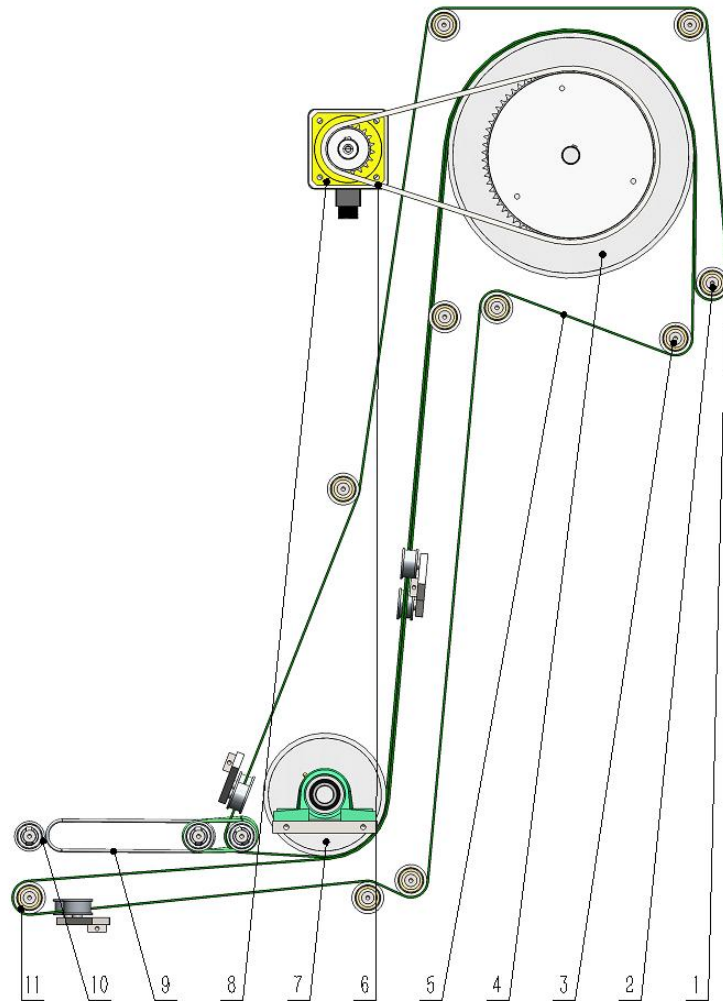


Figure 2.39 Belt roller mechanism

The system maintains fold pressure through motor (8) driving chain (6), which rotates the large roller (4) to drive both upper belt (1) and lower belt (5) in rotation. The fabric bag enters through the upper input shaft (10) and lower input shaft (11), undergoes compression via the large roller and small roller (7), then exits through the upper output shaft (2) and lower output shaft (3). After the folding assembly completes processing, the paper bag maintains optimal compression effectiveness through pressure retention.

2.17.2. Baggage authority

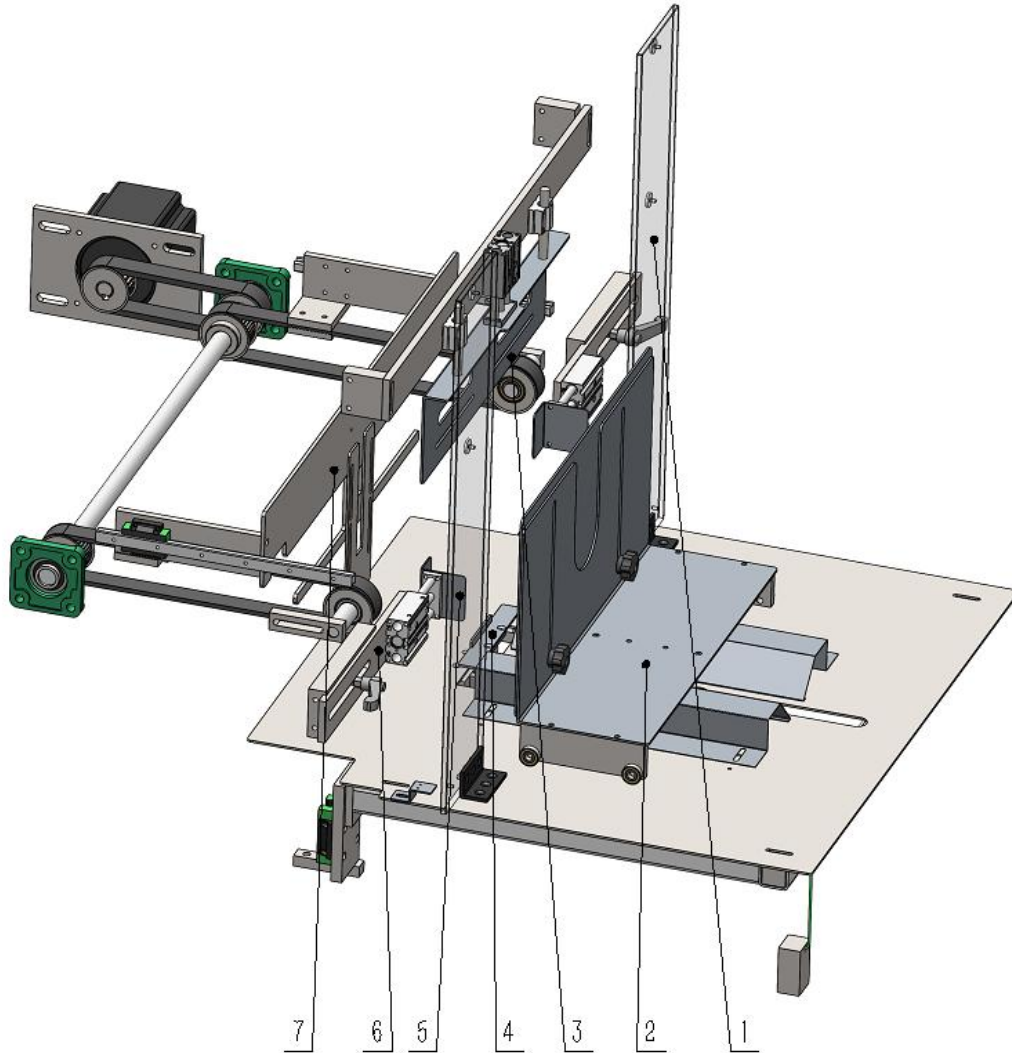

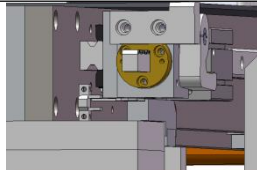
1-Safety Panel, 2-Front Panel, 3-Insert Bag Panel, 4-Lower Panel, 5-Clap Bag Panel, 6-Clap Bag Adjustment Panel, 7-Push Panel



Figure 2.40 Bag handling mechanism

Bag Sorting Mechanism: Before bags enter the sorting zone, the insertion plate (3), left/right bag flaps (5), and lower barrier (4) retract. The push plate (7) then drives the paper bags into the sorting zone, where the number of bags corresponds to the push plate's operational cycles. When the push plate exits the zone, the upper barrier extends to block the bag's front end; the flaps extend to secure and straighten the bag's body; and the lower barrier blocks the rear end. The front barrier (2) advances progressively through the addition of bottom gravity blocks and a corresponding increase in bag quantity, adapting to the growing number of bags in the sorting zone.

When the bag sorting machine is working, the safety plate (1) needs to be closed, otherwise the bag sorting machine will not work.

3. Signal element installation and debugging instructions

Component Name	Component Features	power of motor		Transmission ratio	Signal element	Install image	method of erection
Feeder Paper Feeder	form advance		1.8KW	1: 10	Origin (Slot-type Photoelectric)		
					Feed Photoelectric 442		The sensing surface faces up and is parallel to the paper surface. Adjust the sensing distance from the paper.
					Front panel control (slot-type photoelectric)		The induction seat is located in the middle of the slot photoelectric

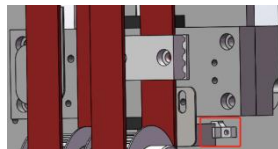

Top card component	Main stage lift	the left side	0.4KW	1; 10-speed reducer 5M30 gear: 35 teeth/8M25 gear	Origin (Slot-type Photoelectric)		The induction seat is located in the middle of the slot photoelectric
					Upper limit (slot-type photoelectric)		The induction seat is located in the middle of the slot







Zhejiang Ounuo Machinery Co.Ltd


Zhejiang Allwell Intelligent Technology Co.,Ltd



Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China



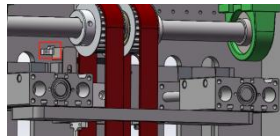
							photoelectric
		right	0.4KW	1; 10-speed reducer with 5M30 gear (35 teeth/8M25 gear)	Origin (Slot-type Photoelectric)		The induction seat is located in the middle of the slot photoelectric
					Upper limit (slot-type photoelectric)		The induction seat is located in the middle of the slot photoelectric
	Lower the assistant	the left side	0.4KW	1; 10-speed reducer 5M30 gear: 35 teeth/8M25 gear	Origin (Slot-type Photoelectric)		The sensor is located in the trough photoelectric intermediate
					Upper limit (slot-type photoelectric)		The induction seat is located in the middle of the slot photoelectric
		right	0.4KW	1; 10-speed reducer with 5M30 gear (35 teeth/8M25 gear)	Origin (Slot-type Photoelectric)		
					Upper limit (slot photoelectric)		

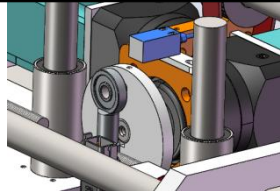
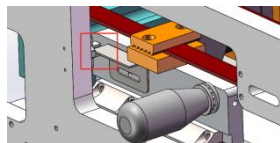
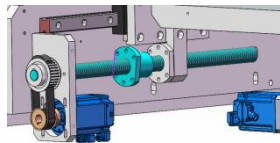
	Remove head card	the left side	1.0KW	1; 5 Reducer Eccentric wheel	Origin (near photoelectric)		The proximity switch is 1mm away from the bolt.
		right	1.0KW	1; 5 Reducer Eccentric wheel	Origin (near photoelectric)		
	Head card	the left side	1.0KW	1; 5-speed reducer 5M22 gear/35 teeth	Origin (Slot-type Photoelectric)		The induction seat is located in the middle of the slot photoelectric
		right	1.0KW	1; 5-speed reducer 5M22 gear/35 teeth	Origin (Slot-type Photoelectric)		
	Top card in	the left side	0.4KW	5M20 thread/30 thread lead 5	Absolute value (synchronized with the thread)		
		right	0.4KW	5M20 thread/30 thread lead 5	Absolute value (synchronized with the thread)		
					Feeder photoelectric sensor 442		Align the sensor with the outer surface facing outward and parallel to the head clip




							side. Adjust the sensor distance from the head clip side.
					Head-up optical fiber (for two-way communication)		The optical receiver is guaranteed to be on the same line

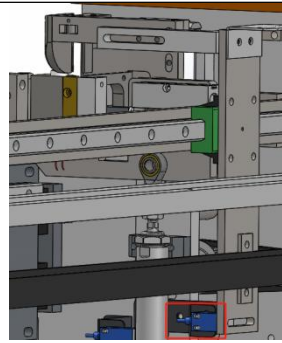
Thread machine parts	Pull strip	the left side	1.0KW	1:3 H-type 18-tooth reducer	Origin (near photoelectric)		The proximity switch is 1mm away from the mounting plate.
		right	1.0KW	1:3 H-type 18-tooth reducer	Origin (near photoelectric)		
	Double-sided material	Left 1	0.4KW	1:20 speed reducer direct coupling	absolute value		
		Left 2	0.4KW	1:20 speed	absolute value		


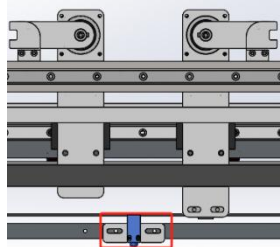
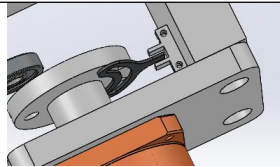
				reducer direct coupling			
		Right 1	0.4KW	1:20 speed reducer direct coupling	absolute value	\	\
		Right 2	0.4KW	1:20 speed reducer direct coupling	absolute value	\	\
	interpolation	the left side	1.0KW	1:3 H-type 13-tooth reducer	Origin (close to photoelectric)		The proximity switch is 1mm away from the push plate.
		right	1.0KW	1:3 H-type 13-tooth reducer	Origin (near photoelectric)		
	Internal promotion and retreat	the left side	1.0KW	1:3 speed reducer eccentric wheel	Origin (Slot-type Photoelectric)		The induction seat is located in the middle of the slot photoelectric
		right	1.0KW	1:3 speed reducer	Origin (Slot-type Photoelectric)		The induction seat is located in the middle of the slot

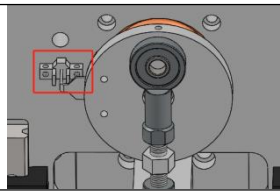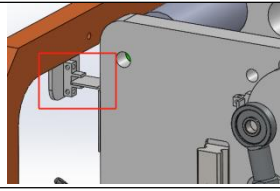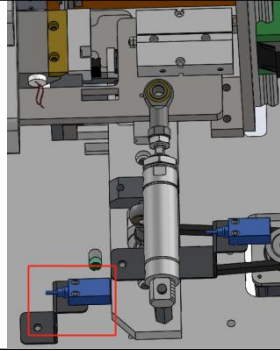				eccentric wheel			photoelectric
	Up and down	the left side	1.0KW	1:3 speed reducer eccentric wheel	Origin (Slot-type Photoelectric)		The induction seat is located in the middle of the slot photoelectric
		right	1.0KW	1:3 speed reducer eccentric wheel	Origin (Slot-type Photoelectric)		
	In and out	the left side	1.0KW	1:3 speed reducer eccentric wheel	Origin (Slot-type Photoelectric)		The induction seat is located in the middle of the slot photoelectric
		right	1.0KW	1:3 speed reducer eccentric wheel	Origin (cavity photoelectric)		
	push-type broach	the left side	57 steps	5M20 thread/30 thread, lead screw pitch 1.5	Origin (near photoelectric)		The proximity switch is 1mm away from the cylinder mounting plate.


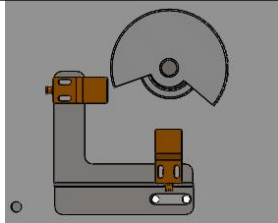
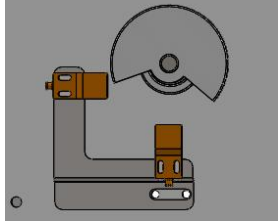

		right	57 steps	5M20 gear/30 gear, lead of 1.5	Discontinuity photoelectric 442		
	Striped	the left side	0.4KW	1; 5 Reducer Direct Coupling Rubber Wheel Diameter 45	Upper limit of arm swinging (near photoelectric) 2		Lower the arm to illuminate the upper proximity switch.
		right	0.4KW	1; 5 reducer direct coupling rubber wheel diameter 45	Lower limit of arm swinging (photoelectric proximity) 2		Raise the arm to illuminate the proximity switch
	Advance and retreat	the left side	0.4KW	5M20 thread/30 thread lead 5	Absolute value (synchronized with the head card's advance and retreat)		
		right	0.4KW	5M20 thread/30 thread lead 5	Absolute value (synchronized with the head card's advance and retreat)		

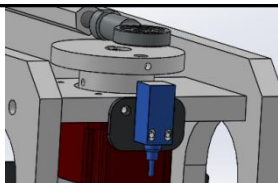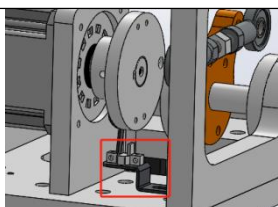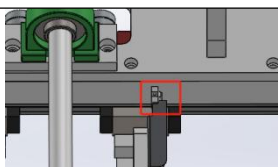Flip component	Inner support plate	the left side	0.4KW	1; 10 speed reducer eccentric wheel	Origin (near photoelectric)		The proximity switch is 1mm away from the bolt.
		right	0.4KW	1; 10 speed reducer eccentric wheel	Origin (near photoelectric)		
	Flip	the left side	1.0KW	1:20 speed reducer eccentric wheel	Origin (Slot-type Photoelectric)		The induction seat is located in the middle of the slot photoelectric
		right	1.0KW	1:20 speed reducer eccentric wheel	Origin (Slot-type Photoelectric)		
Glue parts	Offset Splice		1.0KW	1; 10-speed reducer 5M35 gear	Origin (Slot-type Photoelectric)		The induction seat is located in the middle of the slot photoelectric

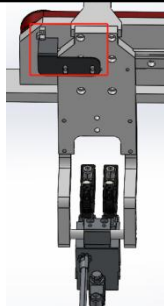	Lateral spray adhesive	front	1.0KW	1; 5-speed reducer 5M35 gear	Origin (Slot-type Photoelectric)		The induction seat is located in the middle of the slot photoelectric
		behind	1.0KW	1; 5 reducer 5M35 tooth	Origin (Slot-type Photoelectric)		

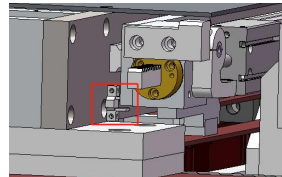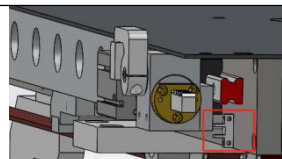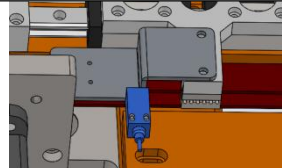Material Clip	Advance feed		1.8KW	8M25 gear	Origin (Slot-type Photoelectric)		When the material clamp reaches the paper feeding position, the sensor base illuminates the trough-shaped photoelectric sensor.
	Transition material		1.8KW	8M25 tooth	Origin (Slot-type Photoelectric)		The induction seat is located in the middle of the slot photoelectric
	Forming feedstock	Left	1.8KW	5M50 tooth	Origin (near photoelectric)		The proximity switch is 1mm away from the induction seat

		right	1.8KW	5M50 teeth	Origin (near photoelectric)		
					Supplied Light 442		

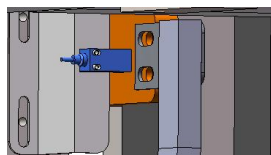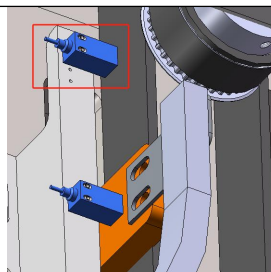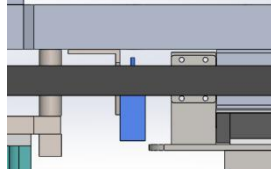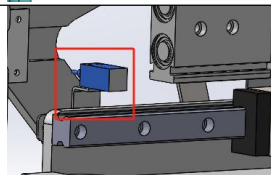shaping	The mold is up		9.5KW	8M32 gear/80 gear to 8M38 gear	Origin (near photoelectric)		The proximity switch is positioned 1mm away from the induction base, while the mold base is 10mm apart from the workbench surface.
					Anti-top (approaching photoelectric)		The proximity switch is 1mm away from the inductive base.
	Bottom slide		0.75KW	5M20 gear	Origin (near photoelectric)		The proximity switch is 1mm away from the inductive base.
	Side-mounted motor	Side 1	0.75KW	1/3 speed reducer 5M30 gear	Origin (near photoelectric)		The proximity switch is 1mm away from the inductive base.
		Side 1	0.75KW	1/3 speed	Origin (near photoelectric)		







Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

			W	reducer 5M30 gear			
		Side 2	0.75K W	1/3 speed reducer 5M30 gear	Origin (near photoelectric)		
		Side 2	0.75K W	1/3 speed reducer 5M30 gear	Origin (near photoelectric)		
	Bag Removal Motor	Before left pocket	0.75K W	5M22 gear	\	\	\
		Before the right sleeve is removed	0.75K W	5M22 gear	\		\
		After left pocket	0.75K W	5M22 gear	\	\	\
		After right pocket removal	0.75K W	5M22 gear	\	\	\

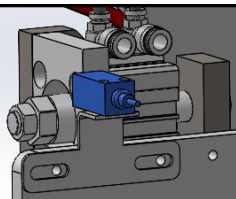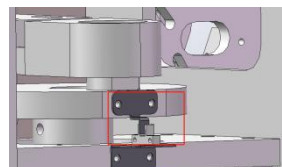	Pull out and retract	Exit 1	0.75KW	5M22 tooth/30 tooth screw lead 5	Origin (near photoelectric)		The proximity switch is 1mm away from the inductive base.
		Advance/Retreat 2	0.75KW	5M22 thread/30 thread, lead of 5	Origin (near photoelectric)		
		Advance/Retreat 3	0.75KW	5M22 thread/30 thread, lead of 5	Origin (near photoelectric)		
		Advance/Retreat 4	0.75KW	5M22 thread/30 thread, lead of 5	Origin (near photoelectric)		
	press fit	Left	1.8KW	1/10 eccentric wheel (originally 1/9.6)	Origin (Slot-type Photoelectric)		The induction seat is located in the middle of the slot photoelectric
		right	1.8KW	1/10 eccentric	Origin (Slot-type Photoelectric)		

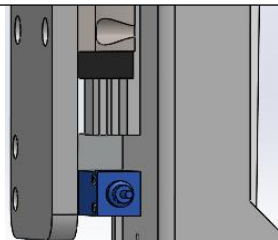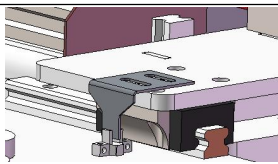				wheel (originally 1/9.6)			
	Insert Top/Bottom	the left side	0.75K W	5M22 gear	Origin (near photoelectric)		The proximity switch is 1mm away from the inductive base.
		right	0.75K W	5M22 tooth	Origin (close to photoelectric)		
	Insert/Remo ve	the left side	0.75K W	1/5 speed reducer eccentric wheel	Origin (Slot-type Photoelectric)		The induction seat is located in the middle of the slot photoelectric
		right	0.75K W	1/5 speed reducer eccentric wheel	Origin (Slot-type Photoelectric)		
	Large board entry/exit	the left side	0.75K W	1/5 reducer screw lead 5	absolute value	\	\
		right	0.75K W	1/5 reducer screw lead 5	absolute value	\	\
	Large plate	Left 1	0.4KW	1/50 speed	moment	\	\



Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

	lock			reduction direct coupling			
		Left 2	0.4KW	1/50 speed reduction direct coupling	moment	\	\
		Right 1	0.4KW	1/50 speed reduction direct coupling	moment	\	\
		Right 2	0.4KW	1/50 speed reduction direct coupling	moment	\	\

4. Control Panel Parameters

4.1. Feeder Control Interface



order number	name	function
1	Paper tray elevation/depression	Control the Fida tray's lifting and lowering
2	Subtable lift/raise	Control the paper tray to rise or fall
3	change-over switch	Control manual and automatic status switching
4	Air pump switch	Control whether the air pump is working
5	jerk	Control the Feeder emergency stop

4.2. Threader

4.2.1. Open the main interface



order number	name	function
1	velocity	Control the working speed of the shuttle machine
2	String position	Control the distance between the two clamps
3	Embedding location	Control the tape start position
4	Strip length	Control the length of the pull strip
5	Split/merge	Control split and merge
6	Advance/Retreat the knife	Control the cutting point's advance or retreat
7	temperature	Control the hot knife temperature
8	Return knife	Control the knife reset
9	Cut off	Control whether the material detection switch is working



OYANG 欧诺

Zhejiang Ounuo Machinery Co.Ltd Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

4.2.2. Manual screen



order number	name	function
1	Material withdrawal point	Control the pull strap clamp of the tow handle to advance or retract
2	Enter/Exit In-Depth	Control the inward or outward point
	Advance/Retreat	Control the forward or backward movement of the drive motor
	Rotation and setbacks	Control the rotation point of the left and right rotation clips to advance or retreat
3	Left rotation in/exit	Control the rotation point of the left rotating arm to advance or retreat
	affirm	Confirm rotation origin
5	Up and down	Control the position of the paper loop above the paper loop hole by moving the pull tab up or down
6	Advance/Retreat	Control the paper feed stopper by advancing or retracting the tensioner clip above the paper feed hole.
7	Push knife in/out	Control the cutting point's advance or retreat

4.2.3. temperature





OYANG 欧诺

Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

order number	name	function
1	PV	Current blade temperature
2	SV	Set the temperature of the hot knife
3	S	heating time

4.2.4. Set interface



order number	name	function
1	Rotate left/right	Control the rotation angle of the left/right rotating arm
2	Time range	Control the working hours of the upper and lower drawers
3	Cutting time	Control the working time of the cutter
4	Double time	Control the rotation arm clamp closure time
5	Double-click open time	Control the opening time of the rotating arm clamp
6	Pull range	Control tape speed
7	Claw Time	Control claw closure time
8	Upper and	Control the clamping time



OYANG 欧诺

Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

	lower close times	
9	Pullback delay	Control the delay time for the return of the pull tape
10	Rotation range	Control the rotation speed of the rotary clamp
11	Advance and initiate	Control the starting time of the forward and reverse drive motor
12	Advance and retreat range	Control the forward and reverse motor speed
13	Pole multiplier	Control the matching speed of the feed rubber roller and the pull tape

2025-01-14 周二 09:36:31

OYANG 欧诺


提手中心距 155.0 mm	旋转臂长 130.0 mm	旋转中心距 76.0 mm
最长带条 540.0 mm	拉带占空比 78 %	推带位 70.0 mm
上下行程 175.0 mm	推带行程 160.0	上下夹关闭位置 85.0 mm
后退长度 10.0 mm	双夹提前 20	内推进退行程 180.0
	基础纸高 400	设置纸高 400

order number	name	function
1	Handle center distance	Control the distance between push, merge and separation
2	Rotating arm length	Length of rotating arm
3	Rotational center distance	Distance from the center of the rotating arm to the center of the handle
4	Longest strip	Maximum strip length
5	Shipping and occupancy ratio	Control the proportion of time spent pulling the belt and wearing the handle in total

6	Push the position	Control the forward movement of the roller
7	Up and down	Control the total travel of the upper and lower clamps
8	Push feed stroke	Control the total travel of the pusher (attach the hand to the paper)
9	Upper and lower closed positions	Control the number of travel steps for closing when moving up and down
10	Backward length	control
11	Double Clasp Advance	Control the double clamp to close early
12	Advance/Retreat Stroke	Control the total travel of the advance and retreat inside

4.3. Headband

4.3.1. Profile Card Main Interface

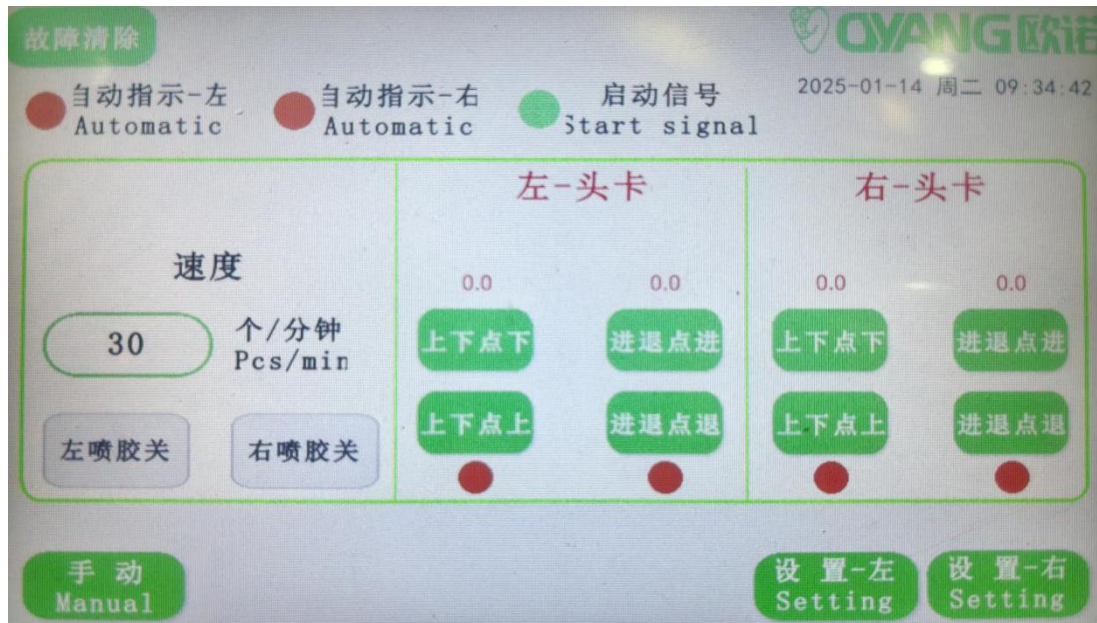


order number	name	function
1	Speed	Display current production speed
2	Left glue on/off	Control whether the left glue works
3	Right glue on/off	Control whether the right glue works
4	Up and down	Control the suction head's up and down movement
5	Advance/Retreat	Control the suction nozzle head's forward and backward movement

4.3.2. hand movement



order number	name	function
1	Up and down	Control the suction head's up and down movement
2	Advance/Retreat	Control the suction nozzle head's forward and backward movement
3	Main station up/down	Control the main station on or off
4	Upper/lower secondary point	Control the secondary station on or off

4.3.3. set up

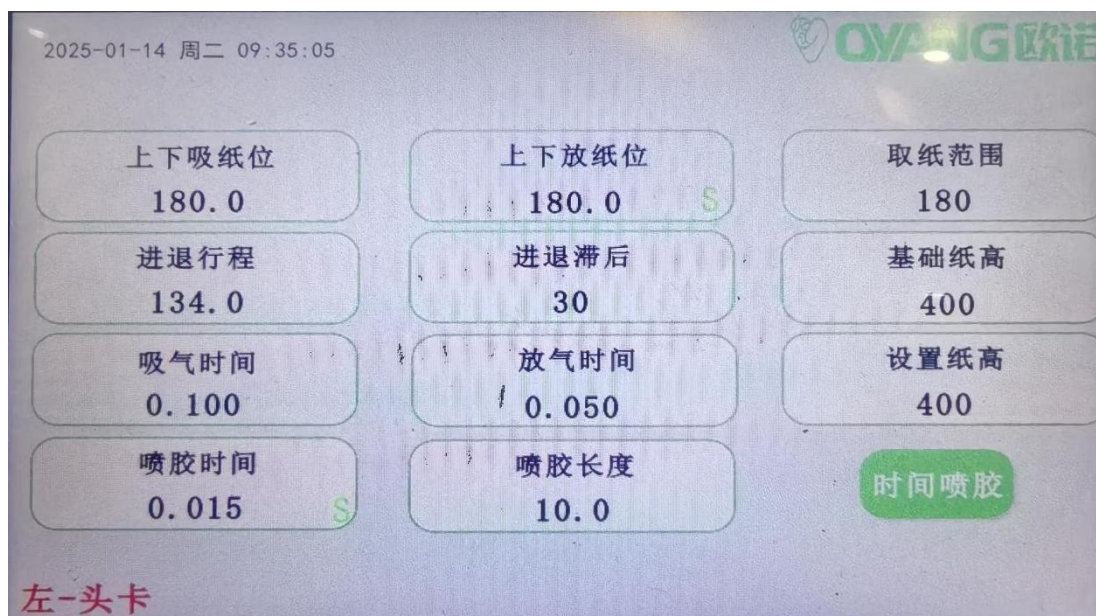

order number	name	function
1	Paper feed	Control the rotation angle of the motor when the paper is lifted up and down
2	Paper feed	Control the rotation angle of the motor when lifting or lowering the paper
3	Advance/Retreat	Control the total stroke of the head feed motor
4	Retreats and advances lag	Control the delay time for the forward and reverse motor startup

5	inspiratory duration	Control the suction time
6	Release time	Control the nozzle venting time
7	Glue time	Control adhesive response time
8	Glue length	Control adhesive length
9	Base paper height	Headband length reference
10	Set paper height	Head card length

4.4. Host Control Panel

4.4.1. main interface



order number	name	function
1	firing	Control machine operation
2	reset	Reset all components of the machine
3	Downtime source	Show the reason for the machine downtime



OYANG 欧诺

Zhejiang Ounuo Machinery Co.Ltd Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

4.4.2. Bag adjustment interface



Serial number	name	function
1	Bag pocket seam (front/rear)	The left and right seams are not aligned. If the left seam is longer, click the left side; if the right seam is longer, click the right side.
2	Claw correction (left/right)	Uneven bag openings: Use the front of the cloth bag as a reference. If the right opening is higher, adjust the right opening. If the left opening is higher, adjust the left opening.




OYANG 欧诺

Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China


4.4.3. Home Page

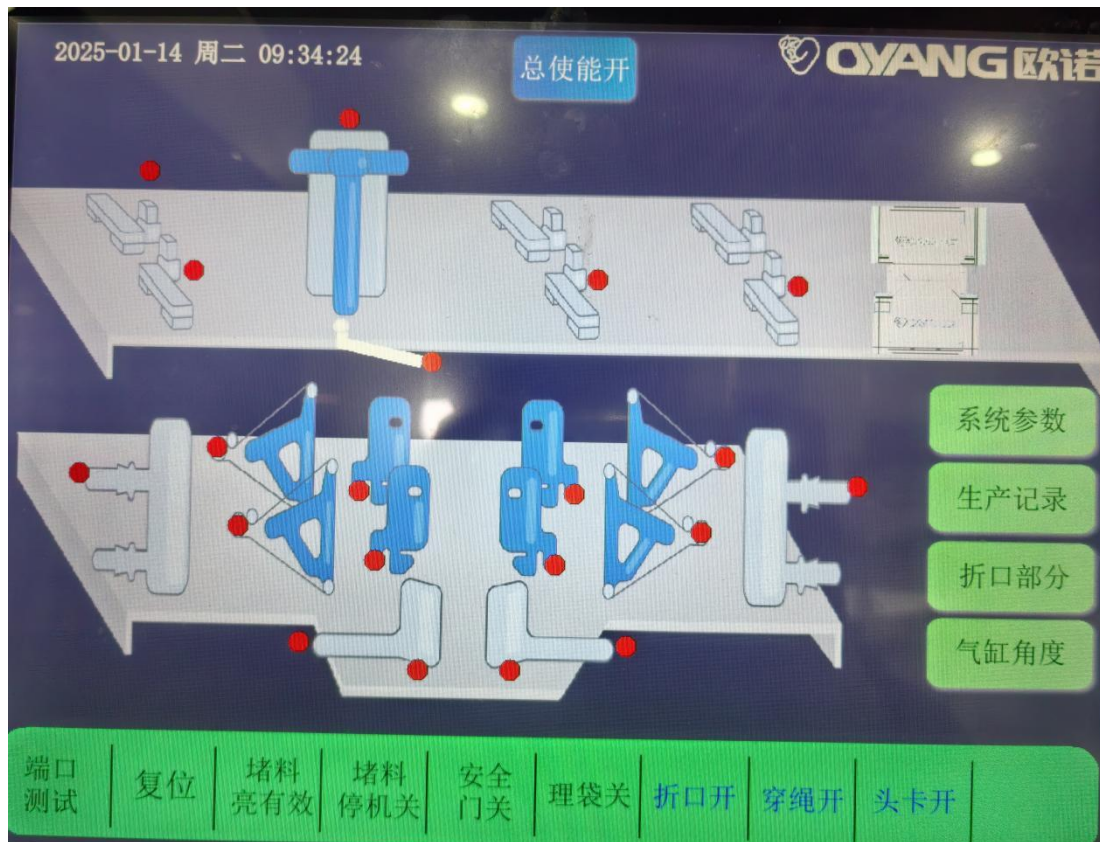

order number	name	function
1	claw	Material Component Parameters
2	mould	Set lifting mold component parameters
3	Location of paper glue	Control the glue position on the paper
4	Push	Push and Pull Component Settings
5	Unpack	Unpack component settings
6	Side insert	Side panel component settings
7	Insert	Insert Component Parameters
8	system parameter	System default parameters
9	record of production	Machine production record

10	The fold section	Check if the signal origin test on the host is normal
11	Cylinder Angle	Set the mold cylinder execution sequence
12	reset	Reset all components of the device
13	Block clearing is effective	Block blocking is valid if the light is on or the block is dark.
14	Blockage shutdown and restart	Check whether the blockage control and shutdown detection work
15	safety switch	Control whether the safety switch is working
16	Rack switch	Control whether the bag machine is working
17	Snap switch	Control whether the foldout component is working
18	String switch	Control whether the rope component works
19	Headlight switch	Control whether the header component works

4.4.4. System Parameters

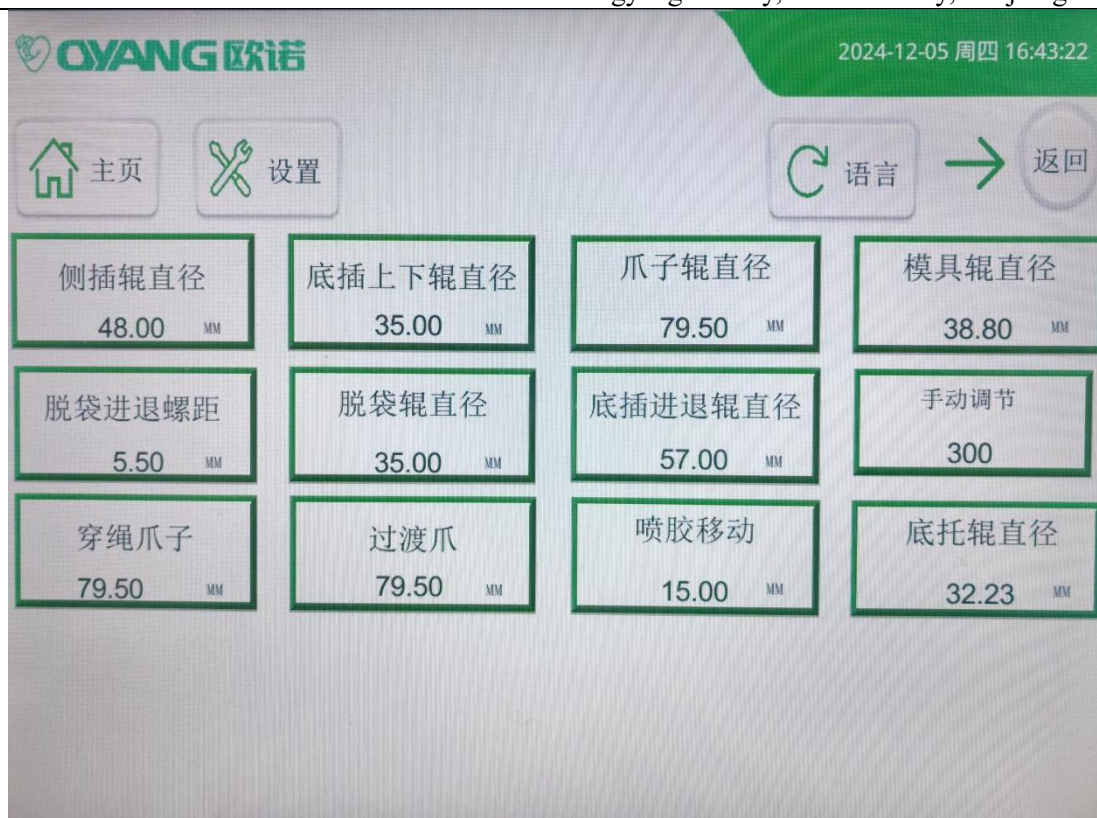




OYANG 欧诺

Zhejiang Ounuo Machinery Co.Ltd Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

4.4.5. Jiaofu interface

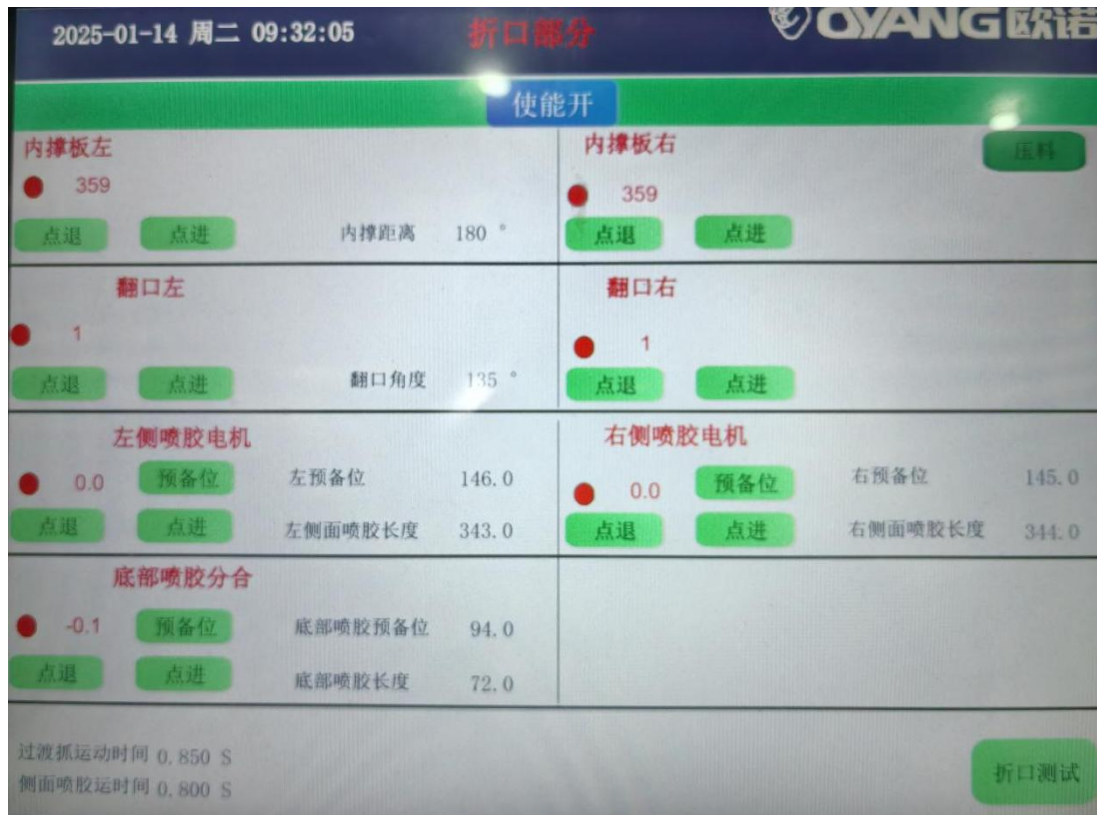

Serial number	name	function
1	Left inner panel	Control the inner support plate to advance or retreat
2	Flip left	Control the rocker's forward or backward movement
3	Left adhesive motor	Control the left glue motor to move from outside to inside or from inside to outside
4	Bottom glue separation	Control the bottom rubber tip to advance or retreat



OYANG 欧诺

Zhejiang Ounuo Machinery Co.Ltd Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

4.4.6. Cylinder Angle

名称	开始	范围	停止	时间
底托夹 手动	290.5	98.0	28.5	0.050
脱袋气缸&毛刷	30.0	180.0	260.0	
模具吹气 关	162.0	90.0	252.0	
脱袋吹气 关	0.0	0.0	0.0	
正面吸气	30.0	120.0	150.0	

order number	name	function
1	Base clamp	Control the response time and response time of the backing cylinder
2	Unbagging cylinder & brush	Control the response time and response time of the unpacking cylinder
3	Inhale front	Control the response time and timing of the mold front suction



OYANG 欧诺

Zhejiang Ounuo Machinery Co.Ltd Zhejiang Allwell Intelligent Technology Co.,Ltd


Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

4.4.7. Claw interface



order number	name		function
1	Forming claw	Claw Cylinder	Control the closing or opening of the mold claw
2		Advance/retreat	Control the mold claw's advance or retreat
3	Workstation	Advance/Retreat	Control the movement of the gripping claws to advance or retreat
4		Pressing Cylinder	Control the press material work
5		Claw Cylinder	Control to close or open the claw
6	Head position	Advance/Retreat	Control the head claw's movement by advancing or retracting
7		Pressing Cylinder	Control the head card press material work
8		Claw Cylinder	Control the head claw to close or open

9	Flip position	Pressing Cylinder	Control the press material work
10		Claw Cylinder	Control the flip claws to close or open

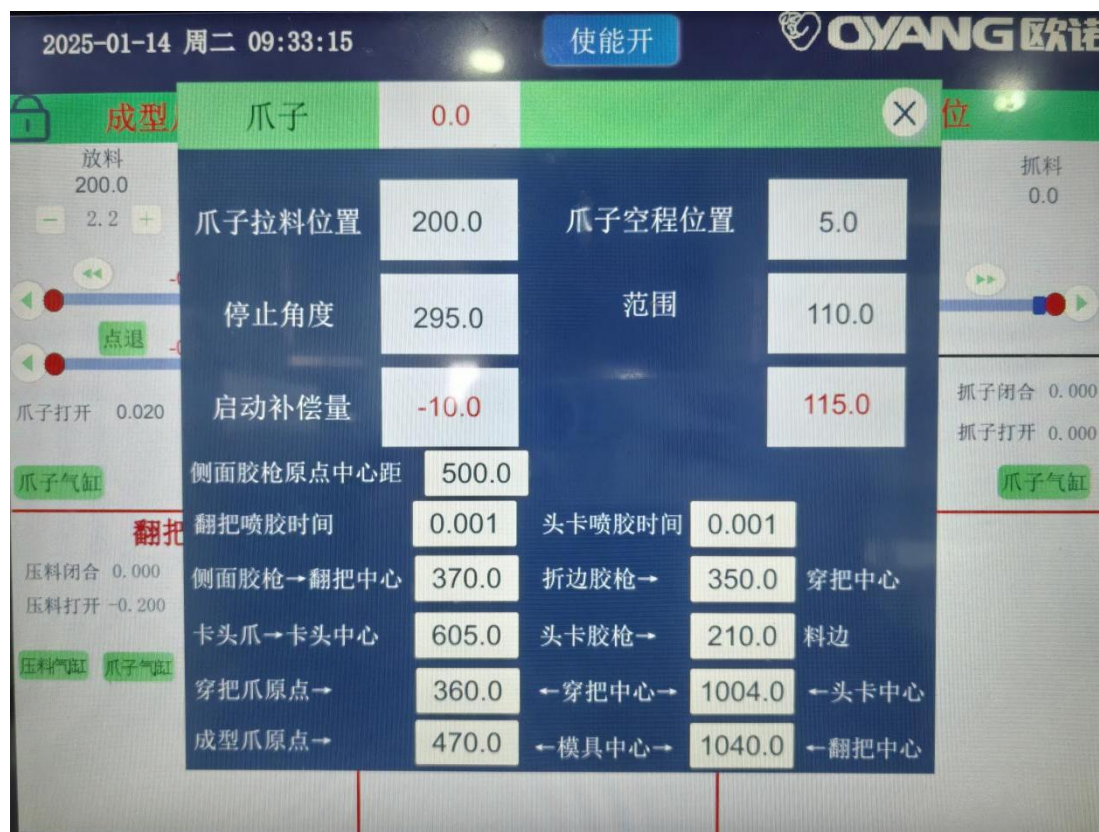

Claw encryption parameter (password 111111)		
order number	name	function
1	claw	Distance from the claw to the origin
2	Claw material pull position	Control the start time of the claw's material grab within a cycle
3	Stop Angle	In a cycle, the control claw stops picking up the material
4	Enable compensation	Control the claw's start time compensation for material grabbing
5	Claw idle	The time between claw movements in a cycle

	clearance	
6	scope	Control the start and end times of the claw's idle movement
7	Side glue gun origin center distance	Distance from the side glue gun to the central photoelectric sensor
8	Reapply adhesive time	Control the glue gun response time
9	Headband adhesive time	Control the head glue response time
10	Side glue gun to handle center	Distance from the side glue gun to the center of the flip handle




OYANG 欧诺

Zhejiang Ounuo Machinery Co.Ltd Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

4.4.8. Mold interface

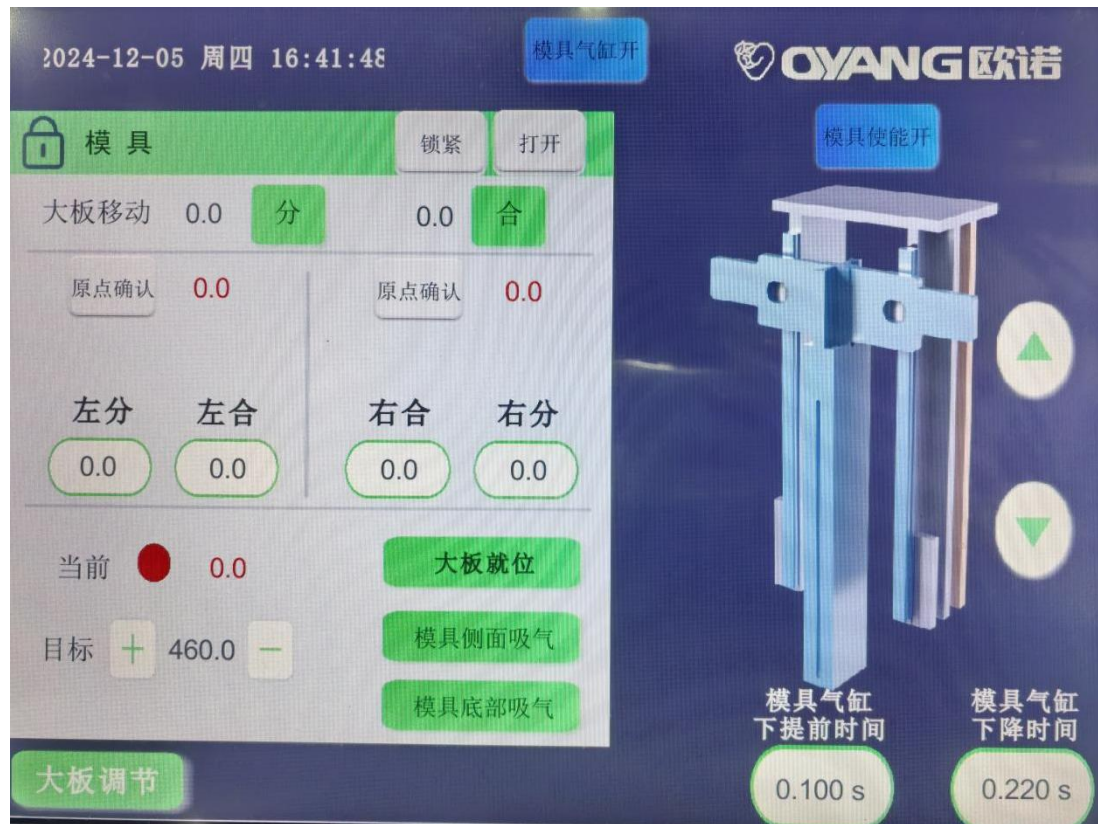

mould		
order number	name	function
1	Locking mold	Control the large plate locking motor to lock the large plate
2	Loosening of mold	Control the large plate lock motor to release the large plate
3	Large board move-split/merge	Control the separation or combination of the left and right panels
4	Split/merge left	Move the left large panel outward or inward
5	Right split/merge	Move the right large panel outward or inward
6	before one	Mold Position
7	target +/-	Control the total stroke increase/decrease



OYANG 欧诺

Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

8	Large board in place	Control the large board
9	Side suction on the mold	Control whether the mold side is suction
10	Bottom suction of mold	Control whether the backing cylinder is drawing air



Model encryption parameters (password 111111)		
order number	name	function
1	mould	Mold Position
2	Downward position	Control the mold descent time within a time period
3	scope	Control the mold descent time
4	lifting position	Control the mold's rise within a time period
5	scope	Control mold rise time
6	Benchmark position-side width	Adjustment criteria for side width-related data
7	Benchmark position-drop distance	A reference point for adjusting data related to the distance of descent




OYANG 欧诺

Zhejiang Ounuo Machinery Co.Ltd Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

4.4.9. Paper and glue position

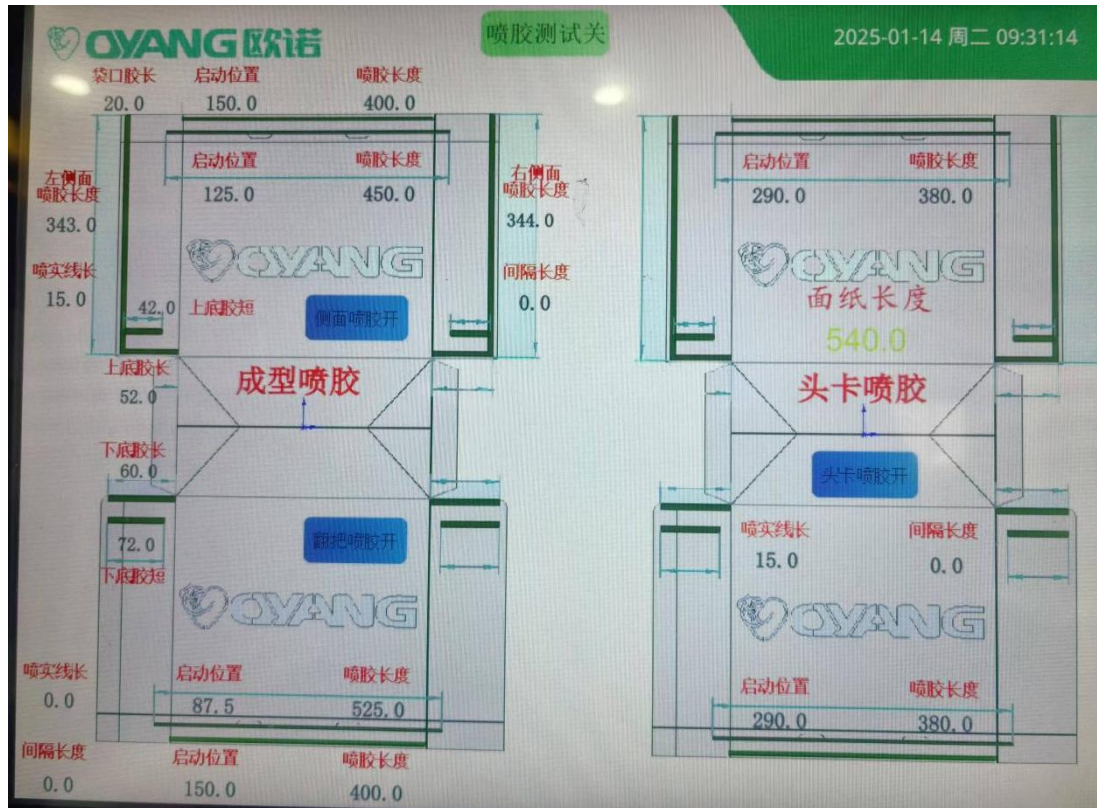

Headband Glue		
order number	name	function
1	Solid line length	Control the length of a single segment of glue
2	gap length	Control the spacing between each glue segment
3	enable position	Control the first glue spray position
4	Glue length	Control the total length of the adhesive tape
Forming adhesive		
order number	name	function
1	Bag Glue	Control the length of single-stage glue spraying at the bag opening
2	enable position	Control the first glue spray position
3	Glue length	Control the total length of glue spraying at the bag opening



Zhejiang Ounuo Machinery Co.Ltd
Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

4	Left adhesive length	Control the total length of the left glue
	Solid line length	Control the length of the left single-segment adhesive



OYANG 欧诺

Zhejiang Ounuo Machinery Co.Ltd Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

4.4.10. Push interface



Push the seat		
order number	name	function
1	Heat seal time	Set the heat seal and mold pressing time
2	◀	Move left heat seal (toward home screen) outward
3	▶	Move only the right heat seal (toward the home screen) outward
4	◀ ▶	The left and right heat seals are separated and then closed to achieve periodic changes
5	Enable	Enable push seat motor
Push seat encryption parameter (password 111111)		
order number	name	function
1	Heat Seal Curve	The left and right heat seals separate and then close, achieving periodic changes
2	Motor Start Position	Control the start time of the push seat motor within a 360-second period.
3	Heat seal time	Control the heat seal and mold pressing time
4	Ultrasonic on	In a time period 360, control the start time of the heat sealing ultrasonic
5	Ultrasonic Off	Control the shutdown timing of the heat-sealing ultrasonic waves within a 360-second period.



OYANG 欧诺

Zhejiang Ounuo Machinery Co.Ltd Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

4.4.11. Unpack interface



Unpack		
order number	name	function
1	Unbox and Start	Control the running of the bagging conveyor belt
2	Brush Cylinder	Control the brush cylinder
3	any power-generating or power-driven machine	Motor drive mode or cylinder drive mode conversion
4	Left front total mileage	Total travel of left front (toward home screen)
5	Total Right Front	Total travel of right anterior retractor
6	Total Left Rear	Total travel of left rear bag removal
7	Total Right Rear	Total travel of right rear bag movement
8	enable position	Control the start time of the bag discharge timing belt within a 360-second


		cycle.
9	Unbag length	Control the distance the bag is pulled by the synchronous belt
10	Unbag speed	Unbag operation speed
11	Variable speed/constant speed	Variable speed: the embossing speed changes with the bag making speed of the main mechanism; Constant speed: Keep the set speed unchanged
12	Distance	Distance between the bag removal plate and the synchronous belt gauge mold
13	Unbagging reference position	Distance from the bag opening to the mold center
14	Debottlenecking cylinders	Control the bagging cylinder
15	Move forward	Within a 360-period time cycle, control the timing of the bag-extraction belt's forward movement.
16	scope	Control the time range for the bagging conveyor belt to move forward
17	Remove from bag	Move the "open distance" inward to ensure the synchronous belt adheres tightly to the mold during bag removal.
18	Move Back	Within a 360-period time cycle, control the timing of the bag-extraction belt's retraction.
19	scope	Control the time range for the bagging conveyor's retraction
20	Restore from bag	After illuminating the origin, the bag removal motor moves 67mm inward.
21	Enable advance/step back	Control the enable or disable of the bag-in and bag-out motor
22	position adjustment	Control the four bags to move outward by 70mm
23	Enable belt	Control the enable state of the synchronous band motor

4.4.12. Side panel



Side

order number	name		function
1	Left before		Walk the full route inward
			Complete the trip outside
			Tap inward
			Tap outside
2	Side		Four side-mounted current status indicators
3	Enable		Enable or disable the side-mounted motor
4	All entries		Four side inserts complete the full stroke

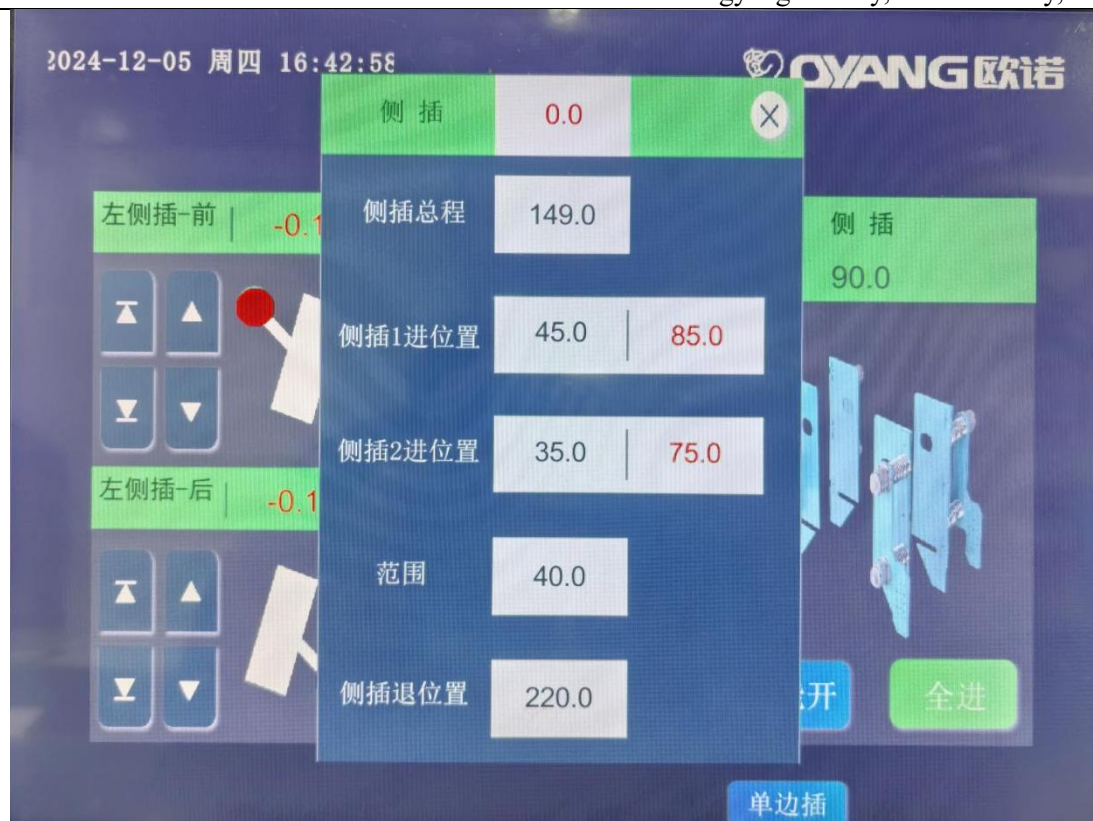

Side encryption parameter (password 111111)

order number	name	function
1	Total side trip	Total side slide movement
2	Side-in 1 position	In a time period 360, the forward moment of control side plug 1
3	Side entry 2 position	The forward time of control side insert 2 within a time period 360
4	scope	Control the time range for side insert 1 and side insert 2 to advance
5	Side slide out position	Control the timing of the rearward insertion within a 360-degree cycle.



OYANG 欧诺

Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

4.4.13. Bottom Insert Interface



Insert		
order number	name	function
1	Enable up and down	Enable left/right bottom insertion and top/bottom motors
2	Move forward and back to enable opening	Insert the left and right bottom motors to enable the opening
3	falling-rising tone	Insert left and right upward
4	advance	Insert the left and right bottom tabs inward (in the mold direction)
5	Bottom-left inset	▲ Insert bottom-left upward point
6		▼ Insert bottom-left downward point
7		► Plug the bottom left into the inside (mold direction) and click
8		◄ Insert bottom-left point outward



Bottom plug encryption parameter (password 111111)

order number	name	function
1	Bottom insertion drop position	Control the bottom insertion's descent timing within a time period
2	scope	Control the time range for the bottom insertion to drop
3	Bottom insertion position	Control the rising moment of the bottom plug within a time period
4	scope	Control the time range for the bottom insertion to rise
5	Bottom insertion	Control the timing of the bottom insert's advancement (mold direction) within a



Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

	position	specific time period.
6	scope	Control the time range for the bottom insertion
7	Bottom insertion position	Control the backward timing of the bottom insert within a time period
8	scope	Control the time range for the bottom insertion to fade out

4.5. Rack Control Panel


4.5.1. Bagger Button



Bagger Button

order number	Name	function
1	Bag Switch	Control the bag machine to work
2	Start/Stop Host	Check if the host is working
3	Move left	
4	Move the bag to the right	
5	Raise/lower lift	
6	Bag Switch	Control whether the folding machine is working
7	Table rise/fall	Control the rise or fall of the tray
8	speed governing	Control waste discharge speed

4.5.2. Bagger Main Interface

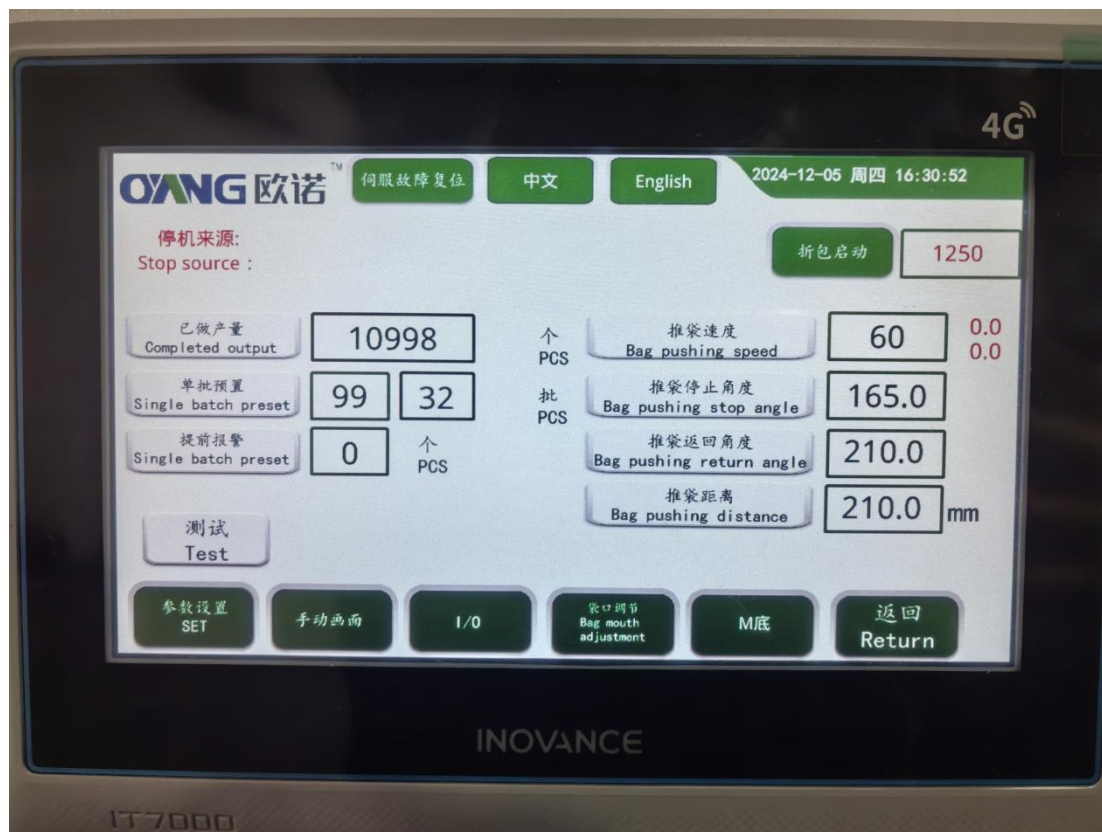

main interface		
order number	name	function
1	Production done	Record total production
2	Batch preset	When N is reached, it is recorded as a batch
3	advance warning	How many meetings to alert for
4	Bag push speed	Control bag speed
5	Push bag stop angle	Control the stop time of the push plate within a time period
6	Push bag return angle	Control the return time of the push plate within a time period
7	Bag push distance	Control the total stroke of the push plate
8	test	Total function test of bag machine

4.5.3. parameter setting




parameter setting		
order number	name	function
1	Bag time	Control the time the bag enters the bagging area
2	Delay Push Bag	Delay the start time of the push forward
5	Time to insert into bag	Control the working time of the bag plate
6	Bag opening angle	Control the start time of the bagging plate within a time period
7	Bagging time	Control the working time of the bag
8	Bag lifting angle	Control the start time of the table's rise or fall within a time period.
9	Close bag early	Control the time to close the bag in advance
10	Start the bag flap motor	Control the start time of the bag within a time period
11	Motor stroke of the stop bag	Control the travel of the bag plate in a single cycle
12	Bag flap motor speed	Control the speed of the bag motor




OYANG 欧诺

Zhejiang Ounuo Machinery Co.Ltd Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

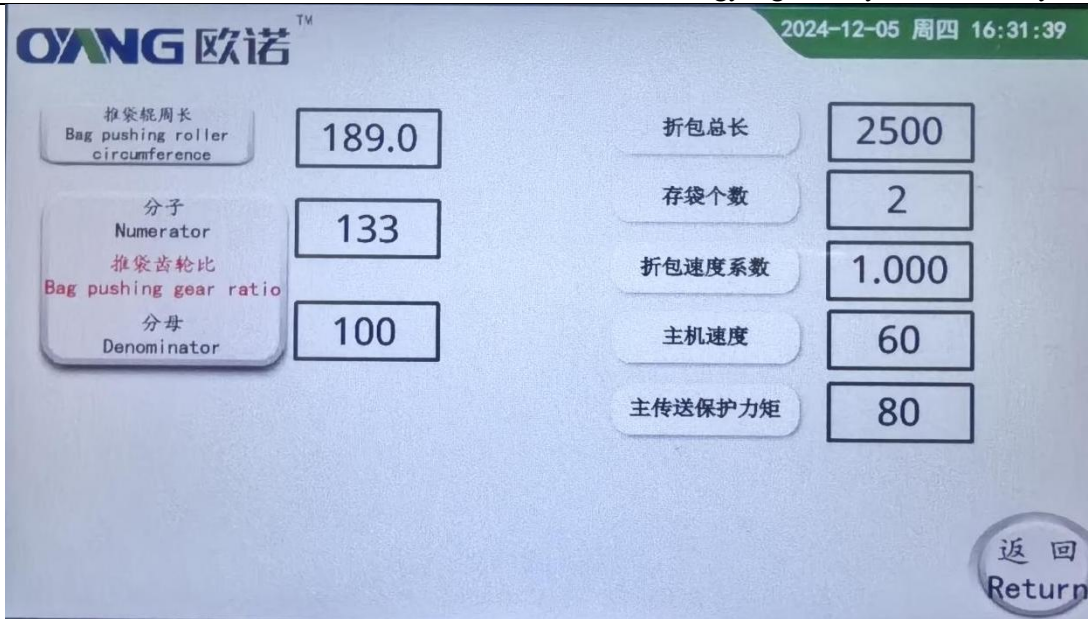

4.5.4. Manual screen

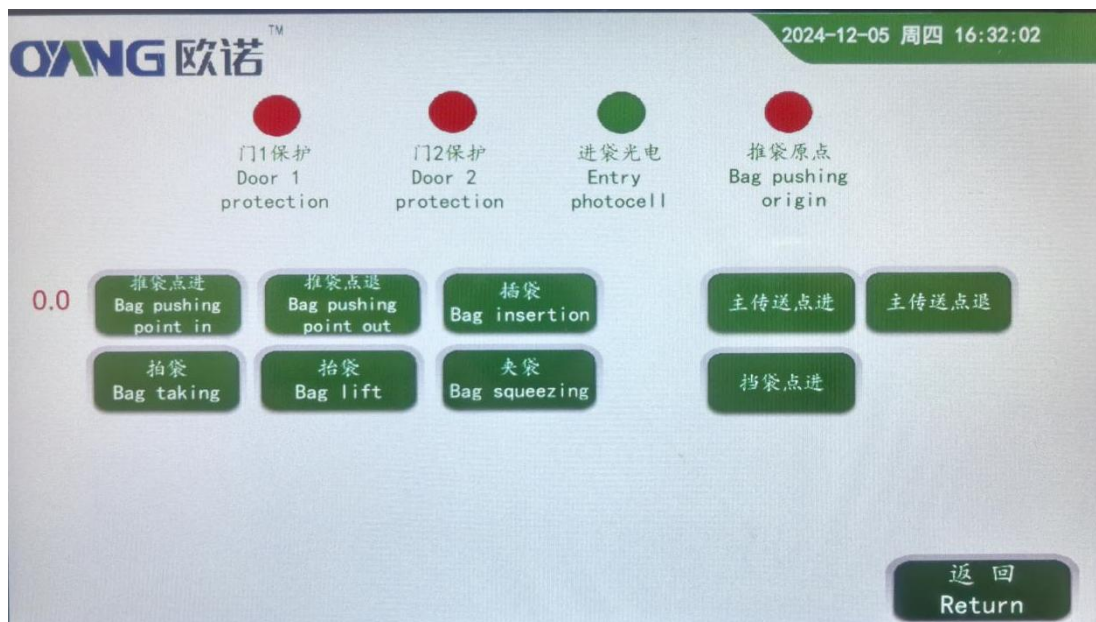

parameter setting		
order number	name	function
1	Push to open or close	Control the push plate to advance or retreat
2	sidekick	Control whether the bag works
3	Camera bag	Control the bag



OYANG 欧诺

Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

4	Bagging	Control the bag tray to rise
5	Main transfer point in/out	Control the belt conveyor's entry or exit
6	Click to block bag	Control the bag entry point

4.5.5. M bottom



parameter setting		
order number	name	function
1	Bag lag	How far is the photoelectric distance?
2	Pocket Speed	Controls the ratio of the bottom hook's forward speed to the belt speed
3	Pouch length	Control the bottom hook movement
4	Spindle ratio	Control the ratio of the bottom hook return speed to the belt speed
5	Rotation range	Control the bottom hook rotation speed
6	Left/right rotation angle	Control the rotation angle of the left/right bottom checkmark
7	Left bottom swipe to enter/exit	Control the bottom-left checkmark to advance or retreat
8	Left Rotate Point In/Out	Control the rotation point of the bottom-left checkmark to advance or retreat



Zhejiang Ounuo Machinery Co.Ltd

Zhejiang Allwell Intelligent Technology Co.,Ltd

Add: Binhai Industrial Zone Pingyang County, Wenzhou City, Zhejiang Province, China

9	Origin verification	Confirm the rotation origin
10	Left Reserve	Control the left hook's initial position from the origin
11	Rotate right	Control the right hook's initial position relative to the origin