


TREADMILL

Vision Fitness

TF60

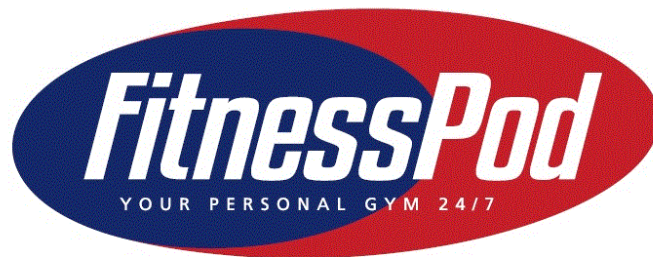

DISPLAY CONSOLE OVERVIEW

A. WORKOUT PROFILE WINDOW

During a workout, intervals, hills and valleys appear in this column as rows of lights stacked in columns. The number of lit rows within a column corresponds to an incline percentage.

B. HEART RATE CENTRE


This window displays your actual and target heart rate during the workout. The console displays heart rate within 20 seconds of contact with the sensors. In TARGET HEART RATE PROGRAM, the inputted heart rate will display in the window every 60 seconds.

C. INSTRUCTION CENTRE

This window displays step by step instructions for setting up a workout. During a workout it displays Time, Pace, Incline, Distance, Speed, Level, Calories and METS.

D. CONTROL KEYPAD

The control keypad allows the user to set up programs and control workout.

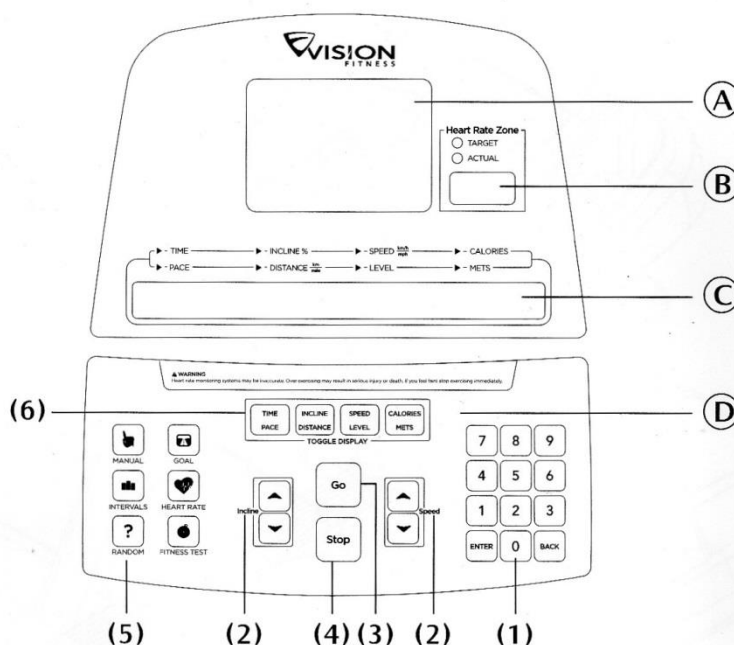

1. **NUMBER KEYS** – press the numbers to input exercise time, weight, level, age, heart rate, speed & incline.

SELECT / ENTER KEY – press this to confirm entry of the number

CLEAR KEY – Use this key to clear data not yet entered during the workout setup.

2. **SPEED & INCLINE** – Use the arrow keys to adjust speed or incline
3. **GO** – press go to begin your workout immediately without having to select a workout program.
4. **STOP** – press this once to enter pause mode and hold it within 3 seconds to reset the treadmill and restart the programming sequence.
5. **PROGRAM KEYS** – press to select a workout. If the key has a plus sign this indicates additional workout options, press repeatedly to scroll through.
6. **READOUT SWITCH KEYS** – press one of these four keys to change your desired readout.

WORKOUT OVERVIEWS

PROGRAM		DESCRIPTION	DEFAULT TIME	PROMPT INPUT	PROGRAM CONTROL
QUICK START		Quick Start is the fastest way to begin exercising and bypasses the setup prompts. After pressing the QUICK START key, a constant-level workout begins, and the speed and incline do not change automatically.	N/A	N/A	N/A
MANUAL		Manual is a constant effort workout in which the user can change incline or speed at any time.	20 min	Time, Weight	N/A
INTERVAL		Interval is periods of intense aerobic exercise separated by regular periods of lower-intensity exercise. At any point during the workout, the user can change the settings of the current speed.	20 min	Level, Time, Weight	Elevation
GOAL+	TIME GOAL	This workout sets duration as the workout goal. Once the duration objective is met, the workout goes into a cool-down phase.	20 min	Time, Start Incline, Start Speed, Weight	N/A
	DISTANCE GOAL	This workout is designed to build endurance in a certain distance. Once the objective is met, the workout automatically goes into a cool-down phase, and ends afterward.	N/A	Distance, Start Incline, Start Speed, Weight	N/A
	CALORIES GOAL	This workout is designed to burn a certain number of calories in the selected time duration. Once the objective is met, the workout automatically goes into a cool-down phase, and ends afterward.	N/A	Calories, Start Incline, Start Speed, Weight	N/A
RANDOM		Random creates a random terrain pattern of hills and valleys that varies with each workout.	20 min	Time, Weight	Elevation

PROGRAM		DESCRIPTION	DEFAULT TIME	PROMPT INPUT	PROGRAM CONTROL
HEART RATE+	TARGET HR	Target HR is a higher intensity workout for more fit users, emphasizing cardiovascular benefits. The user must wear a heart rate chest strip, or keep hands on contact heart rate grips continuously. The program adjusts the intensity level, based on the actual heart rate, to maintain the rate at 80 percent of the theoretical maximum.	20 min	Age, Heart Rate, HR Control, Max. Speed or Max. Incline, Time, Weight	Speed or Elevation
	WEIGHT LOSS	Weight Loss is a low-intensity workout for burning the body's fat reserves. The user must wear a heart rate chest strip, or keep hands on contact heart rate grips continuously. The program adjusts the intensity level, based on the actual heart rate, to maintain the rate at 65 percent of the theoretical maximum. And use Body Mass Index (BMI) to measure your body composition.	20 min	Age, Heart Rate, HR Control, Max. Speed or Max. Incline, Time, Weight, Height	Speed or Elevation
FITNESS TEST		Vision treadmill offers fitness tests-the Gerkin firefighter protocol, the Gerkin protocol was developed by Dr. Richard Gerkin of the Phoenix (Arizona) Fire Department. It is a sub-maximal graded treadmill evaluation used by many Fire Departments across the United States to assess the physical condition of the firefighters. The test requires constant monitoring of the user's heart rate so the use of a telemetric chest strap is highly encouraged.	N/A	N/A	N/A

WORKOUT SETUP STEPS

Use the PROGRAM PLUS™ KEYS to enter the program, or use SPEED ▲ ▼ keys to scroll to desired program. Use the NUMBER keys to enter the values, or use SPEED ▲ ▼ keys to scroll to desired values displayed on the INSTRUCTION CENTER. Press the SELECT key to confirm each selection. Follow the steps to set up each workout.

QUICK START

Press the "GO" key and the WORKOUT PROFILE WINDOW will display "3, 2, 1, GO!" The workout begins at the lowest incline and speed, and the time counts "0" to the maximum time.

MANUAL

- 1) Press the "MANUAL" key to enter the program.
- 2) "SELECT TIME" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 3) "SELECT WEIGHT" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 4) Press GO to begin the workout.

INTERVAL

- 1) Press the "INTERVAL" key to enter the program.
- 2) "SELECT LEVEL" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 3) "SELECT TIME" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 4) "SELECT WEIGHT" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 5) Press GO to begin the workout

GOAL+

A) TIME GOAL

- 1) Press the "GOAL+" key and use SPEED ▲ ▼ keys to select "TIME GOAL".
- 2) "SELECT TIME" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 3) "SELECT START INCLINE" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 4) "SELECT START SPEED" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 5) "SELECT WEIGHT" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 6) Press GO to begin the workout

B) DISTANCE GOAL

- 1) Press the "GOAL+" key and use SPEED ▲ ▼ keys to select "DISTANCE GOAL".
- 2) "SELECT DISTANCE" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 3) "SELECT START INCLINE" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.

TREADMILL T60

- 4) "SELECT START SPEED" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 5) "SELECT WEIGHT" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 6) Press GO to begin the workout

C) CALORIES GOAL

- 1) Press the "GOAL+" key and use SPEED ▲ ▼ keys to select "CALORIES GOAL".
- 2) "SELECT CALORIES" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 3) "SELECT START INCLINE" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 4) "SELECT START SPEED" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 5) "SELECT WEIGHT" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 6) Press GO to begin the workout

RANDOM

- 1) Press the "RANDOM" key to enter the program.
- 2) "SELECT TIME" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 3) "SELECT WEIGHT" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 4) Press GO to begin the workout

HEARTRATE+

TARGET HR & WEIGHT LOSS

- 1) Press the "HEARTRATE+" key and use SPEED ▲ ▼ keys to select "TARGET HR" or "WEIGHT LOSS".
- 2) "SELECT AGE" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 3) "SELECT HR" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 4) "SELECT HR CONTROL" using the SPEED ▲ ▼ keys, and then press SELECT.
 - If SPEED is selected, the INSTRUCTION CENTER will display "SET MAX SPEED". Use the ■ SPEED ▲ ▼ keys to set MAX SPEED, and then press SELECT.
 - If INCLINE is selected, the INSTRUCTION CENTER will display "SET MAX INCLINE". Use ■ the SPEED ▲ ▼ keys to set MAX INCLINE, and then press SELECT.
- 5) "SELECT TIME" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 6) "SELECT WEIGHT" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
- 7) "SELECT HEIGHT" using the NUMBER keys or SPEED ▲ ▼ keys, and then press SELECT.
(Only For WEIGHT LOSS)
- 8) Press GO to begin the workout.

BMI Categories:

- Underweight = < 18.5
- Normal Weight = 18.5-24.9
- Overweight = 25-29.9
- Obesity = BMI of 30 or greater