


CS 350 Smart Thermostat State Machine

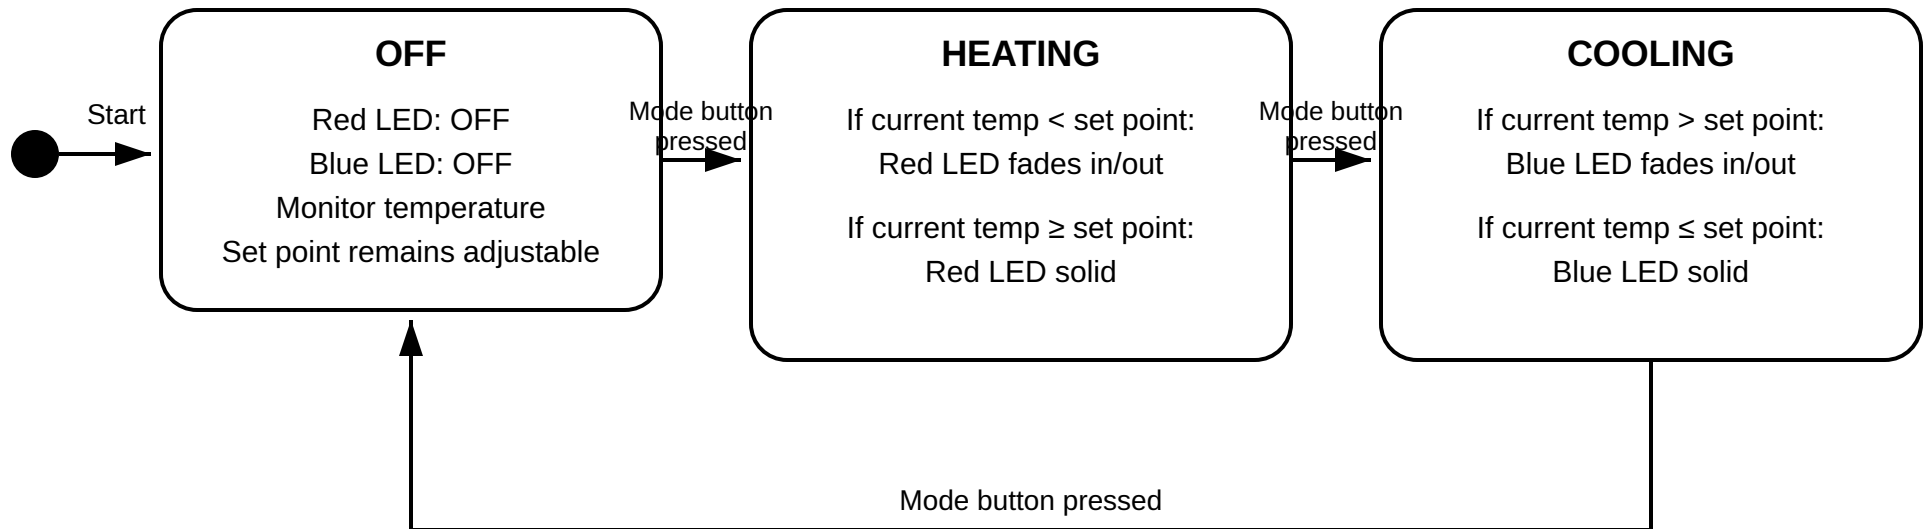

Set Point Controls (active in every state)

Temperature Up button: set point +1°F
Temperature Down button: set point -1°F
Default set point: 72°F

LCD: line 1 always displays date/time. Line 2 alternates between current temperature and current state + set point. UART outputs state,current temperature,set point every 30 seconds.