
Quick Start Guide
产品使用说明书


HT-10A

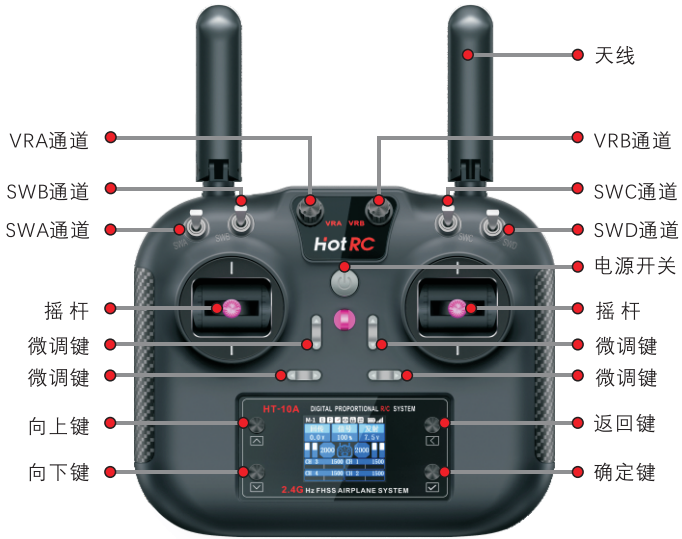

版本更新：2026-06-01

Copyright © 2026 Hobby Model Technology co.,ltd


天线
VRA通道
VRB通道
SWB通道
SWC通道
SWA通道
SWD通道
电源开关
摇 杆
摇 杆
微调键
微调键
微调键
微调键
向上键
返回键
向下键
确定键
VRA VRB
HotRC
HT-10A
DIGITAL PROPORTIONAL RC SYSTEM
2.4G Hz FHSS AIRPLANE SYSTEM

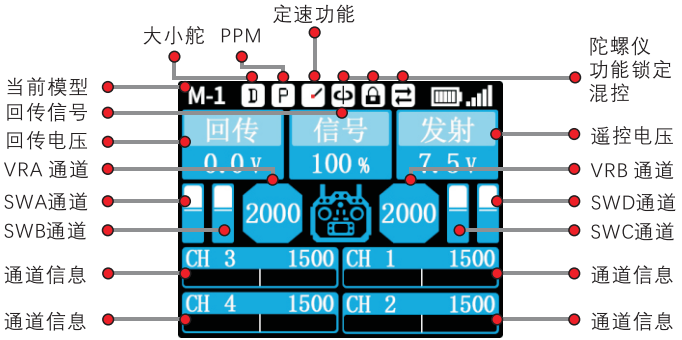
定速功能
大小舵
PPM
陀螺仪
功能锁定
混控
当前模型
回传信号
回传电压
VRA 通道
SWA通道
SWB通道
通道信息
通道信息
遥控电压
VRB 通道
SWD通道
SWC通道
通道信息
通道信息
M-1
回传
信号
发射
0.0v
100%
7.5v
2000
2000
CH 3 1500
CH 1 1500
CH 4 1500
CH 2 1500



模型选择

功能说明：遥控器共有四组存储模型数据；
操作方法：选中对应的模型、按下确定后即可切换为另一组模型。




对码设置

功能说明：遥控器首次使用需要对接收机进行对码匹配；遥控器也可以对射频模块进行关闭；
操作方法：A：接收机通电后、按一下接收机【BING】键此时接收机绿灯快闪；
B：点击遥控器【开始】进行对码。



回传电压

功能说明：遥控器的回传距离与发射距离是相同的、回传电压低于设置值时遥控器会进行报警提示；
操作方法：电池的类型遥控器可自动识别、也可进行设置、显示电压不准时也可以修正处理。

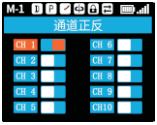

通道正反

功能说明：遥控器每个通道的正反都可以进行设置；
操作方法：选中对应的通道、白色栏默认通道的正向、红色栏默认通道的反向。



通道行程

功能说明：遥控器每个通道的行程最大值、最小值都可以进行设置，数值是以百分比形式；
操作方法：选中对应的通道、左框的值设置为行程最小值、右框的值设置为行程最大值。



通道微调

功能说明：遥控器每个通道的微调值都可以进行设置；
操作方法：选中对应的通道、‘+’代表在中心点1500基础上加、‘-’代表在中心点1500基础上减。




通道映射

功能说明：遥控器5/6/7/8/9/10通道、可以自由定义控制通道开关的位置；
操作方法：选中对应的通道、设置控制通道的开关。



油门位置

功能说明：遥控器设置油门位置在左手还是右手，
油门是单向、还是双向；
操作方法：选中对应设置栏、确定选择。

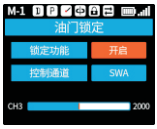

油门锁定

功能说明：遥控器可通过通道开关对油门进行锁定、进行定速巡航功能；
操作方法：功能开启后、拨动通道开关进行油门锁定开启定速功能。控制通道可以切换为不同的拨档开关。



舵量控制

功能说明：遥控器可通过拨档开关控制摇杆
1通道/2通道/4通道的舵量大小；大舵固定值：100%，
小舵范围为：50%~100%
操作方法：选择功能是否开启、选择控制开关的对应通道，遥控器会有图标提示。控制开关可以切换为不同的拨档开关。



固定混控

功能说明：遥控器共有三种固定的混控模式、选中后遥控器会有混控图标进行提示；
操作方法：选中对应混控设置、右侧会有对应模型、对应通道的混控数据参考。



编程混控

功能说明：遥控器可以对摇杆通道进行自由编程混控；
操作方法：选中对应的2个通道、进行编程混控、右侧状态栏显示编程混控状态。



舵机设置

功能说明：遥控器默认舵机频率为模拟舵机、也可以根据舵机的参数、设置频率和角度；
操作方法：选中对应的设置参数、进行设置。



陀 螺 仪

功能说明：遥控器只可对本品牌的一体接收机进行参数设置；其他品牌、独立的陀螺仪、不可通过遥控器进行设置；
操作方法：先选择陀螺仪应用的类型，开启此功能，
再对陀螺仪感度、方向进行调节，感度值越大，灵敏度越高。



失控保护

功能说明：遥控器非特殊情况下、不必对失控值进行设置，1/2/4 通道默认失控值是1500、3通道默认值根据油门单双向默认1000/1500；其他通道默认是保持状态；
操作方法：选择对应的通道、进行失控值设置。



摇杆校准

功能说明：摇杆中心值有偏离时才需要对摇杆的中心值进行校准处理；
操作方法：点击确定校准后、根据页面提示拨动方向摇杆、摇杆回至中心点位置、确定完成。

规格参数

产品型号	HT-10A
适用模型	模型飞机/车/船/等
通道个数	10
频率范围	2.4GHZ ISM
发射功率	≈120MA
调制模式	GFSK
扩频方式	FHSS
响应速度	PWM≤5MS
遥控距离	地面≈300M 空中≈800M*
接收灵敏度	-96 dbm
通道分辨率	4096
发射机供电	DC 4V-9V
接收机供电	DC 4V-9V
产品净重	320g

注：遥控的距离仅供参考、实际使用情况会根据不同的环境会有差别。

Hot RC®

https://www.HOTRC.cn


更多详细说明及视频介绍请登录官方网站了解

For more instructions, please log in to the website



FCC ID:



Antenna
CH-VRA
CH-VRB
CH-SWB
CH-SWC
CH-SWA
CH-SWD
Power switch
Joystick
Joystick
Fine-tuning
Fine-tuning
Fine-tuning
Fine-tuning
Upward
Return
Downward
OK
HT-10A
DIGITAL PROPORTIONAL RC SYSTEM
2.4G Hz FHSS AIRPLANE SYSTEM

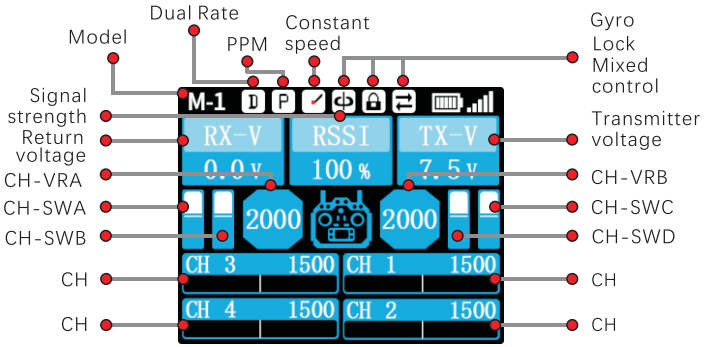
Model
Dual Rate
PPM
Constant speed
Gyro
Lock
Mixed control
Signal strength
Return voltage
CH-VRA
CH-SWA
CH-SWB
CH
CH
M-1
RX-V
RSSI
TX-V
0.0v
100%
7.5v
2000
2000
CH 3 1500
CH 1 1500
CH 4 1500
CH 2 1500
Transmitter voltage
CH-VRB
CH-SWC
CH-SWD
CH
CH



Model selection

Operation method: Select the appropriate model and press "Sure" to switch to another model group.

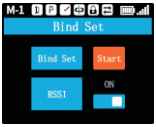


Frequency matching

A: Both the receiver and the remote control are powered on;
B: Short press the [BING] button on the receiver, and the green light on the receiver will flash quickly;
C: The remote control enters the pairing setting interface and clicks to start pairing;




Return voltage

When the return distance and transmission distance of the remote control are the same, and the return voltage is lower than the set value, the remote control will give an alarm prompt; The inaccurate return voltage can be corrected.

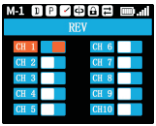


CH positive and negative

Operation method: Select the corresponding channel,the forward direction of the default channel in the white bar, and the reverse direction of the default channel in the red bar.

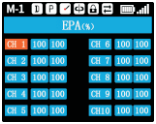


CH size value

Operation method: Select the corresponding channel, set the value in the left box as the minimum travel value, and set the value in the right box as the maximum travel value.

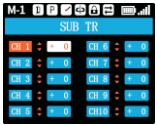

CH fine-tuning

Operation method: Select the corresponding channel. '+' represents adding on top of the center point 1500, and '-' represents subtracting from the center point 1500.

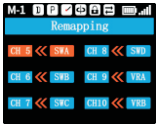

CH mapping

Remote control 5/6/7/8/9/10 channels, with the ability to freely define the position of the control channel switch;
Operation method: Select the corresponding channel and set the switch for controlling the channel.




Throttle channel

Configure the remote controller to set whether the throttle channel is assigned to the left or right hand, and whether the throttle is unidirectional or bidirectional.



Throttle Lock

The remote controller can lock the throttle and activate the cruise control function via channel switches.
Once the function is enabled, toggle the channel switch to engage throttle lock and activate the cruise control function. The control channel can be switched to different toggle switches.

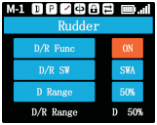


Rudder control

The remote controller can control the servo travel of Joystick Channels 1/2/4 via toggle switches; fixed value for full servo travel: 100%, and the range for reduced servo travel: 50–100%. The control switch can be assigned to different toggle switches.



Fixed mixed control

The remote controller features three fixed mixing modes; once a mode is selected, a mixing icon will appear on the remote for indication.

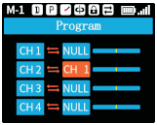

Programming mixed control

The remote control can also freely program and control the CH1/CH2/CH3/CH4 channels




Servo settings

The default servo frequency of the remote controller is analog servo, and you can also set the frequency and angle according to the servo parameters;



Gyro settings

The remote control can only be used to set the integrated receiver of this brand;
Operation method: First, select the applicable type of the gyro and enable this function, then adjust the gyroscope sensitivity and direction. The higher the sensitivity value, the greater the sensitivity.

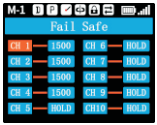

Out of control protection

Function Description: Under normal circumstances, it is not necessary to set failsafe values for the transmitter. The default failsafe value for channels 1/2/4 is 1500; the default value for channel 3 is 1000/1500 based on the throttle direction (single/dual);other channels default to maintaining their current state. Operation Method: Select the corresponding channel to set the failsafe value.



Joystick calibration

The center value of the joystick needs to be calibrated only when there is a deviation in the center value of the joystick.



System settings

Automatic shutdown: When the remote control is not operated, it will automatically shut down after 15 minutes;
Locking function: After activation, all function settings in the remote control will be locked.

Battery Use

1: This remote control can use 4 No. 5 batteries and 2S lithium batteries;
2: Please pay attention to the positive and negative terminals of the battery during installation;
3: The remote control cannot directly charge the battery.


PPM signal description

1: The remote control has a 3.5 audio terminal on the back;
2: PPM analog signal output, can be used for computer game simulation practice, computer game simulation requires self provided connection hardware;
3: It can also be used as a remote control software upgrade function.

Note

1:This product is not a toy. Please take safety precautions during use;
2:Please do not use this product at night or during thunderstorms, as adverse weather conditions may cause remote control devices to malfunction;
3:Please do not use this product in limited visibility conditions;
4:Please do not use this product in areas with rain, snow, or water. If liquid enters the system, it may cause unstable operation orEquipment malfunction.
5:Do not operate this product when you feel tired, uncomfortable, or after consuming alcohol or drugs that cause anesthesia or excitement. otherwiseMay cause serious harm to oneself or others;

标配接收机 Receiver parameters

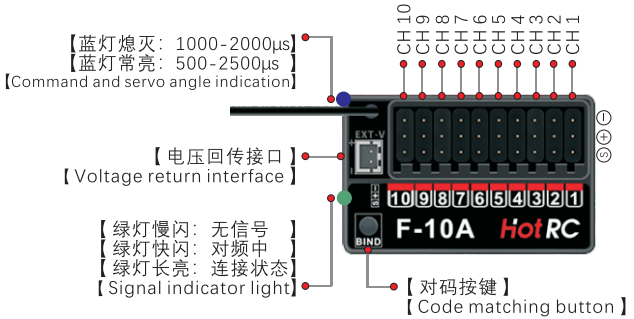

注意事项

1：标配接收机出厂未做防水处理、使用过程请注意防水！
2：接收机的天线需要特别防护、防止折断、安装位置需要注意磁场干扰！
3：接收机输入电压请勿超过9V、请使用稳定电源输入！
4：信号塔基站/磁场环境会对接收机的信号干扰影响、使用过程请注意！
5：数字舵机模式输出频率默认为：330Hz；脉冲宽度：500-2500μs；
6：模拟舵机模式输出频率默认为：50Hz； 脉冲宽度：1000-2000μs；
7：HOTRC品牌的接收机型号众多也可根据需求进行选配。

Note

1: The receiver has not been waterproofed at the factory, please pay attention to waterproofing!
2: The antenna of the receiver needs special protection, and the installation position should pay attention to magnetic field interference!
3: The input voltage of the receiver should not exceed 9V, use a stable voltage input!
4: Signal tower/magnetic field environment can interfere with the signal of the receiver!
5: The default output frequency of the digital servo mode is 330Hz; Pulse width: 500-2500μs;
6: The default output frequency for simulating servo mode is 50Hz; Pulse width: 1000-2000μs;
7: HOTRC brand receivers come in a wide range of models and can also be selected according to needs.

Parameter

Model	HT-10A
Model Type	RC Airplanes/Cars/Boats
Channels	10
RF Range	2.4GHZ ISM
RF Power	≈120MA
Modulation	GFSK
Spread Spectrum	FHSS
Reaction Speed	PWM≤5MS
RF Distance	Ground:≈300M-800M *
Receive Sensitivity	-96 dbm
Channel Resolution	4096
Transmitter Voltage	DC 4V-9V
Receiver Voltage	DC 4V-9V
Gross Weight	320g

Note: The marked distance is for reference only and may vary depending on the environment.