DI3RS–01

PARTS LOCATION

LHD

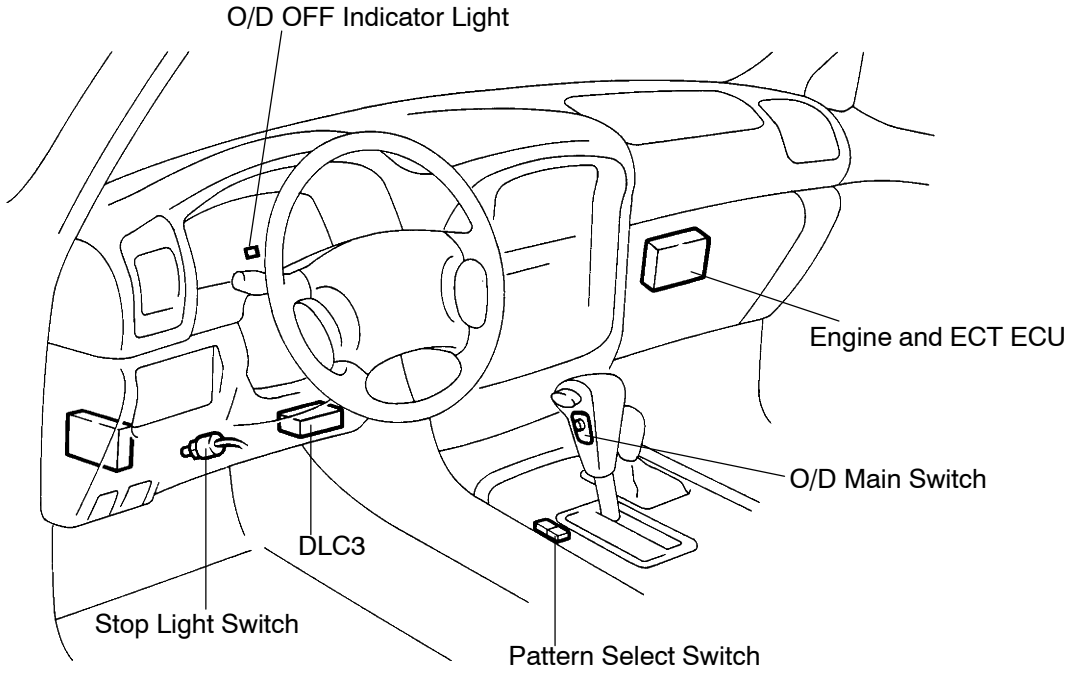

RHD

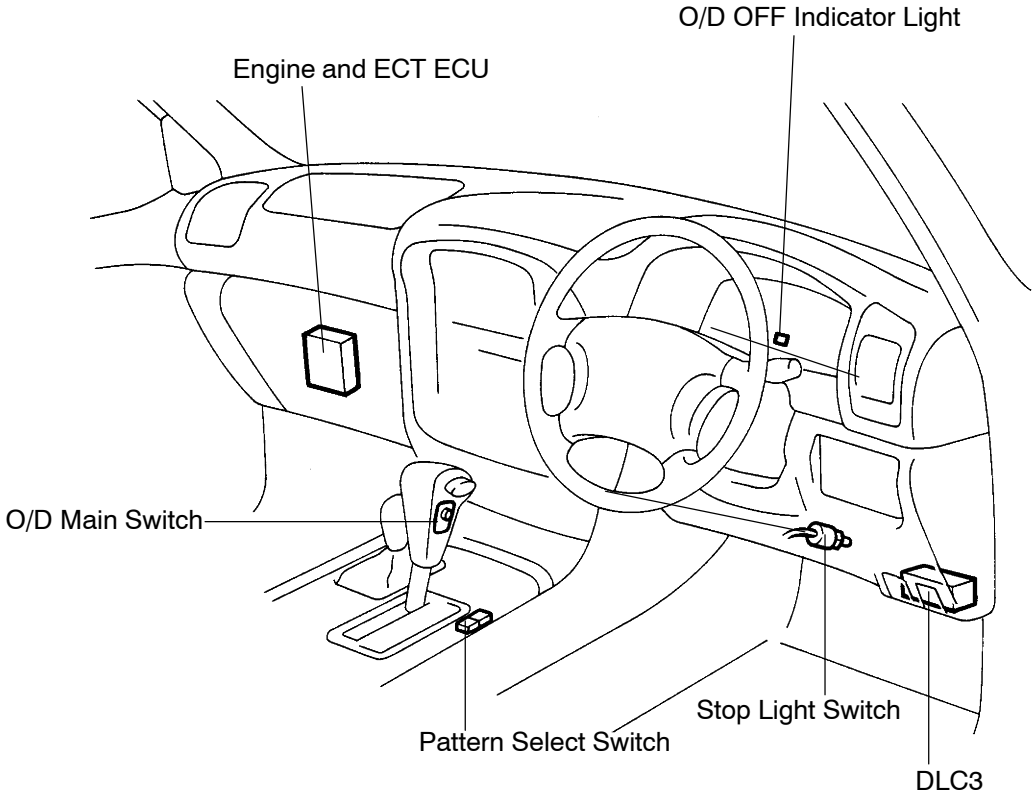

D03377
D01665

D04190

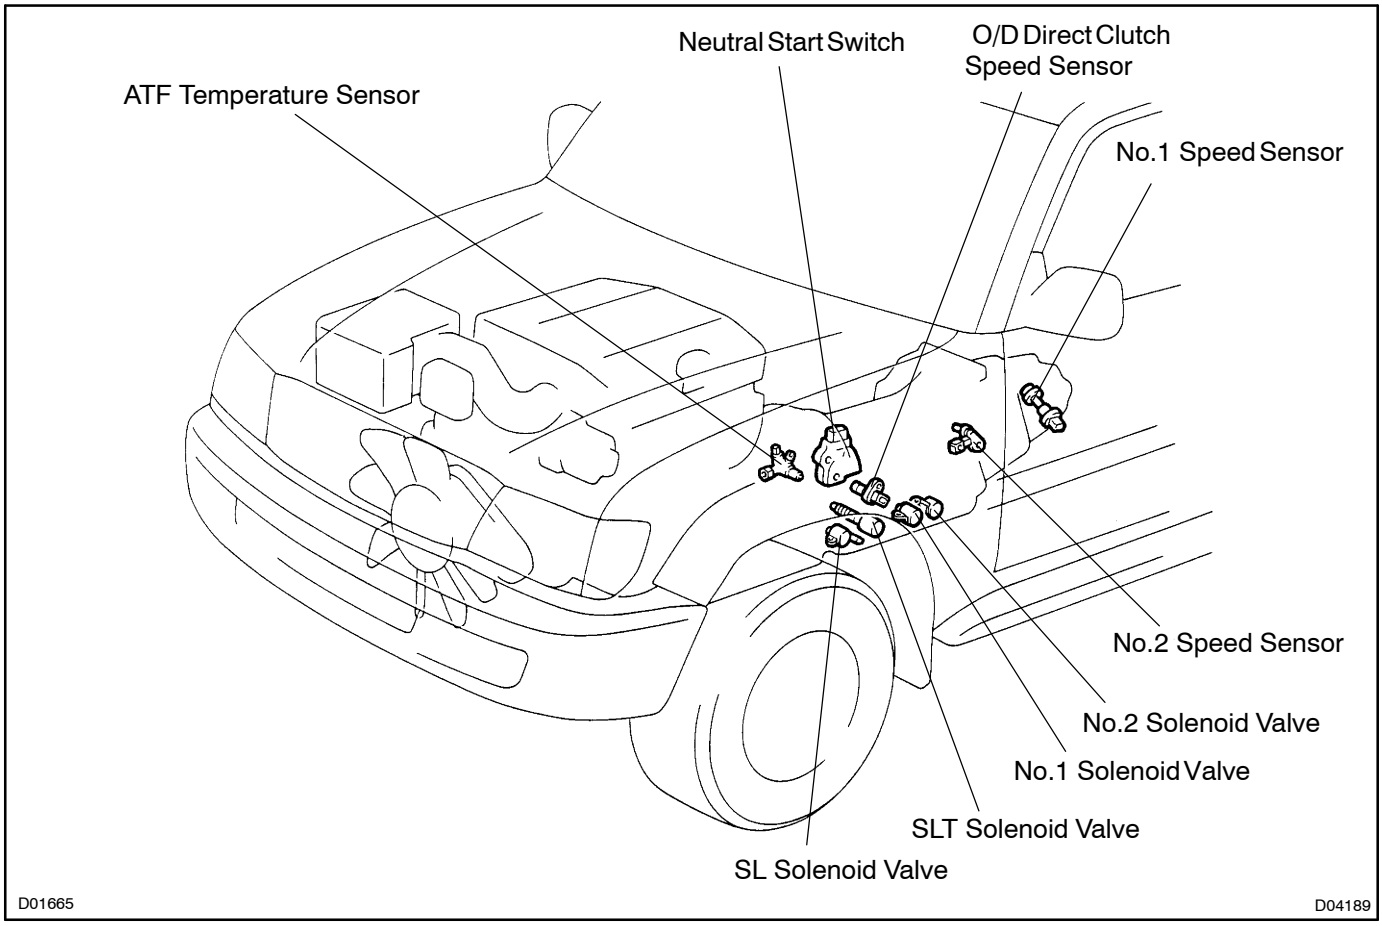
Neutral Start Switch
O/D Direct Clutch Speed Sensor
ATF Temperature Sensor
No.1 Speed Sensor
No.2 Speed Sensor
No.2 Solenoid Valve
No.1 Solenoid Valve
SLT Solenoid Valve
SL Solenoid Valve
D01665
D04189