#### BO1TY-01


# DISASSEMBLY

### 1. REMOVE ASSIST GRIP

(a) Using a screwdriver, remove the 2 assist grip plugs. HINT:

Tape the screwdriver tip before use.


- (b) Remove the 2 screws and assist grip.
- 2. REMOVE INSIDE HANDLE BEZEL

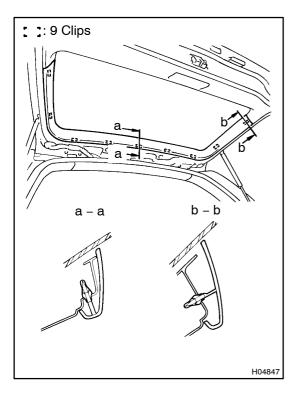

#### 3. REMOVE CENTER BACK DOOR GARNISH

Using a screwdriver, remove the center back door garnish. HINT:


Tape the screwdriver tip before use.

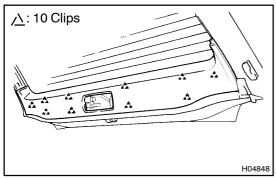

### 4. REMOVE BACK DOOR GARNISH

Using a screwdriver, remove the back door garnish. HINT:

Tape the screwdriver tip before use.

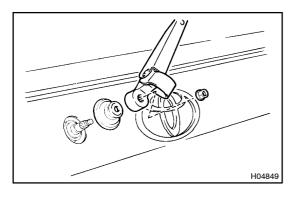


# 5. REMOVE REAR WIPER ARM

(See page BO-56)

- (a) Open the cover.
- (b) Remove the nut and rear wiper arm.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

(c) Remove the grommet.

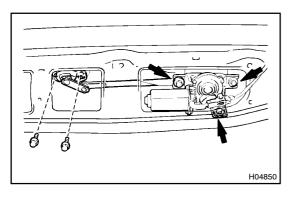


# 6. REMOVE REAR WIPER MOTOR AND LINK AS-SEMBLY

- (a) Disconnect the connector.
- (b) Remove the 2 bolts.
- (c) Unfasten the 3 bolts and remove the rear wiper motor and link assembly.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

7. REMOVE REAR WIPER RELAY

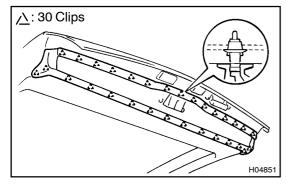


#### 8. REMOVE LIFTGATE WEATHERSTRIP

Remove the liftgate weatherstrip.


**NOTICE:** 

Do not pull strongly on the weatherstrip as it may tear.

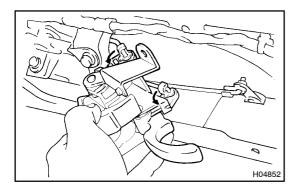

#### 9. REMOVE BACK DOOR INSIDE HANDLE

- (a) Remove the 2 bolts.
- (b) Disconnect the back door lock locking rod and back door lock inside opening link, then remove the back door inside handle.

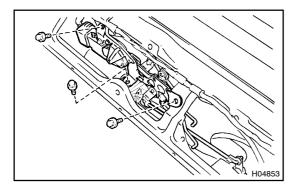


# 10. REMOVE BACK DOOR CONTROL

- (a) Disconnect the links.
- (b) Remove the 3 bolts.


Torque: 7.4 N·m (75 kgf·cm, 65 in.·lbf)

(c) Disconnect the connector, then remove the back door control.

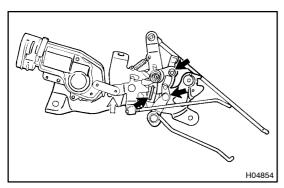

# HINT:

At the time of assembly, please refer to the following item. Apply MP grease to the sliding surface of the back door control.

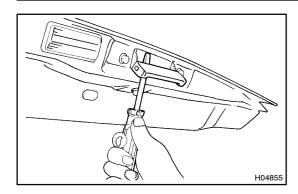


# 11. REMOVE BACK DOOR OUTSIDE HANDLE AS-SEMBLY

(a) Using a screwdriver, remove the back door outside handle.

### HINT:

Tape the screwdriver tip before use.

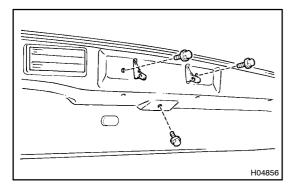

(b) Remove the 3 bolts and back door outside handle assembly.

# 12. REMOVE THESE PARTS:

- (a) License plate light
- (b) Back door lock

Torque: 7.4 N·m (75 kgf·cm, 65 in.·lbf)

(c) Back door lock protector