FU05J–01

COMPONENTS

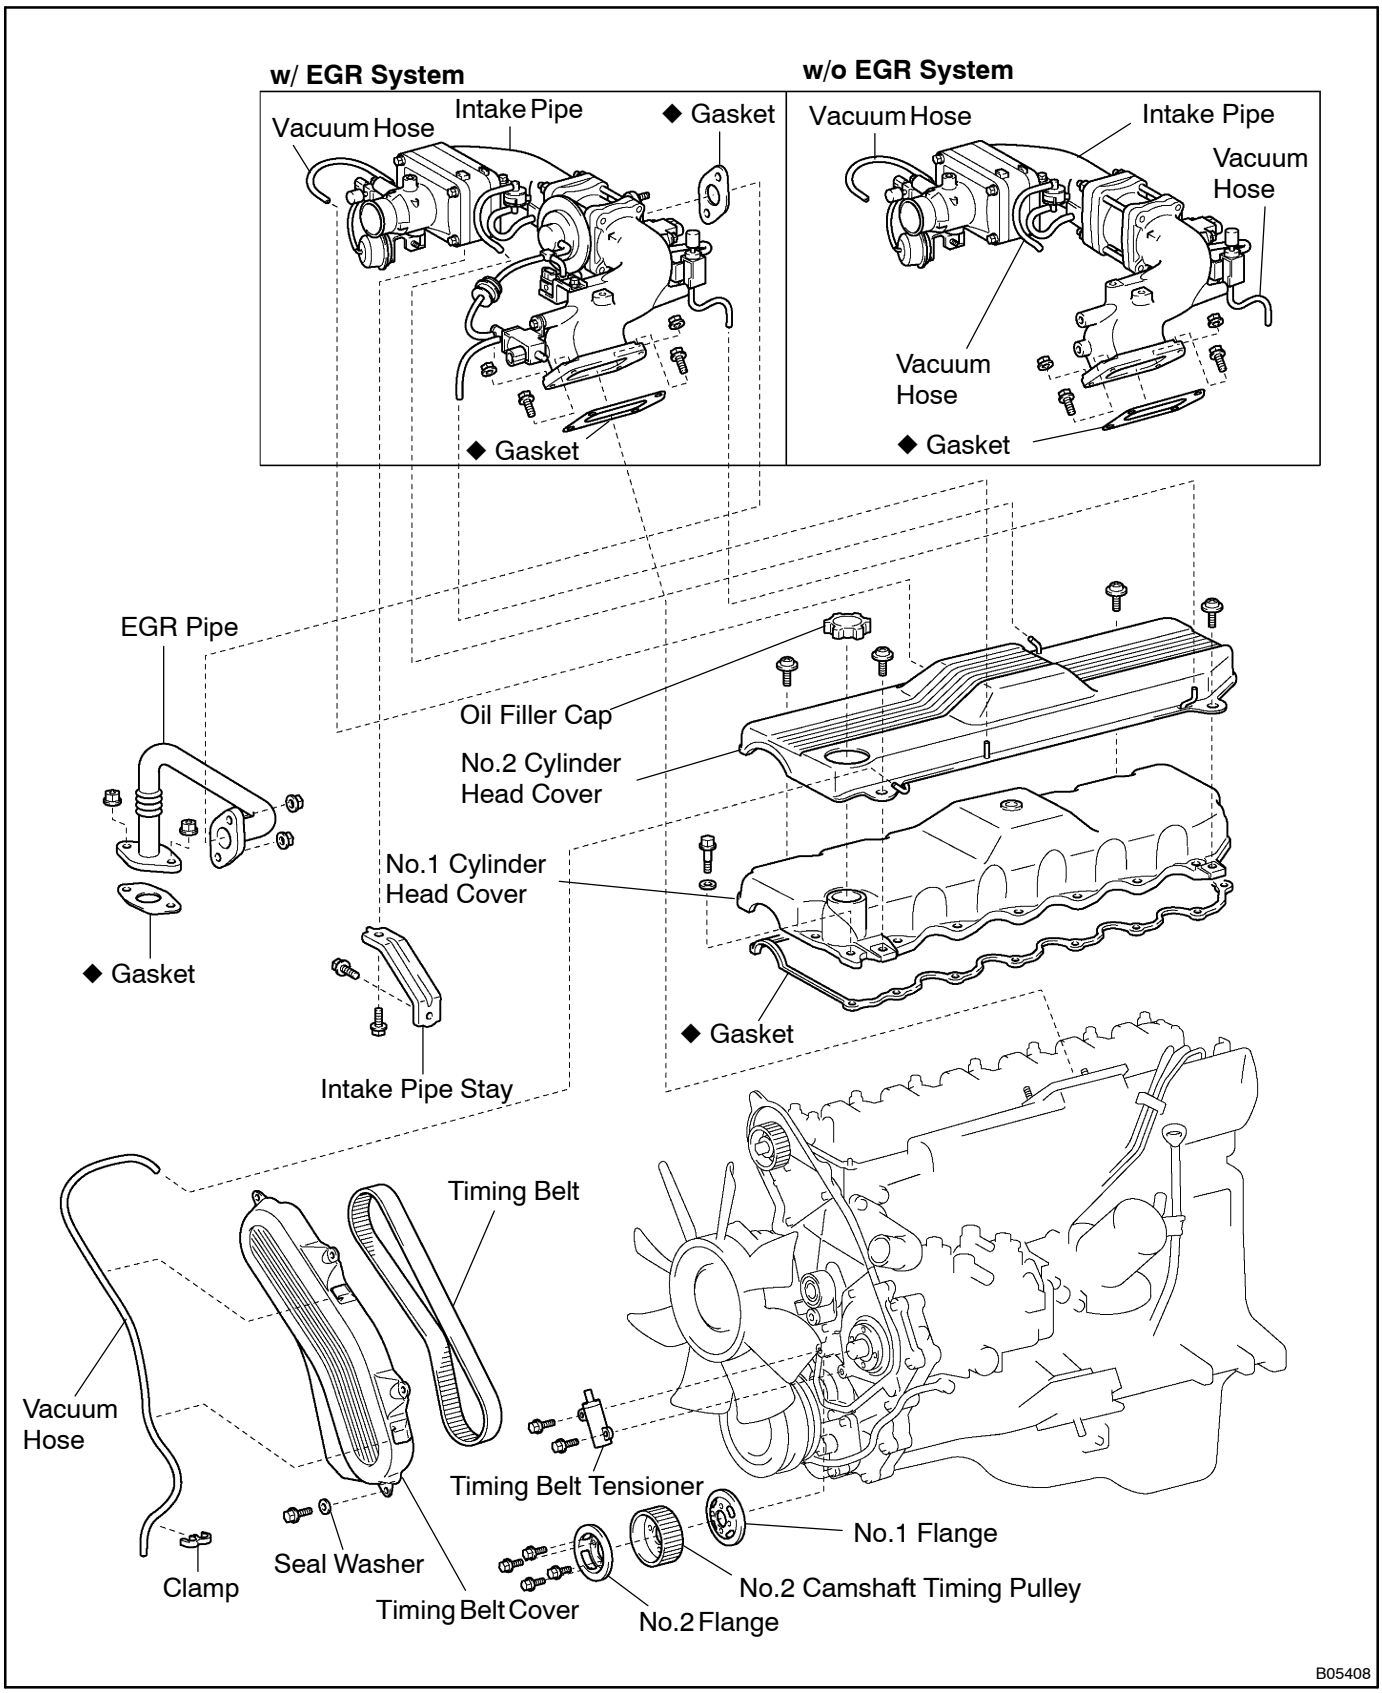

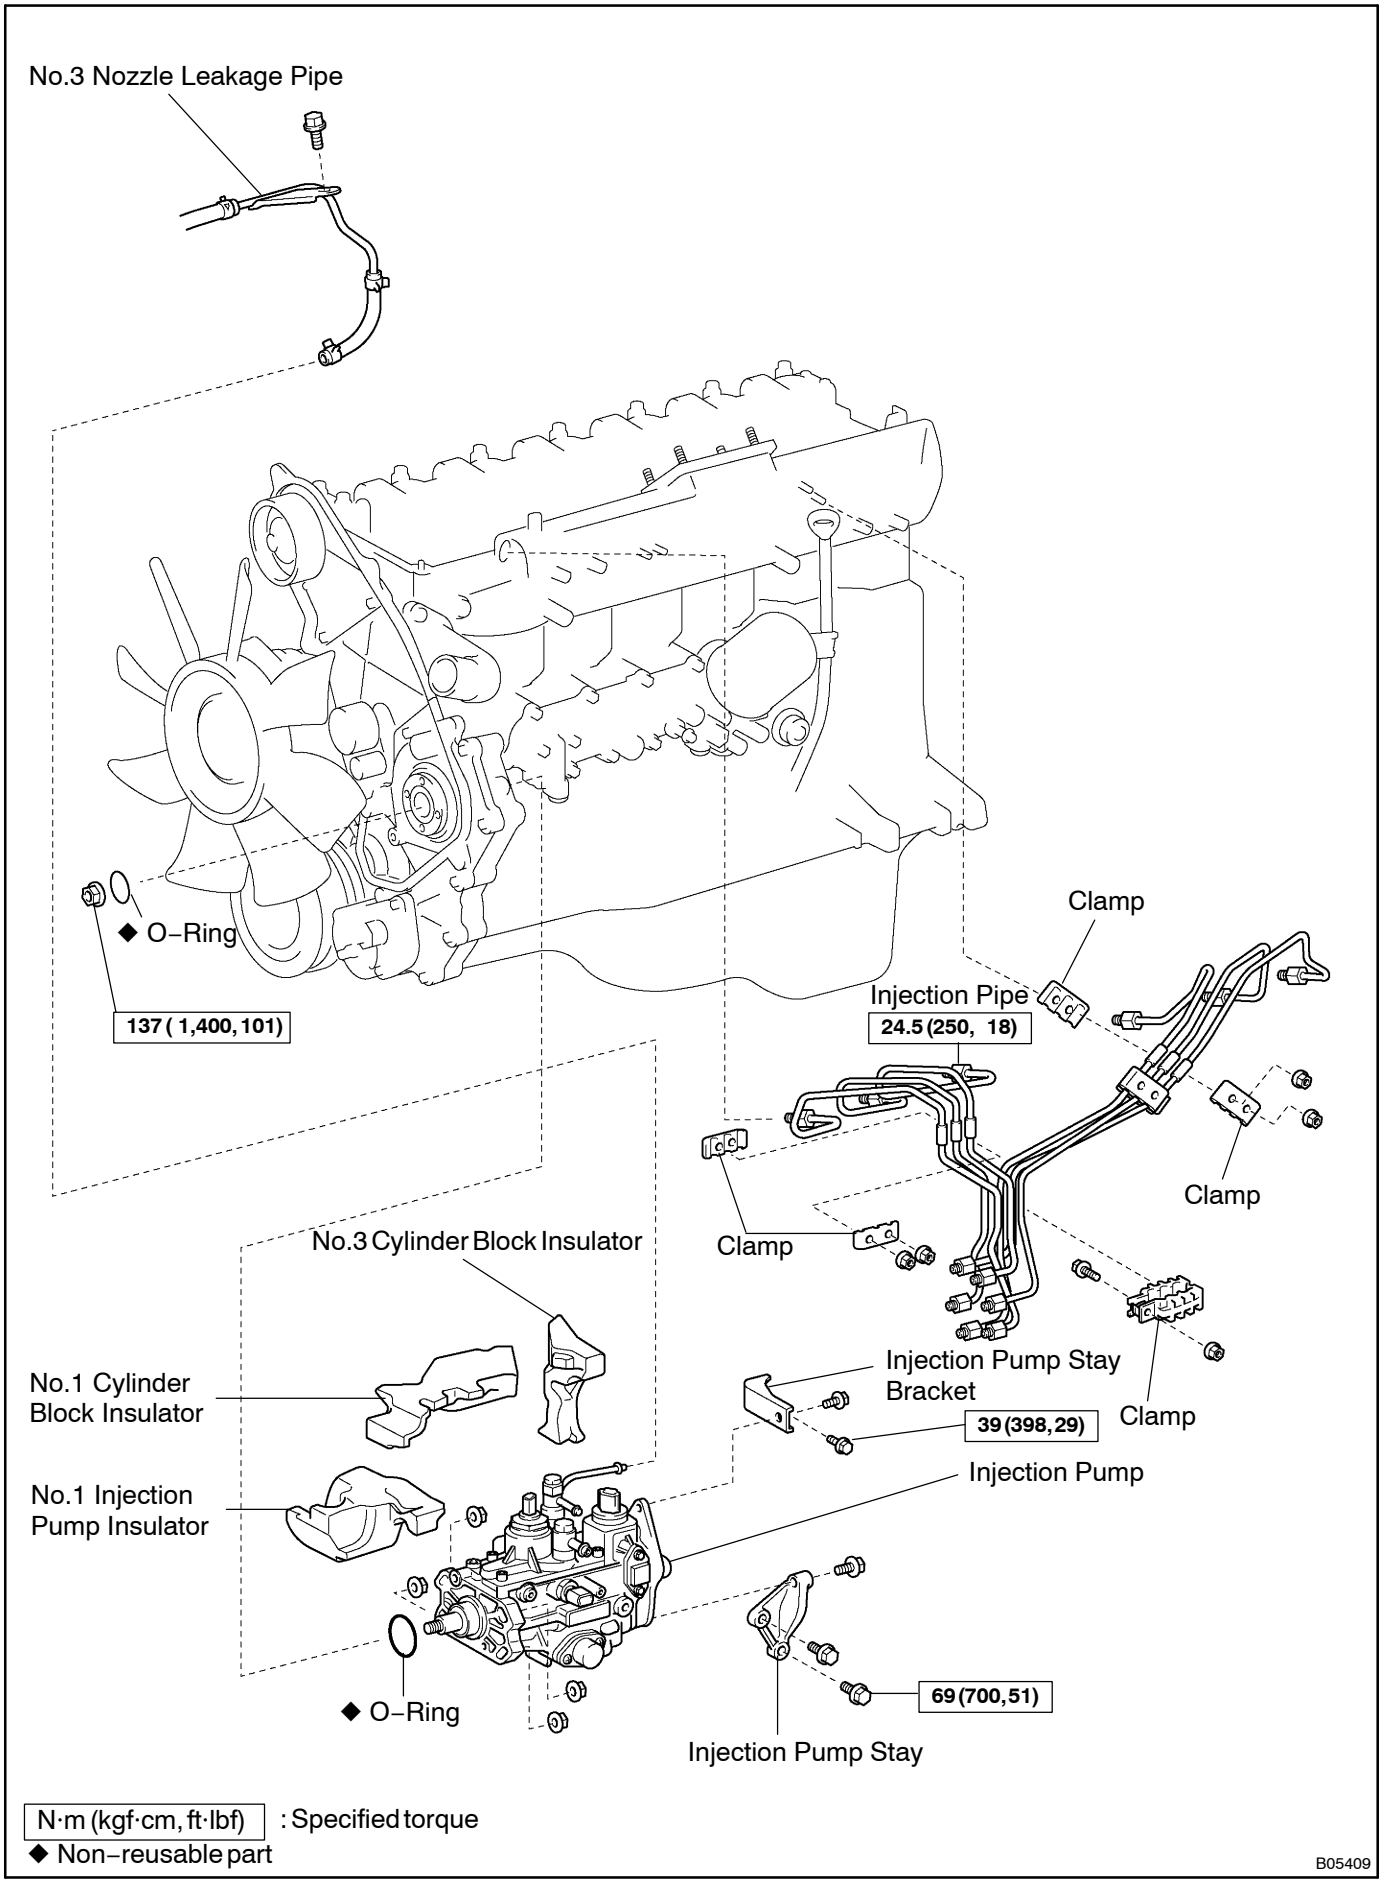
No.3 Nozzle Leakage Pipe
◆ O–Ring
137 (1,400, 101)
Clamp
Injection Pipe
24.5 (250, 18)
Clamp
Clamp
No.3 Cylinder Block Insulator
No.1 Cylinder Block Insulator
Injection Pump Stay Bracket
39 (398, 29)
Clamp
No.1 Injection Pump Insulator
Injection Pump
◆ O–Ring
69 (700, 51)
Injection Pump Stay
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
B05409

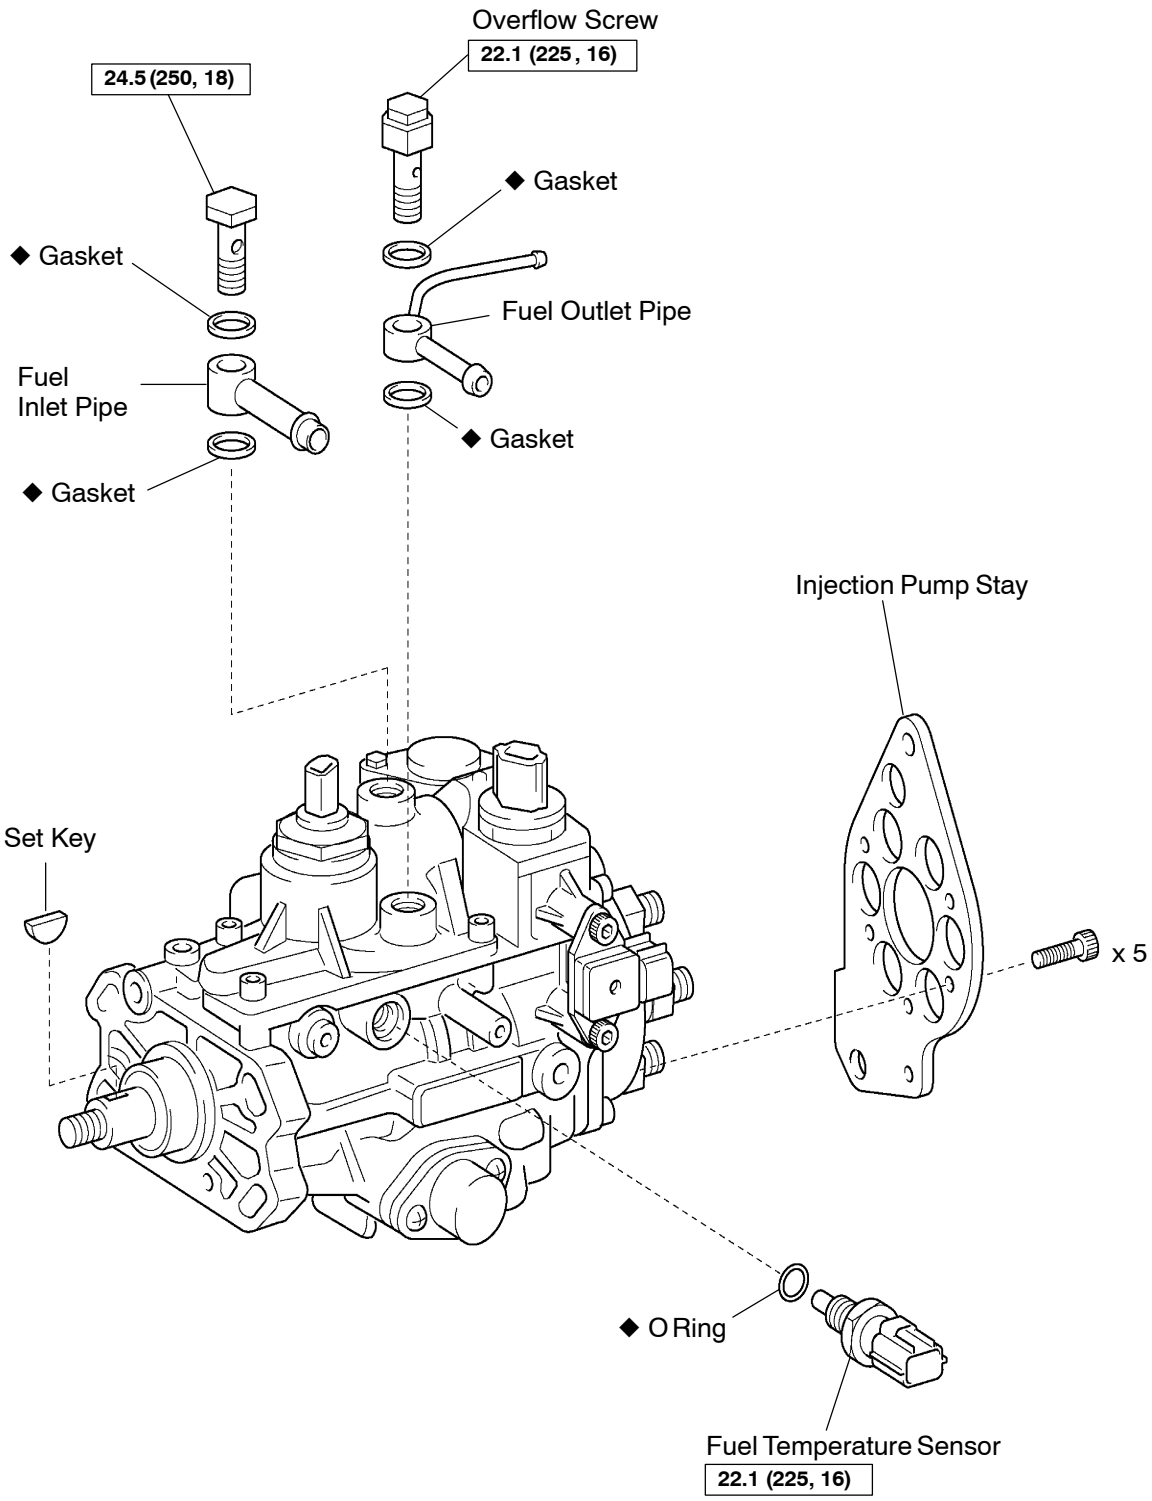

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

B05410