COMPONENTS

400XJ–01

A750# 4RUNNER

5.4 (55, 48 in. ·lbf)

5.4 (55, 48 in. ·lbf)

Automatic Transaxle Breather Tube

◆ O-Ring

Automatic Transaxle Breather Tube

◆ O-Ring

A750# 4RUNNER

Transmission Control Shaft Lever LH

Transmission Wire

Transmission Case Adapter Adapter

5.4 (55, 48 in. ·lbf)

Park/Neutral Position Switch Assy

Oil Cooler Union

5.4 (55, 48 in. ·lbf)

Transmission Revolution Sensor

13 (130, 9)

29 (296, 21)

34 (345, 25)

x4

6.9 (70, 61 in. ·lbf)

Lock Washer

◆ O-Ring

O-Ring

◆ Transmission Case Adapter Oil Seal

34 (345, 25)

x6

x2

x2

34 (345, 25)

x4

34 (345, 25)

Transmission Control Shaft Lever LH

◆ O-Ring

Transmission Revolution Sensor

16 (163, 12)

Automatic Transmission Housing

Washer

57 (581, 42)

5.4 (55, 48 in. ·lbf)

A750E 4RUNNER

◆ Automatic Transmission Extension Housing Oil Seal

34 (345, 25)

x4

x2

34 (345, 25)

Extension Housing Assy

◆ Extension Housing Dust Deflector

A750F 4RUNNER, GX470

◆ Transmission Case Adapter Oil Seal
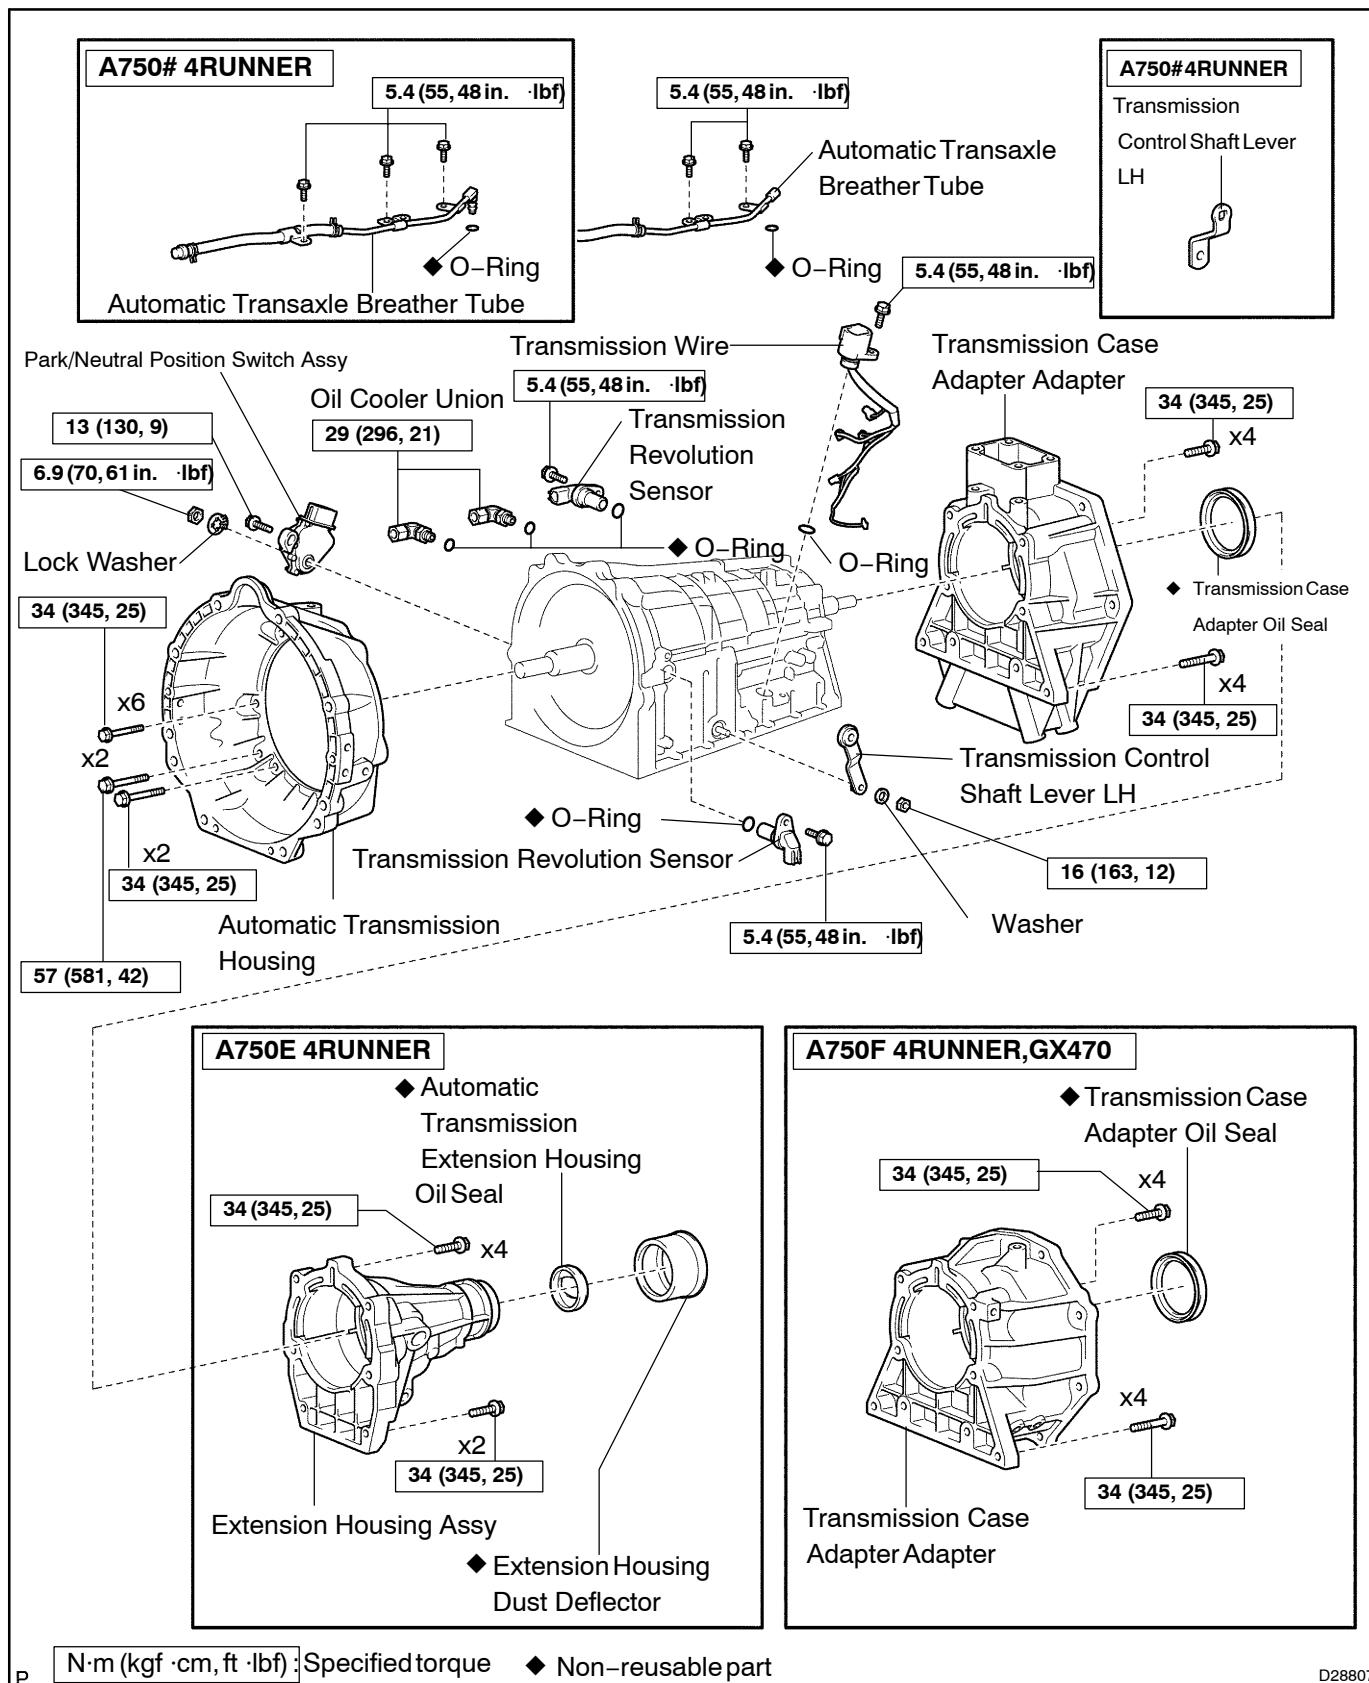
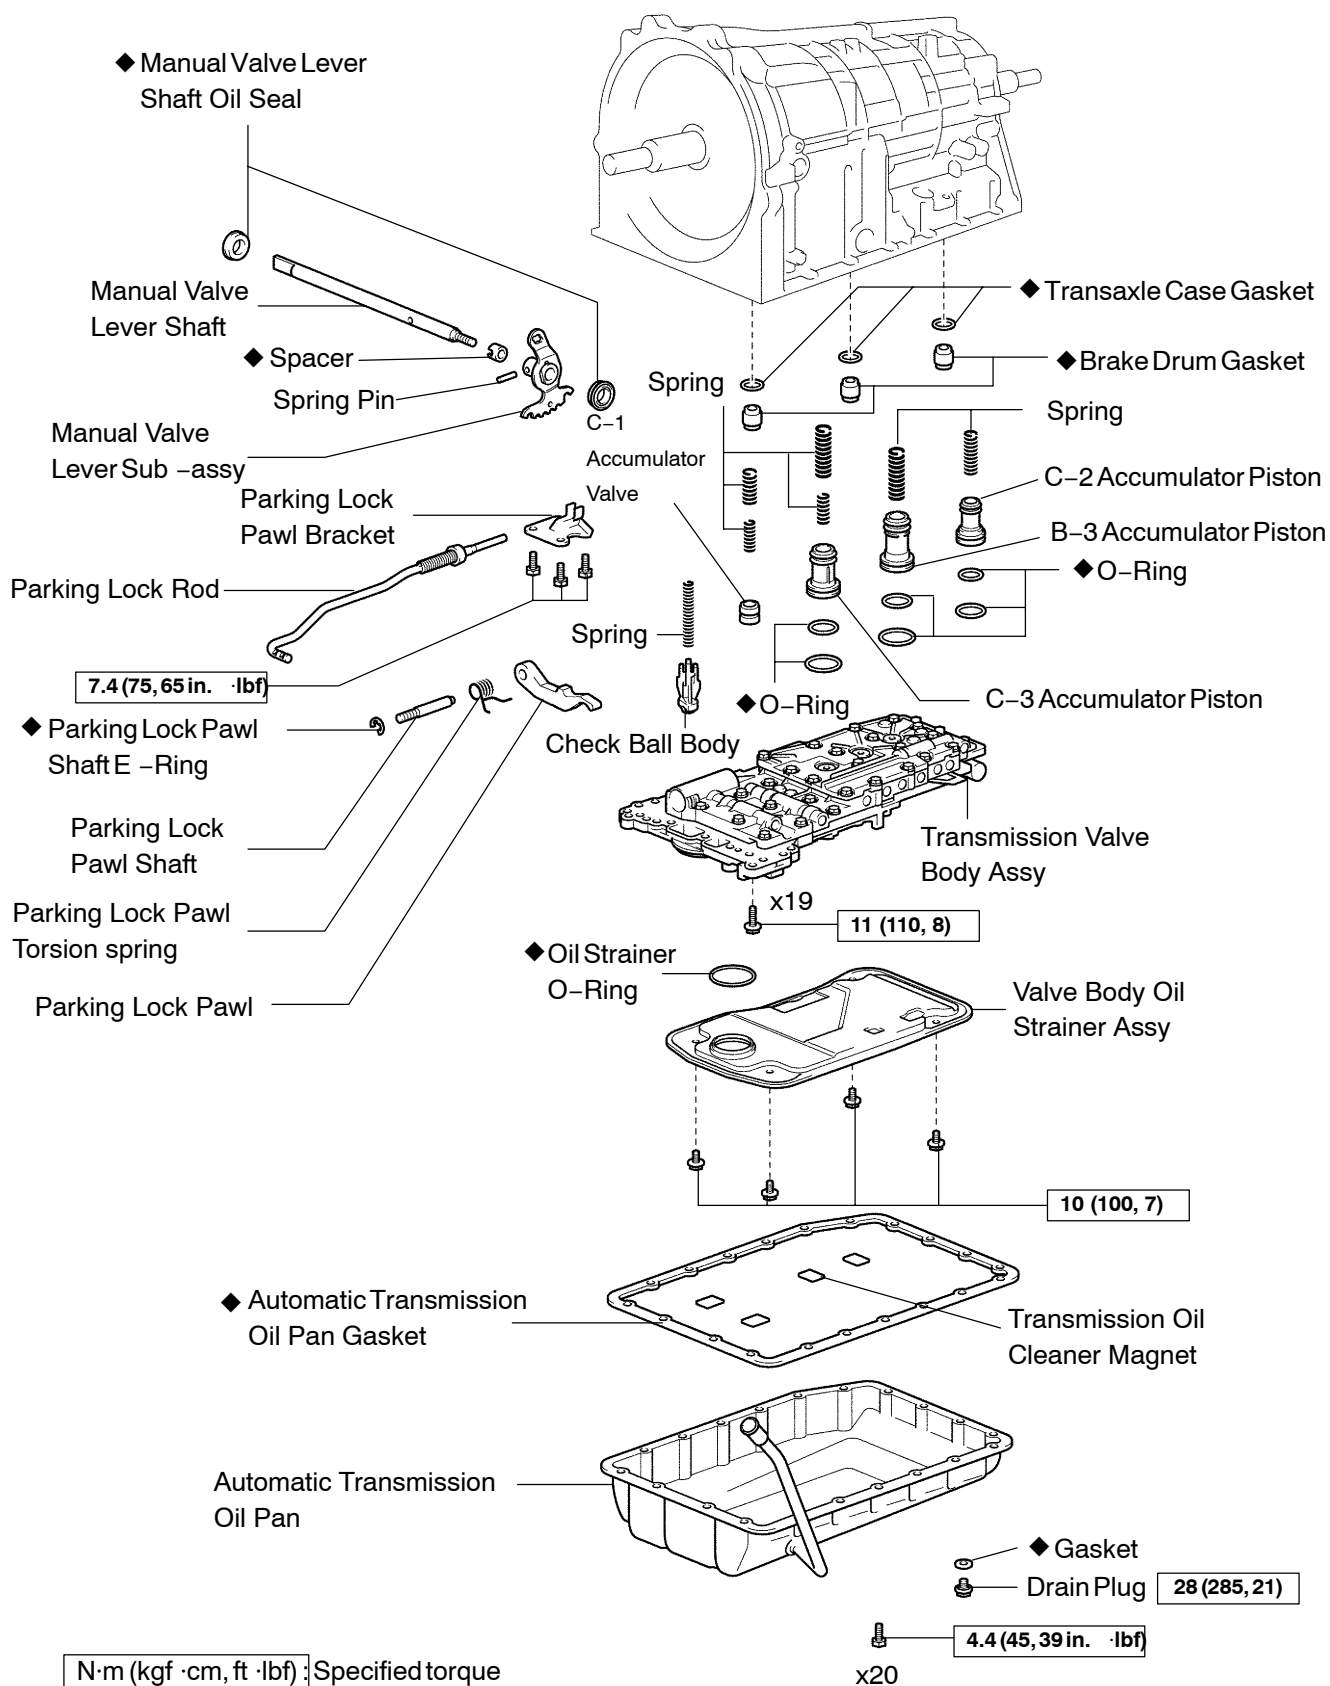34 (345, 25)

x4

x4

34 (345, 25)

Transmission Case Adapter Adapter

| N·m (kgf ·cm, ft ·lbf) : Specified torque | ◆ Non-reusable part |

P

D28807

◆ Manual Valve Lever Shaft Oil Seal

Manual Valve Lever Shaft

◆ Spacer

Spring Pin

Manual Valve Lever Sub –assy

Parking Lock Pawl Bracket

Parking Lock Rod

7.4 (75, 65 in. ·lbf)

◆ Parking Lock Pawl Shaft E –Ring

Parking Lock Pawl Shaft

Parking Lock Pawl Torsion spring

Parking Lock Pawl

Spring

C–1 Accumulator Valve

Spring

Check Ball Body

◆ O–Ring

◆ Oil Strainer O–Ring

◆ Transaxle Case Gasket

◆ Brake Drum Gasket

Spring

C–2 Accumulator Piston

B–3 Accumulator Piston

◆ O–Ring

C–3 Accumulator Piston

Transmission Valve Body Assy

x19

11 (110, 8)

Valve Body Oil Strainer Assy

10 (100, 7)

◆ Automatic Transmission Oil Pan Gasket

Transmission Oil Cleaner Magnet

Automatic Transmission Oil Pan

◆ Gasket

Drain Plug **28 (285, 21)**

4.4 (45, 39 in. ·lbf)

x20

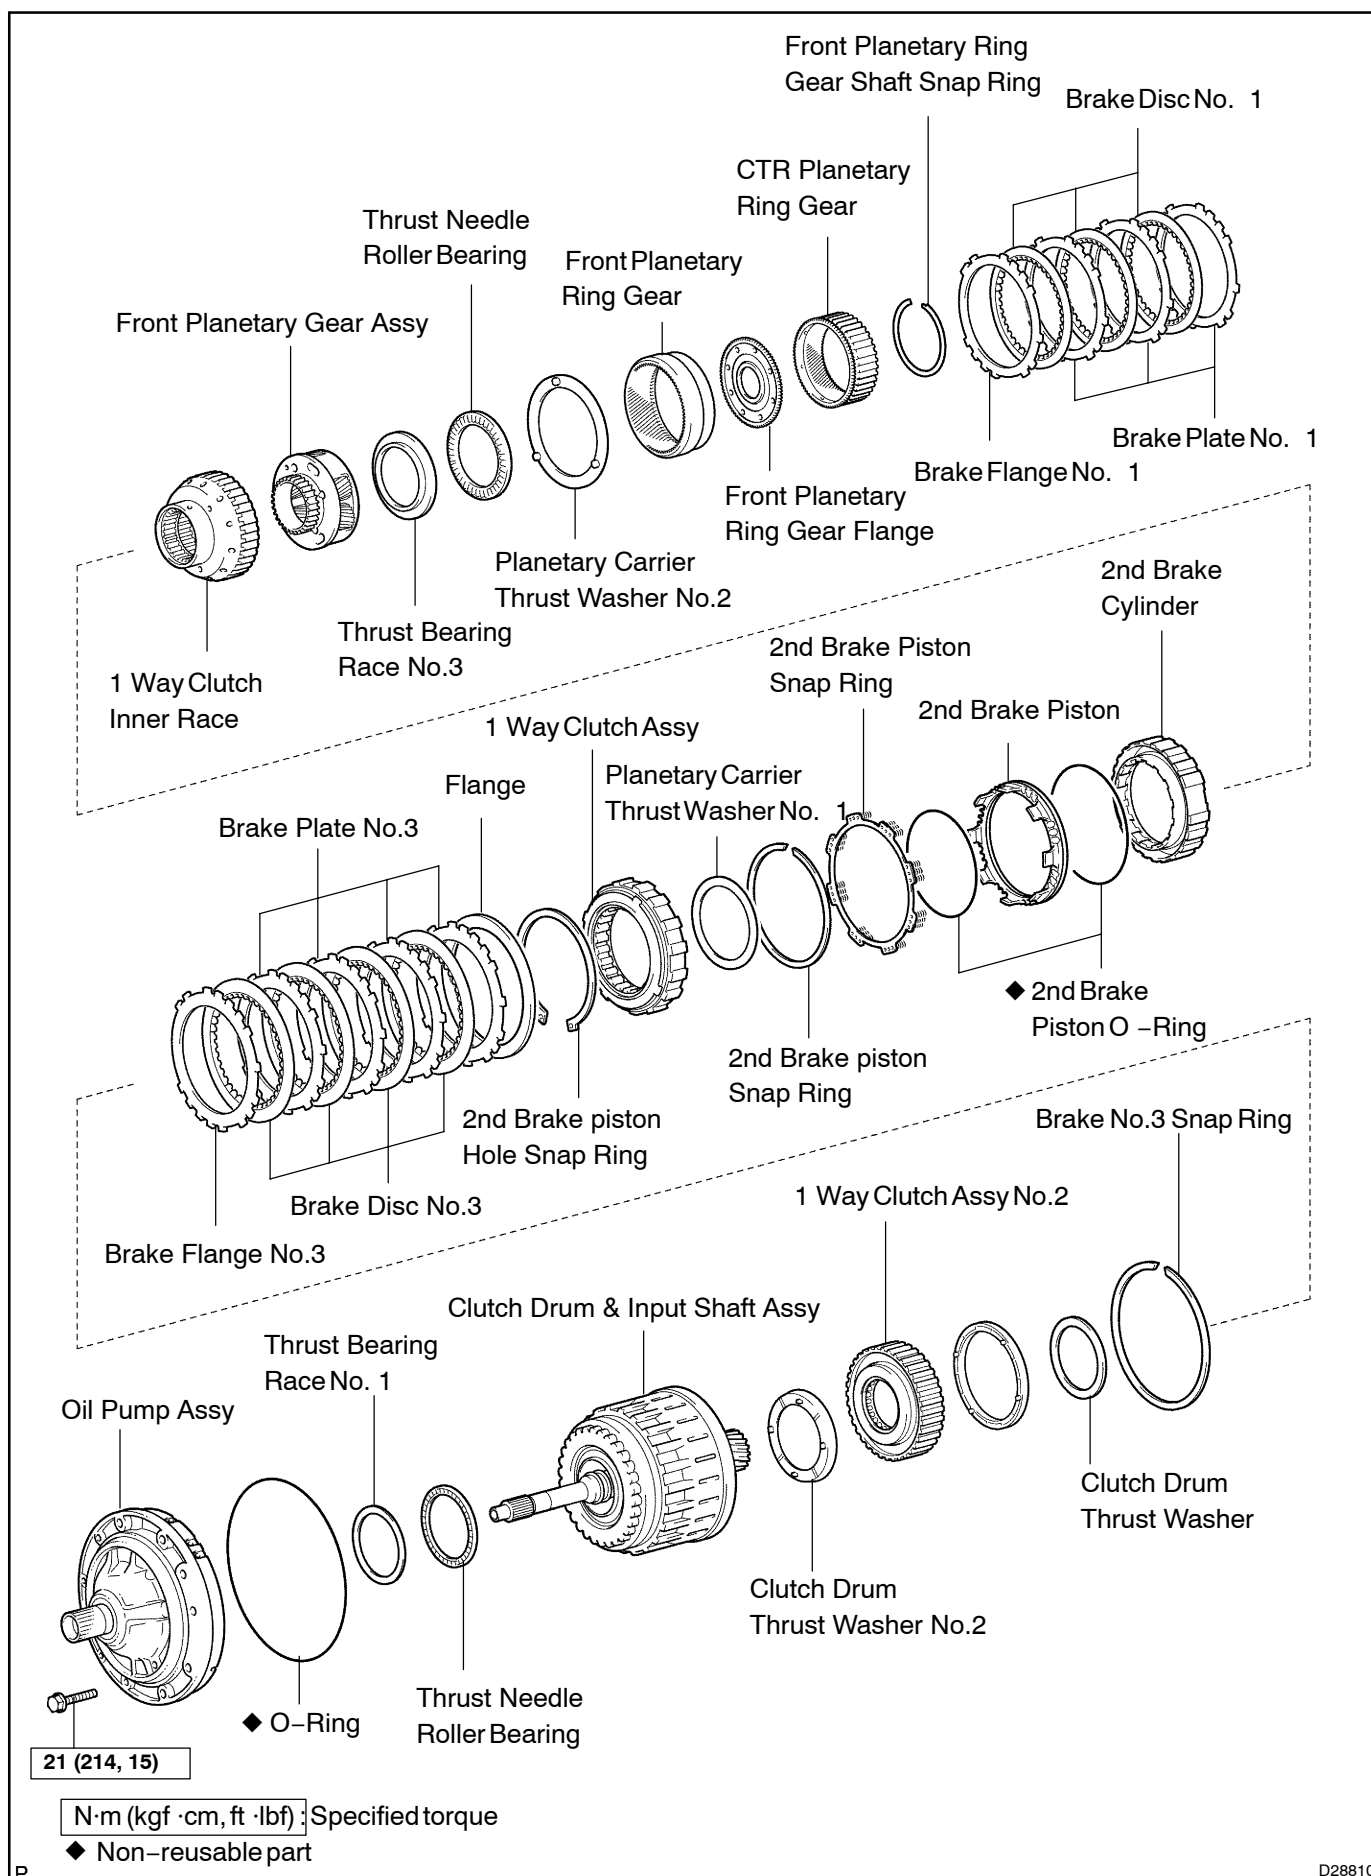**N·m (kgf ·cm, ft ·lbf) : Specified torque**

◆ Non–reusable part

P

D28808

Front Planetary Ring Gear Shaft Snap Ring

Brake Disc No. 1

CTR Planetary Ring Gear

Thrust Needle Roller Bearing

Front Planetary Ring Gear

Front Planetary Gear Assy

Brake Plate No. 1

Brake Flange No. 1

Front Planetary Ring Gear Flange

Planetary Carrier Thrust Washer No.2

Thrust Bearing Race No.3

1 Way Clutch Inner Race

2nd Brake Cylinder

2nd Brake Piston Snap Ring

2nd Brake Piston

1 Way Clutch Assy

Flange

Planetary Carrier Thrust Washer No. 1

Brake Plate No.3

◆ 2nd Brake Piston O –Ring

2nd Brake piston Hole Snap Ring

2nd Brake piston Snap Ring

Brake Disc No.3

Brake No.3 Snap Ring

1 Way Clutch Assy No.2

Brake Flange No.3

Clutch Drum & Input Shaft Assy

Thrust Bearing Race No. 1

Oil Pump Assy

Clutch Drum Thrust Washer

Clutch Drum Thrust Washer No.2

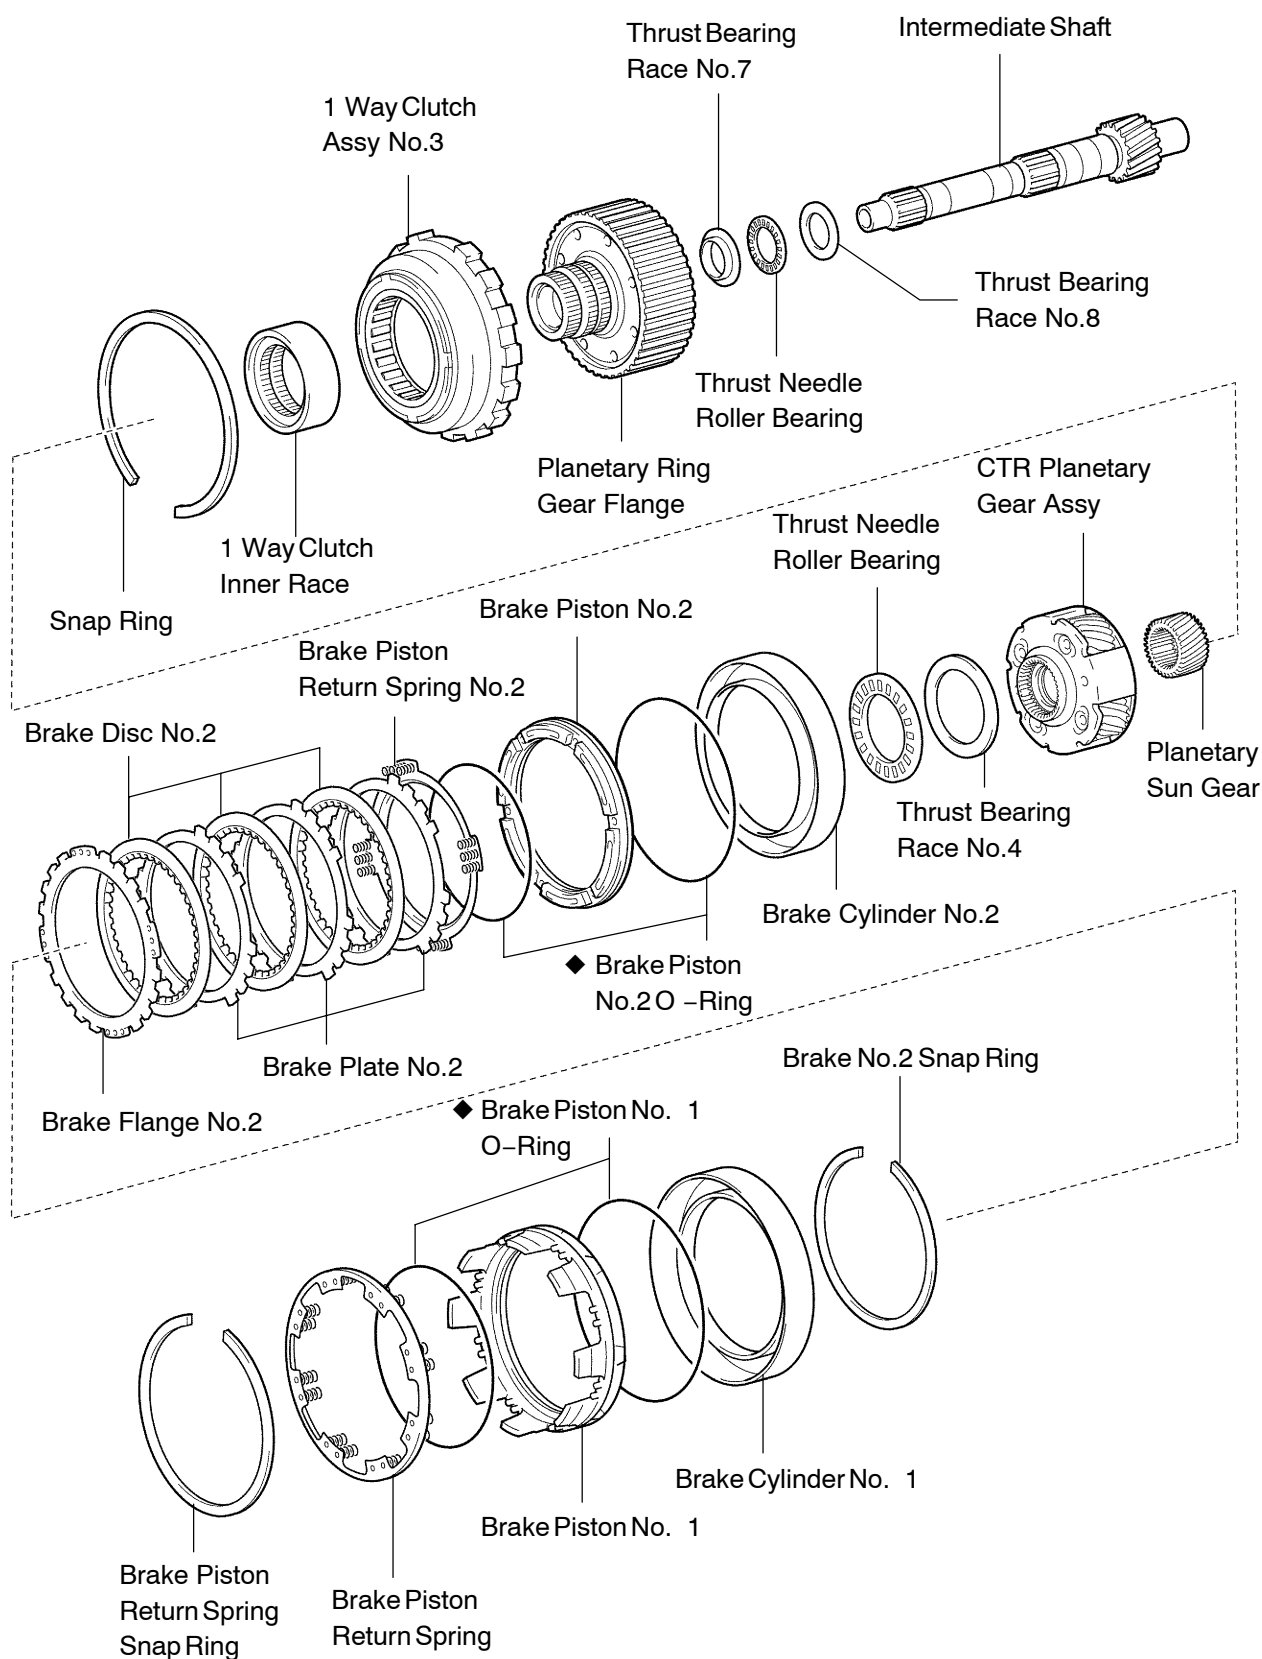Thrust Needle Roller Bearing

◆ O–Ring

21 (214, 15)

N·m (kgf ·cm, ft ·lbf) : Specified torque
◆ Non–reusable part

D28810

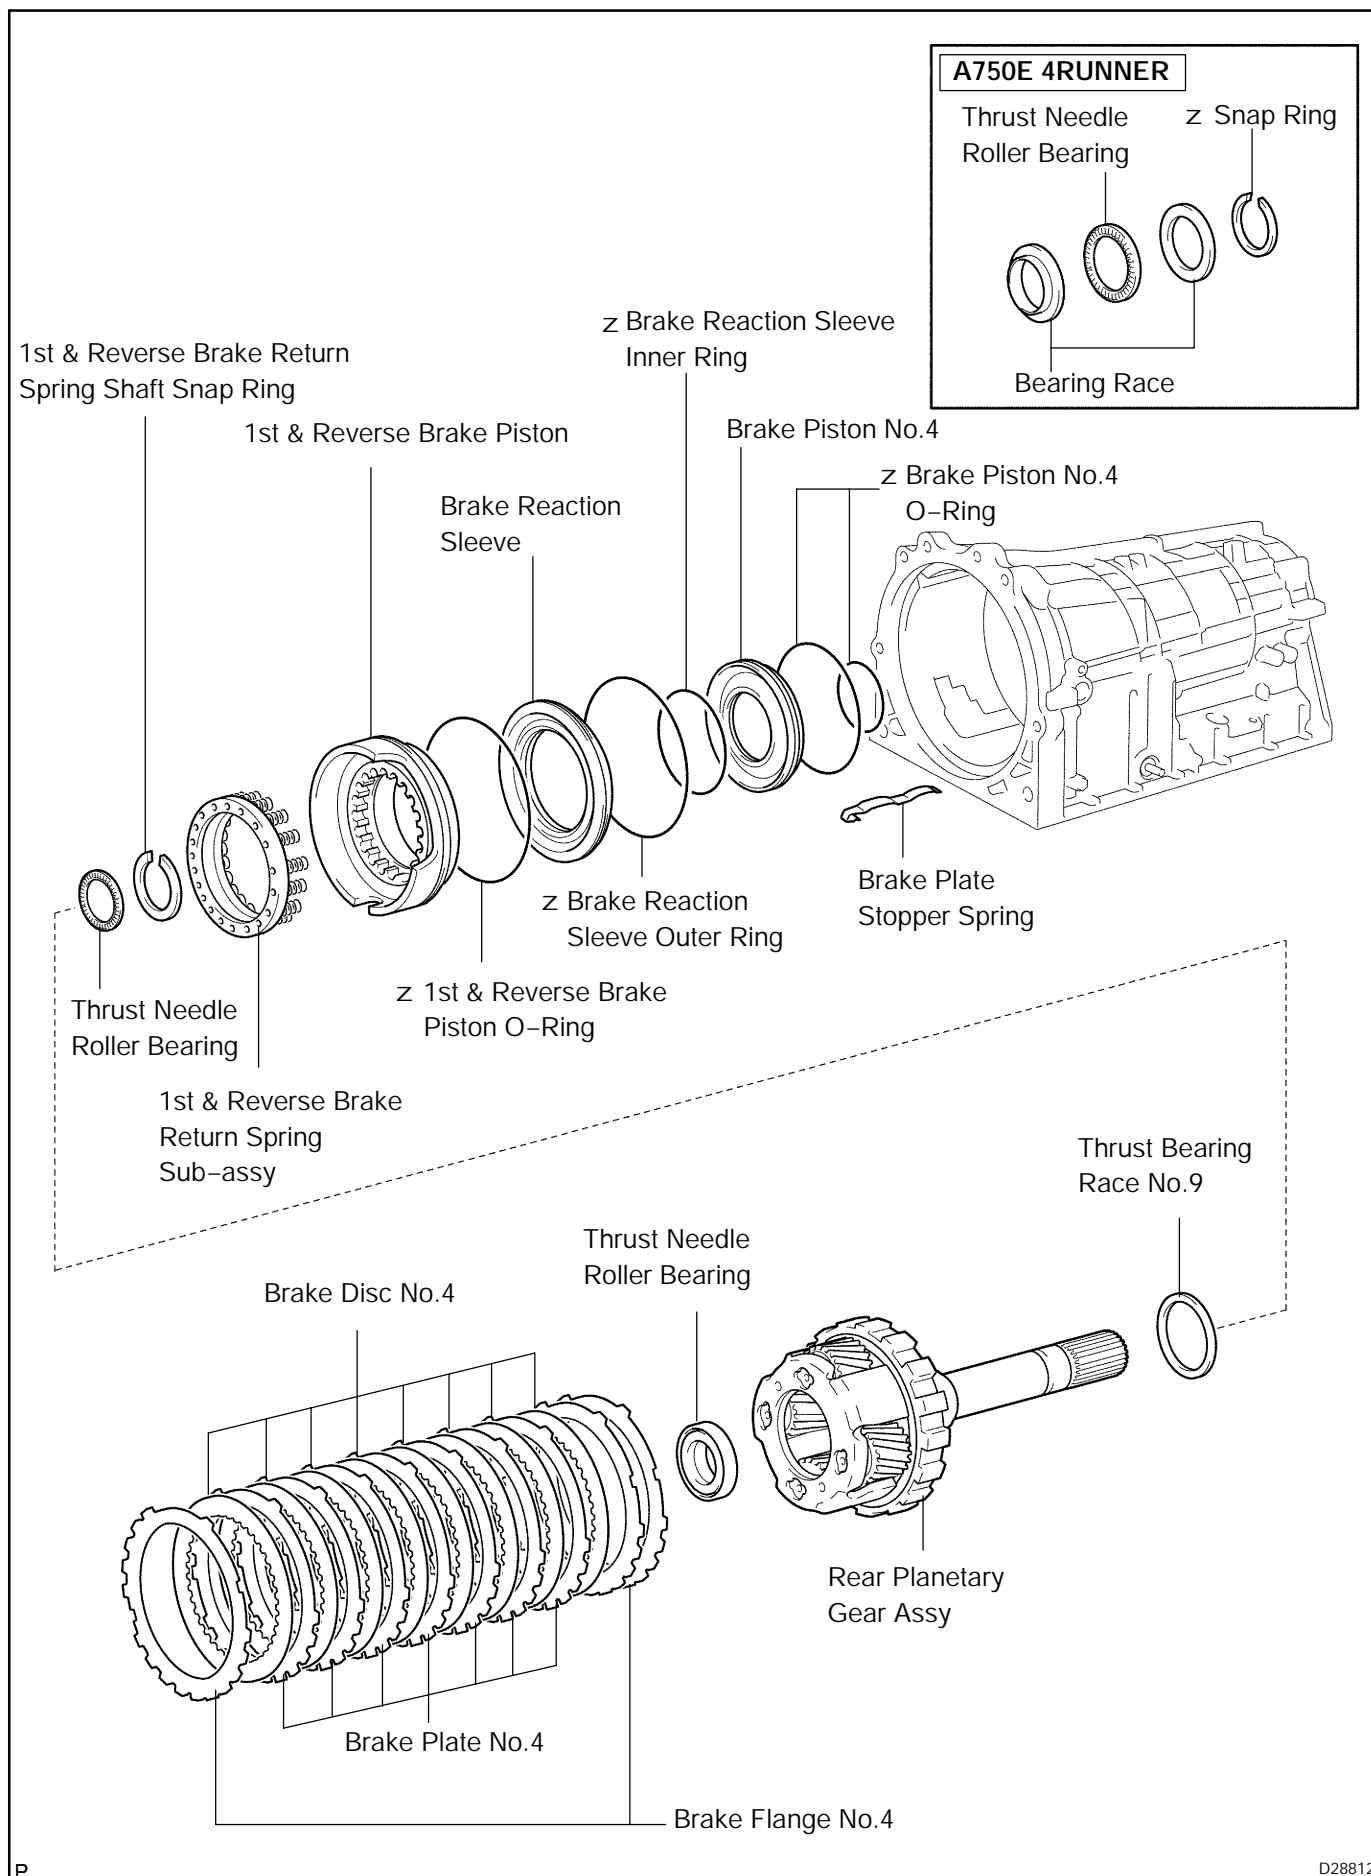Thrust Bearing Race No.7

Intermediate Shaft

1 Way Clutch Assy No.3

Thrust Bearing Race No.8

Thrust Needle Roller Bearing

1 Way Clutch Inner Race

Snap Ring

Planetary Ring Gear Flange

CTR Planetary Gear Assy

Thrust Needle Roller Bearing

Brake Piston No.2

Brake Piston Return Spring No.2

Brake Disc No.2

Planetary Sun Gear

Thrust Bearing Race No.4

Brake Cylinder No.2

◆ Brake Piston No.2 O–Ring

Brake Plate No.2

Brake Flange No.2

Brake No.2 Snap Ring

◆ Brake Piston No. 1 O–Ring

Brake Cylinder No. 1

Brake Piston No. 1

Brake Piston Return Spring Snap Ring

Brake Piston Return Spring

◆ Non–reusable part

P

D28811

A750E 4RUNNER

Thrust Needle Roller Bearing

z Snap Ring

Bearing Race

z Brake Reaction Sleeve Inner Ring

1st & Reverse Brake Return Spring Shaft Snap Ring

Brake Piston No.4

1st & Reverse Brake Piston

z Brake Piston No.4 O-Ring

Brake Reaction Sleeve

z Brake Reaction Sleeve Outer Ring

Thrust Needle Roller Bearing

z 1st & Reverse Brake Piston O-Ring

Brake Plate Stopper Spring

1st & Reverse Brake Return Spring Sub-assy

Thrust Bearing Race No.9

Thrust Needle Roller Bearing

Brake Disc No.4

Rear Planetary Gear Assy

Brake Plate No.4

Brake Flange No.4