DIASE-01


| DTC | C 1541 / 41 | Vehicle Skid Control System Malfunction |
|-----|-------------|---|
| | | |


CIRCUIT DESCRIPTION

The VGRS system will illuminate the warning light and this DTC will be recorded when some ABS/VSC system DTCs are set.

| DTC No. | DTC Detecting Condition | Trouble Area |
|----------|--|---------------------|
| C1541/41 | The system receives the information about a malfunction in the steering sensor signal or in the vehicle speed signal | VSC system VGRS ECU |
| | from ABS/VSC. | Skid control ECU |

WIRING DIAGRAM

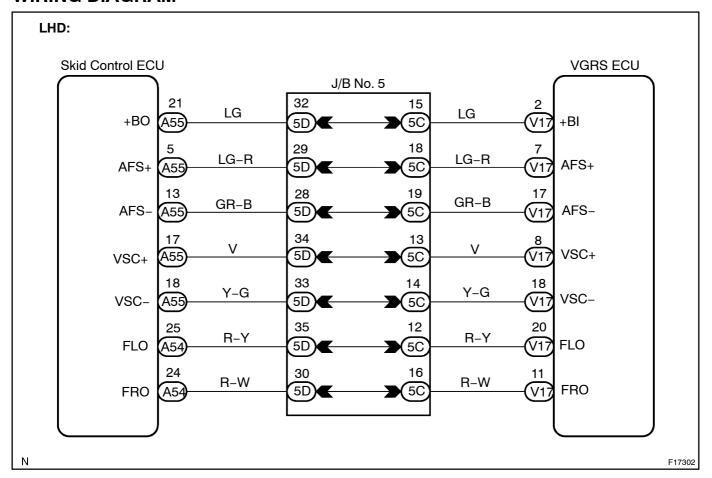

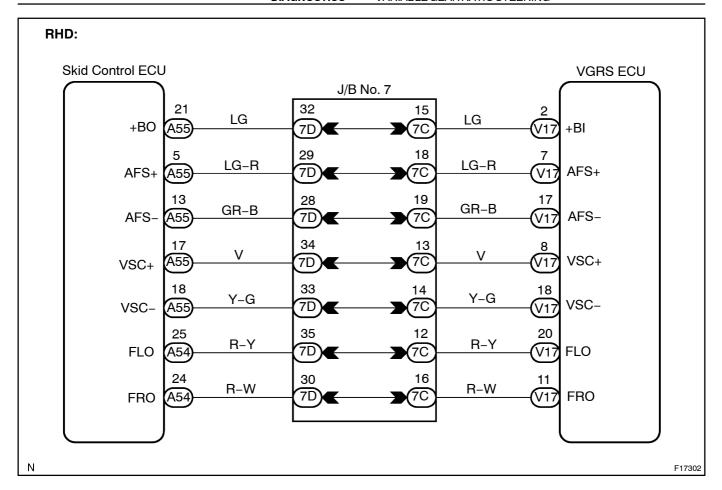

INSPECTION PROCEDURE

1 Check the ABS/VSC for DTCs (See page DI-185).

Are any ABS/VSC DTCs present?



Repair the ABS/VSC system according to the DTC output.

NO

Replace VGRS ECU.