
DI88S-03

4. No corresponding screen displayed when "Audio" or "Information" switch pressed.

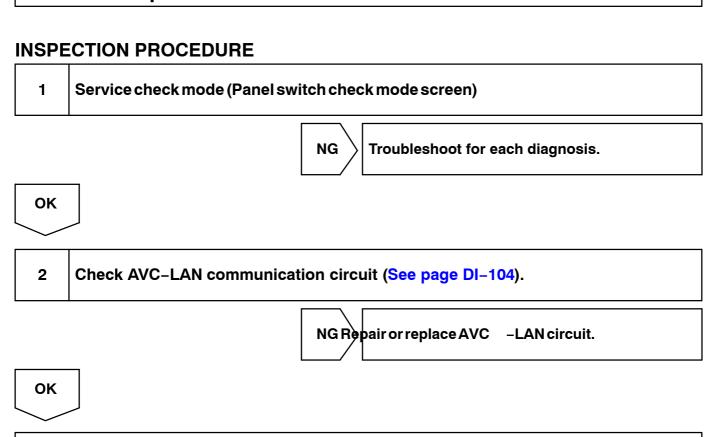

Replace the multi display.