

POWER SOURCE LOCATION

3E0H5-04

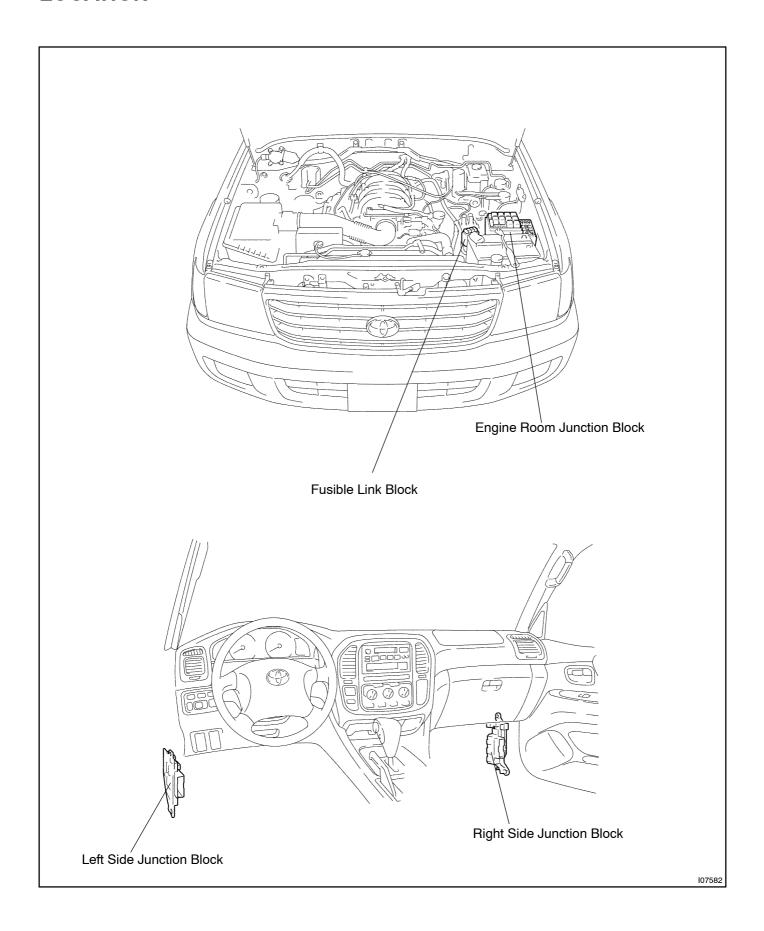

Engine Room Junction Block

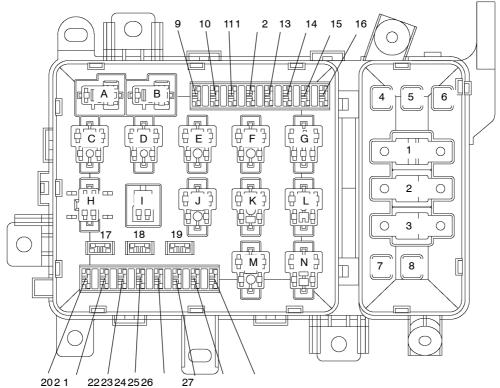

Fuses

1. FL AM1 NO. 1 2. FL HTR 3. –	80 A 60 A 50 A
4. ABSNO. 1 M-Fuse	40 A
5. –	-
6.ACCM -Fuse	50 A
7.ABSNO.2M -Fuse	40 A
8.STARTERM -Fuse	30 A
9. AM 1 NO.2 Fuse	20 A
10. A/C Fuse	20 A
11. POWER HTR Fuse	10 A
12. SEATHTR Fuse	15 A
13. FUELHTR Fuse	20 A
14. MIR HTR Fuse	15 A
15. HEAD CLEANER Fuse	20 A
16. CDS FAN Fuse	20 A
17. EFI Fuse	20 A
18. HORN Fuse	10 A
19. THROTTLE Fuse	15 A
20. RADIO Fuse	20 A
21. HAZ -TRN Fuse	15 A
22. AM2 Fuse	30 A
23. TEL Fuse	10 A
24. HEADLH -UPR Fuse	20 A
25. HEADRH -UPRFuse	20 A

26. HEAD LH - LWR Fuse

27. HEADRH - LWR Fuse

10 A


10 A

Relays

A. Magnetic Clutch Relay B. Mirror Heater Relay C. ACC Relay D. –
E. IG 1 No.1 Relay F.IG 1 No.2 Relay
G. ABS SOL Relay
H. EFI and ECD Relay
I. Horn Relay J. Headlight Dimmer Relay
K. Starter Relay
L. ABS MTR2 Relay M. Headlight Control Relay
N. ABSMTR 1 Relay

106118

Left Side Junction Block

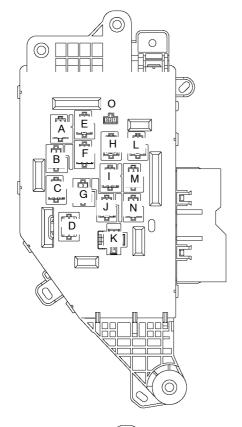

Relays

- A. Circuit Opening Relay
- B. Fuel/ Pump Relay
- C. Door Lock Relay
- D. –
- E. SPIL/ Level Relay
- F. Starter Cut Relay
- G. Door Lock Relay
- H. Front Fog Relay
- I. Door Lock Relay
- J. Defogger Relay
- K. Power Main Relay
- L. Rear Heater Relay
- M. Dome Relay
- N. Taillight Control Relay

Others

O. DIODE



1. MIRR Fuse	10 A
2. SRS Fuse	15 A
3. CIGAR Fuse	15 A
4. IGN Fuse	10 A
5.POWERM -Fuse	40 A
6. DOME Fuse	10 A
7. –	_
8. DIFF Fuse	20 A
9. GAUGE Fuse	15 A
10. WIPER Fuse	20 A
11. I/UP Fuse	7.5 A
12.FRFOGFuse	15 A
13.STOPFuse	15 A
14.RRA/CFuse	30 A
15.DEFOGM -Fuse	20 A
16.ECU -BFuse	15 A
17.TAILFuse	15 A
18. –	_
19. OBD Fuse	10 A
20.RRHTRFuse	10 A
21.ECU -IG Fuse	15 A
22. PWR OUTLET Fuse	15 A

