
DIAZ8-01


Front Wiper Switch Circuit

CIRCUIT DESCRIPTION

This circuit detects the state of the wiper switch and send it to the Wiper Control ECU.

WIRING DIAGRAM

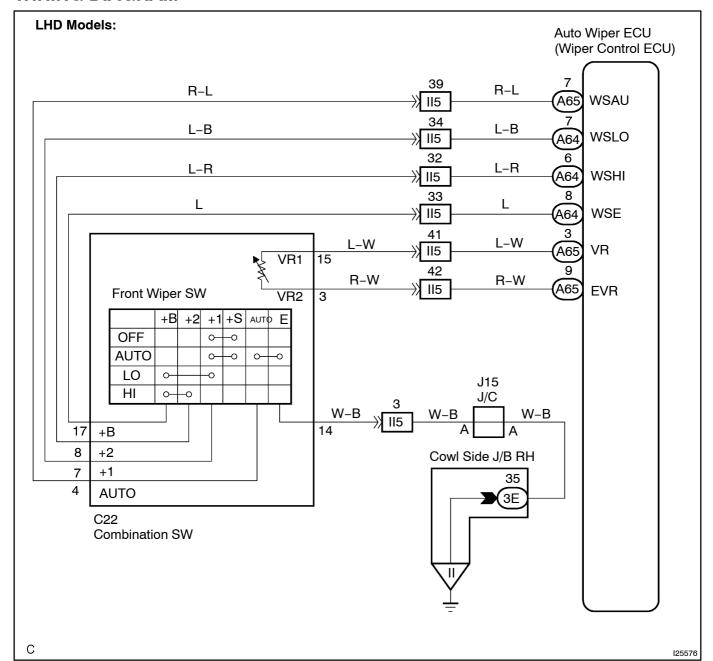

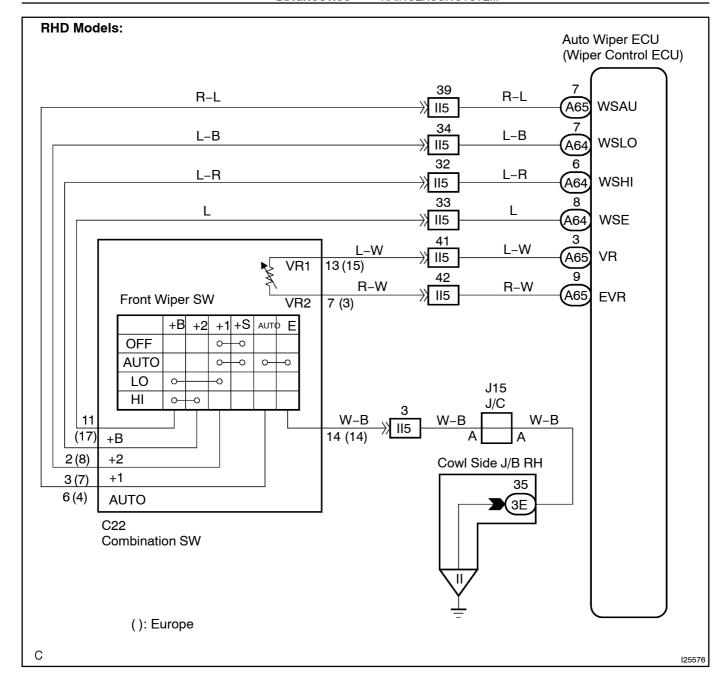

INSPECTION PROCEDURE

1 Check wire harness between combination switch and Wiper Control ECU (See page IN-38).

NG

Repair or replace wire harness.

OK

2 Check wire harness between combination switch and body ground (See page IN-38).

NG

Repair or replace wire harness.

OK

Proceed next circuit inspection shown on problem symptom table. (See page DI-930)