AC1RN–01

LOCATION

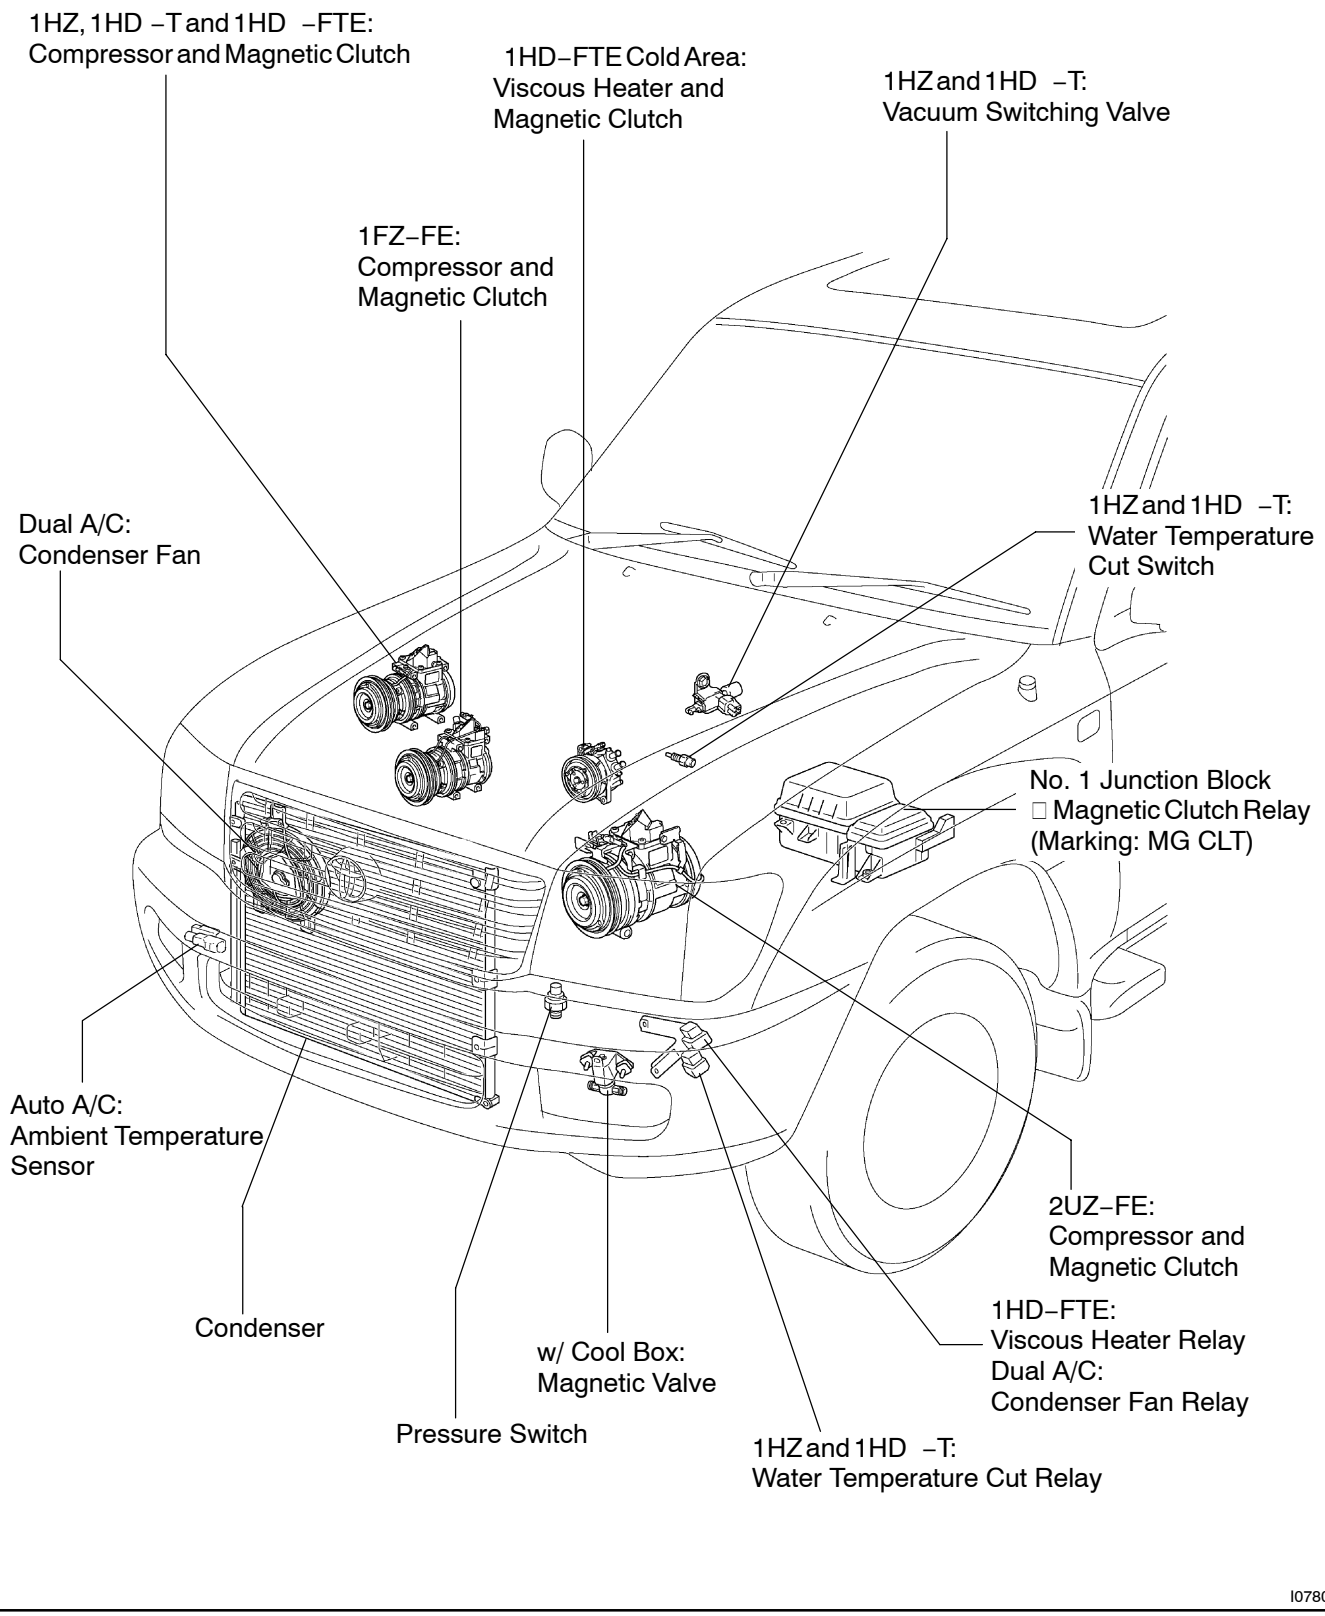

LHD Models:

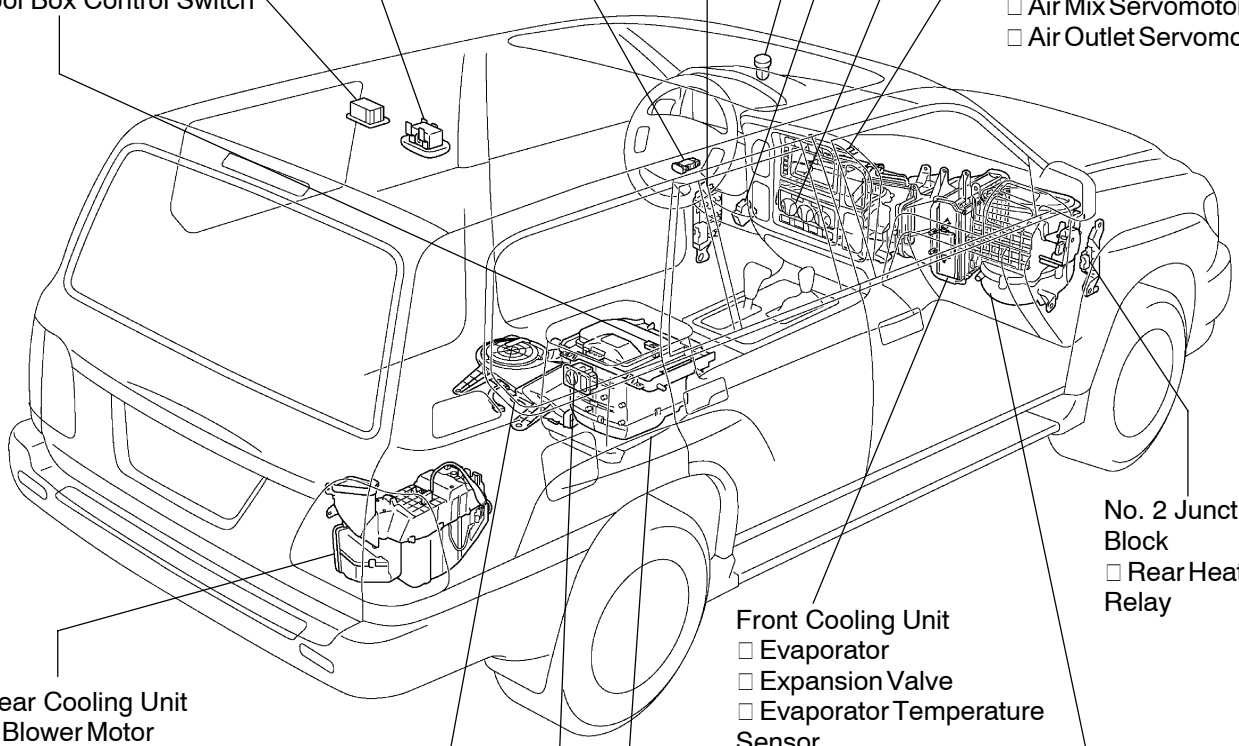

1HZ and 1HD –T:
Idle–up Switch
1HD–FTE Cold Area:
Power Heater Switch

Auto A/C:
Solar Sensor

Auto A/C:
Room Temperature Sensor
(for Rear A/C)

No. 3 Junction Block
□ Heater Main Relay

Auto A/C:
Room Temperature Sensor

Rear A/C Control
Assembly

Air Conditioner
Control Assembly

Front Heater Unit
□ Heater Radiator
□ Air Mix Servomotor
□ Air Outlet Servomotor

Cool Box Control Switch

No. 2 Junction
Block
□ Rear Heater
Relay

Front Cooling Unit
□ Evaporator
□ Expansion Valve
□ Evaporator Temperature
Sensor

Rear Cooling Unit
□ Blower Motor
□ Manual A/C:
Blower Resistor
□ Auto A/C:
Power Transistor
□ Evaporator
□ Manual A/C:
Blower Speed Control Relay
□ Thermistor
□ Expansion Valve with
Magnetic Valve

Cool Box
□ Blower Motor
□ Evaporator
□ Expansion Valve
□ Cool Box Relay

Blower Unit
□ Blower Motor
□ Manual A/C:
Blower Resistor
□ Auto A/C:
Blower Motor
Control Relay
□ Manual A/C:
Blower Speed
Control Relay
□ 1HD–FTE Cold Area:
Heater Amplifier

Rear Heater Unit
□ Blower Motor
□ Manual A/C:
Blower Resistor
□ Auto A/C:
Power Transistor
□ Manual A/C:
Rear Heater Hi Relay
□ Auto A/C:
Air Mix Servomotor
□ Auto A/C:
Air Inlet Temperature Sensor
□ Heater Radiator

Manual A/C:
Rear Heater Control Assembly

I07888

RHD Models:

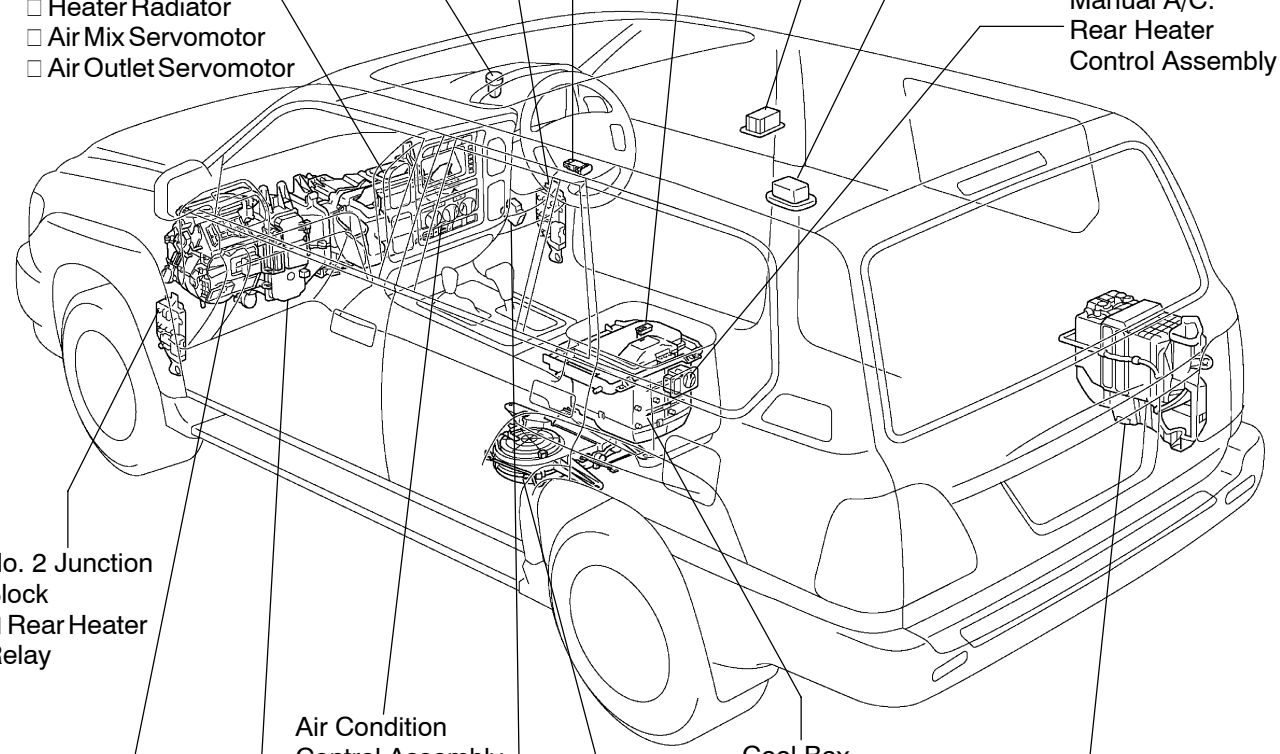

1HZ and 1HD –T:
Idle–up Switch
1HD–FTE:
Power Heater Switch

No. 3 Junction Block
□ Heater Main Relay

Auto A/C:
Room Temperature Sensor
(for Rear A/C)

Cool Box
Control Switch

Auto A/C:
Solar Sensor

Rear A/C Control Assembly

Heater Unit
□ Heater Radiator
□ Air Mix Servomotor
□ Air Outlet Servomotor

Manual A/C:
Rear Heater
Control Assembly

No. 2 Junction
Block
□ Rear Heater
Relay

Air Condition
Control Assembly

Front Cooling Unit
□ Evaporator
□ Expansion Valve
□ Evaporator
Temperature Sensor

Cool Box
□ Blower Motor
□ Evaporator
□ Expansion Valve
□ Cool Box Relay

Rear Cooling Unit
□ A/C Amplifier
□ Blower Motor
□ Manual A/C:
Blower Resistor
□ Auto A/C:
Power Transistor
□ Manual A/C:
Blower Speed Control Relay
□ Evaporator
□ Expansion Valve
with Magnetic Valve
□ Thermistor

Auto A/C:
Room Temperature
Sensor

Blower Unit
□ Blower Motor
□ Manual A/C:
Blower Resistor
□ Manual A/C:
Blower Speed Control Relay
□ Auto A/C:
Blower Motor Control Relay
□ Air Inlet Servomotor
□ 1HD–FTE Cold Area:
Heater Amplifier

Rear Heater Unit
□ Blower Motor
□ Manual A/C:
Blower Resistor
□ Auto A/C:
Power Transistor
□ Auto A/C:
Air Mix Servomotor
□ Heater Radiator

I07889