GlowCore
v3.1

Pinout

- recommended for SPI **
- recommended for I2C **
- recommended for I2S **
- can be used for analog input signals
- can be used for touch inputs
- can be used for USB Serial, USB OTG, JTAG
- can be used for UART
- pins remain usable in deep sleep
- outputs 5V data signal

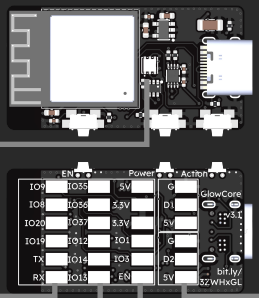

Status LED (SK9822):
- GPIO 40 — STATUS LED DATA
- GPIO 39 — STATUS LED CLOCK

- GPIO 9 / SCL / ADC1 / TOUCH 9 / RTC GPIO 9
- GPIO 8 / SDA / ADC1 / TOUCH 8 / RTC GPIO 8
- GPIO 20 / USB D+ / ADC2 / RTC GPIO 20
- GPIO 19 / USB D- / ADC2 / RTC GPIO 19
- GPIO 43 / TX
- GPIO 44 / RX

- GPIO 35 / MOSI
- GPIO 36 / SCK
- GPIO 37 / MISO
- GPIO 12 / WS / ADC2 / TOUCH 12 / RTC GPIO 12
- GPIO 14 / SD / ADC2 / TOUCH 14 / RTC GPIO 14
- GPIO 13 / SCK / ADC2 / TOUCH 13 / RTC GPIO 13

- 5V IN/OUT
- 3.3V IN/OUT
- 3.3V IN/OUT
- GPIO 1 / POWER BUTTON
- GPIO 3 / ACTION BUTTON
- EN/RESET

- GND
- GPIO 42 / LED 1 DATA OUT
- 5V IN/OUT
- GND
- GPIO 41 / LED 2 DATA OUT
- 5V IN/OUT

GPIO 1 / POWER BUTTON ***

Press
- Standby Mode *

Press **Press**
- Turn off/on WiFi

GPIO 3 / ACTION BUTTON ***

Press
- Next LED preset

Press **Hold**
- Change brightness

While holding the button, the brightness first decreases and once the minimum is reached, it increases again.

* To turn on again, press the **POWER BUTTON** once.
** Every GPIO pin can be used for: I2C, SPI, I2S
*** Pull to GND, to trigger button (For your code, keep in mind: LOW signal will be inverted to HIGH on GlowCore)

Button presets require GlowOS 0.15 or newer installed on GlowCore.

open source hardware

Download PDF:
bit.ly/3E9Q3tz