

Command Reference

KIOSK PRINTER

**MODEL:SK1-31/32/21/22/24
SK1-41
SK1-21H/31H
SK1-211/311**

 **SANEI ELECTRIC INC.**

V5.6ER02 1806

Contents

I . Commands (ESC/POS :MODE-A)	8
I -1. Paper Feed Command	8
CR	8
LF	8
FF	8
ESC C	8
ESC J	9
ESC j	9
ESC d	9
I -2. Tab Command	10
HT	10
ESC D	10
I -3. Format Command	11
ESC 2	11
ESC 3	11
ESC SP	11
GS L	12
GS W	12
ESC \$	13
ESC a	13
I -4. Character Modification Command	14
ESC !	14
ESC G	14
ESC E	14
ESC {	15
ESC -	15
GS !	16
GS B	16
GS b	16
ESC 4	17
ESC 5	17
ESC _	17
I -5. Character Selection Command	18
ESC M	18
ESC R	18
ESC t	19
ESC t 255	19
ESC &	20
ESC ?	21
ESC %	21
GS &	22
I -6. BitImage Command	23

ESC *	2 3
GS *	2 5
GS /	2 6
DC2 V	2 7
DC2 v	2 9
ESC b	3 0
I -7. Page Mode Command	3 1
ESC L	3 2
ESC S	3 3
ESC FF	3 3
CAN	3 3
ESC W	3 4
ESC T	3 5
ESC P C	3 6
ESC R C	3 7
ESC X	3 7
ESC Z	3 7
ESC e	3 8
ESC l	3 8
I -8. Peripheral command	4 0
ESC =	4 0
ESC i	4 0
ESC m	4 0
GS V	4 1
ESC n	4 1
ESC c 3	4 1
ESC c 5	4 2
ESC c 6	4 2
I -9. Response command	4 3
GS a	4 3
GS r	4 7
GS DLE	4 8
DLE EOT	4 8
GS E	5 0
GS R 1	5 1
GS R 3	5 2
GS I	5 3
ESC s	5 3
ESC v	5 4
I -10. Printing Image Registration Command	5 6
FS Q	5 6
FS R	5 6
FS 0	5 7
FS P	5 7
FS /	5 7
I -11. Ruled Line Command	5 8
DC3 A	5 8
DC3 B	5 8

DC3 C.....	5 8
DC3 D.....	5 8
DC3 L.....	5 9
DC3 P.....	5 9
DC3 +.....	6 0
DC3 -	6 0
I -12. Function Setting Command	6 1
ESC @.....	6 1
DC2 D.....	6 1
DC2 G.....	6 1
DC2 ~	6 2
GS (A.....	6 2
DC1	6 2
DC2 R.....	6 2
GS G.....	6 3
I -13. Barcode Command	6 4
GS H.....	6 4
GS h.....	6 4
GS w.....	6 4
GS k.....	6 5
GS k m n	6 6
GS k (GS1 DataBar)	6 8
I -14. Two dimensional barcode	6 9
GS S.....	6 9
GS Q.....	6 9
PDF417	7 0
MicroPDF417	7 1
DataMatrix.....	7 2
MaxiCode	7 3
QRCode.....	7 4
MicroQRCode.....	7 5
I -15. Label Command	7 6
DC2 L.....	7 6
DC2 l.....	7 7
DC2 B.....	7 7
DC2 mrk.....	7 7
I -16. Presenter Command	7 8
ESC h.....	7 8
ESC r 0	7 8
ESC r 1	7 8
ESC r 3	7 9
ESC r @.....	7 9
ESC r 5	7 9
GS V 4.....	7 9
I -17. Light emitting LED	8 0
GS l n m	8 0
II . Specialized command by model	8 4

DC2 K (SK1-41/31/32/21/22/24, SK1-21H/31H)	8 4
DC2 K (SK1-211/311)	8 8
DC2 K7	9 1
DC2 R7	9 1
DC2 K 8	9 2
DC2 R 8	9 2
DC2 K 11 (SK1-21H/31H)	9 3
DC2 R 11 (SK1-21H/31H)	9 3

Command explanation

This printer has command emulations (ESC/POS) which is widely used for mini printers. The commands are used for controlling the printer operations such as paper feed, printing characters and setting of format etc.

General Notice

1. Please be sure to read this reference book carefully before using the commands and to keep it. Review the contents whenever it is necessary.
2. The contents may be changed for improvements without prior notice.
3. Do not duplicate, transfer and/or copy the contents of this reference book without prior consent in writing.
4. Sanei shall not be responsible for any damages for the outcome of operations, regardless of any descriptions to be left off the contents, errors of descriptions and/or misprints.
5. Sanei shall not be responsible for any damages attributable to incorrect operation, handling or improper operation environments, except those specified in this reference book.
6. The data are basically temporary, and they cannot be stored or saved either for a long time or permanently. Please note that Sanei Electric shall not be responsible for any damages or lost profits resulting from the loss of data attributable to accidents, repairs, tests, and so on.
7. If you have any questions, or notice any clerical errors or omissions regarding the information in this reference book, please contact the local distributors.

Command Description

Outline

1.1 Operation Mode

Mode A (ESC/POS) and dedicated command by printers are described in this document.

Applicable printers are listed as follows.

MODE A: SK1-31/32/21/22/24 series
SK1-41 series
SK1-211/311 Series

1.2 Description of Number

Hexadecimal number.	.. <Number>	Example <31>, <41>
Decimal number	... Number	Example. 1, 100, 255
Binary number	... <Number>B	Example. <xxxxxxx0>B, <xxxxxxx1>B
ASCII	... 'Number'	Example '0','1'

1.3 Character Set

All data sent from the host computer are automatically converted to one byte alphanumeric Characters and symbols or two byte characters
For contents of character set, please refer to Character Code Table.

1.4 Control Commands

Control commands are used for controlling the operations of the printer such as starting/stopping Line feeding and paper feeding. All functions related to type of characters, enlarging characters, Setting of format and graphic printing are controlled.

1.5 Data control function ?

Control commands have data control function to send the status of printer to host systems.
The following is shown in details of sending functions.

- Depending on the status of input buffer, it is assumed data would be delayed because of executing the command while addressing input buffer.
- Execute sending the command without checking the status of host system.
- It is valid for Virtual Com Interface.
Mainly Serial interface, USB (Communication Device Class) are applicable.
For SK1series, this function is effective for USB (PRINTER DEVICE) V1.51 or higher.

I . Commands (ESC/POS :MODE-A)

I -1. Paper Feed Command

CR

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Carriage return / linefeed
[Code] <0D>h
[Function] Prints data in the print buffer and makes linefeed based on the linefeed amount.
[Detail]

- After execution, sets the beginning of a line as the start position of printing.
- LF code received immediately following CR is ignored.
- CR code received immediately following LF is effective.

LF

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Carriage return / linefeed
[Code] <0A>h
[Function] Performs the same operation as CR.
[Detail]

- After execution, sets the beginning of a line as the printing start position.
- LF code received immediately following CR is ignored.
- CR code received immediately following LF is effective.

FF

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Page length printing (Standard mode)
Prints all data in the page memory, then return to the standard mode (Page mode)
[Code] <0C>h
[Function] <Standard mode>
Performs form feed based on the page length setting (ESC C).
<Page mode>
Returns to the standard mode after page memory batch printing.
[Detail]

- After execution, sets the beginning of a line as the next printing start position.
- After returning, it becomes the same as ESC S.

ESC C

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Set the page length
[Code] <1B>h <43>h n
[Defined area] $1 \leq n \leq 255$
[Function] Set the number of lines in a page used for the page length printing command (FF).
[Detail]

- With the value set with the command, the page length printing command (FF) perform a form feed in the standard mode.
- This command is not executed in the page mode.

ESC J

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

-
- [Name] Printing and feed forward
- [Code] <1B>h <4A>h n
- [Defined area] $0 \leq n \leq 255$
- [Function] <Standard mode>
Prints data in the print buffer and feeds paper based on [n x paper feed pitch].
<Page mode>
Moves along y-axis in the forward direction.
- [Detail]
- After execution, sets the beginning of a line as the printing start position.
 - Receives no influence from the setting of the linefeed amount.
 - This command is invalid for label print in standard mode.

ESC j

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

-
- [Name] Printing and back feed
- [Code] <1B>h <6A>h n
- [Defined area] $0 \leq n \leq 255$
- [Function] <Standard mode>
• Prints data in print buffer and backfeeds paper based on [n x dot pitch].
<Page mode>
• The cursor moves to reverse against specified direction in page memory area.
- [Detail]
- When data is stored in printer buffer, the printer linefeeds first and feeds [n x dot pitch] in reverse.
 - When data is not stored in printer buffer, the printer feeds [n x dot pitch] in reverse.
 - In the case of label mode does not execute this command to throw a "n" parameter.

[Caution]

Note1) When the printer prints after executing this command, feed the paper more than 2mm in forward.

Note2) This command is only used for adjusting the top of the form and avoid using other purpose.
to avoid unexpected paper jams.

ESC d

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

-
- [Name] Printing and consecutive (n) line feed.
- [Code] <1B>h <64>h n
- [Defined area] $0 \leq n \leq 255$
- [Function] <Standard mode>
Prints data in the print buffer and makes paper feed forward by n lines.
<Page mode>
Move along y-axis in the forward direction by n lines.
- [Detail]
- After execution, makes the beginning of a line as the printing start position.

HT

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
-------------------	------------------------------	--------------------	--------------------

[Name] Horizontal tab
 [Code] <09>h
 [Function] Moves the printing position to the next horizontal tab position.
 [Detail]

- When the horizontal tab position is not specified, this command is ignored.
- When the horizontal tab position exceeds the printing area, sets the tab position to the starting position of the next line.
- To set the horizontal tab position, use Horizontal tab setting (ESC D).
- The initial value of the horizontal tab is at an interval of every eight (8) characters.

ESC D

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
-------------------	------------------------------	--------------------	--------------------

[Name] Set horizontal tab
 [Code] <1B>h <44>h n1...nk <00>h
 [Defined area] $1 \leq n \leq 255$
 $1 \leq k \leq 32$
 [Function] Sets the horizontal tab position
 The n indicates the number of digits from the starting position of a line to the setting position.
 The k indicates the number of tabs that can be set in a line.
 [Detail]

- The horizontal tab position to be set as [character width x n].
- The character width includes the right space and the horizontal size at character enlargement.
- All previous values are reset.
- Up to 32 tab positions can be set in a line. When the number of tab positions exceeds the limit, the data that follow the limit is not processed with the horizontal tab setting command but processed as ordinary data.
- The tab positions are set in the ascending order and end with a NUL code.
 When the setting position is not in the ascending order (when a smaller value is set than the previous one), it is recognized as a NULL code.
- Even if character width is adjusted after the setting, the set tab positions are retained

ESC 2

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Sets the initial linefeed value
 [Code] <1B>h <32>h
 [Function] Return the linefeed amount per line to the initial value.
 [Detail]

- Makes setting valid for the standard mode.
- Makes setting valid for the page mode.

ESC 3

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Set the linefeed value
 [Code] <1B>h <33>h n
 [Defined area] $0 \leq n \leq 255$
 [Function] Set the linefeed amount per line in [n x dot pitch].
 [Detail]

- Makes setting valid for the standard mode.
- The default value is n = 28.
- The height of smaller linefeed depends on data stored in the buffer.
- When the linefeed amount is smaller than the height of characters in the buffer, the linefeed amount defaults the character height.
- If no characters are stored, the printer processes the height of the linefeed specified.
- Makes setting valid for the page mode.

ESC SP

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Set the right margin
 [Code] <1B>h <20>h n
 [Defined area] $0 \leq n \leq 127$
 [Function] Sets the right space amount per character to [n x dot pitch].
 [Detail]

- When the character size is horizontally doubled, the right space amount is accordingly increased.
- This command has no influence on kanji characters.
- The maximum of n is 127(approx.15.87mm).
- If n overs the maximum then it is replaced to the maximum value.
- The default value is n=0.
- Makes setting valid for the standard mode.
- Makes setting valid for the page mode.

GS L

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

- [Name] Set the left margin
- [Code] <1D>h <4C>h nl nh
- [Defined area] $0 \leq nl \leq 255$
 $0 \leq nh \leq 255$
- [Function] <Standard mode>
Sets the left margin as $[(nh \times 256 + nl) \times \text{dot pitch}]$.
<Page mode>
Makes setting valid for the standard mode.
- [Detail]
 - The maximum settable left margin defines the permissible area for horizontal printing.
 - When the parameter exceeds the printable area, it defaults to the printable area.
 - The initial value is $nh=nl=0$.<Standard mode>
 - Setting is enabled only for the beginning of a line.<Page mode>
 - This command is not executed in the page mode, but the value is stored as a valid setting in the standard mode.

GS W

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

- [Name] Set the printing area width
- [Code] <1D>h <57>h nl nh
- [Defined area] $0 \leq nl \leq 255$
 $0 \leq nh \leq 255$
 $n = nh \times 256 + nl$
- [Function] <Standard mode>
Set the printing area width as $[n \times \text{dot pitch}]$.
<Page mode>
Makes setting valid for the standard mode.
- [Detail]
 - Sets the printable area other than the left margin within horizontal printing area.
 - When the parameter exceeds the printable area, the area is rounded to the horizontal printable area.
 - The initial value is shown in the table.

Applicable model	Initial value	Printing width /(dot)
SK1-41	831	104mm/(832dot)
SK1-41/31/32/311	639	80mm/(640dot)
SK1-41/31/32/311	575	72mm/(576dot)
SK1-31/32/21/22/24/311/211	447	56mm/(448dot)
SK1-31/32/21/22/24/311/211	431	54mm/(432dot)

- <Standard mode>
 - Setting is enabled only for the beginning of a line.<Page mode>
 - This command is not executed in the page mode, but the value is stored as a valid setting in the standard mode.

ESC \$

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name]	Set absolute position of the printing area
[Code]	<1B>h <24>h nl nh
[Defined area]	$0 \leq nl \leq 255$ $0 \leq nh \leq 255$ $0 \leq nhnl \leq 127$
[Function]	<Standard mode> Sets the printing area by the absolute position based on the left margin. The setting width is $[(nh \times 256 + nl) \times \text{dot pitch}]$. <Page mode> Makes setting valid for the standard mode.
[Detail]	- When the parameter exceeds the maximum value of nhnl, this command is ignored. <Standard mode> - Setting is enabled only for the beginning of a line. <Page mode> - This command is not executed in the page mode, but the value is stored as a valid setting in the standard mode.

ESC a

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name]	Align the position
[Code]	<1B>h <61>h n
[Defined area]	$0 \leq n \leq 2$
[Function]	<Standard mode> Align the printing data of a line with the specified point. n=0 : Left alignment n=1 : Center alignment n=2 : Right alignment <Page mode> Makes setting valid for the standard mode.
[Detail]	- The position is aligned in the set printing area. - The initial value is n=0. <Standard mode> - Setting is enabled only for the beginning of a line. <Page mode> - This command is not executed in the page mode, but the value is stored as a valid setting in the standard mode.

ESC !

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
-------------------	------------------------------	--------------------	--------------------

[Name] Modify character specifications in a batch

[Code] <1B>h <21>h n

[Defined area] $0 \leq n \leq 255$

[Function] Specifies the printing mode in a batch.

Bit	Item description	Function
0	Character font	0 : Font A 1: Font B
1	Undefined	—
2	Undefined	—
3	Bold character	0 : Cancel 1: Specified
4	Double-height	0 : Cancel 1: Specified
5	Double-width	0 : Cancel 1: Specified
6	Undefined	—
7	Underline	0 : Cancel 1: Specified

- [Detail]
- When specifying both bit 4 and 5 as “1”, character size becomes double-height and double-width.
 - The underline is 2-dot pitch.
 - Settings except Bold and Character font are enabled only for a 1-byte size character.
 - A setting can be specified by other commands, the last command is enabled.
 - The default value is n=0.

ESC G**ESC E**

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
-------------------	------------------------------	--------------------	--------------------

[Name] Specify the bold character / cancel

[Code] <1B>h <47>h n

<1B>h <45>h n

[Defined area] $0 \leq n \leq 255$

[Function] Specifies and cancel the bold printing.

n=<xxxxxxx0>B : Cancel

n=<xxxxxxx1>B : Specified

- [Detail]
- n is valid only for the least significant bit.
 - The initial value is n=0.

ESC {

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Specify Inverse printing / cancel
[Code] <1B>h <7B>h n
[Defined area] $0 \leq n \leq 255$
[Function] <Standard mode>
Specifies and cancels inversed printing.
n=<xxxxxxx0>B : Cancel
n=<xxxxxxx1>B : Specified
<Page mode>
Invalidation (forbiddance)
[Detail]

- n is valid only for the least significant bit.
- The default value is n=0.

<Standard mode>

- Setting is enabled only for the beginning of a line.

<Page mode>

- Ignores this command.

ESC -

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Specify underline / cancel
[Code] <1B>h <2D>h n
[Defined area] $0 \leq n \leq 255$
[Function] Cancels and specifies the underline.
n=<xxxxx000>B : Underline 0-dot pitch
|
n=<xxxxx111>B : Underline 7-dot pitch
[Detail]

- This command is valid only for the least significant three bits of n.
- The command is valid only for the 1-byte character.
- The underline is added to the character width and the character space, but not added to the skipped area by HT command and all that.
- It is not added to the black and white reverse characters.
- The default value is n=0.

GS !

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

-
- [Name] Set a character size
[Code] <1D>h <21>h n
[Defined area] $0 \leq n \leq 255$
[Function] Specify the character size
n=<xxxx0000>B: Vertical direction magnification ratio 1 time <minimum>
|
n=<xxxx0111>B: Vertical direction magnification ratio 8 times <maximum>

n=<0000xxxx>B: Horizontal direction magnification 1 time <minimum>
|
n=<0111xxxx>B: Horizontal direction magnification 8 times <maximum>

[Detail]
 - This command is valid for all characters except the HRI characters.
 - Magnification ratios outside the specified range are ignored.
 - The default value is n=0.

GS B

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

-
- [Name] Specify the black and white reverse character / cancel
[Code] <1D>h <42>h n
[Defined area] $0 \leq n \leq 255$
[Function] Cancels and specifies a black and white reverse character.
n=<xxxxxxx0>B : Cancel
n=<xxxxxxx1>B : Specified

[Detail]
 - This command is valid only for the least significant bit of n.
 - The default value is n=0.

GS b

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

-
- [Name] Specify or Cancel the smoothing font
[Code] <1D>h <62>h n
[Defined area] $0 \leq n \leq 255$
[Function] Specify and Cancel a smoothing font .
n=<xxxxxxx0>B : Cancel
n=<xxxxxxx1>B : Specified

[Detail]
 - This command is valid only for the least significant bit of n.
 - The default value is n=0.
 - This command is applicable for ver.1.20 or higher at SK1 series.

ESC 4

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

-
- [Name] Specify the Italic font
[Code] <1B>h <34>h
[Function] Specify the Italic font.
[Detail]
 - This command is valid for all characters except the HRI characters.
 - The default value is Cancel.
 - This command is applicable for ver.1.98 or higher at SK1-31/32/21/22 series.
 - This command is applicable for ver.2.30 or higher at SK1-41/24 series.

ESC 5

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

-
- [Name] Cancel the Italic font
[Code] <1B>h <35>h
[Function] Cancel the Italic font.
[Detail]
 - This command is valid for all characters except the HRI characters.
 - The default value is Cancel.
 - This command is applicable for ver.1.98 or higher at SK1-31/32/21/22 series.
 - This command is applicable for ver.2.30 or higher at SK1-41/24 series.

ESC _

Applicable	SK1-41/24
------------	-----------

-
- [Name] Specify underline / cancel
[Code] <1B>h <5F>h n
[Defined area] $0 \leq n \leq 255$
[Function] Cancels and specifies the underline.
n=0, 48 : Cancel
n=1, 49 : Specified

[Detail]
 - The underline is added to the character width and the character space, but not added to the skipped area by HT command and all that.
 - It is not added to the black and white reverse characters.
 - The underline is 2-dot pitch.
 - The default value is n=0.
 - This command is applicable for ver.2.26 or higher at SK1-41/24 series.

ESC M

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Choose a character font

[Code] <1B>h <4D>h n

[Defined area] $0 \leq n \leq 255$

[Function] Choose a character font.
n=0, 48 : Font A(12×24, 24×24)
n=1, 49 : Font B(8×16, 16×16)
n=2, 50 : Font B(8×16, 16×16)

[Detail]

- Only the least significant bit of n is valid.
- This command is also valid for kanji characters.
- The command can be also set by ESC ! but the command processed last is valid.
- The default value is n=0.

ESC R

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Choose an international character

[Code] <1B>h <52>h n

[Defined area] $0 \leq n \leq 8$

[Function] Choose a character set of a country shown below.
n=0 : USA
n=1 : France
n=2 : Germany
n=3 : England
n=4 : Denmark
n=5 : Sweden
n=6 : Italy
n=7 : Spain
n=8 : Japan

[Detail]

- Data outside the specified range is ignored.
- The default value is n=3 (Model type is not japan)

ESC t

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311

[Name] Choosing the character code table

[Code] <1B>h <74>h n

[Defined area] $0 \leq n \leq 20$ (SK1-31/32/21/22)
 $0 \leq n \leq 18$ (SK1-21H/31H, SK1-211/311)
 $0 \leq n \leq 16$ (SK1-41/24)

[Function] Choose the following character set.

n=0:PC437 / 1:katakana / 2 : PC850 / 3:PC852 / 4:PC857 / 5:PC858 / 6:PC863
7:PC865 / 8:PC866 / 9:WPC1252 / 10:PC860 / 11:WPC1252-2 / 12:PC862
13:WPC1254 / 14:WPC1250 / 15:WPC1251 / 16:PC864 / 17:Reserve / 18:PC737
20:PC1253

[details]

- Ignores data except specified area.
- It is not effective to the double bytes characters.
- The n after 3 is value only Font A type.
- It entries to volatile memory, not to non-volatile memory.
- The default is setting into the software memory . (The setting is n=0 in factory shipment)

[Printer-dependent spec]

- Parameter $11 \leq n \leq 15$ is applicable for ver.1.75 or higher at SK1-31/32/21/22 series.
- Parameter $11 \leq n \leq 15$ is applicable for ver.2.22 or higher at SK1-41/24 series.
- Parameter n=16 is applicable for ver.1.98 or higher at SK1-31/32/21/22 series.
- Parameter n=16 is applicable for ver.2.30 or higher at SK1-41/24 series.
- Parameter n=18 is applicable for ver.1.99 or higher at SK1-31/32/21/22 series.
- Parameter n=20 is applicable for ver.2.03.04 or higher at SK1-31/32/21/22 series.

ESC t 255

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311

[Name] Sets the user-defined characters

[Code] <1B>h <74>h 255

[Function] Sets the user-defined characters in the character table.

[details]

- Sets user-defined characters that have been created with GS & command.
- When it is not created, the setting of last character table is retained.
- It is not effective for the double bytes characters.

[Printer-dependent spec]

- The command is supported in firmware version 1.91 or higher.

ESC &

Applicable **SK1-41/31/32/21/22/24** **SK1-21H/31H** **SK1-211/311**

[Name] Register a download character

[Code] <1B>h <26>h y c1 c2 [x1 d1...d(y × x1)] ... [xk d1...d(y × xk)]

[Defined area] y=3

$20h \leq c1 \leq c2 \leq 7Eh$

$1 \leq x \leq 12$ (When character Font A is chosen)

$1 \leq x \leq 9$ (When character Font B is chosen)

$0 \leq d \leq 255$

[Function] Defines the download pattern for the specified character code.

y= Number of bytes in the vertical direction

c1= Character definition start code

c2= Character definition end code

x= Number of bits in a horizontal direction

[Detail]

- c1=c2 is set when only one character is defined.
- d is the graphic data of a download character.
- The right space surplus given by x specification is handled as a blank.
- When the command is specified for the previously registered code, the character is overwritten.
- When using a registered download character, specify ESC %.
- Specify Font B as width of 8 dots and height of 16 dots.

Registration image

Font 12 x 24


d1	d4	...	d34
d2	d5	...	d35
d3	d6	...	d36

Font 8 x 16

d1	d4	...	d25
d2	d5	...	d26
d3	d6	...	d27

MSB

LSB



Character output range

Font 12 x 24

d1	d4	...	d34
d2	d5	...	d35
d3	d6	...	d36

Font 8 x 16

d1	d4	...	d22	
d2	d5	...	d23	
		...		

ESC ?

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

-
- [Name] Erase a download character
- [Code] <1B>h <3F>h n
- [Defined area] $20h \leq n \leq 7Eh$
- [Function] Erases the download character of a specified code.
- [Detail]
- n indicates a defined character code. After erasing, an internal character is printed.
 - When a specified character code is not defined, the command is ignored.

ESC %

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

-
- [Name] Specify and cancel a download character
- [Code] <1B>h <25>h n
- [Defined area] $0 \leq n \leq 255$
- [Function] Cancels and specifies a download character set.
- n=<xxxxxxx0>B : Cancel
- n=<xxxxxxx1>B : Specified
- [Detail]
- Only the least significant bit of n is valid.
 - When resetting a download character set, specify the internal character set.
 - When a download character set is specified, a definition code is specified as the download character. Otherwise, undefined code is specified as an internal character.
 - The default value is n=0.

[Name] Register a user-defined characters

[Code] <1B>h <26>h n [d1...dn] 1... [d1 ... dn] k

[Defined area] $0(48) \leq n \leq 3(51)$
 $0 \leq d \leq 255$

[Function] Copies the character image pattern for the user-defined character code.

n=0, 48: Specifies the defined code area from 80h to FFh by font A.

n=1, 49: Specifies the defined code area from 20h to FFh by font A.

n=2, 50: Specifies the defined code area from 80h to FFh by font B.

n=3, 51: Specifies the defined code area from 20h to FFh by font-B.

d: Graphic data for the characters

Each character from Font A is defined with 48 byte.

Each character from Font B is defined with 16 byte.

- [Detail]
- The user-defined character is the blank code page which user can create the character data and save it in the nonvolatile memory.
 - The specified character code is selected by ESC t 255 command.
 - Sends a image data to fill up the defined code area specified with n. (Ex. when n=0 is set, sends a image data of 128 characters (80h to FFh))
 - The undefined code is filled by all of the null code.
 - The image data configuration of one character is shown as the figure below.

Image data configuration

Font A (12×24)		Font B (8×16)	
d1	d2	d1	
d3	d4	d2	
⋮		⋮	
d45	d46	d15	
d47	d48	d16	

ESC *

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
-------------------	------------------------------	--------------------	--------------------

[Name] Specify the bit image

[Code] <1B>h <2A>h m nl nh d1 ... dk

[Defined area] m=0, 1, 32, 33

 $0 \leq nl \leq 255$ $0 \leq nh \leq 3$ $0 \leq d \leq 255$



[Function] The bit image equivalent to the number of dots in a horizontal direction that are specified with nl, nh is printed. The printing pattern follows the mode specified with m.

m	Mode	Vertical dots	Horizontal dots	Number of data size (k)
0	8-dot single density	8	Refer to table below.	$nh \times 256 + nl$
1	8-dot double density	8		$nh \times 256 + nl$
32	24-dot single density	24		$(nh \times 256 + nl) \times 3$
33	24-dot double density	24		$(nh \times 256 + nl) \times 3$




- [Detail]
- When m is outside the defined area, data subsequent to nl is not processed with the command but as ordinary data.
 - nl and nh indicates the number of dots in the horizontal direction for dot image printed.
 - When number of dots specified is larger than the printable area, data is discarded.
 - The printing start position follows the cursor position at the corresponding time.
 - In inverted image printing, data is inverted but not influenced by the others (bold, black and white reversion etc.)
- <Standard mode>
- As for data development method, see the figure of next page.
- <Page mode>
- For data development method, see How to do Character Development in Page Mode.

Printing width/(dot)	Single density / Double density	Applicable Model
104mm/(832dot)	416/832	SK1-41
80mm/(640dot)	320/640	SK1-41/31/32/31H/311
72mm/(576dot)	288/576	SK1-41/31/32/31H/311
56mm/(448dot)	224/448	SK1-31/32/21/22/24/21H/31H/211/311
54mm/(432dot)	216/432	SK1-31/32/21/22/24/21H/31H/211/311


8dot bit-image

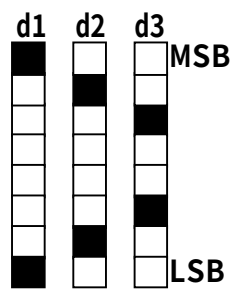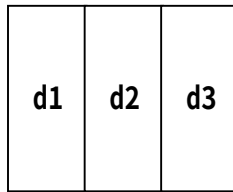

24dot bit-image

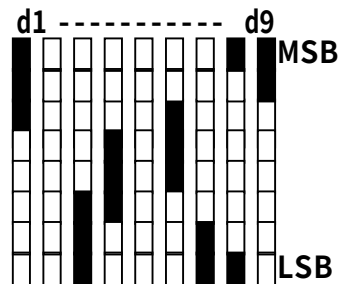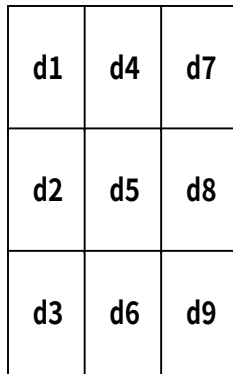

Double density



Single density

[Sample Code] SK1-21, 8-dot single density, printing width 80dot

```
n = 0;
buf[n++] = 0x1B;
buf[n++] = 0x2A;
buf[n++] = 0x00;
buf[n++] = 0x50;
buf[n++] = 0x00;

for(i=0;i<10;i++) {
    buf[n++] = 0x88;
    buf[n++] = 0x44;
    buf[n++] = 0x22;
    buf[n++] = 0x11;
    buf[n++] = 0x11;
    buf[n++] = 0x22;
    buf[n++] = 0x44;
    buf[n++] = 0x88;
}
Ret = WriteFile(hPort,buf,n,&dwSendSize,NULL);
```

[sample result]



Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Register the download bit image

[Code] <1D>h <2A>h x y d1 ... d (x×y×8)

[Defined area] $1 \leq x \leq 255$

$1 \leq y \leq 48$ where, $(x \times y \times 8) \leq \text{user memory empty area}$

$0 \leq d \leq 255$

[Function] Registers bit image data with a size specified by x and y in the user memory.


X indicates that the horizontal size is (X x 8) dots.

Y indicates that the vertical size is (Y x 8) dots.

[Detail]

- When the parameter is out of the specified range, this command is ignored.
- For the empty area of the user memory, refer to "user memory" by Technical Guide.
- As for data development method, see the figure below.

Download bit image configurarion

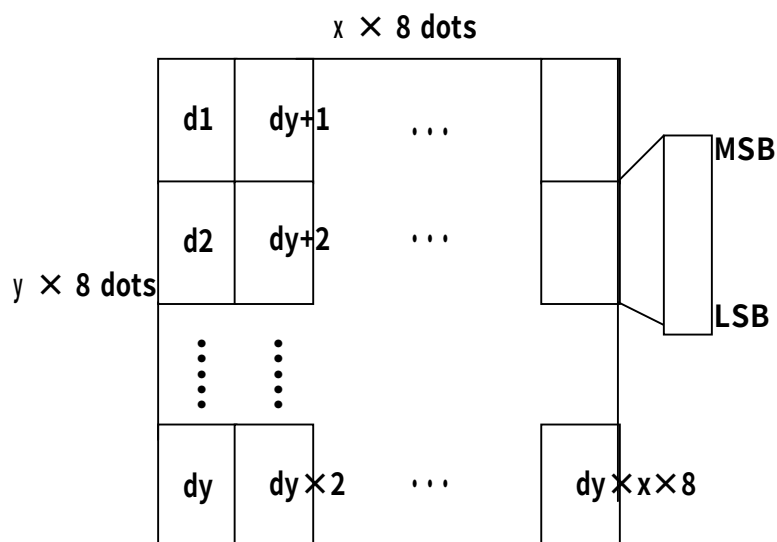

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Print the download bit image

[Code] <1D>h <2F>h m

[Defined area] $0 \leq m \leq 3$, $48 \leq m \leq 51$

[Function] The registered download bit image is printed in a mode specified with m.

m	Printing mode	Contents
0, 48	Normal mode	Printing at ordinary size.
1, 49	Horizontal double-sized mode	Printing by double-width.
2, 50	Vertical double-sized mode	Printing by double-height.
3, 51	Double-width and double-height mode	Printing by double width and height.

- [Detail]
- When download bit image is not defined, this command is ignored.
 - The printing mode other than inverse printing command has no influence .
 - Even if the area out of printable range, the fraction section that protrudes in units of bytes in the right direction is printed.
<Standard mode>
 - If data remains in the print buffer, the printer prints that data and then prints the download bit-image.
<Page mode>
 - For data development manner, see [How to do Character Development](#) in Page Mode.

[Sample Code] SK1-21, data size x=8, y= 8, Printing mode = Normal mode

```

n = 0;
buf[n++] = 0x1D;
buf[n++] = 0x2A;
buf[n++] = 0x08;
buf[n++] = 0x08;

for(i=0;i<64;i++) {
    buf[n++] = 0xFF;
    buf[n++] = 0x00;
    buf[n++] = 0xFF;
    buf[n++] = 0x00;
    buf[n++] = 0xFF;
    buf[n++] = 0x00;
    buf[n++] = 0xFF;
    buf[n++] = 0x00;
}
buf[n++] = 0x1D;
buf[n++] = 0x2F;
buf[n++] = 0x00;
Ret = WriteFile(hPort,buf,n,&dwSendSize,NULL);

```

[sample result]



DC2 V

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Specify the high-speed bit image

[Code] <12>h <56>h nl nh d1 ... dk

[Defined area] $0 \leq n_l \leq 255$

$$0 \leq nh \leq 255$$
$$0 \leq d \leq 255$$

[Functions] Prints bit image of the number of lines specified by nl and nh.

Data size / line(m)	Number. of entire data (k)
Refer to table below	$(nh \times 256 + nl) \times m$

[Detail]

- nl and nh indicate the number of vertical lines. (nh×256+nl line)
- This command is invalid for specifying and canceling the inverse print.
- This command is not effected by inverse printing command.
- Refer to “Notice of graphic printing” by Technical Guide.
- As for image development method, see the following figure .
- Ignores this command in the page mode.

(Table)

Printing width/(dot)	Data size / line(m)	Applicable mode
104mm/(832dot)	104	SK1-41
80mm/(640dot)	80	SK1-41/31/32/31H/311
72mm/(576dot)	72	SK1-41/31/32/31H/311
56mm/(448dot)	56	SK1-31/32/21/22/24/21H/31H/211/311
54mm/(432dot)	54	SK1-31/32/21/22/24/21H/31H/211/311,

Example: m=48 of graphics data configuration

1line	D0	D1		D46	D47
2line	D1*48+0	D1*48+1		D1*48+46	D1*48+47
3line	D2*48+0	D2*48+1		D2*48+46	D2*48+47
	.				
	.				
	.				
	.				
	.				
	.				
nhnl line	Dn*48+0	Dn*48+1		Dn*48+46	Dn*48+47

MSB LSB

[Sample Code] SK1-21, printing width 54mm, vertical lines 8dot

```
n = 0;
buf[n++] = 0x12;
buf[n++] = 0x56;
buf[n++] = 0x08;
buf[n++] = 0x00;

for(i=0;i<8;i++) {
    for(j=0;j<27;j++) {
        buf[n++] = 0xFF;
        buf[n++] = 0x00;
    }
}
Ret = WriteFile(hPort,buf,n,&dwSendSize,NULL);
```

[sample result]



Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Print pressed raster bit image

[Code] <12>h <76>h n [m1 [code + data length] [d1...dk](line)] ...
[mn [code + data length] [d1...dk](line)]

[Definition area] $0 \leq n \leq 255$
 $0 \leq m \leq 3$
 $0 \leq d \leq 255$ (Image data)

[Function] Extracts 1 line to n lines by the rule specified m, and prints bit image.

n : Extraction line number

m : Specifies press mode

m=0: Normal press

m=1: Specifies blank line (1 line all 0)

m=2: Copies pre line

m=3: Copies pre line, and overwrite data to byte position specified.

[Press rule: m=0]

- Press mode use byte length way, so that specifies [code + data length] at top.
- The code specifies unpress or press.

1. Press

Code + Data length: 80h + 00h~7Fh (00H specifies 1 byte length)

Data: Specifies one byte image data, then extracted with data length specified.

2. Unpress

Code + Data length: 00h + 01h~7Fh

Data: Specifies image data as much as data length.

Printing width/(dot)	Specify a data range in press	Specify a data range in unpress	Total data size / line	Applicable model
104mm/(832dot)	0-103	1-104	104	SK1-41
80mm/(640dot)	0-79	1-80	80	SK1-41/31/32/31H/311
72mm/(576dot)	0-71	1-72	72	SK1-41/31/32/31H/311
56mm/(448dot)	0-55	1-56	56	SK1-31/32/21/22/24/21H/31H SK1-211/311
54mm/(432dot)	0-53	1-54	54	SK1-31/32/21/22/24/21H/31H SK1-211/311

※Total data length should be matched with the number of data.

Ex. m=0 89 FF 46 AA(1) BB(2) ... EE(46h)

① Extracts image data <FF> to 10 bytes.

② Sets 47H bytes unpressed image data <AA, BB, CC, DD, EE, FF>.

“Data length: 10byte + “Data length: 46h byte = total data size / line 80 byte

[Press rule: m=3]

- Copies pre line, and overwrite image data to byte position specified.

Position: 0 to 127

Data: one byte image data

Last code: 80H~FFH <The top bit needs 1>

Ex. m=3 0A AA 10 BB 80

Copies pre line, and sets <AA> to D(10) position and <BB> to D(16) position.

[Details] • Ignores this command in the page mode.*1

- Printing direction only upright.

Note1. Enables this command in page mode is applicable for ver. 1.59 or higher at SK1 series

ESC b

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Specify the high-speed bit image with indicated printing width

[Code] <1B>h <62>h y nl nh [d1...dk]

[Defined area] $0 \leq y \leq$ Table below

$0 \leq nl \leq 255$

$0 \leq nh \leq 255$

$0 \leq d \leq 255$

[Function] Print a bit image by specified printing y width and nl/nh height.

- [Details]
- nl and nh indicate the number of vertical lines. (nh×256+nl line)
 - This command is invalid for specifying and canceling the inverse print.
 - Refer to [“Notice of graphic printing”](#) by [Technical Guide](#).
 - As for image development method, see the following figure at [DC2 V](#).
 - Ignores this command in the page mode.
 - y indicate the width length byte.

Table :

'y' of maximum value	Applicable model
104	SK1-41
80	SK1-41/31/32/31H/311
72	SK1-41/31/32/31H/311
56	SK1-31/32/21/22/24/21H/31H/211/311
54	SK1-31/32/21/22/24/21H/31H/211/311

[Applicable printer]

- It is applicable for ver.1.20 or higher version at SK1-31/32/21/22.

[Sample Code] SK1-21, y = 26mm, vertical lines 8dot

```
n = 0;
buf[n++] = 0x1B;
buf[n++] = 0x62;
buf[n++] = 0x1A;
buf[n++] = 0x08;
buf[n++] = 0x00;

for(i=0;i<8;i++) {
    for(j=0;j<13;j++) {
        buf[n++] = 0x80;
        buf[n++] = 0x08;
    }
}
Ret = WriteFile(hPort,buf,n,&dwSendSize,NULL);
```

[sample result]



Explanation of Page Mode Command


This printer has two printing modes, the standard mode and the page mode.

In the standard mode, the printer prints or feeds the paper each time it receives the print or paper feed commands. On the other hand, in the page mode, the print or paper feed commands are executed to the printing area on the specified memory and the printer does not respond.

When ESC FF or FF is executed, the printer prints all the data organized in the printing area.

It means that when the data, "SANEI"<CR> is transferred to print characters and start a new line, a string of "SANEI" is printed and a new line is started in the standard mode, however in the page mode, a string of "SANEI" is written in the specified printing area in the memory and the position for the next data is moved to the next line in the area within the memory.

<Flow between page mode and standard mode>

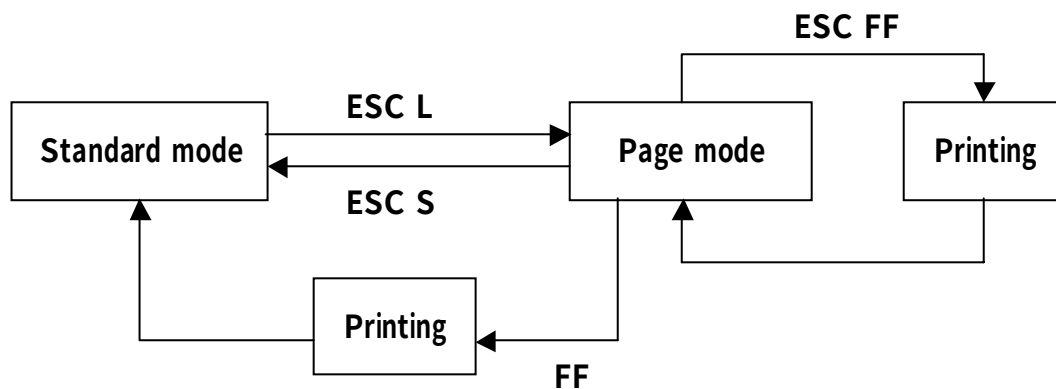


ESC L


Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name]	Select the page mode
[Code]	<1B>h <4C>h
[Function]	<Standard mode> Change the standard mode to the page mode. <Page mode> Invalidation (forbiddance)
[Detail]	<Standard mode> • Setting is enabled only for the beginning of a line. <Page mode> • Ignores this command. • Returns to standard mode by FF or ESC S • Defines the printing area by ESC W • Selects the character printing direction by ESC T • Below are the different command settings between page mode and standard mode. 1. Setting the space: ESC SP, FS S 2. Setting printing and feeding: ESC 2, ESC 3 • The commands below may be set in page mode, however they are not executed in page mode, but are enabled after returning the standard mode. 1. Specify the printing area: GS L, GS W, ESC \$ 2. Aligning the position: ESC a • Below commands are ignored at page mode. 1. Specify and cancel the inverted character: ESC { • The command of ESC @ is for initialization and page mode returns to the standard mode.

How to do Character Development in Page Mode

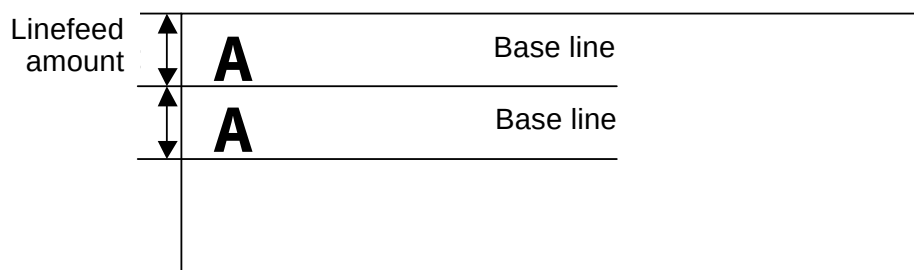

Character data development position

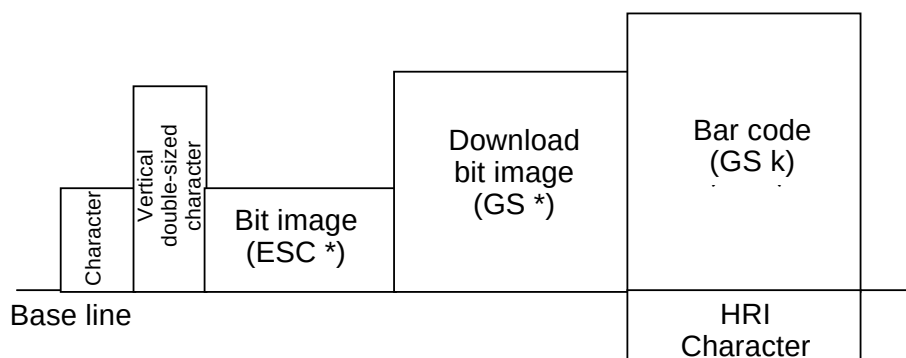

Print data development position

ESC S

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name]	Select the standard mode
[Code]	<1B>h <53>h
[Function]	<Standard mode> Invalidation (forbiddance) <Page mode> Changes the page mode to the standard mode.
[Detail]	<Standard mode> • Ignores this command. <Page mode> • Even when data is found in the page memory, the page mode is terminated without further printing. • After execution, makes the beginning of a line the printing start position.

ESC FF

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name]	Print all page mode memories
[Code]	<1B>h <0C>h
[Function]	Performs batch printing of the printing area.
[Detail]	• Ignores this command in the standard mode. • After execution, setting of ESC W, ESC T is retained. • After execution, the data in the page memory is retained. (without SK1-41)

[Particular spec]

- After execution, the data in the page memory is erased at SK1-41

CAN

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name]	Erase the print buffer (Standard mode), and clear page mode memories (Page mode)
[Code]	<18>h
[Function]	<Standard mode> Clears the print buffer. <Page mode> Clears all data in specified area of the page mode by ESC W.
[Detail]	<Standard mode> • The beginning of a line is treated as the printing start position after execution. <Page mode> • The command returns the development position to the start position of the ESC T command after execution.

ESC W

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Defining the print area

[Code] <1B>h <57>h xl xh yl yh dxl dxh dyl dyh

[Defined area] $0 \leq (xh \times 256 + xl) \leq$ Refer to Table.1 below
 $1 \leq (dxh \times 256 + dxl) \leq$ Refer to Table.1 below
 $0 \leq (yh \times 256 + yl) \leq$ Refer to Table.2 below
 $1 \leq (dyh \times 256 + dyl) \leq$ Refer to Table.2 below

Table1.

Printing width	X Maximum	Dx Maximum	Applicable model
104mm/(832dot)	830	831	SK1-41
80mm/(640dot)	638	639	SK1-41/31/32/31H/311
72mm/(576dot)	574	575	SK1-41/31/32/31H/311
56mm/(448dot)	446	447	SK1-31/32/21/22/24/21H/211/311
54mm/(432dot)	430	431	SK1-31/32/21/22/24/21H/211/311


Table2.

Page length	Y Maximum	Dy Maximum	Applicable model
350mm/(2800dot)	2798	2799	SK1-41/211/311
300mm/(2400dot)	2398	2399	SK1-31/21 (72mm or less) SK1-21/22/24 *1
250mm/(2000dot)	1998	1999	SK1-31/32 (80mm) , SK1-21H/31H

*1. It is applicable for ver.1.54 or higher version at SK1-31/32/21/22 printers.

[Function] Sets the printing area in the page mode.

1. X-axis origin= $(xh \times 256 + xl) \times \text{dot pitch}$
2. Y-axis origin= $(yh \times 256 + yl) \times \text{dot pitch}$
3. X-axis length= $(dxh \times 256 + dxl) \times \text{dot pitch}$
4. Y-axis length= $(dyh \times 256 + dyl) \times \text{dot pitch}$

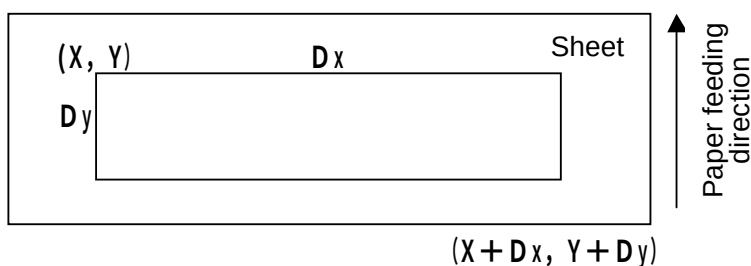

[Detail]

- Ignores this command in the standard mode.
- During operation, when a parameter outside the definition area is set, a code up to dyh is acquired and invalidates the command.
- Use the ESC T command to specify the development direction and starting point of the character position.
- When X-direction data exceeds maximum value, Dx is rounded.
- When Y-direction data exceeds , Dy is rounded.
- When performing printing, the maximum set value in the Y axis is the printing length.
- When not set by the command, the printing length is determined by the initial value. (The X,Y is minimum, and the Dx,Dy is maximum.)
- The linefeed from the base line follows the initial linefeed value (ESC 2) and the linefeed value (ESC 3).
- The default xl, xh, yl, yh is all zero, and dxl, dxh, dyl, dyh is maximum.

ESC T

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311


[Name] Select printing direction and initial position

[Code] <1B>h <54>h n

[Defined area] $0 \leq n \leq 3$

[Function] In the page mode, Choose the character printing direction and start point to see the following figure.

N	Start point and printing direction as figure right.
0	A
1	B
2	C
3	D

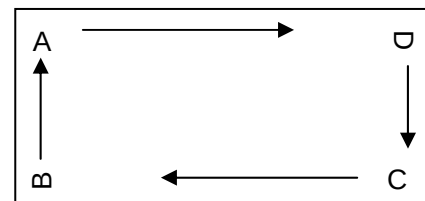

[Detail]

- Ignores this command in the standard mode.
- The printing development position is specified area by ESC W command.
- The X axis and Y axis are reversed in the development direction.
 1. Edits a print image direction (A, C)
 - Y axis : ESC J, ESC 2, ESC 3
 - X axis: ESC SP, FS S
 2. Edits a print image direction (B, D)
 - Y axis : ESC SP, FS S
 - X axis : ESC J, ESC 2, ESC 3
- The default value is n=0.

Applicable SK1-41

[Name] Register a string format to page memory

[Code] <1B> <50> <43> n1 n2 n3 <3B> x1 x2 x3 x4 <2C> y1 y2 y3 y4 <2C>
w <2C> h <2C> c <2C> r1 r2 <2C> d1 d2 <LF> <00>

[Defined area]

'0' ≤ n1 n2 n3 ≤ '9' ("000" ≤ n1n2n3 ≤ "199")

'0' ≤ x1 x2 x3 x4 ≤ '9'

'0' ≤ y1 y2 y3 y4 ≤ '9'

'1' ≤ w ≤ '8'

'1' ≤ h ≤ '8'

'0' ≤ c ≤ '3'

'0' ≤ r1 ≤ '3'

'0' ≤ r2 ≤ '3'

'00' ≤ d1d2 ≤ "63"

[Function] Defines the string format to draw the string data to the page memory directly.

The details of parameters are shown as below.

n1n2n3 : String number

x1x2x3x4 : Start point X-axis Unit 0.1mm

y1y2y3y4 : Start point Y-axis Unit 0.1mm

x : Magnification of the character width (1, 2, 3, 4, 5, 6, 7, 8 time)

h : Magnification of the character height (1, 2, 3, 4, 5, 6, 7, 8 time)

c : Font type (0:Font-A (12×24、24×24) ,

1: Font-B (8×16、16×16)

2: Font-A (12×24、24×24) + Bold character

3: Font-B (8×16、16×16) + Bold character

r1 : Rotation direction of the character

(0: 0 degrees / 1: 90 degrees / 1: 180 degrees / 1: 270 degrees)

r2 : Rotation direction of the strings

(0: 0 degrees / 1: 90 degrees / 1: 180 degrees / 1: 270 degrees)

d1d2 : Character space

[Detail]

- This command is valid in the page mode.
- Start point X, Y is at upper left of the first character.
- Specify the string data by ESC RC command.
- This command ignores the concept of the base line and draws the string data directly into page memory.
- This command is draft specification.

ESC R C

Applicable SK1-41

[Name] Register a string data to page memory

[Code] <1B> <52> <43> n1 n2 n3 <3B> d1 d2 ... dn LF <00>

[Defined area] '0' ≤ n1 n2 n3 ≤ '9' ("000" ≤ n1n2n3 ≤ "199")
32 ≤ d1 d2 ... dn ≤ 255

[Function]

Defines the string data for string format to the page memory directly.

The details of parameters are shown as below.

n1n2n3 : String number

a1a2...an : String data (Maximum 100byte)

[Detail]

- This command is valid in the page mode.
- The registered string data is drawn when the ESC FF or FF command executed.
- Use the half character as 1 byte of string data and the full character as 2 byte of string data.
- This command ignores the concept of the base line and draws the string data directly into page memory.

ESC X

Applicable SK1-41

[Name] Clear the string data

[Code] <1B> <58> LF <00>

[Function] Clears all string data by ESC R

[Detail]

- This command is valid in the page mode.
- String format is not cleared

ESC Z

Applicable SK1-41

[Name] Clear the string format and string data and ruled line format

[Code] <1B> <5A> LF <00>

[Function] Clears all string format, string data and ruled line format.

[Detail]

- This command is valid in the page mode.

ESC e

Applicable SK1-41

[Name] Clear the ruled line
[Code] <1B> <65> n1 n2 n3 LF <00>
[Defined area] '0' ≤ n1 n2 n3 ≤ '9' ("000" ≤ n1n2n3 ≤ "199")
[Function] Clears the ruled line format specified by n1,n2,n3.
[Detail] • This command is valid in the page mode.

ESC l

Applicable SK1-41

[Name] Register a ruled line
[Code] <1B> <6C> n1 n2 n3 <3B> x1 x2 x3 x4 <2C> y1 y2 y3 y4 <2C>
dx1 dx2 dx3 dx4 <2C> dy1 dy2 dy3 dy4 <2C> d <2C> w <LF> <00>
[Defined area] '0' ≤ n1 n2 n3 ≤ '9' ("000" ≤ n1n2n3 ≤ "099")
'0' ≤ x1 x2 x3 x4 ≤ '9'
'0' ≤ y1 y2 y3 y4 ≤ '9'
'0' ≤ dx1 dx2 dx3 dx4 ≤ '9'
'0' ≤ dy1 dy2 dy3 dy4 ≤ '9'
'0' ≤ d ≤ '2'
'1' ≤ w ≤ '9'
[Function] Defines the ruled line data to draw the line-image directly to the page memory.
n1n2n3 : Line number
x1x2x3x4 : Start point X-axis Unit 0.1mm
y1y2y3y4 : Start point Y-axis Unit 0.1mm
dx1dx2dx3dx4 : End point X-axis Unit 0.1mm
dy1dy2dy3dy4 : End point Y-axis Unit 0.1mm
d : line direction (0: horizontal line/ 1: vertical line/ 2: flame)
w : line width dot (1dot=0.125mm)
[Detail] • This command is valid in the page mode.
• Y-direction of Horizontal line is Specify a Y parameter.
• X-direction of Vertical line is Specify a X parameter.
• This command cannot draw a diagonal
• This command ignores the concept of the base line and draws the image-line directly to the page memory.
• This command is not received the influence by ESC W, T.
• This command is draft specification.

<Flow between Print set point and ruled line>

A : Print start point ($x_1x_2x_3x_4, y_1y_2y_3y_4$)

B : Print end point ($dx_1dx_2dx_3dx_4, dy_1dy_2dy_3dy_4$)

W : Ruled line width

(1) Horizontal line ($d = '0'$)



(2) Vertical line ($d = '1'$)



(3) flame ($d = '2'$)



I -8. Peripheral command

ESC =

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Select peripheral

[Code] <1B>h <3D>h n

[Definition area] $0 \leq n \leq 255$

[Function] Selects peripheral in which the data from host computer is effective.

BIT	Function
0	0: Printer invalid 1: Printer effective
1	Undefined
2	Undefined
3	Undefined
4	Undefined
5	Undefined
6	Undefined
7	Undefined

[Detail] • When selects printer invalid, then printer ignores data without ESC =.

ESC i

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Full cut

[Code] <1B>h <69>h

[Function] Execute full cut.

ESC m

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Partial cut

[Code] <1B>h <6D>h

[Function] Execute partial cut.

GS V

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Paper cut
[Code] <1B>h <66>h m or <1B>h <66>h m n (m=65, 66)
[Definition area] m=0,1,48,49,65,66
 $0 \leq n \leq 255$
[Function] Cut specified paper
m=0, 48: Execute full cut
m=1, 49: Execute partial cut
m=65: Feeds paper n×dot pitch and execute full cut
m=66: Feeds paper n×dot pitch and execute partial cut

ESC n

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Partial cut so that a lot of paper residual.
[Code] <1B>h <6D>h
[Function] Execute partial cut so that a lot of paper residual.

ESC c 3

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Select paper sensor to output PE signal
[Code] <1B>h <63>h <33>h n
[Definition area] $0 \leq n \leq 255$
[Function] Select paper sensor for paper empty.

BIT	FUNCTION
0 Note1	0 : Disable near end sensor 1 : Enable near end sensor
1 Note1	0 : Disable near end sensor 1 : Enable near end sensor
2	0 : Disable paper empty sensor 1 : Enable paper empty sensor
3	0 : Disable paper empty sensor 1 : Enable paper empty sensor
4	Undefined
5	Undefined
6	Undefined
7	Undefined

Note1. This function is valid only for the model with near end sensor.

[Detail]

- Allows to select several sensors at once.
- Outputs the signal when one of sensors detect the paper near end or paper empty while enabling several sensors.
- Depending on receiving buffer, delay time for switching sensor is occurred.
- Bit 0, 1 and Bit 2, 3 show the same detection sensor and if one of Bit is "1", the sensor is enabled.
- When the software memory "OFF-LINE BUSY" is OFF, the command does not perform the error signal in the PE signal on the outside interface .
- The default is n=12.

ESC c 5

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

-
- [Name] Specify or cancel panel switch
- [Code] <1B>h <63>h <35>h n
- [Definition area] $0 \leq n \leq 255$
- [Function] Specifies or cancels panel switch.
n=<xxxxxxx0>B : Specifies panel switch
n=<xxxxxxx1>B : Cancels panel switch
- [Detail]
- Only the last bit of n is effective.
 - When cancels panel switch, then all panel switch is canceled without POWER button.
 - The default is n=0.

ESC c 6

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

-
- [Name] Enable / Disable paper loading
- [Code] <1B> <63> <36> n
- [Define area] $0 \leq n \leq 255$
- [Function] Effective and invalidity of paper load are changed at the Head down or Auto loading.
n=<xxxxxxx0>B : Enable paper loading (Enable Auto loading)
n=<xxxxxxx1>B : Disable paper loading (Disable Auto loading)
- [Detail]
- Only the least significant bit of n is valid.
 - Paper error is continued, if paper loading is disabled.
 - The default value is n = 0.
 - This command can be applied to software version V1.66 or later at SK1 Series.

GS a

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Valid/Invalid of automatic status transmission

[Code] <1D>h <61>h n

[Defined area] $0 \leq n \leq 255$

[Function] Selects the status which is transmitted automatically.

Bit	Function	Number
0	0 : Status of drawer kick-out pin No.3 is disabled 1 : Status of drawer kick-out pin No.3 is enabled	①
1	0 : Not select online/offline status 1 : Select online/offline status	②
2	0 : Not select error status 1 : Select error status	③
3	0 : Not select paper detection status 1 : Select paper detection status	④
4	Undefined	
5	Undefined	
6	Undefined	
7	Undefined	

[Detail]

- When selected any status, all status(4 bytes) is transmitted at first, and after that all status is transmitted by the timing of changing the status which is selected.
- This command is put to receive buffer at first, so that the action delays if the buffer has many data.
- The 4 bytes status is transmitted without the check of host status.
- The default is n=0.
- After ESC @ execution, this n parameter is retained. It is applied to software version V1.81 or later in SK1-31/32/21/22 and V2.26 or later in SK1-24/41.
- BIT0 is valid for model built in Drawer kick and non Drawer kick model is applied for "0",
- The response of auto status automatically transmitted for the error status, therefore, the following status bitt does not response as a auto status.
It becomes a bit to additionally notify when this command is queried or when an error status of other bit occurs.

Third byte Bit2

Near end paper detection

Third byte Bit3

Near end paper detection

Forth byte Bit1

Paper sensor in bezel mode A/C

Forth byte Bit6

Paper presence of presenter detector

First byte (Printer information)

Bit	Status	No.	Value
0	Non-use		0
1	Non-use		0
2	Non-use		0
3	Online Offline	②	0 1
4	Non-use		1
5 Note1	Head close / Paper cover close Head open / Paper cover open	②	0 1
6	Undefined		—
7	Non-use		0

Note1. BIT5 is valid for V2.51.15 or later in SK1-211/311.

Second byte (error information)

Bit	Status	No.	Value
0	Undefined		—
1	Undefined		—
2	Undefined		—
3 Note1	Non auto cutter error Auto cutter error	③	0 1
4	Non-use		0
5	Non Voltage error Voltage error	③	0 1
6	Non auto recoverable error Auto recoverable error	③	0 1
7	Non-use		0

Note1. This bit is valid for auto cutter model and non cutter model is applied for"0".

Third byte (Paper detection information)

Bit	Status	No.	Value
0,1	Paper detection No paper	④	0 1
2,3 Note1	Near end paper detection No near end paper	④	0 1
4	Non-use		0
5	Undefined		—
6	Undefined		—
7	Non-use		0

Note1. This bit is valid for model built in near end sensor and non near end model is applied for"0"

Forth byte (Paper detection status of option)

Bit	Status	No.	Value
0	In the case of the bezel mode-B or BZ2-SK1 model	④	0
	* Non paper error.		1
	* Paper error detection.		0
	In the case of the presenter		1
1	* Non paper error or Non paper jam.	④	0
	* Paper error or paper jam detection.		1
	In the case of bezel mode-A or mode-C		0
	* The bezel sensor is not detected. Note2		1
2	* The bezel sensor is detected. Note2	④	0
	In the case of bezel mode-B Note1		1
	* The bezel sensor is detected the paper after cut-action.		1
	In the case of the presenter. Note1		1
3,5	* The presenter sensor is detected the paper after cut-action.	④	0
	In the case of the BZ2-SK1 model		1
	* Non paper jam.		0
	* Paper jam detection.		1
4	Undefined		--
6	Non-use		0
Note3	0: No paper detected within presenter unit	④	0
	1: Paper detected within presenter unit		1
7	Non-use		0

Note1. This bit is cleared to '0' after removing the paper. Meanwhile, cancel the printing data.

Note2. Although answered at the time of a command inquiry, it does not answer as automatic status.

Note3. This bit can be applied to software version V1.81 or later in SK1-31/32/21/22 and V2.26 or later in SK1-24/41.

[Sample Code]

```
n = 0;
buf[n++] = 0x1d;
buf[n++] = 0x61;
buf[n++] = 0x0F;

// send command
Ret = WriteFile(hPort,buf,n,&dwSendSize,NULL);
// receive data (4byte)
Ret = ReadFile(hPort,res,4,&dwSendSize,NULL);

// Determination of received data
// First byte (Printer information)
if(res[0] & 0x08) {
    Label1->Caption = "Offline";
}
else{
    Label1->Caption = "Online";
}
// Second byte (error information)
if(res[1] & 0x08) {
    Label2->Caption = "Auto cutter error";
}
else if(res[1] & 0x20) {
    Label2->Caption = "Voltage error";
}
else if(res[1] & 0x40) {
    Label2->Caption = "Auto recoverable error";
}
else{
    Label2->Caption = "Non error";
}
// Third byte (Paper detection information)
if(res[2] & 0x03) {
    Label3->Caption = "No paper ";
}
else if(res[2] & 0x0C) {
    Label3->Caption = "Near end";
}
else{
    Label3->Caption = "No error";
}
// Forth byte (Paper detection status of option)
if(res[3] & 0x40) {
    Label4->Caption = "Paper detected within presenter unit";
}
else{
    Label4->Caption = "No paper detected within presenter unit";
}
```

[Name] Transmit status

[Code] <1D>h <72>h n

[Defined area] n=1, 2, 49, 50

[Function] Transmits status specified to host.
 n=1, 49 : Transmits status of paper detection.
 n=2, 50 : Undefined

[Detail]

- This command inputs to receive buffer at first, so if receive buffer has a lot of data, the action will delay.
- The printer sends the status without checking the status of host.

(n=1, 49)

Bit	Function
0,1 Note1	0 : Paper detected 1 : No paper detected
2,3	0 : Near end paper detected 1 : No near end paper detected
4	Non-use (0)
5	Undefined
6 Note2	0: No paper detected within presenter unit 1: Paper detected within presenter unit
7	Non-use (0)

Note1. This bit is valid for model built in near end sensor and non near end model is applied for "0"

Note2. This bit can be applied to software version V1.81 or later in SK1-31/32/21/22 and V2.26 or later in SK1-41/24.

[Sample Code]

```
n = 0;
buf[n++] = 0x1d;
buf[n++] = 0x72;
buf[n++] = 0x01;
```

```
// send command
Ret = WriteFile(hPort,buf,n,&dwSendSize,NULL);
```

```
// receive data (1byte)
Ret = ReadFile(hPort,res,1,&dwSendSize,NULL);
```

```
// Determination of received data
if(res[0] & 0x0C) {
    Label->Caption = "No paper ";
}
else if(res[0] & 0x03) {
    Label->Caption = "Near end";
}
else{
    Label->Caption = "No error";
}
```

GS DLE

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Valid/Invalid of real-time status transmission

[Code] <1D>h <10>h n

[Defined area] n=0, 1, '0', 1'

[Function] Selects the status which is transmitted in real-time.

n=0, '0': Invalid the status which is transmitted in real-time

n=1, '1': Valid the status which is transmitted in real-time

[Detail] • Default is n=0.

[Notice]

- *1. This command can be applied to software version V1.81 or later in SK1-31/32/21/22 and V2.26 or later in SK1-41/24.

DLE EOT

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Transmit status in real-time

[Code] <10>h <04>h n

[Defined area] 1 n 4

[Function] Transmit the status which is specified with n variable

[Detail] • Each status represents the current situation. The status data is composed of 1 byte.
• This command is executed at receiving.
• <DLE EOT n> is executed at receiving and if <DLE SOT n> is used in bit-image data, <DLE SOT n> is processed as "Read time status command" and cancel bit-image data.
Therefore it is necessary to pay attention for using this command at users.

[Notice]

- *1. This command can be applied to software version V1.81 or later in SK1-31/32/21/22 and V2.26 or later in SK1-41/24.

(n=1)

BIT	status	値
0	Undefined	0
1	Undefined	0
2	Undefined	0
3	Online Offline	0 1
4	Undefined	1
5	Undefined	0
6	Undefined	0
7	Undefined	0

(n=2)

BIT	status	值
0	Undefined	0
1	Undefined	0
2	No head open error detected Head open error detected	0 1
3	Undefined	0
4	Undefined	0
5	No print stop by paper end sensor Print stop by paper end sensor	0 1
6	No error occurred Error occurred	0 1
7	Undefined	0

(n=3)

BIT	status	值
0	Undefined	0
1	Undefined	0
2	No presenter error occurred Presenter error occurred	0 1
3	No Cutter error Cutter error	0 1
4	Undefined	0
5	No voltage error Voltage error	0 1
6	No print head temperature error Print head temperature error	0 1
7	Undefined	0

(n=4)

BIT	status	值
0	Undefined	0
1	Undefined	0
2,3	Near-end paper detected No near-end paper detected	0 1
4	Undefined	0
5	Paper detected No paper detected	0 1
6	No paper detected within presenter unit Paper detected within presenter unit	0 1
7	Undefined	0

[Sample Code]

```
n = 0;
// Valid the status which is transmitted in real-time
buf[n++] = 0x1d;
buf[n++] = 0x10;
buf[n++] = 0x01;

// Transmit status in real-time(n = 2)
buf[n++] = 0x10;
buf[n++] = 0x04;
buf[n++] = 0x02;

// send command
Ret = WriteFile(hPort,buf,n,&dwSendSize,NULL);

// receive data (1byte)
Ret = ReadFile(hPort,res,1,&dwSendSize,NULL);

// Determination of received data
if(res[0] & 0x04) {
    Label->Caption = "Head open ";
}
else if(res[0] & 0x60) {
    Label->Caption = "No paper";
}
else{
    Label->Caption = "No error";
}
```

GS E

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Answer the string

[Code] <1D>h <45>h n STRING(d1...dk)

[Defined area] $1 \leq n \leq 16$
 $20h \leq d \leq 7Eh$

[Function] Sends the STRING which length is specified by n,
The printer returns as the data style DLE STX STRING DLE ETX.

n: STRING length

Ex.)

Host

Printer

GS E 04h "ABCD" →→→ (Receive)

(Receive) ←←← DLE STX "ABCD" DLE ETX

- [Detail]
- When the n is out of range, the command is ignored.
 - This command inputs to receive buffer at first, so if receive buffer has a lot of data, the action will delay.
 - The printer sends the string without checking the status of host.

GS R 1

Applicable **SK1-41/31/32/21/22/24** **SK1-21H/31H** **SK1-211/311**

[Name] Check printer status

[Code] <1D>h <52>h n

[Defined area] n= 1 or '1'

[Function] Sends printer status as the style of DLE STX Status(4 bytes) DLE ETX.

The printer status 4 bytes are like next.

(1byte) 'R' : Waiting 'B' : Moving 'E' : Error	(2byte) '0': Normal '1': Near end *3 '2': Paper empty '3': Head open *3 '4': Shown in below table	(3byte) *4 '0': Without '1': Voltage error '2': Abnormal of Temperature '3': Paper detection error	(4byte) '0':Reserved
---	--	--	-------------------------

*4. The obstacle factor when the 2byte is reply value '4'.

Error code	SK1-41/31/32/21/22/24, SK1-21H/31H
'4'	Abnormal of Temperature and Voltage error. Paper Jam error for bezel and presenter *1
'5'	Auto cutter error
'6'	Booked
'7'	Waiting for taking out the paper from bezel and presenter *1
'8'	Paper detected in bezel *2

*1. It is applicable for ver.1.40 or higher version on SK1 series with bezel (Bezel mode B) or presenter or BZ2-SK1.

*2. It is applicable for ver.1.51 or higher version on SK1 series with bezel (Bezel mode A or C).

*3. Only the model with the relevant sensor replies.

Ex.) Host Printer
 GS R 01h →→→ (Receive)
 (Receive) ←←← DLE STX "E200" DLE ETX <When paper empty >

[Detail]

- This command inputs to receive buffer at first, so if receive buffer has a lot of data, the action will delay.
- The printer sends the status without checking the status of host.

[Applicable printer]

- 3byte parameter 1~3 is applicable for ver.1.98 or higher at SK1-31/32/21/22 series.
The version before V1.98 is the reply value of the '0' reservation.
- 3byte parameter 1~3 is applicable for ver.2.30 or higher at SK1-41/24 series.
The version before V2.30 is the reply value of the '0' reservation.

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Print start /cut end automatic status transmission

[Code] <1D> <52> n

[Defined area] n= 3 or '3'

[Function] Sends printer status as the style of DLE STX status(4 byte) DLE ETX

The printer status 4 bytes are like next.

(1byte)	(2byte)	(3byte) *4	(4byte)
'P' : Print start 'C' : Cut end 'S' : Cut start 'E' : Error	--'P' or 'C' -- '0' : Normal --'E' -- '2' : paper empty '3' : Head open '4' : Abnormal of Temperature and humidity Paper detection error for bezel and presenter '5' : Auto cutter error '7' : Waiting for taking out the paper from bezel and presenter *1	'0' : Without '1' : Voltage error '2' : Abnormal of Temperature '3' : Paper detection error	'0' : Reserved

*1. It is valid for SK1 with bezel mode (mode = B) or presenter or BZ2-SK1.

*4. The obstacle factor when the 2byte is reply value '4'.

- [Detail]
- After this command is sent, it is necessary to send data printed and full-cut command, and a response is automatically returned once at the moment of starting printing or finishing cutting.
 - When printer shifts into error status, error response is returned automatically at the moment of starting printing or processing request of cut command, and response flag for starting printing or finishing cutting is cleared.
 - Before using this command, set software memory as below.
OFF LINE BUSY = OFF

Ex.)	Host	Printer
	GS R 33h	→→→ (Receive)
	Print Data	→→→ (Receive)
	Full Cut	→→→ (Receive)
	(Receive)	←←← DLE STX "P000" DLE ETX <When print start >
	(Receive)	←←← DLE STX "S000" DLE ETX <When cut start >
	(Receive)	←←← DLE STX "C000" DLE ETX <When cut end >

[Applicable printer]

- This command can be applied to software version V1.60 or later in SK1-31/32/21/22.
- This command can be applied to software version V2.24 or later in SK1-41/24
- 3byte parameter 1~3 is applicable for ver.1.98 or higher at SK1-31/32/21/22 series.
The version before V1.98 is the reply value of the '0' reservation.
- 3byte parameter 1~3 is applicable for ver.2.30 or higher at SK1-41/24 series.
The version before V2.30 is the reply value of the '0' reservation.

GS I

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Send printer ID

[Code] <1D>h <49>h n

[Definition area] n=1 to 3 or '1' to '3' / 65 to 67

[Function] Send specified the printer - ID

- [Detail]
- This command inputs to receive buffer at first, so if receive buffer has a lot of data, the action will delay.
 - The printer sends the status without checking the status of host.

[Sending value]

1) n=1 to 3

n	ID	Value (1 byte, 16 hexadecimal)
1, '1'	Product	SK1-41/31/32/21/22/24: 32H SK1-21H/31H: 35H SK1-211/311: 36H
2, '2'	Type	BIT0: 0 : 2 bytes code is not available. 1 : 2 bytes code is available. BIT1 to 7: 0 : Reserved
3, '3'	ROM version	ROM version

2) n=65 to 67

Send "header <5F> + Character lines + NULL <00>"

n	ID	Sending characters
65	ROM version	"V1.00" (in case of V1.00)
66	Manufacturer	"SANEI"
67	Model name	"SK1-21" (Model: SK1-21)

ESC s

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Send printer information

[Code] <1B>h <73>h n

[Defined area] n from 2 to 5

[Function] Send printer information according to "n".

Return style is "header<FF>" + n + "information data" (below table).

N	Information type	Information data
2	Model Name	Maximum 32 degree. The data size is variable, the end of code's NULL.
3	Software version1	The data size is fixed to 8 degree (Not end of code).
4	Software version2	The data size is fixed to 8 degree (Not end of code).
5	Software memory	The data size is fixed to 4 degree (Not end of code). Return the software memory 1 to 4 by binary code.

- [Detail]
- This command inputs to receive buffer at first, so if receive buffer has a lot of data, the action will delay.
 - The printer sends the status without checking the status of host.

[Printer-dependent spec]

- This command is applicable for ver.1.20 or higher at SK1 series.

ESC v

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Send a printer status in the present.

[Code] <1B>h <76>h

[Function] Sends a printer status with 1 byte length as table

(Table)

Bit	Status (Active: 1)
0	Near end paper detection
1	Open Thermal head
2	No paper
3	Temperature detection
4	Auto cutter error detection
5 Note2,3	In the case of bezel mode-A Non-use (0) In the case of bezel mode-B or BZ2-SK1 Paper jam detection. In the case of the presenter Paper jam detection.
6 Note2,3	In the case of bezel mode-A The bezel sensor is detected. In the case of bezel mode-B The bezel sensor is detected the paper after cut-action. Note1 In the case of the presenter. The presenter sensor is detected the paper after cut-action. Note1
7 Note3	Running the stored buffer mode in GS G .

Note1. It is cleared to "0" when the paper is removed and printing data is discarded.

Note2. It is valid for SK1 with bezel or presenter.

Note3. It is applicable for ver.1.40 or higher at SK1 series.

- [Detail]
- This command inputs to receive buffer at first, so if receive buffer has a lot of data, the action will delay.
 - The printer sends the status without checking the status of host.

[Printer-dependent spec]

- This command is applicable for ver.1.20 or higher at SK1 series.

[Sample Code]

```
n = 0;
buf[n++] = 0x1B;
buf[n++] = 0x76;

// send command
Ret = WriteFile(hPort,buf,n,&dwSendSize,NULL);

// receive data (1byte)
Ret = ReadFile(hPort,res,1,&dwSendSize,NULL);

// Determination of received data
if(res[0] & 0x10) {
    Label->Caption = "Cutter error";
}
else if(res[0] & 0x08) {
    Label->Caption = "Temperature error";
}
else if(res[0] & 0x02) {
    Label->Caption = "Head open";
}
else if(res[0] & 0x04) {
    Label->Caption = "No paper";
}
else if(res[0] & 0x01) {
    Label->Caption = "Near end";
}
else{
    Label->Caption = "No error";
}
```

FS Q

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
-------------------	------------------------------	--------------------	--------------------

- [Name] Specification of image registration into the nonvolatile memory
- [Code] <1C>h <51>h n
- [Defined area] $0 \leq n \leq 2$
- [Function] Saves data that follows the command as image data into the nonvolatile memory numbered with n.
- [Detail]
- Subsequently, continues registration until the FS R command is executed.
 - The maximum of dot line is approx. 1600 lines (200mm) in each memory.
If the printing image exceeds the maximum lines, the image exceeded is not effective.
 - When n=2 is specified, the area covers over n=0 and n=1 memories, so that the maximum of dot line expands to approx. 3200 lines.
 - Paper-feed commands such as ESC J are not registered as printing image.
 - During execution of the command, the inverse/erect specification cannot be changed.
 - This command is invalid when all numbers of memory are not cleared at registration mode.

(Max.registration line)

(Unit: Line)

Model	N=0,1 Max.	N=2 Max.	N=3,4 Max.
SK1-31/32/21/22/24/211/311	1600	3200	--
SK1-41	1600	3200	2800

- [Caution]
- Frequent registration into the nonvolatile memory may cause the memory to fail.
Never use the nonvolatile memory for frequent rewriting.
 - Do not turn off the power during execution of the command. The printer may be damaged.

FS R

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
-------------------	------------------------------	--------------------	--------------------

- [Name] Cancel Image registration in the nonvolatile memory
- [Code] <1C>h <52>h n
- [Defined area] $0 \leq n \leq 2$
- [Function] Cancel the image data registration into the nonvolatile memory specified by n.
- [Detail]
- Cancel the execution of FS Q command.
 - The following data returns to a usual state of operation.

FS O

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Set printing image registered in the nonvolatile memory.

[Code] <1C>h <4F>h n

[Defined area] $0 \leq n \leq 2$

[Function] Set printing mode to the printing image registered into the nonvolatile memory numbered with n.

- [Detail]
- Subsequently, continues printing received data linked with printing image registered in the nonvolatile memory until the FS P command is executed.
 - When the inverse/erect setting of the received data is not the same as the printing image registered in the nonvolatile memory, the command does not make linkage with the printing image.
 - The paper feed command such as ESC J does not make linkage with the printing image.
 - During execution of the command, inverse/erect specification cannot be changed.
 - This command is invalid when all numbers of memory specified by n are not cleared at registration mode.

FS P

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Cancel printing image registered in the nonvolatile memory

[Code] <1C>h <50>h n

[Defined area] $0 \leq n \leq 2$

[Function] Cancel printing image of the nonvolatile memory specified by n.

- [Detail]
- Cancel the execution of FS O command.
 - This command finishes the link with printing image registered in the nonvolatile memory.

FS /

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Print all of the data that are registered in the non-volatile memory

[Code] <1C> <2F> n

[Defined area] $0 \leq n \leq 2$

[Function] Print all of the data that are registered in the non-volatile memory by n.

- [Detail]
- This command is valid after the set the print mode by FS O command.
 - This command is applicable for ver.1.80 or higher at SK1 series.

DC3 A

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
-------------------	------------------------------	--------------------	--------------------

-
- [Name] Choose ruled line buffer A
- [Code] <13>h <41>h
- [Function] Chooses a ruled line buffer A.
- [Detail] • The ruled line buffer contains two independent internal buffers (buffer A and buffer B), and this command designates Buffer A as the active buffer.
• Buffer A is the default value.

DC3 B

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
-------------------	------------------------------	--------------------	--------------------

-
- [Name] Choose ruled line buffer B
- [Code] <13>h <42>h
- [Function] Chooses ruled line buffer B.
- [Detail] • The ruled line buffer contains two independent internal buffers (buffer A and buffer B), and this command designates Buffer B as the active buffer.
• Buffer A is the default value.

DC3 C

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
-------------------	------------------------------	--------------------	--------------------

-
- [Name] Clear the ruled line buffer
- [Code] <13>h <43>h
- [Function] Clear the contents of a chosen ruled line buffer.
- [Detail] • The clear data is all dots "0".

DC3 D

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
-------------------	------------------------------	--------------------	--------------------

-
- [Name] Write dot specification to the ruled line buffer
- [Code] <13>h <44>h nl nh
- [Defined area] $0 \leq nl \leq 255$
 $0 \leq nh \leq 3$
- [Function] Writes "1" (black spot) at the specified dots position of the ruled line buffer.
The position specified is $[(nh \times 256 + nl) \times \text{dot pitch}]$.
- [Detail] • The range of the ruled line buffer is "0" to "1023" dots. Irrespective of the printable area, it writes "1" (black spot) in the ruled line buffer.
• When specifying a parameter outside the specified range, the command is ignored.

DC3 L

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

-
- [Name] Write line specification of the ruled line buffer
- [Code] <13>h <4C>h nl nh ml mh
- [Defined area] $0 \leq nl \leq 255$
 $0 \leq nh \leq 3$
 $0 \leq ml \leq 255$
 $0 \leq mh \leq 3$
- [Function] Writes "1" (black spot) in a range of nhnl through mhml dots to the ruled line buffer.
 $0 \leq nhnl \leq mhml \leq 1023$
 $nhnl = (nh \times 256 + nl) \times \text{dot pitch}$
 $mhml = (mh \times 256 + ml) \times \text{dot pitch}$
- [Detail]
- The range of the ruled line is "0" to "1023" dots. Irrespective of the printable area, "1" (black dot) is written in the specified dot range of a chosen ruled line buffer.
 - When specifying a parameter outside the specified range, the command is ignored.

DC3 P

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

-
- [Name] Execute printing of 1-dot ruled line
- [Code] <13>h <50>h
- [Function] Prints data in the print buffer and prints a 1-dot line in a chosen ruled line buffer.
- [Detail]
- When data is not stored in the print buffer, it prints a 1-dot line of the ruled line buffer.
 - When the print mode of the ruled line buffer is disabled, printing is not performed.
 - In page mode, it prints to page memory.

DC3 +

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name]	Enable the ruled line printing mode
[Code]	<13>h <2B>h
[Function]	Permit the printing mode of the ruled line buffer.
[Detail]	• After enabling, when printing data (including CR/ LF) is printed, the dot pattern in a chosen ruled line buffer is overwritten and printed. • This command is not influenced by the right margin setting (GS L) or printing area width setting (GS W). • In initialization, the printing mode of the ruled line is disabled. <Standard mode> • Data in the ruled line, within the limit of the printing area, can be printed. But data outside the printing area is not printed. <Page mode> • The printing line is limited by Page mode specifications, but the range of the ruled line buffer data that conforms to the page horizontal size or vertical size is printed without any influence.

DC3 -

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name]	Disable the ruled line printing mode
[Code]	<13>h <2D>h
[Function]	Disables the printing mode of the ruled line buffer.
[Detail]	• After disabling, the dot pattern in the ruled line buffer is not overwritten and printed.

ESC @

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Initialization
 [Code] <1B>h <40>h
 [Function] Initialize the printer.
 [Detail]

- Initialize the user memory assignment.
- Data in the reception buffer is retained.
- Data in the print buffer is cleared.
- All the command settings are initialized.
- The data in the nonvolatile memory is retained.
- The setting of peripheral device command is retained.

DC2 D

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Reserve and release a user memory for download character registration area
 [Code] <12>h <44>h n
 [Defined area] $0 \leq n \leq 255$
 [Function] Reserves and releases the download character area in user memory.
 <xxxxxxx0>B : Download character area release
 <xxxxxxx1>B : Download character area reservation
 [Detail]

- When the download character area is released, the memory capacity of user memory increases by the amount of the released download character area.
- After releasing download character memory, registration is not performed.
- When download character area is reserved, the printer allocates 4,560 bytes of memory capacity for download character.
- After reservation, download character registration is performed.
- The default value is n=1 (reserved).

DC2 G

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Reserve and release a user-defined character registration area
 [Code] <12>h <47>h n
 [Defined area] $0 \leq n \leq 255$
 [Function] Reserves and releases a user memory for the 2byte type of user-defined character area.
 <xxxxxxx0>B : User-defined character area release
 <xxxxxxx1>B : User-defined character area reservation
 [Detail]

- When releasing the command, the area is added to the user memory.
- User-defined characters after release are not registered.
- When the user-defined character area is reserved, the printer allocates memory capacity for 1,152 bytes of user-defined characters.
- After reservation, user-defined characters are registered.
- The default value is n=1 (reserved).
- Only the last bit of n is effective.

DC2 ~

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Set print density

[Code] <12> <7E> n

[Defined area] $50 \leq n \leq 160$

[Function] Set the printing density of printer

- [Detail]
- n means n%
 - When printing density is adjusted 2 times darker, set n=200.
 - It is valid for last setting value.
 - Default value is n=100, however it is complied the printer which has the capability of setting the value by memory switch.
 - parameter "n" is $60 \leq n \leq 150$ for ver.1.33 or lower at SK1-31/32

GS (A

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Self test print

[Code] <1D>h <28>h <41>h

[Function] Execute self test printing

DC1

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Software Reset

[Code] <11>h

[Function] • Return a printer condition of power start.

- [Details]
- In the connection USB, takes reconnecting of USB for around 30 seconds.
 - The received buffer data after this command, lost by working software reset.
 - This command can be applied to software version V1.20 or later at SK1 series.

DC2 R

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Read a software memory switch

[Code] <12>h <52>h m

[Defined area] $0 \leq m \leq 6$

[Function] Sends a software memory switch as the style

DLE STX information (1 to 6 bytes of binary) DLE ETX.

m=0 : All a software memory (binary 6 byte length)

m=1 to 6 : m indicates the number of software memory (binary 1byte)

- [Detail]
- If reads only one memory, indicate to "m" from 1 to 6 as binary code.
In the software memory constitution, refer to memory table in the **DC2 K**.
 - This command inputs to receive buffer at first, so if receive buffer has a lot of data, the action will delay.
 - The printer sends the status without checking the status of host.
 - This command is applicable for ver.1.20 or higher version at SK1 series.

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Specify the stored buffering mode / cancel

[Code] <1D>h <47>h n

[Defined area] n = 20h, 21h, 30h, 31h

IDX = 0 to 255

When parameter n is 31h, it is added the JOB-ID (ID1 to ID4) with 4byte length after n.

Ex. 1Dh + 47h + 31h + ID1 + ID2 + ID3 + ID4

[Function] Specifies and cancels the stored buffering mode.

n=20h : Cancel the stored buffering mode

n=21h : Specify the stored buffering mode.

n=30h : Cancel the stored buffering mode and send the JOB-ID.

n=31h ; Specify the stored buffering mode and it's added the JOB-ID .

[Detail]

- The stored buffering mode uses page memory to be incorporated in the printer and it saves the printing image data on standard mode.
- When the stored buffering mode is cancelled, the printing image data saved in the page memory is printed in block.
- The stored buffering can not be used together with the page mode.
- When the length of printing image is more than 200mm, all the data stored until then are printed in block. However, the mode is not cancelled.
- The JOB-ID function, after all the stored data are printed, is to reply the data in accordance with the following formats:
Data-format : <FF> <13> ID1 ID2 ID3 ID4
- This command can be applied to software version V1.38 or later at SK1 series.

GS H

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Set the HRI character printing

[Code] <1D>h <48>h n

[Defined area] $0 \leq n \leq 255$

[Function] Specifies the printing position of the HRI characters at barcode printing.

n=<xxxxxx00>B : Does not print HRI characters.

n=<xxxxxx01>B : Printing on a bar code.

n=<xxxxxx10>B : Printing under a bar code.

n=<xxxxxx11>B : Printing on and under a bar code.

[Detail]

- The initial value is n=0.
- Only the last two bits are effective.

GS h

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Set the bar code height.

[Code] <1D>h <68>h n

[Defined area] $1 \leq n \leq 255$

[Function] Sets the bar code height. Unit n is a dot pitch.

[Detail]

- The initial value is n=162

GS w

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Set the barcode width

[Code] <1D>h <77>h n

[Defined area] $1 \leq n \leq 4$

[Function] Sets the width of a barcode as following table

(Table)

n	JAN/UPC Module width	ITF, CODE39, CODABAR module width	
		Thin bar	Bold bar
1	2-dot pitch	1-dot pitch	3-dot pitch
2	3-dot pitch	2-dot pitch	5-dot pitch
3	4-dot pitch	3-dot pitch	8-dot pitch
4	5-dot pitch	4-dot pitch	10-dot pitch

[Detail]

- The default value is n=2.but, in the case of CODE128, default value is 2-dot pitch.
- The module width of CODE128 setting conforms to JAN/ UPC.

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Print barcode
 [Code] <1D>h <6B>h m d1...dk <00>h
 [Defined area] $0 \leq m \leq 7$
 d1 ... dk is barcode data and differs according to the barcode system.
 [Function] Chooses the barcode system and prints a barcode.

m	Barcode system	k	d
0	UPC-A	k=11	$48 \leq d \leq 57$
1	UPC-E	k=7	$48 \leq d \leq 57$
2	JAN13	k=12	$48 \leq d \leq 57$
3	JAN8	k=7	$48 \leq d \leq 57$
4	CODE39	$1 \leq k$	$48 \leq d \leq 57, 65 \leq d \leq 90$ 32, 36, 42, 43, 45, 46, 47
5	ITF	$1 \leq k$ (Even)	$48 \leq d \leq 5$
6	CODABAR	$1 \leq k$	$48 \leq d \leq 57, 65 \leq d \leq 68$ 36, 43, 45, 46, 47, 58
7	CODE128 (EAN128)	$2 \leq k$	$0 \leq d \leq 127$

[Detail]

- UPC-A has 11 bytes of barcode data and the check digit is internally added.
- UPC-E has 7 bytes of barcode data and the check digit is internally added.
- JAN13 has 12 bytes of barcode data and the check digit is internally added.
- JAN8 has 7 bytes of barcode data and the check digit is internally added.
- IN CODE39, a start/stop module is internally added.
- ITF has an even-number of bytes as bar code data and the start/stop module is internally added.
- In CODE 128, a start module (either start A, start B, or start C) and bar code data are sent. The check digit and stop module are internally added.

A separator or check digit for each application identifier by EAN128 are not internal added. Each special character is specified with 2 bytes as follows:

SHIFT	->	7Bh, 53h	"{S "
CODE A	->	7Bh, 41h	"{A "
CODE B	->	7Bh, 42h	"{B "
CODE C	->	7Bh, 43h	"{C "
FNC 1	->	7Bh, 31h	"{1 "
FNC 2	->	7Bh, 32h	"{2 "
FNC 3	->	7Bh, 33h	"{3 "
FNC 4	->	7Bh, 34h	"{4 "
'{'	->	7Bh, 7Bh	"{{ "
Start A	->	67h (103)	"g"
Start B	->	68h (104)	"h"
Start C	->	69h (105)	"i"

- How to develop the data in page mode,
see "[How to Do Character Development](#)" at **ESC L** in Page Mode.

Applicable	SK1-31/32/21/22	SK1-211/311
------------	-----------------	-------------

[Name] Print barcode
 [Code] <1D>h <6B>h m n d1...dn
 [Defined area] $65 \leq m \leq 73$
 n and d1 ... dn is barcode data and differs according to the bar code system.
 [Function] Chooses the bar code system and prints a barcode.

m	Barcode system	n (Data size)	d (Barcode data)
65	UPC-A	n=11	$48 \leq d \leq 57$
66	UPC-E	n=7	$48 \leq d \leq 57$
67	JAN13	n=12	$48 \leq d \leq 57$
68	JAN8	n=7	$48 \leq d \leq 57$
69	CODE39	$1 \leq n \leq 255$	$48 \leq d \leq 57, 65 \leq d \leq 90$ 32, 36, 42, 43, 45, 46, 47
70	ITF	$1 \leq n \leq 255$ (Even)	$48 \leq d \leq 5$
71	CODABAR	$1 \leq n \leq 255$	$48 \leq d \leq 57, 65 \leq d \leq 68$ 36, 43, 45, 46, 47, 58
72	CODE93	$1 \leq n \leq 255$	$0 \leq d \leq 127$
73	CODE128 (EAN128)	$2 \leq n \leq 255$	$0 \leq d \leq 127$

[Detail]

- UPC-A has 11 bytes of barcode data and the check digit is internally added.
- UPC-E has 7 bytes of barcode data and the check digit is internally added.
- JAN13 has 12 bytes of barcode data and the check digit is internally added.
- JAN8 has 7 bytes of barcode data and the check digit is internally added.
- IN CODE39, a start/stop module is internally added.
- ITF has an even-number of bytes as bar code data and the start/stop module is internally added.
- In Code93, the start/end codes are printed with "□" character as HRI font at the beginning and end. The control code (00h to 1Fh and 7Fh) is combined "■" character and one alphabet as HRI font.

Control code		HRI Character	Control code		HRI Character
ASCII	HEX		ASCII	HEX	
NULL	00	■U	DLE	10	■P
SOH	01	■A	DC1	11	■Q
STX	02	■B	DC2	12	■R
ETX	03	■C	DC3	13	■S
EOT	04	■D	DC4	14	■T
ENQ	05	■E	NAK	15	■U
ACK	06	■F	SYN	16	■V
BEL	07	■G	ETB	17	■W
BS	08	■H	CAN	18	■X
HT	09	■I	EM	19	■Y
LF	0A	■J	SUB	1A	■Z
VT	0B	■K	ESC	1B	■A
FF	0C	■L	FS	1C	■B
CR	0D	■M	GS	1D	■C
SO	0E	■N	RS	1E	■D
SI	0F	■O	US	1F	■E
			DEL	7F	■T

- In CODE 128, a start module (either start A, start B, or start C) and bar code data are sent. The check digit and stop module are internally added.
A separator or check digit for each application identifier by EAN128 are not internal added. Each special character is specified with 2 bytes as follows:

SHIFT	->	7Bh, 53h	"{S "
CODE A	->	7Bh, 41h	"{A "
CODE B	->	7Bh, 42h	"{B "
CODE C	->	7Bh, 43h	"{C "
FNC 1	->	7Bh, 31h	"{1 "
FNC 2	->	7Bh, 32h	"{2 "
FNC 3	->	7Bh, 33h	"{3 "
FNC 4	->	7Bh, 34h	"{4 "
'{'	->	7Bh, 7Bh	"{{ "
Start A	->	67h (103)	"g"
Start B	->	68h (104)	"h"
Start C	->	69h (105)	"i"

- This command is applicable for ver.2.03.04 or higher at SK1-31/32/21/22.
- This command is applicable for ver.2.51.13 or higher at SK1-211/311.

GS k (GS1 DataBar)

Applicable **SK1-211/311**

[Name] Print GS1 Data barcode
[Code] <1D> <6B> m n d1...dk
[Defined area] $75 \leq m \leq 80$ (GS1 DataBar)
d1 ... dk is barcode data and differs according to the bar code system.
[Function] Chooses the bar code system and prints a bar code.

m	Bar code system
75	GS1 DataBar Omni-directional
76	GS1 DataBar Truncated
77	GS1 DataBar Limited
79	GS1 DataBar Stacked
80	GS1 DataBar Stacked Omni-directional

[Detail] GS1 DataBar is the following specifications.
① Parameter N is the number of data. n-byte data after N is the barcode data.
② If Parameter N is out of range, the command is ignored.

m	Bar code system	n	d
75	GS1 DataBar Omni-directional	13	$48 \leq d \leq 57$
76	GS1 DataBar Truncated	13	$48 \leq d \leq 57$
77	GS1 DataBar Limited	13	$48 \leq d \leq 57$
79	GS1 DataBar Stacked	13	$48 \leq d \leq 57$
80	GS1 DataBar Stacked Omni-directional	13	$48 \leq d \leq 57$

- GS1 Databar Omni-directional has 13 bytes of barcode data and the check digit is internally added.
- GS1 Databar Truncated has 13 bytes of barcode data and the check digit is internally added.
- GS1 Databar Limited has 13 bytes of barcode data and the check digit is internally added. The first byte of data is fixed to "0" (48) or "1" (49).
- GS1 Databar Stacked has 13 bytes of barcode data and the check digit is internally added.
- GS1 Databar Stacked Omni-directional has 13 bytes of barcode data and the check digit is internally added.

I -14. Two dimensional barcode

(Only for the optioned model)

GS S

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Change the cell size of two dimensional barcode

[Code] <1D>h <53>h n

[Definition area] $0 \leq n \leq 1$

[Function] Change the cell size of two dimensional barcode

n=0 : Set initial value of cell size (Default)

n=1 : Enlarge cell size

	Default	After changed
PDF417	2	3
MicroPDF417	2	3
DataMatrix	3	4
QRCode	3	4

[Detail] • The default value is n=0.

GS Q

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Print two dimensional barcode

[Code] <1D>h <51>h n ...

[Function] Print barcode type specified by n

n = 0:Setting is prohibited

1:Setting is prohibited

2:PDF417

3:MicroPDF417

4:DataMatrix

5:MaxiCode

6:QRCode

7: MicroQRCode *1

*1 This parameter can be applied to software version V1.67 or later at SK1 Series.

* Refer to the next page for parameter after n.

PDF417

GS + Q + 2 +

Type +EncMode +ECC_LV +Size +nl +nh +Data(1)...Data(n)

Type symbol

0: Standard

1:Truncate

EncMode Encode mode

0: Auto proper encode

1: Binary Encode

ECC_LV ECC(Error correction control) Level

Specify 0~7

Size

Choose one combination under below table.

Combination table of column and step (X=Column ,Y=step)

0	X 2: Y 4	8	X 12: Y 4
1	X 2: Y 9	9	X 12: Y 9
2	X 2: Y 15	10	X 12: Y 15
3	X 2: Y 20	11	X 12: Y 20
4	X 7: Y 4	12	X 20: Y 4
5	X 7: Y 9	13	X 20: Y 9
6	X 7: Y 15	14	X 20: Y 15
7	X 7: Y 20	15	X 20: Y 20

nl, nh

Specify data size lower byte/ higher byte.

$1 \leq nhnl \leq 448$

* Max. size of data is changed depending on the selected parameter.

Data(1) ...Data(n)

Barcode data (Input number of data specified by n <n=nhnl>)

MicroPDF417

GS +Q +3 +

Type +EncMode +Size +n + Data(1)...Data(n)

Type symbol

0:Standard

1:Code128 Emulation mode (No specific regulation)

2:Code128 Emulation mode (Specific industrial regulation FNC1 1st)

3:Code128 Emulation mode (Specific industrial regulation FNC1 2nd)

EncMode Encode mode

0:Auto proper encode

1:Binary encode

Size

Choose one combination under below table.

Combination table of column and step (X=Column ,Y=step)

0	X 1: Y 11	8	X 3: Y 26
1	X 1: Y 17	9	X 3: Y 44
2	X 1: Y 28	10	X 4: Y 4
3	X 2: Y 8	11	X 4: Y 10
4	X 2: Y 17	12	X 4: Y 12
5	X 2: Y 26	13	X 4: Y 26
6	X 3: Y 6	14	X 4: Y 44
7	X 3: Y 12		

n

Specify the size of data

$1 \leq n \leq 150$

* Max. size of data is changed depending on the selected parameter.

Data(1) ... Data(n)

Barcode data (Input number of data specified by n)

DataMatrix

GS +Q +4 +

Type +(Cells or SizeXY) + nl + nh + Data(1)...Data(n)

Type symbol

0:square

1:rectangular

Cells (In case the symbol is square)

Either 10, 18, 22, 26, 32, 40 or 48

SizeXY (In case the symbol is rectangular)

0:X=18, Y= 8

1:X=32, Y= 8

2:X=26, Y=12

3:X=36, Y=12

4:X=36, Y=16

5:X=48, Y=16

nl, nh

Specify data size lower byte/ higher byte.

$1 \leq nhnl \leq 448$

* Max. size of data is changed depending on the selected parameter.

Data(1)...Data(n)

Input the number of data specified by n<nhnl>

MaxiCode

GS + Q+ 5+

Type +(OPT + SC + CC + PC) + n+ Data(1)...Data(n)

Type symbol

0:Standard

1:Full ECC

2:Construction of string (layout) data

OPT (In case of Type is 2)

BIT0: Specify 1 service class

BIT1: Specify 1 country code

BIT2: Specify 1 post code

* Must specify one of above BIT.

SC (In case of Type is 2 and BIT0 is 1 specified in above OPT)

ASIC alphanumeric up to specified 3bytes of service class, finishing by NULL

CC (In case of Type is 2 and BIT1 is 1 specified in above OPT Type)

ASIC alphanumeric up to specified 3bytes of country code, finishing by NULL

PC (In case of Type is 2 and BIT2 is 1 specified in above OPT)

ASIC alphanumeric up to specified 6bytes or 9bytes of post code, finishing by NULL

n

Specify the data size.

$1 \leq n \leq 150$

* Max. size of data is changed depending on the selected parameter.

Data(1)..Data(n)

Barcode data (Input the number of data specified n)

QRCode

GS + Q+ 6 +
+ Size +ECC_LV +nl +nh +Data(1)...Data(n)

Size Symbol Size

Specification 1 • [SK1-41/31/21] *1

1 - 14

Specification 2 • [SK1-21H/31H/SK1-211/311]

1 - 40

ECC_LV ECC(Error collection control)Level

1: L (7%)

2: M (15%)

3: Q (25%)

4: H (30%)

nl, nh

Specify data size lower byte/ higher byte.

Specification 1 : $1 \leq nhnl \leq 448$

Specification 2 : $1 \leq nhnl \leq 7089$

* Max. size of data is changed depending on the selected parameter.

Data(1)..Data(n)

Barcode data (Input the number of data specified n<nhnl>)

[Notice] *1.

- SK1-31/32/21/22 Series

new symbol size is applicable for ver.1.45 or higher

Old symbol size is applicable for ver.1.44 or prior.

MicroQRCode

GS + Q+ 7 +
+ Size +ECC_LV +n +Data(1)...Data(n)

Size Symbol Size
1, 2, 3, 4

ECC_LV ECC(Error collection control)Level
1 : L (7%) (if Size=1、 Only this parameter is effective.)
2 : M(15%)
3 : Q(25%)

n : Specify data size.
 $1 \leq n \leq 35$
* Max. size of data is changed depending on the selected parameter.

Data(1)..Data(n)
Barcode data (Input the number of data specified n)

I -15. Label Command

(Only for the optioned model)

DC2 L

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Set the length of label

[Code] <12>h <4C>h n1 n2 n3 n4

[Definition area] $1 \leq n1 \leq 255$ (unit:1mm) [unit:2mm(SK1Series)]


$0 \leq n2 \leq 20$ (unit:1mm)

$0 \leq n3 \leq 20$ (unit:1mm)

$0 \leq n4 \leq 20$ (unit:1mm)

[Function] Set the length of label specified by n1, n2, n3, n4.

- n1 = Length of the printing area
- n2 = Length of gap between labels
- n3 = Feed amount for the beginning of a line after “ DC2 l”
- n4 = Feed back amount before the beginning of printing

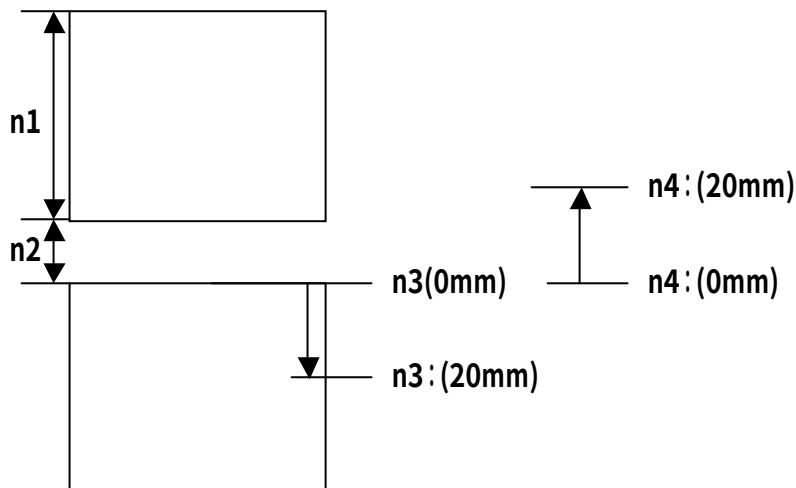

[Details] • Established parameter is registered nonvolatile memory.

[Particular spec] SK1-41/31/32/21/22/24/211/311

- The length of n1 is calculated by $n1 \times 2\text{mm}$.
- Maximum setting length of n1 is 350mm. When n1 is set beyond maximum value, it is changed to the maximum value.
- ※Maximum setting length of n1 is 450mm. (SK1-31/32/21/22 ver.2.03.05 or higher.)
- ※Maximum setting length of n1 is 450mm. (SK1-211/311 ver.2.51.13 or higher.)

[Caution] • Do not register parameters into nonvolatile memory multiple times every operation. It may cause the damage of nonvolatile memory.

• Do not turn the power off while executing this command.

DC2 I

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Label feed

[Code] <12>h <6C>h

[Function] Feed the position of next label based on the setting label page.

DC2 B

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Re-detect of marking position

[Code] <12>h <42>h

[Function] Re-detect the current marking position.

- [Detail]
- The position will move about 1 to 2mm when the label is cut.
Re-detect the current marking position, and adjust the position.
 - Set this command top of the printing.
 - It makes back feed till re-detection of marking position.
If no paper before marking position, then the paper will drop out.
So that keep the paper before marking position.

DC2 mrk

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

[Name] Set the marking threshold

[Code] <12>h <6D>h <72>h <6B>h n

[Definition area] n=01h、05 to 25

[Function] Tune the sensitivity of mark sensor.

n=1 : Feed double length of Paper feed setting, and set the best threshold.

n=5 to 25 : Set the voltage of threshold directly. (0.5V to 2.5V)

- [Detail]
- The default is n=08.
 - The value is different in each label, so attention is need for user.

Applicable	SK1-41/31/32/21/22/24	SK1-21H/31H	SK1-211/311
------------	-----------------------	-------------	-------------

(Supports available only for software release version V1.51 or later, and for the option model)

ESC h

[Name] Select the active mode on the presenter

[Code] <1B>h <68>h n

[Definition area] n= 0 to 7

[Function] Select the active mode of presenter.

n=0 : Automatic release and retractive (retraction or ejection) mode.

n=1 : Automatic release only mode

n=2 : Manual release and retractive (retraction or ejection) mode.

n=3 : Manual release only mode.

n=4 : Execute the release action forcibly

n=5 : Execute the retract action forcibly

n=6 : OFF

n=7 : OFF

- [Detail]
- The default is n=0.
 - The automatic release mode enables to release paper automatically, synchronizing with cutter action.
 - The automatic retractive mode enables to retract paper automatically synchronizing with the time-out.
 - The manual release mode enables to release paper by user's command specifications.
 - The manual retractive mode enable to retract paper by user's command specifications.
 - How to specify the manual mode is executed by the command of **"ESC r 0"**.
 - Function OFF does not work for the presenter of mode.
 - This mode is recommended to use under Function OFF, in case the printing length exceeds 250mm(stipulated on the specifications) of the paper latch mechanism.
 - Selection of either retraction and ejection should be set function setting process.

ESC r 0

[Name] Select the presenter operation

[Code] <1B>h <72>h <30>h n

[Definition area] $0 \leq n \leq 255$

[Function] Select the operation mode of presenter

n=<xxxxxxx0>B : Manual retractive (retraction or ejection) operation

n=<xxxxxxx1>B : Manual release operation

- [Detail]
- The command is enabled to function when the operation mode is valid by ESC h.

ESC r 1

[Name] Set the time-out for the retractive (retraction or ejection) mode.

[Code] <1B>h <72>h <31>h n

[Definition area] $0 \leq n \leq 61$

[Function] Set n X sec of time-out .

n=0 : Invalid the time-out.

- [detail]
- The default is n=4.

ESC r 3

[Name] Select the presenter mode

[Code] <1B>h <72>h <33>h n

[Definition area] $0 \leq n \leq 3$

[Function] Select the presenter mode

n=0: CLAMP/RETRACT

n=1: CLAMP/EJECT

n=2: CLAMP ONLY

n=3: CONTINUOUS

- [detail]
- The default is depending on software switch.
 - The command can be processed to software version V1.89 or later in SK1-31/32/21/22 and V2.26 or later in SK1-41/24.

ESC r @

[Name] Reset of the presenter error factor

[Code] <1B>h <72>h <40>h n

[Defined area] n=0, '0'

[Function] Initialize the printer and clear errors

n=0, '0': initializing the printer and clear errors.

- [Detail]
- This command is executed to reset all information relating to the printer.
 - The command can be processed to software version V1.81 or later in SK1-21/31 and V2.26 or later in SK1-41/24.

Note:

- *1. Ejection function can be processed to software version V1.81 or later in SK1-31/32/21/22 and V2.26 or later in SK1-41/24

ESC r 5

[Name] Set the length of first-out of the paper

[Code] <1B>h <72>h <35>h n

[Defined area] 0 n 120

[Function] Set the length of first out of paper (Unit:mm)

n=0: Clear the length of first-out

n=1~120: Set the length of first-out depend on "n" parameter (Unit:mm)

- [Detail]
- The default is n=0.
 - this command is applicable for ver.2.03.04 or higher at SK1-31/21/22 series.

GS V 4

[Name] Paper eject and cut

[Code] <1D>h <56>h <34>h n

[Defined area] $0 \leq n \leq 255$

[Function] Eject the paper length depend on "n" parameter and cut.

- [Detail]
- this command is applicable for ver.2.03.04 or higher at SK1-31/21/22 series.

I -17. Light emitting LED

This command can be applied to software version V1.98 or later at SK1-21/22/31/32 series

This command can be applied to software version V2.30 or later at SK1-24 series

Applicable SK1-21/22/24/31/32

GS l n m

[Name] Set the LED pattern for LED Unit

[Code] <1D> <6C> n m

[Defined area] n=0, $0 \leq m \leq 3$

[Function] Select the LED pattern

m=0: no LED pattern

m=1: LED pattern 1

m=2: LED pattern 2

m=3: LED pattern 3

[Detail] • The default value is m = 1.

[LED Pattern]

<LED Bezel Model>

LED status ○: Turn ON blue or green (0.1sec), ●: Turn OFF (0.1sec), ◎: Turn ON Red(0.1sec)

LED pattern 1 (Default)

Status	LED	LED lights
No paper is in the inside of bezel	Turn off	-
Waiting for taking out the paper from bezel (Bezel mode = Mode B)	○○●●	Blue or Green
Waiting for taking out the paper from bezel (Bezel mode = Mode A or C)	○○○○	Blue or Green
Printing or paper feed	○○○○	Blue or Green
Temperature error	◎●◎●	Blinking red
Paper empty or Print head open	◎◎◎◎	Red
Paper jam error (Bezel mode = Mode B)	◎◎●● (Blinking red)	Blinking red
Unrecoverable error	◎◎●● (Blinking red)	Blinking red

LED pattern 2

Status	LED	LED lights
No paper is in the inside bezel	Turn off	-
Paper is in the inside of bezel.	○○●●	Blue or Green
Paper is in the inside of bezel. Printer error	◎◎●● (Blinking red)	Blinking red
No paper is in the inside bezel. Temperature error	◎◎●●	Blinking red
No paper is in the inside bezel. Paper empty or Print head open	◎◎◎◎	Red
No paper is in the inside bezel. Paper jam error. (Bezel mode = Mode B)	◎◎●● (Blinking red)	Blinking red
No paper is in the inside bezel. Unrecoverable error	◎◎●● (Blinking red)	Blinking red

LED pattern 3

Status	LED	LED lights
No paper is in the inside bezel	○○●●	Blue or Green
Paper is in the inside of bezel.	○○◎◎	○Blue or Green ◎Red
Paper is in the inside of bezel. Printer error	◎◎●● (Blinking red)	Blinking red
No paper is in the inside bezel. Temperature error	◎◎●●	Blinking red
No paper is in the inside bezel. Paper empty or Print head open	◎◎◎◎	Red
No paper is in the inside bezel. Paper jam error. (Bezel mode = Mode B)	◎◎●● (Blinking red)	Blinking red
No paper is in the inside bezel. Unrecoverable error	◎◎●● (Blinking red)	Blinking red

This command can be applied to software version V2.51.17 or later at SK1-211/311 series

Applicable SK1-211/311

<LED Bezel Model>

LED status ○: Turn ON blue or green (0.1sec), ●: Turn OFF (0.1sec), ◎: Turn ON Red(0.1sec)

LED pattern 1 (Default)

Status	LED	LED lights
No paper is in the inside of bezel	Turn off	-
Waiting for taking out the paper from bezel (Bezel mode = Mode B)	○○●●	Blue or Green
Waiting for taking out the paper from bezel (Bezel mode = Mode A or C)	○○○○	Blue or Green
Printing or paper feed	○○○○	Blue or Green
Temperature error	◎●◎●	Blinking red
Paper empty or Print head open	◎◎◎◎	Red
Paper jam error (Bezel mode = Mode B or BZ2-SK1)	◎◎◎◎	Blue or Green Red
Unrecoverable error	◎◎◎◎	Blue or Green Red

LED pattern 2

Status	LED	LED lights
No paper is in the inside bezel	Turn off	-
Paper is in the inside of bezel.	○○●●	Blue or Green
Temperature error	◎●◎●	Blinking red
Paper empty or Print head open	◎◎◎◎	Red
Paper jam error (Bezel mode = Mode B or BZ2-SK1)	◎◎◎◎	Blue or Green Red
Unrecoverable error	◎◎◎◎	Blue or Green Red

LED pattern 3

Status	LED	LED lights
No paper is in the inside bezel	○○●●	Blue or Green
Paper is in the inside of bezel.	○○◎◎	○Blue or Green ◎Red
Temperature error	◎●◎●	Blinking red
Paper empty or Print head open	◎◎◎◎	Red
Paper jam error (Bezel mode = Mode B or BZ2-SK1)	◎◎◎◎	Blue or Green Red
Unrecoverable error	◎◎◎◎	Blue or Green Red

<LED Presenter Model>

LED status ○: Turn ON blue or green (0.1sec), ●: Turn OFF (0.1sec) , ◎: Turn ON Red(0.1sec)

LED pattern 1 (Default)

Status	LED	LED lights
No paper is in the inside of presenter	Turn off	-
Waiting for taking out the paper from Presenter	○○●●	Blue or Green
Printing or paper feed	○○○○	Blue or Green
Temperature error	◎●◎●	Blinking red
Paper empty or Print head open	◎◎◎◎	Red
Paper jam error	○○○○◎	Blue or Green Red
Unrecoverable error	○○○○◎	Blue or Green Red

LED pattern 2

Status	LED	LED lights
No paper is in the inside of presenter	Turn off	-
Paper is in the inside of presenter	○○●●	Blue or Green
Temperature error	◎●◎●	Blinking red
Paper empty or Print head open	◎◎◎◎	Red
Paper jam error	○○○○◎	Blue or Green Red
Unrecoverable error	○○○○◎	Blue or Green Red

LED pattern 3

Status	LED	LED lights
No paper is in the inside of presenter	○○●●	Blue or Green
Paper is in the inside of presenter	○○◎◎	○Blue or Green ◎Red
Temperature error	◎●◎●	Blinking red
Paper empty or Print head open	◎◎◎◎	Red
Paper jam error	○○○○◎	Blue or Green Red
Unrecoverable error	○○○○◎	Blue or Green Red

DC2 K (SK1-41/31/32/21/22/24, SK1-21H/31H)

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H

[Name] Set memory switch

[Code] <12>h <4B>h m n1...n6

[Definition area] $0 \leq n1 \dots n6 \leq 255$

[Function] Sets memory switch. m = Register mode

m=0: Register all (n1...n6)

m=1~6: Select the register number.

n1(m = 1)

Bit	Menu	Value
0	Command Mode *2	0: MODE-A 1: MODE-B
1	PAPER FEED	0: OFF 1: ON
2	OFFLINE BUSY	0: ON 1: OFF
3,4	CUT AFTER FEED-SW *1	0: Non 1: Partial cut 2: Full cut
5	Undefined	--
6	SELECT SENSOR	0: Reflection 1: Transmission
7	MARK DETECTION	0: OFF 1: ON

n2(m = 2)

Bit	Menu	Value
0,,3	CHARACTER TABLE	0: PC437 1: KATAKANA 2: PC850 3: PC852 4: PC857 5: PC858 6: PC863 7: PC865 8: PC866 9: WPC1252 10: PC860 11: WPC1252_2 12: PC864 13: WPC1254 *4 14: WPC1250 *6 15: WPC1251 *6 16: PC864 *7 17: Reserve *7 18: PC737 *8 20: PC1253 *9
4,,6	PRINT DENSITY	0: 80% 1: 90% 2: 100% 3: 110% 4: 120% 5: 130% 6: 140% 7: 150%
7	MARK RE-DETECTION	0: OFF 1: ON

n3(m = 3)

Bit	Menu	Value
0,,2	PRINT WIDTH	[SK1-31/32/31H] [SK1-21/22/24/21H] [SK1-41] 0: 80/72 Undefined 80/72 1: 60/56 60/56 Undefined 2: 58/54 58/54 Undefined 3: 83/80 Undefined 83/80 4: Undefined Undefined 112/104 5-7: Undefined Undefined Undefined
3,4,5	MECHANISM SPEED	[SK1-31/32/21/22/24] [SK1-41/21H/31H] 0: 110mm/s 110mm/s 1: 130mm/s 130mm/s 2: 150mm/s 150mm/s 3: 170mm/s Undefined 4: 190mm/s Undefined 5: 200mm/s Undefined 6-7 Undefined Undefined
6	SELLECT NEAR-END *2	0: On 1: Off
7	CHARACTER TABLE *7	CHARACTER TABLE BIT4

n4(m = 4)

Bit	Menu	Value
0,,2	BAUD RATE	0: 1200 1: 2400 2: 4800 3: 9600 4: 19200 5: 38400 6: 57600 7: 115200
3	BIT Length	0: 8Bit 1: 7Bit
4,5	PARITY	0: Non 1: Non 2: Odd 3: Even
6	BUSY CONTROL	0: RTS/CTS 1: XON/XOFF
7	STOP BIT	0: 1-BIT 1: 2-BIT

n5(m = 5)

Bit	Menu	Value
0,,7	Value at Paper Feed	$0 \leq n5 \leq 255$

n6(m = 6)

Bit	Menu	Value
0,1,2	USB DEVICE CLASS *3	0: Printer Device Class 1: Communication Device Class 2-7: Undefined
3	SELECT REELER *5	0: OFF 1: ON
4,5	BEZEL MODE *3	0: NON (NORMAL MODE) 1: Bezel Mode-A *3 2: Bezel Mode-B *3 3: Bezel Mode-C *6
6	CODE128 TYPE	[SK1-31/32/21/22/24/21H/31H], [SK1-41] 0: Undefined TYPE A 1: Undefined TYPE B
7	Undefined	

- [Detail]
- This command registers to nonvolatile memory, so that it remain when power off.
 - When registration all, set the value m=0, and continue n1...n6 6 bytes data.
 - When registration one, set the value m=1...6, and continue one n.
 - Refer detail to SK1-31 Technical Manual, **IV**-3. Function setting mode.

[Caution]

- **Frequent registration into the nonvolatile memory may cause the memory to fail.**
- **Never use the nonvolatile memory for frequent rewriting.**
- **Do not turn off the power during execution of the command.**
The printer may be damaged.

[Notice]

- *1. This parameter can be applied to software version V1.16 or later.
- *2. This parameter can be applied to software version V1.20 or later.
- *3. This parameter can be applied to software version V1.30 or later.
- *4. This parameter can be applied to software version V1.48 or later.
- *5. This parameter can be applied to software version V1.51 or later.
- *6. This parameter can be applied to software version V1.70 or later.
- *7. This parameter can be applied to software version V1.98 or later for SK1-21/22/31/32.
- *8. This parameter can be applied to software version V1.99 or later for SK1-21/22/31/32.
- *9. This parameter can be applied to software version V2.03.04 or later for SK1-21/22/31/32.

Setting parameter of the character table

N3	n2	n2	n2	n2	CHARACTER TABLE
BIT4	BIT3	BIT2	BIT1	BIT0	
0	0	0	0	0	0: PC437
0	0	0	0	1	1: KATAKANA
. . .					
1	0	0	1	0	18 : PC737
1	0	1	0	0	20 : PC1253

DC2 K (SK1-211/311)**Applicable SK1-211/311**

[Name] Set memory switch

[Code] <12>h <4B>h m n1...n6

[Definition area] $0 \leq n1 \dots n6 \leq 255$

[Function] Sets memory switch. m = Register mode

m=0: Register all (n1...n6)

m=1~6: Select the register number.

n1(m = 1)

Bit	Menu	Value
0	Command Mode	0: MODE-A 1: MODE-B
1	PAPER FEED	0: OFF 1: ON
2	OFFLINE BUSY	0: ON 1: OFF
3,4	CUT AFTER FEED-SW	0: Non 1: Partial cut 2: Full cut
5	Undefined	--
6	SELECT SENSOR	0: Reflection 1: Transmission
7	MARK DETECTION	0: OFF 1: ON

n2(m = 2)

Bit	Menu	Value
0,,3	CHARACTER TABLE	0: PC437 1: KATAKANA 2: PC850 3: PC852 4: PC857 5: PC858 6: PC863 7: PC865 8: PC866 9: WPC1252 10: PC860 11: WPC1252_2 12: PC864 13: WPC1254 14: WPC1250 15: WPC1251 16: PC864 17: Reserve 18: PC737
4,,6	PRINT DENSITY	0: 80% 1: 90% 2: 100% 3: 110% 4: 120% 5: 130% 6: 140% 7: 150%
7	MARK RE-DETECTION	0: OFF 1: ON

n3(m = 3)

Bit	Menu	Value
0,,2	PRINT WIDTH	0: 80/72 1: 60/56 2: 58/54 3: 83/80 4: Undefined 5-7: Undefined
3,4,5	MECHANISM SPEED	0: 110mm/s 1: 130mm/s 2: 150mm/s 3: 170mm/s 4: 190mm/s 5: 200mm/s 6: 220mm/s 7: 250mm/s
6	SELLECT NEAR-END	0: On 1: Off
7	CHARACTER TABLE *1	CHARACTER TABLE BIT4

n4(m = 4)

Bit	Menu	Value
0,,2	BAUD RATE	0: 1200 1: 2400 2: 4800 3: 9600 4: 19200 5: 38400 6: 57600 7: 115200
3	BIT Length	0: 8Bit 1: 7Bit
4,5	PARITY	0: Non 1: Non 2: Odd 3: Even
6	BUSY CONTROL	0: RTS/CTS 1: XON/XOFF
7	STOP BIT	0: 1-BIT 1: 2-BIT

n5(m = 5)

Bit	Menu	Value
0,,7	Value at Paper Feed	$0 \leq n5 \leq 255$

n6(m = 6)

Bit	Menu	Value
0,1,2	USB DEVICE CLASS	0: Printer Device Class 1: Communication Device Class 2-7: Undefined
3	SELECT REELER	0: OFF 1: ON
4,5	BEZEL MODE	0: NON (NORMAL MODE) 1: Bezel Mode-A 2: Bezel Mode-B 3: Bezel Mode-C
6	Undefined	
7	Undefined	

- [Detail]
- This command registers to nonvolatile memory, so that it remain when power off.
 - When registration all, set the value m=0, and continue n1...n6 6 bytes data.
 - When registration one, set the value m=1...6, and continue one n.
 - Refer detail to SK1-31 Technical Manual, **IV-3**. Function setting mode.

- [Caution]
- **Frequent registration into the nonvolatile memory may cause the memory to fail.**
 - **Never use the nonvolatile memory for frequent rewriting.**
 - **Do not turn off the power during execution of the command.**
The printer may be damaged.

[Notice]

***1. Setting parameter of the character table**

N3	n2	n2	n2	n2	CHARACTER TABLE
BIT4	BIT3	BIT2	BIT1	BIT0	
0	0	0	0	0	0: PC437
0	0	0	0	1	1: KATAKANA
• • •					
1	0	0	1	0	18 : PC737

DC2 K7

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Set presenter memory
[Code] <12>h <4B>h <07>h n
[Definition area] $0 \leq n \leq 3$
[Function] Sets memory switch for presenter register.

BIT	Menu	Value
0,1	PRESENTER MODE	0: CLAMP/RETRACT 1: CLAMP/EJECT 2: CLAMP ONLY 3: CONTINUOUS
2-7	Undefined	

[Detail]

- This command registers to nonvolatile memory, so that it remain when power off.
- The command can be applied to software version V1.81 or later in SK1-31/32/21/22 and V2.26 or later in SK1-41/24.

[Caution]

- **Frequent registration into the nonvolatile memory may cause the memory to fail.**
- **Never use the nonvolatile memory for frequent rewriting.**
- **Do not turn off the power during execution of the command.**
The printer may be damaged.

DC2 R7

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Read a software memory switch for presenter register
[Code] <12>h <52>h <07>h
[Function] Sends a software memory switch for presenter register as the style
DLE STX information (1bytes of binary) DLE ETX.

[Detail]

- This command inputs to receive buffer at first, so if receive buffer has a lot of data, the action will delay.
- The printer sends the status without checking the status of host.
- The command can be applied to software version V1.81 or later in SK1-31/32/21/22 and V2.26 or later in SK1-41/24.

DC2 K 8

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Setting of memory switch for communications
[Code] <12>h <4B>h <08>h n
[Defined area] $0 \leq n \leq 255$
[Function] Set the memory switch for communications

BIT	Menu	Value
0,4	USB PORT NUMBER	0: NON 1: '1' 6: '6' 2: '2' 7: '7' 3: '3' 8: '8' 4: '4' 9: '9' 5: '5'
5	SAVING Mode Note1	0: OFF 1: ON
6	Act. For Driver	0: INVALID 1: VALID
7	CTS AVAILABLE	0: INVALID 1: VALID

Notes 1. Applies to SK1-21H / 31H only.

[Detail]

- This command registers to nonvolatile memory, so that it remain when power off.
- The command can be applied to software version V1.99 or later in SK1-31/32/21/22 and V2.31 or later in SK1-41/24.

[Caution]

- **Frequent registration into the nonvolatile memory may cause the memory to fail.**
- **Never use the nonvolatile memory for frequent rewriting.**
- **Do not turn off the power during execution of the command.**
The printer may be damaged.

DC2 R 8

Applicable SK1-41/31/32/21/22/24 SK1-21H/31H SK1-211/311

[Name] Reading memory switch for communications
[Code] <12>h <52>h <08>h
[Function] Read the memory switch for communications and send the status.
DLE STX information (1bytes of binary) DLE ETX.

[Detail]

- This command inputs to receive buffer at first, so if receive buffer has a lot of data, the action will delay.
- The printer sends the status without checking the status of host.
- The command can be applied to software version V1.99 or later in SK1-31/32/21/22 and V2.31 or later in SK1-41/24.

Read a software memory switch for presenter register

DC2 K 11 (SK1-21H/31H)

Applicable SK1-21H/31H

[Name] Setting of memory switch for printing mode

[Code] <12>h <4B>h <0B>h n

[Definition area] $0 \leq n \leq 255$

[Function] Set the printing mode into memory switch.

Bit	Menu	Value
0,2		
3	QUALITY MODE	0:OFF 1:ON
4,7	Undefined	-

[Detail] • This command registers to nonvolatile memory, so that it remain when power off.

[Caution]

- Frequent registration into the nonvolatile memory may cause the memory to fail.
- Never use the nonvolatile memory for frequent rewriting.
- Do not turn off the power during execution of the command.
The printer may be damaged.

DC2 R 11 (SK1-21H/31H)

Applicable SK1-21H/31H

[Name] Reading memory switch for communications of print mode

[Code] <12>h <52>h <0B>h

[Function] Read the printing mode into memory switch and send the status.
DLE STX information (1bytes of binary) DLE ETX.

[Detail] • This command inputs to receive buffer at first, so if receive buffer has a lot of data, the action will delay.
• The printer sends the status without checking the status of host.