


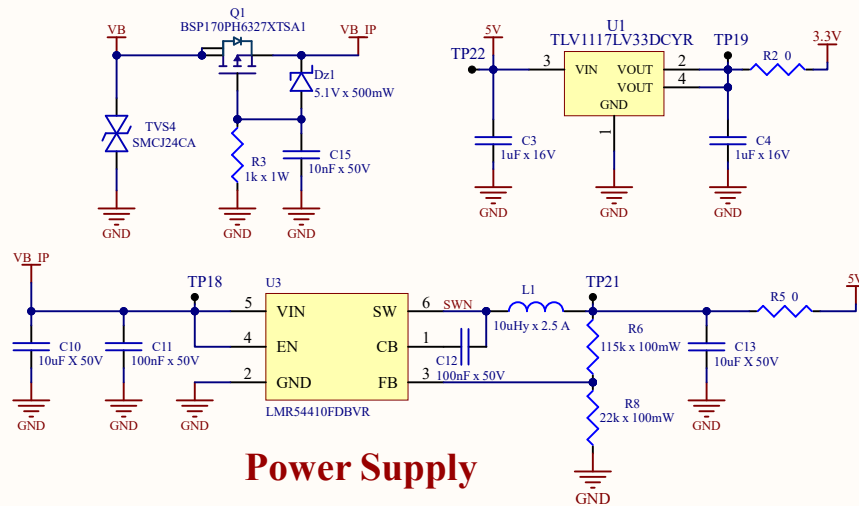


Power Supply

GPS Module

No Back Up Mode:
- Not Install R1, D1, B1, C2, C1


Back Up Mode:
- Install R1, D1, C1, C2, B1

Back Up Mode:
Cutting off VB and keeping V_BCKP powered will make the module enter into backup mode from full on mode. As long as the VB pin is powered, the module will enter into full on mode immediately.

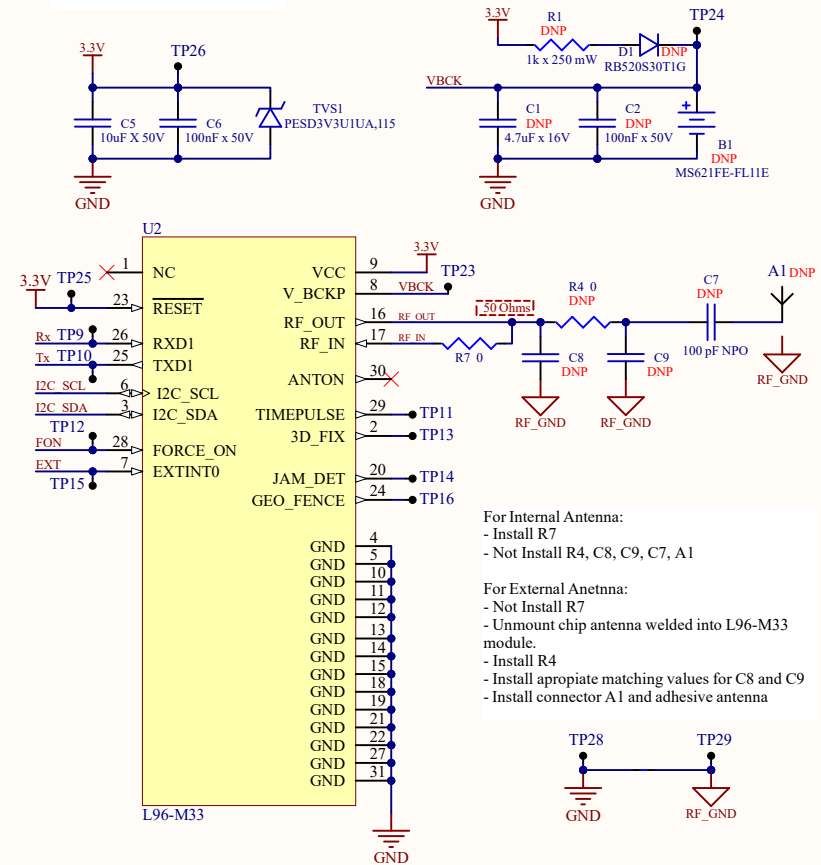


For Internal Antenna:
- Install R7
- Not Install R4, C8, C9, C7, A1



For External Antenna:
- Not Install R7
- Unmount chip antenna welded into L96-M33 module.
- Install R4
- Install appropriate matching values for C8 and C9
- Install connector A1 and adhesive antenna

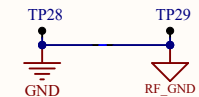

DNP: Do Not Place

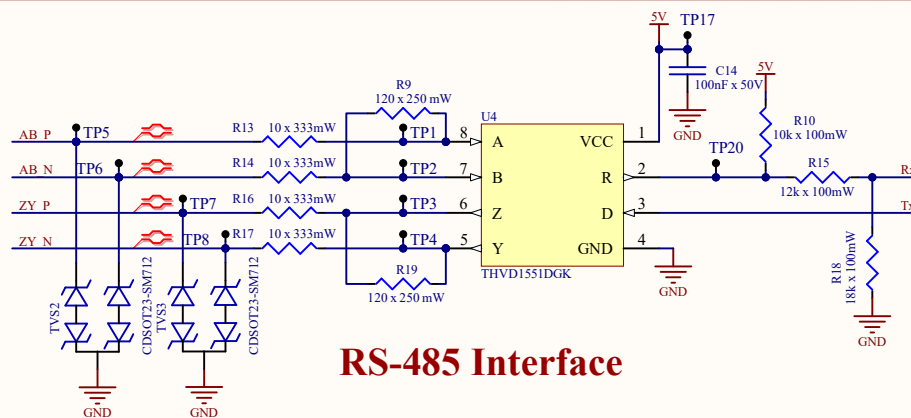

RS-485 Interface

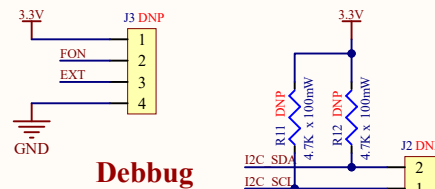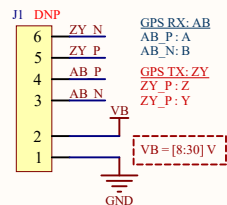

Debug

Title Salt Spreader GPS Schematic		
Size A4	Number BUY 278	Revision v1.1.1.0.2.2
Date: 7/25/2026	Sheet of 1 of 1	
File: C:\Users\...\278_PCB.SchDoc	Drawn By: Vega Maximiliano	