


扫码助手 • 模式切换条码 / Mode-switch sheets

扫一下就切换模式，不用碰键盘。这两枚条码不会被发送到业务软件里。

Scan one to switch mode without touching the keyboard. Neither code is ever sent to the business application.

切到 SN 模式


SN MODE — 扫到的码原样发出 / send the code as-is

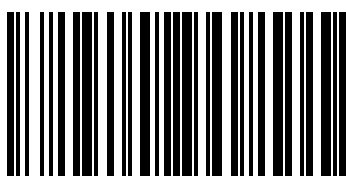

#SH:SN#

切到 SKU 模式

SKU MODE — 从码里截出 SKU / extract the SKU

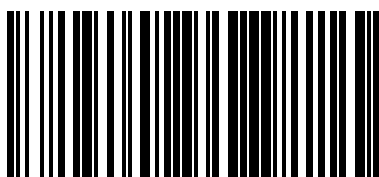

#SH:SKU#

★ 暂停期间这两张纸不起作用，扫到的内容会原样发给业务软件。

While paused these sheets do nothing and their content is sent through unchanged — pausing means the program does not interfere, with no exceptions.

★ 打印后请先扫一次试试。打印机墨点扩散可能让细条糊在一起，纸上看着好好的却扫不出来。

Test each sheet with the scanner after printing: ink spread can merge the thin bars, leaving a code that looks fine and does not scan.

扫码枪配置码 / Scanner setup codes

装机、或者枪被误设置之后恢复用。平时用不到。

For installing a scanner, or recovering one whose settings were changed. Not used day to day.

★ 这一页只适用于 Tera D5100。别的型号扫这些码没有意义，甚至可能设成别的东西。

This page applies to the Tera D5100 only. On another model these codes do nothing, or something else.

★ 这一页不要贴在工位上，跟装机工具放在一起。①「恢复出厂设置」会把枪打回键盘模式——那时本程序收不到任何数据、也不会报错，而条码会原封不动地进业务软件。

Keep this page away from the workstation, with the setup kit. Code ① returns the scanner to keyboard mode, where this program receives nothing and reports nothing while barcodes go straight into the business application.

① 恢复出厂设置 / Restore Defaults


把枪清回出厂状态。★ 执行后枪会退回 USB 键盘模式，必须接着走完 ②③④。



%%SpecCode39

② 切到 2.4G 无线 / 2.4GHz Mode


让枪走无线，而不是蓝牙或有线。

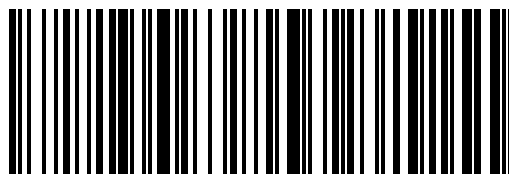

%%SpecCodeA8

③ 配对 / Pairing


把枪和接收器配上。扫之前先拔下接收器，扫完再插回去。

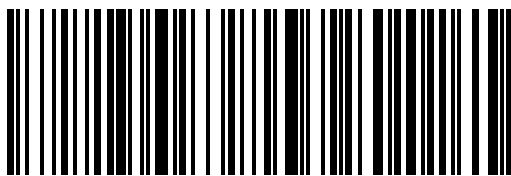

%%SpecCode99

④ 切到虚拟串口 / USB-COM Mode

★ 最关键的一张。不扫它，枪就一直当键盘用——本程序收不到任何数据，而条码会原封不动地进业务软件。扫完拔插一次接收器。

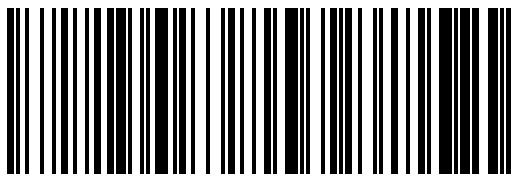

%%SpecCodeAE