


1. specifications:

built-in-place components
PLC type

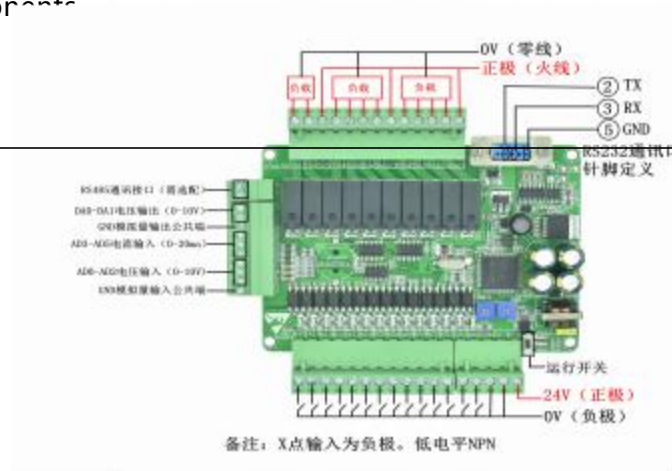

Enter the	DC 24 The DC flow is 24V 1; individual RS485
-----------	---

X 0-X 15, DC24 input, point X	low level effective. X0-X5 can be changed to 12 KHZ high-speed count input port (required).
Y 0-Y 11	The relay output of 10 points, can control the AC contactor, auxiliary relay, electromagnetic valve. (The AC load can be controlled within 5A.)
read analogue input	6 analog input, 12 bit accuracy, AD0~AD2 is voltage input: 0-10V, AD3~A D 5 is 020MA current input; read the analog with RD3A instruction
Analog output	2-way analog output, 12-bit accuracy, output voltage: 0-10V. The output analog voltage is indicated to WR 3 A
auxiliary relay M	a surname
Step-in point S	M 0-M3071, the storage range can be M0-M1023
The 100Ms timer	S 0-1023, the storage range can be set S0-S1023
10Ms timer	T 0-T 199, cumulative storage T184-T199
1Ms and the	T 200-T249, cumulative T246-T249
	T 250-T383, of which T250-255 is the cumulative type
	C 0-C 199, save C100-199
	C 200-C219, save C220-C234
	C 235-255; C 235-240 is a single-phase counter with no frequency, C 241-C 240 is a single-phase counter, double frequency C 247-249 is a double-phase counter with no frequency; C250-252 is a double-phase counter with 2 times the frequency; C253-
register D	For the duplex counter, 4 times the frequency; D 0-D7999, range can be set D0-7999,
Indirect Z addressing	V 0-7, Z0-7
pointer V, P,	P 0-63

X 0-5. Timer break (in 1MS). Counter interrupt.

M 8000 Often closed, M8002 electric pulse, M801110 MS pulse,
M8012100 MS pulse


mnemonic	function
L D	The operation starts to open the contact point regularly
L DI	The operation starts with the normally closed contact point
L DP	Start the detection operation
L DF	Start the drop detection operation
AND	Series often open contact point
ANI	Tandem-connected normally closed connection point
ANDP	The dem is detected the dem connection
ANDF	The line down is detected by tandem connection
OR	Parallel open open contact
O RI	Parallel and normally closed contact points
ORP	Parallel connection is detected along the rising edge
ORF	The parallel connection is detected
ANB	The loop blocks are connected in series
ORB	Parallel connection between the circuit blocks
OUT	Coil output drive
SET	Coil action holds up
R ST	Release coil action hold
P LS	The coil goes up along the output
P LF	The coil goes down along the output
A LT	Alternatively output
MC	Common string connection point with coil instructions
MCR	Public contact discharge instruction
MPS	Operational storage
MRD	memory read
MPP	Store the readout and reset
I NV	The operation result is reversed
END	end of program
S TL	Start the step ladder id
R ET	End of the step ladder id
CALL	Calling the subline
SRET	The order of the subprogram

classify	Command mnemonic	function
Program flow	C J	Conditions jump
	C ALL	subprogram call
	S RET	return from subroutine
	FEND	End of master program
	FOR	Cycle range begins
	NEXT	The cycle range ends
Transfer and compare	CMP	compare
	ZCP	Regional comparison
	MOV	transmit
	CML	Reverse transfer
	BMOV	Along with the transmission
	FMOV	multicast
	XCH	exchange
	BCD	BCD change
	B IN	BIN change
Four logical operations	ADD	BIN addition
	SUB	BIN subtraction
	MUL	BIN multiplication
	DIV	BIN division
	I NC	The BIN plus 1
	DEC	BIN minus 1
	WAND	Logic word and
	WPR	Logic word or
	WXOR	Logic word different or
	NEG	To complement the code
circular shift	ROR	Cycle to the right
	ROL	ring shift left
	RCR	dextroposition
	RCL	shift left
	SFTL	Left shift
	S FTR	The right move


Y classif	Directive mychronics	function
	Z RST	Batch reset
	MEAN	average value
	F LT	BIN integer 2 decimal floating point number conversion
	G RY	BIN integer Gray code conversion
	GBIN	The Gray code is a BIN integer
	DHSCS	High-speed comparison for placement
	DHSCR	High-speed comparison is reset
	S PD	Pulse density, also measuring pulse width (pulse interval)
	P LSY	pulse output
	P LSV	Band-directional control pulse output
	PWM	Pulse width modulation, 0 – 32767us
	P LSR	Pulse output with acceleration and deceleration
	DRVA	Absolute position control
	D RVI	Relative position control
	ZRN	Origin regression, only 16-bit instruction
	DSZR	The origin regression with the DOG search
	D VIT	Disruption of positioning
	ABSD	Cam control (absolute mode)

	RS	serial data transfer
	ASCI	The HEX-ASCII conversion
	HEX	The ASCII-HEX conversion
	CCD	check code
	P ID	PID operation
	SEGD	BCD to 7 section code digital tube
	ECMP	2. Comparison of the decimal floating points
	E ZCP	2 Comparison of decimal floating point intervals
	E BIN	10 the decimal floating point number-2, the decimal floating point number conversion
	EADD	2 decimal floating point number addition
	ESUB	2 The decimal floating point number subtraction
	EMUL	2 Pad floating point number multiplication
	EDIV	2 decimal floating point number division
	INT	2 binary floating point number-BIN integer conversion
	S IN	Floating-point number SIN operation
	TAN	Floating-point number of TAN operation
	COS	Floating-point number COS operation
	A SIN	Floating-point number of SIN-1 operation
	ATAN	Floating-point number of TAN-1 operation
	ACOS	Floating-point number COS-1 operation
	EXP	2 decimal floating point number index operation
	LOGE	2 binary floating point number natural log operation
	LOGE 10	2 The decimal floating point number is commonly used in the log operation
	SWAP	The upper and lower bytes transform

	S ER	Data search
	A LT	Alternatively output
	RAMP	ramp signal
	BON	ON bit determination
	SUM	ON digit capacity
	ANS	Alarm placement
	ANR	Alarm reset
	HOUR	calculagraph
	TCMP	Clock data comparison
	TRD	Clock data readout
	TWR	Clock data writes
	LD=	(S 1=(S 2)
	LD>	(S 1)>(S 2)
	LD<	(S 1)<(S 2)
	LD $\diamond$	(S 1) $\neq$ (S 2)
	LD $\leq$	(S 1) $\leq$ (S 2)
	LD $\geq$	(S 1) $\geq$ (S 2)
	AND=	(S 1=(S 2)
	AND>	(S 1)>(S 2)
	AND<	(S 1)<(S 2)
	AND $\diamond$	(S 1) $\neq$ (S 2)
	AND $\leq$	(S 1) $\leq$ (S 2)
	AND $\geq$	(S 1) $\geq$ (S 2)
	OR=	(S 1=(S 2)
	OR>	(S 1)>(S 2)
	OR<	(S 1)<(S 2)
	OR $\diamond$	(S 1) $\neq$ (S 2)
	OR $\leq$	(S 1) $\leq$ (S 2)
	OR $\geq$	(S 1) $\geq$ (S 2)

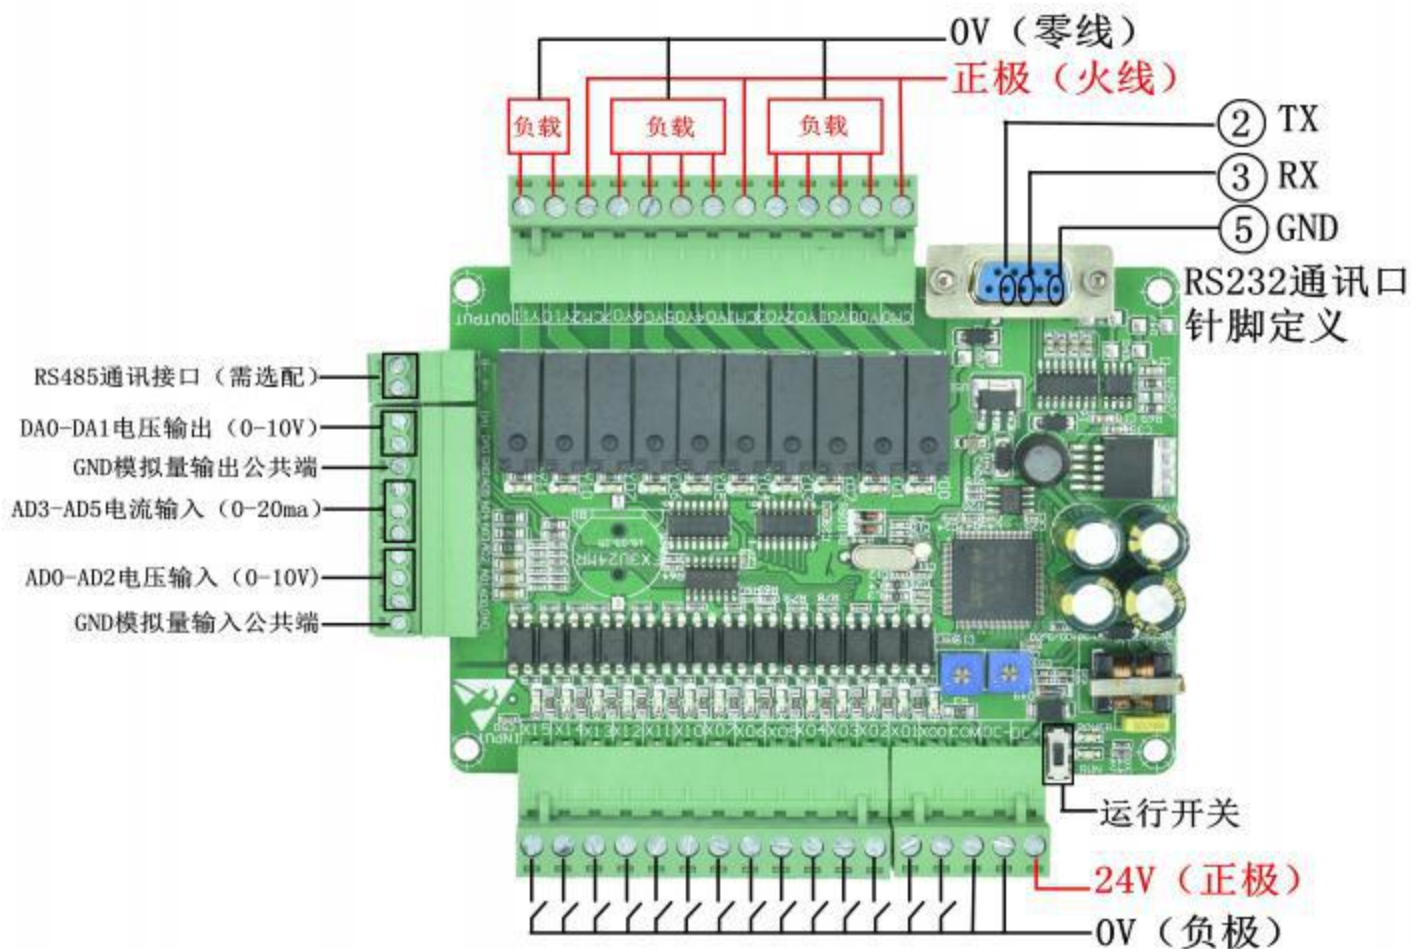

备注：X点输入为负极。低电平NPN

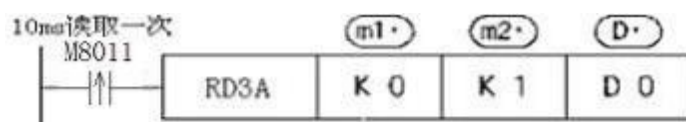


● 模拟量模块的模拟量输入值的读取指令。

(m1) : 模块号, 主机设为K0

(m2) : 模拟量输入通道号
K0-K5(对应AI1-6)

(D) : 读取数据瞬时值保存到D0
保存读取自模拟量模块的数值。

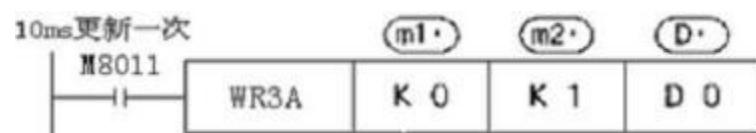


● 用于向模拟量模块写入数字值的指令

(m1) : 模块号, 主机设为0

(m2) : 模拟量输出通道号
K0-K1

(D) : 写入数据
指定写入模拟量模块的值(0-4095)

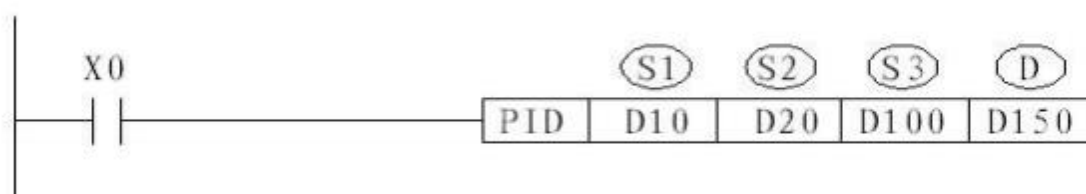

8. Automatic communication between CAN hosts: (optional function, mainly online)

D 3580-D 3595
D 3596-D 3611

,li'

--



D 8120 The corresponding communication parameters are as follows:


item	name	content	
		0 (bit OFF)	1 (bit ON)
B 0	Data long	Seven	Eight
B 1 B 2	parity bit	b 2 b1 (0,0): No check (0,1): Odd number of ODD (1,1): Dual check EVEN	
B 3	stop bit	One	Two
B 4 B 5 B 6 B 7	transfer rate b ps	b 7 b6 b5 b4 b7 b6 b5 b4 {0 , 0 , 1 , 1} : {0 , 1 , 1 , 1} : 4800 300 {0 , 1 , 0 , 0} {1 , 0 , 0 , 0} : 9600 : 600 {0 , 1 , 0 {1 , 0 , 0 , 1} : 19200 , 1} : 1200 {0 , 1 {1 , 0 , 1 , 0} : 38400 , 1 , 0} : 2400	
B 8	start symbol	not have	Yes, (D 8124)
B 9	terminator	not have	Yes, (D 8125)
B 10 B 11	null		
B 12 B 13 B 14 B 15	communicatin g protocol	B 15 b14 b13 b12 {0,0,0,0}: Mitsubishi FX 2 N protocol (slave) {0,1,0,0}: MODBUS RTU (slave) {1,0,0,0}: MODBUS RTU (host, IVRD, IVWR instruction) {1,1,0,0}: Free communication (RS instruction, check with CCD)	

When the M 8120 is reset, when performing the RS, the given parameters are specific for the RS485 port, when M8120 When placement, when RS is performed, the given parameters are for the RS232 port.



- 数据的传送格式可以通过后面所述的特殊数据寄存器D8120设定。
RS指令驱动时即使改变D8120的设置，实际上也不接受。
- 在不进行发送的系统中，请将数据发送点数设定为“K0”。
或在不进行接受的系统中，接收点数设定为“K0”。

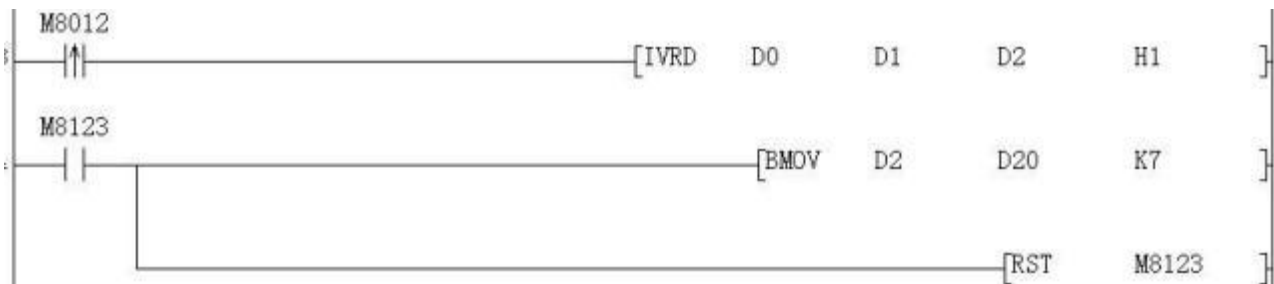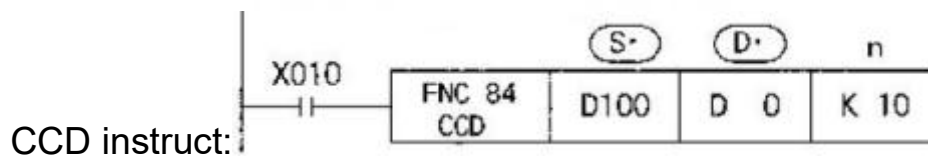



--	--

创建新工程

PLC系列: 确定 取消

PLC类型: 确定 取消

程序类型:

- ☒ 梯形图
- ☐ SFC
- ☐ ST

标签设定:

- ☒ 不使用标签
- ☐ 使用标签
(使用宏程序、FB、结构体时选择)

☐ 生成和程序名同名的软件内存数据

工程名设定:

☐ 设置工程名

驱动器/路径:

工程名: 浏览...

索引:

FX参数设置

内存容量设置 | **软元件** | PLC名 | I/O分配 | PLC系统(1) | PLC系统(2) | 定位设置

内存容量:

注释容量: 块 (0块 -- 15块) 点

文件寄存器容量: 块 (0块 -- 14块) 点

程序容量: 步

其他特殊设定容量:

- ☐ 0 块
- ☐ 特殊模块的初始值设定 (8块)
- ☐ 定位设置 (16块)
- ☐ 内置CC-Link/LI的设定 (1块) (FX3UC-32MT-LT-2专用)

特殊模块的初始值设定在I/O分配设定中，定位设定请在定位设定中进行详细设置。

默认值 检查 结束设置 取消

传输设置

PC I/F

串行 ☒ NET/G, 10 (H) 板 ☐ NET (II) 板 ☐ CC-Link 板 ☐ 以太网 板

COM COM1 传递速度 38.4Kbps

PLC I/F

CPU 模块 ☒ NET/G, 10 (H) 模块 ☐ MNET (II) 模块 ☐ CC-Link 模块 ☐ 以太网 模块

