

# SEL-3560

## Real-Time Automation Controller (RTAC)

### Instruction Manual



20241218

© 2018–2024 Schweitzer Engineering Laboratories, Inc. All rights reserved.

Content subject to change without notice. Unless otherwise agreed in writing, all SEL product sales are subject to SEL's terms and conditions located here: <https://selinc.com/termsandconditions/>.

# Table of Contents

## Preface

|                          |    |
|--------------------------|----|
| Safety Information.....  | 9  |
| General Information..... | 11 |
| Technical Support.....   | 12 |

## Section 1: Introduction and Specifications

|                                       |    |
|---------------------------------------|----|
| Overview.....                         | 13 |
| Features.....                         | 14 |
| Models, Options, and Accessories..... | 17 |
| Applications.....                     | 18 |
| Specifications.....                   | 26 |

## Section 2: Installation

|                       |    |
|-----------------------|----|
| Overview.....         | 37 |
| Device Placement..... | 37 |
| Front Panel.....      | 40 |
| Rear Panel.....       | 42 |
| Initial Startup.....  | 48 |

## Section 3: Hardware Setup and Serviceability

|                               |    |
|-------------------------------|----|
| Overview.....                 | 49 |
| Main Board.....               | 49 |
| PCI Expansion Slots.....      | 53 |
| SATA Drives.....              | 54 |
| Removal and Installation..... | 55 |
| Requirements.....             | 55 |

## Section 4: BIOS Setup

|                                |    |
|--------------------------------|----|
| Overview.....                  | 57 |
| Main Menu.....                 | 58 |
| System Configuration Menu..... | 59 |
| Features Menu.....             | 61 |
| Security Menu.....             | 61 |
| Boot Menu.....                 | 62 |
| Save & Exit Menu.....          | 62 |
| Event Logs Menu.....           | 62 |
| BIOS Updates.....              | 63 |
| Recovery Mode.....             | 63 |

## Section 5: Intel Active Management Technology (AMT)

|                   |    |
|-------------------|----|
| Overview.....     | 65 |
| AMT Features..... | 65 |
| Enabling AMT..... | 66 |

## Section 6: Factory Reset

|                                |    |
|--------------------------------|----|
| Override Login.....            | 69 |
| Reset to Factory Settings..... | 69 |

## Appendix A: Firmware and Manual Versions

|                         |    |
|-------------------------|----|
| Firmware.....           | 71 |
| Instruction Manual..... | 71 |

**This page intentionally left blank**

# List of Figures

|   |    |
|---|----|
| Figure 1.1 Engineering Communications Through a Serial Access Point.....  | 19 |
| Figure 1.2 Engineering Communications Through a Network Access Point..... | 20 |
| Figure 1.3 Protocol Conversion.....                                       | 21 |
| Figure 1.4 Distribute Time With Serial Communications Cables.....         | 22 |
| Figure 1.5 System Control and Synchrophasor Data Concentration.....       | 23 |
| Figure 1.6 SCADA Communication Through a Single Access Point.....         | 24 |
| Figure 1.7 Security Through a Single Access Point.....                    | 25 |
| Figure 1.8 Automate and Integrate With Communication and Logic.....       | 26 |
| Figure 2.1 Installation.....  | 37 |
| Figure 2.2 SEL-3560S Dimensions Diagram.....                              | 39 |
| Figure 2.3 SEL-3560E Dimensions Diagram.....                              | 40 |
| Figure 2.4 Front-Panel Diagram.....                                       | 41 |
| Figure 2.5 Rear-Panel Diagram.....  | 43 |
| Figure 2.6 EIA-485 Typical Two-Wire Connection.....                       | 47 |
| Figure 2.7 EIA-485 Typical Four-Wire Connection.....                      | 47 |
| Figure 3.1 Main Board Diagram.....  | 50 |
| Figure 3.2 Panel Removal.....   | 50 |
| Figure 3.3 Serial Port Enumeration With SEL-3390S8 Card.....              | 53 |
| Figure 3.4 Ethernet Port Enumeration With SEL-3390E4 Card.....            | 53 |
| Figure 3.5 Ethernet Port Enumeration With SEL-3390T Card.....             | 54 |
| Figure 3.6 SATA Drive Bay.....  | 54 |
| Figure 4.1 BIOS Setup Main Screen.....                                    | 58 |
| Figure 5.1 Intel AMT Web Interface.....                                   | 66 |
| Figure 5.2 Intel AMT Main Menu.....                                       | 67 |
| Figure 6.1 Factory Reset Via Web Interface.....                           | 70 |

**This page intentionally left blank**

# List of Tables

|   |    |
|---|----|
| Table 1.1 HMI Browser Requirements.....                           | 15 |
| Table 1.2 SEL Accessories List.....                               | 18 |
| Table 1.3 System Power Consumption (at 12 Vdc Input Voltage)..... | 35 |
| Table 1.4 Peripheral Connection Rated Current Output.....         | 35 |
| Table 2.1 Keyboard and Mouse Shortcuts.....                       | 44 |
| Table 2.2 EIA-232 Serial Port Connector Pin Definition.....       | 46 |
| Table 2.3 SEL-3390S8 RJ45 Port Pin Definition.....                | 46 |
| Table 2.4 Recommended Cables.....                                 | 46 |
| Table 3.1 System Jumper Descriptions.....                         | 51 |
| Table 3.2 Expansion Card Functionality (SEL-3560E Only).....      | 53 |
| Table A.1 Instruction Manual Revision History.....                | 71 |

**This page intentionally left blank**

# Preface

## Safety Information

---

### CAUTION

To ensure proper safety and operation, the equipment ratings, installation instructions, and operating instructions must be checked before commissioning or maintenance of the equipment. The integrity of any protective conductor connection must be checked before carrying out any other actions. It is the responsibility of the user to ensure that the equipment is installed, operated, and used for its intended function in the manner specified in this manual. If misused, any safety protection provided by the equipment may be impaired.

## Dangers, Warnings, and Cautions

This manual uses three kinds of hazard statements, defined as follows:

### DANGER

Indicates a potentially hazardous situation that, if not avoided, **will** result in death or serious injury.

### WARNING


Indicates a potentially hazardous situation that, if not avoided, **could** result in death or serious injury.

### CAUTION

Indicates a potentially hazardous situation that, if not avoided, **may** result in minor or moderate injury or equipment damage.

## Safety Symbols

The following symbols are often marked on SEL products.
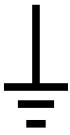
|  |  CAUTION<br>Refer to accompanying documents. |  ATTENTION<br>Se reporter à la documentation. |
|---|---|--|
|  | Earth (ground)  | Terre  |
|  | Protective earth (ground)   | Terre de protection  |
|  | Direct current  | Courant continu  |
|  | Alternating current   | Courant alternatif   |

|  |                                     |                               |
|--|-------------------------------------|-------------------------------|
|  | Both direct and alternating current | Courant continu et alternatif |
|  | Instruction manual                  | Manuel d'instructions         |

## Safety Marks

The following statements apply to this device.

|   |   |
|---|---|
| <b>DANGER</b><br>Disconnect or de-energize all external connections before opening this device. Contact with hazardous voltages and currents inside this device can cause electrical shock resulting in injury or death.  | <b>DANGER</b><br>Débrancher tous les raccordements externes avant d'ouvrir cet appareil. Tout contact avec des tensions ou courants internes à l'appareil peut causer un choc électrique pouvant entraîner des blessures ou la mort.  |
| <b>DANGER</b><br>Contact with instrument terminals can cause electrical shock that can result in injury or death.   | <b>DANGER</b><br>Tout contact avec les bornes de l'appareil peut causer un choc électrique pouvant entraîner des blessures ou la mort.  |
| <b>WARNING</b><br>Have only qualified personnel service this equipment. If you are not qualified to service this equipment, you can injure yourself or others, or cause equipment damage.   | <b>AVERTISSEMENT</b><br>Seules des personnes qualifiées peuvent travailler sur cet appareil. Si vous n'êtes pas qualifiés pour ce travail, vous pourriez vous blesser avec d'autres personnes ou endommager l'équipement.   |
| <b>WARNING</b><br>Never use standard null-modem cables with the SEL-3560. Using any non-SEL cable can cause severe power and ground problems involving Pins 1, 4, and 6 on the SEL-3560 communications ports.   | <b>AVERTISSEMENT</b><br>Ne jamais utiliser de câbles standards à inversion de signaux ("nullmodem") avec le SEL-3560. L'utilisation d'un câble d'une autre provenance que SEL peut causer de sérieux problèmes de neutre et d'alimentation impliquant les fiches 1, 4 et 6 sur les ports de communication du SEL-3560.  |
| <b>WARNING</b><br>Do not operate device unless properly grounded.   | <b>AVERTISSEMENT</b><br>Ne pas mettre en marche l'appareil sauf s'il est bien mis à la terre.   |
| <b>WARNING</b><br>Use of this equipment in a manner other than specified in this manual can impair operator safety safeguards provided by this equipment.   | <b>AVERTISSEMENT</b><br>L'utilisation de cet appareil suivant des procédures différentes de celles indiquées dans ce manuel peut désarmer les dispositifs de protection d'opérateur normalement actifs sur cet équipement.  |
| <b>CAUTION</b><br>Equipment components are sensitive to electrostatic discharge (ESD). Undetectable permanent damage can result if you do not use proper ESD procedures. Ground yourself, your work surface, and this equipment before removing any cover from this equipment. If your facility is not equipped to work with these components, contact SEL about returning this device and related SEL equipment for service. | <b>ATTENTION</b><br>Les composants de cet équipement sont sensibles aux décharges électrostatiques (DES). Des dommages permanents non-détectables peuvent résulter de l'absence de précautions contre les DES. Raccordez-vous correctement à la terre, ainsi que la surface de travail et l'appareil avant d'en retirer un panneau. Si vous n'êtes pas équipés pour travailler avec ce type de composants, contacter SEL afin de retourner l'appareil pour un service en usine. |

**⚠ CAUTION**

Looking into optical connections, fiber ends, or bulkhead connections can result in hazardous radiation exposure.

**⚠ ATTENTION**

Regarder vers les connecteurs optiques, les extrémités des fibres ou les connecteurs de cloison peut entraîner une exposition à des rayonnements dangereux.

**⚠ CAUTION**

There is danger of explosion if the battery is incorrectly replaced. Replace only with Panasonic BR2330A or equivalent recommended by manufacturer. See Owner's Manual for safety instructions. The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not recharge, disassemble, heat above 100°C, or incinerate. Dispose of used batteries according to the manufacturer's instructions. Keep battery out of reach of children.

**⚠ ATTENTION**

Une pile remplacée incorrectement pose des risques d'explosion. Remplacez seulement avec un Panasonic BR2330A ou un produit équivalent recommandé par le fabricant. Voir le guide d'utilisateur pour les instructions de sécurité. La pile utilisée dans cet appareil peut présenter un risque d'incendie ou de brûlure chimique si vous en faites mauvais usage. Ne pas recharger, démonter, chauffer à plus de 100°C ou incinérer. Éliminez les vieilles piles suivant les instructions du fabricant. Gardez la pile hors de la portée des enfants.

## General Information

### Instructions for Cleaning and Decontamination

Use care when cleaning the RTAC. Use a mild soap or detergent solution and a damp cloth to clean the chassis. Do not use abrasive materials, polishing compounds, or harsh chemical solvents (such as xylene or acetone) on any surface.

## Copyrighted Software

The software included in this product may contain copyrighted software licensed under terms that give you the opportunity to receive source code. You may obtain the applicable source code from SEL by sending a request to:

Legal Department  
GPL Compliance  
Schweitzer Engineering Laboratories, Inc.  
One Schweitzer Drive  
Pullman, WA 99163-5603 U.S.A.

Please include your return address, product number, and firmware revision.

## Trademarks

All brand or product names appearing in this document are the trademark or registered trademark of their respective holders. No SEL trademarks may be used without written permission.

SEL trademarks appearing in this manual are shown in the following table.

---

ACSELERATOR QuickSet® SEL-5030 Software

---

ACSELERATOR RTAC® SEL-5033 Software

---

ACSELERATOR Diagram Builder™ SEL-5035 Software

---

Compass®

---

exe-GUARD®

---

---

MIRRORED BITS® communications

---

SEL-2240 Axion®

---

EtherCAT is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

## Technical Support

---

We appreciate your interest in SEL products and services. If you have questions or comments, please contact us at:


Schweitzer Engineering Laboratories, Inc.  
2350 NE Hopkins Court  
Pullman, WA 99163-5603 U.S.A.  
Tel: +1.509.338.3838  
Fax: +1.509.332.7990  
Internet: [selinc.com/support](http://selinc.com/support)  
Email: [info@selinc.com](mailto:info@selinc.com)

## S E C T I O N   1

# Introduction and Specifications

## Overview

Built on a powerful x86-64 architecture, the SEL-3560 Real-Time Automation Controller (RTAC) is an extreme performance member of the RTAC family that comes standard with all basic RTAC capabilities. The automation platform combines the best features of the embedded microcomputer form factor, embedded real-time operating system, and secure communication with flexible, feature-rich IEC 61131 compliant programmability. The RTAC can provide any degree of functionality from that of a simple intelligent port switch to the sophisticated communication and data handling required for advanced integration projects. The RTAC features secure communication, advanced data concentration, high-speed logic processing, flexible engineering access, and protocol conversion capabilities between multiple built-in client/server protocols. The RTAC gives the integrator the necessary tools to easily integrate and concentrate information from the wide variety of microprocessor-based devices found in today's substations. The RTAC is also bundled with intuitive software to quickly configure large automated systems.

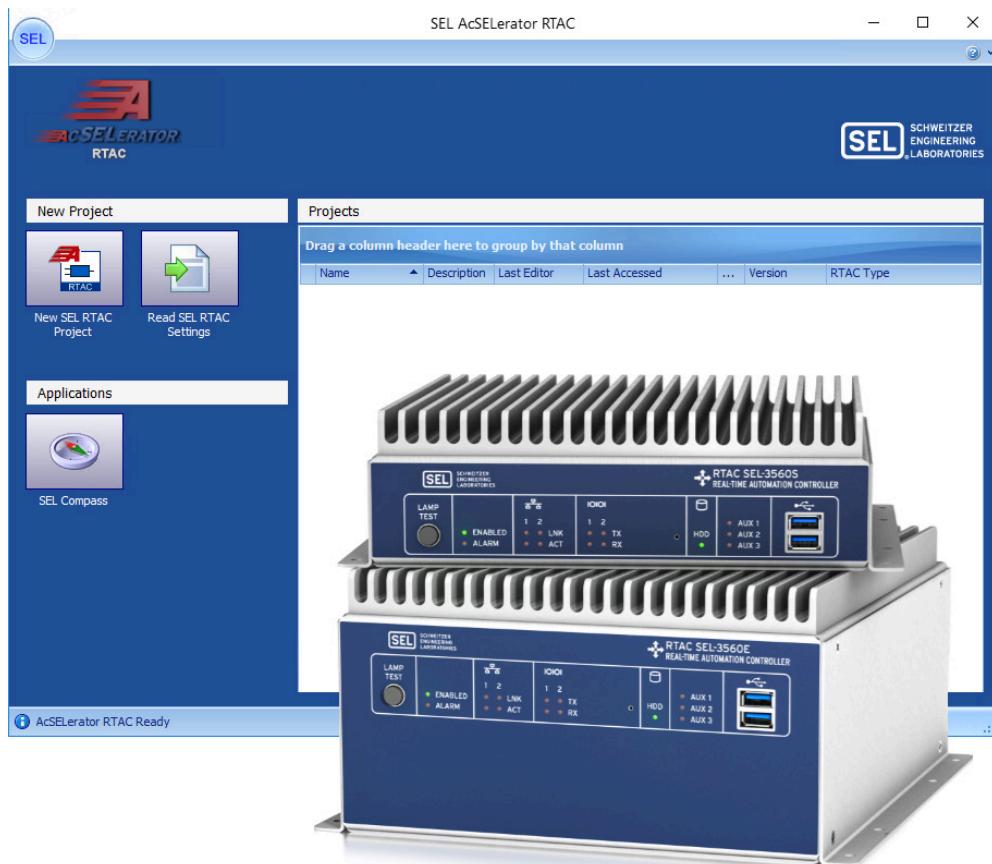

# Features

---

## Physical

### CAUTION

Changing SFP ports while online can cause momentary communication interruptions. In the case of EtherCAT, this can cause the EtherCAT network to disable.

- **Processor**
  - Intel Xeon quad-core processor
- **Ethernet**
  - Two 10/100/1000 Mbps Ethernet rear-panel ports (RJ45)
  - Optional PCI expansion boards add as many as four additional copper or small form-factor pluggable (SFP) fiber ports (SEL-3560E only)
- **Device USB:** Two front, four rear-panel for keyboard and mouse
- **EIA-232**
  - Two standard rear-panel (DB-9), six additional on included PCI expansion card
  - Optional PCI expansion boards add as many as six additional rear panel (RJ45) ports
- **PCI Expansion:** Two PCI Express slots for serial and Ethernet expansion (SEL-3560E only)
- **Display Interface:** Two DVI and one DisplayPort rear-panel connectors
- **Mass Storage:** One 2.5-inch SATA solid-state drive, accessible from the right-side panel
- **Digital Outputs:** One electromechanical alarm output
- **Power Supply:** The SEL-3560S can be powered from any 12 Vdc source, such as the robust, reliable SEL-9331 Power Supply module. The SEL-3560E has an internal power supply that can be powered from low- and high-voltage ac and dc power sources.

## Processing System

- **Embedded Real-Time Operating System:** The embedded SEL Linux operating system provides exceptional speed, flexibility, and functionality along with increased security.
- **Watchdog Timer:** A separate watchdog microcontroller system provides an extra level of system reliability. The microcontroller will activate an alarm and halt all input/output activity if there is a problem with the IEC 61131 logic engine.
- **Diagnostics and Logging:** Manage users, view logs, and check report diagnostics via the built-in web server. Access the historical database for diagnostics and logging. Use open database connectivity (ODBC) to view security and diagnostics logs in off-the-shelf ODBC compliant programs.

## Human-Machine Interface (HMI)

Use ACCELERATOR Diagram Builder SEL-5035 Software to build HMI pages and load the pages into the RTAC for the optional web-based HMI. Use the HMI pages for annunciation, one-line diagrams, trending, and controls. Because the HMI is web-based, no other software is needed other than a web browser. View the HMI locally on a monitor directly connected to one of the integrated video ports on the RTAC or through a web browser on a remote computer.

The RTAC will detect which web browser is used for viewing the HMI and render the images by using either HTML5 or Microsoft Silverlight technology, which is a browser plug-in used for graphical web content display. See *Table 1.1* for further requirements for viewing the HMI on a remote PC.

**Table 1.1 HMI Browser Requirements**

| Requirement      | HTML5                                    | Silverlight   |
|------------------|--|---|
| Operating System | Windows 7 SP1<br>Ubuntu 14.04+           | Windows 7 SP1   |
| Processor        | Intel Core Duo 2 GHz or higher processor | Intel Core Duo 2 GHz or higher processor  |
| RAM              | 2 GB or greater                          | 2 GB or greater   |
| Web Browser      | Google Chrome 40+<br>Opera 27+           | Internet Explorer 8<br>Internet Explorer 9<br>Internet Explorer 11 <sup>a</sup><br>Google Chrome 34+<br>Mozilla Firefox 35+ |

<sup>a</sup> Requires Silverlight plug-in version is 5.1.30514.0.

## Security

### Malware Protection

exe-GUARD anti-malware technology protects the RTAC in two ways:

- Only authorized tasks are allowed to run on the system.
- Mandatory Access Control restricts privileges of programs and services to the absolute minimum required to function on the system.

There is no need for virus definition files because only whitelisted or preapproved tasks are allowed to run on the RTAC. SEL Whitelist operates at the core of the RTAC operating system, where it intercepts every program before it is executed. Using advanced cryptographic algorithms, Whitelist inspects a program's binary image before it is allowed to execute, verifying its legitimacy and integrity against a known digital signature. As defined by user configuration, unauthorized changes to the system result in either an alarm indication or device reset to factory defaults. Similarly, any modification or replacement of an existing firmware binary is also revealed by the digital signature verification process and results in the same denial of execution and security response.

Mandatory Access Control fine-tunes the system security policy so that programs and services are constrained to the absolute minimum access privileges required to function. Defining this minimal privilege set at design time ensures firmware processes can be locked to their minimal scope of influence in the system.

## User Authentication

The RTAC authenticates user role-based local accounts through Active Directory using Lightweight Directory Access Protocol (LDAP).

## Automation and Control Industry Standard (IEC 61131) Logic Processing

### NOTE

To ensure proper operation for type test conditions, only apply EtherCAT connections on the SEL-3560 to fiber-optic Ethernet ports.

The RTAC includes the IEC 61131 programming environment with standard, custom, and Ethernet libraries for logic processing and scaling of collected data. Two configurable processing cycles give flexibility to run high-speed automation tasks at speeds as fast as one millisecond while SCADA and other lower speed tasks can run at a slower rate.

## System Configuration and Maintenance

Configure the RTAC network interface, user account, and security settings over the network via the web interface. Next, configure protocol communications, program IEC 61131 logic, and send project settings with ACCELERATOR RTAC SEL-5033 Software. After sending project settings, view and force data values to test user logic and datamapping schemes.

## Time Synchronization Connected Devices

With the SEL-3390S8 Serial Adapter Card, the SEL-3560E can accept and generate a demodulated IRIG-B output signal to time-synchronize connected intelligent electronic devices (IEDs) via expansion EIA-232/EIA-422/EIA-485 ports. Connect the SEL-C972 BNC-to-RJ45 adapter cable to the first port on the first serial expansion card, then connect the coaxial IRIG-B cable to the BNC connector. The SEL-3390S8 Serial Adapter Card has a jumper that determines if IRIG-B is an input or output for Port 1. The card that ships with the SEL-3560 has a jumper that is placed by default to accept IRIG-B as an input. Alternatively, an IRIG-B input is also available on the DB-9 COM1 port, but it is restricted to an accuracy of 500 ms and will not support a time resolution sufficient for synchrophasors. On the SEL-3560S, the DB-9 COM1 IRIG-B input will always be available and processed by the RTAC. On the SEL-3560E, the DB-9 COM1 IRIG-B input will only be processed if no SEL-3390S8 Cards are present. By default, all SEL-3560E RTACs come with an SEL-3390S8. With the SEL-3390T Time and Ethernet Adapter Card, the SEL-3560 RTAC can accept demodulated IRIG-B004 and IRIG-B002 with either EVEN or ODD parity. The IRIG-B input is a BNC connector and the source can be a GPS clock or other accurate time source. The IRIG-B output can provide IRIG-B004 with EVEN parity. The SEL-3390T can provide IRIG-B004 with EVEN parity via the BNC connection.

## IRIG-B Generation

In the absence of an external IRIG-B signal, the SEL-3560 uses an internal system clock to generate a demodulated IRIG-B signal from its system time as an output to serial ports of the SEL-3390S8 Cards and as an output to the BNC OUT of the SEL-3390T Time and Ethernet Card. If desired, you can synchronize the RTAC system clock with a network time server (via SNTP, NTP, or PTP) and output SNTP or NTP from the RTAC to other devices on the network.

# Models, Options, and Accessories

---

## Models

This manual does not provide complete ordering information. For complete information, see the latest SEL-3560 model options at [selinc.com](http://selinc.com).

## Options

- **RAM:** 8–16 GB DDR4 ECC PC4-17000 (2133 MHz)
- **SATA Drive:** 2.5-inch industrial grade 30, 60, or 250 GB SATA SSD
- **PCI Expansion Cards (SEL-3560E only)**
  - ⚠ **CAUTION**  
Changing SFP ports while online can cause momentary communication interruptions.
  - Two expansion slots: one PCIe x4 and one PCIe x1
  - One SEL-3390E4 quad-gigabit network interface OR SEL-3390T dual-gigabit network interface and IRIG-B IN/OUT card
  - As many as two SEL-3390S8 six-port serial expansion cards
- **Mounting**
  - Standard (SEL-3560S) or Expanded (SEL-3560E) chassis
  - Standard or conduction-cooled heatsink
- **Power Supplies**
  - Internal SEL-9331 Power Supply (SEL-3560E only)
  - External SEL-9331 Power Supply (SEL-3560S only)
  - 48 Vdc, 125/250 Vdc, or 120/220/240 Vac input voltages
- **Environment:** Conformal coating for chemically harsh and high-moisture environments

## Accessories

To view all RTAC accessories, visit [selinc.com/products/accessories](http://selinc.com/products/accessories). Contact your Technical Service Center or the SEL factory for additional details and ordering information for all other accessories.

**Table 1.2 SEL Accessories List**

| Product    | Description   |
|------------|---|
| SEL-3390S8 | PCI Expansion Serial Adapter Card (6 port)                  |
| SEL-3390E4 | PCI Expansion Network Adapter Card (4 port)                 |
| SEL-3390T  | Time and Ethernet Adapter Card (2 port)                     |
| SEL-2401   | Precise Timing Source—Satellite-Synchronized Clock          |
| SEL-3025   | Secure Communications—Serial Shield                         |
| SEL-2925   | Secure Communications—Wireless Encrypting Transceiver       |
| SEL-2810   | 200 µm Fiber-Optic Transceiver With IRIG-B                  |
| SEL-2812   | Multimode Fiber-Optic Transceiver With IRIG-B               |
| SEL-2814   | Multimode Fiber-Optic Transceiver With Hardware Handshaking |
| SEL-2815   | Multimode Fiber-Optic Transceiver—15 km                     |
| SEL-2829   | Single-Mode Fiber-Optic Transceiver—23 km                   |
| SEL-2830   | Single-Mode Fiber-Optic Transceiver—80 km                   |
| SEL-2831   | Single-Mode Fiber-Optic Transceiver—110 km                  |
| SEL-C972   | RJ45-to-BNC Cable   |

## Applications


---

The functions of the RTAC make it extremely versatile and powerful. You can combine basic functions of the RTAC to meet the requirements of your application. Several of the most popular applications are listed below and shown later in this section.

- **Port Switch:** Connects a single serial port to multiple serial ports.
- **Device Server, Port Server, and Network Gateway:** Connects a single network port to multiple serial ports.
- **Local or Remote HMI:** Provides visualization and control via on-board video output ports and through remote web browser access.
- **Protocol Translator and Protocol Gateway:** Connects multiple systems that use different protocols.
- **PAC, PLC, and Logic Processor:** Monitors digital and analog inputs to transmit to a central location; performs IEC 61131-3 logic.
- **RTU and SCADA Data Concentrator:** Monitors digital and analog inputs to transmit to a central location with standard SCADA protocols.
- **Time Synchronization:** Selects the best time from different sources and provides IRIG-B and/or NTP output to connected devices.
- **Security Gateway:** Provides firewall protection to incoming Ethernet communication as well as encryption for individual Ethernet sessions.
- **Synchrophasor Processor:** Connects phasor measurement unit (PMU) data to devices and processes through protocol conversion.

## Intelligent Port Switch

Flexible communications parameters make the RTAC a great choice for almost any port switching application. Although RTAC multitasking/multiuser and data handling capabilities make it a very powerful remote automation platform it is still an economical choice for port switching applications. The time-synchronization capabilities of the RTAC add to its value in this application. An example of this application is shown in *Figure 1.1*.

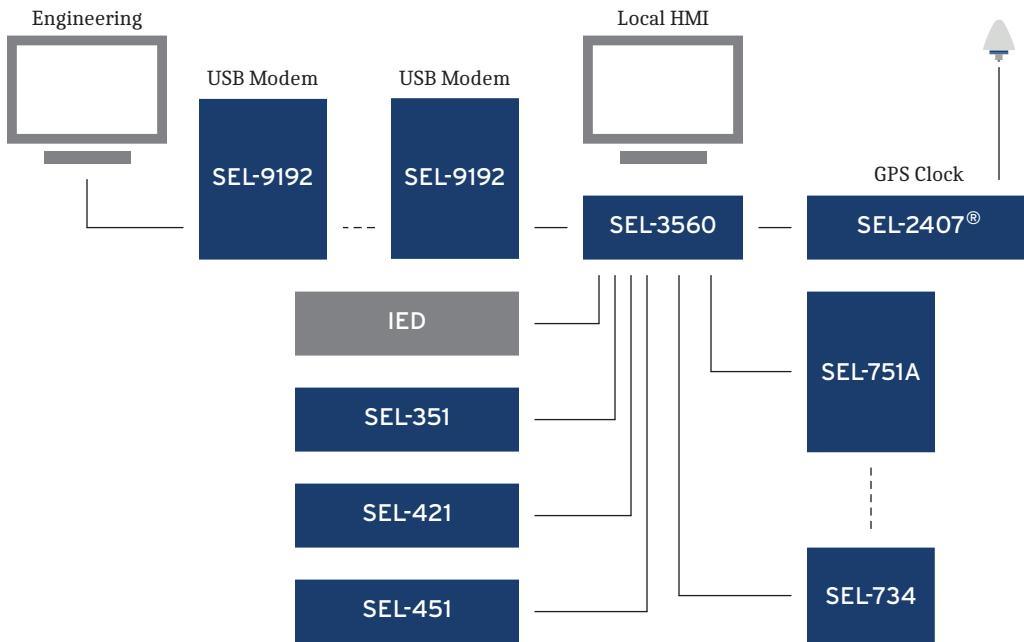

**Figure 1.1** Engineering Communications Through a Serial Access Point

## Network Gateway

The RTAC comes standard with two rear Ethernet ports that you can configure to make serially connected devices available to high-speed networks. The RTAC supports virtual terminal connections through the Ethernet ports. For example, Ethernet users can establish secure Telnet sessions and communicate with an intelligent electronic device (IED) connected to the RTAC. An example of this application is shown in *Figure 1.2*.

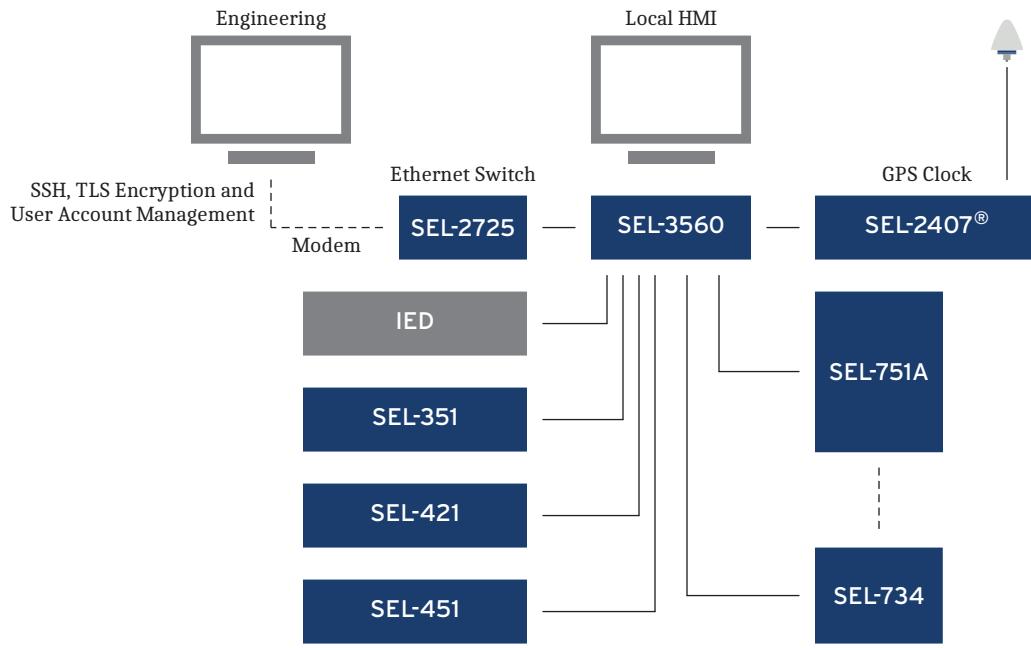
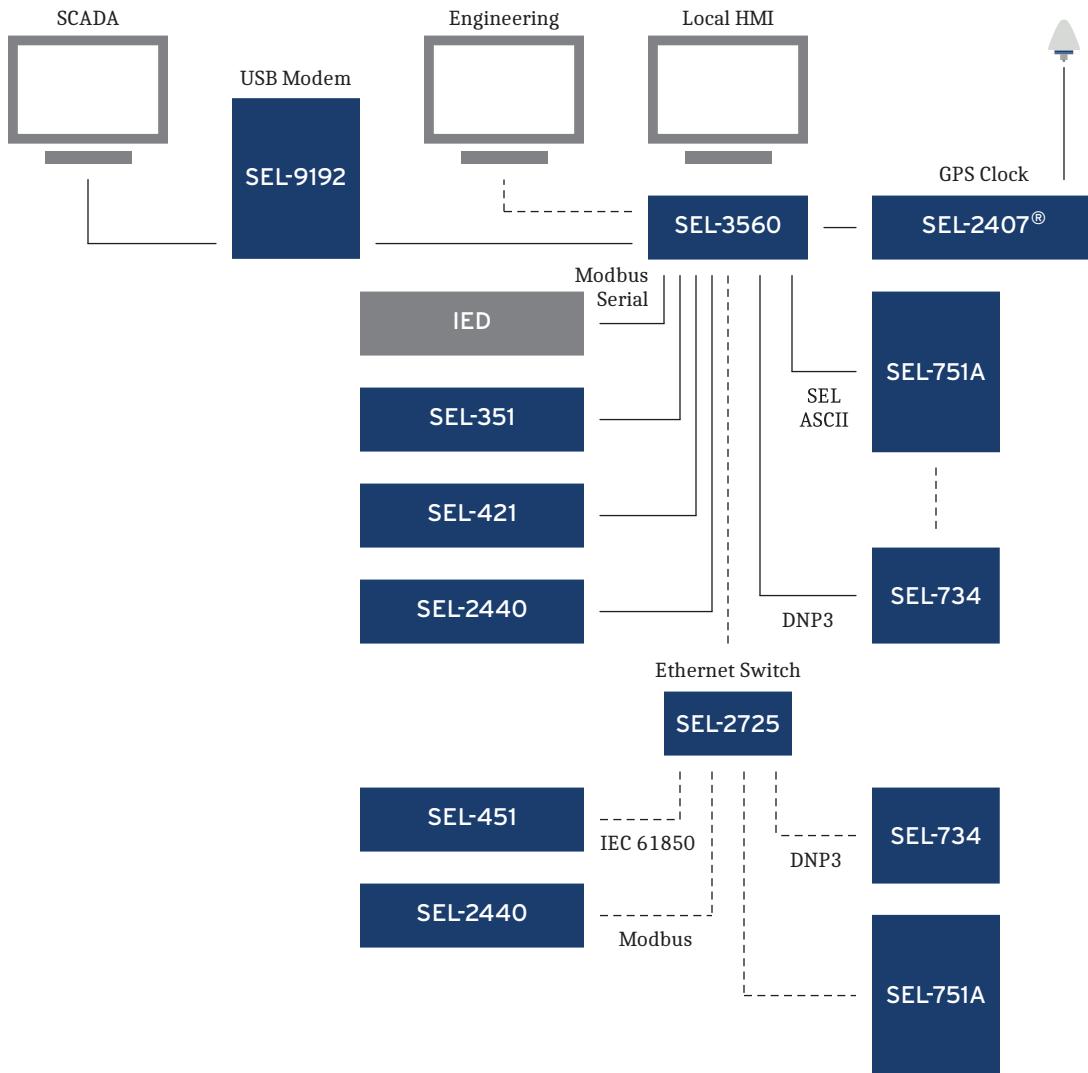


Figure 1.2 Engineering Communications Through a Network Access Point


## Protocol Gateway

Collect downstream data with client protocols and send these data to your upstream HMI, RTU, or SCADA master with server protocols, converting the data from one protocol to another in the process. RTAC multitasking/multiuser and data handling capabilities make it a great choice for data concentration. An example of this application is shown in *Figure 1.3*.

**Figure 1.3 Protocol Conversion**

## Time-Synchronization Source

Synchronize the time clocks in attached devices that accept a demodulated IRIG-B time signal through serial connections. The demodulated IRIG-B signal is regenerated in the RTAC from an external demodulated source, such as a GPS satellite clock receiver. The RTAC can also be time-synchronized through an SNTP/NTP/PTP source, or serial or Ethernet protocol such as DNP3. If an external clock source is not available, the RTAC generates an IRIG-B signal from its internal clock, allowing device synchronization to a common clock for improved sequence-of-events analysis. An example of this application is shown in *Figure 1.4*.

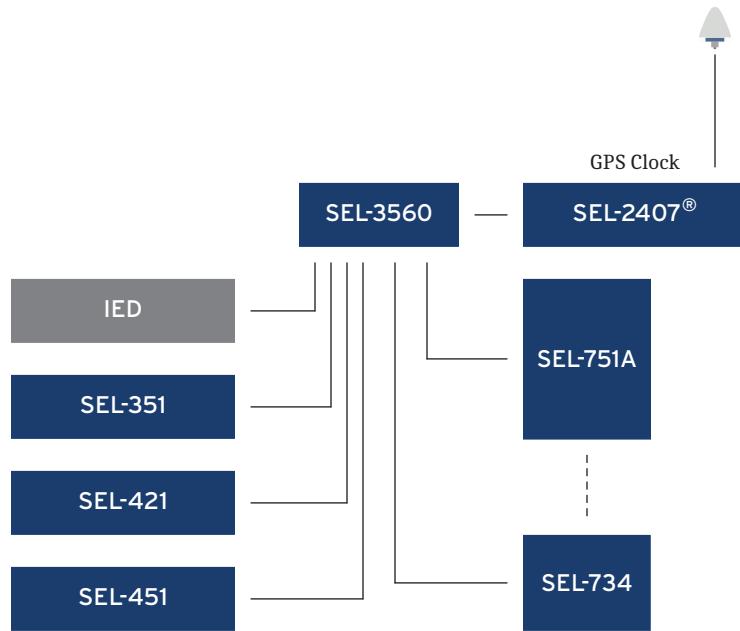

**Figure 1.4 Distribute Time With Serial Communications Cables**

## Synchrophasor Processor

Move synchrophasor data to SCADA Operations Centers using standard protocols, such as DNP3. Include time stamps and time quality in the SCADA message to allow for system-wide usage of synchrophasor data. Within the RTAC logic engine, you can perform complex math and logic calculations on synchrophasor data collected from SEL relays and other IEEE C37.118 compliant devices. An example of this application is shown in *Figure 1.5*.


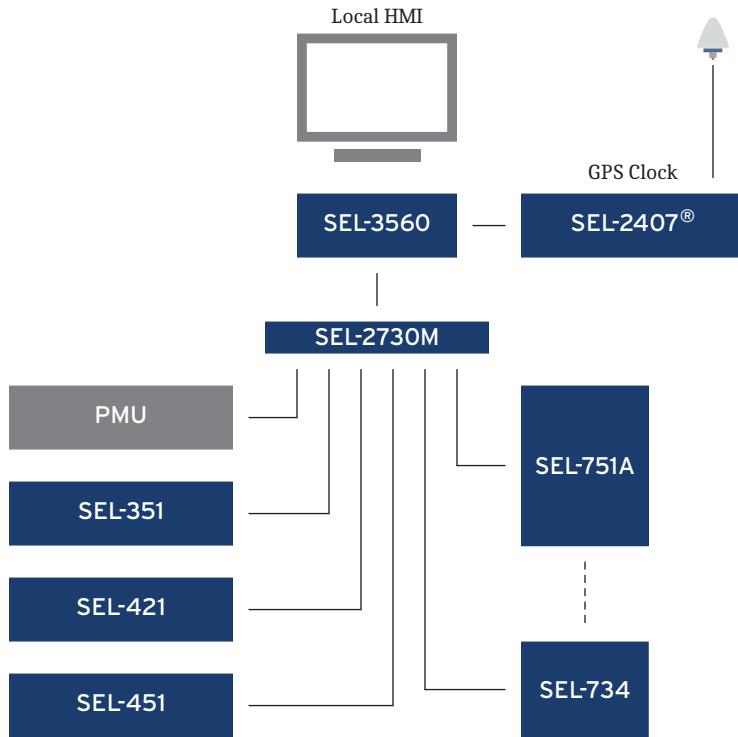


Figure 1.5 System Control and Synchrophasor Data Concentration

## SCADA Data Concentrator (RTU/PLC)

Use the RTAC with your protective relays and other IEDs as the substation SCADA data concentrator. You can configure the RTAC to collect and view station-wide sequential events recorder (SER) and event reports. Retrieve asset optimization data from SEL or other IEDs to maintain the best possible system reliability.

Access the remote RTAC through the Ethernet connection, and use any web browser to manage users, view diagnostics, and access logs. Establish a remote connection with any IED connected to the RTAC through engineering access communications channels. Use the SEL Fast Message protocol to maintain SCADA control and metering updates throughout the engineering access connection. Remotely manage protection and control settings in attached relays by using ACCELERATOR QuickSet SEL-5030 Software. An example of this application is shown in *Figure 1.6*.

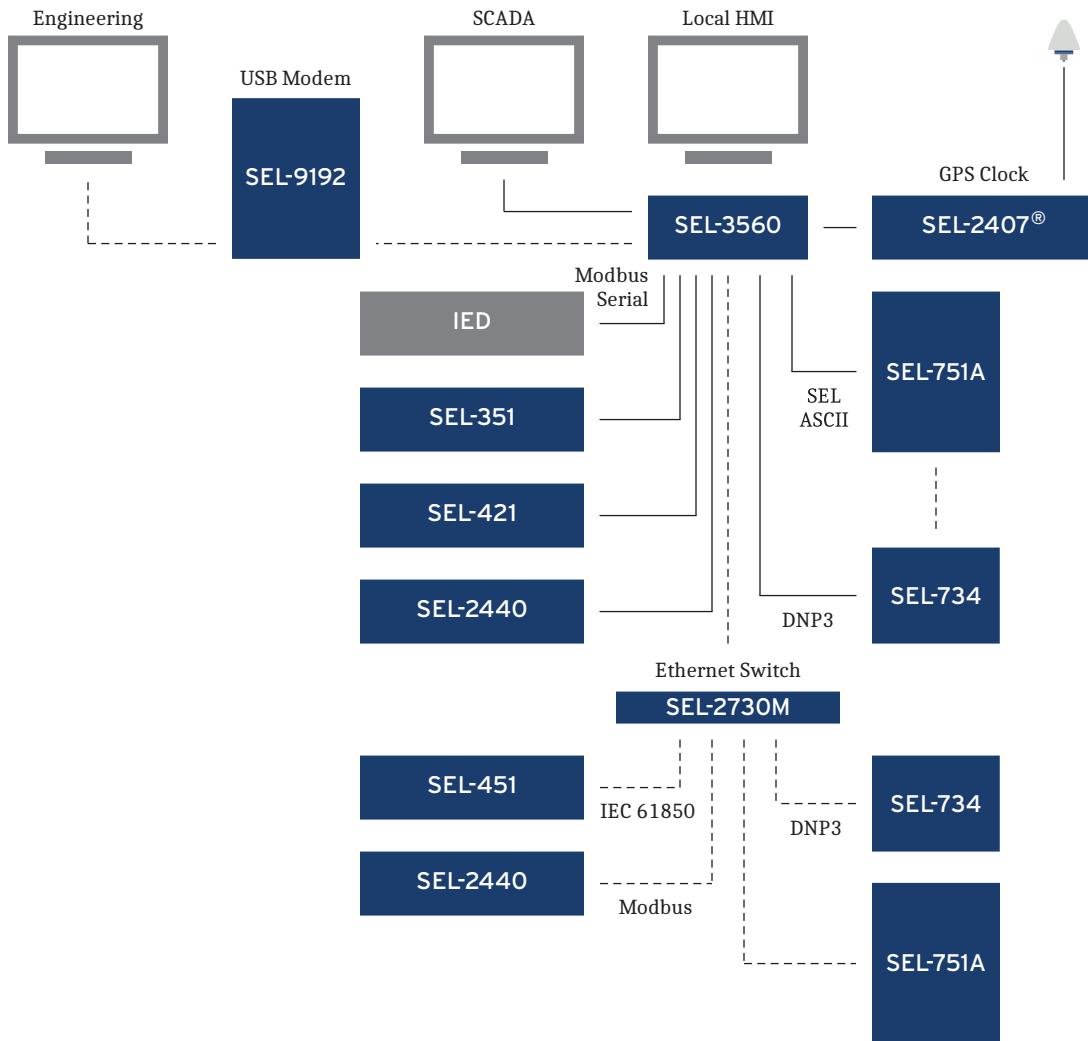

**Figure 1.6 SCADA Communication Through a Single Access Point**

## Security Gateway

Secure engineering access and other Ethernet tunneled serial communications on the automation network with SSL/TLS or SSH encryption. Implement system security auditing, logging, and password restrictions to enforce NERC standards. Comply with role-based requirements by implementing per-user security profiles. Optionally incorporate serial and wireless encrypting devices to further secure communication to any device. An example of this application is shown in *Figure 1.7*.


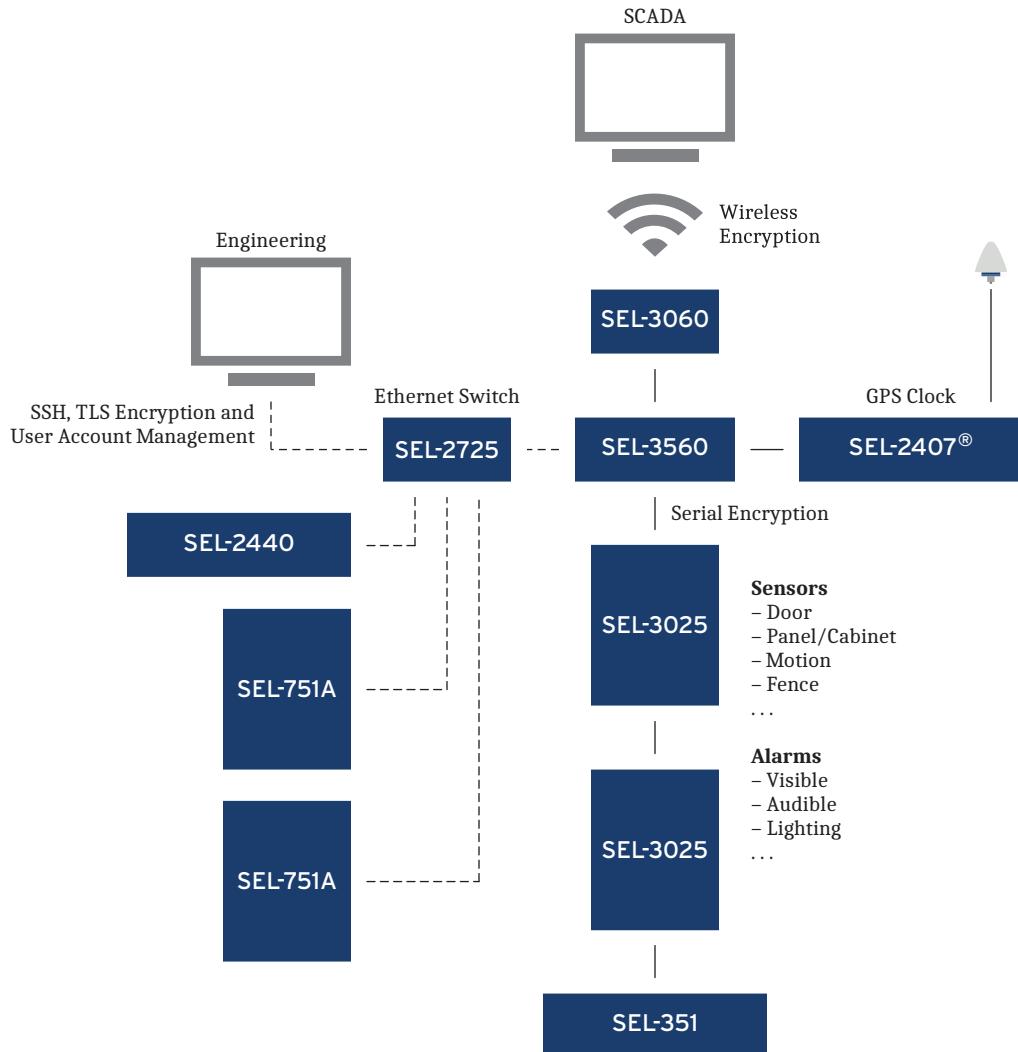


Figure 1.7 Security Through a Single Access Point

## Logic Processor (Automation)

Automate existing installations with modern IEC 61131 applications. Ensure compatibility with any SEL device through the MIRRORED BITS protocol. Take advantage of multiprotocol support to collect SCADA information, process control commands, and SNTP/NTP time synchronization through a single communications link to each Ethernet device. Scale values and calculate logic in a familiar IEC 61131 configuration environment. Enjoy secure, encrypted communication to any device on the substation network or serial channel. An example of this application is shown in *Figure 1.8*.

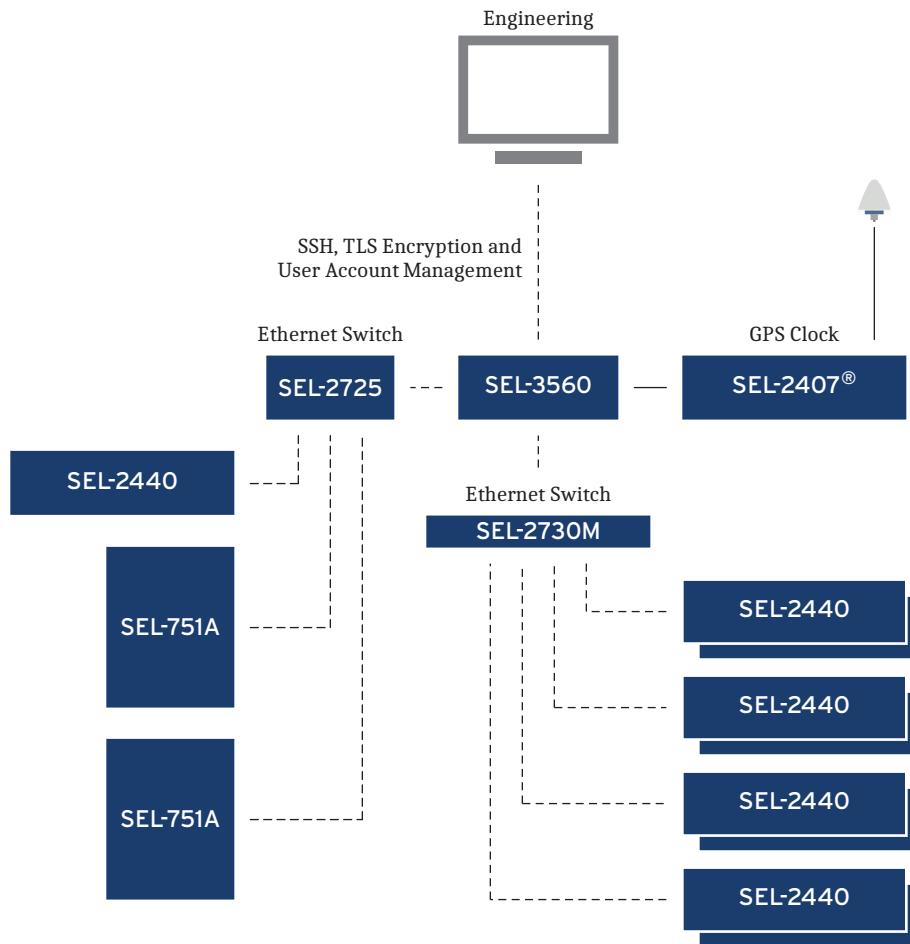

**Figure 1.8 Automate and Integrate With Communication and Logic**

## Specifications

### Compliance

Designed and manufactured under an ISO 9001 certified quality management system

47 CFR 15B, Class A

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

UL Recognized to U.S. and Canadian safety standards (File E220228; NRAQ)

CE Mark

UKCA Mark

RCM Mark

RoHS Compliant

## General

### Supported Operating System

SEL Linux with real-time preemption patches

### CPU

Intel Xeon E3-1505L Quad-Core

Speed: 2.0 GHz base, 2.8 GHz turbo

Cache: 1 MB L2, 8 MB L3

### RAM

8–16 GB DDR4 ECC PC4-17000 (2133 MHz)

### Chipset

Intel CM236 Chipset

### Expansion Cards (SEL-3560E Only)

2 Half-Length, Full-Height PCI Expansion Card Slots: PCI 1: PCIe x1 (Revision 2.0)  
PCI 2: PCIe x4 (Revision 2.0)

### Mass Storage

Internal Drive Bay: One 2.5-inch SSD SATA II 3.0 Gb/s

Optional SATA Drives:  
Industrial-Grade SLC SSD  
30–250 GB  
10-year warranty  
Industrial-Grade pSLC SSD  
120–480 GB  
5-year warranty  
Industrial-Grade 3D TLC SSD  
240–7680 GB  
5-year warranty

### Real-Time Clock/Calendar

Battery Type: IEC No. BR2330A Lithium

Battery Life: 10 years with power  
2 years without power

Drift: 200 ppm

### BIOS

AMI UEFI

### Trusted Platform Module

Infineon SLM 9670AQ TPM 2.0

### Intel Active Management Technology

Intel AMT v11, accessible through ETH1

### Security Features

Account Management: User Accounts  
User Roles  
LDAP Central Authentication  
RADIUS Central Authentication  
Strong Passwords  
Inactive Account Logouts

Intrusion Detection: Access/Audit Logs  
Alarm LED  
Alarm Contact

Encrypted Communications: SSL/TLS, SSH HTTPS

### Automation Features

#### Protocols

##### Client

DNP3 Serial, DNP3 LAN/WAN, Modbus RTU, Modbus TCP, SEL ASCII, SEL Fast Messaging, LG 8979, IEEE C37.118, IEC 61850 MMS, CP2179, IEC 60870-5-101/104, SNMP, SES-92, CDC Type II, Courier, IEC 60870-5-103, EtherNet/IP Explicit Message Client

##### Server

DNP3 Serial, DNP3 LAN/WAN, Modbus RTU, Modbus TCP, SEL Fast Messaging, LG 8979, SES-92, IEC 61850 MMS, IEC 60870-5-101/104, IEEE C37.118, FTP, SFTP, CDC Type II, EtherNet/IP Implicit Message Adapter, OPC UA

##### Peer-to-Peer

IEC 61850 GOOSE, SEL MIRRORED BITS Communications, Network Global Variables (NGVL), Parallel Redundancy Protocol

##### Fieldbus

EtherCAT Client

##### Engineering Access

Modes: SEL Interleaved, Direct

Port Server: Map Serial Ports to IP Ports

Secure Web Server: Diagnostic and Communications Data

### Network Time Protocol (NTP) Modes

NTP Client: As many as three configurable servers

#### NTP Server

### Simple Network Time Protocol (SNTP) Accuracy

±1 ms: This does not take into account external factors such as network switches and topologies

### Precise Time Protocol (PTP)

PTP Client: Peer delay request and end-to-end path delay supported

### Operating Environment

#### Operating Temperature Range

SEL-3560S With E3-1505L CPU: -40° to +75°C (-40° to +167°F)

SEL-3560E With E3-1505L CPU: -40° to +60°C (-40° to +140°F)

\* Requires Industrial-Grade SSDs. See SEL Application Note, “Determining Solid-State Drive (SSD) Lifetimes for SEL Automation Controllers” (AN2016-03).

Note: UL ambient 40°C. See *Safety Information on page 9* for additional restrictions.

Storage Temperature Range: -40° to +85°C (-40° to +185°F)

Relative Humidity: 5% to 95% noncondensing

Insulation Class: I

Pollution Degree: 2

Overvoltage Category:

| Category    | Maximum Altitude | Atmospheric Pressure |
|-------------|------------------|----------------------|
| Category II | 5,000 m          | 80-110 kPa           |

### Weight

4 kg (9 lb) maximum (SEL-3560S)

7 kg (15 lb) maximum (SEL-3560E)

## Peripheral Connections

### Video

Intel P530 Graphics Controller

|  |  |
|--|--|
| As many as three total displays using any combination of DVI and/or DisplayPort outputs: | DVI-D outputs:<br>One display per output<br>Maximum resolution*: 1920 x 1080 @ 60 Hz   |
|  | Digital output only; does not support passive VGA adapters   |
|  | Display Port 1.2 output<br>As many as three displays via DisplayPort MST<br>Maximum resolution*: 4096 x 2304 @ 60 Hz (one display)<br>1920 x 1200 @ 60 Hz (three displays) |
|  | Cable length < 10 m for Surge Immunity compliance.   |

\*High-resolution displays require high-quality cables. Ensure your display cables are as short as possible and rated for the required screen resolution.

### Audio

TSI (IDT) 92HD91 HD Audio Codec

|                            |   |
|----------------------------|---|
| 3 Analog 3.5 mm TRS Jacks: | Line input<br>Line/headphone output<br>Microphone input<br>Cable length < 2 m for Electromagnetic Compatibility Immunity compliance |
|----------------------------|---|

Intel Display Audio

Digital Audio Outputs: DVI-D1, DVI-D2, DisplayPort

### USB

|  |
|--|
| 4 Rear-Panel Ports, 2 Front-Panel Ports                                  |
| USB 3.2 Gen 1 (SuperSpeed USB 5 Gbps)                                    |
| 2000 mA Maximum Current Each   |
| Cable length < 2 m for Electromagnetic Compatibility Immunity compliance |

|   |
|---|
| 2 Internal Ports on 1 Main Board Header |
| USB 2.0 (High Speed USB 480 Mbps)       |

## Communications Ports

### Ethernet

2 Rear-Panel, 1 Gbps Copper RJ45 Ports

|  |  |
|--|--|
| ETH1:  | Intel WGI219LM, 10/100/1000 Mbps RJ45 copper                                 |
| ETH2:  | Intel WGI210IT, 10/100/1000 Mbps RJ45 copper                                 |
| Optional SEL-3390E4 PCIe x4 Expansion Card (SEL-3560E Only): | As many as four additional 10/100/1000 Mbps ports, copper or LC fiber SFP    |
| Optional SEL-3390T:  | 2 additional 10/100/1000 Mbps ports, copper or LC fiber. BNC IN and BNC OUT. |

**Note:** See the *SEL-3390E4 Instruction Manual* and the *SEL-3390T Instruction Manual* for additional information.

### Serial Ports

Standard Ports: 2 EIA-232 ports, DB-9 connectors 300 to 115200 bps

(Meets EIA/TIA-562 Specifications)

Optional SEL-3390S8 PCIe x1 Expansion Cards (SEL-3560E Only): As many as 12 additional EIA-232/ EIA-422/EIA-485 ports, RJ45 connectors 300 to 921600 bps

**Note:** See the SEL-3390S8 instruction manual for additional information.

## Time Code Inputs and Outputs

SEL-3390S8 Expansion Card (Input/Output) (SEL-3560E Only)

|            |                                   |
|------------|-----------------------------------|
| Connector: | RJ45 serial port                  |
| Time Code: | Demodulated IRIG-B TTL compatible |

SEL-3390T Time and Ethernet Adapter Card (Input/Output)

|            |                      |
|------------|----------------------|
| Connector: | BNC Input/BNC Output |
| Time Code: | Demodulated IRIG-B   |

**Note:** See the *SEL-3390S8 Instruction Manual* and the *SEL-3390T Instruction Manual* for additional information.

**Note:** Output generated from either IRIG-B input or SEL-3560 clock.

## Power Supplies

See *Table 1.3* for additional burden information.

### No Power Supply (SEL-3560S Only)

|                 |                      |
|-----------------|----------------------|
| Voltage Rating: | 12 Vdc               |
| Voltage Range:  | 10–16.6 Vdc          |
| Typical Burden: | 25 W                 |
| Max Burden:     | 144 W (cold startup) |
| Peak Inrush:    | 15 A                 |

Negative input power terminal is internally tied to chassis ground.

### SEL-9331 160 W LV Power Supply

|                                     |                    |
|-------------------------------------|--------------------|
| Voltage Rating:                     | 48 Vdc             |
| Voltage Range:                      | 38–58 Vdc          |
| Maximum Constant Burden             |                    |
| External SEL-9331:                  | 149 W              |
| Internal SEL-3560E:                 | 178 W              |
| Maximum Peak Burden:                | 225 W              |
| DC Ripple:                          | <15% rated voltage |
| Peak Inrush:                        | 20 A               |
| Insulation:                         | 3600 Vdc           |
| Input Isolated From Chassis Ground: | Yes                |

### SEL-9331 160 W HV Power Supply

|                         |  |
|-------------------------|--|
| Voltage Ratings:        | 125/250 Vdc<br>120/220/240 Vac; 50/60 Hz |
| DC Range:               | 100–300 Vdc                              |
| Maximum DC Dropout:     | 88 Vdc                                   |
| AC Range:               | 85–264 Vac                               |
| Frequency Range:        | 45–65 Hz                                 |
| Maximum Constant Burden |  |
| External SEL-9331:      | 155 W, 160 VA                            |
| Internal SEL-3560E:     | 188 W, 194 VA                            |
| Maximum Peak Burden:    | 240 W, 248 VA                            |

|                                     |                     |
|-------------------------------------|---------------------|
| DC Ripple:                          | <15% rated voltage  |
| Peak Inrush:                        | 20 A                |
| Insulation:                         | 3600 Vdc            |
| Power Factor:                       | >0.9 (at full load) |
| Input Isolated From Chassis Ground: | Yes                 |

#### Recommended External Overcurrent Protection

|                            |   |
|----------------------------|---|
| Breaker Type:              | Standard  |
| Breaker Rating:            | 20 A at 250 Vdc                                       |
| Current Breaking Capacity: | 10 kA   |
| Grounded Neutral Systems:  | Devices in series with the HOT or energized conductor |
| DC and Isolated Systems:   | Device in serial with both conductors                 |
| Distance from Equipment:   | Less than 2 m   |

#### Fuse Ratings

|                             |  |
|-----------------------------|--|
| 12 Vdc Input Power Fuse F1: | 15 A, 250 Vac/60 Vdc fast acting<br>60 Vdc/50 A break rating |
|-----------------------------|--|

#### LV Power Supply Fuse

|                        |                  |
|------------------------|------------------|
| Rating:                | 15 A             |
| Maximum Rated Voltage: | 500 Vdc, 500 Vac |
| Breaking Capacity:     | 20 kA at 500 Vdc |
| Type:                  | Time-lag T       |

#### HV Power Supply Fuse

|                        |                   |
|------------------------|-------------------|
| Rating:                | 5 A               |
| Maximum Rated Voltage: | 250 Vdc, 277 Vac  |
| Breaking Capacity:     | 1500 A at 277 Vac |
| Type:                  | Time-lag T        |

|                      |   |
|----------------------|---|
| Heater Fuses F2, F3: | 5 A, 125 V slow blow<br>125 Vdc/50 A break rating |
|----------------------|---|

**Note:** Fuses are not serviceable.

### Contact Inputs and Outputs

#### Alarm Output Contact

|                      |                                  |
|----------------------|----------------------------------|
| Output Type:         | Relay, Form C, break-before-make |
| Pilot Duty Ratings*: | B300 (UL)<br>R300 (UL)           |
| Rated Voltage**:     | 24–250 Vdc<br>110–240 Vrms       |

**Note:** The voltage across any of the contact output terminals must not exceed the operational voltage.

|                        |                         |
|------------------------|-------------------------|
| Operational Voltage**: | 0–300 Vdc<br>0–264 Vrms |
|------------------------|-------------------------|

|                     |  |
|---------------------|--|
| Contact Protection: | MOV protection across open contacts<br>264 Vrms continuous voltage<br>300 Vdc continuous voltage |
|---------------------|--|

|                     |                        |
|---------------------|------------------------|
| Continuous Carry**: | 6 A @ 70°C, 4 A @ 85°C |
|---------------------|------------------------|

|                        |                        |
|------------------------|------------------------|
| Pickup/Dropout Time**: | ≤6 ms (resistive load) |
|------------------------|------------------------|

|                        |      |
|------------------------|------|
| Power Supply Burden**: | ≤1 W |
|------------------------|------|

## 32 Introduction and Specifications Specifications

|  |  |
|--|--|
| Mechanical Endurance**:                  | 10,000 no-load operations  |
| Make (Short Duration Contact Current)**: | 30 Adc<br>1,000 operations @ 250 Vdc<br>2,000 operations @ 125 Vdc |

**Note:** 200 ms on, 15 ms off, current interrupted by independent means.

|                                 |              |
|---------------------------------|--------------|
| Short-Time Thermal Withstand**: | 50 A for 1 s |
|---------------------------------|--------------|

|                             |                                 |
|-----------------------------|---------------------------------|
| Limiting Making Capacity**: | 1,000 W @ 250 Vdc (L/R = 40 ms) |
|-----------------------------|---------------------------------|

|  |   |
|--|---|
| Limiting Breaking Capacity/Electrical Endurance**: | 10,000 operations<br>10 operations in 4s,<br>followed by 2 min idle |
|--|---|

| Rated Voltage | Resistive Break | Inductive Break<br>L/R = 40 ms (DC)<br>PF = 0.4 (AC) |
|---------------|-----------------|--|
| 24 Vdc        | 1.25 Adc        | 1.25 Adc   |
| 48 Vdc        | 0.63 Adc        | 0.63 Adc   |
| 125 Vdc       | 0.30 Adc        | 0.30 Adc   |
| 250 Vdc       | 0.20 Adc        | 0.20 Adc   |
| 110 Vrms      | 0.30 Arms       | 0.30 Arms  |
| 240 Vrms      | 0.20 Arms       | 0.20 Arms  |

\* Per UL 508.

\*\*Parameters verified by SEL per IEC 60255-1:2009 and IEEE C37.90-2005.

### Terminal Ratings

#### Compression Screw Terminal

##### Power Wiring

|             |                        |
|-------------|------------------------|
| Insulation: | 300 V min.             |
| Size:       | 12–14 AWG, length <2 m |

##### Alarm Wiring

|             |            |
|-------------|------------|
| Insulation: | 300 V min. |
| Size:       | 12–18 AWG  |

##### Tightening Torque

|          |                  |
|----------|------------------|
| Minimum: | 0.6 Nm (5 in-lb) |
| Maximum: | 0.8 Nm (7 in-lb) |

##### Crimp Ferrule Recommended

#### Mounting Ear Tightening Torque

|          |                     |
|----------|---------------------|
| Minimum: | 0.18 Nm (1.6 in-lb) |
| Maximum: | 0.25 Nm (2.2 in-lb) |

#### Grounding Screw

|               |                     |
|---------------|---------------------|
| Ground Wiring |                     |
| Insulation:   | 300 V min.          |
| Size:         | 12 AWG, length <3 m |

##### Tightening Torque

|          |                  |
|----------|------------------|
| Minimum: | 0.9 Nm (8 in-lb) |
|----------|------------------|

|                           |                   |
|---------------------------|-------------------|
| Maximum:                  | 1.4 Nm (12 in-lb) |
| Ring Terminal Recommended |                   |
| Serial Port               |                   |
| Tightening Torque         |                   |
| Minimum:                  | 0.6 Nm (5 in-lb)  |
| Maximum:                  | 0.8 Nm (7 in-lb)  |
| Video Port                |                   |
| Tightening Torque         |                   |
| Minimum:                  | 0.6 Nm (5 in-lb)  |
| Maximum:                  | 0.8 Nm (7 in-lb)  |

## Product Standards

|  |   |
|--|---|
| Communications Equipment in Utility Substations:                   | IEC 61850-3:2013<br>IEEE 1613-2009<br>Severity Level: Class 1   |
| Industrial Environment:  | IEC 61000-6-2:2005<br>IEC 61000-6-4:2006  |
| Electrical Equipment for Measurement, Control, and Laboratory Use: | 61010-1:2010/AMD1:2016/COR:2019<br>UL 61010-1:2019,<br>C22.2 No. 61010-1:12<br>IEC 61010-2-201:2017<br>UL 61010-2-201:2017,<br>C22.2 No. 61010-2-201:14 |
| Measuring Relays and Protection Equipment:                         | IEC 60255-26:2013<br>IEC 60255-27:2013  |

## Type Tests

**Note:** To ensure good EMI and EMC performance, type tests were performed using shielded Ethernet and serial cables with the shell grounded at both ends of the cable, and the USB, video, and audio cables with ferrite chokes. Double-shielded cables are recommended for best EMI and EMC performance.

### Electromagnetic Compatibility Emissions

|                                   |   |
|-----------------------------------|---|
| Conducted and Radiated Emissions: | CISPR 11:2009 + A1:2010<br>CISPR 22:2008<br>CISPR 32:2015<br>IEC 61000-6-4:2006<br>IEC 61850-3:2013<br>FCC 15.107:2014<br>FCC 15.109:2014<br>Severity Level: Class A<br>Canada ICES-001 (A) / NMB-001 (A) |
| Harmonic Current:                 | IEC 61000-3-2:2014<br>Severity Level: Class A   |
| Voltage Flicker:                  | IEC 61000-3-3:2013  |

### Electromagnetic Compatibility Immunity

|                          |  |
|--------------------------|--|
| Conducted RF:            | IEC 61000-4-6:2013<br>Severity Level: 10 Vrms  |
| Electrostatic Discharge: | IEC 61000-4-2:2008<br>IEEE C37.90.3-2001<br>Severity Level:<br>2, 4, 6, 8 kV contact discharge;<br>2, 4, 8, 15 kV air discharge  |
| Fast Transient/Burst:    | IEC 61000-4-4:2012<br>Severity Level: Class A<br>4 kV, 5 kHz on power supply and outputs;<br>2 kV, 5 kHz on communications lines |

## 34 Introduction and Specifications Specifications

|                             |   |
|-----------------------------|---|
| Magnetic Field:             | IEC 61000-4-8:2009<br>Severity Level:<br>1000 A/m for 3 s<br>100 A/m for 1 m  |
| Power Supply:               | IEC 61000-4-11:2004<br>IEC 61000-4-17:1999 + A1:2001 + A2:2008<br>IEC 61000-4-29:2000   |
| Radiated Radio Frequency:   | IEC 61000-4-3:2006 + A1:2007<br>Severity Level: 10 V/m<br>IEEE C37.90.2-2004<br>Severity Level: 20 V/m  |
| Surge Withstand Capability: | IEC 61000-4-18:2006 + A1:2010<br>Severity Level:<br>Power supply and outputs<br>2.5 kV peak common mode<br>1.0 kV peak differential mode<br>Communications ports<br>1.0 kV peak common mode<br>IEEE C37.90.1-2012<br>Severity Level:<br>2.5 kV oscillatory<br>4 kV fast transient |
| Surge Immunity:             | IEC 61000-4-5:2005<br>1 kV line-to-line<br>2 kV line-to-earth<br>2 kV communications ports  |

**Note:** Cables connected to EIA-232, EIA-422/485, and IRIG-B expansion slot communications ports should be less than 10 m for Zone A and Zone B compliance.

### Environmental

|                              |   |
|------------------------------|---|
| Change of Temperature:       | IEC 60068-2-14:2009<br>Severity Level:<br>5 cycles, 1°C per minute ramp   |
| SEL-3560S With E3-1505L CPU: | -40°C to +75°C  |
| SEL-3560E With E3-1505L CPU: | -40°C to +60°C  |
| Cold, Operational:           | IEC 60068-2-1:2007<br>Severity Level: 16 hours at -40°C   |
| Cold, Storage:               | IEC 60068-2-1:2007<br>Severity Level: 16 hours at -40°C   |
| Damp Heat, Cyclic:           | IEC 60068-2-30:2005<br>Severity Level:<br>12 + 12-hour cycle<br>25° to 55°C, 6 cycles, >93% r.h.                                  |
| Damp Heat, Steady:           | IEC 60068-2-78:2012<br>Severity Level:<br>40°C, 240 hours, >93% r.h.  |
| Dry Heat, Operational:       | IEC 60255-1:2009<br>IEC 61850-3:2013<br>IEC 60068-2-2:2007<br>Severity Level:<br>SEL-3560S With E3-1505L CPU:<br>16 hours at 75°C |
| Dry Heat, Storage:           | IEC 60255-1:2009<br>IEC 61850-3:2013<br>IEC 60068-2-2:2007<br>Severity Level: 16 hours at 85°C                                    |

|                       |   |
|-----------------------|---|
| Free Fall:            | IEEE 1613-2009<br>Severity Level: 100 mm  |
| Vibration:            | IEC 60255-21-1:1988<br>Severity Level:<br>Endurance Class 2<br>Response Class 2   |
|                       | IEC 60255-21-2:1988<br>Severity Level:<br>Shock Withstand, Bump Class 1<br>Shock Response Class 2   |
| <b>Safety</b>         |   |
| Enclosure Protection: | IEC 60529:2001 + CRGD:2003<br>Severity Level: IP30  |
| Dielectric Strength:  | IEC 60255-27:2013<br>IEEE C37.90-2005<br>Severity Level:<br>3600 Vdc on power supply<br>2500 Vac on contact output<br>1500 Vac Ethernet ports<br>Type tested for one minute |
| Impulse:              | IEC 60255-27:2013<br>IEEE C37.90-2005<br>Severity Level:<br>5 kV common mode, power supply, contact outputs<br>1.5 kV Ethernet ports  |

**Table 1.3 System Power Consumption (at 12 Vdc Input Voltage)**

| <b>Power Consumption<sup>a</sup></b>                   |                |                |                |
|--|----------------|----------------|----------------|
| <b>Component</b>                                       | <b>Minimum</b> | <b>Typical</b> | <b>Maximum</b> |
| Base System (E3-1505L CPU, 4 GB RAM, 1 SATA Drive)     | 15 W           | 25 W           | 40 W           |
| <b>Additional Consumption From Optional Components</b> |                |                |                |
| SEL-9331 Power Supply (Standard on SEL-3560E)          | +10 W          | +10 W          | +10 W          |
| 8–32 GB RAM Configuration                              | +2 W           | +2 W           | +3 W           |
| 2nd SATA Drive   | +1 W           | +2 W           | +3 W           |
| SEL-3390E4 Ethernet Card                               | +6 W           | +8 W           | +10 W          |
| SEL-3390S8 Serial Card or SEL-3390T Expansion Card     | +4 W           | +5 W           | +7 W           |
| Chipset Heater <sup>b</sup>                            |                |                |                |
| Cold Startup (<5°C [41°F])                             | N/A            | N/A            | +90 W          |
| Continuous Operation (0°C [32°F])                      | 0 W            | +5 W           | +10 W          |
| Continuous Operation (-40°C [-40°F])                   | 0 W            | +20 W          | +40 W          |

<sup>a</sup> Minimum: 0% load on all components; minimum power consumption started and idle.

Typical: 25%–50% load on all components; good indication of most application loads.

Maximum: 100% load on all components; generally cannot be reached in normal applications.

<sup>b</sup> Chipset heaters operate at low temperatures to keep the CPU and PCH within specified operating limits.**Table 1.4 Peripheral Connection Rated Current Output**

| <b>Connection</b> | <b>Current Limit</b>              |
|-------------------|-----------------------------------|
| DVI-D             | 0.2 A, +5 Vdc, 1 W total for both |
| DisplayPort       | 0.6 A, +3.3 Vdc, 2 W              |

**36** Introduction and Specifications  
**Specifications**

| <b>Connection</b> | <b>Current Limit</b>                              |
|-------------------|---|
| COM 1 and COM 2   | 0.5 A, +5 Vdc, 2.5 W each                         |
| USB Ports         | 2.0 A, +5 Vdc, 10 W each, 25 W all ports combined |

---

---

## S E C T I O N   2

---

# Installation

## Overview

---

The first steps in applying the SEL-3560 Real-Time Automation Controller (RTAC) are installing and connecting the device. This section describes common installation features and requirements. To install and connect the device safely and effectively, you must be familiar with device configuration features and options.



USB Connection



Single DisplayPort Connection



Single DVI Connector to DVI-D



Dual DVI Connections

**Figure 2.1 Installation**

## Device Placement

---

### Physical Location

Mount the SEL-3560 in a sheltered indoor environment (a building or an enclosed cabinet) that does not exceed the temperature and humidity rating for the unit (see *Specifications on page 26*). The unit is rated Installation/Overvoltage Category II and Pollution Degree 2. This rating allows mounting of the unit indoors or in an outdoor (extended) enclosure where the unit is protected against exposure to direct sunlight, precipitation, and full wind pressure, but temperature and humidity are not controlled.

## Unit Mounting

### WARNING

Any mounting orientation that does not result in the input power connector facing down creates a risk of electrical shock from falling metal objects, as specified by IEC 60255-27.

All variants of the SEL-3560 chassis are designed for wall-mount installation and have the same mounting hole pattern. Mount the SEL-3560 securely to the wall or surface by using at least four of the eight mounting holes (two on each side; see *Figure 2.2* for details). Two heatsink options are available to provide optimal heat dissipation depending on the type of installation. Careful consideration should be given to the type of chassis selected. While the SEL-3560 is designed to be mounted in any orientation, the best high-temperature performance is achieved by mounting on a vertical surface with the power supply connector facing down.

### Standard Heatsink

The SEL-3560 with standard heatsink is designed to be mounted to any wall or surface. The standard heatsink uses aluminum fins to provide efficient passive cooling to the ambient air around the SEL-3560. No fans or forced air ventilation are required, but a minimum of 2.5 cm (1 inch) clearance around the entire heatsink is recommended.

### Conduction-Cooled Heatsink

The SEL-3560 with conduction-cooled heatsink is designed specifically for installations inside metal enclosures where the SEL-3560 can be mounted directly against the door or exterior wall of the enclosure. The mounting surface of the conduction-cooled chassis is also the heatsink and conducts heat directly to the wall of the enclosure, which is cooled by the outside air. The benefits of this design are a lower operating temperature of the SEL-3560 and less heating of the air (and therefore other equipment) inside the enclosure. No thermal interface material is required between the SEL-3560 and the enclosure wall as long as the surface is flat and the SEL-3560 is flush against the wall. The conduction-cooled chassis should not be used on wood, plastic, composite, or any other non-metallic mounting surfaces that are poor heat conductors, or on surfaces that may be subjected to direct heat.


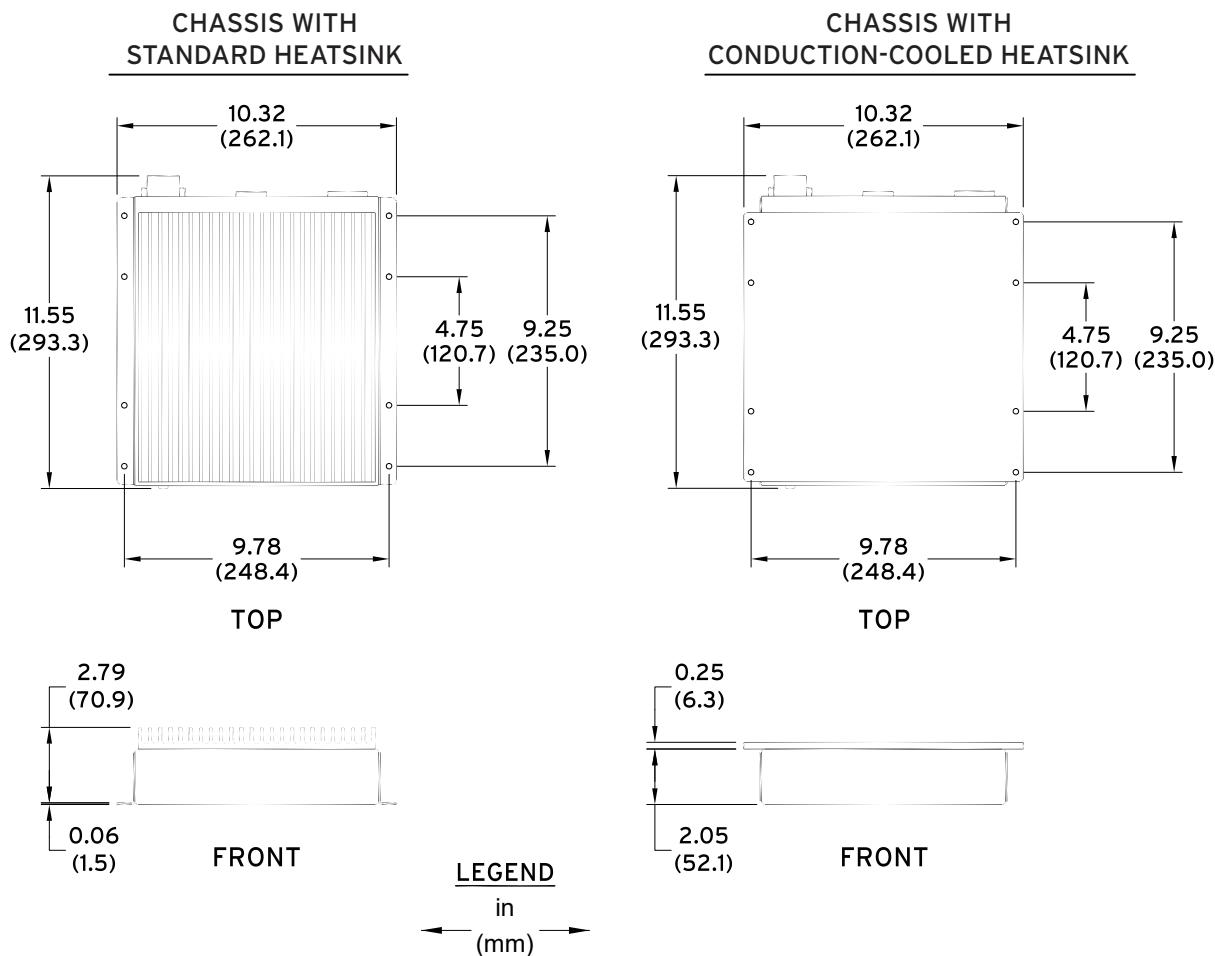


Figure 2.2 SEL-3560S Dimensions Diagram

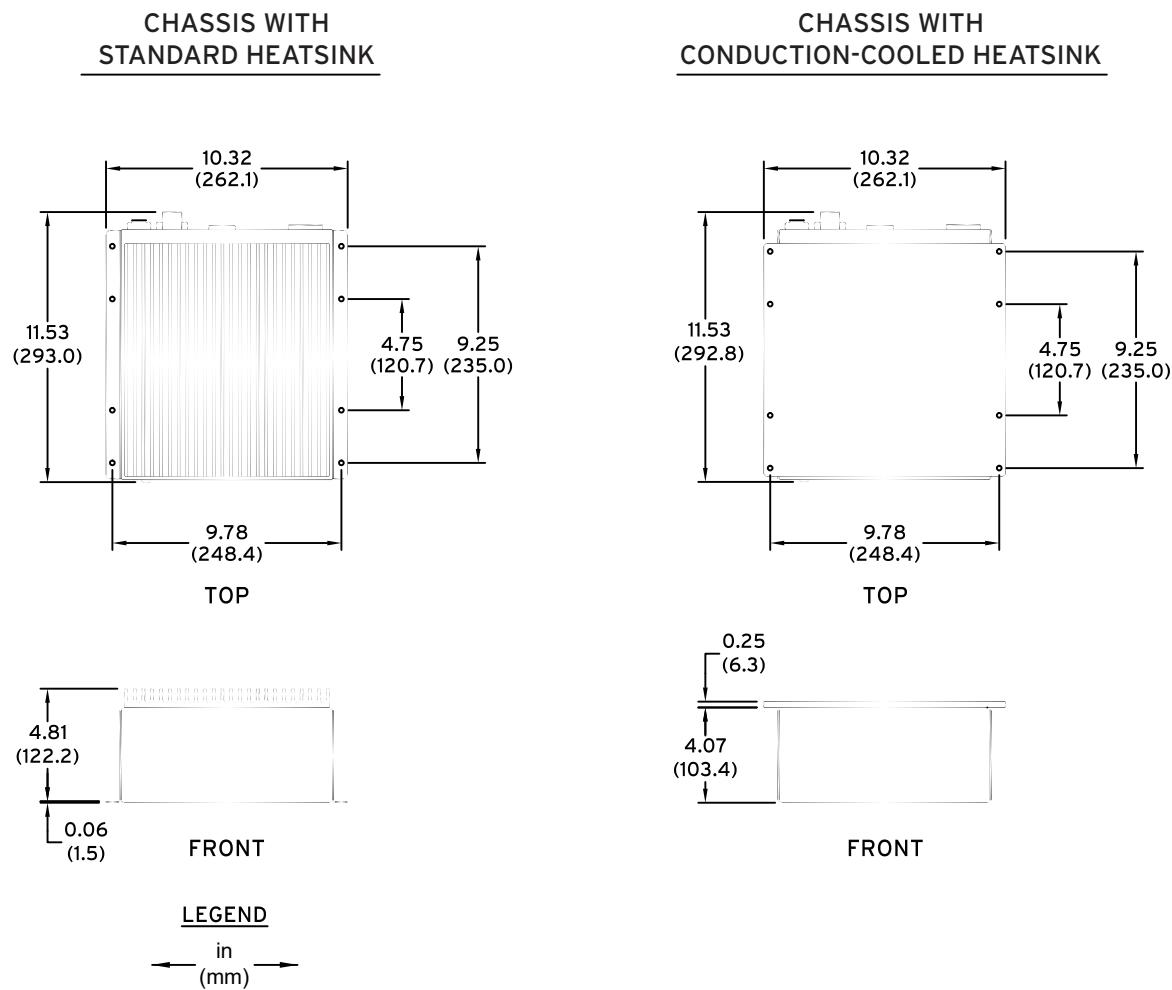


i9348a

**Figure 2.3** SEL-3560E Dimensions Diagram

## Front Panel

*Figure 2.4 shows the physical layout of the front panel of an SEL-3560.*

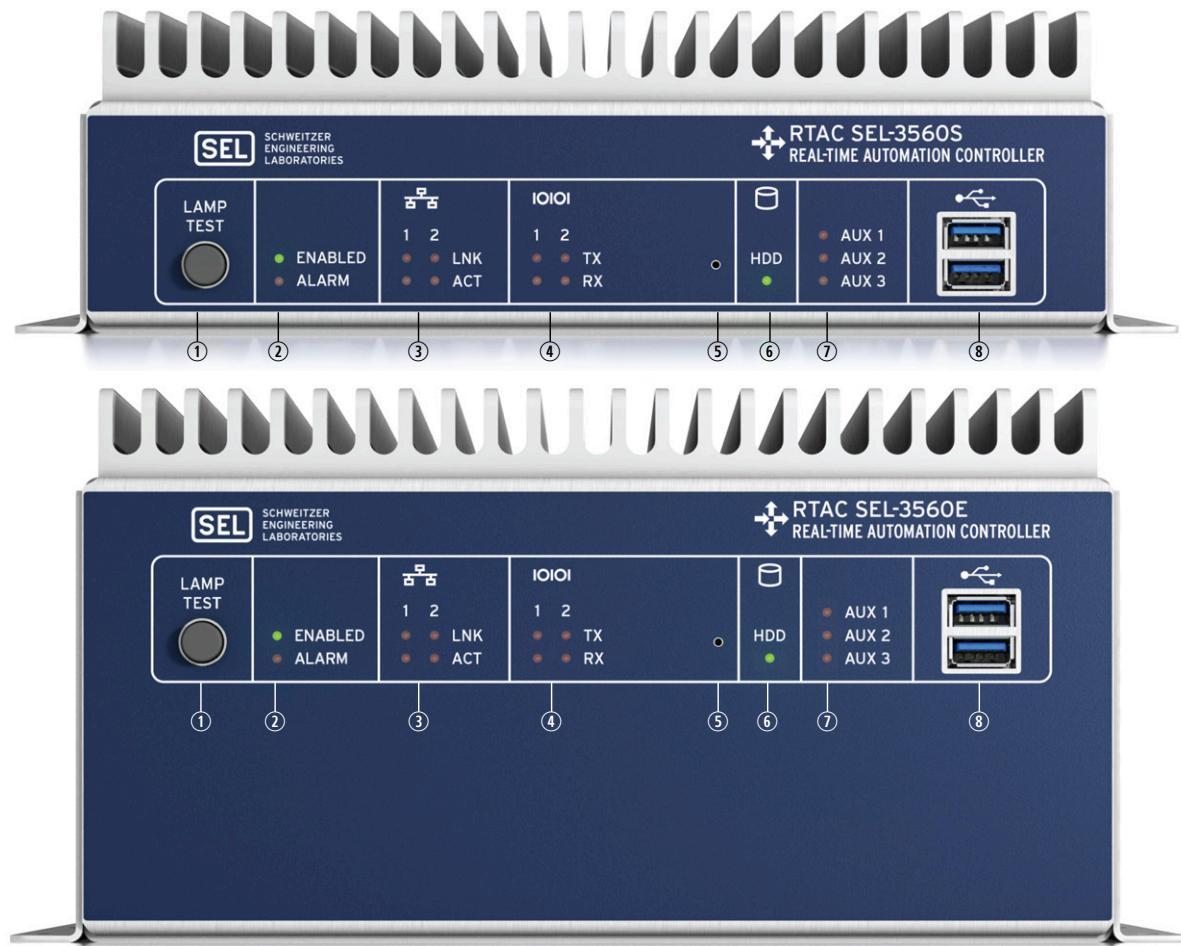

- ① **LAMP TEST** Button. Press and hold to test front-panel LEDs. Can be programmed to be an on/off or reset button.
- ② **ENABLED** and **ALARM** LEDs provide operational status. A green **ENABLED** LED indicates normal operation. The **ALARM** LED illuminates red when a nonoptimal system condition exists.
- ③ **ETHERNET** Status Indicators. Link (**LINK**) indicates that the port is connected, and activity (**ACT**) indicates when data are being transmitted and received.
- ④ **SERIAL** Status Indicators. Transmit (**TX**) and receive (**RX**) LEDs indicate activity on serial ports.
- ⑤ **PINHOLE** button. Provide reset and power functions, and requires a push-pin to prevent accidental use.
- ⑥ **HDD** Activity Indicator. Illuminates when SATA drives are accessed.
- ⑦ **AUXILIARY** Status Indicators. Three programmable, bicolor LEDs for your custom application.
- ⑧ **USB** Ports. Two easily accessible ports to connect USB peripherals.

Figure 2.4 Front-Panel Diagram

## Lamp Test Button

Press the **LAMP TEST** button to illuminate all LEDs. Press and hold the **LAMP TEST** button to cycle through an LED test pattern. The **LAMP TEST** button can be configured to function as a power or reset button, or be completely disabled (see *Boot Features on page 59*).

## Status Indicators

The **ENABLED** LED displays operational status with green for normal operation, and red to indicate that the system is starting up, has halted, or is experiencing an error condition.

The **ALARM** LED illuminates red when the alarm contact operates, indicating that a nonoptimal system condition exists.

Ethernet LEDs indicate network status and network activity for built-in Ethernet ports.

Serial LEDs indicate activity on serial ports.

The **HDD** LED indicates SATA drive activity. The blink rate indicates how much SATA drive activity is taking place. A fast blink indicates more SATA drive activity.

Auxiliary LEDs labeled **AUX 1**, **AUX 2**, and **AUX 3** are programmable for your custom application.


## USB Ports

Attach one or two USB devices, enabling custom, application-specific peripherals. Enter the BIOS setup to selectively disable USB port(s).

## Rear Panel

---

*Figure 2.5* shows the physical layout of the connectors on the rear panel.

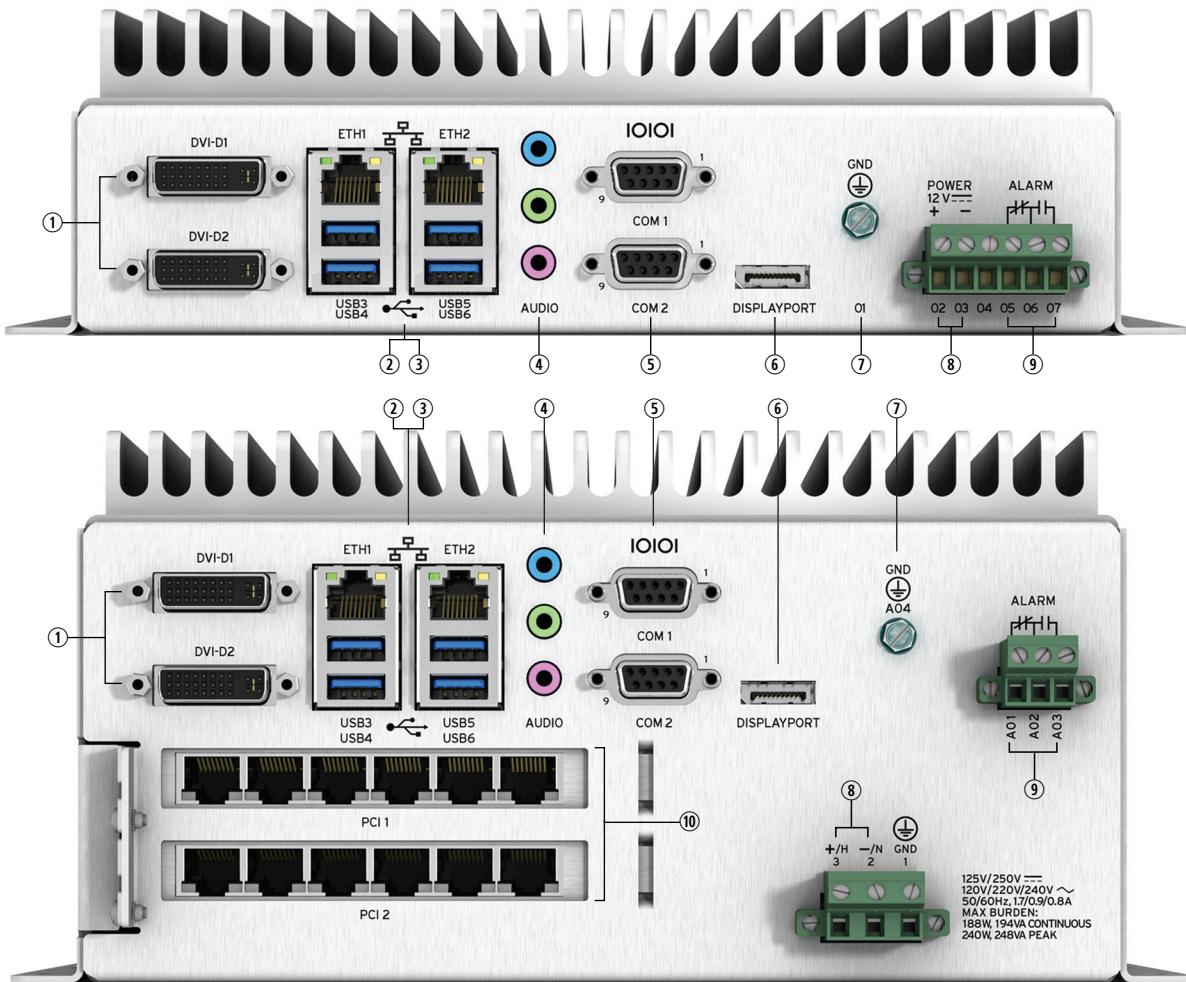

- ① **DVI-D.** Connect digital monitors by using native DVI or an HDMI adapter.
- ② **ETH1 and ETH2.** Onboard independent Gigabit Ethernet interfaces.
- ③ **USB Ports.** Connect as many as four USB peripherals at the rear panel.
- ④ **AUDIO Ports.** Line Input (blue), Line Output (green), and Microphone Input (pink).
- ⑤ **COM1 and COM2.** Standard EIA-232 serial ports with configurable +5 Vdc power on Pin 1.
- ⑥ **DISPLAYPORT.** Connect new digital monitors supporting the DisplayPort interface.
- ⑦ **GROUND Terminal Screw.** The earth ground connection for the SEL-3560.
- ⑧ **POWER Input Terminals.** The rated input voltage is clearly marked on the chassis near the terminals.
- ⑨ **ALARM.** The Form C alarm contact output enables both normally closed and normally open wiring connections.
- ⑩ **PCI Expansion Slots.** Install SEL or third-party PCI Express expansion cards for additional network, serial, or other application-specific I/O.

**Figure 2.5 Rear-Panel Diagram**

## Video

You can optionally connect one or more video monitors to any of the SEL-3560-2 video ports to access the RTAC web interface and BIOS settings. Choose between DVI-D and DisplayPort. The DVI-D port does not have an analog VGA signal. Connect HDMI monitors with a DVI-to-HDMI adapter connected to either DVI port. Use VGA, DVI, and HDMI adapter dongles connected to the DisplayPort to make use of these video displays.

Video display resolution and touch screen configuration is controlled through keyboard shortcuts, as shown in *Table 2.1*. To calibrate a USB-enabled touchscreen monitor, ensure the USB connection from the monitor is plugged into the RTAC, then perform the following:

Step 1. Press <Ctrl+T>. Four targets will appear on the screen.

Step 2. Click on each of the four targets.

A miss on one target will restart the process. Once you have successfully clicked on all four targets, the RTAC stores the settings to preserve them through power cycles and firmware updates. Multi-touch monitors and multiple touch screens are not supported.

## Keyboard/Mouse

The RTAC supports any HID class-compliant USB keyboard or USB mouse on any of the USB ports. You can plug the mouse and keyboard in before turning on the RTAC or any time during operation. See *Table 2.1* for keyboard shortcuts.

**Table 2.1 Keyboard and Mouse Shortcuts**

| Shortcut            | Operation                             |
|---------------------|---------------------------------------|
| <F11>               | Enter or exit full-screen mode        |
| <Ctrl+C>            | Copy selected text                    |
| <Ctrl + X>          | Cut selected text                     |
| <Ctrl+V>            | Paste copied or cut text              |
| <Ctrl+T> or <Alt+T> | Calibrate touchscreen                 |
| <Ctrl+Shift+Delete> | Delete browser cache options          |
| <Alt+F4>            | Close the selected/active application |

## Ethernet

Use the Ethernet port on the SEL-3560 to connect to the RTAC web interface and send project configurations to the unit by using ACCELERATOR RTAC software. You can configure all RTAC web settings by using a web browser on your PC if you are connected via Ethernet to the RTAC, but you cannot access BIOS settings unless you use a local video monitor, keyboard, and mouse. Web configuration settings are in the *SEL-5033 ACCELERATOR RTAC Instruction Manual*.

The SEL-3560 is equipped with two built-in high-speed Gigabit Ethernet 10/100/1000BASE-T (ETH 1 and ETH 2) copper ports for connecting to two independent networks. Ports may be teamed for redundancy or used individually. All Ethernet ports may be used at the same time and have unique SEL-programmed MAC addresses. Default IP addresses for standard Ethernet ports are as follows:

- ETH 1: 192.168.1.2
- ETH 2: 192.168.2.2

Additional rear fiber or copper ports are available with optional PCI SEL-3390E4 and SEL-3390T add-in expansion cards. Ethernet configurations for each port are available on the RTAC web interface. For more information on expansion ports, please refer to the expansion card instruction manual.

## USB

Connect a keyboard and mouse to any of the six front or rear USB ports. Enter the BIOS setup to selectively disable USB port(s).

## Audio

The audio connection on the SEL-3560 is not used at this time.

## Serial

You can configure any serial protocol on the RTAC to use any of the serial ports. Two built-in serial ports are BIOS configurable for +5 Vdc port power. Additional serial ports are available with optional PCI SEL-3390S8 add-in expansion cards. For information on those ports, please refer to the expansion card instruction manual.

The serial communications ports function as standard EIA-232 ports by default. Additional serial ports features, such as +5 V port power, are configurable via software settings in ACCELERATOR RTAC SEL-5033 software.

Ensure that the length of the EIA-232 communications cable is no longer than 15.2 m (49.9 ft), and always use shielded cables for communications circuit lengths longer than 3.0 m (9.8 ft).

### NOTE

The COM 1 hardware has a limited serial buffer receive size and should not be used with modems or other external communications equipment which do not have flow control capabilities.

Serial port COM1 has a non-standard pinout; Pins 4 and 6 are used as an IRIG-B input instead of standard DTR/DSR modem control signals. This enables the SEL-3560 to synchronize the system clock to a GPS clock or other precise-time source with an accuracy of 500 ms or better. The IRIG-B input accepts a demodulated (i.e., unmodulated) IRIG-B002 input. IRIG-B002 time-code format is a binary-coded decimal (BCD) time code (HH,MM,SS,DDD); this time-code format is “regular” IRIG-B. The IRIG-B000 time-code formats consist of BCD time code, plus additional information and control functions depending on user applications. The IRIG-B input accepts IRIG-B000, but it will not process the additional data, providing the same functionality as IRIG-B002. Note that IRIG-B002 does not include the year, which you must manually set on the SEL-3560 system clock during initial setup and whenever the real-time clock battery is removed.

See *Figure 2.5* for the serial port DB-9 female connector pin numbers. The corresponding EIA-232 serial port pin functions are shown in *Table 2.2*. *Table 2.3* shows the pin definitions for the RJ45 connectors on the SEL-3390S8 serial expansion card. See the *SEL-3390S8 Instruction Manual* for other information related to the serial communication expansion card ports.

**Table 2.2 EIA-232 Serial Port Connector Pin Definition**

| Pin | Ports 1–2                   |
|-----|-----------------------------|
| 1   | DCD                         |
| 2   | RXD                         |
| 3   | TXD                         |
| 4   | DTR or +IRIG-B <sup>a</sup> |
| 5   | GND                         |
| 6   | DSR or –IRIG-B <sup>a</sup> |
| 7   | RTS                         |
| 8   | CTS                         |
| 9   | RI                          |

<sup>a</sup> IRIG-B input on COM1; DTR/DSR input on COM2.

**Table 2.3 SEL-3390S8 RJ45 Port Pin Definition**

| Pin | EIA-232 Mode Default Functions | EIA-422/485 Mode Default Functions | Alternate Functions            |
|-----|--------------------------------|------------------------------------|--------------------------------|
| 1   | Data Set Ready (DSR in)        |                                    | –IRIG-B Output <sup>a</sup>    |
| 2   | Data Carrier Detect (DCD in)   |                                    | +5 Vdc Port Power              |
| 3   | Data Terminal Ready (DTR out)  |                                    | +IRIG-B Output <sup>a</sup>    |
| 4   | Signal Ground (GND)            |                                    | Port Power Ground <sup>b</sup> |
| 5   | Receive Data (RxT in)          | –Receive Data (–RxT in)            |                                |
| 6   | Transmit Data (TxT out)        | –Transmit Data (–TxT out)          |                                |
| 7   | Clear to Send (CTS in)         | +Receive Data (+RxT in)            |                                |
| 8   | Request to Send (RTS out)      | +Transmit Data (+TxT out)          |                                |

<sup>a</sup> Port one can be established as an IRIG-B output.

<sup>b</sup> When using +5 Vdc Port Power, Pin 4 functions as both Signal Ground and Port Power Ground.

*Table 2.4* shows recommendations for the cables for serial and Ethernet ports. See *Figure 2.6* and *Figure 2.7* for typical EIA-485 two-wire and four-wire connections schematics.

**Table 2.4 Recommended Cables**

| Port                   | Port Interface                            | Cables  |
|------------------------|---|---|
| PORt 1–PORT 2 (serial) | EIA-232 (Nonisolated)                     | SEL-C235 and SEL-C282 are popular selections. If using an EIA-485 adapter or one of the expansion ports in EIA-485 mode, use twisted-pair cables such as SEL-C698 or SEL-C697. Shielded, twisted-pair cables are strongly recommended for EIA-485 installations to reduce noise susceptibility. |
| Expansion serial ports | EIA-232/EIA-422/<br>EIA-485 (Nonisolated) | SEL-C627 (RJ45 for copper). Industrial cables such as SEL-C627R are recommended for reduced noise susceptibility.   |
| ETH 1 and ETH 2        | 10/100/1000BASE-T<br>(RJ45 for copper)    | SEL-C627 (RJ45 for copper). Industrial cables such as SEL-C627R are recommended for reduced noise susceptibility.   |
| PCI Serial Port 1      | RJ45 IRIG Input                           | Connect an IRIG source BNC to SEL-C972, then connect the SEL-C972 to Port 1 of the first SEL-3390S8 serial expansion card to deliver an IRIG signal to the SEL-3560 RTAC.   |

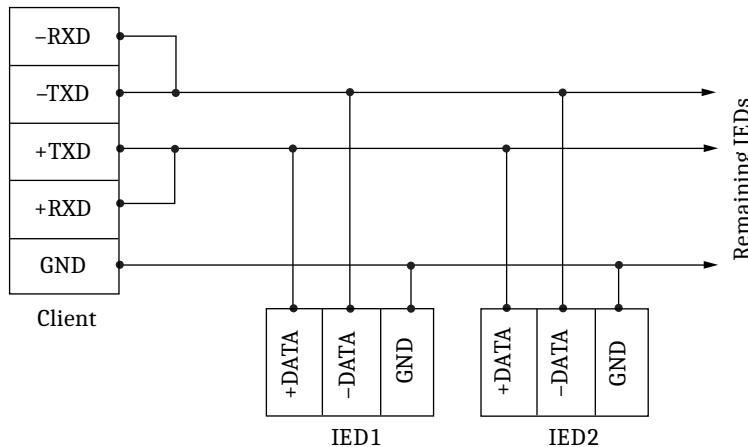


Figure 2.6 EIA-485 Typical Two-Wire Connection

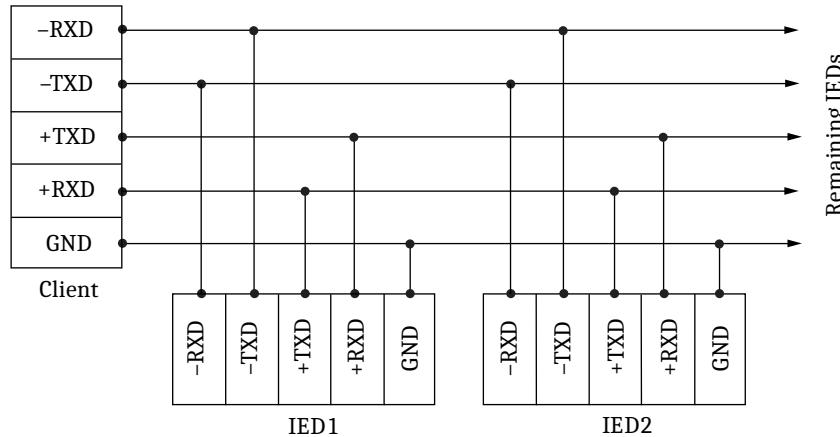


Figure 2.7 EIA-485 Typical Four-Wire Connection

## Output

Refer to *Section 1: Introduction and Specifications* for output contact rating and *Figure 2.6* for terminal assignments. Configure the alarm contact output under **Contact I/O** in ACCELERATOR RTAC. You can change the name of the point or create an alias tag name.

## Grounding

Connect the grounding terminal (see A04 in *Figure 2.5*) labeled **GND** on the rear panel to a rack frame ground or main station ground for proper safety and performance. Use less than 3.0 m (9.8 ft) of 12 AWG ( $4 \text{ mm}^2$ ) or heavier wire of sufficient current capacity and voltage insulation for this connection. This terminal connects directly to the internal chassis ground of the SEL-3560.

## Initial Startup

---

Connect a monitor to one of the video output connections and a keyboard and mouse to the USB connectors to initially configure the SEL-3560 RTAC web settings. Web settings include initial password (required) and Ethernet port settings. Connect a computer to one of the Ethernet ports to send ACCELERATOR RTAC project configurations to the RTAC.

You can also configure the web settings by connecting a PC to one of the two independent rear Ethernet ports. See *Section 7: Security and Account Management* in the *SEL-5033 Instruction Manual* to configure the RTAC password by using the web interface. As described in *Getting Started With SEL-3560 RTAC*, enter the correct IP address that corresponds to the PC-to-RTAC connection in the address bar of your web browser.

If you are using a monitor, keyboard, and mouse to initially configure the RTAC, the web interface will automatically appear on the monitor after you apply power to the unit. As an alternative, you can connect to the RTAC with a computer via Ethernet and use a web browser to initially configure the unit.

Use the RTAC web interface to configure RTAC user accounts, network settings, and other configuration parameters described in the *SEL-5033 Instruction Manual*. Use the same IP address in the ACCELERATOR RTAC software to send project settings to your RTAC, as described in the *SEL-5033 Instruction Manual*.

---

---

## S E C T I O N   3

---

# Hardware Setup and Serviceability

## Overview

---

The SEL-3560 Real-Time Automation Controller (RTAC) has unique hardware, which sets its deployment and servicing apart from other devices. This section details the individual hardware components that make up the core of the SEL-3560 RTAC, its expansion capabilities, and the technical specifications and requirements of the various components.

## Main Board

---


 **CAUTION**

The main board is not field serviceable and should not be removed from the SEL-3560. Doing so will compromise the thermal interface material between the CPU, PCH, and heatsink, which, if not replaced properly, can cause damage to the system.

 **CAUTION**

There is danger of explosion if the battery is incorrectly replaced. Replace only with Panasonic BR2330A or equivalent recommended by manufacturer. See Owner's Manual for safety instructions. The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not recharge, disassemble, heat above 100°C or incinerate. Dispose of used batteries according to the manufacturer's instructions. Keep battery out of reach of children.

*Figure 3.1* shows the components and their locations on the SEL-3560 main board.

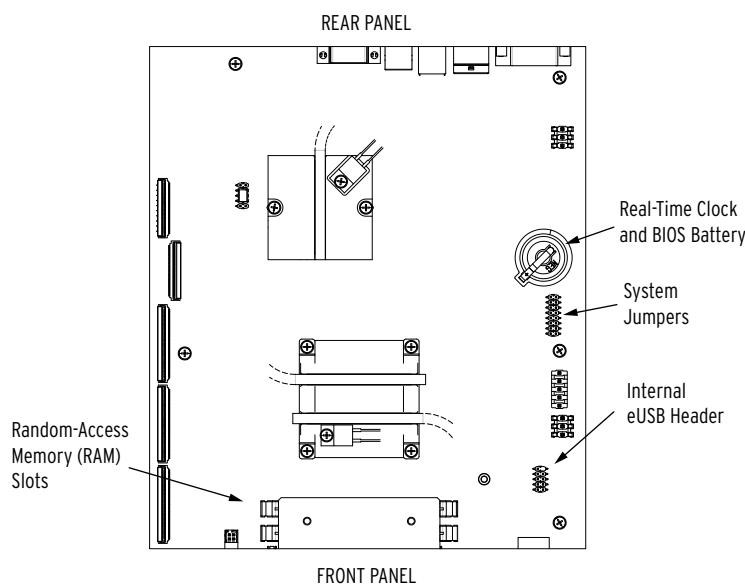**Figure 3.1 Main Board Diagram**

## Side Panel Removal and Installation

### **DANGER**

Disconnect or de-energize all external connections before opening this device. Contact with hazardous voltages and currents inside this device can cause electrical shock resulting in injury or death.

### **CAUTION**

Equipment components are sensitive to electrostatic discharge (ESD). Undetectable permanent damage can result if you do not use proper ESD procedures. Ground yourself, your work surface, and this equipment before removing any cover from this equipment. If your facility is not equipped to work with these components, contact SEL about returning this device and related SEL equipment for service.

To access the SATA drives, main board, and PCI expansion slots, you must first remove the right side panel (closest to the DVI ports) by removing the four screws as shown in *Figure 3.2*.

**Figure 3.2 Panel Removal**

## System Jumpers

*Table 3.1* shows the system jumpers and their functions on the SEL-3560 main board. The jumpers can be accessed from the edge of the main board by removing the side panel. See Side Panel Removal and Installation.

The factory-default configuration of the system jumpers has shunts installed on only one of the two pins of each jumper location, such that the pins in each jumper position are not bridged. To enable a system jumper function, remove the jumper shunt from the listed jumper position and then install the shunt in the same position such that both pins are bridged by the shunt.

**Table 3.1 System Jumper Descriptions**

| Jumper | Description  |
|--------|--|
| A      | <b>BIOS Clear</b><br>Returns BIOS settings to their factory defaults. Does not affect the Trusted Platform Module (TPM) state. |
| B      | <b>BIOS Recovery</b><br>Initiates the BIOS recovery mode to recover from a corrupted system BIOS.                              |
| C      | <b>Watchdog Disable</b><br>Completely disables the system watchdog.  |
| D      | <b>Password Disable</b><br>Bypasses the RTAC and BIOS passwords.   |
| E      | <b>SEL Operating System Factory Reset</b><br>Return to a factory default configuration.  |
| F      | Reserved   |
| G      | Reserved   |
| H      | Reserved   |

## Real-Time Clock and BIOS Battery

The SEL-3560 contains a button cell battery that is used to maintain BIOS settings and clock time when an external power source is disconnected.

### DANGER

Disconnect or de-energize all external connections before opening this device. Contact with hazardous voltages and currents inside this device can cause electrical shock resulting in injury or death.

### WARNING

Have only qualified personnel service this equipment. If you are not qualified to service this equipment, you can injure yourself or others, or cause equipment damage.

### CAUTION

There is danger of explosion if the battery is incorrectly replaced. Replace only with Panasonic BR2330A or equivalent recommended by manufacturer. See Owner's Manual for safety instructions. The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not recharge, disassemble, heat above 100°C or incinerate. Dispose of used batteries according to the manufacturer's instructions. Keep battery out of reach of children.

You can replace the real-time clock and BIOS battery in the SEL-3560. If your BIOS battery needs to be replaced, the time and date will revert to midnight 1/1/2009. You can confirm this by entering the BIOS on reboot and examining the **Event Log > View SMBIOS Event Log**. You will see a CMOS Battery Failure message. Perform the following steps to replace the battery:

- Step 1. Follow your company standard procedure to remove a device from service.
- Step 2. Disconnect power from the SEL-3560 retaining the chassis ground connection.
- Step 3. Disconnect any attached network and serial connections.
- Step 4. Disconnect any attached peripheral cabling such as audio cables, USB keyboards and mice cables, video cables, or alarm contact cabling.
- Step 5. Remove the SEL-3560 from the mounting location.
- Step 6. Ground the SEL-3560 to an ESD mat and follow ESD procedures to ground yourself to the ESD mat.
- Step 7. Remove the four screws for the right side panel to expose the drive slots.
- Step 8. Remove the SSD drive(s) shown in *Figure 3.6*.
- Step 9. Locate the battery at the front of the main board (see *Figure 3.1*).
- Step 10. Remove the spent battery from beneath the clip of the battery holder.
- Step 11. Replace the battery with an exact replacement.

Use a 3 V lithium coin cell, Panasonic BR2330A or equivalent. The positive side (+) of the battery faces up.

- Step 12. Reinstall the SATA drive(s) and reinstall the right-side panel.
- Step 13. Disconnect ESD mat connections.
- Step 14. Remount the SEL-3560 to the mounting location.
- Step 15. Reconnect any network and peripherals cabling disconnected in *Step 3* and *Step 4*.
- Step 16. Reconnect power to the SEL-3560.
- Step 17. Turn on the SEL-3560.
- Step 18. Follow instructions (press **<F2>** as you energize) to enter the BIOS and reset system date and time from **Main > System Date and System Time**.
- Step 19. Save settings and exit (**<F10>**).
- Step 20. Follow your company standard procedure to return the SEL-3560 to service.

## Random Access Memory (RAM) Slots

Each RAM slot accepts a single mini-UDIMM memory module with a capacity of 8 GB each. The SEL-3560-2 has two RAM slots to hold a maximum 16 GB of RAM. Memory modules are not field serviceable, as they require removal of the main board to access.

# PCI Expansion Slots

## NOTE


Expansion cards are positioned horizontally in the SEL-3560E, and the ports are numbered right-to-left.

PCI expansion slots are only available on the SEL-3560E, not the SEL-3560S. Be sure to select the right type of PCI Express card for your application. Typical consumer-rated expansion cards do not match the temperature rating of the SEL-3560E; therefore, they may negatively impact the total system reliability. See *Requirements on page 54* for recommendations. The SEL-3560S does not support MIRRORED BITS communications, IRIG-B, or SEL-2240 Axion I/O modules via EtherCAT.


**Table 3.2 Expansion Card Functionality (SEL-3560E Only)**

|                   | MIRRORED BITS | IRIG-B | EtherCAT |
|-------------------|---------------|--------|----------|
| <b>SEL-3390S8</b> | Yes           | Yes    | No       |
| <b>SEL-3390E4</b> | No            | No     | Yes      |
| <b>SEL-3390T</b>  | No            | Yes    | Yes      |


On the SEL-3560E, expansion port numbering starts on the right side of the card. Viewed from the rear, for example, serial ports for the SEL-3390S8 are numbered as shown in *Figure 3.3*, Ethernet ports for the SEL-3390E4 are numbered as shown in *Figure 3.4*, and Ethernet ports for the SEL-3390T are numbered as shown in *Figure 3.5*.

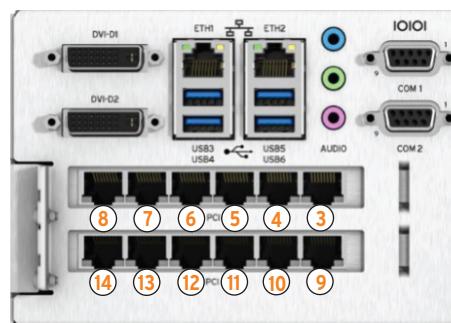

**Figure 3.3 Serial Port Enumeration With SEL-3390S8 Card**

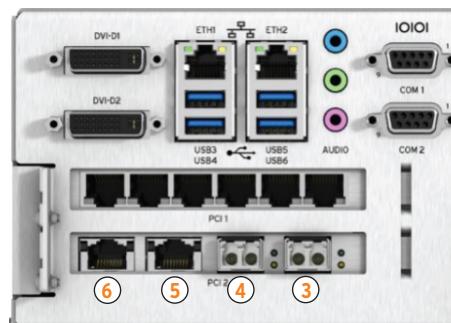

**Figure 3.4 Ethernet Port Enumeration With SEL-3390E4 Card**

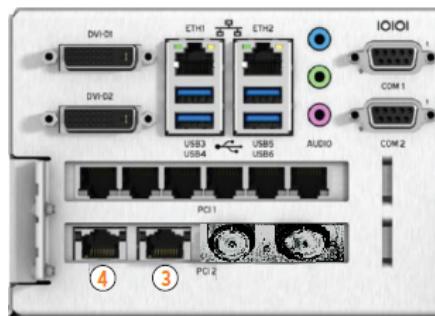

**Figure 3.5   Ethernet Port Enumeration With SEL-3390T Card**

## Removal and Installation

When installing or removing expansion cards, ensure that the system is shut down and the power supply is disconnected. Each expansion card in the SEL-3560E is secured to the chassis by a screw at the rear panel. Once installed, the foam pads on the expansion board and top panel hold the cards securely to resist shock and vibration.

PCIe cards with x1 interfaces can be plugged into the x4 slot (PCI 2) without affecting the performance of the card or the SEL-3560E.


## Requirements

Each expansion slot can accommodate a half-length, full-height expansion card per the PCIe specification. This allows a maximum card height of 107 mm (4.2 in) and maximum card length of 168 mm (6.6 in). The expansion slots are compliant with PCIe power requirements. A maximum of 25 W is provided to the PCIe x4 slot, and 10 W to the PCIe x1 slot. Exceeding these limits will adversely affect system performance and may lead to data loss and/or permanent damage.

Third-party PCIe expansion cards are not supported in the SEL-3560.

## SATA Drives

The SEL-3560 has a side-facing drive bay that can house as many as two 2.5-inch (laptop-sized) Serial ATA (SATA) drives, although at this time the SEL-3560 supports only one active drive. Refer to Requirements *Requirements on page 54* for recommended SATA drive types and capacities.

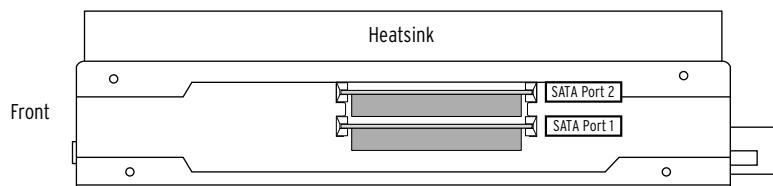

**Figure 3.6   SATA Drive Bay**

Third-party PCIe expansion cards are not supported in the SEL-3560.

## Drive Types

There are three types of SATA drives offered as factory-installed options for the SEL-3560: industrial-grade single-level cell (SLC) solid-state drives (SSDs), industrial-grade pseudo-SLC (pSLC) SSDs, and industrial-grade 3D triple-level cell (3D TLC) SSDs. The type of SSD you choose depends on your application.

SLC technology provides the highest level of endurance and reliability. SLC drives are suited for the most demanding applications and provide the best value for high-endurance applications in industrial environments. SLC SSDs from SEL carry the full SEL 10-year warranty.

pSLC drives provide high capacity at a lower cost but with reduced endurance. These drives are suited for industrial environments that require a large amount of drive space. pSLC SSDs from SEL carry a 5-year warranty.

3D TLC drives provide the highest capacities and lowest cost but have the lowest endurance. These drives are suitable for applications that do not require a significant amount of write/erase cycles. Industrial-grade 3D TLC SSDs are appropriate for industrial environments and carry a 5-year warranty.

For help in determining the best type of SSD for your application, download Application Note *AN2016-03: Determining Solid-State Drive Lifetimes for SEL Rugged Computers* from the SEL website.

## Removal and Installation

---

The drive slots are accessible by removing the right side panel. Each SATA drive is attached to a sled plate with four screws. The sleds each fit into a drive slot, allowing for easy insertion and removal of the drive. The SEL-3560 SATA drive slots are numbered with Port 1 being the bottom SATA drive slot and Port 2 being the top.

## Requirements

---

Although standard 2.5-inch form factor SATA drives will fit in the SEL-3560 RTAC, they typically will not meet environmental specifications and are therefore not supported by SEL. The RTAC SATA drive comes preformatted and programmed for the RTAC unit. Do not attempt to use additional SATA drives in your RTAC at this time.

**This page intentionally left blank**

---

---

## S E C T I O N   4

---

# BIOS Setup

## Overview


---

The SEL-3560 Real-Time Automation Controller (RTAC) contains a Phoenix SecureCore UEFI compliant BIOS, with a setup utility to configure hardware, I/O, peripheral, and boot options, and to check hardware status information. This section provides a brief description of the information and settings available in the BIOS setup. Detailed information about each setting is displayed on the BIOS setup main screen.

The factory-default BIOS configuration is optimal for most applications, so using the BIOS setup is typically not necessary. While it is usually safe to customize the BIOS settings to suit your application needs, it is possible to render the SEL-3560 inoperable with the wrong settings. If the system becomes inoperable after changing BIOS settings, refer to *Main Board on page 49* to access and use the BIOS reset main board jumper to reset the BIOS to its factory-default settings.

The BIOS setup supports access control by requiring username and password authentication before it can be accessed. Access control is disabled by default, allowing full read/write access to the BIOS setup without authentication. SEL recommends using the access control feature to prevent unauthorized access to the critical system settings in the BIOS. See *Security Menu on page 61* for information on how to enable and configure access control. If you cannot access the BIOS setup because of a forgotten username or password, access control can be disabled via the Password Disable main board jumper (see *System Jumpers on page 50*).

To enter the BIOS setup, connect a keyboard and monitor, apply power to the SEL-3560, and then immediately press **<F2>** before the operating system starts. The BIOS setup main screen will appear within a few seconds.

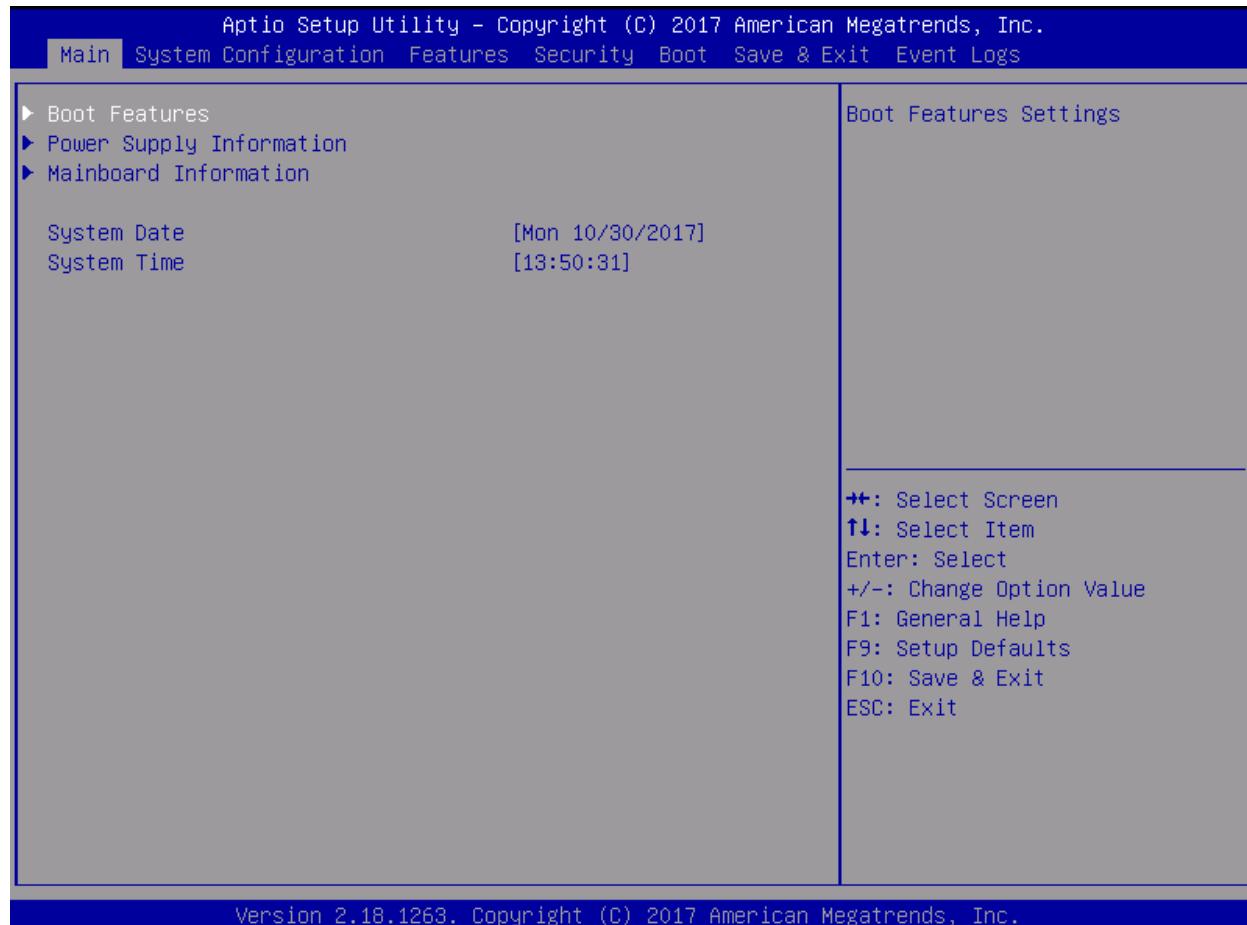

**Figure 4.1 BIOS Setup Main Screen**

Across the top of the BIOS setup main screen are top-level menu tabs. Under each menu tab are submenu items and setting values. Submenus are indicated by a triangular symbol to the left of the item name. The right side of the screen displays item-specific help for the currently selected item. The bottom of the screen displays the following information:

|                            |  |
|----------------------------|--|
| <b>Left/Right Arrow</b>    | Navigate between top-level tabs                            |
| <b>Up/Down Arrow</b>       | Select different settings and submenus in the current menu |
| <b>&lt;+&gt;/&lt;-&gt;</b> | Change the selected setting value                          |
| <b>&lt;Enter&gt;</b>       | Enter the selected settings or submenu                     |
| <b>&lt;Esc&gt;</b>         | Exit a submenu   |
| <b>&lt;F1&gt;</b>          | View the <b>General Help</b> screen                        |
| <b>&lt;F9&gt;</b>          | Change all settings to factory defaults                    |
| <b>&lt;F10&gt;</b>         | Save settings and exit setup                               |

## Main Menu

The **Main menu** tab is the first menu shown after entering the BIOS setup. The most commonly accessed BIOS features and options are accessible from this menu.

## Boot Features

**Boot Features** contains settings related to startup behavior. The state of the <Num Lock> key and the system watchdog on startup can be configured here. Disabling the watchdog can be useful during initial operating system installation or troubleshooting. Note that the watchdog can be disabled by using either the BIOS watchdog setting or the system jumpers (see *System Jumpers on page 50*). Legacy Mode can be enabled or disabled depending on whether your operating system (OS) supports UEFI or Legacy booting. Settings for the front-panel **LAMP TEST** and pinhole buttons enable them to behave like power and reset buttons. The default power state of the system can be configured to either automatically start up when power is applied, or to wait for the **LAMP TEST** button to be pushed.

## Mainboard Information

Use the **Mainboard Information** submenu to view the BIOS and firmware versions, processor type and speed, installed memory modules, and total system uptime and boot count.

## System Date and Time

The System Date and System Time settings are used for the SEL-3560 internal real-time clock (RTC). These are the same date and time settings used by the operating system after startup. Date and time adjustments in the BIOS setup affect the date and time in the operating system, and vice versa.

## System Configuration Menu

---

The **System Configuration** menu tab contains submenus for configuring advanced chipset and peripheral features. These settings should typically be left at default values unless a specific application requires changes to the settings. Changing settings in this menu can render the SEL-3560 inoperable.

## Intel Rapid Storage Technology

**Intel Rapid Storage Technology** (RST) provides access to view and modify the redundant array of independent disks (RAID) configuration of the installed SATA drives. Use this menu to create a new RAID volume, delete an existing one, or reset SATA drives to non-RAID so the drives can be used elsewhere. Intel RST stores the RAID information directly on the SATA drives, so a drive or set of drives can be moved from one SEL-3560 to another without changing the RAID configuration of the drives.

Note that this section is only present when the Legacy Mode setting in the Boot Features section is set to Disabled. When Legacy Mode is enabled, the Intel RST configuration utility must be accessed by pressing <Ctrl+I> when prompted during initial bootup.

## Intel Ethernet Connection

**Intel Ethernet Connection** displays details about the ETH1 network adapter, including MAC addresses and detailed chipset information. The **NIC Configuration** submenu provides link speed settings to disable autonegotiation and force a particular speed and duplex.

## USB Configuration

**USB Configuration** contains settings for the eight USB ports on the SEL-3560 (six external and two internal). Legacy and Mass Storage Driver Support settings are available to improve compatibility with operating systems that may have limited or no support for USB. USB Port Disable Override can be enabled to restrict access to each individual USB port. Do not disable all USB ports, or else you will lose the ability to connect a keyboard to access the system.

## Graphics Configuration

**Graphics Configuration** allows you to set the primary video output when a PCIe graphic adapter is installed. You can set either the Integrated Graphics Device (IGD) or PCIe device (Auto) as the primary graphics controller.

## HD Audio Configuration

**HD Audio Configuration** allows you to disable the integrated HD Audio codec, which may be useful when installing a PCIe audio device.

## Expansion Board Configuration

**Expansion Board Configuration** provides the ability to enable or disable each expansion slot and force the interface speed to PCIe Generation-1 for compatibility with some PCIe cards. (These settings do not apply to the SEL-3560 because it does not have PCIe expansion slots.)

## Network Configuration

**Network Configuration** contains settings to enable or disable the ETH1 and ETH2 Ethernet controllers, and to enable or disable Wake-on-LAN and PxE Network Boot for ETH1.

## SATA Configuration

**SATA Configuration** provides settings that configure the SATA controller. The SATA Mode setting is set to RAID by default to enable Intel RST RAID functions. Alternatively, you can set SATA Mode to AHCI for compatibility with operating systems that do not support Intel RST or disable the SATA controller if a PCIe storage device is used instead of SATA drives. This menu also provides a list of installed SATA drives.

## Processor Configuration

**Processor Configuration** allows you to enable or disable advanced features built into the Intel Xeon processor. These features include the number of active CPU cores, Hyper-Threading, SpeedStep, Turbo Mode, and Speed Shift Technology.

## Serial Port Configuration

**Serial Port Configuration** contains settings to disable the COM1 and COM2 ports and to enable the +5 V power COM port feature (see *Serial* on page 45). Console Redirection can also be enabled, which transmits screen data out the serial port for viewing and control using a remote serial-connected terminal.

## Features Menu

---

The **Features** menu tab contains submenus for configuring the Intel Active Management Technology (AMT) and Virtualization features built into the Intel Xeon processor and chipset.

## Manageability Settings

**Manageability Settings** provides settings to configure and manage the Intel AMT features built into the Intel Xeon processor and chipset. See *Section 5: Intel Active Management Technology (AMT)* for more information.

## Virtualization Configuration

**Virtualization Configuration** allows you to enable or disable advanced virtualization features built into the Intel Xeon processor, such as Intel Virtualization Technology (VT), VT for Directed I/O (VT-d), and Single Root I/O Virtualization (SR-IOV).

## Security Menu

---

The **Security** menu tab contains submenus for configuring the BIOS access control, Intel Software Guard Extensions, Secure Boot, and the Trusted Platform Module (TPM). SEL recommends using the access control feature to prevent unauthorized access to the critical system settings in the BIOS.

## Intel Software Guard Extensions

**Intel Software Guard Extensions** (SGX) is a set of CPU instructions that can be used by application software to prevent other applications or malware from accessing application data in system memory. This setting defaults to Software Controlled and can be set to Enabled or Disabled.

## Secure Boot

**Secure Boot** is a security mechanism that ensures the system boots using only software that is trusted by the system manufacturer or installer. From this menu, you can enable or disable Secure Boot and also perform key management.

## TPM Settings

**TPM Settings** allows you to enable or disable the TPM and to perform actions such as clearing the TPM. The TPM action selected is executed upon saving and exiting the BIOS setup.

## User Administration

**User Administration** allows you to set an Administrator password to prevent unauthorized access to BIOS Setup. When access control is disabled (i.e., no authentication required), anyone can access BIOS Setup and save settings changes. Select **Administrator Password** to set an Administrator account password, which will enable access control. After enabling access control, you must save the changes and exit the BIOS Setup. To disable access control, edit the Administrator password and set a blank or empty password.

## Boot Menu

---

The **Boot** menu tab contains a prioritized list of all bootable devices currently installed on the SEL-3560. One configurable Boot Option is displayed for each bootable device detected during the last startup. You can move devices up or down in the list of Boot Options by using the <+> and <-> keys or prevent booting from a device by disabling the boot option.

## Save & Exit Menu

---

The **Save & Exit** menu tab enables you to save or discard settings changes, load factory-default settings, or exit the BIOS Setup (with or without saving changes). You can also quickly save and exit the BIOS Setup from any screen by pressing **<F10>**.

## Event Logs Menu

---

The **Event Logs** menu tab provides access to the SMBIOS Event Log, which is where the BIOS stores information that can be used to troubleshoot boot problems. Use the **Change SMBIOS Event Log Settings** submenu to enable, disable, or clear the SMBIOS Event Log. Set the **Log System Boot Event** setting to **Enabled** to create a log entry every time the system boots.

## BIOS Updates

---

BIOS updates can be downloaded from the SEL-3560 product page on the SEL website at [selinc.com](http://selinc.com). These updates can typically be installed using tools within the operating system or by using UEFI shell tools; they will require a reboot for the update to complete. The BIOS update package will include detailed installation instructions in a README.txt file. Read these instructions carefully before performing the BIOS update.

## Recovery Mode

---

If the SEL-3560 system BIOS becomes corrupted, the SEL-3560 may fail to boot and become completely nonfunctional. If this happens, the BIOS recovery mode may be able to restore the BIOS to a working state. Setting the Recovery Mode jumper (see *System Jumpers on page 50*) enables the BIOS recovery mode. When recovery mode is enabled and you apply power, the SEL-3560 searches all attached USB drives for a BIOS CAP file (included with BIOS updates), then uses the file to reprogram the SEL-3560 system BIOS. The USB drive must be formatted with the FAT16 or FAT32 file system, the CAP file must be named B2081.cap and located in the root directory of the USB drive (not in a folder or subdirectory), and the version of the CAP file must be the same version or newer than the BIOS currently installed.

**This page intentionally left blank**

---

---

## S E C T I O N   5

---

# Intel Active Management Technology (AMT)

## Overview

---

Intel Active Management Technology (AMT) is a subset of the Intel vPro Technology present in the CPU of the SEL-3560 Real-Time Automation Controller (RTAC). It provides out-of-band access and management of the SEL-3560, even when the system is turned off. With integration into existing vPro/AMT-aware asset management systems, you can have complete access to the SEL-3560 from any remote location. This access includes power state management, disk redirection, and serial console access via Ethernet.

## AMT Features

---

This section describes the most common features of AMT. See the Intel website for a complete description and support resources.

## Web Interface

The Intel AMT has the ability to share the Ethernet interface of the SEL-3560, which is how all out-of-band management is performed. After AMT provisioning (see *Enabling AMT on page 66*), you can use a web browser to reach the AMT web interface of the SEL-3560 from another workstation.

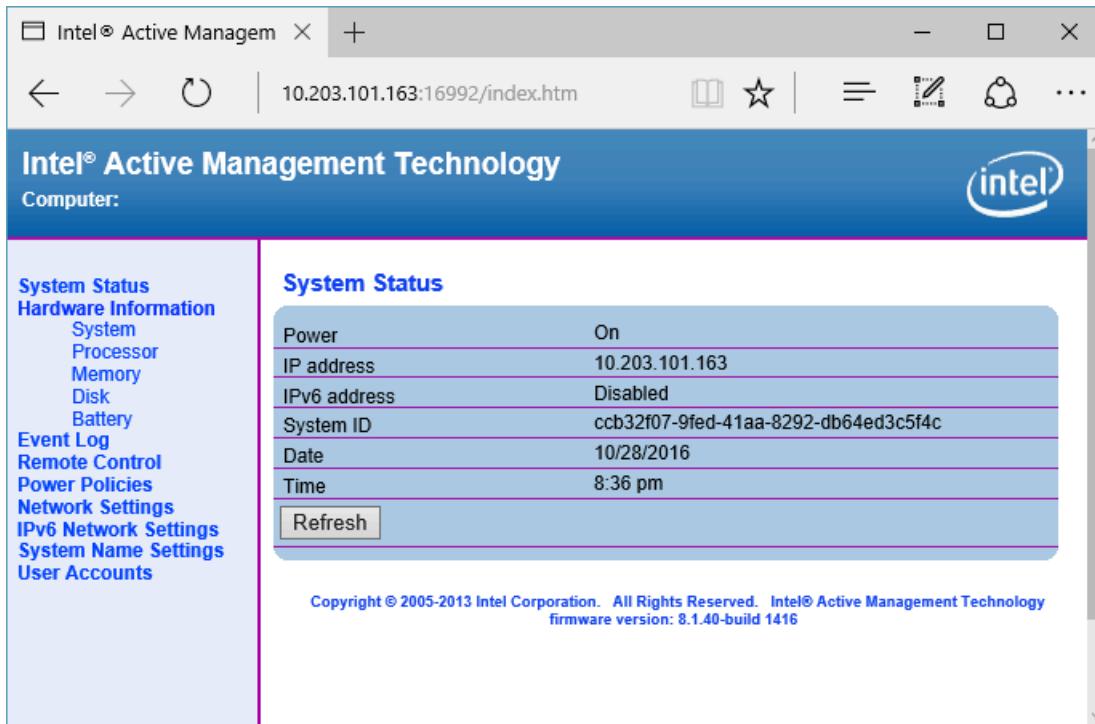


Figure 5.1 Intel AMT Web Interface

You can view system status, hardware information (including main board, CPU, RAM, and disk status), and the AMT event log in the web interface. You can also configure power policies, network settings, and AMT user account settings. You can also turn the system on and off through the **Remote Control** menu.

## Remote Control

One of the most useful features of AMT is the ability to have complete remote access to the SEL-3560. This includes starting or rebooting the system and redirecting disks (including CD drives or CD image ISO files) from your local workstation to the remote SEL-3560. It also includes an IP KVM feature that allows you to see the display and control the keyboard and mouse of the SEL-3560.

## Remote Monitoring

AMT allows a remote user or control system to query the SEL-3560 for statistics and device status.

## Enabling AMT

Use the BIOS setup to enable AMT on the SEL-3560. Enter the BIOS setup by pressing <F2> at the startup screen when you initially start the SEL-3560, then perform the following steps to enable AMT.

Step 1. Select the **Features** tab, then select **Manageability Settings** and press <Enter>.

**NOTE**


When AMT is disabled, you will only see the top-level option to enable or disable **Intel (R) AMT**.

- Step 2. To enable AMT, set the **Intel AMT** setting to **Enabled**.

It is safe to ignore most of the other settings because they are all accessible through the main AMT configuration interface.

- Step 3. To open the AMT configuration interface, set **Intel AMT Setup** to **Enabled**.

- Step 4. Press <F10> and select **Yes** to save your changes and restart the system. When the system performs its normal startup process the AMT main menu will appear as shown in *Figure 5.2*.

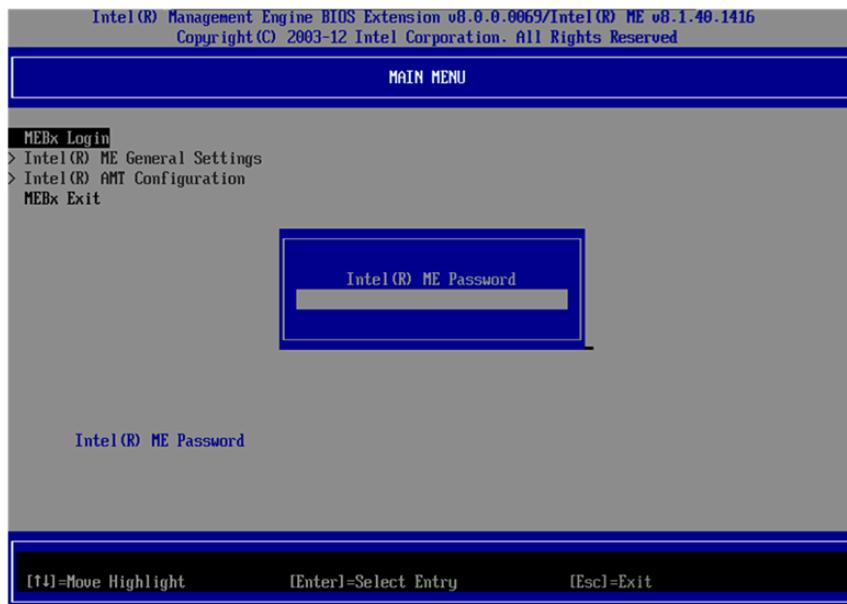

**Figure 5.2** Intel AMT Main Menu

- Step 1. Select **MEBx Login** and press <Enter>. You will then be prompted for a password.
- Step 2. Type the AMT default password **admin**. You will then be prompted to create a new password and confirm it.

**NOTE**

Choose a unique and sufficiently complex password.

Once you type in and confirm your new password you will be brought back to the AMT main menu, but the **MEBx Login** option will no longer appear.

- Step 3. Select **Intel (R) AMT Configuration** and press <Enter> to navigate to the AMT configuration menu.
- Step 4. Set the **Manageability Features Selection** setting to **Enabled**.
- Step 5. To enable remote access without a local user present for consent, select **User Consent**, then select **User Opt-in** and change the value to **None**.

- Step 6. Select **Network Setup > TCP/IP Settings > Wired LAN IPV4 Configuration**. Here you can set a static IP address. If you prefer Dynamic Host Configuration Protocol (DHCP), leave the **DHCP Mode** set to **Enabled**.
- Step 7. Once you have configured the IP information, press **<Esc>** twice to go back to the main AMT network configuration menu.
- Step 8. Select **Intel (R) ME Network Name Settings** to choose a host name for the system and to specify whether you would like to share these settings with an operating system.
- Step 9. You can also choose to enable **Dynamic DNS Updates** so compatible DNS servers will automatically update the host name to IP address mapping without the need to specify a static IP address.

With AMT now configured, you can use any of the available AMT tools to exercise complete out-of-band management with the SEL-3560.

---

---

## S E C T I O N   6

---

# Factory Reset

## Override Login

---

The SEL-3560 RTAC has a jumper that allows you to override the requirement to use a user password. SEL recommends using this jumper only when necessary to restore a unit when the administrative password is forgotten. For security reasons, you should not operate the SEL-3560 without a password.

**NOTE**

ODBC and other tools may still prompt you for a password when the SEL-3560 password override is enabled. You can enter any text for a password in those situations.

To override login username/password verification, perform the following steps:

 **DANGER**

Disconnect or de-energize all external connections before opening this device. Contact with hazardous voltages and currents inside this device can cause electrical shock resulting in injury or death.

 **CAUTION**

The device contains devices sensitive to Electrostatic Discharge (ESD). When working on the device with the front panel removed, work surfaces and personnel must be properly grounded or equipment damage may result.

- Step 1. Locate the control jumpers as discussed in *Section 3: Hardware Setup and Serviceability*.
- Step 2. Move Jumper D to the ON position.
- Step 3. Replace the drive (if removed).
- Step 4. Apply power to the unit. Wait until the **ENABLED** LED is on before proceeding to the next step.
- Step 5. Log in to the SEL-3560 via the web interface with username Edison and any password. The password will be ignored. **Edison** is an administrative account that is only active when Jumper D is in the ON position. Previously configured user accounts will remain intact.
- Step 6. Make any user account changes you need to make.
- Step 7. Turn off the SEL-3560, access the jumpers, and move Jumper D to the OFF position.
- Step 8. Replace the top cover, reinstall all connectors, and energize the unit.

## Reset to Factory Settings


---

You can reset the SEL-3560 to factory-default settings via the web interface or by using a hardware jumper. All programming, user accounts, logs, etc., will be lost, and the procedure is not reversible.

## Reset to Factory Settings

Perform the following steps to reset the SEL-3560 to factory-default settings via the web interface:

- Step 1. Log in to the web interface.
- Step 2. Click on **Device Reset**.
- Step 3. Check **Reset To Factory Default Settings** (see *Figure 6.1*).
- Step 4. Click **Submit**.

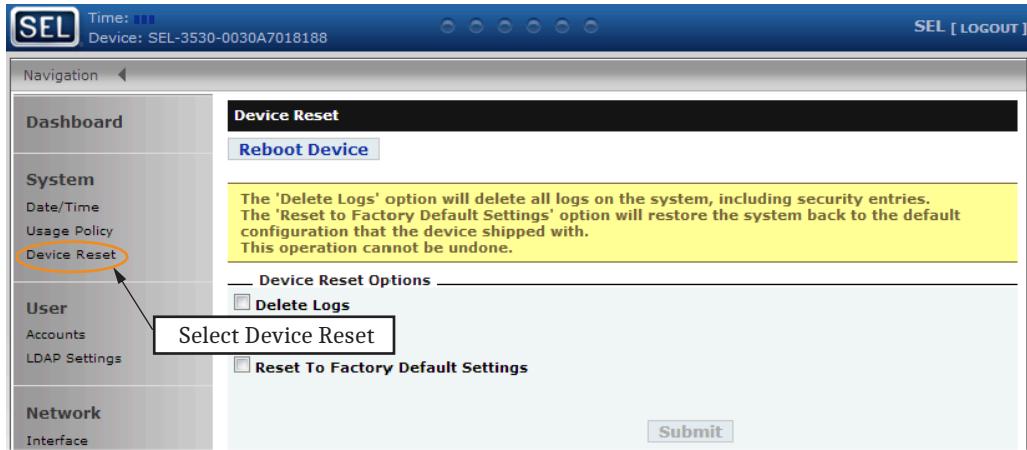

**Figure 6.1 Factory Reset Via Web Interface**

### ⚠ DANGER

Disconnect or de-energize all external connections before opening this device. Contact with hazardous voltages and currents inside this device can cause electrical shock resulting in injury or death.

### ⚠ CAUTION

The device contains devices sensitive to Electrostatic Discharge (ESD). When working on the device with the front panel removed, work surfaces and personnel must be properly grounded or equipment damage may result.

Perform the following steps to reset the SEL-3560 to factory defaults using the internal control switch only as a last attempt to recover from a failed state.

- Step 1. Locate the control jumpers as discussed in *Section 3: Hardware Setup and Serviceability*.
- Step 2. Move Jumper E to the ON position in the switch block.
- Step 3. Replace the drive (if removed).
- Step 4. Apply power to the unit. Wait until the **ENABLED** LED has transitioned to green before proceeding to the next step.
- Step 5. Turn off the RTAC, access the jumpers, and return Jumper E to the OFF position.
- Step 6. Replace the top cover, reinstall all connectors, and energize the unit.

---

---

## A P P E N D I X   A

---

# Firmware and Manual Versions

## Firmware

---

### Determining the Firmware Version

*Appendix A* in the ACCELERATOR RTAC SEL-5033 Software Instruction Manual lists the firmware versions, a description of modifications, and the instruction manual date code that corresponds to firmware versions.

## Instruction Manual

---

The date code at the bottom of each page of this manual reflects the creation or revision date.

*Table A.1* lists the instruction manual versions and revision descriptions. The most recent instruction manual version is listed first.

**Table A.1 Instruction Manual Revision History**

| Date Code | Summary of Revisions  |
|-----------|---|
| 20241218  | <b>Section 1</b><br>► Updated <i>Specifications</i> .   |
| 20241217  | <b>General</b><br>► Removed the part number.  |
| 20230623  | <b>Section 1</b><br>► Updated <i>Specifications</i> .   |
| 20221221  | <b>Section 1</b><br>► Added UKCA Mark to <i>Specifications</i> .  |
| 20220830  | <b>Section 1</b><br>► Updated <i>Connected Devices</i> and <i>IRIG-B Generation in Features</i> .<br>► Updated <i>Table 1.2: SEL Accessories List</i> .<br><b>Section 2</b><br>► Updated <i>Table 2.2: EIA-232 Serial Port Connector Pin Definition</i> .<br><b>Section 3</b><br>► Updated <i>Figure 3.3: Serial Port Enumeration With SEL-3390E4 Card</i> .<br>► Updated <i>Figure 3.4: Ethernet Port Enumeration With SEL-3390E4 Card</i> .<br>► Updated <i>Figure 3.5: Ethernet Port Enumeration With SEL-3390T Card</i> .<br><b>Section 6</b><br>► Updated <i>Reset to Factory Settings</i> . |
| 20220729  | <b>Section 1</b><br>► Added <i>Simple Network Time Protocol (SNTP) Accuracy</i> under <i>General</i> in <i>Specifications</i> .   |

| Date Code | Summary of Revisions   |
|-----------|--|
| 20220714  | <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Connected Devices</i>.</li> <li>► Updated <i>Models, Options, and Accessories</i>.</li> <li>► Updated <i>Specifications</i>.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Ethernet</i>.</li> </ul> <p><b>Section 3</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Table 3.2: Expansion Card Functionality (SEL-3560E Only)</i>.</li> <li>► Updated <i>PCI Expansion Slots</i>.</li> <li>► Added <i>Figure 3.5: SEL-3390T Port Numbering</i>.</li> </ul>   |
| 20220519  | <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Added OPC UA to list of server protocols under <i>Automation Features</i> in <i>Specifications &gt; General</i>.</li> </ul>   |
| 20211229  | <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Features</i>.</li> <li>► Updated <i>Models, Options, and Accessories</i>.</li> <li>► Updated <i>Specifications</i>.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Video</i>.</li> <li>► Updated <i>Table 2.1: Keyboard and Mouse Shortcuts</i>.</li> <li>► Updated <i>Serial</i>.</li> <li>► Updated <i>Initial Setup</i>.</li> </ul> <p><b>Section 3</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Table 3.1: System Jumper Descriptions</i>.</li> <li>► Updated <i>Real-Time Clock and BIOS Battery</i>.</li> <li>► Updated <i>Random Access Memory (RAM) Slots</i>.</li> <li>► Updated <i>Expansion Card Functionality (SEL-3560E Only)</i>.</li> <li>► Added <i>Drive Types</i>.</li> </ul> <p><b>Section 4</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Overview, Main Menu, Advanced Menu, Security Menu, Boot Order Menu and Exit Menu</i>.</li> </ul> <p><b>Section 5</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Enabling ATM</i>.</li> </ul> |
| 20210720  | <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Conducted and Radiated Emissions</i> in <i>Specifications</i>.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Serial in Rear Panel</i>.</li> </ul>   |
| 20210406  | <p><b>General Edit</b></p> <ul style="list-style-type: none"> <li>► Updated battery model to Panasonic BR2330A throughout manual.</li> </ul>   |
| 20200224  | <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Specifications</i>.</li> </ul>   |
| 20190816  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Serial in Rear Panel</i>.</li> </ul>   |
| 20180718  | <ul style="list-style-type: none"> <li>► Initial version.</li> </ul>   |

# ACCELERATOR RTAC SEL-5033 Software

## Instruction Manual



20250916

**SEL SCHWEITZER ENGINEERING LABORATORIES**

© 2011–2025 Schweitzer Engineering Laboratories, Inc. All rights reserved.

Content subject to change without notice. Unless otherwise agreed in writing, all SEL product sales are subject to SEL's terms and conditions located here: <https://selinc.com/termsandconditions/>.

EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

# Table of Contents

## Section 1: Getting Started

|  |     |
|--|-----|
| Overview and Features.....                       | 99  |
| Logging in to the ACCELERATOR RTAC Database..... | 100 |
| Start Page.....                                  | 101 |
| Creating a New Project.....                      | 103 |
| Open/Edit an Existing Project.....               | 110 |
| Tag Selector.....                                | 111 |
| Save, Send a Project, and Go Online.....         | 112 |
| Creating and Augmenting Projects With XML.....   | 115 |
| Backup/Restore Projects.....                     | 118 |
| Converting Projects.....                         | 119 |
| Compare ACCELERATOR RTAC Projects.....           | 120 |
| Connection Directory.....                        | 124 |
| RTAC Database on a Shared Server.....            | 124 |
| Startup Switches.....                            | 126 |
| Software Install, Uninstall, and Backup.....     | 127 |
| Database Maintenance.....                        | 128 |

## Section 2: Communications

|  |     |
|--|-----|
| Overview.....                                    | 129 |
| Comm Monitor.....                                | 143 |
| SCADA Protocol Redundancy.....                   | 148 |
| Communication Protocol Device Count Support..... | 149 |
| CDC Type 2.....                                  | 151 |
| Continuous Waveform Streaming Protocol.....      | 156 |
| Courier Protocol.....                            | 160 |
| CP2179.....                                      | 162 |
| DNP3.....  | 167 |
| eDNA.....  | 190 |
| EtherCAT.....                                    | 196 |
| EtherNet/IP.....                                 | 303 |
| File Transfer Protocol.....                      | 325 |
| Flex Parse Protocol.....                         | 327 |
| IEC 60870-5-101 and -104.....                    | 338 |
| IEC 60870-5-103.....                             | 395 |
| IEC 61850.....                                   | 404 |
| IEEE C37.118 Synchrophasors.....                 | 451 |
| Landis and Gyr LG 8979.....                      | 472 |
| MIRRORED BITS.....                               | 481 |
| Modbus.....                                      | 487 |
| Network Global Variable List (NGVL).....         | 498 |
| OPC UA.....                                      | 501 |
| SEL Protocol.....                                | 513 |
| SES-92.....                                      | 554 |
| SNMP.....  | 567 |
| Web API Communications.....                      | 573 |

## Section 3: Tag Processor

|                               |     |
|-------------------------------|-----|
| Overview.....                 | 579 |
| Tag Processor Data Entry..... | 580 |

|                                      |     |
|--------------------------------------|-----|
| Special Tag Processor Functions..... | 596 |
|--------------------------------------|-----|

## **Section 4: Engineering Access**

|                       |     |
|-----------------------|-----|
| Overview.....         | 613 |
| Configuration.....    | 613 |
| POU Pin Settings..... | 628 |

## **Section 5: Web Interface and Reports**

|   |     |
|---|-----|
| Overview.....                                   | 629 |
| Web HMI and Dashboard Settings.....             | 630 |
| Kiosk Feature.....                              | 631 |
| Web Proxy.....                                  | 633 |
| Network Utilities.....                          | 634 |
| Viewing and Troubleshooting Connected IEDs..... | 635 |
| Live Data.....                                  | 639 |
| Log Settings.....                               | 643 |
| Viewing Logs Via Web Interface.....             | 648 |
| Upload Projects From the Web Interface.....     | 650 |
| RAID Support and Configuration.....             | 651 |

## **Section 6: Axion Bay Control and SEL Touchscreen**

|  |     |
|--|-----|
| Overview.....                                    | 655 |
| Navigating SEL Touchscreen Applications.....     | 655 |
| ACCELERATOR RTAC Settings and Configuration..... | 676 |

## **Section 7: Security and Account Management**

|  |     |
|--|-----|
| Overview.....  | 687 |
| Ethernet Security.....                                     | 687 |
| ACCELERATOR RTAC Software Passwords and User Accounts..... | 698 |
| RTAC Web Interface User Accounts.....                      | 702 |
| Centralized User Accounts With LDAP.....                   | 710 |
| Centralized User Accounts With RADIUS.....                 | 716 |
| Security Logging.....                                      | 718 |
| Syslog.....  | 721 |

## **Section 8: Time Synchronization**

|                                    |     |
|------------------------------------|-----|
| Overview.....                      | 725 |
| Precision Time Protocol (PTP)..... | 725 |
| Time Source Settings.....          | 728 |
| Source Time Stamps.....            | 732 |

## **Section 9: Custom Logic**

|                                       |     |
|---------------------------------------|-----|
| Overview.....                         | 735 |
| Logic in the Tag Processor.....       | 735 |
| IEC 61131-3 Programming Overview..... | 735 |
| Creating User Logic.....              | 742 |

## **Section 10: Extensions**

|                                   |     |
|-----------------------------------|-----|
| 87L Comm Monitor.....             | 752 |
| CommProc Converter.....           | 758 |
| CtPt Monitor.....                 | 767 |
| Digital Fault Recorder.....       | 786 |
| DMA Link.....                     | 818 |
| Dynamic Disturbance Recorder..... | 825 |
| Email Plus.....                   | 834 |
| Falling Conductor Protection..... | 837 |

|                          |     |
|--------------------------|-----|
| FTPSync.....             | 842 |
| Grid Connect.....        | 845 |
| Indirect Tagging.....    | 860 |
| MMS File Transfer.....   | 867 |
| MQTT Client.....         | 869 |
| Protection Elements..... | 872 |
| Recording Triggers.....  | 881 |
| Report Generator.....    | 892 |
| Simple Tag Mapper.....   | 896 |
| Syslog Collector.....    | 915 |

## Section 11: Testing and Troubleshooting

|                         |     |
|-------------------------|-----|
| Overview.....           | 917 |
| Self-Test.....          | 917 |
| Using Online Debug..... | 919 |
| Watchdog.....           | 925 |
| User Sessions.....      | 927 |
| System Tags.....        | 928 |
| Troubleshooting.....    | 932 |

## Appendix A: Firmware and Manual Versions

|                         |      |
|-------------------------|------|
| Firmware.....           | 945  |
| ACSELERATOR RTAC.....   | 1031 |
| ICD File Revisions..... | 1040 |
| Instruction Manual..... | 1040 |

## Appendix B: IEC 61131-3 Programming Reference

|  |      |
|--|------|
| Overview.....                              | 1059 |
| IEC Operands.....                          | 1059 |
| IEC Operators and Extending Functions..... | 1065 |
| Predefined Function Blocks.....            | 1109 |
| Instructions.....                          | 1127 |
| Declarations.....                          | 1132 |
| Data Types.....                            | 1137 |

## Appendix C: Firmware Upgrade Instructions

|   |      |
|---|------|
| Overview.....                           | 1161 |
| Settings Read.....                      | 1162 |
| ACSELERATOR RTAC Upgrade Procedure..... | 1163 |
| RTAC Web Upgrade Procedure.....         | 1168 |
| Analog Module Upgrade Procedure.....    | 1169 |
| Settings Restore.....                   | 1172 |
| Technical Support.....                  | 1174 |

## Appendix D: Configure Dynamic Disturbance and Fault Recording Systems

|                                   |      |
|-----------------------------------|------|
| Overview.....                     | 1175 |
| System Components.....            | 1176 |
| RTAC and Axion Configuration..... | 1177 |

## Appendix E: EtherCAT Overview

|   |      |
|---|------|
| Evolution of Fieldbus I/O Networks..... | 1181 |
| Development of EtherCAT.....            | 1181 |
| EtherCAT Technology.....                | 1182 |

## Appendix F: Cybersecurity Features

|  |      |
|--|------|
| exe-GUARD.....                             | 1185 |
| Introduction and Security Environment..... | 1185 |
| Version Information.....                   | 1186 |
| Commissioning and Decommissioning.....     | 1186 |
| External Interfaces.....                   | 1187 |
| Access Controls.....                       | 1190 |
| Logging Features.....                      | 1194 |
| Backup and Restore.....                    | 1195 |
| Malware Protection Features.....           | 1197 |
| Product Updates.....                       | 1197 |
| Contact SEL.....                           | 1198 |

# List of Figures

|   |     |
|---|-----|
| Figure 1.1 ACSELERATOR RTAC Login Screen.....                     | 101 |
| Figure 1.2 ACSELERATOR RTAC Start Page.....                       | 101 |
| Figure 1.3 ACSELERATOR RTAC Project Creation Interface.....       | 103 |
| Figure 1.4 Project View.....                                      | 104 |
| Figure 1.5 Application Button and Quick Access Toolbar.....       | 108 |
| Figure 1.6 Docking Windows.....                                   | 109 |
| Figure 1.7 Reset Docked Windows.....                              | 109 |
| Figure 1.8 Tag Selector.....                                      | 111 |
| Figure 1.9 Project Tree Device Communication Status.....          | 114 |
| Figure 1.10 Export to XML Window.....                             | 115 |
| Figure 1.11 Export Selection to XML.....                          | 116 |
| Figure 1.12 Import XML Window.....                                | 117 |
| Figure 1.13 Import XML Items.....                                 | 117 |
| Figure 1.14 Import XML Items—Setting Value Changed.....           | 118 |
| Figure 1.15 Project Backup and Restore.....                       | 119 |
| Figure 1.16 Convert a Project.....                                | 120 |
| Figure 1.17 Compare Window Components.....                        | 122 |
| Figure 1.18 Logging In to Database Server.....                    | 125 |
| Figure 2.1 Select Serial or IP Client Connection.....             | 134 |
| Figure 2.2 Example Serial Client Settings.....                    | 135 |
| Figure 2.3 Select Serial or IP Server Connection.....             | 137 |
| Figure 2.4 Example Serial Server Settings.....                    | 138 |
| Figure 2.5 Using a Tag Filter.....                                | 142 |
| Figure 2.6 View Tags Online.....                                  | 143 |
| Figure 2.7 Comm Monitor Display Fields.....                       | 145 |
| Figure 2.8 SCADA Synchronization.....                             | 148 |
| Figure 2.9 Add CDC Type 2 Client.....                             | 151 |
| Figure 2.10 Add CDC Type 2 Tags.....                              | 152 |
| Figure 2.11 Add CDC Type 2 Tags.....                              | 155 |
| Figure 2.12 CWS Data Access IEC 61131 Example.....                | 158 |
| Figure 2.13 Insert CP2179 Client.....                             | 162 |
| Figure 2.14 Add CP2179 Client Tags.....                           | 164 |
| Figure 2.15 Insert DNP Client Device.....                         | 167 |
| Figure 2.16 Add DNP Client Tags.....                              | 168 |
| Figure 2.17 DNP Client Custom Requests.....                       | 170 |
| Figure 2.18 Insert DNP Server Device.....                         | 171 |
| Figure 2.19 Add DNP Server Map.....                               | 173 |
| Figure 2.20 Select DNP Shared Map.....                            | 173 |
| Figure 2.21 DNP Server Dial-Out.....                              | 174 |
| Figure 2.22 Insert eDNA Client Device.....                        | 191 |
| Figure 2.23 Add eDNA Client Tags.....                             | 192 |
| Figure 2.24 Mapping eDNA Client Tags.....                         | 194 |
| Figure 2.25 RTAC Ethernet Interfaces.....                         | 197 |
| Figure 2.26 Configure a Dedicated EtherCAT Port.....              | 198 |
| Figure 2.27 Results of EtherCAT Configuration.....                | 199 |
| Figure 2.28 EtherCAT Port Unavailable for Other Applications..... | 199 |
| Figure 2.29 Adding SEL-2240 I/O Modules to a Project.....         | 200 |
| Figure 2.30 Creating Custom Project Folders.....                  | 202 |
| Figure 2.31 Moving an Object Between Folders in Project View..... | 203 |
| Figure 2.32 Changing Object Sequence in Project View.....         | 203 |

|  |     |
|--|-----|
| Figure 2.33 EtherCAT Discovery.....  | 204 |
| Figure 2.34 EtherCAT Topology Discovery Login.....   | 204 |
| Figure 2.35 EtherCAT Topology Discovered.....  | 205 |
| Figure 2.36 Overwrite Existing Network.....  | 206 |
| Figure 2.37 Power Coupler and I/O Module Diagnostic Tags.....                                      | 206 |
| Figure 2.38 Power Coupler and I/O Module Properties.....   | 207 |
| Figure 2.39 Choose Power Coupler Options.....  | 208 |
| Figure 2.40 Insert an SEL-2244 Digital Input Module.....   | 209 |
| Figure 2.41 Digital Inputs Tab for the SEL-2244 Digital Input Module.....                          | 209 |
| Figure 2.42 Changing Voltage Type Setting for Digital Input Module.....                            | 210 |
| Figure 2.43 DC Mode Processing.....  | 211 |
| Figure 2.44 Timing Diagram When Input Changes From the Deasserted State to the Asserted State..... | 212 |
| Figure 2.45 Timing Diagram When Input Changes From the Asserted State to the Deasserted State..... | 213 |
| Figure 2.46 AC Mode Processing.....  | 213 |
| Figure 2.47 Timing Diagram for Debounce Timer Operation When Operating in AC Mode.....             | 214 |
| Figure 2.48 Creating a Counter Function From a Digital Input.....                                  | 215 |
| Figure 2.49 Insert an SEL-2244 Digital Output Module.....  | 215 |
| Figure 2.50 Pulse Train Duration.....  | 216 |
| Figure 2.51 Pulsing an Asserted Output.....  | 216 |
| Figure 2.52 Interrupting a Pulse With a Clear Command.....   | 216 |
| Figure 2.53 New Pulse Config onDur = 0.....  | 216 |
| Figure 2.54 New Pulse Config numPls = 0.....   | 217 |
| Figure 2.55 New Pulse Config offDur = 0.....   | 217 |
| Figure 2.56 Digital Output Module Tag Attributes.....  | 217 |
| Figure 2.57 Tag Processor for Trip-Close Pair Example.....   | 218 |
| Figure 2.58 Placement of Loading Resistor.....   | 218 |
| Figure 2.59 Insert an SEL-2245 DC Analog Input Module.....   | 219 |
| Figure 2.60 Analog Input Range Selection.....  | 219 |
| Figure 2.61 Waveform Record Retrieval.....   | 223 |
| Figure 2.62 SYNCHROWAVE Event Display Waveform.....  | 223 |
| Figure 2.63 Insert an SEL-2245-22 DC Analog Input Extended Range Module.....                       | 225 |
| Figure 2.64 SEL-2245-22 Settings Tab (DC Mode).....  | 225 |
| Figure 2.65 SEL-2245-22 Settings Tab (AC Mode).....  | 228 |
| Figure 2.66 AC Mode Tag Settings.....  | 229 |
| Figure 2.67 Waveform Record Retrieval.....   | 231 |
| Figure 2.68 SYNCHROWAVE Event Display Waveform.....  | 232 |
| Figure 2.69 Insert an SEL-2245-221 4 LEA Module.....   | 233 |
| Figure 2.70 LEA Module Settings.....   | 234 |
| Figure 2.71 LEA Tag Enable Settings.....   | 236 |
| Figure 2.72 EtherCAT Bandwidth Exceeded.....   | 237 |
| Figure 2.73 Waveform Record Retrieval.....   | 239 |
| Figure 2.74 SYNCHROWAVE Event Display Waveform.....  | 240 |
| Figure 2.75 Insert an SEL-2245-3 DC Analog Output Module.....                                      | 240 |
| Figure 2.76 Hold During a Ramp Process.....  | 243 |
| Figure 2.77 Retriggering a Ramp During a Ramp Process.....   | 244 |
| Figure 2.78 Insert an SEL-2245-4 CT/PT Analog Input Module.....                                    | 245 |
| Figure 2.79 CT/PT Module Settings.....   | 246 |
| Figure 2.80 CT/PT Tag Enable Settings.....   | 247 |
| Figure 2.81 EtherCAT Bandwidth Exceeded.....   | 248 |
| Figure 2.82 CT/PT Simple Tag to Complex Tag Mapping.....   | 248 |
| Figure 2.83 Waveform Record Retrieval.....   | 250 |
| Figure 2.84 SYNCHROWAVE Event Display Waveform.....  | 251 |
| Figure 2.85 Insert an SEL-2245-411 4 CT/4 LEA Module.....  | 252 |
| Figure 2.86 CT/LEA Module Settings.....  | 253 |
| Figure 2.87 CT/LEA Tag Enable Settings.....  | 254 |

|   |     |
|---|-----|
| Figure 2.88 EtherCAT Bandwidth Exceeded.....                                    | 255 |
| Figure 2.89 Waveform Record Retrieval.....                                      | 257 |
| Figure 2.90 SYNCHROWAVE Event Display Waveform.....                             | 258 |
| Figure 2.91 Insert an SEL-2245-42 AC Protection Module.....                     | 259 |
| Figure 2.92 PRCTPT Module Settings.....   | 260 |
| Figure 2.93 PRCTPT Tag Enable Settings.....                                     | 262 |
| Figure 2.94 EtherCAT Bandwidth Exceeded.....                                    | 262 |
| Figure 2.95 Configure PRCTPT Frequency Groups.....                              | 263 |
| Figure 2.96 AC Protection Module Simple Tag to Complex Tag Mapping.....         | 263 |
| Figure 2.97 Event Record for the SEL-2245-42 AC Protection Module.....          | 265 |
| Figure 2.98 Simple Rising-Edge Triggered Event Recordings.....                  | 265 |
| Figure 2.99 Rising-Edge Trigger Extended Event Recording.....                   | 266 |
| Figure 2.100 Level Trigger Extended Event Recording.....                        | 266 |
| Figure 2.101 Waveform Record Retrieval.....                                     | 267 |
| Figure 2.102 SYNCHROWAVE Event Display Waveform.....                            | 268 |
| Figure 2.103 Insert a New Recording Group.....                                  | 269 |
| Figure 2.104 Select Modules for Recording Group.....                            | 269 |
| Figure 2.105 Configure Recording Group Oscillography Settings.....              | 270 |
| Figure 2.106 EtherCAT Modules Included in the Recording Group.....              | 271 |
| Figure 2.107 Digital Channel Settings.....                                      | 271 |
| Figure 2.108 Analog Channel Settings.....                                       | 272 |
| Figure 2.109 Add Custom Channels.....   | 272 |
| Figure 2.110 Custom Channel Settings.....                                       | 273 |
| Figure 2.111 Calculation Settings.....  | 273 |
| Figure 2.112 RecordingGroupX POU Pin Settings.....                              | 274 |
| Figure 2.113 RecordingGroupX Controller.....                                    | 274 |
| Figure 2.114 Reports > Continuous Recording Groups.....                         | 275 |
| Figure 2.115 Available Continuous Recording Groups.....                         | 275 |
| Figure 2.116 Downloading Continuous Recording Group Data.....                   | 276 |
| Figure 2.117 Adding Continuous Recording Groups.....                            | 276 |
| Figure 2.118 Continuous Recording Group Sources.....                            | 277 |
| Figure 2.119 Continuous Recording Group Custom Channels.....                    | 277 |
| Figure 2.120 struct_SampleStream Usage Example.....                             | 280 |
| Figure 2.121 struct_ChannelInfo Usage Example.....                              | 280 |
| Figure 2.122 Harmonic and Interharmonic Subgroups.....                          | 283 |
| Figure 2.123 SEL-2245-42 Harmonic Settings.....                                 | 284 |
| Figure 2.124 Opening the Node Connections Editor.....                           | 288 |
| Figure 2.125 Configuring Disable on Network Error Setting.....                  | 289 |
| Figure 2.126 Attach a Device to a Node.....                                     | 290 |
| Figure 2.127 Adding a Node to the Project.....                                  | 291 |
| Figure 2.128 Axion System Using an External RTAC and Single Power Couplers..... | 292 |
| Figure 2.129 Setting an Input Connection to an External RTAC.....               | 293 |
| Figure 2.130 Connection From Node 1 to Node 2.....                              | 293 |
| Figure 2.131 Connection From Node 2 to Node 3.....                              | 294 |
| Figure 2.132 Axion System Using an SEL-2241 RTAC and Single Power Couplers..... | 295 |
| Figure 2.133 Node Connection Editor Results for System in Figure 2.132.....     | 295 |
| Figure 2.134 Axion System Using an External RTAC and Dual Power Couplers.....   | 296 |
| Figure 2.135 Node Connection Editor Results for System in Figure 2.134.....     | 296 |
| Figure 2.136 Axion System Using an SEL-2241 and Dual Power Couplers.....        | 297 |
| Figure 2.137 Node Connection Editor Results for System in Figure 2.136.....     | 298 |
| Figure 2.138 Renaming a Node.....   | 298 |
| Figure 2.139 RTAC Update Rate.....  | 300 |
| Figure 2.140 Input Debounce Settings.....                                       | 300 |
| Figure 2.141 SOE Logging Settings.....  | 301 |
| Figure 2.142 DNP Mapping With the Tag Processor.....                            | 301 |

|   |     |
|---|-----|
| Figure 2.143 DNP Server Connection IP Settings.....                         | 301 |
| Figure 2.144 ST Function Example.....                                       | 302 |
| Figure 2.145 Architect GOOSE Configuration.....                             | 302 |
| Figure 2.146 Multiple EtherNet/IP Configurations in a Single Network.....   | 318 |
| Figure 2.147 Add EtherNet/IP Into Configuration.....                        | 318 |
| Figure 2.148 Configure EtherNet/IP Settings.....                            | 319 |
| Figure 2.149 Configure Assembly Object Instances.....                       | 319 |
| Figure 2.150 Configure Assembly Members.....                                | 319 |
| Figure 2.151 Configure I/O Points.....                                      | 320 |
| Figure 2.152 Export EDS File.....   | 320 |
| Figure 2.153 Enable Explicit Message Client.....                            | 320 |
| Figure 2.154 Enter Explicit Message List.....                               | 321 |
| Figure 2.155 CIP Tag Messages.....  | 321 |
| Figure 2.156 PCCC Messages.....   | 321 |
| Figure 2.157 Export EDS File Via ACSELERATOR RTAC.....                      | 323 |
| Figure 2.158 Configuration ID Setting Value for the AOP License Key.....    | 324 |
| Figure 2.159 Example of Byte-alignment requirement for AOP License Key..... | 325 |
| Figure 2.160 Add Flex Parse Message.....                                    | 328 |
| Figure 2.161 Add Flex Parse Tags.....                                       | 329 |
| Figure 2.162 Example 2.3 Flex Parse Command.....                            | 332 |
| Figure 2.163 Example 2.3 Flex Parse Tags.....                               | 333 |
| Figure 2.164 Flex Parse Helper Form.....                                    | 333 |
| Figure 2.165 Example 2.4 Flex Parse Command.....                            | 335 |
| Figure 2.166 Example 2.4 Flex Parse Tags.....                               | 336 |
| Figure 2.167 Adding an IEC 60870-5-101/104 Client.....                      | 339 |
| Figure 2.168 IEC 60870-5-101/104 Client Custom Messages.....                | 340 |
| Figure 2.169 IEC 60870-5-101/104 Sector Settings.....                       | 340 |
| Figure 2.170 IEC 60870-5-101/104 Client Sector Map.....                     | 341 |
| Figure 2.171 Insert IEC 60870-5-101/104 Server.....                         | 344 |
| Figure 2.172 Add IEC 60870-5-101/104 Server Map.....                        | 344 |
| Figure 2.173 Select IEC 60870-5-101/104 Shared Map.....                     | 345 |
| Figure 2.174 IEC 60870-5-101 Server Dial-Out.....                           | 346 |
| Figure 2.175 IEC 60870-5-101/104 Command Tag Blocking Example.....          | 347 |
| Figure 2.176 Adding IEC 60870-5-10 Client.....                              | 395 |
| Figure 2.177 IEC 60870-5-103 Sector Settings.....                           | 396 |
| Figure 2.178 IEC 60870-5-103 Client Sector Map.....                         | 397 |
| Figure 2.179 GOOSE Message Ethernet Port Setting.....                       | 418 |
| Figure 2.180 Configure IEC 61850 Messages.....                              | 421 |
| Figure 2.181 Insert GOOSE Configuration.....                                | 422 |
| Figure 2.182 Configured GOOSE Ethernet.....                                 | 422 |
| Figure 2.183 Configured GOOSE Devices.....                                  | 423 |
| Figure 2.184 Add a New Logical Node.....                                    | 427 |
| Figure 2.185 Changing the Logical Node Type.....                            | 428 |
| Figure 2.186 Creating Data Objects.....                                     | 429 |
| Figure 2.187 Create a Dataset.....  | 430 |
| Figure 2.188 Configure Reports.....   | 431 |
| Figure 2.189 SEL RTAC Synchrophasor Data Routing Options.....               | 452 |
| Figure 2.190 Insert IEEE C37.118 Client Device.....                         | 453 |
| Figure 2.191 Add IEEE C37.118 PMUs.....                                     | 454 |
| Figure 2.192 System Tags.....   | 458 |
| Figure 2.193 Axion PMU Configuration.....                                   | 460 |
| Figure 2.194 Add Axion PMU.....   | 460 |
| Figure 2.195 Axion PMU Message Rate Settings.....                           | 460 |
| Figure 2.196 Insert IEEE C37.118 Server PMU.....                            | 461 |
| Figure 2.197 Add IEEE C37.118 Tags.....                                     | 465 |

|   |     |
|---|-----|
| Figure 2.198 Insert IEEE C37.118 Server Device.....                               | 467 |
| Figure 2.199 IEEE C37.118 Server Device Settings.....                             | 467 |
| Figure 2.200 TCP Connection.....  | 468 |
| Figure 2.201 UDP Connection.....  | 469 |
| Figure 2.202 UDP_S Connection.....  | 469 |
| Figure 2.203 UDP_T Connection.....  | 470 |
| Figure 2.204 UDP_U Connection.....  | 470 |
| Figure 2.205 Server PMU Reference.....  | 471 |
| Figure 2.206 Insert LG 8979 Client.....   | 472 |
| Figure 2.207 LG 8979 Messages.....  | 474 |
| Figure 2.208 Add LG 8979 Client Tags.....   | 474 |
| Figure 2.209 Insert LG 8979 Server Device.....                                    | 478 |
| Figure 2.210 Add LG 8979 Server Map.....  | 478 |
| Figure 2.211 Select LG 8979 Shared Map.....                                       | 479 |
| Figure 2.212 Insert MIRRORED BITS Device.....                                     | 482 |
| Figure 2.213 Configure MIRRORED BITS Tags.....                                    | 484 |
| Figure 2.214 Online MIRRORED BITS.....  | 486 |
| Figure 2.215 Insert Modbus Client.....  | 488 |
| Figure 2.216 Add Modbus Client Tags.....  | 489 |
| Figure 2.217 Insert NGVL.....   | 499 |
| Figure 2.218 Add NGVL Tags.....   | 499 |
| Figure 2.219 Insert OPC UA Client.....  | 502 |
| Figure 2.220 OPC UA Client Tag Configuration—Choose Variables.....                | 503 |
| Figure 2.221 OPC UA Client Tag Configuration—Structured.....                      | 504 |
| Figure 2.222 OPC UA Client Tag Configuration—Unstructured.....                    | 504 |
| Figure 2.223 OPC UA Client Tag Configuration—Unstructured With Custom Naming..... | 505 |
| Figure 2.224 Insert OPC UA Server.....  | 506 |
| Figure 2.225 OPC UA Server Tag Configuration.....                                 | 507 |
| Figure 2.226 OPC UA Server Tag Access Rights Configuration.....                   | 508 |
| Figure 2.227 OPC UA Server Tags Tab Summary Display.....                          | 508 |
| Figure 2.228 Configuring an OPC UA Client Connection.....                         | 510 |
| Figure 2.229 Browsing OPC UA Variables.....                                       | 511 |
| Figure 2.230 Viewing OPC UA Variables.....  | 511 |
| Figure 2.231 OPC UA Client Subscription Settings.....                             | 512 |
| Figure 2.232 Insert SEL Client.....   | 515 |
| Figure 2.233 Tag Configuration.....   | 516 |
| Figure 2.234 Message Settings.....  | 520 |
| Figure 2.235 Add Flex Parse Message.....  | 522 |
| Figure 2.236 Unsolicited Write Messages.....                                      | 523 |
| Figure 2.237 SEL Unsolicited Write Tags.....                                      | 524 |
| Figure 2.238 SEL Server.....  | 541 |
| Figure 2.239 System SER Tags.....   | 544 |
| Figure 2.240 Adding SES-92 Client.....  | 555 |
| Figure 2.241 Insert SES-92 Server.....  | 561 |
| Figure 2.242 Add SES-92 Server Map.....   | 562 |
| Figure 2.243 Select SES-92 Shared Map.....  | 562 |
| Figure 2.244 Adding SNMP Manager/Client.....                                      | 567 |
| Figure 2.245 SNMP Manager/Client Polls.....                                       | 568 |
| Figure 2.246 SNMP Manager/Client Sector Map.....                                  | 569 |
| Figure 2.247 Adding SNMP Manager/Client Connection.....                           | 571 |
| Figure 2.248 API Documentation Example.....                                       | 574 |
| Figure 3.1 Tag Processor Grid.....  | 581 |
| Figure 3.2 Insert DNP Server.....   | 585 |
| Figure 3.3 Insert DNP Client.....   | 586 |
| Figure 3.4 DNP BO Type Conversion.....  | 587 |

|  |     |
|--|-----|
| Figure 3.5 Simple Tag Mapping.....                         | 588 |
| Figure 3.6 Tag Processor Data Flow.....                    | 589 |
| Figure 3.7 Insert Primary and Backup IED.....              | 590 |
| Figure 3.8 IEC 61131-3 Logic in Tag Processor.....         | 590 |
| Figure 3.9 Local Variable Definition in Tag Processor..... | 592 |
| Figure 3.10 SCADA Mapping Spreadsheet.....                 | 592 |
| Figure 3.11 Copy/Paste Spreadsheet Tags.....               | 593 |
| Figure 3.12 Custom Tag Names in Spreadsheet.....           | 594 |
| Figure 3.13 Feeder_1 Default Tag Names Replaced.....       | 594 |
| Figure 3.14 Bit Access in the Tag Processor.....           | 595 |
| Figure 3.15 Binary Display Mode.....                       | 595 |
| Figure 3.16 Alias Tags.....                                | 596 |
| Figure 3.17 ABS_vector_t Example.....                      | 597 |
| Figure 3.18 ADD_CMV Example.....                           | 597 |
| Figure 3.19 ADD_INS Example.....                           | 597 |
| Figure 3.20 ADD_MV Example.....                            | 598 |
| Figure 3.21 ADD_vector_t Example.....                      | 598 |
| Figure 3.22 AND_SPS Example.....                           | 599 |
| Figure 3.23 DIV_CMV Example.....                           | 599 |
| Figure 3.24 DIV_INS Example.....                           | 599 |
| Figure 3.25 DIV_MV Example.....                            | 600 |
| Figure 3.26 DIV_vector_t Example.....                      | 600 |
| Figure 3.27 EQ_vector_t Example.....                       | 601 |
| Figure 3.28 MULT_CMV Example.....                          | 601 |
| Figure 3.29 MULT_INS Example.....                          | 601 |
| Figure 3.30 MULT_MV Example.....                           | 602 |
| Figure 3.31 MULT_vector_t Example.....                     | 602 |
| Figure 3.32 NORM_vector_t Example.....                     | 603 |
| Figure 3.33 NOT_SPS Example.....                           | 603 |
| Figure 3.34 OR_operSPC Example.....                        | 603 |
| Figure 3.35 OR_SPS Example.....                            | 604 |
| Figure 3.36 REF_vector_t Example.....                      | 604 |
| Figure 3.37 ROOT_CMV Example.....                          | 605 |
| Figure 3.38 ROOT_MV Example.....                           | 605 |
| Figure 3.39 SCALE_CMV Example.....                         | 606 |
| Figure 3.40 SCALE_INS Example.....                         | 607 |
| Figure 3.41 SCALE_MV Example.....                          | 608 |
| Figure 3.42 SCALE_BCR Example.....                         | 608 |
| Figure 3.43 SCALE_vector_t Example.....                    | 609 |
| Figure 3.44 SUB_INS Example.....                           | 610 |
| Figure 3.45 SUB_MV Example.....                            | 610 |
| Figure 3.46 SUB_CMV Example.....                           | 611 |
| Figure 3.47 SUB_vector_t Example.....                      | 611 |
| Figure 3.48 XOR_SPS Example.....                           | 611 |
| Figure 4.1 Configure Four SEL Access Points.....           | 614 |
| Figure 4.2 Insert Source Access Point.....                 | 615 |
| Figure 4.3 Configure Source Access Point.....              | 615 |
| Figure 4.4 Insert Access Point Router.....                 | 616 |
| Figure 4.5 HyperTerminal Configuration.....                | 617 |
| Figure 4.6 Direct Transparent Modbus.....                  | 618 |
| Figure 4.7 Enable Autoconnection.....                      | 619 |
| Figure 4.8 Insert Access Point Router.....                 | 626 |
| Figure 4.9 Configure Capture Message.....                  | 627 |
| Figure 5.1 HMI Project Display.....                        | 630 |
| Figure 5.2 New Web Proxy Configuration.....                | 633 |

|   |     |
|---|-----|
| Figure 5.3 Web Proxy List.....  | 633 |
| Figure 5.4 Network Utilities: Ping.....   | 634 |
| Figure 5.5 Network Utilities: TCP Port Check—Open Port.....                               | 635 |
| Figure 5.6 Network Utilities: TCP Port Check—Closed Port.....                             | 635 |
| Figure 5.7 Connected IEDs Report.....   | 636 |
| Figure 5.8 Connected IED Packet Capture.....  | 637 |
| Figure 5.9 Packet Dissector.....  | 638 |
| Figure 5.10 Packet Dissector—Successful Filter.....                                       | 638 |
| Figure 5.11 Live Data Page.....   | 639 |
| Figure 5.12 Forcing Live Data.....  | 640 |
| Figure 5.13 Live Data After Force.....  | 641 |
| Figure 5.14 Enable Live Data in the Tag Processor.....                                    | 642 |
| Figure 5.15 Example LiveData Function Block Declaration.....                              | 643 |
| Figure 5.16 Control Visibility and Color of Data on Live Data Page.....                   | 643 |
| Figure 5.17 Logging a Tag.....  | 645 |
| Figure 5.18 Example Log Entry.....  | 647 |
| Figure 5.19 Tag Entry.....  | 648 |
| Figure 5.20 View SOE Summary.....   | 649 |
| Figure 5.21 Delete Logs.....  | 650 |
| Figure 5.22 Project Upload Screen.....  | 651 |
| Figure 5.23 Project Upload Screen.....  | 651 |
| Figure 5.24 RAID Setting View With All SATA Ports Occupied.....                           | 652 |
| Figure 5.25 Web Page View Normal Operation Three-Disk RAID.....                           | 653 |
| Figure 5.26 Web Interface SATA Port Failure Indication.....                               | 653 |
| Figure 5.27 ACSELERATOR RTAC SATA Port SystemTags View.....                               | 654 |
| Figure 6.1 Enable Global Local/Remote Mode Setting.....                                   | 659 |
| Figure 6.2 Local POU Input Pin.....   | 659 |
| Figure 6.3 SOE Logging Category Filter Example.....                                       | 661 |
| Figure 6.4 SOE Application Layout When Disable SOE and Alarm Tag Name Column Is True..... | 661 |
| Figure 6.5 Tag Processor Logging Display Tag Name Configuration.....                      | 662 |
| Figure 6.6 SOE Display Tag Name Comparison.....   | 662 |
| Figure 6.7 SOE Application in Play Mode.....  | 663 |
| Figure 6.8 SOE Application With Active Alarm Points.....                                  | 664 |
| Figure 6.9 Alarm Point Configuration Fields Via Tag Processor.....                        | 664 |
| Figure 6.10 Alarm Summary Play Mode With Possible Alarm States.....                       | 665 |
| Figure 6.11 Alarm Summary No Data Available.....  | 666 |
| Figure 6.12 Alarm Acknowledge View.....   | 666 |
| Figure 6.13 Alarm Unacknowledge View.....   | 667 |
| Figure 6.14 Touchscreen Settings Application.....   | 667 |
| Figure 6.15 Port F Enable/Disable Port.....   | 668 |
| Figure 6.16 DHCP Server Front Port Option.....  | 669 |
| Figure 6.17 Username 'admin' Logged in Successfully.....                                  | 672 |
| Figure 6.18 Alarm Flashing Settings.....  | 673 |
| Figure 6.19 Alarm Settings Configuration.....   | 674 |
| Figure 6.20 Alarm Page Settings.....  | 675 |
| Figure 6.21 Active Alarm Page in 3x3 Grid Format.....                                     | 676 |
| Figure 6.22 Insert SEL Touchscreen in Project.....  | 677 |
| Figure 6.23 ACSELERATOR RTAC Default SEL Touchscreen Layout.....                          | 677 |
| Figure 6.24 Rotating Display Configuration.....   | 678 |
| Figure 6.25 SEL Touchscreen Pushbuttons Tab.....  | 680 |
| Figure 6.26 Select an Element for Tag Mapping.....  | 681 |
| Figure 6.27 Analog Label Tag Mapping.....   | 682 |
| Figure 6.28 Breaker Tag Mapping.....  | 682 |
| Figure 6.29 Digital Label Tag Mapping.....  | 683 |
| Figure 6.30 Disconnect Switch Tag Mapping.....  | 683 |

|  |     |
|--|-----|
| Figure 6.31 Navigation Tag Mapping.....  | 684 |
| Figure 6.32 Operation Buttons Tag View.....  | 684 |
| Figure 6.33 Three-Position Disconnect Switch Tag Mapping.....                          | 685 |
| Figure 7.1 Initial RTAC Login.....   | 688 |
| Figure 7.2 Ethernet Settings.....  | 692 |
| Figure 7.3 Interface PRP Pairing Page.....   | 694 |
| Figure 7.4 Active PRP Connections.....   | 695 |
| Figure 7.5 URL Whitelist.....  | 696 |
| Figure 7.6 ACSELERATOR RTAC User Accounts.....   | 699 |
| Figure 7.7 Hidden Passwords in an SEL Client.....                                      | 700 |
| Figure 7.8 ACSELERATOR RTAC Project Password Management.....                           | 701 |
| Figure 7.9 Project Password Status.....  | 701 |
| Figure 7.10 ACSELERATOR RTAC Project Export Encryption Management.....                 | 702 |
| Figure 7.11 RTAC Web Access User Accounts.....   | 704 |
| Figure 7.12 Add New Role Page.....   | 708 |
| Figure 7.13 Add New User Page.....   | 709 |
| Figure 7.14 LDAP Login Process.....  | 710 |
| Figure 7.15 Host Settings.....   | 711 |
| Figure 7.16 Add Host.....  | 711 |
| Figure 7.17 LDAP Settings.....   | 712 |
| Figure 7.18 Edit LDAP Settings.....  | 713 |
| Figure 7.19 Add LDAP Server.....   | 714 |
| Figure 7.20 Edit Attribute Mappings.....   | 714 |
| Figure 7.21 Group Mappings.....  | 715 |
| Figure 7.22 RADIUS Settings.....   | 717 |
| Figure 7.23 System User Tags.....  | 719 |
| Figure 7.24 Tag Processor Code View.....   | 720 |
| Figure 7.25 Event Logged Status.....   | 720 |
| Figure 7.26 Inverted Event Logged Status.....  | 721 |
| Figure 7.27 Configure Syslog.....  | 722 |
| Figure 8.1 Time-Synchronization Message Selection.....                                 | 729 |
| Figure 8.2 System Time Settings.....   | 730 |
| Figure 8.3 SystemTime POU Pin Settings.....  | 731 |
| Figure 8.4 Client Time Settings.....   | 733 |
| Figure 8.5 Server Time Settings.....   | 734 |
| Figure 9.1 Inserting a Program.....  | 743 |
| Figure 9.2 Input Assistant.....  | 744 |
| Figure 9.3 Example CFC Program.....  | 746 |
| Figure 9.4 Example LD Program.....   | 747 |
| Figure 9.5 Example ST Program.....   | 748 |
| Figure 9.6 Using a Function and Function Block in a Program.....                       | 749 |
| Figure 9.7 Example Function and Function Block.....                                    | 749 |
| Figure 10.1 CtPt Monitor Group Measurement Channel Specification Page.....             | 773 |
| Figure 10.2 Example CtPt Monitor POU Outputs.....                                      | 775 |
| Figure 10.3 Line With Four Redundant CT Sets.....                                      | 777 |
| Figure 10.4 Add a Monitor Group for All CTs on the Line.....                           | 778 |
| Figure 10.5 Select the Child Page for the Line_1_CTs Group.....                        | 779 |
| Figure 10.6 Configure Monitored Channels for Line_1_CTs Group.....                     | 779 |
| Figure 10.7 POU Output Status Indicators.....  | 780 |
| Figure 10.8 CT Monitoring Group With Applied Scaling for Transformer Low-Side CTs..... | 780 |
| Figure 10.9 Select the Child Page for the Line_2_CTs Group.....                        | 782 |
| Figure 10.10 Configure Monitored Channels for Line_2_CTs Group.....                    | 782 |
| Figure 10.11 Configure Reference Channels for Line_2_CTs Group.....                    | 782 |
| Figure 10.12 PT Monitoring Over a Breaker-and-a-Half Scheme.....                       | 783 |
| Figure 10.13 Configure Monitored Channels for StationA_PTs Group.....                  | 785 |

|   |     |
|---|-----|
| Figure 10.14 Configure Breaker Status Channels for StationA_PTs Group.....                                  | 785 |
| Figure 10.15 Sample Fault Location Record File.....   | 796 |
| Figure 10.16 Harmonic Virtual Tags.....   | 804 |
| Figure 10.17 Sample User Logic for External DFR Trigger.....  | 807 |
| Figure 10.18 Sample Breaker-and-a-Half Substation.....  | 812 |
| Figure 10.19 Add Data Tags for Monitoring and Recording.....  | 826 |
| Figure 10.20 Example SOE and Time-Aligned CSV File Name.....  | 829 |
| Figure 10.21 Example COMTRADE Float32 File Name.....  | 830 |
| Figure 10.22 Copying the RTAC Host SSH Key.....   | 844 |
| Figure 10.23 Locating the RTAC Hostname.....  | 844 |
| Figure 10.24 Example of Prepared Host Key.....  | 844 |
| Figure 10.25 Sample Diagram Builder Screen.....   | 866 |
| Figure 10.26 Indirect Tagging Link Controls.....  | 867 |
| Figure 10.27 Runtime Template Screen.....   | 867 |
| Figure 10.28 Frequency Element Logic.....   | 873 |
| Figure 10.29 Valpha Undervoltage Supervision Logic.....   | 876 |
| Figure 10.30 Positive-Sequence Voltage (V1) Supervision Logic.....  | 877 |
| Figure 10.31 Example.....   | 879 |
| Figure 10.32 Protection Element POU.....  | 881 |
| Figure 10.33 Frequency Elements Outputs.....  | 881 |
| Figure 10.34 Interaction Between Recording Triggers Extension and Recording Devices.....                    | 882 |
| Figure 10.35 Insert a Recording Triggers Extension.....   | 882 |
| Figure 10.36 Recording Triggers Extension Tabs.....   | 882 |
| Figure 10.37 High-Threshold Trigger: Rising-Edge and Level Output Modes.....                                | 883 |
| Figure 10.38 High-Threshold Trigger: Rising-Edge and Level Output Modes with Pickup Timer.....              | 884 |
| Figure 10.39 High-Threshold Trigger: Rising-Edge and Level Output Modes with Pickup Timer No Operation..... | 884 |
| Figure 10.40 Low-Threshold Trigger: Rising-Edge and Level Output Modes.....                                 | 885 |
| Figure 10.41 Low-Threshold Trigger: Rising-Edge and Level Output Modes with Pickup Time.....                | 886 |
| Figure 10.42 Low-Threshold Trigger: Rising-Edge and Level Output Modes with Minimum Active Set Point.....   | 886 |
| Figure 10.43 Assigning an Axion Recording Group to a Recording Triggers Extension.....                      | 890 |
| Figure 10.44 Triggering a DDR Using Recording Trigger Extension.....  | 891 |
| Figure 10.45 Creating Simple Tag Mapper.....  | 897 |
| Figure 10.46 Generated Map.....   | 898 |
| Figure 10.47 Assigning Server Shared Map.....   | 898 |
| Figure 10.48 Available Sources.....   | 899 |
| Figure 10.49 Spare Points.....  | 901 |
| Figure 10.50 Five Binary Input Spare Points Appended to End of Device_2_DNP Points.....                     | 901 |
| Figure 10.51 Five Binary Input Spare Points Appended to the Beginning of Device_2_DNP Points.....           | 901 |
| Figure 10.52 Example Control Mapping: Auto.....   | 902 |
| Figure 10.53 Example Control Mapping: Auto-Paired.....  | 903 |
| Figure 10.54 Example Control Mapping: Verbose.....  | 904 |
| Figure 10.55 Live Data Templates.....   | 904 |
| Figure 10.56 Processing Mapping Changes.....  | 906 |
| Figure 10.57 FAILOVER_Q.....  | 909 |
| Figure 10.58 FAILOVER_LIMIT.....  | 909 |
| Figure 10.59 Boolean Operators.....   | 910 |
| Figure 10.60 Boolean Operator: AND Logic Diagram.....   | 910 |
| Figure 10.61 Timer Examples.....  | 911 |
| Figure 10.62 Scaling Examples.....  | 911 |
| Figure 10.63 Bit Packing Example.....   | 912 |
| Figure 10.64 Paired Binary Outputs.....   | 913 |
| Figure 10.65 Function Operator Example.....   | 913 |
| Figure 10.66 Column Header: Output .csv File.....   | 914 |
| Figure 10.67 Column Header: Tag Mapper.....   | 915 |

|  |      |
|--|------|
| Figure 11.1 Web Interface Dashboard.....   | 918  |
| Figure 11.2 View Diagnostics Online.....   | 919  |
| Figure 11.3 Forcing Values While Online.....   | 921  |
| Figure 11.4 Forced Values Window.....  | 923  |
| Figure 11.5 Create a Watch Window.....   | 924  |
| Figure 11.6 Watch Values Window.....   | 924  |
| Figure 11.7 Set RTE Performance Watchdog Time-Out.....                                 | 925  |
| Figure 11.8 Customize Diagnostic Strings.....  | 928  |
| Figure 11.9 Sample Axion System for Troubleshooting Illustrations.....                 | 934  |
| Figure 11.10 Network Error Illustration for Example 1.....                             | 935  |
| Figure 11.11 Network Initialization.....   | 936  |
| Figure 11.12 Network Configuration Status Messages.....                                | 936  |
| Figure 11.13 Configuration Error Because of Mismatched Module.....                     | 937  |
| Figure 11.14 Network Cable Fault.....  | 938  |
| Figure 11.15 Connections Status for Network Cable Fault Between Node 1 and Node 3..... | 939  |
| Figure 11.16 Module Status in Node 3.....  | 939  |
| Figure 11.17 Module Status in Unfaulted Nodes.....                                     | 940  |
| Figure 11.18 Network Cable Fault.....  | 941  |
| Figure 11.19 Connections Status for Network Cable Fault Between Node 1 and Node 2..... | 942  |
| Figure 11.20 Connections Status for an Individual Module Failure.....                  | 942  |
| Figure B.1 MOVE Example in CFC or LD in Conjunction With the EN/ENO Function.....      | 1065 |
| Figure B.2 Two ADD Examples in CFC, LD.....  | 1067 |
| Figure B.3 DIV Example in CFC, LD.....   | 1067 |
| Figure B.4 MOD Example in CFC, LD.....   | 1067 |
| Figure B.5 Two MUL Examples in CFC, LD.....  | 1068 |
| Figure B.6 SUB Example in CFC, LD.....   | 1068 |
| Figure B.7 AND Example in CFC, LD.....   | 1069 |
| Figure B.8 NOT Example in CFC, LD.....   | 1069 |
| Figure B.9 OR Example in CFC, LD.....  | 1069 |
| Figure B.10 XOR Example in CFC, LD.....  | 1070 |
| Figure B.11 ROL Example in CFC, LD.....  | 1071 |
| Figure B.12 ROR Example in CFC, LD.....  | 1071 |
| Figure B.13 SHL Example in CFC, LD.....  | 1072 |
| Figure B.14 SHR Example in CFC, LD.....  | 1072 |
| Figure B.15 MAX Example in CFC, LD.....  | 1073 |
| Figure B.16 MIN Example in CFC, LD.....  | 1073 |
| Figure B.17 SEL Example in CFC, LD.....  | 1074 |
| Figure B.18 EQ Example in CFC, LD.....   | 1075 |
| Figure B.19 GE Example in CFC, LD.....   | 1075 |
| Figure B.20 GT Example in CFC, LD.....   | 1076 |
| Figure B.21 LE Example in CFC, LD.....   | 1076 |
| Figure B.22 LT Example in CFC, LD.....   | 1076 |
| Figure B.23 NE Example in CFC, LD.....   | 1077 |
| Figure B.24 BOOL_TO Conversions.....   | 1078 |
| Figure B.25 TO_BOOL Conversions.....   | 1079 |
| Figure B.26 INT_TO_SINT Example in CFC, LD.....  | 1080 |
| Figure B.27 LREAR_TO_INT Example in CFC, LD.....                                       | 1080 |
| Figure B.28 TIME_TO Examples in CFC, LD.....   | 1081 |
| Figure B.29 DATE_TO Examples in CFC, LD.....   | 1081 |
| Figure B.30 STRING_TO Examples in CFC, LD.....   | 1082 |
| Figure B.31 CMV_TO_MV_MAG Example in CFC.....  | 1083 |
| Figure B.32 CMV_TO_MV_ANG Example in CFC.....  | 1083 |
| Figure B.33 operAPC_TO_TIME Example in CFC.....  | 1084 |
| Figure B.34 SPS2_TO_DPS Example in CFC.....  | 1084 |
| Figure B.35 SPS_TO_DPS Example in CFC.....   | 1085 |

|  |      |
|--|------|
| Figure B.36 ABS Example in CFC, LD.....                      | 1086 |
| Figure B.37 ACOS Example in CFC, LD.....                     | 1086 |
| Figure B.38 ASIN Example in CFC, LD.....                     | 1086 |
| Figure B.39 ATAN Example in CFC, LD.....                     | 1086 |
| Figure B.40 CELSIUS_TO_FAHRENHEIT Example in CFC, LD.....    | 1087 |
| Figure B.41 COS Example in CFC, LD.....                      | 1087 |
| Figure B.42 DEG_TO_RAD Example in CFC, LD.....               | 1087 |
| Figure B.43 EXP Example in CFC, LD.....                      | 1088 |
| Figure B.44 EXPT Example in CFC, LD.....                     | 1088 |
| Figure B.45 FAHRENHEIT_TO_CELSIUS Example in CFC, LD.....    | 1088 |
| Figure B.46 LN Example in CFC, LD.....                       | 1089 |
| Figure B.47 LOG Example in CFC, LD.....                      | 1089 |
| Figure B.48 RAD_TO_DEG Example in CFC, LD.....               | 1089 |
| Figure B.49 SIN Example in CFC, LD.....                      | 1089 |
| Figure B.50 SQRT Example in CFC, LD.....                     | 1090 |
| Figure B.51 TAN Example in CFC, LD.....                      | 1090 |
| Figure B.52 CONCAT Example in CFC, LD.....                   | 1091 |
| Figure B.53 DELETE Example in CFC, LD.....                   | 1091 |
| Figure B.54 FIND Example in CFC, LD.....                     | 1092 |
| Figure B.55 INSERT Example in CFC, LD.....                   | 1092 |
| Figure B.56 LEFT Example in CFC, LD.....                     | 1093 |
| Figure B.57 LEN Example in CFC, LD.....                      | 1093 |
| Figure B.58 MID Example in CFC, LD.....                      | 1093 |
| Figure B.59 REPLACE Example in CFC, LD.....                  | 1094 |
| Figure B.60 RIGHT Example in CFC, LD.....                    | 1094 |
| Figure B.61 CMVRangeAndDeadbandCheck Example in CFC, LD..... | 1095 |
| Figure B.62 DateCalc() Example.....                          | 1096 |
| Figure B.63 DateCalc Example in CFC.....                     | 1096 |
| Figure B.64 dateTIme_t_Constructor Example in CFC.....       | 1096 |
| Figure B.65 dateTIme_t_Deconstructor Example in CFC.....     | 1097 |
| Figure B.66 dateTIme_t_TO_DNP48 Example in CFC.....          | 1098 |
| Figure B.67 DayOfWeek Example in CFC.....                    | 1098 |
| Figure B.68 DayOfYear Example in CFC.....                    | 1098 |
| Figure B.69 DNP48_TO_dateTIME_t Example in CFC.....          | 1099 |
| Figure B.70 INSRRangeCheck Example in CFC, LD.....           | 1103 |
| Figure B.71 MERGE_q Example in Tag Processor.....            | 1104 |
| Figure B.72 MVRangeAndDeadbandCheck Example in CFC, LD.....  | 1104 |
| Figure B.73 NetworkEventCapture Example.....                 | 1105 |
| Figure B.74 SIZEOF() Example.....                            | 1106 |
| Figure B.75 SYS_TIME() Example.....                          | 1106 |
| Figure B.76 TRANSLATE Example in CFC.....                    | 1107 |
| Figure B.77 TRANSLATE_MV Example in CFC.....                 | 1107 |
| Figure B.78 TRANSLATE_INS Example in CFC.....                | 1108 |
| Figure B.79 TS_DIFF in Tag Processor.....                    | 1108 |
| Figure B.80 TS_DIFF() Example.....                           | 1109 |
| Figure B.81 ValidityCheck Example in CFC, LD.....            | 1109 |
| Figure B.82 Creating a Function Block Instance.....          | 1110 |
| Figure B.83 NetworkAudit Example.....                        | 1112 |
| Figure B.84 CTD Example in CFC, LD.....                      | 1113 |
| Figure B.85 CTU Example in CFC, LD.....                      | 1113 |
| Figure B.86 CTUD Example in CFC, LD.....                     | 1114 |
| Figure B.87 F_TRIG Example in CFC, LD.....                   | 1117 |
| Figure B.88 PulseDecoder Example in CFC, LD.....             | 1117 |
| Figure B.89 RS Example in CFC, LD.....                       | 1118 |
| Figure B.90 RTC Example in CFC, LD.....                      | 1118 |

|   |      |
|---|------|
| Figure B.91 R_TRIG Example in CFC, LD.....                                | 1119 |
| Figure B.92 SR Example in CFC, LD.....                                    | 1120 |
| Figure B.93 TEX Example in CFC.....                                       | 1120 |
| Figure B.94 Display of TI Behavior Over Time.....                         | 1121 |
| Figure B.95 Display of TI Behavior Triggered by IN.....                   | 1121 |
| Figure B.96 TI Example in CFC, LD.....                                    | 1122 |
| Figure B.97 TIV Example in CFC, LD.....                                   | 1122 |
| Figure B.98 Display of TOF Behavior Over Time.....                        | 1123 |
| Figure B.99 TOF Example in CFC, LD.....                                   | 1123 |
| Figure B.100 Display of TON Behavior Over Time.....                       | 1124 |
| Figure B.101 TON Example in CFC, LD.....                                  | 1124 |
| Figure B.102 Display of the TP Time Sequence.....                         | 1125 |
| Figure B.103 TP Example in CFC, LD.....                                   | 1125 |
| Figure B.104 TPUDO Diagram.....   | 1126 |
| Figure B.105 TPUDO Example in CFC.....                                    | 1126 |
| Figure B.106 GVL and DTE.....   | 1136 |
| Figure B.107 Data Type Editor.....  | 1157 |
| Figure D.1 Dynamic Disturbance and Fault Recording System Components..... | 1177 |
| Figure E.1 Standard Ethernet Frame for EtherCAT Messages.....             | 1182 |
| Figure E.2 Standard Ethernet Frame for EtherCAT Messages.....             | 1183 |
| Figure F.1 Accept New Certificate.....                                    | 1193 |
| Figure F.2 Default Usage Policy.....                                      | 1195 |
| Figure F.3 Current Project in RTAC Dashboard.....                         | 1195 |
| Figure F.4 Back Up All Projects.....                                      | 1196 |
| Figure F.5 Retrieve a Project.....  | 1196 |
| Figure F.6 Project Read Configuration.....                                | 1196 |

# List of Tables

|   |     |
|---|-----|
| Table 1.1 Typical RTAC Startup Time.....  | 107 |
| Table 1.2 Status Values.....  | 121 |
| Table 2.1 Maximum Tag Counts Per RTAC Hardware Model.....   | 129 |
| Table 2.2 Comm Monitor Display Fields.....  | 145 |
| Table 2.3 Comm Monitor Data Fields.....   | 146 |
| Table 2.4 UART Event Types.....   | 146 |
| Table 2.5 UART Signals.....   | 146 |
| Table 2.6 Supported Function Codes.....   | 151 |
| Table 2.7 CDC Type 2 Tag Types.....   | 152 |
| Table 2.8 CDC Tag Type 2 Client Pin Descriptions.....   | 152 |
| Table 2.9 Supported Function Codes.....   | 153 |
| Table 2.10 CDC Type 2 Tag Types.....  | 155 |
| Table 2.11 CDC Type 2 Server Pin Descriptions.....  | 155 |
| Table 2.12 CWS Client POU Pin Settings.....   | 159 |
| Table 2.13 Courier POU Pin Settings.....  | 161 |
| Table 2.14 Common Device Tag Type Parameters.....   | 164 |
| Table 2.15 2-Bit Status.....  | 165 |
| Table 2.16 Simple Status.....   | 165 |
| Table 2.17 Analog Input.....  | 165 |
| Table 2.18 Pulse Accumulator.....   | 165 |
| Table 2.19 Special Calculations.....  | 165 |
| Table 2.20 SBO Output.....  | 166 |
| Table 2.21 Common Device Tag Type Parameters.....   | 168 |
| Table 2.22 Binary Input Parameters.....   | 169 |
| Table 2.23 Binary Output Parameters.....  | 169 |
| Table 2.24 Counter Parameters.....  | 169 |
| Table 2.25 Analog Input Parameters.....   | 169 |
| Table 2.26 Analog Outputs.....  | 170 |
| Table 2.27 DNP Services User Role Permissions.....  | 175 |
| Table 2.28 DNP Server POU Pin Settings.....   | 177 |
| Table 2.29 Server (Outstation).....   | 179 |
| Table 2.30 DNP Server (Slave) Object.....   | 180 |
| Table 2.31 DNP Client (Master) Object.....  | 184 |
| Table 2.32 DNP Secure Authentication Protocol Implementation Extra Information for Testing (PIXIT)..... | 187 |
| Table 2.33 Common Device Tag Type Parameters.....   | 192 |
| Table 2.34 Binary Output Parameters.....  | 192 |
| Table 2.35 Analog Output Parameters.....  | 193 |
| Table 2.36 POU Pin Settings.....  | 194 |
| Table 2.37 Module Diagnostic Tag Descriptions.....  | 207 |
| Table 2.38 Waveform Settings.....   | 222 |
| Table 2.39 Analog Inputs Settings.....  | 228 |
| Table 2.40 Waveform Settings.....   | 231 |
| Table 2.41 Waveform Settings.....   | 238 |
| Table 2.42 Waveform Settings.....   | 249 |
| Table 2.43 Waveform Settings.....   | 256 |
| Table 2.44 PRCTPT Module Settings Options.....  | 260 |
| Table 2.45 Tag Settings.....  | 262 |
| Table 2.46 Oscillography Settings.....  | 266 |
| Table 2.47 struct_SampleRowData.....  | 279 |
| Table 2.48 struct_SampleStream.....   | 279 |

|   |     |
|---|-----|
| Table 2.49 struct_ChannelInfoRow.....                                       | 280 |
| Table 2.50 struct_PqModule.....   | 284 |
| Table 2.51 enum_PqChannel.....  | 285 |
| Table 2.52 RTU Templates With Included Modules.....                         | 299 |
| Table 2.53 EtherNet/IP Adapter/Client POU Pin Settings.....                 | 316 |
| Table 2.54 Ethernet/IP Explicit Message Error Statuses.....                 | 322 |
| Table 2.55 Ethernet/IP Explicit Message Error and Extended Error Codes..... | 322 |
| Table 2.56 Read/Write Access By Account Level.....                          | 325 |
| Table 2.57 POU Pin Settings.....  | 327 |
| Table 2.58 Flex Parse Message Settings.....                                 | 328 |
| Table 2.59 Flex Parse Tags Settings.....                                    | 329 |
| Table 2.60 SEL Type Class Expressions.....                                  | 331 |
| Table 2.61 Common Regular Expression Syntax.....                            | 337 |
| Table 2.62 Explanation of Column Headers.....                               | 340 |
| Table 2.63 IEC 60870-5-101/104 Client POU Pin Settings.....                 | 341 |
| Table 2.64 Common Device Tag Type Parameters.....                           | 347 |
| Table 2.65 Single-Point Status Input Parameters.....                        | 348 |
| Table 2.66 Double-Point Status Input Parameters.....                        | 348 |
| Table 2.67 Step Positions Parameters.....                                   | 348 |
| Table 2.68 Bitstrings Parameters.....                                       | 348 |
| Table 2.69 Measured Values Parameters.....                                  | 349 |
| Table 2.70 Integrated Totals Parameters.....                                | 349 |
| Table 2.71 Single Commands Parameters.....                                  | 350 |
| Table 2.72 Double Commands Parameters.....                                  | 350 |
| Table 2.73 Regulating Step Commands Parameters.....                         | 351 |
| Table 2.74 Set Point Commands Parameters.....                               | 352 |
| Table 2.75 Bitstring Commands Parameters.....                               | 352 |
| Table 2.76 IEC 60870-5-101/104 POU Pin Settings.....                        | 353 |
| Table 2.77 IEC 60870-5-103 Client POU Pin Settings.....                     | 397 |
| Table 2.78 IEC 61850 Document Set.....                                      | 407 |
| Table 2.79 Example IEC 61850 Descriptor Components.....                     | 409 |
| Table 2.80 RTAC Logical Devices.....  | 409 |
| Table 2.81 GOOSE Ethernet Ports on RTAC Devices.....                        | 418 |
| Table 2.82 Configurable GOOSE Parameters.....                               | 423 |
| Table 2.83 Simple Typed Global Tags Per RX or TX Message.....               | 423 |
| Table 2.84 Aggregate Typed Global Tags Per RX or TX Message.....            | 423 |
| Table 2.85 PICS for A-Profile Support.....                                  | 438 |
| Table 2.86 PICS for T-Profile Support.....                                  | 439 |
| Table 2.87 MMS Service Supported Conformance.....                           | 439 |
| Table 2.88 MMS Parameter CBB.....   | 442 |
| Table 2.89 AlternateAccessSelection Conformance Statement.....              | 442 |
| Table 2.90 VariableAccessSpecification Conformance Statement.....           | 442 |
| Table 2.91 VariableSpecification Conformance Statement.....                 | 442 |
| Table 2.92 Read Conformance Statement.....                                  | 443 |
| Table 2.93 GetVariableAccessAttributes Conformance Statement.....           | 443 |
| Table 2.94 DefineNamedVariableList Conformance Statement.....               | 443 |
| Table 2.95 GetNamedVariableListAttributes Conformance Statement.....        | 443 |
| Table 2.96 DeleteNamedVariableList Conformance Statement.....               | 444 |
| Table 2.97 GOOSE Conformance.....   | 444 |
| Table 2.98 Basic Conformance Statement.....                                 | 444 |
| Table 2.99 ACSI Models Conformance Statement.....                           | 445 |
| Table 2.100 ACSI Service Conformance Statement.....                         | 446 |
| Table 2.101 Common Settings for PMU Data Set Tags.....                      | 454 |
| Table 2.102 IEEE C37.118 Mapping to timeStamp_t.....                        | 456 |
| Table 2.103 IEEE C37.118 Mapping to quality_t.....                          | 457 |

|  |     |
|--|-----|
| Table 2.104 IEEE C37.118 Measurement Mapping to Logic Engine Tags.....         | 457 |
| Table 2.105 Axion PMU Settings.....  | 458 |
| Table 2.106 Axion Voltage and Current Settings.....                            | 459 |
| Table 2.107 Axion PMU Rate.....  | 459 |
| Table 2.108 PMU Time Stamp Rounding Example for System Tags.....               | 462 |
| Table 2.109 Trigger Reason.....  | 464 |
| Table 2.110 timestamp_t Mapping to IEEE C37.118.....                           | 465 |
| Table 2.111 quality_t Mapping to IEEE C37.118.....                             | 466 |
| Table 2.112 Data Tags Mapping to IEEE C37.118.....                             | 466 |
| Table 2.113 LG 8979 Messages.....  | 474 |
| Table 2.114 Common Device Tag Type Parameters.....                             | 475 |
| Table 2.115 Digital Input, Indications, and SOEs Parameters.....               | 475 |
| Table 2.116 Digital and Pulse Output and Select Before Operate Parameters..... | 476 |
| Table 2.117 Accumulators Parameters.....                                       | 476 |
| Table 2.118 Analog Input and Analog References Parameters.....                 | 476 |
| Table 2.119 Analog Outputs.....  | 477 |
| Table 2.120 LG 8979 Client Function Codes.....                                 | 480 |
| Table 2.121 LG 8979 Server Function Codes.....                                 | 481 |
| Table 2.122 TX MIRRORED BITS Parameters.....                                   | 484 |
| Table 2.123 RX MIRRORED BITS Parameters.....                                   | 485 |
| Table 2.124 Common Input Parameters.....                                       | 490 |
| Table 2.125 Coils.....   | 490 |
| Table 2.126 Discrete Inputs.....   | 490 |
| Table 2.127 Holding Registers.....   | 490 |
| Table 2.128 Input Registers.....   | 492 |
| Table 2.129 Read Coil Polls.....   | 493 |
| Table 2.130 Modbus Server POU Pin Settings.....                                | 497 |
| Table 2.131 OPC UA Client POU Pin Settings.....                                | 505 |
| Table 2.132 OPC UA Server Quality Mapping.....                                 | 507 |
| Table 2.133 OPC UA Server POU Pin Settings.....                                | 509 |
| Table 2.134 OPC UA Security Modes and Policies Support.....                    | 512 |
| Table 2.135 SEL Tag Configuration Parameters.....                              | 516 |
| Table 2.136 SEL Client POU Pin Settings.....                                   | 535 |
| Table 2.137 SEL Server Commands (All Commands Access Level 1).....             | 544 |
| Table 2.138 SEL Server POU Pin Settings.....                                   | 550 |
| Table 2.139 SES-92 Messages.....   | 555 |
| Table 2.140 Device Tag Type Configuration Parameters.....                      | 557 |
| Table 2.141 POU Pin Settings and Controller.....                               | 557 |
| Table 2.142 Common Device Tag Type Parameters.....                             | 563 |
| Table 2.143 Status Input Parameters.....                                       | 563 |
| Table 2.144 SBO Trip/Close Output Parameters.....                              | 563 |
| Table 2.145 Accumulator and Solid State Meter Parameters.....                  | 563 |
| Table 2.146 Analog Input Parameters.....                                       | 563 |
| Table 2.147 SBO Setpoint Output Parameters.....                                | 564 |
| Table 2.148 SES-92 POU Pin Settings.....                                       | 564 |
| Table 2.149 SES-92 Function Codes.....   | 566 |
| Table 2.150 Poll Tab Parameters.....   | 568 |
| Table 2.151 SNMP Point Behavior.....   | 569 |
| Table 2.152 SNMP Manager/Client POU Pin Settings.....                          | 570 |
| Table 3.1 Available Columns in the Tag Processor.....                          | 582 |
| Table 4.1 APR Command Summary.....   | 620 |
| Table 4.2 ASCII Controls and Keys.....   | 622 |
| Table 4.3 Security Check Strings.....  | 623 |
| Table 4.4 APR POU Pin Settings.....  | 628 |
| Table 5.1 Web Interface Dashboard Settings.....                                | 631 |

|  |     |
|--|-----|
| Table 5.2 Kiosk Feature Shortcut Keys.....   | 632 |
| Table 5.3 Live Data Advanced Filtering Operators.....                                      | 640 |
| Table 6.1 Breaker Control States.....  | 656 |
| Table 6.2 Disconnect Switch Control States.....  | 657 |
| Table 6.3 Three-Position Disconnect Switch.....  | 658 |
| Table 6.4 Status Tags Per Screen Items.....  | 658 |
| Table 6.5 Touchscreen Date Display Format.....   | 662 |
| Table 6.6 Touchscreen Settings.....  | 667 |
| Table 6.7 RTAC Status > Device Information Screen Contents.....                            | 669 |
| Table 6.8 RTAC Status > System Statistics Screen Contents.....                             | 670 |
| Table 6.9 EtherCAT Status Screen Contents.....   | 670 |
| Table 6.10 Module Status Indications.....  | 671 |
| Table 6.11 Touchscreen Operations That Require User Login.....                             | 671 |
| Table 6.12 Alarm Settings Information.....   | 674 |
| Table 6.13 Bay Control Tab Buttons.....  | 678 |
| Table 6.14 SEL Touchscreen Settings Tab.....   | 679 |
| Table 6.15 SEL Touchscreen Controller POU Pins.....  | 680 |
| Table 6.16 Touchscreen System Tags.....  | 685 |
| Table 6.17 Touchscreen Possible States.....  | 685 |
| Table 7.1 IP Security Settings.....  | 689 |
| Table 7.2 CIDR Notation.....   | 690 |
| Table 7.3 Global IP Settings.....  | 695 |
| Table 7.4 Static Route Settings.....   | 696 |
| Table 7.5 Valid ACCELERATOR RTAC Database Password Characters.....                         | 698 |
| Table 7.6 Account Access.....  | 703 |
| Table 7.7 Available Permissions.....   | 704 |
| Table 7.8 Default Users and Associated Permissions.....                                    | 707 |
| Table 7.9 User Roles Columns.....  | 707 |
| Table 7.10 Individual Permissions.....   | 708 |
| Table 7.11 Example Functionality Requiring Multiple Permissions.....                       | 708 |
| Table 7.12 LDAP Settings Form.....   | 715 |
| Table 7.13 Radius Settings in the RTAC.....  | 717 |
| Table 7.14 Syslog Message Severities Supported in the RTAC.....                            | 721 |
| Table 7.15 Syslog MSG Configuration.....   | 722 |
| Table 8.1 Profile Comparison and RTAC Support.....   | 726 |
| Table 8.2 SystemTime Parameters.....   | 730 |
| Table 8.3 Pertinent System Time POU Pin Settings.....                                      | 731 |
| Table 9.1 IEC 61131-3 Operation Order of Precedence (Highest to Lowest) <sup>a</sup> ..... | 738 |
| Table 10.1 Extension Project Version Compatibility.....                                    | 751 |
| Table 10.2 SEL-411L Alert Conditions and Tag List Outputs.....                             | 753 |
| Table 10.3 SEL-411L Monitored COM 87L Report Data Points and Conditions.....               | 754 |
| Table 10.4 Settings.....   | 755 |
| Table 10.5 IEDs: 411L.....   | 756 |
| Table 10.6 SOE/Summary CSV Report Format.....  | 756 |
| Table 10.7 87L Communication Monitor Outputs.....  | 757 |
| Table 10.8 General Settings.....   | 759 |
| Table 10.9 Settings Files.....   | 759 |
| Table 10.10 PORT Settings.....   | 760 |
| Table 10.11 RTAC Device Types.....   | 761 |
| Table 10.12 SEL Protocol Client Settings.....  | 762 |
| Table 10.13 SEL Protocol Tag Data Region Lookup.....                                       | 762 |
| Table 10.14 SEL Protocol Tag Rename Replacements.....                                      | 763 |
| Table 10.15 DNP Server Serial Settings.....  | 763 |
| Table 10.16 DNP Server Ethernet Settings.....  | 763 |
| Table 10.17 DNP Binary Output Mapping (Paired).....  | 764 |

|  |     |
|--|-----|
| Table 10.18 DNP Binary Output Mapping (Non-Paired).....                              | 765 |
| Table 10.19 CtPt Monitor Group Settings.....   | 768 |
| Table 10.20 SOE/Summary Report File Format.....                                      | 771 |
| Table 10.21 Summary Content in the SOE/Summary Report.....                           | 772 |
| Table 10.22 Detail Report Format.....  | 772 |
| Table 10.23 Monitored Channel Settings.....  | 773 |
| Table 10.24 Breaker/Switch Status Channels Settings.....                             | 774 |
| Table 10.25 CtPt Monitor POU Outputs.....  | 774 |
| Table 10.26 Custom Data Types Used on CtPt Monitor POU Output.....                   | 775 |
| Table 10.27 CtPt Monitor Example 1 Monitor Group Settings.....                       | 778 |
| Table 10.28 CtPt Monitor Example 2 Monitor Group Settings.....                       | 781 |
| Table 10.29 CtPt Monitor Example 3 Monitor Group Settings.....                       | 784 |
| Table 10.30 General Settings Names and Descriptions.....                             | 787 |
| Table 10.31 Bus Asset Settings Names and Descriptions.....                           | 792 |
| Table 10.32 Bus Asset Tags—Wye.....  | 793 |
| Table 10.33 Bus Asset Tags—Delta.....  | 793 |
| Table 10.34 Transmission Line and Generic Asset Settings Names and Descriptions..... | 795 |
| Table 10.35 Transmission Line and Generic Asset Tags—Wye.....                        | 797 |
| Table 10.36 Transmission Line and Generic Asset Tags—Delta.....                      | 798 |
| Table 10.37 Single-Channel Asset Settings Names and Descriptions.....                | 800 |
| Table 10.38 Single-Channel Asset Tags.....   | 801 |
| Table 10.39 Local Monitoring Status Indications.....                                 | 804 |
| Table 10.40 Settings Names and Descriptions.....                                     | 819 |
| Table 10.41 Monitored Tag Type.....  | 826 |
| Table 10.42 SOE Harvesting Parameters.....   | 827 |
| Table 10.43 DDR POU Pin Settings.....  | 827 |
| Table 10.44 Sample RTAC SOE Records.....   | 831 |
| Table 10.45 SOE Harvesting Tab Settings.....   | 831 |
| Table 10.46 Email Plus POU Pins.....   | 837 |
| Table 10.47 Settings Tab Tag Configuration.....                                      | 838 |
| Table 10.48 C37.118 Client Tag Naming Standards.....                                 | 840 |
| Table 10.49 Test Mode and FCP Disabled Tag Logical Relationship.....                 | 841 |
| Table 10.50 Controller Tab Function Block POU Outputs.....                           | 841 |
| Table 10.51 FTPSync POU Pins.....  | 845 |
| Table 10.52 General Settings Names and Descriptions.....                             | 846 |
| Table 10.53 Modbus Client Settings.....  | 846 |
| Table 10.54 Modbus Map Settings.....   | 847 |
| Table 10.55 PCC Settings.....  | 847 |
| Table 10.56 Plant Metering Input Settings.....                                       | 848 |
| Table 10.57 Simple/Advanced Power Control.....                                       | 849 |
| Table 10.58 PCC Metering Mode Settings.....  | 849 |
| Table 10.59 VAR Control Settings.....  | 850 |
| Table 10.60 Voltage Control Settings.....  | 850 |
| Table 10.61 Voltage Compensation Settings.....                                       | 850 |
| Table 10.62 Power Factor Control Settings.....                                       | 852 |
| Table 10.63 Power Factor Gradient Settings.....                                      | 852 |
| Table 10.64 Solar Smoothing Settings.....  | 852 |
| Table 10.65 Grid Connected Charging Settings.....                                    | 853 |
| Table 10.66 Capacitor Configuration Settings.....                                    | 853 |
| Table 10.67 Frequency Regulation Settings.....                                       | 853 |
| Table 10.68 Islanded Operation Settings.....   | 854 |
| Table 10.69 PV Inverter Operational Data Settings.....                               | 856 |
| Table 10.70 BESS Inverter Operational Data Settings.....                             | 857 |
| Table 10.71 Capacitor Operational Data Settings.....                                 | 858 |
| Table 10.72 Load Operational Data Settings.....                                      | 858 |

|   |      |
|---|------|
| Table 10.73 Reciprocating Generator Operational Data Settings.....        | 859  |
| Table 10.74 Controller Tab Function Block POU Input and Outputs.....      | 860  |
| Table 10.75 General Settings Names and Descriptions.....                  | 870  |
| Table 10.76 Publications Setting Columns and Descriptions.....            | 871  |
| Table 10.77 Subscriptions Setting Columns and Descriptions.....           | 872  |
| Table 10.78 Valpha Calculation.....                                       | 876  |
| Table 10.79 Controller Tab Function Block POU Input and Outputs.....      | 878  |
| Table 10.80 Frequency Elements Settings.....                              | 880  |
| Table 10.81 Analog Triggers Tab Column Definitions.....                   | 887  |
| Table 10.82 Digital Triggers Tab Column Definitions.....                  | 889  |
| Table 10.83 Recording Triggers POU Output Pins.....                       | 891  |
| Table 10.84 Global Settings Tab.....                                      | 893  |
| Table 10.85 Reports Tab.....  | 893  |
| Table 10.86 Report Generator POU Output Pin Settings.....                 | 894  |
| Table 11.1 Advanced Debugging Tools.....                                  | 921  |
| Table 11.2 Self-Test System Tags.....                                     | 928  |
| Table A.1 RTAC Firmware Revision History.....                             | 947  |
| Table A.2 SEL-2245-2 Firmware Revision History.....                       | 1028 |
| Table A.3 SEL-2245-22 Firmware Revision History.....                      | 1029 |
| Table A.4 SEL-2245-221 Firmware Revision History.....                     | 1029 |
| Table A.5 SEL-2245-3 Firmware Revision History.....                       | 1029 |
| Table A.6 SEL-2245-4 Firmware Revision History.....                       | 1030 |
| Table A.7 SEL-2245-411 Firmware Revision History.....                     | 1030 |
| Table A.8 SEL-2245-42 Firmware Revision History.....                      | 1031 |
| Table A.9 SEL-5033 Software Revision History.....                         | 1031 |
| Table A.10 ICD Revision Table.....  | 1040 |
| Table A.11 Instruction Manual Revision History.....                       | 1041 |
| Table B.1 Examples of Number Constants.....                               | 1062 |
| Table B.2 Examples of REAL Constants.....                                 | 1063 |
| Table B.3 Examples of STRING Constants.....                               | 1063 |
| Table B.4 IEC Data Type.....  | 1077 |
| Table B.5 Status Value of Data Structures.....                            | 1084 |
| Table B.6 Status Value of Data Structures.....                            | 1085 |
| Table B.7 Permitted Data Type Combinations for Input and Output Tags..... | 1085 |
| Table B.8 Configuration Return Codes.....                                 | 1103 |
| Table B.9 Structured Text Instruction List.....                           | 1127 |
| Table B.10 Integer Data Types.....  | 1137 |
| Table B.11 APC Attributes.....  | 1141 |
| Table B.12 BCR Attributes.....  | 1141 |
| Table B.13 BSC Attributes.....  | 1142 |
| Table B.14 CMV Attributes.....  | 1143 |
| Table B.15 CRC Attributes.....  | 1143 |
| Table B.16 CSM Attributes.....  | 1144 |
| Table B.17 DNPC Attributes.....   | 1144 |
| Table B.18 DPC Attributes.....  | 1145 |
| Table B.19 DPS Attributes.....  | 1146 |
| Table B.20 I870SC Attributes.....   | 1146 |
| Table B.21 I870DC Attributes.....   | 1146 |
| Table B.22 INC Attributes.....  | 1147 |
| Table B.23 INS Attributes.....  | 1147 |
| Table B.24 IOC Attributes.....  | 1147 |
| Table B.25 LBCR Attributes.....   | 1148 |
| Table B.26 LEDC Attributes.....   | 1149 |
| Table B.27 MDBC Attributes.....   | 1149 |
| Table B.28 MRBC Attributes.....   | 1150 |

|  |      |
|--|------|
| Table B.29 MV Attributes.....                          | 1151 |
| Table B.30 SPC Attributes.....                         | 1152 |
| Table B.31 SBRC Attributes.....                        | 1152 |
| Table B.32 SPS Attributes.....                         | 1153 |
| Table B.33 SRBC Attributes.....                        | 1153 |
| Table B.34 STR Attributes.....                         | 1154 |
| Table B.35 TIM Attributes.....                         | 1155 |
| Table B.36 quality_t Attributes.....                   | 1155 |
| Table B.37 timeStamp_t Attributes.....                 | 1155 |
| Table D.1 Recording Group Event Grouping Times.....    | 1176 |
| Table F.1 Ethernet Port Configurable Settings.....     | 1187 |
| Table F.2 Default Open TCP Ports.....                  | 1188 |
| Table F.3 Common User-Configurable Open TCP Ports..... | 1189 |

**This page intentionally left blank**

---

---

## S E C T I O N   1

---

# Getting Started

## Overview and Features

---

The ACCELERATOR RTAC SEL-5033 Software is an intuitive, easy-to-use application designed to configure the SEL Real-Time Automation Controller (RTAC) family of products, including the SEL-2240 Axion®. The main principles behind using the software involve the following:

- Creating a project for each RTAC or SEL-2240 system. An SEL-2240 system can encompass more than one node. You will need one ACCELERATOR RTAC project for each SEL-2241 RTAC module you use.
- Inserting and configuring various protocols for devices that connect to IP and serial communications ports on an RTAC or I/O modules for the SEL-2240. Each device name is user configurable with a maximum of 100 characters.
- Mapping tags (data) from intelligent electronic devices (IEDs) or other data sources to data recipients (remote clients) via the Tag Processor. A tag is a 100 maximum character limit name that specifies a data structure (such as a binary input) or piece of data within that structure (such as the Boolean value).
- Writing logic and math statements that create outputs based on tag value inputs. An example would be ORing several binary inputs to create one binary value.
- Writing logic programs/functions in the following IEC 61131-3 languages:
  - Structured Text
  - Continuous Function Block
  - Ladder Logic Diagram
- Creating a device configuration to use as a template for other similarly configured devices.

### NOTE

The ACCELERATOR RTAC SEL-5033 Software configures all devices that are included in the RTAC family, including the following:

|                  |            |                |            |
|------------------|------------|----------------|------------|
| SEL-3505         | SEL-3505-3 | SEL-3530       | SEL-3530-4 |
| SEL-3532         | SEL-3555   | SEL-2241 Axion | SEL-3350   |
| SEL-2241-2 Axion |            |                |            |

Throughout this manual, RTAC refers to all devices in the RTAC family. Any unique instructions for a particular model will be clarified.

## Minimum and Recommended System Specifications

ACCELERATOR RTAC requires a 64-bit version of Windows 10, Windows 11, or Windows Server 2016, 2019, or 2022. ACCELERATOR RTAC performance will scale depending on the size of the projects being created (number of tags, devices, etc.). The minimum system specifications for basic projects (25 devices and less than 5,000 tags) are:

- ▶ 1.5 Ghz multi-core Intel i5/i7, seventh generation or later
- ▶ 8 GB RAM
- ▶ 8 GB of HDD storage

Larger, more advanced projects (more than 100 devices and 10,000 tags) require the following system specifications:

- ▶ 2.8 Ghz multi-core Intel i7, tenth generation or later
- ▶ 16 GB RAM
- ▶ 32 GB of solid-state disk storage


## Logging in to the ACCELERATOR RTAC Database

---

After launching ACCELERATOR RTAC, provide the login and database information necessary to access the default ACCELERATOR RTAC database and begin configuring your RTAC project. The login and database fields identify which ACCELERATOR RTAC database you are using. The software saves this set of information as a connection record with a unique connection name (in the following example, this name is RTAC Default Connection). Initially, you can leave all the fields in the login screen at their default values.

The ACCELERATOR RTAC software can use alternative connection records to access different project databases. To access another database, create a unique name in the **Connection Name** field and then fill out the **Server**, **Port**, **Database**, **User Name**, and **Password** fields. If the ACCELERATOR RTAC software finds the database, and if the username and password are correct for that database connection, it will create a new connection record automatically. This login connection name will be the default connection the next time you start ACCELERATOR RTAC. Select any previously used connection records by using the drop-down list in the **Connection Name** field. Once you have chosen a connection record name, the software will populate all the other fields automatically in the login screen, except for the Password field. Enter the password necessary to log in to the connection you have selected.


Initially, two user accounts exist for the default database. One user account has a username of admin and a password of TAIL. The second user account has a username of engineer and a password of OTTER. The admin account has full access to all software features, including adding and deleting user accounts and unlocking projects that are locked for editing by another user. The engineer account can change their own password but cannot unlock locked projects. SEL recommends that you change the default account usernames and passwords immediately to secure your application. Until you secure the application, the software will display a warning indicating that the database is not secure. For more information regarding the updating of accounts, see *Section 7: Security and Account Management*.

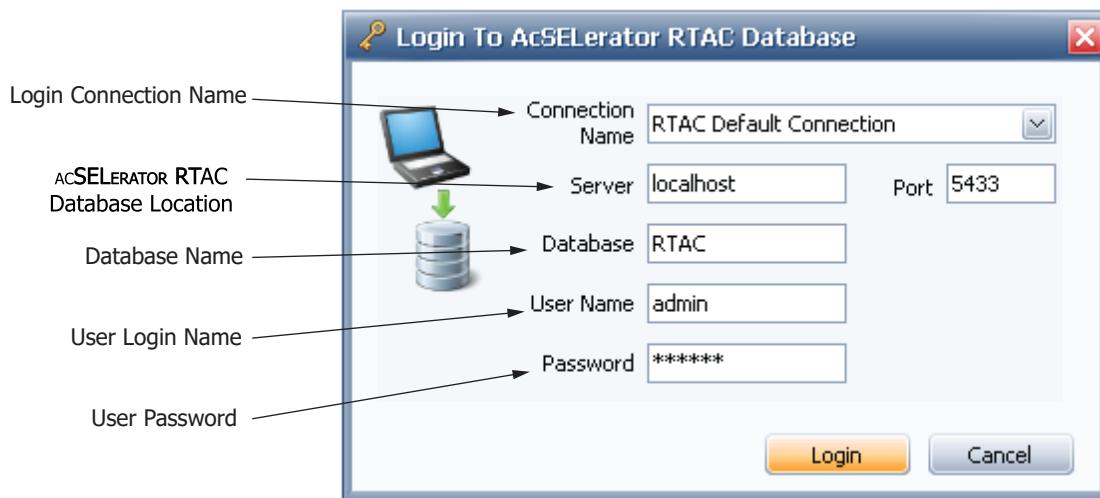

**Figure 1.1 ACSELERATOR RTAC Login Screen**

Use the start page that appears after you log in to the ACSELERATOR RTAC database to view existing projects or create new ones.

## Start Page

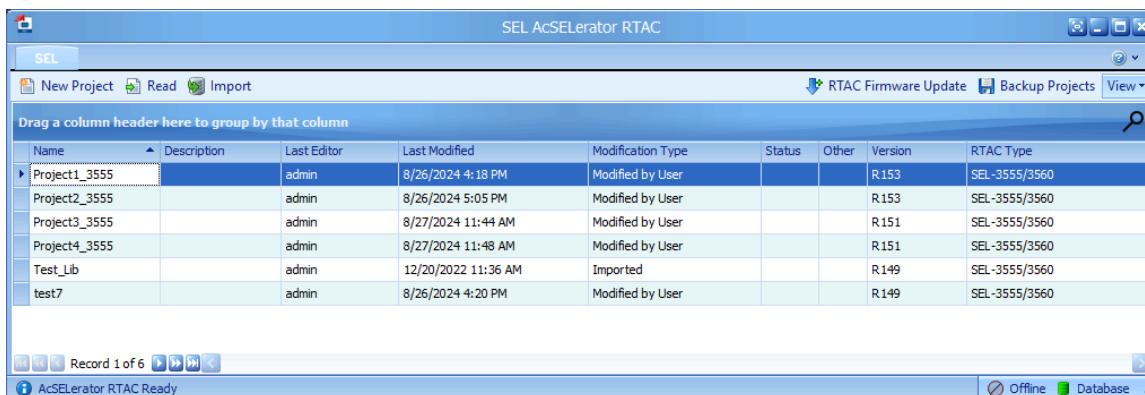

**Figure 1.2 ACSELERATOR RTAC Start Page**

## Start Page Buttons

Several common-function toolbar buttons are available in the ACSELERATOR RTAC start page. The functions of these buttons are described in this section.

Select **New Project** to create a new ACSELERATOR RTAC project.

Select **Read** to read a project from a previously configured RTAC into a new project in your database. You must be connected to an RTAC to read its project. See *Save, Send a Project, and Go Online* on page 112 for more information.

Select **Import** to import a project that was previously exported to an EXP file.

Select **RTAC Firmware Update** to update the firmware of the RTAC.

Select **Backup Projects** to export all projects in your database to EXP files and create a ZIP file containing all of the exported files.

Select **View** to configure a Grid or Tree view for the projects list. The Grid view is the default format and contains all projects in a flat list. The Tree view allows for projects to be organized into folders.

## Projects List

View the list of existing projects in the current database. Open an existing project by double-clicking on the project.

The Projects List has several columns displayed for each project, including the following:

- Name: The name of the project.
- Description: The first line of the Project Description from the Project Properties.
- Last Editor: The user account that most recently made changes to the project.
- Last Modified: The time stamp corresponding to when changes were most recently made to a project.
- Modification Type: The most recent operation that happened in the project, such as the following:
  - Read from Device
  - Created
  - Converted
  - Imported
  - Modified by User
- Status: Indicates if a project is locked or unlocked.
- Other: Displays any advanced read-in project components embedded in the project, such as Ethernet Settings or User Accounts, when you hover your mouse over a cell.
- Version: The version of the project.
- RTAC Type: The type of RTAC (e.g., SEL-3350 or SEL-3555/3560).

Right-click on a project to perform the following actions:

- Open the project.
- Unlock the project.
- Clean the project. This deletes the embedded user logic image from the project and requires a resend to go back online with an RTAC. This action is not typically required.
- Rename the project.
- Delete the project.
- Import a project from an EXP file.
- Export a project to an EXP file.
- Back up all projects to a ZIP file.
- Restore all projects from a ZIP file.
- Convert the project to a newer firmware version or to a different RTAC type.

- ▶ Compare two or more projects. This action requires that multiple projects using the same firmware version be selected at once by using <Ctrl+click> or <Shift+click>. See *Compare ACCELERATOR RTAC Projects* on page 120 for more information.
- ▶ Set the password security for a project.
- ▶ Disable the password security for a project.


## Creating a New Project

---

A project contains communications settings, tags, and logic for a particular RTAC configuration. You can create a new project or use a project you saved previously as a starting point for a new project.

Click the **New Project** button at the top of the start page or select **New** from the menu in the SEL application button to access the project creation dialog box.


To quickly create a new default project for the latest RTAC version, select the **Create** button shown in *Figure 1.3* to open the project view. The **RTAC Firmware Version** pane provides a method to create projects for earlier RTAC versions. ACCELERATOR RTAC selects the latest firmware version by default. If you select a previous version, ACCELERATOR RTAC will remember that selection the next time you create a new project.

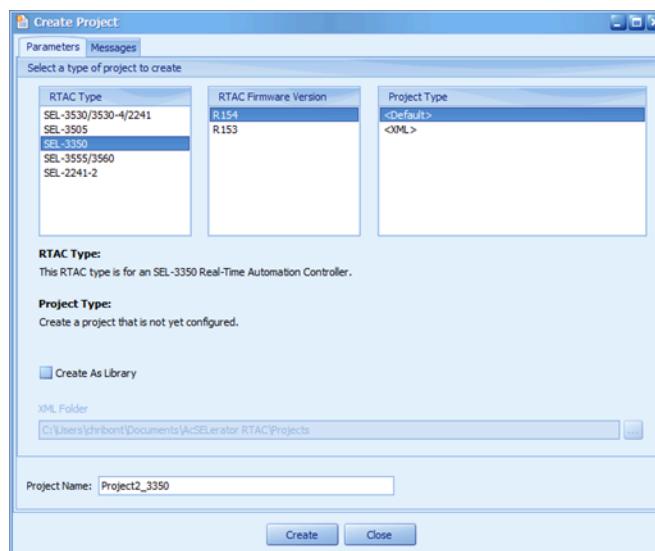

**Figure 1.3 ACCELERATOR RTAC Project Creation Interface**

The default ACCELERATOR RTAC project template includes an RTAC (system tags and diagnostics), but no pre-configured client or server protocol connections. Select the default project category and default project template to create and open a default project. If necessary, enter a custom project name. If you have previously exported items from an RTAC project in XML format, you can select **XML** under **Project Type** to create a new project using those XML files.

ACSELERATOR RTAC also provides some Axion example projects in the Project Type column that include common settings for certain types of applications. Click on an RTU project type name from the list to see a project description. Provide a custom project name, if necessary, and select Create to open the example in the project view for editing. Refer to *RTU Project Examples on page 299* for more information.

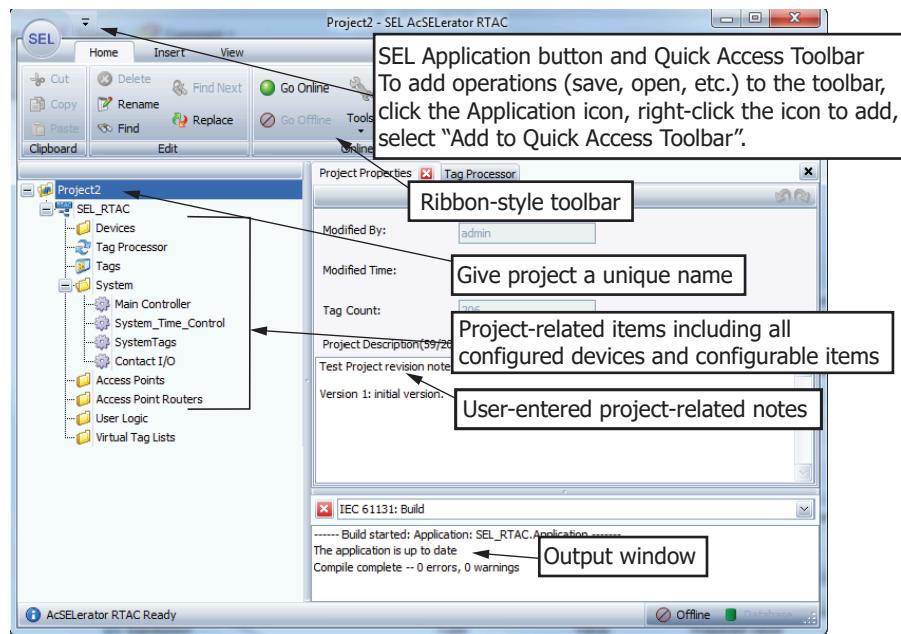

**Figure 1.4 Project View**

Navigate this screen by using the ribbon menu and the configurable **Quick Access Toolbar** at the top. The ribbon menu has four tabs:

- **Home:** Perform standard editing functions such as copy, paste, find, replace, etc. Also contains online tools including online/offline buttons, communications monitoring (Comm Monitor), and the Tools menu for user logic debugging options.
- **Insert:** Add a new intelligent electronic device (IED) or remote polling device, add new SEL-2240 I/O modules, save or retrieve a custom device configuration, add an access point router, or create custom IEC 61131-3 user logic.
- **View:** Open/close window panes, view reports, return all docked windows, and change skins for personal preference.
- **Tag Processor:** Append, insert, and delete lines in the Tag Processor as well as copy, paste, and delete items. This menu is only visible when the Tag Processor window is in focus.

The following descriptions are for items in the project tree, located in the left window pane of *Figure 1.4*. Right-click the project name to rename it. Right-click on **SEL\_RTAC** to add any of the following features. You can also add folders in the project tree by using the right-click menu. Organize devices and

connections by dragging and dropping them into the custom folders as needed. To re-order folders on the same level of the project tree hierarchy, hold the <Shift> key while moving the folder to prevent it from being relocated as a sub-folder.

- **Project2:** The configurable name of the current project. This must be a unique name in a given database.
- **SEL\_RTAC:** The name of the device in the project.
- **Devices:** A blank folder where you can place devices configured for this project (IEDs, remote client connections, etc.).
- **Tag Processor:** Tag mapping tool used to map data from IEDs to polling client devices.
- **Tags:** View of all alias tags. When online, view of task timers, task controller blocks, and program organizational unit (POU) pins.
- **System:**
  - **Main Controller:** Set cycle time, watchdog time, and execution order of tasks or program organizational units (POUs). For example, alter the execution order to ensure that all defined protocols collect data before a custom logic program uses the data.
  - **System\_Time\_Control:** Configure device time-source information such as IRIG-B, PTP, and NTP. Configure UTC time and Daylight-Saving Time settings.
  - **SystemTags:** Configure and view all system (non-device or user logic) tags here. Open **SystemTags** when online to view and/or force present values of all system tags. Also configure the C37.118 Data\_Rate or rate of data transmission. *IEEE C37.118 Synchrophasors on page 451* explains this further.
- **Contact I/O:** Configure RTAC contact inputs and outputs, including tag names, pickup and dropout delays, and default values.
- **EtherCAT I/O Network:** Visible once you have inserted an Axion node from the insert menu. Configure and view SEL-2240 nodes and modules. View network messages in Online mode.
- **Access Points:** A blank folder where you can place names of access point configurations, which are used with access point routers in creating transparent connections.
- **Access Point Routers:** A blank folder where you can place names of transparent connection configurations.
- **User Logic:** A blank folder where you can place user-defined logic blocks. This includes IEC 61131-3 programs, functions, function blocks, user-defined global variable lists (GVLs), and data types.
- **Virtual Tags:** A blank folder where you can place virtual tag lists. Virtual tags are global variables that you can use anywhere in an RTAC project. You can create as many as 30 virtual tag lists in a single project (100 virtual tag lists in SEL-3555 and SEL-3350 projects).

## Task Cycle Time

The RTAC executes all tasks each task cycle time interval to which they are assigned. Configured task cycle times that are evenly divisible into one second are synchronized to execute at the top of each second of the system time. For example, if the processing cycle is configured as 100 ms, the first task cycle

will be at the top of the second. Subsequent task cycles are executed at 100 ms intervals until the top of the next second, at which time the next processing cycle is executed. Configured task cycle times that are not evenly divisible into one second are not executed at the top of the second but are still locked to system time. By default, all tasks run in the main task cycle interval.

Perform the following steps to assign certain tasks to the automation task cycle so that they can run independently and at a faster interval than the main tasks.

- Step 1. From the **Main Controller** tab, click the task in the task order list.
- Step 2. Click the **Move To** button to move the task from the main task cycle to the automation task cycle.
- Step 3. Click the **Automation** tab to configure the automation task cycle parameters.

With the present software, you cannot directly map tags from a task that is in the automation task cycle to a task that is in the main task cycle. Each tag value, control, and logical operation cannot update faster than the task cycle time.

While online with the RTAC, you can view various task timers, as well as an overall task timer, in ACSELERATOR RTAC by clicking on **Tags** under the device tree. The task timers indicate how long, in microseconds, the tasks are taking to run. You should configure the main task cycle time to be at least 140 percent of the overall task timer. This provides enough time for the tasks to run, with added time for the RTAC web interface and HMI access. If you configure the RTAC main task cycle time less than what is actually required to run all the defined tasks, the RTAC will run over the task cycle time. For example, if you configure the RTAC to run every 20 milliseconds, but the total task timer indicates the RTAC tasks are using 50 milliseconds to complete, the RTAC will not drop tasks, but will use time from subsequent task cycles to ensure each task runs to completion. The RTAC will therefore not complete every task in the configured 20 milliseconds, and web access performance will be degraded.

The automation task timers are not contained in the **Tags** tab. To view the task times for tasks that are located in the automation task, click **Tools** on the **Home** ribbon while online. Select **Watch Values** and open a watch window. In the watch window, type the following:

**SEL\_RTAC.Application.Automation\_SystemTotal\_task\_timer**

This contains the automation task timers. Use this information to adjust the automation processing cycle. The information regarding adjusting the main task cycle for optimal performance applies to adjusting the automation task cycle as well.

#### **NOTE**

If an SEL-2245-4 or SEL-2245-42 CT/PT module is the source of any C37.118 data, the task cycle time will lock to the configured Nominal Frequency. The task cycle time will be 20 ms for 50 Hz and an average of 16.667 ms for 60 Hz. The 16.667 ms average is achieved by running the task cycle time at 17 ms for two cycles and then 16 ms for one cycle.

A rising edge change triggers control operations in the RTAC per cycle interval. This implies a control value that is high must drop low and become high again for a second control operation. Because the RTAC only updates values each cycle-time interval, the control state change must occur each interval. For example, a change in control state from high to low to high during one cycle-time interval will not trigger a new control value because only the last value

(high) will be stored. It is possible, therefore, to configure the cycle-time interval in such a way to cause the RTAC to miss rapid control changes. As a rule, set the cycle-time interval such that control operations are not executed at a rate greater than half the cycle-time interval.

## Startup Time

The initial startup time of the RTAC varies depending on the version of the RTAC used. The initial startup time includes initializing all of the operating system, exe-GUARD®, and initialization of communication links among other system tasks. This corresponds to when the RTAC **ENABLED** LED turns green and does not include the time to establish communication to downstream devices. Fully establishing communication with downstream devices requires additional time based on the configured communications parameters and can be adversely impacted if the RTAC is configured with a high burden. *Table 1.1* shows expected initialization times for each RTAC type.

**Table 1.1 Typical RTAC Startup Time**

| RTAC Type                      | Time to Enable |
|--------------------------------|----------------|
| SEL-3530, SEL-3530-4, SEL-2241 | ~2.5 minutes   |
| SEL-3555                       | ~45 seconds    |

## Application Button

Click the **SEL Application** button  to execute file and database functions.

Add frequently used functions by clicking on the **SEL Application** button, right-clicking on the function you want added, and selecting **Add to Quick Access Toolbar** from the pop-up menu.

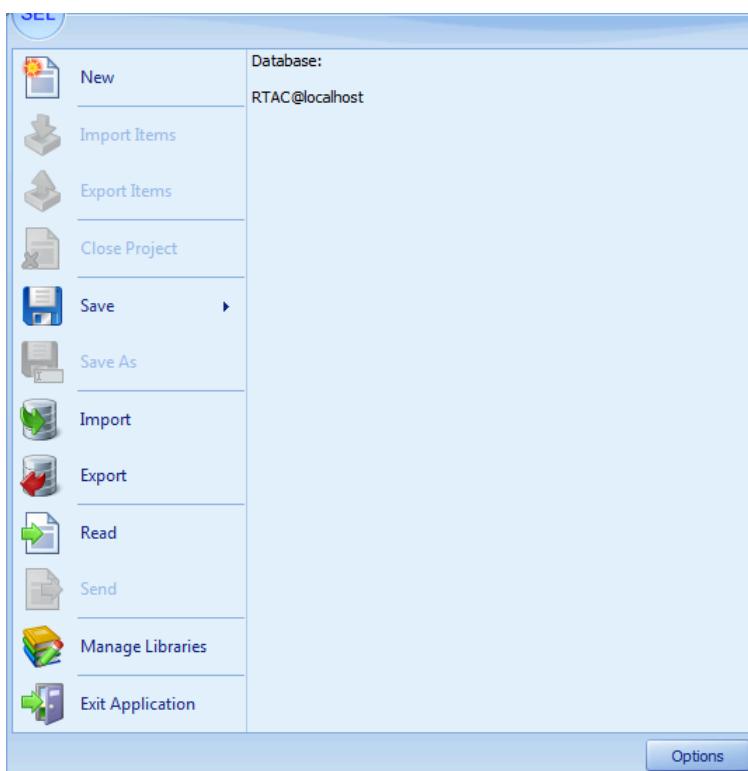


Figure 1.5 Application Button and Quick Access Toolbar


#### NOTE

User-created names must conform to IEC 61131-3 standards: only use letters, numbers, and underscore; always start with a letter; and never have two consecutive underscores. If a name is invalid, a will appear beside it.

- **New:** Create a new project for an RTAC.
- **Import Items:** Import individual project items from previously exported XML files. This is only available while a project is open.
- **Export Items:** Save selected project items as XML files. This is only available while a project is open.
- **Close Project:** Close current project. This will not close ACCELERATOR RTAC.
- **Save/Save As:** Save current project.
- **Import:** View or edit projects that you exported previously. This is only available from the start page.
- **Export:** For the selected configuration, generate a configuration file that can be imported into any ACCELERATOR RTAC database. This is only available from the start page.
- **Read:** Read an existing configuration from a connected RTAC. This is only available from the start page.
- **Send:** Send a compiled project to a connected RTAC.
- **Manage Libraries:** Install previously created libraries for use in ACCELERATOR RTAC projects.
- **Exit Application:** Close ACCELERATOR RTAC. Be certain that you save and close projects before exiting.


## Docking Windows

From the Project View, you can open configuration windows by clicking devices in the device tree. Most of these windows can be undocked from ACSELERATOR RTAC and placed anywhere on your computer workspace. To do this, click the top bar, which bears the name of the window in focus, and drag it anywhere on your workspace. See *Figure 1.6*.

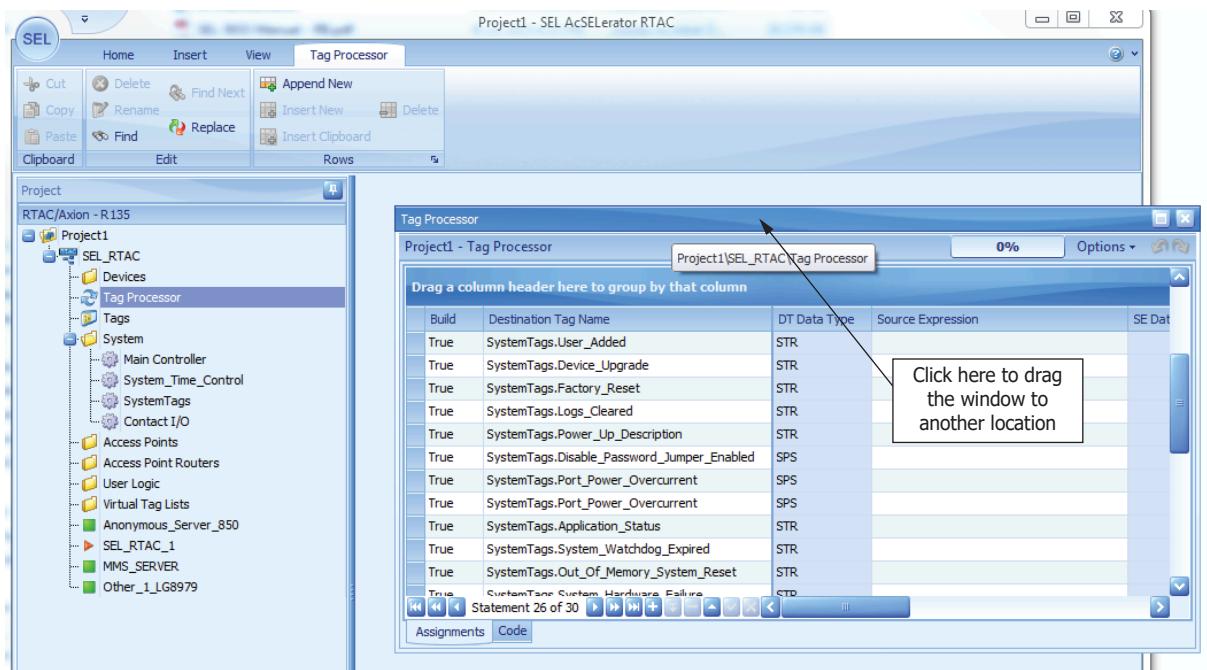

**Figure 1.6 Docking Windows**

Each window will retain the project and window names. To return the window, close the window by selecting the X in the upper right-hand corner or click **View > Reset Window Layout** to restore all windows to your project. See *Figure 1.7*.

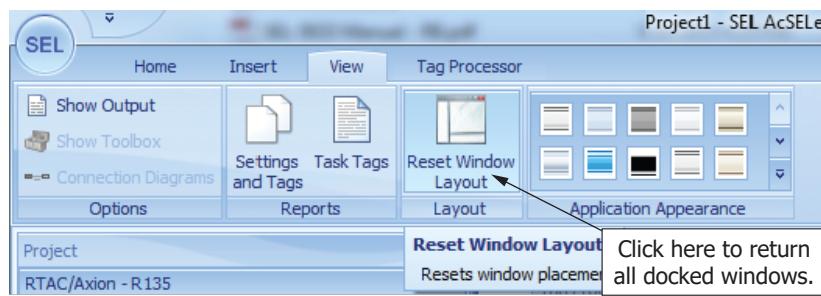

**Figure 1.7 Reset Docked Windows**

## Key Shortcuts

As with most Microsoft Windows-based programs, there are a number of keystroke shortcuts you can use to copy, paste, find, and perform other operations. From the **Home** ribbon, or within the SEL action button, hover your mouse over the operation to display a tooltip window that describes the operation and the keystroke shortcuts.

Use <Ctrl+Alt+click> in structured text programs to highlight, copy, paste, and delete columns of text. Anything you type in a highlighted column will be replicated in every row of that column.

## Open/Edit an Existing Project

---

You can open and edit an existing project by double-clicking on the project name in the ACSELERATOR RTAC start page. You can also open and edit projects not in the database that are presently in an RTAC, or projects that have been previously exported.

Use the **Read SEL RTAC Project** button  on the start page to retrieve an existing project from a working RTAC.

- Step 1. Ensure proper physical connection with either Ethernet or USB to the RTAC. See the installation instructions for your RTAC module for physical connection requirements.
- Step 2. Click the **Read SEL RTAC Project** button. The login screen will appear.
- Step 3. Enter correct RTAC login information and press **Next**.
- Step 4. If required, enter a unique project name.
- Step 5. Click **Next**.
- Step 6. The settings read will commence. Read time will vary depending on the project size.
- Step 7. Press **Finish** when done. The read operation is now complete, and you can view or edit the project.

### NOTE

RTAC projects created in newer versions of ACSELERATOR RTAC and sent to an RTAC are not guaranteed to be compatible when read out with prior versions of ACSELERATOR RTAC.

Use the import/export functions to save/retrieve an existing project.

- Step 1. After you have created and saved a project, click the **Export** icon  from the **SEL Application** button. Note that all projects must be closed before you can use the export/import functions.
- Step 2. Create a unique name and press **Save**. The software will save the selected project as a file with extension .EXP. You can use email, USB memory stick, etc. to send this file to any PC running the same version of ACSELERATOR RTAC software and import the file to make further edits or send the settings to an RTAC.

### NOTE


EXP files created in newer versions of ACSELERATOR RTAC are not guaranteed to be compatible when imported into prior versions of ACSELERATOR RTAC.

- Step 3. To open an exported file, select the **Import** icon  from the **SEL Application** button.

Step 4. Browse and select the correct file name with extension .EXP and click **Open**. The software imports the project information in the .EXP file into the ACCELERATOR RTAC configuration database in the local machine.

## Tag Selector

During configuration of project settings, many operations require that project tag names be entered in to various fields for mapping operations, such as those described in *Section 3: Tag Processor* and *Section 10: Extensions*. The Tag Selector is a tool that allows for drag-and-drop operations of one or more tags into tag entry fields in the project. Launch the tool by selecting **Tag Selector** from the Home ribbon. The Tag Selector will open, docked in the same position as the left project tree. Toggle back and forth between the project tree and Tag Selector by using the tabs at the bottom of the docked window. Close the Tag Selector by selecting the X in the upper right corner when tag mapping operations are complete.

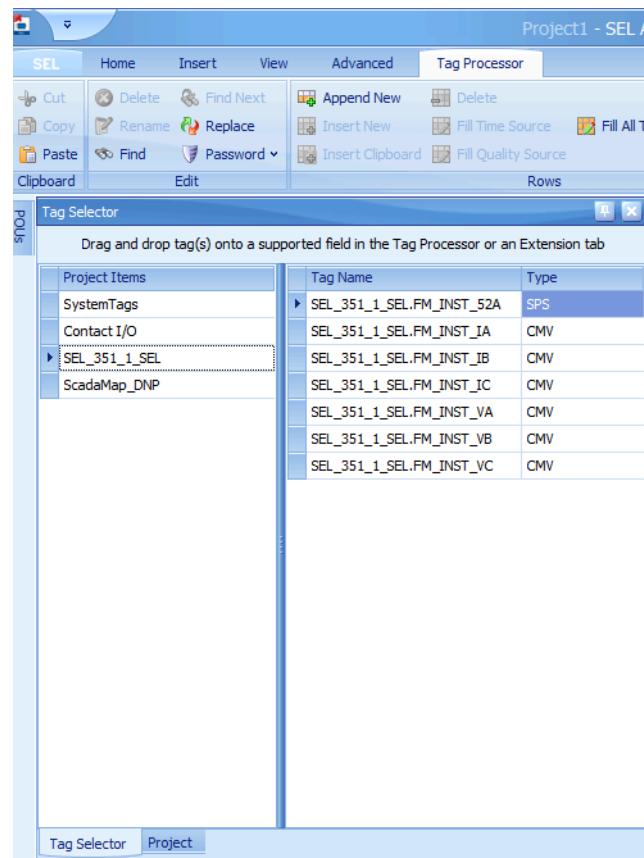

The following project items are displayed in the left side of the Tag Selector as sources for tags:

- Devices
- Shared Tag Maps (e.g., DNP server shared maps)
- Virtual Tag Lists

- ▶ System Tags
- ▶ Contact I/O

Selecting a different project item in the left side of the Tag Selector will update the right side with the available tags from that item. Apply filters to the list of tags by using the Type column to reduce the list to only display specific tag types (e.g., SPS or MV).

You can drag-and-drop information from the Tag Selector to the following settings fields in an RTAC project:

- ▶ Tag Processor **Destination Tag Name** and **Source Expression** fields
- ▶ Settings fields where the tags are entered in extensions such as the **Monitored Data** tab in the Dynamic Disturbance Recorder extension and the client-to-server mapping tabs in the **Generated\_Map** subitem of the Simple Tag Mapper extension

Select one or more tags from the Tag Selector using <Ctrl+click> or <Shift +click> and drag the tag(s) to an empty cell in the Tag Processor or extension. If multiple tags were selected and not enough rows exist on the destination object to accept them, new rows are automatically added to accommodate all of the tags.

## Save, Send a Project, and Go Online

---

After completing the RTAC configuration, save and send the project into the RTAC. Before sending the project, you must first set up a user account on your RTAC through the web interface. See *Section 7: Security and Account Management* for details.

- Step 1. Ensure proper physical connection with either Ethernet or USB to the RTAC. See *Section 2: Installation* in the *SEL-2240 Instruction Manual* for physical connection requirements.
- Step 2. Click the **Save** icon, accessible either from the **Quick Access Toolbar** or by clicking the **SEL Application** button, to save and compile the project. Alternatively, you can press <Ctrl+S> to save the project.

### NOTE

The save operation first checks the project for syntactic errors before storing the project in the database. The normal save operation does not, however, check for tags that are referenced in the automation and main task. This is referred to as cross-task checking and is done only when you select the save with cross-task checking option, or when you send the project to the target.

- Step 3. Check the output window for compile errors or warnings. Resolve errors before continuing. Double-click on the error line in the output window to have the program direct you to the item causing the error.
- Step 4. Click the Send icon  to send the new configuration and logic to the RTAC.

- Step 5. Enter the RTAC IP address in the RTAC Address field, username, and password then press **Next**. Note that the **RTE Port** and **Port** fields are exposed to allow connections to RTACs located behind firewalls or routers that may map the default connection ports of 1217 and 5432 to custom ports.

You can use the same default connection name for each time you connect to an RTAC. Alternatively, you can create a unique connection name for each unique IP address of each RTAC residing on the network. To create a new connection, type a unique connection name and IP address, enter the username and password, then press **Login**. The connection information is stored in the ACCELERATOR RTAC database. The next time you attempt to go online with a project, the most recently used connection information is displayed. You can also select other previously used connections from the **Connection Name** drop-down menu.

Note that the RTAC and ACCELERATOR RTAC software usernames and passwords are not necessarily the same. The RTAC web interface maintains the RTAC username and password information. See *Section 7: Security and Account Management* for more information on password management.

- Step 6. Optional: Click the **Options** tab and indicate if you want to send the complete project or only IEC 61131-3 logic changes.

#### NOTE

If a protocol is disabled during a settings send through custom logic or a direct transparent connection, it will not re-enable until after the RTAC restarts with the newly received settings.

You can do quick iterative testing of IEC 61131-3 logic by selecting **Send only custom IEC 61131 logic**. This option does not reset the RTAC and thus allows a form of online editing of your custom logic. Other settings, such as those in protocol configurations, are not sent to the RTAC when this is selected, so it is important to resend the entire project when you are finished testing IEC 61131-3 logic changes.

When you are satisfied with the IEC 61131-3 logic, always select **Send Complete Project** and resend the entire project. This puts the RTAC into service and allows you to read the entire project out of the RTAC at a later date if necessary.

- Step 7. When the the settings send operation is complete, click **Finish**. Upon completion of RTAC programming, the RTAC automatically enters online mode.
- Step 8. (This step only applies to projects that include SEL Axion I/O modules and EtherCAT protocol.)

After settings are completely sent and the project starts running, the RTAC will automatically configure and start the EtherCAT network. No user selections will be required during the configuration process. All other protocols and user logic in the RTAC will begin to run as soon as the project send operation is complete.

Monitor the configuration status by watching the messages in the software status bar (bottom of software window). Configuration will take 10–15 seconds per power coupler and I/O module on the network. A network with 60 modules can take 12 minutes to fully configure. Configuration times will be longest during the initial project sending sequence. Subsequent project changes will configure more quickly.

The sequence of configuration messages are as follows:

- ▶ "Beginning EtherCAT boot sequence..."
- ▶ "Reading EtherCAT settings..."
- ▶ "Addressing EtherCAT network..."
- ▶ "Verifying EtherCAT network..."


Step 9. While online, you can view data, force values, and perform other online functions, as necessary.

Step 10. After you finish viewing data, etc., press  to go offline. Note that all logic and configuration will continue to run and that the RTAC application is now in service.

If any tag values remain forced when you attempt to go offline, a dialog box will ask if you want to unforce them. If you go offline because of inactivity, the values are automatically unforced and returned to their original state.

Go online anytime by selecting the  icon. Upon selecting the go online icon and entering your user credentials for authentication, the RTAC software compares the currently open project with that in the RTAC. If these projects are the same, the RTAC will go online immediately. If the projects differ, ACSELERATOR RTAC will prompt you to send the currently open project to the RTAC.

If you are online with an RTAC running firmware version R151-V0 or later, the device icons in the project tree will display the communication status of that device. Green indicates an online device, red indicates an offline device, and grey indicates a disabled device. The update rate of the device icons can be adjusted per project type in ACSELERATOR RTAC via **Options > Online Preferences**.

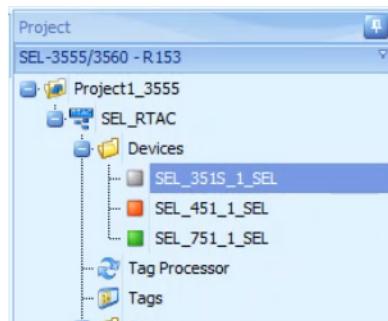

**Figure 1.9 Project Tree Device Communication Status**

For more information about online options such as forcing data values, creating tag watch windows, and changing the tag display modes, refer to *Section 11: Testing and Troubleshooting*.

# Creating and Augmenting Projects With XML

## Exporting Programs to XML

You can export individual POU s such as custom function blocks, client and server POU s, and tag processors to an Extensible Markup Language (XML) format. You can later import these individual XML files into existing projects or group them together to generate a new project.


### NOTE

Manually editing the exported XML files can create settings that are not valid in an RTAC project. Be careful not to place invalid combinations of XML files in the same directory. For example, copying and pasting a program XML file would create an invalid condition because the program name is the same in both XML files even though the file names differ. The RTAC software ensures that all configured POU s have unique names.

To export your POU s to XML, perform the following:


- Step 1. In an open project, select **Export Items** from the **SEL Application** button or right-click the desired POU and select **Export Items**.
- Step 2. Select the items you want to export from the resulting pop-up window.
- Step 3. Click the **...** button choose a directory in which to store the exported features.
- Step 4. Press **Export**.

The software exports each selected item into individual XML files and places the files in the export location directory you selected.

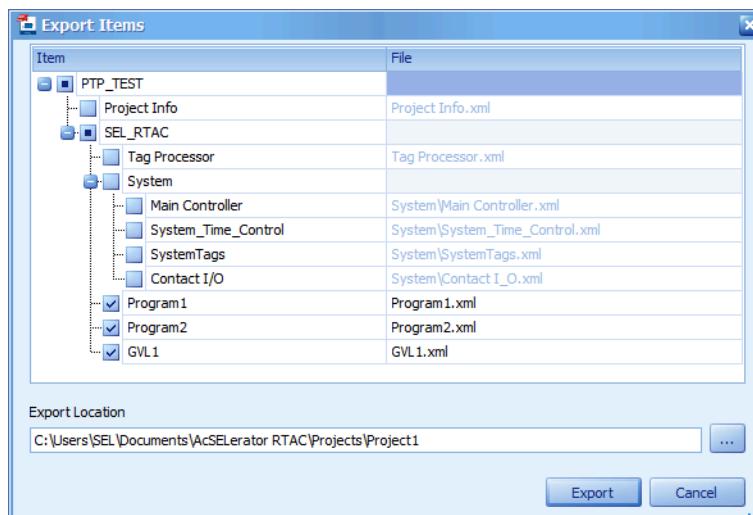

**Figure 1.10 Export to XML Window**

Alternatively, you can select one or more POU s from the project list, right-click, and select **Export Items**. The resulting pop-up window indicates with check marks all POU s you selected.

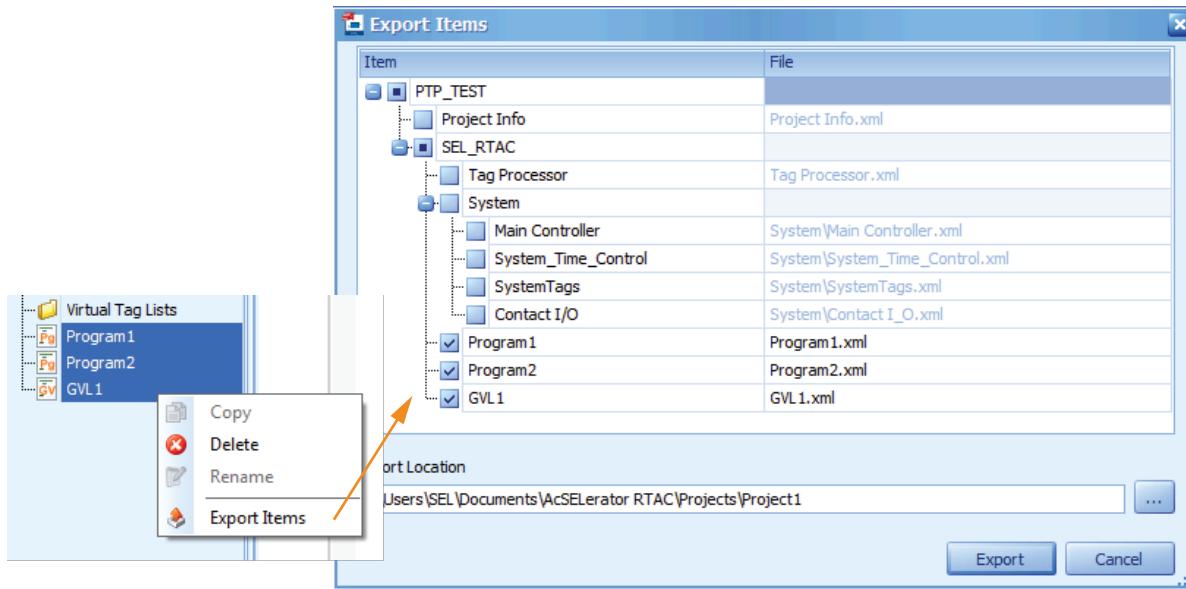

**Figure 1.11 Export Selection to XML**

Using Windows Explorer, you can create custom folders and place combinations of these XML files as necessary for future projects. You do not need to have every object from a project in the folder. Use only the objects you want. For example, in *Figure 1.11*, Project1 contains two custom IEC 61131-3 programs and a Global Variable List (GVL1) to use in multiple future projects. You can export each of the items you selected into a folder for use as a base for future projects that need those items.

To use the exported XML, you can either add individual XML files to an existing project or create a new project from exported XML files.


#### NOTE

Exported XML content created in newer versions of ACSELERATOR RTAC is not guaranteed to be compatible when used with prior versions of ACSELERATOR RTAC.

## Modify Existing Projects With XML

ACSELERATOR RTAC software allows you to import existing XML projects. Perform the following steps to import XML POU's directly to an existing project.


- Step 1. From an open project, select **Import Items** from the **SEL Application** button.
- Step 2. Choose the folder that contains the XML file you want. See *Exporting Programs to XML on page 115* for instructions on generating the necessary XML files.

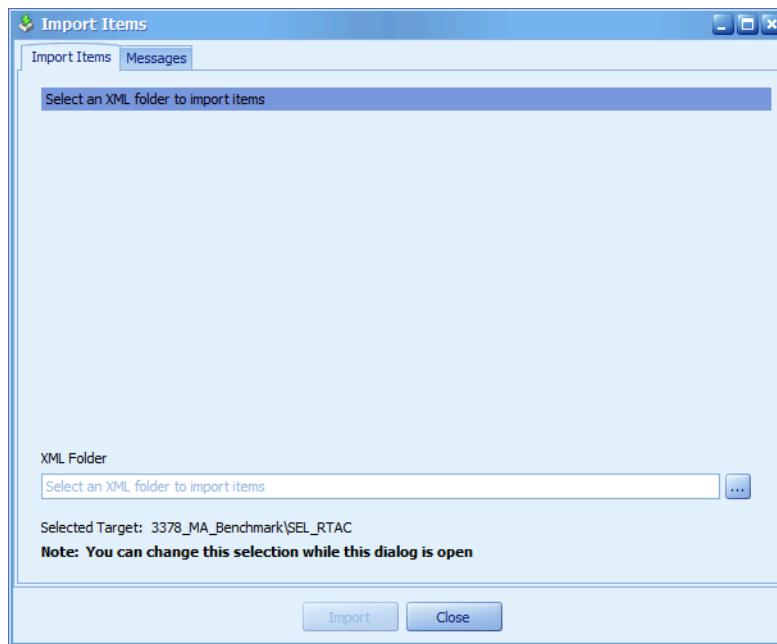

**Figure 1.12 Import XML Window**


Once you select the folder, the software displays all XML files available for importing.

Step 3. Select one or more of the available XML files and click **Import**.

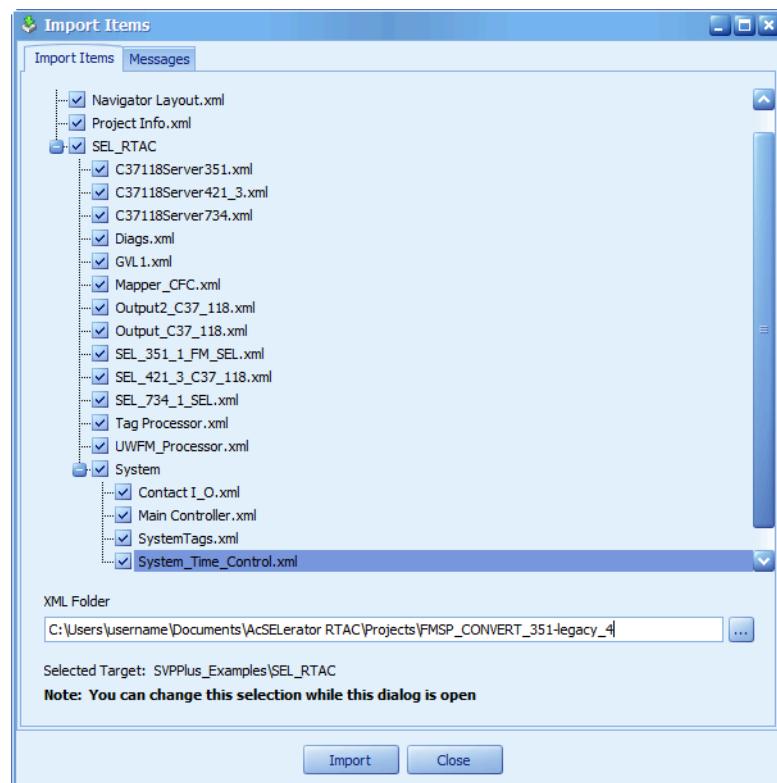

**Figure 1.13 Import XML Items**

Configuration parameters on certain project items require project uniqueness in an ACCELERATOR RTAC project file (for example, the **Virtual Port Number** value assigned to all SEL Client protocol devices). If there are collisions between these values encountered while importing XML content into an existing project, the values in the incoming XML template are forced to a new unique value in order to enforce the uniqueness rules. If these values are changed during the import process, a notification message is posted to the import window, as shown in *Figure 1.14*.

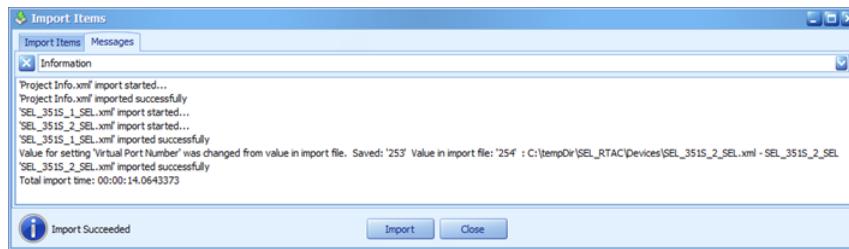

**Figure 1.14 Import XML Items—Setting Value Changed**

The following items from exported XML content cannot be imported into an existing project:

- ▶ Main Controller
- ▶ Navigator Layout
- ▶ POU tab content from developer mode projects

## Creating a New Project From XML


To use the exported XML files to generate a new project, select the **New Project** button while on the start page or select **New** in **SEL Application**. Select **XML** under **Project Type**, browse to the folder you previously created with the XML files, and select **Create**. The software uses all settings within the XML files in your selected folder to create a new project.

## Backup/Restore Projects

---

The Backup Projects feature allows you to create a zipped file of all projects presently in your RTAC database.

- Step 1. From the ACCELERATOR RTAC start page, right-click anywhere in the **Projects** area.
- Step 2. Select **Backup Projects**.
- Step 3. Navigate to the location in which you want to save the archive.
- Step 4. Name the file and press **Save**.

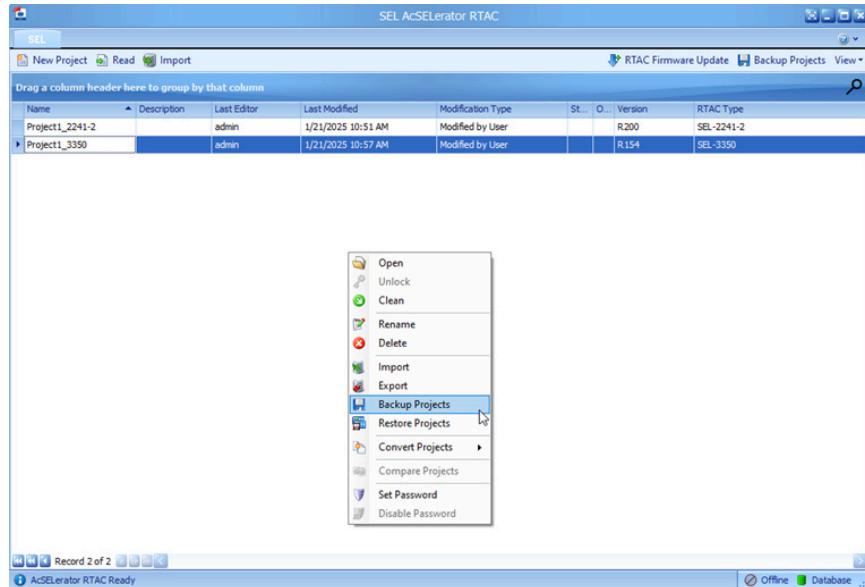

**Figure 1.15 Project Backup and Restore**

ACSELERATOR RTAC will create a zipped file of all projects. You can email this zipped file, store it on external media, etc. To restore the projects, use the same version of ACSELERATOR RTAC that you used to create the projects:

- Step 1. From the ACSELERATOR RTAC start page, right-click in the **Projects** area.
- Step 2. Select **Restore Projects**.
- Step 3. Navigate to the location of the archive .zip file.
- Step 4. Select the .zip file and click **Open**.

ACSELERATOR RTAC restores all projects that are part of the archive, without overwriting existing projects. The restore process will resolve any name conflicts by appending a .0, .1, etc. to the end of the restored project names. For example, restore a project named MyProject when there is already a project with that name in the ACSELERATOR RTAC database. The software renames the restored project to MyProject.0. Restoring the project again will retain the two existing projects and create a newly restored project with the name MyProject.1.

## Converting Projects

Use the project backup utility before updating ACSELERATOR RTAC to a newer version. Once the update is complete, restore projects, as necessary. You can use the projects as they are, or you can upgrade the database of the older projects to the latest version to be compatible with the latest RTAC firmware. The new project version can contain extra settings fields in existing protocols that allow the use of new features, new protocols, or additional data tags in database definition files (DDF) associated with templated devices. Project conversion can also be used to convert existing projects between the different available RTAC types:

- SEL-3530/3530-4/2241
- SEL-3505

**Compare ACCELERATOR RTAC Projects**

- ▶ SEL-3350
- ▶ SEL-3354/3351/3332/1102
- ▶ SEL-3555/3560
- ▶ SEL-2241-2

To convert an older project, follow these steps:

Step 1. Enter the **Convert SEL RTAC Project Settings** tool by doing either of the following:

- ▶ Right-click a project from the list of projects on the start page, then select **Convert Projects > By Project Type** or **By Project Version**.
- ▶ From the SEL button, select **Options > Convert Project Settings > OK**.

Step 2. Check the tab at the top of the conversion tool (by version or by type) to ensure use of the correct conversion mode.


Step 3. Select the project to convert.

Step 4. Change the **Convert?** field from **No** to **Yes**.

Step 5. If converting by type, change the **Converted Type** to the type of RTAC to which you want to convert.

Step 6. Click **Convert**.

The project will now have the new features from the latest database schema or, if converted to another type, those that can be loaded into the RTAC type to which it is converted. Open the converted project and ensure that the new schema settings are the values you need.

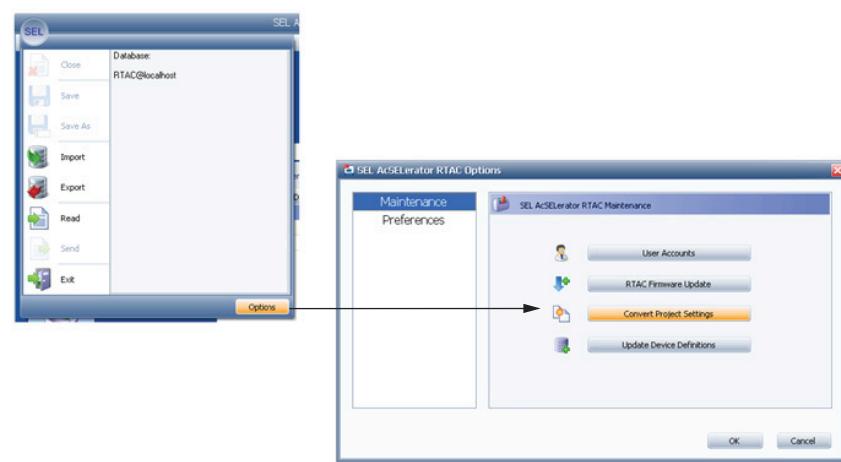

**Figure 1.16 Convert a Project**

## Compare ACCELERATOR RTAC Projects

To compare two projects in ACCELERATOR RTAC, from the main menu, hold **<Control>** and select the desired projects to compare, and then right-click and select **Compare**.

When the comparison is done, a window appears showing the POU's that registered a difference. In the top portion of the window, the **Baseline** project can be changed. This changes the detection of additional missing POU classifications in the list below. There is also an option to show all POU's in the configuration regardless of whether differences are detected.




The bottom portion of the window shows the list of POU's that have detected differences (if the **Show only differences** check box is selected). For items that are listed as Comparable, double-click or right-click an entry to see a more detailed comparison screen.

| Status     | Name                      |
|------------|---------------------------|
| Comparable | SEL_751_USS_BKR19_850     |
| Comparable | SEL_751_USS_BKR18_850     |
| Comparable | SEL_751_USS_BKR17_850     |
| Comparable | SEL_751_USS_BKR16_850     |
| Comparable | SEL_700G_GPS_BKR52G4_850  |
| Comparable | SEL_700G_GPS_BKR52G3_850  |
| Comparable | SEL_700G_GPS_BKR52G2_850  |
| Comparable | SEL_700G_GPS_BKR52G12_850 |
| Comparable | SEL_700G_GPS_BKR52G11_850 |

**Table 1.2 Status Values**

| Status Name               | Description  |
|---------------------------|--|
| Comparable                | Differences were detected (double-click for a detailed view).  |
| Added                     | The baseline configuration contains a POU that the <b>Compare To</b> project did not.  |
| Removed                   | The baseline configuration does not contain a POU that the <b>Compare To</b> project did.  |
| Over threshold percentage | This designation indicates that although the POU name is the same, there are so many differences detected that it is likely that the POU is <i>not</i> the same type in both configurations. This is designated by a percent difference detected, which is configurable under <b>SEL &gt; Options &gt; Preferences</b> . |

## Compare Window Layout

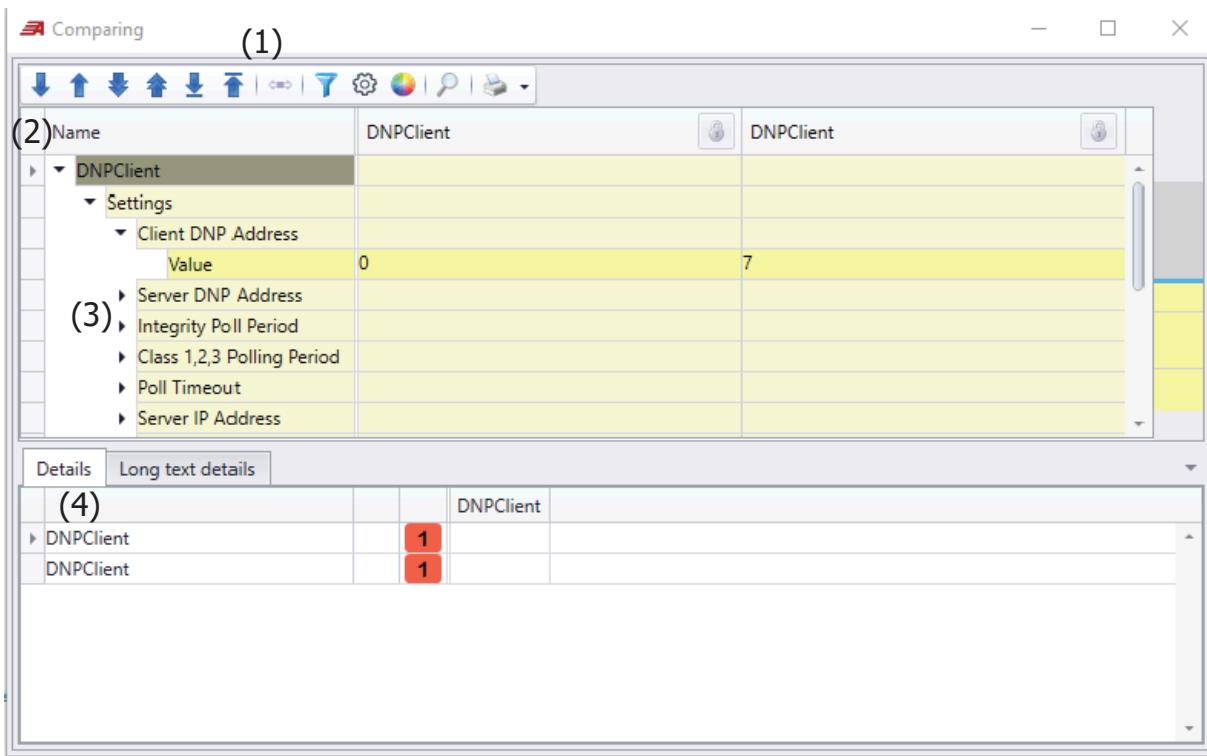

**Figure 1.17 Compare Window Components**

- ① **Navigation and Filter Options:** This section includes the navigation and filter options for the Compare Results window.
- ② **Compare Node Names:** This section displays the names of selected nodes and enables the Save icon for those nodes that have changes.
- ③ **Compare Results Window:** This section displays the node information and attached settings and highlights the differences.
- ④ **Difference Output:** This section displays the values for and differences, if any, from the selected row in the Compare Results window.

### Filter Options

#### Hide Similar Values

This option filters out any similar values across the rows of settings being compared so that only rows with differences appear.

#### Hide Inactive (Hidden) Rows

This option filters out device node rows rendered inactive and unchangeable because of either a part number or settings rule.

#### Reset to Default

This option resets the filters to original ACCELERATOR RTAC default values.

## Comparison Options

### Ignore Case Differences

When the **Ignore case differences** option is enabled, Device Manager treats values that differ only in their use of uppercase or lowercase letters as if they are identical.

For example, "ABC" and "abc" compare identically when **Ignore case differences** is enabled.

### Ignore White Spaces Differences

When the **Ignore white spaces** option is enabled, Device Manager ignores white space characters when performing comparisons of individual items between entities.

For example, "ABC" and "A B C" compare identically when **Ignore white spaces** enabled.

### Ignore Missing Values

When the **Ignore missing values** option is enabled, missing entity items are ignored.

### Compare as Text

When the **Compare as text** option is enabled, all entity items are compared alphanumerically regardless of item data type.

For example, Numeric items "01.1" and "1.10" do not compare equally when **Compare as text** is enabled; otherwise, they are considered equal.

### Ignore Differences in Setting Comments

When the **Ignore differences in setting comments** option is enabled, any differences in comments included in the attached settings of the nodes being compared are ignored.

## Comparison Window

### Best Fit

Adjusts the width of a selected column to fit all text in that column's values.

### Best Fit (All Columns)

Adjusts the width of each column to fit the text in those column's values.

### Freeze Column

Fixes a column at the left so that it does not scroll with the other columns.

### Select Reference Column

Selects the column used to generate difference values.

# Connection Directory

---

In software version 1.31.147.xxxx and later, the connection directory will be preserved when a software upgrade occurs. The connection directory is saved in the following folder location:

\Users\<your user name>\Local\SEL AcSELERator\RTAC\Connections

There are two files in this directory that save connections:

- ▶ SEL3530.csv: This file contains IP addresses to which RTAC projects can be sent. This list is accessible when sending RTAC projects.
- ▶ RTAC.csv: This file contains IP addresses of remote RTAC databases to access with ACSELERATOR RTAC. This list is accessible when logging into the RTAC database.

Connections can be added through ACSELERATOR RTAC or by directly editing the CSV files. These CSV files can be copied and moved between installations of ACSELERATOR RTAC.

## RTAC Database on a Shared Server

---

In the standard configuration, the ACSELERATOR RTAC program installs and accesses the RTAC database on the local computer. As an alternative, you can configure one computer on a local area network (LAN) as a shared RTAC database server. In this configuration, each PC on the LAN can access RTAC projects from a common database that resides on the common server.

Perform the following steps to create and use a common RTAC project database on a shared server:

Step 1. Ensure the server machine and all computers that will access this machine are all visible on the same LAN. You can verify this by using the Ping command from the command prompt on one of the computers to ping each of the computers on the network. Also ensure that no firewall rules exist that block outgoing TCP port 5433 on any client PCs or incoming TCP port 5433 on the server.

Step 2. Install ACSELERATOR RTAC on the PC that is designated as the server. You must install ACSELERATOR RTAC software to install the RTAC database on that machine.

Step 3. Use Notepad or a similar text editing software to open the file postgresql.conf with Administrative rights. This file is located at C:\ProgramData\SEL\AcSELERator\RTAC\Database\data.

Step 4. On approximately line 59, change the following (note the removal of the "#" from the beginning of the line):

#listen\_addresses = localhost # what IP address(es) to listen on;

to:

listen\_addresses = '\*' # what IP address(es) to listen on;

Step 5. Save the postgresql.conf file.

Step 6. From within the same directory, open the file pg\_hba.conf.

Step 7. Search for and copy this line:

---

```
host RTAC all 127.0.0.1/32 md5
```

---

Step 8. Paste the copied line directly after the line you just copied and make the following change:

---

```
host RTAC all 10.202.13.0/24 md5
```

---

Note that the address 10.202.13.0/24 is a placeholder representing a subnet of client addresses that are allowed to connect to this server instance. In place of 10.202.13.0/24, enter the address and CIDR subnet to match the address of the ACCELERATOR RTAC client PCs. Alternatively, a single client IP address can be specified using a /32 mask (e.g., 10.202.13.101/32)

Step 9. Save the pg\_hba.conf file.

Step 10. Restart the server computer or restart the RTAC Database service.


Step 11. On each client machine, install ACCELERATOR RTAC software.

Step 12. On a client computer, start ACCELERATOR RTAC software.

Step 13. In the login dialog, you can optionally change the Connection Name to something that reflects a server connection. Typing a new Connection Name creates a connection record, as this section described previously, and will store the Server information for that connection.

Step 14. Change the Server field to be the IP address or hostname of the server computer but leave the Port field = 5433 and the Database field = RTAC. See *Figure 1.18*.

Step 15. Log in as normal. Note that the username and password login credentials you use in ACCELERATOR RTAC to access the server are stored on the server machine.

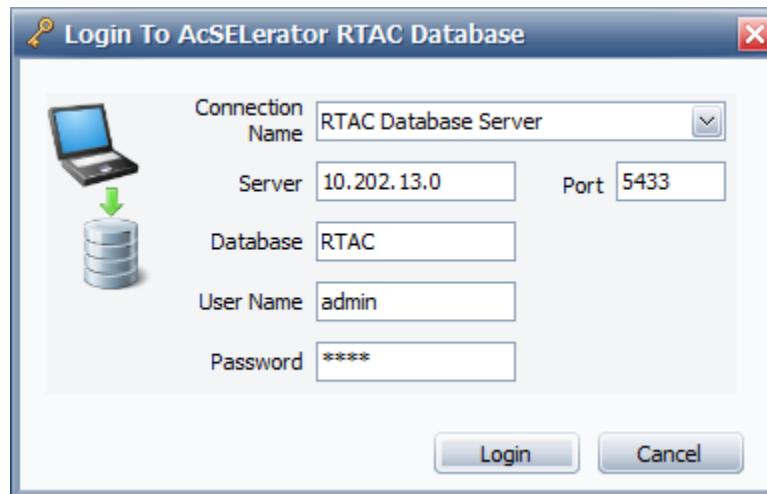

**Figure 1.18 Logging In to Database Server**

## Startup Switches

---

You can modify the shortcut to ACSELERATOR RTAC to include various startup runtime switches. These switches provide features not available in the software in normal run mode. To modify the shortcut, right-click the **AcSELERator RTAC** shortcut and select **Properties**. Modify the line labeled **Target** to include the needed switch by adding */switchname* to the right of the quoted path name. Save the shortcut and run it to start ACSELERATOR RTAC using the new switch.

## Change File Storage Location

ACSELERATOR RTAC uses the current user's **Documents** folder in Windows for program-related file storage (project exports, communication monitor captures, log files, etc.). If the Documents folder is located on a network drive instead of your local computer, modify the ACSELERATOR RTAC shortcut to include the startup switch */documents*, as shown in the following example:

```
"C:\Program Files\SEL\AcSELERator\RTAC\RTAC.exe" /documents  
I:\documents\location\MyDocuments
```

where *I:\documents\location\MyDocuments* is the location of the **My Documents** folder.

Modification of the */documents* path may also be required when your Documents folder is on a network path and ACSELERATOR RTAC is used in offline mode while disconnected from the network.

## Disable User Logic Cross-Task Compilation Checks

Typically, ACSELERATOR RTAC produces a compilation error when attempting to go online if any tags from GVLs or devices in the automation task are referenced for reading or writing in the logic of the main task. A compilation error is also produced when attempting to go online if any tags from GVLs or devices in the main task are referenced for reading or writing in the logic of the automation task. This is to prevent the user logic from being in a problematic state where the automation task could interrupt the main task and update the tag values, causing the main task to have an incorrect or out-of-date collection of tag values, such as in the following scenario:

1. The main task reads tag values owned by the automation task and performs a calculation based on those values.
2. Before the main task can read the complete set tag values, the automation task interrupts the main task and updates the tags with new values.
3. The main task resumes and completes reading the tag values, but because the tag values were updated, the data for the calculation being performed is now incorrect or out-of-date.

This scenario is commonly referred to as a race condition. The **CrossTaskData** library included with ACSELERATOR RTAC helps to avoid this condition (see the *SEL RTAC Programming Reference Manual* for more details), but for the purposes of testing, a startup switch can be used to disable cross-task checking. To run ACSELERATOR RTAC in this mode, use the */unchecked\_user\_logic* switch as follows:

```
"C:\Program Files\SEL\AcSELERator\RTAC  
\RTAC.exe" /unchecked_user_logic
```

# Software Install, Uninstall, and Backup

## Silent Installation

It is possible to install ACCELERATOR RTAC silently (i.e., without any of the installation wizard graphical prompts). To do this, use the command prompt to navigate to where your RTACSetup.exe file is located on your PC and run the following command:

```
.\RTACSetup.exe /S
```

## Clean Install and Uninstall

The clean switch when moved will remove ACCELERATOR RTAC from the PC that it is currently installed on. It will search the following locations on the PC and remove all relevant ACCELERATOR RTAC files and registry entries.

### NOTE

The locations shown are for Windows 10 64-bit. Other Windows versions will have similarly named folders, registry locations, and registry services.

- ▶ Folders
  - C:\Program Files\SEL\AcCELERator\RTAC
  - C:\Program Files\SEL\AcCELERator\RTAC Database
  - C:\Program Files\SEL\AcCELERator\RTAC USB Driver
  - C:\ProgramData\SEL\AcCELERator\RTAC
  - C:\ProgramData\SELFramework
  - C:\Users\YOURUSERNAME\AppData\Local\SEL\AcCELERator\RTAC
  - C:\Users\YOURUSERNAME\AppData\Local\SEL\RTAC.exe\_Url\_\*
  - C:\Users\YOURUSERNAME\Documents\AcCELERator RTAC
- ▶ Registry Locations
  - HKEY\_LOCAL\_MACHINE\SOFTWARE\SEL\SEL-5033
  - HKEY\_LOCAL\_MACHINE\SOFTWARE\SEL\SEL-5033 DB
  - HKEY\_LOCAL\_MACHINE\SOFTWARE\Wow6432Node\SEL\SEL-5033
  - HKEY\_LOCAL\_MACHINE\SOFTWARE\Wow6432Node\SEL\SEL-5033 DB
- ▶ Registry Services
  - RTAC Database (RTACDB)

Unlike the Documents switch, the clean functionality is not included with the shortcut for the ACCELERATOR RTAC software but rather with the actual setup or uninstall file. When run with the setup file, the clean functionality will remove all parts of the software from the PC before installing the new version of software.

## Clean Install

Open the command prompt and navigate to the folder where the RTACSetup.exe file is. Run the following command to have the software completely remove any remnants of ACCELERATOR RTAC before beginning to install the software. This will remove any projects that were automatically backed up in the C:\ProgramData\SEL\AcSELERator\RTAC folder.

```
.\RTACSetup.exe /Clean
```

## Clean Uninstall

Open the command prompt and navigate to the folder where the uninstall.exe file is. Run the following command to have the software completely remove any remnants of ACCELERATOR RTAC. This will remove any projects that were automatically backed up in the C:\ProgramData\SEL\AcSELERator\RTAC folder.

```
.\uninstall.exe /Clean
```

### NOTE

The uninstall file typically exists in C:\Program Files\SEL\AcSELERator\RTAC\Installation. If you received the uninstall file from an SEL representative, you may have saved it in a different location. Navigate to that location before running this command.

## Automatic RTAC Project Backup

When ACCELERATOR RTAC is updated from a previous version all RTAC projects from the previous version are automatically backed up and saved on the local disk in the following location. These projects can be imported into ACCELERATOR RTAC or zipped and have all projects brought back into the software with the restore option.

► C:\ProgramData\SEL\AcSELERator\RTAC\backup\_exp

## Database Maintenance

Software versions 1.28.xxx and later include a database maintenance option found under **SEL > Options > Maintenance**. Performing maintenance cleans up the database and improves software performance, especially after the software has imported, exported, converted, or deleted numerous projects. You can choose between standard or advanced maintenance; a detailed description is provided for each option, and SEL-5033 provides a recommendation of which type to use (if any).

---

---

## S E C T I O N   2

---

# Communications

## Overview

---

A core feature of the SEL Real-Time Automation Controller (RTAC) family of products is the ability to provide communications protocol conversion and data concentration among intelligent electronic devices (data sources) and SCADA or other upstream polling devices (data destinations). Use the following steps from within ACCELERATOR RTAC SEL-5033 Software to configure RTAC communications.

- Step 1. Insert a device into your project.
- Step 2. Specify the protocol you want to use in communicating with the device.
- Step 3. Specify whether the connection is a client or a server.

Client and server are synonymous with master and slave in legacy protocols.

- A client connection is one in which the RTAC will be a client that polls the connected device for data.
- A server connection is one in which the RTAC serves data to SCADA or some other remote client polling for data.

## Data Tags

Data within the RTAC are referenced by database points called tags that may be associated with client or server protocols, system values, global variables (including virtual tags), or values created in user-defined logic.

Tags are generally either global (visible to every RTAC process) or local (limited to a particular function and unavailable elsewhere in the RTAC software). Most tags, such as system tags, device tags, virtual tags, and tags defined in global variable lists (GVLs) in the IEC 61131-3 user logic are global. Other tags declared in user-defined functions are local to those functions. The maximum number of supported tags varies by RTAC hardware type as follows:

**Table 2.1 Maximum Tag Counts Per RTAC Hardware Model**

| Maximum Tag Count | RTAC Hardware Models   |
|-------------------|--|
| 5000              | ► SEL-3505<br>► SEL-3505-3   |
| 25,000            | ► SEL-3530<br>► SEL-3530-4<br>► SEL-2241<br>► SEL-1102<br>► SEL-3332<br>► SEL-3351<br>► SEL-3354 |

| Maximum Tag Count | RTAC Hardware Models   |
|-------------------|--|
| 50,000            | <ul style="list-style-type: none"> <li>► SEL-2241-2</li> <li>► SEL-3350</li> </ul> |
| 100,000           | <ul style="list-style-type: none"> <li>► SEL-3555</li> <li>► SEL-3560</li> </ul>   |

See *Section 9: Custom Logic* for more information on tag declaration.

Data flows within the RTAC from source tags to destination tags via Tag Processor mapping. Source data are typically from client device (IED) tags. Destination data tags typically are from server devices (HMIs, remote polling clients).

#### NOTE

Remember that RTAC updates tag values, including controls, once during each cycle-time interval.

- Step 1. Use the **Insert** ribbon to build source tags in the RTAC by inserting IED devices as client connections.

Configure tags with the data type tabs for corresponding devices. These tags are global and are available for use anywhere in the RTAC. Reference these tags by using their corresponding assigned tag names.

- Step 2. Use the **Insert** ribbon to build destination tags in the RTAC by inserting devices as server connections.

Configure tags with the data type tabs for corresponding devices. These tags are global and are available for use anywhere in the RTAC. Source tags typically provide the data values for destination tags.

- Step 3. Use the Tag Processor to map source tags to destination tags. Data from the source tag transfers to the destination tag at each RTAC processing cycle. See *Section 3: Tag Processor* for additional details.

If you need global tags that are of the same types as those contained in protocol tasks, insert a virtual tag list. Use GVLs to create standard data type global tags under the IEC 61131-3 ribbon (see *Section 9: Custom Logic*).

## Data Structures

The RTAC data points each have a data structure similar to the IEC 61850 standard. This structure provides much more information for each point, including such other attributes as instantaneous value, time stamp, data quality, and dead-banded values. See *Appendix B: IEC 61131-3 Programming Reference* for an in-depth break down of each data type.

You can use data structure attributes for each tag in logic or map these attributes within the Tag Processor. To access each attribute within the structure, enter the tag name followed by a period (.) and the next structure level. ACSELERATOR RTAC concatenates the device name (Relay1) with the protocol (DNP) and the actual variable name (AI\_0000). A period (.) after the tag name joins the tag name with the specific attribute (i.e., instMag). In this way, the point value is self-describing. Instead of typing only the point name (AI\_0000) in the Tag Processor or other RTAC field to access the instantaneous value of AI\_0000, type the fully qualified tag name (Relay1\_DNP.AI\_0000.instMag).

---

**Example 2.1 Tag Data Structure Breakdown**

This example illustrates the structure of an analog input tag name. We are assuming for this example that the RTAC is configured to poll one analog point from an IED named Relay1 using the DNP3 protocol. The default analog input tag name will be:

Relay1\_DNP.AI\_0000

The instantaneous value for that analog input will be:

Relay1\_DNP.AI\_0000.instMag

The following figure illustrates all the attributes in this tag's data structure.

|                       |                   |
|-----------------------|-------------------|
| AI_0000               | MV                |
| instMag               | REAL              |
| mag                   | REAL              |
| range                 | RANGE_T           |
| q                     | quality_t         |
| validity              | VALIDITY_T        |
| detailQual            | detailQual_t      |
| source                | SOURCE_T          |
| test                  | BOOL              |
| operatorBlocked       | BOOL              |
| t                     | timeStamp_t       |
| value                 | dateTime_t        |
| quality               | timeQuality_t     |
| daylight_savings_time | DST_t             |
| UTC_Offset            | INT               |
| source                | timeSource        |
| db                    | REAL              |
| zeroDb                | REAL              |
| rangeC                | rangeConfigReal_t |
| hhLim                 | REAL              |
| hLim                  | REAL              |
| lLim                  | REAL              |
| llLim                 | REAL              |
| minVal                | REAL              |
| maxVal                | REAL              |

Data structure description:

- **Relay1\_DNP** is the device name. This is also the global name for this device. All tags associated with this device will begin with this name.
- **AI\_0000** is the IEC 61131-3 variable name.
- **instMag** is the instantaneous value.
- **mag** is the value snapshot after instMag exceeds the dead-band value. It changes each time instMag exceeds the dead band (db). In event-driven protocols such as DNP3, this is the time-stamped dead-banded event value.
- **range** is the result of testing instMag against the rangeC values.
- **q** is a quality structure that contains data quality flags for this point.
- **t** is a time structure that contains the data time stamp as well as time quality information for this point.

- **db** is the dead-band value applied to the analog value instMag.
- **zeroDb** is a zero cutoff dead band. If mag is < zeroDb, mag will be set to 0.
- **rangeC** is a structure that contains user-configurable high and low limits. The range limits include high-high, high, low, low-low alarm limits. You can configure the RTAC to generate an alarm when the mag value exceeds the rangeC limit. The software logs this alarm, and it can then be viewed on the webpage. The type of alarm (high-high, etc.) is stored in the range field.

The following illustrates how to access some of the elements from the data point AI\_0000.


| Dead-Banded Value of AI_0000               |  |
|--|--|
| Relay1_DNP.AI_0000.mag                     | Analog event value after the instantaneous value exceeds the dead band.            |
| Time Stamp of AI_0000                      |  |
| Relay1_DNP.AI_0000.t.value.dateTime        | The date/time of the last dead band excursion for this point.                      |
| Data Quality of AI_0000                    |  |
| Relay1_DNP.AI_0000.q.detailQual.outOfRange | A Boolean value that, if true, indicates that the value is presently out of range. |

See *Data Types on page 1137* for more detail on individual data type structures. Following is an example of various data values in a DNP IED called Relay\_1.

| Binary Input                               |                                       |
|--|---------------------------------------|
| Relay1_BI_0000.stVal                       | Instantaneous value                   |
| Analog Input                               |                                       |
| Relay1_AI_0000.instMag                     | Instantaneous value                   |
| Relay1_AI_0000.mag                         | Value when the dead band was exceeded |
| Counter                                    |                                       |
| Relay1_CNT_0000.actVal                     | Instantaneous value                   |
| Relay1_CNT_0000.frVal                      | Present frozen value                  |
| Analog Output                              |                                       |
| Relay1_AO_0000.oper.setMag                 | Instantaneous value                   |
| DNP Binary Output                          |                                       |
| Various DNP control methods for this point |                                       |
| Relay1_BO_0000.operPulsectlVal             |                                       |
| Relay1_BO_0000.operLatchOnctlVal           |                                       |
| Relay1_BO_0000.operLatchOffctlVal          |                                       |
| Relay1_BO_0000.operTripctlVal              |                                       |
| Relay1_BO_0000.operClosectlVal             |                                       |

## Autocomplete

The RTAC has an autocomplete tag entry mechanism. As you type a tag, this feature will automatically complete the tag name and the components of the tag structure. The RTAC software finds tag names that closely match what you type. Choose the name or structure element from the resulting list by selecting it with the mouse or arrow keys and pressing <Enter>. Next press the period <.> to see a list of the next data structure elements.

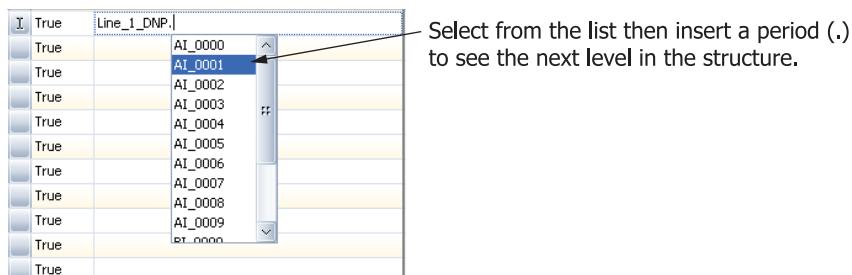

## Create a Client Device Connection

A client device connection defines the protocol, port number, port settings, and a tag list of all data that the RTAC will poll from an IED.


The following steps illustrate, generally, how to configure a client connection to poll data from an IED. Sections that contain protocol-specific configuration information are described later in *Section 2: Communications*.

- Step 1. Click the **Insert** ribbon or right-click **SEL\_RTAC** in the device tree.
- Step 2. Select the type of device (**SEL**, **Fieldbus I/O**, **Other**) from the ribbon menu.
- Step 3. Select the device/protocol from the drop-down list within the device type.

For example, to poll a non-SEL IED that uses DNP master protocol, select **Other** for the device type, then **DNP** for the protocol.

- Step 4. Select the type of client connection (serial, Ethernet, etc.).

Scroll through the list to see the graphic change with each connection type to show the relationship of communications between the RTAC and the device.

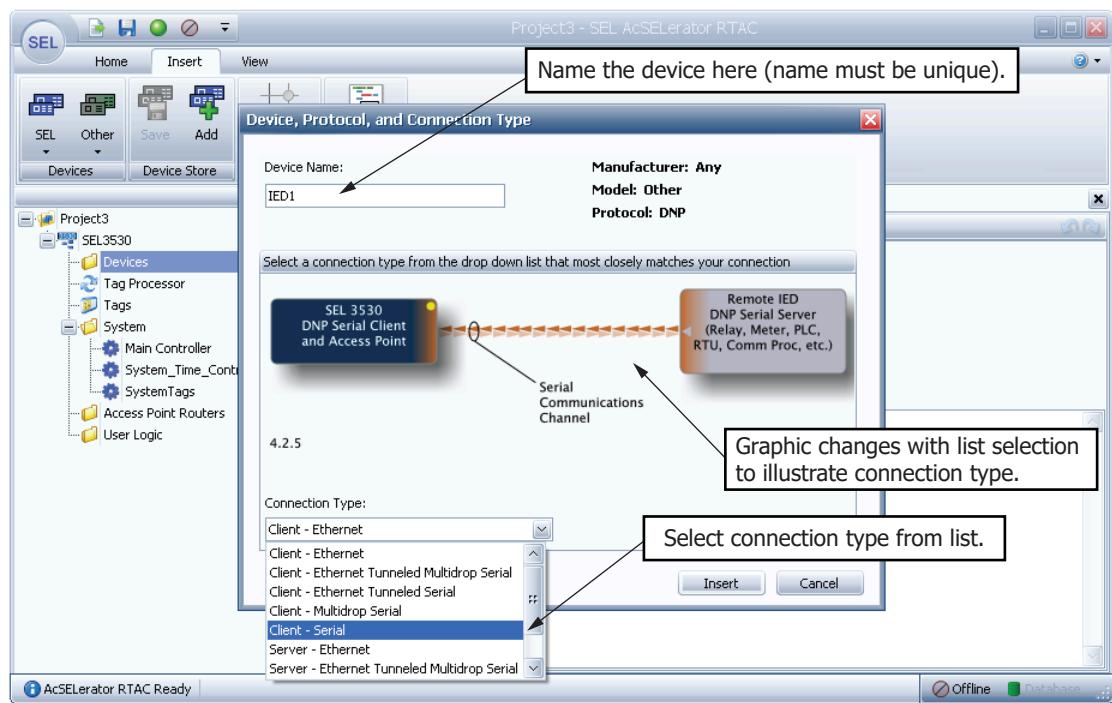

**Figure 2.1 Select Serial or IP Client Connection**

Step 5. Configure the communications parameters of the connection in the grid view. See *Figure 2.2* as an example.

This view displays automatically. Descriptions of each parameter are on the right of the screen. All configurable communications parameters are listed in this view and may include the following:


a. Port number.

The software assigns the next contiguous port number automatically, or you can choose to assign this number yourself.

b. Data rate, communication time-outs, etc.

c. Protocol-specific IDs, time-synchronization information, etc.

d. **Advanced Settings** check box.

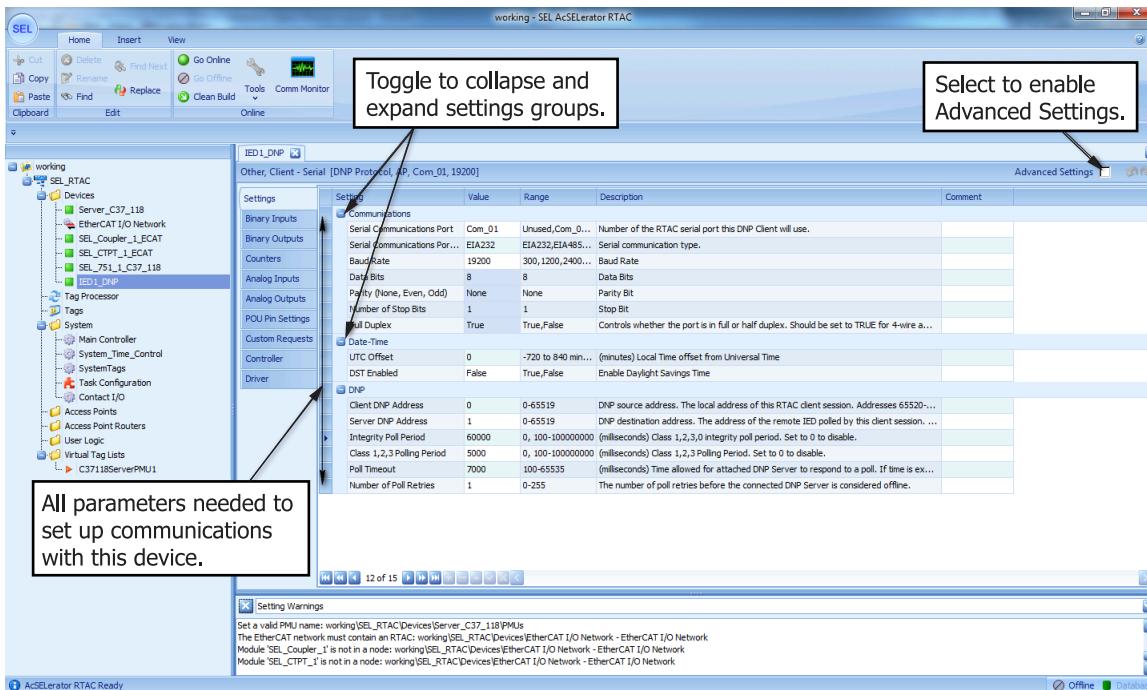

**Figure 2.2 Example Serial Client Settings**

Step 6. Unless data points are preconfigured, click on each device tag type tab to add the number of data tags (binary, analog, etc.) you want to use on this port.

## Client Connection Types

**Client—Serial:** Use this setting to communicate in a point-to-point, radio, fiber, or other configuration where an EIA-232/EIA-422 connection is necessary. Insert one of these types of connections for each unique EIA-232/EIA-422 communications port on the RTAC that connects to an IED via EIA-232/EIA-422.

**Client—Ethernet:** Use this setting to communicate over Ethernet to an IED. Insert a new device connection for each device. The combination of the IEDs IP address and the IEDs port must be unique (i.e., two IEDs can have the same IP port number only if those two IEDs have different IP addresses).

**Client—Multidrop Serial:** Use this setting to enable polling of multiple IEDs on one serial port. Set the port to EIA-485 or EIA-232. If the port is configured as EIA-485, connect all IEDs on an EIA-485 loop to the RTAC on the specified serial port. Configure the port as EIA-232 if you are using multidrop communications equipment (EIA-232/EIA-485 transceiver, fiber modem, radio, etc.) that has an EIA-232 interface. Insert one multidrop direct serial client for each IED connected to that port. Configure each new device with a corresponding unique remote server address, if applicable. Configure each new device on this multidrop chain with the same serial communications port number. This configuration will cause the software to direct all traffic for the configured IEDs through a single configured serial port.

**Client—Ethernet Tunneled Multidrop Serial:** Use this setting to enable an Ethernet tunnel through a serial port server (SPS). Connect an IED to each port on a serial port server via EIA-232 serial cables. Connect the serial port server to the RTAC LAN. Insert one SPS multidrop Ethernet Tunneled Multidrop Serial connection for each IED connected to the SPS. Configure each of the SPS multidrop clients for the corresponding unique address of each IED and the unique IP port number configured on the SPS. Configure each SPS multidrop client for the same IP address of the SPS. Each poll will go first to the SPS and then to the appropriate port according to your configuration.

**Client—Ethernet Tunneled Serial:** Use this setting as in the previous configuration to enable Ethernet tunnel through an SPS, but for a point-to-point type connection.

The following steps detail adding client device data:

- Step 1. Click the device tag type tab to add and configure points (tags).
- Step 2. Click + to add tags (10,000 tag limit or 5000 for SEL-3505, per device tag type).

**NOTE**

Use Copy <Ctrl+C> and Paste <Ctrl+V> to populate the columns of Tag names and to duplicate devices.

Creating only the number of necessary tags will help the system run at optimum performance.

- Step 3. Change the names of the tags, if necessary.
- Step 4. Change other tag-related information as necessary.

Repeat these steps to configure all IED devices. When finished, configure one or more servers to deliver the data to remote client devices.

**NOTE**

Save the configuration by clicking the Save icon or <Ctrl+S>.

## Create a Server Device Connection

A server device connection defines the protocol, port number, port settings, and a tag list of all data that a remote client device, communications processor, RTU, etc. will poll from the RTAC.

The following steps illustrate, generally, how to configure a server connection to send data to a polling device. Sections that contain protocol-specific configuration information are described later in *Section 2: Communications*.

- Step 1. Select the type of device (**SEL**, **Other**) from the ribbon menu or right-click **SEL\_RTAC** in the device tree.
- Step 2. Select the protocol.

In the case of an SEL IED, select the device from the drop-down list within the device type ribbon and then select the protocol. For example, select **SEL > 3500 Series > RTAC > DNP**.

- Step 3. Select the type of server connection (serial, Ethernet, etc.).

Step 4. Scroll through the list to see the graphic change with each connection type to show the relationship of communications between the RTAC and the device.

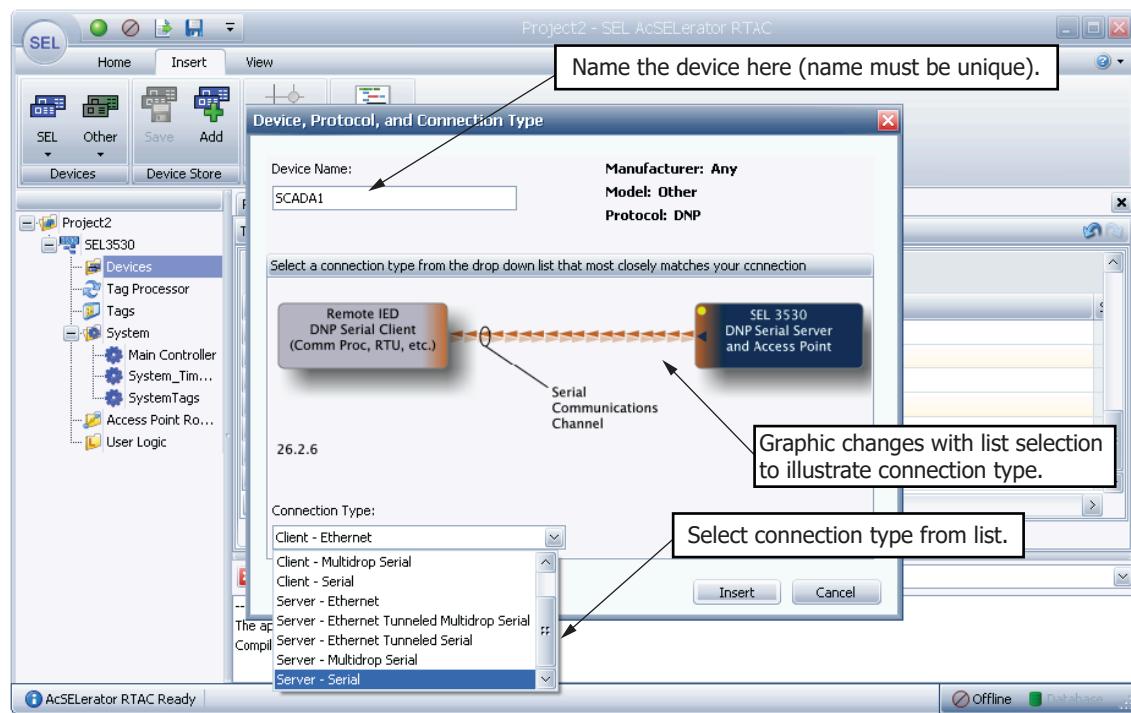


Figure 2.3 Select Serial or IP Server Connection

Step 5. Configure the communications parameters of the connection in the grid view. This view displays automatically.

Descriptions of each parameter are on the right of the screen. All configurable communications parameters are listed in this view and include the following:

a. Port number.

The software assigns the next contiguous port number automatically, or you can choose to assign this number yourself.

b. Data rate, communication time-outs, etc.

c. Protocol-specific IDs, time-synchronization information, etc.

d. **Advanced Settings** check box.

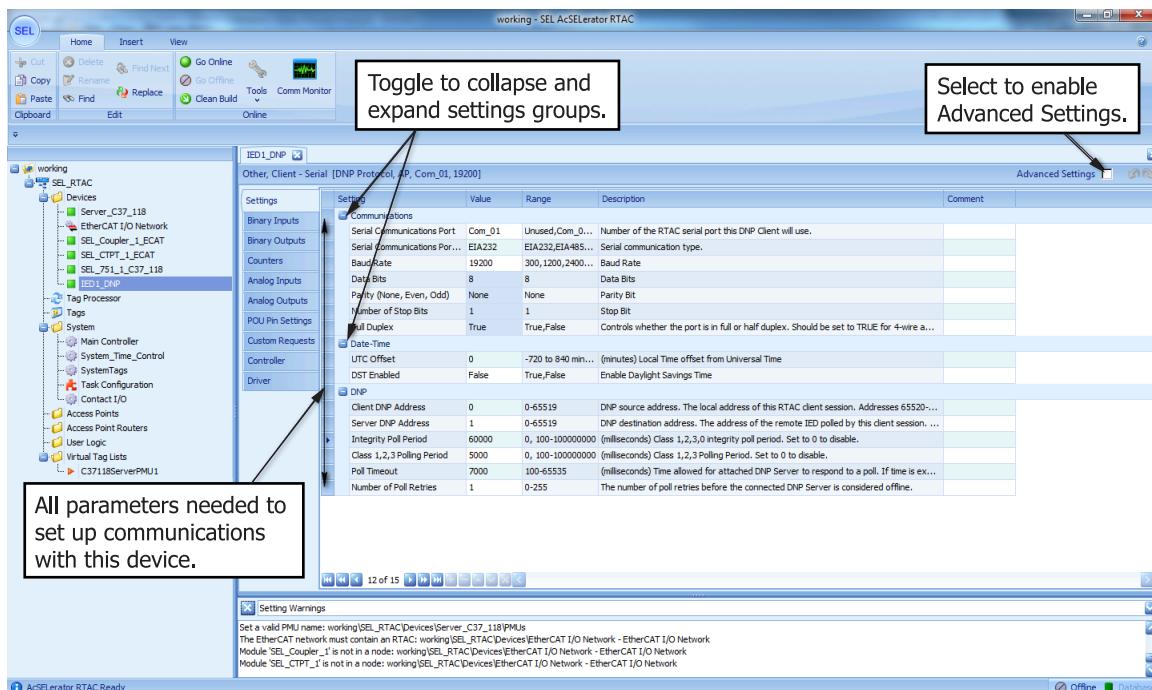


Figure 2.4 Example Serial Server Settings

## Server Connection Types

**Server—Serial:** Use this setting to communicate in a point-to-point, radio, fiber, or other configuration where an EIA-232/EIA-422 connection is necessary to connect to a polling client (master). Insert one of these types of connections for each unique EIA-232/EIA-422 communications port on the RTAC that connects to a master via EIA-232/EIA-422.

**Server—Ethernet:** Use this setting to communicate over Ethernet to a client polling device. Insert a new server device connection for each remote client device. Configure each server connection with a unique server IP address and port if you set Allow Anonymous DNP IP Clients to False. The combination of the clients IP address and the servers local port must be unique (i.e., two server connections can have the same IP port number only if the two corresponding clients have different IP addresses).

**Server—Multidrop Serial:** Use this setting to configure the serial port as EIA-485 to allow the RTAC to reside on a multidrop EIA-485 polling loop. Each device on the loop must have a unique ID.

**Server—Ethernet Tunneled Multidrop Serial:** Use this setting to enable an Ethernet tunnel through a serial port server (SPS) to multiple polling clients. Connect one or more polling client to a serial port server via EIA-232 serial cables. Connect the serial port server to the RTAC LAN. Insert an Ethernet Tunneled Multidrop Serial server connection for each client connected to the SPS. Configure each of the SPS multidrop server connections for the appropriate address of each polling clients and the unique port number they are connected to on the SPS. Configure each SPS multidrop server for the same IP address of the SPS. Each poll reply will go first to the SPS and then to the appropriate port as configured.

**Server—Ethernet Tunneled Serial:** Use this setting to enable an Ethernet tunnel through a SPS as previously described, except that this is designed for a single-port SPS or point-to-point type connection.

The following steps detail adding server device data:

- Step 1. Click the device tag type tab to add and configure points (tags).
- Step 2. Click + to add tags (10,000 tag limit or 5,000 for SEL-3505, per device tag type).

Creating only the number of necessary tags will help the system run at optimum performance.

- Step 3. Change the names of the tags, if necessary.
- Step 4. Change other tag-related information as necessary.

Repeat these steps to configure all server connections. When finished, configure the Tag Processor to populate these server connection tags with actual values.

## Using Copy/Paste Shortcuts

### Copy a Column of Tag Names

If you have a list of tag names available in a column format (spreadsheet, IED documentation, etc.), you can save time by copying and pasting the entire column.

- Step 1. From within ACCELERATOR RTAC, create the number of tags you want from each device tag type, as the client section, server section, and *Section 3: Tag Processor* describe.
- Step 2. Highlight and copy the column of names from the source (Microsoft Excel spreadsheet, column from another RTAC device configuration, etc.).
- Step 3. Click the first point from *Step 1* that you want to replace. You must highlight the entire tag name cell.
- Step 4. Paste the new column onto the highlighted tag name cell. The pasted column of names will replace the default tag names one-for-one.
- Step 5. See *Section 3: Tag Processor* for instructions on how you can use a SCADA tag name spreadsheet to also populate source and destination tag names.

### Copy/Paste a Device

Use copy/paste to duplicate a configured device. An example would be a duplicate master station port used for testing that must be exactly the same as the main SCADA port.

Use this operation as well for a new device that is similar to or exactly the same as a configured device. In such a case, create a copy of the configured device and use this as a starting point for the new device. This operation will copy names and settings that you can then change in the new device.

To make a copy of a configured device:

- Step 1. Right-click the device name.
- Step 2. Select **Copy** or press <Ctrl+C>.

Step 3. Right-click the **Devices** label and select **Paste** or press <Ctrl+V>.

Step 4. Rename the new device to a unique name.


All tag names of the new device will reflect the new device name and the port number of the connection increments automatically for the new device. Custom logic written for that device will not be copied.

---

#### Example 2.2 SEL\_351A\_1 Device Copied to Make SEL\_351A\_1copy

The following figure illustrates making an exact copy of an SEL\_351A device. Notice the duplicated device has the word **copy** appended to the name to avoid duplicate names.

To avoid confusion, rename SEL\_351A\_1copy to something unique, such as SEL\_351A\_2. Right-click, then select **Copy**.

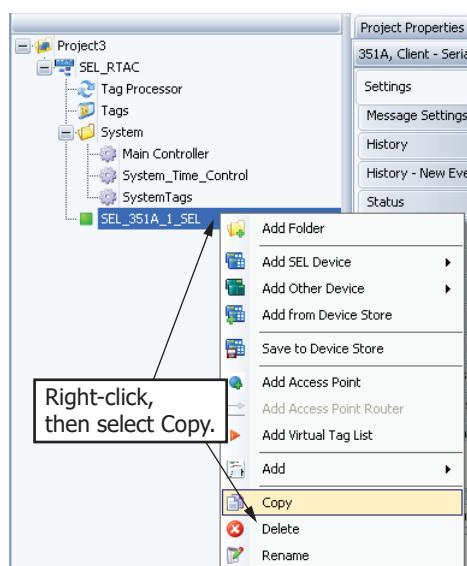

---

## Custom XML Templates

Use XML Export functionality to save a configured device template onto your PC. For example, you can store a large IED that you have configured and use frequently and insert this IED later into new projects as necessary. All configuration, points, etc. will remain intact as originally configured except for custom logic.

To create an XML template file:

- Step 1. Configure a device according to the instructions previously in this section.
- Step 2. Save your project by pressing <Ctrl+S> or by selecting the save (disk icon).
- Step 3. Ensure there are no errors in the output window after the save operation.
- Step 4. Select **Export Items** under the **XML Template** ribbon or right-click the device configuration you want to save and choose **Export Items**.

- Step 5. In the pop-up dialog box, ensure the device(s) for which you wish to save a template has a checkmark beside it to generate an XML file.
- Step 6. Verify that the default **Export Location** folder (shown at the bottom of the window) is where you want to save the XML template.
- Step 7. Select **Export**.

To use an XML template file:

- Step 1. With a project open, select **Import Items** under the **XML Template** ribbon or right-click the project tree in a user folder location and choose **Import Items**.
- Step 2. In the pop-up dialog box, choose the **XML Folder** in which you stored your XML templates and select the check box next to the XML template you wish to import to your project.
- Step 3. Select **Import**.
- Step 4. The software will add the device, completely configured as before, into your project.

As with copy/paste, the software will copy names and settings, but you can change these later after creating the copy.

## POU Pin Settings (Advanced Usage)

The **POU Pin Settings** tab provides the names, types, and default values of various components of each task for advanced usage. Each pin name has a Visible flag with a configurable value of True or False. Items marked as True will display on the controller logic block. Input pins control task operation, including polling functionality and data collection into the database. Output pins contain real-time task values used by the protocol. You can configure the default value for most input pins. You can use real-time pin values in logic you write in the RTAC.

### NOTE

Use caution when making any programming modifications to the Controller Block or to the POU Pin settings. For more information on using the Controller CFC and POU Pin settings, please contact an SEL application engineer.

### NOTE

Copying and pasting a device will not copy custom logic in the Controller Block or POU Pin settings.


## Controller (Advanced Usage)

The **Controller** tab contains the Continuous Function Chart (CFC) function block for the task. POU Pin Settings that have their Visible tags set to True in the **POU Pin Settings** tab become visible in the Controller. The Controller block provides advanced users the ability to alter the standard functionality of the protocol task. The task function block contains input POU pins on the left side of the CFC block and output POU pins on the right side of the block. You can add CFC logic such as input blocks, output blocks, functions and function blocks to the controller work space as standalone logic or to interface to the controller task function block.

## Tags (Overview)


The **Tags** tab for each device is a view of all the tags you have configured for this device connection.

While offline, use the **Tags** tab to view, select, copy, and paste large groups of data points from this server connection to the Tag Processor or spreadsheet. Right-click on the column heading to display options, including a filter, that you can use to restrict information display to only the data you want to see.

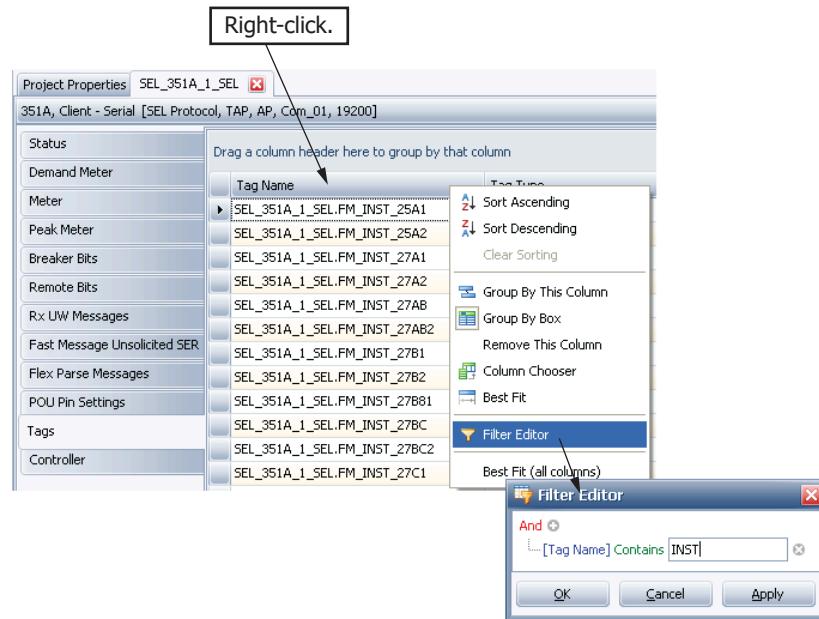

**Figure 2.5 Using a Tag Filter**

While online, use the **Tags** tab to see the present values of all tags you have defined for this device except for those tags for which you have assigned alias tag names. Alias tag names are part of a different global variable list and are located under the main **Tags** tab in the left-hand side of the ACCELERATOR RTAC menu tab. Expand each tag structure to view all embedded elements such as present value, time, quality, etc. See *Appendix B: IEC 61131-3 Programming Reference* for data type descriptions.

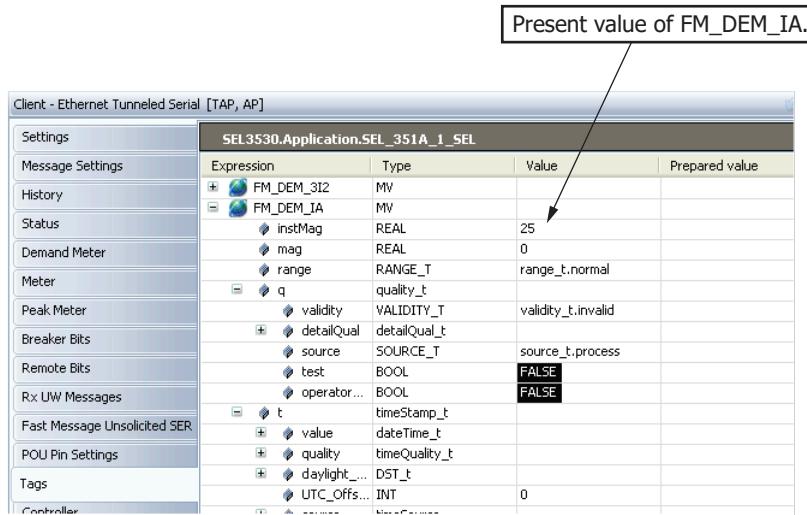

The screenshot shows a software interface titled "Client - Ethernet Tunneled Serial [TAP, AP]". On the left is a sidebar with various monitoring options like Settings, Message Settings, History, Status, Demand Meter, Meter, Peak Meter, Breaker Bits, Remote Bits, Rx UW Messages, Fast Message Unsolicited SER, POU Pin Settings, and Tags. The main area is titled "SEL3530.Application.5EL\_351A\_1\_SEL" and contains a table of tags. One row is expanded to show its details:

| Expression    | Type          | Value              | Prepared value |
|---------------|---------------|--------------------|----------------|
| FM_DEM_3I2    | MV            |                    |                |
| FM_DEM_IA     | MV            |                    |                |
| instMag       | REAL          | 25                 |                |
| mag           | REAL          | 0                  |                |
| range         | RANGE_T       | range_t.normal     |                |
| q             | quality_t     |                    |                |
| validity      | VALIDITY_T    | validity_t.invalid |                |
| detailQual    | detailQual_t  |                    |                |
| source        | SOURCE_T      | source_t.process   |                |
| test          | BOOL          | FALSE              |                |
| operator...   | BOOL          | FALSE              |                |
| t             | timeStamp_t   |                    |                |
| value         | dateTime_t    |                    |                |
| quality       | timeQuality_t |                    |                |
| daylight_...  | DST_t         |                    |                |
| UTC_Offset... | INT           | 0                  |                |

A callout box labeled "Present value of FM\_DEM\_IA." points to the value column of the FM\_DEM\_IA row.

Figure 2.6 View Tags Online

## Comm Monitor

---


### Overview

You can use the communication monitor (Comm Monitor) to view data traffic in real time for all serial and Ethernet communications. The Comm Monitor displays communications events, such as data transmission and reception, and UART control signal transitions. The Comm Monitor shows the time of the event, the present state of the UART (when capturing serial communications) and data associated with the event. Data are displayed in raw hexadecimal and ASCII character format.

## Configure Comm Monitor

From the **Insert** ribbon, add and configure a DNP, Modbus, SEL, or other device to communicate with the RTAC. Once you have completed the configurations, send the project to the RTAC and leave ACSELERATOR RTAC online with the RTAC. Perform the following steps to configure and use as many as 60 instances of the Comm Monitor:

- Step 1. Verify that you are online with the RTAC by observing the Online indicator at the bottom right corner of ACSELERATOR RTAC.
- Step 2. From the **Home** ribbon menu, click **Comm Monitor**.
- Step 3. From the drop-down menu under **Capture Source**, select the type of communications to monitor. Note that choosing the **Live - All Ethernet Traffic** option will capture all Ethernet traffic sent and received by the RTAC, minus a select list of internal system ports (79–83, 443, 1217, 5432–5435, and 15453).

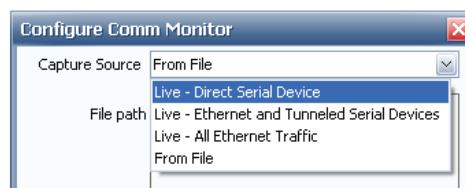


Step 4. ACSELERATOR RTAC will present all available devices of the communications type you selected. Select the check boxes of the devices you want to monitor and select **OK**.



Step 5. The monitor screen will appear. Click the controls to start, pause, stop, save, and configure the capture.

- **Start:** Comm Monitor clears the display, connects to the configured device, and captures data.
- **Pause:** Stops display scrolling. Press **Resume** to continue displaying present communications.
- **Stop:** Stops data capture. After stopping, you can save the capture. Press **Start** again to clear the display and begin a new capture.
- **Save Capture:** After stopping the capture, you can save the present file in Wireshark format.
- **Configure Capture:** Reconfigure the capture session to view data traffic on another device.
- **Open Capture in Wireshark:** After stopping, the capture can be directly opened in Wireshark (if it is installed) without saving.

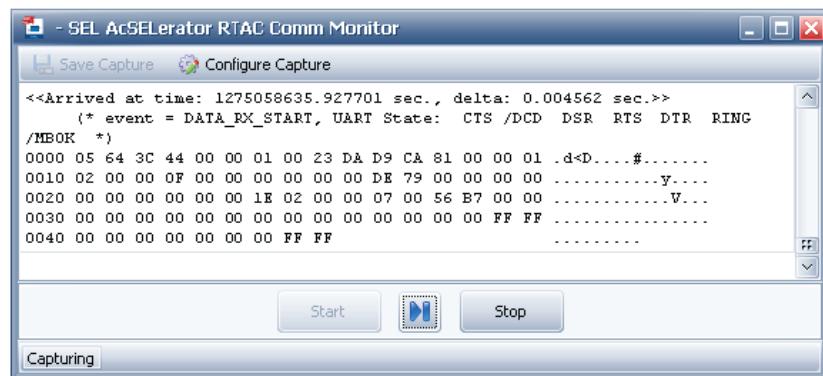

Step 6. Once you have captured all the needed data, click **Stop** and then **Save Capture**.

Step 7. Provide a file name and press **Save**.

You can load the saved file into Comm Monitor at any time while on- or offline by selecting **From File** as the Capture Source.

#### NOTE

You can also view the saved Comm Monitor files with Wireshark. Download Wireshark software from [Wireshark.org](http://Wireshark.org).

## Comm Monitor Components


The Comm Monitor provides detailed information to help you not only see what the protocols are sending "on the wire" but also to provide timing information to help troubleshoot communications problems. For example, the RTAC sends a correct poll to an IED but is configured to time out too quickly because the IED reply is delayed. If the IED does not respond in a timely fashion, the RTAC will transmit a retry and may appear to be sending incorrect polls. The Comm Monitor delta time will show how much time has transpired between each communication event displayed and reveal that adding a slight increase to the time out value in the RTAC configuration resolves the issue.

*Figure 2.7* shows an example communication capture of SEL IED traffic. Note the ASCII messages displayed in hexadecimal and in human-readable character form. For example:

|                             |    |    |    |    |    |    |    |
|-----------------------------|----|----|----|----|----|----|----|
| Hexadecimal characters:     | 46 | 49 | 44 | 3D | 53 | 45 | 4C |
| ASCII character equivalent: | F  | I  | D  | =  | S  | E  | L  |

See *Table 2.2* for an explanation of Comm Monitor display field names.

*Table 2.3* describes the data field portions of the Comm Monitor.

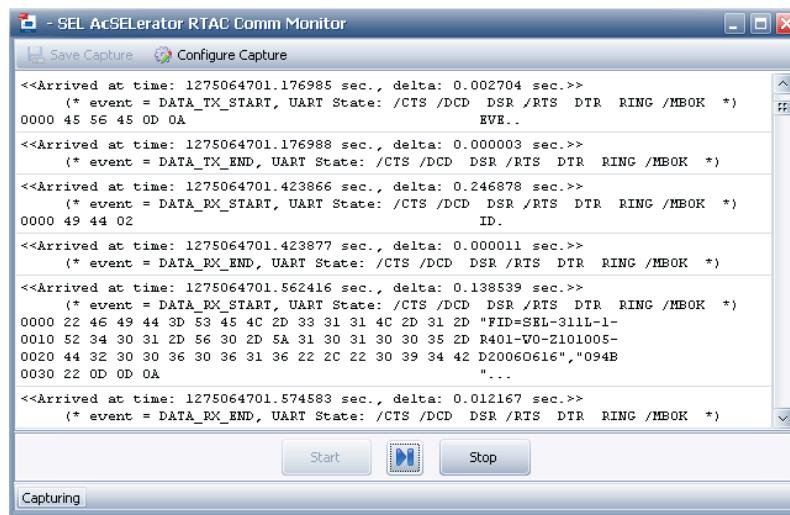

**Figure 2.7 Comm Monitor Display Fields**

**Table 2.2 Comm Monitor Display Fields**

| Name            | Meaning   |
|-----------------|---|
| Arrived at time | The time the communications event occurs in seconds. This does not indicate direction of data flow.   |
| delta           | The time difference in seconds between the present communications event and the one immediately preceding it.   |
| event           | A description of the type of event. For example, DATA_TX_START is when the UART begins transmitting data. See <i>Table 2.4</i> .  |
| UART State      | Shown for serial data capture, indicates the present state of the UART signals, e.g., CTS, DCD, DSR, etc. Deasserted state indicated by a / beside the state name. See <i>Table 2.5</i> . |

**Table 2.3 Comm Monitor Data Fields**

| <b>Byte Count (Hexadecimal)</b> | <b>Hex Representation</b>                       | <b>ASCII Representation</b> |
|---------------------------------|---|-----------------------------|
| 0000                            | 22 46 49 44 3D 53 45 4C 2D 33 31 31 4C 2D 31 2D | "FID=SEL-311L-1-            |
| 0010                            | 52 34 30 31 2D 56 30 2D 5A 31 30 31 30 30 35 2D | R401-V0-Z101005-            |
| 0020                            | 44 32 30 30 36 30 36 31 36 22 2C 22 30 39 34 42 | D20060616","094B " ...      |
| 0030                            | 22 0D 0D 0A                                     |                             |

**Table 2.4 UART Event Types**

| <b>Code</b> | <b>Name</b>           | <b>Meaning</b>  |
|-------------|-----------------------|---|
| 0x00        | STATUS_CHANGE         | Change to the state of any of the UART signals (RTS, CTS, etc.).  |
| 0x01        | DATA_TX_START         | The UART has begun transmitting data.   |
| 0x02        | DATA_RX_START         | The UART has begun receiving data.  |
| 0x03        | DATA_TX_END           | The UART has completed transmitting data.   |
| 0x04        | DATA_RX_END           | The UART has completed receiving data.  |
| 0x05        | CAPTURE_DATA_LOST     | The UART has reported a possible loss of capture data, usually as a result of an EIA-485 communications error.  |
| 0x06        | CAPTURE_COMPLETE      | --  |
| 0x07        | FRAMING_ERROR         | The UART encountered a data framing error, possibly due to actual data corruption on the wire or a misconfigured number of data bits, parity bits, or stop bits between the sending and receiving device.               |
| 0x08        | PARITY_ERROR          | The UART encountered a parity error, possibly due to actual data corruption on the wire or a misconfigured number of data bits, parity bits, or stop bits between the sending and receiving device.                     |
| 0x09        | SERIAL_BREAK_EVENT    | The UART receiver detected a serial break event. This can indicate that the remote sender forced the data line to a particular state for a longer than expected amount of time, or a general data communications error. |
| 0xA0        | SERIAL_OVERFLOW_EVENT | The UART encountered a serial overflow event. This can occur when the UART receives data that it does not have room to buffer, so they are discarded.   |

**Table 2.5 UART Signals**

| <b>Name</b> | <b>Meaning</b>  |
|-------------|---|
| CTS         | Clear to send hardware flow control signal.   |
| DCD         | Data carrier detected.  |
| DSR         | Data set ready.   |
| RTS         | Request to send hardware flow control signal.   |
| DTR         | Data terminal ready.  |
| RING        | Valid only when using a modem. Indicates modem has sent RING to the RTAC.                           |
| MBOK        | Valid only on MIRRORED BITS communications. Indicates MIRRORED BITS channel receive OK is asserted. |

## RTAC Serial Line Captures in Wireshark

Communications captures of EIA-232 or EIA-485 serial traffic created by the Comm Monitor can be opened in Wireshark, which includes support for dissection of standardized and supported serial protocols. When opening a pcap file containing RTAC serial traffic in Wireshark, the packets will first only be labeled as a Protocol of 'RTAC Serial' and no dissection of any data payload is attempted. In order to configure the protocol dissector for Wireshark to use, right-click on one of the packets and choose **Decode As**. In the **Decode As** dialog, configure the **Current** field associated with the RTAC Serial Data Subdissector with the appropriate protocol.

Protocols supported for RTAC serial line dissection in Wireshark include the following:

- ▶ CP 2179
- ▶ DNP 3.0
- ▶ IEC 60870-5-101
- ▶ IEC 60870-5-103
- ▶ IEEE C37.118 Synchrophasors
- ▶ L&G 8979
- ▶ Modbus RTU
- ▶ SEL Protocol

### NOTE

RTAC Serial Line dissection in Wireshark does not support any form of payload reassembly between multiple packets. Thus, if protocol data contained in DATA\_START\_RX or DATA\_START\_TX packets are split across multiple entries (perhaps separated by a STATUS\_CHANGE entry generated by an UART control line change), Wireshark will be unable to dissect the complete protocol message. This can manifest itself in packets that are described by Wireshark as "Malformed." Note that this error is limited to Wireshark's ability to dissect the data and the actual protocol message itself is likely not malformed in any way.

## Network Event Capture (Trigger-Based Communication Captures)

SEL-3555, SEL-3560, and SEL-3350 hardware with firmware version R153 or later supports a licensed feature called **Network Event Capture** that creates trigger-based PCAP records. When the feature is active, a running buffer of all Ethernet communications traffic is maintained. Upon activation of a user-logic based trigger, a configurable pre- and post-trigger duration of Ethernet traffic is written to a PCAP file in the RTAC file manager. This is useful for capturing network conditions during unpredictable scenarios, such as a device going temporarily offline or GOOSE messages containing trip signals being received. The Network Event Capture feature is enabled on any compatible RTAC that has the Audit Utilities license.

When a Network Event Capture is configured, the pre-trigger duration can be assigned a value from 1 to 60 seconds and the post-trigger duration can be assigned a value from 0 to 60 seconds. PCAP files are written to a **NetworkEventCaptures** directory in the RTAC file manager. PCAP files are named in time-stamped COMNAME format, with the Station Name, Device GUID, and Company Name elements extracted from the matching RTAC SystemTags values configured in the project.


More details on configuring the IEC 61131-3 user logic to perform a Network Event operation can be found in *Network Event Capture on page 1104*.

## SCADA Protocol Redundancy

SCADA protocol redundancy is available on the DNP server and IEC 60870-5-101/104 server.

Protocol event synchronization between two separate RTAC units is available in RTAC firmware version R136 and later. If two separate RTAC units are configured in a failover scheme and are serving the same data to a single client, you can configure the two units to synchronize which events the client has already confirmed. When the client confirms the reception of an event from a server, that server transmits a UDP message to the other RTAC serving the event information. The second, or failover, RTAC then uses that information to identify which event the client on the first RTAC acknowledged and to acknowledge the same event in its own system.

In this configuration, if a single IED sends the same binary point change with time stamp to two separate RTACs and a client acknowledges the event on Server A, there will be no reporting of that same event to the client when the client begins communicating with Server B. This prevents transmission of duplicate events to the same client. This feature is ideal in a redundancy configuration where multiple RTACs collect the same data from IEDs. The client can then switch communications between the two RTACs without receiving duplicate events.

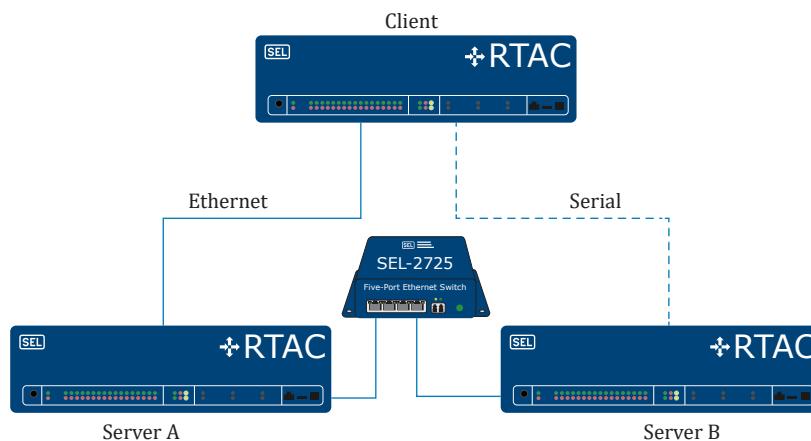

**Figure 2.8 SCADA Synchronization**

To synchronize two servers, use the Event Synch IP Address and Event Synch IP Port settings. An Ethernet connection between the two RTACs must be available. This can be the same physical Ethernet port that the client and server connection uses, or it can be any other Ethernet interface on the RTAC. The two synchronized RTACs can use any configurable connection method with the SCADA client, including a combination of serial and Ethernet connections. The two synchronized RTACs must be time synchronized and be configured with the same UTC and DST offset settings.

**NOTE**

In an application with SCADA protocol redundancy enabled, each server tracks the time stamp of the last event for each unique object group (e.g., Binary Input Change) and point index. If a subsequent change in the value of the point located at that index is detected but the time stamp is not newer than the previously stored time stamp, the change is ignored and will not generate a DNP event on the wire. This means that changes without an updated time stamp, such as performing commissioning checks by forcing values of the same index multiple times, will not generate DNP events from the server.

## Communication Protocol Device Count Support

---

The maximum number of communication protocol devices that can be inserted into a single RTAC project will vary by hardware. The table below shows the number of supported protocol devices that can be inserted into a project of that particular hardware type.

| <b>Protocol Type</b>                               | <b>SEL-3530,<br/>SEL-3530-4,<br/>SEL-2241</b>         | <b>SEL-3505,<br/>SEL-3505-3</b>                       | <b>SEL-1102,<br/>SEL-3332,<br/>SEL-3351,<br/>SEL-3354</b> | <b>SEL-3350,<br/>SEL-2241-2</b>                       | <b>SEL-3555,<br/>SEL-3560</b>                                      |
|--|---|---|---|---|--|
| CDC Type 2   | Clients limited by number of serial ports, 10 Servers | Clients limited by number of serial ports, 10 Servers | Clients limited by number of serial ports, 10 Servers     | Clients limited by number of serial ports, 10 Servers | Clients limited by number of SEL-3390S8 serial ports, 10 Servers   |
| Courier  | 100 Clients   | 100 Clients   | 100 Clients   | 100 Clients   | 100 Clients  |
| CP2179   | 100 Clients   | 100 Clients   | 100 Clients   | 100 Clients   | 100 Clients  |
| DNP  | 200 Clients/Servers (combination of both)             | 200 Clients/Servers (combination of both)             | 200 Clients/Servers (combination of both)                 | 200 Clients/Servers (combination of both)             | 500 Clients/Servers (combination of both, as of R148) <sup>a</sup> |
| Ethernet/<br>IP Explicit<br>Message Client         | 100 CIP messages,<br>100 PCCC messages                | 100 CIP messages,<br>100 PCCC messages                | 100 CIP messages,<br>100 PCCC messages                    | 100 CIP messages,<br>100 PCCC messages                | 100 CIP messages,<br>100 PCCC messages                             |
| Ethernet/IP<br>Implicit/Explicit<br>Server/Adapter | 128 simultaneous<br>connections                       | 128 simultaneous<br>connections                       | 128 simultaneous<br>connections                           | 128 simultaneous<br>connections                       | 128 simultaneous<br>connections                                    |
| IEC<br>60870-5-101/104                             | 100 Clients/Servers<br>(combination of both)          | 100 Clients/Servers<br>(combination of both)          | 100 Clients/Servers<br>(combination of both)              | 100 Clients/Servers<br>(combination of both)          | 256 Clients/Servers<br>(combination of both)                       |
| IEC 60870-5-103                                    | 50 Clients  | 50 Clients  | 50 Clients  | 50 Clients  | 50 Clients   |
| IEC 61850 GOOSE                                    | 150 receive,<br>150 transmit                          | 150 receive,<br>150 transmit                          | 150 receive,<br>150 transmit                              | 150 receive,<br>150 transmit                          | 150 receive,<br>150 transmit                                       |
| IEC 61850 MMS                                      | 256 Clients <sup>c</sup> , 10 Servers                 | Clients not<br>supported, 10 Servers                  | 256 Clients,<br>10 Servers                                | 256 Clients,<br>10 Servers                            | 256 Clients,<br>10 Servers   |
| IEEE C37.118<br>Synchrophasor                      | 100 Clients, 100 Servers                              | 100 Clients, 100 Servers                              | 100 Clients,<br>100 Servers                               | 100 Clients,<br>100 Servers                           | 100 Clients,<br>100 Servers  |
| LG 8979  | 10 Clients, 10 Servers<br>(simultaneous)              | 10 Clients, 10 Servers<br>(simultaneous)              | 10 Clients,<br>10 Servers<br>(simultaneous)               | 10 Clients,<br>10 Servers<br>(simultaneous)           | 10 Clients,<br>10 Servers<br>(simultaneous)                        |

**Communication Protocol Device Count Support**

| <b>Protocol Type</b> | <b>SEL-3530,<br/>SEL-3530-4,<br/>SEL-2241</b> | <b>SEL-3505,<br/>SEL-3505-3</b>           | <b>SEL-1102,<br/>SEL-3332,<br/>SEL-3351,<br/>SEL-3354</b> | <b>SEL-3350,<br/>SEL-2241-2</b>                                    | <b>SEL-3555,<br/>SEL-3560</b>                      |
|----------------------|---|---|---|--|--|
| MIRRORED BITS        | Limited by number of serial ports             | Limited by number of serial ports         | Not supported   | Limited by number of serial ports                                  | Limited by number of SEL-3390S8 serial ports       |
| Modbus               | 120 Clients/Servers (Combination of both)     | 120 Clients/Servers (Combination of both) | 120 Clients/Servers (Combination of both)                 | 200 Clients/Servers (Combination of both, as of R152) <sup>b</sup> | 256 Clients/Servers (Combination of both)          |
| OPC UA               | Not supported                                 | Not supported                             | Not supported   | 10 Clients, 1 Server (10 simultaneous connections)                 | 10 Clients, 1 Server (10 simultaneous connections) |
| SEL Protocol         | 64 Clients/Servers (Combination of both)      | 64 Clients/Servers (Combination of both)  | 64 Clients/Servers (Combination of both)                  | 100 Clients/Servers (Combination of both)                          | 254 Clients/Servers (Combination of both)          |
| SES-92               | 10 Clients, 10 Servers (simultaneous)         | 10 Clients, 10 Servers (simultaneous)     | 10 Clients, 10 Servers (simultaneous)                     | 10 Clients, 10 Servers (simultaneous)                              | 10 Clients, 10 Servers (simultaneous)              |
| SNMP                 | 100 Clients/Managers, 10 Servers/Agents       | 100 Clients/Managers, 10 Servers/Agents   | 100 Clients/Managers, 10 Servers/Agents                   | 100 Clients/Managers, 10 Servers/Agents                            | 100 Clients/Managers, 10 Servers/Agents            |
| (S)FTP Server        | 1 Server, 10 simultaneous connections         | 1 Server, 10 simultaneous connections     | 1 Server, 10 simultaneous connections                     | 1 Server, 10 simultaneous connections                              | 1 Server, 10 simultaneous connections              |

<sup>a</sup> In firmware versions prior to R148, the SEL-3555 and SEL-3560 both support 256 DNP clients/servers (combination of both).

<sup>b</sup> in firmware versions prior to R152, the SEL-3350 supports 120 Modbus clients/servers (combination of both).

<sup>c</sup> Depending on the SCD configuration size.

ACSELERATOR RTAC allows for creation of projects of sizes that may begin to burden legacy RTAC hardware models (SEL-2241, SEL-3505, SEL-3505-3, SEL-3530, and SEL-3530-4). The SEL-3505 and SEL-3505-3 should *not* be used for any projects containing more than 20 devices. In addition, the SEL-2241, SEL-3530, and SEL-3530-4 should not be used with projects that contain more than 50 percent of the supported devices for a given protocol or if the device is used simultaneously for multiple purposes (e.g., as a data concentrator with high-speed logic, or with EtherCAT I/O and an RTAC HMI). Legacy RTAC models running projects that approach or meet the maximum number of supported devices for that model may exhibit degraded performance in some of the following processes:


- Settings read or send operations
- Go Online time
- Web interface responsiveness
- RTAC HMI performance
- Device startup time-to-enable all protocol devices
- Main or Automation task cycle execution time

# CDC Type 2

The CDC protocol is a bit-based protocol that is only supported via expansion serial cards for the SEL-3555 and SEL-3560 RTACs prior to firmware version R144-V0. In firmware versions R144-V0 and later, all RTAC variants support CDC Type 2.

## CDC Type 2 Client Configuration

Configure a CDC Type 2 client to communicate via serial to IEDs by clicking the Extensions icon, as shown in *Figure 2.9*. The number of supported CDC Type 2 clients in a single RTAC project is restricted to the number of physical serial ports available. Use the Tag Processor to map collected data to server tags.

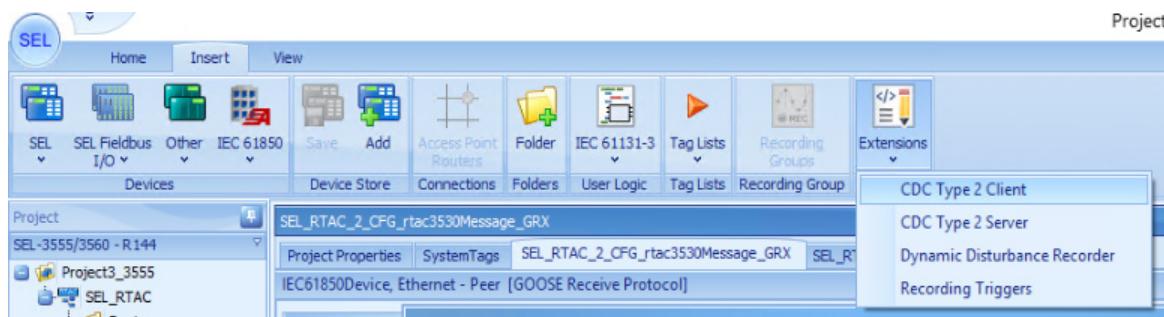

**Figure 2.9** Add CDC Type 2 Client

*Table 2.6* lists the function codes that the CDC Type 2 client supports to scan for data or issue commands and set points.

### NOTE

Function Code Values are in hexadecimal notation.

**Table 2.6 Supported Function Codes**


| Function Code | Description            |
|---------------|------------------------|
| 00            | Scan 1                 |
| 03            | Direct Set Point       |
| 05            | Control Trip (select)  |
| 06            | Control Close (select) |
| 07            | Set Point (select)     |
| 08            | Operate                |
| 0B            | Direct - Trip          |
| 0C            | Direct - close         |

## Settings Tab

The **Settings** tab contains all configurable items for communications. The **Description** column shows details on each configuration item. Move the slider or hover your cursor over a description to see the entire text of an item description.

## Add Client Device Data

- Step 1. Click a device tag type tab to add tags.
- Step 2. Click + to add tags. Aliases cannot be assigned to tag names in the CDC client.
- Step 3. Change other tag-related information as necessary.

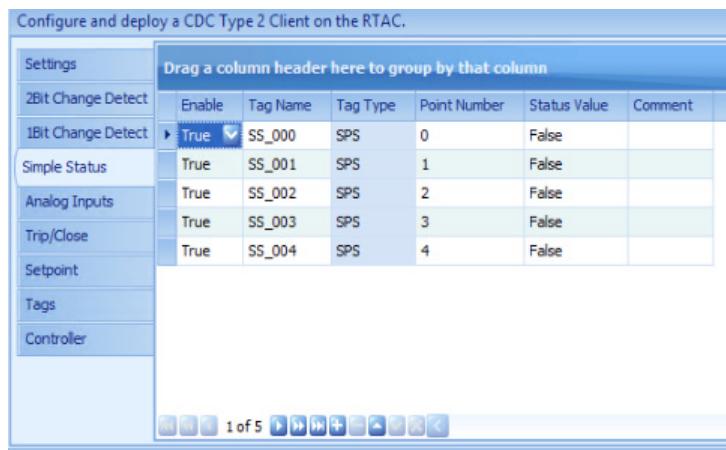

**Figure 2.10 Add CDC Type 2 Tags**

Repeat these steps to configure all CDC Type 2 client connections. When finished, configure the Tag Processor to populate server connection tags with collected CDC Type 2 client values.

Each tag type per the CDC Type 2 protocol supports the maximum number of tags, as shown in *Table 2.7*.

**Table 2.7 CDC Type 2 Tag Types**

| Tag Type           | Supported Tags Per CDC Client |
|--------------------|-------------------------------|
| 2bit Change Detect | 256                           |
| 1bit Change Detect | 256                           |
| Simple Status      | 256                           |
| Analog Inputs      | 128                           |
| Trip/Close         | 64                            |

## Controller Pins

Use POU pin settings to view the present state of the CDC Type 2 client operation and to modify behavior of the protocol. See *Table 2.8* for the settings descriptions.

**Table 2.8 CDC Tag Type 2 Client Pin Descriptions**

| Pin Name            | Pin Type   | Description  | Default |
|---------------------|------------|--|---------|
| EN                  | Input BOOL | The EN input enables or disables this specific Function Block instance. Other inputs have no effect while EN is False. | True    |
| Disable_Tag_Updates | Input BOOL | The POU will not update tags or process changes to tags while this input is True.                                      | False   |

| Pin Name               | Pin Type     | Description  | Default |
|------------------------|--------------|--|---------|
| Disable_Controls       | Input BOOL   | If True, the processing of any controllable tags is blocked.   | False   |
| Reset_Statistics       | Input BOOL   | On rising-edge trigger, all counter POU output are reset.  | False   |
| ENO                    | Output BOOL  | Indicates this specific Function Block Instance is active if True. If False, the inputs have no effect and the outputs are not updated.  | False   |
| Offline                | Output BOOL  | This output is False when protocol communications are in process. Note: Protocol communications may be in process but no successful data exchange due to settings configuration issue.                           | False   |
| Controls_Disabled      | Output BOOL  | Asserted when Disable_Controls input is asserted. This indicates the client will not issue control commands.   | False   |
| Message_Sent_Count     | Output UDINT | Running sum indicating the number of messages transmitted to the remote device.  | False   |
| Message_Received_Count | Output UDINT | Running sum indicating the number of messages received from the remote device.   | 0       |
| Message_Failure        | Output BOOL  | Asserts for a single processor cycle when a message is processed that does not conform to the expected protocol format. This may be because of an incomplete response or corrupted data in the message response. | False   |
| Message_Failure_Count  | Output UDINT | Running sum indicating the number of failed messages.  | 0       |
| Message_Success_Count  | Output UDINT | Running sum indicating the number of messages successively sent and received communicating with the remote device.   | 0       |

## CDC Type 2 Server Configuration

Configure a CDC Type 2 server to communicate via serial to IEDs by selecting the Extensions icon. As many as ten CDC Type 2 servers are supported in a single RTAC project. Use the Tag Processor to map collected data to CDC Type 2 server tags.

## Supported Function Codes

*Table 2.9* lists the function codes that the CDC Type 2 server will respond to. All other messages received by the server will not generate a response.

### NOTE

Function code values are in hexadecimal notation.

**Table 2.9 Supported Function Codes**

| Function Codes | Description           |
|----------------|-----------------------|
| 00             | Scan 1                |
| 01             | Scan 2                |
| 02             | Scan 3                |
| 21–2F          | Scan 3X               |
| 03             | Direct Set Point      |
| 04             | No Operation          |
| 05             | Control Trip (select) |

| Function Codes | Description                    |
|----------------|--------------------------------|
| 06             | Control Close (select)         |
| 07             | Set Point (select)             |
| 08             | Operate                        |
| 09             | Reset                          |
| 0A             | Accumulator Freeze             |
| 0B             | Direct - Trip                  |
| 0C             | Direct - Close                 |
| 0D             | Accumulator Reset              |
| 13             | Memory Read                    |
| 14             | Memory Write                   |
| 18             | SOE Size Setup                 |
| 19             | SOE Event Dump                 |
| 1A             | SOE Point Status Dump          |
| 1B             | SOE Point Enable/Disable Setup |
| 1C             | SOE Point Enable/Disable Dump  |
| 1D             | SOE Time Sync                  |
| 1E             | SOE Time Retrieval             |
| 1F             | SOE Time Correction            |
| 80             | Repeat Scan 1                  |
| 81             | Repeat Scan 2                  |
| 82             | Repeat Scan 3                  |
| A1             | Repeat Scan 3X                 |

To add a CDC Type 2 server connection, select **CDC Type 2 Server** from the **Extensions** menu. Give the device connection a unique name.


## Settings Tab

The **Settings** tab contains all configurable items for communications. Check the **Description** column for details on each configuration item. Move the slider or hover your cursor over a description to see the entire text of an item description.

## Add Server Device Data

The following steps detail the process of adding server device data.

- Step 1. Click on a device tag type to add tags.
- Step 2. Click + to add tags. Aliases cannot be assigned to tag names in the CDC server.
- Step 3. Change other tag-related information as necessary.

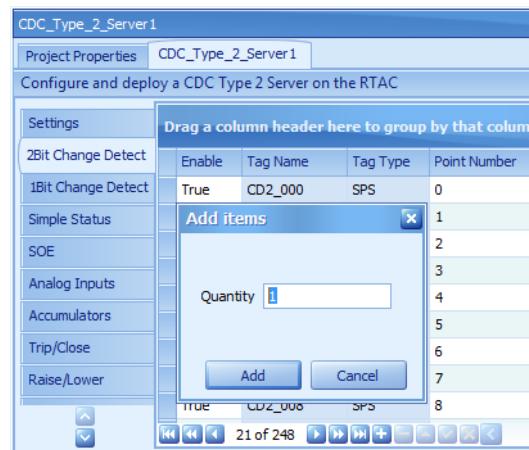**Figure 2.11 Add CDC Type 2 Tags**

Repeat these steps to configure all CDC Type 2 server connections. When finished, configure the Tag Processor to populate these server connection tags with actual values.

Each tag type per the CDC Type 2 protocol supports the maximum number of tags.

**Table 2.10 CDC Type 2 Tag Types**

| Tag Type           | Supported Tags Per CDC Server |
|--------------------|-------------------------------|
| 2bit Change Detect | 256                           |
| 1bit Change Detect | 256                           |
| Simple Status      | 256                           |
| SOE                | 256                           |
| Analog Inputs      | 128                           |
| Accumulators       | 32                            |
| Trip/Close         | 64                            |
| Raise/Lower        | 8                             |
| Setpoint           | 16                            |

## Controller Pins

Use POU pin settings to view the present state of the CDC Type 2 server operation and to modify some of the behavior of the protocol. See *Table 2.11* for the settings descriptions.

**Table 2.11 CDC Type 2 Server Pin Descriptions**

| Pin Name            | Pin Type   | Description  | Default |
|---------------------|------------|--|---------|
| EN                  | Input BOOL | The EN input enables or disables this specific Function Block instance. Other inputs have no effect while EN is False. | True    |
| Disable_Tag_Updates | Input BOOL | The POU will not update tags or process changes to tags while this input is True.                                      | False   |

| Pin Name               | Pin Type     | Description  | Default |
|------------------------|--------------|--|---------|
| Disable_Controls       | Input BOOL   | While True, the processing of any controllable tags is blocked.  | False   |
| Reset_Statistics       | Input BOOL   | On rising-edge trigger, all counter POU output are reset.  | False   |
| ENO                    | Output BOOL  | Indicates this specific Function Block Instance is active if True. If False, the inputs have no effect and the outputs are not updated.  | False   |
| Offline                | Output BOOL  | This output is False when protocol communications are in process. Note: Protocol communications may be in process but no successful data exchange due to settings configuration issue.                           | False   |
| Controls_Disabled      | Output BOOL  | Asserted when Disable_Controls input is asserted. This indicates the client will not issue control commands.   | False   |
| Message_Sent_Count     | Output UDINT | Running sum indicating the number of messages transmitted to the remote device.  | False   |
| Message_Received_Count | Output UDINT | Running sum indicating the number of messages received from the remote device.   | 0       |
| Message_Failure        | Output BOOL  | Asserts for a single processor cycle when a message is processed that does not conform to the expected protocol format. This may be because of an incomplete response or corrupted data in the message response. | False   |
| Message_Failure_Count  | Output UDINT | Running sum indicating the number of failed messages.  | 0       |
| Message_Success_Count  | Output UDINT | Running sum indicating the number of messages successively sent and received communicating with the remote device.   | 0       |
| Accumulator_Freeze     | Output BOOL  | Asserts for one processing interval when a freeze request is received by the server.   | False   |
| SOE_Overflow           | Output BOOL  | Asserted for a single processing interval when an SOE event could not be queued.   | False   |
| SOE_overflow_Count     | Output UDINT | Running sum indicating the number of messages that could not be queued.  | 0       |

## Continuous Waveform Streaming Protocol

### Continuous Waveform Streaming Client

The Continuous Waveform Streaming (CWS) client is a licensed option supported on the SEL-2241-2, SEL-3350, and SEL-3555 running 200-series firmware. As many as 16 instances of the CWS client are supported in a single project. The client supports receiving 3,000 samples/second data from an SEL-735 CWS server. The protocol itself is UDP-based with the server streaming data to a specified client IP address and a configuration message included at a periodic interval. The server sends sample packets at a rate of 60 per second, with each packet containing 50 samples.

## Configuration

To use the CWS client, open a project type with supported hardware and firmware, right-click in the project tree, select the SEL-735 meter, and select **CWS Protocol**. The only supported connection type for the CWS client is **Ethernet**.

In the **Settings** tab, you can configure the IP address of the CWS server that is sending messages to the RTAC as well as the UDP/IP port on which to listen. The SEL-735 server has corresponding settings to specify the IP address of the RTAC to send messages to as well as a UDP/IP port.

Once you have configured the client and gone online with your project, the RTAC will wait for a valid configuration message from the server. When this message is received and processed, the Offline pin deasserts and the client begins to populate its POU pin outputs with available data. Voltage and current sample data are only available from the CWS client POU pin outputs, accessible via custom IEC 61131 logic. Use the **Sample\_Count** POU pin output to determine how many individual samples of data have been received since the last task interval and are available for processing in IEC 61131. Because the CWS server sends packets with groups of 50 samples per packet, the number of samples available to process each cycle will always be a multiple of 50. The total number of samples may vary depending on the main task cycle time. The **Samples** POU pin output provides a pointer to an array of **CWSSample** elements; the length of the array is dynamic and defined by the **Sample\_Count** output. The CWSSample structure is a custom IEC 61131 data type available in the **CWS** library and is defined as follows:

- ▶ Microseconds (ULINT): Parsed from the received data message, the number of microseconds that have elapsed since January 1, 1970, 12:00:00 a.m., representing the sampling time of a given set of voltage and current samples.
- ▶ Channels (ARRAY[0..5] OF REAL): A set of samples from the stream of data. Samples 0 to 2 represent voltage values VAN, VBN, and VCN (or VAB, VBC, and VCA when the meter is configured in delta PT mode), and samples 3 to 5 represent current values IA, IB, and IC. Each sample value is represented as a scaled point-on-wave value with the PT and CT ratios provided by the server and automatically applied by the client.

The **CWS** library also includes a **CWSChannel** enumeration that provides references to each position in the Channels array by channel name. This enumeration is defined as follows:

- ▶ VAN : 0
- ▶ VAB : 0
- ▶ VBN : 1
- ▶ VBC : 1
- ▶ VCN : 2
- ▶ VCA : 2
- ▶ IA : 3
- ▶ IB : 4
- ▶ IC : 5

## Example CWS Client IEC 61131 Data Access

*Figure 2.12* shows how to access sample data from the CWS client using a root-mean-square calculation. This example assumes the following:

- ▶ A CWS client named StationA\_735\_CWS is present in the project.
- ▶ A PMU Tag list named StationA is present in the project, with the FREQ tag enabled and an analog tag named VA\_RMS.

```

PROGRAM CWS_Data_Example
VAR
    va : ARRAY[0..149] OF REAL;
    va_index : UINT;
    i, j : UINT;
    square_sum, mean_square, root_mean_square : REAL;
END_VAR

// Calculate a root-mean-square value for VA
IF StationA_735_CWS_POU.Offline THEN
    // return if client is offline
    RETURN;
END_IF

IF StationA_735_CWS_POU.Sample_Discontinuity THEN
    // return and clear buffered VA values if sample discontinuity was detected
    va_index := 0;
    RETURN;
END_IF

IF StationA_735_CWS_POU.Sample_Count = 0 THEN
    // return if no samples are available for processing
    RETURN;
END_IF

FOR i := 0 TO StationA_735_CWS_POU.Sample_Count - 1 DO
    va[va_index] := StationA_735_CWS_POU.Samples[i].Channels[CWS.CWSChannel.VAN];
    va_index := va_index + 1;

    // Wait for 150 sample values to be buffered prior to running the RMS calculation
    IF va_index = 150 THEN
        square_sum := 0.0;
        FOR j := 0 TO 149 DO
            square_sum := square_sum + TO_REAL(EXPT(va[j], 2));
        END_FOR

        mean_square := square_sum / 150;
        root_mean_square := SQRT(mean_square);

        // Update the timestamp with the value from the present sample
        StationA.FREQ.t.value.dateTime :=
            TO_DT(StationA_735_CWS_POU.Samples[i].Microseconds / 1000000);
        StationA.FREQ.t.value.uSec :=
            TO_UINT(((StationA_735_CWS_POU.Samples[i].Microseconds MOD 1000000) / 50000) * 50000);

        // Update the mag/instMag quantities with the calculated RMS value
        StationA.VA_RMS.mag := root_mean_square;
        StationA.VA_RMS.instMag := root_mean_square;

        // Reset the va_index to 0 to begin buffering another set of 150 sample values
        va_index := 0;
    END_IF
END_FOR

```

Figure 2.12 CWS Data Access IEC 61131 Example

## POU Pins

Use POU pin settings to view the present state of the CWS client and to modify some of the behavior of the CWS protocol. Setting the **Visible** field to **True** will cause the POU pin to appear in the **Controller** tab. See *Table 2.12* for the settings descriptions.

**Table 2.12 CWS Client POU Pin Settings**

| <b>Pin Name</b>                  | <b>Pin Type</b>             | <b>Description</b>  | <b>Default</b> |
|----------------------------------|-----------------------------|---|----------------|
| EN                               | Input BOOL                  | Enables this instance of the CWS client.  | TRUE           |
| Reset_Statistics                 | Input BOOL                  | Resets all communications statistics.   | FALSE          |
| Auto_Configuration_Discard_Count | Output UDINT                | The number of received messages that have been discarded while waiting for a configuration message.   | 0              |
| Auto_Configuration_Pending       | Output BOOL                 | Asserted when a valid configuration message has not yet been received.  | FALSE          |
| Configuration_Count              | Output UDINT                | The number of configuration messages that have been received.   | 0              |
| Data_Count                       | Output UDINT                | The number of data messages that have been received.  | 0              |
| ENO                              | Output BOOL                 | Indicates this instance of CWS client is running.   | FALSE          |
| Invalid_Configuration_Count      | Output UDINT                | The number of invalid configuration messages that have been received.   | 0              |
| Invalid_Data_Count               | Output UDINT                | The number of invalid data messages that have been received.  | 0              |
| Invalid_Message_Count            | Output UDINT                | The number of received messages that have been invalid.   | 0              |
| Message_Failure                  | Output BOOL                 | Asserts for a single processing interval following a message failure.   | FALSE          |
| Message_Failure_Count            | Output UDINT                | The number of failed received messages. This is the sum of Invalid_Message_Count, Unsupported_Message_Count, Invalid_Configuration_Count, and Invalid_Data_Count.                               | 0              |
| Message_Success_Count            | Output UDINT                | The number of messages that have been successfully received.  | 0              |
| Offline                          | Output BOOL                 | Deasserts when a valid configuration message has been processed and data messages are being received.   | TRUE           |
| Out_Of_Order_Count               | Output UDINT                | The number of received data messages that have been out of order (missed, duplicate, etc.).   | 0              |
| Sample_Count                     | Output UINT                 | The number of samples that have been received and buffered by the CWS client since the last task cycle execution. Defines the length of the array of samples available from the Samples output. | 0              |
| Samples                          | Output POINTER TO CWSSample | An array of Sample_Count number of samples.   | 0              |
| Sample_Discontinuity             | Output BOOL                 | Asserted when Sample_Discontinuity_Count is greater than the last cycle.  | FALSE          |
| Sample_Discontinuity_Count       | Output UDINT                | The number of times the received samples have not been continuous with previous received samples. This is the sum of Out_Of_Order_Count and Timestamp_Deviation_Count.                          | 0              |
| Timestamp_Deviation_Count        | Output UDINT                | The number of received data messages that have had jumps in time stamps.  | 0              |
| Unsupported_Message_Count        | Output UDINT                | The number of unsupported messages that have been received.   | 0              |


# Courier Protocol

## Courier Client


The Courier client is used to retrieve uncompressed Disturbance Records from Alstom relays and store them as compressed COMTRADE files. As many as 100 Courier clients are allowed. The client supports single-level addressing, and address allocation is not automatic. The client does not support collecting SCADA information.

## Configuration


To use the Courier client, right-click in the project tree and select **Courier Protocol**.

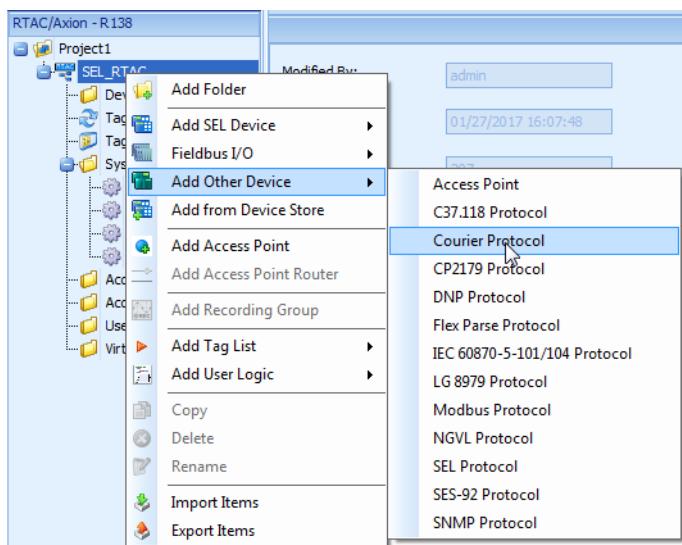

Select the connection type (Ethernet Tunneled Multidrop Serial, Ethernet Tunneled Serial, Multidrop Serial, or Serial).

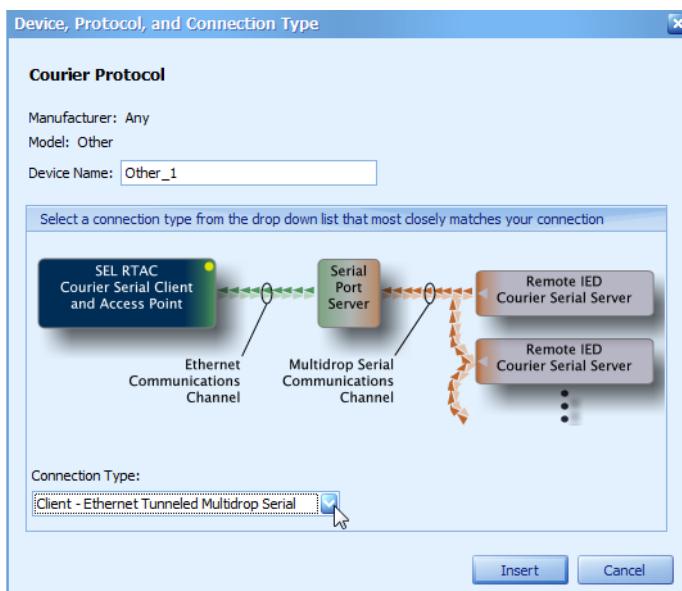

Then you can begin to configure the client. In the **Settings** tab, you can configure your connection, as well as event polling parameters, and whether or not you want to acknowledge collected events. In the **Advanced Settings**, you can also specify a **Device GUID** to integrate with TEAM event collection, additional serial parameters, and SSH parameters.

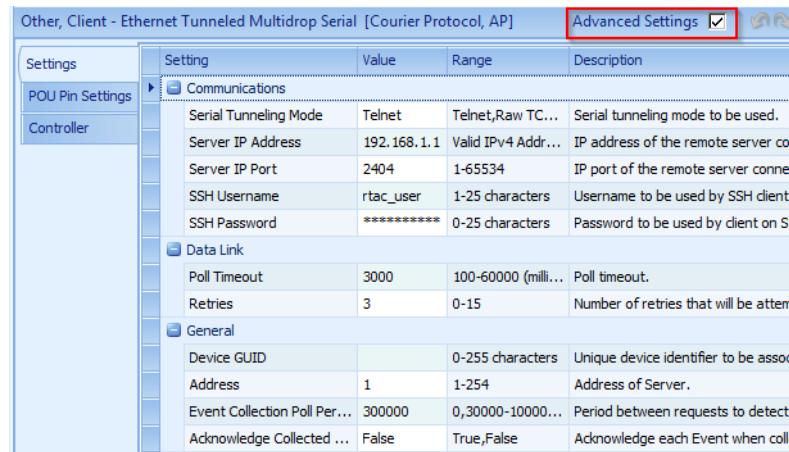

Once you have your client configured and go online with your project, the RTAC will begin to poll the server (Courier IED) for Disturbance Records. For successful Disturbance Record collection, note the following settings requirements for the Courier IED:

- Under the configuration options, the **Disturb Recorder** parameter must be assigned to **Visible**.
- If IED password-based security levels are enabled, configure the **Password** setting in the Courier client to allow it to log in to the IED, enabling read/write access to the necessary data cells for Disturbance Record collection. If the IED does not use password-based security, leave this setting empty.

## POU Pins

Use POU pin settings to view the present state of the Courier client and to modify some of the behavior of the Courier protocol. Setting the **Visible** field to **True** will cause the POU pin to appear in the **Controller** tab. See *Table 2.13* for the settings descriptions.

**Table 2.13 Courier POU Pin Settings**

| Pin Name                      | Pin Type     | Description  | Default |
|-------------------------------|--------------|--|---------|
| Direct_Transparent_Connection | Output BOOL  | Indicates that the communications have been interrupted by a direct transparent connection through an access point router.   | FALSE   |
| EN                            | Input BOOL   | Enables this instance of Courier client.   | TRUE    |
| ENO                           | Output BOOL  | Indicates this instance of Courier client is running.  | FALSE   |
| Event_Collection_Count        | Output UDINT | Number of Events collected since the POU was enabled.  | 0       |
| Event_Collection_Delay        | Output BOOL  | Asserts when an event collection is triggered and the previous triggering of an event collection has not completed. Deasserts on the falling edge of Event_Collection_Pending. | FALSE   |
| Event_Collection_Pending      | Output BOOL  | Asserted while there are uncollected Events. Deasserts once all Events have been collected.  | FALSE   |

| Pin Name                     | Pin Type     | Description  | Default    |
|------------------------------|--------------|--|------------|
| Event_Collection_Poll        | Input BOOL   | Triggers polls for new Events on the rising edge.  | FALSE      |
| Event_Collection_Poll_Period | Input TIME   | Period between requests to detect Events.  | T#300000MS |
| Event_Collection_Stored      | Output BOOL  | Asserts for a processing interval when an Event has been stored in nonvolatile memory.   | FALSE      |
| Invalid_Function_Block_Input | Output BOOL  | True when a function block input currently has an invalid or out-of-range value.   | FALSE      |
| Message_Failure              | Output BOOL  | Asserts for a single processing interval following a message failure.  | FALSE      |
| Message_Failure_Count        | Output UDINT | Increments value by one each time Message_Failure is asserted.   | 0          |
| Message_Received_Count       | Output UDINT | A counter of the number of messages received.  | 0          |
| Message_Sent_Count           | Output UDINT | A counter of the number of messages sent.  | 0          |
| Message_Success_Count        | Output UDINT | A running sum of the messages successfully sent or received.   | 0          |
| Offline                      | Output BOOL  | Set to True if data link activity time-out expires or a frame has not been received for a period of time, defined by Communications_Offline_Timer. | TRUE       |
| Reset_Statistics             | Input BOOL   | Resets all communications statistics.  | FALSE      |

## CP2179

### CP2179 Client Configuration

Configure a CP2179 Client connection to communicate via serial or Ethernet tunneled serial to as many as 100 IEDs. The RTAC will poll data from these IEDs and store the data it receives in global variables. Use the Tag Processor to map these data to any protocol, logs, user logic, etc.

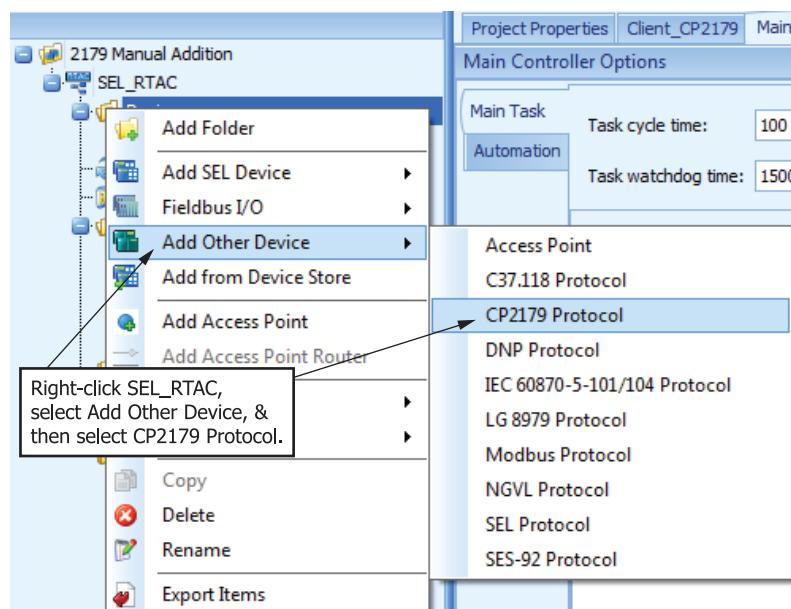


Figure 2.13 Insert CP2179 Client

## Settings Tab

Upon your selecting the **Settings** tab, the RTAC displays all configurable items for communication. Check the **Description** column for details on each configuration item. Move the slider bar, or hover your mouse over a truncated description to see the entire text of a description. Type any necessary comments in the blank column to the far right.

Select the **Advanced Settings** check box to enable configuration of advanced settings.

Select device data settings tabs such as **2-bit Status**, **Analog Inputs**, etc., to add and configure CP2179 tags.

## Messages

Set up the number and type of messages you need. Each message can apply to all sequence ID numbers or a configurable range.

Message Name:

Unique identifier for that message.

Period:

Frequency in millisecond a message will be triggered.

Function:

| Function Code | Function Code Description | Supported Features  |
|---------------|---------------------------|---|
| 0x00          | Basic Scan                | 2-bit Status<br>Simple Status<br>Analog Input (signed 16-bit format)<br>Pulse Accumulator |
| 0x01          | Scan Inclusive            | Signed 16-bit format  |
| 0x03          | Special Calculations      | 32-bit IEEE Single-Precision Floating Point   |
| 0x20          | Reset Accumulator         |   |

Type:

Message type selection applying only to Basic Scan. Types are:

- 2-bit Status
- Simple Status
- Analog Input (signed 16-bit format)
- Pulse Accumulator

Range:

Sequence ID address selection. Option are: All or a range specified by a Starting Sequence ID and a count of Sequence IDs following referred to as Start/Count.

Start:

Sequence ID of the first point addressed by the message.

Count:

Number of consecutive sequence IDs requested by the message.

## Add Client Device Data

The following steps detail adding client device data.

- Step 1. Click a device tag type tab to add and configure tags.
- Step 2. Click + to add tags (10,000 tag limit or 5000 for SEL-3505, per device tag type).

Creating only the number of necessary tags will help the system run at optimum performance.

- Step 3. Change the names of the tags, if necessary.
- Step 4. Change other tag-related information as necessary.

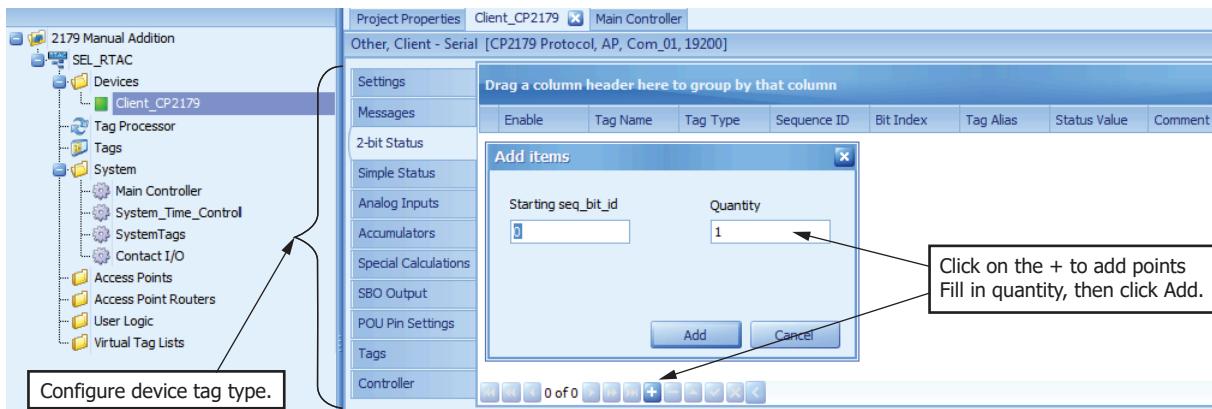


Figure 2.14 Add CP2179 Client Tags

## Device Tag Type Configuration Parameters

Each device tag type has parameters that must be configured correctly to ensure proper system operation.

Table 2.14 Common Device Tag Type Parameters

| Parameter   | Description  | Default  |
|-------------|--|--|
| Enable      | Set this flag to True to enable processing of this tag.<br>Set this flag to False to disable processing.   | True   |
| Tag Name    | This parameter describes the tag. You can change this name as necessary.   | The default tag name contains the device name and tag type and is numbered 0–n tags. |
| Sequence ID | Point address on the server data map   | Contiguous from 0 to the number of IDs   |
| Tag Alias   | Enter an optional descriptive tag name in this field, and then reference this tag alias anywhere in the RTAC system in place of the actual tag name. |  |
| Comment     | Optional user-entered comment field  |  |

**Table 2.15 2-Bit Status**

| Parameter    | Description  | Default                |
|--------------|--|------------------------|
| Tag Type     | See <i>Data Types on page 1137</i> for more details.               | SPS                    |
| Bit Index    | Bit position within the Status Word, identified by the Sequence ID | Contiguous from 0 to 7 |
| Status Value |  |                        |

**Table 2.16 Simple Status**

| Parameters   | Description  | Default                |
|--------------|--|------------------------|
| Tag Type     | See <i>Data Types on page 1137</i> for more details.               | SPS                    |
| Bit Index    | Bit position within the Status Word, identified by the Sequence ID | Contiguous from 0 to 7 |
| Status Value |  |                        |

**Table 2.17 Analog Input**

| Parameter | Description   | Default |
|-----------|---|---------|
| Tag Type  | See <i>Data Types on page 1137</i> for more details.  | INS     |
| Max Value | The maximum value allowed for this point. If instMag > Max Value, ".q.detailQual.outOfRange" is set.  |         |
| H H Limit | The high-high alarm limit. Excursions beyond this limit cause the RTAC to generate a high-high alarm. |         |
| H Limit   | The high alarm limit. Excursions beyond this limit cause the RTAC to generate a high alarm.           |         |
| L Limit   | The low alarm limit. Excursions beyond this limit cause the RTAC to generate a low alarm.             |         |
| L L Limit | The low-low alarm limit. Excursions beyond this limit cause the RTAC to generate a low-low alarm.     |         |
| Min Value | The minimum value allowed for this point. If instMag < Min Value, ".q.detailQual.outOfRange" is set.  |         |

**Table 2.18 Pulse Accumulator**

| Parameter    | Description   | Default |
|--------------|---|---------|
| Tag Type     | See <i>Data Types on page 1137</i> for more details.  | BCR     |
| Actual Value | The initialized running value at startup  | 0       |
| Frozen Value | The default frozen value the tag will have before the RTAC initializes the tag upon startup | 0       |

**Table 2.19 Special Calculations**

| Parameter      | Description  | Default |
|----------------|--|---------|
| Tag Type       | See <i>Data Types on page 1137</i> for more details. | INS     |
| Inst Magnitude | The initialized instantaneous value at startup       |         |
| Magnitude      | The initialized dead-banded value at startup         |         |

| Parameter      | Description   | Default |
|----------------|---|---------|
| Dead Band      | The number of units of change necessary to move the Inst Magnitude value into Magnitude. If $ instMag - mag  > db$ , then $mag := instMag$ . An excursion of this dead band will generate a time-stamped DNP event. |         |
| Zero Dead Band | The number of units at or below which Magnitude is forced to zero. If $ mag  < zeroDB$ , then $mag := 0$ .  |         |
| Max Value      | The maximum value allowed for this point. If $instMag > MaxValue$ , ".q.detailQual.outOfRange" is set.  |         |
| H H Limit      | The high-high alarm limit. Excursions beyond this limit cause the RTAC to generate a high-high alarm.   |         |
| H Limit        | The high alarm limit. Excursions beyond this limit cause the RTAC to generate a high alarm.   |         |
| L Limit        | The low alarm limit. Excursions beyond this limit cause the RTAC to generate a low alarm.   |         |
| L L Limit      | The low-low alarm limit. Excursions beyond this limit cause the RTAC to generate a low-low alarm.   |         |
| Min Value      | The minimum value allowed for this point. If $instMag < minValue$ , ".q.detailQual.outOfRange" is set.  |         |

**Table 2.20 SBO Output**

| Parameter             | Description  | Default |
|-----------------------|--|---------|
| Tag Type              | See <i>Data Types on page 1137</i> for more details. | SPC     |
| Status                | SPS Status of the point identified by Sequence ID    |         |
| Control Model         | Nonconfigurable field                                | Persist |
| On/Off Pulse Duration | Nonconfigurable field                                |         |

## POU Pin Settings

See *POU Pin Settings (Advanced Usage) on page 141* for a description of the **POU Pin Settings** tab.

## Tags

See *Tags (Overview) on page 142* for a description of the **Tags** tab.

## Controller

See *Controller (Advanced Usage) on page 141* for a description of the **Controller** tab.

# DNP3

## Overview


Configure DNP3 protocol on any of the RTAC serial or Ethernet ports to communicate with such other devices and systems as DNP3 IEDs, communications processors, RTUs, and remote client systems. See *Communication Protocol Device Count Support on page 149* for the number of DNP servers and clients supported for each RTAC model.

This section describes the configuration and use of DNP3 protocol with ACCELERATOR RTAC. The DNP3 Device Profile Document is included at the end of this section. For more DNP3 protocol information, go to [www.dnp.org](http://www.dnp.org).

For a detailed description of client and server concepts and other general information on protocol configuration, see *Overview on page 129*.

## DNP Client Configuration

Configure a DNP client connection to communicate via serial or Ethernet to IEDs. The RTAC will poll data from these IEDs and store the data it receives in global variables. Use the Tag Processor to map these data to any protocol, logs, user logic, etc.

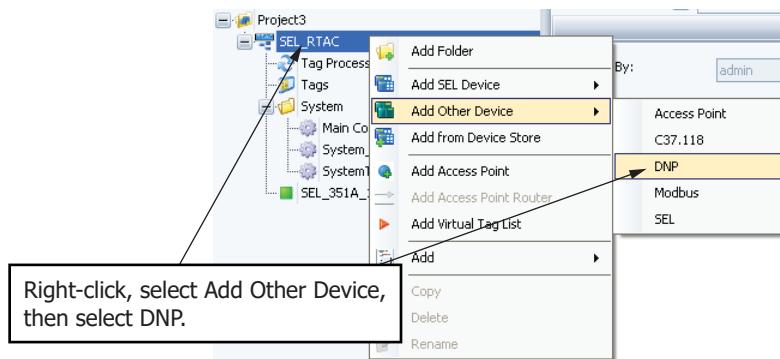

**Figure 2.15 Insert DNP Client Device**

Give the device connection a unique name and select the connection type, as shown in *Figure 2.1*. Refer to *Client Connection Types on page 135* for a description of each connection type. Note that, in a DNP client connection, the client DNP address setting is the address of the RTAC. The server DNP address setting is the DNP address of the IED being polled.

## Settings Tab

The **Settings** tab contains all configurable items necessary for communications. Check the **Description** column for details on each configuration item. Move the slider or hover your cursor over a description to see the entire text of an item description. Type any applicable comments in the blank column to the far right. Select the **Advanced Settings** check box to enable configuration of advanced settings.

## Add Client Device Data

The following steps detail adding client device data.

- Step 1. Click a device tag type tab to add and configure tags.
- Step 2. Click + to add tags (30,000 tag limit or 5000 for SEL-3505, per device tag type).

### NOTE

Use Copy (**<Ctrl+C>**) and Paste (**<Ctrl+V>**) to populate columns of Tag names and to duplicate devices.


Creating only the number of necessary tags will help the system run at optimum performance.

- Step 3. Change the names of the tags, if necessary.
- Step 4. Change other tag-related information as necessary.

Repeat these steps to configure all IED devices. When finished, configure one or more servers to deliver the data to remote client devices.

### NOTE

Save the configuration by clicking the **Save** icon or by pressing **<Ctrl+S>**.

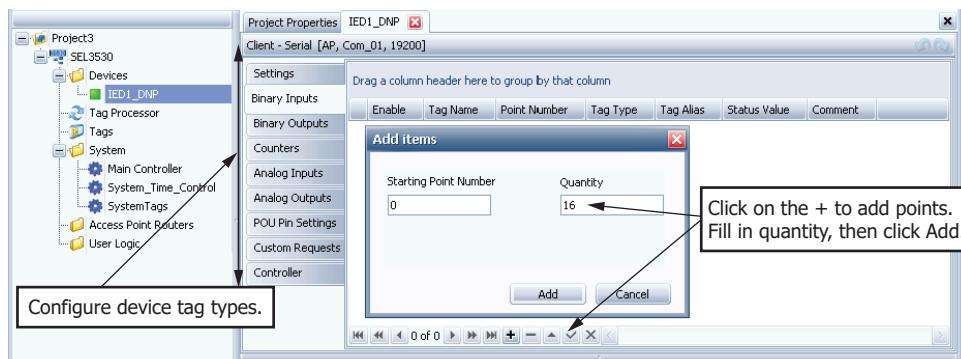

**Figure 2.16 Add DNP Client Tags**

## Device Tag Type Configuration Parameters

Each device tag type has parameters that must be configured correctly to ensure proper system operation.

**Table 2.21 Common Device Tag Type Parameters**

| Parameter | Description  | Default  |
|-----------|--|--|
| Enable    | Set this flag to True to enable processing of this tag.<br>Set this flag to False to disable processing. | True   |
| Tag Name  | This parameter describes the tag. You can change this name as necessary.                                 | The default tag name contains the device name and tag type and is numbered 0–n tags. |

| Parameter    | Description   | Default                               |
|--------------|---|---------------------------------------|
| Point Number | This is the point number for which the DNP client will poll. If points are not contiguous in the IED, change these point numbers to match the DNP database for the IED. | Contiguous from 0 to the point count. |
| Tag Alias    | Enter an optional descriptive tag name in this field, and then reference this tag alias anywhere in the RTAC system in place of the actual tag name.                    |                                       |

**Table 2.22 Binary Input Parameters**

| Parameter    | Description  | Default |
|--------------|--|---------|
| Tag Type     | See <i>Data Types on page 1137</i> for more details. | SPS     |
| Status Value | The initialized value at startup.                    | False   |
| Comment      | Optional user-entered comment field.                 |         |

**Table 2.23 Binary Output Parameters**

| Parameter        | Description   | Default   |
|------------------|---|---|
| Tag Type         | See <i>Data Types on page 1137</i> for more details. In DNP, there are five binary output operations and one status.  | Control operations is operSPC. Status is SPS.                     |
| Status Value     | The initialized state at startup.   | False   |
| Control Value    | The initialized control value at startup.   | False   |
| Control Model    | Defines if the control is a single pulse or persistent (latch) type control.  | Defaults are set according to control type and cannot be changed. |
| Number of Pulses | Defines the number of pulses the control will issue each time this point is controlled.   | 1   |
| On Pulse Dur     | Defines the duration for an active pulse.   |   |
| Off Pulse Dur    | Defines the duration for an inactive pulse. Although you can configure the pulse-off duration, the pulse-off command in DNP is not supported in the RTAC. A pulse-off command is treated as a pulse-on command. |   |
| Comment          | Optional user-entered comment field.  |   |

**Table 2.24 Counter Parameters**

| Parameter    | Description  | Default |
|--------------|--|---------|
| Tag Type     | See <i>Data Types on page 1137</i> for more details.   | BCR     |
| Actual Value | The initialized running value at startup.  | 0       |
| Frozen Value | The default frozen value the tag will have before the RTAC initializes the tag upon startup. |         |
| Comment      | Optional user-entered comment field.   |         |

**Table 2.25 Analog Input Parameters**

| Parameter      | Description  | Default |
|----------------|--|---------|
| Tag Type       | See <i>Data Types on page 1137</i> for more details.   | MV      |
| Inst Magnitude | The initialized instantaneous value at startup.  |         |
| Magnitude      | The initialized dead-banded value at startup.  |         |
| Dead Band      | The number of units of change necessary to move the Inst Magnitude value into Magnitude. If $ instMag - mag  > db$ , then $mag := instMag$ . An excursion of this dead band will generate a timestamped DNP event. |         |

| Parameter      | Description  | Default |
|----------------|--|---------|
| Zero Dead Band | The number of units at or below which Magnitude is forced to zero. If $ mag  < \text{zeroDB}$ , then $\text{mag} := 0$ . |         |
| Max Value      | The maximum value allowed for this point. If $\text{instMag} > \text{Max Value}$ , ".q.detailQual.outOfRange" is set.    |         |
| H H Limit      | The high-high alarm limit. Excursions beyond this limit cause the RTAC to generate a high-high alarm.                    |         |
| H Limit        | The high alarm limit. Excursions beyond this limit cause the RTAC to generate a high alarm.                              |         |
| L Limit        | The low alarm limit. Excursions beyond this limit cause the RTAC to generate a low alarm.                                |         |
| L L Limit      | The low-low alarm limit. Excursions beyond this limit cause the RTAC to generate a low-low alarm.                        |         |
| Min Value      | The minimum value allowed for this point. If $\text{instMag} < \text{Min Value}$ , ".q.detailQual.outOfRange" is set.    |         |
| Comment        | Optional user-entered comment field.   |         |


**Table 2.26 Analog Outputs**

| Parameter     | Description                               | Default |
|---------------|---|---------|
| Set Magnitude | The commanded value of the analog output. | 0       |

The other analog output settings are identical to those for analog inputs.

## Custom Requests

Create as many as 15 optional custom requests per DNP client session. Add a request by clicking the **+** icon. Expand the custom request headings to configure the object, poll period, and broadcast request, and to add function codes and all other configurations related to the custom DNP request.

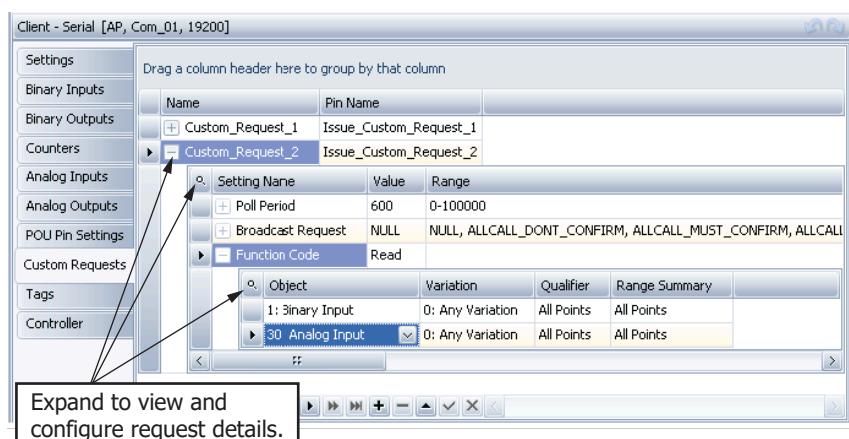


**Figure 2.17 DNP Client Custom Requests**

## DNP Server Configuration

Configure a DNP server connection to communicate via serial or Ethernet to DNP polling clients (HMIs, communications processors, etc.). Create binary input, analog input, and counter tags in a DNP Server Shared Map as placeholders for data that the clients will poll. Configure the DNP server to use the configured shared map. Each DNP server can use a unique map, or can share

the same map. Although two or more DNP servers can share a map, each server will maintain its own event queue. You can create a maximum of 100 shared DNP server maps in a project. Map data to those tags by using the Tag Processor from client IED or other source tags in the RTAC database.

Insert a unique DNP Server connection for each DNP client connected to the RTAC. Although sharing DNP server connections simultaneously with one or more polling clients is not permitted, you can configure various failover scenarios in the RTAC (see *DNP Server Failover on page 171*).

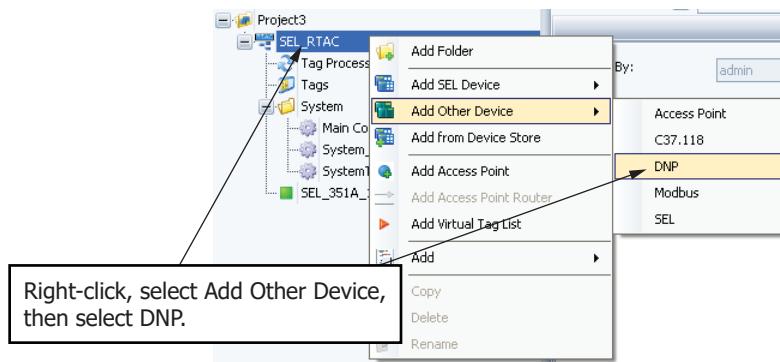

**Figure 2.18 Insert DNP Server Device**

Give the device connection a unique name and select the type of connection as shown in *Figure 2.3*. Note in DNP server, the Server DNP Address is the DNP address of the RTAC. The Client DNP Address is the address of the device polling the RTAC. You can configure multiple serial DNP servers to use the same serial port to create a virtual multidrop environment within the RTAC. Each server monitors traffic on the one configured serial port and responds to messages that contain the correct DNP address for that server. Each server maintains its own event queue.

The **Settings** tab contains all configurable items for communications. Note that you must enter a DNP Server Shared Map name in the settings. This map contains all of the tags that this DNP server uses. You insert and configure a DNP shared map under Tag Lists in the **Insert** tab. Check the Description column for details on each configuration item. Move the slider or hover your cursor over the description to see the entire description text. Type any necessary comments in the blank column to the far right. Select the **Advanced Settings** check box to enable configuration of advanced settings.

## DNP Server Failover

You can configure DNP servers to operate under the following failover scenarios:

**DNP/IP:** Multiple clients can poll one RTAC server if they are configured in a failover configuration so as to poll the RTAC one at a time. In this configuration, the DNP server maintains one DNP event queue. Events reported to one client are not reported in the next reply, even if the poll comes from a different client. If you set Anonymous DNP IP Clients = TRUE, the RTAC will allow any DNP client that can connect to the RTACs network to poll this DNP server, as long as the DNP IP addresses are correct. If you set Allow Anonymous DNP IP Clients = False, you can configure as many as 20 Client IP Addresses, separated by commas. In this configuration, the RTAC will reply to any client that has one of the configured IP addresses.

**DNP Serial and Tunneled Serial:** You can configure a DNP server to communicate DNP serial or tunneled serial over Ethernet with a redundant dial-up, leased line, etc., serial port with the following steps. Insert a DNP serial server, select **Advanced Settings**, then scroll down and configure the Failover Type to be another serial port or a tunneled connection. Configure the respective serial port or IP information for the failover port. You can configure as many as 10 TCP addresses, separated by commas. The DNP server monitors both the primary serial port and the failover Ethernet or serial port as redundant communication paths, and responds to polls from the respective interface. Because the DNP task is monitoring and responding to both interfaces, there are no failover delays or risks of missing queued events. The DNP server maintains one event queue regardless of how many failover ports are configured.

## DNP Server Event Reporting

You can configure event data storage in the advanced settings for each DNP server. The analog, binary input, and counter data buffers each have separate event queues that are configurable in size from 1–65,535 entries. By default, each event buffer is configured as a one-to-one correlation with the number of defined tags in the DNP server. As such, each buffer entry contains only one event (the most recent) with a time stamp for each configured tag. Configure the binary, analog, and counter buffer sizes to match the number of tags defined for the respective types. Alternatively, you can configure each event buffer type as SOE and configure the size to as many as 65,535 entries. When a buffer type is configured as SOE, the RTAC places all events for a tag type in the respective buffer until the buffer size is exceeded. On a buffer overflow, the oldest events shall be maintained in the buffer and new events discarded. In SOE mode, the buffer may contain many events from a few tags or a few events from many tags.

Each DNP object (binary input, analog input, etc.) is configurable with a per-point **Event Class** that controls the reporting of change events for that point in Class 1, 2, and 3 and Integrity (Class 0) poll responses. By default, binary input changes are reported under Class 1 and analog input changes are reported under Class 2. All other point types are assigned by default to Class 0, which means they do not generate change events and thus are only reported in a response to a Class 0 poll. Each point type can optionally be configured with an Event Class of **None**, which causes them to be excluded in the response to any Class 0 polls.


Unsolicited event reporting can introduce a challenge for half-duplex communications in collision avoidance. If two devices on a multidrop line attempt to talk at the same time, a collision will occur. If they hold off the exact amount of time and then retry, they will experience another collision. You can configure the Transmit Minimum Delay and Transmit Maximum Delay in each RTAC to create a window of random transmit delays for unsolicited reporting. With these parameters configured, the two RTACs will retry at different random times, therefore avoiding the chances of another communication collision.

## DNP Server Shared Tag Maps

The following steps detail adding and configuring a DNP server shared tag map. Each map is configured with the required tags for the server (binary inputs, analog inputs, etc.) and can be shared across multiple DNP server devices.

Step 1. From the **Insert** tab, select **Tag Lists** and then **DNP Server Shared Map**.

This inserts a configurable tag list for a DNP server.

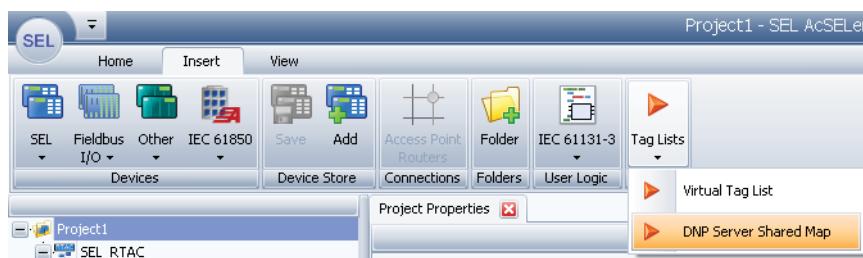


**Figure 2.19 Add DNP Server Map**

- Step 2. Click a device tag type tab to add and configure tags.
- Step 3. Click + to add tags (10,000 tag limit or 5000 for SEL-3505, per device tag type).

Creating only the number of necessary tags will help the system run at optimum performance.

- Step 4. Change the names of the tags, if necessary.
- Step 5. Change other tag-related information as necessary.

Repeat these steps to configure all server tags. When finished, configure the DNP server to use this custom map by selecting the Map Name under settings. Although more than one DNP server can use the same map, each DNP server will manage separate event queues. Configure the Tag Processor to populate these server connection tags with actual values.

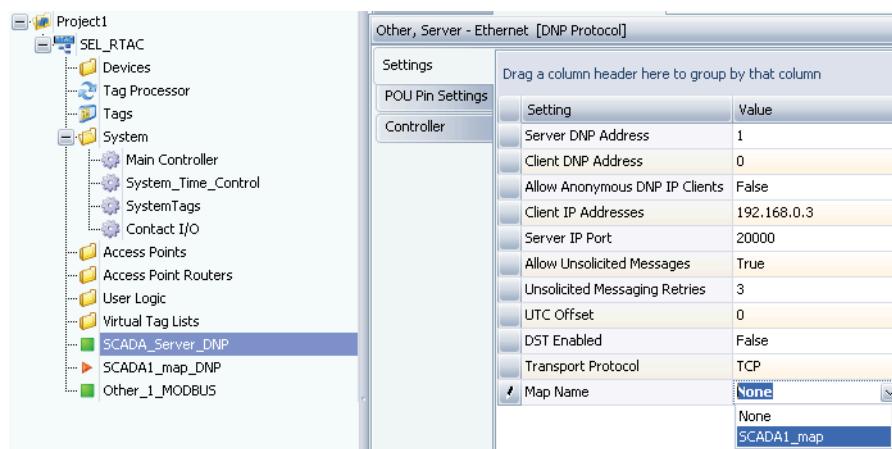

**Figure 2.20 Select DNP Shared Map**

## DNP Tag Type Configuration Parameters

Each DNP tag type has parameters that must be configured correctly to ensure proper system operation. Configuration columns in the DNP Shared Map have the same meaning as in DNP clients (described previously) except for the addition of fields that have special meaning in DNP servers. Use these fields to alter the default object variations returned to a polling DNP client. Analog Input point types allow configuration of a per-point **Deadband** value that should be tuned to provide a point update rate that is frequent enough for event polls, but not so frequent that it could be interpreted as noise or chatter.

## DNP Server Dial-Out

You can configure a DNP serial server device to dial out automatically to report unsolicited data. Insert a DNP serial server connection and select **Advanced Settings**. Figure 2.21 shows these settings that are enabled when Modem Connected = TRUE. Notice the configuration supports an optional second phone number in case the RTAC does not get an answer when using the first phone number.

| Setting                        | Value      | Range       | Description   |
|--------------------------------|------------|-------------|---|
| RTS Postamble                  | 0          | 0-1000      | (milliseconds) RTS Postamble  |
| Transmit Minimum Delay         | 0          | 0-1000      | (milliseconds) Transmit Minimum Delay   |
| Transmit Maximum Delay         | 0          | 0-1000      | (milliseconds) Transmit Maximum Delay   |
| Modem Connected                | True       | True, False | Indicates whether a modem is expected on the port. When set to True, the RTAC will attempt to dial out. |
| Modem Startup String           | E0X0&D0... |             | Modem initialization string.  |
| Phone Number 1                 |            |             | First phone number to dial out to; may contain modem dial characters.                                   |
| Phone Number 2                 |            |             | Second phone number to dial out to; may contain modem dial characters.                                  |
| Phone 1 Retry Attempts         | 5          | 1-20        | Number of times to attempt dial-out before using Phone N  |
| Phone 2 Retry Attempts         | 5          | 1-20        | Number of times to attempt dial-out before using Phone N  |
| Time to Attempt Dial           | 60         | 5-300       | Time from initiating a phone call to giving up because of no answer.                                    |
| Time Between Dial-Out Attempts | 120        | 5-3600      | Time from giving up on a dial attempt until retrying dial-out   |
| Minutes to Port Timeout        | 15         | 0,1-60      | Time with no DNP activity before the modem disconnects.   |

Figure 2.21 DNP Server Dial-Out


## Secure Authentication

In firmware versions R143 and later, the DNP server supports Secure Authentication Version 5. Select the **Advanced Settings** check box in the DNP server to enable this feature. DNP Secure Authentication uses cryptographic hashing techniques for a challenge-and-response infrastructure that serves to authenticate critical commands and services. IEEE 1815 (DNP standard) defines commands and services that are critical and which must be challenged.

When Secure Authentication is enabled, the commands and services that can be challenged are configurable. This will cause the RTAC to issue a challenge any time the RTAC receives one of the configured function codes. By default, read commands do not prompt challenges. This can be configured to your desired configuration list. When Secure Authentication is enabled it will cause additional bandwidth consumption and delays in processing received messages that are challenged.

## How to Configure Secure Authentication

Step 1. Under **Advanced Settings**, set **Enable Authentication** to True.

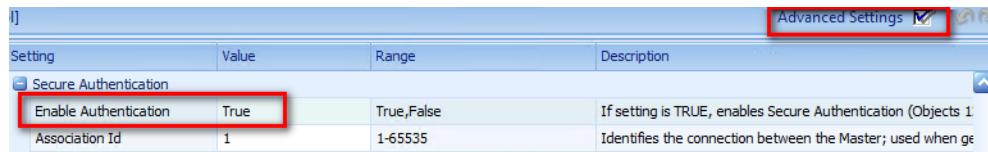

- Step 2. Configure the appropriate options for the client connection under **Secure Authentication** in the **Settings** tab. Most values, by default, are configured for interoperability with most connections.
- Step 3. When Secure Authentication is enabled, two new tabs appear on the DNP server: **Secure Event/Statistic Parameters** and **User Settings**. The **Secure Event/Statistic Parameters** tab allows for configuration of statistics about the secure authentication connection usage. The **User Settings** tab includes additional configuration parameters.
- Step 4. In the **User Settings** tab, the user and update key information is configured. By default, there is a user defined with the role of **singleuser**. The DNP standard defines these roles and the capabilities each connection has with the DNP session. These roles are specific to DNP3 and have no effect on user accounts in the RTAC system or on other functionality outside of the DNP3 protocol. The singleuser default user contains the superset of permissions contained in the various roles. *Table 2.27* shows the permissions of each user role for DNP services.

**Table 2.27 DNP Services User Role Permissions**

| <b>Commands</b> | <b>User Roles</b> |                 |                 |                  |               |               |                |                   |
|-----------------|-------------------|-----------------|-----------------|------------------|---------------|---------------|----------------|-------------------|
|                 | <b>VIEWER</b>     | <b>OPERATOR</b> | <b>ENGINEER</b> | <b>INSTALLER</b> | <b>SECADM</b> | <b>SECAUD</b> | <b>RBACMNT</b> | <b>SINGLEUSER</b> |
| CONFIRM         | X                 | X               | X               | X                |               | X             | X              | X                 |
| READ            | X                 | X               | X               | X                |               | X             | X              | X                 |
| WRITE           |                   | X               |                 |                  |               |               |                | X                 |
| SELECT          |                   | X               |                 |                  |               |               |                | X                 |
| OPERATE         |                   | X               |                 |                  |               |               |                | X                 |
| DIRECT_OP       |                   | X               |                 |                  |               |               |                | X                 |
| DIRECT_OP_NOACK |                   | X               |                 |                  |               |               |                | X                 |
| FRZ             |                   | X               |                 |                  |               |               |                | X                 |
| FRZ_NOACK       |                   | X               |                 |                  |               |               |                | X                 |
| FRZ_CLEAR       |                   | X               |                 |                  |               |               |                | X                 |
| FRZ_CLEAR_NOACK |                   | X               |                 |                  |               |               |                | X                 |
| COLD_RESTART    |                   | X               |                 |                  |               |               |                | X                 |

| Commands            | User Roles |          |          |           |        |        |         |            |
|---------------------|------------|----------|----------|-----------|--------|--------|---------|------------|
|                     | VIEWER     | OPERATOR | ENGINEER | INSTALLER | SECADM | SECAUD | RBACMNT | SINGLEUSER |
| WARM_RESTART        |            | X        |          |           |        |        |         | X          |
| ENABLE_UNSOL        |            | X        | X        |           |        |        |         | X          |
| DISABLE_UNSOL       |            | X        | X        |           |        |        |         | X          |
| ASSIGN_CLASS        |            |          | X        |           |        |        |         | X          |
| DELAY_MEASURE       |            | X        | X        |           |        |        |         | X          |
| RECORD_CURRENT_TIME |            | X        | X        |           |        |        |         | X          |

- Step 5. These user types only apply to the DNP session and do not allow for any use with other functionality of the RTAC. The columns Transfer data files, Change config, Change security config, change code, and local login do not have any functional capabilities on the RTAC. For this reason, SEL recommends using either the default USER or VIEWER role for read-only communications sessions and OPERATOR for reading and sending controls. The username must match the username that the client uses in the DNP communications session.
- Step 6. Once a user is selected, configure the update key. The update key will be the symmetric key from the user on the DNP client. If there are multiple users, the update key can be the same or different between users. This is primarily dependent upon how the users on the clients are configured.
- Step 7. The user public key is optional. The user public key is used to remotely change the update key through use of the asymmetric method for that user. If there is no user public key entered, the update key must be updated through the RTAC configuration software.

## Changing the Update Key for DNP Secure Authentication

The DNP protocol offers a mechanism for remotely changing the update key. How often the update key needs to be changed depends on the security practices and policy of the implementers. There are two methods by which to change the update key: manually through the configuration software (The DNP standard does not specify a specific process for this) or by using DNP.

### Through the Configuration Software

Once the new public key for the client has been obtained, open the RTAC settings and update the public key. This can be done locally at the unit or remotely if a connection to the RTAC is available.

The RTAC software will validate that the entered text contains a public key and conforms to valid privacy enhanced mail (PEM) format content.

## Through DNP

When using DNP, there are two options for changing the update key: symmetric or asymmetric.

- ▶ **Symmetric:** In this manner, the RTAC configuration will need to have the Authority Certification Key, which is configured in the **DNP Settings** tab under the enable DNP Secure Authentication option. The RTAC will verify that the Authority Certification Key matches what the client sends when an update key change is attempted through the symmetric process.
- ▶ **Asymmetric:** In this manner, the RTAC configuration will need to have the User Public Key that the client uses, and the client will need to have RTAC active x.509 certificate public key. This allows the client and the RTAC to authenticate and change the update key.

### NOTE

The outstation name is required as part of an Update Key Change Request. In the RTAC, the device name of the DNP server (for example, **SCADA\_DNP**) is used for the outstation name, and the client must be configured to match.

## Remote User Management

The DNP standard allows for the protocol to dynamically manage users for secure authentication. An authority can be set up that will authenticate that the client is capable of adding, removing, or changing a user. The client and the authority cannot have the same credentials. In order for the RTAC to accept user management changes via DNP, the RTAC must have the public key of the authority. This public key is added to the CA certificates in the RTAC web interface.

## POU Pin Settings

Use POU pin settings to view the present state of the DNP Server operation and to modify some of the behavior of the protocol. Setting the **Visible** field to True will cause the POU pin to appear in the **Controller** tab. See *Table 2.28* for the settings descriptions.

**Table 2.28 DNP Server POU Pin Settings**

| Pin Name            | Pin Type   | Description   | Default |
|---------------------|------------|---|---------|
| Disable_Controls    | Input BOOL | While True, processing of any controllable tags is blocked. Note: If other DNP server instances are assigned to the same DNP Server Shared Map as this DNP server, asserting Disable_Controls will also disable controls for those other DNP server instances.                    | False   |
| Disable_Tag_Updates | Input BOOL | The POU will not update or process changes to tags while this input is True. Note: If other DNP server instances are assigned to the same DNP Server Shared Map as this DNP server, asserting Disable_Tag_Updates will also disable updates for those other DNP server instances. | False   |
| EN                  | Input BOOL | The EN input enables or disables this specific function block instance. Other inputs have no effect while EN is False.  | True    |

| Pin Name                               | Pin Type     | Description  | Default |
|--|--------------|--|---------|
| Force_Buffer_Overflow_IIN_Bit          | Input BOOL   | Forces the assertion of the Buffer Overflow International Indication bit (IIN2.3) contained in all response messages generated by this DNP server.   | False   |
| Force_Device_Trouble_IIN_Bit           | Input BOOL   | Forces the assertion of the Device Trouble International Indication bit (IIN1.6) contained in all response messages generated by this DNP server.  | False   |
| Reset_Statistics                       | Input BOOL   | On the rising-edge trigger, all counter POU outputs are reset.   | False   |
| Application_Confirmation_Timeout_Count | Output UINT  | Contains a running count of Application Confirmation timeout conditions.   | 0       |
| Data_Link_Timeout_Count                | Output UINT  | Contains a running count of data link failures.  | 0       |
| Direct_Transparent_Connection          | Output BOOL  | Indicates that the associated access point is being used in direct transparent mode.   | False   |
| ENO                                    | Output BOOL  | Indicates that this specific function block instance is active if True. If False, the inputs have no effect and the outputs are not updated.   | False   |
| Message_Failure                        | Output BOOL  | Asserts for a single processor cycle when a message is processed that does not conform to the expected protocol format. This may be because of an incomplete response or corrupted data in the message response.   | False   |
| Message_Failure_Count                  | Output UDINT | Running sum indicating the number of failed messages.  | 0       |
| Message_Received_Count                 | Output UDINT | Running sum indicating the number of messages received from the remote device.   | 0       |
| Message_Sent_Count                     | Output UDINT | Running sum indicating the number of messages transmitted to the remote device.  | 0       |
| Message_Success_Count                  | Output UDINT | A running sum of the messages successfully sent or received  | 0       |
| Offline                                | Output BOOL  | This output is False when protocol communications are in progress. Set to True when the DNP communications channel is offline due to an application confirmation timeout, data link (link status) timeout, or a transmission error, until a subsequent DNP frame is successfully received. For a DNP Server using a serial connection method, this value is also set to True if no communications have been received for the period specified by the Communications Offline Timer.<br><br>Note: It is possible for Offline to indicate False, but no successful data are exchanged because of settings configuration issues. | False   |

## Tags

See *Tags (Overview)* on page 142 for a description of the Tags tab.

## Controller

See *Controller (Advanced Usage)* on page 141 for a description of the Controller tab.

# DNP3 Device Profile Document

The following DNP3 Device Profile displays only selections relevant to the RTAC DNP3 implementation.

**Table 2.29 Server (Outstation)**

| Parameter   | Value                                |
|---|--------------------------------------|
| Vendor name   | Schweitzer Engineering Laboratories  |
| Device name   | RTAC                                 |
| Highest DNP request level   | Level 3                              |
| Highest DNP response level  | Level 3                              |
| Device function   | Outstation                           |
| Notable objects, functions, and/or qualifiers supported                             | Analog Dead-Band Objects (object 34) |
| Maximum data link frame size transmitted/received (octets)                          | 292                                  |
| Maximum data link retries   | Configurable, range 0–15             |
| Requires data link layer confirmation   | Configurable by setting              |
| Maximum application fragment size transmitted/received (octets)                     | 2048                                 |
| Maximum application layer retries   | None                                 |
| Requires application layer confirmation   | When reporting event data            |
| Data link confirm time-out  | Configurable                         |
| Complete application fragment time-out  | None                                 |
| Application confirm time-out  | Configurable                         |
| Complete application response time-out  | None                                 |
| Executes control WRITE binary outputs A   | Always                               |
| Executes control SELECT/OPERATE   | Always                               |
| Executes control DIRECT OPERATE   | Always                               |
| Executes control DIRECT OPERATE-NO ACK  | Always                               |
| Executes control count greater than 1   | When pulse count > 1                 |
| Executes control Pulse On   | Always                               |
| Executes control Pulse Off  | Never                                |
| Executes control Latch Off  | Always                               |
| Executes control Latch On   | Always                               |
| Executes control Queue  | Never                                |
| Executes control Clear Queue  | Never                                |
| Reports binary input change events when no specific variation requested             | Only timetagged                      |
| Reports time-tagged binary input change events when no specific variation requested | Binary input change with time        |

| Parameter                                  | Value  |
|--|--|
| Sends unsolicited responses                | Configurable with unsolicited message enable settings. Increases retry time (configurable) when a maximum retry setting is exceeded. |
| Sends static data in unsolicited responses | Never  |
| Default counter object/variation           | Object 20, Variation 6   |
| Counter rollover                           | 32 bits  |
| Sends multifragment responses              | Yes  |

Table 2.30 DNP Server (Slave) Object

| Obj | Var<br>(*default) | Description                                   | REQUEST<br>Func Codes<br>(dec) | REQUEST<br>QualCodes (hex) | RESPONSE<br>Func Codes<br>(dec) | RESPONSE Qual<br>Codes (hex) |
|-----|-------------------|---|--------------------------------|----------------------------|---------------------------------|------------------------------|
| 1   | 0                 | Binary Input—All Variations                   | 1,22                           | 0,1,6,7,8,17,28            |                                 |                              |
| 1   | 1                 | Binary Input                                  | 1                              | 0,1,6,7,8,17,28            | 129                             | 0,1,17,28                    |
| 1   | 2*                | Binary Input With Status                      | 1                              | 0,1,6,7,8,17,28            | 129                             | 0,1,17,28                    |
| 2   | 0                 | Binary Input Change<br>—All Variations        | 1                              | 6,7,8                      |                                 |                              |
| 2   | 1                 | Binary Input Change Without Time              | 1                              | 6,7,8                      | 129,130                         | 17,28                        |
| 2   | 2*                | Binary Input Change With Time                 | 1                              | 6,7,8                      | 129,130                         | 17,28                        |
| 2   | 3                 | Binary Input Change<br>With Relative Time     | 1                              | 6,7,8                      | 129,130                         | 17,28                        |
| 3   | 0                 | Double Bit Input - All Variations             | 1,22                           | 0,1,6,7,8,17,28            |                                 |                              |
| 3   | 1                 | Double Bit Input                              | 1                              | 0,1,6,7,8,17,28            | 129                             |                              |
| 3   | 2*                | Double Bit Input with Status                  | 1                              | 0,1,6,7,8,17,28            | 129                             |                              |
| 4   | 0                 | Double Bit Input<br>Change - All Variations   | 1                              | 6,7,8                      |                                 |                              |
| 4   | 1                 | Double Bit Input<br>Change without Time       | 1                              | 6,7,8                      | 129,130                         | 17,28                        |
| 4   | 2*                | Double Bit Input<br>Change with Time          | 1                              | 6,7,8                      | 129,130                         | 17,28                        |
| 4   | 3                 | Double Bit Input Change<br>with Relative Time | 1                              | 6,7,8                      | 129,130                         | 17,28                        |
| 10  | 0                 | Binary Output—All Variations                  | 1                              | 0,1,6,7,8                  |                                 |                              |
| 10  | 2*                | Binary Output Status                          | 1                              | 0,1,6,7,8                  | 129                             | 0,1                          |
| 12  | 0                 | Control Block—All Variations                  |                                |                            |                                 |                              |
| 12  | 1                 | Control Device Output Block                   | 3,4,5,6                        | 17,28                      | 129                             | echo of request              |
| 12  | 2                 | Pattern Control Block                         | 5,6                            | 7                          |                                 |                              |
| 12  | 3                 | Pattern Mask                                  | 5,6                            | 0,1                        |                                 |                              |
| 20  | 0                 | Binary Counter—All Variations                 | 1,7,8,9,10,22                  | 0,1,6,7,8,17,28            |                                 |                              |
| 20  | 1                 | 32-Bit Binary Counter                         | 1,7,8,9,10                     | 0,1,6,7,8,17,28            | 129                             | 0,1,17,28                    |
| 20  | 2                 | 16-Bit Binary Counter                         | 1,7,8,9,10                     | 0,1,6,7,8,17,28            | 129                             | 0,1,17,28                    |

| Obj | Var (*default) | Description                                | REQUEST Func Codes (dec) | REQUEST QualCodes (hex) | RESPONSE Func Codes (dec) | RESPONSE Qual Codes (hex) |
|-----|----------------|--|--------------------------|-------------------------|---------------------------|---------------------------|
| 20  | 5              | 32-Bit Binary Counter Without Flag         | 1,7,8,9,10               | 0,1,6,7,8,17,28         | 129                       | 0,1,17,28                 |
| 20  | 6*             | 16-Bit Binary Counter Without Flag         | 1,7,8,9,10               | 0,1,6,7,8,17,28         | 129                       | 0,1,17,28                 |
| 21  | 0              | Frozen Counter—All Variations              | 1,22                     | 0,1,6,7,8,17,28         |                           |                           |
| 21  | 1              | 32-Bit Frozen Counter                      | 1                        | 0,1,6,7,8,17,28         | 129                       | 0,1,17,28                 |
| 21  | 2              | 16-Bit Frozen Counter                      | 1                        | 0,1,6,7,8,17,28         | 129                       | 0,1,17,28                 |
| 21  | 5              | 32-Bit Frozen Counter With Time of Freeze  | 1                        | 0,1,6,7,8,17,28         | 129                       | 0,1,17,28                 |
| 21  | 6*             | 16-Bit Frozen Counter With Time of Freeze  | 1                        | 0,1,6,7,8,17,28         | 129                       | 0,1,17,28                 |
| 21  | 9              | 32-Bit Frozen Counter Without Flag         | 1                        | 0,1,6,7,8,17,28         | 129                       | 0,1,17,28                 |
| 21  | 10             | 16-Bit Frozen Counter Without Flag         | 1                        | 0,1,6,7,8,17,28         | 129                       | 0,1,17,28                 |
| 22  | 0              | Counter Change Event —All Variations       | 1                        | 6,7,8                   |                           |                           |
| 22  | 1              | 32-Bit Counter Change Event Without Time   | 1                        | 6,7,8                   | 129,130                   | 17,28                     |
| 22  | 2*             | 16-Bit Counter Change Event Without Time   | 1                        | 6,7,8                   | 129,130                   | 17,28                     |
| 22  | 5              | 32-Bit Counter Change Event With Time      | 1                        | 6,7,8                   | 129,130                   | 17,28                     |
| 22  | 6              | 16-Bit Counter Change Event With Time      | 1                        | 6,7,8                   | 129,130                   | 17,28                     |
| 23  | 0              | Frozen Counter Event —All Variations       | 1                        | 6,7,8                   |                           |                           |
| 23  | 1              | 32-Bit Frozen Counter Event Without Time   | 1                        | 6,7,8                   | 129,130                   | 17,28                     |
| 23  | 2              | 16-Bit Frozen Counter Event Without Time   | 1                        | 6,7,8                   | 129,130                   | 17,28                     |
| 23  | 5              | 32-Bit Frozen Counter Event With Time      | 1                        | 6,7,8                   | 129,130                   | 17,28                     |
| 23  | 6*             | 16-Bit Frozen Counter Event With Time      | 1                        | 6,7,8                   | 129,130                   | 17,28                     |
| 30  | 0              | Analog Input—All Variations                | 1,22                     | 0,1,6,7,8,17,18         |                           |                           |
| 30  | 1              | 32-Bit Analog Input                        | 1                        | 0,1,6,7,8,17,28         | 129                       | 0,1,17,28                 |
| 30  | 2              | 16-Bit Analog Input                        | 1                        | 0,1,6,7,8,17,28         | 129                       | 0,1,17,28                 |
| 30  | 3              | 32-Bit Analog Input Without Flag           | 1                        | 0,1,6,7,8,17,28         | 129                       | 0,1,17,28                 |
| 30  | 4*             | 16-Bit Analog Input Without Flag           | 1                        | 0,1,6,7,8,17,28         | 129                       | 0,1,17,28                 |
| 30  | 5              | Short Floating Point Analog Input (32 bit) | 1                        | 0,1,6,7,8,17,28         | 129                       | 0,1,17,28                 |

| Obj | Var<br>(*default) | Description  | REQUEST<br>Func Codes<br>(dec) | REQUEST<br>QualCodes (hex) | RESPONSE<br>Func Codes<br>(dec) | RESPONSE Qual<br>Codes (hex) |
|-----|-------------------|--|--------------------------------|----------------------------|---------------------------------|------------------------------|
| 32  | 0                 | Analog Change Event<br>—All Variations             | 1                              | 6,7,8                      |                                 |                              |
| 32  | 1                 | 32-Bit Analog Change Event Without Time            | 1                              | 6,7,8                      | 129,130                         | 17,28                        |
| 32  | 2                 | 16-Bit Analog Change Event Without Time            | 1                              | 6,7,8                      | 129,130                         | 17,28                        |
| 32  | 3                 | 32-Bit Analog Change Event With Time               | 1                              | 6,7,8                      | 129,130                         | 17,28                        |
| 32  | 4*                | 16-Bit Analog Change Event With Time               | 1                              | 6,7,8                      | 129,130                         | 17,28                        |
| 32  | 5                 | Short Floating Point Analog Change Event           | 1                              | 6,7,8                      | 129,130                         | 17,28                        |
| 32  | 7                 | Short Floating Point Analog Change Event With Time | 1                              | 6,7,8                      | 129,130                         | 17,28                        |
| 34  | 0                 | Analog Dead Band—All Variations                    | 1                              | 0,1,6,7,8,17,28            |                                 |                              |
| 34  | 1*                | 16-Bit Analog Dead Band                            | 1,2                            | 0,1,6,7,8,17,28            | 129                             | 0,1,17,28                    |
| 34  | 2                 | 32-Bit Analog Dead Band                            | 1,2                            | 0,1,6,7,8,17,28            | 129                             | 0,1,17,28                    |
| 34  | 3                 | Short Floating Point Dead Band                     | 1,2                            | 0,1,6,7,8,17,28            | 129                             | 0,1,17,28                    |
| 40  | 0                 | Analog Output Status<br>—All Variations            | 1                              | 0,1,6,7,8                  |                                 |                              |
| 40  | 1                 | 32-Bit Analog Output Status                        | 1                              | 0,1,6,7,8                  | 129                             | 0,1,17,28                    |
| 40  | 2*                | 16-Bit Analog Output Status                        | 1                              | 0,1,6,7,8                  | 129                             | 0,1,17,28                    |
| 40  | 3                 | Short Floating Point Analog Output Status (32 bit) | 1                              | 0,1,6,7,8                  | 129                             | 0,1,17,28                    |
| 41  | 0                 | Analog Output Block<br>—All Variations             |                                |                            |                                 |                              |
| 41  | 1                 | 32-Bit Analog Output Block                         | 3,4,5,6                        | 17,28                      | 129                             | echo of request              |
| 41  | 2                 | 16-Bit Analog Output Block                         | 3,4,5,6                        | 17,28                      | 129                             | echo of request              |
| 41  | 3                 | Short Floating Point Analog Output Block (32 bit)  | 3,4,5,6                        | 17,28                      | 129                             | echo of request              |
| 50  | 0                 | Time and Date—All Variations                       |                                |                            |                                 |                              |
| 50  | 1*                | Time and Date                                      | 1,2                            | 7,8 (index=0)              | 129                             | 07 (quantity=1)              |
| 50  | 3                 | Time and Date (Last Recorded Time)                 | 2                              | 7 (quantity=1)             | 129                             |                              |
| 51  | 1                 | Time and Date CTO                                  |                                |                            | 129                             | 07 (quantity=1)              |
| 51  | 2*                | Unsynchronized Time and Date CTO                   |                                |                            | 129                             | 07 (quantity=1)              |
| 52  | 1                 | Time Delay Coarse                                  |                                |                            | 129                             | 07 (quantity=1)              |
| 52  | 2                 | Time Delay Fine                                    |                                |                            | 129                             | 07 (quantity=1)              |
| 60  | 1                 | Class 0 Data                                       | 1,22                           | 6,7,8                      |                                 |                              |

| Obj | Var (*default) | Description   | REQUEST Func Codes (dec) | REQUEST QualCodes (hex) | RESPONSE Func Codes (dec) | RESPONSE Qual Codes (hex) |
|-----|----------------|---|--------------------------|-------------------------|---------------------------|---------------------------|
| 60  | 2              | Class 1 Data  | 1,20,21,22               | 6,7,8                   |                           |                           |
| 60  | 3              | Class 2 Data  | 1,20,21,22               | 6,7,8                   |                           |                           |
| 60  | 4              | Class 3 Data  | 1,20,21,22               | 6,7,8                   |                           |                           |
| 80  | 1              | Internal Indications                                | 1<br>2                   | 0,1<br>1 (index 4,7)    |                           |                           |
| 86  | 1              | Data Set Descriptor                                 | 1                        | 0,1,6,7,8,17,28         | 129                       | 0,1,17,28                 |
| 86  | 1              | Data Set Event                                      | 1                        | 6,7,8                   | 129,130                   | 17,28                     |
| 120 | 0              | Authentication -- All Variations                    | 22                       | 06                      |                           |                           |
| 120 | 1              | Authentication -- Challenge                         | 32                       | 5B                      | 131                       | 5B                        |
| 120 | 2              | Authentication -- Reply                             | 32                       | 5B                      | 131                       | 5B                        |
| 120 | 3              | Authentication -- Aggressive Mode Request           | 1-31                     | 7                       | 129,130                   | 7                         |
| 120 | 4              | Authentication -- Session Key Status Request        | 32                       | 7                       |                           |                           |
| 120 | 5              | Authentication -- Session Key Status                |                          |                         | 131                       | 5B                        |
| 120 | 6              | Authentication -- Session Key Change                | 32                       | 5B                      |                           |                           |
| 120 | 7              | Authentication -- Error                             | 33                       | 5B                      | 131                       | 5B                        |
| 120 | 8              | Authentication -- User Certificate                  | 32                       | 5B                      |                           |                           |
| 120 | 9              | Authentication -- Message Authentication Code (MAC) | 1-31                     | 5B                      | 129,130                   | 5B                        |
| 120 | 10             | Authentication -- User Status Change                | 32                       | 5B                      |                           |                           |
| 120 | 11             | Authentication -- Update Key Change Request         | 32                       | 5B                      |                           |                           |
| 120 | 12             | Authentication -- Update Key Change Reply           |                          |                         | 131                       | 5B                        |
| 120 | 13             | Authentication -- Update Key Change                 | 32                       | 5B                      |                           |                           |
| 120 | 14             | Authentication -- Update Key Change Signature       | 32                       | 5B                      |                           |                           |
| 120 | 15             | Authentication -- Update Key Change Confirmation    | 32                       | 5B                      | 131                       | 5B                        |
| 121 | 0              | Security statistic -- All Variations                | 1,22                     | 0,1,6,17,28             |                           |                           |
| 121 | 1              | Security statistic --32 bit with flag               | 1                        | 0,1,6,17,28             | 129                       | 0,1,17,28                 |
| 122 | 0              | Security statistic event -- All Variations          | 1                        | 0,1,6,17,28             |                           |                           |
| 122 | 1              | Security statistic event -- 32 bit with flag        | 1                        | 6,7,8                   | 129,130                   | 17,28                     |

| Obj | Var<br>(*default) | Description   | REQUEST<br>Func Codes<br>(dec) | REQUEST<br>QualCodes (hex) | RESPONSE<br>Func Codes<br>(dec) | RESPONSE Qual<br>Codes (hex) |
|-----|-------------------|---|--------------------------------|----------------------------|---------------------------------|------------------------------|
| 122 | 2                 | Security statistic event -- 32 bit with flag and time | 1                              | 6,7,8                      | 129,130                         | 17,28                        |
| NA  | NA                | No Object   | 13,14,23,24                    |                            |                                 |                              |

Table 2.31 DNP Client (Master) Object

| Obj | Var | Description  | REQUEST<br>Func Codes<br>(dec) | REQUEST Qual<br>Codes (hex) | RESPONSE<br>Func Codes<br>(dec) | RESPONSE Qual<br>Codes (hex) |
|-----|-----|--|--------------------------------|-----------------------------|---------------------------------|------------------------------|
| 1   | 0   | Binary Input—Any Variation                         | 1                              | 0,1,6,7,8,17,28             |                                 |                              |
| 1   | 1   | Binary Input—Packed Format                         | 1                              | 0,1,6,7,8,17,28             | 129                             | 0,1,17,28                    |
| 1   | 2   | Binary Input—With Flags                            | 1                              | 0,1,6,7,8,17,28             | 129                             | 0,1,17,28                    |
| 2   | 0   | Binary Input Event —Any Variation                  | 1                              | 6,7,8                       |                                 |                              |
| 2   | 1   | Binary Input Event—Without Time                    | 1                              | 6,7,8                       | 129,130                         | 17,28                        |
| 2   | 2   | Binary Input Event— With Absolute Time             | 1                              | 6,7,8                       | 129,130                         | 17,28                        |
| 2   | 3   | Binary Input Event —With Relative Time             | 1                              | 6,7,8                       | 129,130                         | 17,28                        |
| 10  | 0   | Binary Output—Any Variation                        | 1                              | 0,1,6,7,8,17,28             |                                 |                              |
| 10  | 2   | Binary Output— Output Status With Flags            | 1                              | 0,1,6,7,8,17,28             | 129                             | 0,1,17,28                    |
| 11  | 1   | Binary Output Event —Status Without Time           |                                |                             | 129,130                         | 17,28                        |
| 11  | 2   | Binary Output Event —Status With Time              |                                |                             | 129,130                         | 17,28                        |
| 12  | 1   | Binary Command—Control Relay Output Block (CROB)   | 3,4,5,6                        | 17,28                       | 129                             | echo of request              |
| 20  | 0   | Counter—Any Variation                              | 1,7,8,9,10                     | 0,1,6,7,8,17,28             |                                 |                              |
| 20  | 1   | Counter—32-bit With Flag                           | 1                              | 0,1,6,7,8,17,28             | 129                             | 0,1,17,28                    |
| 20  | 2   | Counter—16-bit With Flag                           | 1                              | 0,1,6,7,8,17,28             | 129                             | 0,1,17,28                    |
| 20  | 5   | Counter—32-bit Without Flag                        | 1                              | 0,1,6,7,8,17,28             | 129                             | 0,1,17,28                    |
| 20  | 6   | Counter—16-bit Without Flag                        | 1                              | 0,1,6,7,8,17,28             | 129                             | 0,1,17,28                    |
| 21  | 0   | Frozen Counter—Any Variation                       | 1                              | 0,1,6,7,8,17,28             |                                 |                              |
| 21  | 1   | Frozen Counter—32-bit With Flag                    | 1                              | 0,1,6,7,8,17,28             | 129                             | 0,1,17,28                    |
| 21  | 2   | Frozen Counter—16-bit With Flag                    | 1                              | 0,1,6,7,8,17,28             | 129                             | 0,1,17,28                    |
| 21  | 5   | Frozen Counter—32-bit With Flag and Time of Freeze | 1                              | 0,1,6,7,8,17,28             | 129                             | 0,1,17,28                    |
| 21  | 6   | Frozen Counter—16-bit With Flag and Time of Freeze | 1                              | 0,1,6,7,8,17,28             | 129                             | 0,1,17,28                    |
| 21  | 9   | Frozen Counter— 32-bit Without Flag                | 1                              | 0,1,6,7,8,17,28             | 129                             | 0,1,17,28                    |

| <b>Obj</b> | <b>Var</b> | <b>Description</b>                                 | <b>REQUEST Func Codes (dec)</b> | <b>REQUEST Qual Codes (hex)</b> | <b>RESPONSE Func Codes (dec)</b> | <b>RESPONSE Qual Codes (hex)</b> |
|------------|------------|--|---------------------------------|---------------------------------|----------------------------------|----------------------------------|
| 21         | 10         | Frozen Counter—16-Bit Without Flag                 | 1                               | 0,1,6,7,8,17,28                 | 129                              | 0,1,17,28                        |
| 22         | 0          | Counter Event—Any Variation                        | 1                               | 6,7,8                           |                                  |                                  |
| 22         | 1          | Counter Event—32-Bit With Flag                     | 1                               | 6,7,8                           | 129,130                          | 17,28                            |
| 22         | 2          | Counter Event—16-Bit With Flag                     | 1                               | 6,7,8                           | 129,130                          | 17,28                            |
| 22         | 5          | Counter Event—32-Bit With Flag and Time            | 1                               | 6,7,8                           | 129,130                          | 17,28                            |
| 22         | 6          | Counter Event—16-Bit With Flag and Time            | 1                               | 6,7,8                           | 129,130                          | 17,28                            |
| 23         | 0          | Frozen Counter Event—Any Variation                 | 1                               | 6,7,8                           |                                  |                                  |
| 23         | 1          | Frozen Counter Event—32-Bit With Flag              | 1                               | 6,7,8                           | 129,130                          | 17,28                            |
| 23         | 2          | Frozen Counter Event—16-Bit Without Flag           | 1                               | 6,7,8                           | 129,130                          | 17,28                            |
| 23         | 5          | Frozen Counter Event—32-Bit With Flag and Time     | 1                               | 6,7,8                           | 129,130                          | 17,28                            |
| 23         | 6          | Frozen Counter Event—16-Bit With Flag and Time     | 1                               | 6,7,8                           | 129,130                          | 17,28                            |
| 30         | 0          | Analog Input—Any Variation                         | 1                               | 0,1,6,7,8,17,28                 |                                  |                                  |
| 30         | 1          | Analog Input—32-Bit With Flag                      | 1                               | 0,1,6,7,8,17,28                 | 129                              | 0,1,17,28                        |
| 30         | 2          | Analog Input—16-Bit With Flag                      | 1                               | 0,1,6,7,8,17,28                 | 129                              | 0,1,17,28                        |
| 30         | 3          | Analog Input—32-Bit Without Flag                   | 1                               | 0,1,6,7,8,17,28                 | 129                              | 0,1,17,28                        |
| 30         | 4          | Analog Input—16-Bit Without Flag                   | 1                               | 0,1,6,7,8,17,28                 | 129                              | 0,1,17,28                        |
| 30         | 5          | Analog Input—Single-prec flt-pt With Flag          | 1                               | 0,1,6,7,8,17,28                 | 129                              | 0,1,17,28                        |
| 32         | 0          | Analog Input Event—Any Variation                   | 1                               | 6,7,8                           |                                  |                                  |
| 32         | 1          | Analog Input Event—32-Bit Without Time             | 1                               | 6,7,8                           | 129,130                          | 17,28                            |
| 32         | 2          | Analog Input Event—16-Bit Without Time             | 1                               | 6,7,8                           | 129,130                          | 17,28                            |
| 32         | 3          | Analog Input Event—32-Bit With Time                | 1                               | 6,7,8                           | 129,130                          | 17,28                            |
| 32         | 4          | Analog Input Event—16-Bit With Time                | 1                               | 6,7,8                           | 129,130                          | 17,28                            |
| 32         | 5          | Analog Input Event—Single-prec flt-pt Without Time | 1                               | 6,7,8                           | 129,130                          | 17,28                            |
| 32         | 7          | Analog Input Event—Single-prec flt-pt With Time    | 1                               | 6,7,8                           | 129,130                          | 17,28                            |

| Obj | Var | Description  | REQUEST Func Codes (dec) | REQUEST Qual Codes (hex) | RESPONSE Func Codes (dec) | RESPONSE Qual Codes (hex) |
|-----|-----|--|--------------------------|--------------------------|---------------------------|---------------------------|
| 40  | 0   | Analog Output Status<br>—Any Variation                   | 1                        | 0,1,6,7,8,17,28          |                           |                           |
| 40  | 1   | Analog Output Status<br>—32-Bit With Flag                | 1                        | 0,1,6,7,8,17,28          | 129                       | 0,1,17,28                 |
| 40  | 2   | Analog Output Status<br>—16-Bit With Flag                | 1                        | 0,1,6,7,8,17,28          | 129                       | 0,1,17,28                 |
| 40  | 3   | Analog Output Status—<br>Single-prec flt-pt With<br>Flag | 1                        | 0,1,6,7,8,17,28          | 129                       | 0,1,17,28                 |
| 41  | 1   | Analog Output—32-Bit                                     | 3,4,5,6                  | 17,28                    | 129                       | echo of request           |
| 41  | 2   | Analog Output—16-Bit                                     | 3,4,5,6                  | 17,28                    | 129                       | echo of request           |
| 41  | 3   | Analog Output—Single-prec flt-pt                         | 3,4,5,6                  | 17,28                    | 129                       | echo of request           |
| 42  | 1   | Analog Output Event<br>—32-bit Without Time              |                          |                          | 129,130                   | 17,28                     |
| 42  | 2   | Analog Output Event<br>—16-bit Without Time              |                          |                          | 129,130                   | 17,28                     |
| 42  | 3   | Analog Output Event<br>—32-bit With Time                 |                          |                          | 129,130                   | 17,28                     |
| 42  | 4   | Analog Output Event<br>—16-bit With Time                 |                          |                          | 129,130                   | 17,28                     |
| 42  | 5   | Analog Output Event—<br>Single-prec flt-pt Without Time  |                          |                          | 129,130                   | 17,28                     |
| 42  | 7   | Analog Output Event—<br>Single-prec flt-pt With<br>Time  |                          |                          | 129,130                   | 17,28                     |
| 50  | 1   | Time and Date—Absolute Time                              | 1,2                      | 7 (Qty = 1)              | 129                       | 7 (Qty = 1)               |
| 50  | 3   | Time and Date—Absolute<br>Time at Last Recorded Time     | 2                        | 7 (Qty = 1)              | 129                       | 7 (Qty = 1)               |
| 51  | 1   | Time and Date CTO—<br>Absolute Time, synchronized        |                          |                          | 129,130                   | 7 (Qty = 1)               |
| 51  | 2   | Time and Date CTO—<br>Absolute Time, unsynchronized      |                          |                          | 129,130                   | 7 (Qty = 1)               |
| 52  | 1   | Time Delay—Coarse  |                          |                          | 129                       | 7 (Qty = 1)               |
| 52  | 2   | Time Delay—Fine  |                          |                          | 129                       | 7 (Qty = 1)               |
| 60  | 1   | Class Objects—Class 0 Data                               | 1                        | 6                        |                           |                           |
| 60  | 2   | Class Objects—Class 1 Data                               | 1<br>20,21               | 6,7,8<br>6               |                           |                           |
| 60  | 3   | Class Objects—Class 2 Data                               | 1<br>20,21               | 6,7,8<br>6               |                           |                           |
| 60  | 4   | Class Objects—Class 3 Data                               | 1<br>20,21               | 6,7,8<br>6               |                           |                           |
| 80  | 1   | Internal Indications<br>—Packed Format                   | 1<br>2                   | 0,1<br>1 (index 4,7)     | 129                       | 0,1                       |

| Obj | Var | Description                             | REQUEST Func Codes (dec) | REQUEST Qual Codes (hex)  | RESPONSE Func Codes (dec) | RESPONSE Qual Codes (hex) |
|-----|-----|---|--------------------------|---------------------------|---------------------------|---------------------------|
| 86  | 0   | Data Set Descriptor - Any Variation     | 12                       | 0,1 1 index 7, 1 index 4* |                           |                           |
| 86  | 1   | Data Set Descriptor - Data Set Contents | 1                        | 0,1,6,7,8 17,28           | 129                       | 0,1 17,28                 |
| 87  | 0   | Data Set - Any Variation                | 1                        | 0,1,6 7,8,17,28           |                           |                           |
| 87  | 1   | Data Set - Present Value                | 1                        | 0,1,6,7,8 17,28           | 129                       | 0,1, 17,28                |
| 88  | 0   | Data Set Event - Any Variation          | 1                        |                           |                           |                           |
| 88  | 1   | Data Set Event - Snapshot               | 1                        | 6,7,8                     | 129,130                   | 17,28                     |
| NA  | NA  | No Object (function code only)          | 13,23 14,24              |                           |                           |                           |

Although the RTAC is classified as a DNP3 Level 3 client, it will support the items indicated in the previous tables in automated or custom requests. It is the user's responsibility to create custom requests that the connected DNP3 server can parse.

**Table 2.32 DNP Secure Authentication Protocol Implementation Extra Information for Testing (PIXIT)**

|             |   |   |
|-------------|---|---|
| <b>12.1</b> | Master System Configuration                           | DNP Secure Authentication is not supported for RTAC master station. |
| 12.1.1      | How to restart the master                             | DNP Secure Authentication is not supported for RTAC master station. |
| 12.1.2      | How to change addresses of master?                    | DNP Secure Authentication is not supported for RTAC master station. |
| 12.1.3      | How to change addresses of outstation                 | DNP Secure Authentication is not supported for RTAC master station. |
| 12.1.4      | How to change the name of the outstation              | DNP Secure Authentication is not supported for RTAC master station. |
| 12.1.5      | Number of users supported                             | DNP Secure Authentication is not supported for RTAC master station. |
| 12.1.6      | Names of any pre-configured users                     | DNP Secure Authentication is not supported for RTAC master station. |
| 12.1.7      | How to change which user is performing an operation   | DNP Secure Authentication is not supported for RTAC master station. |
| 12.1.8      | How to display security statistics                    | DNP Secure Authentication is not supported for RTAC master station. |
| 12.1.9      | How to perform control operations                     | DNP Secure Authentication is not supported for RTAC master station. |
| 12.1.10     | How to configure “no ack” operations                  | DNP Secure Authentication is not supported for RTAC master station. |
| 12.1.11     | How to make responses critical                        | DNP Secure Authentication is not supported for RTAC master station. |
| 12.1.12     | How to read logs                                      | DNP Secure Authentication is not supported for RTAC master station. |
| 12.1.13     | Whether time synchronization is performed on start-up | DNP Secure Authentication is not supported for RTAC master station. |

|                                      |   |  |
|--------------------------------------|---|--|
| 12.1.14                              | Whether polling is performed automatically on start-up        | DNP Secure Authentication is not supported for RTAC master station.  |
| 12.1.15                              | How to manually cause an integrity poll                       | DNP Secure Authentication is not supported for RTAC master station.  |
| 12.1.16                              | How to manually cause an event poll                           | DNP Secure Authentication is not supported for RTAC master station.  |
| 12.1.17                              | How to manually cause an Update Key Change                    | DNP Secure Authentication is not supported for RTAC master station.  |
| <b>12.2 Outstation Configuration</b> |   |  |
| 12.2.1                               | How to restart the outstation                                 | <ol style="list-style-type: none"> <li>1. When online with the ACSELERATOR RTAC SEL-5033 software, toggle the EN pin of the outstation.</li> <li>2. Power cycle the RTAC.</li> <li>3. With function codes cold_restart or warm_restart.</li> </ol> |
| 12.2.2                               | How to change addresses of master                             | Via project configuration with ACSELERATOR RTAC software.  |
| 12.2.3                               | How to change addresses of outstation                         | Via project configuration with ACSELERATOR RTAC software.  |
| 12.2.4                               | How to change name of outstation                              | The outstation name matches the DNP server device name (e.g., SCADA_DNP) in the RTAC project configuration.  |
| 12.2.5                               | How to configure the Area of Responsibility                   | Outstation does not require an area of responsibility; will accept any string from the master's certificate.   |
| 12.2.6                               | Maximum number of users supported                             | 64   |
| 12.2.7                               | How User Numbers are assigned                                 | Via project configuration with ACSELERATOR RTAC software.  |
| 12.2.8                               | How to disable unsolicited responses                          | Supported, via project configuration with ACSELERATOR RTAC software.   |
| 12.2.9                               | How to make application confirmations critical (if supported) | Via project configuration with ACSELERATOR RTAC software.  |
| 12.2.10                              | How user names and Update Keys are pre-configured             | Via project configuration with ACSELERATOR RTAC software.  |
| 12.2.11                              | Which user names and Update Keys are pre-configured           | Via project configuration with ACSELERATOR RTAC software.  |
| 12.2.12                              | How to configure multiple masters (if supported)              | Via project configuration with ACSELERATOR RTAC software.  |
| 12.2.13                              | How to read logs  | Via the system tag DNP_Authentication_Message which can be saved in the RTAC's sequence of events or integrated with any communication or visualization feature supported by the RTAC.   |
| 12.2.14                              | How to display security statistics (if possible)              | Security statistics are available via POU output pins located on the controller of the DNP server in IEC 61131-3. The statistics can then be mapped to any supported communication or visualization feature the RTAC platform supports.            |

|   |   |   |
|---|---|---|
| 12.2.15   | How to cause event data to be generated                                       | Map changes via user logic or other communication protocols to the tags DNP server map associated with the DNP outstation.                                |
| <b>12.3 Support for Critical Functions</b>  |   |   |
| 12.3.1  | How to Cause a Critical Function to be Sent                                   | Via project configuration with ACSELERATOR RTAC software. Each message is configurable to require a critical challenge between the outstation and master. |
| 12.3.2  | How to evaluate if critical functions are successfully performed              | The DNP outstation controller tab has statistics about message communications and by monitoring the system tag, SystemTags.DNP_Authentication_Message.    |
| 12.3.3  | What non-security requirements are placed on critical functions               | Dependent upon project configuration of the DNP outstation using the ACSELERATOR RTAC software.   |
| 12.3.4  | How to evaluate if non-critical functions have been successfully performed    | The DNP outstation controller tab has statistics about message communications.  |
| <b>12.4 How to Modify Security Parameters (Note: None of these parameters are permitted to be changed remotely)</b> |   |   |
| 12.4.1  | How to disable authentication   | Via project configuration with ACSELERATOR RTAC software.   |
| 12.4.2  | How to disable aggressive mode  | Via project configuration with ACSELERATOR RTAC software.   |
| 12.4.3  | How to change the reply timer   | Via project configuration with ACSELERATOR RTAC software.   |
| 12.4.4  | How to change the statistic thresholds  | Via project configuration with ACSELERATOR RTAC software.   |
| 12.4.5  | How to change the Session Key Change Interval and Count (master)              | Via project configuration with ACSELERATOR RTAC software.   |
| 12.4.6  | How to change the Expected Session Key Change Interval and Count (outstation) | Via project configuration with ACSELERATOR RTAC software.   |
| 12.4.7  | How to change the Maximum Session Key Status Count (outstation)               | Via project configuration with ACSELERATOR RTAC software.   |
| 12.4.8  | How to change the Maximum Error Messages Sent                                 | Via project configuration with ACSELERATOR RTAC software.   |
| 12.4.9  | How to change the MAC algorithm.  | Via project configuration with ACSELERATOR RTAC software.   |
| 12.4.10   | How to change the Key Wrap or Key Transport algorithm                         | Via project configuration with ACSELERATOR RTAC software.   |
| 12.4.11   | How to change the Key Change Method   | Via project configuration with ACSELERATOR RTAC software.   |
| 12.4.12   | How to change the protocol profile  | Via project configuration with ACSELERATOR RTAC software(Configuration of TCP, UDP, TLS, or serial).  |

|             |   |   |
|-------------|---|---|
| 12.4.13     | How to configure security credentials (i.e., Certificates) for using TLS  | Certificate management for TLS connections are managed via the RTAC's web interface. New public/private key pairs can be generated by the RTAC and activated for use. The public key is then made available via the X.509 page on the RTAC's web interface.   |
| 12.4.14     | How to configure TLS operating parameters   | Not supported. TLS operating parameters are fixed.  |
| 12.4.15     | How to revoke a TLS certificate   | Not supported.  |
| 12.4.16     | How to create a certificate   | The outstations public/private key pair is generated on the RTAC's web interface. The activated key pair will have the public key via the X.509 page on the RTAC's web interface. This public key will need to be distributed to any DNP client who is communicating with the DNP outstation via secure authentication. |
| 12.4.17     | How to configure a version of Secure Authentication   | Only Version 5 is supported.  |
| <b>12.5</b> | <b>How to Change User Status (Authority) (This information is only necessary if the master DUT supports remotely changing User Status; i.e., Update Keys)</b> |   |
| 12.5.1      | How to establish communications between authority and master  | DNP Secure Authentication is not supported for RTAC master station.   |
| 12.5.2      | How to inform the master of a user status change  | DNP Secure Authentication is not supported for RTAC master station.   |
| 12.5.3      | How to add a user   | DNP Secure Authentication is not supported for RTAC master station.   |
| 12.5.4      | How to delete a user  | DNP Secure Authentication is not supported for RTAC master station.   |
| 12.5.5      | How to change the user role   | DNP Secure Authentication is not supported for RTAC master station.   |
| 12.5.6      | How to change the user expiry interval  | DNP Secure Authentication is not supported for RTAC master station.   |
| 12.5.7      | How to change the user Update Key   | DNP Secure Authentication is not supported for RTAC master station.   |
| 12.5.8      | How to change the user Public Key   | DNP Secure Authentication is not supported for RTAC master station.   |

## eDNA

---


### Overview

Configure an eDNA client Ethernet connection to communicate with an eDNA Universal Service such as data historians or other data archival solutions. The RTAC supports one eDNA client connection. This protocol is supported by the SEL-3555 and SEL-3532-4 in firmware versions R136 through R152. Projects containing an eDNA client device that are upgraded to firmware version R153 or later will have these devices automatically removed.

This section describes the configuration and use of the eDNA client connection in ACCELERATOR RTAC.

## eDNA Client Configuration

Configure the eDNA client to communicate via Ethernet to an eDNA Universal Service. Create binary and analog tags in the eDNA client **Digitals** and **Analogs** tabs. Although each RTAC project can support only one eDNA client connection, you can provide a primary and failover IP address from the **Settings** tab.

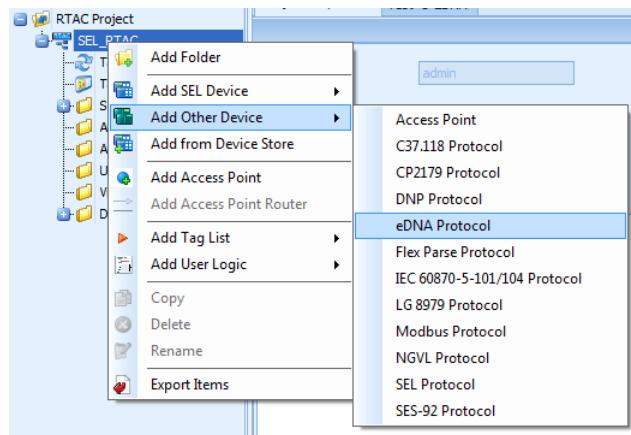

**Figure 2.22 Insert eDNA Client Device**

Give the device connection a unique name. Note that the only **Connection Type** available is **Client – Ethernet**.

## Settings Tab


The **Settings** tab contains all configurable items necessary for communications. Refer to the **Description** column for information about each setting. Move the main window horizontal slider, resize the column width, or hover your mouse over the description cell to view the cell content in its entirety. Type any applicable comments in the blank column to the far right. Select the **Advanced Settings** check box to enable configuration of advanced settings.

## Add Client Device Data

Perform the following steps to add client device data.

- Step 1. Click a device tag type tab (digitals or analogs) to add and configure tags.
- Step 2. Click + to add tags (2,000 tag limit each for digitals and analogs).  
Creating only the number of necessary tags helps optimize system performance.
- Step 3. Change the names of the tags as necessary by using the **Tag Name** column.
- Step 4. Change the point ID of each tag (using the **Point ID** column) as necessary to match the settings of the eDNA Universal Service that will be collecting these data from the RTAC.

Step 5. Change other tag-related information as necessary.

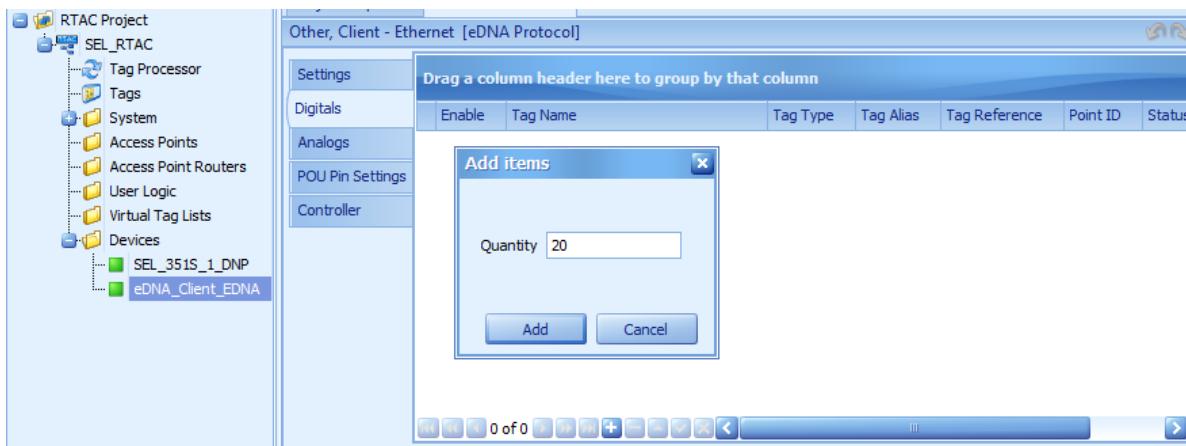

**Figure 2.23 Add eDNA Client Tags**

## Device Tag Type Configuration Parameters

Each device tag type has parameters that must be configured correctly to ensure proper system operation.

**Table 2.33 Common Device Tag Type Parameters**

| Parameter     | Description  | Default   |
|---------------|--|---|
| Enable        | Set to True to enable processing, and set to False to disable processing.  | True  |
| Tag Name      | This parameter describes the tag. You can change this name as necessary.   | The default tag name contains the device name, an abbreviation of the tag type, and is numbered 0–n tags. |
| Tag Alias     | Enter an optional descriptive tag name into this field, and you can reference this tag alias anywhere in the RTAC project in place of the actual tag name. |   |
| Tag Reference | See <i>Tag Mapping</i> on page 193 for more details.   |   |
| Point ID      | A unique name that is used to transmit the tag value to the eDNA Universal Service. The Point ID can have no more than eight characters.                   | The default Point ID contains an abbreviation of the tag type and is numbered 0–n tags.                   |
| Comment       | User-entered comment field. The first 224 characters of this field will be transmitted to the eDNA Universal Service as the <b>Extended Description</b> .  |   |

**Table 2.34 Binary Output Parameters**

| Parameter    | Description  | Default |
|--------------|--|---------|
| Tag Type     | See <i>Data Types</i> on page 1137 for more details. Supported tag types: SPS. | SPS     |
| Status Value | The initialized value of the tag at startup.                                   | False   |


**Table 2.35 Analog Output Parameters**

| Parameter      | Description  | Default        |
|----------------|--|----------------|
| Tag Type       | See <i>Data Types on page 1137</i> for more details. Supported tag types: MV, CMV, INS.  | MV             |
| Inst Magnitude | The initialized instantaneous value at startup.  | 0              |
| Magnitude      | The initialized dead-band value at startup.  | 0              |
| Dead Band      | The number of units of change necessary for magnitude to update to the value of Inst Magnitude (IF $ instMag - mag  > db$ , then $mag := instMag$ ). | 100            |
| Zero Dead Band | The number of units at or below which a unit is forced to zero (IF $ mag  < zeroDB$ , then $mag := 0$ ).   | 2              |
| Max Value      | The maximum value allowed for this point. If $instMag > Max\ Value$ , then ".q.detailQual.outOfRange" is set.  | +9.999999e+036 |
| H H Limit      | The high-high alarm limit. Excursions beyond this limit cause the RTAC to generate a high-high alarm.  | +9.999999e+035 |
| H Limit        | The high alarm limit. Excursions beyond this limit cause the RTAC to generate a high alarm.  | 1e+035         |
| L Limit        | The low alarm limit. Excursions beyond this limit cause the RTAC to generate a low alarm.  | -1e+035        |
| L L Limit      | The low-low alarm limit. Excursions beyond this limit cause the RTAC to generate a low-low alarm.  | -9.999999e+035 |
| Min Value      | The minimum value allowed for this point (IF $instMag < Min\ Value$ , then ".q.detailQual.outOfRange" is set).                                       | -9.999999e+036 |

## Tag Mapping

The eDNA client has a built-in direct-assignment mechanism, so there is no need for the Tag Processor to map analogs and digitals. Note that this method of direct tag assignment assigns the value of the source tag directly to the value of the destination tag without modification. If you need any conditioning or manipulation of the source tag (such as scaling, offsetting, and logical combination) as part of the assignment, use the Tag Processor or user logic instead. The following steps detail how to map eDNA tags.

- Step 1. Type in the **Tag Reference** column the name of the tag to which you want to map. Note that when you use this tag-mapping method, you cannot use the eDNA tag alias. The **Tag Alias** column will be grayed out to indicate its lack of availability. For more information about the **Tag Reference** column, see *Tag Reference on page 195*.
- Step 2. Repeat for each tag in the eDNA client.

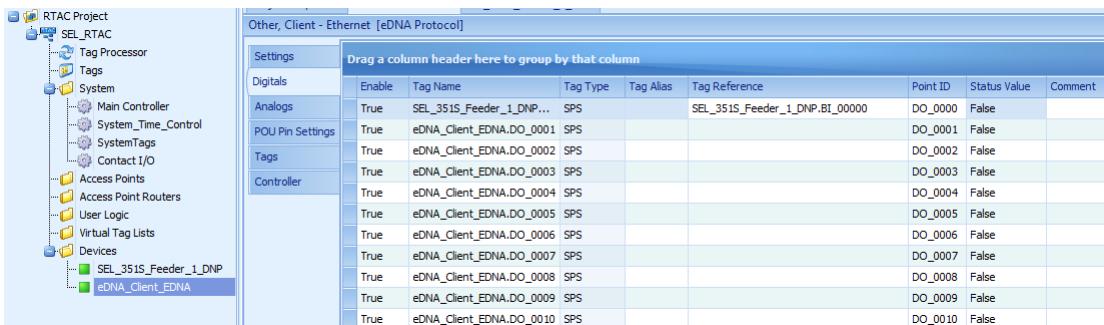

**Figure 2.24** Mapping eDNA Client Tags

**Table 2.36 POU Pin Settings**

| Parameter                   | Description   | Default |
|-----------------------------|---|---------|
| Alternate_Connection_Status | When zero, the alternate connection is disconnected.<br>When one, the alternate connection is disconnected.<br>When two, the alternate connection is not in use.  | 0       |
| Buffer_Overflow             | Indicates that the RTAC was unable to process all eDNA tag event changes fast enough to avoid event loss. Asserts for one task cycle.   | False   |
| Buffer_Overflow_Count       | Number of buffer overflows since last RTAC reset or power cycle.  | 0       |
| Data_Cache_Queue_Count      | Messages that have been queued to send to the eDNA Universal Service. Is zero if Data Cache Size is set to zero.  | 0       |
| Data_Cache_Queue_File_Count | Number of files the data cache is currently using.  | 0       |
| Data_Cache_Queue_Full       | When True, the data cache is full.  | False   |
| Data_Cache_Queueing_Data    | When True, the data cache is being used to store data.  | False   |
| Data_Cache_Send_Queue_Count | Number of messages that have been prepared to send to the eDNA Universal Service. Is zero if <b>Data Cache Size</b> is set to zero. Data_Cache_Send_Queue_Count – Data_Cache_Send_Queue_Count is equal to the number of messages that have been sent to the eDNA Universal Service. | 0       |
| EN                          | POU is enabled.   | True    |
| ENO                         | POU is enabled and initialized.   | False   |
| Issue_Data_Sync             | When True a data synchronization message is being issued.   | False   |
| Issue_Data_Sync_Period      | Time between data synchronization transmissions. This output is set by the <b>Issue Data Sync Period</b> in the <b>Advanced Settings</b> on the <b>Settings</b> tab.  | T#0M    |
| Message_Failure             | When data cache size is set to zero, increases by one each time an event occurs while the RTAC is disconnected from the eDNA Universal Service.   | False   |
| Message_Failure_Count       | Message failure count increases by one every time a message failure occurs.   | 0       |
| Message_Received_Count      | Message received count increases by one every time a message is received from the eDNA Universal Service.   | 0       |
| Message_Sent_Count          | Message sent count increases by one every time a message is sent to the eDNA Universal Service. Only increases if <b>Data Cache Size</b> is set to zero. This value will increase regardless of whether the eDNA Universal Service successfully accepts a message.                  | 0       |
| Message_Success_Count       | Increases by one every time a message is successfully sent to the eDNA Universal Service. Only increases if <b>Data Cache Size</b> is set to zero.  | 0       |
| NAK_Count                   | Increases by one when the eDNA Universal Service responds to a transmission with a negative acknowledgment.   | 0       |

| Parameter                 | Description   | Default |
|---------------------------|---|---------|
| Offline                   | Asserts when the RTAC is unable to communicate to the eDNA Universal Service.   | True    |
| Primary_Connection_Status | When zero, the primary connection is disconnected.<br>When one, the primary connection is connected.<br>When two, the primary connection is not in use. | 0       |
| Using_Primary_Connection  | When True, the primary connection is in use.<br>When False, the primary connection is not in use.   | False   |

## Tag Reference

Creation of a data assignment through use of the **Tag Reference** column differs from creation of a data assignment through the Tag Processor or user logic. Instead of copying the value of the tag from the source tag to the destination tag, the software creates a direct link to the source tag in the memory of the RTAC. Because of this, working with reference tags within RTAC settings differs from use of the Tag Processor or user logic in the following ways:

- ▶ No data manipulation (such as scaling, offsetting, or logical math) can be performed on the data prior to assignment.
- ▶ Once an eDNA tag has had data assigned to it through use of the **Tag Reference** column, it is not accessible from elsewhere in the RTAC settings. Only the tag placed into the **Tag Reference** column will be accessible.

## Tags

See *Tags (Overview)* on page 142 for a description of the **Tags** tab.

## Controller

See *Controller (Advanced Usage)* on page 141 for a description of the **Controller** tab.

## eDNA Protocol Implementation Notes

This section contains additional details about implementation of the eDNA protocol in the RTAC.

- ▶ The eDNA extended ID will be composed of the first 128 characters of the tag name.
- ▶ The eDNA extended description will be composed of the first 224 characters of the comment field associated with each tag.
- ▶ The eDNA data cache clears for transmission of new settings to the RTAC, the eDNA data cache will clear. There is no clearing of the cache if the RTAC is turned off and then back on.

# EtherCAT

---

This section describes the configuration and use of EtherCAT® protocol with ACSELERATOR RTAC. EtherCAT is unique from other protocols available for the RTAC because connected I/O modules (EtherCAT servers) are automatically configured during network initialization. This means that you will provide configuration information for both EtherCAT servers and the EtherCAT client (SEL RTAC) in the ACSELERATOR RTAC project. You can continue to use all other client, server, and peer-to-peer protocols, such as SEL or DNP3, in an ACSELERATOR RTAC project that includes EtherCAT I/O.

## NOTE

The following devices currently do not support the EtherCAT communications protocol: SEL-3505, SEL-3505-3, and SEL-3532.

The primary steps needed to configure an EtherCAT I/O network in ACSELERATOR RTAC are as follows:

- ▶ Designate an Ethernet port for EtherCAT (only needed when using the SEL-3350, SEL-3530, SEL-3530-4, or SEL-3555). On the SEL-3555, if the synchrophasor protocol is going to be used and you need a high-accuracy time source, this port must be a PCI expansion Ethernet port with IRIG-B connected to the card.
- ▶ Create device connections for each power coupler module, digital input module, analog input module, and digital output module. You can configure as many as 60 I/O modules on a single EtherCAT network.
- ▶ Select the physical placement of modules and node network connections.
- ▶ Map I/O tags into needed Tag Processor locations or custom logic programs.

## NOTE

Always ensure that power couplers are not connected to any Ethernet switches or other Ethernet devices, including RJ45-to-fiber-optic converters. The power coupler EtherCAT ports are only for direct connections between power couplers of the same type or to an RTAC EtherCAT port. Connecting a power coupler to any other Ethernet device can cause the EtherCAT network to stop communicating completely or behave unpredictably.

## Designating an Ethernet Port for EtherCAT Use

The designated port will be dedicated for EtherCAT; no other protocol will be available on that port. If you are using an SEL-2241 or SEL-2241-2 RTAC module in an SEL-2240 Axion® node, EtherCAT is provided via the backplane connector. You cannot alter this selection or enable EtherCAT via the front-panel Ethernet ports. Any remaining Ethernet ports can be configured for any other available Ethernet protocol.

## NOTE

The USB port and **ETH F** are unavailable for use with EtherCAT.

To enable an EtherCAT network by using either the SEL-3530, SEL-3530-4, SEL-3350, or SEL-3555, you must first dedicate an Ethernet port for use by the I/O network. To configure the Ethernet port, use an Internet browser to connect with the RTAC web application (see *Section 5: Web Interface and Reports*) and navigate to the Ethernet Network page, as shown in *Figure 2.25*. Select the **List Ethernet Settings** tab. Click the **Edit** button corresponding to the port you want to use. If you have already selected a port (such as Eth\_01 in *Figure 2.25*) to be the default gateway, you cannot use the gateway port for EtherCAT.

## NOTE

EtherCAT connections on the SEL-3555 and SEL-3560E are only available on ports of a PCI expansion Ethernet card. IRIG should be connected to the PCI card internally to ensure high-accuracy time is available.

The screenshot shows the RTAC web interface with the 'Network Settings' tab selected. Under 'Global Settings', the 'Hostname' is SEL3530-0030A70237E4, 'Default Gateway' is 10.203.32.1 (DHCP), and 'Gateway Interface' is Eth\_01. The 'Ethernet Interfaces' section lists four interfaces: Eth\_01, Eth\_02, Eth\_F, and USB\_B1. Each interface has columns for Status, Interface Name, IP Address, MAC Address, and checkboxes for Enable Ping, Enable ODBC Access, and Enable Web Access. An 'Edit' button is provided for each row.

| Status | Interface Name | IP Address       | MAC Address | Enable Ping | Enable ODBC Access | Enable Web Access | Options              |
|--------|----------------|------------------|-------------|-------------|--------------------|-------------------|----------------------|
| Up     | Eth_01         | 10.203.47.158/20 |             | False       | True               | True              | <a href="#">Edit</a> |
| Up     | Eth_02         | 192.168.1.1/24   |             | False       | True               | True              | <a href="#">Edit</a> |
| Up     | Eth_F          | 192.168.1.1/24   |             | True        | True               | True              | <a href="#">Edit</a> |
| Up     | USB_B1         | 172.29.131.1/24  |             | True        | True               | True              | <a href="#">Edit</a> |

Figure 2.25 RTAC Ethernet Interfaces

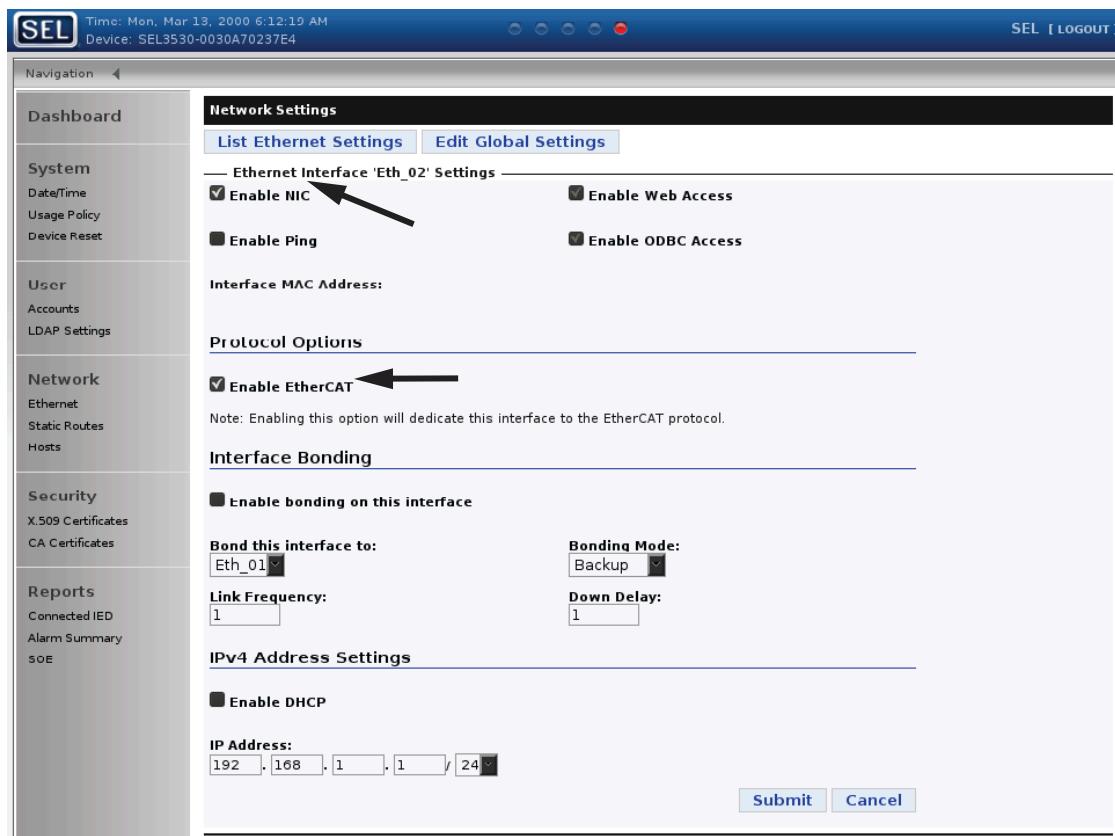


Figure 2.26 Configure a Dedicated EtherCAT Port

Verify that the port you selected is enabled. As shown in *Figure 2.26*, select the check box labeled **Enable NIC** if the port is disabled. Select the **Enable EtherCAT** check box and press **Submit** to complete the selection. The RTAC will automatically turn off other Ethernet interface services, such as web access, for your EtherCAT port. There is no requirement to manually deselect such items. Bonding, DHCP, and PRP are all unavailable on an EtherCAT port.

#### NOTE

Ethernet port settings will revert to previous values if you disable EtherCAT on a port.

Once you have saved settings, the Ethernet Interfaces page will display again in your browser. Notice that the port you selected for EtherCAT shows "EtherCAT Dedicated," as shown in the upper image of *Figure 2.27*. Only one port at a time can support EtherCAT. Notice the lower image in *Figure 2.27*, which shows the result of attempting to enable a second concurrent EtherCAT port.

#### NOTE

Do not assign 128.0.0.0 as the IP address on any Ethernet port if you are using an EtherCAT I/O network.

| Status | Interface Name | IP Address         |
|--------|----------------|--------------------|
|        | Eth_01         | 10.203.47.158/20   |
|        | Eth_02         | EtherCAT Dedicated |
|        | Eth_F          | 192.168.1.1/24     |

| Protocol Options                                    |
|---|
| <input checked="" type="checkbox"/> Enable EtherCAT |

Note: EtherCAT is already enabled on interface Eth\_02.

**Figure 2.27 Results of EtherCAT Configuration**

Once you have set the port, navigate to the **Ethernet Global Settings** tab to verify that the correct port is set to EtherCAT. The IP Address of the selected port will display "EtherCAT Dedicated," as shown in *Figure 2.28*. If you need to change the dedicated EtherCAT port at a later time, you must manually stop the EtherCAT protocol prior to making the setting change. Manually restart EtherCAT once the setting change is complete. Refer to *Replacing a Failed Module With Disabled Network* in the *SEL-2240 Instruction Manual* for the steps necessary to force the EN pin for the EtherCAT POU.

### CAUTION

Changing SFP ports while online can cause momentary communication interruptions. In the case of EtherCAT, this can cause the EtherCAT network to disable.

| Network Settings       |                 |                      |  |  |  |
|------------------------|-----------------|----------------------|--|--|--|
| List Ethernet Settings |                 | Edit Global Settings |  |  |  |
| Global Settings        |                 |                      |  |  |  |
| Hostname               | Default Gateway | Gateway Interface    |  |  |  |
| SEL3530-003020302      | 10.203.32.1     | Eth_F                |  |  |  |

| Ethernet Interfaces |                |                    |                  |  |                                     |
|---------------------|----------------|--------------------|------------------|--|-------------------------------------|
| Status              | Interface Name | IP Address         | MAC Address      | Enable Ping<br>Enable ODRC Access<br>Enable Web Access | Options                             |
|                     | Eth_01         | EtherCAT Dedicated | 00:30:a7:01:7db5 |  | <input type="button" value="Edit"/> |
|                     | Eth_02         | 192.168.2.2/24     | 00:30:a7:01:7db6 | False<br>True<br>True                                  | <input type="button" value="Edit"/> |
|                     | Eth_F          | 10.203.47.53/20    | 00:30:a7:01:7db7 | True<br>True<br>True                                   | <input type="button" value="Edit"/> |
|                     | USB_B1         | 172.29.131.1/24    | 00:30:a7:01:7db8 | True<br>True<br>True                                   | <input type="button" value="Edit"/> |

**Figure 2.28 EtherCAT Port Unavailable for Other Applications**

This configuration is unnecessary for SEL-2241 and SEL-2241-2 RTAC modules because the backplane port is permanently configured at the factory for EtherCAT.


## Creating Device Connections for New Modules in the Project

The process for adding power couplers and I/O modules to an ACSELERATOR RTAC project is similar to the process for adding IED connections. Place the power couplers and I/O modules into your project by using the following steps. Also refer to *Figure 2.29*.

- Step 1. Select **Fieldbus I/O** from the **Insert** ribbon.
- Step 2. Hover or click the mouse on the **SEL** entry. Then hover your cursor or click the entry for the type of module you are adding to the project. Finally, click on the specific module type you need.
- Step 3. Provide a module name in the dialog box that displays (or use the default name provided). IEC naming conventions are enforced; use an underscore rather than a space in the module name. The system appends the text " \_ECAT" to each module name, so you can easily identify which modules in the project use EtherCAT versus other available protocols. The only **Connection Type** available will be **Client - Ethernet**. The I/O module itself is an EtherCAT server; the Connection Type selection refers to the method the RTAC uses to connect with the module.
- Step 4. Press the **Insert** button.

Note in the inset photo of *Figure 2.29* that the RTAC places the new module by default at the end of the project view listing. On the other hand, if you select an existing folder prior to inserting a module, then the RTAC places the new module automatically in the folder you select.

There is no requirement that you add the I/O modules to the project in a specific sequence. The system will use the EtherCAT I/O Node Connections Editor to organize the modules based on their physical arrangement in a node. The arrangements of modules in the project view and I/O Node Connections Editor view do not need to match.

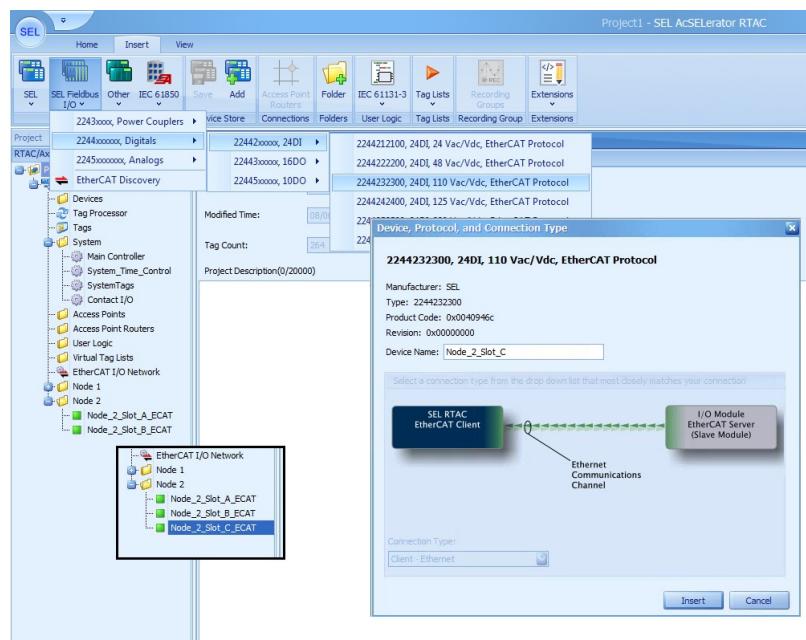

**Figure 2.29 Adding SEL-2240 I/O Modules to a Project**

## Naming Conventions

As you plan a new project with the SEL-2240, carefully consider the node and I/O module naming conventions you will use and how these can help expedite your work during commissioning or troubleshooting.


Especially for the case of a large system with many nodes, consider a naming convention where each module name includes information about the node within which it resides. *Figure 2.29* shows a simple scheme to accomplish this. Each node is named sequentially (Node\_1, Node\_2). When we added a module to a particular node, we named the module by joining the node name with the physical slot in the node where we intended to place that module (i.e., Node\_2\_Slot\_C\_ECAT). If you do not know the intended physical location of a module, you can rename it at any time during the project development process. The module name automatically becomes a prefix for the tag names associated with that module, so this type of naming convention provides an efficient way to identify the physical location of a tag.

If nodes are mounted near the apparatus being monitored and controlled, then consider including a designation for the apparatus in the module naming convention. Many different naming methods will work well.

## Organizing an EtherCAT I/O Network in an ACCELERATOR RTAC Project

An Axion system can include one or more I/O nodes that use EtherCAT protocol as a real-time network. When you load a project that includes I/O network information into an RTAC, the system will automatically start and scan the EtherCAT network; during such scanning, the system verifies and reports proper operation. A single project can include no more than 60 I/O modules and power couplers. Because an RTAC project can include a large quantity of I/O modules, we highly recommend that you use the available tools in the project view of ACCELERATOR RTAC to organize the list of module connections. The project view has two tools available to help you keep the project organized: you can either add custom folders, similar to a Microsoft Windows operating system folder organization, to collect devices into logical groups; or use drag-and-drop selections to quickly change the sequence of devices in the project view.

To add a custom folder, press the **Folder** button in the **Insert** menu, as shown in *Figure 2.30*. The software will ask for a name for each new folder you create. You can right-click on a folder to use the context menu and rename the folder at any time. Folder names follow no IEC requirements, so you can include spaces in names. ACCELERATOR RTAC also supports nesting of folders. Select the parent folder prior to pressing the **Folder** button in the **Insert** ribbon to create a child folder. Refer to *Figure 2.30* for an example.

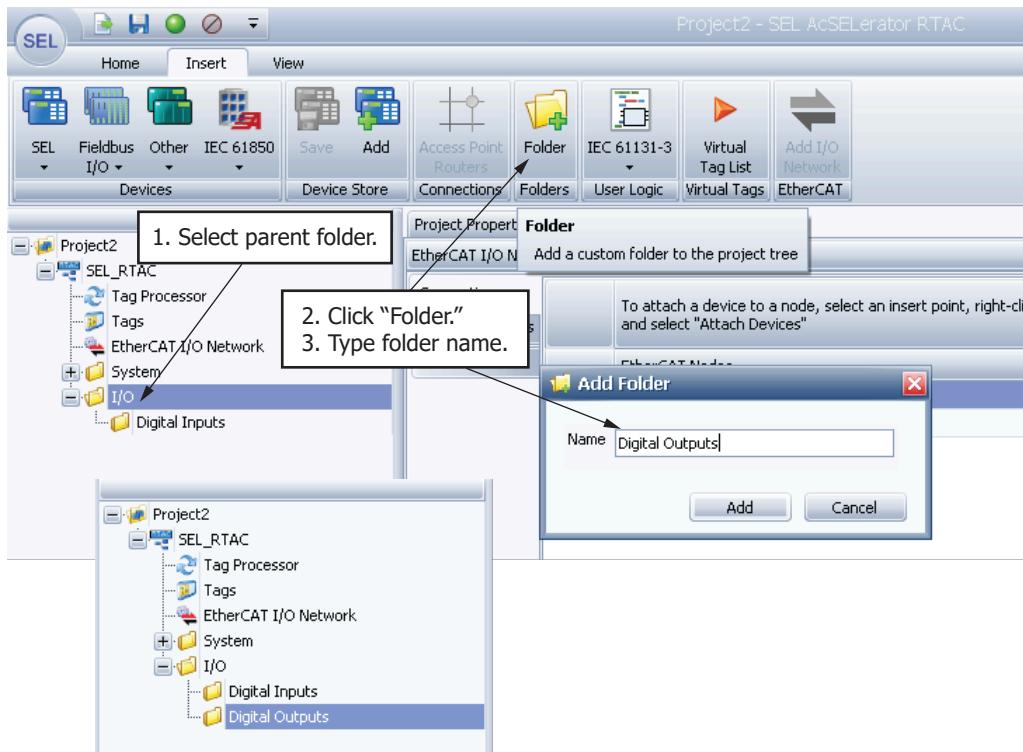


**Figure 2.30 Creating Custom Project Folders**

Once you add folders or devices to the project tree, organize them to meet your needs by using simple drag-and-drop operations. As a first example, consider a case where a module resides in one folder and we want to move it to a second folder.

To move an I/O module, refer to *Figure 2.31* and perform the following:

- Step 1. Click and hold the mouse on the module name in the project view.
- Step 2. While holding the mouse button, drag the module onto the desired folder name. Note the yellow arrow that appears to the left of the project view. This arrow points at the folder you have presently selected, and it indicates that the module will become a member of that folder.
- Step 3. Release the mouse button.

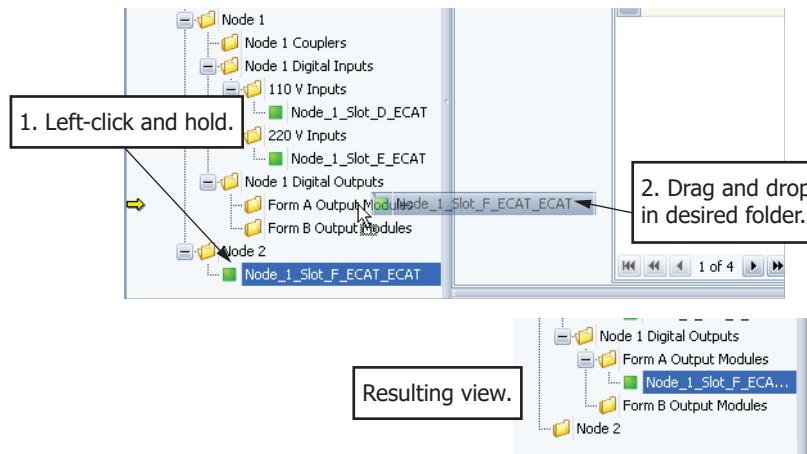


**Figure 2.31 Moving an Object Between Folders in Project View**

The same process works for folders or modules. If you move a folder, all of the contents (including subfolders) move with it. You cannot select and move multiple independent objects simultaneously.

As a second example, we want to change the sequence of folders within the project view. This operation is similar to the previous example, but we use a hot key in conjunction with the mouse. Please refer to *Figure 2.32*, and perform the following steps.

- Step 1. Select the folder you want to move, by clicking and releasing the mouse.
- Step 2. Press and hold the <Shift> key.
- Step 3. Click, hold, and drag the folder to the position you want. Notice the curved blue arrow that appears to the left of the project view. This arrow shows the present mouse position and indicates that you are reordering the objects rather than dropping the objects into a parent folder.
- Step 4. Release the mouse button and the <Shift> key.

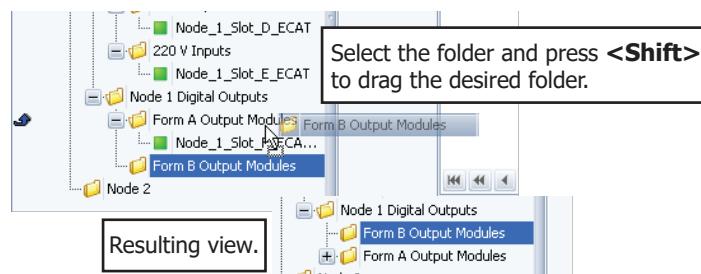


**Figure 2.32 Changing Object Sequence in Project View**

This procedure works for folders or modules. Perform the same steps if you want to move a folder or module from within a parent folder out to the same hierarchy level as the parent folder.


## EtherCAT Discovery

EtherCAT Discovery allows a user to plug in their Axion modules as desired and automatically populate the EtherCAT I/O Network without any manual addition of modules in the software. To discover an Axion network, Select the **EtherCAT Discovery** option as shown in *Figure 2.33* to begin the discovery process for connected Axion modules.

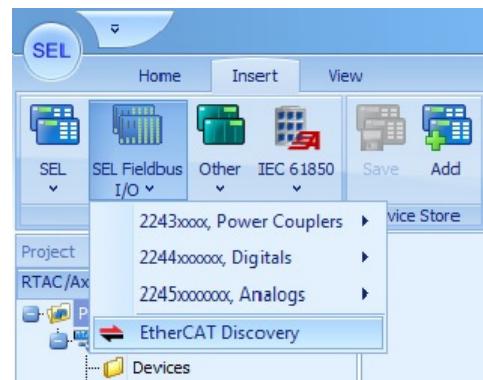


**Figure 2.33 EtherCAT Discovery**

EtherCAT Discovery requires you to go online with your RTAC to discover the Axion modules you have connected. The modules are subject to the same constraints governing physical placement of modules as the software requires. Log in as shown in *Figure 2.34*.

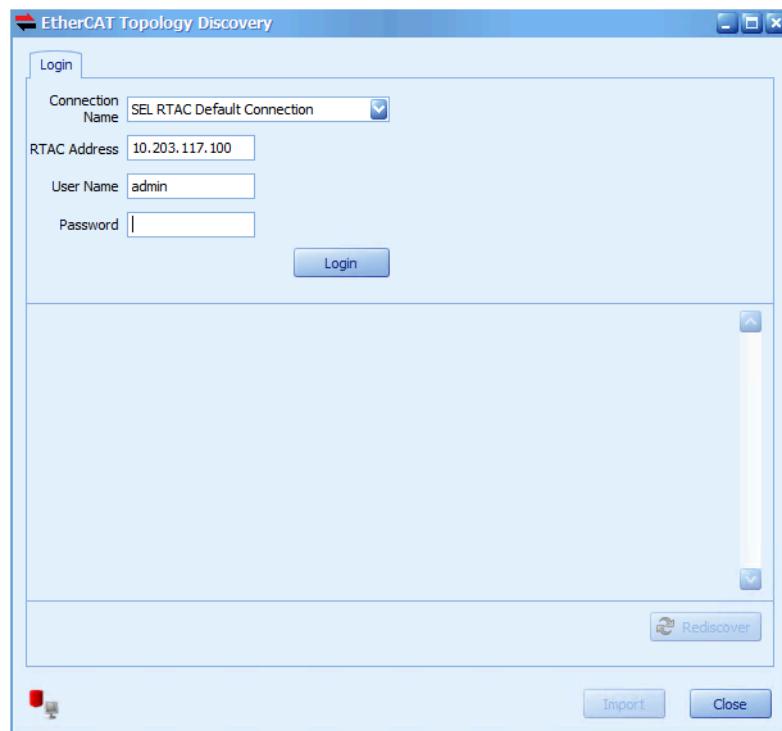

**Figure 2.34 EtherCAT Topology Discovery Login**

Once the EtherCAT Discovery process completes, click **Import** to accept the discovered network, as shown in *Figure 2.35*.

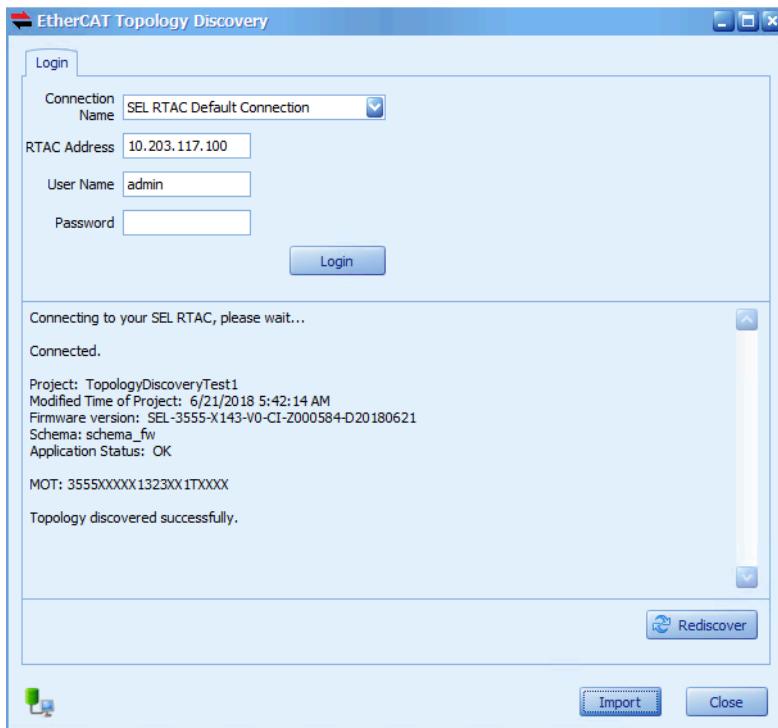

**Figure 2.35 EtherCAT Topology Discovered**

If an unsupported topology is discovered, the message **Invalid EtherCAT topology** will be displayed. You can correct the module or cable connections and then click **Rediscover** to run the discovery process again.

If your project contains a preconfigured or previously discovered EtherCAT network that you have already set up in this project (as shown in *Figure 2.36*), you may choose to overwrite it. This will overwrite any preconfigured EtherCAT or module settings with default values.

#### NOTE

Choosing to import settings from EtherCAT Discovery will overwrite any preconfigured EtherCAT network and module settings with default values. If you have existing settings that you have created, SEL recommends saving a copy of your project before overwriting the EtherCAT network.

#### NOTE

In RTAC firmware version R153 and later, unused power coupler ports and empty backplane slots are disabled when project settings containing an Axion network are loaded. In order to use the EtherCAT Discovery tool in this scenario, go online to the project settings and navigate to the Controller tab of the EtherCAT I/O Network device. Locate the EN input POU pin and write a value of FALSE into the pin to disable the EtherCAT network and re-enable the discovery of new nodes and modules.

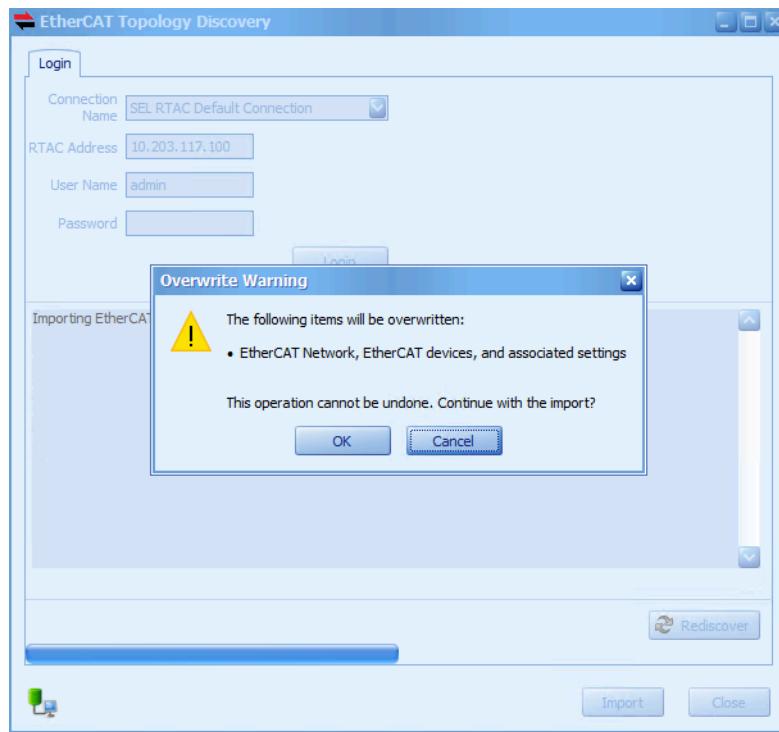


Figure 2.36 Overwrite Existing Network

## Reading and Writing I/O Module Tags

Each power coupler or I/O module has a fixed set of inputs or outputs and diagnostic information available. The EtherCAT network updates these data automatically. The RTAC logic engine evaluates the data at the processing rate you set (100 ms default). Use the Tag Processor, as described in *Section 3: Tag Processor*, to apply the information in your custom IEC 61131-3 logic or map it into another protocol session.

### Common Diagnostic Tags

Power couplers and I/O modules have a number of EtherCAT diagnostic tags that are common in each device. As shown in *Figure 2.37*, the diagnostic tags reside in the **Diagnostics** tab for each module. *Table 2.37* describes these tags. Diagnostic tags are always enabled and may not be renamed or aliased.

| Project Properties Node_1_Slot_B_ECAT  |                                    |          |         |
|--|------------------------------------|----------|---------|
| 22431100, Power Coupler RJ45 Cu, 125/250 Vdc or 120/240 Vac, Client - Ethernet [EtherCAT Protocol] |                                    |          |         |
| Properties   |                                    |          |         |
| Digital Inputs   |                                    |          |         |
| Diagnostics  | Tag Name                           | Tag Type | Comment |
| Tags   | Node_1_Slot_B_ECAT.STATUS          | STR      |         |
|  | Node_1_Slot_B_ECAT.ERROR           | STR      |         |
|  | Node_1_Slot_B_ECAT.WATCHDOG_STATUS | SPS      |         |
|  | Node_1_Slot_B_ECAT.WATCHDOG_COUNT  | INS      |         |


Figure 2.37 Power Coupler and I/O Module Diagnostic Tags

**Table 2.37 Module Diagnostic Tag Descriptions**

| Parameter | Tag Type | Description  | Possible Values   |
|-----------|----------|--|---|
| STATUS    | STR      | String representing the present operational status of the module | <b>Operational</b> —Normal operation<br><b>Non-Operational</b> —Module is not communicating on the EtherCAT network   |
| ERROR     | STR      | String representing the network state for a module               | <b>No Error</b> —Normal operation<br><b>Cable Error</b> —The network configuration has changed and does not match settings. This error could arise either from the movement of a server module or an Ethernet cable change. |

## Common Module Properties

Each power coupler and I/O module in your project will contain a set of properties that you can view in the **Properties** tab for a module, as shown in the top portion of *Figure 2.38*.

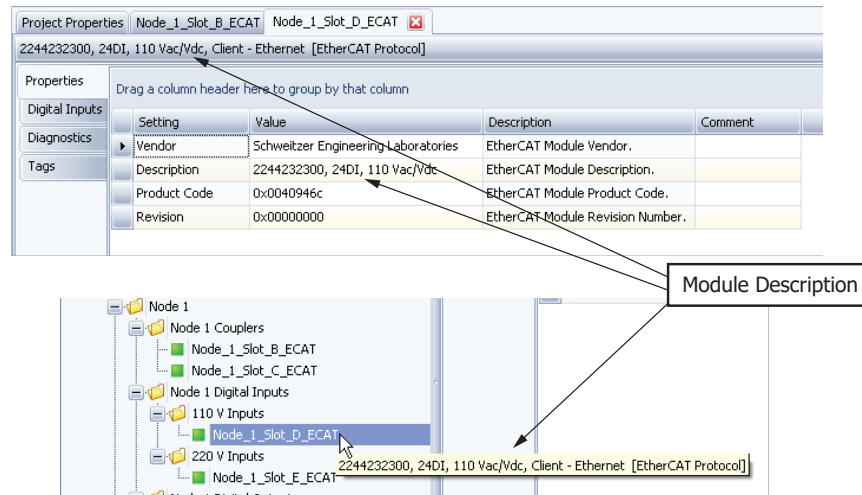
**Figure 2.38 Power Coupler and I/O Module Properties**

The module description includes detailed information about the function of the module. This information includes a partial model option string, module type (power coupler, digital input, digital output), and other operational information. There are three ways to see the module description. First, hover your cursor over the module name in the project view (see lower portion of *Figure 2.38*); second, hover your cursor over the title bar of an open module, and; third, hover your cursor over the description field of the **Properties** tab. If your module naming convention does not include a reference to the function of a module, use these viewing methods to quickly identify module types in the project.

## SEL-2243 Power Coupler

The SEL-2243 Power Coupler provides two functions for an Axion node. First, the power coupler is a power supply with sufficient capacity to accommodate a complete node. Second, the power coupler provides internode EtherCAT network connections. When you add a power coupler to a project, the editor pane will display a tab for it, as shown in *Figure 2.37*. The previous section described module properties and diagnostics.

Power couplers have copper and fiber Ethernet ports available. The fiber ports enable greater isolation and increased physical separation of nodes. When you add a power coupler to an RTAC project, select the type of Ethernet port you are using. *Figure 2.39* illustrates this menu option.

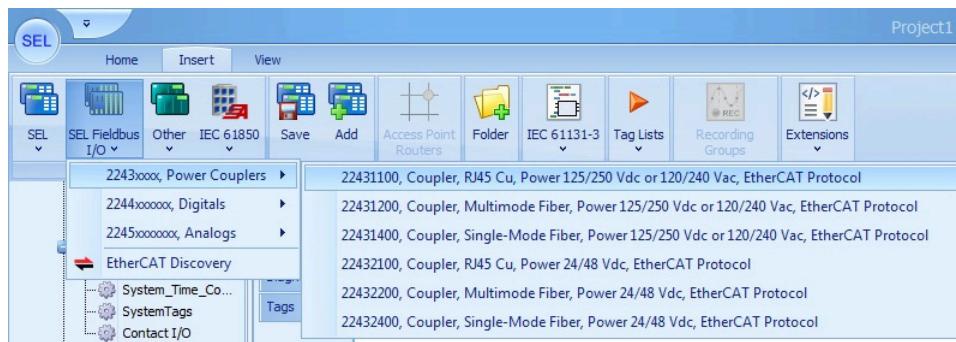


**Figure 2.39 Choose Power Coupler Options**

Each power coupler has one digital input that represents the state of the on-board power supply. The input will be of type Single Point Status (SPS) with a default name of <Module\_Name>.HW\_STATUS\_001, which resides in the **Diagnostics** tab for the subject power coupler. All diagnostic and status tags for EtherCAT modules are enabled by default.

10-slot and 4-slot Axion backplanes that do not include a legacy SEL-2241 module or an SEL-2241-2 module support as many as three and four power couplers, respectively. These numbers of power couplers in a single backplane provides power source redundancy and helps achieve large star EtherCAT topologies.

## SEL-2244 Optoisolated Digital Input Module

In firmware versions R154-V0/R200-V0 and later, the SEL-2240 Axion supports two digital input module options. The SEL-2244-2 Digital Input module contains 24 total inputs, with 18 inputs sharing a common return and 6 independent inputs. The SEL-2244-4 Digital Input module contains 32 total inputs, with two sets of 16 inputs sharing common returns. All of the inputs are dry contact type inputs. Use the Insert ribbon selection, as shown in *Figure 2.40*, to include an instance of either of these modules in your project. Be careful to select the control voltage level you will be using for each module; the voltage is fixed for each module. You can configure an Axion node as necessary to have inputs that use a variety of control voltage types and levels.

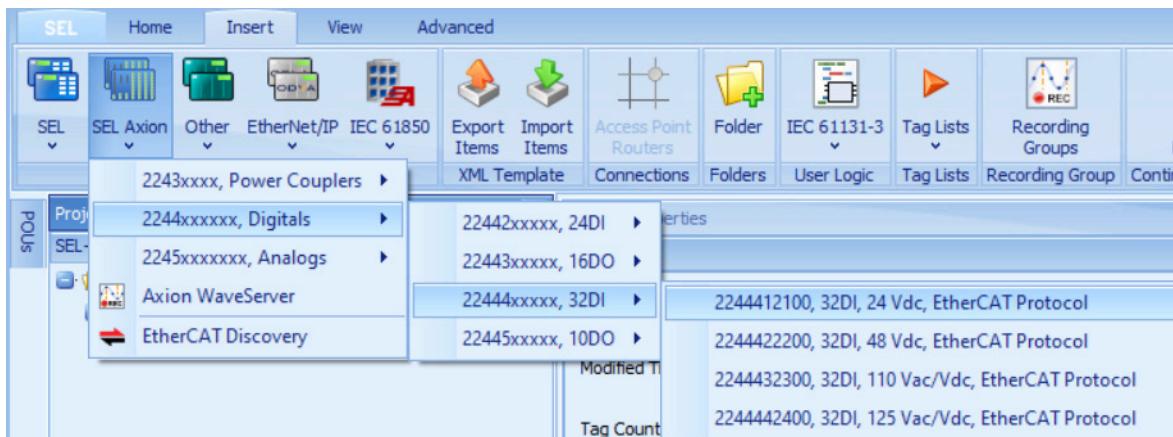

**Figure 2.40 Insert an SEL-2244 Digital Input Module**

Once you add a digital input module to a project, click the module name in the project view to open the connection editor. The Properties and Diagnostics tabs (see *Figure 2.41*) include the common EtherCAT module data discussed previously. The **Tags** tab lists all available and enabled tags from the module. The **Digital Inputs** tab lists the tags associated with the inputs in the module. Each physical input is represented by three tags of data type SPS named INPUT\_xxx, INPUT\_SOE\_xxx, and INPUT\_EDGE\_xxx, where xxx refers to the physical input designation within a module. The following discussion describes the signal processing and function of each tag. Each input tag is enabled by default. Disable any unneeded tags to optimize processing resources.

| Project Properties Node_1_Slot_D_ECAT                                |                                   |          |        |      |              |              |               |                |
|--|-----------------------------------|----------|--------|------|--------------|--------------|---------------|----------------|
| 2244242400, 24DI, 125 Vac/Vdc, Client - Ethernet [EtherCAT Protocol] |                                   |          |        |      |              |              |               |                |
| Properties   |                                   |          |        |      |              |              |               |                |
| Digital Inputs   |                                   |          |        |      |              |              |               |                |
| Diagnostics  |                                   |          |        |      |              |              |               |                |
| Tags   |                                   |          |        |      |              |              |               |                |
| Enable   | Tag Name                          | Point... | Tag... | T... | Status Value | Voltage Type | Pick Up Delay | Drop Out Delay |
| True   | Node_1_Slot_D_ECAT.INPUT_001      | 1        | SP5    |      | False        | DC           | 50            | 100            |
| True   | Node_1_Slot_D_ECAT.INPUT_SOE_001  | 1        | SP5    |      | False        | DC           | 50            | 100            |
| False  | Node_1_Slot_D_ECAT.INPUT_EDGE_001 | 1        | SP5    |      | False        | DC           | 50            | 100            |
| True   | Node_1_Slot_D_ECAT.INPUT_002      | 2        | SP5    |      | False        | DC           | 50            | 100            |
| True   | Node_1_Slot_D_ECAT.INPUT_SOE_002  | 2        | SP5    |      | False        | DC           | 50            | 100            |
| True   | Node_1_Slot_D_ECAT.INPUT_EDGE_002 | 2        | SP5    |      | False        | DC           | 50            | 100            |
| True   | Node_1_Slot_D_ECAT.INPUT_003      | 3        | SP5    |      | False        | DC           | 20            | 50             |
| True   | Node_1_Slot_D_ECAT.INPUT_SOE_003  | 3        | SP5    |      | False        | DC           | 20            | 50             |
| True   | Node_1_Slot_D_ECAT.INPUT_EDGE_003 | 3        | SP5    |      | False        | DC           | 20            | 50             |

**Figure 2.41 Digital Inputs Tab for the SEL-2244 Digital Input Module**

## Digital Input Debounce

To comply with different control voltages, the Digital Input modules offer dc debounce and ac debounce modes. You can use the voltage type setting in the **Digital Inputs** tab to select these modes on a per-input basis. If you change the setting for a given input from dc to ac and save the project, ACSELERATOR RTAC will configure all three tags associated with that physical input to the new setting. *Figure 2.42* illustrates this functionality after the voltage type setting for Node\_1\_Slot\_D\_ECAT.INPUT\_001 changed from dc to ac. Changing the value from ac to dc and saving the project will have the reverse effect.

|                | Enable | Tag Name                          | Point... | Tag... | T... | Status Value | Voltage Type | Pick Up Delay | Drop Out Delay |
|----------------|--------|-----------------------------------|----------|--------|------|--------------|--------------|---------------|----------------|
| Digital Inputs | True   | Node_1_Slot_D_ECAT.INPUT_001      | 1        | SPS    |      | False        | AC           | 2             | 16             |
| Diagnostics    | True   | Node_1_Slot_D_ECAT.INPUT_SOE_001  | 1        | SPS    |      | False        | AC           | 2             | 16             |
| Tags           | False  | Node_1_Slot_D_ECAT.INPUT_EDGE_001 | 1        | SPS    |      | False        | AC           | 2             | 16             |
|                | True   | Node_1_Slot_D_ECAT.INPUT_002      | 2        | SPS    |      | False        | DC           | 50            | 100            |
|                | True   | Node_1_Slot_D_ECAT.INPUT_SOE_002  | 2        | SPS    |      | False        | DC           | 50            | 100            |
|                | True   | Node_1_Slot_D_ECAT.INPUT_EDGE_002 | 2        | SPS    |      | False        | DC           | 50            | 100            |

**Figure 2.42 Changing Voltage Type Setting for Digital Input Module**

If the control input voltage is dc, select **DC** for the voltage type. If the control input voltage is ac, select **AC** for the voltage type. In general, debounce refers to a qualifying time delay before processing the change of state of a digital input. Normally, this delay applies to the processing of the debounced input when used in IEC 61131-3 logic, and to the time-stamping of the tag for logging and SOE. We provide INPUT\_xxx and INPUT\_SOE\_xxx as separate tags to account for two different processing intervals operating in the RTAC. First, the IEC 61131-3 logic engine performs logic on a user-settable interval between 4 ms and 1 second. Second, the EtherCAT network updates every 1 ms and buffers the input state and time stamp every millisecond in the INPUT\_SOE\_xxx tag, regardless of the logic engine processing interval. If you need a high-speed record for an input, then use the Tag Processor to log the INPUT\_SOE\_xxx tag. *Section 5: Web Interface and Reports* provides detailed instructions on this feature. The INPUT\_xxx tag does not buffer changes of state between logic processing intervals. It is a debounced value and always represents the last recorded state of an input. Use this tag in IEC 61131-3 programmable logic. The time stamp for INPUT\_xxx will represent the last recorded change of state.

#### NOTE

AC debounce mode is processor intensive. Using a large number of AC debounced inputs is not recommended.

In some cases, it is also important to record the time of first assertion of an input. To this end, the SEL-2244 Digital Input Module provides the initial assertion time via the INPUT\_EDGE\_xxx tag. The module buffers this tag with a time stamp for each event. Include it in logging along with the INPUT\_SOE\_xxx tag as necessary. The INPUT\_EDGE\_xxx tags are automatically disabled and unavailable when you set the voltage type to ac mode.


### DC Mode Processing (DC Control Voltage)

#### NOTE

In R118 and later, the AC/DC mode selection applies to an entire module rather than individual inputs. Converting from an older project with mixed settings will result in the first selection applying to the whole module.

*Figure 2.43* shows the logic for the dc voltage type mode of operation, which we select through use of the voltage type setting shown in *Figure 2.42*. The Input\_xxx, Input\_SOE\_xxx, and INPUT\_EDGE\_xxx tags share a debounce timer. Set the timer Pick Up Delay and Drop Out Delay for the INPUT\_xxx

tag and save the project; ACCELERATOR RTAC will automatically apply the same timer settings to all three tags. On assertion, INPUT\_RAW\_xxx (internal variable) starts Debounce Timer 1, producing INPUT\_xxx and INPUT\_SOE\_xxx after the debounce time pickup delay.

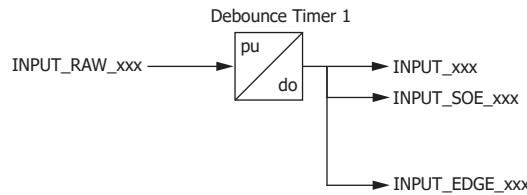

**Figure 2.43 DC Mode Processing**

*Figure 2.44* shows a timing diagram when INPUT\_RAW\_xxx changes from the deasserted state to the asserted state. At the first assertion of INPUT\_RAW\_xxx, the following takes place in regards to the edge detection function:

- ▶ INPUT\_EDGE\_xxx asserts
- ▶ Debounce Timer 1 starts
- ▶ All edge changes are ignored


If you want to record the time of the first assertion of an input, be sure to enable logging for INPUT\_EDGE\_xxx in the Tag Processor. During the time when Debounce Timer 1 runs, the device ignores all edge changes with regards to the INPUT\_EDGE\_xxx tag. At the end of this timing period, the system evaluates the status of INPUT\_RAW\_xxx (either logical 0 or logical 1), and sets INPUT\_EDGE\_xxx to this value. In *Figure 2.44*, INPUT\_RAW\_xxx has a status of logical 1 at the expiration of the timer, and INPUT\_EDGE\_xxx remains at logical 1.

#### NOTE


INPUT\_EDGE and INPUT\_SOE tags are disabled by default in R118 and later, to optimize processing capability.

INPUT\_xxx and INPUT\_SOE\_xxx assert only if INPUT\_RAW\_xxx remains asserted for the complete Pick Up Delay time of Debounce Timer 1. If INPUT\_RAW\_xxx deasserts at any point while Debounce Timer 1 is running, Debounce Timer 1 resets and starts timing from the beginning of the next rising edge.

The inverse operation applies when the input changes from the asserted state to the deasserted state, as shown in *Figure 2.45*.

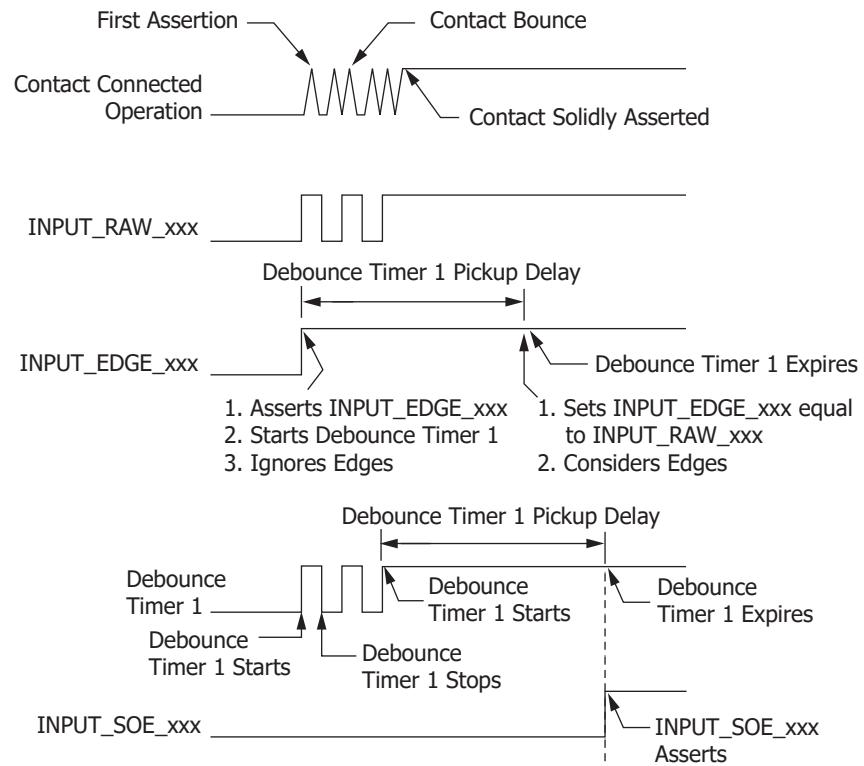

**Figure 2.44 Timing Diagram When Input Changes From the Deasserted State to the Asserted State**

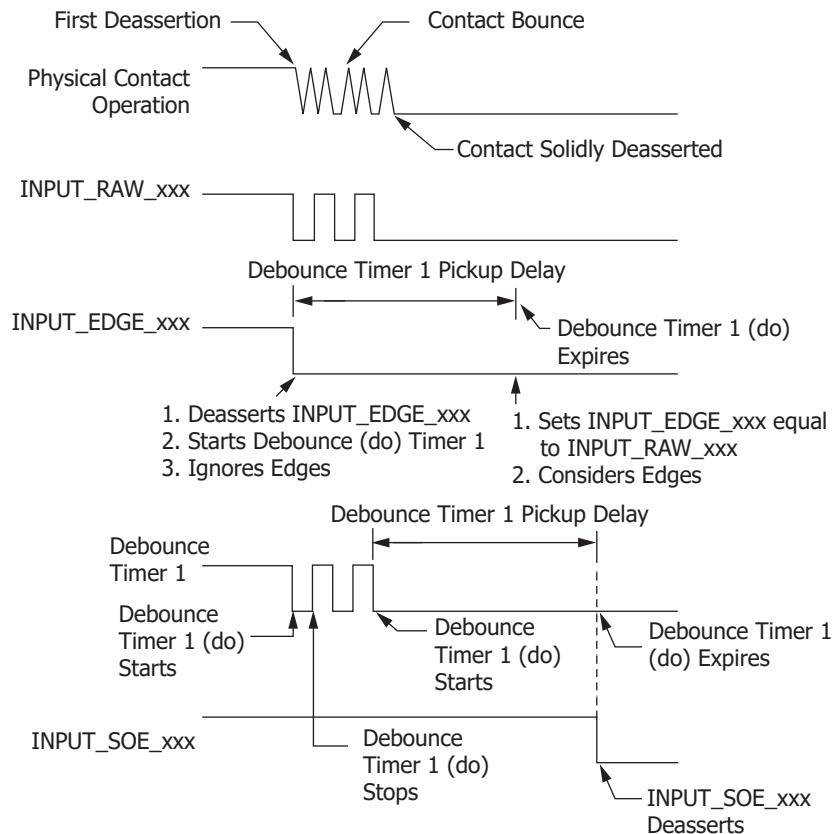


**Figure 2.45 Timing Diagram When Input Changes From the Asserted State to the Deasserted State**

## AC Mode Processing (AC Control Voltage)

### NOTE


In R118 and later, the AC/DC mode selection applies to an entire module rather than individual inputs. Converting from an older project with mixed settings will result in the first selection applying to the whole module.

*Figure 2.46* shows the logic for the ac voltage type mode of operation, which you select through use of the voltage type setting shown in *Figure 2.42*. The Input\_xxx and Input\_SOE\_xxx tags share a debounce timer. On assertion, INPUT\_RAW\_xxx (internal variable) starts the debounce timer, producing INPUT\_xxx and INPUT\_SOE\_xxx after the debounce time delay. The ac mode differs from the dc mode in having only delayed time information available. There are also no adjustable time settings for the debounce timer in the ac mode: the Pick Up Delay is fixed at 2 ms, and the Drop Out Delay is fixed at 16 ms.

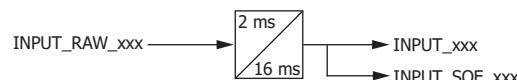

**Figure 2.46 AC Mode Processing**

*Figure 2.47* shows a timing diagram for the ac mode of operation. On the rising edge of INPUT\_RAW\_xxx, the pickup timer starts timing (points marked 1 in *Figure 2.47*). If INPUT\_RAW\_xxx deasserts (points marked 2 in *Figure 2.47*) before expiration of the Pick Up Delay time, INPUT\_xxx and INPUT\_SOE\_xxx will not assert, and they remain at logical 0. If, however, INPUT\_RAW\_xxx remains asserted for a period longer than the Pick Up Delay time, then both INPUT\_xxx and INPUT\_SOE\_xxx assert to a logical 1.

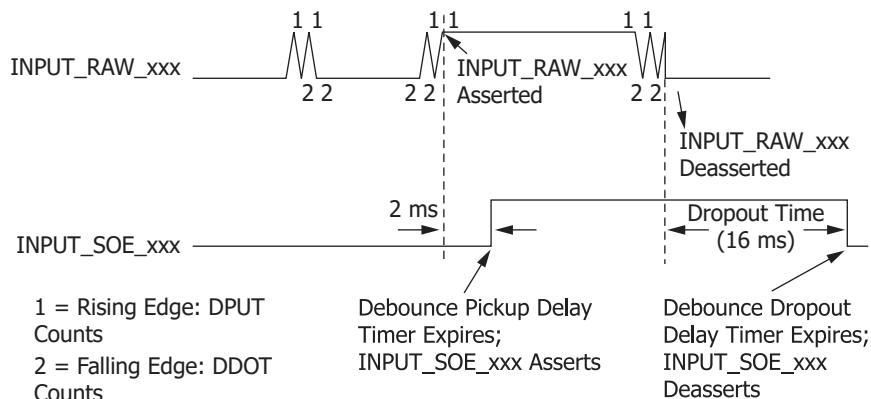

**Figure 2.47 Timing Diagram for Debounce Timer Operation When Operating in AC Mode**

Deassertion follows the same logic. On the falling edge of INPUT\_RAW\_xxx, the Drop Out Delay timer starts timing. If INPUT\_RAW\_xxx remains deasserted for a period longer than the Drop Out Delay setting, then INPUT\_xxx and INPUT\_SOE\_xxx deassert to a logical 0.

Be aware that ac mode digital inputs require more processing time in the RTAC than dc mode digital inputs. As a general rule, you should not install more than two nodes full of ac digital inputs in a single Axion system. However, because of processor burden for other protocols and user logic, the best method to validate system performance is to test your project and verify that the EtherCAT message processing task does not regularly exceed 500 microseconds to run. You can check this by going online in ACCELERATOR RTAC, select **EtherCAT I/O Network** from the project tree view, and monitor the tags Client\_Max\_us and Client\_Last\_us. As discussed in *Task Cycle Time on page 105*, if you overload a task you will see poor performance in the web HMI or web server application. One way to reduce system burden is to distribute Axion I/O between multiple RTAC modules.

## Creating a Counter From a Digital Input

You can use the input tags in any custom logic you want. Refer to the *Section 9: Custom Logic* for examples and *Appendix B: IEC 61131-3 Programming Reference* for IEC 61131-3 programming reference material. As a brief example, we will evaluate how to create a simple accumulator from a digital input. You could use this function to accumulate metering values or store the number of times an apparatus performs a specific sequence of operation. In this example, we used a CFC diagram, as shown in *Figure 2.48*. We use the stVal attribute of digital input INPUT\_002 (refer to SPS data type in the IEC 61131-3 Programming Reference) in conjunction with a Rising Edge Trigger and an Incrementing Counter function block to create an output representing

the number of times the input has changed from the deasserted state to the asserted state. Remember that debouncing of INPUT\_xxx values occurs as we discussed in the previous section. Add automatic or manual counter reset logic as necessary.

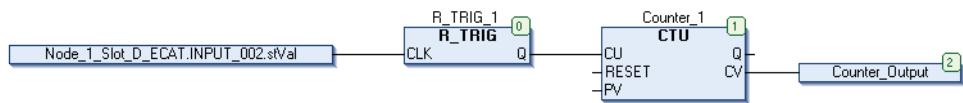


Figure 2.48 Creating a Counter Function From a Digital Input

## SEL-2244 16 Digital Output and 10 Fast High-Current Digital Output Modules

The SEL-2244 Digital Output Module includes 16 independent standard contact outputs or 10 independent fast high-current contact outputs. You can order the module to have all Form A or all Form B contacts; they are not software selectable. Also, you can order a module that contains half Form A and half Form B outputs. Use the **Insert** ribbon selection, as shown in *Figure 2.49*, to include an instance of this module in your project. Be careful to select the output type you require for each module. You can configure an Axion node to have output modules with a variety of contact types.

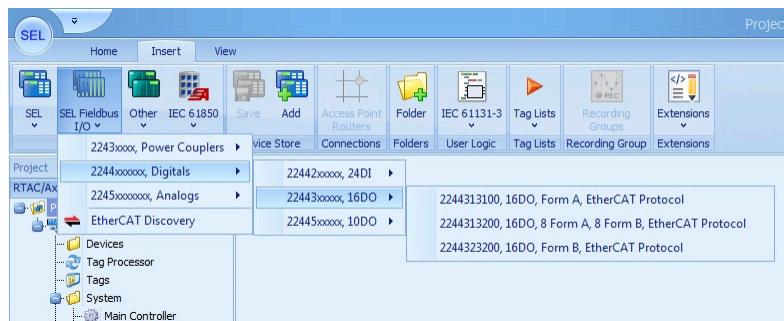



Figure 2.49 Insert an SEL-2244 Digital Output Module

Once you add a digital output module to a project, click the module name in the project view to open the connection editor. The **Properties** and **Diagnostics** tabs (see *Figure 2.41*) include the common EtherCAT module data discussed previously. The **Tags** tab lists all available and enabled tags from the module. Each of the 16 outputs in a module is controlled by an Input/Output Control (IOC) type tag. Refer to the IEC 61131-3 Programming Reference for detailed information on this tag type. Notice in *Figure 2.56* that each output will include a status, operSet, and operClear attribute. The physical output will assert when you set the operSet attribute. The physical output will deassert when you set the operClear attribute. The status attribute displays the latest commanded value for the output. Each output tag is enabled by default. Disable any unneeded tags to optimize processing resources.

## Output Contact Pulse


EtherCAT Digital outputs and the optional SEL-3530 digital outputs execute pulse operations without custom logic. Enter pulse configuration data directly from custom programs or map the **TRIP**, **CLOSE**, or **PULSE** command from a DNP Binary Output by using the Tag Processor. When the **operPulse.ctrlVal** is

toggled from FALSE to TRUE, the Output contact asserts for the length defined by `operPulse.pulseConfig.OnDur` and deasserts for the length of time defined by `operPulse.pulseConfig.offDur`. The pulse repeats the number of times defined by `operPulse.pulseConfig.numPls`. Assertions and deassertions occur in multiples of the RTE Cycle. On and Off durations that are not multiples of the RTE cycle time execute on the RTE cycle after the transition occurs. For example, if the RTE cycle is set to 100 ms, the `onDur` is set to 97 ms, and the `offDur` is set to 103 ms, the output contact will assert for 100 ms and then deassert for 200 ms (see *Figure 2.50*).

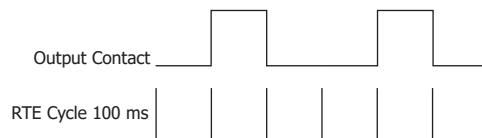


**Figure 2.50 Pulse Train Duration**

If an output is already asserted and a pulse command is received, the first state transition occurs at a time of `onDur` after the pulse command is processed (see *Figure 2.51*).

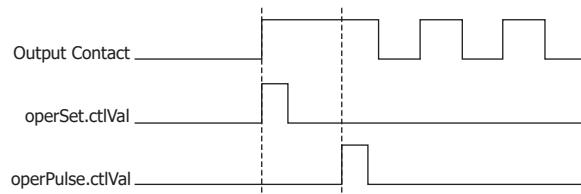


**Figure 2.51 Pulsing an Asserted Output**

If a pulse operation is in progress and the `operClear.ctlVal` is set to TRUE, the output deasserts and pulse operation ceases (see *Figure 2.52*).

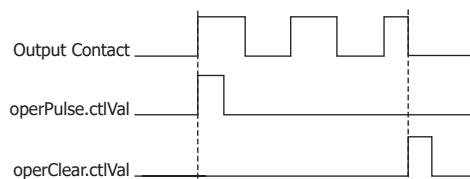


**Figure 2.52 Interrupting a Pulse With a Clear Command**

If a pulse operation is in progress and a new pulse command is received with a `pulseConfig.onDur = 0`, the output deasserts and pulse operation ceases (see *Figure 2.53*).

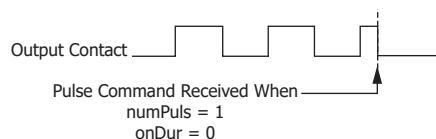


**Figure 2.53 New Pulse Config onDur = 0**

If a pulse operation is in progress and a new pulse command is received with a `pulseConfig.numPls = 0`, the asserted output remains asserted until `onDur` expires and pulse operation ceases. A deasserted output remains deasserted and pulse operation ceases (see *Figure 2.54*).

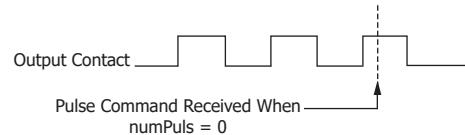**Figure 2.54 New Pulse Config numPls = 0**

If a pulse command is received with a pulseConfig.offDur = 0, the output asserts for a time of onDur \* numPls (see *Figure 2.55*).

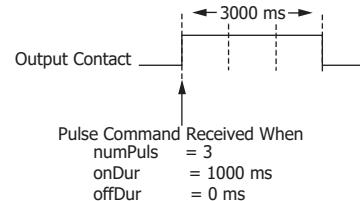**Figure 2.55 New Pulse Config offDur = 0**

| Project Properties FormA_16DO_ECAT                              |  |   |                                      |              |          |
|---|--|---|--------------------------------------|--------------|----------|
| 2244313100, 16DO, Form A, Client - Ethernet [EtherCAT Protocol] |  |   |                                      |              |          |
| Properties  |  | Drag a column header here to group by that column |                                      |              |          |
| Form A Digital Outputs  |  | Enable  | Tag Name                             | Point Number | Tag Type |
| Diagnostics   |  | True  | FormA_16DO_ECAT.OUTPUT_001.status    | 1            | SPS      |
| Tags  |  | True  | FormA_16DO_ECAT.OUTPUT_001.operSet   | 1            | operSPC  |
|   |  | True  | FormA_16DO_ECAT.OUTPUT_001.operClear | 1            | operSPC  |
|   |  | True  | FormA_16DO_ECAT.OUTPUT_001.operPulse | 1            | operSPC  |
|   |  | True  | FormA_16DO_ECAT.OUTPUT_002.status    | 2            | SPS      |
|   |  | True  | FormA_16DO_ECAT.OUTPUT_002.operSet   | 2            | operSPC  |
|   |  | True  | FormA_16DO_ECAT.OUTPUT_002.operClear | 2            | operSPC  |
|   |  | True  | FormA_16DO_ECAT.OUTPUT_002.operPulse | 2            | operSPC  |
|   |  | True  | FormA_16DO_ECAT.OUTPUT_003.status    | 3            | SPS      |

**Figure 2.56 Digital Output Module Tag Attributes**

## Creating Paired Outputs

You can use the output tags in any custom logic you want. Refer to *Section 9: Custom Logic* for examples and *Appendix B: IEC 61131-3 Programming Reference* for IEC 61131-3 programming reference material. As an example, we will evaluate how to combine two physical outputs in an SEL-2244 Digital Output Module into a trip-close pair when used in conjunction with a DNP binary output tag. For this example, the RTAC module is connected to the SEL-2244 Digital Output Module and also operates as a DNP server (slave). This example associates one binary output DNP tag's trip and close attributes with two physical outputs (refer to *Figure 2.57* for the Tag Processor example). Configure the operTrip.pulseConfig and operClose.pulseConfig attributes for the tag SCADA\_DNP.BO.00000 the same, setting the onDur := 3000ms, offDur := 1000ms, and numPls := 1. When the RTAC receives a **TRIP** command from the DNP Client, OUTPUT\_001 asserts for three seconds. When the RTAC receives a **CLOSE** command from the DNP Client, OUTPUT\_002 asserts for three seconds.

| Tag Processor                                     |                                      |              |                              |              | 0% |
|---|--------------------------------------|--------------|------------------------------|--------------|----|
| Drag a column header here to group by that column |                                      |              |                              |              |    |
| Build   | Destination Tag Name                 | DT Data Type | Source Expression            | SE Data Type |    |
| True  | FormA_16DO_ECAT.OUTPUT_001.operPulse | OPERSPC      | SCADA_DNP.BO_00000.operTrip  | OPERSPC      |    |
| True  | FormA_16DO_ECAT.OUTPUT_002.operPulse | OPERSPC      | SCADA_DNP.BO_00000.operClose | OPERSPC      |    |
| True  |                                      |              |                              |              |    |

Figure 2.57 Tag Processor for Trip-Close Pair Example

## Fast High-Current Interrupting Control Outputs

The SEL-2244-5 includes ten two-terminal, high-speed, high-current interrupting control outputs. These outputs have minimal leakage currents, which can result in short transient inrush currents when closing an external switch in series with the contact. This transient will not energize the circuits in typical relay-coil control applications (trip coils and close coils), and standard auxiliary relays will not pick up. However, an extremely sensitive digital input or light-duty, high-speed auxiliary relay can pick up for this condition. This false pickup transient occurs when the capacitance of the high-speed, high-current interrupting output circuitry charges, creating a momentary short circuit that a fast, sensitive device sees as a contact closure.

Figure 2.58 shows a possible configuration for mitigating these transient inrush currents when closing an external switch. In general, connect a loading resistor (typically 10 kΩ to 1 MΩ) to the terminal of the contact output on the same side as the open external switch. For critical circuits, if possible, set a debounce delay of at least 2 ms on the digital inputs.


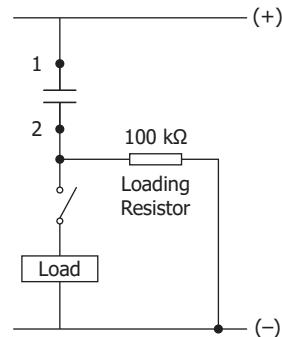


Figure 2.58 Placement of Loading Resistor

## SEL-2245-2 16 DC Analog Input Module

The SEL-2245-2 DC Analog Input Module includes 16 inputs for measuring low-level dc signals. The inputs are user configurable in pairs to measure signals within ±20 mA, ±2 mA, or ±10 V ranges. Use the **Insert** ribbon as shown to add an instance of this module to your project. The displayed pop-up will allow you to change the module name if necessary. When finished, click **Insert**.

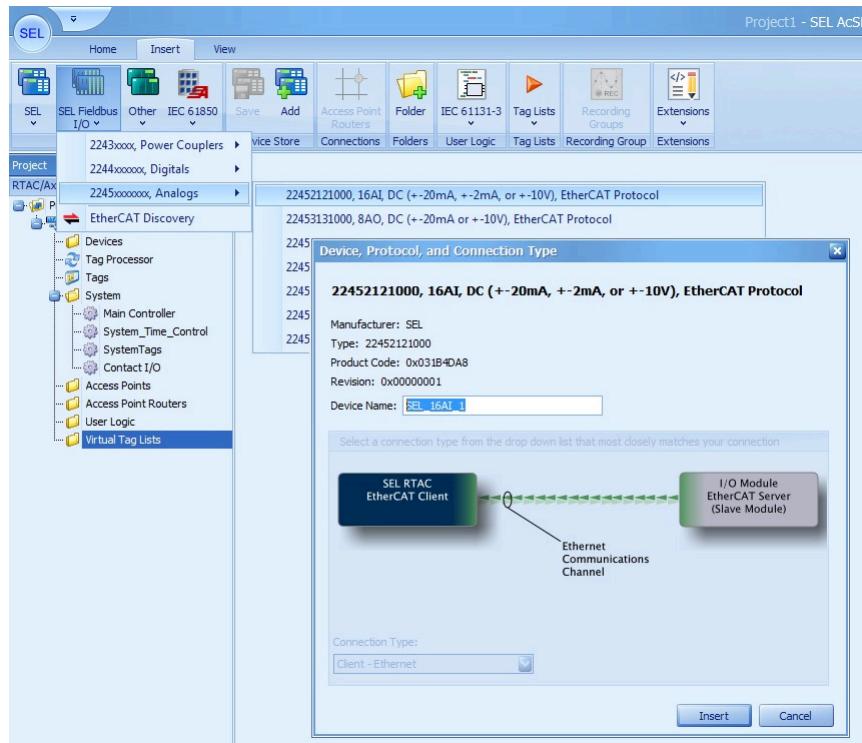

**Figure 2.59 Insert an SEL-2245 DC Analog Input Module**

## Configure the Analog Input Module

In the project tree, select the module to open the module settings dialog window. Go to the **Settings** tab to select the input range of the analog inputs type (High Current, Low Current, and Voltage). See the specifications section for input specifications. Each input range selection is for a pair of inputs.

| Project Properties SEL_16AI_1_ECAT [x]  |                                  |              |                                  |                                      |         |
|---|----------------------------------|--------------|----------------------------------|--------------------------------------|---------|
| 2245121000, 16 DC AI (+-20mA, +-2mA, or -+10V), Client - Ethernet [EtherCAT Protocol] |                                  |              |                                  |                                      |         |
| Drag a column header here to group by that column                                     |                                  |              |                                  |                                      |         |
| Properties  | Setting                          | Value        | Range                            | Description                          | Comment |
| Settings  | Analog Type for points 1 and 2   | Voltage      | Low Current,High Current,Voltage | Set Analog Type for points 1 and 2   |         |
| Analog Inputs   | Analog Type for points 3 and 4   | Low Current  | Low Current,High Current,Voltage | Set Analog Type for points 3 and 4   |         |
|   | Analog Type for points 5 and 6   | High Current | Low Current,High Current,Voltage | Set Analog Type for points 5 and 6   |         |
|   | Analog Type for points 7 and 8   | High Current | Low Current,High Current,Voltage | Set Analog Type for points 7 and 8   |         |
|   | Analog Type for points 9 and 10  | High Current | Low Current,High Current,Voltage | Set Analog Type for points 9 and 10  |         |
|   | Analog Type for points 11 and 12 | High Current | Low Current,High Current,Voltage | Set Analog Type for points 11 and 12 |         |
|   | Analog Type for points 13 and 14 | High Current | Low Current,High Current,Voltage | Set Analog Type for points 13 and 14 |         |
|   | Analog Type for points 15 and 16 | High Current | Low Current,High Current,Voltage | Set Analog Type for points 15 and 16 |         |

**Figure 2.60 Analog Input Range Selection**

The **Analog Inputs** tab allows you to configure the range of the inputs, alarm points and sampling parameters.

### Enable

When True, this tag will be included when the program is compiled. When False, it will not be included. Disable all tags not in use to optimize processing resources.

#### Tag Name

Programming designation of a resource.

#### Tag Alias

Input an alternative name to use in place of the Tag Name while programming (for example, SEL\_16AI\_1\_ECAT.INPUT\_VALUE\_001 could be replaced by "coolant\_temp").

#### Engineering Units High and Engineering Units Low

The real-world quantities that the analog signal represents: temperature, pressure, etc.

#### Physical High and Physical Low

The high and low signal levels expected.

Example settings for a -50degC to 150degC 4–20mA transducer would be as follows:

Engineering Units High: 150

Engineering Unit Low: -50

Physical High: 20

Physical Low: 4

The software will then create a scaling factor to relate the current value to a real world temperature; for example 6 mA = -25 degrees C.

There are four set points: **Low Alarm**, **Low Warning**, **High Alarm**, **High Warning**. These fields are of the same type as the Engineering Units: temperature, psi, etc. When the analog value is exceeded the corresponding tag is set.

Example:

Setting **Low Alarm** to 10 would set the SEL\_16AI\_1\_ECAT.INPUT\_LOW\_ALARM\_001 tag when Temp  $\leq$  10 degrees C

Setting **High Alarm** to 90 would set the SEL\_16AI\_1\_ECAT.INPUT\_HIGH\_ALARM\_001 tag when Temp  $\geq$  90 degrees C

#### Deadband

The value is set in engineering units and is the amount that the analog input value must return below or above the high and low alarms, respectively, to clear the alarm condition.

#### Filter Type

|                       |  |
|-----------------------|--|
| None                  | No filters are applied. This will yield the fastest signal response.           |
| Filter A              | Slower response than None but has higher noise immunity. (See Specifications.) |
| Filter B              | Medium response and medium immunity. (See Specifications.)                     |
| Filter C <sup>a</sup> | Slowest response but has the highest immunity. (See Specifications.)           |

#### Rate of Change

The amount the analog value has to change in the time specified (Rate of Change Sample Duration) before the rate of change alarm tag is set. Rate of Change is in engineering units and Rate of Change Sample Duration is in milliseconds.

<sup>a</sup> Filter C is only supported in SEL-2245-2 firmware R102 or later.

## Diagnostics

|                 |  |
|-----------------|--|
| <b>STATUS</b>   | String representing the present operational status of the module.  |
| Operational     | Normal Operation   |
| Non-Operational | Module is not communicating on the EtherCAT network.   |
| <b>ERROR</b>    | String representing the network state for a module.  |
| No Error        | Normal Operation   |
| Cable Error     | The network configuration has changed and does not match settings. This error could arise either from the movement of a server module or an Ethernet cable change. |

## Tags

INPUT\_VALUE\_xxx is of type MV and the value is of type REAL.<sup>a</sup>

All other tags are of type SPS and the value is of type BOOL

INPUT\_HIGH\_ALARM\_xxx

INPUT\_HIGH\_WARN\_xxx

INPUT\_LOW\_ALARM\_xxx

INPUT\_LOW\_WARN\_xxx

INPUT\_RATE\_CHANGE\_ALARM\_xxx

<sup>a</sup>xxx refers to the physical input designation within a module.

All alarm tags will return to false on the next cycle after an alarm condition is no longer present.

## Waveform Recording

### NOTE

Waveform reading is only supported in SEL-2245-2 firmware R102 or later.

Waveforms will be recording in COMTRADE format with an accompanying configuration file. File names are stored as follows:

StationName\_ModuleID\_Protocol\_YYYYMMDD\_HHMMSSMSC.yyy

where:

yyy is one of two file name extensions: CFG for configuration files or DAT for data files.

Protocol is the name of the protocol used (e.g., ECAT).

StationName is defined by the RTAC hostname, which is configurable through the web interface. When the RTAC hostname is changed, the EtherCAT network must be disabled and re-enabled for the new StationName to appear in the file name of waveform records.

A maximum of 1024 COMTRADE events can be stored in the RTAC with the oldest record being deleted when a new event is triggered and 1024 is exceeded. The SEL-2245-2 can record two back-to-back events. A new record can be triggered as soon as the current one has finished recording. A trigger condition that occurs before the current recording finishes is ignored. These records are first stored locally to prevent data loss and then transferred to the RTAC for downloading via the built-in web server.

## Inputs

The following analog inputs are recorded in the COMTRADE files generated by the SEL-2245-2 modules:

AI1–AI16

## Downloading Events Via the Web Interface

- Step 1. Connect to the RTAC through one of the Ethernet ports or the USB-B interface.
- Step 2. Open a web browser.
- Step 3. Enter <https://> followed by the RTAC Ethernet address.
- Step 4. Log in to the RTAC web interface.
- Step 5. Click on **Event Collection** under **Reports** in the navigation pane on the left.
- Step 6. Sort events by selecting a time frame from **Timestamp Query** and the **Device Filter**.
- Step 7. Select the desired events and click **Download**. You can also delete events by clicking **Delete**.

**Table 2.38 Waveform Settings**

| Setting                       | Description  |
|-------------------------------|--|
| VoltageInputConfiguration     | Voltage input configuration  |
| FrequencyNominal              | Nominal system frequency   |
| OscillographyCaptureRate      | Sampling rate: 1 kHz   |
| OscillographyRecordLength     | Total record length: 0.5–144 seconds   |
| OscillographyPreTriggerLength | Pre-trigger record length: 0.05 seconds minimum to a maximum of (record length – 0.05) seconds |
| StationName                   | RTAC hostname  |
| ModuleID                      | Module identifier (module name in ACCELERATOR RTAC)  |
| Module_name.Event_Trigger     | Boolean input that triggers waveform recording in the module and only responds to rising edges |

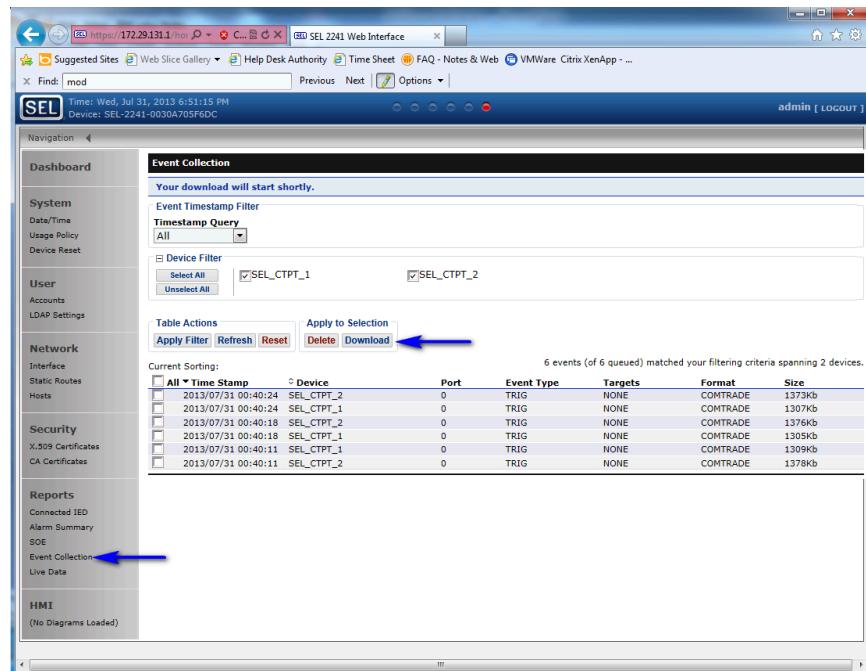


Figure 2.61 Waveform Record Retrieval

## Viewing Waveforms and Event Files

Events files created by the SEL-2245-2 are in COMTRADE format. Event viewing software such as SEL-5601-2 SYNCHROWAVE® Event Software is required to open these files.



Figure 2.62 SYNCHROWAVE Event Display Waveform

## Field Calibration Procedure


- Step 1. Turn the Axion with the SEL-2245-2 on and allow it to warm up for a few minutes.
- Step 2. Set the analog inputs for each analog channel to the desired range (e.g., 4–20 mA), using the value on the **Settings** tab and **Physical High**, and **Physical Low** on the **Analog Input** tab. Set **Engineering Units High** equal to **Physical High** and **Engineering Units Low** equal to **Physical Low**.
- Step 3. Using a calibrated source, drive the signal line from the transducer end to the low value (for example, 4 mA).  
Record ten measurements from the analog input value, then calculate the average of the ten measurements by adding the ten values algebraically, and dividing the sum by ten. This is the actual low value (for example, 3.9 mA).
- Step 4. Enter this value in **Physical Low**.
- Step 5. Drive the line to the high value (for example, 20 mA).
- Step 6. Repeat Step 3.
- Step 7. This is the actual high value (for example, 20.012 mA). Enter this value in **Physical High**.
- Step 8. Set **Engineering Units High** and **Engineering Units Low** to desired values (for example, –50F to +150F).

## SEL-2245-22 Four Analog Input Extended Range Module

The SEL-2245-22 Analog Input Extended Range Module includes four inputs for measuring high-level dc or ac signals. Refer to *Specifications in the SEL-2240 Axion Instruction Manual* for details on the input range for DC or AC Mode. Use the **Insert** ribbon as shown to add an instance of this module to your project. The displayed popup will allow you to change the module name if necessary. When finished, click **Insert**.

### NOTE

AC metering mode was added to the SEL-2245-22 module firmware in R101 and to the RTAC in R141.

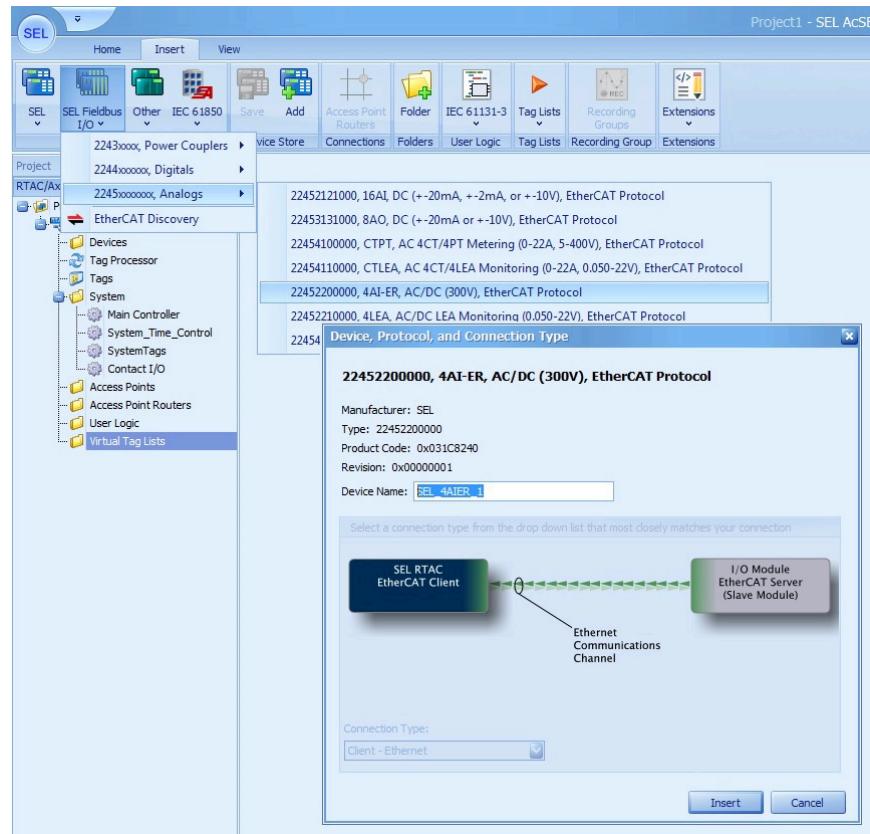

**Figure 2.63 Insert an SEL-2245-22 DC Analog Input Extended Range Module**

## Configuring the Analog Input Module (DC Mode)

In the **Settings** tab, select DC for the Input Mode. This will enable the dc analog measurements and the associated settings.

The **Settings** tab also includes voltage parameter settings for AC Mode as well as Oscillography and Synchrophasor settings.

| SEL_4AIER_1_ECAT   |                               |                   |   |
|--|-------------------------------|-------------------|---|
| Project Properties SEL_4AIER_1_ECAT                                      |                               |                   |   |
| 22452200000, 4AI-ER, AC/DC (300V), Client - Ethernet [EtherCAT Protocol] |                               |                   |   |
| Properties   | Setting                       | Value             | Description   |
| Settings   | Input Mode                    | DC                | AC,DC   |
| Analog Inputs  | Phase ABC PT Ratio            | 1                 | 1.00-10000.00   |
| Diagnostics  | Phase Rotation                | ABC               | ABC,ACB   |
| Tags   | Synch PT Ratio                | 1                 | 1.00-10000.00   |
|  | Reference Angle               | Positive Sequence | Positive Sequence,Phase A,No Reference                                  |
|  | Voltage Configuration         | Wye               | Delta,Wye   |
|  | Oscillography                 |                   |   |
|  | Oscillography Pre-trigger ... | 1                 | 0.01 increments from 0.05 to (OscillographyRecordLength-0.05) (seconds) |
|  | Oscillography Capture Rate    | 1                 | 1,2,4,8,24 (kilohertz)  |
|  | Oscillography Record Length   | 4                 | 0.1 increments from 0.5 to <max> (seconds)                              |
|  | Synchrophasors                |                   |   |
|  | Phase Voltage Angle Comp...   | 0                 | -179.99-180.00 (degrees)  |
|  | Synch Voltage Angle Comp...   | 0                 | -179.99-180.00 (degrees)  |

**Figure 2.64 SEL-2245-22 Settings Tab (DC Mode)**

The **Analog Inputs** tab allows you to configure the range of the inputs, alarm points and sampling parameters. The following table shows the settings of the **Analog Inputs** tab in DC Mode.

|   |
|---|
| <b>Enable</b>   |
| When True, this tag will be included when the program is compiled. When False, it will not be included. Disable all tags not in use to optimize processing resources.   |
| <b>Tag Name</b>   |
| Programming designation of a resource.  |
| <b>Tag Alias</b>  |
| Input an alternative name to use in place of the Tag Name while programming (for example, SEL_4AIER_1_ECAT.INPUT_VALUE_001 could be replaced by "coolant_temp").  |
| <b>Engineering Units High and Engineering Units Low</b>   |
| The real-world quantities that the analog signal represents: temperature, pressure, etc.  |
| <b>Physical High and Physical Low</b>   |
| The high and low signal levels expected.<br>Example settings:<br>Engineering Units: 300<br>Engineering Units Low: 0<br>Physical High: 300<br>Physical Low: 0<br>The software will then create a scaling factor to relate the current value to a real-world value. |

There are four set points: **Low Alarm**, **Low Warning**, **High Alarm**, **High Warning**. These fields are of the same type as the Engineering Units: voltage, temperature, psi, etc. When the analog value is exceeded the corresponding tag is set.

Example:

Setting **Low Alarm** to 100 would set the  
SEL\_4AIER\_1\_ECAT.INPUT\_LOW\_ALARM\_001 tag  
when Volts  $\geq$  100 Vdc

Setting **High Alarm** to 130 would set the  
SEL\_4AIER\_1\_ECAT.INPUT\_HIGH\_ALARM\_001 tag  
when Volts  $\geq$  130 Vdc

|   |
|---|
| <b>Deadband</b>   |
| The value is set in engineering units and is the amount that the analog input value must return below or above the high and low alarms, respectively, to clear the alarm condition. |
| <b>Filter Type</b>  |
| None      No filters are applied. This will yield the fastest signal response.  |
| Filter A    Slower response than None but has higher noise immunity. (See Specifications.)  |
| Filter B    Medium response and medium immunity. (See Specifications.)  |
| Filter C    Slowest response but has the highest immunity. (See Specifications.)  |
| <b>Rate of Change</b>   |

The amount the analog value has to change in the time specified (Rate of Change Sample Duration) before the rate of change alarm tag is set. Rate of Change is in engineering units and Rate of Change Sample Duration is in milliseconds.

## Diagnostics

|                 |  |
|-----------------|--|
| STATUS          | String representing the present operational status of the module.  |
| Operational     | Normal Operation   |
| Non-Operational | Module is not communicating on the EtherCAT network.   |
| ERROR           | String representing the network state for a module.  |
| No Error        | Normal Operation   |
| Cable Error     | The network configuration has changed and does not match settings. This error could arise either from the movement of a server module or an Ethernet cable change. |

## Tags

---

INPUT\_VALUE\_xxx is of type MV and the value is of type REAL.<sup>a</sup>

All other tags are of type SPS and the value is of type BOOL

INPUT\_HIGH\_ALARM\_xxx

INPUT\_HIGH\_WARN\_xxx

INPUT\_LOW\_ALARM\_xxx

INPUT\_LOW\_WARN\_xxx

INPUT\_RATE\_CHANGE\_ALARM\_xxx

---

<sup>a</sup>xxx refers to the physical input designation with a module.

---

All alarm tags will return to false on the next cycle after an alarm condition is no longer present.

## Configuring the Analog Input Module (AC Mode)

In the **Settings** tab, select AC for the Input Mode. This will enable the ac metering inputs and its associated settings.

The **Settings** tab also includes Voltage parameter settings for DC Mode as well as Oscillography and Synchrophasor settings.

| SEL_4AIER_1_ECAT   |                                |                   |                      |   |
|--|--------------------------------|-------------------|----------------------|---|
| 22452200000, 4AI-ER, AC/DC (300V), Client - Ethernet [EtherCAT Protocol] |                                |                   |                      |   |
| Properties   | Setting                        | Value             | Range                | Description   |
| Settings   | General                        |                   |                      |   |
|  | Input Mode                     | AC                | AC,DC                | AC/DC Inputs  |
| Analog Inputs  | Phase Rotation                 | ABC               | ABC,ACB              | Phase rotation  |
| Diagnostics  | Phase ABC PT Ratio             | 35                | 1.00-10000.00        | Phase A, B, and C PT winding ratio                                      |
| Tags   | Synch PT Ratio                 | 35                | 1.00-10000.00        | Synch PT winding ratio  |
|  | Voltage Configuration          | Wye               | Delta,Wye            | Voltage configuration   |
|  | Reference Angle                | Positive Sequence | Positive Sequence... | The reference angle for fundamental tags                                |
|  | Oscillography                  |                   |                      |   |
|  | Oscillography Capture Rate     | 1                 | 1,2,4,8,24 (kilo...) | The capture rate of oscillography data                                  |
|  | Oscillography Record Length    | 4                 | 0.1 increments ...   | Total length of an oscillography capture                                |
|  | Oscillography Pre-trigger L... | 1                 | 0.01 increments...   | Pre-trigger length of an oscillography capture                          |
|  | PMU                            |                   |                      |   |
|  | Station Name                   | SEL_4AIER_1_ECAT  | 1-255 (characte...   | The PMU station name  |
|  | PMU Id                         | 1                 | 1-65534              | Identifier for this PMU   |
|  | Voltage Phasor Data Set        | Phase             | All,Phase,Positi...  | Voltage Phasor channels for PMU data set                                |
|  | Synchrophasors                 |                   |                      |   |
|  | Phase Voltage Angle Comp...    | 0                 | -179.99-180.00...    | Angle compensation for the A, B, and C phase voltage synchrophasor tags |
|  | Synch Voltage Angle Comp...    | 0                 | -179.99-180.00...    | Angle compensation for the Synch voltage synchrophasor tags             |

Figure 2.65 SEL-2245-22 Settings Tab (AC Mode)

The **Analog Inputs** tab allows you to configure the range of the inputs, alarm points and sampling parameters. *Table 2.39* shows the settings of the **Analog Inputs** tab in AC Mode.

### NOTE

RMS voltage quantities have units of kilovolts and Fundamental voltage quantities are in units of volts.

Table 2.39 Analog Inputs Settings

| Setting                          | Configuration Options  |
|----------------------------------|--|
| Phase Rotation                   | ABC or ACB   |
| Voltage Configuration            | Configure inputs for three-wire Delta or four-wire Wye                       |
| Phase ABC PT ratio               | 1.00–10000.00  |
| Synch PT Ratio                   | 1.00–10000.00  |
| Reference Angle                  | Select reference for Fundamental Vector quantities                           |
| Oscillography Capture Rate       | Capture rate of oscillography data   |
| Oscillography Record Length      | Length of oscillography capture. Capture rate affects maximum record length. |
| Oscillography Pre-Trigger Length | Length of time before trigger to start capture                               |
| Station Name                     | 1–255 characters   |
| Voltage Phasor Data Set          | All, Phase, Positive Sequence, None  |
| PMU Id                           | 1–65534  |
| Global PMU Id                    | 0–2 <sup>128</sup> - 1   |

| SEL_4AIER_1_ECAT  |   |                                     |             |           |     |
|---|---|-------------------------------------|-------------|-----------|-----|
| Bug Test - 22452200000, 4AI-ER, AC/DC (300V), Client - Ethernet [EtherCAT Protocol] |   |                                     |             |           |     |
| Properties  | Drag a column header here to group by that column |                                     |             |           |     |
|   | Enable  | Tag Name                            | Tag Type    | Tag Alias | Com |
| Analog Inputs   | True  | SEL_4AIER_1_ECAT.EVENT_TRIGGER      | BOOL        |           |     |
| Diagnostics   | False   | SEL_4AIER_1_ECAT.VA_FUND            | vector_t    |           |     |
| Tags  | False   | SEL_4AIER_1_ECAT.VB_FUND            | vector_t    |           |     |
|   | False   | SEL_4AIER_1_ECAT.VC_FUND            | vector_t    |           |     |
|   | False   | SEL_4AIER_1_ECAT.VS_FUND            | vector_t    |           |     |
|   | False   | SEL_4AIER_1_ECAT.VAB_FUND           | vector_t    |           |     |
|   | False   | SEL_4AIER_1_ECAT.VBC_FUND           | vector_t    |           |     |
|   | False   | SEL_4AIER_1_ECAT.VCA_FUND           | vector_t    |           |     |
|   | False   | SEL_4AIER_1_ECAT.VO_FUND            | vector_t    |           |     |
|   | False   | SEL_4AIER_1_ECAT.V1_FUND            | vector_t    |           |     |
|   | False   | SEL_4AIER_1_ECAT.V2_FUND            | vector_t    |           |     |
|   | False   | SEL_4AIER_1_ECAT.VS_FREQ_FUND       | REAL        |           |     |
|   | False   | SEL_4AIER_1_ECAT.FREQ_FUND          | REAL        |           |     |
|   | False   | SEL_4AIER_1_ECAT.VS_FREQ_VALID_FUND | BOOL        |           |     |
|   | False   | SEL_4AIER_1_ECAT.FREQ_VALID_FUND    | BOOL        |           |     |
|   | False   | SEL_4AIER_1_ECAT.TIMESTAMP_FUND     | timeStamp_t |           |     |
|   | False   | SEL_4AIER_1_ECAT.VA_PM              | CMV         |           |     |
|   | False   | SEL_4AIER_1_ECAT.VB_PM              | CMV         |           |     |
|   | False   | SEL_4AIER_1_ECAT.VC_PM              | CMV         |           |     |
|   | False   | SEL_4AIER_1_ECAT.VS_PM              | CMV         |           |     |
|   | False   | SEL_4AIER_1_ECAT.VO_PM              | CMV         |           |     |
|   | False   | SEL_4AIER_1_ECAT.V1_PM              | CMV         |           |     |
|   | False   | SEL_4AIER_1_ECAT.V2_PM              | CMV         |           |     |
|   | False   | SEL_4AIER_1_ECAT.FREQ_PM            | MV          |           |     |
|   | False   | SEL_4AIER_1_ECAT.ROCOF_PM           | MV          |           |     |
|   | False   | SEL_4AIER_1_ECAT.VA_RMS             | REAL        |           |     |
|   | False   | SEL_4AIER_1_ECAT.VB_RMS             | REAL        |           |     |
|   | False   | SEL_4AIER_1_ECAT.VC_RMS             | REAL        |           |     |
|   | False   | SEL_4AIER_1_ECAT.VS_RMS             | REAL        |           |     |
|   | False   | SEL_4AIER_1_ECAT.VAB_RMS            | REAL        |           |     |
|   | False   | SEL_4AIER_1_ECAT.VBC_RMS            | REAL        |           |     |
|   | False   | SEL_4AIER_1_ECAT.VCA_RMS            | REAL        |           |     |
|   | False   | SEL_4AIER_1_ECAT.VS_FREQ_RMS        | REAL        |           |     |
|   | False   | SEL_4AIER_1_ECAT.FREQ_RMS           | REAL        |           |     |
|   | False   | SEL_4AIER_1_ECAT.VS_FREQ_VALID_RMS  | BOOL        |           |     |
|   | False   | SEL_4AIER_1_ECAT.FREQ_VALID_RMS     | BOOL        |           |     |
|   | False   | SEL_4AIER_1_ECAT.TIMESTAMP_RMS      | timeStamp_t |           |     |
|   | True  | SEL_4AIER_1_ECAT.QUALITY            | quality_t   |           |     |

Figure 2.66 AC Mode Tag Settings

| Analog Input | Description   |
|--------------|---|
| Enable       | When True, this tag will be included when the program is compiled. When False it will not be included. Disable all tags not in use to optimize processing resources. If there are too many analog data on the EtherCAT backplane, you will receive a message that the bandwidth has been exceeded (shown in <i>Figure 2.82</i> ). |
| Tag Name     | Programming designation of a resource.  |
| Tag Alias    | Input an alternative name to use in place of the Tag Name while programming (for example, SEL_CTPT_1_ECAT.IA_FUND could be replaced by IA_Bus1).  |

## Waveform Recording

Waveforms will be recording in COMTRADE format with an accompanying configuration file. File names are stored as follows:

StationName\_ModuleID\_Protocol\_YYYYMMDD\_HHMMSSMSC.yyy

where:

yyy is one of two file name extensions: CFG for configuration files or DAT for data files.

Protocol is the name of the protocol used (e.g., ECAT).

StationName is defined by the RTAC hostname, which is configurable through the web interface. When the RTAC hostname is changed, the EtherCAT network must be disabled and re-enabled for the new StationName to appear in the file name of waveform records.

A maximum of 1024 COMTRADE events can be stored in the RTAC with the oldest record being deleted when a new event is triggered and 1024 is exceeded. The SEL-2245-22 can record two back-to-back events. A new record can be triggered as soon as the current one has finished recording. A trigger condition that occurs before the current recording finishes is ignored. These records are first stored locally to prevent data loss and then transferred to the RTAC for downloading via the built-in web server.

## Inputs

The following analog inputs are recorded in the COMTRADE files generated by the SEL-2245-22 modules in DC Mode:

AI1-AI4

The following analog inputs are recorded in the COMTRADE files generated by the SEL-2245-22 modules in AC Mode:

VA, VB, VC, VS (Wye)


VAB, VBC, VCA (Delta)

## Downloading Events Via the Web Interface

- Step 1. Connect to the RTAC through one of the Ethernet ports or the USB-B interface.
- Step 2. Open a web browser.
- Step 3. Enter **https://** followed by the RTAC Ethernet address.
- Step 4. Log in to the RTAC web interface.
- Step 5. Click on **Event Collection** under **Reports** in the navigation pane on the left.
- Step 6. Sort events by selecting a time frame from **Timestamp Query** and the **Device Filter**.
- Step 7. Select the desired events and click **Download**. You can also delete events by clicking **Delete**.


**Table 2.40 Waveform Settings**

| <b>Setting</b>                | <b>Description</b>   |
|-------------------------------|--|
| VoltageInputConfiguration     | Voltage input configuration  |
| FrequencyNominal              | Nominal system frequency   |
| OscillographyCaptureRate      | Sampling rate: 1, 2, 4, 8, 24 kHz; software-selectable   |
| OscillographyRecordLength     | Total record length:<br>6 seconds at 24 kHz<br>18 seconds at 8 kHz<br>36 seconds at 4 kHz<br>72 seconds at 2 kHz<br>144 seconds at 1 kHz |
| OscillographyPreTriggerLength | Pre-trigger record length: 0.05 seconds minimum to a maximum of (record length – 0.05) seconds   |
| PTRatio                       | Phase A, B, C PT winding ratio   |
| PTRatioS                      | Synch PT winding ratio   |
| StationName                   | RTAC hostname  |
| ModuleID                      | Module identifier (module name in ACSELERATOR RTAC)  |
| module_name.Event_Trigger     | Boolean input that triggers waveform recording in the module and only responds to rising edges   |

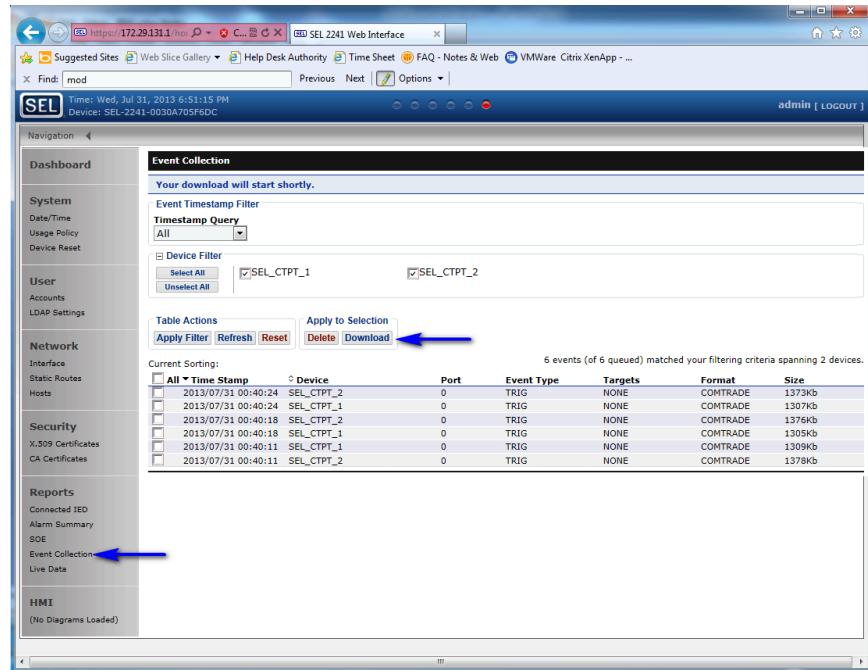**Figure 2.67 Waveform Record Retrieval**

## Viewing Waveforms and Event Files

Events files created by the SEL-2245-22 are in COMTRADE format. Event viewing software such as SYNCHROWAVE Event is required to open these files.

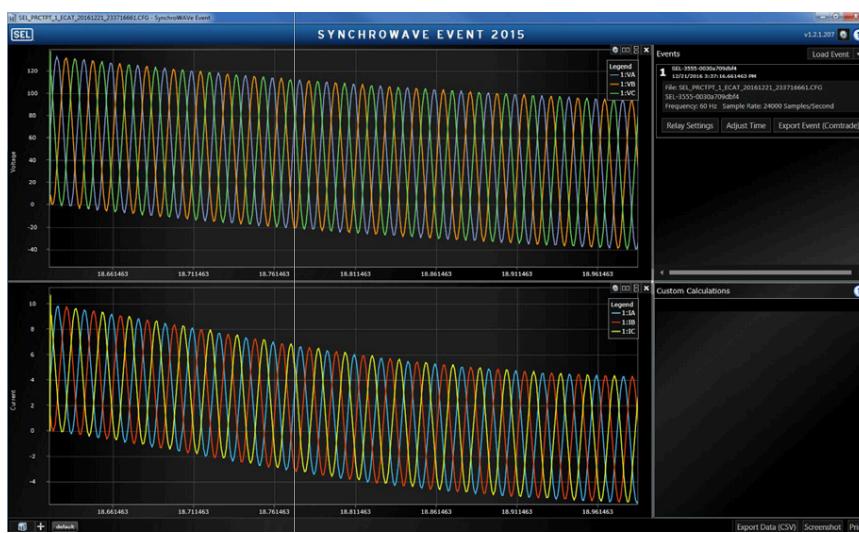

**Figure 2.68** SYNCHROWAVE Event Display Waveform

## Field Calibration Procedure

- Step 1. Turn the Axion with the SEL-2245-22 on and allow it to warm up for a few minutes.
- Step 2. Set the analog inputs for each analog channel to the desired range (e.g., 0–300 V), using the value on the **Physical High**, and **Physical Low** on the **Analog Input** tab. Set **Engineering Units High** equal to **Physical High** and **Engineering Units Low** equal to **Physical Low**.
- Step 3. Using a calibrated source, drive the signal line from the transducer end to the low value (for example, 0 V).
- Step 4. Record ten measurements from the analog input value, then calculate the average of the ten measurements by adding the ten values algebraically, and dividing the sum by ten. This is the actual low value (for example, 0.01 V).
- Step 5. Enter this value in **Physical Low**.
- Step 6. Drive the line to the high value (for example, 300 V).
- Step 7. Repeat Step 4.
- Step 8. This is the actual high value (for example, 300.1 V). Enter this value in **Physical High**.
- Step 9. Set **Engineering Units High** and **Engineering Units Low** to desired values (for example, 0 V to 300 V).

## SEL-2245-221 Low-Voltage (LEA) Monitoring Module

The SEL-2245-221 Low-Voltage (LEA) Monitoring Module (4 LEA) includes four low-voltage inputs with isolated returns for measuring ac signals. Refer to *Specifications in the SEL-2240 Axion Instruction Manual* for details on the input range. Use the **Insert** ribbon as shown in *Figure 2.73* to add an instance of this module to your project. The displayed pop-up will allow you to change the module name if necessary. When finished, click **Insert**.

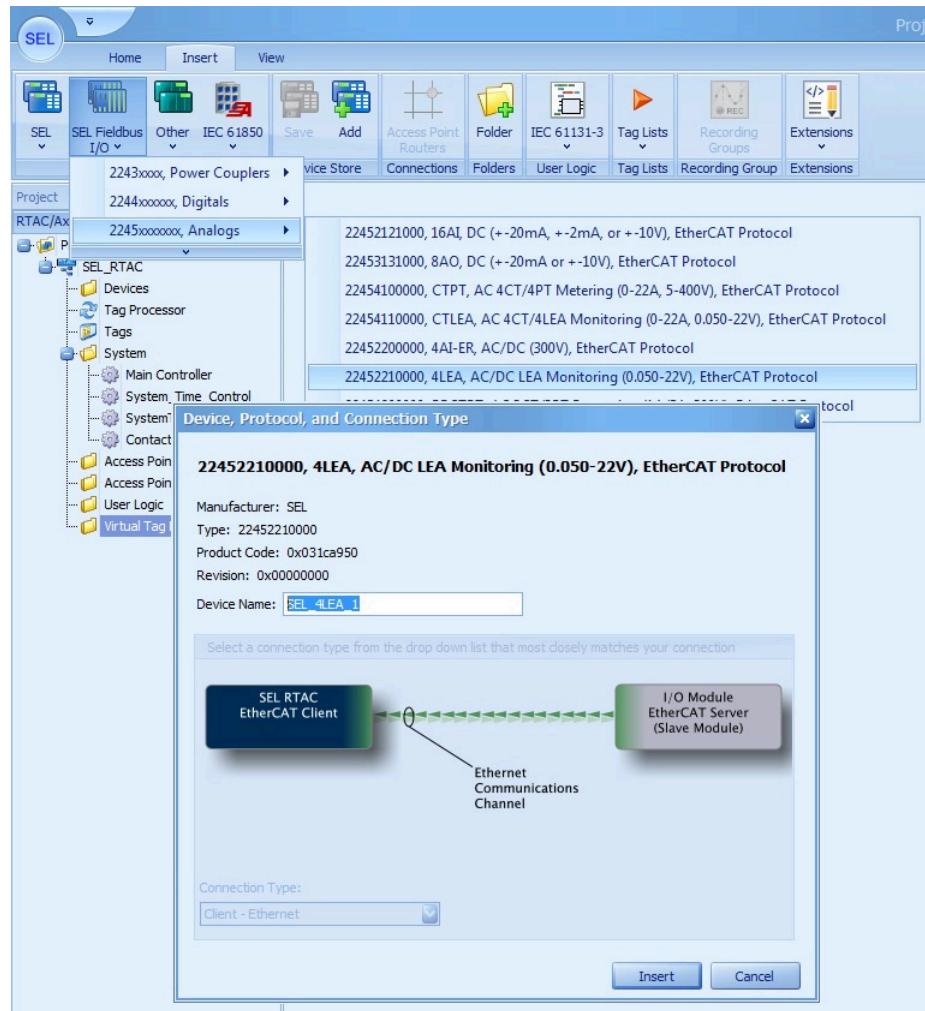


Figure 2.69 Insert an SEL-2245-221 4 LEA Module

## Configuring the LEA Monitoring Module

In the project tree, select the module to open the module settings window. Click the **Settings** tab to configure the module.

### NOTE

Only individual tags enabled per the LEA Monitoring Module are included in the EtherCAT message frame to reduce bandwidth. This allows for the use of more modules if fewer tags are needed. The EtherCAT connection tab shows the amount of bandwidth used by your current configuration.

| SEL_4LEA_1_ECAT  |                                |                   |                      |   |
|--|--------------------------------|-------------------|----------------------|---|
| 22452210000, 4LEA, AC/DC LEA Monitoring (0.050-22V), Client - Ethernet [EtherCAT Protocol] |                                |                   |                      |   |
| Properties   | Setting                        | Value             | Range                | Description   |
| Settings   | General                        |                   |                      |   |
|  | Input Mode                     | AC                | AC,DC                | AC/DC Inputs  |
|  | Phase Rotation                 | ABC               | ABC,ACB              | Phase rotation  |
|  | Phase ABC PT Ratio             | 35                | 1.00-10000.00        | Phase A, B, and C PT winding ratio                                      |
|  | Synch PT Ratio                 | 35                | 1.00-10000.00        | Synch PT winding ratio  |
|  | Voltage Configuration          | Wye               | Delta,Wye            | Voltage configuration   |
|  | Reference Angle                | Positive Sequence | Positive Sequence    | The reference angle for fundamental tags                                |
| Analog Inputs  | LEA                            |                   |                      |   |
|  | VA Voltage Magnitude Comp...   | 1                 | 0.500-50.000         | Magnitude Compensation for the VA Voltage Channel                       |
|  | VB Voltage Magnitude Comp...   | 1                 | 0.500-50.000         | Magnitude Compensation for the VB Voltage Channel                       |
|  | VC Voltage Magnitude Comp...   | 1                 | 0.500-50.000         | Magnitude Compensation for the VC Voltage Channel                       |
|  | VS Voltage Magnitude Comp...   | 1                 | 0.500-50.000         | Magnitude Compensation for the VS Voltage Channel                       |
|  | VA Voltage Angle Compens...    | 0                 | -10.00-10.00 (deg)   | Angle Compensation for the VA Voltage channel                           |
|  | VB Voltage Angle Compens...    | 0                 | -10.00-10.00 (deg)   | Angle Compensation for the VB Voltage channel                           |
|  | VC Voltage Angle Compens...    | 0                 | -10.00-10.00 (deg)   | Angle Compensation for the VC Voltage channel                           |
|  | VS Voltage Angle Compens...    | 0                 | -10.00-10.00 (deg)   | Angle Compensation for the VS Voltage channel                           |
| Diagnostics  | Oscillography                  |                   |                      |   |
|  | Oscillography Capture Rate     | 1                 | 1,2,4,8,24 (kilo...) | The capture rate of oscillography data                                  |
|  | Oscillography Record Length    | 4                 | 0.1 increments ...   | Total length of an oscillography capture                                |
|  | Oscillography Pre-trigger L... | 1                 | 0.01 increments...   | Pre-trigger length of an oscillography capture                          |
|  | Oscillography Channel Units    | Volts             | Volts,Amps           | Oscillography Channel Units for COMTRADE Configuration File             |
| Tags   | PMU                            |                   |                      |   |
|  | Station Name                   | SEL_4LEA_1_ECAT   | 1-255 (character)    | The PMU station name  |
|  | PMU Id                         | 1                 | 1-65534              | Identifier for this PMU   |
|  | Voltage Phasor Data Set        | Phase             | All,Phase,Positi...  | Voltage Phasor channels for PMU data set                                |
|  | Synchrophasors                 |                   |                      |   |
|  | Phase Voltage Angle Comp...    | 0                 | -179.99-180.00...    | Angle compensation for the A, B, and C phase voltage synchrophasor tags |
|  | Synch Voltage Angle Comp...    | 0                 | -179.99-180.00...    | Angle compensation for the Synch voltage synchrophasor tags             |

Figure 2.70 LEA Module Settings

| Setting                           | Configuration Options   |
|-----------------------------------|---|
| Phase Rotation                    | ABC or ACB  |
| Voltage Configuration             | Configure inputs for three-wire Delta or four-wire Wye  |
| Phase ABC PT Ratio                | 1.00–10000.00   |
| Synch PT Ratio                    | 1.00–10000.00   |
| Enable RMS Tags                   | Shows rms quantities in the <b>Analog Inputs</b> tab  |
| Enable Fundamental Tags           | Shows Fundamental quantities in the <b>Analog Inputs</b> tab  |
| Reference Angle                   | Select reference for Fundamental Vector quantities  |
| Oscillography Capture Rate        | Capture rate of oscillography data  |
| Oscillography Record Length       | Length of oscillography capture. Capture rate affects maximum record length (see <i>Specifications</i> in the <i>SEL-2240 Instruction Manual</i> ). |
| Oscillography Pre-Trigger Length  | Length of time before trigger to start capture  |
| VA Voltage Magnitude Compensation | 0.500 to 1.500  |
| VB Voltage Magnitude Compensation | 0.500 to 1.500  |

| Setting                           | Configuration Options |
|-----------------------------------|-----------------------|
| VC Voltage Magnitude Compensation | 0.500 to 1.500        |
| VS Voltage Magnitude Compensation | 0.500 to 1.500        |
| VA Voltage Angle Compensation     | -10.00 to 10.00       |
| VB Voltage Angle Compensation     | -10.00 to 10.00       |
| VC Voltage Angle Compensation     | -10.00 to 10.00       |
| VS Voltage Angle Compensation     | -10.00 to 10.00       |
| Phase Voltage Angle Compensation  | -179.99 to 180.00     |
| Synch Voltage Angle Compensation  | -179.99 to 180.00     |

**NOTE**

RMS voltage quantities have units of kilovolts and fundamental voltage quantities are in units of volts.


| SEL_4LEA_1_ECAT  |   |                               |          |           |
|--|---|-------------------------------|----------|-----------|
| Project1_3555 - 22452210000, 4LEA, AC/DC LEA Monitoring (0.050-22V), Client - Ethernet [EtherCAT Protocol] |   |                               |          |           |
| Properties<br>Settings<br>Analog Inputs<br>Diagnostics<br>Tags   | Drag a column header here to group by that column |                               |          |           |
|  | Enable  | Tag Name                      | Tag Type | Tag Alias |
|  | False <input checked="" type="checkbox"/>         | SEL_4LEA_1_ECAT.EVENT_TRIGGER | BOOL     |           |
|  | False   | SEL_4LEA_1_ECAT.VA_FUND       | vector_t |           |
|  | False   | SEL_4LEA_1_ECAT.VB_FUND       | vector_t |           |
| False  | SEL_4LEA_1_ECAT.VC_FUND                           | vector_t                      |          |           |
| False  | SEL_4LEA_1_ECAT.VS_FUND                           | vector_t                      |          |           |
| False  | SEL_4LEA_1_ECAT.VAB_FUND                          | vector_t                      |          |           |
| False  | SEL_4LEA_1_ECAT.VBC_FUND                          | vector_t                      |          |           |
| False  | SEL_4LEA_1_ECAT.VCA_FUND                          | vector_t                      |          |           |
| False  | SEL_4LEA_1_ECAT.V0_FUND                           | vector_t                      |          |           |
| False  | SEL_4LEA_1_ECAT.V1_FUND                           | vector_t                      |          |           |
| False  | SEL_4LEA_1_ECAT.V2_FUND                           | vector_t                      |          |           |
| False  | SEL_4LEA_1_ECAT.VS_FREQ_FUND                      | REAL                          |          |           |
| False  | SEL_4LEA_1_ECAT.FREQ_FUND                         | REAL                          |          |           |
| False  | SEL_4LEA_1_ECAT.VS_FREQ_VALID_FUND                | BOOL                          |          |           |
| False  | SEL_4LEA_1_ECAT.FREQ_VALID_FUND                   | BOOL                          |          |           |
| False  | SEL_4LEA_1_ECAT.TIMESTAMP_FUND                    | timeStamp_t                   |          |           |
| False  | SEL_4LEA_1_ECAT.VA_PM                             | CMV                           |          |           |
| False  | SEL_4LEA_1_ECAT.VB_PM                             | CMV                           |          |           |
| False  | SEL_4LEA_1_ECAT.VC_PM                             | CMV                           |          |           |
| False  | SEL_4LEA_1_ECAT.VS_PM                             | CMV                           |          |           |
| False  | SEL_4LEA_1_ECAT.V0_PM                             | CMV                           |          |           |
| False  | SEL_4LEA_1_ECAT.V1_PM                             | CMV                           |          |           |
| False  | SEL_4LEA_1_ECAT.V2_PM                             | CMV                           |          |           |
| False  | SEL_4LEA_1_ECAT.FREQ_PM                           | MV                            |          |           |
| False  | SEL_4LEA_1_ECAT.ROCOF_PM                          | MV                            |          |           |
| False  | SEL_4LEA_1_ECAT.VA_RMS                            | REAL                          |          |           |
| False  | SEL_4LEA_1_ECAT.VB_RMS                            | REAL                          |          |           |
| False  | SEL_4LEA_1_ECAT.VC_RMS                            | REAL                          |          |           |
| False  | SEL_4LEA_1_ECAT.VS_RMS                            | REAL                          |          |           |
| False  | SEL_4LEA_1_ECAT.VAB_RMS                           | REAL                          |          |           |
| False  | SEL_4LEA_1_ECAT.VBC_RMS                           | REAL                          |          |           |
| False  | SEL_4LEA_1_ECAT.VCA_RMS                           | REAL                          |          |           |
| False  | SEL_4LEA_1_ECAT.VS_FREQ_RMS                       | REAL                          |          |           |
| False  | SEL_4LEA_1_ECAT.FREQ_RMS                          | REAL                          |          |           |
| False  | SEL_4LEA_1_ECAT.VS_FREQ_VALID_RMS                 | BOOL                          |          |           |
| False  | SEL_4LEA_1_ECAT.FREQ_VALID_RMS                    | BOOL                          |          |           |
| False  | SEL_4LEA_1_ECAT.TIMESTAMP_RMS                     | timeStamp_t                   |          |           |
| False  | SEL_4LEA_1_ECAT.QUALITY                           | quality_t                     |          |           |

Figure 2.71 LEA Tag Enable Settings

| Analog Input | Description  |
|--------------|--|
| Enable       | When True, this tag will be included when the program is compiled. When False, it will not be included. Disable all tags not in use to optimize processing resources. If there are too many analog data on the EtherCAT backplane, you will receive a message that the bandwidth has been exceeded (shown in <i>Figure 2.72</i> ). |
| Tag Name     | Programming designation of a resource.   |
| Tag Alias    | Input an alternative name to use in place of the Tag Name while programming (for example, SEL_CTLEA_1_ECAT.IA_FUND could be replaced by IA_Bus1).  |

**NOTE**

If you receive the message "EtherCAT Bandwidth Exceeded," you will need to disable a number of RMS or Fundamental tags on one or more LEA modules to reduce the bandwidth in use.

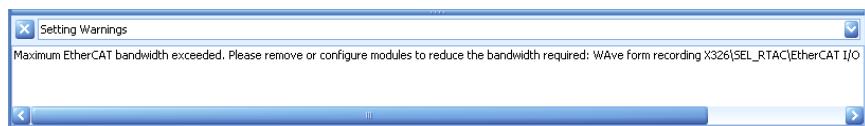

**Figure 2.72 EtherCAT Bandwidth Exceeded**

## LEA Module Simple Tags

The LEA measurements are in a simplified format referred to as "Simple Tags." Complex measured values (CMV) display as the vector\_t data subtype containing the angle and magnitude quantities. Measured values (MV) display as the REAL numeric type.

TimeStamp\_t and quality\_t tags are still available at the module level and automatically insert when mapping a Simple Tag to another tag type in the Tag Processor. Switching to the code view in the Tag Processor allows you to modify the default quality and time source if desired.

## Waveform Recording

Waveforms are recorded in COMTRADE format with an accompanying configuration file. File names are stored in the following format:

StationName\_ModuleID\_Protocol\_YYYYMMDD\_HHMMSSMSC.yyy

where:

yyy is one of two file name extensions: CFG for configuration files or DAT for data files.

Protocol is the name of the protocol used (e.g., ECAT).

StationName is defined by the RTAC hostname, which is configurable through the web interface. When the RTAC hostname is changed, the EtherCAT network must be disabled and re-enabled for the new StationName to appear in the file name of waveform records.

A maximum of 1024 COMTRADE events can be stored in the RTAC, with the oldest record being deleted when a new event is triggered and 1024 events are exceeded. The SEL-2245-221 can record two back-to-back events. A new record can be triggered as soon as the present one has finished recording. A trigger condition that occurs before the current recording finishes is ignored. These records are first stored locally to prevent data loss and then transferred to the RTAC for downloading via the built-in web server.

## Inputs

The following voltage and current inputs are recorded in the COMTRADE files generated by the SEL-2245-221 modules:

- IA, IB, IC, IN
- VA, VB, VC, VS (Wye)
- VAB, VBC, VCA (Delta)

### NOTE

Waveform settings are configured in the individual LEA module settings tabs.

### NOTE

Oscillography Pre-Trigger Length is relative to when the module receives the trigger through EtherCAT. Two or more processing intervals of the configured RTAC task cycle rate should be added to the desired pre-trigger length to ensure all desired data are captured.

**Table 2.41 Waveform Settings**

| Setting                       | Description  |
|-------------------------------|--|
| VoltageInputConfiguration     | Voltage input configuration  |
| FrequencyNominal              | Nominal system frequency   |
| OscillographyCaptureRate      | Sampling rate:<br>1, 2, 4, 8, 24 kHz; software-selectable  |
| OscillographyRecordLength     | Total record length:<br>6 seconds at 24 kHz<br>18 seconds at 8 kHz<br>36 seconds at 4 kHz<br>72 seconds at 2 kHz<br>144 seconds at 1 kHz |
| OscillographyPreTriggerLength | Pre-trigger record length: 0.05 seconds minimum to a maximum of (record length – 0.05) seconds   |
| PTRatio                       | Phase A, B, C PT winding ratio   |
| PTRatioS                      | Synch PT winding ratio   |
| StationName                   | RTAC hostname  |
| ModuleID                      | Module identifier (module name in ACCELERATOR RTAC)  |
| module_name.Event_Trigger     | Boolean input that triggers waveform recording in the module and only responds to rising edges   |

## Downloading Events Via the Web Interface

### NOTE

To reduce bandwidth, only individually enabled LEA module tags are included in the EtherCAT message frame. This allows the use of more LEA modules if fewer tags are needed. The EtherCAT connection tab shows the amount of bandwidth used by your current configuration.

- Step 1. Connect to the RTAC through one of the Ethernet ports or the USB-B interface.
- Step 2. Open a web browser.
- Step 3. Enter **HTTPS://** followed by the RTAC Ethernet address.
- Step 4. Log in to the RTAC web interface.
- Step 5. Click **Event Collection** under **Reports** in the navigation pane on the left.
- Step 6. Sort events by selecting a time frame from **Timestamp Query** and the **Device Filter**.
- Step 7. Select the desired events and click **Download**. You can also delete events by clicking **Delete**.

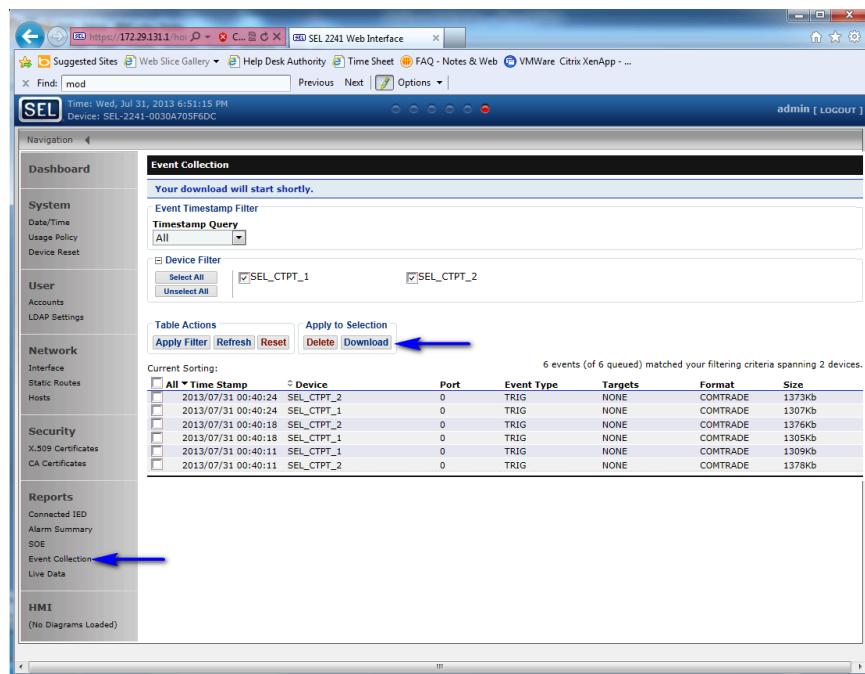


Figure 2.73 Waveform Record Retrieval

## Viewing Waveforms and Event Files

Event files created by the SEL-2245-221 are in COMTRADE format. Event viewing software such as SYNCHROWAVE Event is required to open these files.

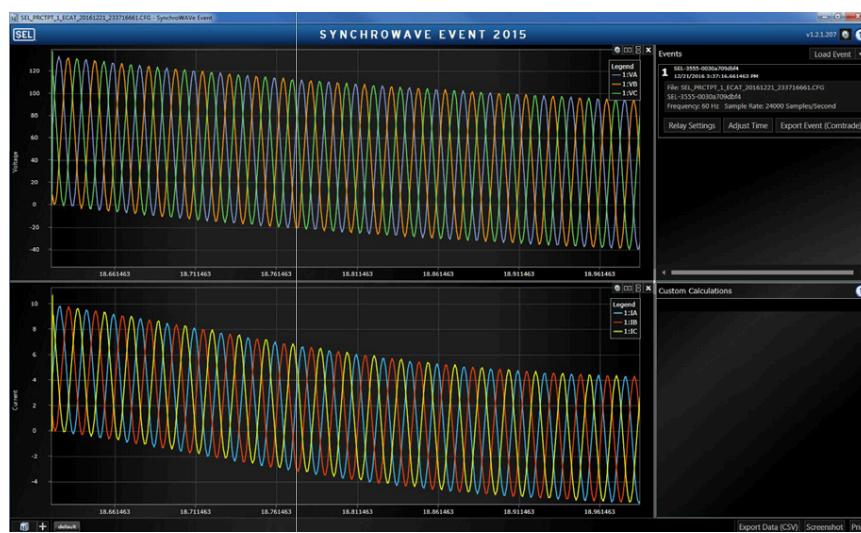


Figure 2.74 SYNCHROWAVE Event Display Waveform

## SEL-2245-3 Eight DC Analog Output Module

The SEL-2245-3 DC Analog Output Module has eight sourcing dc outputs. Each output is user-configurable via a software switch between  $\pm 20$  mA or  $\pm 10$  Vdc. Use the **Insert** ribbon as shown in *Figure 2.79* to add an instance of this module to your project. The displayed pop-up will allow you to change the module name if necessary. When finished, click **Insert**.

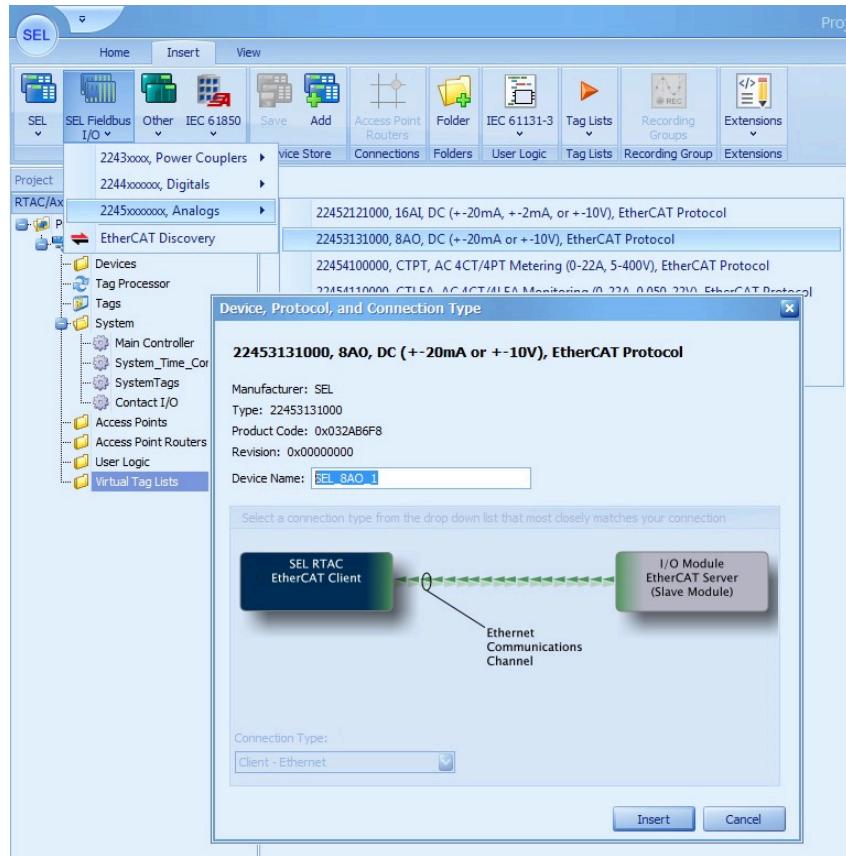


Figure 2.75 Insert an SEL-2245-3 DC Analog Output Module

## Configuring the DC Analog Output Module

In the project tree, select the module to open the **Analog Outputs** dialog window. Go to the **Analog Outputs** tab to configure the analog output parameters. See *Specifications* in the *SEL-2240 Instruction Manual* for output specifications.

### Enable

When TRUE, this tag will be included when the program is compiled. When FALSE, it will not be included. Disable all tags not in use to optimize processing resources.

### Tag Name

Programming designation of a resource.

### Tag Alias

Input an alternative name to use in place of the Tag Name while programming (for example, SEL\_8AO\_1\_ECAT.AO\_VALUE\_001 could be replaced by "Conveyor\_Speed").

### Analog Type

Software switch for selecting voltage and current output modes.

### Engineering Units High and Engineering Units Low

The real-world quantities that the analog signal represents: temperature, pressure, speed, etc.

### Physical High and Physical Low

The high and low signal levels produced at the outputs in milliamperes (mA) or volts.

**NOTE:** The Analog Output is not restricted from driving above or below these values. To limit the output level, see Clamp Enable.

Example: Settings for a Variable Frequency Drive (VFD) connected to a conveyor with a maximum speed of 100 Feet Per Minute (FPM) based upon a 0 to +10 Vdc voltage reference would be as follows:

Engineering Units High: 100

Engineering Unit Low: 0

Physical High: 10

Physical Low: 0

The software will use the Engineering Units and Physical to create a slope equation to relate the real conveyor speed to a voltage for the VFD. In this example, setting AO\_Value\_xxx to 60 FPM will cause Output xxx to drive to +6 Vdc. However, if Clamp\_ENABLE is FALSE and AO\_VALUE\_xxx is set to -90 FPM, the Analog Output will drive to -9 Vdc.

### Safe Output

State applied to output when the module loses communication with the EtherCAT client for 100 ms or more. Options are **Last Value** or **User Defined**.

### User Safe Output

Output is driven to this value when Safe Output is User Defined and the module loses EtherCAT communication for 100 ms or more. The output will be driven to this value even if it is outside the optional Clamp High or Clamp Low settings. This value is in engineering units.

### Clamp Enable

Enables or disables software limits on output values.

### Clamp Low

Lower limit on output when Clamp Enable is True. Value is in engineering units.

#### Clamp High

Upper limit on output when Clamp Enable is True. Value is in engineering units.

#### Comment

Editable description field.

#### Input TAGS

|                  |  |
|------------------|--|
| AO_VALUE_xxx     | Output value of the analog output in engineering units.  |
| RAMP_ENABLE_xxx  | Boolean input to enable ramping on an output channel.  |
| RAMP_HOLD_xxx    | Boolean input to hold the output at the current value during a ramp operation.   |
| RAMP_TARGET_xxx  | Value for the output to ramp to from AO_VALUE_xxx in engineering units.  |
| RAMP_TIME_xxx    | Number of milliseconds to ramp from VALUE_xxx to RAMP_TARGET_xxx.  |
| RAMP_TRIGGER_xxx | Boolean rising-edge trigger that latches AO_VALUE_xxx, RAMP_TARGET_xxx, and RAMP_TIME_xxx; begins or restarts ramp operation from VALUE_xxx. |

#### Output TAGS

|                     |  |
|---------------------|--|
| AO_VALUE_ACTUAL_xxx | Actual value being output after ramping and clamping functions are applied. Value is in engineering units. |
| RAMPING_xxx         | Boolean output indicating a ramp is in progress but the output has not reached RAMP_TARGET_xxx.            |
| OUTPUT_CLAMPING_xxx | Boolean output indicating AO_VALUE_xxx is outside Clamp High and Clamp Low settings and is being clamped.  |

## Field Calibration Procedure

- Step 1. Set the Physical High and Physical Low values to the desired output levels (e.g., +10 V and -10 V).
- Step 2. Set Engineering Units High equal to Physical High and Engineering Units Low equal to Physical Low.
- Step 3. Force AO\_VALUE\_xxx to the High value (+10 V).
- Step 4. Record the value displayed on your calibrated meter. This will be MEAS\_high.
- Step 5. Force AO\_VALUE\_xxx to the Low value (-10 V).
- Step 6. Record the value displayed on your calibrated meter. This will be MEAS\_low.
- Step 7. Set Physical High value to (Physical High – MEAS\_high + Physical High).
- Step 8. Set Physical Low to (Physical Low – MEAS\_low + Physical Low).
- Step 9. Set the Engineering High and Low units to the desired range for your project.

## Ramping Functions

If RAMP\_ENABLE\_xxx is TRUE and there is a rising edge on RAMP\_TRIGGER\_xxx, RAMP\_TARGET\_xxx, RAMP\_TIME\_xxx, and AO\_VALUE\_xxx are latched and the ramp process begins.

The output ramps from AO\_VALUE\_xxx to RAMP\_TARGET\_xxx over the time interval of RAMP\_TIME\_xxx.

If RAMP\_ENABLE\_xxx becomes FALSE, the output will return to the AO\_VALUE\_xxx that was latched.


If RAMP\_HOLD\_xxx becomes TRUE, the ramp timer is paused and the output will hold the current value until RAMP\_HOLD\_xxx or RAMP\_ENABLE\_xxx becomes FALSE.

When RAMP\_TARGET\_xxx is reached, the output will remain at that value until RAMP\_ENABLE\_xxx becomes FALSE.

If a rising edge is detected on RAMP\_TRIGGER\_xxx during the ramp process, RAMP\_TARGET\_xxx, RAMP\_TIME\_xxx, and AO\_VALUE\_xxx are latched and the ramp process restarts with the new values.

RAMP\_TRIGGER\_xxx is ignored if RAMP\_HOLD\_xxx is TRUE.

*Figure 2.76* is an example of RAMP\_HOLD\_xxx asserting and deasserting during a ramp process.

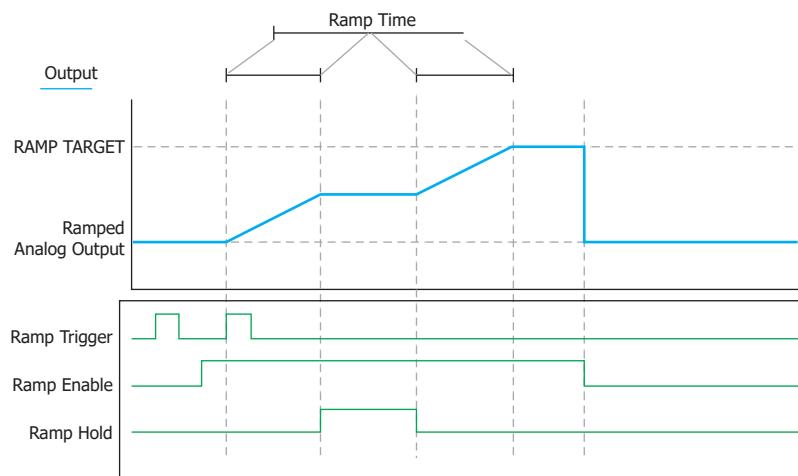

**Figure 2.76 Hold During a Ramp Process**

*Figure 2.77* is an example of retriggering a ramp operation.

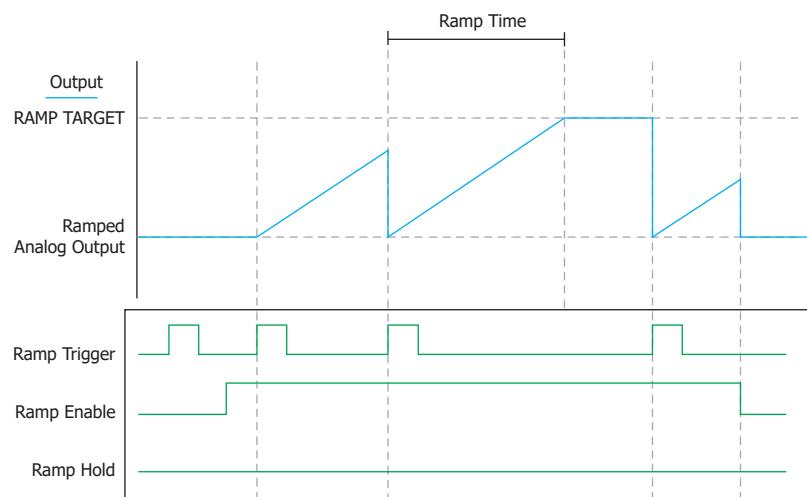


Figure 2.77 Retriggering a Ramp During a Ramp Process

## SEL-2245-4 AC Metering Module

The SEL-2245-4 AC Metering Module (CTPT) includes four Potential Transformer inputs and four Current Transformer inputs with isolated returns for measuring ac signals. Refer to *Specifications in the SEL-2240 Axion Instruction Manual* for details on the input range. Use the **Insert** ribbon as shown in *Figure 2.82* to add an instance of this module to your project. The displayed pop-up will allow you to change the module name if necessary. When finished, click on **Insert**.

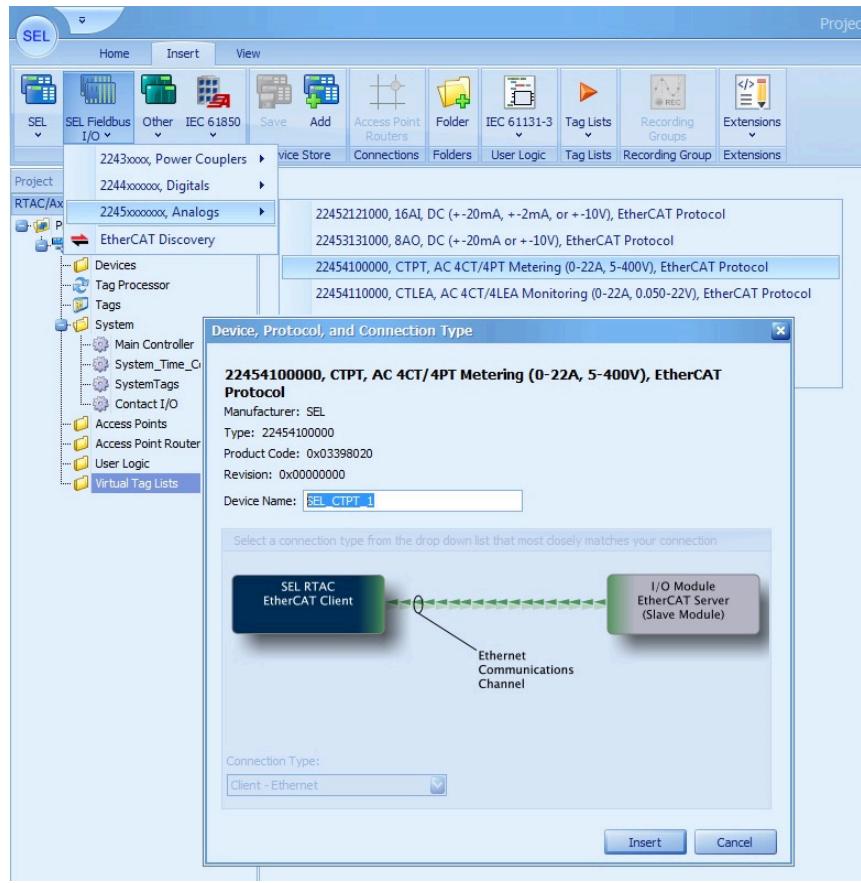


Figure 2.78 Insert an SEL-2245-4 CT/PT Analog Input Module

## Configuring the AC Analog Input Module

In the project tree, select the module to open the module settings dialog window. Click on the **Settings** tab to configure the module.

| SEL_CTPT_1_ECAT   |                                |                   |                      |   |
|---|--------------------------------|-------------------|----------------------|---|
| 22454100000, CTPT, AC 4CT/4PT Metering (0-22A, 5-400V), Client - Ethernet [EtherCAT Protocol] |                                |                   |                      |   |
| Properties  | Setting                        | Value             | Range                | Description   |
| Settings  | General                        |                   |                      |   |
|   | Phase ABC CT Ratio             | 250               | 1.00-50000.00        | Phase A, B, and C CT winding ratio                                      |
|   | Neutral CT Ratio               | 250               | 1.00-50000.00        | Neutral CT winding ratio  |
|   | Voltage Configuration          | Wye               | Delta,Wye            | Voltage configuration   |
|   | Phase ABC PT Ratio             | 35                | 1.00-10000.00        | Phase A, B, and C PT winding ratio                                      |
|   | Synch PT Ratio                 | 35                | 1.00-10000.00        | Synch PT winding ratio  |
|   | Phase Rotation                 | ABC               | ABC,ACB              | Phase rotation  |
|   | Enable RMS Tags                | True              | True,False           | Enables the creation of the RMS tags                                    |
|   | Enable Fundamental Tags        | False             | True,False           | Enables the creation of the fundamental tags                            |
|   | Enable Synchrophasor Tags      | False             | True,False           | Enables the creation of the synchrophasor tags                          |
|   | Reference Angle                | Positive Sequence | Positive Sequence    | The reference angle for fundamental tags                                |
|   | Oscillography                  |                   |                      |   |
|   | Oscillography Record Length    | 1                 | 0.1 increments ...   | Total length of an oscillography capture                                |
|   | Oscillography Pre-trigger L... | 0.05              | 0.01 increments...   | Pre-trigger length of an oscillography capture                          |
|   | Oscillography Capture Rate     | 8                 | 1,2,4,8,24 (kilo...) | The capture rate of oscillography data                                  |
|   | PMU                            |                   |                      |   |
|   | Station Name                   | SEL_CTPT_1_ECAT   | 1-255 (characte...   | The PMU station name  |
|   | PMU Id                         | 1                 | 1-65534              | Identifier for this PMU   |
|   | Voltage Phasor Data Set        | Phase             | All,Phase,Positi...  | Voltage Phasor channels for PMU data set                                |
|   | Current Phasor Data Set        | Phase             | All,Phase,Positi...  | Current Phasor channels for PMU data set                                |
|   | Synchrophasors                 |                   |                      |   |
|   | Phase Voltage Angle Comp...    | 0                 | -179.99-180.00...    | Angle compensation for the A, B, and C phase voltage synchrophasor tags |
|   | Synch Voltage Angle Comp...    | 0                 | -179.99-180.00...    | Angle compensation for the Synch voltage synchrophasor tags             |
|   | Phase Current Angle Comp...    | 0                 | -179.99-180.00...    | Angle compensation for the A, B, and C phase current synchrophasor tags |
|   | Neutral Current Angle Com...   | 0                 | -179.99-180.00...    | Angle compensation for the neutral current synchrophasor tags           |

Figure 2.79 CT/PT Module Settings

| Setting                          | Configuration Options   |
|----------------------------------|---|
| Phase Rotation                   | ABC or ACB  |
| Voltage Configuration            | Configure inputs for three-wire Delta or four-wire Wye  |
| Phase ABC CT Ratio               | 1.00–50000.00   |
| Neutral CT Ratio                 | 1.00–50000.00   |
| Phase ABC PT Ratio               | 1.00–10000.00   |
| Synch PT Ratio                   | 1.00–10000.00   |
| Enable RMS Tags                  | Shows rms quantities in the <b>Analog Inputs</b> tab  |
| Enable Fundamental Tags          | Shows Fundamental quantities in the <b>Analog Inputs</b> tab                                      |
| Enable Synchrophasor Tags        | Shows Synchrophasor quantities in the <b>Analog Inputs</b> tab                                    |
| Reference Angle                  | Select reference for Fundamental Vector quantities  |
| Oscillography Capture Rate       | Capture rate of oscillography data  |
| Oscillography Record Length      | Length of oscillography capture. Capture rate affects maximum record length (see Specifications). |
| Oscillography Pre-Trigger Length | Length of time before trigger to start capture  |

## **NOTE**

In firmware R141 or later, only individual tags enabled per AC Metering Module are included in the EtherCAT message frame to reduce bandwidth. This allows the use of more AC Metering Modules if fewer tags are needed. The EtherCAT connection tab shows the amount of bandwidth used by your current configuration. Prior to R141, enabling the RMS, Fundamental, or Synchrophasor tag streams added all tags of each stream to the EtherCAT bandwidth.

## NOTE

RMS voltage quantities have units of kilovolts and Fundamental voltage quantities are in units of volts.


| Properties    | Drag a column header here to group by that column |                                    |             |           |         |
|---------------|---|------------------------------------|-------------|-----------|---------|
| Settings      | Enable  | Tag Name                           | Tag Type    | Tag Alias | Comment |
| Analog Inputs | False   | SEL_CPTP_1_ECAT.EVENT_TRIGGER      | BOOL        |           |         |
| Diagnostics   | False   | SEL_CPTP_1_ECAT.FREQ_FUND          | REAL        |           |         |
| Tags          | False   | SEL_CPTP_1_ECAT.FREQ_VALID_FUND    | BOOL        |           |         |
|               | False   | SEL_CPTP_1_ECAT.VS_FREQ_FUND       | REAL        |           |         |
|               | False   | SEL_CPTP_1_ECAT.VS_FREQ_VALID_FUND | BOOL        |           |         |
|               | False   | SEL_CPTP_1_ECAT.IA_FUND            | vector_t    |           |         |
|               | ▶ False   | SEL_CPTP_1_ECAT.IB_FUND            | vector_t    |           |         |
|               | False   | SEL_CPTP_1_ECAT.IC_FUND            | vector_t    |           |         |
|               | False   | SEL_CPTP_1_ECAT.IN_FUND            | vector_t    |           |         |
|               | False   | SEL_CPTP_1_ECAT.VA_FUND            | vector_t    |           |         |
|               | False   | SEL_CPTP_1_ECAT.VAB_FUND           | vector_t    |           |         |
|               | False   | SEL_CPTP_1_ECAT.VB_FUND            | vector_t    |           |         |
|               | False   | SEL_CPTP_1_ECAT.VBC_FUND           | vector_t    |           |         |
|               | False   | SEL_CPTP_1_ECAT.VC_FUND            | vector_t    |           |         |
|               | False   | SEL_CPTP_1_ECAT.VCA_FUND           | vector_t    |           |         |
|               | False   | SEL_CPTP_1_ECAT.VS_FUND            | vector_t    |           |         |
|               | False   | SEL_CPTP_1_ECAT.IO_FUND            | vector_t    |           |         |
|               | False   | SEL_CPTP_1_ECAT.II_FUND            | vector_t    |           |         |
|               | False   | SEL_CPTP_1_ECAT.I2_FUND            | vector_t    |           |         |
|               | False   | SEL_CPTP_1_ECAT.V0_FUND            | vector_t    |           |         |
|               | False   | SEL_CPTP_1_ECAT.V1_FUND            | vector_t    |           |         |
|               | False   | SEL_CPTP_1_ECAT.V2_FUND            | vector_t    |           |         |
|               | False   | SEL_CPTP_1_ECAT.TIMESTAMP_FUND     | timeStamp_t |           |         |
|               | True  | SEL_CPTP_1_ECAT.QUALITY            | quality_t   |           |         |

**Figure 2.80** CT/PT Tag Enable Settings

| Analog Input | Description   |
|--------------|---|
| Enable       | When True, this tag will be included when the program is compiled. When False it will not be included. Disable all tags not in use to optimize processing resources. If there are too many analog data on the EtherCAT backplane, you will receive a message that the bandwidth has been exceeded (shown in <i>Figure 2.81</i> ). |
| Tag Name     | Programming designation of a resource.  |
| Tag Alias    | Input an alternative name to use in place of the Tag Name while programming (for example, SEL_CTPT_1_ECAT.IA_FUND could be replaced by IA_Bus1).  |

### NOTE

If you receive the message "EtherCAT Bandwidth Exceeded," you will need to disable a number of RMS, Fundamental, or Synchrophasor tags on one or more CT/PT modules to reduce the bandwidth in use.

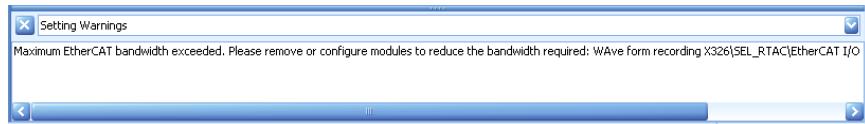


**Figure 2.81 EtherCAT Bandwidth Exceeded**

## AC Module Simple Tags

The CT/PT measurements are in a simplified format referred to as "Simple Tags." Complex measured values (CMV) display as the vector\_t data subtype containing the angle and magnitude quantities. Measured values (MV) display as the REAL numeric type.

TimeStamp\_t and quality\_t tags are still available at the module level and automatically insert when mapping a Simple Tag to another tag type in the Tag Processor. Switching to the code view in the Tag Processor will allow you to modify the default quality and time source if desired.

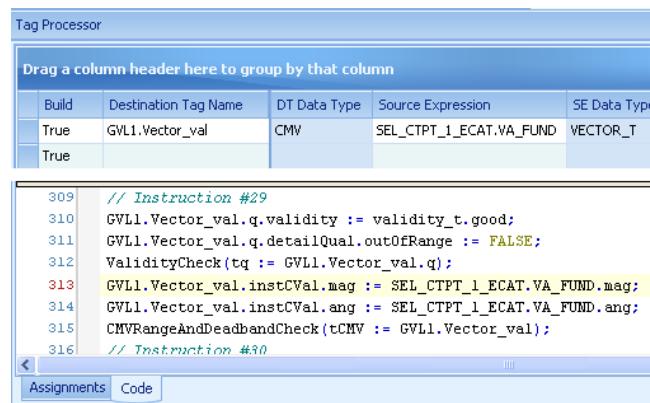

**Figure 2.82 CT/PT Simple Tag to Complex Tag Mapping**

## Waveform Recording

Waveforms will be recording in COMTRADE format with an accompanying configuration file. File names are stored as follows:

StationName\_ModuleID\_Protocol\_YYYYMMDD\_HHMMSSMSC.yyy

where:

yyy is one of two file name extensions: CFG for configuration files or DAT for data files.

Protocol is the name of the protocol used (e.g., ECAT).

StationName is defined by the RTAC hostname, which is configurable through the web interface. When the RTAC hostname is changed, the EtherCAT network must be disabled and re-enabled for the new StationName to appear in the file name of waveform records.

A maximum of 1024 COMTRADE events can be stored in the RTAC with the oldest record being deleted when a new event is triggered and 1024 is exceeded. The SEL-2245-4 can record two back-to-back events. A new record can be triggered as soon as the current one has finished recording. A trigger condition that occurs before the current recording finishes is ignored. These records are first stored locally to prevent data loss and then transferred to the RTAC for downloading via the built-in web server.

## Inputs

The following voltage and current inputs are recorded in the COMTRADE files generated by the SEL-2245-4 modules:

- IA, IB, IC, IN
- VA, VB, VC, VS (Wye)
- VAB, VBC, VCA (Delta)

### NOTE

Waveform settings are configured in the individual CT/PT module settings tabs.

### NOTE

Oscillography Pre-Trigger Length is relative to when the module receives the trigger through EtherCAT. Two or more processing intervals of the configured RTAC task cycle rate should be added to the desired pre-trigger length to ensure all desired data are captured.

**Table 2.42 Waveform Settings**

| Setting                       | Description  |
|-------------------------------|--|
| VoltageInputConfiguration     | Voltage input configuration  |
| FrequencyNominal              | Nominal system frequency   |
| OscillographyCaptureRate      | Sampling rate:<br>1, 2, 4, 8, 24 kHz; software-selectable  |
| OscillographyRecordLength     | Total record length:<br>6 seconds at 24 kHz<br>18 seconds at 8 kHz<br>36 seconds at 4 kHz<br>72 seconds at 2 kHz<br>144 seconds at 1 kHz |
| OscillographyPreTriggerLength | Pre-trigger record length: 0.05 seconds minimum to a maximum of (record length – 0.05) seconds   |
| CTRatio                       | A-, B-, and C-phase CT winding ratio   |
| CTRatioN                      | Neutral CT winding ratio   |
| PTRatio                       | Phase A, B, C PT winding ratio   |
| PTRatioS                      | Synch PT winding ratio   |

| Setting                   | Description   |
|---------------------------|---|
| StationName               | RTAC hostname   |
| ModuleID                  | Module identifier (module name in ACCELERATOR RTAC)   |
| module_name.Event_Trigger | This is a Boolean input that triggers waveform recording in the module and only responds to rising edges. |

## Downloading Events Via the Web Interface

### NOTE

In firmware R140 or later, only individual tags enabled per AC Protection Module are included in the EtherCAT message frame to reduce bandwidth. This allows the use of more AC Protection Modules if fewer tags are needed. The EtherCAT connection tab shows the amount of bandwidth used by your current configuration. Prior to R140, enabling the RMS, Fundamental, or Synchrophasor tag streams added all tags of each stream to the EtherCAT bandwidth.

- Step 1. Connect to the RTAC through one of the Ethernet ports or the USB-B interface.
- Step 2. Open a web browser.
- Step 3. Enter **https://** followed by the RTAC Ethernet address.
- Step 4. Log in to the RTAC web interface.
- Step 5. Click on **Event Collection** under **Reports** in the navigation pane on the left.
- Step 6. Sort events by selecting a time frame from **Timestamp Query** and the **Device Filter**.
- Step 7. Select the desired events and click **Download**.
- Step 8. You can also delete events by clicking **Delete**.

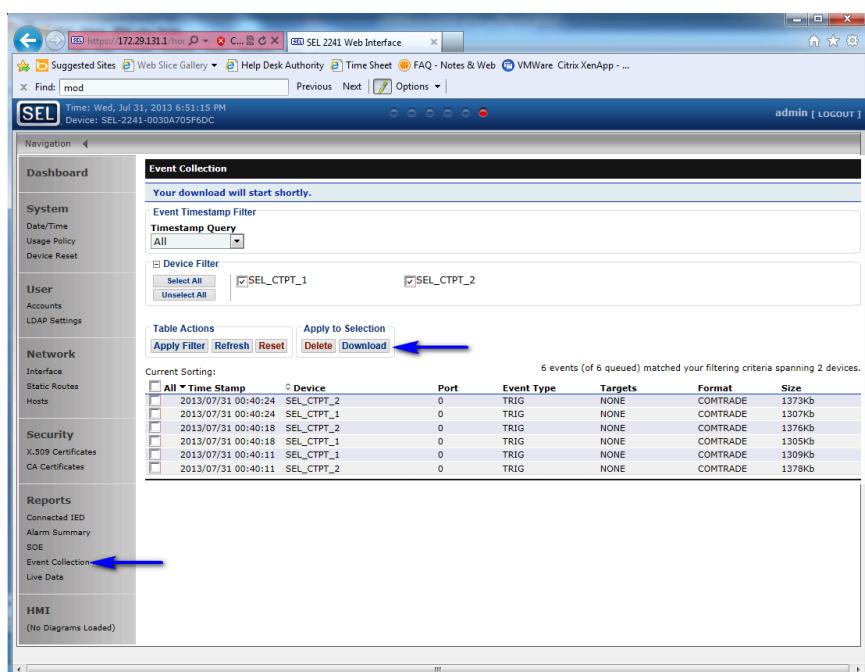


Figure 2.83 Waveform Record Retrieval

## Viewing Waveforms and Event Files


Events files created by the SEL-2245-4 are in COMTRADE format. Event viewing software such as SYNCHROWAVE Event is required to open these files.



Figure 2.84 SYNCHROWAVE Event Display Waveform

## SEL-2245-411 Standard Current and Low-Voltage (LEA) Monitoring Module

The SEL-2245-411 Standard Current and Low-Voltage (LEA) Monitoring Module (4 CT/4 LEA) includes four low-voltage inputs and four current transformer inputs with isolated returns for measuring ac signals. Refer to *Specifications in the SEL-2240 Axion Instruction Manual* for details on the input range. Use the **Insert** ribbon as shown in *Figure 2.85* to add an instance of this module to your project. The displayed pop-up will allow you to change the module name if necessary. When finished, click **Insert**.

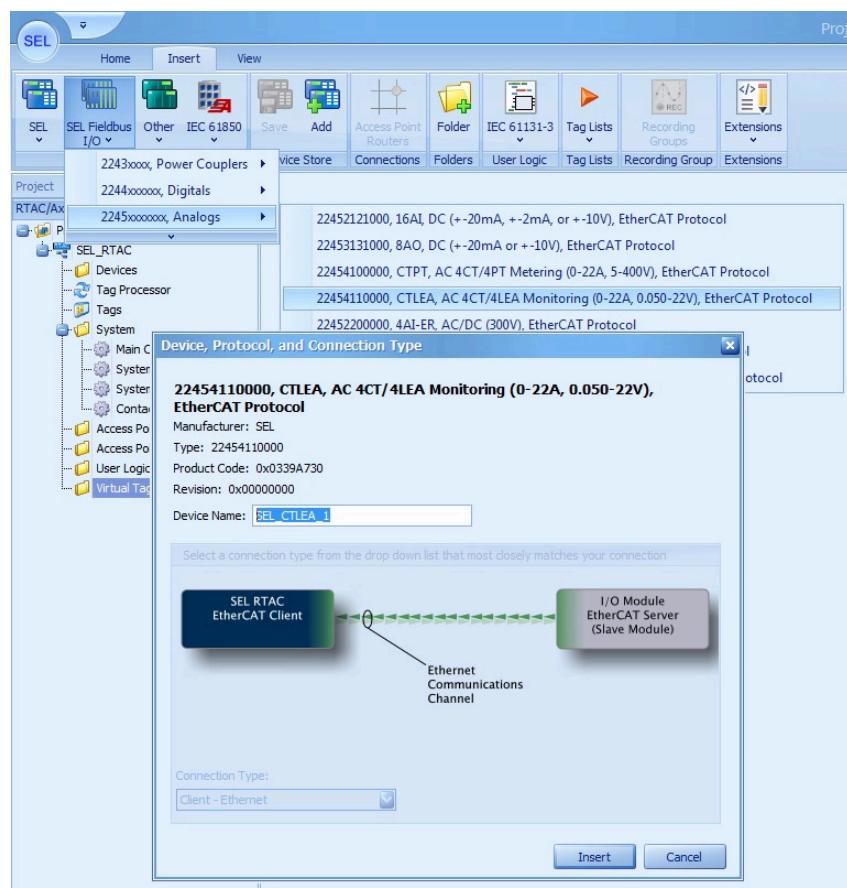

**Figure 2.85 Insert an SEL-2245-411 4 CT/4 LEA Module**

## Configuring the CT/LEA Monitoring Module

In the project tree, select the module to open the module settings window. Click the **Settings** tab to configure the module.

### NOTE

Only individual tags enabled per the CT/LEA Monitoring Module are included in the EtherCAT message frame to reduce bandwidth. This allows for the use of more modules if fewer tags are needed. The EtherCAT connection tab shows the amount of bandwidth used by your current configuration.

| SEL_CTLEA_1_ECAT   |                                |                   |                     |   |
|--|--------------------------------|-------------------|---------------------|---|
| 22454110000, CTLEA, AC 4CT/4LEA Monitoring (0-22A, 0.050-22V), Client - Ethernet [EtherCAT Protocol] |                                |                   |                     |   |
| Properties   | Setting                        | Value             | Range               | Description   |
| Settings   | General                        |                   |                     |   |
|  | Phase ABC CT Ratio             | 250               | 1.00-50000.00       | Phase A, B, and C CT winding ratio                                      |
|  | Neutral CT Ratio               | 250               | 1.00-50000.00       | Neutral CT winding ratio  |
|  | Voltage Configuration          | Wye               | Delta,Wye           | Voltage configuration   |
|  | Phase ABC PT Ratio             | 35                | 1.00-10000.00       | Phase A, B, and C PT winding ratio                                      |
|  | Synch PT Ratio                 | 35                | 1.00-10000.00       | Synch PT winding ratio  |
|  | Phase Rotation                 | ABC               | ABC,ACB             | Phase rotation  |
|  | Enable RMS Tags                | True              | True,False          | Enables the creation of the RMS tags                                    |
|  | Enable Fundamental Tags        | False             | True,False          | Enables the creation of the fundamental tags                            |
|  | Enable Synchrophasor Tags      | False             | True,False          | Enables the creation of the synchrophasor tags                          |
|  | Reference Angle                | Positive Sequence | Positive Sequence   | The reference angle for fundamental tags                                |
| Analog Inputs  | LEA                            |                   |                     |   |
|  | VA Voltage Magnitude Comp...   | 1                 | 0.500-1.500         | Magnitude Compensation for the VA Voltage Channel                       |
|  | VB Voltage Magnitude Comp...   | 1                 | 0.500-1.500         | Magnitude Compensation for the VB Voltage Channel                       |
|  | VC Voltage Magnitude Comp...   | 1                 | 0.500-1.500         | Magnitude Compensation for the VC Voltage Channel                       |
|  | VS Voltage Magnitude Comp...   | 1                 | 0.500-1.500         | Magnitude Compensation for the VS Voltage Channel                       |
|  | VA Voltage Angle Compens...    | 0                 | -10.00-10.00 (d...  | Angle Compensation for the VA Voltage channel                           |
|  | VB Voltage Angle Compens...    | 0                 | -10.00-10.00 (d...  | Angle Compensation for the VB Voltage channel                           |
|  | VC Voltage Angle Compens...    | 0                 | -10.00-10.00 (d...  | Angle Compensation for the VC Voltage channel                           |
|  | VS Voltage Angle Compens...    | 0                 | -10.00-10.00 (d...  | Angle Compensation for the VS Voltage channel                           |
| Diagnostics  | Oscillography                  |                   |                     |   |
|  | Oscillography Record Length    | 1                 | 0.1 increments ...  | Total length of an oscillography capture                                |
|  | Oscillography Pre-trigger L... | 0.05              | 0.01 increments...  | Pre-trigger length of an oscillography capture                          |
|  | Oscillography Capture Rate     | 8                 | 1,2,4,8,24 (kilo... | The capture rate of oscillography data                                  |
| Tags   | PMU                            |                   |                     |   |
|  | Station Name                   | SEL_CTLEA_1_ECAT  | 1-255 (character)   | The PMU station name  |
|  | PMU Id                         | 1                 | 1-65534             | Identifier for this PMU   |
|  | Voltage Phasor Data Set        | Phase             | All,Phase,Positi... | Voltage Phasor channels for PMU data set                                |
|  | Current Phasor Data Set        | Phase             | All,Phase,Positi... | Current Phasor channels for PMU data set                                |
|  | Synchrophasors                 |                   |                     |   |
|  | Phase Voltage Angle Comp...    | 0                 | -179.99-180.00...   | Angle compensation for the A, B, and C phase voltage synchrophasor tags |
|  | Synch Voltage Angle Comp...    | 0                 | -179.99-180.00...   | Angle compensation for the Synch voltage synchrophasor tags             |
|  | Phase Current Angle Comp...    | 0                 | -179.99-180.00...   | Angle compensation for the A, B, and C phase current synchrophasor tags |
|  | Neutral Current Angle Com...   | 0                 | -179.99-180.00...   | Angle compensation for the neutral current synchrophasor tags           |

Figure 2.86 CT/LEA Module Settings

| Setting                    | Configuration Options                                 |
|----------------------------|---|
| Phase Rotation             | ABC or ACB  |
| Voltage Configuration      | Configure inputs for three-wire Delta or four-wireWye |
| Phase ABC CT Ratio         | 1.00-50000.00   |
| Neutral CT Ratio           | 1.00-50000.00   |
| Phase ABC PT Ratio         | 1.00-10000.00   |
| Synch PT Ratio             | 1.00-10000.00   |
| Enable RMS Tags            | Shows rms quantities in the Analog Inputs tab         |
| Enable Fundamental Tags    | Shows Fundamental quantities in the Analog Inputs tab |
| Reference Angle            | Select reference for Fundamental Vector quantities    |
| Oscillography Capture Rate | Capture rate of oscillography data                    |

| Setting                            | Configuration Options   |
|------------------------------------|---|
| Oscillography Record Length        | Length of oscillography capture. Capture rate affects maximum record length (see <i>Specifications</i> in the SEL-2240 Instruction Manual). |
| Oscillography Pre-Trigger Length   | Length of time before trigger to start capture  |
| VA Voltage Magnitude Compensation  | 0.500 to 1.500  |
| VB Voltage Magnitude Compensation  | 0.500 to 1.500  |
| VC Voltage Magnitude Compensation  | 0.500 to 1.500  |
| VS Voltage Magnitude Compensation  | 0.500 to 1.500  |
| VA Voltage Angle Compensation      | -10.00 to 10.00   |
| VB Voltage Angle Compensation      | -10.00 to 10.00   |
| VC Voltage Angle Compensation      | -10.00 to 10.00   |
| VS Voltage Angle Compensation      | -10.00 to 10.00   |
| Phase Voltage Angle Compensation   | -179.99 to 180.00   |
| Synch Voltage Angle Compensation   | -179.99 to 180.00   |
| Phase Current Angle Compensation   | -179.99 to 180.00   |
| Neutral Current Angle Compensation | -179.99 to 180.00   |

### NOTE

RMS voltage quantities have units of kilovolts and fundamental voltage quantities are in units of volts.


| Settings      | Enable | Tag Name                          | Tag Type    | Tag |
|---------------|--------|-----------------------------------|-------------|-----|
| Analog Inputs | False  | SEL_CTEA_1_ECAT.EVENT_TRIGGER     | BOOL        |     |
| Diagnostics   | False  | SEL_CTEA_1_ECAT.VA_RMS            | REAL        |     |
| Tags          | False  | SEL_CTEA_1_ECAT.VB_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.VC_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.VS_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.IA_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.IB_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.IC_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.IN_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.VAB_RMS           | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.VBC_RMS           | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.VCA_RMS           | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.PA_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.PB_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.PC_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.QA_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.QB_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.QC_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.SA_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.SB_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.SC_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.PFA_RMS           | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.PFB_RMS           | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.PFC_RMS           | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.P3_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.Q3_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.S3_RMS            | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.PF3_RMS           | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.DC_OFFSET_WARN    | BOOL        |     |
|               | False  | SEL_CTEA_1_ECAT.VS_FREQ_RMS       | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.FREQ_RM           | REAL        |     |
|               | False  | SEL_CTEA_1_ECAT.VS_FREQ_VALID_RMS | BOOL        |     |
|               | False  | SEL_CTEA_1_ECAT.FREQ_VALID_RMS    | BOOL        |     |
|               | False  | SEL_CTEA_1_ECAT.TIMESTAMP_RMS     | timeStamp_t |     |
|               | False  | SEL_CTEA_1_ECAT.QUALITY           | quality_t   |     |

Figure 2.87 CT/LEA Tag Enable Settings

| Analog Input | Description  |
|--------------|--|
| Enable       | When True, this tag will be included when the program is compiled. When False, it will not be included. Disable all tags not in use to optimize processing resources. If there are many analog data on the EtherCAT backplane, you will receive a message that the bandwidth has been exceeded (shown in <i>Figure 2.88</i> ). |
| Tag Name     | Programming designation of a resource.   |
| Tag Alias    | Input an alternative name to use in place of the Tag Name while programming (for example, SEL_CTLEA_1_ECAT.IA_FUND could be replaced by IA_Bus1).  |

**NOTE**

If you receive the message "EtherCAT Bandwidth Exceeded," you will need to disable a number of RMS or Fundamental tags on one or more CT/LEA modules to reduce the bandwidth in use.

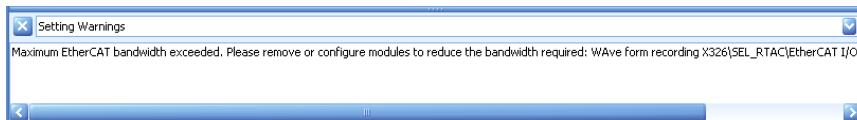

**Figure 2.88 EtherCAT Bandwidth Exceeded**

## CT/LEA Module Simple Tags

The CT/LEA measurements are in a simplified format referred to as "Simple Tags." Complex measured values (CMV) display as the vector\_t data subtype containing the angle and magnitude quantities. Measured values (MV) display as the REAL numeric type.

TimeStamp\_t and quality\_t tags are still available at the module level and automatically insert when mapping a Simple Tag to another tag type in the Tag Processor. Switching to the code view in the Tag Processor will allow you to modify the default quality and time source if desired.

## Waveform Recording

Waveforms will be recorded in COMTRADE format with an accompanying configuration file. File names are stored in the following format:

StationName\_ModuleID\_Protocol\_YYYYMMDD\_HHMMSSMSC.yyy

where:

yyy is one of two file name extensions: CFG for configuration files or DAT for data files.

Protocol is the name of the protocol used (e.g., ECAT).

StationName is defined by the RTAC hostname, which is configurable through the web interface. When the RTAC hostname is changed, the EtherCAT network must be disabled and re-enabled for the new StationName to appear in the file name of waveform records.

A maximum of 1024 COMTRADE events can be stored in the RTAC with the oldest record being deleted when a new event is triggered and 1024 events are exceeded. The SEL-2245-411 can record two back-to-back events. A new record can be triggered as soon as the present one has finished recording. A trigger condition that occurs before the current recording finishes is ignored. These records are first stored locally to prevent data loss and then transferred to the RTAC for downloading via the built-in web server.

## Inputs

The following voltage and current inputs are recorded in the COMTRADE files generated by the SEL-2245-411 modules:

- IA, IB, IC, IN
- VA, VB, VC, VS (Wye)
- VAB, VBC, VCA (Delta)

### NOTE

Waveform settings are configured in the individual CT/LEA module settings tabs.

### NOTE

Oscillography Pre-Trigger Length is relative to when the module receives the trigger through EtherCAT. Two or more processing intervals of the configured RTAC task cycle rate should be added to the desired pre-trigger length to ensure all desired data are captured.

**Table 2.43 Waveform Settings**

| Setting                       | Description  |
|-------------------------------|--|
| VoltageInputConfiguration     | Voltage input configuration  |
| FrequencyNominal              | Nominal system frequency   |
| OscillographyCaptureRate      | Sampling rate:<br>1, 2, 4, 8, 24 kHz; software-selectable  |
| OscillographyRecordLength     | Total record length:<br>6 seconds at 24 kHz<br>18 seconds at 8 kHz<br>36 seconds at 4 kHz<br>72 seconds at 2 kHz<br>144 seconds at 1 kHz |
| OscillographyPreTriggerLength | Pre-trigger record length: 0.05 seconds minimum to a maximum of (record length – 0.05) seconds   |
| CTRatio                       | A-, B-, and C-phase CT winding ratio   |
| CTRatioN                      | Neutral CT winding ratio   |
| PTRatio                       | Phase A, B, C PT winding ratio   |
| PTRatioS                      | Synch PT winding ratio   |
| StationName                   | RTAC hostname  |
| ModuleID                      | Module identifier (module name in ACCELERATOR RTAC)  |
| module_name.Event_Trigger     | This is a Boolean input that triggers waveform recording in the module and only responds to rising edges                                 |

## Downloading Events Via the Web Interface

### NOTE

Only individually enabled CT/LEA module tags are included in the EtherCAT message frame to reduce bandwidth. This allows the use of more CT/LEA modules if fewer tags are needed. The EtherCAT connection tab shows the amount of bandwidth used by your current configuration.

- Step 1. Connect to the RTAC through one of the Ethernet ports or the USB-B interface.
- Step 2. Open a web browser.
- Step 3. Enter **https://** followed by the RTAC Ethernet address.
- Step 4. Log in to the RTAC web interface.
- Step 5. Click on **Event Collection** under **Reports** in the navigation pane on the left.
- Step 6. Sort events by selecting a time frame from **Timestamp Query** and the **Device Filter**.
- Step 7. Select the desired events and click **Download**.
- Step 8. You can also delete events by clicking **Delete**.

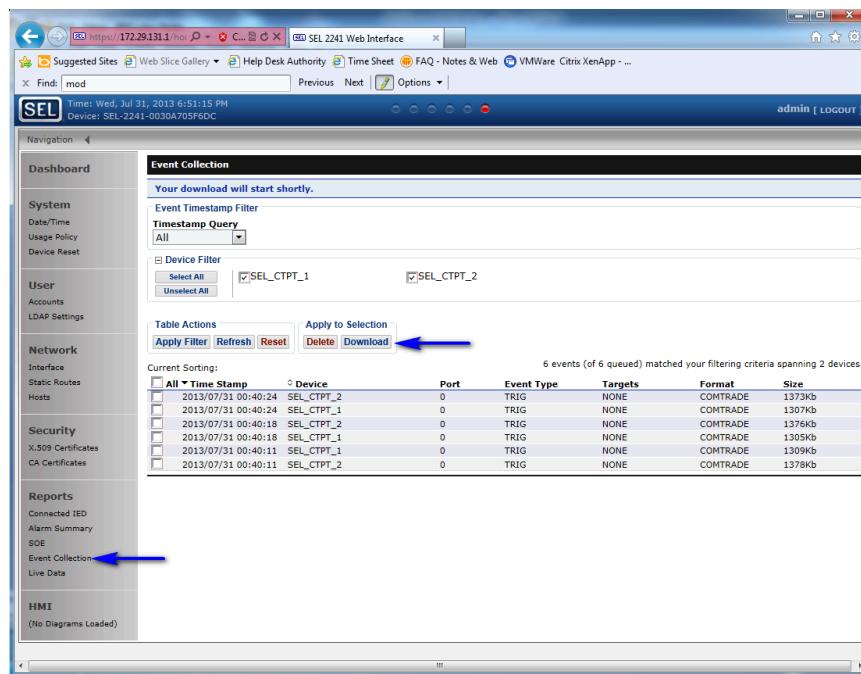


Figure 2.89 Waveform Record Retrieval

## Viewing Waveforms and Event Files

Event files created by the SEL-2245-411 are in COMTRADE format. Event viewing software such as SYNCHROWAVE Event is required to open these files.

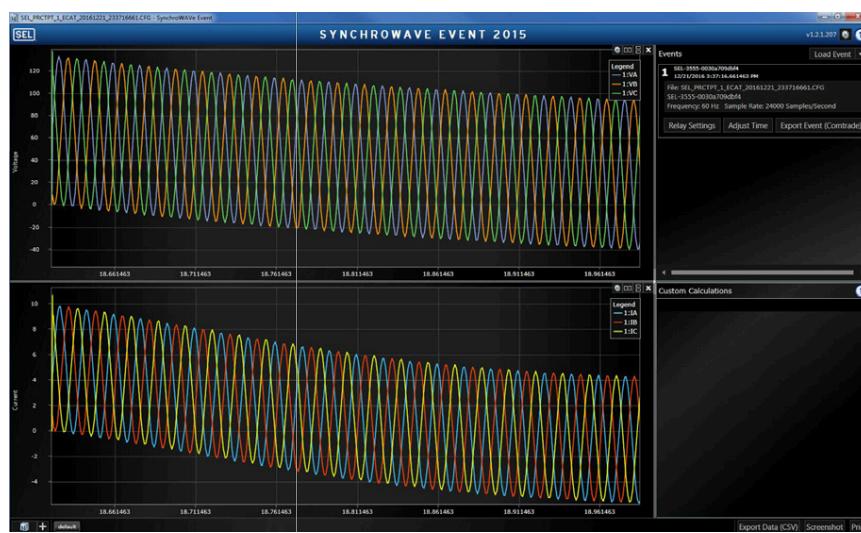


Figure 2.90 SYNCHRoWAVE Event Display Waveform

## SEL-2245-42 AC Protection Module

The SEL-2245-42 AC Protection Module (PRCTPT) includes three Potential Transformer inputs and three Current Transformer inputs with isolated returns for measuring ac signals. See *Specifications in the SEL-2240 Axion Instruction Manual* for details on the input range. Use the **Insert** ribbon, as shown in *Figure 2.91*, to add an instance of this module to your project. The displayed pop-up will allow you to change the module name if necessary. When finished, click **Insert**.

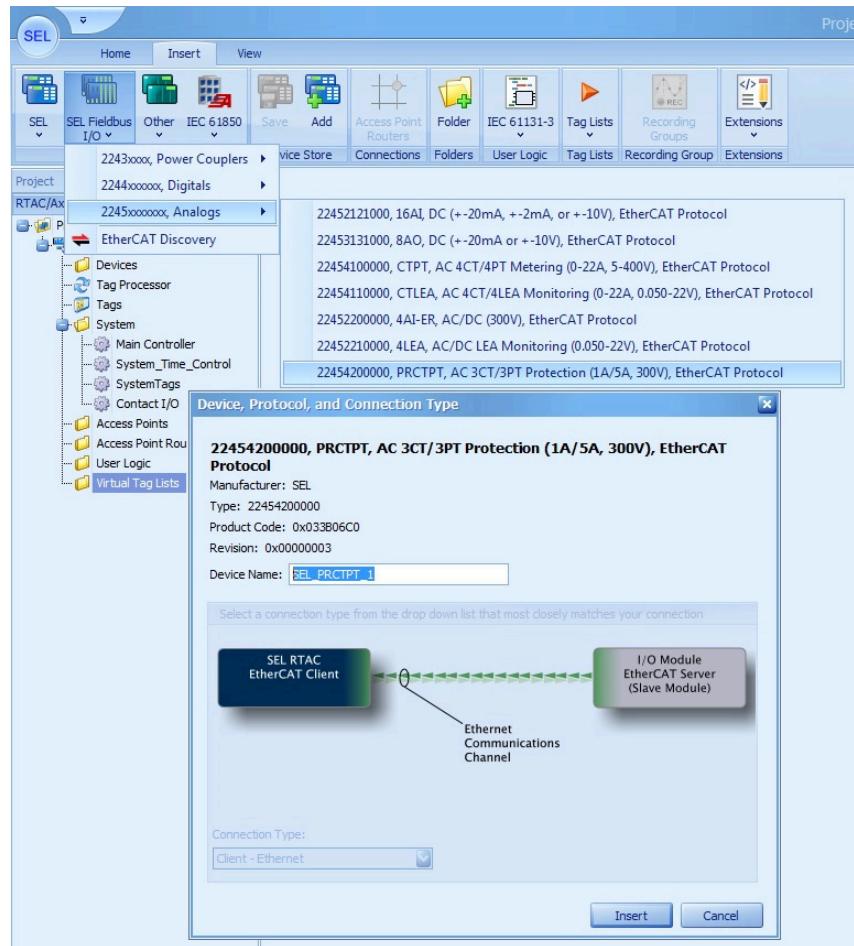


Figure 2.91 Insert an SEL-2245-42 AC Protection Module

## Configuring the AC Protection Module

In the project tree, select the module to open the module settings dialog window. Click the **Settings** tab to configure the module.

| SEL_PRCTPT_1_ECAT   |                                       |                   |  |   |
|---|---------------------------------------|-------------------|--|---|
| 22454200000, PRCTPT, AC 3CT/3PT Protection (1A/5A, 300V), Client - Ethernet [EtherCAT Protocol] |                                       |                   |  |   |
| Properties  | Setting                               | Value             | Range                                    | Description   |
| Settings  | ▶ Fundamental Tags                    |                   |  |   |
|   | Reference Angle                       | No Reference      | Positive Sequence, Phase A, No Reference | The reference angle for fundamental tags                                |
| Analog Inputs   | Fundamental Voltage Scaling Magnitude | kV                | kV,V                                     | The scaling magnitude of the fundamental voltage tags                   |
| Diagnostics   | Enable Fundamental CT and PT Ratios   | True              | True,False                               | Apply CT and PT ratios to fundamental current and voltage tags          |
| Tags  | General                               |                   |  |   |
|   | Phase CT Ratio                        | 250               | 1.00-50000.00                            | Phase A, B, and C CT winding ratio                                      |
|   | Phase PT Ratio                        | 35                | 1.00-10000.00                            | Phase A, B, and C PT winding ratio                                      |
|   | PT Connection                         | Wye               | Delta,Wye                                | The PT wiring connection type   |
|   | Phase Rotation                        | ABC               | ABC,ACB                                  | Phase rotation  |
|   | Frequency Group                       | FreqGroup1        | FreqGroup1                               | The frequency group to use for frequency tracking                       |
|   | Oscillography                         |                   |  |   |
|   | Oscillography Capture Rate            | 8                 | 1,2,4,8,24 (kHz)                         | The capture rate of oscillography data                                  |
|   | Minimum Oscillography Record Length   | 1                 | 0.1 increments ...                       | Minimum length of an oscillography capture                              |
|   | Maximum Oscillography Record Length   | 1                 | 0.1 increments ...                       | Maximum length of an oscillography capture                              |
|   | Oscillography Pre-trigger Length      | 0.05              | 0.01 increments...                       | Pre-trigger length of an oscillography capture                          |
|   | PMU                                   |                   |  |   |
|   | Station Name                          | SEL_PRCTPT_1_ECAT | 1-255 (characters)                       | The PMU station name  |
|   | PMU Id                                | 1                 | 1-65534                                  | Identifier for this PMU   |
|   | Voltage Phasor Data Set               | Phase             | All,Phase,Positive                       | Voltage Phasor channels for PMU data set                                |
|   | Current Phasor Data Set               | Phase             | All,Phase,Positive                       | Current Phasor channels for PMU data set                                |
|   | RMS Tags                              |                   |  |   |
|   | RMS Voltage Scaling Magnitude         | kV                | kV,V                                     | The scaling magnitude of the RMS voltage tags                           |
|   | Enable RMS CT and PT Ratios           | True              | True,False                               | Apply CT and PT ratios to RMS current and voltage tags                  |
|   | Synchrophasors                        |                   |  |   |
|   | Phase Voltage Angle Compensation      | 0                 | -179.99-180.00...                        | Angle compensation for the A, B, and C phase voltage synchrophasor tags |
|   | Phase Current Angle Compensation      | 0                 | -179.99-180.00...                        | Angle compensation for the A, B, and C phase current synchrophasor tags |

Figure 2.92 PRCTPT Module Settings

Table 2.44 PRCTPT Module Settings Options

| Setting                               | Configuration Options                                    |
|---------------------------------------|--|
| <b>Fundamental Tags</b>               |  |
| Reference Angle                       | Positive Sequence, Phase A, No Reference                 |
| Fundamental Voltage Scaling Magnitude | kV or V  |
| Enable Fundamental CT and PT Ratios   | True, False  |
| <b>General</b>                        |  |
| Phase CT Ratio                        | 1.00–50000.00  |
| Phase PT Ratio                        | 1.00–6000.00   |
| PT Connection                         | Delta, Wye   |
| Phase Rotation                        | ABC or ACB   |
| Frequency Group                       | Assign the frequency group to use for frequency tracking |
| <b>Oscillography</b>                  |  |
| Oscillography Capture Rate            | 1, 2, 4, 8, 24 kHz                                       |
| Minimum Oscillography Record Length   | 0.5–72 seconds in 0.1 increments                         |

| Setting                             | Configuration Options                |
|-------------------------------------|--------------------------------------|
| Maximum Oscillography Record Length | 1–72 seconds in 0.1 increments       |
| Oscillography Pre-trigger Length    | 0.05–0.95 seconds in 0.01 increments |
| <b>RMS Tags</b>                     |                                      |
| RMS Voltage Scaling Magnitude       | kV, V                                |
| Enable RMS CT and PT Ratios         | True, False                          |
| <b>Synchrophasors</b>               |                                      |
| Phase Voltage Angle Compensation    | –179.99–180.00                       |
| Phase Current Angle Compensation    | –179.99–180.00                       |
| <b>PMU</b>                          |                                      |
| Station Name                        | 1–255 characters                     |
| Current Phasor Data Set             | All, Phase, Positive Sequence, None  |
| Voltage Phasor Data Set             | All, Phase, Positive Sequence, None  |
| PMU Id                              | 1–65534                              |

**NOTE**

To conserve EtherCAT bandwidth, enable only the necessary tags. An error message will appear in the diagnostic window if the EtherCAT bandwidth is exceeded.

| Project Properties SEL_PRCTPT_1_ECAT  |   |                                  |             |           |
|---|---|----------------------------------|-------------|-----------|
| 2245420000, PRCTPT, AC3CT/3PT Protection (1A/5A, 300V), Client - Ethernet [EtherCAT Protocol] |   |                                  |             |           |
| Properties  | Drag a column header here to group by that column |                                  |             |           |
| Settings  | Enable  | Tag Name                         | Tag Type    | Tag Alias |
| Analog Inputs   | False   | SEL_PRCTPT_1_ECAT.EVENT_TRIGGER  | BOOL        |           |
| Diagnostics   | False   | SEL_PRCTPT_1_ECAT.VA_FUND        | vector_t    |           |
| Tags  | False   | SEL_PRCTPT_1_ECAT.VB_FUND        | vector_t    |           |
|   | False   | SEL_PRCTPT_1_ECAT.VC_FUND        | vector_t    |           |
|   | False   | SEL_PRCTPT_1_ECAT.VAB_FUND       | vector_t    |           |
|   | False   | SEL_PRCTPT_1_ECAT.VBC_FUND       | vector_t    |           |
|   | False   | SEL_PRCTPT_1_ECAT.VCA_FUND       | vector_t    |           |
|   | False   | SEL_PRCTPT_1_ECAT.IA_FUND        | vector_t    |           |
|   | False   | SEL_PRCTPT_1_ECAT.IB_FUND        | vector_t    |           |
|   | False   | SEL_PRCTPT_1_ECAT.IC_FUND        | vector_t    |           |
|   | False   | SEL_PRCTPT_1_ECAT.IO_FUND        | vector_t    |           |
|   | False   | SEL_PRCTPT_1_ECAT.I1_FUND        | vector_t    |           |
|   | False   | SEL_PRCTPT_1_ECAT.I2_FUND        | vector_t    |           |
|   | False   | SEL_PRCTPT_1_ECAT.V0_FUND        | vector_t    |           |
|   | False   | SEL_PRCTPT_1_ECAT.V1_FUND        | vector_t    |           |
|   | False   | SEL_PRCTPT_1_ECAT.V2_FUND        | vector_t    |           |
|   | False   | SEL_PRCTPT_1_ECAT.TIMESTAMP_FUND | timeStamp_t |           |
|   | False   | SEL_PRCTPT_1_ECAT.QUALITY_FUND   | BOOL        |           |
|   | False   | SEL_PRCTPT_1_ECAT.FREQ           | REAL        |           |
|   | False   | SEL_PRCTPT_1_ECAT.QUALITY_FREQ   | BOOL        |           |
|   | False   | SEL_PRCTPT_1_ECAT.ROCOF          | REAL        |           |
|   | False   | SEL_PRCTPT_1_ECAT.TIMESTAMP_FREQ | timeStamp_t |           |
|   | False   | SEL_PRCTPT_1_ECAT.VA_RMS         | REAL        |           |
|   | False   | SEL_PRCTPT_1_ECAT.VB_RMS         | REAL        |           |
|   | False   | SEL_PRCTPT_1_ECAT.VC_RMS         | REAL        |           |
|   | False   | SEL_PRCTPT_1_ECAT.VAB_RMS        | REAL        |           |
|   | False   | SEL_PRCTPT_1_ECAT.VBC_RMS        | REAL        |           |
|   | False   | SEL_PRCTPT_1_ECAT.VCA_RMS        | REAL        |           |
|   | False   | SEL_PRCTPT_1_ECAT.IA_RMS         | REAL        |           |

Figure 2.93 PRCTPT Tag Enable Settings

#### NOTE

If you receive the message "EtherCAT Bandwidth Exceeded," you will need to disable a number of RMS, Fundamental, or Synchrophasor tags on one or more CT/PT modules to reduce the bandwidth in use.


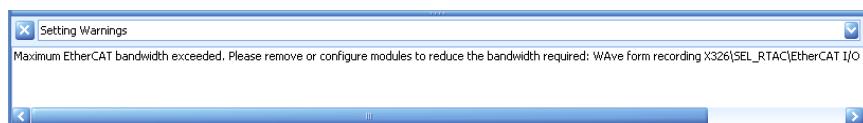


Figure 2.94 EtherCAT Bandwidth Exceeded

Table 2.45 Tag Settings

| Analog Input | Description   |
|--------------|---|
| Enable       | When True, this tag will be included when the program is compiled. When False it will not be included. Disable all tags not in use to optimize processing resources. If there are too many analog data on the EtherCAT backplane, you will receive a message that the bandwidth has been exceeded (shown in Figure 2.94). |
| Tag Name     | Programming designation of a resource.  |
| Tag Alias    | Input an alternative name to use in place of the Tag Name while programming (for example, SEL_PRCTPT_1_ECAT.IA_FUND could be replaced by IA_Bus1).  |

Configure Frequency Groups for the AC Protection Modules in the EtherCAT I/O network to define which module will be the reference for frequency tracking.

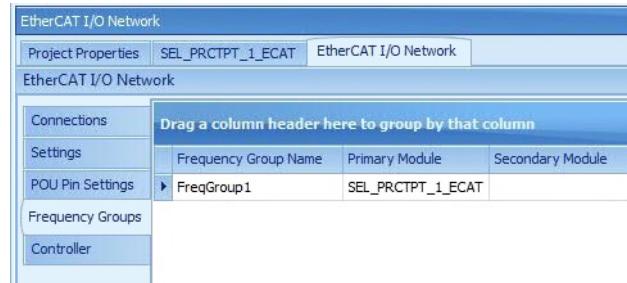


**Figure 2.95 Configure PRCTPT Frequency Groups**

## AC Protection Module Simple Tags

CT/PT measurements are provided in a simplified format referred to as Simple Tags. Complex measured values (CMV) display as the vector\_t data subtype containing the angle and magnitude quantities. Measured values (MV) display as the REAL numeric type.

TimeStamp\_t and quality\_t tags are still available at the module level and automatically insert when you map a Simple Tag to another tag type in the Tag Processor. Switching to the code view in the Tag Processor will allow you to modify the default quality and time source if needed.

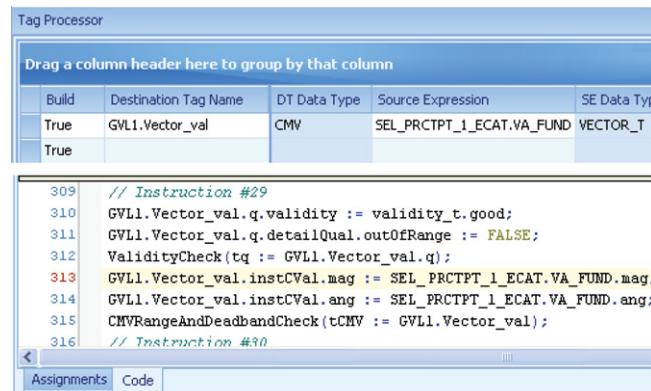

**Figure 2.96 AC Protection Module Simple Tag to Complex Tag Mapping**

## Waveform Recording

Waveforms are recording in COMTRADE format with an accompanying configuration file. File names are stored as follows:

StationName\_ModuleID\_Protocol\_YYYYMMDD\_HHMMSSMSC.yyy

where:

yyy is one of two file name extensions: CFG for configuration files or DAT for data files.

Protocol is the name of the protocol used (e.g., ECAT).

StationName is defined by the RTAC hostname, which is configurable through the web interface. When the RTAC hostname is changed, the EtherCAT network must be disabled and re-enabled for the new StationName to appear in the file name of waveform records.

#### NOTE

Waveform settings are configured in the individual AC Protection Module setting tabs or in the assigned Recording Group Settings.

A maximum of 1024 COMTRADE events can be stored in the RTAC, with the oldest record being deleted when a new event is triggered and 1024 is exceeded. The SEL-2245-42 can record two back-to-back events. A new record can be triggered as soon as the current one has finished recording. These records are first stored locally to prevent data loss and then transferred to the RTAC for downloading via the built-in web server.

#### NOTE

The Trigger Time Alignment setting is set to RTAC Assertion and hidden by default. To change this setting to Module Assertion, select the Advanced Settings check box to view and modify the setting.


## Inputs

The following voltage and current inputs are recorded in the COMTRADE files generated by the SEL-2245-42 modules:

- ▶ IA, IB, IC
- ▶ VA, VB, VC (Wye)
- ▶ VAB, VBC, VCA (Delta)


## Oscillography Triggering

The AC Protection Module offers a very flexible trigger mechanism with extendable recording lengths. *Figure 2.97* illustrates the three recording length settings pertaining to the module output event file. The first setting, Oscillography Pre-Trigger Length, is the length in seconds of the prerecorded data prior to the initiating trigger of the event. The second setting, Minimum Oscillography Record Length, is the minimum total recording length of the event in seconds and is equivalent to the length of Pre-Trigger plus the length of Post-Trigger. The last setting, Maximum Oscillography Record Length, is the absolute maximum total recording length that the event will not exceed, based on the applied trigger and Extended Post-Trigger length.

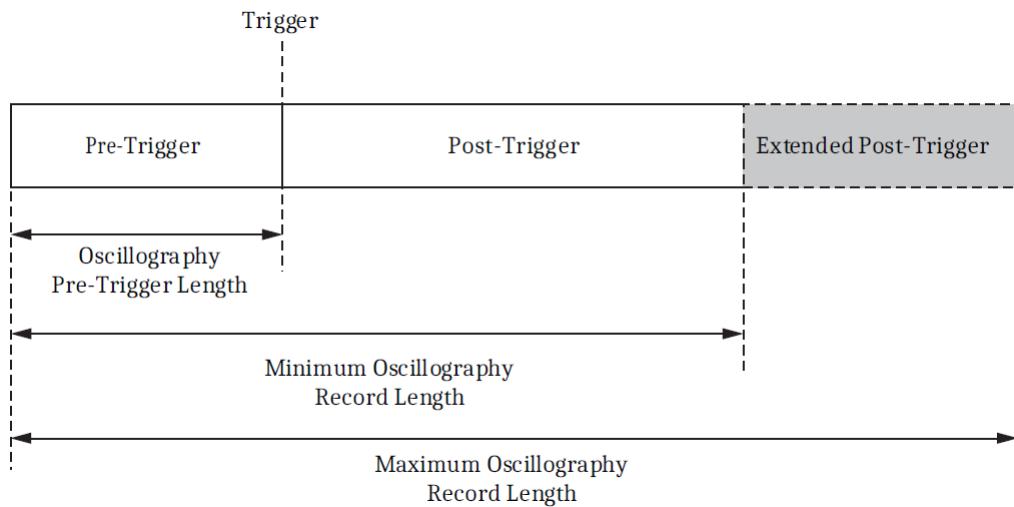


**Figure 2.97 Event Record for the SEL-2245-42 AC Protection Module**

By responding to either rising-edge or level triggers, the AC Protection Module provides flexibility for recording faults by using a variety of trigger techniques. *Figure 2.98* illustrates the basic rising-edge trigger implementation for the module when the time between triggers is greater than the minimum oscillography record length setting. In this simple rising-edge trigger example, the module generates two separate event files in response to two different rising-edge trigger occurrences. Each event file length matches the minimum oscillography record length setting without any Extended Post-Trigger data.

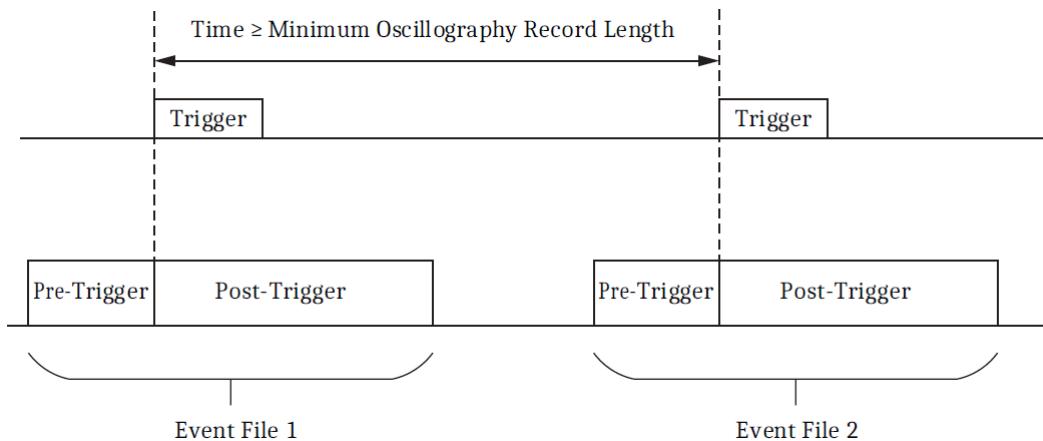


**Figure 2.98 Simple Rising-Edge Triggered Event Recordings**

*Figure 2.99* illustrates another example with two rising-edge triggers, but in this case the second rising-edge trigger occurs before the minimum oscillography length expires. This action extends the length of event recording by the length of Post-Trigger time at the instance of the second trigger. This recording extension can continue with subsequent triggers until either the triggers stop or the total length of the event recording reaches the maximum oscillography record length.

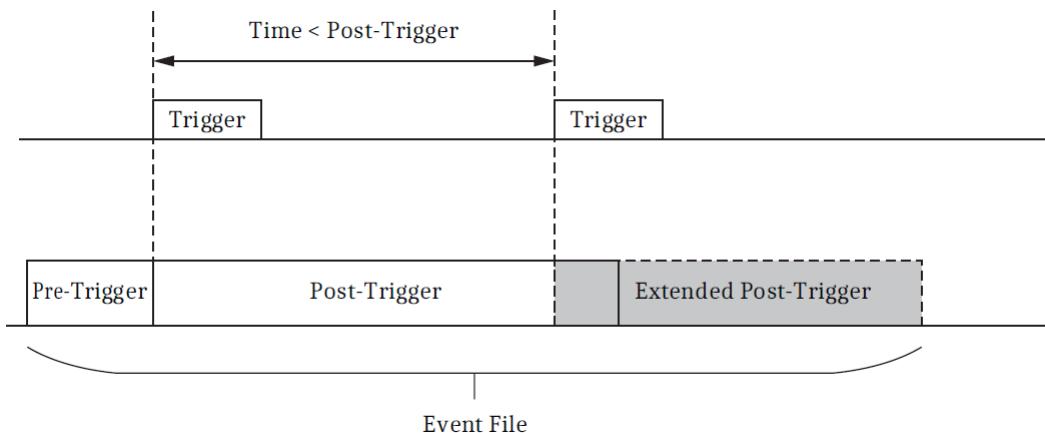

**Figure 2.99 Rising-Edge Trigger Extended Event Recording**

Figure 2.100 illustrates another example with a level trigger that extends the length of the recording. The level trigger extends the length of the event past the minimum oscillography record length setting. If the level trigger stays high, the module will continue to record until it reaches the maximum oscillography record length setting.

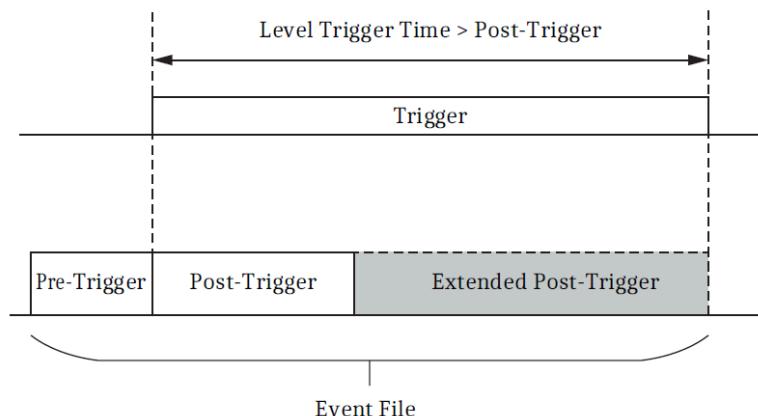

**Figure 2.100 Level Trigger Extended Event Recording**

**Table 2.46 Oscillography Settings**

| Setting                       | Description  |
|-------------------------------|--|
| OscillographyTrigger          | On rising edge, generates a waveform trigger event   |
| OscillographyCaptureRate      | The capture rate of oscillography data: 1, 2, 4, 8, or 24 kHz  |
| OscillographyRecordLengthMin  | Minimum length of an oscillography capture   |
| OscillographyPreTriggerLength | Length of pre-trigger time   |
| OscillographyRecordLengthMax  | Maximum length of oscillography capture (in case of multiple trigger events or extended trigger):<br>24 s at 24 kHz<br>72 s at 8 kHz<br>144 s at 4 kHz<br>288 s at 2 kHz<br>576 s at 1 kHz |

| Setting                   | Description  |
|---------------------------|--|
| StationName               | RTAC hostname  |
| ModuleID                  | Module identifier (module name in ACSELERATOR RTAC)  |
| Module_name.Event_Trigger | Boolean input that triggers waveform recording in the module and only responds to rising edges |

## Downloading Events Via the Web Interface

- Step 1. Connect to the RTAC through one of the Ethernet ports or the USB-B interface.
- Step 2. Open a web browser.
- Step 3. Enter **https://** followed by the RTAC Ethernet address.
- Step 4. Log in to the RTAC web interface.
- Step 5. Click **Event Collection** under **Reports** in the navigation pane on the left.
- Step 6. Sort events by selecting a time frame from **Timestamp Query** and the device filter.
- Step 7. Select the desired events and click **Download**. You can also delete events by clicking **Delete**.

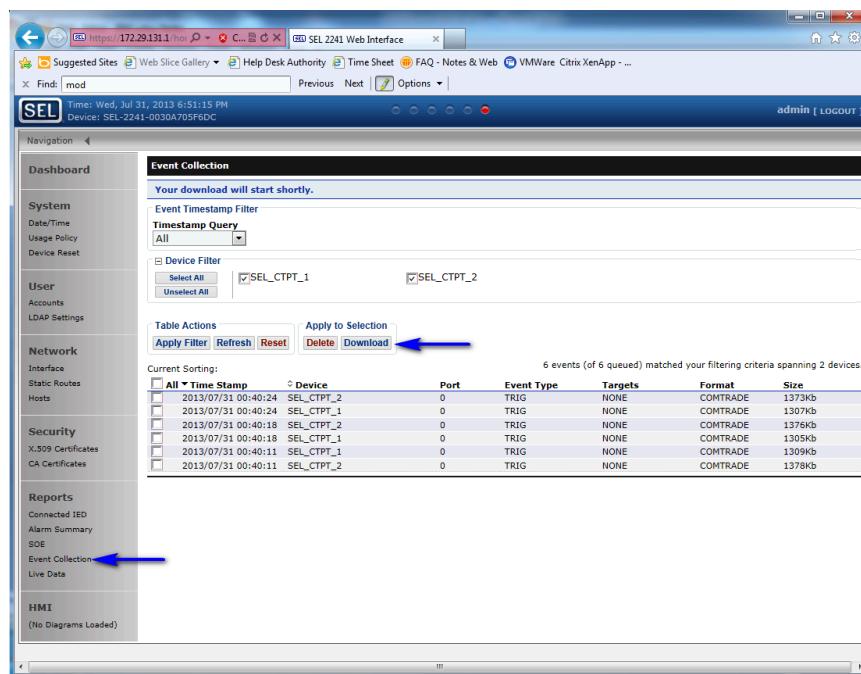


Figure 2.101 Waveform Record Retrieval

## Viewing Waveforms and Event Files

Events files created by the SEL-2245-42 are in COMTRADE format. Event viewing software such as SYNCHROWAVE Event is required to open these files.



Figure 2.102 SYNCHROWAVE Event Display Waveform

## Configuring Axion Recording Groups

### NOTE

Recording Groups configured at 24 kHz for 24 seconds on the legacy RTACs (SEL-2241, SEL-3530, or SEL-3530-4) with more than two SEL-2245-42 modules will time out before they are complete. An SEL-3555, SEL-3350, or SEL-2241-2 RTAC should be used for any systems larger than two modules at 24 kHz for 24 seconds.

Configure recording groups with the Axion for the purpose of combining multiple event reports from SEL-2245-42 AC Protection Modules with digital I/O from SEL-2244 Digital I/O modules in a single COMTRADE file. Recording groups also provide custom channels and calculations. Custom channels allow you to include analog or Boolean quantities from the RTAC logic engine in the recording group. Use standard mathematical expression channels to add calculated virtual channels to the recording group. A single recording group can be configured for the entire Axion or as many as six separate recording groups can be configured based on how the recording channels make logical sense for analysis. Each recording group generates a single COMTRADE file with the data included for simplified analysis.

- Step 1. Select the Recording Groups icon in the Insert menu in ACSELERATOR RTAC, as shown in *Figure 2.103*.

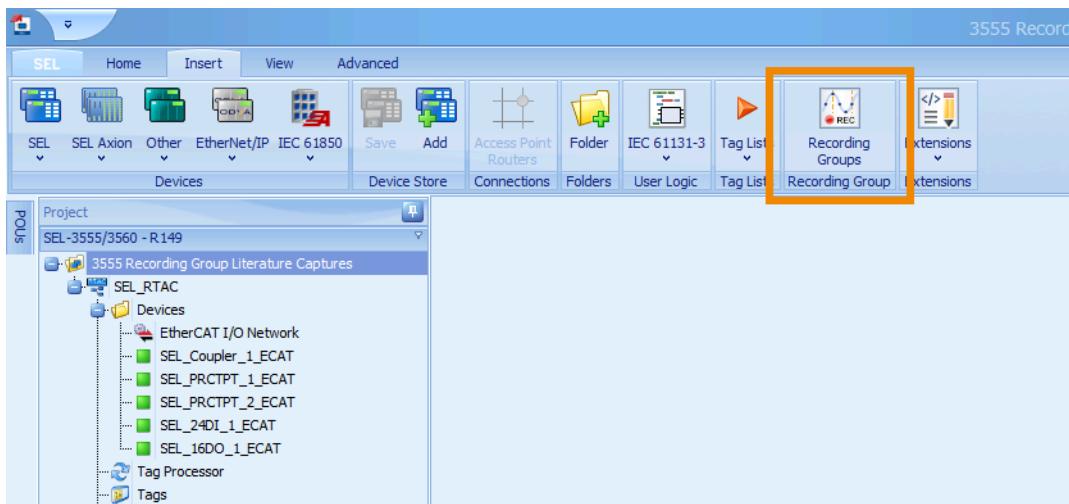


Figure 2.103 Insert a New Recording Group

Step 2. Enter a name for the new Recording Group or use the default, RecordingGroupX. Select the SEL-2245-42 and SEL-2244 modules you want to include in the recording group.

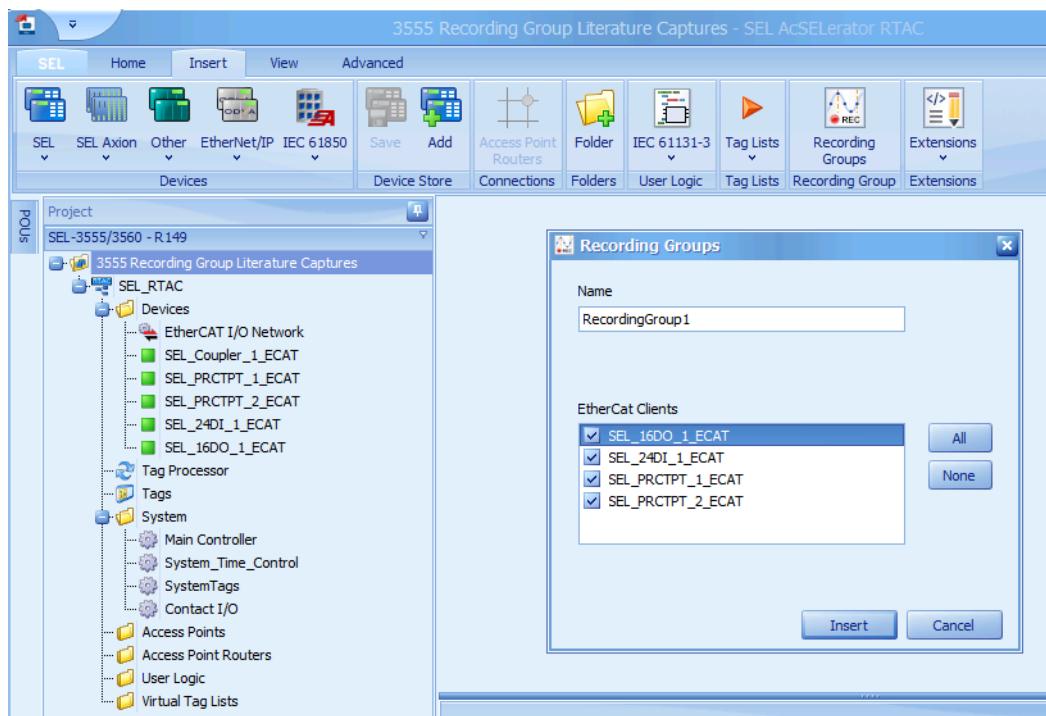



Figure 2.104 Select Modules for Recording Group

- Step 3. Select the new RecordingGroupX and go to the **Settings** tab to configure the recording parameters for the recording group.
- Set the **Station Name** and **Company Name** as desired to indicate your company and the location of the RTAC.
  - In RTAC project versions R154/R200 and later, optionally set the Device Name via the **Advanced Settings** check box. The device name setting updates the device name in the output COMTRADE records and updates the name of the Recording Device name that is displayed on the RTAC's event collection webpage.
  - Configure the **Oscillography** settings as desired to set the recording lengths and capture rate.

These settings will override any previous Oscillography settings that were configured for all individual SEL-2245-42 Protection modules included in RecordingGroupX.

#### NOTE

When the **Device Name** is empty, the Recording Group automatically assigns the Recording Group name to the device name field.

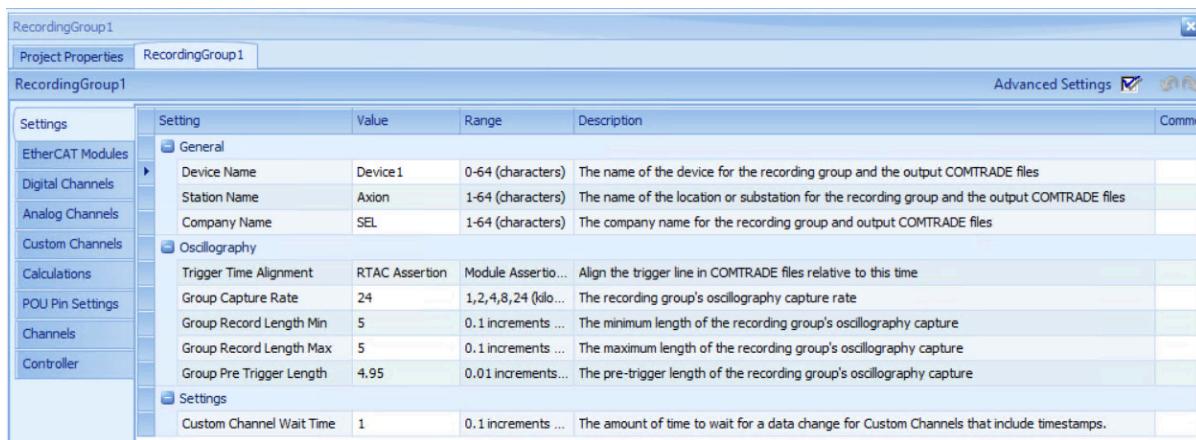

**Figure 2.105 Configure Recording Group Oscillography Settings**

- Step 4. The **EtherCAT Modules** tab lists the modules included in RecordingGroupX. You can modify the modules included in the recording group here if necessary.

| RecordingGroup1    |                     |   |      |
|--------------------|---------------------|---|------|
| Project Properties |                     | RecordingGroup1                                   |      |
| RecordingGroup1    |                     |   |      |
| Settings           |                     | Drag a column header here to group by that column |      |
| EtherCAT Modules   | Module Name         | Node  | Slot |
| Digital Channels   | ▶ SEL_PRCTPT_1_ECAT | Node 1  | B    |
| Analog Channels    | SEL_PRCTPT_2_ECAT   | Node 1  | C    |
| Custom Channels    | SEL_24DI_1_ECAT     | Node 1  | D    |
| Calculations       | SEL_16DO_1_ECAT     | Node 1  | E    |
| POU Pin Settings   |                     |   |      |
| Channels           |                     |   |      |
| Controller         |                     |   |      |

Figure 2.106 EtherCAT Modules Included in the Recording Group

Step 5. Go to the **Digital Channels** tab and configure the **Channel Name** for the inputs or outputs of the SEL-2244 modules included in RecordingGroupX, if desired. Additionally, if there are inputs or outputs you do not want to include in the COMTRADE file, disable them here.

| RecordingGroup1    |        |   |           |              |
|--------------------|--------|---|-----------|--------------|
| Project Properties |        | RecordingGroup1                                   |           |              |
| RecordingGroup1    |        |   |           |              |
| Settings           |        | Drag a column header here to group by that column |           |              |
| EtherCAT Modules   | Enable | Device  | Channel   | Channel Name |
| Digital Channels   | True   | SEL_16DO_1_ECAT                                   | Output 1  | OUT101       |
| Analog Channels    | True   | SEL_16DO_1_ECAT                                   | Output 2  | OUT102       |
| Custom Channels    | True   | SEL_16DO_1_ECAT                                   | Output 3  | OUT103       |
| Calculations       | True   | SEL_16DO_1_ECAT                                   | Output 4  | OUT104       |
| POU Pin Settings   | True   | SEL_16DO_1_ECAT                                   | Output 5  | OUT105       |
| Channels           | True   | SEL_16DO_1_ECAT                                   | Output 6  | OUT106       |
| Controller         | True   | SEL_16DO_1_ECAT                                   | Output 7  | OUT107       |
|                    | True   | SEL_16DO_1_ECAT                                   | Output 8  | OUT108       |
|                    | True   | SEL_16DO_1_ECAT                                   | Output 9  | OUT109       |
|                    | True   | SEL_16DO_1_ECAT                                   | Output 10 | OUT110       |
|                    | True   | SEL_16DO_1_ECAT                                   | Output 11 | OUT111       |

Figure 2.107 Digital Channel Settings

Step 6. Go to the **Analog Channels** tab and configure the **Channel Name** for the analog inputs of the SEL-2245-42 modules included in RecordingGroupX if desired. Additionally, if there are inputs you do not want to include in the COMTRADE file, you can disable them here.

| RecordingGroup1    |        |                   |         |              |  |  |  |
|--------------------|--------|-------------------|---------|--------------|--|--|--|
| Project Properties |        | RecordingGroup1   |         |              |  |  |  |
| RecordingGroup1    |        |                   |         |              |  |  |  |
| <b>Settings</b>    |        |                   |         |              |  |  |  |
| EtherCAT Modules   | Enable | Device            | Channel | Channel Name |  |  |  |
| Digital Channels   | True   | SEL_PRCTPT_1_ECAT | VA      | VA1          |  |  |  |
| Analog Channels    | True   | SEL_PRCTPT_1_ECAT | VB      | VB1          |  |  |  |
| Custom Channels    | True   | SEL_PRCTPT_1_ECAT | VC      | VC1          |  |  |  |
| Calculations       | True   | SEL_PRCTPT_1_ECAT | IA      | IA1          |  |  |  |
| POU Pin Settings   | True   | SEL_PRCTPT_1_ECAT | IB      | IB1          |  |  |  |
| Channels           | True   | SEL_PRCTPT_2_ECAT | IC      | IC1          |  |  |  |
| Controller         | True   | SEL_PRCTPT_2_ECAT | VA      | VA2          |  |  |  |
|                    | True   | SEL_PRCTPT_2_ECAT | VB      | VB2          |  |  |  |
|                    | True   | SEL_PRCTPT_2_ECAT | VC      | VC2          |  |  |  |
|                    | True   | SEL_PRCTPT_2_ECAT | IA      | IA2          |  |  |  |
|                    | True   | SEL_PRCTPT_2_ECAT | IB      | IB2          |  |  |  |
|                    | True   | SEL_PRCTPT_2_ECAT | IC      | IC2          |  |  |  |

Figure 2.108 Analog Channel Settings

Step 7. Go to the **Custom Channels** tab and add the number of custom digital (BOOL), analog (REAL), or magnitude and angle pair (vector\_t) channels you want to add from the RTAC logic engine to include in RecordingGroupX. In firmware versions R151 and later, as many as 512 custom channels can be added to a single Recording Group.

| RecordingGroup1    |        |                 |          |           |              |              |         |  |  |  |  |  |  |
|--------------------|--------|-----------------|----------|-----------|--------------|--------------|---------|--|--|--|--|--|--|
| Project Properties |        | RecordingGroup1 |          |           |              |              |         |  |  |  |  |  |  |
| RecordingGroup1    |        |                 |          |           |              |              |         |  |  |  |  |  |  |
| <b>Settings</b>    |        |                 |          |           |              |              |         |  |  |  |  |  |  |
| EtherCAT Modules   | Enable | Tag Name        | Tag Type | Tag Alias | Channel Name | Analog Units | Comment |  |  |  |  |  |  |
| Digital Channels   |        |                 |          |           |              |              |         |  |  |  |  |  |  |
| Analog Channels    |        |                 |          |           |              |              |         |  |  |  |  |  |  |
| Custom Channels    |        |                 |          |           |              |              |         |  |  |  |  |  |  |
| Calculations       |        |                 |          |           |              |              |         |  |  |  |  |  |  |
| POU Pin Settings   |        |                 |          |           |              |              |         |  |  |  |  |  |  |
| Channels           |        |                 |          |           |              |              |         |  |  |  |  |  |  |
| Controller         |        |                 |          |           |              |              |         |  |  |  |  |  |  |

Add items

|  |          |
|--|----------|
| Starting Channel Number  | Quantity |
| 0  | 1        |
| <input type="button" value="Add"/> <input type="button" value="Cancel"/> |          |

Figure 2.109 Add Custom Channels

Step 8. Configure **Tag Name**, **Channel Name**, **Tag Alias**, and **Analog Units** for the custom channels included in RecordingGroupX as desired. Additionally, if there are inputs you do not want to include in the COMTRADE file, disable them here. Go to **Tag Processor** and map source tags from the RTAC logic engine to the new RecordingGroupX.CustomDigitalX or RecordingGroupX.CustomChannelX tags.

| RecordingGroup1    |        |                                |          |           |                |              |         |  |  |  |  |  |  |
|--------------------|--------|--------------------------------|----------|-----------|----------------|--------------|---------|--|--|--|--|--|--|
| Project Properties |        | RecordingGroup1                |          |           |                |              |         |  |  |  |  |  |  |
| RecordingGroup1    |        |                                |          |           |                |              |         |  |  |  |  |  |  |
| <b>Settings</b>    |        |                                |          |           |                |              |         |  |  |  |  |  |  |
| EtherCAT Modules   | Enable | Tag Name                       | Tag Type | Tag Alias | Channel Name   | Analog Units | Comment |  |  |  |  |  |  |
| Digital Channels   | True   | RecordingGroup1.CustomDigital1 | BOOL     |           | CustomDigital1 |              |         |  |  |  |  |  |  |
| Analog Channels    | True   | RecordingGroup1.CustomDigital2 | BOOL     |           | CustomDigital2 |              |         |  |  |  |  |  |  |
| Custom Channels    | True   | RecordingGroup1.CustomDigital3 | BOOL     |           | CustomDigital3 |              |         |  |  |  |  |  |  |
| Calculations       | True   | RecordingGroup1.CustomChannel1 | REAL     |           | CustomChannel1 | kV           |         |  |  |  |  |  |  |
| POU Pin Settings   |        |                                |          |           |                |              |         |  |  |  |  |  |  |
| Channels           |        |                                |          |           |                |              |         |  |  |  |  |  |  |
| Tags               |        |                                |          |           |                |              |         |  |  |  |  |  |  |
| Controller         |        |                                |          |           |                |              |         |  |  |  |  |  |  |

**Figure 2.110 Custom Channel Settings**

Step 9. Add as many as 32 calculated virtual channels via the Recording Group **Calculations** tab. Configure the calculation **Channel Name** and **Units** for each calculated channel. Build calculations in the **Channel Expression** cell using channel names defined in the Analog Channels and Custom Channel tabs. Additionally, the channel expression cell supports floating-point and integer values in the calculation. The channel expression cell allows addition, subtraction, multiplication, and division through mathematical operators "+", "-", "\*", and "/", respectively. *Figure 2.111* provides a calculation settings overview and examples for configuring channel expressions.

| RecordingGroup1    |        |                 |                          |  |       |   |         |  |  |  |  |  |  |
|--------------------|--------|-----------------|--------------------------|--|-------|---|---------|--|--|--|--|--|--|
| Project Properties |        | RecordingGroup1 |                          |  |       |   |         |  |  |  |  |  |  |
| RecordingGroup1    |        |                 |                          |  |       |   |         |  |  |  |  |  |  |
| <b>Settings</b>    |        |                 |                          |  |       |   |         |  |  |  |  |  |  |
| EtherCAT Modules   | Enable | Channel Name    | Channel Expression       |  | Units | ▲ | Comment |  |  |  |  |  |  |
| Digital Channels   | True   | I0_Line1        | (IA1 + IB1 + IC1)/3      |  | kA    |   |         |  |  |  |  |  |  |
| Analog Channels    | True   | V0_Line2        | (VA2 + VB2 + VC2)/3      |  | kV    |   |         |  |  |  |  |  |  |
| Custom Channels    | True   | Combo_Channel   | CustomChannel1*(IA1*VA1) |  | Test  |   |         |  |  |  |  |  |  |
| Calculations       |        |                 |                          |  |       |   |         |  |  |  |  |  |  |
| POU Pin Settings   |        |                 |                          |  |       |   |         |  |  |  |  |  |  |
| Channels           |        |                 |                          |  |       |   |         |  |  |  |  |  |  |
| Tags               |        |                 |                          |  |       |   |         |  |  |  |  |  |  |
| Controller         |        |                 |                          |  |       |   |         |  |  |  |  |  |  |

**Figure 2.111 Calculation Settings**

*Figure 2.112* shows the POU Pin Settings with default values for RecordingGroupX.

| RecordingGroup1    |      |   |          |             |                |               |
|--------------------|------|---|----------|-------------|----------------|---------------|
| Project Properties |      | RecordingGroup1                                   |          |             |                |               |
| RecordingGroup1    |      |   |          |             |                |               |
| <b>Settings</b>    |      | Drag a column header here to group by that column |          |             |                |               |
| EtherCAT Modules   |      | Visible   | Pin Name | Pin Type    | Pin Point Type | Default Value |
| Digital Channels   | True | EN  | Input    | BOOL        | TRUE           |               |
| Analog Channels    | True | ENO   | Output   | BOOL        | FALSE          |               |
| Custom Channels    | True | Event_Count                                       | Output   | UDINT       | 0              |               |
| Calculations       | True | Event_Trigger                                     | Input    | BOOL        | FALSE          |               |
| POU Pin Settings   | True | File_Name   | Output   | STRING(255) |                |               |
| Channels           | True | Missing_Data_Count                                | Output   | UDINT       | 0              |               |
| Tags               | True | Missing_Data_Error                                | Output   | BOOL        | FALSE          |               |
| Controller         | True | New_Event_Ready                                   | Output   | BOOL        | FALSE          |               |
|                    | True | Offline   | Output   | BOOL        | TRUE           |               |
|                    | True | Ready   | Output   | BOOL        | FALSE          |               |
|                    | True | Reset_Statistics                                  | Input    | BOOL        | FALSE          |               |
|                    | True | Trigger_Count                                     | Output   | UDINT       | 0              |               |
|                    | True | Trigger_ID  | Input    | STRING(64)  |                |               |

Figure 2.112 RecordingGroupX POU Pin Settings

Figure 2.113 shows the Controller with online values for RecordingGroupX.


| RecordingGroup1          |                  |   |       |  |  |  |
|--------------------------|------------------|---|-------|--|--|--|
| Project Properties       |                  | RecordingGroup1                                 |       |  |  |  |
| RecordingGroup1          |                  |   |       |  |  |  |
| <b>Settings</b>          |                  | SEL_RTAC.Application.RecordingGroup1_Controller |       |  |  |  |
| EtherCAT Modules         |                  | Expression                                      |       |  |  |  |
| Digital Channels         |                  | RecordingGroup1_POU                             |       |  |  |  |
| Analog Channels          |                  | EN  |       |  |  |  |
| Custom Channels          |                  | BOOL  |       |  |  |  |
| Calculations             |                  | TRUE  |       |  |  |  |
| POU Pin Settings         |                  | Reset_Statistics                                |       |  |  |  |
| Channels                 |                  | BOOL  |       |  |  |  |
| Tags                     |                  | FALSE   |       |  |  |  |
| Controller               |                  | Event_Trigger                                   |       |  |  |  |
|                          |                  | BOOL  |       |  |  |  |
|                          |                  | FALSE   |       |  |  |  |
|                          |                  | Trigger_ID                                      |       |  |  |  |
|                          |                  | STRING(64)                                      |       |  |  |  |
|                          |                  | "   |       |  |  |  |
|                          |                  | ENO   |       |  |  |  |
|                          |                  | BOOL  |       |  |  |  |
|                          |                  | TRUE  |       |  |  |  |
|                          |                  | Offline   |       |  |  |  |
|                          |                  | BOOL  |       |  |  |  |
|                          |                  | FALSE   |       |  |  |  |
|                          |                  | Ready   |       |  |  |  |
|                          |                  | BOOL  |       |  |  |  |
|                          |                  | TRUE  |       |  |  |  |
|                          |                  | New_Event_Ready                                 |       |  |  |  |
|                          |                  | BOOL  |       |  |  |  |
|                          |                  | FALSE   |       |  |  |  |
|                          |                  | Trigger_Count                                   |       |  |  |  |
|                          |                  | UDINT   |       |  |  |  |
|                          |                  | 0   |       |  |  |  |
|                          |                  | Event_Count                                     |       |  |  |  |
|                          |                  | UDINT   |       |  |  |  |
|                          |                  | 0   |       |  |  |  |
|                          |                  | Missing_Data_Error                              |       |  |  |  |
|                          |                  | BOOL  |       |  |  |  |
|                          |                  | FALSE   |       |  |  |  |
|                          |                  | Missing_Data_Count                              |       |  |  |  |
|                          |                  | UDINT   |       |  |  |  |
|                          |                  | 0   |       |  |  |  |
|                          |                  | File_Name                                       |       |  |  |  |
|                          |                  | STRING(255)                                     |       |  |  |  |
|                          |                  | "   |       |  |  |  |
| RecordingGroup1_POU      |                  |   |       |  |  |  |
| RecordingGroup1_POU_TYPE |                  |   |       |  |  |  |
| TRUE                     | EN               | ENO   | TRUE  |  |  |  |
| FALSE                    | Reset_Statistics | Offline   | FALSE |  |  |  |
| FALSE                    | Event_Trigger    | Ready   | TRUE  |  |  |  |
|                          | Trigger_ID       | New_Event_Ready                                 | FALSE |  |  |  |
|                          |                  | Trigger_Count                                   | 0     |  |  |  |
|                          |                  | Event_Count                                     | 0     |  |  |  |
|                          |                  | Missing_Data_Error                              | FALSE |  |  |  |
|                          |                  | Missing_Data_Count                              | 0     |  |  |  |
|                          |                  | File_Name                                       | -     |  |  |  |

Figure 2.113 RecordingGroupX Controller

A rising edge to Event\_Trigger simultaneously starts recording of the individual COMTRADE files in each SEL-2245-42 module included in RecordingGroupX. Additionally, it records the digital tags at the RTAC processing interval. If SOE tags from the SEL-2244 Digital I/O modules are included in RecordingGroupX, the assertions that occur between the RTAC processing interval will be included in the combined COMTRADE file for RecordingGroupX.

## Continuous Recording Groups

This section describes the configuration and use of Continuous Recording Groups, or CRG, with ACCELERATOR RTAC software. Continuous Recording Groups are available in SEL-3555 and SEL-3350 projects and require the Continuous Recorder licensed option. The Continuous Recording Group is used for logging data from SEL Axion modules (Protection CTPT and Digital Input), phasor measurement units (PMUs), and custom channels like RTAC system tags. Because CRGs continuously log data for multiple days, continuous recording can be used as an effective data historian. The number of days for which data are retained is determined by the Retention Duration field in the Settings tab, and is configurable between 1 and 365 days. The event data that the Continuous Recording Group logs are used to build a customized single zipped COMTRADE file that can be viewed using a program such as SEL-5601-2 SYNCHROWAVE® Event Software. COMTRADE files are dynamically generated based on a requested list of channels and date/time range and can be downloaded from the RTAC's web interface by navigating to the **Continuous Recording Groups** menu under the **Reports** section, as shown in *Figure 2.114*. The generated COMTRADE files are named in COMNAME format and are named for the configured Company and Station Names as well as the name of the CRG in the RTAC project tree.

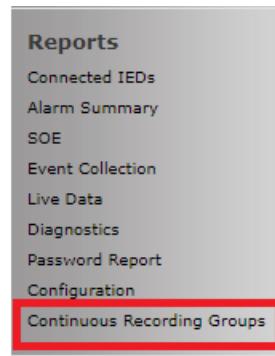


**Figure 2.114 Reports > Continuous Recording Groups**

The Continuous Recording Groups page on the RTAC web interface lists the name of the CRG(s) that have been created from which data can be downloaded, as shown in *Figure 2.115*. The Start Time and End Time represent the range of timestamps of the logged data. The Status of the log file is listed for reference and will have a status of Empty when no data exists, Filling while the CRG is being populated with data, and Stalled while one or more of the CRG data sources stops updating for more than 5 minutes.

| Continuous Recording Groups |                              |                               |         |                          |
|-----------------------------|------------------------------|-------------------------------|---------|--------------------------|
| Name                        | Start Time                   | End Time                      | Status  | Download                 |
| ContinuousRecording         | Wed, Oct 4, 2023, 9:44:01 PM | Thu, Oct 14, 2023, 9:58:10 AM | Filling | <a href="#">Download</a> |

**Figure 2.115 Available Continuous Recording Groups**

Selecting the Download button for a CRG report prompts the user to select a Start Time and *either* an End Time or Duration, as shown in *Figure 2.116*. The maximum duration for a COMTRADE record request is 1 hour in length, regardless of whether End Time or Duration is selected. The available channels are listed and can be selected to be included in the COMTRADE file. Select **Download** to save the COMTRADE file locally.

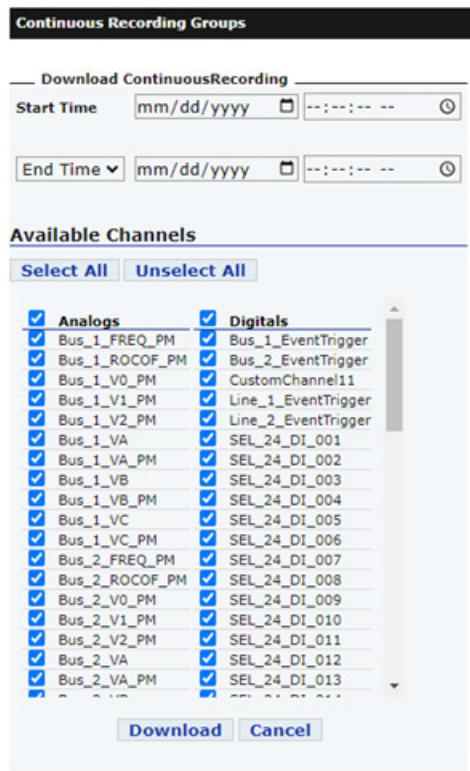

**Figure 2.116** Downloading Continuous Recording Group Data


## Continuous Recording Group Configuration

To add Continuous Recording Groups, from the ribbon in ACCELERATOR RTAC, select **Insert** and then **Continuous Recording Groups**, as shown in *Figure 2.117*. As many as 16 Continuous Recording Group instances can be added to a single RTAC project.



**Figure 2.117** Adding Continuous Recording Groups

The **CRG EtherCAT Modules** and **PMUs** tabs for each Continuous Recording Group allow you to add or remove data sources for that group. In the CRG EtherCAT Modules tab, the Node and Slot columns are automatically populated from the EtherCAT I/O network configuration, as shown in *Figure 2.118*.

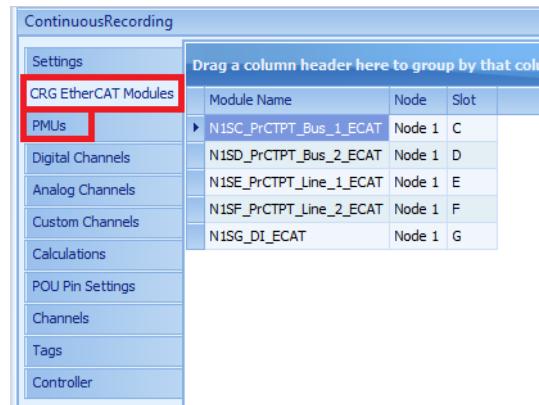**Figure 2.118 Continuous Recording Group Sources**

Use the '+' button in the CRG EtherCAT Modules tab to add a new EtherCAT data source to an existing project. Protection CTPT EtherCAT modules can be added to a single CRG, and Digital input EtherCAT modules can be added to multiple CRGs. When logging data from EtherCAT modules, Continuous Recording Groups support sample rates as fast as 3000 samples per second (3 kHz). As many as 16 Protection CTPT modules can be added to CRGs in the project, for a total of ninety-six 3 kHz channels.

Use the '+' button on the PMUs tab to add PMU sources to the CRG. Potential PMU sources include C37.118 client PMUs, C37.118 server PMU tag lists, and PMUs associated with Protection CTPT EtherCAT modules. A total of 100 PMUs can be added across all CRG instances in a project and they can be shared amongst multiple CRGs. PMUs are logged at the data rate specified by the System Tag PMU data rate.

Once EtherCAT modules and PMUs are added to a CRG, the elements within these data sources can be individually enabled or disabled using the **Analog Channels** and **Digital Channels** tabs. Any element that is set to True will have its data logged and available for inclusion as a channel in the COMTRADE file.

Custom Channels are another component of CRGs that can be included as logged data in the COMTRADE file. As many as 512 tags can be added in the Custom Channels tab and used to reference RTAC system tags. The Tag Type column has a dropdown menu for selecting the data type. BOOL, REAL, and vector\_t are the supported data types. Any custom channels created for a CRG can have their values populated externally via IEC 61131-3 logic.

| ContinuousRecordingGroup1      |        |   |          |           |                |              |
|--------------------------------|--------|---|----------|-----------|----------------|--------------|
| PMU3 ContinuousRecordingGroup1 |        |   |          |           |                |              |
| ContinuousRecordingGroup1      |        |   |          |           |                |              |
| Settings                       |        | Drag a column header here to group by that column |          |           |                |              |
| CRG EtherCAT Modules           | Enable | Tag Name  | Tag Type | Tag Alias | Channel Name   | Analog Units |
| PMUs                           | True   | ContinuousRecordingGroup1.CustomChannel1          | BOOL     |           | CustomChannel1 |              |
| Digital Channels               | True   | ContinuousRecordingGroup1.CustomChannel2          | BOOL     |           | CustomChannel2 |              |
| Analog Channels                | True   | ContinuousRecordingGroup1.CustomChannel3          | REAL     |           | CustomChannel3 |              |
| Custom Channels                | True   | ContinuousRecordingGroup1.CustomChannel4          | vector_t |           | CustomChannel4 |              |
| Calculations                   |        |   |          |           |                |              |
| POU Pin Settings               |        |   |          |           |                |              |
| Channels                       |        |   |          |           |                |              |
| Tags                           |        |   |          |           |                |              |
| Controller                     |        |   |          |           |                |              |

**Figure 2.119 Continuous Recording Group Custom Channels**

**Calculations** can be performed on analog channels available in the 3000 samples-per-second (3k) data from Protection CTPT (PrCtPt) Axion modules. CRGs support as many as 64 calculations based on quantities available in the PrCtPt module channels and support the same mathematical operations as those in standard Recording Groups.

## Continuous Recording Group Limitations

The storage limits of CRGs are limited by the capacity of the SSD. The RTAC RTE will continue writing CRG data to disk until the available storage reaches 4 GB, at which point an SOE log entry is created to alert the user and the CRG begins to overwrite the oldest data with new data. The general SSD space requirement of the CRG is 600–700 MB per day, per channel for 3k sources. For analog data sources with a resolution lower than 3k and digital sources, the SSD space requirement is significantly less per channel.

Continuous Recording Group configurations do not presently have RAID-1 support. While RAID drives can be configured in the SEL-3555 (see *RAID Support and Configuration on page 651* for more information), CRG data are only stored on the system disk.

## Axion Wave Server Overview

The Axion Wave Server streams 3 kHz voltage and current samples from SEL-2245-42 AC Protection Modules via the IEEE C37.118 protocol. It supports Configuration 2 data frames and transmits 3000 messages per second over TCP/IP for as many as 96 channels. Additionally, the Axion Wave Server supports logic engine methods that allow accessing the 3 kHz samples in the RTAC's logic engine. For each SEL-2245-42 AC Protection Module in the Axion Wave Server configuration, the logic engine methods provide channel information, 3 kHz sample values, and the corresponding microsecond time stamps.

## System Components

The Axion Wave Server requires the following components:

- ▶ SEL-3350, SEL-3555 RTAC, or SEL-3560
- ▶ SEL-2242 Backplane(s)
- ▶ SEL-2243 Power Coupler(s)
- ▶ SEL-2245-42 AC Protection Module(s)

## IEEE C37.118 Server Configuration

- Step 1. Starting with a new SEL-3555/SEL-3560 or SEL-3350 RTAC project, configure the SEL Axion EtherCAT network.
- Step 2. Add the Axion Wave Server by selecting it under **SEL Axion** on the **Insert** ribbon.
- Step 3. Set **Enable C37.118 Sample Streaming** in the **Settings** tab to True.
- Step 4. Set the **Server IP Port** in the **Settings** tab. (The default is 4712).

- Step 5. Enable the channels in the **Device** tab. For each SEL-2245-42 AC Protection Module, set **Enable Voltages** to **True** to enable voltage channels VA, VB, and VC; and set **Enable Currents** to **True** to enable current channels IA, IB, and IC.
- Step 6. Set the PMU's **Station Name** and **PMUID** for each device using the SEL-2245-42 AC Protection Module's settings.

## Axion Wave Processing

The Axion Wave Server provides three logic engine methods that access the 3 kHz point on wave samples and their corresponding channel information. The ACSELERATOR RTAC compiler requires completing Steps 1, 2, and 5 from *IEEE C37.118 Server Configuration on page 278* to enable these methods.

### Axion Wave Server Data Structures

*Table 2.47* and *Table 2.48* show the data structures provided by the Axion Wave Server that combine several memory locations into a single variable.

**Table 2.47 struct\_SampleRowData**

| Variable Name | IEC 61131-3 Type | Description  | Default Value |
|---------------|------------------|--|---------------|
| Microseconds  | ULINT            | Number of microseconds since the beginning of Unix Epoch (January 1, 1970)                           | 0             |
| ChannelValue  | Pointer To DINT  | Pointer to an array (0 to NumChannels - 1) of the channels sample integer value from the SEL-2245-42 | Null          |

**Table 2.48 struct\_SampleStream**

| Variable Name       | IEC 61131-3 Type                | Description   | Default Value |
|---------------------|---------------------------------|---|---------------|
| NumChannels         | USINT                           | The number of available channels                                      | 0             |
| NumSamples          | UINT                            | The number of available samples                                       | 0             |
| TimeSynchronization | UDINT                           | The EtherCAT synchronization time difference in units of nanoseconds  | 0             |
| DataQuality         | BOOL                            | The quality of data provided  | False         |
| Samples             | Pointer To struct_SampleRowData | Pointer to an array (0 to NumSamples - 1) of the struct SampleRowData | Null          |

*Figure 2.120* shows a usage example of the struct\_SampleStream data type.

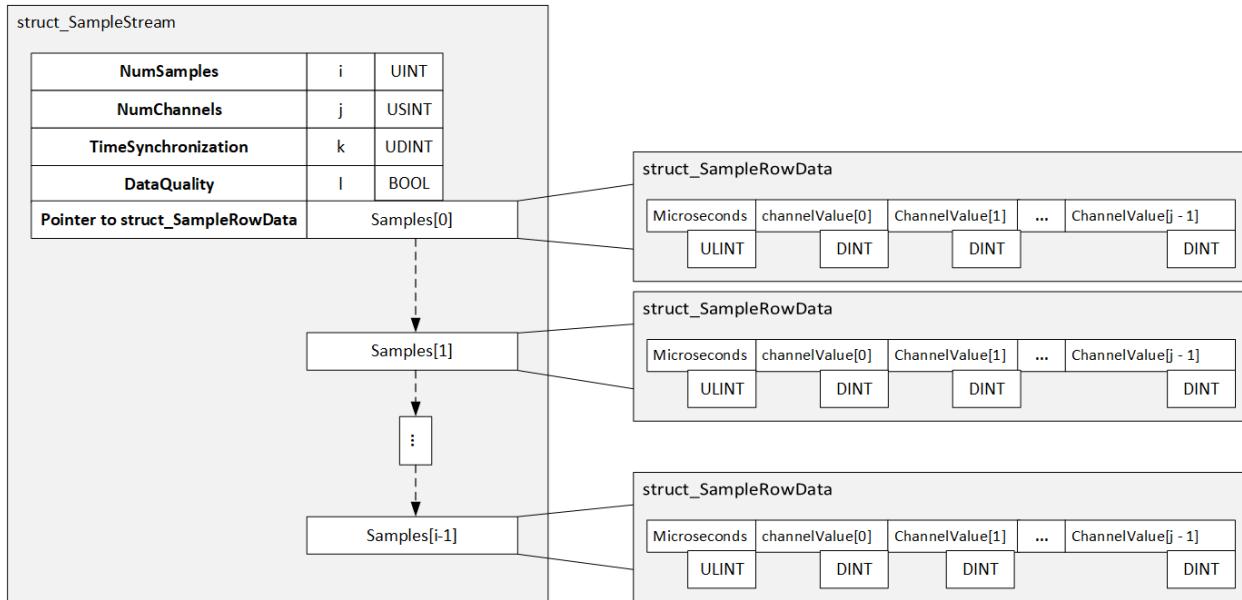


Figure 2.120 struct\_SampleStream Usage Example

Table 2.49 struct\_ChannelInfoRow

| Variable Name | IEC 61131-3 Type | Description  |
|---------------|------------------|--|
| DeviceName    | STRING(62)       | The SEL-2245-42 device name for the provided channel   |
| ChannelName   | STRING(2)        | The SEL-2245-42 channel name (VA, VB, VC, IA, IB, IC)  |
| Conversion    | REAL             | The channels AmpsPerCount or VoltsPerCount ratio to convert the integer sample value to a real quantity (amperes or volts) |

Figure 2.121 shows a usage example of the struct\_ChannelInfo data type.

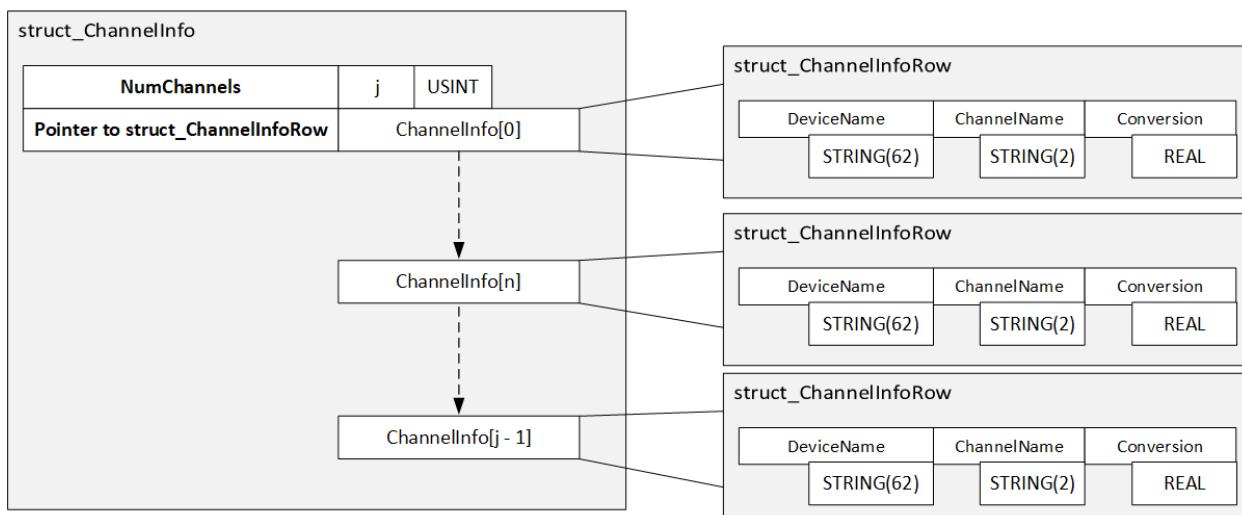


Figure 2.121 struct\_ChannelInfo Usage Example

## GetSamples Method

The Axion Wave Server method GetSamples outputs a struct \_SampleStream from the current RTAC task cycle. Call this method each RTAC processing interval to access the Axion Wave Server point on wave samples in the RTAC logic engine. The number of samples on each processing interval are dependent on the task cycle time. For every millisecond in the task cycle, the Axion Wave Server provides three samples from all enabled channels in the Axion Wave Server. For example, GetSamples will provide 12 samples for a 4-millisecond task cycle. This method populates the struct \_SampleStream data structure with default values if the Axion EtherCAT I/O network is unavailable or if the EnableAxionWaveServer POU pin is False. The following example demonstrates how to use GetSamples in structured text.

Outputs:

```
Samples : struct _SampleStream;
```

Variable declaration:

```
SampleSet : struct _SampleStream;
```

Example in structured text:

```
SEL_Axion_WAVE_POU.Samples. GetSamples(samples => SamplesSet);
```

## GetChannelInfo Method

The Axion Wave Server method GetChannelInfo outputs a struct \_ChannelInfo. This method provides channel indexing information to the corresponding sample data provided from the GetSamples method. This method populates the struct \_ChannelInfo data structure with default values if the Axion EtherCAT I/O network is unavailable or if the EnableAxionWaveServer POU pin is False. The following example demonstrates how to use GetChannelInfo in structured text.

Outputs:

```
ChannelInfo : struct _ChannelInfo;
```

Variable declaration:

```
ChannelInformationSet : struct _ChannelInfo;
```

Example in structured text:

```
SEL_Axion_WAVE_POU.Samples. GetChannelInfo ( ChannelInfo =>  
ChannelInformationSet ) ;
```

## GetChannelIndex Method

The Axion Wave Server method GetChannelIndex provides the ability to look up a channel's index by providing the device name and channel name. This method outputs the channel index of the channel's position in the struct \_SampleRowData array returned by GetSamples. If this method does not find a channel index from the requested inputs, it outputs a value of 255. The following example demonstrates how to use GetChannelIndex in structured text.

Inputs:

```
DeviceName : STRING(62);
```

```
ChannelName : STRING(2);
```

Outputs:

ChannelIndex : USINT;

Variable declaration:

ModuleVAChannelIndex : USINT;

Example in structured text:

```
SEL_Axion_WAVE_POU.Samples.GetChannelIndex(DeviceName :=  
'SEL_PRCTPT_1', ChannelName := 'VA', ChannelIndex =>  
ModuleVAChannelIndex);
```

## Axion Wave Server POU Pins

Use the following POU pin settings to view the present state of the Axion Wave Server Operation.

| Pin Name                    | Pin Type     | Description  | Default |
|-----------------------------|--------------|--|---------|
| EN                          | Input BOOL   | Enables or disables Axion WaveServer and Axion Logic Engine Samples. If False, Axion WaveServer does not process any inputs or update any outputs, and Logic Engine Samples methods output default values. | True    |
| Reset_Statistics            | Input BOOL   | When True, sets all statistics to zero.  | False   |
| ENO                         | Output BOOL  | Asserts to indicate Axion WaveServer is enabled, and deasserts to indicate that Axion WaveServer is disabled and will not process any inputs or update any outputs.  | False   |
| EtherCAT_Message_Count      | Output UDINT | Provides the number of EtherCAT messages that Axion WaveServer has received from the EtherCAT Network.   | 0       |
| Message_Received_Count      | Output UDINT | Provides the number of command frames that Axion WaveServer has received.  | 0       |
| Connection_Count            | Output UDINT | Provides the number of clients connected to Axion WaveServer.  | 0       |
| Sample_Transmission_Enabled | Output BOOL  | Asserts to indicate the Axion WaveServer IEEE C37.118 sample stream is enabled.  | False   |

## Harmonic PQ Quantities on the SEL-2245-42 Module

The SEL-2245-42 AC Protection Modules provide harmonic, interharmonic, and total harmonic distortion (THD) measurements for voltages and currents. Harmonic measurements are calculated as harmonic subgroups, representing the rms value of the spectral content within a 15 Hz band centered on the target harmonic frequency (7.5 Hz before and after). Interharmonic measurements are determined as interharmonic centered subgroups, which are the rms values of the spectral content between two harmonic subgroups. THD measurements are calculated as the ratio of the rms value of the harmonic subgroups, as high as the 63rd harmonic, to the rms value of the subgroup associated with the fundamental frequency. Power quality quantities are not available on the SEL-3530, legacy SEL-2241, or SEL-3505 RTAC project types.

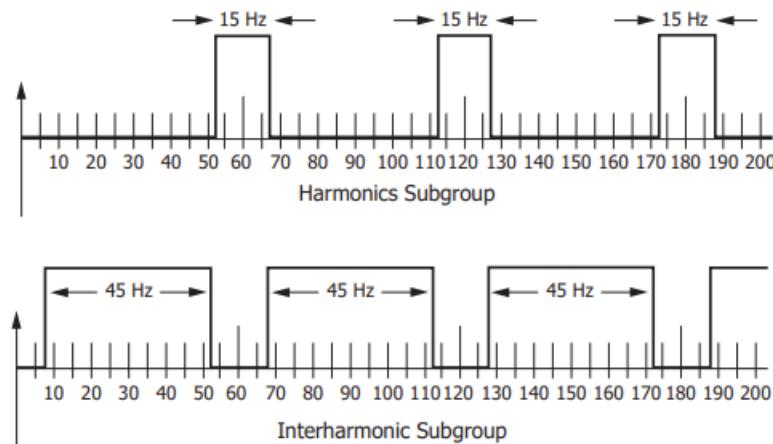


Figure 2.122 Harmonic and Interharmonic Subgroups

## System Components

The following components are required to use Axion Harmonics:

- ▶ SEL-2241-2, SEL-3350, SEL-3555, or SEL-3560
- ▶ SEL-2242 Backplane(s)
- ▶ SEL-2243 Power Coupler(s)
- ▶ SEL-2245-42 AC Protection Module(s)

## SEL-2245-42 Harmonics Configuration

The SEL-2245-42 has two harmonics settings: one for enabling voltage channel harmonic content and one for enabling current channel harmonic content. The default state for both settings is False. Set the value to True to enable collection of harmonic, interharmonic, and THD data for the voltage and current channels.

| 22454200000, PRCTPT, AC 3CT/3PT Protection (1A/5A, 300V), Client - Ethernet [EtherCAT Protocol] |                                |                   |  |  |         |
|---|--------------------------------|-------------------|--|--|---------|
| Properties  | Setting                        | Value             | Range  | Description  | Comment |
| Settings  | ☐ Fundamental Tags             |                   |  |  |         |
| Analog Inputs   | Reference Angle                | No Reference      | <input checked="" type="checkbox"/> Positive Sequen... | The reference angle for fundamental tags   |         |
| Diagnostics   | Fundamental Voltage Scale...   | V                 | kV,V   | The scaling magnitude of the fundamental voltage tags                                |         |
| Tags  | Enable Fundamental CT an...    | True              | True,False   | Apply CT and PT ratios to fundamental current and voltage tags                       |         |
|   | ☐ General                      |                   |  |  |         |
|   | Phase CT Ratio                 | 1                 | 1.00-50000.00  | Phase A, B, and C CT winding ratio   |         |
|   | Phase PT Ratio                 | 1                 | 1.00-10000.00  | Phase A, B, and C PT winding ratio   |         |
|   | PT Connection                  | Wye               | Delta,Wye  | The PT wiring connection type  |         |
|   | Phase Rotation                 | ABC               | ABC,ACB  | Phase rotation   |         |
|   | Frequency Group                | FreqGroup1        | FreqGroup1   | The frequency group to use for frequency tracking                                    |         |
|   | ☐ Harmonics                    |                   |  |  |         |
|   | Enable Voltage Harmonics       | False             | True,False   | Enables streaming of harmonic and interharmonic subgroup magnitudes and subgroup ... |         |
|   | Enable Current Harmonics       | False             | True,False   | Enables streaming of harmonic and interharmonic subgroup magnitudes and subgroup ... |         |
|   | ☐ Oscillography                |                   |  |  |         |
|   | Oscillography Capture Rate     | 8                 | 1,2,4,8,24 (idle...                                    | The capture rate of oscillography data   |         |
|   | Minimum Oscillography Rec...   | 1                 | 0.1 increments ...                                     | Minimum length of an oscillography capture   |         |
|   | Maximum Oscillography Re...    | 1                 | 0.1 increments ...                                     | Maximum length of an oscillography capture   |         |
|   | Oscillography Pre-trigger L... | 0.05              | 0.01 increments...                                     | Pre-trigger length of an oscillography capture                                       |         |
|   | ☐ PMU                          |                   |  |  |         |
|   | Station Name                   | SEL_PRCTPT_1_ECAT | 1-255 (characte...                                     | The PMU station name   |         |
|   | PMU Id                         | 1                 | 1-65534  | Identifier for this PMU  |         |
|   | Voltage Phasor Data Set        | Phase             | All,Phase,Positi...                                    | Voltage Phasor channels for PMU data set   |         |
|   | Current Phasor Data Set        | Phase             | All,Phase,Positi...                                    | Current Phasor channels for PMU data set   |         |
|   | ☐ RMS Tags                     |                   |  |  |         |
|   | RMS Voltage Scaling Magni...   | V                 | kV,V   | The scaling magnitude of the RMS voltage tags  |         |
|   | Enable RMS CT and PT Rat...    | True              | True,False   | Apply CT and PT ratios to RMS current and voltage tags                               |         |
|   | ☐ Synchrophasors               |                   |  |  |         |
|   | Phase Voltage Angle Comp...    | 0                 | -179.99-180.00...                                      | Angle compensation for the A, B, and C phase voltage synchrophasor tags              |         |
|   | Phase Current Angle Comp...    | 0                 | -179.99-180.00...                                      | Angle compensation for the A, B, and C phase current synchrophasor tags              |         |

Figure 2.123 SEL-2245-42 Harmonic Settings

## Axion Harmonics Processing

This section provides several methods for accessing harmonics data in the RTAC's logic engine. Use the method calls in this section to collect harmonic data and assign these data to RTAC logic engine tags. All methods below are contained within the EtherCATInstance function block, which is defined as part of the ECAT\_POU. Therefore, all method calls in this section, when called from the RTAC logic engine must be prepended with "ECAT\_POU.EtherCATInstance".

## Axion Harmonics Data Structures

The EtherCAT POU provides the following data structures and enumerations for harmonic data. The struct\_PqModule data type contains an index for the SEL-2245-42 module and is used to access the harmonic quantities. The enum\_PqChannel enumeration is used to define SEL-2245-42 module channels from which to access the harmonic quantities.

Table 2.50 struct\_PqModule

| Variable Name | IEC 61131 Type | Description                                      | Default Value |
|---------------|----------------|--|---------------|
| ModuleIndex   | UDINT          | The index of the module in the EtherCAT network. | 0             |

**Table 2.51 enum\_PqChannel**

| Variable Name | Description                          | Value |
|---------------|--------------------------------------|-------|
| VA            | The VA or VAB channel of the module. | 1     |
| VB            | The VB or VBC channel of the module. | 2     |
| VC            | The VC or VCA channel of the module. | 3     |
| IA            | The IA channel of the module.        | 4     |
| IB            | The IB channel of the module.        | 5     |
| IC            | The IC channel of the module.        | 6     |

## GetPqModule Method

The EtherCATInstance method GetPqModule outputs a struct\_PqModule and returns True if the module is in the EtherCAT network and has harmonics enabled. Call this method as part of the initialization process to access the Axion Harmonics data in the RTAC logic engine. This method takes a pointer to a string of an SEL-2245-42 module name as input and populates the output as a struct\_PqModule with the module index. When the reference module is not present in the EtherCAT network, the module index is populated with the maximum value (4294967295). The following example demonstrates how to use GetPqModule in structured text.

Outputs:

```
Module : struct_PqModule;
```

Variable Declaration:

```
HarmonicModule : EtherCAT.struct_PqModule;
```

```
ModulesAvailable : BOOL;
```

Example In Structured Text:

```
ModulesAvailable :=  
ECAT_POU.EtherCATInstance.GetPqModule(ADR('SEL_PRCTPT_1'),  
Module=>HarmonicModule) ;
```

## GetPqDataAvailable Method

The EtherCATInstance method GetPqDataAvailable returns True for one processing cycle when the new harmonics data are ready for retrieval. Call this method to check for new harmonics data. The following example demonstrates how to use GetPqDataAvailable in structured text.

Variable Declaration:

```
DataAvailable : BOOL;
```

```
HarmonicModule : EtherCAT.struct_PqModule;
```

Example In Structured Text:

```
DataAvailable :=  
ECAT_POU.EtherCATInstance.GetPqDataAvailable(HarmonicModule);
```

## GetPqDataQuality Method

The EtherCATInstance method GetPqDataQuality returns True when the harmonic measurements have good quality. The SEL-2245-42 module measures harmonic quantities accurately when the tracked frequency is valid and between 40 Hz and 70 Hz. Otherwise, the harmonic measurements are considered to have bad quality. Call this method to verify that the system frequency is within range for harmonics accuracy. The following example demonstrates how to use GetPqDataQuality in structured text.

Variable Declaration:

```
HarmonicsQuality : BOOL;  
HarmonicModule : EtherCAT.struct_PqModule;
```

Example In Structured Text:

```
HarmonicsQuality :=  
ECAT_POU.EtherCATInstance.GetPqDataQuality(HarmonicModule);
```

## GetPqTimestamp Method

The EtherCATInstance method GetPqTimestamp outputs the time stamp of the first sample used in the dataset to calculate the harmonic measurements in microseconds. The microsecond time stamp can be converted to dateTime format using a built in function. The following example demonstrates how to use GetPqTimestamp in structured text.

Outputs:

```
MicroSeconds : ULINT;
```

Variable Declaration:

```
HarmonicsUs : ULINT;  
HarmonicsTimestamp : datetime_t;
```

Example In Structured Text:

```
ECAT_POU.EtherCATInstance.GetPqTimestamp(HarmonicModule,  
Microseconds=>HarmonicsUs);  
  
HarmonicsTimestamp := fun_ULINT_TO_dateTime_t(HarmonicsUs);
```

## GetPqHarmonic Method

The EtherCATInstance method GetPqHarmonic outputs the value of the requested harmonic identified by the module, channel, and order. The input Order accepts an integer value from 1 to 63. Each harmonic value is the rms value of the spectral components within a 15 Hz band centered on the harmonic orders frequency. The following example demonstrates how to use GetPqHarmonic in structured text.

Outputs:

```
Value : REAL;
```

Variable Declaration:

```
Order : INT := 4;  
  
Harmonic4Value : REAL;
```

Example In Structured Text:

```
ECAT_POU.EtherCATInstance.GetPqHarmonic(HarmonicModule,  
enum_PqChannel.IA, Order, Value=>Harmonic4Value);
```

## GetPqInterharmonic Method

The EtherCATInstance method GetPqInterharmonic outputs the value of the requested interharmonic identified by the module, channel, and order. The input Order accepts an integer value from 1 to 62. Each interharmonic value is the rms value of the spectral components between two adjacent harmonic orders. The order for interharmonics is referenced from the preceding harmonic. Requesting the interharmonic of order two returns the interharmonic between harmonic two and harmonic three. The following example demonstrates how to use GetPqInterharmonic in structured text.

Outputs:

```
Value : REAL;
```

Variable Declaration:

```
VaHarmonicThd : REAL;
```

Example In Structured Text:

```
ECAT_POU.EtherCATInstance.GetPqInterharmonic(HarmonicModule,  
enum_PqChannel.IA, Order, Value=>Interharmonic4Value);
```

## GetPqThd Method

The EtherCATInstance method GetPqThd outputs the value of the requested THD identified by the module and channel. The THD is calculated from the harmonics up to and including the 63rd order; it does not include interharmonics. The following example demonstrates how to use GetPqThd in structured text.

Outputs:

```
Value : REAL;
```

Variable Declaration:


```
VaHarmonicThd : REAL;
```

Example In Structured Text:

```
ECAT_POU.EtherCATInstance.GetPqThd(HarmonicModule,  
enum_PqChannel.VA, Value=>VaHarmonicThd);
```

## Node Connections Editor

You must configure the EtherCAT network before you can download a new project to an RTAC that contains SEL-2243 Power Couplers, SEL-2244 I/O modules, and SEL-2245 I/O modules. The ACSELERATOR RTAC project must include specific information about the placement of modules within an SEL-2240 node and the network connections between nodes. The Node Connections Editor provides a simple interface you will use to provide this information. Click on the EtherCAT I/O network entry in the project view, as shown in *Figure 2.124*, to access the Node Connections Editor.

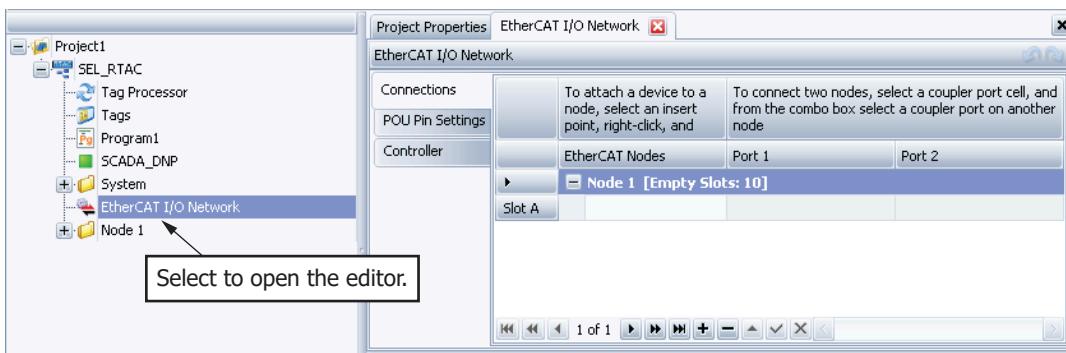

**Figure 2.124** Opening the Node Connections Editor


The editor has three tabs: **Connections**, **POU Pin Settings**, and **Controller**. See *POU Pin Settings (Advanced Usage)* on page 141 for a description of the **POU Pin Settings** tab. See *Controller (Advanced Usage)* on page 141 for a description of the **Controller** tab. In online mode, the Node Connections Editor provides valuable diagnostics about the operation and state of the EtherCAT network. Refer to *Section 3: Testing and Troubleshooting* in the *SEL-2240 Instruction Manual* for details.

## Controlling EtherCAT Response to Network Errors

There are two options available for operating the EtherCAT network in case of network errors or I/O module failure. By default, all EtherCAT network traffic will shut down, and outputs will return to de-energized state, if the RTAC receives message errors for 25 ms. Optionally, the Axion system can be configured so that the network will remain in operation even if some portions of the network become unavailable.

Control this operation by using a POU pin setting for the EtherCAT I/O Network. View and change the selection, using the following steps in ACSELERATOR RTAC.

- Step 1. Select **EtherCAT I/O Network** from the project view pane.
- Step 2. Click **POU Pin Settings**.
- Step 3. As shown in *Figure 2.125*, find the present value for the setting **Disable\_On\_Network\_Error**. The value will be TRUE initially for each new project. Change the value to FALSE if you prefer that the network continue to operate even if there are network errors or I/O module failures.
- Step 4. Save and download the project.

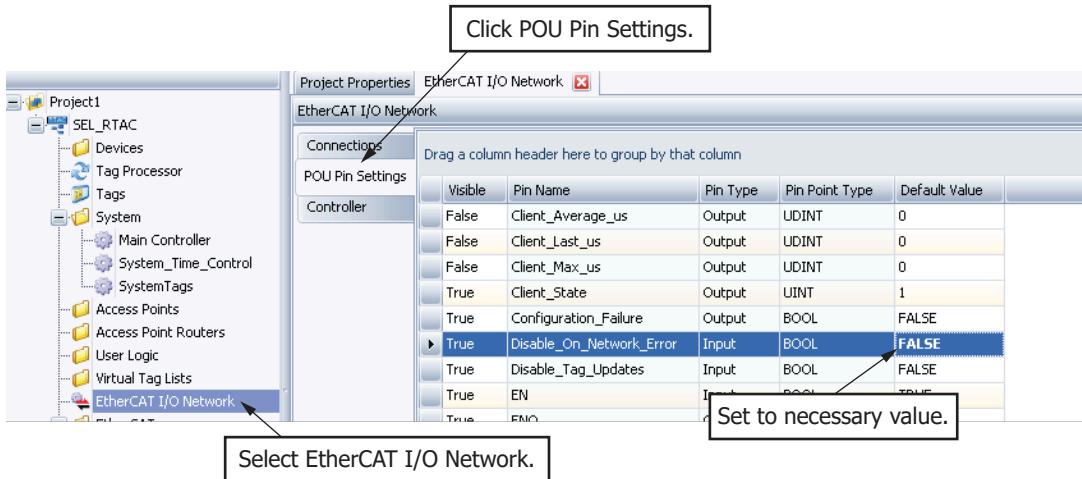

**Figure 2.125 Configuring Disable on Network Error Setting**

## Connections

The **Connections** tab provides a tabular view of the nodes and modules in the project. When you open the Node Connections Editor for the first time, there will be an entry for a single node named Node 1 (you can rename this at any time). Next to the node name you will see the number of empty slots in that node. The primary editor actions are as follows:

- ▶ Attaching modules to a node
- ▶ Adding a node
- ▶ Editing the network connection between nodes
- ▶ Renaming a node
- ▶ Deleting a node
- ▶ Moving modules

### NOTE

For ease of initial project configuration and troubleshooting, we recommend that you add only one node at a time to a project. Download and verify EtherCAT network operation prior to adding subsequent nodes.

### NOTE

If a node does not include a legacy SEL-2241 or an SEL-2241-2, then a power coupler should be the initial module in a node. This would be the case if you are using an external SEL-3350, SEL-3555, or SEL-3530 RTAC.

### NOTE

If you select multiple modules in the dialog box, ACCELERATOR RTAC will list them in the node in the same sequence they appeared in the dialog box.


### NOTE

All RTAC modules in the module list have an "[RTAC]" suffix, and all power couplers have a "[Coupler]" suffix. These suffixes will help you quickly identify these types of modules, regardless of module names.

## Attaching Modules to a Node

Modules must be listed in the Node Connections Editor such that the listing matches their physical placement in the node. The EtherCAT network cannot autoconfigure and initialize upon downloading the project if the modules are not listed accurately. If you have an SEL-2241 RTAC module in a node, it must be the initial module added for that node. All subsequent modules must be added so that there are no blank slots between modules in the node. You do not need to fill every slot, but all modules must be installed sequentially and without gaps. As shown in *Figure 2.126*, follow these steps to add the RTAC module to Slot A.

- Step 1. Right-click on the empty slot where the module resides.
- Step 2. Select **Attach Devices**.
- Step 3. The dialog box that appears allows you to select one or more available modules from your project. The selection for an SEL-2241 will only be available so long as no other SEL-2241 has been configured in the project and no network connection has been designated for an external RTAC.
- Step 4. Select the SEL-2241 (RTAC) and press **Attach**.
- Step 5. In the resulting editor window, the SEL-2241 displays in Slot A and the number of empty slots now shows 9.

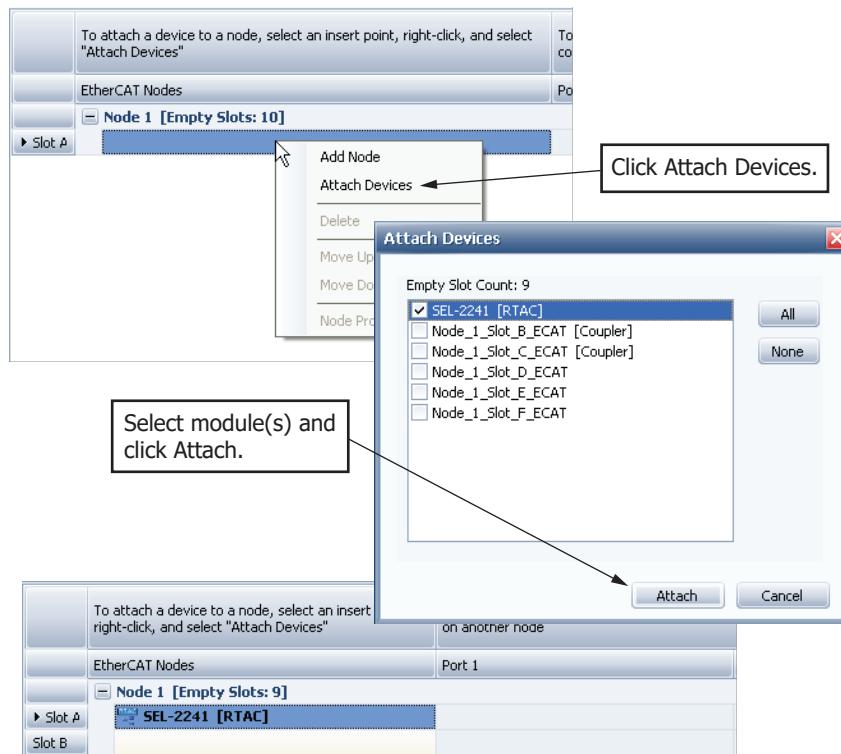

**Figure 2.126 Attach a Device to a Node**

## Adding a Node

There are two methods for adding a new node to the project. First, as shown at the bottom of *Figure 2.127*, select the + control at the bottom of the editor. Second, right-click on any row to select **Add Node**.

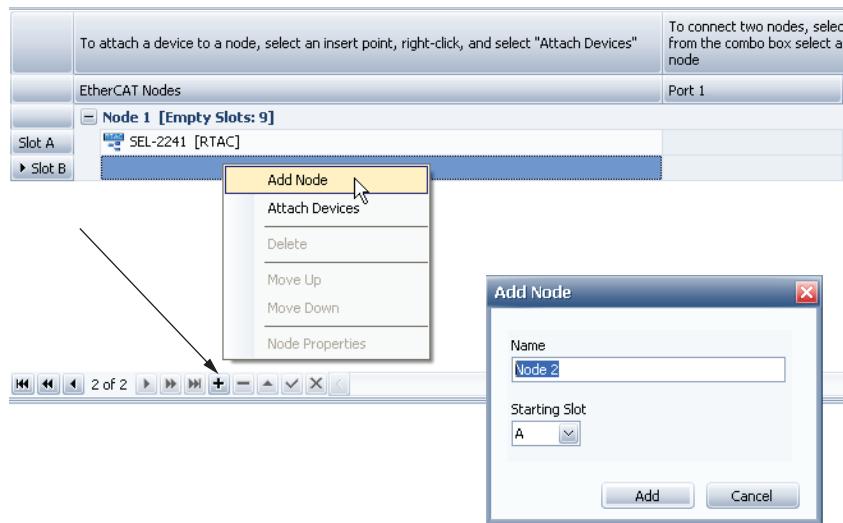


Figure 2.127 Adding a Node to the Project


After you use either selection method, you will see the **Add Node** dialog box. Provide a custom node name, if necessary. There is also a selection for the starting slot of a node. In most cases, the default selection of Slot A will be sufficient. Finally, click the **Add** button to accept a selection.

## Editing Internode Connections

The automatic EtherCAT network configuration the RTAC performs during network initialization is dependent not only on accurate information about the sequence of modules within a node, but also on accurate information about the network cabling between nodes. The Axion system supports a number of different network configurations. As you will see, the Node Connections Editor will only allow you to enter settings for a valid network; it will also be helpful for your understanding of the basic networking rules for connections between nodes.

The SEL-2243 Power Couplers provide two Ethernet ports dedicated for EtherCAT. These ports are labeled **PORT 1** and **PORT 2**, respectively. For the following figures, we have used IN and OUT labels to denote the ports operating in the IN mode and the OUT mode for EtherCAT. An **IN** port is the port by which a node is connected to an upstream node or an external RTAC and is designated in the figures by a label of **IN**. **PORT 2** in a power coupler never operates as an **IN** port. **OUT** ports make a connection to a downstream node and are designated in the figures by a label of **OUT**. Each figure illustrates only a portion of the nodes.

As an initial example, consider a system using an external RTAC and multiple nodes, all with single power coupler modules, as shown in *Figure 2.128*. **PORT 1** of Node 1 is connected to the RTAC and is the **IN** port for Node 1. **PORT 2** is the **OUT** port for Node 1 and is connected to **PORT 1** of Node 2. Finally, **PORT 2** of Node 2 is connected to **PORT 1** of Node 3. You can continue this sequential networking method for more nodes, as necessary (as much as the maximum module limit).

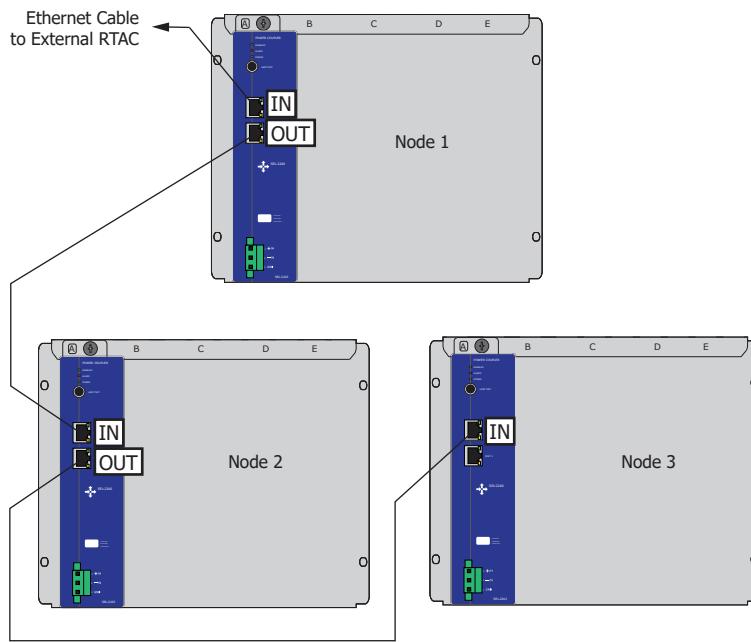

**Figure 2.128 Axion System Using an External RTAC and Single Power Couplers**

*Figure 2.129* illustrates how to begin configuring this system in the Node Connections Editor by identifying the **IN** connection to an external RTAC. In the figure, notice that we have already created three nodes and attached a power coupler to Slot A of each node. Select the entry cell for **PORT 1** of the Node 1 coupler to see the valid input connections. No other node contains an RTAC module connection, so ACCELERATOR RTAC will allow **IN** connections from an external RTAC, Node 2, or Node 3 at this point. Click on **[IN] SEL-3530 [RTAC]**.


Next, set up the connection between Node 1 and Node 2. As you can see in *Figure 2.130*, you will need to select the Port 2 cell for Node 1 and click the entry for **[OUT] Node 2, Node\_2\_Slot\_A\_ECAT, Port 1**. The segments of this entry have the following meanings:

**[OUT]**—The EtherCAT function of the selected port, either **IN** or **OUT**.


**Node 2**—The name of the node to which you are connecting. This is the node name as listed in the Node Connection Editor; it does not reference a folder or device name in the project view.

**Node\_2\_Slot\_A\_ECAT**—The module name of the power coupler to which you are connecting. You must add power couplers to the project view before the power couplers are available options in the Node Connection Editor.

**Port 1**—The physical port on the power coupler to which you are connecting.

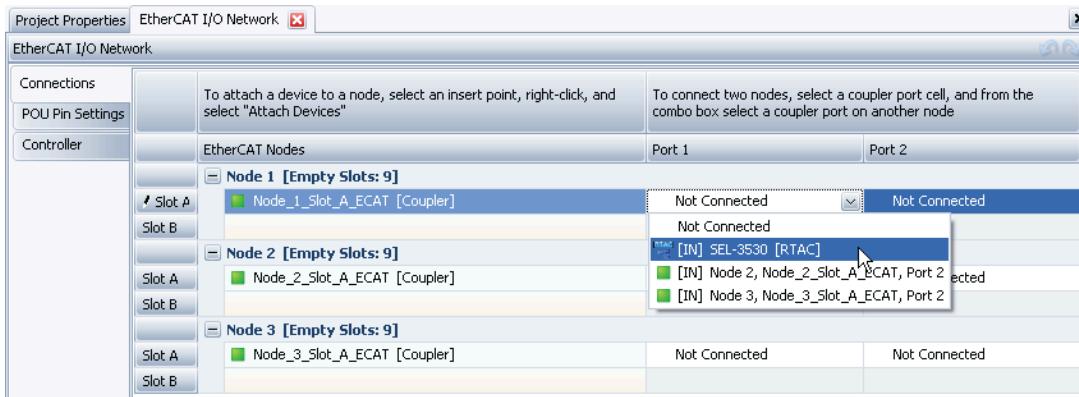

**Figure 2.129 Setting an Input Connection to an External RTAC**

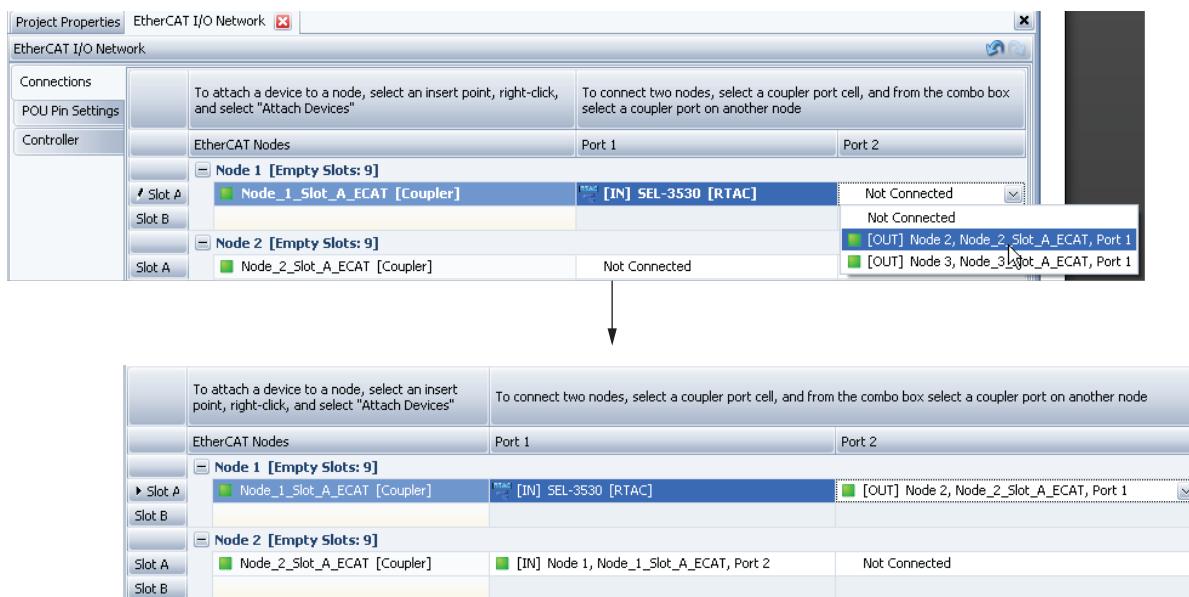


**Figure 2.130 Connection From Node 1 to Node 2**

Notice in the lower portion of *Figure 2.130* that ACSELERATOR RTAC automatically filled in the corresponding entry in Node 2 to complete the connection. Finally, configure the connection from Node 2 to Node 3. In this case, as shown in *Figure 2.131*, we selected the "IN" port (PORT 1 on Node 3). The drop-down menu only lists available connections; we already have an RTAC connection in the project, so the list no longer includes an RTAC entry. Once again, the reciprocal entry for PORT 2 on Node 2 is automatically created, as shown in the lower portion of *Figure 2.131*.

#### NOTE

ACSELERATOR RTAC validates settings in the Node Connection Editor each time the project is saved. Validation does not occur automatically when a setting changes.

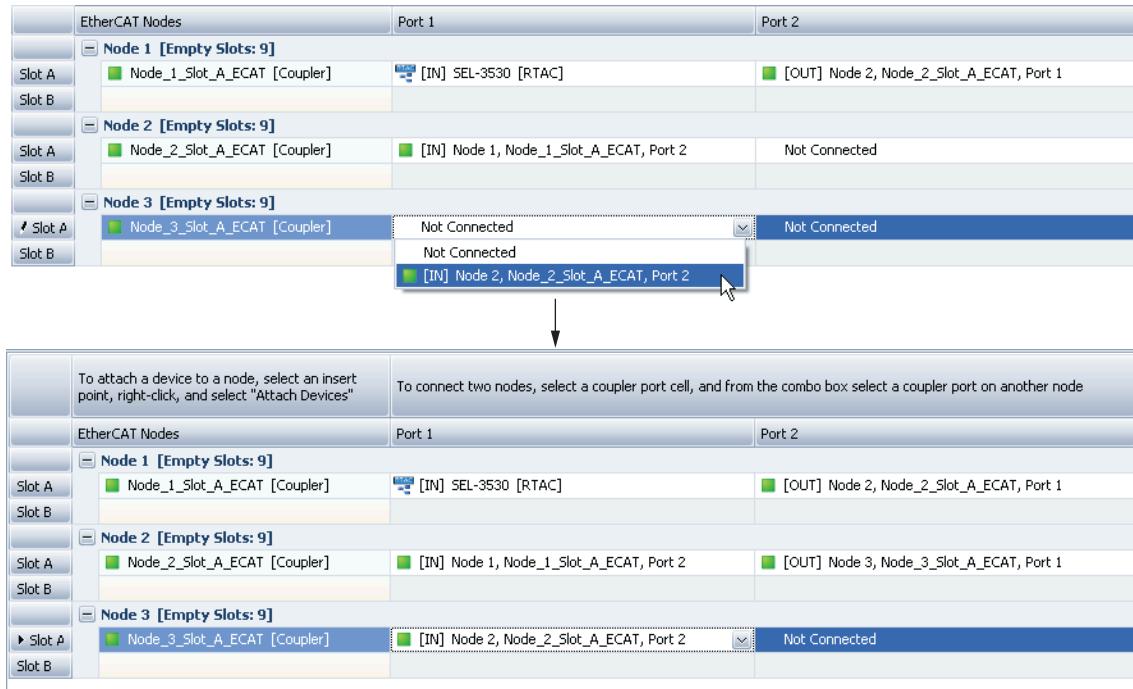


**Figure 2.131 Connection From Node 2 to Node 3**

For the next example, the system includes an SEL-2241 RTAC module and three nodes, all with a single power coupler. We can configure a network of this type in a sequential manner similar to the previous example. In this case, however, we used a star arrangement as shown in Figure *Figure 2.132*. When you use an SEL-2241 RTAC rather than an external RTAC, the first power coupler in the node containing the RTAC uses the backplane connector as an IN port for EtherCAT. Therefore, you can use both ports on the first power coupler in "OUT" mode.

*Figure 2.133* displays the Node Connection Editor results for configuring this system. An SEL-2241 RTAC resides in Slot A of Node 1. Both OUT ports on the Node 1 power coupler connect with the respective IN ports on Node 2 and Node 3.

### NOTE

The Node Connection Editor grid is grayed and unavailable for slots that do not contain a power coupler.

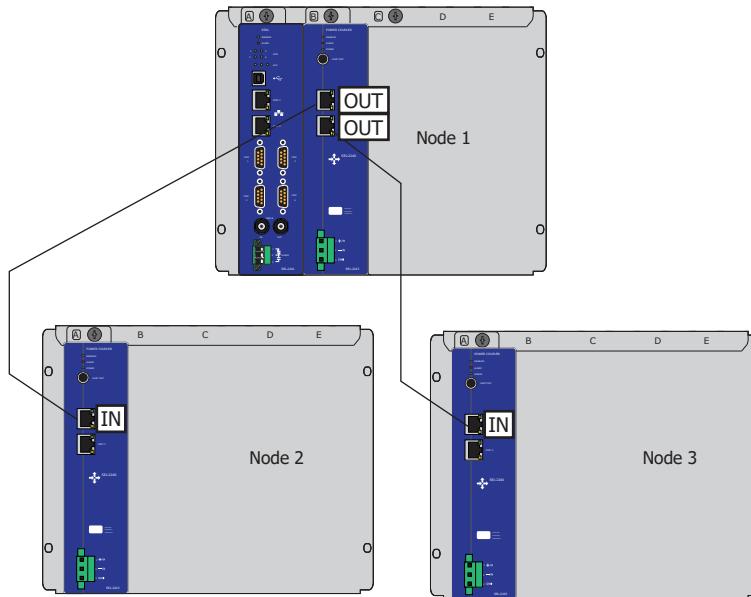

**Figure 2.132 Axion System Using an SEL-2241 RTAC and Single Power Couplers**

|  |  |  |
|--|--|--|
| To attach a device to a node, select an insert point, right-click, and select "Attach Devices" | To connect two nodes, select a coupler port cell, and from the combo box select a coupler port on another node |  |
| EtherCAT Nodes   | Port 1   | Port 2   |
| Node 1 [Empty Slots: 8]  |  |  |
| Slot A   | SEL-2241 [RTAC]  |  |
| Slot B   | Node_1_Slot_B_ECAT [Coupler]   | [OUT] Node 2, Node_2_Slot_A_ECAT, Port 1    [OUT] Node 3, Node_3_Slot_A_ECAT, Port 1 |
| Slot C   |  |  |
| Node 2 [Empty Slots: 9]  |  |  |
| Slot A   | Node_2_Slot_A_ECAT [Coupler]   | [IN] Node 1, Node_1_Slot_B_ECAT, Port 1    Not Connected                             |
| Slot B   |  |  |
| Node 3 [Empty Slots: 9]  |  |  |
| Slot A   | Node_3_Slot_A_ECAT [Coupler]   | [IN] Node 1, Node_1_Slot_B_ECAT, Port 2    Not Connected                             |
| Slot B   |  |  |

**Figure 2.133 Node Connection Editor Results for System in Figure 2.132**

The next two examples deal with systems using redundant power couplers. In all cases, each node can have only one port functioning as an IN port. PORT 1 in the first power coupler will function as the IN port for every node except a node containing an SEL-2241. As we stated previously, the Node Connection Editor helps ensure that each setting is valid.

In *Figure 2.134* you will see a system connected to an external RTAC that uses dual power couplers. This is another example of a star network, with Nodes 2, 3, and 4 all connected to Node 1. *Figure 2.135* shows the settings for this system.

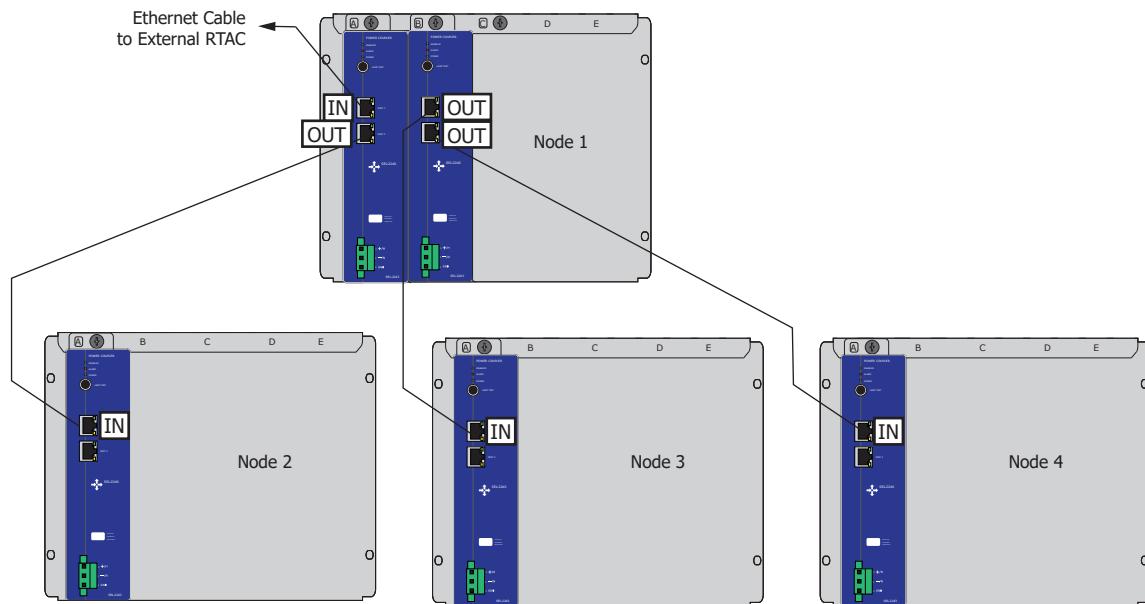


Figure 2.134 Axion System Using an External RTAC and Dual Power Couplers

| Node 1 [Empty Slots: 8]        |  |  |
|--------------------------------|--|--|
| Slot A                         | Slot B                                   | Slot C                                   |
| [Node_1_Slot_B_ECAT [Coupler]] | [IN] SEL-3530 [RTAC]                     | [OUT] Node 2, Node_2_Slot_A_ECAT, Port 1 |
| [Node_1_Slot_C_ECAT [Coupler]] | [OUT] Node 3, Node_3_Slot_A_ECAT, Port 1 | [OUT] Node 4, Node_4_Slot_A_ECAT, Port 1 |
| Node 2 [Empty Slots: 9]        |  |  |
| Slot A                         | Slot B                                   |  |
| [Node_2_Slot_A_ECAT [Coupler]] | [IN] Node 1, Node_1_Slot_B_ECAT, Port 2  | Not Connected                            |
| Node 3 [Empty Slots: 9]        |  |  |
| Slot A                         | Slot B                                   |  |
| [Node_3_Slot_A_ECAT [Coupler]] | [IN] Node 1, Node_1_Slot_C_ECAT, Port 1  | Not Connected                            |
| Node 4 [Empty Slots: 9]        |  |  |
| Slot A                         |  |  |
| [Node_4_Slot_A_ECAT [Coupler]] | [IN] Node 1, Node_1_Slot_C_ECAT, Port 2  | Not Connected                            |

Figure 2.135 Node Connection Editor Results for System in Figure 2.134

Figure 2.136 represents the final example. The system has an SEL-2241, two nodes with dual SEL-2243 Power Couplers, and a mixture of sequential and star connections. Notice that the star connections can be tiered, such as exemplified by Node 1 and Node 2. Also note that Node 2 has one star connection (Node 6) and one sequential connection (Node 7). You can mix and match the connections to match the application. Figure 2.137 shows the configuration results for the system.

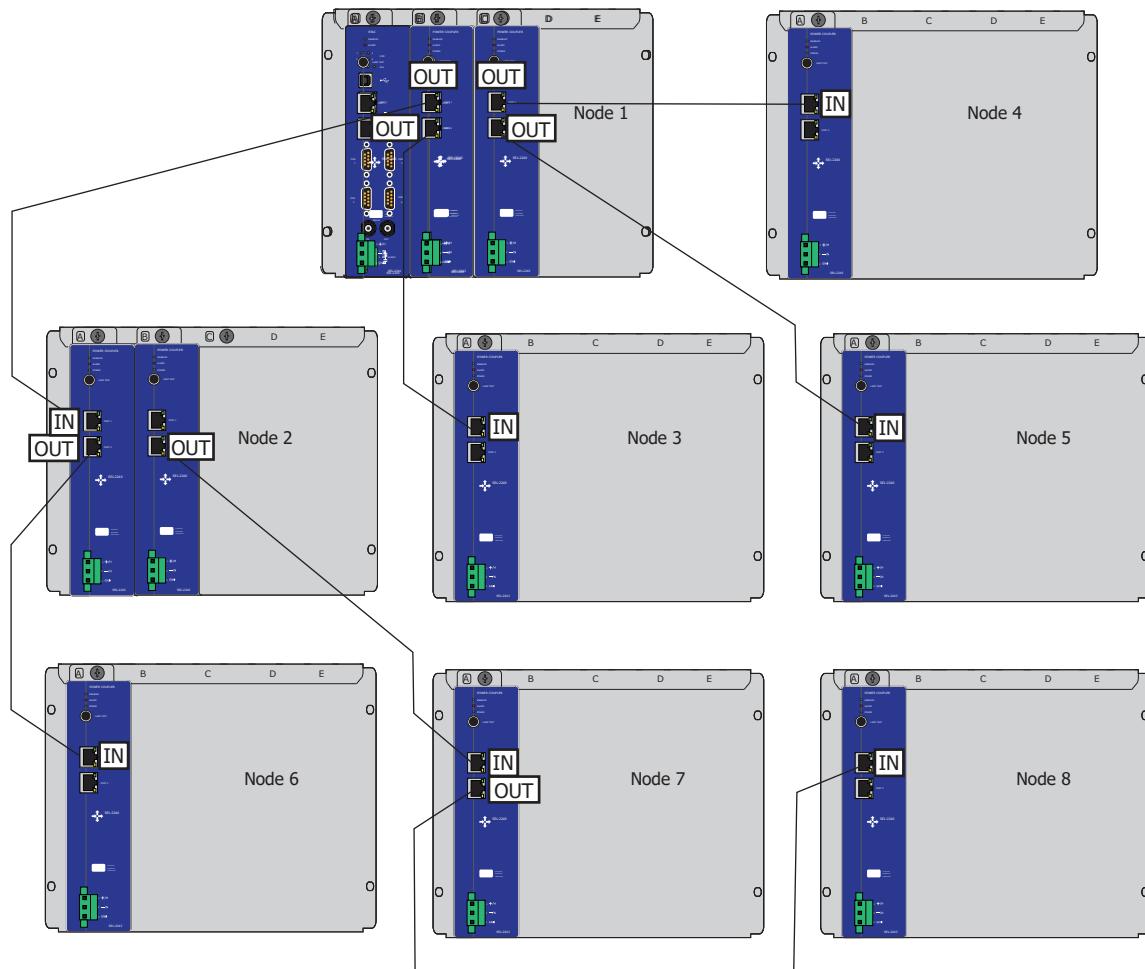


Figure 2.136 Axion System Using an SEL-2241 and Dual Power Couplers

|        | EtherCAT Nodes               | Port 1                                   | Port 2                                   |
|--------|------------------------------|--|--|
| Slot A | SEL-2241 [RTAC]              |  |  |
| Slot B | Node_1_Slot_B_ECAT [Coupler] | [OUT] Node_2, Node_2_Slot_A_ECAT, Port 1 | [OUT] Node_3, Node_3_Slot_A_ECAT, Port 1 |
| Slot C | Node_1_Slot_C_ECAT [Coupler] | [OUT] Node_4, Node_4_Slot_A_ECAT, Port 1 | [OUT] Node_5, Node_5_Slot_A_ECAT, Port 1 |
| Slot D |                              |  |  |
| Slot A | Node_2_Slot_A_ECAT [Coupler] | [IN] Node_1, Node_1_Slot_B_ECAT, Port 1  | [OUT] Node_6, Node_6_Slot_A_ECAT, Port 1 |
| Slot B | Node_2_Slot_B_ECAT [Coupler] | Not Connected                            | [OUT] Node_7, Node_7_Slot_A_ECAT, Port 1 |
| Slot C |                              |  |  |
| Slot A | Node_3_Slot_A_ECAT [Coupler] | [IN] Node_1, Node_1_Slot_B_ECAT, Port 2  | Not Connected                            |
| Slot B |                              |  |  |
| Slot A | Node_4_Slot_A_ECAT [Coupler] | [IN] Node_1, Node_1_Slot_C_ECAT, Port 1  | Not Connected                            |
| Slot B |                              |  |  |
| Slot A | Node_5_Slot_A_ECAT [Coupler] | [IN] Node_1, Node_1_Slot_C_ECAT, Port 2  | Not Connected                            |
| Slot B |                              |  |  |
| Slot A | Node_6_Slot_A_ECAT [Coupler] | [IN] Node_2, Node_2_Slot_A_ECAT, Port 2  | Not Connected                            |
| Slot B |                              |  |  |
| Slot A | Node_7_Slot_A_ECAT [Coupler] | [IN] Node_2, Node_2_Slot_B_ECAT, Port 2  | [OUT] Node_8, Node_8_Slot_A_ECAT, Port 1 |
| Slot B |                              |  |  |
| Slot A | Node_8_Slot_A_ECAT [Coupler] | [IN] Node_7, Node_7_Slot_A_ECAT, Port 2  | Not Connected                            |

Figure 2.137 Node Connection Editor Results for System in Figure 2.136

## Renaming a Node

Rename a node in the Node Connection Editor at any time via the Node Properties function. As shown in *Figure 2.138*, simply right-click on the node name and select **Node Properties** from the menu. Then, in the dialog box, type in the replacement name and click **Set** to complete the operation.

### NOTE

Node names must be unique.

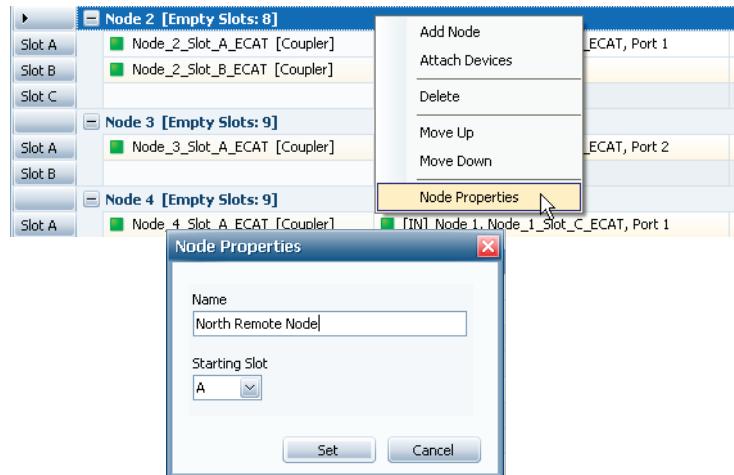


Figure 2.138 Renaming a Node

## Deleting a Node

Delete unneeded nodes in the Node Connection Editor at any time. As with the renaming function, you can perform this deletion of unneeded nodes by right-clicking on the node name and selecting **Delete** from the menu. All of the connections referring to this node will also be deleted. However, the modules that are listed as part of that node are not deleted from the project. Attach the modules to the correct node by moving them prior to deleting the node within which they presently reside.

## Moving Modules and Nodes

The Node Connection Editor has an intuitive drag-and-drop interface to change the sequence of nodes or modules in the view. Whether you need to change the sequence of modules within a node, move a module from one node to another, or change the displayed sequence of nodes, just select and drag the items to their new location. ACCELERATOR RTAC will not allow for multiple item selection in this view.

## RTU Project Examples

There are two project templates in the **SEL-3530/3530-4/2241** RTAC type project category in the **Create Project** dialog box. These RTU projects gather data from one to three SEL Axion nodes and report to a DNP master. Most projects only contain digital inputs and outputs (I/O), but four projects include gathering of dc analog inputs (AI) from an SEL-2411 through IEC 61850 GOOSE messages. Most of the projects use RJ45 EtherCAT connectors for Power Couplers. The projects that have three nodes include variations with LC fiber-optic EtherCAT connectors for Power Couplers. The projects include 125 V digital input and Form A digital output modules.

Each project includes a DNP master connection for all connected I/O, and this connection includes dc AIs if the project includes them. Additionally, all digital I/O map to the internal SOE data for time-stamping of all inputs and outputs. The input debounce time is 5 ms on pickup and dropout.

Each project includes IEC 61131-3 example functions that are not active, but are available for use. These functions include a transfer trip function (TTF), assert digital output (ADO), square-wave generator (SWG), frequency meter (FM), and an analog input alarm (AI\_Alm).

**Table 2.52 RTU Templates With Included Modules**

| Project | Nodes                            | RTAC | PC Mod                     | 24 DI Mod | DO Mod | AI Mod | CT/PT Mod | Description  |
|---------|----------------------------------|------|----------------------------|-----------|--------|--------|-----------|--|
| 1       | Node 1<br>Node 2 and 3<br>Node 4 | 2241 | 2 RJ45<br>2 RJ45<br>2 RJ45 | 4<br>5    | 3<br>3 | 2      | 2         | 336 DI/144 DO/32 AI/8 CT/8 PT<br>Dual-Redundant RJ45 |
| 2       | Node 1<br>Node 2                 | 2241 | 2 RJ45<br>2 RJ45           | 4         | 4      | 2      | 1         | 96 DI/48 DO/32 AI/4 CT/4 PT<br>Dual-Redundant RJ45   |


## Setting Modifications

There are several settings you may want to change from their defaults to obtain the necessary performance.

- ▶ *RTAC Update Rate on page 300*
- ▶ *Input Debounce Settings on page 300*
- ▶ *SOE Logging Settings on page 301*
- ▶ *DNP IP Settings on page 301*
- ▶ *IEC 61131-3 Example Function Use on page 302*
- ▶ *IEC 61850 GOOSE Analog Settings on page 302*

### RTAC Update Rate


The RTAC task cycle time is set at 50 ms in the RTU projects. Adjust this setting in the **Main Controller Options** according to how often you want the information in the RTAC to refresh. To optimize CPU utilization, try to avoid setting the task rate at the fastest settings.

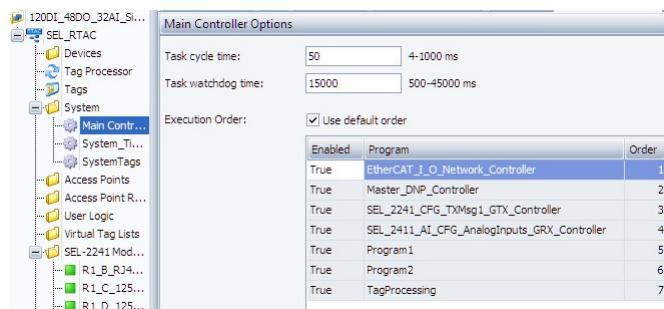

**Figure 2.139 RTAC Update Rate**

### Input Debounce Settings


The input debounce settings are set to 5 ms for pickup and dropout in dc mode. Adjust these settings to the optimum debounce time to match your output contacts, or change to ac mode if you are using ac wetting voltage. Refer to *Digital Input Debounce on page 209* for detailed information.

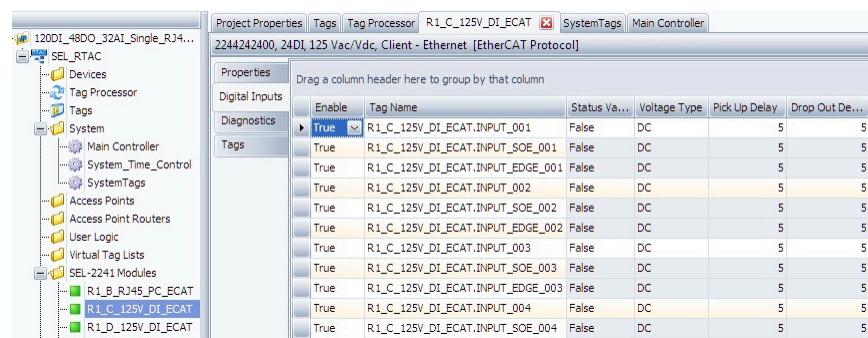

**Figure 2.140 Input Debounce Settings**

## SOE Logging Settings


The Tag Processor contains configuration for SOE logging of all digital inputs and outputs in the projects. Configure logging chatter filters, logging messages, or enable/disable logging for the SOE points. See *Log Settings on page 643* for detailed instructions.

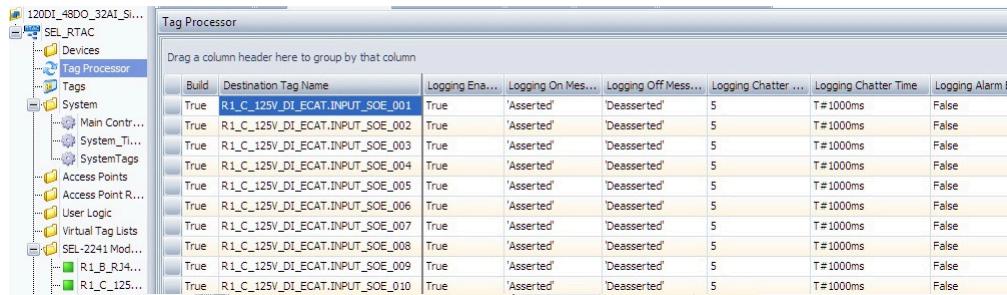


**Figure 2.141 SOE Logging Settings**

## DNP IP Settings

The DNP Server connection has binary inputs/outputs and analog inputs corresponding to the modules and attached devices in each project. Every digital input/output and analog included in each project is mapped through the Tag Processor to corresponding binary inputs/outputs and analogs in the DNP settings. Modify the network and address settings to match your DNP Master. Refer to *DNP Server Configuration on page 170* for more information.

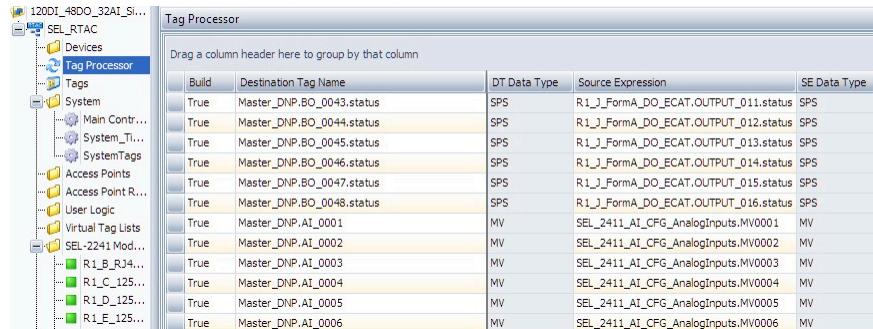

**Figure 2.142 DNP Mapping With the Tag Processor**

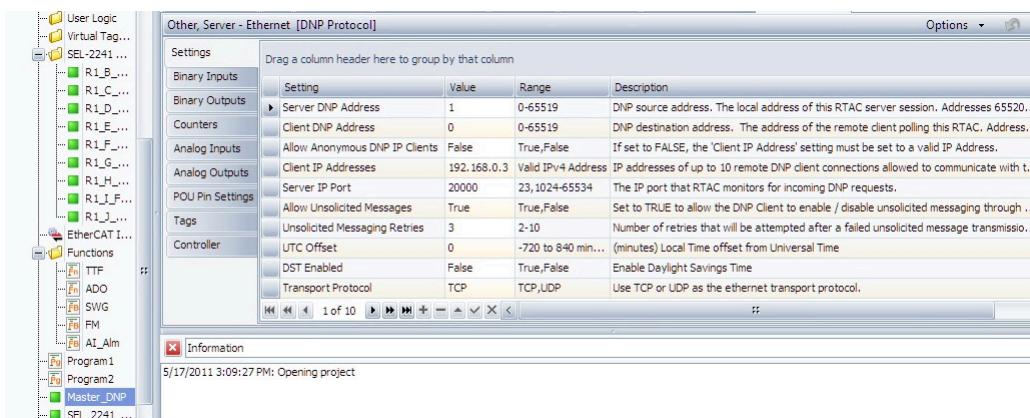

**Figure 2.143 DNP Server Connection IP Settings**

## IEC 61131-3 Example Function Use

Each included example function includes comments describing functionality and variable descriptions. Function call examples for each Structured Text (ST) function are in Program 1. Function call examples for Continuous Function Chart (CFC) functions are in Program 2. Use these functions as necessary for I/O control and analog signal processing. Refer to *Section 9: Custom Logic* for detailed information about the IEC 61131-3 programming environment in ACSELERATOR RTAC.

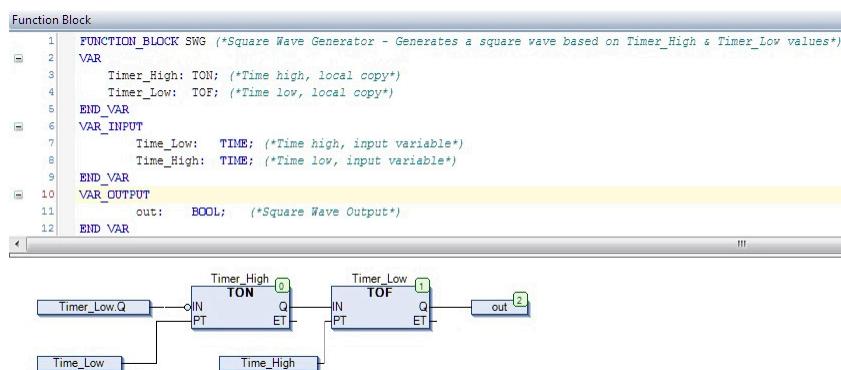


Figure 2.144 ST Function Example

## IEC 61850 GOOSE Analog Settings

Four of the RTU projects include dc analog inputs from an SEL-2411 that uses GOOSE messages. The IEC 61850 configuration includes 32 dc analog inputs from an SEL-2411 with four installed 8 AI cards. To edit the network settings or the included points, use the export IEC 68150 configuration in the insert IEC 61850 dialog in ACSELERATOR RTAC. Open the export file with ACSELERATOR Architect to modify the IP or point settings for the SEL-2411 and SEL-2241. Once you have saved changes, use the insert IEC 61850 dialog in ACSELERATOR RTAC to insert the new configuration. Refer to *IEC 61850 on page 404* for more details.

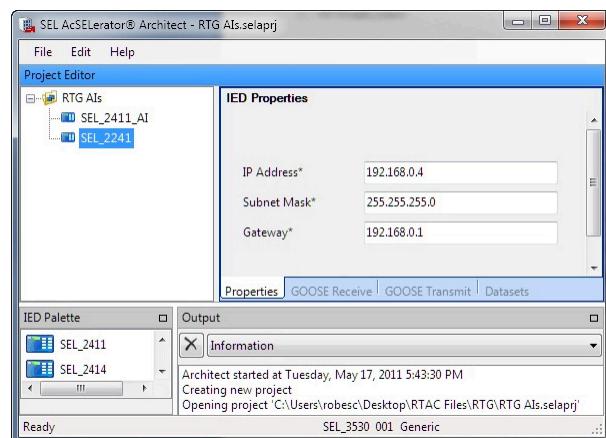


Figure 2.145 Architect GOOSE Configuration

# EtherNet/IP

## Overview

This section describes the EtherNet/IP protocol implementation on the RTAC, including general specifications of the implementation, CIP object model, allocation of CIP connections, ACCELERATOR RTAC settings, and the Electronic Data Sheet (EDS) file.

The RTAC supports three ways of exchanging data via EtherNet/IP protocol:

- ▶ Implicit Message Adapter The I/O data are mapped in Assembly object instances. The RTAC exchanges this I/O data via EtherNet/IP implicit class 1 connections with a remote EtherNet/IP scanner device using UDP packets.
- ▶ Explicit Message Server The I/O data are mapped in Assembly object instances. The RTAC responds to generic TCP EtherNet/IP explicit message requests initiated by a remote EtherNet/IP client device.
- ▶ Explicit Message Client The RTAC initiates vendor-specific explicit message services to exchange data with a remote EtherNet/IP explicit message server.

## Specifications

### EtherNet/IP Services

|                    |  |
|--------------------|--|
| Supported Services | Implicit Message Adapter (Class 1)<br>Explicit Message Server (Class 3 and unconnected)<br>Explicit Message Client (Unconnected) |
|--------------------|--|

### CIP Model

|                     |  |
|---------------------|--|
| Implemented objects | Identity object<br>Message Router object<br>Assembly object<br>Connection Manager object<br>File object<br>TCP/IP object<br>Ethernet link object |
|---------------------|--|

### Implicit Message Adapter Specifications

|                          |                                      |
|--------------------------|--------------------------------------|
| Number of connections    | As many as 128 (Class 1 and Class 3) |
| Class 1 connection types | Unicast<br>Multicast                 |

|  |  |
|--|--|
| Class 1 connection transport types     | Exclusive owner<br>Input only<br>Listen only |
| Class 1 connection trigger types       | Cyclic<br>Change of State                    |
| Input Only heartbeat connection point  | 238  |
| Listen Only heartbeat connection point | 237  |

## Explicit Message Client Specifications

|                         |  |
|-------------------------|--|
| Supported Message Types | CIP <sup>a</sup> and PCCC <sup>b</sup>   |
| CIP services supported  | CIP Data Table Read (0x4C)<br>CIP Data Table Write (0x4D)<br>CIP Read Tag Fragmented (0x52)<br>CIP Write Tag Fragmented (0x53) |
| PCCC services supported | SLC Protected Typed Logical Read (CMD=0x0F, FNC=0xA2)<br>SLC Protected Typed Logical Write (CMD=0x0F, FNC=0xAA)                |
| Message type            | Unconnected (UCMM)   |

<sup>a</sup> Supported devices: Rockwell Automation controllers ControlLogix and CompactLogix.  
<sup>b</sup> Supported devices: Rockwell Automation controllers Micrologix 1000/1400 and SLC5/05.

## CIP Data Model Profile

| Class Name                | Class ID | Number of Instances                                |
|---------------------------|----------|--|
| Identity Object           | 0x01     | 1  |
| Message Router Object     | 0x02     | 1  |
| Assembly Object           | 0x04     | Determined by the user based on application        |
| Connection Manager Object | 0x06     | 1  |
| File Object               | 0x37     | 2  |
| TCP/IP Object             | 0xF5     | See <i>TCP/IP Object (0xF5) on page 311</i>        |
| Ethernet Link object      | 0xF6     | See <i>Ethernet Link Object (0xF6) on page 312</i> |

## Identity Object (0x01) Instances Implemented

The RTAC implements one instance (instance ID = 1) of the identity object.

## List of Class Attributes

| Attr. ID | Name                                     | Access | Data Type                   | Default         | Description   |
|----------|--|--------|-----------------------------|-----------------|---|
| 1        | Revision                                 | GET    | UINT                        | 1               | The revision of this CIP object   |
| 2        | Max Instance                             | GET    | UINT                        | 1               | The maximum Assembly object instance ID   |
| 3        | Number of Instances                      | GET    | UINT                        | 1               | Total number of Assembly objects  |
| 4        | Optional Attribute List                  | GET    | [UINT,<br>Array of<br>UINT] | [21, [0,...,0]] | [Number of optional instance attributes,<br>List of optional instance attributes] |
| 6        | Maximum ID Number<br>Class Attributes    | GET    | UINT                        | 7               | Maximum class attribute ID  |
| 7        | Maximum ID Number<br>Instance Attributes | GET    | UINT                        | 21              | Maximum instance attribute ID   |

## List of Instance Attributes

| Attr. ID | Name                             | Access | Data Type         | Default    | Description   |
|----------|----------------------------------|--------|-------------------|------------|---|
| 1        | Vendor ID                        | GET    | UINT              | 865        |   |
| 2        | Device Type                      | GET    | UINT              | 0x0E       |   |
| 3        | Product Code                     | GET    | UINT              |            | Refer to <i>Managing Multiple RTAC EtherNet/IP Configurations in the Same Network on page 317</i> |
| 4        | [Major Revision, Minor Revision] | GET    | [USINT,<br>USINT] | [1,1]      |   |
| 5        | Status                           | GET    | WORD              |            | Refer to status WORD bits table   |
| 6        | Serial Number                    | GET    | UDINT             |            | Lower 6 octets of the Eth_1 port MAC address  |
| 7        | Product Name                     | GET    | STRING            | 'RTAC'     | Refer to <i>Managing Multiple RTAC EtherNet/IP Configurations in the Same Network on page 317</i> |
| 21       | Catalog Number                   | GET    | STRING            | 'SEL-RTAC' |   |

## Status WORD Bits Table

The Status WORD bits not listed are always set to 0.

| Bit Number | Name                   | Description   |
|------------|------------------------|---|
| 0          | Owned                  | TRUE if at least one remote scanner has established an Exclusive Owner class 1 connection to the RTAC<br><br>FALSE if the RTAC has no active Exclusive Owner connections to a scanner         |
| 2          | Configured             | Always TRUE   |
| 4 to 7     | Extended Device Status | Hexadecimal value:<br><br>2: A class 1 connection is timed out<br><br>3: No class 1 connection is established<br><br>6: At least one class 1 connection is active<br><br>7: In any other case |

## Supported Services

| Service Code | Service Name         | Class | Instance | Description   |
|--------------|----------------------|-------|----------|---|
| 0x01         | Get Attributes All   | Yes   | Yes      | Returns a list of all of the values of the attributes                       |
| 0x05         | Reset                | No    | Yes      | Restarts the EtherNet/IP service in the RTAC. Only reset type 0 is allowed. |
| 0x0E         | Get Attribute Single | Yes   | Yes      | Returns the value of a specific attribute                                   |

## Message Router Object (0x02)

### List of Class Attributes

| Attr. ID | Name                                  | Access | Data Type             | Default                     | Description  |
|----------|---------------------------------------|--------|-----------------------|-----------------------------|--|
| 1        | Revision                              | GET    | UINT                  | 1                           | The revision of this CIP object  |
| 2        | Max Instance                          | GET    | UINT                  | 3                           | The maximum Message Router object instance ID                                  |
| 3        | Number of Instances                   | GET    | UINT                  | 1                           | Total number of Message Router object instances                                |
| 4        | Optional Attribute List               | GET    | [UINT, Array of UINT] | [2, [3,1]]                  | [Number of optional instance attributes, List of optional instance attributes] |
| 5        | Optional Service List                 | GET    | [UINT, Array of UINT] | [10, [7,3,0,0,0,0,0,0,0,0]] | [Number of optional service codes, List of optional service codes]             |
| 6        | Maximum ID Number Class Attributes    | GET    | UINT                  | 7                           | Maximum class attribute ID   |
| 7        | Maximum ID Number Instance Attributes | GET    | UINT                  | 3                           | Maximum instance attribute ID  |

## List of Instance Attributes

| Attr. ID | Name                  | Access | Data Type             | Default | Description                             |
|----------|-----------------------|--------|-----------------------|---------|---|
| 1        | Class List            | GET    | [UINT, Array of UINT] |         | Implemented object list                 |
| 2        | Maximum Connections   | GET    | UINT                  |         | Maximum number of connections supported |
| 3        | Number of Connections | GET    | UINT                  |         | Number of connections currently used    |

## Supported Services

| Service Code | Service Name            | Class | Instance | Description                               |
|--------------|-------------------------|-------|----------|---|
| 0x01         | Get Attribute All       | Yes   | Yes      | Returns a list of all of the attributes   |
| 0x0E         | Get Attribute Single    | Yes   | Yes      | Returns the value of a specific attribute |
| 0x0A         | Multiple Service Packet | No    | Yes      |   |

## Assembly Object (0x04)

### Instances Implemented

The ACCELERATOR RTAC user settings define the number of Assembly object instances, instance IDs, and data content of each instance.

## List of Class Attributes

| Attr. ID | Name                                  | Access | Data Type             | Default                | Description  |
|----------|---------------------------------------|--------|-----------------------|------------------------|--|
| 1        | Revision                              | GET    | UINT                  | 2                      | The revision of this CIP object  |
| 2        | Max Instance                          | GET    | UINT                  | Determined by settings | The maximum Assembly object instance ID defined by the user                    |
| 3        | Number of Instances                   | GET    | UINT                  | Determined by settings | Total number of Assembly object instances defined by the user                  |
| 4        | Optional Attribute List               | GET    | [UINT, Array of UINT] | [1,4]                  | [Number of optional instance attributes, List of optional instance attributes] |
| 6        | Maximum ID Number Class Attributes    | GET    | UINT                  | 7                      | Maximum class attribute ID   |
| 7        | Maximum ID Number Instance Attributes | GET    | UINT                  | 4                      | Maximum instance attribute ID  |

## List of Instance Attributes

| Attr. ID | Name              | Access | Data Type                    | Default | Description  |
|----------|-------------------|--------|------------------------------|---------|--|
| 1        | Number of Members | GET    | UINT                         |         | Number of Assembly tag members defined by the user |
| 2        | Member List       | GET    | Array of [UINT, UINT, EPATH] |         |  |

| Attr. ID | Name | Access      | Data Type         | Default | Description                          |
|----------|------|-------------|-------------------|---------|--------------------------------------|
| 3        | Data | GET,<br>SET | Array of<br>Bytes |         | Data map defined in ACCELERATOR RTAC |
| 4        | Size | GET         | UINT              |         | Number of bytes in attribute 3       |

## Supported Services

| Service Code | Service Name         | Class | Instance | Description  |
|--------------|----------------------|-------|----------|--|
| 0x0E         | Get Attribute Single | Yes   | Yes      | Returns the value of a specific attribute            |
| 0x10         | Get Attribute Single | No    | Yes      | Sets the value of a specific attribute               |
| 0x18         | Get Member           | No    | Yes      | Returns the value of a member of the Data attribute  |
| 0x19         | Set Member           | No    | Yes      | Modifies the value of a member of the Data attribute |

## Connection Manager Object (0x06)

### List of Class Attributes

| Attr. ID | Name                                  | Access | Data Type             | Default               | Description  |
|----------|---------------------------------------|--------|-----------------------|-----------------------|--|
| 1        | Revision                              | GET    | UINT                  | 4                     | The revision of this CIP object  |
| 2        | Max Instance                          | GET    | UINT                  |                       | The maximum Connection Manager object instance ID                              |
| 3        | Number of Instances                   | GET    | UINT                  |                       | Total number of Connection Manager object instances                            |
| 4        | Optional Attribute List               | GET    | [UINT, Array of UINT] | [8,[0,0,0,0,0,0,0,0]] | [Number of optional instance attributes, List of optional instance attributes] |
| 6        | Maximum ID Number Class Attributes    | GET    | UINT                  | 7                     | Maximum class attribute ID   |
| 7        | Maximum ID Number Instance Attributes | GET    | UINT                  | 20                    | Maximum instance attribute ID  |

### List of Instance Attributes

| Attr. ID | Name                  | Access      | Data Type | Default | Description   |
|----------|-----------------------|-------------|-----------|---------|---|
| 1        | Open Requests         | GET/<br>SET | UINT      |         | Number of FWD Open service requests received  |
| 2        | Open Format Rejects   | GET/<br>SET | UINT      |         | Number of FWD Open service requests rejected because of bad format                                  |
| 3        | Open Resource Rejects | GET/<br>SET | UINT      |         | Number of FWD Open service requests rejected because of lack of resources                           |
| 4        | Open Other Rejects    | GET/<br>SET | UINT      |         | Number of FWD Open service requests rejected for reasons other than bad format or lack of resources |
| 5        | Close Requests        | GET/<br>SET | UINT      |         | Number of FWD Close service requests received   |
| 6        | Close Format Rejects  | GET/<br>SET | UINT      |         | Number of FWD Close service requests rejected because of bad format                                 |

| Attr. ID | Name                        | Access  | Data Type | Default | Description  |
|----------|-----------------------------|---------|-----------|---------|--|
| 7        | Close Other Rejects         | GET/SET | UINT      |         | Number of FWD Open service requests rejected for reasons other than bad format |
| 8        | Connection Timeouts         | GET/SET | UINT      |         | Number of connection timeouts  |
| 15       | I/O Packets per Second      | GET     | UDINT     |         | Current I/O packets per second   |
| 17       | Explicit Packets per Second | GET     | UDINT     |         | Total number of explicit packets sent and received over the last second        |
| 18       | Missed I/O Packets          | GET     | UDINT     |         | Total number of missed I/O packets   |
| 19       | CIP I/O Connections         | GET     | UDINT     |         | Total number of CIP connections in use   |
| 20       | CIP Explicit Connections    | GET     | UDINT     |         | Total number of CIP Explicit Messaging connections in use                      |

## Supported Services

| Service Code | Service Name         | Class | Instance | Description  |
|--------------|----------------------|-------|----------|--|
| 0x01         | Get Attribute All    | Yes   | Yes      | Returns a list of all of the attributes                          |
| 0x0E         | Get Attribute Single | Yes   | Yes      | Returns the value of a specific attribute                        |
| 0x10         | Set Attribute Single | No    | Yes      | Sets the value of a specific attribute                           |
| 0x02         | Set Attribute All    | No    | Yes      | Sets the value of all attributes                                 |
| 0x54         | Forward Open         | No    | Yes      | Establishes a CIP connection                                     |
| 0x4E         | Forward Close        | No    | Yes      | Closes a CIP connection  |
| 0x5B         | Large Forward Open   | No    | Yes      | Establishes a CIP connection that allows a large connection size |
| 0x5A         | Get Connection Owner | No    | Yes      | Returns data about the connection owns the object                |

## File Object (0x37)

The File object stores the Electronic Data Sheet (EDS) and icon files. The EDS file is automatically generated by ACCELERATOR RTAC based on the specific user configuration and transferred to the RTAC when the project is loaded.

### Instances Implemented

The RTAC implements two instances of the File object:

- Instance 0xC8 returns an uncompressed version of the EDS file with embedded icons.
- Instance 0xC9 returns a compressed version of just the icon file.

### List of Class Attributes

| Attr. ID | Name         | Access | Data Type | Default | Description                     |
|----------|--------------|--------|-----------|---------|---------------------------------|
| 1        | Revision     | GET    | UINT      | 1       | The revision of this CIP object |
| 2        | Max Instance | GET    | UINT      | 201     |                                 |

| <b>Attr. ID</b> | <b>Name</b>                              | <b>Access</b> | <b>Data Type</b>   | <b>Default</b>  | <b>Description</b>   |
|-----------------|--|---------------|--|---|--|
| 3               | Number of Instances                      | GET           | UINT   | 2   |  |
| 6               | Maximum ID Number<br>Class Attributes    | GET           | UINT   | 32  | Maximum class attribute ID   |
| 7               | Maximum ID Number<br>Instance Attributes | GET           | UINT   | 11  | Maximum instance attribute ID  |
| 32              | Directory                                | GET           | [UINT,<br>STRINGI,<br>STRINGI]<br>[UINT,<br>STRINGI,<br>STRINGI] | [0xC8, (ENG)'EDS<br>and Icon Files',<br>(ENG)'EDS.txt']<br>[0xC9, (ENG)'Related<br>EDS and Icon Files',<br>(ENG)'EDSCollection.<br>gz'] | List of all File object instance and file names<br>present in the RTAC and the associated<br>instance numbers. |

### 0xC8 List of Instance Attributes

| <b>Attr. ID</b> | <b>Name</b>          | <b>Access</b> | <b>Data Type</b>  | <b>Default</b>               | <b>Description</b>   |
|-----------------|----------------------|---------------|-------------------|------------------------------|--|
| 1               | State                | GET           | USINT             | 2                            |  |
| 2               | Instance Name        | GET           | STRINGI           | (ENG)'EDS and<br>Icon Files' |  |
| 3               | File Format Version  | GET           | UINT              | 1                            |  |
| 4               | File Name            | GET           | STRINGI           | (ENG)'EDS.txt'               |  |
| 5               | File Revision        | GET           | [USINT,<br>USINT] |                              | [Major EDS revision user setting, Minor EDS<br>revision user setting]                      |
| 6               | File Size            | GET           | UDINT             |                              | Size of the EDS file in bytes  |
| 7               | File Checksum        | GET           | UINT              |                              | Checksum of the EDS file (two's complement of<br>the 16-bit sum of all octets in the file) |
| 8               | Invocation Method    | GET           | USINT             | 255                          |  |
| 9               | File Save Parameters | GET           | USINT             | 0                            |  |
| 10              | File Access Rule     | GET           | USINT             | 1                            |  |
| 11              | File Encoding Format | GET           | USINT             | 0                            |  |

### 0xC9 List of Instance Attributes

| <b>Attr. ID</b> | <b>Name</b>         | <b>Access</b> | <b>Data Type</b>  | <b>Default</b>                       | <b>Description</b>               |
|-----------------|---------------------|---------------|-------------------|--------------------------------------|----------------------------------|
| 1               | State               | GET           | USINT             | 2                                    |                                  |
| 2               | Instance Name       | GET           | STRINGI           | (ENG)'Related EDS and<br>Icon Files' |                                  |
| 3               | File Format Version | GET           | UINT              | 1                                    |                                  |
| 4               | File Name           | GET           | STRINGI           | (ENG)'EDSCollection.<br>gz'          |                                  |
| 5               | File Revision       | GET           | [USINT,<br>USINT] | [1,1]                                | [Major Revision, Minor Revision] |
| 6               | File Size           | GET           | UDINT             |                                      | Size of the loaded file in bytes |

| <b>Attr. ID</b> | <b>Name</b>          | <b>Access</b> | <b>Data Type</b> | <b>Default</b> | <b>Description</b>  |
|-----------------|----------------------|---------------|------------------|----------------|---|
| 7               | File Checksum        | GET           | UINT             |                | Checksum of the EDSCollection file (two's complement of the 16-bit sum of all octets in the file) |
| 8               | Invocation Method    | GET           | USINT            | 255            |   |
| 9               | File Save Parameters | GET           | USINT            | 0              |   |
| 10              | File Access Rule     | GET           | USINT            | 1              |   |
| 11              | File Encoding Format | GET           | USINT            | 1              |   |

## Supported Services

| <b>Service Code</b> | <b>Service Name</b>  | <b>Class</b> | <b>Instance</b> | <b>Description</b>                        |
|---------------------|----------------------|--------------|-----------------|---|
| 0x0E                | Get Attribute Single | Yes          | Yes             | Returns the value of a specific attribute |
| 0x4B                | Initiate Upload      | No           | Yes             |   |
| 0x4F                | Upload Transfer      | No           | Yes             |   |

## TCP/IP Object (0xF5)

### Instances Implemented

The number of instances of the TCP/IP object depends on the number of instances of the Ethernet Link object and the Bridge/Bond modes in use, as follows:

- ▶ An instance for each Ethernet Link object instance that is not part of a Bridge/Bond/PRP set.
- ▶ An instance for each set of Ethernet Link object instances that make up a Bridge/Bond/PRP set.

## List of Class Attributes

| <b>Attr. ID</b> | <b>Name</b>                           | <b>Access</b> | <b>Data Type</b>      | <b>Default</b>   | <b>Description</b>   |
|-----------------|---------------------------------------|---------------|-----------------------|------------------|--|
| 1               | Revision                              | GET           | UINT                  | 4                | The revision of this CIP object  |
| 2               | Max Instance                          | GET           | UINT                  |                  | The maximum TCP/IP object instance ID  |
| 3               | Number of Instances                   | GET           | UINT                  |                  | Total number of TCP/IP object instances  |
| 4               | Optional Attribute List               | GET           | [UINT, Array of UINT] | [4, [8,9,16,17]] | [Number of optional instance attributes, List of optional instance attributes] |
| 6               | Maximum ID Number Class Attributes    | GET           | UINT                  | 7                | Maximum class attribute ID   |
| 7               | Maximum ID Number Instance Attributes | GET           | UINT                  | 17               | Maximum instance attribute ID  |

## List of Instance Attributes

| Attr. ID | Name                                      | Access      | Data Type  | Default | Description   |
|----------|---|-------------|--|---------|---|
| 1        | Status                                    | GET         | DWORD  | 2       |   |
| 2        | Configuration Capability                  | GET         | DWORD  | 192     | Any change in the configuration will be updated when the server is restarted. |
| 3        | Configuration Control                     | GET         | DWORD  | 0       | IP addresses must be configured statically. DHCP and DNS are not supported.   |
| 4        | Physical Link Object                      | GET         | [UINT,<br>EPATH]   |         | [Path size, Path to the corresponding Ethernet link object instance]          |
| 5        | Interface Configuration                   | GET         | [UDINT,<br>UDINT,<br>UDINT,<br>UDINT,<br>UDINT,<br>STRING] |         | [IP address, Network mask, Gateway address, 0, 0, null]                       |
| 6        | Host Name                                 | GET         | STRING   |         | Host name of the RTAC, as shown in the dashboard of the RTAC web interface    |
| 8        | TTL Value                                 | GET/<br>SET | USINT  | 1       |   |
| 9        | Mcast Config                              | GET/<br>SET | [USINT,<br>USINT,<br>UINT,<br>UDINT]                       |         | [Alloc control, Reserved, Num Mcast, Mcast Start Address]                     |
| 13       | Encapsulation Inactivity Timeout          | GET/<br>SET | UINT   | 120     |   |
| 16       | Active TCP Connections                    | GET         | UINT   |         |   |
| 17       | Non-CIP Encapsulation Messages per second | GET         | UDINT  |         |   |

## Supported Services

| Service Code | Service Name         | Class | Instance | Description                               |
|--------------|----------------------|-------|----------|---|
| 0x01         | Get Attribute All    | Yes   | Yes      | Returns a list of all of the attributes   |
| 0x0E         | Get Attribute Single | Yes   | Yes      | Returns the value of a specific attribute |
| 0x10         | Set Attribute Single | No    | Yes      | Sets the value of a specific attribute    |

## Ethernet Link Object (0xF6) Instances Implemented

The number of instances of the Ethernet Link object is equal to the number of Ethernet interfaces listed in the Ethernet Ports setting in ACCELERATOR RTAC. Each Ethernet Link instance corresponds to an Ethernet interface in the list.

When going online, ACSELERATOR RTAC will verify that all configured interfaces for EtherNet/ IP are valid according to the following rules:

- Interfaces in this list are not available for EtherNet/IP:
  - USB interface (172.29.131.1)
  - Any interface that is enabled for EtherCAT
  - Any interface with DHCP enabled
  - Any disabled interface
- Interfaces in Bridge/Bonding/PRP mode require that all of the interfaces within the Bridge/Bonding group or PRP pair must also be listed in the Ethernet Ports setting.

If one or more interfaces in the Ethernet Ports setting are not available for EtherNet/IP, ACSELERATOR RTAC will not send the project.

## List of Class Attributes

| <b>Attr. ID</b> | <b>Name</b>                           | <b>Access</b> | <b>Data Type</b>      | <b>Default</b> | <b>Description</b>   |
|-----------------|---------------------------------------|---------------|-----------------------|----------------|--|
| 1               | Revision                              | GET           | UINT                  | 4              | The revision of this CIP object  |
| 2               | Max Instance                          | GET           | UINT                  |                | The maximum TCP/IP object instance ID  |
| 3               | Number of Instances                   | GET           | UINT                  |                | Total number of TCP/IP object instances  |
| 4               | Optional Attribute List               | GET           | [UINT, Array of UINT] |                | [Number of optional instance attributes, List of optional instance attributes] |
| 6               | Maximum ID Number Class Attributes    | GET           | UINT                  | 7              | Maximum class attribute ID   |
| 7               | Maximum ID Number Instance Attributes | GET           | UINT                  | 11             | Maximum instance attribute ID  |

## List of Instance Attributes

| <b>Attr. ID</b> | <b>Name</b>          | <b>Access</b> | <b>Data Type</b> | <b>Default</b> | <b>Description</b>                                 |
|-----------------|----------------------|---------------|------------------|----------------|--|
| 1               | Interface Speed      | GET           | UINT             |                | Speed (Mbps) in use on the corresponding interface |
| 2               | Interface flags      | GET           | DWORD            |                | See description in the Interface Flags Bit table   |
| 3               | Physical Address     | GET           | USINT[6]         |                | MAC address of the corresponding interface         |
| 10              | Interface Label      | GET           | STRING           |                | RTAC interface name. E.g. "Eth_02"                 |
| 11              | Interface Capability | GET           | [DWORD, USINT]   |                | [Capability bits, Array Element Count]             |

## Interface Flags Bit Table

| <b>Bit Number</b> | <b>Name</b>      | <b>Description</b>   |
|-------------------|------------------|--|
| 0                 | Link Status      | 0: The Ethernet interface link is inactive<br>1: The link is active                |
| 1                 | Half/Full Duplex | 0: The interface is running half duplex<br>1: The interface is running full duplex |

| Bit Number | Name                          | Description  |
|------------|-------------------------------|--|
| 2–4        | Negotiation Status            | Octal unsigned value:<br><br>0: Autonegotiation in progress<br><br>1: Autonegotiation and speed detection failed. Using default values<br><br>2: Autonegotiation failed, but detected speed<br><br>3: Successfully negotiated speed and duplex<br><br>4: Autonegotiation not attempted |
| 5          | Manual Setting Requires Reset | Set to 1   |

## Supported Services

| Service Code | Service Name         | Class | Instance | Description                               |
|--------------|----------------------|-------|----------|---|
| 0x01         | Get Attribute All    | Yes   | Yes      | Returns a list of all of the attributes   |
| 0x0E         | Get Attribute Single | Yes   | Yes      | Returns the value of a specific attribute |

## CIP Connections

The user settings determine the total number of CIP connections used by a project. The number of CIP connections allocated in a project is determined as follows:

- ▶ The number of Class 1 connections allocated in a project is determined by adding up the following quantities:
  - The value of the Maximum Input Only Class 1 connections under the **Settings** tab
  - The value of Maximum Listen Only Class 1 connections under the **Settings** tab
  - The number of Exclusive Owner connections defined under the I/O Connections
- ▶ The number of Class 3 connections allocated in a project is determined by the value of the Maximum Class 3 connections setting under the **Settings** tab.
- ▶ The total number of CIP connections is determined by adding up the number of Class 1 connections and the number of Class 3 connections.

The total number of CIP connections in an RTAC project is limited to 128.

## ACCELERATOR RTAC Settings and Configuration Configuration Settings

The **Settings** tab contains all the configurable items for the EtherNet/IP communication protocol.

## Assembly Instances

The **Assembly Instances** tab is used to define the instances of the Assembly object. Each Assembly instance is a collection of data (as much as 500 bytes worth) that is either transmitted to the scanner (input assembly) or received from the scanner (output assembly).

## Assembly Data Map

**Assembly Data Map** tabs are created automatically for each Assembly instance configured in the **Assembly Instance** tab. Use these tabs to create I/O data points for each Assembly instance. As much as 500 bytes worth of data may be added to each Assembly instance; however, the total bytes used across all Assembly instances cannot exceed 10,000.

## I/O Connections

The **I/O Connections** tab is used to define the EtherNet/IP I/O connections (Class 1 connections) that can be accessed from a remote IED/scanner. Depending on the type of connection, each I/O connection defined in this tab has one or two Assembly instances. While Exclusive Owner connections may have an input and an output Assembly instance, Input Only and Listen Only connections may only have input Assembly instances associated with them. All assemblies assigned to I/O connections must be previously defined in the **Assembly Instances** tab. Assemblies used as output assemblies must be defined with read-write access.

## Remote Devices

The **Remote Devices** tab is used to enter a list of all EtherNet/IP explicit message targets. The **Remote Devices** tab is only visible when Enable Explicit Message Client is set to True.

## CIP Tag Messages

The **CIP Messages** tab is used to configure individual EtherNet/IP explicit messages (CIP Data Table Read and CIP Data Table Write) to devices defined in the **Remote Devices** tab. This tab is only visible when Enable Explicit Message Client is set to True.

## PCCC Messages

The **PCCC Messages** tab is used to configure individual EtherNet/IP explicit messages (SLC Protected Typed Logical Read and SLC Protected Typed Logic Write) to devices defined in the **Remote Devices** tab. This tab is only visible when Enable Explicit Message Client is set to True.

## POU Pin Setting

The **POU Pin Settings** tab is used to view the present state of the EtherNet/IP protocol and to access protocol statistics.

**Table 2.53 EtherNet/IP Adapter/Client POU Pin Settings**

| Pin Name                             | Pin Type     | Description  | Default |
|--------------------------------------|--------------|--|---------|
| EN                                   | Input BOOL   | Enables or disables this specific Function Block instance. Other inputs have no effect while EN is False.  | True    |
| Reset_Statistics                     | Input BOOL   | On rising-edge trigger, all counter POU output are reset   | False   |
| ENO                                  | Output BOOL  | Indicates this specific Function Block Instance is active if True. If False, the inputs have no effect and the outputs are not updated.  | False   |
| Offline                              | Output BOOL  | If False, indicates that there is at least one active EtherNet/IP session. This pin is set to True when the communication link has been idle for a time specified by the Encapsulation Inactivity Timeout attribute of the corresponding TCP/IP object instance. | False   |
| Class_1_Message_Sent_Count           | Output UDINT | Total number of Class 1 implicit messages sent out by the RTAC   | 0       |
| Class_1_Message_Received_Count       | Output UDINT | Total number of Class 1 implicit messages received by the RTAC   | 0       |
| Class_1_Mesage_Failure_Count         | Output UDINT | Total number of Class 1 implicit message failures  | 0       |
| Class_1_Message_Success_Count        | Output UDINT | Total number of successful Class 1 messages  | 0       |
| Class_1_Message_Lost_Count           | Output UDINT | Increases when the RTAC receives a Class 1 message with a sequence number greater than the next expected sequence number   | 0       |
| Class_1_Active_Connections           | Output UDINT | Current number of active Class 1 connections   | 0       |
| Class_3_Active_Connections           | Output UDINT | Current number of active Class 3 connections   | 0       |
| Class_3_Message_Sent_Count           | Output UDINT | Total number of Class 3 explicit message responses sent out by the RTAC  | 0       |
| Class_3_Message_Received_Count       | Output UDINT | Total number of Class 3 explicit message requests received by the RTAC   | 0       |
| Unconnected_Message_Sent_Count       | Output UDINT | Total number of unconnected explicit messages sent out by the RTAC   | 0       |
| Unconnected_Message_Received_Count   | Output UDINT | Total number of unconnected explicit messages received by the RTAC   | 0       |
| Message_Timeout_Count                | Output UDINT | Increases by one when the RTAC fails to receive a message (Class 1 or Class 3) from the scanner within the expected Requested Packet Interval (RPI)  | 0       |
| <Connection Name>_Active_Consumers   | Output UDINT | Number of active consumers subscribed to the associated I/O connection   | 0       |
| <Connection Name>_Timeout_Count      | Output UDINT | Sum of timed-out messages for all associated consumers   | 0       |
| <Connection Name>_Message_Lost_Count | Output UDINT | Sum of lost packets for all associated consumers   | 0       |
| Send_<Device Name>_<Message Name>    | Input BOOL   | On a rising-edge, triggers the message   | FALSE   |
| <Device Name>_<Message Name>_DN      | Output BOOL  | Asserts for one RTAC processing interval to indicate that the message transaction is complete  | FALSE   |

| Pin Name                            | Pin Type           | Description   | Default |
|-------------------------------------|--------------------|---|---------|
| <Device Name>_<Message Name>_Status | Output STRING(255) | Provides the status of the last message sent        |         |
| <Device Name>_<Message Name>_Data   | Input/Output       | Array of data. Provides access to the message data. |         |

## Managing Multiple RTAC EtherNet/IP Configurations in the Same Network

When multiple RTAC units with different EtherNet/IP configurations (Assemblies, assembly maps, and I/O Connection Point settings) coexist in the same EtherNet/IP network, the Configuration ID setting is used to uniquely identify each configuration. RTAC units with different EtherNet/IP configurations should use a different value for the Configuration ID setting.

The Configuration ID setting contributes to the Product Code attribute (attribute ID #3 of the Identity object). The RTAC Product Code attribute is a two-byte unsigned integer number in which the most-significant byte is 35 and the least-significant byte is set by user via the Configuration ID setting in ACCELERATOR RTAC. This allows for a Product Code range between 8960 and 9215. Each different EtherNet/IP configuration in the network will have a different Product Code. This ensures that EtherNet/IP scanners will identify each different configuration as a separate device, thus preserving the EDS file for each.

The Product Name setting in ACCELERATOR RTAC shall be used to assign a unique identification to each different Product Code. This setting maps directly into the Product Name attribute (attribute ID #7) of the Identity object. This facilitates the identification of each EtherNet/IP data map when configuring an EtherNet/IP scanner. The following figure illustrates how to use the Configuration ID and Product Name settings to identify different EtherNet/IP configurations in the same network. In the figure, the Adapter 1 and Adapter 2 RTAC devices have the same EtherNet/IP configuration, and therefore the same Configuration ID and Product Name settings are assigned to them. Adapter 3 has a different EtherNet/IP configuration than Adapters 1 and 2, and a different Configuration ID and Product Name settings are assigned to it. Each unique Configuration ID setting results in a different Product Code attribute value in the Identity object and Product Code entry in the EDS file, which results in the EtherNet/IP scanner configurator software identifying each as a different product.

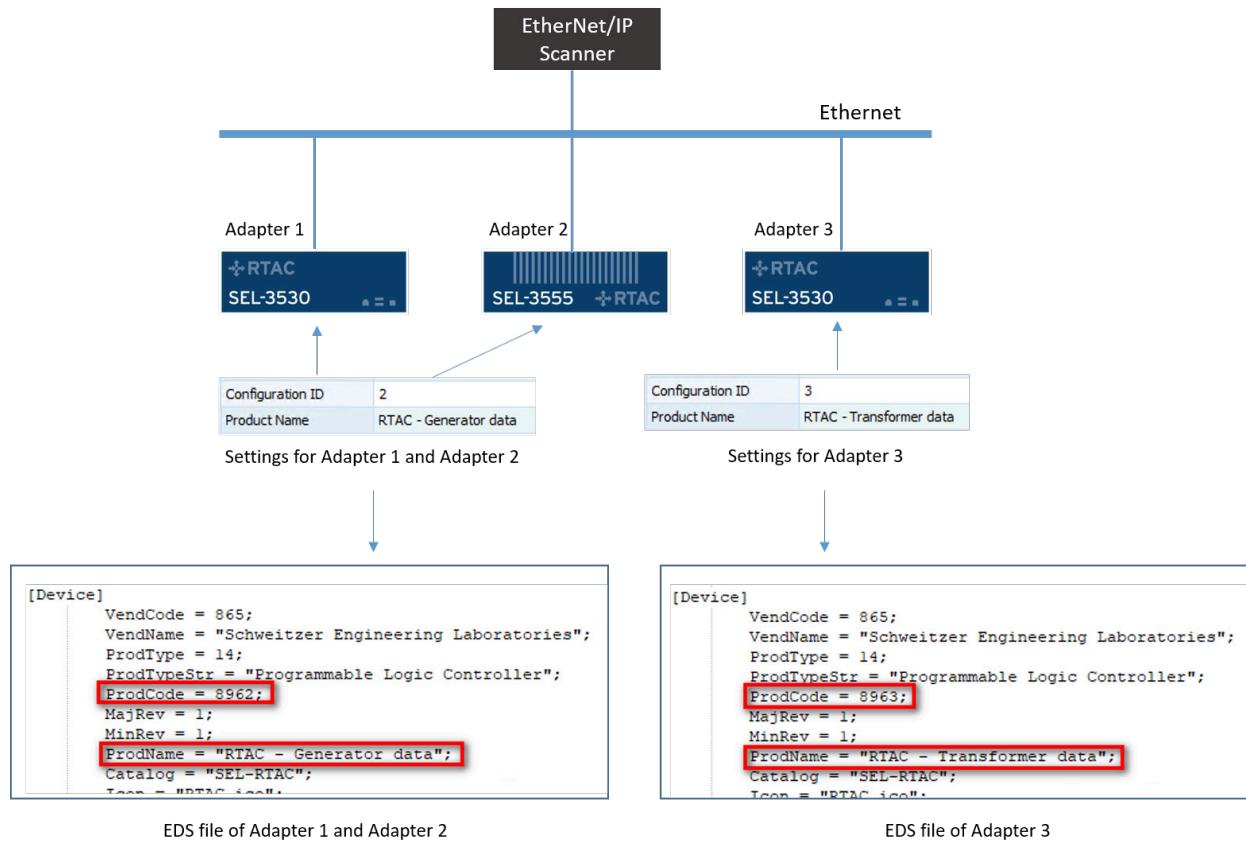


Figure 2.146 Multiple EtherNet/IP Configurations in a Single Network

## Implicit Message Adapter Configuration

Step 1. Add an EtherNet/IP device into the project.



Figure 2.147 Add EtherNet/IP Into Configuration

Step 2. Enter the settings based on the requirements of your project.

| Other, Adapter/Client - Ethernet [EtherNet/IP Protocol] |                           |                    |  |
|---|---------------------------|--------------------|--|
| Setting   | Value                     | Range              |  |
| Communications  |                           |                    |  |
| Ethernet Ports  | Eth_01,Eth_02             | Eth_01,Eth_02,...  |  |
| Allow Anonymous Clients                                 | True                      | True,False         |  |
| Client IP Addresses                                     |                           | Valid IPv4 Addr... |  |
| EDS File  |                           |                    |  |
| Major EDS Revision                                      | 1                         | 1-255              |  |
| Minor EDS Revision                                      | 1                         | 1-255              |  |
| EtherNet/IP   |                           |                    |  |
| Maximum Input Only Class ...                            | 5                         | 0-127              |  |
| Maximum Listen Only Class...                            | 5                         | 0-126              |  |
| Maximum Class 3 Connecti...                             | 6                         | 1-128              |  |
| Configuration ID  | 2                         | 0-255              |  |
| Product Name  | Sample EtherNetIP Project | 1-32 (characters)  |  |
| Enable Explicit Message Cli...                          | False                     | True,False         |  |

**Figure 2.148 Configure EtherNet/IP Settings**

Step 3. Create the Assembly object instances.

| Other, Adapter/Client - Ethernet [EtherNet/IP Protocol] |   |          |          |            |         |
|---|---|----------|----------|------------|---------|
| Settings  | Drag a column header here to group by that column |          |          |            |         |
| Assemblies  | Enable  | Name     | Instance | Access     | Comment |
| I/O Connections   | True  | ASSEM100 | 100      | Read-only  |         |
| POU Pin Settings  | True  | ASSEM101 | 101      | Read-write |         |
| Controller  |   |          |          |            |         |

**Figure 2.149 Configure Assembly Object Instances**

Assembly instances that will serve as output assemblies shall be set with read-write access.

Step 4. Click on the Assembly instance sub-item to configure and map the Assembly members.

| EtherNet/IP Assembly Data Map |   |                              |           |           |       |       |             |       |
|-------------------------------|---|------------------------------|-----------|-----------|-------|-------|-------------|-------|
| Members                       | Drag a column header here to group by that column |                              |           |           |       |       |             |       |
| Tags                          | Enable  | Tag Name                     | Data Type | Tag Alias | Value | Bytes | Byte Offset | Order |
| SEL_RTAC                      | True  | Other_1_ASSEM100.Member_0000 | REAL      |           | 0     | 4     | 0           | 0     |
|                               | True  | Other_1_ASSEM100.Member_0001 | REAL      |           | 0     | 4     | 4           | 1     |
|                               | True  | Other_1_ASSEM100.Member_0002 | REAL      |           | 0     | 4     | 8           | 2     |
|                               | True  | Other_1_ASSEM100.Member_0003 | REAL      |           | 0     | 4     | 12          | 3     |
|                               | True  | Other_1_ASSEM100.Member_0004 | REAL      |           | 0     | 4     | 16          | 4     |
|                               | True  | Other_1_ASSEM100.Member_0005 | REAL      |           | 0     | 4     | 20          | 5     |
|                               | True  | Other_1_ASSEM100.Member_0006 | REAL      |           | 0     | 4     | 24          | 6     |
|                               | True  | Other_1_ASSEM100.Member_0007 | REAL      |           | 0     | 4     | 28          | 7     |
|                               | True  | Other_1_ASSEM100.Member_0008 | REAL      |           | 0     | 4     | 32          | 8     |
|                               | True  | Other_1_ASSEM100.Member_0009 | REAL      |           | 0     | 4     | 36          | 9     |
|                               | True  | Other_1_ASSEM100.Member_0010 | REAL      |           | 0     | 4     | 40          | 10    |

**Figure 2.150 Configure Assembly Members**

Step 5. Configure the I/O connection points.

| Other, Adapter/Client - Ethernet [EtherNet/IP Protocol] |   |                |                 |                |                 |
|---|---|----------------|-----------------|----------------|-----------------|
|   | Drag a column header here to group by that column |                |                 |                |                 |
| Settings  | Enable  | Name           | Transport Type  | Input Assembly | Output Assembly |
| I/O Connections   | True  | CONNECTION_001 | Exclusive Owner | ASSEM100       | ASSEM101        |
| POU Pin Settings  |   |                |                 |                |                 |
| Controller  |   |                |                 |                |                 |

Figure 2.151 Configure I/O Points

Step 6. Export the EDS file and load it into the EtherNet/IP scanner configuration tool. Load the project into the RTAC and then configure the EtherNet/IP scanner.



Figure 2.152 Export EDS File

Alternatively, the EDS file may be loaded by the EtherNet/IP scanner configuration tool directly from the RTAC after loading the project.

## Explicit Message Client Configuration

Step 1. Enable Explicit Message Client.

| Other, Adapter/Client - Ethernet [EtherNet/IP Protocol] |                           |
|---|---------------------------|
| Setting   | Value                     |
| Communications  |                           |
| Ethernet Ports  | Eth_01,Eth_02             |
| Allow Anonymous Clients                                 | True                      |
| Client IP Addresses                                     |                           |
| EDS File  |                           |
| Major EDS Revision                                      | 1                         |
| Minor EDS Revision                                      | 1                         |
| EtherNet/IP   |                           |
| Maximum Input Only Class ...                            | 5                         |
| Maximum Listen Only Class...                            | 5                         |
| Maximum Class 3 Connecti...                             | 6                         |
| Configuration ID  | 2                         |
| Product Name  | Sample EtherNetIP Project |
| Enable Explicit Message Cli...                          | True                      |

Figure 2.153 Enable Explicit Message Client

Step 2. Enter the list of Explicit Message server devices.

| Other, Adapter/Client - Ethernet [EtherNet/IP Protocol] |  |             |
|---|--|-------------|
| Settings  | Drag a column header here to group by that |             |
| Assemblies  | Name                                       | IP Address  |
| I/O Connections   | ControlLgx                                 | 192.168.1.3 |
| Remote Devices  | MicroLgx                                   | 192.168.1.4 |

**Figure 2.154 Enter Explicit Message List**

Step 3. Configure the Explicit Messages.

- **CIP Tag Messages tab:** Use this tab to configure messages to read or write arrays of data in a remote controller that supports the CIP Data Table Read and CIP Data Table Write services. In the following figure, the message reads the first 5 elements of the tag array MotorTemperature defined in the remote PLC.

| Other, Adapter/Client - Ethernet [EtherNet/IP Protocol] |   |            |                  |              |             |                  |              |          |       |
|---|---|------------|------------------|--------------|-------------|------------------|--------------|----------|-------|
| Settings  | Drag a column header here to group by that column |            |                  |              |             |                  |              |          |       |
| Assemblies  | Enable  | Device     | Message Name     | Message Type | Slot Number | CIP Tag          | CIP Tag Type | Elements | Bytes |
| I/O Connections   | True  | ControlLgx | ReadTemperatures | Read Tag     | 0           | MotorTemperature | REAL         | 5        | 20    |
| Remote Devices  |   |            |                  |              |             |                  |              |          | 3000  |
| CIP Tag Messages  |   |            |                  |              |             |                  |              |          |       |
| PCCC Messages   |   |            |                  |              |             |                  |              |          |       |

**Figure 2.155 CIP Tag Messages**

- **PCCC Messages tab:** Use this tab to configure messages to read or write arrays of data in a remote controller that supports the SLC Protected Typed Logical Read/Write services. In the following figure, the message writes in the data points N7:10, N7:11, and N7:12 of the remote PLC.

| Other, Adapter/Client - Ethernet [EtherNet/IP Protocol] |   |          |               |                         |             |             |               |          |       |
|---|---|----------|---------------|-------------------------|-------------|-------------|---------------|----------|-------|
| Settings  | Drag a column header here to group by that column |          |               |                         |             |             |               |          |       |
| Assemblies  | Enable  | Device   | Message Name  | Message Type            | File Number | File Type   | Start Element | Elements | Bytes |
| I/O Connections   | True  | MicroLgx | WriteVoltages | SLC Typed Logical Write | 7           | Integer (N) | 10            | 3        | 6     |
| Remote Devices  |   |          |               |                         |             |             |               |          | 5000  |
| CIP Tag Messages  |   |          |               |                         |             |             |               |          |       |
| PCCC Messages   |   |          |               |                         |             |             |               |          |       |
| POU I/Pin Settings                                      |   |          |               |                         |             |             |               |          |       |

**Figure 2.156 PCCC Messages**

- Step 4. Map the data. Tag arrays will be created as POU input pins (in case of write messages) or POU output pins (in case of read messages) to map the data that is written to or read from the remote PLC. These POU pins have the following format: [Device Name]\_[Message Name]\_Data.
- Step 5. Send your settings to the RTAC and verify successful communication with your remote PLC. Each Explicit Message configured to read or write data with the remote PLC will generate an output POU pin providing the results of the last message exchanged with the PLC. These POU pins have the following naming format: [Device Name]\_[Message Name]\_Status. During

normal communications, the message shown here will be either **In Progress** or **Success**. Any error conditions that are encountered during the exchange will also be noted here. Common error conditions are noted in *Table 2.54*.

**Table 2.54 Ethernet/IP Explicit Message Error Statuses**

| Status String  | Description  |
|--|--|
| Timeout  | The RTAC has not received a response from the target device within the configured time.                                      |
| Invalid Response   | The RTAC has received a response from the target device with a Requester ID, CMD, or Transaction ID mismatch.                |
| Message Service Error: Error Code: [0xAA], Extended Error Code: [0xBB] | An error response was returned by the target device. A list of Error and Extended Error Codes are shown in <i>Table 2.55</i> |

**Table 2.55 Ethernet/IP Explicit Message Error and Extended Error Codes**

| Error Code | Extended Error Code | Description   |
|------------|---------------------|---|
| 0x04       | 0x0000              | A syntax error was detected decoding the request path. Typically indicates that a read or write message has been configured that refers to an array that does not exist in the PLC. |
| 0xFF       | 0x2104 or 0x2105    | A read or write request has been configured that has specified an array length longer than what is configured in the PLC.   |
| 0xFF       | 0x2107              | A write message has been configured that has specified an incorrect Data Type compared to the array configuration in the PLC.   |

## Electronic Data Sheet (EDS) File

### User-Configurable EDS Entries

The following EDS entries are based on ACCELERATOR RTAC user settings.

- ▶ **EDS Revision**—The value of the Revision entry in the File section of the EDS file is set by the Major EDS Revision and Minor EDS Revision settings in ACCELERATOR RTAC.
- ▶ **Product Code**—The ProdCode field in the Device section of the EDS file is mapped from the Product Code attribute of the Identity object.
- ▶ **Product Name**—The ProdName field in the Device section of the EDS file is mapped from the Product Code attribute of the Identity object.
- ▶ **Parameter**—The ParamN entries in the Parameter section of the EDS file correspond to the tags mapped into Assembly object instances in ACCELERATOR RTAC.
- ▶ **Assembly**—The AssemN entries in the Assembly section of the EDS file correspond to the Assembly instances defined in the **Assembly Instances** tab in ACCELERATOR RTAC.
- ▶ **Connection**—The ConnectionN entries in the Connection Manager section of the EDS file correspond to the implicit connections defined in the **I/O Connections** tab of ACCELERATOR RTAC.

Comments entered in Assembly data maps and the **I/O Connections** tab in ACSELERATOR RTAC are mapped to the EDS file as line comments. ACSELERATOR RTAC accepts UTF-8 characters in comment fields. Non-8-bit characters are replaced with a question mark ("?") in the EDS file.

## EDS File Export

There are three methods by which to export the EDS file:

- ▶ ACSELERATOR RTAC software
- ▶ FTP/SFTP Server
- ▶ CIP File Object

### Export EDS File Via ACSELERATOR RTAC

The EDS file can be exported by using the **Export EDS File** menu option under the **EtherNet/IP** ribbon menu.



Figure 2.157 Export EDS File Via ACSELERATOR RTAC

### Export EDS File Via FTP/SFTP

If an SFTP server is added to the RTAC, the EDS file can be downloaded from the ETHERNETIP folder in the SFTP root directory.

### Export EDS File Via CIP File Object

The EDS file is stored in the File object (Object Class 0x37, Instance 0xC8) implemented as part of the EtherNet/IP object model in the RTAC. An EtherNet/IP scanner can retrieve the EDS file directly from the RTAC by using the File object services.

## Add-On Profile License Key


Add-On Profile (AOP) License Keys are issued by Rockwell Automation to EtherNet/IP adapter vendors to make their integration easier in the Rockwell Automation configuration software (Studio 5000 Logix Designer) when configuring Implicit Message (Class 1) EtherNet/IP communications. The AOP License Key is embedded in the EtherNet/IP adapter EDS file and allows the Rockwell Automation configuration software to access the members of the I/O Assembly instances of the adapter as individual tags with the same tag names and data type as defined in EDS file. When no AOP License Key is present in the EDS file, the Rockwell Automation configuration software displays the assembly object instance data in the form of an array.

When an AOP License Key is present in the RTAC EDS file, the Rockwell Automation configuration software creates I/O tags for all the RTAC input and output assembly members by using the same tag names and tag types defined by the user when mapping the assembly objects instances in ACSELERATOR RTAC.

ACSELERATOR RTAC version 1.155.xxx and later automatically embeds Rockwell Automation's AOP License Keys in the RTAC EDS file when the Product Code attribute is in the 9160 to 9169 range. This Product Code range maps to the 200 to 209 range for the Configuration ID setting.

For correct integration of the RTAC EDS file into the Rockwell Automation configuration software using the AOP License Keys, the following three requirements must be met (if any of these requirements is not met, the Rockwell Automation configuration software will display the RTAC assembly data in the form of an array, as if no AOP License Key were present in the EDS file):

1. Configuration ID: In ACSELERATOR RTAC, set the EtherNet/IP Configuration ID setting to a value in the 200 to 209 range, as shown in *Figure 2.158*. For more information about the Configuration ID setting, refer to *Managing Multiple RTAC EtherNet/IP Configurations in the Same Network on page 317*

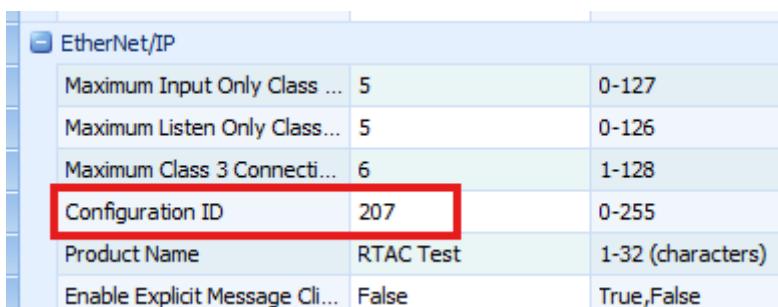

|                                |           |                   |
|--------------------------------|-----------|-------------------|
| Maximum Input Only Class ...   | 5         | 0-127             |
| Maximum Listen Only Class...   | 5         | 0-126             |
| Maximum Class 3 Connecti...    | 6         | 1-128             |
| Configuration ID               | 207       | 0-255             |
| Product Name                   | RTAC Test | 1-32 (characters) |
| Enable Explicit Message Cli... | False     | True, False       |

**Figure 2.158 Configuration ID Setting Value for the AOP License Key**

2. Supported Data Types: In ACSELERATOR RTAC, set all the Assembly Instance members to a Data Type supported by the Rockwell Automation configuration software. The following data types are supported by Studio 5000 Logix Designer v37 (previous versions of Logix Designer may not support all the data types shown):

|                    |                          |
|--------------------|--------------------------|
| 8-bit Data Types:  | SINT, USINT, BYTE, BOOL  |
| 16-bit Data Types: | INT, UINT, WORD          |
| 32-bit Data Types: | REAL, DINT, UDINT, DWORD |
| 64-bit Data Types: | LREAL, LINT, ULINT       |

3. Alignment Rules: The Rockwell Automation configuration software has specific byte-alignment rules for the tags mapped in Assembly object instances. To comply with these rules, add tag members to the Assembly object instances in ACSELERATOR RTAC as follows:

- 16-bit data types must be grouped in an even number of contiguous rows.
- 8-bit data types must be grouped in a multiple-of-4 number of contiguous rows.

*Figure 2.159* shows an example of how to map the assembly instances to meet Rockwell's byte-alignment requirements.

| EtherNet/IP Assembly Data Map |   |          |           |            |       |       |             |       |
|-------------------------------|---|----------|-----------|------------|-------|-------|-------------|-------|
| Members                       | Drag a column header here to group by that column |          |           |            |       |       |             |       |
|                               | Enable  | Tag Name | Data Type | Tag Ali... | Value | Bytes | Byte Offset | Order |
| True                          | RTAC_2241_2_ASSEM102.REAL_var1                    | REAL     |           | 0          | 4     | 0     | 0           | 0     |
| True                          | RTAC_2241_2_ASSEM102.DINT_var1                    | DINT     |           | 0          | 4     | 4     | 1           | 1     |
| True                          | RTAC_2241_2_ASSEM102.SINT_var1                    | SINT     |           | 0          | 1     | 8     | 2           | 2     |
| True                          | RTAC_2241_2_ASSEM102.SINT_var2                    | SINT     |           | 0          | 1     | 9     | 3           | 3     |
| True                          | RTAC_2241_2_ASSEM102.SINT_var3                    | SINT     |           | 0          | 1     | 10    | 4           | 4     |
| True                          | RTAC_2241_2_ASSEM102.SINT_var4                    | SINT     |           | 0          | 1     | 11    | 5           | 5     |
| True                          | RTAC_2241_2_ASSEM102.DINT_var2                    | DINT     |           | 0          | 4     | 12    | 6           | 6     |
| True                          | RTAC_2241_2_ASSEM102.DINT_var3                    | DINT     |           | 0          | 4     | 16    | 7           | 7     |
| True                          | RTAC_2241_2_ASSEM102.UINT_var1                    | UINT     |           | 0          | 2     | 20    | 8           | 8     |
| True                          | RTAC_2241_2_ASSEM102.UINT_var2                    | UINT     |           | 0          | 2     | 22    | 9           | 9     |
| True                          | RTAC_2241_2_ASSEM102.LREAL_var1                   | LREAL    |           | 0          | 8     | 24    | 10          | 10    |
| True                          | RTAC_2241_2_ASSEM102.LREAL_var2                   | LREAL    |           | 0          | 8     | 32    | 11          | 11    |

Figure 2.159 Example of Byte-alignment requirement for AOP License Key

# File Transfer Protocol

---

## Overview

Configure a file transfer protocol (FTP) server POU to communicate with a remote FTP client. The FTP server can use FTP over SSH (SFTP), but does not support FTP over SSL/TLS (FTPS). The FTP server will support as many as 10 simultaneous connections. When configured in SFTP mode, the server supports user- and password-based authentication, but does not support SSH key-based authentication.

The FTP server supports the collection of files from the RTAC under the following directories:

- ▶ Events: This includes events from SEL CEV, SEL Comtrade, MMS Comtrade, GE Comtrade (Modbus), Alstom Comtrade (Courier), IEC 60870-5-103, and Axion Comtrade files (from CT/PT cards).
- ▶ File: This includes any files uploaded or created using the FileIo library.
- ▶ Projects: If the account type used is administrator or engineer, the FTP server will make any projects uploaded through the web interface available.
- ▶ CID: If an IEC 61850 configuration is included in the RTAC project, the CID file for the RTAC will be available in this directory.
- ▶ Logs: This directory contains the log information for the FTP server.
- ▶ ETHERNETIP: This directory contains EtherNet/IP configuration information.

Table 2.56 shows the read/write access to folders based on the account level of the user who accesses the FTP server.

Table 2.56 Read/Write Access By Account Level

| Account Type  | Events | Files      | Projects   | CID       | Logs      | ETHERNETIP | Configuration | Audit     |
|---------------|--------|------------|------------|-----------|-----------|------------|---------------|-----------|
| Administrator | Read   | Read/Write | Read/Write | Read      | Read      | Read       | Read          | Read      |
| Engineer      | Read   | Read/Write | Read/Write | Read      | Read      | Read       | No Access     | No Access |
| User Manager  | Read   | Read       | No Access  | No Access | No Access | No Access  | No Access     | No Access |

| Account Type | Events | Files      | Projects  | CID       | Logs      | ETHERNETIP | Configuration | Audit     |
|--------------|--------|------------|-----------|-----------|-----------|------------|---------------|-----------|
| Monitor      | Read   | Read       | No Access | No Access | No Access | No Access  | No Access     | No Access |
| HMI Operator | Read   | Read       | No Access | No Access | No Access | No Access  | No Access     | No Access |
| FTP User     | Read   | Read/Write | No Access | No Access | Read      | No Access  | No Access     | No Access |

The FTP server will support authentication either with local RTAC accounts or through any configured LDAP accounts.

## FTP Logging

A log file of FTP server interactions is kept on the RTAC. This log file will grow to a maximum of 10 MB. Once it reaches this size, a second log file will begin. Once the second log file reaches 10 MB, the first log file is truncated and new activity is logged to that file. This rotation continues as each log file reaches its maximum file size. These log files are available via the web interface or the FTP server.

## FTP Server Configuration

Configure the FTP server to communicate via Ethernet to an FTP client. Since the FTP protocol is designed to transfer files, no tag configuration parameters will be available, unlike other configurable server protocols in the RTAC. Adding the FTP server POU to the project configuration enables the project to communicate with as many as ten FTP client connections with a single defined POU in the RTAC project during runtime.

## Settings Tab

The **Settings** tab contains all configurable items necessary for communication. Refer to the description column for information about each setting. Move the main window horizontal slider, resize the column width, or hover your mouse over the description cell to view the cell content in its entirety. Type any applicable comments in the blank column to the far right.

All connections to the RTAC FTP server must use the same connection type. You cannot configure a mix of FTP and SFTP connections. For FTP-based communications, the RTAC contact port is configurable. The **Settings** tab contains the ability to restrict access to a certain set of IP addresses allowed to access the FTP server. You can configure the server to accept all FTP connection requests, or restrict access to a comma-separated list of FTP clients who will be allowed to authenticate and use the FTP server. In addition to whitelisting IP addresses, Ethernet interfaces on the RTAC can be blacklisted from FTP access. In the **Settings** tab, you can enter a comma-separated list that will prevent FTP communications on that Ethernet interface. For example, if Blocked Network Interfaces is set to "Eth\_F, Eth\_02," only Ethernet Port 1 on that RTAC can receive FTP connection requests, regardless of the Allow Anonymous IP Client or Client IP Address(es) settings. When the FTP POU is added to the RTAC configuration, multiple clients are able to simultaneously access the file system and read files at the same time.

**Table 2.57 POU Pin Settings**

| Parameter         | Description  | Default |
|-------------------|--|---------|
| En                | Enables or disables this specific Function Block instance. Other inputs have no effect while EN is False.  | True    |
| Reset_Statistics  | On rising-edge trigger, all counter POU output are reset.  | False   |
| Active Connection | Number of currently connected FTP clients  | 0       |
| ENO               | Indicates this specific Function Block Instance is active if True. If False, the inputs have no effect and the outputs are not updated.  | False   |
| Files_Downloaded  | The number of files that have downloaded from the RTAC since the last rising edge of ENO or Reset_Statistics. If no manipulation of EN or Reset_Statistics has been performed, this number will often reflect the number of files downloaded since the last project download or power cycle. | 0       |
| Files_Uploaded    | The number of files that have uploaded to the RTAC since the last rising edge of ENO or Reset_Statistics. If no manipulation of EN or Reset_Statistics has been performed, this number will often reflect the number of files uploaded since the last project download or power cycle.       | 0       |
| Offline           | False when protocol communications are in process.<br>Note: If protocol communications are in process, but there is no successful exchange of data, a settings configuration issue may be present.   | False   |

## Flex Parse Protocol

### Flex Parse Messages

Use Flex Parse Messages in an SEL client or in a Flex Parse Protocol client to create custom commands as long as 255 bytes and optionally parse the response messages. You can configure the RTAC to send a Command String to the SEL device, or any other connected device, at a configurable Poll Period interval. You can also configure the Start of Response Parse Expression and other parse expressions to enable the RTAC to determine when a valid response is received and to interpret the returned message and populate user-created tags. You can define parse expressions in SEL type class expressions or Perl 5 regular expressions (regex), both of which are explained later in this section. See *Table 2.58* for a description of Flex Parse Messages settings.

Add a flex parse command by performing the following steps:


- Step 1. From the **Insert** ribbon, select **Other > Flex Parse Protocol**.
- Step 2. On the **Settings** tab, configure necessary communications settings parameters.

#### NOTE

The process for adding and configuring a flex parse message is the same on an SEL client or in a Flex Parse Protocol client that you have added to the project.

- Step 3. Click on **Flex Parse Messages**.
- Step 4. Click on **+** to add a message, then click on **Add**.

- Step 5. Configure the Command String, which is the message that will be sent to the SEL device.
- Step 6. Configure the timing parameters to dictate how often the command should be sent and the time allotted for the command to complete.
- Step 7. Configure the Start of Response Expression that the RTAC will compare with the incoming message to ensure it is parsing the correct message.

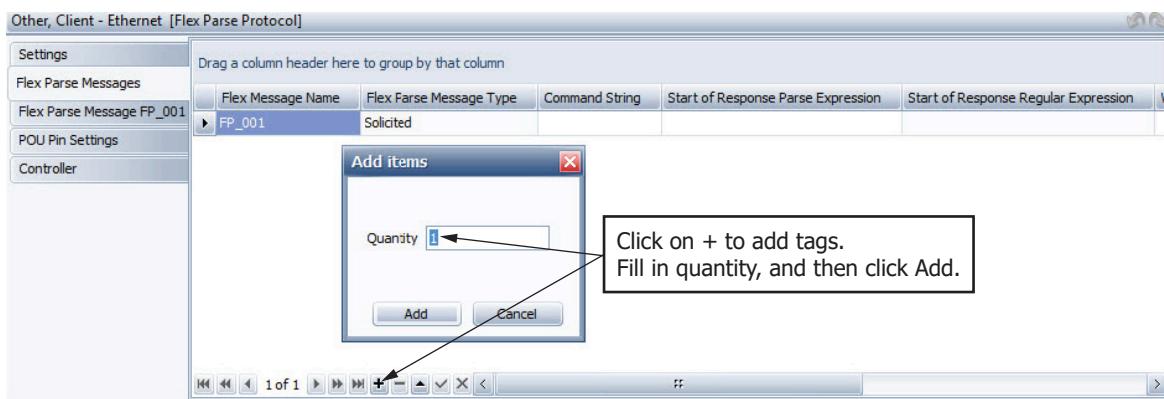

**Figure 2.160 Add Flex Parse Message**


**Table 2.58 Flex Parse Message Settings**

| Parameter                            | Description   | Default   |
|--------------------------------------|---|---|
| Flex Message Name                    | The default message name. You can change this as necessary.   | FP-n, where n is the last flex parse message number + 1 |
| Flex Parse Message Type              | The type of message processing.   | Solicited   |
| Command String                       | User-configured message the RTAC will send to the device.   |   |
| Start of Response Parse Expression   | Optional user-configured expression to locate the start of the response. Enter as Perl 5 regex and/or SEL type class expression.  |   |
| Start of Response Regular Expression | The view-only derived Regular Expression from Start of Response Parse Expression.   |   |
| Window Size                          | The maximum number of characters used to satisfy Start_of_Response_Parse_Expression.  | 512   |
| Poll Period                          | The period in milliseconds after which the RTAC will send Command String to the configured device.  | 0   |
| Timeout                              | The time in milliseconds that the RTAC will wait for a valid reply before aborting message processing (and retrying). If no tags are defined for this message, processing will continue as if all parse messages are satisfied. | 5000  |
| Access Level                         | The access level on the device that the RTAC must attain before sending Command String.   | Level_1   |
| Max number of Retries                | The maximum number of retries before the IED is marked Offline.   | 0   |
| Terminate By                         | Terminate parse search either on completion of the parse or on Response Timeout. Note that if your parse expression has an error, the parse will not complete so the expression will never terminate by parse complete.         | On_Timeout  |
| Response Termination Timeout         | The time in milliseconds the RTAC will wait after all parse expressions have been evaluated successfully and the line is idle. The timer is reset each time an ASCII character is received.                                     | 1000  |

After you configure a Flex Parse Message, a new tab will appear called **Flex Parse Message FP\_001**, where FP\_001 is the configured Flex Message Name. In this tab, you can add and configure tags, at your option, to store data from the incoming message. Add tags and configure parse expressions that will search for the data points you want to extract from the incoming message. The RTAC will execute these parse expressions once the Start of Response Expression has been satisfied, which indicates that the RTAC has received a valid message. See *Table 2.59* for a description of Flex Parse tag settings.

To configure the flex parse tags, perform the following steps:

- Step 1. Click on the tab **Flex Parse message FP\_001** (where FP\_001 is the name of the message) in the SEL client or Flex Parse Protocol client.
- Step 2. Click on +, type the quantity of tags you need, and press **Add**.
- Step 3. Change the tag type and treat as fields, as necessary.
- Step 4. Use SEL type class expressions and regex to parse necessary data from the incoming message.
- Step 5. Optionally, you can test the flex parse commands you have configured by clicking on the Flex Parse Helper Form.
- Step 6. In this blank form, either copy/paste or type in text for which you are building the parse commands. The flex parse helper form highlights the message to show the results of the parsing.
- Step 7. Hover your cursor over each data element in the flex parse helper form to see the tag assignment for that data element. See *Figure 2.164*.
- Step 8. Adjust the parse commands, if needed, if the data are not assigned to the tags correctly.

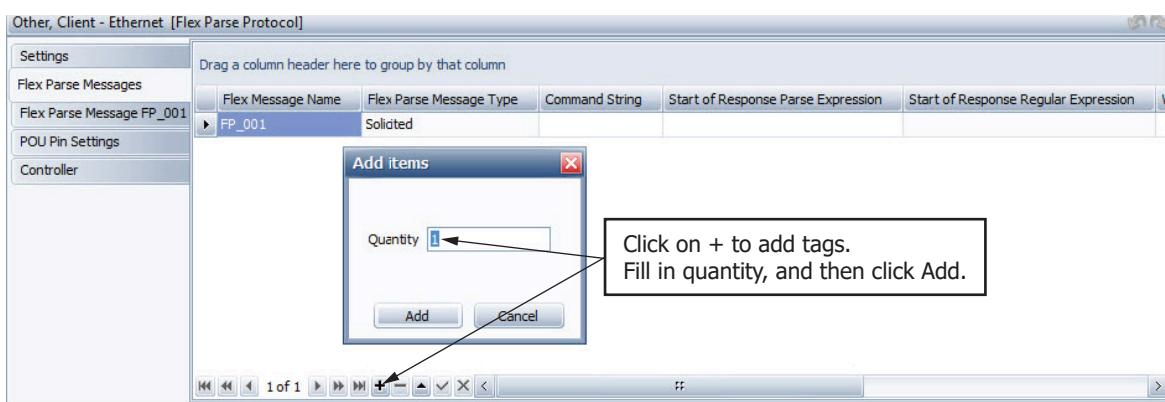

**Figure 2.161 Add Flex Parse Tags**

**Table 2.59 Flex Parse Tags Settings**

| Parameter | Description   | Default |
|-----------|---|---------|
| Enable    | The processing enable flag. Set this flag to True to enable processing of this tag. Set this flag to False to disable processing. | True    |
| Tag Name  | The default tag name contains the device name and tag description. You can change this name as necessary.                         |         |
| Tag Type  | The data type of this tag. See <i>Data Types on page 1137</i> for more details.   | INS     |
| Tag Alias | An optional descriptive tag name. Use this tag alias anywhere in the RTAC system in place of the actual tag name.                 |         |

| Parameter          | Description   | Default |
|--------------------|---|---------|
| Order ID           | The order in which the parse expressions will be executed.  |         |
| Parse Expression   | The configurable search expression used to identify the piece of data for this tag. Enter as Perl 5 regex and/or SEL type class expression. |         |
| Regular Expression | The view-only derived regular expression from Parse Expression.   |         |
| Window Size        | The maximum number of characters used to satisfy Parse Expression.  |         |
| Treat As           | The expected representation or format of integer data.  | Decimal |
| Size               | The size of data in bytes, once it has been processed. This affects sign extension and range checking.                                      | 4       |
| Default Value      | The string of characters used if the parsing fails on the captured data. (quality=invalid).   |         |
| Comment            | Optional user-entered comment field.  |         |

During the operation of sending/receiving and parsing messages, the flex parse message task exhibits the following behavior:

- ▶ If a Command String has been sent and this Command String neither times out nor completes prior to the triggering of another Command String, the issuing of the new message will be delayed and the POU pin Send\_Flex\_Parse\_Message\_FP\_001\_Delay will turn True for one processing interval.
- ▶ After a triggered Command String is sent and the received message parsed successfully, the POU pin Send\_Flex\_Parse\_Message\_FP\_001\_DN will toggle True for one processing cycle.
- ▶ After a parse match is found for one piece of data, the next search group will start after the last character of the previous match group. For example, a search for "little" in the string "Mary had a little lamb" will start with Mary and end when "little" is found. The next search begins immediately after the word "little".
- ▶ If the result of the parse is out of range of the tag definition, the tag value is assigned infinity for MV, zero for all other data types.
- ▶ If the parse fails, the tag value is assigned the default value as configured in the tag setup, and quality is set to invalid.
- ▶ If a parse fails within the window size or the message timeout expires, subsequent parse commands are not executed.

## SEL Type Class Expressions

You can use SEL type class expressions along with regex expressions in your parse expressions. SEL type class expressions are shortcuts that allow you to match on data without writing complex regex expressions. ACCELERATOR RTAC will expand SEL type class expressions to regex expressions each time you save the project.

Each type class expression comes in either a capturing or non-capturing form. Use a capturing type class to extract data into a tag. Use a non-capturing expression to search for something you do not want to put into a tag. For example, searching for the start of the message enables you to know you have the correct message but you do not want to store that string.

Capturing type class expressions have the following format:

(?#<TYPE[:param1[, paramN]]>)

Non-capturing type class expressions have the following format:

(?#<?:TYPE[:param1[, paramN]]>)

[ ] represents optional text.

**TYPE** is the type class name (e.g., INS, REAL, CHAR, etc.).

The value param1 is an optional parameter. For example, (?#<INS: 2>) will limit the number of digits extracted to two. *Table 2.60* describes individual type class expressions, what optional parameters each has, and the default value for the optional parameter if you do not specify one.

**Table 2.60 SEL Type Class Expressions**

| Type Class | Description  | Optional Parameters With Defaults                    | Example   |
|------------|--|--|---|
| INS        | Extracts a group of digits that represent an integer.  | Number of digits (1–10), default = 10                | 0, 4, –500  |
| HINS       | Extracts a group of hexadecimal digits that represent an integer.  | Number of digits (1–8), default = 8                  | C1, A1C   |
| HEX_ASCII  | Extracts a group of hexadecimal digits written in ASCII that represent an integer, where four hexadecimal digits are a single byte.  | Number of digit quartets or bytes (1–4), default = 4 | 4632 (xF2), 31323334 (x1234)                          |
| REAL       | Extracts a group of digits that represent a floating point. Note that making digits of precision = 0 may cause unexpected results. The first search of 1.23 will return 1. The second search will find 23, which may not be what you intended. | Number of digits of precision (0–9), default = 3     | +5, 35., 7.1, –.87                                    |
| CHAR       | Extracts at most one character.  | N/A  | a, 7, j   |
| DLIM       | Extracts at most one delimiter character.  | N/A  | <SPC>, <TAB>, <CR>, <LF>, <>, <;>, </>, <>, <:>, <>"> |

### Example 2.3

In this basic example, the RTAC sends a meter (MET) command to an SEL-221 relay as shown in the following figure. In this example, we will configure the RTAC to parse the returned data into tags.

```
=>>MET <Enter>
Example 230 kV Line Date: 1/1/1 Time: 03:15:14
          A      B      C      AB     BC     CA
I (A)    994    995    994   1723   1724   1724
V (KV)  134.4  134.3  134.2  233.1  232.8  232.9
P (MW)   401.12
Q (MVAR)  1.00
```

How it works: The configurations in *Figure 2.162* and *Figure 2.163* have the following effects on the MET message shown in *Example 2.3*:

1. The RTAC will log in to the SEL relay in Access Level 1.
2. The RTAC will send the Command String (**MET**, carriage return, line feed) every Poll Period (60,000 ms).
3. The RTAC will look for a string of characters, configured as the Start of Response Parse Expression. In this example, it is **MET**, then any characters until it sees CA. It will only search the number of characters configured as Window Size (512 bytes). A successful match means that the next search will begin directly after the CA in the column headings.
4. In *Figure 2.163*, (?#<INS:4>) tells the RTAC to search through the number of characters specified in Window Size (50) for an INS (integer) that is at least one character and a maximum of four characters long. This will return the value 994 as an integer into the tag SEL\_221\_16\_1\_SEL.I\_A.stVal.
5. The next search, (?#<INS:4>), will begin to search directly after 994 and will return the value 995 into the second tag and so forth. Note that the REAL number searches include an option (:1) to indicate the number of characters to include past the decimal point.
6. After all searches complete successfully, POU pin Send\_Flex\_Parse\_Message\_Meter\_DN toggles True for one processing interval.

Perform the following steps to configure the RTAC to populate tags by parsing the data from the MET command on an SEL-221 Relay:


- Step 1. From the **Insert** ribbon, add an SEL-221 relay by clicking on **SEL > 200 Series > 221 Versions > 221-16 > SEL**.
- Step 2. Click on the **Flex Parse Messages** tab.
- Step 3. Click on + and then on **Add** to create one flex parse message.
- Step 4. Configure as shown in *Figure 2.162*. Leave fields not shown in *Figure 2.162* at default values.
- Step 5. Press <**Ctrl+S**> to save.

| Flex Message Name | Command String | Start of Response Parse Expression | Window Size | Poll Period | Timeout | Access Level |
|-------------------|----------------|------------------------------------|-------------|-------------|---------|--------------|
| Meter             | MET<CR><LF>    | MET.*\bCA\b                        | 512         | 60000       | 5000    | Level_1      |

**Figure 2.162 Example 2.3 Flex Parse Command**

- Step 6. Click on the newly created tab called **Flex Parse Message Meter**.
- Step 7. Click on +, type in **14**, and then press **Add** to add 14 flex parse tags.
- Step 8. Configure as shown in *Figure 2.163*, and press <**Ctrl+S**> to save.
- Step 9. Open the flex parse helper form.
- Step 10. Copy the **MET** command text from the figure in *Example 2.3*, and paste into the flex parse helper form.
- Step 11. Notice the text is highlighted in yellow. Hover your cursor over each data element and notice how the flex parse helper form shows you the tag names and which data are assigned to them. See *Figure 2.164*.

| Tag Name              | Tag Type | Parse Expression | Window Size | Treat As | Default Value |
|-----------------------|----------|------------------|-------------|----------|---------------|
| SEL_221_16_1_SEL.I_A  | INS      | (?#<INS:4>)      | 50          | Decimal  | 999           |
| SEL_221_16_1_SEL.I_B  | INS      | (?#<INS:4>)      | 25          | Decimal  | 999           |
| SEL_221_16_1_SEL.I_C  | INS      | (?#<INS:4>)      | 25          | Decimal  | 999           |
| SEL_221_16_1_SEL.I_AB | INS      | (?#<INS:4>)      | 25          | Decimal  | 9999          |
| SEL_221_16_1_SEL.I_BC | INS      | (?#<INS:4>)      | 25          | Decimal  | 9999          |
| SEL_221_16_1_SEL.I_CA | INS      | (?#<INS:4>)      | 25          | Decimal  | 9999          |
| SEL_221_16_1_SEL.V_A  | MV       | (?#<REAL:1>)     | 50          | Real     | 999.9         |
| SEL_221_16_1_SEL.V_B  | MV       | (?#<REAL:1>)     | 25          | Real     | 999.9         |
| SEL_221_16_1_SEL.V_C  | MV       | (?#<REAL:1>)     | 25          | Real     | 999.9         |
| SEL_221_16_1_SEL.V_AB | MV       | (?#<REAL:1>)     | 25          | Real     | 999.9         |
| SEL_221_16_1_SEL.V_BC | MV       | (?#<REAL:1>)     | 25          | Real     | 999.9         |
| SEL_221_16_1_SEL.V_CA | MV       | (?#<REAL:1>)     | 25          | Real     | 999.9         |
| SEL_221_16_1_SEL.P    | MV       | (?#<REAL:2>)     | 50          | Real     | 999.99        |
| SEL_221_16_1_SEL.Q    | MV       | (?#<REAL:2>)     | 50          | Real     | 999.99        |

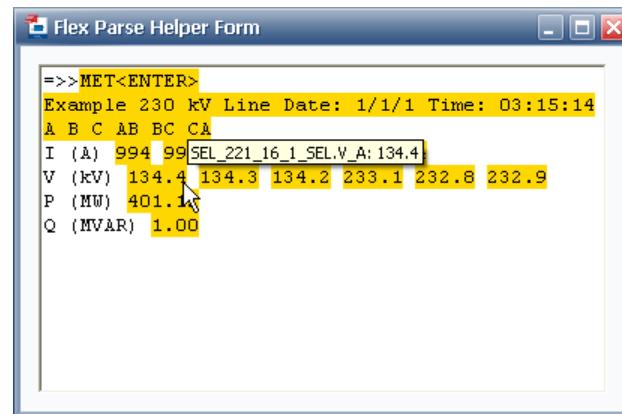**Figure 2.163 Example 2.3 Flex Parse Tags****Figure 2.164 Flex Parse Helper Form**

---

**Example 2.4**

In this example, the RTAC sends a meter m (MET M) command to an SEL-351R relay as shown in the following figure and parses the data into tags. This example is more advanced, because it shows how you can skip fields that may or may not have valid data by using the look-ahead feature. Notice in the following figure that some data fields have the word RESET, which means that there are no data. The associated date fields are blank. In this example, we will add conditions to parse commands such that the parse command will search for a number OR a RESET and will search for valid date data OR look ahead to make sure there is another line to search if the date field is blank.

```
=>>MET M <Enter>
RECLOSER R1 Date: 03/28/01 Time: 10:39:02.389
FEEDER XYZ
      Max     Date       Time     Min     Date       Time
IA(A)  200.0  03/28/01  10:38:56.774  198.0  03/28/01  10:38:57.291
IB(A)  202.1  03/28/01  10:38:56.774  199.0  03/28/01  10:38:58.069
IC(A)  202.2  03/28/01  10:38:57.091  197.0  03/28/01  10:38:56.774
IN(A)   RESET
IG(A)   RESET
VA(KV)  RESET
VB(KV)  RESET
VC(KV)  RESET
VS(KV)  RESET
MW3P    RESET
MVAR3P  RESET
LAST RESET 03/28/01 10:38:56.773
```

How it works: The configurations in *Figure 2.165* and *Figure 2.166* have the following effects on the MET M message shown in *Example 2.4*:

1. The RTAC will log in to the SEL relay in Access Level 1.
2. The RTAC will send the Command String (**MET M**, carriage return, line feed) every Poll Period (60,000 ms).
3. The RTAC will look for a string of characters, configured as the Start of Response Parse Expression. In this example, it is **MET M**, then any characters until it sees IA (A). It will only search the number of characters configured as Window Size (512 bytes). A successful match means that the next search will begin directly after IA (A) in the first data row shown in *Example 2.4*.
4. In *Figure 2.166*, (?#<REAL:1>) | RESET tells the RTAC to search through the number of characters specified in Window Size (80) for either the word RESET or for a REAL number with one number to the right of the decimal point. In this example, the value 200.0 is returned as a REAL into the tag SEL\_351R\_1\_SEL.IA\_MAX.instMag.
5. The next search, (?#<INS:2>) | (?=IB), will begin searching directly after the value 200.0 for an integer value with a maximum of two characters. If the match fails because the space that should contain a value is blank, it will look ahead for the string IB. If either the number or the string IB is found, the parsing will continue. The tag is populated with the value satisfied by this expression; or, if there is no value, and the look-ahead expression (? = IB) is satisfied, the tag is not populated and the next tag is used for the next configured parse. If the expression is not satisfied, the parse will fail and no more parsing will occur for this data group. In this example, the RTAC finds the month value 03 and places it in SEL\_351R\_1\_SEL.IA\_MAX\_MONTH.
6. The searches continue to populate DAY, YEAR, HOUR, etc., tags. Each new line (IA, IB, IC, IN, etc.) is tested for the word RESET. If the test for RESET and the look ahead test for the next line were not included, the parsing would fail as soon as it could not find a number to match the parse expression.
7. After all searches are successfully completed, POU pin Send\_Flex\_Parse\_Message\_Meter\_DN toggles TRUE for one processing interval.

Perform the following steps to configure the RTAC to populate tags by parsing the data from the MET M command on an SEL-351R Relay:

- Step 1. From the **Insert** ribbon, add an SEL-351R relay by clicking on **SEL > 300 Series > 351R > SEL**.
- Step 2. Click on the **Flex Parse Messages** tab.
- Step 3. Click on **+** and then on **Add** to create one flex parse message.
- Step 4. Configure as shown in *Figure 2.165*. Leave fields not shown in *Figure 2.165* at default values.
- Step 5. Press **<Ctrl+S>** to save.

| Flex Message Name | Command String | Start of Response Parse Expression | Window Size | Poll Period | Timeout | Access Level |
|-------------------|----------------|------------------------------------|-------------|-------------|---------|--------------|
| MET_Min_Max_ALL   | MET M<CR><LF>  | MET M.*IA\( A )                    | 512         | 60000       | 5000    | Level_1      |

**Figure 2.165 Example 2.4 Flex Parse Command**

- Step 6. Click on the newly created tab called **Flex Parse Message MET\_Min\_Max\_ALL**.
- Step 7. Click on **+**, type in **154**, and then press **Add** to add 154 flex parse tags.
- Step 8. Configure as shown in *Figure 2.166*, and press **<Ctrl+S>** to save.

Notice the SEL class type ORed with a look ahead for the characters IB (? #<INS:2>) | (?=IB) will collect an integer or move on to parsing the next tag if the field is blank by looking ahead to make sure the next line contains IB. In some situations you may not know what is on the next line or it may be an integer value so you cannot look ahead for it. To resolve this, you could combine the SEL class type ORed with a look ahead for an end of line (?#<INS:2>) | (? =\x0A), which will collect an integer; or, if there is not an integer, it will look ahead to see if there is a line feed. As long as there is a line feed, the process will skip to parse the next tag.

| Tag Name                    | Tag Type | Parse Expression    | Window Size | Treat As | Size | Default Value |
|-----------------------------|----------|---------------------|-------------|----------|------|---------------|
| SEL_351R_1_SEL.IA_MAX       | MV       | (?#<REAL:1>) RESET  | 80          | Real     | 4    | 999.9         |
| SEL_351R_1_SEL.IA_MAX_MONTH | INS      | (?#<INS:2>) (?=IB)  | 80          | Decimal  | 4    | 99            |
| SEL_351R_1_SEL.IA_MAX_DAY   | INS      | (?#<INS:2>) (?=IB)  | 80          | Decimal  | 4    | 99            |
| SEL_351R_1_SEL.IA_MAX_YEAR  | INS      | (?#<INS:2>) (?=IB)  | 80          | Decimal  | 4    | 99            |
| SEL_351R_1_SEL.IA_MAX_HOUR  | INS      | (?#<INS:2>) (?=IB)  | 80          | Decimal  | 4    | 99            |
| SEL_351R_1_SEL.IA_MAX_MINS  | INS      | (?#<INS:2>) (?=IB)  | 80          | Decimal  | 4    | 99            |
| SEL_351R_1_SEL.IA_MAX_SEC   | MV       | (?#<REAL>) (?=IB)   | 80          | Real     | 4    | 99.999        |
| SEL_351R_1_SEL.IA_MIN       | MV       | (?#<REAL:1>) (?=IB) | 80          | Real     | 4    | 888.8         |
| SEL_351R_1_SEL.IA_MIN_MONTH | INS      | (?#<INS:2>) (?=IB)  | 80          | Decimal  | 4    | 88            |
| SEL_351R_1_SEL.IA_MIN_DAY   | INS      | (?#<INS:2>) (?=IB)  | 80          | Decimal  | 4    | 88            |
| SEL_351R_1_SEL.IA_MIN_YEAR  | INS      | (?#<INS:2>) (?=IB)  | 80          | Decimal  | 4    | 88            |
| SEL_351R_1_SEL.IA_MIN_HOUR  | INS      | (?#<INS:2>) (?=IB)  | 80          | Decimal  | 4    | 88            |
| SEL_351R_1_SEL.IA_MIN_MINS  | INS      | (?#<INS:2>) (?=IB)  | 80          | Decimal  | 4    | 88            |
| SEL_351R_1_SEL.IA_MIN_SEC   | MV       | (?#<REAL>) IB       | 80          | Real     | 4    | 88.888        |
| SEL_351R_1_SEL.IB_MAX       | MV       | (?#<REAL:1>) RESET  | 80          | Real     | 4    | 999.9         |
| SEL_351R_1_SEL.IB_MAX_MONTH | INS      | (?#<INS:2>) (?=IC)  | 80          | Decimal  | 4    | 99            |
| SEL_351R_1_SEL.IB_MAX_DAY   | INS      | (?#<INS:2>) (?=IC)  | 80          | Decimal  | 4    | 99            |
| SEL_351R_1_SEL.IB_MAX_YEAR  | INS      | (?#<INS:2>) (?=IC)  | 80          | Decimal  | 4    | 99            |
| SEL_351R_1_SEL.IB_MAX_HOUR  | INS      | (?#<INS:2>) (?=IC)  | 80          | Decimal  | 4    | 99            |
| SEL_351R_1_SEL.IB_MAX_MINS  | INS      | (?#<INS:2>) (?=IC)  | 80          | Decimal  | 4    | 99            |
| SEL_351R_1_SEL.IB_MAX_SEC   | MV       | (?#<REAL>) (?=IC)   | 80          | Real     | 4    | 99.999        |
| SEL_351R_1_SEL.IB_MIN       | MV       | (?#<REAL:1>) (?=IC) | 80          | Real     | 4    | 888.8         |
| SEL_351R_1_SEL.IB_MIN_MONTH | INS      | (?#<INS:2>) (?=IC)  | 80          | Decimal  | 4    | 88            |
| SEL_351R_1_SEL.IB_MIN_DAY   | INS      | (?#<INS:2>) (?=IC)  | 80          | Decimal  | 4    | 88            |
| SEL_351R_1_SEL.IB_MIN_YEAR  | INS      | (?#<INS:2>) (?=IC)  | 80          | Decimal  | 4    | 88            |
| SEL_351R_1_SEL.IB_MIN_HOUR  | INS      | (?#<INS:2>) (?=IC)  | 80          | Decimal  | 4    | 88            |
| SEL_351R_1_SEL.IB_MIN_MINS  | INS      | (?#<INS:2>) (?=IC)  | 80          | Decimal  | 4    | 88            |
| SEL_351R_1_SEL.IB_MIN_SEC   | MV       | (?#<REAL>) IC       | 80          | Real     | 4    | 88.888        |
| SEL_351R_1_SEL.IC_MAX       | MV       | (?#<REAL:1>) RESET  | 80          | Real     | 4    | 999.9         |
| SEL_351R_1_SEL.IC_MAX_MONTH | INS      | (?#<INS:2>) (?=IN)  | 80          | Decimal  | 4    | 99            |
| SEL_351R_1_SEL.IC_MAX_DAY   | INS      | (?#<INS:2>) (?=IN)  | 80          | Decimal  | 4    | 99            |
| SEL_351R_1_SEL.IC_MAX_YEAR  | INS      | (?#<INS:2>) (?=IN)  | 80          | Decimal  | 4    | 99            |
| SEL_351R_1_SEL.IC_MAX_HOUR  | INS      | (?#<INS:2>) (?=IN)  | 80          | Decimal  | 4    | 99            |

Figure 2.166 Example 2.4 Flex Parse Tags

#### Example 2.5 Parsing Strings

Although there is not an SEL type class expression for parsing a string value, you can easily do this by using a flex parse expression wrapped in parentheses ( ). The ( ) indicate this is a capturing search so the value is stored in the tag. Anything configured outside of the ( ) is still used for the search but will not be stored in the tag. To configure a flex parse expression to store a string value, set the **Tag Type** to **STR** and the **Treat As** column to **String** for that tag. Use regular expression syntax, such as in *Table 2.61*, to indicate the string that is to be captured. If you wanted to capture each line label from the **MET M** command in *Example 2.4*, you could enter the following for the flex parse expression: ([A-Z, /(),]{1,6}).

The ( ) wrap a capturing expression to indicate the value obtained should be stored in the tag.

The brackets [ ] wrap a list of values to search for. In this example, we are searching for the following:

- Any capitalized letter from A to Z
- Any spaces
- Any ( ) characters. Notice they must be escaped by placing a / before each of them.

The curly brackets { } wrap a min,max value.

The entire message indicates we want a group of characters containing any capitalized letters, spaces, ( ) characters, and we can have a minimum and maximum total length and repetition of any of the defined characters of 1 and 6, respectively.

---

## Regex

A regular expression (regex) is a method for matching characters in a string of text. Regex is similar to, but far more powerful than, a search engine in a word processor, and can be used to match exact strings, ranges, parts of a string, beginning and ending of lines; to exclude certain strings; and much more. The RTAC uses Perl 5-compatible regex in flex parse messaging to extract data from returned message strings. You can use regex in the flex parse message, or you can use SEL type class expressions, and ACCELERATOR RTAC will convert the expression to regex for you.

Each regex attempts to find a single specified match. For example, if you applied the regex 43 to the string 19304-5043920-04399, it would begin searching at 193... and return the first instance of 43. If you applied the regex again, it would begin searching at 920 and return the second instance of 43. The regex search will always begin at the first character after the last successful matched string. The set of characters the regex is going to search is called a character set or, more commonly, a character class. The characters used in the search are referred to as tokens (alpha/numeric characters, spaces, special characters, etc.). Some searches look for places before, after or between characters instead of searching for a character. These are called anchors. For example, \$ will match the end of a string before a line break.

Regex is very common in the computing industry, so there are many resources in books and on the Internet that contain detailed regex syntax and theory.

*Table 2.61* contains some common regex expressions.

**Table 2.61 Common Regular Expression Syntax**

| Metacharacter | Description  | Example   |
|---------------|--|---|
| [             | Defines a character class. Match a single character out of a list.   | [0-9a-fA-F] Matches a single hex character from a string, case insensitive. |
| \             | Meaning one: Escape the next character. Several characters you may want to search for have special meaning in regex. Use the \ to tell regex to not interpret the meaning of the next character. | + Searches for a "+" instead of interpreting the + as a regex command.      |

| Metacharacter | Description   | Example   |
|---------------|---|---|
|               | Meaning two: Combine with certain characters to become shorthand character classes. There are many shorthand classes.   | \d Matches a digit, as [0–9]. \b Matches a whole alphanumeric sequence, as \bmyword\b   |
| ^             | Meaning one: A logical NOT of the character class when used in brackets [^].  | q[^x] Matches "q" in "query" but will not match the "q" in Iraq because there are no characters after the latter "q".                           |
|               | Meaning two: An anchor that matches the position before the first character in a line.  | ^J Matches before the "J" in "Jack" and the Beanstalk"  |
| \$            | An anchor that matches right after the last character in a line.  | k \$ Matches after the "k" in "Jack and the Beanstalk"  |
| .             | Matches any single token.   | ca. Matches cat, cap, car...  |
|               | Logical OR alternation.   | cat dog Will match the word cat or the word dog.  |
| ?             | Makes the preceding token optional.   | colou?r Matches "color" or "colour".  |
| *             | Matches the preceding token zero or more times. Similar to ? except will match zero or more tokens of the preceding token or group.   | [0–9].*\\bdogs\b Matches the string "4 People were walking their dogs".   |
| +             | Matches the preceding token one or more times.  | [1–9]+ Matches 9954 from the string "9954"  |
| ( )           | Used for matching a group. All tokens within the ( ) are a group or single token.   | go( fishing)? Matches "go" or "go fishing".   |
| { }           | Specifies the number of repeats. Also specifies a min/max number of repeats as {min,max}. {2,} indicates there is a minimum of two repeats but no maximum.  | [1–9][0–9]2 Matches 100 through 999 because the second character class repeats twice.   |
| ?=            | Look ahead looks forward for a match but does not stop at the look ahead character. In the example, q(?=u) applied to the word "query", the parse returns true because it found a q and also looked ahead and found a u. The next search begins at the "u", not at the "e". | q(?=u) Matches the "q" in "query" but not in "Iraq" because it looked ahead for a "u".<br>q(?!=u) Matches the "q" in "Iraq" but not in "query". |


## IEC 60870-5-101 and -104

IEC 60870-5 is an IEC standard that defines systems used for supervisory control and data acquisition (SCADA), including details related to communications between devices. As part of the standard, IEC 60870-5-101 defines a byte-oriented, asynchronous serial-based protocol for communications associated with electrical power systems. The design is based on a balanced (where either client or server can transmit asynchronously) or unbalanced (server can only transmit when solicited by client) topologies and is suitable for point-to-point or point-to-multipoint configurations. IEC 60870-5-104 protocol extends the IEC 60870-5-101 protocol to fully integrate communications over Ethernet networks. At the application layer, the protocols are essentially the same, so selecting between the IEC 60870-5-101 or IEC 60870-5-104 protocol in ACSELERATOR RTAC is done by selecting serial or Ethernet connection methods. Although not used to a great extent in the U.S.A., the IEC 60870-5-101/104 protocols have historically been the *de facto* standard for communicating to devices connected with electrical power generation, transmission, and distribution worldwide.

This section describes the configuration and use of the IEC 60870-5-101/104 client and server with ACCELERATOR RTAC. See *Communication Protocol Device Count Support on page 149* for the number of IEC 60870-5-101/104 servers and clients supported for each RTAC model. The IEC 60870-5-101/104 server supports receiving commands (in the control direction) and transmitting responses (in the monitoring direction) for Application Service Data Unit (ASDU) and Cause of Transmission (COT) types as shown in the interoperability statements for IEC 60870-5-101 and -104, which list COTs for expected behavior only. Additional COTs are recognized for errors.

## IEC 60870-5-101/104 Client Configuration

Configure a 101/104 client connection to communicate via serial or Ethernet to IEDs. The RTAC will poll data from these IEDs and store the data it receives in tags. Use the Tag Processor to map these data to any protocol, logs, user logic, etc.

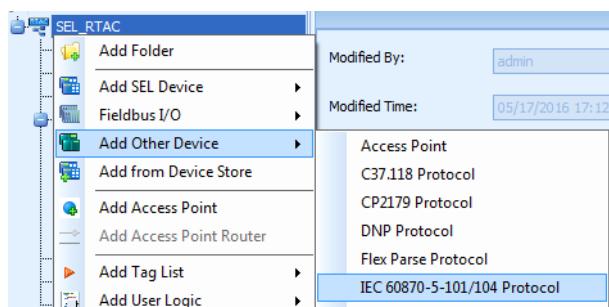

**Figure 2.167 Adding an IEC 60870-5-101/104 Client**

Give the device connection a unique name and select the connection type, as shown in *Figure 2.167*. Refer to *Client Connection Types on page 135* for a description of each connection type.

## Settings Tab

The **Settings** tab contains all configurable items for communication. Check the **Description** column for details on each configuration item. Move the slider or hover your cursor over a description to see the entire text of an item description. Type any applicable comments in the blank column to the far right. Select the **Advanced Settings** check box to enable configuration of advanced settings.

## Custom Messages Tab

The **Custom Messages** tab contains the poll requests the IEC 60870-5-101/104 client will use to collect data from the server. To add additional messages, use the + button. As many as 50 messages are supported. The supported message types and message qualifiers correspond with the interoperability document for the 101/104 client.

| Other, Client - Ethernet [IEC 60870-5-101/104 Protocol] |   |              |                        |                   |                                    |                |
|---|---|--------------|------------------------|-------------------|------------------------------------|----------------|
| Settings  | Drag a column header here to group by that column |              |                        |                   |                                    |                |
| Custom Messages   | Message Name                                      | Message Type | Message Common Address | Message Qualifier | Message Information Object Address | Message Period |
|   | Custom_Message_1                                  | Read (C_RD)  | 1                      |                   | 1                                  | 0              |
|   | Custom_Message_2                                  | Read (C_RD)  | 1                      |                   | 1                                  | 0              |
|   | Custom_Message_3                                  | Read (C_RD)  | 1                      |                   | 1                                  | 0              |
|   | Custom_Message_4                                  | Read (C_RD)  | 1                      |                   | 1                                  | 0              |
|   | Custom_Message_5                                  | Read (C_RD)  | 1                      |                   | 1                                  | 0              |

Figure 2.168 IEC 60870-5-101/104 Client Custom Messages

Table 2.62 Explanation of Column Headers

| Column Name                          | Description   |
|--------------------------------------|---|
| Message Name                         | User-defined name for the message   |
| Message Type                         | The type of message the client will send  |
| Message Common Address               | The common address included in the message  |
| Message Qualifier                    | A group selected for interrogation. Not all message types will require a qualifier.           |
| Message Information Object Addresses | Address of the point the client will request  |
| Message Period                       | The period during which the client will issue this message. This quantity is in milliseconds. |

## Sector Settings Tab

The **Sector Settings** tab contains configuration parameters for a maximum of eight sectors in a server. Each sector has a configurable name and common address. By default, each client has one sector. To add additional sectors, use the + button.

| Other, Client - Ethernet [IEC 60870-5-101/104 Protocol] |  |                |
|---|--|----------------|
| Settings  | Drag a column header here to group by that |                |
| Custom Messages   | Sector Name                                | Common Address |
|   | Sector_1                                   | 1              |

Figure 2.169 IEC 60870-5-101/104 Sector Settings

## IEC 60870-5-101/104 Client Sector Map

To configure tags for the IEC 60870-5-101/104 client, select an existing **101/104 Client Sector Map**. Repeat *Step 1* through *Step 4* to configure each client tag.

- Step 1. Click the tab for the appropriate tag type to add and configure tags.
- Step 2. Click + to add tags. Create only the necessary number of tags to optimize system performance.

Step 3. Rename the tags as necessary.

Step 4. Configure other tag parameters as necessary.

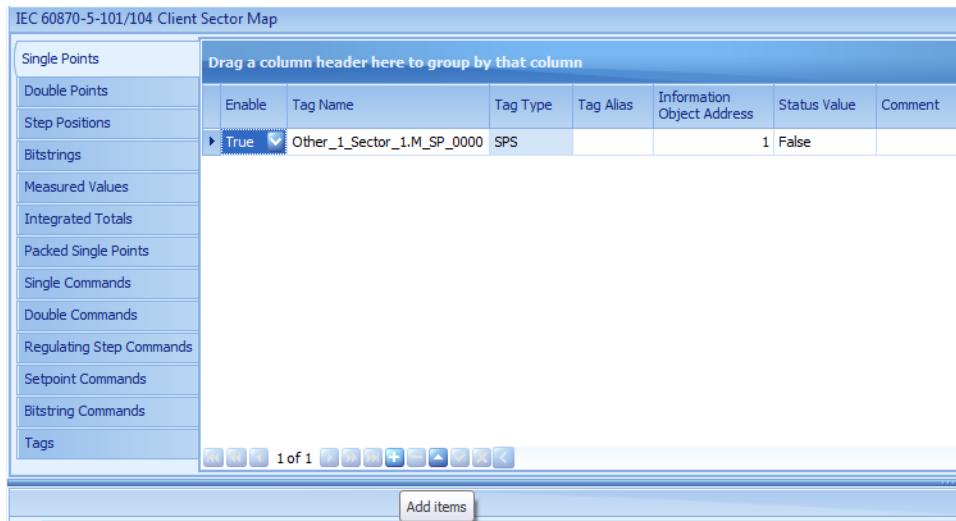


Figure 2.170 IEC 60870-5-101/104 Client Sector Map

## POU Pins

Use POU pin settings to view the present state of the IEC 60870-5-101/104 client operation and to modify some of the behavior of the protocol. Setting the **Visible** field to True will cause the POU pin to appear in the **Controller** tab. See *Table 2.63* for the settings descriptions.

Table 2.63 IEC 60870-5-101/104 Client POU Pin Settings

| Pin Name                         | Pin Type                                   | Description  | Default                                   |
|----------------------------------|--|--|---|
| EN                               | Input BOOL                                 | The EN input enables or disables this specific function block instance. Other inputs have no effect while EN is False.                             | True                                      |
| Disable_Tag_Updates              | Input BOOL                                 | The POU will not update or process changes to tags while this input is True.   | False                                     |
| Disable_Controls                 | Input BOOL                                 | While True, processing of any controllable tags is blocked.  | False                                     |
| Reset_Statistics                 | Input BOOL                                 | On the rising-edge trigger, all counter POU outputs are reset.   | False                                     |
| Issue_Time_Sync                  | Input BOOL                                 | Requests time sync message(s) to be sent on the rising edge. Time-synchronization processing is defined by the Propagation Delay Type setting.     | False                                     |
| Issue_Time_Sync_Period           | Input Time (0, 1–1440 minutes)             | Defines the interval used by the client to issue time-synchronization messages. Setting it to zero causes the related function to be non-periodic. | Reference setting—Issue time-synch period |
| Issue_<Name> <sup>a</sup>        | Input BOOL                                 | Request custom message to be sent on the rising edge.  | False                                     |
| Issue_<Name>_Period <sup>a</sup> | Input Time (0, 250–100000000 milliseconds) | Defines the interval used by the client to issue the custom message. Setting to zero causes the related function to be non-periodic.               | Reference custom message—Message_Period   |

| <b>Pin Name</b>                 | <b>Pin Type</b> | <b>Description</b>   | <b>Default</b> |
|---------------------------------|-----------------|--|----------------|
| Redundant_Change                | Input BOOL      | On a rising edge, this forces the client to change the active TCP connection if Aux Server IP Address is defined.<br>Note: Only applicable on 104 connections/client (Ethernet)                                  | False          |
| ENO                             | Output BOOL     | Indicates that this specific function block instance is active if True. If False, the inputs have no effect and the outputs are not updated.   | False          |
| Offline                         | Output BOOL     | This output is False when protocol communications are in process.<br>Note: Protocol communications may be in process, but no successful data are exchanged because of settings configuration issues.             | False          |
| Slow_Poll_Mode_Enabled          | Output BOOL     | Asserts to indicate that the device has slowed polling by the slow poll mode multiplier.   | False          |
| Invalid_Function_Block_Input    | Output BOOL     | True when a function block input currently has an invalid or out-of-range value.   | False          |
| Controls_Disabled               | Output BOOL     | Asserted when the Disable_Controls input is asserted. This indicates that the client will not issue control commands.  | False          |
| Message_Sent_Count              | Output UDINT    | Running sum indicating the number of messages transmitted to the remote device.  | False          |
| Message_Received_Count          | Output UDINT    | Running sum indicating the number of messages received from the remote device.   | 0              |
| Message_Failure                 | Output BOOL     | Asserts for a single processor cycle when a message is processed that does not conform to the expected protocol format. This may be because of an incomplete response or corrupted data in the message response. | False          |
| Message_Failure_Count           | Output UDINT    | Running sum indicating the number of failed messages.  | 0              |
| Direct_Transparent_Connection   | Output BOOL     | Indicates that the communications have been interrupted by a direct transparent connection through an access point router.   | False          |
| Data_Link_Timeout_Count         | Output UDINT    | Number of data link failures.  | 0              |
| Response_Timeout_Count          | Output UDINT    | Number of application layer message response timeouts.   | 0              |
| Reinit_In_Progress              | Output BOOL     | While asserted, indicates that the client is performing initial communications queries prior to data processing  | False          |
| Issue_Time_Sync_DN              | Output BOOL     | Asserts for a single processing interval once all time-synchronization processing has successfully completed.  | False          |
| Issue_Time_Sync_Delay           | Output BOOL     | Asserts when the time-synchronization message is triggered and the previous triggering of the time-synchronization message has not completed. Deasserts when on the rising edge of Issue_Time_Sync_DN.           | False          |
| Issue_<Name>_DN <sup>a</sup>    | Output BOOL     | Asserts for a single processing interval once the message is successfully completed. Completion of the message is dependent on the configuration of the message.   | False          |
| Issue_<Name>_Delay <sup>a</sup> | Output BOOL     | Asserts when the message is triggered and the previous triggering of the message has not completed. Deasserts when on the rising edge of Issue_<Name>_DN.  | False          |


| Pin Name                    | Pin Type     | Description   | Default |
|-----------------------------|--------------|---|---------|
| Test_Command_Failure        | Output BOOL  | Asserts for a single processing interval if an error is detected in the test command response.  | False   |
| Time_Sync_Event_Received    | Output BOOL  | Asserts for a single processing interval when the client receives a time-synchronization event (ASDU Type = 103, COT = Spontaneous(3)) from the server.   | False   |
| Redundant_Changed           | Output BOOL  | Asserts for a single processing interval when the client sends the start data transfer activation request if Aux Server IP Address is defined.  | False   |
| Redundant_Active_Connection | Output UDINT | The connection that is in use. If no connection exists, contains the last connection that was connected. 1 = channel associated with Server_IP_Address. 2 = channel associated with Aux_Server_IP_Address.  | 0       |
| Redundant_Ready_Count       | Output UDINT | The number of redundant channels that are connected.  | 0       |
| Buffer_Overflow             | Output BOOL  | Asserts for a single processing interval if any message operations were discarded because of queuing limits. A message will be discarded if multiple occurrences of the same operation have been queued prior to the completion of that message type. | False   |
| Buffer_Overflow_Count       | Output UDINT | Count indicating the number of times that the Buffer_Overflow pin has been asserted.  | 0       |
| Restart_Local               | Output BOOL  | Asserts for a single processing interval when the client receives an end of initialization message with a cause of initialization, indicating that a local command/power-cycle restarted the server.  | False   |
| Restart_Remote              | Output BOOL  | Asserts for a single processing interval when the Client receives an end of initialization message with a cause of initialization, indicating a remote start of the server.   | False   |
| Error_Detected              | Output BOOL  | Asserts for a single processing interval when a message is received where the negative bit of the cause of initialization is asserted.  | False   |
| Last_Error_Code             | Output Enum  | Contains the last received message's COT cause field where its COT p/n = negative.  | 0       |

<sup>a</sup> <Name> = Each configured custom message.

## IEC 60870-5-101/104 Server Configuration

Configure an IEC 60870-5-101 server to communicate via serial (or serial tunneled) or an IEC 60870-5-104 server to communicate via Ethernet to respond to polling IEC 60870-5-101/104 clients. Create single points, measured values, and other tag types in an IEC 60870-5 shared map. Each IEC 60870-5-101 or IEC 60870-5-104 server is configurable for as many as 256 sectors or address spaces that effectively perform as logical devices. Assign one unique shared map to each sector you have configured. You can configure a shared map to be unique to a configured IEC 60870-5-101/104 server, or you can share the same shared map with other configured IEC 60870-5-101/104 servers. You can create a maximum of 256 shared maps. Map data to those shared map tags by using the Tag Processor from client IED or other source tags in the RTAC database.

Insert a unique IEC 60870-5-101 or IEC 60870-5-104 server connection for each IEC 60870-5-101 or IEC 60870-5-104 client connected to the RTAC.

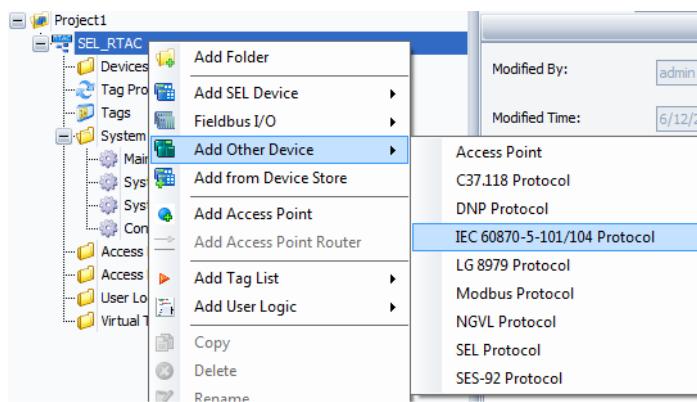

**Figure 2.171 Insert IEC 60870-5-101/104 Server**


Give the device connection a unique name and select the type of connection as shown in *Figure 2.3*. The **Settings** tab contains all the configurable items for communications. Check the **Description** column for settings details on each configuration item. Move the slider or hover your cursor over the description to see the entire description text. Type any necessary comments in the blank column to the far right. Select the **Advanced Settings** check box to enable configuration of advanced settings.

## Shared Maps and Sector Settings

Each IEC 60870-5-101/104 server has a configurable number of sectors, each being analogous to a logical device within the IEC 60870-5-101/104 server. You must assign an IEC 60870-5-101/104 server shared map name to each sector to provide the data tags for that IEC 60870-5-101/104 server sector. You can configure as many as eight sectors, each with a unique Common Address, by selecting a shared sector map and adjusting the Cyclic Scan Period and Background Scan Period as needed. Configure double transmission of events by sector and by data type within the sector. Double transmission of events sends the event once without a time stamp and once with a time stamp.

## Add IEC 60870-5-101/104 Shared Map

Step 1. Under the **Insert** tab, select **Tag Lists > IEC 6870-5-101/104 Server Shared Map**.

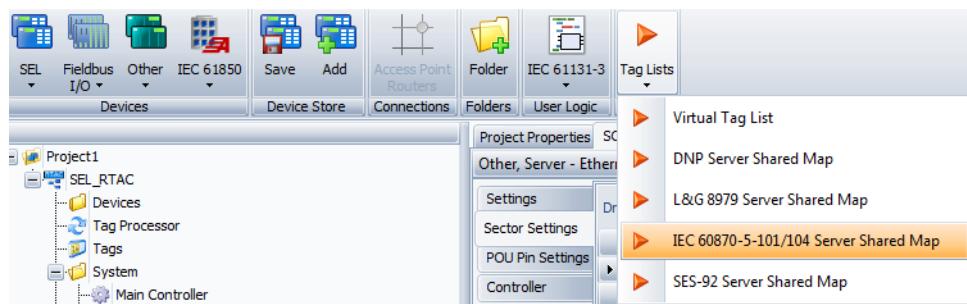


**Figure 2.172 Add IEC 60870-5-101/104 Server Map**

- Step 2. Click on a device tag type tab to add and configure tags.
- Step 3. Click + to add tags. Create only the necessary number of tags to optimize system performance.

Step 4. Change the names of the tags as necessary.

Step 5. Change other tag-related information as necessary.

Repeat *Step 2* through *Step 5* to configure all server tags. When you are finished, configure an IEC 60870-5-101/104 server to use this custom map by selecting **Shared Sector Map** in the **Sector Settings** tab. Although more than one IEC 60870-5-101/104 server can use the same map, each IEC 60870-5-101/104 server will manage separate event queues. Configure the Tag Processor to populate these server connection tags with actual values.

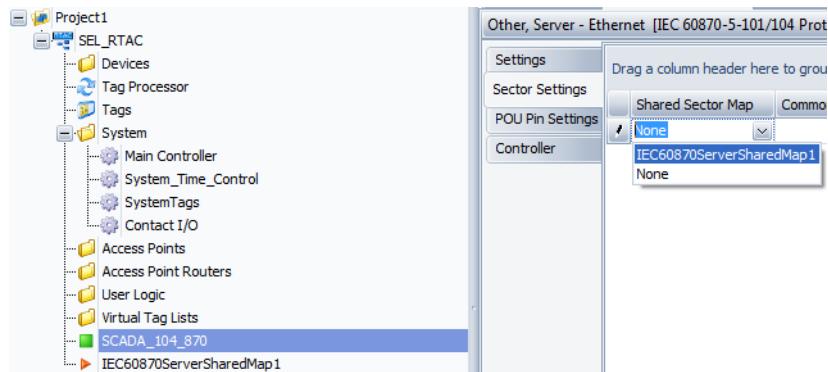

**Figure 2.173 Select IEC 60870-5-101/104 Shared Map**

## IEC 60870-5-104 Server Failover

You can configure IEC 60870-5-104 servers to operate under the following failover scenarios.

**Multiple Client IPs.** Multiple clients can poll one IEC 60870-5-104 server if they are configured in a failover configuration so they poll the RTAC one at a time. In this configuration, the IEC 60870-5-104 server maintains one event queue per sector. Events reported to one client are not reported in the next reply, even if another poll comes from a different client.

If you set Allow Anonymous IP Clients to TRUE, the RTAC will allow any IEC 60870-5-104 client that can connect to the RTAC network to poll this IEC 60870-5-104 server, as long as the IEC 60870-5-104 sector addresses are correct. If you set Allow Anonymous IP Clients to FALSE, you can configure as many as 10 client IP addresses, separated by commas. In this configuration, the RTAC will only reply to any client that has one of the configured IP addresses.

**Redundant.** The IEC 60870-5-104 server supports redundant communications as defined in the IEC 60870-5-104 specification. Set Allow Anonymous IP Clients to FALSE, configure Client IP Address(es) as needed to authenticate valid polling clients, and set Enable Redundant = TRUE to enable a maximum of four simultaneous TCP connections to the server.


## IEC 60870-5-104 Server Encrypted Connections

You can configure IEC 60870-5-104 servers to use encrypted TLS/SSL transport by selecting **Advanced Settings** and modifying the **Transport Security** setting to TLS/SSL. When this mode is selected, the server only accepts encrypted client connections. For additional security, the **Verify SSL Certificate**

setting can optionally be enabled to enforce verification of the incoming client certificate when using encrypted connections. When using this mode, add the certificate of the remote client to the RTAC CA Certificate store using the web interface or the Security API.

## IEC 60870-5-101 Server Dial-Out

You can configure an IEC 60870-5-101 serial server device to dial out automatically to report unsolicited data. Insert an IEC 60870-5-101 serial server connection and select **Advanced Settings**. Figure 2.174 shows the settings that are enabled when Modem Connected = True. Notice the configuration supports an optional second phone number in case the RTAC does not get an answer when using the first phone number.

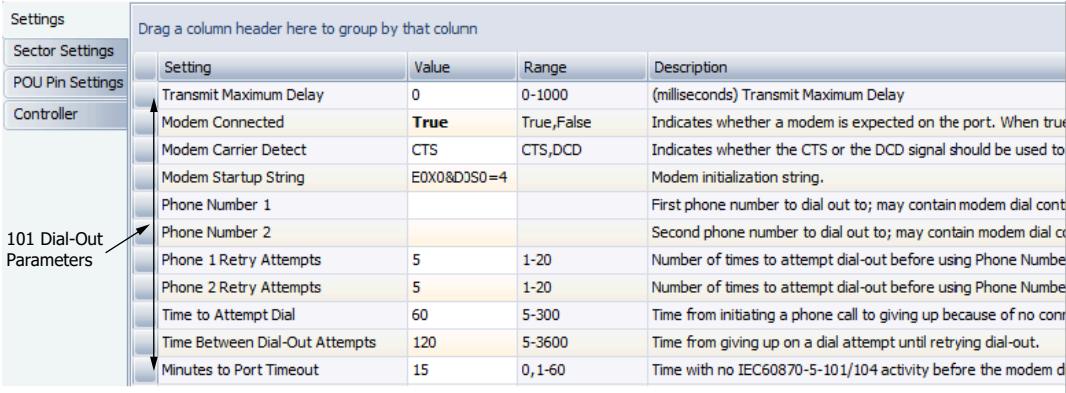

| Setting                        | Value       | Range       | Description  |
|--------------------------------|-------------|-------------|--|
| Transmit Maximum Delay         | 0           | 0-1000      | (milliseconds) Transmit Maximum Delay                            |
| Modem Connected                | <b>True</b> | True, False | Indicates whether a modem is expected on the port. When true     |
| Modem Carrier Detect           | CTS         | CTS, DCD    | Indicates whether the CTS or the DCD signal should be used to    |
| Modem Startup String           | E0X0&D0S0=4 |             | Modem initialization string.                                     |
| Phone Number 1                 |             |             | First phone number to dial out to; may contain modem dial cont   |
| Phone Number 2                 |             |             | Second phone number to dial out to; may contain modem dial co    |
| Phone 1 Retry Attempts         | 5           | 1-20        | Number of times to attempt dial-out before using Phone Numbe     |
| Phone 2 Retry Attempts         | 5           | 1-20        | Number of times to attempt dial-out before using Phone Numbe     |
| Time to Attempt Dial           | 60          | 5-300       | Time from initiating a phone call to giving up because of no con |
| Time Between Dial-Out Attempts | 120         | 5-3600      | Time from giving up on a dial attempt until retrying dial-out.   |
| Minutes to Port Timeout        | 15          | 0, 1-60     | Time with no IEC60870-5-101/104 activity before the modem d      |

Figure 2.174 IEC 60870-5-101 Server Dial-Out

## Command Operation Negative Feedback

IEC Technical Specification 61850-80-1:2016 Edition 2.0 describes the relationship between an IEC 60870-5-101/104 client (typically a SCADA system), a gateway device such as an RTAC, and an IED communicating to the gateway device through use of IEC 61850 MMS protocol. Part of the behavior defined in this standard is how command operations are requested by the SCADA system and the expected feedback from the gateway device depending on whether the command operation was successful or not. In the event of the failure of a command operation (either the IED is in local mode or the physical apparatus did not change state), the gateway device should return an **ActCon\_Nega** message to the IEC 60870-5-101/104 client to indicate the command was unsuccessful. To accommodate this required behavior in the RTAC on a per-command-tag basis, create custom logic to assert the q.test Boolean associated with the Status sub-tag of the following command tag types:

- ▶ Single Commands
- ▶ Double Commands
- ▶ Regulating Step Commands
- ▶ Setpoint Commands
- ▶ Bitstring Commands

For example, assume on an IEC 60870-5-101/104 tag map that single-command tags C\_SC\_0000 and C\_SC\_0001 are associated with commands on an IEC 61850 MMS client communicating to an IED named Bay1, and the C\_SC\_0002 and C\_SC\_0003 tags are associated with a second IED named

Bay2. To enable an ActCon\_Nega response to a remote IEC 60870-5-101/104 client in the event that either of the IEDs is in local control mode and any requested command operations were not successful, create statements in the Tag Processor such as those shown in *Figure 2.175*.

| Tag Processor                                     |  |              |                          |              |      |          |
|---|--|--------------|--------------------------|--------------|------|----------|
| Drag a column header here to group by that column |  |              |                          |              |      |          |
| Build   | Destination Tag Name                             | DT Data Type | Source Expression        | SE Data Type | Time | Priority |
| True  |  |              |                          |              |      |          |
| True  | IEC60870ServerSharedMap1.C_SC_0000.status.q.test | BOOL         | Bay1_850.ANN.LLN0.LocSta | SPS          |      |          |
| True  | IEC60870ServerSharedMap1.C_SC_0001.status.q.test | BOOL         | Bay1_850.ANN.LLN0.LocSta | SPS          |      |          |
| True  | IEC60870ServerSharedMap1.C_SC_0002.status.q.test | BOOL         | Bay2_850.ANN.LLN0.LocSta | SPS          |      |          |
| True  | IEC60870ServerSharedMap1.C_SC_0003.status.q.test | BOOL         | Bay2_850.ANN.LLN0.LocSta | SPS          |      |          |
| True  |  |              |                          |              |      |          |

Figure 2.175 IEC 60870-5-101/104 Command Tag Blocking Example

## Device Tag Type Configuration Parameters

Each device tag type has parameters that must be configured correctly to ensure proper system operation. *Table 2.64–Table 2.75* describe the columns used to configure the IEC 60870-5-101/104 server tags. ACCELERATOR RTAC will gray out configuration fields that do not apply to a specific device.

Table 2.64 Common Device Tag Type Parameters

| Parameter                        | Description   | Default  |
|----------------------------------|---|--|
| Enable                           | Set this flag to True to enable processing of this tag. Set this flag to FALSE to disable processing.   | True   |
| Tag Name                         | This parameter describes the tag. You can change this name as necessary.  | The default tag name contains the device name and tag type and is numbered 0–n tags. |
| Information Object Address (IOA) | Within a sector, the unique object address of a point. The total number of IOAs, plus Status IOAs, is 65535.  | Contiguous from 0 to the point count.  |
| Tag Alias                        | Enter an optional descriptive tag name in this field, and then reference this tag alias anywhere in the RTAC system in place of the actual tag name.  |  |
| Report By Exception              | Set this flag to True to enable exception reporting for this tag.   | Dependent on tag type  |
| Report By Cyclic Scan            | Set this flag to True to enable reporting this tag value by cyclic scan.  | False  |
| Report By Background Scan        | Set this flag to True to enable reporting this tag value in a background scan.  | False  |
| Interrogation Group              | Defines the General Interrogation Group for the point. If Global, the point is only reported when <b>General Interrogation All</b> command is received. If Group 1–16, the point is reported when the specific group or All is requested by a <b>General Interrogation</b> command. If None, the point is not reported by <b>General Interrogation</b> command. | Global   |
| Comment                          | Optional user-entered comment field   |  |

**Table 2.65 Single-Point Status Input Parameters**

| Parameter    | Description   | Default |
|--------------|---|---------|
| Tag Type     | See <i>Data Types on page 1137</i> for more details. Maximum 65535 status input tags. | SPS     |
| Status Value | The initialized value at startup  | False   |

**Table 2.66 Double-Point Status Input Parameters**

| Parameter    | Description   | Default      |
|--------------|---|--------------|
| Tag Type     | See <i>Data Types on page 1137</i> for more details. Maximum 65535 status input tags. | DPS          |
| Status Value | The initialized value at startup  | Intermediate |

**Table 2.67 Step Positions Parameters**

| Parameter    | Description   | Default |
|--------------|---|---------|
| Tag Type     | See <i>Data Types on page 1137</i> for more details. Maximum 65535 status input tags.                 | INS     |
| Status Value | The initialized value at startup  | 0       |
| Max Value    | The maximum value allowed for this point. If instMag > Max Value, ".q.detailQual.outOfRange" is set.  | 63      |
| H H Limit    | The high-high alarm limit. Excursions beyond this limit cause the RTAC to generate a high-high alarm. | 56      |
| H Limit      | The high-alarm limit. Excursions beyond this limit cause the RTAC to generate a high alarm.           | 50      |
| L Limit      | The low-alarm limit. Excursions beyond this limit cause the RTAC to generate a low alarm.             | -51     |
| L L Limit    | The low-low alarm limit. Excursions beyond this limit cause the RTAC to generate a low-low alarm.     | -57     |
| Min Value    | The minimum value allowed for this point. If instMag < Min Value, ".q.detailQual.outOfRange" is set.  | -64     |

**Table 2.68 Bitstrings Parameters**

| Parameter    | Description   | Default |
|--------------|---|---------|
| Tag Type     | See <i>Data Types on page 1137</i> for more details. Maximum 65535 status input tags.                 | INS     |
| Status Value | The initialized value at startup  | 0       |
| Max Value    | The maximum value allowed for this point. If instMag > Max Value, ".q.detailQual.outOfRange" is set.  |         |
| H H Limit    | The high-high alarm limit. Excursions beyond this limit cause the RTAC to generate a high-high alarm. |         |
| H Limit      | The high alarm limit. Excursions beyond this limit cause the RTAC to generate a high alarm.           |         |
| L Limit      | The low alarm limit. Excursions beyond this limit cause the RTAC to generate a low alarm.             |         |

| Parameter | Description  | Default |
|-----------|--|---------|
| L L Limit | The low-low alarm limit. Excursions beyond this limit cause the RTAC to generate a low-low alarm.    |         |
| Min Value | The minimum value allowed for this point. If instMag < Min Value, ".q.detailQual.outOfRange" is set. |         |

**Table 2.69 Measured Values Parameters**

| Parameter           | Description  | Default           |
|---------------------|--|-------------------|
| Tag Type            | See <i>Data Types on page 1137</i> for more details.<br>Maximum 65535 status input tags.   | MV                |
| Measured Value Type | The 60870 measure value type of this tag   | Normalized (ME_A) |
| Inst Magnitude      | The initialized instantaneous value at startup   |                   |
| Magnitude           | The initialized dead-banded value at startup   |                   |
| Dead Band Count     | The number of units of change necessary to move the InstMagnitude value into Magnitude. If $ instMag - mag  > db$ , then mag := instMag. |                   |
| Zero Dead Band      | The number of units at or below which Magnitude is forced to zero. If $ mag  < zeroDB$ , then mag := 0.                                  |                   |
| Max Value           | The maximum value allowed for this point. If $instMag > Max\ Value$ , ".q.detailQual.outOfRange" is set.                                 |                   |
| H H Limit           | The high-high alarm limit. Excursions beyond this limit cause the RTAC to generate a high-high alarm.                                    |                   |
| H Limit             | The high-alarm limit. Excursions beyond this limit cause the RTAC to generate a high alarm.  |                   |
| L Limit             | The low-alarm limit. Excursions beyond this limit cause the RTAC to generate a low alarm.  |                   |
| L L Limit           | The low-low alarm limit. Excursions beyond this limit cause the RTAC to generate a low-low alarm.  |                   |
| Min Value           | The minimum value allowed for this point. If $instmag < Min\ Value$ , ".q.detailQual.outOfRange" is set.                                 |                   |

**Table 2.70 Integrated Totals Parameters**

| Parameters   | Description  | Default |
|--------------|--|---------|
| Tag Type     | See <i>Data Types on page 1137</i> for more details. | LBCR    |
| Actual Value | The initialized running value at startup             | 0       |
| Frozen Value | The initialized value at startup                     | 0       |

**Table 2.71 Single Commands Parameters**

| Parameters                                     | Description   | Default                               |
|--|---|---------------------------------------|
| Tag Type                                       | See <i>Data Types on page 1137</i> for more details. Maximum 256 SBO tags.  | SPC                                   |
| Status Information Object Address (Status_IOA) | Defines the IOA used to access the status portion of the control. If Status_IOA = 0, the control status is not accessible.              | Contiguous from 0 to the point count. |
| Status Value                                   | The initialized value at startup  | False                                 |
| Control Model                                  | Persist   |                                       |
| Number of Pulses                               | The number of pulses operated for this control  |                                       |
| On Pulse Duration                              | The On duration of one pulse  |                                       |
| Off Pulse Duration                             | The Off duration of one pulse   | Dependent on control operation        |
| Short Pulse Duration                           | The duration of the pulse if the received command contains a short pulse qualifier. Short pulse duration must be < Long pulse duration. | 1                                     |
| Long Pulse Duration                            | The duration of the pulse if the received command contains a long pulse qualifier. Long pulse duration must be > Short pulse duration.  | 2000                                  |

**Table 2.72 Double Commands Parameters**

| Parameter                                      | Description  | Default                              |
|--|--|--------------------------------------|
| Tag Type                                       | See <i>Data Types on page 1137</i> for more details. Maximum 256 SBO tags.   | DPC                                  |
| Status Information Object Address (Status_IOA) | Defines the IOA used to access the status portion of the control. If Status_IOA = 0, the control status is not accessible. | Contiguous from 0 to the point count |
| Status Value                                   | The initialized value at startup   | Intermediate_state                   |
| Control Model                                  | Persist  | Dependent on control operation       |
| Number of Pulses                               | The number of pulses operated for this control   | 1                                    |
| On Pulse Duration                              | The On duration of one pulse   | 2000                                 |
| Off Pulse Duration                             | The Off duration of one pulse  | 1                                    |

| Parameter            | Description   | Default |
|----------------------|---|---------|
| Short Pulse Duration | The duration of the pulse if the received command contains a short pulse qualifier. Short pulse duration must be < Long pulse duration. | 100     |
| Long Pulse Duration  | The duration of the pulse if the received command contains a long pulse qualifier. Long pulse duration must be > Short pulse duration.  | 500     |

**Table 2.73 Regulating Step Commands Parameters**

| Parameter                                      | Description   | Default                              |
|--|---|--------------------------------------|
| Tag Type                                       | See <i>Data Types on page 1137</i> for more details. Maximum 256 SBO tags.  | BSC                                  |
| Status Information Object Address (Status_IOA) | Defines the IOA used to access the status portion of the control.<br>If Status_IOA = 0, the control status is not accessible. | Contiguous from 0 to the point count |
| Status Value                                   | The initialized value at startup  | Intermediate_state                   |
| Max Value                                      | The maximum value allowed for this point.<br>If instMag > Max Value, ".q.detailQual.outOfRange" is set.                       | 63                                   |
| H H Limit                                      | The high-high alarm limit. Excursions beyond this limit cause the RTAC to generate a high-high alarm.                         |                                      |
| H Limit  | The high-alarm limit. Excursions beyond this limit cause the RTAC to generate a high alarm.                                   |                                      |
| L Limit  | The low-alarm limit. Excursions beyond this limit cause the RTAC to generate a low alarm.                                     |                                      |
| L L Limit                                      | The low-low alarm limit. Excursions beyond this limit cause the RTAC to generate a low-low alarm.                             |                                      |
| Min Value                                      | The minimum value allowed for this point. If instMag < MinValue, ".q.detailQual.outOfRange" is set.                           | 64                                   |
| Control Value                                  | The initialized value at startup  | stop                                 |
| Control Model                                  | The method (pulse or persist) of the control operation  | Pulse                                |
| Number of Pulses                               | The number of pulses operated for this control  | 1                                    |
| On Pulse Duration                              | The On duration of one pulse  | 2000                                 |
| Off Pulse Duration                             | The Off duration of one pulse   | 1                                    |
| Step Size                                      | Noneditable value indicating the amount of change when the control is operated  | 1                                    |

| Parameter            | Description   | Default |
|----------------------|---|---------|
| Short Pulse Duration | The duration of the pulse if the received command contains a short pulse qualifier. Short pulse duration must be < Long pulse duration. | 100     |
| Long Pulse Duration  | The duration of the pulse if the received command contains a long pulse qualifier. Long pulse duration must be > Short pulse duration.  | 500     |

**Table 2.74 Set Point Commands Parameters**

| Parameter       | Description   | Default           |
|-----------------|---|-------------------|
| Tag Type        | See <i>Data Types on page 1137</i> for more details. Maximum 4096 analog input tags.  | APC               |
| Setpoint Type   | The type of set point control   | Normalized (SE_A) |
| Inst Magnitude  | The initialized instantaneous value at startup  |                   |
| Magnitude       | The initialized dead-banded value at startup  |                   |
| Dead Band Count | The number of units of change necessary to move the InstMagnitude value into Magnitude. If $ instMag - mag  > db$ , then $mag := instMag$ . |                   |
| Zero Dead Band  | The number of units at or below which Magnitude is forced to zero. If $ mag  < zeroDB$ , then $mag := 0$ .                                  |                   |
| Max Value       | The maximum value allowed for this point. If $instMag > Max\ Value$ , ".q.detailQual.outOfRange" is set.                                    |                   |
| H H Limit       | The high-high alarm limit. Excursions beyond this limit cause the RTAC to generate a high-high alarm.                                       |                   |
| H Limit         | The high-alarm limit. Excursions beyond this limit cause the RTAC to generate a high alarm.   |                   |
| L Limit         | The low-alarm limit. Excursions beyond this limit cause the RTAC to generate a low alarm.   |                   |
| L L Limit       | The low-low alarm limit. Excursions beyond this limit cause the RTAC to generate a low-low alarm.   |                   |
| Min Value       | The minimum value allowed for this point. If $instMag < Min\ Value$ , ".q.detailQual.outOfRange" is set.                                    |                   |
| Set Magnitude   | The initialized set value at startup  |                   |

**Table 2.75 Bitstring Commands Parameters**

| Parameter                                      | Description  | Default                              |
|--|--|--------------------------------------|
| Tag Type                                       | See <i>Data Types on page 1137</i> for more details. Maximum 4096 analog input tags.                                       | INC                                  |
| Status Information Object Address (Status_IOA) | Defines the IOA used to access the status portion of the control. If Status_IOA = 0, the control status is not accessible. | Contiguous from 0 to the point count |
| Status Value                                   | The initialized value at startup   | 0                                    |

| Parameter | Description   | Default |
|-----------|---|---------|
| Max Value | The maximum value allowed for this point. If instMag > Max Value, ".q.detailQual.outOfRange" is set.  |         |
| H H Limit | The high-high alarm limit. Excursions beyond this limit cause the RTAC to generate a high-high alarm. |         |
| H Limit   | The high-alarm limit. Excursions beyond this limit cause the RTAC to generate a high alarm.           |         |
| L Limit   | The low-alarm limit. Excursions beyond this limit cause the RTAC to generate a low alarm.             |         |
| L L Limit | The low-low alarm limit. Excursions beyond this limit cause the RTAC to generate a low-low alarm.     |         |
| Min Value | The minimum value allowed for this point. If instMag < MinValue, ".q.detailQual.outOfRange" is set.   |         |

## POU Pins

Use POU pin settings to view the present state of IEC 60870-5-101/104 server operation and to modify some of the behavior of the IEC 60870-5-101/104 protocol. Setting the **Visible** field to True will cause the POU pin to appear in the **Controller** tab. See *Table 2.76* for the settings descriptions.

**Table 2.76 IEC 60870-5-101/104 POU Pin Settings**

| Pin Name                            | Pin Type    | Description  | Default |
|-------------------------------------|-------------|--|---------|
| Accept_Time_Sync                    | Input BOOL  | Set to True to allow accepting a clock synchronization command with COT equal to Activation (6).   | True    |
| Disable_Controls                    | Input BOOL  | Disables controls through the protocol. Note: If other IEC 60870-5-101/104 server instances are assigned to the same IEC 60870-5-101/104 Server Shared Map as this server, asserting Disable_Controls will also disable controls for those other server instances. | False   |
| Disable_Tag_Updates                 | Input BOOL  | Disables updating of tag values. Note: If other IEC 60870-5-101/104 server instances are assigned to the same IEC 60870-5-101/104 Server Shared Map as this server, asserting Disable_Tag_Updates will also disable updates for those other server instances.      | False   |
| EN                                  | Input BOOL  | Enables this instance of IEC 60870-5-101/104   | True    |
| Reset_Statistics                    | Input BOOL  | Resets all communications statistics.  | False   |
| CI_Freeze_IEC60870Server-SharedMap1 | Output BOOL | Asserted for one processing cycle when a Counter Interrogation request is received, Qualifier of Counter Interrogation (QCC) option = freeze, freeze with reset, reset (1,2,3).  | False   |
| CI_Reset_IEC60870Server-SharedMap1  | Output BOOL | Asserted for one processing cycle when a Counter Interrogation request is received, Qualifier of Counter Interrogation (QCC) option = freeze, freeze with reset, reset (1,2,3)   | False   |
| Controls_Disabled                   | Output BOOL | Indicates controls are disabled  | False   |
| ENO                                 | Output BOOL | Indicates this instance of IEC 60870-5-101/104 is running  | False   |

| Pin Name                    | Pin Type     | Description   | Default |
|-----------------------------|--------------|---|---------|
| Error_Detected              | Output BOOL  | Pulsed for one processing cycle to indicate an error, indicated in Last_Error_Code, has been detected   | False   |
| Event_Buffer_Overflow       | Output BOOL  | BOOL  | False   |
| Event_Buffer_Overflow_Count | Output UDINT | UDINT   | 0       |
| Last_Error_Code             | Output DINT  | An enumerated value of the last error detected, where COT is one of the following:<br>Unknown Type ID (44) Unknown COT (45)<br>Unknown Common Address (46) Unknown IOA (47) | 44      |
| Message_Failure             | Output BOOL  | Asserts for a single-processing interval following a message failure  | False   |
| Message_Failure_Count       | Output UDINT | Increments value by one each time Message_Failure is asserted   | 0       |
| Message_Received_Count      | Output UDINT | A counter of the number of messages received  | 0       |
| Message_Sent_Count          | Output UDINT | A counter of the number of messages sent  | 0       |
| Message_Success_Count       | Output UDINT | A running sum of the messages successfully sent or received   | 0       |
| Offline                     | Output BOOL  | Set to True if data link activity timeout expires or a frame has not been received for a period of time, defined by Communications_Offline_Timer.                           | True    |

## Tags

See *Tags (Overview) on page 142* for a description of the Tags tab.

## Controller

See *Controller (Advanced Usage) on page 141* for a description of the Controller tab.

## IEC 60870-5-101/104 Compatibility

The applications of IEC 60870-5-101 and 60870-5-104 Client and Server in the RTAC supports the following function codes:

### Basic Application Functions Supported

- ▶ Remote initialization
- ▶ Cyclic data transmission
- ▶ Read procedure
- ▶ Spontaneous transmission

### Command Transmission Supported

- ▶ Direct command transmission
- ▶ Direct set point command transmission
- ▶ Select and execute command
- ▶ Select and execute set point command
- ▶ C\_SE ACCTTERM used

- ▶ No additional definition
- ▶ Short-pulse duration
- ▶ Long-pulse duration
- ▶ Persistent output

#### Transmission of Integrated Totals Supported

- ▶ Mode A: local freeze with spontaneous transmission
- ▶ Mode B: local freeze with counter interrogation
- ▶ Mode C: freeze and transmit by counter-interrogation commands
- ▶ Mode D: freeze by counter-interrogation command, frozen values reported spontaneously
- ▶ Counter read
- ▶ Counter freeze without reset
- ▶ Counter freeze with reset
- ▶ Counter reset
- ▶ General request counter
- ▶ Request counter Group 1
- ▶ Request counter Group 2
- ▶ Request counter Group 3
- ▶ Request counter Group 4

#### Clock Synchronization Details

- ▶ Clock synchronization supported
- ▶ Day of week used
- ▶ RES1, GEN (time tag substituted/not substituted) used
- ▶ SU-bit (summertime) used

## Interoperability Statement for IEC 60870-5-101 Controlling Station for the SEL RTAC (Firmware Version R153-V2)

### Introduction

This document specifies the capabilities and features of the SEL-implemented IEC 60870-5-101 Controlling Station (Client).

This document applies specifically to the following RTAC models and firmware versions.

| Model           | Firmware Version                     |
|-----------------|--------------------------------------|
| SEL-3505 RTAC   | SEL-3505-R153-V2-Z000125-D20250324   |
| SEL-3505-3 RTAC | SEL-3505-3-R153-V2-Z000125-D20250324 |
| SEL-3530 RTAC   | SEL-3530-R153-V2-Z000125-D20250324   |
| SEL-3530-4 RTAC | SEL-3530-4-R153-V2-Z000125-D20250324 |
| SEL-2241 RTAC   | SEL-2241-R153-V2-Z000125-D20250324   |

| <b>Model</b>  | <b>Firmware Version</b>            |
|---------------|------------------------------------|
| SEL-3555 RTAC | SEL-3555-R153-V2-Z000125-D20250324 |
| SEL-3350 RTAC | SEL-3350-R153-V2-Z000125-D20250324 |

## Interoperability

### System or Device

|   |   |
|---|---|
| X | System definition                       |
| X | Controlling station definition (master) |
|   | Controlled station definition (slave)   |

## Network Configuration

|   |                         |   |                      |
|---|-------------------------|---|----------------------|
| X | Point-to-point          | X | Multipoint-partyline |
| X | Multiple point-to-point |   | Multipoint-star      |

## Physical Layer

### Transmission Speed (Control Direction)

|                        |                             |                      |
|------------------------|-----------------------------|----------------------|
| Unbalanced Interchange | Unbalanced Interchange      | Balanced Interchange |
| Circuit V.24/V.28      | Circuit V.24/V.28           | Circuit X.24/X.27    |
| Standard               | Recommended if > 1200 bit/s |                      |
| 100 bit/s              | X 2400 bit/s                | X 2400 bit/s         |
| X 200 bit/s            | X 4800 bit/s                | X 4800 bit/s         |
| X 300 bit/s            | X 9600 bit/s                | X 9600 bit/s         |
| X 600 bit/s            | X 19200 bit/s               | X 19200 bit/s        |
| X 1200 bit/s           | X 38400 bit/s               | X 38400 bit/s        |
|                        | X 57600 bit/s               |                      |
|                        | X 115200 bit/s              |                      |

### Transmission Speed

|                        |                             |                      |
|------------------------|-----------------------------|----------------------|
| Unbalanced Interchange | Unbalanced Interchange      | Balanced Interchange |
| Circuit V.24/V.28      | Circuit V.24/V.28           | Circuit X.24/X.27    |
| Standard               | Recommended if > 1200 bit/s |                      |
| 100 bit/s              | X 2400 bit/s                | X 2400 bit/s         |
| X 200 bit/s            | X 4800 bit/s                | X 4800 bit/s         |
| X 300 bit/s            | X 9600 bit/s                | X 9600 bit/s         |
| X 600 bit/s            | X 19200 bit/s               | X 19200 bit/s        |
| X 1200 bit/s           | X 38400 bit/s               | X 38400 bit/s        |
|                        | X 57600 bit/s               |                      |
|                        | X 115200 bit/s              |                      |

## Link Layer

Frame format FT 1.2, single character 1, and the fixed time-out interval are used exclusively in this companion standard.

| Link Transmission |   | Address Field of the Link |  |
|-------------------|---|---------------------------|--|
| X                 | Balanced transmission   | X                         | Not present (balanced transmission only) |
| X                 | Unbalanced transmission   | X                         | One octet                                |
| Frame Length      |   | X                         |  |
| 255               | Maximum length L (control direction)  | X                         | Two octets                               |
| 255               | Maximum length L (monitor direction)  | X                         | Structured                               |
| 0–2250 s          | Time during which repetitions are permitted (Trp) or number of repetitions. | X                         | Unstructured                             |

For an unbalanced link layer, the controlled station returns the following ASDU types in Class 2 messages (low priority) with the indicated causes of transmission:

| The standard assignment of ASDUs to Class 2 messages is used as follows:  |                       |                       |               |     |
|---|-----------------------|-----------------------|---------------|-----|
| <table border="1"> <thead> <tr> <th>Type Identification</th> <th>Cause of Transmission</th> </tr> </thead> <tbody> <tr> <td>9, 11, 13, 21</td> <td>&lt;1&gt;</td> </tr> </tbody> </table> | Type Identification   | Cause of Transmission | 9, 11, 13, 21 | <1> |
| Type Identification   | Cause of Transmission |                       |               |     |
| 9, 11, 13, 21   | <1>                   |                       |               |     |
| A special assignment of ASDUs to Class 2 messages is as follows:  |                       |                       |               |     |

### NOTE

In response to a Class 2 poll, a controlled station can respond with Class 1 data when there are no Class 2 data available.

| Type Identification | Cause of Transmission |
|---------------------|-----------------------|
|                     |                       |

## Application Layer

### Transmission Mode for Application Data

Mode 1 (least significant octet first), according to Section 4.10 of IEC 60870-5-4, is used exclusively in this companion standard.

### Common Address of ASDU

|   |           |   |            |
|---|-----------|---|------------|
| X | One octet | X | Two octets |
|---|-----------|---|------------|

### Information Object Addresses

|   |              |   |              |
|---|--------------|---|--------------|
| X | One octet    | X | Structured   |
| X | Two octets   | X | Unstructured |
| X | Three octets |   |              |

### Cause of Transmission

|   |           |   |   |
|---|-----------|---|---|
| X | One octet | X | Two octets (with originator address). Set the originator address to zero if it is not used. |
|---|-----------|---|---|

| Length of APDU |  |
|----------------|--|
| 253            | Maximum length of APDU per system in control direction |
| 253            | Maximum length of APDU per system in monitor direction |

### Selection of Standard ASDUs

#### Process Information in Monitor Direction

|  |           |
|--|-----------|
| X <1> := Single-point information  | M_SP_NA_1 |
| X <2> := Single-point information with time tag  | M_SP_TA_1 |
| X <3> := Double-point information  | M_DP_NA_1 |
| X <4> := Double-point information with time tag  | M_DP_TA_1 |
| X <5> := Step position information   | M_ST_NA_1 |
| X <6> := Step position information with time tag   | M_ST_TA_1 |
| X <7> := Bitstring of 32 bits  | M_BO_NA_1 |
| X <8> := Bitstring of 32 bits with time tag  | M_BO_TA_1 |
| X <9> := Measured value, normalized value  | M_ME_NA_1 |
| X <10> := Measured value, normalized value with time tag                                   | M_ME_TA_1 |
| X <11> := Measured value, scaled value   | M_ME_NB_1 |
| X <12> := Measured value, scaled value with time tag                                       | M_ME_TB_1 |
| X <13> := Measured value, short floating point value                                       | M_ME_NC_1 |
| X <14> := Measured value, short floating point value with time tag                         | M_ME_TC_1 |
| X <15> := Integrated totals  | M_IT_NA_1 |
| X <16> := Integrated totals with time tag  | M_IT_TA_1 |
| <17> := Event of protection equipment with time tag  | M_EP_TA_1 |
| <18> := Packed start events of protection equipment with time tag                          | M_EP_TB_1 |
| <19> := Packed output circuit information of protection equipment with time tag            | M_EP_TC_1 |
| X <20> := Packed single-point information with status change detection                     | M_PS_NA_1 |
| X <21> := Measured value, normalized value without quality descriptor                      | M_ME_ND_1 |
| X <30> := Single-point information with time tag CP56Time2a                                | M_SP_TB_1 |
| X <31> := Double-point information with time tag CP56Time2a                                | M_DP_TB_1 |
| X <32> := Step position information with time tag CP56Time2a                               | M_ST_TB_1 |
| X <33> := Bitstring of 32 bits with time tag CP56Time2a                                    | M_BO_TB_1 |
| X <34> := Measured value, normalized value with time tag CP56Time2a                        | M_ME_TD_1 |
| X <35> := Measured value, scaled value with time tag CP56Time2a                            | M_ME_TE_1 |
| X <36> := Measured value, short floating point value with time tag CP56Time2a              | M_ME_TF_1 |
| X <37> := Integrated totals with time tag CP56Time2a                                       | M_IT_TB_1 |
| <38> := Event of protection equipment with time tag CP56Time2a                             | M_EP_TD_1 |
| <39> := Packed start events of protection equipment with time tag CP56Time2a               | M_EP_TE_1 |
| <40> := Packed output circuit information of protection equipment with time tag CP56Time2a | M_EP_TF_1 |

#### Process Information in Control Direction

|  |           |
|--|-----------|
| X <45> := Single command   | C_SC_NA_1 |
| X <46> := Double command   | C_DC_NA_1 |
| X <47> := Regulating step command  | C_RC_NA_1 |
| X <48> := Set point command, normalized value                                  | C_SE_NA_1 |
| X <49> := Set point command, scaled value                                      | C_SE_NB_1 |
| X <50> := Set point command, short floating point value                        | C_SE_NC_1 |
| X <51> := Bitstring of 32 bits   | C_BO_NA_1 |
| <58> := Single command with time tag CP56Time2a                                | C_SC_TA_1 |
| <59> := Double command with time tag CP56Time2a                                | C_DC_TA_1 |
| <60> := Regulating step command with time tag CP56Time2a                       | C_RC_TA_1 |
| <61> := Set point command, normalized value with time tag CP56Time2a           | C_SE_TA_1 |
| <62> := Set point command, scaled value with time tag CP56Time2a               | C_SE_TB_1 |
| <63> := Set point command, short floating point value with time tag CP56Time2a | C_SE_TC_1 |
| <64> := Bitstring of 32 bits with time tag CP56Time2a                          | C_BO_TA_1 |

#### System Information in Monitor Direction

|                                 |           |
|---------------------------------|-----------|
| X <70> := End of initialization | M_EI_NA_1 |
|---------------------------------|-----------|

#### System Information in Control Direction

|  |           |
|--|-----------|
| X <100> := Interrogation command               | C_IC_NA_1 |
| X <101> := Counter-interrogation command       | C_CI_NA_1 |
| X <102> := Read command                        | C_RD_NA_1 |
| X <103> := Clock synchronization command       | C_CS_NA_1 |
| X <104> := Test command                        | C_TS_NA_1 |
| X <105> := Reset process command               | C_RP_NA_1 |
| X <106> := Delay acquisition command           | C_CD_NA_1 |
| <107> := Test command with time tag CP56Time2a | C_TS_TA_1 |

#### Parameter in Control Direction

|  |           |
|--|-----------|
| <110> := Parameter of measured value, normalized value           | P_ME_NA_1 |
| <111> := Parameter of measured value, scaled value               | P_ME_NB_1 |
| <112> := Parameter of measured value, short floating point value | P_ME_NC_1 |
| <113> := Parameter activation                                    | P_AC_NA_1 |

#### File Transfer

|   |           |
|---|-----------|
| <120> := File ready   | F_FR_NA_1 |
| <121> := Section ready  | F_SR_NA_1 |
| <122> := Call directory, select file, call file, call section | F_SC_NA_1 |
| <123> := Last section, last segment                           | F_LS_NA_1 |
| <124> := Ack file, ack section                                | F_AF_NA_1 |
| <125> := Segment  | F_SG_NA_1 |

|   |           |
|---|-----------|
| <126> := Directory {blank or X, only available in monitor (standard) direction} | F_DR_TA_1 |
| <127> := Query Log – Request archive file                                       | F_SC_NB_1 |

### Type Identification and Cause of Transmission Assignments

| Type Identification | Cause of Transmission |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
|---------------------|-----------------------|---|---|---|---|---|---|---|---|----|----|----|----|----------|----------|----|----|----|----|
|                     | 1                     | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 20 to 36 | 37 to 41 | 44 | 45 | 46 | 47 |
| <1>                 | M_SP_NA_1             |   | X | X |   | X |   |   |   |    | X  | X  |    | X        |          |    |    |    |    |
| <2>                 | M_SP_TA_1             |   |   | X |   | X |   |   |   |    | X  | X  |    |          |          |    |    |    |    |
| <3>                 | M_DP_NA_1             |   | X | X |   | X |   |   |   |    | X  | X  |    | X        |          |    |    |    |    |
| <4>                 | M_DP_TA_1             |   |   | X |   | X |   |   |   |    | X  | X  |    |          |          |    |    |    |    |
| <5>                 | M_ST_NA_1             |   | X | X |   | X |   |   |   |    | X  | X  |    | X        |          |    |    |    |    |
| <6>                 | M_ST_TA_1             |   |   | X |   | X |   |   |   |    | X  | X  |    |          |          |    |    |    |    |
| <7>                 | M_BO_NA_1             |   | X | X |   | X |   |   |   |    |    |    |    | X        |          |    |    |    |    |
| <8>                 | M_BO_TA_1             |   |   | X |   | X |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <9>                 | M_ME_NA_1             | X | X | X |   | X |   |   |   |    |    |    |    | X        |          |    |    |    |    |
| <10>                | M_ME_TA_1             |   |   | X |   | X |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <11>                | M_ME_NB_1             | X | X | X |   | X |   |   |   |    |    |    |    | X        |          |    |    |    |    |
| <12>                | M_ME_TB_1             |   |   | X |   | X |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <13>                | M_ME_NC_1             | X | X | X |   | X |   |   |   |    |    |    |    | X        |          |    |    |    |    |
| <14>                | M_ME_TC_1             |   |   | X |   | X |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <15>                | M_IT_NA_1             |   |   | X |   |   |   |   |   |    |    |    |    |          | X        |    |    |    |    |
| <16>                | M_IT_TA_1             |   |   | X |   |   |   |   |   |    |    |    |    |          | X        |    |    |    |    |
| <17>                | M_EP_TA_1             |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <18>                | M_EP_TB_1             |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <19>                | M_EP_TC_1             |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <20>                | M_PS_NA_1             |   | X | X |   | X |   |   |   |    | X  | X  |    | X        |          |    |    |    |    |
| <21>                | M_ME_ND_1             | X | X | X |   | X |   |   |   |    |    |    |    | X        |          |    |    |    |    |
| <30>                | M_SP_TB_1             |   |   | X |   | X |   |   |   |    | X  | X  |    |          |          |    |    |    |    |
| <31>                | M_DP_TB_1             |   |   | X |   | X |   |   |   |    | X  | X  |    |          |          |    |    |    |    |
| <32>                | M_ST_TB_1             |   |   | X |   | X |   |   |   |    | X  | X  |    |          |          |    |    |    |    |
| <33>                | M_BO_TB_1             |   |   | X |   | X |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <34>                | M_ME_TD_1             |   |   | X |   | X |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <35>                | M_ME_TE_1             |   |   | X |   | X |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <36>                | M_ME_TF_1             |   |   | X |   | X |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <37>                | M_IT_TB_1             |   |   | X |   |   |   |   |   |    |    |    |    |          | X        |    |    |    |    |
| <38>                | M_EP_TD_1             |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |

| Type Identification |           | Cause of Transmission |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
|---------------------|-----------|-----------------------|---|---|---|---|---|---|---|---|----|----|----|----|----------|----------|----|----|----|----|
|                     |           | 1                     | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 20 to 36 | 37 to 41 | 44 | 45 | 46 | 47 |
| <39>                | M_EP_TE_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <40>                | M_EP_TF_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <45>                | C_SC_NA_1 |                       |   |   |   | X | X |   | X | X |    |    |    |    |          |          | X  | X  | X  | X  |
| <46>                | C_DC_NA_1 |                       |   |   |   | X | X |   | X | X |    |    |    |    |          |          | X  | X  | X  | X  |
| <47>                | C_RC_NA_1 |                       |   |   |   | X | X |   | X | X |    |    |    |    |          |          | X  | X  | X  | X  |
| <48>                | C_SE_NA_1 |                       |   |   |   | X | X |   | X | X |    |    |    |    |          |          | X  | X  | X  | X  |
| <49>                | C_SE_NB_1 |                       |   |   |   | X | X |   | X | X |    |    |    |    |          |          | X  | X  | X  | X  |
| <50>                | C_SE_NC_1 |                       |   |   |   | X | X |   | X | X |    |    |    |    |          |          | X  | X  | X  | X  |
| <51>                | C_BO_NA_1 |                       |   |   |   | X | X |   | X | X |    |    |    |    |          |          | X  | X  | X  | X  |
| <58>                | C_SC_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <59>                | C_DC_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <60>                | C_RC_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <61>                | C_SE_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <62>                | C_SE_TB_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <63>                | C_SE_TC_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <64>                | C_BO_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <70>                | M_EI_NA_1 |                       |   | X |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <100>               | C_IC_NA_1 |                       |   |   |   |   | X | X |   | X | X  |    |    |    |          |          | X  | X  | X  | X  |
| <101>               | C_CI_NA_1 |                       |   |   |   |   | X | X |   | X | X  |    |    |    |          |          | X  | X  | X  | X  |
| <102>               | C_RD_NA_1 |                       |   |   |   | X |   |   |   |   |    |    |    |    |          |          | X  | X  | X  | X  |
| <103>               | C_CS_NA_1 |                       | X |   |   |   | X | X |   |   |    |    |    |    |          |          | X  | X  | X  | X  |
| <104>               | C_TS_NA_1 |                       |   |   |   |   | X | X |   |   |    |    |    |    |          |          | X  | X  | X  | X  |
| <105>               | C_RP_NA_1 |                       |   |   |   |   | X | X |   |   |    |    |    |    |          |          | X  | X  | X  | X  |
| <106>               | C_CD_NA_1 |                       | X |   |   |   | X | X |   |   |    |    |    |    |          |          | X  | X  | X  | X  |
| <107>               | C_TS_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <110>               | P_ME_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <111>               | P_ME_NB_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <112>               | P_ME_NC_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <113>               | P_AC_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <120>               | F_FR_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <121>               | F_SR_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <122>               | F_SC_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <123>               | F_LS_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <124>               | F_AF_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |

| Type Identification |           | Cause of Transmission |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
|---------------------|-----------|-----------------------|---|---|---|---|---|---|---|---|----|----|----|----|----------|----------|----|----|----|----|
|                     |           | 1                     | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 20 to 36 | 37 to 41 | 44 | 45 | 46 | 47 |
| <125>               | F_SG_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <126>               | F_DR_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <127>               | F_SC_NB_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |

## Basic Application Functions

### Station Initialization

X Remote initialization

### Cyclic Data Transmission

X Cyclic data transmission

### Read Procedure

X Read procedure

### Spontaneous Transmission

X Spontaneous transmission

### Double Transmission of Information Objects (Cause of Transmission Equals Spontaneous)

The following type identifications can be transmitted in succession as the result of a single status change for an information object. A project-specific list defines the particular information object addresses for which double transmission is enabled.

Single-point information M\_SP\_NA\_1, M\_SP\_TA\_1, M\_SP\_TB\_1, and M\_PS\_NA\_1

Double-point information M\_DP\_NA\_1, M\_DP\_TA\_1, and M\_DP\_TB\_1

Step position information M\_ST\_NA\_1, M\_ST\_TA\_1, and M\_ST\_TB\_1

Bitstring of 32 bit M\_BO\_NA\_1, M\_BO\_TA\_1, and M\_BO\_TB\_1

Measured value, normalized value M\_ME\_NA\_1, M\_ME\_TA\_1, M\_ME\_ND\_1, and M\_ME\_TD\_1

Measured value, scaled value M\_ME\_NB\_1, M\_ME\_TB\_1, and M\_ME\_TE\_1

Measured value, short floating point number M\_ME\_NC\_1, M\_ME\_TC\_1, and M\_ME\_TF\_1

### Station Interrogation

X Global

X Group 1

X Group 7

X Group 13

|   |         |   |          |   |          |
|---|---------|---|----------|---|----------|
| X | Group 2 | X | Group 8  | X | Group 14 |
| X | Group 3 | X | Group 9  | X | Group 15 |
| X | Group 4 | X | Group 10 | X | Group 16 |
| X | Group 5 | X | Group 11 |   |          |
| X | Group 6 | X | Group 12 |   |          |

### Clock Synchronization

- 
- X Clock synchronization
  - X Day of week used
  - X RES1, GEN (time tag substituted/not substituted) used
  - X SU-bit (summertime) used
- 

### Command Transmission

- 
- X Direct command transmission
  - X Direct set point command transmission
  - X Select and execute command
  - X Select and execute set point command
  - X C\_SE ACTTERM used
  - X No additional definition
  - X Short-pulse duration (duration determined by a system parameter in the outstation)
  - X Long-pulse duration (duration determined by a system parameter in the outstation)
  - X Persistent output
  - Supervision of maximum delay in command direction of commands and set point commands
  - Maximum allowable delay of commands and set point commands
- 

### Transmission of Integrated Totals

- 
- X Mode A: Local freeze with spontaneous transmission
  - X Mode B: Local freeze with counter interrogation
  - X Mode C: Freeze and transmit by counter-interrogation commands
  - X Mode D: Freeze by counter-interrogation command, frozen values reported spontaneously
  - X Counter read
  - X Counter freeze without reset
  - X Counter freeze with reset
  - X Counter reset
  - X General request
  - X Request Counter Group 1
  - X Request Counter Group 2

|   |                         |
|---|-------------------------|
| X | Request Counter Group 3 |
| X | Request Counter Group 4 |

---

## Parameter Loading

|  |  |
|--|--|
|  | Threshold value                                |
|  | Smoothing factor                               |
|  | Low limit for transmission of measured values  |
|  | High limit for transmission of measured values |

---

## Parameter Activation

|  |   |
|--|---|
|  | Act/deact of persistent cyclic or periodic transmission of the addressed object |
|--|---|

---

## Test Procedure

|   |                |
|---|----------------|
| X | Test procedure |
|---|----------------|

---

## File Transfer

File transfer in monitor direction

|  |  |
|--|--|
|  | Transparent file   |
|  | Transmission of disturbance data of protection equipment |
|  | Transmission of sequences of events                      |
|  | Transmission of sequences of recorded analog values      |

---

File transfer in control direction

|  |                  |
|--|------------------|
|  | Transparent file |
|--|------------------|

---

## Background Scan

|   |                 |
|---|-----------------|
| X | Background scan |
|---|-----------------|

---

## Acquisition of Transmission Delay

|   |                                   |
|---|-----------------------------------|
| X | Acquisition of transmission delay |
|---|-----------------------------------|

---

## Protocol Implementation eXtra Information for Testing (PIXIT)

Documents additional behaviors of the IEC 60870-5-101 Controlling Station.

- 
1. The IEC 60870-5 Controlling Station only supports creating C\_GI() command requests with any Common Address (CA) except Broadcast (CA=255 or 65535, dependent on the size of CA).
  2. The IEC 60870-5 Controlling Station only supports creating C\_CI() command requests with any CA except Broadcast.
  3. The IEC 60870-5 Controlling Station supports creating C\_CS() command requests with any CA or Broadcast.

4. The IEC 60870-5 Controlling Station supports creating C\_TS\_NA() or C\_TS\_TA() command requests with any CA except Broadcast.
  5. The IEC 60870-5 Controlling Station only supports requesting the C\_RP(QRP = Reset of Process(1)) command request with any CA or Broadcast. The C\_RP(QRP = Reset of Event Buffer(2)) command request is not supported.
  6. The IEC 60870-5 Controlling Station only supports issuing command requests with COT=Active (De-active is not supported).
  7. IEC 60870-5 Controlling Station does not support the Test bit (other than COT) in all ASDUs.
  8. IEC 60870-5 Controlling Station signals that an error was detected by the C\_TS\_NA() or C\_TS\_TA() command response by pulsing the Test\_Command\_Failure POU output pin.
  9. IEC 60870-5 Controlling Station does not automatically issue a Clock Synchronization command request when a time stamp is received with an invalid quality (i.e., IV bit asserted). Triggering a Clock Synchronization command request after detecting an invalid time stamp is supported via logic.
  10. IEC 60870-5 Controlling Station's Redundancy implementation manages the connections used for redundancy and will perform a failover to an available redundant connection when an error (e.g., cannot read APCI header, message time-out, etc.) is detected with the active connection. The IEC 60870-5 Controlling Station supports a user-commanded failover to an available redundant connection. No commands will be automatically initiated/triggered (except STARTDT) upon failing-over to a new connection. Triggering commands (e.g., C\_GI(), C\_CI(), C\_CS(), etc.) following the failing-over to a new connection is supported via logic.
  11. The user can use logic to monitor and log the state of the IEC 60870-5 Controlling Station's Error\_Detected and Last\_Error\_Code POU output pins.
- 

## Interoperability Statement for IEC 60870-5-104 Controlling Station for the SEL RTAC (Firmware Version R153-V2)

### Introduction

This document specifies the capabilities and features of the SEL-implemented IEC 60870-5-104 Controlling Station (Client).

This document applies specifically to the following RTAC models and firmware versions.

| Model           | Firmware Version                     |
|-----------------|--------------------------------------|
| SEL-3505 RTAC   | SEL-3505-R153-V2-Z000125-D20250324   |
| SEL-3505-3 RTAC | SEL-3505-3-R153-V2-Z000125-D20250324 |
| SEL-3530 RTAC   | SEL-3530-R153-V2-Z000125-D20250324   |
| SEL-3530-4 RTAC | SEL-3530-4-R153-V2-Z000125-D20250324 |
| SEL-2241 RTAC   | SEL-2241-R153-V2-Z000125-D20250324   |
| SEL-3555 RTAC   | SEL-3555-R153-V2-Z000125-D20250324   |
| SEL-3350 RTAC   | SEL-3350-R153-V2-Z000125-D20250324   |

---

### Interoperability System or Device

|   |   |
|---|---|
|   | System definition                       |
| X | Controlling station definition (master) |
|   | Controlled station definition (slave)   |

---

## Network Configuration (Not Applicable)

|                         |                      |
|-------------------------|----------------------|
| Point-to-point          | Multipoint-partyline |
| Multiple point-to-point | Multipoint-star      |

## Physical Layer (Not Applicable)

### Transmission Speed (Control Direction)

|                        |                             |                      |              |
|------------------------|-----------------------------|----------------------|--------------|
| Unbalanced Interchange | Unbalanced Interchange      | Balanced Interchange |              |
| Circuit V.24/V.28      | Circuit V.24/V.28           | Circuit X.24/X.27    |              |
| Standard               | Recommended if > 1200 bit/s |                      |              |
| 100 bit/s              | 2400 bit/s                  | 2400 bit/s           | 57600 bit/s  |
| 200 bit/s              | 4800 bit/s                  | 4800 bit/s           | 64000 bit/s  |
| 300 bit/s              | 9600 bit/s                  | 9600 bit/s           |              |
| 600 bit/s              | 19200 bit/s                 | 19200 bit/s          | 115200 bit/s |
| 1200 bit/s             | 38400 bit/s                 | 38400 bit/s          |              |
|                        | 57600 bit/s                 |                      |              |
|                        | 115200 bit/s                |                      |              |

### Transmission Speed (Monitor Direction)

|                        |                             |                      |              |
|------------------------|-----------------------------|----------------------|--------------|
| Unbalanced Interchange | Unbalanced Interchange      | Balanced Interchange |              |
| Circuit V.24/V.28      | Circuit V.24/V.28           | Circuit X.24/X.27    |              |
| Standard               | Recommended if > 1200 bit/s |                      |              |
| 100 bit/s              | 2400 bit/s                  | 2400 bit/s           | 57600 bit/s  |
| 200 bit/s              | 4800 bit/s                  | 4800 bit/s           | 64000 bit/s  |
| 300 bit/s              | 9600 bit/s                  | 9600 bit/s           |              |
| 600 bit/s              | 19200 bit/s                 | 19200 bit/s          | 115200 bit/s |
| 1200 bit/s             | 38400 bit/s                 | 38400 bit/s          |              |
|                        | 57600 bit/s                 |                      |              |
|                        | 115200 bit/s                |                      |              |

## Link Layer (Not Applicable)

Frame format FT 1.2, single character 1, and the fixed time-out interval are used exclusively in this companion standard.

| Link Transmission                    | Address Field of the Link                |
|--------------------------------------|--|
| Balanced transmission                | Not present (balanced transmission only) |
| Unbalanced transmission              | One octet                                |
| Frame Length                         | Two octets                               |
| Maximum length L (control direction) | Structured                               |

|   |              |
|---|--------------|
| Maximum length L (monitor direction)  | Unstructured |
| Time during which repetitions are permitted (Trp) or number of repetitions. |              |

For an unbalanced link layer, the controlled station returns the following ASDU types in Class 2 messages (low priority) with the indicated causes of transmission:

|  |
|--|
| The standard assignment of ASDUs to Class 2 messages is used as follows: |
|--|

| Type Identification | Cause of Transmission |
|---------------------|-----------------------|
|                     |                       |

|  |
|--|
| A special assignment of ASDUs to Class 2 messages is as follows: |
|--|

### NOTE

In response to a Class 2 poll, a controlled station can respond with Class 1 data when there are no Class 2 data available.

| Type Identification | Cause of Transmission |
|---------------------|-----------------------|
|                     |                       |

## Application Layer

### Transmission Mode for Application Data

Mode 1 (least significant octet first), according to Section 4.10 of IEC 60870-5-4, is used exclusively in this companion standard.

### Common Address of ASDU

|           |   |            |
|-----------|---|------------|
| One octet | X | Two octets |
|-----------|---|------------|

### Information Object Addresses

|              |   |              |
|--------------|---|--------------|
| One octet    | X | Structured   |
| Two octets   | X | Unstructured |
| Three octets |   |              |

### Cause of Transmission

|           |   |   |
|-----------|---|---|
| One octet | X | Two octets (with originator address). Set the originator address to zero if it is not used. |
|-----------|---|---|

### Length of APDU

|     |  |
|-----|--|
| 253 | Maximum length of APDU per system in control direction |
| 253 | Maximum length of APDU per system in monitor direction |

### Selection of Standard ASDUs

#### Process Information in Monitor Direction

|   |  |           |
|---|--|-----------|
| X | <1> := Single-point information  | M_SP_NA_1 |
|   | <2> := Single-point information with time tag  | M_SP_TA_1 |
| X | <3> := Double-point information  | M_DP_NA_1 |
|   | <4> := Double-point information with time tag  | M_DP_TA_1 |
| X | <5> := Step position information   | M_ST_NA_1 |
|   | <6> := Step position information with time tag   | M_ST_TA_1 |
| X | <7> := Bitstring of 32 bits  | M_BO_NA_1 |
|   | <8> := Bitstring of 32 bits with time tag  | M_BO_TA_1 |
| X | <9> := Measured value, normalized value  | M_ME_NA_1 |
|   | <10> := Measured value, normalized value with time tag                                     | M_ME_TA_1 |
| X | <11> := Measured value, scaled value   | M_ME_NB_1 |
|   | <12> := Measured value, scaled value with time tag   | M_ME_TB_1 |
| X | <13> := Measured value, short floating point value   | M_ME_NC_1 |
|   | <14> := Measured value, short floating point value with time tag                           | M_ME_TC_1 |
| X | <15> := Integrated totals  | M_IT_NA_1 |
|   | <16> := Integrated totals with time tag  | M_IT_TA_1 |
|   | <17> := Event of protection equipment with time tag  | M_EP_TA_1 |
|   | <18> := Packed start events of protection equipment with time tag                          | M_EP_TB_1 |
|   | <19> := Packed output circuit information of protection equipment with time tag            | M_EP_TC_1 |
| X | <20> := Packed single-point information with status change detection                       | M_PS_NA_1 |
| X | <21> := Measured value, normalized value without quality descriptor                        | M_ME_ND_1 |
| X | <30> := Single-point information with time tag CP56Time2a                                  | M_SP_TB_1 |
| X | <31> := Double-point information with time tag CP56Time2a                                  | M_DP_TB_1 |
| X | <32> := Step position information with time tag CP56Time2a                                 | M_ST_TB_1 |
| X | <33> := Bitstring of 32 bits with time tag CP56Time2a                                      | M_BO_TB_1 |
| X | <34> := Measured value, normalized value with time tag CP56Time2a                          | M_ME_TD_1 |
| X | <35> := Measured value, scaled value with time tag CP56Time2a                              | M_ME_TE_1 |
| X | <36> := Measured value, short floating point value with time tag CP56Time2a                | M_ME_TF_1 |
| X | <37> := Integrated totals with time tag CP56Time2a   | M_IT_TB_1 |
|   | <38> := Event of protection equipment with time tag CP56Time2a                             | M_EP_TD_1 |
|   | <39> := Packed start events of protection equipment with time tag CP56Time2a               | M_EP_TE_1 |
|   | <40> := Packed output circuit information of protection equipment with time tag CP56Time2a | M_EP_TF_1 |

#### Process Information in Control Direction

|   |                                 |           |
|---|---------------------------------|-----------|
| X | <45> := Single command          | C_SC_NA_1 |
| X | <46> := Double command          | C_DC_NA_1 |
| X | <47> := Regulating step command | C_RC_NA_1 |

|  |           |
|--|-----------|
| X <48> := Set point command, normalized value                                    | C_SE_NA_1 |
| X <49> := Set point command, scaled value  | C_SE_NB_1 |
| X <50> := Set point command, short floating point value                          | C_SE_NC_1 |
| X <51> := Bitstring of 32 bits   | C_BO_NA_1 |
| X <58> := Single command with time tag CP56Time2a                                | C_SC_TA_1 |
| X <59> := Double command with time tag CP56Time2a                                | C_DC_TA_1 |
| X <60> := Regulating step command with time tag CP56Time2a                       | C_RC_TA_1 |
| X <61> := Set point command, normalized value with time tag CP56Time2a           | C_SE_TA_1 |
| X <62> := Set point command, scaled value with time tag CP56Time2a               | C_SE_TB_1 |
| X <63> := Set point command, short floating point value with time tag CP56Time2a | C_SE_TC_1 |
| X <64> := Bitstring of 32 bits with time tag CP56Time2a                          | C_BO_TA_1 |

#### System Information in Monitor Direction

|                                 |           |
|---------------------------------|-----------|
| X <70> := End of initialization | M_EI_NA_1 |
|---------------------------------|-----------|

#### System Information in Control Direction

|  |           |
|--|-----------|
| X <100> := Interrogation command                 | C_IC_NA_1 |
| X <101> := Counter-interrogation command         | C_CI_NA_1 |
| X <102> := Read command                          | C_RD_NA_1 |
| X <103> := Clock synchronization command         | C_CS_NA_1 |
| <104> := Test command                            | C_TS_NA_1 |
| X <105> := Reset process command                 | C_RP_NA_1 |
| <106> := Delay acquisition command               | C_CD_NA_1 |
| X <107> := Test command with time tag CP56Time2a | C_TS_TA_1 |

#### Parameter in Control Direction

|  |           |
|--|-----------|
| <110> := Parameter of measured value, normalized value           | P_ME_NA_1 |
| <111> := Parameter of measured value, scaled value               | P_ME_NB_1 |
| <112> := Parameter of measured value, short floating point value | P_ME_NC_1 |
| <113> := Parameter activation                                    | P_AC_NA_1 |

#### File Transfer

|   |           |
|---|-----------|
| <120> := File ready   | F_FR_NA_1 |
| <121> := Section ready  | F_SR_NA_1 |
| <122> := Call directory, select file, call file, call section                   | F_SC_NA_1 |
| <123> := Last section, last segment   | F_LS_NA_1 |
| <124> := Ack file, ack section  | F_AF_NA_1 |
| <125> := Segment  | F_SG_NA_1 |
| <126> := Directory {blank or X, only available in monitor (standard) direction} | F_DR_TA_1 |
| <127> := Query Log – Request archive file                                       | F_SC_NB_1 |

### Type Identification and Cause of Transmission Assignments

| Type Identification |           | Cause of Transmission |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
|---------------------|-----------|-----------------------|---|---|---|---|---|---|---|---|----|----|----|----|----------|----------|----|----|----|----|
|                     |           | 1                     | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 20 to 36 | 37 to 41 | 44 | 45 | 46 | 47 |
| <1>                 | M_SP_NA_1 |                       | X | X |   | X |   |   |   |   | X  | X  |    | X  |          |          |    |    |    |    |
| <2>                 | M_SP_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <3>                 | M_DP_NA_1 |                       | X | X |   | X |   |   |   |   | X  | X  |    | X  |          |          |    |    |    |    |
| <4>                 | M_DP_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <5>                 | M_ST_NA_1 |                       | X | X |   | X |   |   |   |   | X  | X  |    | X  |          |          |    |    |    |    |
| <6>                 | M_ST_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <7>                 | M_BO_NA_1 |                       | X | X |   | X |   |   |   |   |    |    |    |    | X        |          |    |    |    |    |
| <8>                 | M_BO_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <9>                 | M_ME_NA_1 | X                     | X | X |   | X |   |   |   |   |    |    |    |    | X        |          |    |    |    |    |
| <10>                | M_ME_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <11>                | M_ME_NB_1 | X                     | X | X |   | X |   |   |   |   |    |    |    |    | X        |          |    |    |    |    |
| <12>                | M_ME_TB_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <13>                | M_ME_NC_1 | X                     | X | X |   | X |   |   |   |   |    |    |    |    | X        |          |    |    |    |    |
| <14>                | M_ME_TC_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <15>                | M_IT_NA_1 |                       |   | X |   |   |   |   |   |   |    |    |    |    | X        |          |    |    |    |    |
| <16>                | M_IT_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <17>                | M_EP_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <18>                | M_EP_TB_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <19>                | M_EP_TC_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <20>                | M_PS_NA_1 |                       | X | X |   | X |   |   |   |   |    | X  | X  |    | X        |          |    |    |    |    |
| <21>                | M_ME_ND_1 | X                     | X | X |   | X |   |   |   |   |    |    |    |    | X        |          |    |    |    |    |
| <30>                | M_SP_TB_1 |                       |   | X |   | X |   |   |   |   | X  | X  |    |    |          |          |    |    |    |    |
| <31>                | M_DP_TB_1 |                       |   | X |   | X |   |   |   |   | X  | X  |    |    |          |          |    |    |    |    |
| <32>                | M_ST_TB_1 |                       |   | X |   | X |   |   |   |   | X  | X  |    |    |          |          |    |    |    |    |
| <33>                | M_BO_TB_1 |                       |   | X |   | X |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <34>                | M_ME_TD_1 |                       |   | X |   | X |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <35>                | M_ME_TE_1 |                       |   | X |   | X |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <36>                | M_ME_TF_1 |                       |   | X |   | X |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <37>                | M_IT_TB_1 |                       |   | X |   |   |   |   |   |   |    |    |    |    | X        |          |    |    |    |    |
| <38>                | M_EP_TD_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <39>                | M_EP_TE_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <40>                | M_EP_TF_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |

| Type Identification |           | Cause of Transmission |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
|---------------------|-----------|-----------------------|---|---|---|---|---|---|---|---|----|----|----|----|----------|----------|----|----|----|----|
|                     |           | 1                     | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 20 to 36 | 37 to 41 | 44 | 45 | 46 | 47 |
| <45>                | C_SC_NA_1 |                       |   |   |   | X | X |   | X | X |    |    |    |    |          |          | X  | X  | X  | X  |
| <46>                | C_DC_NA_1 |                       |   |   |   |   | X | X |   | X | X  |    |    |    |          |          | X  | X  | X  | X  |
| <47>                | C_RC_NA_1 |                       |   |   |   |   | X | X |   | X | X  |    |    |    |          |          | X  | X  | X  | X  |
| <48>                | C_SE_NA_1 |                       |   |   |   |   | X | X |   | X | X  |    |    |    |          |          | X  | X  | X  | X  |
| <49>                | C_SE_NB_1 |                       |   |   |   |   | X | X |   | X | X  |    |    |    |          |          | X  | X  | X  | X  |
| <50>                | C_SE_NC_1 |                       |   |   |   |   | X | X |   | X | X  |    |    |    |          |          | X  | X  | X  | X  |
| <51>                | C_BO_NA_1 |                       |   |   |   |   | X | X |   | X | X  |    |    |    |          |          | X  | X  | X  | X  |
| <58>                | C_SC_TA_1 |                       |   |   |   |   | X | X |   | X | X  |    |    |    |          |          | X  | X  | X  | X  |
| <59>                | C_DC_TA_1 |                       |   |   |   |   |   | X | X |   | X  | X  |    |    |          |          | X  | X  | X  | X  |
| <60>                | C_RC_TA_1 |                       |   |   |   |   |   | X | X |   | X  | X  |    |    |          |          | X  | X  | X  | X  |
| <61>                | C_SE_TA_1 |                       |   |   |   |   |   | X | X |   | X  | X  |    |    |          |          | X  | X  | X  | X  |
| <62>                | C_SE_TB_1 |                       |   |   |   |   |   | X | X |   | X  | X  |    |    |          |          | X  | X  | X  | X  |
| <63>                | C_SE_TC_1 |                       |   |   |   |   |   | X | X |   | X  | X  |    |    |          |          | X  | X  | X  | X  |
| <64>                | C_BO_TA_1 |                       |   |   |   |   |   | X | X |   | X  | X  |    |    |          |          | X  | X  | X  | X  |
| <70>                | M_EI_NA_1 |                       |   |   | X |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <100>               | C_IC_NA_1 |                       |   |   |   |   |   | X | X |   | X  | X  |    |    |          |          | X  | X  | X  | X  |
| <101>               | C_CI_NA_1 |                       |   |   |   |   |   | X | X |   | X  | X  |    |    |          |          | X  | X  | X  | X  |
| <102>               | C_RD_NA_1 |                       |   |   |   | X |   |   |   |   |    |    |    |    |          |          | X  | X  | X  | X  |
| <103>               | C_CS_NA_1 |                       | X |   |   |   | X | X |   |   |    |    |    |    |          |          | X  | X  | X  | X  |
| <104>               | C_TS_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <105>               | C_RP_NA_1 |                       |   |   |   |   |   | X | X |   |    |    |    |    |          |          | X  | X  | X  | X  |
| <106>               | C_CD_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <107>               | C_TS_TA_1 |                       |   |   |   |   |   |   | X | X |    |    |    |    |          |          | X  | X  | X  | X  |
| <110>               | P_ME_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <111>               | P_ME_NB_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <112>               | P_ME_NC_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <113>               | P_AC_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <120>               | F_FR_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <121>               | F_SR_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <122>               | F_SC_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <123>               | F_LS_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <124>               | F_AF_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <125>               | F_SG_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |

| <b>Type Identification</b> |           | <b>Cause of Transmission</b> |          |          |          |          |          |          |          |          |           |           |           |           |                         |                         |           |           |           |           |
|----------------------------|-----------|------------------------------|----------|----------|----------|----------|----------|----------|----------|----------|-----------|-----------|-----------|-----------|-------------------------|-------------------------|-----------|-----------|-----------|-----------|
|                            |           | <b>1</b>                     | <b>2</b> | <b>3</b> | <b>4</b> | <b>5</b> | <b>6</b> | <b>7</b> | <b>8</b> | <b>9</b> | <b>10</b> | <b>11</b> | <b>12</b> | <b>13</b> | <b>20<br/>to<br/>36</b> | <b>37<br/>to<br/>41</b> | <b>44</b> | <b>45</b> | <b>46</b> | <b>47</b> |
| <126>                      | F_DR_TA_1 |                              |          |          |          |          |          |          |          |          |           |           |           |           |                         |                         |           |           |           |           |
| <127>                      | F_SC_NB_1 |                              |          |          |          |          |          |          |          |          |           |           |           |           |                         |                         |           |           |           |           |

## Basic Application Functions

### Station Initialization

X | Remote initialization

### Cyclic Data Transmission

X | Cyclic data transmission

### Read Procedure

X | Read procedure

### Spontaneous Transmission

X | Spontaneous transmission

### Double Transmission of Information Objects (Cause of Transmission Equals Spontaneous)

The following type identifications can be transmitted in succession as the result of a single status change for an information object. A project-specific list defines the particular information object addresses for which double transmission is enabled.

- Single-point information M\_SP\_NA\_1, M\_SP\_TB\_1, and M\_PS\_NA\_1
- Double-point information M\_DP\_NA\_1 and M\_DP\_TB\_1
- Step position information M\_ST\_NA\_1 and M\_ST\_TB\_1
- Bitstring of 32 bit M\_BO\_NA\_1 and M\_BO\_TB\_1
- Measured value, normalized value M\_ME\_NA\_1, M\_ME\_ND\_1, and M\_ME\_TD\_1
- Measured value, scaled value M\_ME\_NB\_1 and M\_ME\_TE\_1
- Measured value, short floating point number M\_ME\_NC\_1 and M\_ME\_TF\_1

### Station Interrogation

|             |  |             |  |              |
|-------------|--|-------------|--|--------------|
| X   Global  |  | X   Group 7 |  | X   Group 13 |
| X   Group 1 |  | X   Group 8 |  | X   Group 14 |
| X   Group 2 |  | X   Group 9 |  | X   Group 15 |
| X   Group 3 |  |             |  |              |

|   |         |   |          |   |          |
|---|---------|---|----------|---|----------|
| X | Group 4 | X | Group 10 | X | Group 16 |
| X | Group 5 | X | Group 11 |   |          |
| X | Group 6 | X | Group 12 |   |          |

## Clock Synchronization

|   |   |
|---|---|
| X | Clock synchronization                                 |
| X | Day of week used                                      |
| X | RES1, GEN (time tag substituted/not substituted) used |
| X | SU-bit (summertime) used                              |

## Command Transmission

|   |  |
|---|--|
| X | Direct command transmission  |
| X | Direct set point command transmission  |
| X | Select and execute command   |
| X | Select and execute set point command   |
| X | C_SE ACTTERM used  |
| X | No additional definition   |
| X | Short-pulse duration (duration determined by a system parameter in the outstation)   |
| X | Long-pulse duration (duration determined by a system parameter in the outstation)    |
| X | Persistent output  |
|   | Supervision of maximum delay in command direction of commands and set point commands |
|   | Maximum allowable delay of commands and set point commands                           |

## Transmission of Integrated Totals

|   |   |
|---|---|
| X | Mode A: Local freeze with spontaneous transmission                                    |
| X | Mode B: Local freeze with counter interrogation                                       |
| X | Mode C: Freeze and transmit by counter-interrogation commands                         |
| X | Mode D: Freeze by counter-interrogation command, frozen values reported spontaneously |
| X | Counter read  |
| X | Counter freeze without reset  |
| X | Counter freeze with reset   |
| X | Counter reset   |
| X | General request   |
| X | Request Counter Group 1   |
| X | Request Counter Group 2   |
| X | Request Counter Group 3   |
| X | Request Counter Group 4   |

## Parameter Loading

|  |
|--|
| Threshold value                                |
| Smoothing factor                               |
| Low limit for transmission of measured values  |
| High limit for transmission of measured values |

## Parameter Activation

|   |
|---|
| Act/deact of persistent cyclic or periodic transmission of the addressed object |
|---|

## Test Procedure

|   |                |
|---|----------------|
| X | Test procedure |
|---|----------------|

## File Transfer

File transfer in monitor direction

|  |
|--|
| Transparent file   |
| Transmission of disturbance data of protection equipment |
| Transmission of sequences of events                      |
| Transmission of sequences of recorded analog values      |

File transfer in control direction

|                  |
|------------------|
| Transparent file |
|------------------|

## Background Scan

|   |                 |
|---|-----------------|
| X | Background scan |
|---|-----------------|

## Acquisition of Transmission Delay

|                                   |
|-----------------------------------|
| Acquisition of transmission delay |
|-----------------------------------|

## Definition of Time-Outs

| Parameter      | Default Value | Remarks  | Selected Value      |
|----------------|---------------|--|---------------------|
| t <sub>0</sub> | 15 s          | Time-out of connection establishment   | 1–60 s              |
| t <sub>1</sub> | 15 s          | Time-out of send or test APDUs   | 1–255 s             |
| t <sub>2</sub> | 10 s          | Time-out for acknowledgments in case of no data messages t <sub>2</sub> < t <sub>1</sub> | 1–255 s             |
| t <sub>3</sub> | 20 s          | Time-out for sending test frames in case of a long idle state                            | Disable, 1–172800 s |

## Maximum Number of Outstanding I Format APDUs k and Latest Acknowledge APDUs (w)

| Parameter | Default Value | Remarks   | Selected Value |
|-----------|---------------|---|----------------|
| $k$       | 12 APDUs      | Maximum difference receive sequence number to send state variable | 1–24           |
| $w$       | 8 APDUs       | Latest acknowledgment(s) after receiving $w$ I format APDUs       | 1–24           |

## Portnumber

| Parameter  | Value | Remarks |
|------------|-------|---------|
| Portnumber | 2404  | 1–65534 |

## Redundant Connections

|   |   |
|---|---|
| 2 | Number N of supported logical connections within a redundancy group |
|---|---|

## RFC 2200 Suite

RFC 2200 is an official Internet standard that describes the state of Internet protocol standardization as determined by the Internet Architecture Board (IAB). It offers a broad spectrum of actual standards used in the Internet. The suitable selection of documents from RFC 2200 defined in this standard for given projects has to be chosen by the user of this standard.

|   |   |
|---|---|
| X | Ethernet 802.3<br><br>Serial X.21 interface<br><br>Other selection from RFC 2200:<br><br>List of valid documents from RFC 2200<br><br>1. ....<br>2. ....<br>3. ....<br>4. ....<br>5. ....<br>6. ....<br>7. etc. |
|---|---|

## PIXIT

Documents additional behaviors of the IEC 60870-5-104 Controlling Station.

- The IEC 60870-5 Controlling Station only supports creating C\_GI() command requests with any CA except Broadcast.
- The IEC 60870-5 Controlling Station only supports creating C\_CI() command requests with any CA except Broadcast.
- The IEC 60870-5 Controlling Station supports creating C\_CS() command requests with any CA or Broadcast.
- The IEC 60870-5 Controlling Station supports creating C\_TS\_NA() or C\_TS\_TA() command requests with any CA except Broadcast.

5. The IEC 60870-5 Controlling Station only supports requesting the C\_RP(QRP = Reset of Process(1)) command request with any CA or Broadcast. The C\_RP(QRP = Reset of Event Buffer(2)) command request is not supported.
6. The IEC 60870-5 Controlling Station only supports issuing command requests with COT=Active (De-active is not supported).
7. IEC 60870-5 Controlling Station does not support the Test bit (other than COT) in all ASDUs.
8. IEC 60870-5 Controlling Station signals that an error was detected by the C\_TS\_NA() or C\_TS\_TA() command response by pulsing the Test\_Command\_Failure POU output pin.
9. IEC 60870-5 Controlling Station does not automatically issue a Clock Synchronization command request when a time stamp is received with an invalid quality (i.e., IV bit asserted). Triggering a Clock Synchronization command request after detecting an invalid time stamp is supported via logic.
10. IEC 60870-5 Controlling Station's Redundancy implementation manages the connections used for redundancy and will perform a failover to an available redundant connection when an error is detected with the active connection. The IEC 60870-5 Controlling Station also supports a user-commanded failover to an available redundant connection. No commands will be automatically initiated/triggered (except STARTDT) upon failing-over to a new connection. Triggering commands (e.g., C\_GI(), C\_CI(), C\_CS(), etc.) following the failing-over to a new connection is supported via logic.
11. The user can use logic to monitor and log the state of the IEC 60870-5 Controlling Station's Error\_Detected and Last\_Error\_Code POU output pins.

## Interoperability Statement for IEC 60870-5-101 Controlled Station for the SEL RTAC (Firmware Version R153-V2)

### Introduction

This document specifies the capabilities and features of the SEL-implemented IEC 60870-5-101 Controlled Station (Server).

This document applies specifically to the following RTAC models and firmware versions.

| <b>Model</b>    | <b>Firmware Version</b>              |
|-----------------|--------------------------------------|
| SEL-3505 RTAC   | SEL-3505-R153-V2-Z000125-D20250324   |
| SEL-3505-3 RTAC | SEL-3505-3-R153-V2-Z000125-D20250324 |
| SEL-3530 RTAC   | SEL-3530-R153-V2-Z000125-D20250324   |
| SEL-3530-4 RTAC | SEL-3530-4-R153-V2-Z000125-D20250324 |
| SEL-2241 RTAC   | SEL-2241-R153-V2-Z000125-D20250324   |
| SEL-3555 RTAC   | SEL-3555-R153-V2-Z000125-D20250324   |
| SEL-3350 RTAC   | SEL-3350-R153-V2-Z000125-D20250324   |

### Interoperability System or Device

|   |   |
|---|---|
|   | System definition                       |
|   | Controlling station definition (master) |
| X | Controlled station definition (slave)   |

## Network Configuration

|   |                         |   |                      |
|---|-------------------------|---|----------------------|
| X | Point-to-point          | X | Multipoint-partyline |
| X | Multiple point-to-point |   | Multipoint-star      |

## Physical Layer

### Transmission Speed (Control Direction)

| Unbalanced Interchange | Unbalanced Interchange      | Balanced Interchange |                |
|------------------------|-----------------------------|----------------------|----------------|
| Circuit V.24/V.28      | Circuit V.24/V.28           | Circuit X.24/X.27    |                |
| Standard               | Recommended if > 1200 bit/s |                      |                |
| 100 bit/s              | X 2400 bit/s                | X 2400 bit/s         | X 57600 bit/s  |
| X 200 bit/s            | X 4800 bit/s                | X 4800 bit/s         | 64000 bit/s    |
| X 300 bit/s            | X 9600 bit/s                | X 9600 bit/s         | X 115200 bit/s |
| X 600 bit/s            | X 19200 bit/s               | X 19200 bit/s        |                |
| X 1200 bit/s           | X 38400 bit/s               | X 38400 bit/s        |                |
|                        | X 57600 bit/s               |                      |                |
|                        | X 115200 bit/s              |                      |                |

### Transmission Speed (Monitor Direction)

| Unbalanced Interchange | Unbalanced Interchange      | Balanced Interchange |                |
|------------------------|-----------------------------|----------------------|----------------|
| Circuit V.24/V.28      | Circuit V.24/V.28           | Circuit X.24/X.27    |                |
| Standard               | Recommended if > 1200 bit/s |                      |                |
| 100 bit/s              | X 2400 bit/s                | X 2400 bit/s         | X 57600 bit/s  |
| X 200 bit/s            | X 4800 bit/s                | X 4800 bit/s         | 64000 bit/s    |
| X 300 bit/s            | X 9600 bit/s                | X 9600 bit/s         | X 115200 bit/s |
| X 600 bit/s            | X 19200 bit/s               | X 19200 bit/s        |                |
| X 1200 bit/s           | X 38400 bit/s               | X 38400 bit/s        |                |
|                        | X 57600 bit/s               |                      |                |
|                        | X 115200 bit/s              |                      |                |

## Link Layer

Frame format FT 1.2, single character 1, and the fixed time-out interval are used exclusively in this companion standard.

| Link Transmission                          | Address Field of the Link                    |
|--|--|
| X   Balanced transmission                  | X   Not present (balanced transmission only) |
| X   Unbalanced transmission                | X   One octet                                |
| Frame Length                               | X   Two octets                               |
| 255   Maximum length L (control direction) | Structured                                   |

|   |                                      |   |              |
|---|--------------------------------------|---|--------------|
| 255   | Maximum length L (monitor direction) | X | Unstructured |
| Time during which repetitions are permitted (Trp) or number of repetitions. |                                      |   |              |

For an unbalanced link layer, the controlled station returns the following ASDU types in Class 2 messages (low priority) with the indicated causes of transmission:

|   |  |
|---|--|
| X | The standard assignment of ASDUs to Class 2 messages is used as follows: |
|---|--|

| Type Identification | Cause of Transmission |
|---------------------|-----------------------|
| 9, 11, 13, 21       | <1>                   |

|   |  |
|---|--|
| X | A special assignment of ASDUs to Class 2 messages is as follows: |
|---|--|

#### NOTE

In response to a Class 2 poll, a controlled station can respond with Class 1 data when there are no Class 2 data available.

| Type Identification       | Cause of Transmission |
|---------------------------|-----------------------|
| 1, 3, 5, 7, 9, 11, 13, 21 | <2>                   |

## Application Layer

### Transmission Mode for Application Data

Mode 1 (least significant octet first), according to Section 4.10 of IEC 60870-5-4, is used exclusively in this companion standard.

#### Common Address of ASDU

|   |           |   |            |
|---|-----------|---|------------|
| X | One octet | X | Two octets |
|---|-----------|---|------------|

#### Information Object Addresses

|   |              |  |              |
|---|--------------|--|--------------|
| X | One octet    |  | Structured   |
| X | Two octets   |  | Unstructured |
| X | Three octets |  |              |

#### Cause of Transmission

|   |           |   |   |
|---|-----------|---|---|
| X | One octet | X | Two octets (with originator address). Set the originator address to zero if it is not used. |
|---|-----------|---|---|

### Selection of Standard ASDUs

#### Process Information in Monitor Direction

|   |   |           |
|---|---|-----------|
| X | <i>&lt;1&gt;</i> := Single-point information                | M_SP_NA_1 |
| X | <i>&lt;2&gt;</i> := Single-point information with time tag  | M_SP_TA_1 |
| X | <i>&lt;3&gt;</i> := Double-point information                | M_DP_NA_1 |
| X | <i>&lt;4&gt;</i> := Double-point information with time tag  | M_DP_TA_1 |
| X | <i>&lt;5&gt;</i> := Step position information               | M_ST_NA_1 |
| X | <i>&lt;6&gt;</i> := Step position information with time tag | M_ST_TA_1 |
| X | <i>&lt;7&gt;</i> := Bitstring of 32 bits                    | M_BO_NA_1 |

|  |           |
|--|-----------|
| X   <8> := Bitstring of 32 bits with time tag  | M_BO_TA_1 |
| X   <9> := Measured value, normalized value  | M_ME_NA_1 |
| X   <10> := Measured value, normalized value with time tag                                 | M_ME_TA_1 |
| X   <11> := Measured value, scaled value   | M_ME_NB_1 |
| X   <12> := Measured value, scaled value with time tag                                     | M_ME_TB_1 |
| X   <13> := Measured value, short floating point value                                     | M_ME_NC_1 |
| X   <14> := Measured value, short floating point value with time tag                       | M_ME_TC_1 |
| X   <15> := Integrated totals  | M_IT_NA_1 |
| X   <16> := Integrated totals with time tag  | M_IT_TA_1 |
| <17> := Event of protection equipment with time tag  | M_EP_TA_1 |
| <18> := Packed start events of protection equipment with time tag                          | M_EP_TB_1 |
| <19> := Packed output circuit information of protection equipment with time tag            | M_EP_TC_1 |
| <20> := Packed single-point information with status change detection                       | M_PS_NA_1 |
| X   <21> := Measured value, normalized value without quality descriptor                    | M_ME_ND_1 |
| X   <30> := Single-point information with time tag CP56Time2a                              | M_SP_TB_1 |
| X   <31> := Double-point information with time tag CP56Time2a                              | M_DP_TB_1 |
| X   <32> := Step position information with time tag CP56Time2a                             | M_ST_TB_1 |
| X   <33> := Bitstring of 32 bits with time tag CP56Time2a                                  | M_BO_TB_1 |
| X   <34> := Measured value, normalized value with time tag CP56Time2a                      | M_ME_TD_1 |
| X   <35> := Measured value, scaled value with time tag CP56Time2a                          | M_ME_TE_1 |
| X   <36> := Measured value, short floating point value with time tag CP56Time2a            | M_ME_TF_1 |
| X   <37> := Integrated totals with time tag CP56Time2a                                     | M_IT_TB_1 |
| <38> := Event of protection equipment with time tag CP56Time2a                             | M_EP_TD_1 |
| <39> := Packed start events of protection equipment with time tag CP56Time2a               | M_EP_TE_1 |
| <40> := Packed output circuit information of protection equipment with time tag CP56Time2a | M_EP_TF_1 |

#### Process Information in Control Direction

|   |           |
|---|-----------|
| X   <45> := Single command                                | C_SC_NA_1 |
| X   <46> := Double command                                | C_DC_NA_1 |
| X   <47> := Regulating step command                       | C_RC_NA_1 |
| X   <48> := Set point command, normalized value           | C_SE_NA_1 |
| X   <49> := Set point command, scaled value               | C_SE_NB_1 |
| X   <50> := Set point command, short floating point value | C_SE_NC_1 |
| X   <51> := Bitstring of 32 bits                          | C_BO_NA_1 |

#### System Information in Monitor Direction

|                                   |           |
|-----------------------------------|-----------|
| X   <70> := End of initialization | M_EI_NA_1 |
|-----------------------------------|-----------|

#### System Information in Control Direction

|  |           |
|--|-----------|
| X   <100> := Interrogation command         | C_IC_NA_1 |
| X   <101> := Counter-interrogation command | C_CI_NA_1 |

|  |           |
|--|-----------|
| X <102> := Read command                  | C_RD_NA_1 |
| X <103> := Clock synchronization command | C_CS_NA_1 |
| X <104> := Test command                  | C_TS_NA_1 |
| X <105> := Reset process command         | C_RP_NA_1 |
| X <106> := Delay acquisition command     | C_CD_NA_1 |

**Parameter in Control Direction**

|  |           |
|--|-----------|
| X <110> := Parameter of measured value, normalized value           | P_ME_NA_1 |
| X <111> := Parameter of measured value, scaled value               | P_ME_NB_1 |
| X <112> := Parameter of measured value, short floating point value | P_ME_NC_1 |
| <113> := Parameter activation                                      | P_AC_NA_1 |

**File Transfer**

|   |           |
|---|-----------|
| <120> := File ready   | F_FR_NA_1 |
| <121> := Section ready  | F_SR_NA_1 |
| <122> := Call directory, select file, call file, call section                   | F_SC_NA_1 |
| <123> := Last section, last segment   | F_LS_NA_1 |
| <124> := Ack file, ack section  | F_AF_NA_1 |
| <125> := Segment  | F_SG_NA_1 |
| <126> := Directory {blank or X, only available in monitor (standard) direction} | F_DR_TA_1 |

**Type Identification and Cause of Transmission Assignments**

| Type Identification | Cause of Transmission |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |
|---------------------|-----------------------|---|---|---|---|---|---|---|---|----|----|----|----|----------|----------|----|----|----|
|                     | 1                     | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 20 to 36 | 37 to 41 | 44 | 45 | 46 |
| <1>                 | M_SP_NA_1             |   | X | X |   | X |   |   |   |    | X  | X  |    | X        |          |    |    |    |
| <2>                 | M_SP_TA_1             |   |   | X |   | X |   |   |   |    | X  | X  |    |          |          |    |    |    |
| <3>                 | M_DP_NA_1             |   | X | X |   | X |   |   |   |    | X  | X  |    | X        |          |    |    |    |
| <4>                 | M_DP_TA_1             |   |   | X |   | X |   |   |   |    | X  | X  |    |          |          |    |    |    |
| <5>                 | M_ST_NA_1             |   | X | X |   | X |   |   |   |    | X  | X  |    | X        |          |    |    |    |
| <6>                 | M_ST_TA_1             |   |   | X |   | X |   |   |   |    | X  | X  |    |          |          |    |    |    |
| <7>                 | M_BO_NA_1             |   | X | X |   | X |   |   |   |    |    |    |    | X        |          |    |    |    |
| <8>                 | M_BO_TA_1             |   |   | X |   | X |   |   |   |    |    |    |    |          |          |    |    |    |
| <9>                 | M_ME_NA_1             | X | X | X |   | X |   |   |   |    |    |    |    | X        |          |    |    |    |
| <10>                | M_ME_TA_1             |   |   |   | X |   | X |   |   |    |    |    |    |          |          |    |    |    |
| <11>                | M_ME_NB_1             | X | X | X |   | X |   |   |   |    |    |    |    | X        |          |    |    |    |
| <12>                | M_ME_TB_1             |   |   |   | X |   | X |   |   |    |    |    |    |          |          |    |    |    |
| <13>                | M_ME_NC_1             | X | X | X |   | X |   |   |   |    |    |    |    |          | X        |    |    |    |
| <14>                | M_ME_TC_1             |   |   |   | X |   | X |   |   |    |    |    |    |          |          |    |    |    |

| Type Identification |           | Cause of Transmission |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
|---------------------|-----------|-----------------------|---|---|---|---|---|---|---|---|----|----|----|----|----------|----------|----|----|----|----|
|                     |           | 1                     | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 20 to 36 | 37 to 41 | 44 | 45 | 46 | 47 |
| <15>                | M_IT_NA_1 |                       |   | X |   |   |   |   |   |   |    |    |    |    |          | X        |    |    |    |    |
| <16>                | M_IT_TA_1 |                       |   |   | X |   |   |   |   |   |    |    |    |    |          | X        |    |    |    |    |
| <17>                | M_EP_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <18>                | M_EP_TB_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <19>                | M_EP_TC_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <20>                | M_PS_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <21>                | M_ME_ND_1 | X                     | X | X |   | X |   |   |   |   |    |    |    |    |          | X        |    |    |    |    |
| <30>                | M_SP_TB_1 |                       |   |   | X |   | X |   |   |   |    |    |    |    | X        | X        |    |    |    |    |
| <31>                | M_DP_TB_1 |                       |   |   | X |   | X |   |   |   |    |    |    |    | X        | X        |    |    |    |    |
| <32>                | M_ST_TB_1 |                       |   |   | X |   | X |   |   |   |    |    |    |    | X        | X        |    |    |    |    |
| <33>                | M_BO_TB_1 |                       |   |   | X |   | X |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <34>                | M_ME_TD_1 |                       |   |   | X |   | X |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <35>                | M_ME_TE_1 |                       |   |   | X |   | X |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <36>                | M_ME_TF_1 |                       |   |   | X |   | X |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <37>                | M_IT_TB_1 |                       |   |   | X |   |   |   |   |   |    |    |    |    |          |          | X  |    |    |    |
| <38>                | M_EP_TD_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <39>                | M_EP_TE_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <40>                | M_EP_TF_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <45>                | C_SC_NA_1 |                       |   |   |   |   | X | X | X | X | X  |    |    |    |          |          | X  | X  | X  |    |
| <46>                | C_DC_NA_1 |                       |   |   |   |   | X | X | X | X | X  | X  |    |    |          |          | X  | X  | X  |    |
| <47>                | C_RC_NA_1 |                       |   |   |   |   | X | X | X | X | X  | X  |    |    |          |          | X  | X  | X  |    |
| <48>                | C_SE_NA_1 |                       |   |   |   |   | X | X | X | X | X  | X  |    |    |          |          | X  | X  | X  |    |
| <49>                | C_SE_NB_1 |                       |   |   |   |   | X | X | X | X | X  | X  |    |    |          |          | X  | X  | X  |    |
| <50>                | C_SE_NC_1 |                       |   |   |   |   | X | X | X | X | X  | X  |    |    |          |          | X  | X  | X  |    |
| <51>                | C_BO_NA_1 |                       |   |   |   |   | X | X | X | X | X  | X  |    |    |          |          | X  | X  | X  |    |
| <70>                | M_EI_NA_1 |                       |   |   | X |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <100>               | C_IC_NA_1 |                       |   |   |   |   | X | X | X | X | X  | X  |    |    |          |          | X  | X  | X  |    |
| <101>               | C_CI_NA_1 |                       |   |   |   |   | X | X |   |   |    | X  |    |    |          |          | X  | X  | X  |    |
| <102>               | C_RD_NA_1 |                       |   |   |   | X |   |   |   |   |    |    |    |    |          |          | X  | X  | X  |    |
| <103>               | C_CS_NA_1 |                       |   | X |   |   | X | X |   |   |    |    |    |    |          |          | X  | X  | X  |    |
| <104>               | C_TS_NA_1 |                       |   |   |   |   | X | X |   |   |    |    |    |    |          |          | X  | X  | X  |    |
| <105>               | C_RP_NA_1 |                       |   |   |   |   | X | X |   |   |    |    |    |    |          |          | X  | X  | X  |    |
| <106>               | C_CD_NA_1 |                       |   | X |   |   | X | X |   |   |    |    |    |    |          |          | X  | X  | X  |    |
| <110>               | P_ME_NA_1 |                       |   |   |   |   | X | X |   |   |    |    |    |    |          |          | X  | X  | X  |    |

| Type Identification |           | Cause of Transmission |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
|---------------------|-----------|-----------------------|---|---|---|---|---|---|---|---|----|----|----|----|----------|----------|----|----|----|----|
|                     |           | 1                     | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 20 to 36 | 37 to 41 | 44 | 45 | 46 | 47 |
| <111>               | P_ME_NB_1 |                       |   |   |   | X | X |   |   |   |    |    |    |    |          |          | X  | X  | X  |    |
| <112>               | P_ME_NC_1 |                       |   |   |   | X | X |   |   |   |    |    |    |    |          |          | X  | X  | X  |    |
| <113>               | P_AC_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <120>               | F_FR_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <121>               | F_SR_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <122>               | F_SC_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <123>               | F_LS_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <124>               | F_AF_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <125>               | F_SG_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <126>               | F_DR_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |

## Basic Application Functions

### Station Initialization

Remote initialization

### Cyclic Data Transmission

Cyclic data transmission

### Read Procedure

Read procedure

### Spontaneous Transmission

Spontaneous transmission

## Double Transmission of Information Objects (Cause of Transmission Equals Spontaneous)

The following type identifications can be transmitted in succession as the result of a single status change for an information object. A project-specific list defines the particular information object addresses for which double transmission is enabled.

- Double-point information M\_DP\_NA\_1, M\_DP\_TA\_1, and M\_DP\_TB\_1
- Step position information M\_ST\_NA\_1, M\_ST\_TA\_1, and M\_ST\_TB\_1
- Bitstring of 32 bit M\_BO\_NA\_1, M\_BO\_TA\_1, and M\_BO\_TB\_1
- Measured value, normalized value M\_ME\_NA\_1, M\_ME\_TA\_1, M\_ME\_ND\_1, and M\_ME\_TD\_1

---

|   |   |
|---|---|
| X | Measured value, scaled value M_ME_NB_1, M_ME_TB_1, and M_ME_TE_1                |
| X | Measured value, short floating point number M_ME_NC_1, M_ME_TC_1, and M_ME_TF_1 |

---

### Station Interrogation

---

|   |         |   |          |   |          |
|---|---------|---|----------|---|----------|
| X | Global  | X | Group 7  | X | Group 13 |
| X | Group 1 | X | Group 8  | X | Group 14 |
| X | Group 2 | X | Group 9  | X | Group 15 |
| X | Group 3 | X | Group 10 | X | Group 16 |
| X | Group 4 | X | Group 11 |   |          |
| X | Group 5 | X | Group 12 |   |          |
| X | Group 6 |   |          |   |          |

---

### Clock Synchronization

---

|   |   |
|---|---|
| X | Clock synchronization                                 |
| X | Day of week used                                      |
| X | RES1, GEN (time tag substituted/not substituted) used |
| X | SU-bit (summertime) used                              |

---

### Command Transmission

---

|   |  |
|---|--|
| X | Direct command transmission  |
| X | Direct set point command transmission  |
| X | Select and execute command   |
| X | Select and execute set point command   |
| X | C_SE ACTTERM used  |
| X | No additional definition   |
| X | Short-pulse duration (duration determined by a system parameter in the outstation) |
| X | Long-pulse duration (duration determined by a system parameter in the outstation)  |
| X | Persistent output  |

---

### Transmission of Integrated Totals

---

|   |   |
|---|---|
| X | Mode A: Local freeze with spontaneous transmission                                    |
| X | Mode B: Local freeze with counter interrogation                                       |
| X | Mode C: Freeze and transmit by counter-interrogation commands                         |
| X | Mode D: Freeze by counter-interrogation command, frozen values reported spontaneously |
| X | Counter read  |
| X | Counter freeze without reset  |
| X | Counter freeze with reset   |

---

|   |                         |
|---|-------------------------|
| X | Counter reset           |
| X | General request         |
| X | Request Counter Group 1 |
| X | Request Counter Group 2 |
| X | Request Counter Group 3 |
| X | Request Counter Group 4 |

## Parameter Loading

|   |  |
|---|--|
| X | Threshold value                                |
|   | Smoothing factor                               |
|   | Low limit for transmission of measured values  |
|   | High limit for transmission of measured values |

## Parameter Activation

|   |
|---|
| Act/deact of persistent cyclic or periodic transmission of the addressed object |
|---|

## Test Procedure

|   |                |
|---|----------------|
| X | Test procedure |
|---|----------------|

## File Transfer

File transfer in monitor direction

|  |
|--|
| Transparent file   |
| Transmission of disturbance data of protection equipment |
| Transmission of sequences of events                      |
| Transmission of sequences of recorded analog values      |

File transfer in control direction

|                  |
|------------------|
| Transparent file |
|------------------|

## Background Scan

|   |                 |
|---|-----------------|
| X | Background scan |
|---|-----------------|

## Acquisition of Transmission Delay

|   |                                   |
|---|-----------------------------------|
| X | Acquisition of transmission delay |
|---|-----------------------------------|

**PIXIT**

Documents additional behaviors of the IEC 60870-5-101 Controlled Station.

- 
1. The RTAC's system time is independent of the IEC 60870-5 Controlled Station implementation. The RTAC's system time supports multiple time sources, prioritizes each source, and will fail over to the source with the best quality. The time validity reported by IEC 60870-5 Controlled Station is always derived from the RTAC's system time. Further, any time synchronization requests via an IEC 60870-5 Controlled Station (the RTAC supports multiple Controlled Stations) may be ignored or its application will be slewed to the requested time to limit disruptions to the RTAC and its subsystems. The slewing of a time adjustment request may affect the accuracy of subsequent time stamps until the time adjustment has been completed.
  2. A spontaneous Clock Synchronization message is transmitted when the next Event to be reported has a new hour, day, month, year, or summertime (compared to the previous event) if the Send Clock Synchronized Events setting is True.
  3. The SQ bit in a response will be asserted if the response contains a minimum number of consecutive IOAs (per type): M\_SP = 20, M\_DP = 20, M\_ST = 16, M\_BO = 8, ME\_A = 12, ME\_B = 12, ME\_C = 12, ME\_D = 12, M\_IT = 8, or all defined IOAs (per type) are consecutive and there are two or more IOAs. In addition, the SQ bit will not be asserted if a response containing event type data (e.g., COT = Spontaneous(3)), no matter the number of consecutive IOAs.
  4. When an IEC 60870-5 Controlled Station receives a C\_RP(QRP = Reset of Process(1)) command request, the command request resets all of the sectors associated with the controlled station.
  5. IEC 60870-5 Controlled Station does not support asserting the Test bit (other than COT) in any ASDU.
  6. IEC 60870-5 Controlled Station detects events by changes in the value of .stVal, .instMag, .frVal, q.validity and .q.detailQual (changes in only .t will not generate an event).
  7. When the IEC 60870-5 Controlled Station communications is configured to Unbalanced, it will respond to Datalink Function Code 7 with a response of ACK.
- 

## **Interoperability Statement for IEC 60870-5-104 Controlled Station for the SEL RTAC (Firmware Version R153-V2)**

### **Introduction**

This document specifies the capabilities and features of the SEL-implemented IEC 60870-5-104 Controlled Station (Server).

This document applies specifically to the following RTAC models and firmware versions.

| <b>Model</b>    | <b>Firmware Version</b>              |
|-----------------|--------------------------------------|
| SEL-3505 RTAC   | SEL-3505-R153-V2-Z000125-D20250324   |
| SEL-3505-3 RTAC | SEL-3505-3-R153-V2-Z000125-D20250324 |
| SEL-3530 RTAC   | SEL-3530-R153-V2-Z000125-D20250324   |
| SEL-3530-4 RTAC | SEL-3530-4-R153-V2-Z000125-D20250324 |
| SEL-2241 RTAC   | SEL-2241-R153-V2-Z000125-D20250324   |
| SEL-3555 RTAC   | SEL-3555-R153-V2-Z000125-D20250324   |
| SEL-3350 RTAC   | SEL-3350-R153-V2-Z000125-D20250324   |

## Interoperability

### System or Device

|   |   |
|---|---|
|   | System definition                       |
|   | Controlling station definition (master) |
| X | Controlled station definition (slave)   |

### Network Configuration (Not Applicable)

|                         |                      |
|-------------------------|----------------------|
| Point-to-point          | Multipoint-partyline |
| Multiple point-to-point | Multipoint-star      |

### Physical Layer (Not Applicable)

### Link Layer (Not Applicable)

### Application Layer

#### Transmission Mode for Application Data

Mode 1 (least significant octet first), according to Section 4.10 of IEC 60870-5-4, is used exclusively in this companion standard.

#### Common Address of ASDU

|           |   |            |
|-----------|---|------------|
| One octet | X | Two octets |
|-----------|---|------------|

#### Information Object Addresses

|            |   |              |
|------------|---|--------------|
| One octet  | X | Structured   |
| Two octets |   | Unstructured |
| X          |   |              |

#### Cause of Transmission

|           |   |   |
|-----------|---|---|
| One octet | X | Two octets (with originator address). Set the originator address to zero if it is not used. |
|-----------|---|---|

#### Length of APDU

|     |  |
|-----|--|
| 253 | Maximum length of APDU per system in control direction |
| 253 | Maximum length of APDU per system in monitor direction |

### Selection of Standard ASDUs

#### Process Information in Monitor Direction

|   |  |           |
|---|--|-----------|
| X | <1> := Single-point information                | M_SP_NA_1 |
|   | <2> := Single-point information with time tag  | M_SP_TA_1 |
| X | <3> := Double-point information                | M_DP_NA_1 |
|   | <4> := Double-point information with time tag  | M_DP_TA_1 |
| X | <5> := Step position information               | M_ST_NA_1 |
|   | <6> := Step position information with time tag | M_ST_TA_1 |

|  |           |
|--|-----------|
| X <7> := Bitstring of 32 bits  | M_BO_NA_1 |
| <8> := Bitstring of 32 bits with time tag  | M_BO_TA_1 |
| X <9> := Measured value, normalized value  | M_ME_NA_1 |
| <10> := Measured value, normalized value with time tag                                     | M_ME_TA_1 |
| X <11> := Measured value, scaled value   | M_ME_NB_1 |
| <12> := Measured value, scaled value with time tag   | M_ME_TB_1 |
| X <13> := Measured value, short floating point value                                       | M_ME_NC_1 |
| <14> := Measured value, short floating point value with time tag                           | M_ME_TC_1 |
| X <15> := Integrated totals  | M_IT_NA_1 |
| <16> := Integrated totals with time tag  | M_IT_TA_1 |
| <17> := Event of protection equipment with time tag  | M_EP_TA_1 |
| <18> := Packed start events of protection equipment with time tag                          | M_EP_TB_1 |
| <19> := Packed output circuit information of protection equipment with time tag            | M_EP_TC_1 |
| <20> := Packed single-point information with status change detection                       | M_PS_NA_1 |
| X <21> := Measured value, normalized value without quality descriptor                      | M_ME_ND_1 |
| X <30> := Single-point information with time tag CP56Time2a                                | M_SP_TB_1 |
| X <31> := Double-point information with time tag CP56Time2a                                | M_DP_TB_1 |
| X <32> := Step position information with time tag CP56Time2a                               | M_ST_TB_1 |
| X <33> := Bitstring of 32 bits with time tag CP56Time2a                                    | M_BO_TB_1 |
| X <34> := Measured value, normalized value with time tag CP56Time2a                        | M_ME_TD_1 |
| X <35> := Measured value, scaled value with time tag CP56Time2a                            | M_ME_TE_1 |
| X <36> := Measured value, short floating point value with time tag CP56Time2a              | M_ME_TF_1 |
| X <37> := Integrated totals with time tag CP56Time2a                                       | M_IT_TB_1 |
| <38> := Event of protection equipment with time tag CP56Time2a                             | M_EP_TD_1 |
| <39> := Packed start events of protection equipment with time tag CP56Time2a               | M_EP_TE_1 |
| <40> := Packed output circuit information of protection equipment with time tag CP56Time2a | M_EP_TF_1 |

#### Process Information in Control Direction

|  |           |
|--|-----------|
| X <45> := Single command   | C_SC_NA_1 |
| X <46> := Double command   | C_DC_NA_1 |
| X <47> := Regulating step command                                      | C_RC_NA_1 |
| X <48> := Set point command, normalized value                          | C_SE_NA_1 |
| X <49> := Set point command, scaled value                              | C_SE_NB_1 |
| X <50> := Set point command, short floating point value                | C_SE_NC_1 |
| X <51> := Bitstring of 32 bits   | C_BO_NA_1 |
| X <58> := Single command with time tag CP56Time2a                      | C_SC_TA_1 |
| X <59> := Double command with time tag CP56Time2a                      | C_DC_TA_1 |
| X <60> := Regulating step command with time tag CP56Time2a             | C_RC_TA_1 |
| X <61> := Set point command, normalized value with time tag CP56Time2a | C_SE_TA_1 |

|   |  |           |
|---|--|-----------|
| X | <62> := Set point command, scaled value with time tag CP56Time2a               | C_SE_TB_1 |
| X | <63> := Set point command, short floating point value with time tag CP56Time2a | C_SE_TC_1 |
| X | <64> := Bitstring of 32 bits with time tag CP56Time2a                          | C_BO_TA_1 |

#### System Information in Monitor Direction

|   |                               |           |
|---|-------------------------------|-----------|
| X | <70> := End of initialization | M_EI_NA_1 |
|---|-------------------------------|-----------|

#### System Information in Control Direction

|   |  |           |
|---|--|-----------|
| X | <100> := Interrogation command                 | C_IC_NA_1 |
| X | <101> := Counter-interrogation command         | C_CI_NA_1 |
| X | <102> := Read command                          | C_RD_NA_1 |
| X | <103> := Clock synchronization command         | C_CS_NA_1 |
|   | <104> := Test command                          | C_TS_NA_1 |
| X | <105> := Reset process command                 | C_RP_NA_1 |
|   | <106> := Delay acquisition command             | C_CD_NA_1 |
| X | <107> := Test command with time tag CP56Time2a | C_TS_TA_1 |

#### Parameter in Control Direction

|   |  |           |
|---|--|-----------|
| X | <110> := Parameter of measured value, normalized value           | P_ME_NA_1 |
| X | <111> := Parameter of measured value, scaled value               | P_ME_NB_1 |
| X | <112> := Parameter of measured value, short floating point value | P_ME_NC_1 |
|   | <113> := Parameter activation                                    | P_AC_NA_1 |

#### File Transfer

|  |   |           |
|--|---|-----------|
|  | <120> := File ready   | F_FR_NA_1 |
|  | <121> := Section ready  | F_SR_NA_1 |
|  | <122> := Call directory, select file, call file, call section                   | F_SC_NA_1 |
|  | <123> := Last section, last segment   | F_LS_NA_1 |
|  | <124> := Ack file, ack section  | F_AF_NA_1 |
|  | <125> := Segment  | F_SG_NA_1 |
|  | <126> := Directory {blank or X, only available in monitor (standard) direction} | F_DR_TA_1 |
|  | <127> := Query Log – Request archive file                                       | F_SC_NB_1 |

### Type Identification and Cause of Transmission Assignments

| Type Identification |           | Cause of Transmission |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |
|---------------------|-----------|-----------------------|---|---|---|---|---|---|---|---|----|----|----|----|----------|----------|----|----|----|
|                     |           | 1                     | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 20 to 36 | 37 to 41 | 44 | 45 | 46 |
| <1>                 | M_SP_NA_1 |                       | X | X |   | X |   |   |   |   | X  | X  |    | X  |          |          |    |    |    |
| <2>                 | M_SP_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |
| <3>                 | M_DP_NA_1 |                       | X | X |   | X |   |   |   |   | X  | X  |    | X  |          |          |    |    |    |
| <4>                 | M_DP_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |
| <5>                 | M_ST_NA_1 |                       | X | X |   | X |   |   |   |   | X  | X  |    | X  |          |          |    |    |    |

| Type Identification |           | Cause of Transmission |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
|---------------------|-----------|-----------------------|---|---|---|---|---|---|---|---|----|----|----|----|----------|----------|----|----|----|----|
|                     |           | 1                     | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 20 to 36 | 37 to 41 | 44 | 45 | 46 | 47 |
| <6>                 | M_ST_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <7>                 | M_BO_NA_1 |                       | X | X |   | X |   |   |   |   |    |    |    |    |          | X        |    |    |    |    |
| <8>                 | M_BO_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <9>                 | M_ME_NA_1 | X                     | X | X |   | X |   |   |   |   |    |    |    |    |          |          | X  |    |    |    |
| <10>                | M_ME_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <11>                | M_ME_NB_1 | X                     | X | X |   | X |   |   |   |   |    |    |    |    |          |          | X  |    |    |    |
| <12>                | M_ME_TB_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <13>                | M_ME_NC_1 | X                     | X | X |   | X |   |   |   |   |    |    |    |    |          |          | X  |    |    |    |
| <14>                | M_ME_TC_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <15>                | M_IT_NA_1 |                       |   | X |   |   |   |   |   |   |    |    |    |    |          |          |    | X  |    |    |
| <16>                | M_IT_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <17>                | M_EP_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <18>                | M_EP_TB_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <19>                | M_EP_TC_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <20>                | M_PS_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <21>                | M_ME_ND_1 | X                     | X | X |   | X |   |   |   |   |    |    |    |    |          |          |    | X  |    |    |
| <30>                | M_SP_TB_1 |                       |   | X |   | X |   |   |   |   |    |    |    |    | X        | X        |    | X  |    |    |
| <31>                | M_DP_TB_1 |                       |   | X |   | X |   |   |   |   |    |    |    |    | X        | X        |    | X  |    |    |
| <32>                | M_ST_TB_1 |                       |   | X |   | X |   |   |   |   |    |    |    |    | X        | X        |    | X  |    |    |
| <33>                | M_BO_TB_1 |                       |   | X |   | X |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <34>                | M_ME_TD_1 |                       |   | X |   | X |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <35>                | M_ME_TE_1 |                       |   | X |   | X |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <36>                | M_ME_TF_1 |                       |   | X |   | X |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <37>                | M_IT_TB_1 |                       |   | X |   |   |   |   |   |   |    |    |    |    |          |          |    | X  |    |    |
| <38>                | M_EP_TD_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <39>                | M_EP_TE_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <40>                | M_EP_TF_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <45>                | C_SC_NA_1 |                       |   |   |   |   |   |   | X | X | X  | X  | X  |    |          |          |    | X  | X  | X  |
| <46>                | C_DC_NA_1 |                       |   |   |   |   |   |   | X | X | X  | X  | X  | X  |          |          |    | X  | X  | X  |
| <47>                | C_RC_NA_1 |                       |   |   |   |   |   |   | X | X | X  | X  | X  | X  |          |          |    | X  | X  | X  |
| <48>                | C_SE_NA_1 |                       |   |   |   |   |   |   | X | X | X  | X  | X  | X  |          |          |    | X  | X  | X  |
| <49>                | C_SE_NB_1 |                       |   |   |   |   |   |   | X | X | X  | X  | X  | X  |          |          |    | X  | X  | X  |
| <50>                | C_SE_NC_1 |                       |   |   |   |   |   |   | X | X | X  | X  | X  | X  |          |          |    | X  | X  | X  |
| <51>                | C_BO_NA_1 |                       |   |   |   |   |   |   | X | X | X  | X  | X  | X  |          |          |    | X  | X  | X  |

| Type Identification |           | Cause of Transmission |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
|---------------------|-----------|-----------------------|---|---|---|---|---|---|---|---|----|----|----|----|----------|----------|----|----|----|----|
|                     |           | 1                     | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 20 to 36 | 37 to 41 | 44 | 45 | 46 | 47 |
| <58>                | C_SC_TA_1 |                       |   |   |   | X | X | X | X | X |    |    |    |    |          |          | X  | X  | X  |    |
| <59>                | C_DC_TA_1 |                       |   |   |   | X | X | X | X | X |    |    |    |    |          |          | X  | X  | X  |    |
| <60>                | C_RC_TA_1 |                       |   |   |   | X | X | X | X | X |    |    |    |    |          |          | X  | X  | X  |    |
| <61>                | C_SE_TA_1 |                       |   |   |   | X | X | X | X | X |    |    |    |    |          |          | X  | X  | X  |    |
| <62>                | C_SE_TB_1 |                       |   |   |   | X | X | X | X | X |    |    |    |    |          |          | X  | X  | X  |    |
| <63>                | C_SE_TC_1 |                       |   |   |   | X | X | X | X | X |    |    |    |    |          |          | X  | X  | X  |    |
| <64>                | C_BO_TA_1 |                       |   |   |   | X | X | X | X | X |    |    |    |    |          |          | X  | X  | X  |    |
| <70>                | M_EI_NA_1 |                       |   | X |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <100>               | C_IC_NA_1 |                       |   |   |   | X | X | X | X | X |    |    |    |    |          |          | X  | X  | X  |    |
| <101>               | C_CI_NA_1 |                       |   |   |   | X | X |   |   |   | X  |    |    |    |          |          | X  | X  | X  |    |
| <102>               | C_RD_NA_1 |                       |   |   | X |   |   |   |   |   |    |    |    |    |          |          | X  | X  | X  |    |
| <103>               | C_CS_NA_1 |                       | X |   |   | X | X |   |   |   |    |    |    |    |          |          | X  | X  | X  |    |
| <104>               | C_TS_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <105>               | C_RP_NA_1 |                       |   |   |   | X | X |   |   |   |    |    |    |    |          |          | X  | X  | X  |    |
| <106>               | C_CD_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <107>               | C_TS_TA_1 |                       |   |   |   | X | X |   |   |   |    |    |    |    |          |          | X  | X  | X  |    |
| <110>               | P_ME_NA_1 |                       |   |   |   | X | X |   |   |   |    |    |    |    |          |          | X  | X  | X  |    |
| <111>               | P_ME_NB_1 |                       |   |   |   | X | X |   |   |   |    |    |    |    |          |          | X  | X  | X  |    |
| <112>               | P_ME_NC_1 |                       |   |   |   | X | X |   |   |   |    |    |    |    |          |          | X  | X  | X  |    |
| <113>               | P_AC_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <120>               | F_FR_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <121>               | F_SR_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <122>               | F_SC_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <123>               | F_LS_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <124>               | F_AF_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <125>               | F_SG_NA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <126>               | F_DR_TA_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |
| <127>               | F_SC_NB_1 |                       |   |   |   |   |   |   |   |   |    |    |    |    |          |          |    |    |    |    |

## Basic Application Functions

### Station Initialization

|   |                       |
|---|-----------------------|
| X | Remote initialization |
|---|-----------------------|

## Cyclic Data Transmission

|   |                          |
|---|--------------------------|
| X | Cyclic data transmission |
|---|--------------------------|

## Read Procedure

|   |                |
|---|----------------|
| X | Read procedure |
|---|----------------|

## Spontaneous Transmission

|   |                          |
|---|--------------------------|
| X | Spontaneous transmission |
|---|--------------------------|

## Double Transmission of Information Objects (Cause of Transmission Equals Spontaneous)

The following type identifications can be transmitted in succession as the result of a single status change for an information object. A project-specific list defines the particular information object addresses for which double transmission is enabled.

|   |   |
|---|---|
| X | Single-point information M_SP_NA_1, M_SP_TA_1, M_SP_TB_1, and M_PS_NA_1         |
| X | Double-point information M_DP_NA_1, M_DP_TA_1, and M_DP_TB_1                    |
| X | Step position information M_ST_NA_1, M_ST_TA_1, and M_ST_TB_1                   |
| X | Bitstring of 32 bit M_BO_NA_1, M_BO_TA_1, and M_BO_TB_1                         |
| X | Measured value, normalized value M_ME_NA_1, M_ME_TA_1, M_ME_ND_1, and M_ME_TD_1 |
| X | Measured value, scaled value M_ME_NB_1, M_ME_TB_1, and M_ME_TE_1                |
| X | Measured value, short floating point number M_ME_NC_1, M_ME_TC_1, and M_ME_TF_1 |

## Station Interrogation

|   |         |   |          |   |          |
|---|---------|---|----------|---|----------|
| X | Global  |   |          |   |          |
| X | Group 1 | X | Group 7  | X | Group 13 |
| X | Group 2 | X | Group 8  | X | Group 14 |
| X | Group 3 | X | Group 9  | X | Group 15 |
| X | Group 4 | X | Group 10 | X | Group 16 |
| X | Group 5 | X | Group 11 |   |          |
| X | Group 6 | X | Group 12 |   |          |

## Clock Synchronization

|   |   |
|---|---|
| X | Clock synchronization                                 |
| X | Day of week used                                      |
| X | RES1, GEN (time tag substituted/not substituted) used |
| X | SU-bit (summertime) used                              |

## Command Transmission

|            |  |
|------------|--|
| X          | Direct command transmission  |
| X          | Direct set point command transmission  |
| X          | Select and execute command   |
| X          | Select and execute set point command   |
| X          | C_SE ACTTERM used  |
| X          | No additional definition   |
| X          | Short-pulse duration (duration determined by a system parameter in the outstation)   |
| X          | Long-pulse duration (duration determined by a system parameter in the outstation)    |
| X          | Persistent output  |
| X          | Supervision of maximum delay in command direction of commands and set point commands |
| 1–65535 ms | Maximum allowable delay of commands and set point commands (default = 2500 ms)       |

## Transmission of Integrated Totals

|   |   |
|---|---|
| X | Mode A: Local freeze with spontaneous transmission                                    |
| X | Mode B: Local freeze with counter interrogation                                       |
| X | Mode C: Freeze and transmit by counter-interrogation commands                         |
| X | Mode D: Freeze by counter-interrogation command, frozen values reported spontaneously |
| X | Counter read  |
| X | Counter freeze without reset  |
| X | Counter freeze with reset   |
| X | Counter reset   |
| X | General request   |
| X | Request Counter Group 1   |
| X | Request Counter Group 2   |
| X | Request Counter Group 3   |
| X | Request Counter Group 4   |

## Parameter Loading

|   |  |
|---|--|
| X | Threshold value                                |
|   | Smoothing factor                               |
|   | Low limit for transmission of measured values  |
|   | High limit for transmission of measured values |

## Parameter Activation

|  |   |
|--|---|
|  | Act/deact of persistent cyclic or periodic transmission of the addressed object |
|--|---|

## Test Procedure

|   |                |
|---|----------------|
| X | Test procedure |
|---|----------------|

## File Transfer

File transfer in monitor direction

|  |  |
|--|--|
|  | Transparent file   |
|  | Transmission of disturbance data of protection equipment |
|  | Transmission of sequences of events                      |
|  | Transmission of sequences of recorded analog values      |

File transfer in control direction

|  |                  |
|--|------------------|
|  | Transparent file |
|--|------------------|

## Background Scan

|   |                 |
|---|-----------------|
| X | Background scan |
|---|-----------------|

## Acquisition of Transmission Delay

|  |                                   |
|--|-----------------------------------|
|  | Acquisition of transmission delay |
|--|-----------------------------------|

## Definition of Time-Outs

| Parameter | Default Value | Remarks  | Selected Value      |
|-----------|---------------|--|---------------------|
| $t_0$     | 30 s          | Time-out of connection establishment                                 | N/A                 |
| $t_1$     | 15 s          | Time-out of send or test APDUs                                       | 1–255 s             |
| $t_2$     | 10 s          | Time-out for acknowledgments in case of no data messages $t_2 < t_1$ | 1–255 s             |
| $t_3$     | 20 s          | Time-out for sending test frames in case of a long idle state        | Disable, 1–172800 s |

## Maximum Number of Outstanding I Format APDUs k and Latest Acknowledge APDUs (w)

| Parameter | Default Value | Remarks   | Selected Value |
|-----------|---------------|---|----------------|
| $k$       | 12 APDUs      | Maximum difference receive sequence number to send state variable | 1–24           |
| $w$       | 8 APDUs       | Latest acknowledgment(s) after receiving $w$ I format APDUs       | 1–24           |

## Portnumber

| Parameter  | Value | Remarks        |
|------------|-------|----------------|
| Portnumber | 2404  | 23, 1024–65534 |

## Redundant Connections

|   |   |
|---|---|
| 2 | Number N of supported logical connections within a redundancy group |
|---|---|

## RFC 2200 Suite

RFC 2200 is an official Internet standard that describes the state of Internet protocol standardization as determined by the Internet Architecture Board (IAB). It offers a broad spectrum of actual standards used in the Internet. The suitable selection of documents from RFC 2200 defined in this standard for given projects has to be chosen by the user of this standard.

|   |   |
|---|---|
| X | Ethernet 802.3<br>Serial X.21 interface<br>Other selection from RFC 2200:<br>List of valid documents from RFC 2200<br>1. ...<br>2. ...<br>3. ...<br>4. ...<br>5. ...<br>6. ...<br>7. etc. |
|---|---|

## PIXIT

Documents additional behaviors of the IEC 60870-5-104 Controlled Station.

1. The RTAC's system time is independent of the IEC 60870-5 Controlled Station implementation. The RTAC's system time supports multiple time sources, prioritizes each source, and will fail over to source with the best quality. The time validity reported by an IEC 60870-5 Controlled Station is always derived from the RTAC's system time. Further, any time synchronization requests via an IEC 60870-5 Controlled Station (the RTAC supports multiple Controlled Stations) may be ignored or its application will be slewed to the requested time to limit disruptions to the RTAC and its subsystems. The slewing of a time adjustment request may affect the accuracy of subsequent time stamps until the time adjustment has been completed.
2. A spontaneous Clock Synchronization message is transmitted when the next Event to be reported has a new hour, day, month, year, or summertime (compared to the previous event) if the Send Clock Synchronized Events setting is True.
3. The SQ bit in a response will be asserted if the response contains a minimum number of consecutive IOAs (per type): M\_SP = 20, M\_DP = 20, M\_ST = 16, M\_BO = 8, ME\_A = 12, ME\_B = 12, ME\_C = 12, ME\_D = 12, M\_IT = 8, or all defined IOAs (per type) are consecutive and there are two or more IOAs. In addition, the SQ bit will not be asserted if a response containing event type data (e.g., COT = Spontaneous(3)), no matter the number of consecutive IOAs.
4. When an IEC 60870-5 Controlled Station receives a C\_RP(QRP = Reset of Process(1)) command request, the command request resets all of the sectors associated with the controlled station.
5. IEC 60870-5 Controlled Station does not support asserting the Test bit (other than COT) in any ASDU.
6. IEC 60870-5 Controlled Station detects events by changes in the value of .stVal, .instMag, .frVal, q.validity and .q.detailQual (changes in only .t will not generate an event).

# IEC 60870-5-103

IEC 60870-5 is an IEC standard that defines systems used for supervisory control and data acquisition (SCADA), including details related to communications between devices. As part of the standard, IEC 60870-5-103 defines a byte-oriented, asynchronous serial-based protocol for communications associated with electrical power systems. The design is based on either balanced (where either client or server can transmit asynchronously) or unbalanced (server can only transmit when solicited by client) topologies and is suitable for point-to-point or point-to-multipoint configurations.

This section describes the configuration and use of the IEC 60870-5-103 server with ACCELERATOR RTAC. You can configure as many as 50 concurrent IEC 60870-5-103 clients in a single RTAC project. The IEC 60870-5-103 client supports commands (in the control direction) and transmitting of requests for Application Service Data Unit (ASDU) types and Cause of Transmission (COT) as shown in the interoperability statements for IEC 60870-5-103, which list COTs for expected behavior only. Additional COTs are recognized for errors.

## IEC 60870-5-103 Client Configuration

Configure an IEC 60870-5-103 client connection to communicate via serial or Ethernet to IEDs. The RTAC will poll data from these IEDs and store the data it receives in tags. Use the Tag Processor to map these data to any protocol, logs, user logic, etc.

Give the device connection a unique name and select the connection type, as shown in *Figure 2.176*. Refer to *Client Connection Types* on page 135 for a description of each connection type.

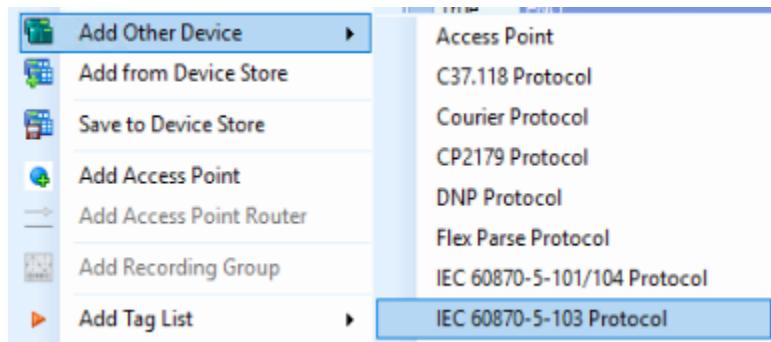


Figure 2.176 Adding IEC 60870-5-10 Client

## Settings Tab

The **Settings** tab contains all configurable items for communication. Check the **Description** column for details on each configuration item. Move the slider or hover your cursor over a description to see the entire text of an item description. Type any applicable comments in the blank column to the far right. Select the **Advanced Settings** check box to enable configuration of advanced settings.

## Sector Settings Tab

The **Sector Settings** tab contains configuration parameters for a maximum of eight sectors in a server. Each sector has a configurable name and common address. By default, each client has one sector. To add additional sectors, click the + button.

The screenshot shows a software interface titled "Other, Client - Serial [IEC 60870-5-103 Protocol, AP, Com\_01, 19200]". On the left, there is a vertical navigation bar with tabs: "Settings", "Sector Settings" (which is selected and highlighted in blue), "POU Pin Settings", and "Controller". The main area is a table with the following data:

| Drag a column header here to group by that column |             |                |
|---|-------------|----------------|
|   | Sector Name | Common Address |
|   | Sector_1    | 0              |
|   | Sector_2    | 1              |
|   | Sector_3    | 2              |
|   | Sector_4    | 3              |
|   | Sector_5    | 4              |
| ▶   | Sector_6    | 5              |

At the bottom of the table area, there is a toolbar with various icons and a status message "6 of 6". Below the table, there is a button labeled "Add items".

Figure 2.177 IEC 60870-5-103 Sector Settings

## IEC 60870-5-103 Client Sector Map

To configure tags for the IEC 60870-5-103 client, select an existing **103 Client Sector Map**. Repeat *Step 1* through *Step 4* to configure each client tag.

- Step 1. Click the tab for the appropriate tag type to add and configure tags.
- Step 2. Click + to add tags. To optimize system performance, only create as many tags as you need.
- Step 3. Rename the tags as necessary.
- Step 4. Configure other tag parameters as necessary.

| IEC 60870-5-103 Client Sector Map |      |   |   |          |
|-----------------------------------|------|---|---|----------|
| Time-Tagged DPI                   |      | Drag a column header here to group by that column |   |          |
| Time-Tagged Measured              |      | Enable  | Tag Name                                  | Tag Type |
| Measured Value I                  | True |   | Other_1_Sector_1.Time_Tagged_DPI_0000     | DPS      |
| Measured Value II                 |      |   | Other_1_Sector_1.Time_Tagged_DPI_0000_RET | INS      |
| Identification                    | True |   | Other_1_Sector_1.Time_Tagged_DPI_0000_FAN | INS      |
| Areva Binary Protection Signal    |      |   | Other_1_Sector_1.Time_Tagged_DPI_0001     | DPS      |
| Areva Analog Setting Parameter    |      |   | Other_1_Sector_1.Time_Tagged_DPI_0001_RET | INS      |
| Areva Analog Protection Signal    | True |   | Other_1_Sector_1.Time_Tagged_DPI_0001_FAN | INS      |
| Areva SPI w/o Time tag            |      |   | Other_1_Sector_1.Time_Tagged_DPI_0002     | DPS      |
| Areva Switch Position             |      |   | Other_1_Sector_1.Time_Tagged_DPI_0002_RET | INS      |
| Areva Position of Tap Changer     |      |   | Other_1_Sector_1.Time_Tagged_DPI_0002_FAN | INS      |
| Areva Binary Setting Parameter    |      |   |   |          |
| Siemens Metering                  |      |   |   |          |
| General Command                   |      |   |   |          |
| Areva Single Command              |      |   |   |          |

Figure 2.178 IEC 60870-5-103 Client Sector Map

## POU Pins

Use POU pin settings to view the present state of the IEC 60870-5-103 client operation and to modify some of the behavior of the protocol. Setting the Visible field to True will cause the POU pin to appear in the Controller tab. See *Table 2.77* for the settings descriptions.

Table 2.77 IEC 60870-5-103 Client POU Pin Settings

| Pin Name            | Pin Type    | Description  | Default |
|---------------------|-------------|--|---------|
| EN                  | Input BOOL  | The EN input enables or disables this specific function block instance. Other inputs have no effect while EN is False.   | True    |
| Disable_Tag_Updates | Input BOOL  | The POU will not update or process changes to tags while this input is True.   | False   |
| Disable_Controls    | Input BOOL  | While True, processing of any controllable tags is blocked.  | False   |
| Reset_Statistics    | Input BOOL  | On the rising-edge trigger, all counter POU outputs are reset.   | False   |
| Set_ClockFail       | Input BOOL  | When this pin is set to true this will set the ClockFail bit in the timestamp_t structure of IEC 60870-5-103 tags.   | False   |
| ENO                 | Output BOOL | Indicates that this specific function block instance is active if True. If False, the inputs have no effect and the outputs are not updated.   | False   |
| Offline             | Output BOOL | This output is False when protocol communications are in process. <b>Note:</b> Protocol communications may be in process, but no successful data are exchanged because of settings configuration issues. | False   |

| <b>Pin Name</b>               | <b>Pin Type</b> | <b>Description</b>  | <b>Default</b> |
|-------------------------------|-----------------|---|----------------|
| Invalid_Function_Block_Input  | Output BOOL     | True when a function block input currently has an invalid or out-of-range value.  | False          |
| Controls_Disabled             | Output BOOL     | Asserted when the Disable_Controls input is asserted. This indicates that the client will not issue control commands.   | False          |
| Message_Sent_Count            | Output UDINT    | Running sum indicating the number of messages transmitted to the remote device.   | False          |
| Message_Received_Count        | Output UDINT    | Running sum indicating the number of messages received from the remote device.  | 0              |
| Message_Failure               | Output BOOL     | Asserts for a single processor cycle when a message is processed that does not conform to the expected protocol format. This may be because of an incomplete response or corrupted data in the message response.                                      | False          |
| Message_Failure_Count         | Output UDINT    | Running sum indicating the number of messages that have failed.   | 0              |
| Message_Success_Count         | Output UDINT    | Running sum indicating the number of messages successively sent and received communicating with the remote device.  | 0              |
| Direct_Transparent_Connection | Output BOOL     | Indicates that the communications have been interrupted by a direct transparent connection through an access point router.  | False          |
| Data_Link_Timeout_Count       | Output UDINT    | Number of data link failures.   | 0              |
| Response_Timeout_Count        | Output UDINT    | Number of application layer message response time-outs.   | 0              |
| Reinit_In_Progress            | Output BOOL     | While asserted, indicates that the client is performing initial communications queries prior to data processing   | False          |
| Buffer_Overflow               | Output BOOL     | Asserts for a single processing interval if any message operations were discarded because of queuing limits. A message will be discarded if multiple occurrences of the same operation have been queued prior to the completion of that message type. | False          |
| Buffer_Overflow_Count         | Output UDINT    | Count indicating the number of times that the Buffer_Overflow pin has been asserted.  | 0              |
| Restart                       | Output BOOL     | Asserts for a single processing interval when the client receives an end of initialization message with a cause of initialization, indicating a remote start of the server.   | False          |
| Event_Collection_Count        | Output UDINT    | Number of events collected since the POU was enabled.   | 0              |
| Event_Collection_Enabled      | Output BOOL     | When True, the RTAC is able and ready to collect events from server.  | False          |
| Event_Collection_Pending      | Output BOOL     | Asserted while there are uncollected events. Deasserts once all events have been collected.   | False          |
| Event_Collection_Stored       | Output BOOL     | Asserts for a processing interval when an event has been stored in nonvolatile memory.  | False          |

## Interoperability Statement for IEC 60870-5-103 Client for the SEL RTAC Introduction

This document specifies the capabilities and features of the SEL-implemented IEC 60870-5-103 Client.

This document applies specifically to the following RTAC models and firmware versions.

| <b>Model</b>    | <b>Firmware Version</b>              |
|-----------------|--------------------------------------|
| SEL-3505 RTAC   | SEL-3505-R145-V0-Z000001-D20190830   |
| SEL-3505-3 RTAC | SEL-3505-3-R145-V0-Z000001-D20190830 |
| SEL-3530 RTAC   | SEL-3530-R145-V0-Z000001-D20190830   |
| SEL-3530-4 RTAC | SEL-3530-4-R145-V0-Z000001-D20190830 |
| SEL-2241 RTAC   | SEL-2241-R145-V0-Z000001-D20190830   |
| SEL-3532 RTAC   | SEL-3532-N-R145-V0-Z000001-D20190830 |
| SEL-3555 RTAC   | SEL-3555-R145-V0-Z000001-D20190830   |
| SEL-3350 RTAC   | SEL-3350-R148-V0-Z001187-D20210208   |

## Interoperability

### Physical Layer

#### Electrical Interface

|   |   |
|---|---|
| X | EIA-485   |
| X | EIA-232   |
| X | Number of loads is 32 for one piece of protection equipment |

#### NOTE

The EIA-485 standard defines unit loads such that 32 can be operated on one line. For detailed information, refer to clause 3 of the EIA-485 standard.

#### Optical Interface

|   |                         |
|---|-------------------------|
|   | Glass fiber             |
| X | Plastic fiber           |
|   | F-SMA type connector    |
| X | BFOC/2,5 type connector |

#### Transmission Speed

|   |             |
|---|-------------|
| X | 200 bit/s   |
| X | 300 bit/s   |
| X | 600 bit/s   |
| X | 1200 bit/s  |
| X | 2400 bit/s  |
| X | 4800 bit/s  |
| X | 9600 bit/s  |
| X | 19200 bit/s |
| X | 38400 bit/s |

|   |              |
|---|--------------|
| X | 57600 bit/s  |
| X | 115200 bit/s |

## Link Layer

There are no choices for the link layer.

## Application Layer

### Transmission Mode for Application Data

Mode 1 (least significant octet first), as defined in 4.10 of IEC 60870-5-4, is used exclusively in this companion standard.

### Common Address of ASDU

|   |                                      |
|---|--------------------------------------|
| X | One COMMON ADDRESS of ASDU           |
|   | More than one COMMON ADDRESS of ASDU |

### Selection of Standard Information Numbers in Monitor Direction

|   | <b>INF</b> | <b>Semantics</b>             |
|---|------------|------------------------------|
| X | <0>        | End of general interrogation |
| X | <0>        | Time synchronization         |
| X | <2>        | Reset FCB                    |
| X | <3>        | Reset CU                     |
| X | <4>        | Start/restart                |
| X | <5>        | Power on                     |

### Status Indication in Monitor Direction

|   | <b>INF</b> | <b>Semantics</b>          |
|---|------------|---------------------------|
| X | <16>       | Auto-recloser             |
| X | <17>       | Teleprotection active     |
| X | <18>       | Protection active         |
| X | <19>       | LED reset                 |
| X | <20>       | Monitor direction blocked |
| X | <21>       | Test mode                 |
| X | <22>       | Local parameter setting   |
| X | <23>       | Characteristic 1          |
| X | <24>       | Characteristic 2          |
| X | <25>       | Characteristic 3          |
| X | <26>       | Characteristic 4          |
| X | <27>       | Auxiliary input 1         |

|   | <b>INF</b> | <b>Semantics</b>  |
|---|------------|-------------------|
| X | <28>       | Auxiliary input 2 |
| X | <29>       | Auxiliary input 3 |
| X | <30>       | Auxiliary input 4 |

### Supervision Indication in Monitor Direction

|   | <b>INF</b> | <b>Semantics</b>           |
|---|------------|----------------------------|
| X | <32>       | Measurand supervision I    |
| X | <33>       | Measurand supervision V    |
| X | <35>       | Phase sequence supervision |
| X | <36>       | Trip circuit supervision   |
| X | <37>       | I»backup operation         |
| X | <38>       | VT fuse failure            |
| X | <39>       | Teleprotection disturbed   |
| X | <46>       | Group warning              |
| X | <47>       | Group alarm                |

### Earth Fault Indication in Monitor Direction

|   | <b>INF</b> | <b>Semantics</b>                     |
|---|------------|--------------------------------------|
| X | <48>       | Earth fault L1                       |
| X | <49>       | Earth fault L2                       |
| X | <50>       | Earth fault L3                       |
| X | <51>       | Earth fault forward, i.e., line      |
| X | <52>       | Earth fault reverse,<br>i.e., busbar |

### Fault Indication in Monitor Direction

|   | <b>INF</b> | <b>Semantics</b>           |
|---|------------|----------------------------|
| X | <64>       | Start/pick-up L1           |
| X | <65>       | Start/pick-up L2           |
| X | <66>       | Start/pick-up L3           |
| X | <67>       | Start/pick-up N            |
| X | <68>       | General trip               |
| X | <69>       | Trip L1                    |
| X | <70>       | Trip L2                    |
| X | <71>       | Trip L3                    |
| X | <72>       | Trip I» (backup operation) |

|   | <b>INF</b> | <b>Semantics</b>                  |
|---|------------|-----------------------------------|
| X | <73>       | Fault location X in ohms          |
| X | <74>       | Fault forward/line                |
| X | <75>       | Fault reverse/busbar              |
| X | <76>       | Teleprotection signal transmitted |
| X | <77>       | Teleprotection signal received    |
| X | <78>       | Zone 1                            |
| X | <79>       | Zone 2                            |
| X | <80>       | Zone 3                            |
| X | <81>       | Zone 4                            |
| X | <82>       | Zone 5                            |
| X | <83>       | Zone 6                            |
| X | <84>       | General start/pick-up             |
| X | <85>       | Breaker failure                   |
| X | <86>       | Trip measuring system L1          |
| X | <87>       | Trip measuring system L2          |
| X | <88>       | Trip measuring system L3          |
| X | <89>       | Trip measuring system E           |
| X | <90>       | Trip I>                           |
| X | <91>       | Trip I»                           |
| X | <92>       | Trip IN>                          |
| X | <93>       | Trip IN»                          |

#### Auto-Reclosure Indication in Monitor Direction

|   | <b>INF</b> | <b>Semantics</b>      |
|---|------------|-----------------------|
| X | <128>      | CB on by AR           |
| X | <129>      | CB on by long time AR |
| X | <130>      | AR blocked            |

#### Measurands in Monitor Direction

|   | <b>INF</b> | <b>Semantics</b>                        |
|---|------------|---|
| X | <144>      | Measurands I                            |
| X | <145>      | Measurands I, V                         |
| X | <146>      | Measurands I, V, P, Q                   |
| X | <147>      | Measurands IN, VEN                      |
| X | <148>      | Measurands IL1,2,3,<br>VL1,2,3, P, Q, f |

**Generic Functions in Monitor Direction**

|   | <b>INF</b> | <b>Semantics</b>                                      |
|---|------------|---|
| X | <240>      | Read headings of all defined groups                   |
| X | <241>      | Read values or attributes of all entries of one group |
| X | <243>      | Read directory of a single entry                      |
| X | <244>      | Read value or attribute of a single entry             |
| X | <245>      | End of general interrogation of generic data          |
| X | <249>      | Write entry with confirmation                         |
| X | <250>      | Write entry with execution                            |
| X | <251>      | Write entry aborted                                   |

**Selection of Standard Information Numbers in Control Direction**  
**System Functions in Control Direction**

|   | <b>INF</b> | <b>Semantics</b>                    |
|---|------------|-------------------------------------|
| X | <0>        | Initiation of general interrogation |
| X | <0>        | Time synchronization                |

**General Commands in Control Direction**

|   | <b>INF</b> | <b>Semantics</b>          |
|---|------------|---------------------------|
| X | <16>       | Auto-recloser on/off      |
| X | <17>       | Teleprotection on/off     |
| X | <18>       | Protection on/off         |
| X | <19>       | LED reset                 |
| X | <23>       | Activate characteristic 1 |
| X | <24>       | Activate characteristic 2 |
| X | <25>       | Activate characteristic 3 |
| X | <26>       | Activate characteristic 4 |

**Generic Functions in Control Direction**

|   | <b>INF</b> | <b>Semantics</b>                                      |
|---|------------|---|
| X | <240>      | Read headings of all defined groups                   |
| X | <241>      | Read values or attributes of all entries of one group |
| X | <243>      | Read directory of a single entry                      |
| X | <244>      | Read value or attribute of a single entry             |
| X | <245>      | General interrogation of generic data                 |
| X | <248>      | Write entry   |
| X | <249>      | Write entry with confirmation                         |

|   | <b>INF</b> | <b>Semantics</b>           |
|---|------------|----------------------------|
| X | <250>      | Write entry with execution |
| X | <251>      | Write entry aborted        |

## Basic Application Functions

|   |                               |
|---|-------------------------------|
|   | Test mode                     |
|   | Blocking of monitor direction |
| X | Disturbance data              |
|   | Generic services              |
| X | Private data                  |

## Miscellaneous

Measurands are transmitted with ASDU 3 as well as with ASDU 9. As defined in 7.2.6.8, the maximum MVAL can either be 1,2 or 2,4 times the rated value. No different rating shall be used in ASDU 3 and ASDU 9, i.e., for each measurand, there is only one choice.

| <b>Measurand</b> | <b>1,2</b> | <b>2,4</b> |
|------------------|------------|------------|
| Current L1       |            |            |
| Current L2       |            |            |
| Current L3       |            |            |
| Voltage L1-E     |            |            |
| Voltage L2-E     |            |            |
| Voltage L3-E     |            |            |
| Active power P   |            |            |
| Reactive power Q |            |            |
| Frequency f      |            |            |
| Voltage L1–L2    |            |            |

# IEC 61850

## Overview

The RTAC supports the following protocols within the IEC 61850 standard:

- ▶ GOOSE Transmit and Receive
- ▶ MMS Client
- ▶ MMS Server

### NOTE

The SEL-3505 currently does not support IEC 61850 MMS client protocol.

## Licensing

The RTAC enables GOOSE messaging, MMS client, and MMS server support by verifying the presence of IEC 61850 GOOSE or MMS protocol licensed options. The licensed options are assigned at the factory when you order IEC 61850 GOOSE or MMS on a new RTAC. If you want to add IEC 61850 GOOSE or MMS to an existing RTAC, contact your SEL sales representative. You will receive a firmware update as well as a licensed option upgrade file that you can load into the RTAC through use of the firmware upgrade procedure. The upgrade file will update the RTAC licensed options to enable GOOSE messaging, MMS client, or MMS server support.

## Features

The RTAC uses Ethernet and IEC 61850 to support the following features.

### MMS Client

Update RTAC tags with data from MMS devices by either polling for DataSets or by receiving reports. You can configure the RTAC for as many as 32 DataSets per IED, with as many as 16 used for polling and as many as 16 used for reporting. Presently most RTACs are limited to communicating with as many as 256 IEDs simultaneously using MMS client protocol. Reporting can be a mixture of buffered and unbuffered reports.

In firmware versions R144-V0 and later, the entryID received with buffered reports is saved to nonvolatile memory every 3 seconds. This maintains a record of which reports in a buffered report have already been processed in case the RTAC loses power, preventing the chance of processing duplicate events from IEDs when power is restored. When a project is downloaded to the RTAC, all entryID values are deleted and the RTAC will process all entryID values from the IED.

In firmware versions R150-V0 and later, the Local\_Buffer\_OverFlow POU pin indicates when more data have been received than can be processed in a reasonable amount of time. When the MMS client receives multiple data changes for a single point within a single task interval, the subsequent changes for the multiple state changes of that point and all other points received are buffered to be clocked through the logic engine in subsequent processing cycles. The size of this buffer is calculated as the number of configured tags in a single MMS client multiplied by 15. The buffer has a minimum size of 2000 and a maximum size of 5000 state changes. When the buffer becomes full in a single processing cycle, all of the data entries in the buffer are updated to the logic engine. Points with multiple state changes in the buffer only pass on the most recent state change to the logic engine. When this buffer flushing occurs, the Local\_Buffer\_OverFlow pin asserts for a single processing cycle. This is indicative of a system that may not be optimally configured. Filling this buffer is a symptom of a system where data change in the server faster than the client is able to process for an extended period of time. For example, if a data point in the server changes at a rate of 50 ms and the client task cycle time (the rate at which data are passed into the RTAC's logic engine) is 100 ms, the client will not be able to process all data from the server. In such a case, either the client needs to be configured to process data faster or the server configuration needs to remove

the chattering point from the report. The MMS client is capable of processing as many as 60 unsolicited reports between task intervals. SEL recommends that data changes in a server for a single point do not change faster than the configured task cycle interval for more than a duration of 60 seconds.

## Functional Naming

In firmware versions R151-V0 and later, working with functionally named data objects is supported for the MMS client and GOOSE receive messages. If a device has data that are functionally named, the tag name in ACCELERATOR RTAC will contain the functional name instead of the product name. To enable functional naming, set the "supportsLdName" attribute in the SCL to True. This attribute can be found in the client services portion of the services section of the RTAC configuration. For configurations that do not contain the "supportsLdName" attribute, functional named tags will not be created.

```
<Services nameLength="64">
    <FileHandling mms="true" ftp="true" />
    <ClientServices goose="true" maxGOOSE="150" supportsLdName="true" />
    <SupSubscription maxGo="64" />
</Services>
```

When this attribute is set when importing an MMS client connection or GOOSE receive message and the IED has an a ldName attribute, ACCELERATOR RTAC will create tags with the functional name instead of product naming. Devices that use both functional naming and product naming will have the corresponding names for tags in the RTAC project.

## MMS Server

Configure the MMS server to send data from the RTAC to as many as 10 remote MMS client sessions. Configure logical nodes, tags, and buffered and unbuffered reports by using ACCELERATOR Architect SEL-5032 Software. In firmware versions prior to R147, 25 buffered reports and 25 unbuffered reports are supported. Starting in version R147, 100 buffered reports and 100 unbuffered reports are supported. Map tags in the RTAC to the MMS server shared map tags by using the Tag Processor or IEC 61131-3 logic. Configure the MMS server to respond to anonymous polls or configure as many as 10 IP addresses for the connected clients.

## Peer-to-Peer Real-Time Status and Control

Use GOOSE with as many as 150 incoming (receive) and 150 outgoing (transmit) messages. Map received GOOSE tags to RTAC tags and map any RTAC tags to GOOSE transmit tags.

## Configuration

Use Architect to configure the Substation Configuration Description file (.SCD) or SEL Architect Project (selaprj). Import the configuration file into ACCELERATOR RTAC to complete configuration and load the file into the RTAC.

## Commissioning and Troubleshooting

Use software such as MMS Object Explorer and AX-S4 MMS from Sisco, Inc., to browse the relay logical nodes and verify functionality.

This section presents the information you need to use the IEC 61850 features of the RTAC:

- ▶ *Introduction to IEC 61850 on page 407*
- ▶ *IEC 61850 Operation on page 408*
- ▶ *MMS Client and GOOSE on page 419*
- ▶ *ACSI Conformance Statements on page 444*

## Introduction to IEC 61850

In the early 1990s, the Electric Power Research Institute (EPRI) and the Institute of Electrical and Electronics Engineers, Inc. (IEEE) began to define a Utility Communications Architecture (UCA). They initially focused on intercontrol center and substation-to-control center communications and produced the Inter-Control Center Communications Protocol (ICCP) specification. This specification, later adopted by the IEC as 60870-6 TASE.2, became the standard protocol for real-time exchange of data between databases. In 1994, EPRI and IEEE began work on UCA 2.0 for Field Devices (simply referred to as UCA2). In 1997, they combined efforts with Technical Committee 57 of the IEC to create a common international standard. Their joint efforts created the present IEC 61850 standard. The IEC 61850 standard, a superset of UCA2, contains most of the UCA2 specification, plus additional functionality. The standard describes client/server and peer-to-peer communications, substation design and configuration, testing, and project standards. The IEC 61850 standard consists of the parts listed in *Table 2.78*.

**Table 2.78 IEC 61850 Document Set**

| <b>IEC 61850 Sections</b> | <b>Definitions</b>  |
|---------------------------|---|
| IEC 61850-1               | Introduction and overview   |
| IEC 61850-2               | Glossary  |
| IEC 61850-3               | General requirements  |
| IEC 61850-4               | System and project management   |
| IEC 61850-5               | Communication requirements  |
| IEC 61850-6               | Configuration description language for substation IEDs  |
| IEC 61850-7-1             | Basic communication structure for substations and feeder equipment- principles and models                                 |
| IEC 61850-7-2             | Basic communication structure for substations and feeder equipment- Abstract communication service interface (ACSI)       |
| IEC 61850-7-3             | Basic communication structure for substations and feeder equipment- Common data classes                                   |
| IEC 61850-7-4             | Basic communication structure for substations and feeder equipment- Compatible logical node (LN) classes and data classes |
| IEC 61850-8-1             | SCSM-Mapping to Manufacturing Messaging Specification (MMS) (ISO/IEC 9506-1 and ISO/IEC 9506-2 over ISO/IEC 8802-3)       |

| IEC 61850 Sections | Definitions   |
|--------------------|---|
| IEC 61850-9-1      | SCSM-Sampled values over serial multidrop point-to-point link |
| IEC 61850-9-2      | SCSM-Sampled values over ISO/IEC 8802-3                       |
| IEC 61850-10       | Conformance testing   |

The IEC 61850 document set, available directly from the IEC at [www.iec.ch](http://www.iec.ch), contains information necessary for successful implementation of this protocol. SEL strongly recommends that anyone involved with the design, installation, configuration, or maintenance of IEC 61850 systems be familiar with the appropriate sections of this standard.

## IEC 61850 Operation

### Object Models

The IEC 61850 standard relies heavily on the Abstract Communication Service Interface (ACSI) models to define a set of services and responses to those services. In terms of network behavior, abstract modeling enables all intelligent electronic devices (IEDs) to act identically. These abstract models are used to create objects (data items) and services that exist independently of any underlying protocols.

These objects are in conformance with the common data class (CDC) specification IEC 61850-7-3, which describes the type and structure of each element within a logical node. CDCs for status, measurements, controllable analogs and statuses, and settings all have unique CDC attributes. Each CDC attribute belongs to a set of functional constraints that groups the attributes into specific categories such as status (ST), description (DC), and substituted value (SV). Functional constraints, CDCs, and CDC attributes serve as building blocks for defining logical nodes.

UCA2 used GOMSFE (Generic Object Models for Substation and Feeder Equipment) to present data from station IEDs as a series of objects called models or bricks. The IEC working group has incorporated GOMSFE concepts into the standard, with some modifications to terminology; one change was the renaming of bricks to logical nodes. Each logical node represents a group of data (controls, status, measurements, etc.) associated with a particular function. For example, the MMXU logical node (polyphase measurement unit) contains measurement data and other points associated with three-phase metering including voltages and currents. Each IED can contain many functions such as protection, metering, and control. Multiple logical nodes represent the functions in multifunction devices.

Logical nodes can be organized into logical devices that are similar to directories on a computer disk. As represented in the IEC 61850 network, each physical device can contain many logical devices and each logical device can contain many logical nodes. Many relays, meters, and other IEC 61850 devices contain one primary logical device where all models are organized.

IEC 61850 devices are capable of self-description. You do not need to refer to the specifications for the logical nodes, measurements, and other components to request data from another IEC 61850 device. IEC 61850 clients can request and display a list and description of the data available in an IEC 61850 server device. This process is similar to the autoconfiguration process SEL communications processors (SEL-2032 and SEL-2030) use. Simply run an MMS browser to

query devices on an IEC 61850 network and discover what data are available. Self-description also permits extensions to both standard and custom data models. Instead of having to look up data in a profile stored in its database, an IEC 61850 client can simply query an IEC 61850 device and receive a description of all logical devices, logical nodes, and available data.

Unlike other supervisory control and data acquisition (SCADA) protocols that present data as a list of addresses or indices, IEC 61850 presents data with descriptors in a composite notation made up of components. *Table 2.79* shows how the A-phase current expressed as MMXU\$A\$phsA\$cVal breaks down into its component parts.

**Table 2.79 Example IEC 61850 Descriptor Components**

| Component Descriptor | Component Type  | Description                |
|----------------------|-----------------|----------------------------|
| METMMXU1             | Logical Node    | Polyphase measurement unit |
| A                    | Data Object     | Phase-to-ground amperes    |
| phsA                 | Sub-Data Object | A-phase                    |
| cVal                 | Data Attribute  | Complex value              |

## Data Mapping

Device data are mapped to IEC 61850 logical nodes (LN) according to rules defined by SEL. Refer to IEC 61850-5:2003(E) and IEC 61850-7 4:2003(E) for the mandatory content and usage of these LNs. The RTAC logical nodes are grouped under logical devices for organization based on function. See *Table 2.80* for descriptions of the logical devices in an RTAC.

**Table 2.80 RTAC Logical Devices**

| Logical Device | Description   |
|----------------|---|
| ANN            | Annunciator elements-alarms, status values                |
| CFG            | Configuration elements-DataSets and report control blocks |

## MMS

Manufacturing messaging specification (MMS) provides services for the application-layer transfer of real-time data within a substation LAN. MMS was developed as a network-independent data exchange protocol for industrial networks in the 1980s and standardized as ISO 9506. MMS supports complex named objects and flexible services that enable mapping to IEC 61850 in a straightforward manner. This was why the UCA users group used MMS for UCA from the start, and why the IEC chose to keep it for IEC 61850. Because the RTAC uses similar complex named objects, mapping to/from IEC 61850 and other tags in the RTAC is straightforward and easy to do. As an MMS client, the RTAC supports polling for DataSets and reports as defined in ACSELERATOR Architect. As an MMS server, the RTAC can respond to as many as 10 MMS client sessions as well as send reports such as defined in an Architect project.

## GOOSE

The Generic Object Oriented Substation Event (GOOSE) object within IEC 61850 is for high-speed control messaging. IEC 61850 GOOSE automatically broadcasts messages containing status, controls, and measured values onto the network for use by other devices. IEC 61850 GOOSE sends the message several times, increasing the likelihood that other devices receive the messages. GOOSE message publication is a persistent function. Once GOOSE is enabled, the IED will continuously publish GOOSE messages, regardless of their contents, until they are disabled. The publication process description indicates when and why the publication rate changes.

IEC 61850 GOOSE objects can quickly and conveniently transfer status, controls, and measured values between peers on an IEC 61850 network. Configure the RTAC to send or receive DataSets with ACCELERATOR Architect. See the Architect instruction manual or online help for more information.

Each IEC 61850 GOOSE sender includes a text identification string (GOOSE Control Block Reference), APP ID field, and an Ethernet multicast group address in each outgoing message. Some devices that receive GOOSE messages use the text identification and multicast group to identify and filter incoming GOOSE messages. The RTAC uses only the APP ID and multicast group to identify and filter incoming GOOSE messages. See *Table 2.78* for details on which logical nodes and attributes the RTAC uses. This information can be useful when searching through device data with MMS browsers.

## SCL Files

Substation Configuration Language (SCL) is an XML-based configuration language used to support the exchange of database configuration data between different tools, which may come from different manufacturers. There are four types of SCL files:

- ▶ Intelligent Electronic Device (IED) Capability Description file (.ICD)
- ▶ System Specification Description (.SSD) file
- ▶ Substation Configuration Description file (.SCD)
- ▶ Configured IED Description file (.CID)

The ICD file describes the capabilities of an IED, including information on LN and GOOSE support. You can import ICD files from non-SEL IEDs into ACCELERATOR Architect. The SSD file describes the single-line diagram of the substation and the required LNs. The SCD file contains information on all IEDs, communications configuration data, and a substation description. The CID file, of which there may be several, describes a single instantiated IED within the project and includes address information.

## DataSets

The RTAC supports publishing and subscribing to DataSets in GOOSE messaging. As an MMS client, the RTAC can also poll IEC 61850 IEDs for MMS DataSets and reports. You can create custom RTAC DataSets in ACCELERATOR Architect. The data tags are placeholders in the DataSet to which you will later map RTAC project data tags in ACCELERATOR RTAC. You can import CID files from other IEDs into Architect to map the IEDs DataSets to GOOSE or MMS messaging.

Within Architect, IEC 61850 DataSets have three main purposes:

- GOOSE: You can use predefined or edited DataSets, or create new DataSets for outgoing GOOSE transmission.
- MMS Client: You can define which data the RTAC will poll via MMS by selecting DataSets and/or reports from other IEDs in the Client Inputs section.
- MMS Server: You can define server sessions with which the RTAC will connect. You can also define the server model, DataSets, and/or reports that the RTAC will send to a polling MMS client.

## Supplemental Software

Examine the data structure and values of the supported IEC 61850 LNs with an MMS browser such as MMS Object Explorer and AX-S4 MMS from Cisco, Inc.

## Time Stamps and Quality

In addition to the various data values, the two attributes quality and t (time stamp) are available at any time. Creation of a time stamp results upon RTAC detection of a data or quality change.

The time stamp applies to all data and quality attributes (Boolean, Bstrings, Analogs, etc.) in the same fashion when the RTAC detects a data or quality change. Time stamps within GOOSE are in Universal Time (UTC) format but the RTAC database converts these to and from RTAC system time.

The RTAC uses GOOSE quality attributes to indicate the quality of the data in its transmitted GOOSE messages. Under normal conditions, all attributes are zero, indicating good quality data. Internal status indicators provide the information necessary for the device to set these attributes.

## GOOSE Processing and Performance

SEL devices support GOOSE processing as defined by IEC 61850-7-1:2003(E), IEC 61850-7-2:2003(E), and IEC 61850-8-1:2004(E).

## GOOSE Construction Tips

- Quality bit strings SEL devices publish are not generally useful in determining the quality of associated data because the SEL IEDs suspend publication of GOOSE messages if any quality attribute fails. Therefore, receipt of the message indicates that all quality attributes are normal. Do not include quality bit strings in published GOOSE messages unless some other type of IED requires this.
- Make GOOSE publications as small as possible. Include in the GOOSE publication only the information subscribing relays require.
- Give higher VLAN priority tags to more important GOOSE. This allows the network to preferentially forward those GOOSE to the subscribers, and it also gives a subscribing RTAC an indication that the more important GOOSE should be decoded before lower priority GOOSE.

## GOOSE Subscription (Receive) Processing

The RTAC supports as many as 150 GOOSE subscriptions. GOOSE messages that arrive at the relay are subjected to the following processing steps.

### NOTE

The Sync\_Automation\_To\_GOOSE\_RX System Tag, when True, immediately schedules execution of the automation task upon receipt of a subscribed GOOSE message with a changed stNum value. To enable this setting, the project must contain an EtherCAT I/O network, located in the automation task.

### Filter

The RTAC inspects each message for the proper multicast MAC address and GOOSE App ID. If those parameters match values the RTAC expects for one of the GOOSE subscriptions, then the RTAC passes the message on to the next level of processing. Otherwise, the RTAC discards the message. Each message on the LAN must have a unique combination of multicast MAC address and GOOSE App ID.

### Buffer

The RTAC retains the most recent arrival for each of as many as 150 subscriptions. If a subsequent GOOSE arrives for a subscription that already has a buffered message, then the RTAC discards the earlier arrival.

### Header Decoding

Each message contains a header that indicates the status of the message. The RTAC ignores the remainder of the message if any of four indicators in the message header is true:

### Configuration Mismatch

The configuration number of the incoming GOOSE changes.

### Needs Commissioning

This Boolean parameter of the incoming GOOSE message is true.

### Test Mode

This Boolean parameter of the incoming GOOSE message is true.

### State Number

This parameter is the same as the last time the message was decoded. State number increments when the contents of the message change, so if the state number is unchanged, there is no reason to decode the rest of the message.

The RTAC decodes and processes a message for which header decoding indicates message validity.

## GOOSE Simulation Mode

In firmware versions R151-V0 and later, simulation mode (as described by the IEC 61850 standard) for GOOSE is available.

### Turning Simulation Mode On and Off

Simulation mode is managed via the data object CFG.LPHD.Sim in the RTAC data model. Any other LPHD.Sim data object in the RTAC's data model will not turn simulation mode on or off. If CFG.LPHD.Sim is not included in the data model, Simulation mode is effectively always turned off or disabled.

Simulation mode can be managed either through the MMS server interface or through the logic engine. Access from the logic engine allows for the RTAC's HMI or another protocol connection to pass information into the logic engine to manage the state of Simulation mode. The CFG.LPHD.Sim object can be either an SPC or SPS data type. Configuring the data type of CFG.LPHD.Sim to be of type SPS restricts control of Simulation mode to only the logic engine, although its status can still be read via the MMS server interface. Configuring CFG.LPHD.Sim as an SPC allows control from either the MMS server interface or the logic engine. By default, CFG.LPHD.Sim is configured as an SPC with a control model of direct enhanced security.

### Simulation Mode Processing

The RTAC will treat a GOOSE message as simulated when either the simulation bit is set in the GOOSE header or in the GOOSE PDU. Transitioning between simulated and non-simulated messages when CFG.LPHD.Sim is either TRUE or FALSE will cause the POU pin New\_Data to assert for a single processing cycle. POU pin Sequence\_Error will not assert during a transition between simulated and non-simulated messages. POU pin SimSt reflects whether the GOOSE message is currently processing simulated or non-simulated messages. LGOS (Logical Node for GOOSE Subscription) statistics are updated based upon the current message type that is currently being processed.

When CFG.LPHD.Sim transitions to TRUE, all non-simulated GOOSE message processing will continue unchanged until that GOOSE receive instance receives a simulated GOOSE message. At that point and while CFG.LPHD.Sim remains TRUE, that GOOSE receive instance will only process simulated messages.

When CFG.LPHD.Sim transitions to FALSE, all processing of simulated goosse messages stops. The descriptions below help provide examples of this behavior in various states of GOOSE message communication status.

When CFG.LPHD.Sim transitions to TRUE, the following processing occurs in the four possible situations that may exist when the transition occurs:

- **Receiving Goose messages simultaneously with and without the simulation bits set.** The POU pins will have the following behavior: the Offline bit will remain deasserted, new\_data will assert for a single processing cycle, and SimSt will assert. The logic engine will populate

with data from the simulated GOOSE message. If the time to live expires for the simulated GOOSE message, Offline will assert, SimSt will remain asserted, and the non-simulated messages that are being received will not be processed until CFG.LPHD.Sim deasserts.

- **Receiving only non-simulated GOOSE messages.** The POU pins will have the following behavior: both the Offline bit and SimSt will remain deasserted. Logic engine tags will continue to update from the non-simulated GOOSE message data. Normal processing of the GOOSE message will occur (i.e., time to live expiration and receipt of new GOOSE messages will deassert and assert the Offline bit) until a message with a simulation bit is set. After that point, while CFG.LPHD.Sim is TRUE, the GOOSE receive instance will only process simulated GOOSE messages until CFG.LPHD.Sim becomes FALSE.
- **Receiving only simulated GOOSE messages.** The POU pins will have the following behavior: the Offline bit will transition from TRUE to FALSE, new\_data will assert for a processing cycle, and SimSt will transition to TRUE. Logic engine tags will update with data from the simulated GOOSE message. While CFG.LPHD.Sim is TRUE, only simulated messages will be processed.
- **Receiving no GOOSE messages.** The POU pins will have the following behavior: the Offline bit will remain TRUE. If non-simulated GOOSE messages are received, they will be processed until a simulated GOOSE message is received. From that time until CFG.LPHD.Sim is FALSE, only simulated GOOSE messages will be processed.

## LGOS Statistics

In firmware version R151 and later projects, LGOS logical nodes are automatically added to the MMS server data model in the CFG logical device when the CID class file version is 8 or later when using ACCELERATOR Architect.

GOOSE receive message statistics in the LGOS nodes are updated at the main task cycle rate regardless of whether the GOOSE receive message is processed in the main or automation thread. The data objects in the LGOS logical node are updated with the same information from the POU pins on each GOOSE receive message. See *GOOSE Receive POU Pins on page 415* for additional information on the data objects. POU pins are named similarly to the LGOS data objects.

The validity of all LGOS data objects is driven by the ENO POU pin on the corresponding GOOSE receive message. If ENO is TRUE, validity of the data objects in LGOS will be Good. If ENO is FALSE, validity of the data objects in LGOS will be Invalid.

## GOOSE Receive POU Pins

| Pin Name                         | Pin Type      | Description   | Default            |
|----------------------------------|---------------|---|--------------------|
| EN                               | Input BOOL    | If FALSE, the GOOSE_RX function block will not perform any GOOSE processing and will not process any changes to other input or output pins. Any received GOOSE messages will be discarded.  | TRUE               |
| Disable_Tag_Updates              | Input BOOL    | When TRUE, tags associated with the GOOSE message will not update with information from received GOOSE messages   | FALSE              |
| Reset_Statistics                 | Input BOOL    |   | FALSE              |
| ENO                              | Output BOOL   | When TRUE, the received GOOSE message is processed. When FALSE, the received GOOSE message is discarded.  | FALSE              |
| Offline                          | Output BOOL   | When TRUE, indicates that the time to live has expired without receipt of the configured GOOSE message. When FALSE, indicates the configured GOOSE message is received and processed.   | FALSE              |
| goebRef                          | Output STRING | The ObjectReference to the GOOSE control box that this GOOSE message is associated with. Populated from the SCL configuration.  | Populated from SCL |
| goID                             | Output STRING | Displays the received goID in the received GOOSE message  | Populated from SCL |
| datSet                           | Output STRING | Displays the configured data set in the GOOSE control block. Populated from the SCL configuration.  | Populated from SCL |
| confRev                          | Output UDINT  | Displays the configuration revision from the GOOSE control block. Populated from the SCL configuration.   | Populated from SCL |
| RxConfRevNum                     | Output UDINT  | Displays the confRev value from the received GOOSE message  | 0                  |
| Dest_MAC_Address                 | Output STRING | Displays the destination MAC address from the GOOSE control block. Populated from the SCL configuration.  | Populated from SCL |
| VLAN_Priority                    | Output STRING | Displays the VLAN priority from the GOOSE control block. Populated from the SCL configuration.  | Populated from SCL |
| VLAN_ID                          | Output STRING | Displays the VLAN id from the GOOSE control block. Populated from the SCL configuration.  | Populated from SCL |
| APPID                            | Output STRING | Displays the APPID from the GOOSE control block. Populated from the SCL configuration.  | Populated from SCL |
| Bad_Configuration                | Output BOOL   | When TRUE, indicates a configuration or settings problem. Received GOOSE messages will not be decoded when this pin is TRUE.  | FALSE              |
| Config_Mismatch                  | Output BOOL   | When TRUE, indicates that the GoID, DataSet, ConfRev, or number of dataset entries does not match between the SCL configuration and the received GOOSE message. Tags associated with the GOOSE message do not update when this pin is TRUE. | FALSE              |
| timeAllowedtoLive_Exceeded_Count | Output UDINT  | Counts the number of times the timeAllowedtoLive timer expired without receipt of a GOOSE message   | 0                  |

| Pin Name           | Pin Type     | Description  | Default |
|--------------------|--------------|--|---------|
| ASN_Decode_Failure | Output BOOL  | When TRUE, the last received GOOSE message encountered an ASN.1 decoding error. This pin will remain asserted until a GOOSE message is successfully decoded without error.   | FALSE   |
| Sequence_Error     | Output BOOL  | This pin will be asserted for a single processing cycle when any of the following conditions occur:<br>► The value of stNum incremented more than once.<br>► The value of stNum incremented by one, but sqNum > 0.<br>► The value of stNum is unchanged, but sqNum incremented more than once. | FALSE   |
| New_Data           | Output BOOL  | Asserts for a single processing cycle when stNum in the received GOOSE message has changed, or when a switch between non-simulated and simulated GOOSE processing has occurred   | FALSE   |
| timeAllowedtoLive  | Output TIME  | The time allowed to live from the last GOOSE message received  | T#0s    |
| stNum              | Output UDINT | The state number from the last GOOSE message received  | 0       |
| sqNum              | Output UDINT | The sequence number from the last GOOSE message received   | 0       |
| OosCnt             | Output UDINT | The number of messages received where stNum or sqNum was not the expected value. Typically a running count of the number of sequence error pin assertions.   | 0       |
| MsgLosCnt          | Output UDINT | Accumulation of the estimated number of messages lost due to out-of-sequence errors. Increments by the number of missed state number changes plus the number of missed sequence numbers.   | 0       |
| MaxLosCnt          | Output UDINT | Maximum number of estimated Messages lost due to a single out-of-sequence error  | 0       |
| test               | Output UDINT | The status of test/simulation bit from the last received GOOSE message   | 0       |
| ndsCom             | Output BOOL  | The Needs Commissioning bit from the last received GOOSE message   | FALSE   |
| SubSt              | Output BOOL  | TRUE if subscription is receiving messages and TTL has not expired; FALSE otherwise  | FALSE   |
| SimSt              | Output BOOL  | Simulation status of the subscription. TRUE when Simulation mode is enabled and a GOOSE message is received with the Simulation bit set; FALSE otherwise.  | FALSE   |
| ErrSt              | Output ENUM  | 0: ok<br>1: device_disabled<br>2: confrev_mismatch<br>3: needs_commissioning<br>4: message_corrupted<br>5: ttl_expired<br>6: out_of_sequence   | 1       |
| DecErrCnt          | Output UDINT | Count of messages that were decoded sufficiently enough to be associated with the subscription, but which failed subsequent decoding   | 0       |

| Pin Name | Pin Type    | Description   | Default |
|----------|-------------|---|---------|
| TotDwnTm | Output REAL | The time for which ErrSt has been greater than a value of 2 (device_disabled). Accuracy of this time is dependent upon configured main task cycle time. | 0.0     |
| MaxDwnTm | Output REAL | Maximum number of seconds that the subscription has been in an error state (i.e., the maximum value of TotDwnTm)  | 0.0     |

## GOOSE Publication (Transmit) Processing

The RTAC supports as many as 150 GOOSE publications. Each publication can contain data from any logical node in the RTAC. The RTAC processes GOOSE at the rate of the task cycle time. GOOSE can run as part of the Automation Task or as part of the Main Task. An RTAC project that contains a mixture of protocols or large configurations may require more processing time for GOOSE processing than a project dedicated to GOOSE messaging.

### Transmit Interval

The retransmit interval of GOOSE messages in the RTAC is based on the two settings min time and max time, which you configure in the CID file in the ACSELERATOR Architect project. If these settings are not a multiple of the task cycle time in which GOOSE is assigned, the RTAC will use a multiple of the task cycle time that is closest to the actual min time and max time values from the CID file.

When the RTAC detects a data change of one or more GOOSE tags, it will transmit the change in a GOOSE message. Following an interval of min time, the RTAC retransmits the previous GOOSE message. The sequence number of each retransmitted message is incremented to indicate it is not an original message resulting from a data change. The RTAC then waits double the length of min time ( $2 \cdot \text{min time}$ ), increments the sequence number, and retransmits the same message. The RTAC continues to double the last retransmit interval, increment the sequence number, and retransmit the message. When the transmit interval exceeds max time, the RTAC uses max time as the retransmit interval for subsequent retransmits until the RTAC detects another data change.

## Ethernet Port Setting for GOOSE Messages

In RTAC firmware versions R150-V0 and later, the RTAC supports individual GOOSE messages configured on different Ethernet interfaces. The following subsections explain which Ethernet ports in the RTAC support IEC 61850 GOOSE, how to configure GOOSE messages on different Ethernet ports, and how different configurations affect performance.

### Supported Ethernet Ports

*Table 2.81* lists the RTAC devices and the Ethernet ports that support GOOSE. (Note that IEC 61850 GOOSE is not supported on ETH F on any devices that have a front panel Ethernet port ).

**Table 2.81 GOOSE Ethernet Ports on RTAC Devices**


| Device               | Ethernet Ports That Support GOOSE  |
|----------------------|--|
| SEL-3505, SEL-3505-3 | ETH 1, ETH 2   |
| SEL-2241 (Axion)     | ETH 1, ETH 2   |
| SEL-3530, SEL-3530-4 | ETH 1, ETH 2   |
| SEL-3354             | ETH 1, ETH 2   |
| SEL-3350             | ETH 1–ETH 4  |
| SEL-3555             | ETH 1 and ETH 2 (standard); ETH 3–ETH 10 available with additional PCI cards |
| SEL-3560S            | ETH 1, ETH 2   |
| SEL-3560E            | ETH 1 and ETH 2 (standard); ETH 3–ETH 6 available with additional PCI card   |

While the RTAC does require a license to publish or subscribe to GOOSE messages, no additional licensing is required to use any available Ethernet ports for GOOSE Transmit or GOOSE Receive messages.

## Configuration of GOOSE Messages on Multiple Ethernet Ports

The process of configuring GOOSE on multiple interfaces is performed in ACSELERATOR RTAC. The process of configuring GOOSE messages in ACSELERATOR Architect is the same regardless of whether the user intends to configure GOOSE messages on multiple Ethernet ports. Substation Configuration Language (SCL) allows a GOOSE message to define an association with a physical port. If the imported Substation Configuration Description (SCD) file contains such information, the GOOSE message will use a specific port as the initial value for the Ethernet port associated with that GOOSE message. Additionally, there are no settings on the RTAC web interface associated with GOOSE messages.

After the IEC 61850 configuration has been set in the RTAC project, the GOOSE Transmit and GOOSE Receive messages each have a setting for **Ethernet Port**, as shown in *Figure 2.179*. The drop-down is populated with the list of Ethernet ports that are available to receive or transmit GOOSE messages. Each GOOSE message Ethernet port setting only supports one Ethernet interface—it is not possible to process the same GOOSE message on multiple Ethernet ports. The port on which the GOOSE message is processed cannot be dynamically changed in IEC 61131-3 logic. Note that setting the Ethernet port in the ACSELERATOR RTAC project overrides any Ethernet port assignments that were made in the SCL software.

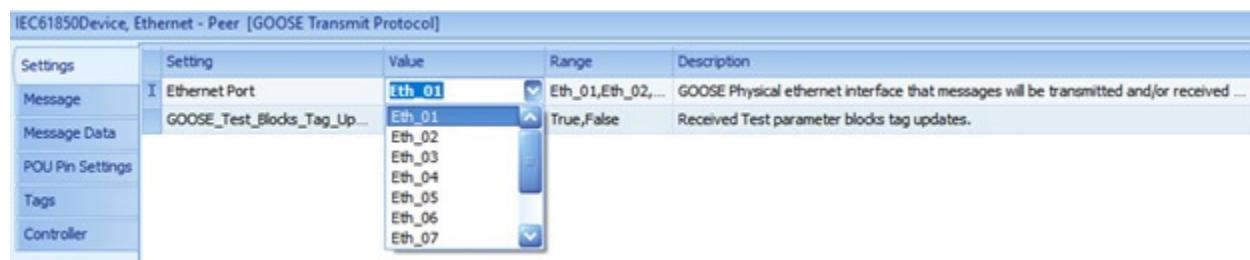**Figure 2.179 GOOSE Message Ethernet Port Setting**

There is no limitation on the number of GOOSE messages on an Ethernet interface. Additionally, in ACCELERATOR RTAC projects with firmware versions R150-V0 and later, the Ethernet port setting in systemTags (which previously configured all GOOSE messages) is no longer present (i.e., GOOSE messages are no longer automatically set to the same Ethernet port when saving).

There are no restrictions with any combination of GOOSE messages operating in either the Main task or the Automation task on any Ethernet interface.

Configuring GOOSE messages on different Ethernet interfaces can be done alongside port configuration such as port bonding, bridging, and Parallel Redundancy Protocol (PRP). The port configuration for bridging/bonding/PRP is performed in the RTAC web interface (see *Section 7: Security and Account Management*). When configuring GOOSE on multiple interfaces and changing the port configuration, consider the following:

- ▶ **Bridging:** Any GOOSE receive message that is configured on an Ethernet interface which is a part of a bridge can be received and passed to the logic engine on any other Ethernet interfaces in the bridge. Similarly, Any GOOSE transmit message that is configured on a bridged Ethernet port will be published on both bridged ports.
- ▶ **Bonding:** GOOSE transmit and receive messages that are configured on any ports associated with a bonded configuration are processed on the active port of the bond.
- ▶ **PRP:** Parallel Redundancy Protocol can be enabled on the Ethernet ports of the RTAC from the web interface (detailed in *Section 7: Security and Account Management*). Any GOOSE transmit messages that are configured on Ethernet ports which are part of a PRP configuration will be published on both Ethernet ports. GOOSE receive messages configured on any interface associated with a PRP configuration can be received and processed on any port that is associated with that PRP configuration.

## Performance

When configuring GOOSE transmit and GOOSE receive messages to Ethernet ports, there is no noticeable performance difference in a project that uses a single Ethernet port for all GOOSE messages compared to the same project that spreads the GOOSE messages over multiple Ethernet ports. However, when GOOSE transmit and receive messages are segregated to different Ethernet ports (for example, all transmit messages on Port 1 and all receive messages on Port 2), there may be a reduction in CPU usage and task cycle time. Depending on the configuration and amount of data processed, the average reduction is between 5 and 10 percent.

The maximum size, or GOOSE Capacity, of a configured GOOSE dataset remains the same whether the GOOSE messages are configured on different Ethernet ports or a single Ethernet port.

## MMS Client and GOOSE Overview

Many IEC 61850 settings, including subscriptions to incoming GOOSE messages, are configured with ACCELERATOR Architect.

## Architect

Architect enables protection and integration engineers to design and commission IEC 61850 substations containing SEL IEDs.

Engineers can use Architect to do the following:

- ▶ Organize and configure all SEL IEDs in a substation project.
- ▶ Configure incoming and outgoing GOOSE messages.
- ▶ Edit and create DataSets for GOOSE or MMS.
- ▶ Edit and create MMS client DataSet and report polling configurations.
- ▶ Configure MMS server sessions as anonymous (reply to any MMS client poll) or specific by identifying as many as 10 MMS client IP addresses.
- ▶ Configure the MMS server model to include logical devices and logical nodes, which are placeholders for tags that you will later map to actual tags in the RTAC project.
- ▶ Read non-SEL IED Capability Description (ICD) and Configured IED Description (CID) files and determine the available IEC 61850 messaging options.
- ▶ Use or edit preconfigured DataSets for reports.
- ▶ Load IEC 61850 CID files into SEL IEDs.
- ▶ Generate SCD or SELPRJ configuration files for import into ACCELERATOR RTAC.
- ▶ Generate ICD files that will provide SEL IED descriptions to other manufacturers tools so they can use SEL GOOSE messages and reporting features.

Architect provides a graphical user interface (GUI) for engineers to select, edit, and create IEC 61850 GOOSE messages important for substation protection, coordination, and control schemes. The engineer can also select, edit and create IEC 61850 MMS client polling definitions as well as DataSets and reports for IEC 61850 MMS server for the RTAC. Typically, you first drag icons representing IEDs from the IED Palette to a substation container (in the Project Editor window), then edit the outgoing GOOSE messages or create new ones for each IED. You can also select incoming GOOSE messages for the RTAC to receive from any other IEDs in the domain. Architect has the capability to read other manufacturers ICD and CID files, enabling you to map the data seamlessly into SEL IED logic. See the Architect online help for more information.

### NOTE


Some non-SEL ICD and CID files may contain IED definitions where an IED name is configured the same as a logical device name. This is not supported in the RTAC.

## MMS Client and GOOSE Configuration

Use Architect to configure all GOOSE transmit and receive messages, as well as to define MMS client inputs for connected devices.

- Step 1. Open a new project in Architect by selecting **New Project** in the Project Editor pane.
- Step 2. Drag an SEL\_RTAC IED icon from the IED Palette onto the Project Editor. This is the RTAC you are configuring for IEC 61850 messaging.


- Step 3. Drag the icons for the IEDs that will communicate to the RTAC from the IED Palette onto the Project Editor pane. You can import non-SEL ICD files into the **IED Palette** by right-clicking in the IED Palette pane and selecting **Import ICD**.
- Step 4. Create new and edit existing DataSets. Remember that tags in the RTAC DataSets are placeholders for tag types. You can map project tags later in ACSELERATOR RTAC.
- Step 5. Configure GOOSE Receive and GOOSE Transmit messages, if applicable.
- Step 6. For MMS client configuration, click the **Client Inputs** tab. The Project Editor pane will display all DataSets and reports available from the IEDs. From the **Source** window, select the DataSets and reports you want the RTAC to gather from the IEDs and move these to the **Inputs** window tab. See *Figure 2.180*.

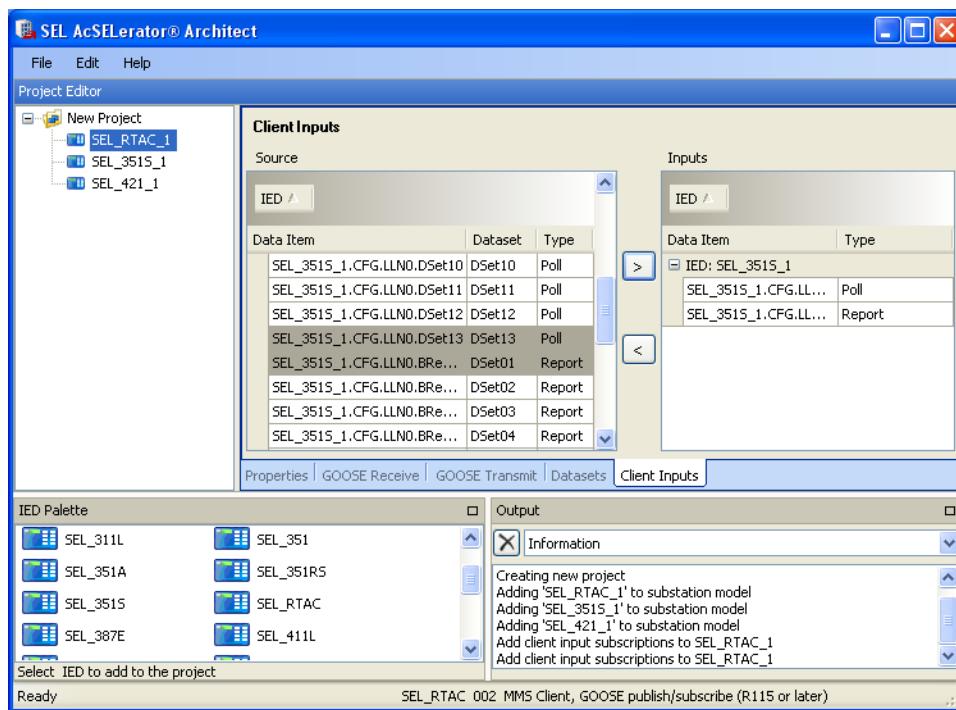

**Figure 2.180 Configure IEC 61850 Messages**


- Step 7. Save the project.
- Step 8. In ACSELERATOR RTAC, select **SET IEC 61850 Configuration** from the **Insert** ribbon and browse to the selapprj project file (see *Figure 2.181*).
- Step 9. Select the file and click **Open**.

Data tags from the Architect project are now available in the RTAC project for mapping, manipulation, etc.

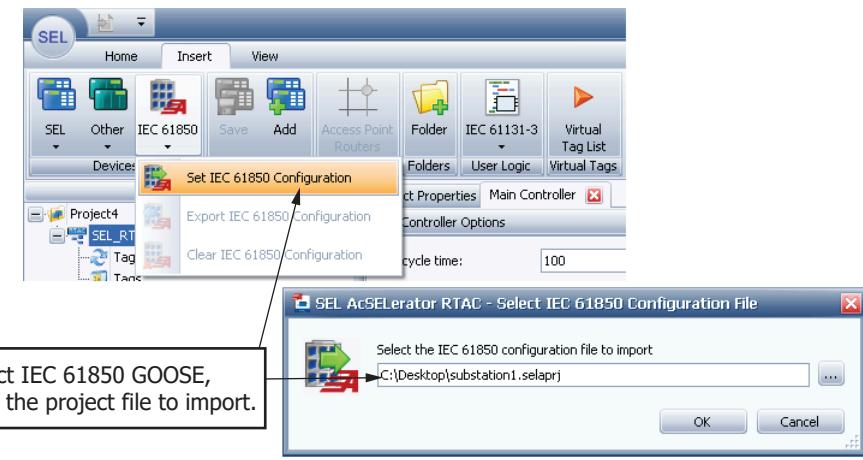


**Figure 2.181 Insert GOOSE Configuration**

Step 10. Configure which Ethernet interface the RTAC uses for GOOSE messaging by clicking on **SystemTags** under the device tree. Under settings, configure Ethernet\_Port to use Eth\_01 or Eth\_02.

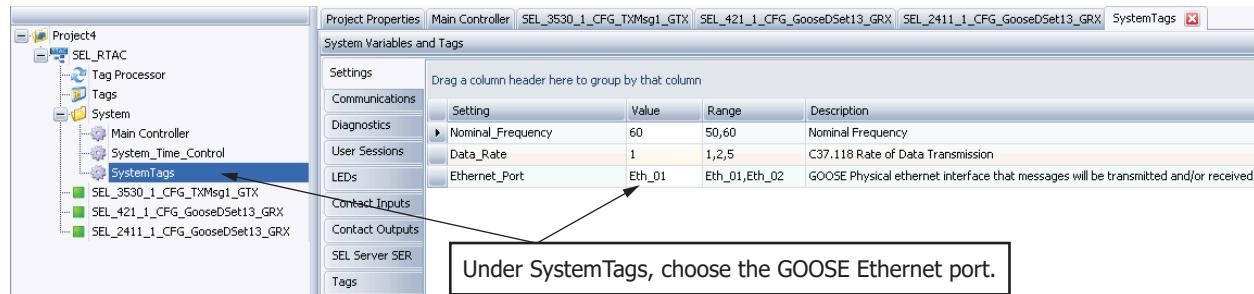

**Figure 2.182 Configured GOOSE Ethernet**

Because all IEC 61850 message configuration is done in Architect, you cannot make modifications to the message configuration in ACSELERATOR RTAC. Table 2.82 describes the only configurable IEC 61850-related parameters in ACSELERATOR RTAC. Also, because the IEC 61850 configuration file contains all information necessary for the IEC 61850 communications network, ACSELERATOR RTAC allows only one Architect IEC 61850 configuration file per RTAC project. Figure 2.183 shows how one IEC 61850 project file contains the configuration for all IEC 61850 devices on this RTAC.

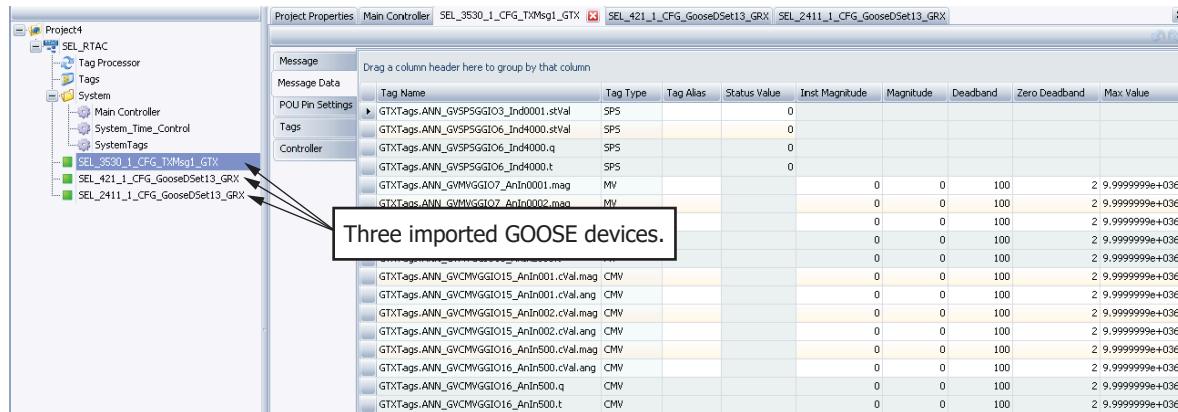**Figure 2.183 Configured GOOSE Devices****Table 2.82 Configurable GOOSE Parameters**

| Configurable Parameter          | Description   |
|---------------------------------|---|
| Initial Status Value            | Initial value for SPS or INS data types               |
| Initial Measure Value           | Initial Value for MV or CMV data types                |
| Alias                           | Alias tag name  |
| Ethernet_Port Under System Tags | Which Ethernet interface RTAC uses for GOOSE messages |

Table 2.83 and Table 2.84 show the maximum number of points possible in a single RX or TX GOOSE message. See Table 2.85.

**Table 2.83 Simple Typed Global Tags Per RX or TX Message**

| IEC 61850 Data Type | IEC 61131-3 Data Type | Maximum Point Count Per Message |
|---------------------|-----------------------|---------------------------------|
| BOOLEAN             | BOOL                  | 468                             |
| FLOAT32             | REAL                  | 234                             |
| INT32               | DINT                  | 200                             |
| Timestamp           | timeStamp_t           | 140                             |
| Quality             | quality_t             | 351                             |

**Table 2.84 Aggregate Typed Global Tags Per RX or TX Message**

| IEC 61850 CDC Data Type | Data Included        | Maximum Point Count Per Message |
|-------------------------|----------------------|---------------------------------|
| SPS                     | stVal, q, t          | 82                              |
| SPC                     | stVal, q, t          | 82                              |
| MV                      | mag, q, t            | 70                              |
| INS                     | stVal, q, t          | 66                              |
| BCR                     | actVal->INT128, q, t | 42                              |
| Timestamp               | timeStamp_t          | 140                             |
| Quality                 | quality_t            | 351                             |

## MMS Client File Services and Generic File Services

Configuration of MMS Client File collection occurs in ACCELERATOR RTAC on the Settings tab of an MMS Client device. MMS Client Generic file collection is configured in the **Settings** and **Generic File Collections** tab. MMS Client file collection supports collection of COMTRADE files from any IEC 61850 MMS server, edition 1 or edition 2. MMS Client Generic file collection is used to collect files from MMS Server devices that support generic file services.

### COMTRADE Collection

When the **MMS Comtrade Enable** setting is set to True, the client will use the timing specified by the **MMS File Services Period** setting to query the MMS server's file system to find any directories named COMTRADE. The RTAC MMS client then collects all COMTRADE event files in that directory. This includes any potential COMTRADE events in directories inside the COMTRADE folder. The RTAC collects the COMTRADE files regardless of whether an event is compressed or separated into individual files on the server. Supported file formats for COMTRADE collection include:

- ▶ CFG, DAT files (minimum collection criteria)
- ▶ CFG, DAT, HDR files
- ▶ CFG, DAT, INF files
- ▶ CFG, DAT, HDR, INF files
- ▶ ZIP file (compressed records)
- ▶ CFF file (unified records)

Once the RTAC collects the files from the server, it stores the files on the RTAC file system as a ZIP file regardless of the original storage format of the COMTRADE files. All collected events are stored in the following location: */COMTRADE/[IED name]/[directory structure in server's COMTRADE folder]/[event name on server].zip*.

For an example of file naming and location, see the following:

- ▶ **IED Name**  
SEL\_421
- ▶ **Event Location on Server**  
*/COMTRADE/DKR\_A/EVENT\_00021.zip*
- ▶ **Stored Event Location on RTAC**  
*/EVENTS/COMTRADE/SEL\_421\_1/BKR\_A/EVENT\_0021.zip*

The time necessary to collect event files from a server is dependent on the capability of the server. Edition 2 servers typically support the directory listing *"/\*\*"*, which returns a list of all files on the server in a single response. Using this response, the MMS client efficiently finds the new COMTRADE files to collect. If the server does not support this capability, the RTAC searches the server's file system one directory at a time. This may require many file directory polls to find all possible COMTRADE files and can result in additional time for the MMS client to find and collect all COMTRADE files. An MMS server may also return a directory listing that only lists items in the root directory and no other files in subdirectories. In this case, the MMS client will attempt to open each item listed in the root directory to determine if the listing is a directory that may or may not have been formatted correctly in the return listing. This can

cause the appearance of the MMS client attempting to collect files for which it is not configured to do so. In practice, the MMS client is checking all returned listing locations as subdirectories which may contain additional files the client is configured to collect.

## Generic File Collection

MMS Generic File Collection provides a way for the RTAC to collect non-COMTRADE files from devices that support MMS file server. There is no restriction on the file types that can be collected. The files that are collected using Generic File Services are stored in the RTAC's file system at /FILES/MMS\_Generic\_File\_Collection/. These files are viewable on the RTAC web interface under the **File Manager** page. The files can also be deleted, downloaded, or renamed from this page. Deleting or renaming the file will do so in the MMS client RTAC file system but not in the file system of the remote MMS server device.

Generic File Collection configuration in the RTAC is done using ACCELERATOR RTAC via an IEC 61850 MMS client imported from ACCELERATOR Architect or some other SCL software. In the Settings tab of the MMS client, the **IP Address** should be set. The **Generic File Collection** tab is used to configure a file path for which the MMS client will query the server and collect files in the designated **Allowed Path**. The Allowed Path setting is case-sensitive. If the path name in the MMS client setting does not exactly match the name in the MMS server file system, including casing, the client will not collect any files. If the **Recurse** setting is enabled, the MMS client will collect files in the Allowed Path directory and its subdirectories. The RTAC will match the directory structure and file location on the RTAC's local file system. When Recurse is disabled, only files within the Allowed Path will be collected.

ACCELERATOR RTAC allows for a maximum of 500 file paths per MMS client device that can be configured for file collection. The collection of generic files is done at timed intervals based on the **MMS FileServices Period** setting. When **MMS\_Generic\_FileServices\_Enabled** is set to TRUE, a timer will count up until this period is reached, at which point the files will be initially collected. The MMS client collects files once and records the name and time stamps. The next time the MMS client performs a query of the MMS server's directory listing, the file names that were collected during a previous MMS poll are ignored. By setting the **MMS File Re-collection** parameter (available on the Settings tab when the Advanced check box is selected) to TRUE, the MMS client will compare file names and time stamp values. If a file is collected that has the same name as one previously collected, but a different time stamp, the MMS Client will re-collect the file. The MMS File Re-collection settings parameter also applies to COMTRADE file collection, as detailed in *COMTRADE Collection on page 424*.

For generic files that have been collected by the RTAC, the directory path will have the following structure in the RTAC's file system:

**FILES/MMS\_Generic\_File\_Collection/**<name of IED as defined in SCL file>/<name of directory where the file is stored in MMS server device>

When accessing these files via the RTAC's web interface, they are found in the File Manager with the following structure:

**MMS\_Generic\_File\_Collection/**<name of IED as defined in SCL file>/<name of directory where the file is stored in MMS server device>

Generic file collection can occur simultaneously with COMTRADE file collection. The two file collection services share the **MMS FileServices Period** configuration settings and both add to the cumulative total represented in the **MMS\_File\_Count** statistic. A change in the MMS\_File\_Count indicates that new files were found on the MMS server device and were collected by the RTAC. If COMTRADE records are found in a path configured for generic file collection, those COMTRADE records are ignored and not retrieved by the generic file collection feature.

## Criteria for Collecting Files

The MMS client collects all configured files if the following criteria are met:

- ▶ The MMS protocol standard has a maximum file path of 255 characters; the file path cannot exceed 255 characters.
- ▶ The file path contains only printable ASCII characters.
- ▶ The file path does not contain "." or ".." as a directory or file name.

The MMS client keeps an internal record of the file names and server time stamps of all files (generic or COMTRADE records) that it has already collected, up to a count of 10,000 files. The next time the MMS client performs a query of the MMS server's directory listing, any previously collected file names that are listed are ignored. If an IED is replaced in the field, or its COMTRADE record content is cleared and new records are generated, it is possible that the file names of the new COMTRADE records may be duplicates of old records that the MMS client already retrieved. By default, the new records will not be collected due to their presence in the record of previously collected files. The **MMS File Re-collection** parameter (available on the Settings tab when the Advanced check box is selected) can be set to True to enable additional comparison of the file time stamps that are returned along with the file name when the directory listing is performed. If a previously collected file name is detected but the time stamp is different than the previously collected file, the file (generic or COMTRADE record) will be re-collected. Be cautious when using this setting value with non-SEL IEDs, which may update their file time stamps with every directory query. In such a case, the files will be continuously re-collected due to the changing time stamp.

When a file is collected and placed on the RTAC file system, the file's time stamp reflects the system time when the RTAC finished collecting the file. If a file name on the server changes case, the MMS client will neither rename nor attempt to again collect the file on the RTAC file system. If the RTAC collects a file from a server and that file is then deleted from the RTAC file system through either the web interface or another method, the RTAC will not collect that file again from the server.


The RTAC platform has several hardware variants with different memory capacity. The MMS client continues to collect files from servers until only 512 MB of free space on the RTAC file system remains. At this point, the MMS client ceases collection of additional files until additional free space on the file system is available.

# MMS Server

## MMS Server Configuration

Use ACSELERATOR Architect to also configure MMS server connections, DataSets, and reports for connected clients.


- Step 1. Open a new project in Architect by selecting **New Project** in the **Project Editor** pane.
- Step 2. Drag an SEL\_RTAC IED icon from the **IED Palette** onto the **Project Editor**. In the resulting **IED Properties** window, pick the entry that includes MMS Server.
- Note:** You can configure MMS client, GOOSE, and MMS server for this one RTAC IED in the **Project Editor**. Follow the instructions for MMS client and GOOSE messaging, if needed, before proceeding to *Step 3*.
- Step 3. Click the **Server Sessions** tab, then **Edit** or **New** to edit the existing default session or create as many as 10 sessions. Each session is a connection to a unique MMS client.
- Step 4. In the **Session (Edit)** window, select the **Anonymous connections allowed** check box to permit anonymous sessions, or clear the box and enter as many as 10 IP addresses of the client(s) with which the RTAC will communicate. The **Name** field (with a default of **Anonymous\_Server**) is the name that will appear in the ACSELERATOR RTAC project in the device tree. Click **OK** when finished.
- Step 5. Click on the **Server Model** tab, then click **Edit**. In the resulting edit window, you can create and modify MMS logical devices and logical nodes. The default logical device has two logical nodes, specifically **LLN0** and **LPHD0**. These cannot be modified.
- Step 6. Create a new logical device by clicking **Logical Devices +**. Notice that all logical devices have two non-editable logical nodes. Click **Logical Nodes +** to create a new editable logical node. You can also hover your cursor in the window for selectable tooltips. See *Figure 2.184*.

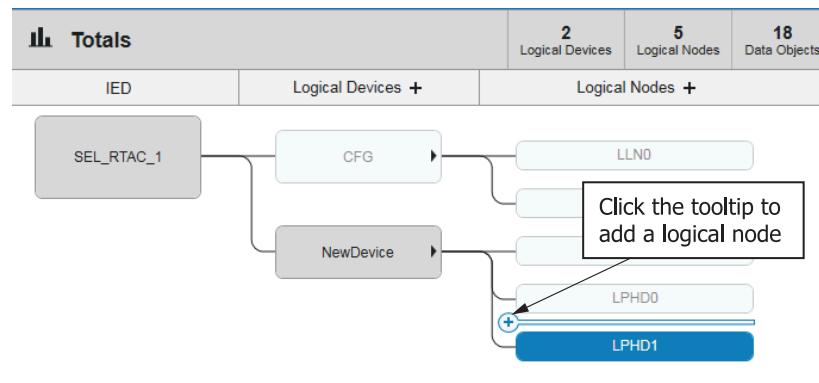

**Figure 2.184 Add a New Logical Node**

Step 7. Click the **Class** drop-down box to change the class of this logical node. For example, change it to a GGIO type. See *Figure 2.185*.

**Hint:** You can quickly find the class type by typing what you are looking for in the **Class** drop-down box.

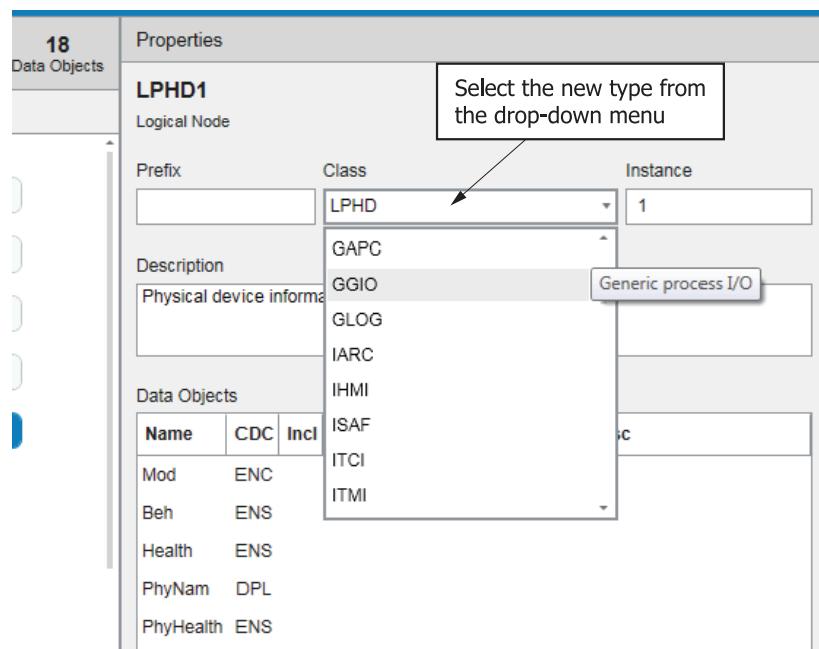

**Figure 2.185 Changing the Logical Node Type**

Step 8. Create data objects by selecting check boxes or increasing the quantity (Qty) of the objects listed. See *Figure 2.186*. When finished, click **OK**.

Properties

**GGIO1**  
Logical Node

|        |       |          |
|--------|-------|----------|
| Prefix | Class | Instance |
|        | GGIO  | 1        |

Description  
Generic process I/O

Data Objects

| Name     | CDC | Incl                                | Qty | Model                | Desc                         |
|----------|-----|-------------------------------------|-----|----------------------|------------------------------|
| Mod      | ENC |                                     |     |                      |                              |
| Beh      | ENS |                                     |     |                      | Enable the needed items      |
| Health   | ENS |                                     |     |                      |                              |
| EEHealth | ENS | <input checked="" type="checkbox"/> |     |                      | External equipment health    |
| LocKey   | SPS | <input type="checkbox"/>            |     |                      | Local or remote key          |
| Loc      | SPS | <input type="checkbox"/>            |     |                      | Local control behaviour      |
| IntIn    | INS |                                     | 0   |                      | General status input         |
| Alm      | SPS |                                     | 0   |                      | General single alarm         |
| Wrn      | SPS |                                     | 0   |                      | General single warning       |
| Ind      | SPS |                                     | 30  |                      | General indication           |
| AnIn     | MV  |                                     | 0   |                      | Analogue input               |
| AnOut    | APC |                                     | 0   | Direct Normal Secure | Controllable analogue output |
| CntRs    | BCR |                                     | 0   |                      | Counter, resettable          |

Figure 2.186 Creating Data Objects

Step 9. Click **Datasets** to create a new dataset or edit an existing dataset.  
Note the new logical device (named **NewDevice** by default) created in *Step 6* is available for mapping into a DataSet. See *Figure 2.187*.


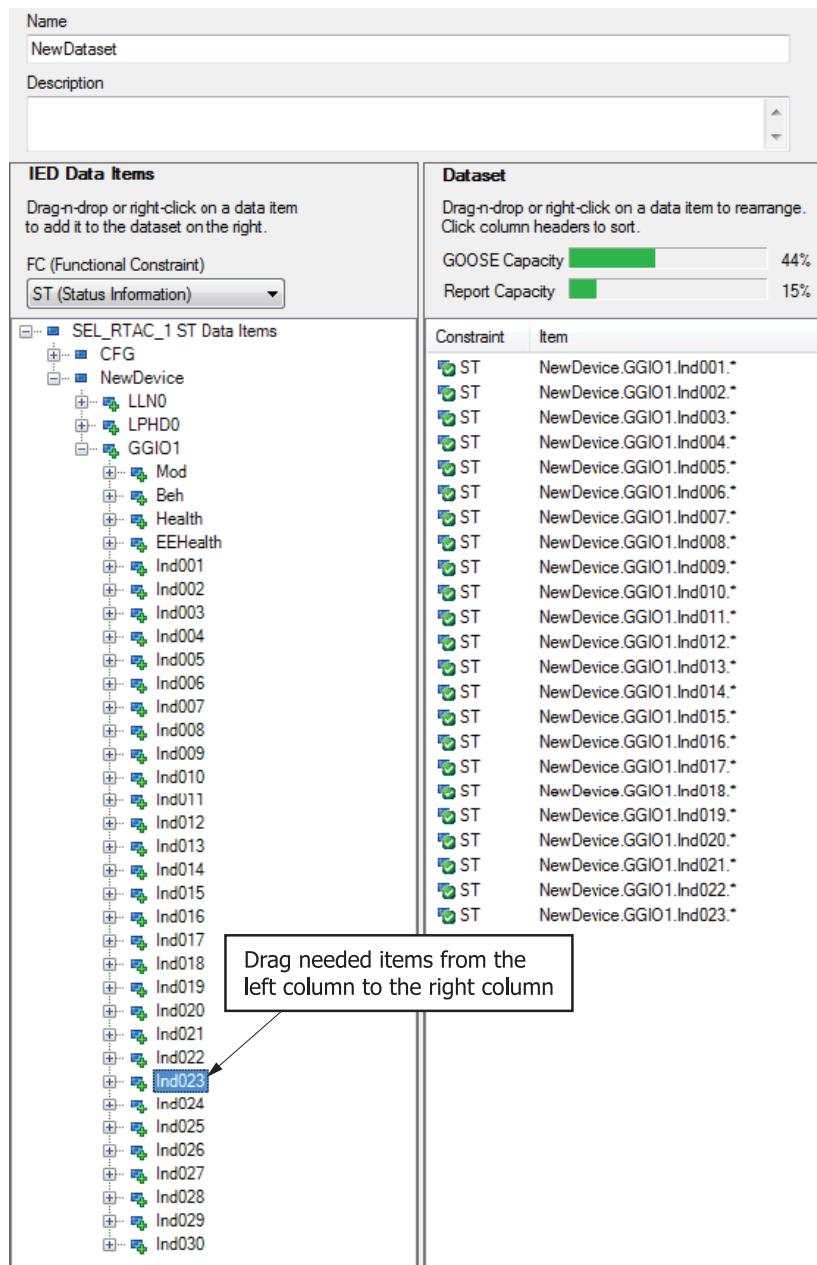


Figure 2.187 Create a Dataset

Step 10. Click on **Reports** and configure as needed. Configuration includes specifying if the report is buffered or unbuffered, which dataset to use, and other configurations related to triggers and buffer times. See *Figure 2.188* for options.

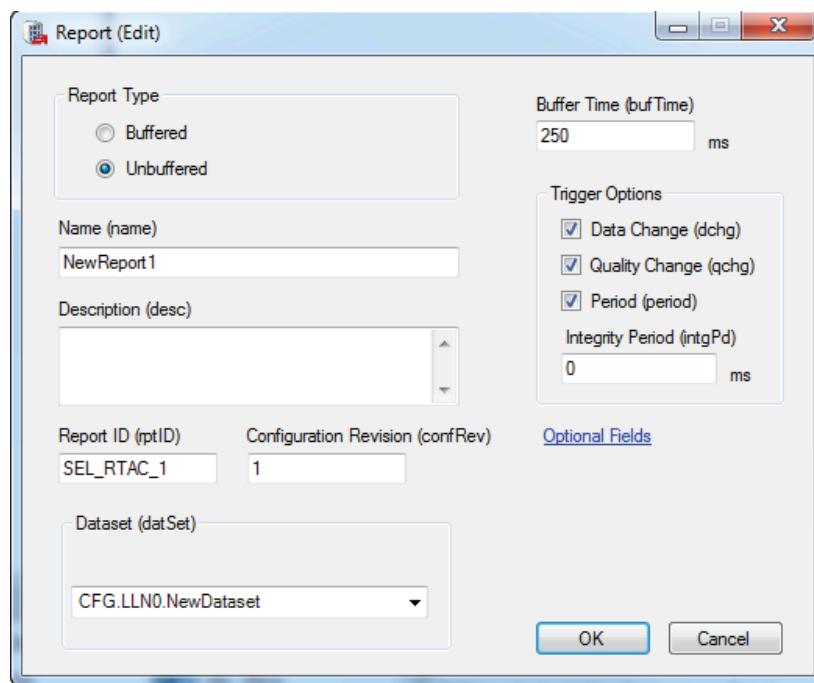

**Figure 2.188 Configure Reports**

Step 11. Save the project.

Step 12. In ACSELERATOR RTAC, select **SET IEC 61850 Configuration** from the **Insert** ribbon and browse to the **selapprj** project file (see *Figure 2.181*).

Step 13. Select the file and click **Open**.

Data tags from the Architect project are now available in the RTAC project for mapping, manipulation, etc.

Once the IEC 61850 configuration is set, there will be at least three new entries in the Device Tree.

1. **Anonymous\_Server\_850**: The default name for the server instance created in *Step 3*. There will be one of these for each of the instances created in *Step 3*. The only editable setting is allowance of anonymous connections; the IP addresses of the clients are editable if anonymous is not allowed. The POU pin settings indicate communications statistics for this one MMS server instance.
2. **SEL\_RTAC\_1**: The MMS server shared map, bearing the name of the IEC 61850 IED created in *Step 2*. SEL\_RTAC\_1 is the default name but may be changed in the Architect project. This shared map contains all the MMS server tags created in the Architect project. As with any server tags in an RTAC project, you can populate values in these tags by mapping them in the Tag Processor or in IEC 61131-3 logic.
3. **MMS\_Server**: The POU of the actual server. Unlike other server protocols in the RTAC, there is only one actual server for MMS, with sessions for each polling client. There will be, therefore, only one of these entries. The only setting is to enable authentication and define the

authentication string, which actions will apply to all MMS server sessions defined in the RTAC project. The POU pins provide the ability to disable the server, disable the server tag updates, and disable the server controls. All of these actions will apply to all MMS server sessions.

## Using MMS Server Tags

Some of the tags in the MMS server shared map are dedicated to use by the MMS server, but you can use the tags you created in Architect anywhere in the RTAC project as you would other IED tags. A unique feature to MMS server tags is that ACSELERATOR RTAC software can automatically move tags to different tasks if needed. To illustrate this feature, follow these steps:

- Step 1. Create an MMS server in Architect.
- Step 2. Insert that IEC 61850 configuration into an RTAC project and save the project.
- Step 3. Create a program in the RTAC project.
- Step 4. In that program, assign a value to one of the MMS server tags. For example: **SEL\_RTAC\_1.NewDevice.GGIO1.Loc.stVal := true;**
- Step 5. In the **Main Controller** tab, click the program name, then select **Automation** from the **Move To** drop-down menu. The task will now execute at the speed of the Automation task. Generally you cannot use tags from an Automation task in the Main task, but in this case, the software will move only that one tag from the MMS server shared map into the Automation task. Though it is now native to the Automation task, the MMS server (in the Main task) still can access it.

**Note:** Once this move has taken place, you can no longer access this tag outside of the Automation task.

To view which tasks have been automatically moved, click the **View** ribbon, then the **Task Tags** icon for a textual report.

## MMS Server Mode and Behavior (Firmware Versions R150-V0 and Later)

In firmware versions R150-V0 and later, the MMS server supports the behavior described in the IEC 61850-7-4—Annex A standard for processing data according to the mode and behavior tags associated with a logical node. When a configuration that contains an MMS server is converted to firmware version R150-V0 or later, it will automatically support mode and behavior functionality. Also note that all data objects related to mode and behavior functionality are required to have the following data types: Mod (ENC/ENS), Beh (ENS), and Health (ENS). If any of these data object names are not the correct data types, the configuration will not be imported into the software.

The processing of mode/behavior tags occurs at the logical node level. This means the RTAC will look at the mode data object in a logical node and the mode data object in LLN0 of the logical node's parent logical device to determine the behavior of that specific logical node. If the mode data object does not exist for a logical node, that node is assumed to be in the On state and processing will effectively follow the mode object of the parent logical device.

The value of any mode data object in the RTAC's data model can be managed either from the MMS server protocol interface or through the logic engine. This allows the RTAC's data model behavior to be managed via MMS, physical contact switches, the RTAC's web HMI, or another protocol service. Because processing of mode/behavior tags occurs at the logical node level in the RTAC and not at the IED level, there is no single data object that controls the mode/behavior of the entire device by default. If desired, user logic can be written to tie all logical device modes to a single mode object to create control of mode/behavior at the IED level.

The RTAC supports all modes described by the IEC 61850 standard and the associated behavior functionality with the single exception of the Off mode. In this mode, the RTAC complies with all described behavior in Annex A of IEC 61850-7-4 except the statement of "No process output will be done." When the mode is Off for a logical node, the MMS data model will still update the data objects with corresponding status values in the logic engine. The validity of all data objects in a logical node in the Off mode is forced to invalid excluding Mod, Beh, and Health data objects (if they are part of the data model). If a value outside of the enumerated values 1–5 is assigned to a mode object, the resulting behavior assignment will be set to On. The default value of all Mod objects in the data model is On.

Each Beh data object in the RTAC's data model will be calculated and updated automatically in the logic engine and in the MMS server protocol interface. The MMS Server protocol interface will process request and controls based upon the Beh object for each logical node. The Mod data object in the RTAC's logic engine is of type ENC, which consists of an oper and status structures. The Beh data object, which is of type ENS, is automatically updated by an internal function that takes the status value of the logical node Mod data object and logical device Mod data object to calculate the appropriate Beh value. When the MMS server Mode\_Mapping\_Disable POU pin is set to False, the status structure of the Mod data object is automatically updated from the oper structure of the Mod data object. When Mode\_Mapping\_Disable is set to True, the status structure of the Mod data object is no longer automatically updated from the oper structure of the Mod data object. This effectively disables the MMS protocol interface from managing mode tags. This allows for custom IEC 61131-3 logic that manages the Mod's status value to manage the Beh of a logical node. This pin allows for management of the behavior object such as mode lockout managed via a local HMI or physical switch instead of managing the mode of the logical node via an MMS protocol interface.

For the Test and Test/blocked modes, controls that are received with the test bit set will be passed into the logic engine with the test and/or operatorBlocked bits asserted. User logic can make decisions on what to do with controls that have these bits asserted to facilitate application behavior when the IEC 61850 data model is in Test or Test/blocked mode. It is important to note that when a control that has operatorBlocked asserted is mapped to another protocol control or a contact output, that process will not send a control via that protocol or operate the contact if the operatorBlocked bit is asserted. For contact I/O with the test bit asserted in the quality structure, the contact output will not operate when the test or operatorBlocked bit is set.

## MMS Server LTIM and LTMS (Firmware Versions R151-V0 and Later)

In firmware versions R151-V0 and later, the MMS server supports the LTIM and LTMS logical nodes described in the IEC 61850-7-4 specification for Time Management and Time Master Supervision, respectively. The configuration of these logical nodes in the RTAC is done in the RTAC CID and will be attributed to the CFG logical device. For this reason, the LTIM and LTMS logical nodes are permanent fixtures of the RTAC's server model and can pass local time and time synchronization functions of the RTAC to MMS client devices.

The LTIM logical node data objects are populated with values from the RTAC's System Time Controller and include daylight-saving time settings and indications of when the RTAC will transition to daylight-saving time or to standard time. The LTMS logical node data objects provide time synchronization information and can provide the remote device with specific details of the RTAC's time source. The LTMS logical node also provides date stamp data for when the RTAC transitions from one time synchronization source to another, which can occur when a higher-priority time source signal is lost or re-established.

## MMS Server File Services

Use the **Enable File Transfer** setting on the Settings tab of the MMS server device in your ACCELERATOR RTAC project to enable file services on the MMS server. When this value is True, the MMS server responds to file requests. When this value is False, the MMS server rejects file service requests.

The MMS server has the following files available:

- ▶ The CID file from the presently configured RTAC (named "SET\_61850.CID")
- ▶ All event files collected from SEL clients
- ▶ All files collected from MMS Clients
- ▶ All files collected from Modbus Clients
- ▶ All files generated by Axion I/O modules
- ▶ All files created or collected using the IEC 61131-3 file IO library

Note the following:

- ▶ The MMS protocol standard has a maximum file path of 255 characters. Any file on the RTAC file system whose file path name exceeds 255 characters will be unavailable through MMS file transfer.
- ▶ The MMS file server is case sensitive. An error message is returned for clients that issue file requests with incorrect casing.
- ▶ Any file request the MMS server receives that contains path constructs (e.g., /., /.., etc.) will generate an error.
- ▶ The MMS server supports the following wildcard characters:
  - ▶ \*—matches any character at its position
  - ▶ ?—matches zero or one character at its position
- ▶ A wildcard character cannot be the last character in a directory name. The server returns a file name-syntax error for such a situation.

## Local and Remote Processing (Firmware R150-V0 and Earlier)

When a Loc object in a logical node is set to TRUE, all controllable objects except for mode in that logical node will be rejected regardless of orcat processing.

## Local and Remote Processing (Firmware R151-V0 and Later)

Starting in firmware version R151-V0, the RTAC implements the local/remote concepts as described in the IEC 61850 standard if the RTAC's SCL contains either of the following conditions. (Class file definitions 8 and later will have these conditions by default.)

- ▶ The RTAC SCL contains a definition for a logical node to be at process, bay, or station level.
- ▶ The RTAC SCL contains an InRef link reference to another logical node with the Loc data object.

If the RTAC SCL does not contain either of these definitions, it will process the Loc data object as it did in firmware versions R150-V0 and earlier; i.e., if Loc.stVal is asserted, all controls except for the data object mode will be rejected.

The RTAC supports local/remote control at the logical device and the logical node. When a logical node or logical device is in local mode, it will consider the orcat value in acceptance of the control. The following table describes supported data objects for local/remote processing.

| Data Object | CDC | Description   |
|-------------|-----|---|
| Loc         | SPS | If true, the control behavior is allowed at the level of the logical node and higher-level operations are blocked.  |
| LocKey      | SPS | If true, the operation of the whole logical device has been switched (from remote) to local. This changeover is always done locally with a physical key or toggle switch, which may have a set of contacts from which the position can be read.                                     |
| LocSta      | SPC | If true, control authority is at station level and control from remote is disabled; otherwise, control from remote is allowed.  |
| MltLev      | SPG | Only valid in the LLN0 logical node and operates for the entire logical device. If the MltLev object is not included in the RTAC data model, it is considered to be true. If true, control authority from multiple levels is allowed; otherwise, no other control level is allowed. |

### Consideration of the Logical Node Level

Local processing as described by the IEC 61850 standard is affected by the level a logical node is at when considering accepting a control based upon its control authority (i.e., the orcat value in the control message). For example, a logical node at the bay level, when placed in local mode, would reject controls with a control authority of higher levels like station or remote. It would still process controls of bay, process, maintenance, or not-supported. If a logical node

does not contain the optional element to define what level the logical node is processed at, it is assumed to be at process level. To define the level a logical node is at, add the following private SEL\_LnInfo element in the type definition for the logical node:

```
<Private type="SEL_LnInfo">
    <esel:Level level="station|process|bay"/>
</Private>
```

Then select either station, process, or bay as the level. For example, an XCBR logical node type definition appear as follows:

```
<LNodetyp id="XCBR1" lnClass="XCBR">
    <DO name="Beh" type="behENS"/>
    <DO name="Loc" type="SPS_0"/>
    <DO name="OpCnt" type="INS_0"/>
    <DO name="Pos" type="DPC_0"/>
    <DO name="BlkOpn" type="SPC_0"/>
    <DO name="BlkCls" type="SPC_0"/>
    <DO name="CBOpCap" type="CBOpCapENS"/>
    <Private type="SEL_LnInfo">
        <esel:Level level="process"/>
    </Private>
</LNodetyp>
```

The following tables show the truth tables for accepting and rejecting controls based upon received orcat values. The Loc object in the following table is the OR operation between Loc and LocKey. Additionally, if the LLN0 logical node contains the Loc or LocSta data object, it is "ORed" together with a Loc or LocSta object inside a logical node.

### Processing of a Station-Level Logical Node

| MitLev | Loc   | LocSta | Remote | Station | Bay   | Process | Maintenance | Not-Supported |
|--------|-------|--------|--------|---------|-------|---------|-------------|---------------|
| False  | False | False  | allow  | block   | block | allow   | allow       | allow         |
| False  | False | True   | block  | allow   | block | allow   | allow       | allow         |
| False  | True  | False  | block  | allow   | block | allow   | allow       | allow         |
| False  | True  | True   | block  | allow   | block | allow   | allow       | allow         |
| True   | False | False  | allow  | allow   | allow | allow   | allow       | allow         |
| True   | False | True   | block  | allow   | allow | allow   | allow       | allow         |
| True   | True  | False  | block  | allow   | allow | allow   | allow       | allow         |
| True   | True  | True   | block  | allow   | allow | allow   | allow       | allow         |

### Processing of a Bay-Level Logical Node

| MitLev | Loc   | LocSta | Remote | Station | Bay   | Process | Maintenance | Not-Supported |
|--------|-------|--------|--------|---------|-------|---------|-------------|---------------|
| False  | False | False  | allow  | block   | block | allow   | allow       | allow         |
| False  | False | True   | block  | allow   | block | allow   | allow       | allow         |
| False  | True  | False  | block  | block   | allow | allow   | allow       | allow         |

| MltLev | Loc   | LocSta | Remote | Station | Bay   | Process | Maintenance | Not-Supported |
|--------|-------|--------|--------|---------|-------|---------|-------------|---------------|
| False  | True  | True   | block  | block   | allow | allow   | allow       | allow         |
| True   | False | False  | allow  | allow   | allow | allow   | allow       | allow         |
| True   | False | True   | block  | allow   | allow | allow   | allow       | allow         |
| True   | True  | False  | block  | block   | allow | allow   | allow       | allow         |
| True   | True  | True   | block  | block   | allow | allow   | allow       | allow         |

### Processing of Process-Level Logical Node

According to the IEC 61850 standard, processing consideration of the MltLev and LocSta for a logical node at the process level is not considered. In this case, control processing is entirely dependent upon the Loc object.

| Loc   | Remote | Station | Bay   | Process | Maintenance | Not-Supported |
|-------|--------|---------|-------|---------|-------------|---------------|
| False | allow  | allow   | allow | allow   | allow       | allow         |
| True  | block  | block   | block | block   | block       | block         |

### Association of a Logical Node With Another Logical Node

The IEC 61850 standard describes a concept where the local processing of one logical node may impact the processing of controls in another logical node. The most typical use case is a process-level logical node like XCBR, which has no controllable objects, but which accepts control decisions from a CSWI logical node. In this case, the XCBR logical node is linked to the CSWI logical node, and when the XCBR logical node is placed in local mode, the CSWI logical node is prevented from accepting controls from all control authorities due to XCBR being at the process level. When an association between two logical nodes occurs, the linked logical node will "OR" the processing of the source logical node when deciding to accept controls. Therefore, in the previous example, when deciding if a CSWI controllable object would accept a control or not, the truth tables for a process-level LN and the truth table for the bay-level logical node would be "ORed" together, creating the truth table for the linked logical node.

To create a link between two logical nodes, the following data object needs to be included during instantiation of the source logical node in the SCL. The name of the data object must be "InRef" followed by a number (the value of the number does not matter). The setSrcRef value must reference the Loc object of the desired logical node to create a link between the two logical nodes. The following is an example of single data object instantiation.

---

```
<LN lnType="XCBR1" lnClass="XCBR" inst="1" prefix="BKR1">
  <DOI name="InRef1">
    <DAI name="setSrcRef">
      <Val>PRO/CSWI1.Loc</Val>
    </DAI>
  </DOI>
</LN>
```

---

The referenced DOType for the ORG definition for the InRef will need to specify a functional constraint set point and a read-only attribute. If these attributes are not a part of the ORG class definition, then the MMS server will not enable.

---

```
<DOType id="ORG_0" cdc="ORG">
    <DA name="setSrcRef" fc="SP" bType="ObjRef" dchg="true" valKind="RO"/>
</DOType>
```

---

## Interlocking

The MMS server will check for interlocking when processing a control with a common data class of DPC when the logical node that contains the DPC data object has inRef links to EnaOpn and EnaCls data objects. If both links to EnaOpn and EnaCls do not exist the MMS server will not enable. Additionally, EnaOpn and EnaCls must be in the same logical node. If either of the linked data objects are true, the control will be rejected with an add cause of blocked by interlocking.

---

```
<LN lnType="CSWI1" lnClass="CSWI" inst="1" prefix="BKR1">
    <DOI name="InRef1">
        <DAI name="setSrcRef">
            <Val>PRO/CILO.EnaOpn</Val>
        </DAI>
    </DOI>
    <DOI name="InRef2">
        <DAI name="setSrcRef">
            <Val> PRO/CILO.EnaCls</Val>
        </DAI>
    </DOI>
</LN>
```

---

The referenced DOType for the ORG definition for the InRef must specify a functional constraint set point and a read-only attribute. If these attributes are not a part of the ORG class definition, the MMS server will not enable.

---

```
<DOType id="ORG_0" cdc="ORG">
    <DA name="setSrcRef" fc="SP" bType="ObjRef" dchg="true" valKind="RO"/>
</DOType>
```

---

## Conformance Statements

### Protocol Implementation Conformance Statement: RTAC

*Table 2.85* and *Table 2.86* are as shown in the IEC 61850 standard, Part 8-1, Section 24. Note that because the standard explicitly dictates which services and functions must be implemented to achieve conformance, only the optional services and functions are listed.

**Table 2.85 PICS for A-Profile Support**

|    | Profile              | Client | Server | Value/Comment                   |
|----|----------------------|--------|--------|---------------------------------|
| A1 | Client/Server        | Y      | N      |                                 |
| A2 | GOOSE/GSE management | Y      | Y      | Only GOOSE, not GSSE management |

|    | <b>Profile</b> | <b>Client</b> | <b>Server</b> | <b>Value/Comment</b> |
|----|----------------|---------------|---------------|----------------------|
| A3 | GSSE           | N             | N             |                      |
| A4 | Time Sync      | Y             | Y             |                      |

**Table 2.86 PICS for T-Profile Support**

|    | <b>Profile</b> | <b>Client</b> | <b>Server</b> | <b>Value/Comment</b> |
|----|----------------|---------------|---------------|----------------------|
| T1 | TCP/IP         | Y             | N             |                      |
| T2 | OSI            | N             | N             |                      |
| T3 | GOOSE/GSE      | Y             | Y             | Only GOOSE, not GSSE |
| T4 | GSSE           | N             | N             |                      |
| T5 | Time Sync      | Y             | Y             |                      |

Refer to the ACSI Conformance Statements starting with *Table 2.98* for information on the supported services.

## MMS Conformance

The Manufacturing Message Specification (MMS) stack provides the basis for many IEC 61850 protocol services. *Table 2.87* defines the service support requirement and restrictions of the MMS services in the RTAC.

Generally, only those services whose implementation is not mandatory are shown. Refer to the IEC 61850 standard Part 8-1 for more information.

**Table 2.87 MMS Service Supported Conformance**

| <b>MMS Service Supported CBB</b> | <b>Client-CR Supported</b> | <b>Server-CR Supported</b> |
|----------------------------------|----------------------------|----------------------------|
| status                           | Y                          | Y                          |
| getNameList                      |                            | Y                          |
| identify                         | Y                          | Y                          |
| rename                           |                            |                            |
| read                             | Y                          | Y                          |
| write                            | Y                          | Y                          |
| getVariableAccessAttributes      |                            | Y                          |
| defineNamedVariable              |                            |                            |
| defineScatteredAccess            |                            |                            |
| getScatteredAccessAttributes     |                            |                            |
| deleteVariableAccess             |                            |                            |
| defineNamedVariableList          |                            |                            |
| getNamedVariableListAttributes   |                            | Y                          |
| deleteNamedVariableList          |                            |                            |
| defineNamedType                  |                            |                            |
| getNamedTypeAttributes           |                            |                            |
| deleteNamedType                  |                            |                            |

| <b>MMS Service Supported CBB</b> | <b>Client-CR Supported</b> | <b>Server-CR Supported</b> |
|----------------------------------|----------------------------|----------------------------|
| input                            |                            |                            |
| output                           |                            |                            |
| takeControl                      |                            |                            |
| relinquishControl                |                            |                            |
| defineSemaphore                  |                            |                            |
| deleteSemaphore                  |                            |                            |
| reportPoolSemaphoreStatus        |                            |                            |
| reportSemaphoreStatus            |                            |                            |
| initiateDownloadSequence         |                            |                            |
| downloadSegment                  |                            |                            |
| terminateDownloadSequence        |                            |                            |
| initiateUploadSequence           |                            |                            |
| uploadSegment                    |                            |                            |
| terminateUploadSequence          |                            |                            |
| requestDomainDownload            |                            |                            |
| requestDomainUpload              |                            |                            |
| loadDomainContent                |                            |                            |
| storeDomainContent               |                            |                            |
| deleteDomain                     |                            |                            |
| getDomainAttributes              |                            | Y                          |
| createProgramInvocation          |                            |                            |
| deleteProgramInvocation          |                            |                            |
| start                            |                            |                            |
| stop                             |                            |                            |
| resume                           |                            |                            |
| reset                            |                            |                            |
| kill                             |                            |                            |
| getProgramInvocationAttributes   |                            |                            |
| obtainFile                       |                            |                            |
| defineEventCondition             |                            |                            |
| deleteEventCondition             |                            |                            |
| getEventConditionAttributes      |                            |                            |
| reportEventConditionStatus       |                            |                            |
| alterEventConditionMonitoring    |                            |                            |
| triggerEvent                     |                            |                            |
| defineEventAction                |                            |                            |

| MMS Service Supported CBB      | Client-CR Supported | Server-CR Supported |
|--------------------------------|---------------------|---------------------|
| deleteEventAction              |                     |                     |
| alterEventEnrollment           |                     |                     |
| reportEventEnrollmentStatus    |                     |                     |
| getEventEnrollmentAttributes   |                     |                     |
| acknowledgeEventNotification   |                     |                     |
| getAlarmSummary                |                     |                     |
| getAlarmEnrollmentSummary      |                     |                     |
| readJournal                    |                     |                     |
| writeJournal                   |                     |                     |
| initializeJournal              |                     |                     |
| reportJournalStatus            |                     |                     |
| createJournal                  |                     |                     |
| deleteJournal                  |                     |                     |
| fileOpen                       |                     |                     |
| fileRead                       |                     |                     |
| fileClose                      |                     |                     |
| fileRename                     |                     |                     |
| fileDelete                     |                     |                     |
| fileDirectory                  |                     |                     |
| unsolicitedStatus              |                     |                     |
| informationReport              | Y                   | Y                   |
| eventNotification              |                     |                     |
| attachToEventCondition         |                     |                     |
| attachToSemaphore              |                     |                     |
| conclude                       | Y                   | Y                   |
| cancel                         | Y                   | Y                   |
| getDataExchangeAttributes      |                     |                     |
| exchangeData                   |                     |                     |
| defineAccessControlList        |                     |                     |
| getAccessControlListAttributes |                     |                     |
| reportAccessControlledObjects  |                     |                     |
| deleteAccessControlList        |                     |                     |
| alterAccessControl             |                     |                     |
| reconfigureProgramInvocation   |                     |                     |

*Table 2.88 lists specific settings for the MMS parameter Conformance Building Block (CBB).*

**Table 2.88 MMS Parameter CBB**

| MMS Parameter CBB | Client-CR Supported | Server-CR Supported |
|-------------------|---------------------|---------------------|
| STR1              | Y                   | Y                   |
| STR2              | Y                   | Y                   |
| VNAM              | Y                   | Y                   |
| VADR              | Y                   | Y                   |
| VALT              | Y                   | Y                   |
| TPY               |                     | Y                   |
| VLIS              | Y                   | Y                   |
| CEI               |                     |                     |

The following variable access conformance statements are listed in the order specified in the IEC 61850 standard, Part 8-1. Generally, only those services whose implementation is not mandatory are shown. Refer to the IEC 61850 standard Part 8-1 for more information.

**Table 2.89 AlternateAccessSelection Conformance Statement**

| AlternateAccessSelection | Client-CR Supported | Server-CR Supported |
|--------------------------|---------------------|---------------------|
| accessSelection          | Y                   | Y                   |
| component                | Y                   | Y                   |
| index                    |                     |                     |
| indexRange               |                     |                     |
| allElements              |                     |                     |
| alternateAccess          | Y                   | Y                   |
| selectAccess             | Y                   | Y                   |
| component                | Y                   | Y                   |
| index                    |                     |                     |
| indexRange               |                     |                     |
| allElements              |                     |                     |

**Table 2.90 VariableAccessSpecification Conformance Statement**

| VariableAccessSpecification | Client-CR Supported | Server-CR Supported |
|-----------------------------|---------------------|---------------------|
| listOfVariable              | Y                   | Y                   |
| variableSpecification       | Y                   | Y                   |
| alternateAccess             |                     |                     |

**Table 2.91 VariableSpecification Conformance Statement**

| VariableSpecification | Client-CR Supported | Server-CR Supported |
|-----------------------|---------------------|---------------------|
| name                  | Y                   | Y                   |
| address               |                     |                     |
| variableDescription   |                     |                     |

| <b>VariableSpecification</b> | <b>Client-CR Supported</b> | <b>Server-CR Supported</b> |
|------------------------------|----------------------------|----------------------------|
| scatteredAccessDescription   |                            |                            |
| invalidated                  |                            |                            |

**Table 2.92 Read Conformance Statement**

| <b>VariableAccessSpecification</b> | <b>Client-CR Supported</b> | <b>Server-CR Supported</b> |
|------------------------------------|----------------------------|----------------------------|
| Request                            |                            |                            |
| specificationWithResult            |                            |                            |
| variableAccessSpecification        |                            |                            |
| Response                           |                            |                            |
| variableAccessSpecification        | Y                          | Y                          |
| listOfAccessResult                 | Y                          | Y                          |

**Table 2.93 GetVariableAccessAttributes Conformance Statement**

| <b>GetVariableAccessAttributes</b> | <b>Client-CR Supported</b> | <b>Server-CR Supported</b> |
|------------------------------------|----------------------------|----------------------------|
| Request                            |                            |                            |
| name                               |                            |                            |
| address                            |                            |                            |
| Response                           |                            |                            |
| mmsDeletable                       |                            |                            |
| address                            |                            |                            |
| typeSpecification                  |                            |                            |

**Table 2.94 DefineNamedVariableList Conformance Statement**

| <b>DefineVariableAccessAttributes</b> | <b>Client-CR Supported</b> | <b>Server-CR Supported</b> |
|---------------------------------------|----------------------------|----------------------------|
| Request                               |                            |                            |
| variableListName                      |                            |                            |
| listOfVariable                        |                            |                            |
| variableSpecification                 |                            |                            |
| alternateAccess                       |                            |                            |
| Response                              |                            |                            |

**Table 2.95 GetNamedVariableListAttributes Conformance Statement**

| <b>GetNamedVariableListAttributes</b> | <b>Client-CR Supported</b> | <b>Server-CR Supported</b> |
|---------------------------------------|----------------------------|----------------------------|
| Request                               |                            |                            |
| ObjectName                            |                            |                            |
| Response                              |                            |                            |
| mmsDeletable                          |                            | Y                          |

| GetNamedVariableListAttributes | Client-CR Supported | Server-CR Supported |
|--------------------------------|---------------------|---------------------|
| listOfVariable                 |                     | Y                   |
| variableSpecification          |                     | Y                   |
| alternateAccess                |                     | Y                   |

**Table 2.96 DeleteNamedVariableList Conformance Statement**

| DeleteNamedVariableList       | Client-CR Supported | Server-CR Supported |
|-------------------------------|---------------------|---------------------|
| Request                       |                     |                     |
| Scope                         |                     |                     |
| listOfVariableListName        |                     |                     |
| domainName                    |                     |                     |
| Response                      |                     |                     |
| numberMatched                 |                     |                     |
| numberDeleted                 |                     |                     |
| DeleteNamedVariableList-Error |                     |                     |

## GOOSE Services Conformance Statement

**Table 2.97 GOOSE Conformance**

|                            | Subscriber | Publisher | Value/Comment |
|----------------------------|------------|-----------|---------------|
| GOOSE Services             | Y          | Y         |               |
| SendGOOSEMessage           | Y          | Y         |               |
| GetGoReference             |            |           |               |
| GetGOOSEElementNumber      |            |           |               |
| GetGoCBValues              | Y          | Y         |               |
| SetGoCBValues              |            |           |               |
| GSENotSupported            |            |           |               |
| GOOSE Control Block (GoCB) | Y          | Y         |               |

## ACSI Conformance Statements

The following ACSI conformance statements are listed in the order specified in the IEC 61850 standard, Part 7-2 with firmware R121. Generally, only those services whose implementation is not mandatory are shown.

**Table 2.98 Basic Conformance Statement**

|                     |  | Client/Subscriber | Server/Publisher | Value/Comments |
|---------------------|--|-------------------|------------------|----------------|
| Client-Server Roles |  |                   |                  |                |
| B11                 | Server side of (TWO-PARTY-APPLICATION-ASSOCIATION) | —                 | Y                |                |

|  |   | Client/Subscriber | Server/Publisher | Value/Comments |
|--|---|-------------------|------------------|----------------|
| B12  | <b>Client</b> side of (TWO-PARTY-APPLICATION-ASSOCIATION) | Y                 | —                |                |
| <b>SCSMs Supported</b>                           |   |                   |                  |                |
| B21  | <b>SCSM:</b> IEC 6185-8-1 used                            | Y                 | Y                |                |
| B22  | <b>SCSM:</b> IEC 6185-9-1 used                            |                   |                  |                |
| B23  | <b>SCSM:</b> IEC 6185-9-2 used                            |                   |                  |                |
| B24  | <b>SCSM:</b> other  |                   |                  |                |
| <b>Generic Substation Event Model (GSE)</b>      |   |                   |                  |                |
| B31  | <b>Publisher</b> side                                     | —                 | Y                |                |
| B32  | <b>Subscriber</b> side                                    | Y                 | —                |                |
| <b>Transmission of Sampled Value Model (SVC)</b> |   |                   |                  |                |
| B41  | <b>Publisher</b> side                                     |                   |                  |                |
| B42  | <b>Subscriber</b> side                                    |                   |                  |                |

Y = supported

N or empty = not supported

**Table 2.99 ACSI Models Conformance Statement**

|   |                                | Client/Subscriber | Server/Publisher |
|---|--------------------------------|-------------------|------------------|
| <b>If Server or Client side (B11/B12) supported</b> |                                |                   |                  |
| M1  | <b>Logical device</b>          | Yes               | Yes              |
| M2  | <b>Logical node</b>            | Yes               | Yes              |
| M3  | <b>Data</b>                    | Yes               | Yes              |
| M4  | <b>Data set</b>                | Yes               | Yes              |
| M5  | <b>Substitution</b>            |                   |                  |
| M6  | <b>Setting group control</b>   |                   |                  |
| <b>Reporting</b>                                    |                                |                   |                  |
| M7  | <b>Buffered report control</b> | Yes               | Yes              |
| M7-1  | sequence-number                | Yes               | Yes              |
| M7-2  | report-time-stamp              | Yes               | Yes              |
| M7-3  | reason-for-inclusion           | Yes               | Yes              |
| M7-4  | data-set-name                  | Yes               | Yes              |
| M7-5  | data-reference                 | Yes               | Yes              |
| M7-6  | buffer-overflow                | Yes               | Yes              |
| M7-7  | entryID                        | Yes               | Yes              |
| M7-8  | BufTm                          | Yes               | Yes              |
| M7-9  | IntgPd                         | Yes               | Yes              |
| M7-10   | GI                             | Yes               | Yes              |
| M7-11   | confRev                        | Yes               | Yes              |

|  |                                  | Client/Subscriber | Server/Publisher |
|--|----------------------------------|-------------------|------------------|
| M8   | <b>Unbuffered report control</b> | Yes               | Yes              |
| M8-1   | sequence-number                  | Yes               | Yes              |
| M8-2   | report-time-stamp                | Yes               | Yes              |
| M8-3   | reason-for-inclusion             | Yes               | Yes              |
| M8-4   | data-set-name                    | Yes               | Yes              |
| M8-5   | data-reference                   | Yes               | Yes              |
| M8-6   | BufTm                            | Yes               | Yes              |
| M8-7   | IntgPd                           | Yes               | Yes              |
| M8-8   | GI                               | Yes               | Yes              |
| M8-9   | confRev                          | Yes               | Yes              |
| <b>Logging</b>   |                                  |                   |                  |
| M9   | <b>Log control</b>               |                   |                  |
| M9-1   | IntgPd                           |                   |                  |
| M10  | <b>Log</b>                       |                   |                  |
| M11  | <b>Control</b>                   | Yes               | Yes              |
| If GSE B31/32 is supported   |                                  |                   |                  |
| M12  | <b>GOOSE</b>                     | Yes               | Yes              |
| M13  | <b>GSSE</b>                      |                   |                  |
| If SVC (41/42) is supported  |                                  |                   |                  |
| M14  | Multicast SVC                    |                   |                  |
| M15  | Unicast SVC                      |                   |                  |
| If Server or Client side (B11/12) is supported                       |                                  |                   |                  |
| M16  | <b>Time</b>                      | Yes               | Yes              |
| M17  | <b>File Transfer</b>             |                   |                  |
| Yes = service is supported<br>No or empty = service is not supported |                                  |                   |                  |

Table 2.100 ACSI Service Conformance Statement

|                                | Server                   | AA <sup>a</sup> : TP/MC | Client (C) | Server (S) | Comments |
|--------------------------------|--------------------------|-------------------------|------------|------------|----------|
| <b>Server</b>                  |                          |                         |            |            |          |
| S1                             | GetServerDirectory       | TP                      |            | Yes        |          |
| <b>Application Association</b> |                          |                         |            |            |          |
| S2                             | Associate                |                         | Yes        | Yes        |          |
| S3                             | Abort                    |                         | Yes        | Yes        |          |
| S4                             | Release                  |                         | Yes        | Yes        |          |
| <b>Logical Device</b>          |                          |                         |            |            |          |
| S5                             | GetLogicalDeviceCategory | TP                      |            | Yes        |          |

|   | <b>Server</b>           | <b>AA<sup>a</sup>: TP/MC</b> | <b>Client (C)</b> | <b>Server (S)</b> | <b>Comments</b> |
|---|-------------------------|------------------------------|-------------------|-------------------|-----------------|
| <b>Logical Node</b>                           |                         |                              |                   |                   |                 |
| S6  | GetLogicalNodeDirectory | TP                           |                   | Yes               |                 |
| S7  | GetAllDataValues        | TP                           |                   | Yes               |                 |
| <b>Data</b>                                   |                         |                              |                   |                   |                 |
| S8  | GetDataValues           | TP                           | Yes               | Yes               |                 |
| S9  | SetDataValues           | TP                           |                   |                   |                 |
| S10   | GetDataDirectory        | TP                           |                   | Yes               |                 |
| S11   | GetDataDefinition       | TP                           |                   | Yes               |                 |
| <b>Data Set</b>                               |                         |                              |                   |                   |                 |
| S12   | GetDataSetValue         | TP                           | Yes               | Yes               |                 |
| S13   | SetDataSetValues        | TP                           |                   |                   |                 |
| S14   | CreateDataSet           | TP                           |                   |                   |                 |
| S15   | DeleteDataSet           | TP                           |                   |                   |                 |
| S16   | GetDataSetDirectory     | TP                           |                   | Yes               |                 |
| <b>Substitution</b>                           |                         |                              |                   |                   |                 |
| S17   | SetDataValues           | TP                           |                   |                   |                 |
| <b>Setting Group Control</b>                  |                         |                              |                   |                   |                 |
| S18   | SelectActiveSG          | TP                           |                   |                   |                 |
| S19   | SelectEditSG            | TP                           |                   |                   |                 |
| S20   | SetSGValues             | TP                           |                   |                   |                 |
| S21   | ConfirmEditSGValues     | TP                           |                   |                   |                 |
| S22   | GetSGValues             | TP                           |                   |                   |                 |
| S23   | GetSGCBValues           | TP                           |                   |                   |                 |
| <b>Reporting</b>                              |                         |                              |                   |                   |                 |
| <b>Buffered Report Control Block (BRCB)</b>   |                         |                              |                   |                   |                 |
| S24   | Report                  | TP                           | Yes               | Yes               |                 |
| S24-1   | data-change (dchg)      |                              | Yes               | Yes               |                 |
| S24-2   | quality-change (qchg)   |                              | Yes               | Yes               |                 |
| S24-3   | data-update (dupd)      |                              | Yes               |                   |                 |
| S25   | GetBRCBValues           | TP                           | Yes               | Yes               |                 |
| S26   | SetBRCBValues           | TP                           | Yes               | Yes               |                 |
| <b>Unbuffered Report Control Block (URCB)</b> |                         |                              |                   |                   |                 |
| S27   | Report                  | TP                           | Yes               | Yes               |                 |
| S27-1   | data-change (dchg)      |                              | Yes               | Yes               |                 |
| S27-2   | quality-change (qchg)   |                              | Yes               | Yes               |                 |
| S27-3   | data-update (dupd)      |                              | Yes               |                   |                 |

|  | <b>Server</b>         | <b>AA<sup>a</sup>: TP/MC</b> | <b>Client (C)</b> | <b>Server (S)</b> | <b>Comments</b> |
|--|-----------------------|------------------------------|-------------------|-------------------|-----------------|
| S28  | GetURCBValues         | TP                           | Yes               | Yes               |                 |
| S29  | SetURCBValues         | TP                           | Yes               | Yes               |                 |
| <b>Logging</b>                                   |                       |                              |                   |                   |                 |
| <b>Log Control Block</b>                         |                       |                              |                   |                   |                 |
| S30  | GetLCBValues          | TP                           |                   |                   |                 |
| S31  | SetLCBValues          | TP                           |                   |                   |                 |
| <b>Log</b>                                       |                       |                              |                   |                   |                 |
| S32  | QueryLogByTime        | TP                           |                   |                   |                 |
| S33  | QueryLogAfter         | TP                           |                   |                   |                 |
| S34  | GetLogStatusValues    | TP                           |                   |                   |                 |
| <b>Generic Substation Event Model (GSE)</b>      |                       |                              |                   |                   |                 |
| <b>GOOSE Control Block</b>                       |                       |                              |                   |                   |                 |
| S35  | SendGOOSEMessage      | MC                           | Yes               | Yes               |                 |
| S36  | GetGoReference        | TP                           |                   |                   |                 |
| S37  | GetGOOSEElementNumber | TP                           |                   |                   |                 |
| S38  | GetGoCBValues         | TP                           |                   |                   |                 |
| S39  | SetGoCBValues         | TP                           |                   |                   |                 |
| <b>GSSE Control Block</b>                        |                       |                              |                   |                   |                 |
| S40  | SendGSSEMessage       | MC                           |                   |                   |                 |
| S41  | GetGsReference        | TP                           |                   |                   |                 |
| S42  | GetGSSEDataOffset     | TP                           |                   |                   |                 |
| S43  | GetGsCBValues         | TP                           |                   |                   |                 |
| S44  | SetGsCBValues         | TP                           |                   |                   |                 |
| <b>Transmission of Sampled Value Model (SVC)</b> |                       |                              |                   |                   |                 |
| <b>Multicast SVC</b>                             |                       |                              |                   |                   |                 |
| S45  | SendMSVMessage        | MC                           |                   |                   |                 |
| S46  | GetMSVCBValues        | TP                           |                   |                   |                 |
| S47  | SetMSVCBValues        | TP                           |                   |                   |                 |
| <b>Unicast SVC</b>                               |                       |                              |                   |                   |                 |
| S48  | SendUSVMessage        | TP                           |                   |                   |                 |
| S49  | GetUSVCBValues        | TP                           |                   |                   |                 |
| S50  | SetUSVCBValues        | TP                           |                   |                   |                 |
| <b>Control</b>                                   |                       |                              |                   |                   |                 |
| S51  | Select                | TP                           | Yes               | Yes               |                 |
| S52  | SelectWithValue       | TP                           | Yes               |                   |                 |
| S53  | Cancel                | TP                           |                   | Yes               |                 |

|                      | <b>Server</b>                     | <b>AA<sup>a</sup>: TP/MC</b> | <b>Client (C)</b> | <b>Server (S)</b> | <b>Comments</b>  |
|----------------------|-----------------------------------|------------------------------|-------------------|-------------------|--|
| S54                  | Operate                           | TP                           | Yes               | Yes               |  |
| S55                  | CommandTermination                | TP                           | Yes               | Yes               |  |
| S56                  | TimeActivatedOperate              | TP                           |                   |                   |  |
| <b>File Transfer</b> |                                   |                              |                   |                   |  |
| S57                  | GetFile                           | TP                           | Yes               | Yes               |  |
| S58                  | SetFile                           | TP                           |                   |                   |  |
| S59                  | DeleteFile                        | TP                           |                   |                   |  |
| S60                  | GetFileAttributeValues            | TP                           | Yes               | Yes               |  |
| <b>Time</b>          |                                   |                              |                   |                   |  |
| T1                   | Time resolution of internal clock |                              | As many as 20     | As many as 20     | Nearest negative power of 2 (in seconds)   |
| T2                   | Time accuracy of internal clock   |                              | T0                | T0                | T0 (10 ms)<br>T1 (1 ms)<br>T2 (100 µs)<br>T3 (25 µs)<br>T4 (4 µs)<br>T5 (1 µs)   |
| T3                   | Supported TimeStamp resolution    |                              | 20 (1 µs)         | 10 (1 ms)         | Nearest negative power of 2 (in seconds).<br>The value of the TimeAccuracy attribute depends on the time-source accuracy of and variation of the internal clock relative to the time source. |
|                      |                                   |                              |                   | T0 or T1          | For SNTP and NTP, T0 or T1 is typical. If accuracy is less than 10 ms, it will be set to "Unspecified".  |

<sup>a</sup> Type of application association (AA): Two Party (TP) or Multicast (MC).

## Model Implementation

This model implementation conformance statement is applicable for SEL RTAC, with firmware R136:

The MICS document specifies the modeling extensions compared to IEC 61850 Edition 1. For the exact details on the standardized model please compare the ICD substation configuration file: "03530 006.ICD".

Common data class extensions

### 2.1 Supported common data classes

The IEC 61850 client and server in the SEL RTAC are capable of mapping the mandatory attributes of the following data classes with a functional constraint of ST or MX:

Common data class specifications for description information

Common data class specifications for status information

- ▶ Single point status (SPS)
- ▶ Double point status (DPS)
- ▶ Integer status (INS)
- ▶ Enumerated status (ENS)
- ▶ Protection activation information (ACT)
- ▶ Directional protection activation information (ACD)
- ▶ Binary counter reading (BCR)

Common data class specifications for measurand information

- ▶ Measured value (MV)
- ▶ Complex measured value (CMV)
- ▶ Phase to ground related measured values of a three phase system (WYE)
- ▶ Phase to phase related measured values of a three phase system (DEL)
- ▶ Sequence (SEQ)

Common data class specifications for controllable status information

- ▶ Controllable single point (SPC)
- ▶ Controllable double point (DPC)
- ▶ Controllable integer status (INC)
- ▶ Controllable enumerated status (ENC)
- ▶ Binary controlled step position information (BSC)
- ▶ Integer controlled step position information (ISC)

Common data class specifications for controllable analog information

- ▶ Controllable analog set point information (APC)
- ▶ Binary controlled analog process value (BAC)

In addition to directly supporting the mapping of data from the above data classes, the IEC 61850 client and server support the ability to access most attributes within any data class (supported or not), mandatory, optional, or specialized.

## 2.2 Unsupported common data classes

Common data class specifications for description information

- ▶ Device name plate (DPL)
- ▶ Logical node name plate (LPL)
- ▶ Curve shape description (CSD)

Common data class specifications for status information

- ▶ Security violation counting (SEC)

Common data class specifications for measurand information

- ▶ Sampled value (SAV)
- ▶ Harmonic Value (HMV)

- Harmonic value for WYE (HWYE)
- Harmonic value for DEL (HDEL)

Common data class specifications for status settings

- Single point setting (SPG)
- Integer status setting (ING)
- Enumerated status setting (ENG)
- Object reference settings (ORG)
- Time setting group (TSG)
- Currency setting group (CUG)
- Visible string setting (VSG)

Common data class specifications for analog settings

- Analog setting (ASG)
- Setting curve (CURVE)
- Curve shape settings (CSG)

## IEEE C37.118 Synchrophasors

---

Synchrophasors provide the ability to compare time-stamped power measurements from different devices and physical locations throughout a power system. A device that measures and reports synchrophasors is called a phasor measurement unit (PMU). IEEE C37.118 is the industry standard protocol that defines how to send and receive synchrophasor messages between PMUs and other devices such as the RTAC. A synchrophasor message includes magnitude, angle, and time stamp for each measured quantity. Synchrophasors can provide comparisons of simultaneous measurements from different locations with errors of less than a quarter of an electrical degree.

Configure the IEEE C37.118 client protocol on any of the RTAC serial or Ethernet ports to communicate with any device that supports an IEEE C37.118 server to gather synchrophasor values. You can configure as many as 100 synchrophasor client sessions on the RTAC at any given time. The RTAC also supports 100 synchrophasor server sessions.


Synchrophasor systems often employ phasor data concentrators (PDCs) to collect data from multiple PMUs, align the samples based on a common time stamp, and aggregate the samples into a concentrated data message. These time-aligned data sets can provide a coherent snapshot of wide-area measurements to an end application. A PDC can be a standalone device, supporting data receipt and transmission over a standardized protocol such as IEEE C37.118, or a function within an end-application. The RTAC, as a PDC, supports IEEE C37.118 client and server functionality and applies time alignment to all configured IEEE C37.118 clients. This ensures coherency of the phasor data presented to the SEL-RTAC logic engine as well as any configured IEEE C37.118 servers. The SEL-RTAC IEEE C37.118 client is also capable of reading concentrated data messages from other PDCs, see IEEE C37.118 Client Configuration.

This section describes the configuration and use of the IEEE C37.118 protocol client and server with ACCELERATOR RTAC. For specific information on the IEEE C37.118 protocol, see *IEEE C37.118-2-2011, IEEE Standard for Synchrophasor Data Transfer for Power Systems*.

For a detailed description of client and server concepts and other general information on protocol configuration, see *Overview on page 129*.

## IEEE C37.118 System Configuration

Configure the RTAC for basic data concentration and time alignment, as a synchrophasor logic processor and controller, or as a combination of the two. The RTAC provides the option to route synchrophasor data directly between IEEE C37.118 clients or SEL Axion modules and IEEE C37.118 servers, thus bypassing the logic engine. Synchrophasor data channels from IEEE C37.118 clients and Axion modules can optionally be enabled for use as tags in the logic engine. *Figure 2.193* shows the available routing paths for synchrophasor data in the RTAC.

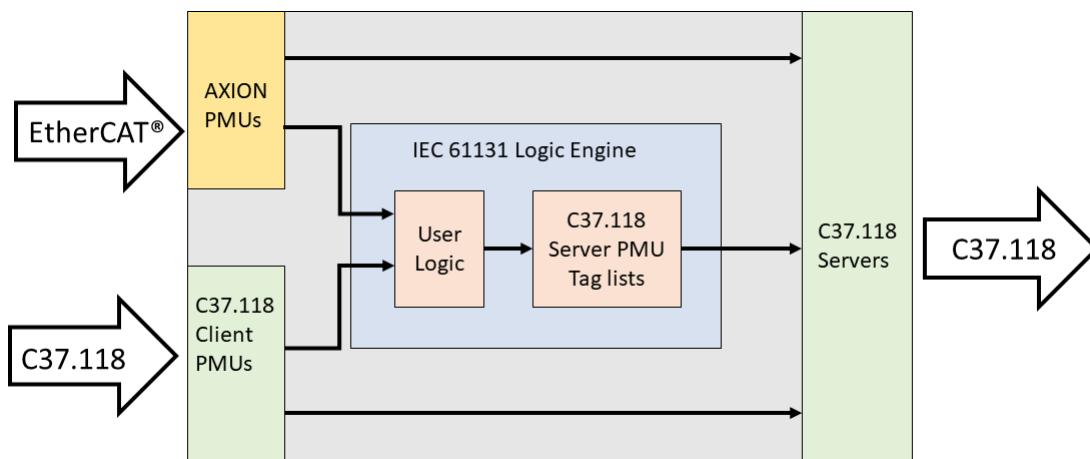


**Figure 2.189 SEL RTAC Synchrophasor Data Routing Options**

Note that application extensions, such as the Dynamic Disturbance Recorder (DDR) for synchrophasor data archiving, are dependent on the logic engine. Therefore, synchrophasor data channels must be enabled for use as logic engine tags before they can be applied to these extensions.

## IEEE C37.118 Client Configuration

Configure an IEEE C37.118 client connection to communicate via serial or Ethernet to PMUs and relays that provide phasor data via the IEEE C37.118 protocol. The RTAC accepts phasor measurement data from these IEDs, makes the PMU data sets directly available to configured IEEE C37.118 servers, and optionally inserts the data into the logic engine.

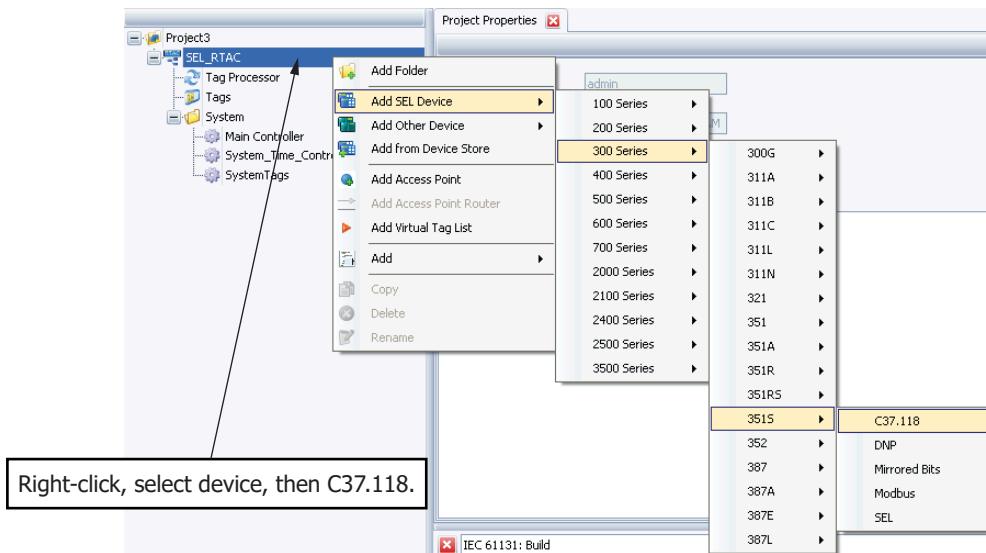**Figure 2.190 Insert IEEE C37.118 Client Device**

Insert a non-SEL IEEE C37.118 device by selecting **Other** from the **Insert** ribbon. SEL devices that support IEEE C37.118 (including the SEL-421, SEL-451, SEL-751A, etc.) are preconfigured in ACCELERATOR RTAC. Insert those devices by selecting **SEL** from the **Insert** ribbon.

Give the device connection a unique name and select the connection type as shown in *Figure 2.1*. For Ethernet connections, the combination of the PMUs IP address and the PMUs port must be unique (i.e., two PMUs can have the same IP port number only if those two PMUs have different IP addresses).

By selecting the **Settings** tab, you see all configurable items for communications. Check the **Description** column for details on each configuration item. Move the slider bar or hover your mouse over a truncated description to see the entire text of a description. Type any necessary comments in the blank column to the far right.

## PDC Id

Configure the PDC ID for this IEEE C37.118 client. In most configurations where the client is communicating to a single-PMU device, the PDC Id value will match that of the Pmu Id configured on the **PMUs** tab.

## Time Variance


The Time Variance setting is an advanced setting on the **Settings** tab of each IEEE C37.118 client. It defines the allowable limit by which an incoming IEEE C37.118 time stamp can be rounded to conform to the expected IEEE C37.118 time stamp.

## Add IEEE C37.118 PMUs

Data messages transmitted directly from a PMU generally incorporate a single PMU data set within the data message. Data messages transmitted by a PDC may contain one or more PMU data sets for a given time stamp. Each SEL RTAC IEEE C37.118 client can accept data messages that represent between 1

and 100 individual PMU data sets. Preconfigured SEL IEEE C37.118 clients are preloaded with a single predefined PMU data set when they are added to the project. Non-SEL IEEE C37.118 devices added to the project must be assigned one or more empty PMU data sets that must be configured appropriately. To add a PMU to an IEEE C37.118 client, perform the following:

- Step 1. Click on the **PMUs** tab.
- Step 2. Click + to add PMUs.
- Step 3. Specify the number of PMUs to add to the IEEE C37.118 client and click **Add**.
- Step 4. Specify the **Station Name**. The first 16 characters must exactly match the Station Name setting programmed in the IED.
- Step 5. Specify the **Pmu Id**. This must match the PMU ID setting programmed in the IED.

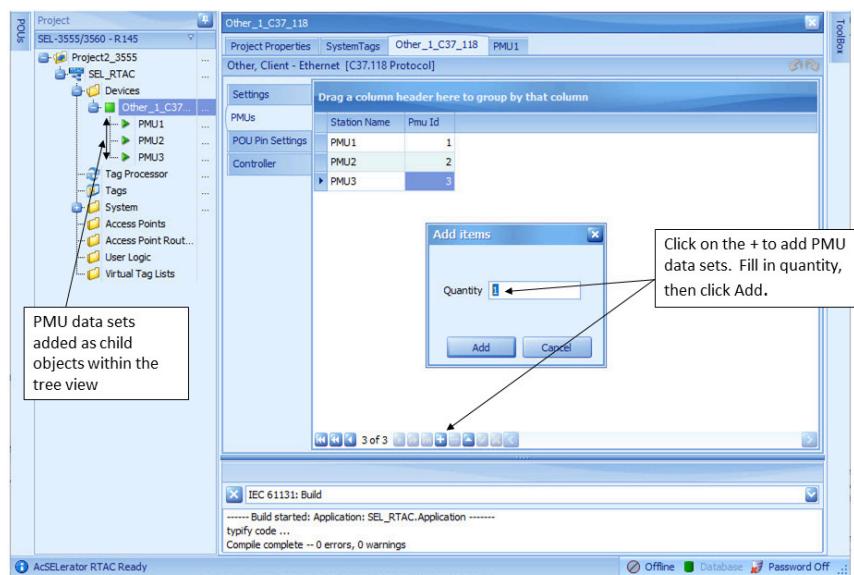

**Figure 2.191 Add IEEE C37.118 PMUs**

## Configure PMU Datasets

Each PMU data set added to an IEEE C37.118 client contains five tabs (Status, Frequency, Phasors, Analogs, and Digitals) that can be configured to represent the full set of measurements and status from a PMU. All channels represented in these tabs use an identical set of parameters.

**Table 2.101 Common Settings for PMU Data Set Tags**

| Parameter    | Description   |
|--------------|---|
| Enable       | Enables the channel for direct access by IEEE C37.118 servers           |
| Channel Name | Name as defined in the IED (as many as 16 characters)                   |
| Enable Tag   | Enable the channel for use in the logic engine (requires Enable = TRUE) |
| Tag Name     | Logic engine tag name for tag enabled channels                          |
| Tag Type     | IEC 61131-3 data structures used for tag enabled channels               |

Channels can be independently enabled and disabled for logic engine use. All enabled channels are directly available to any configured IEEE C37.118 servers. This allows the RTAC to perform basic PDC time alignment and data aggregation without requiring the logic engine for tag mapping between client and server. See *IEEE C37.118 Client Configuration* on page 452 for additional information on direct mapping of IEEE C37.118 client PMU data sets to IEEE C37.118 servers.

On each of the Phasors, Analogs, and Digitals tabs, add channels as needed to correspond with the IED data set. Again, SEL IEEE C37.118 clients come preloaded with a single PMU data set with predefined Phasor, Analog, and Digital data channels.

## Using IEEE C37.118 Client POU Controller Outputs for Troubleshooting

This section details a subset of useful POU controller output pins. For advanced troubleshooting, set the **Visible** field to True for all tags on the IEEE C37.118 client POU Pin Settings page and observe the **Controller** tab while online with the project.

### Unresolved\_Tag\_Reference\_Error and Unresolved\_Tag\_Reference\_Count

These outputs indicate the presence and number of configured data channels that contain a Channel Name setting that does not exactly match any channel name found in the IEEE C37.118 configuration frame received from the connected PMU. The count encompasses all channels amongst all configured PMUs on the IEEE C37.118 client.

### Missed\_Data\_Count

This output is the running count of data messages that have been missed. This number is updated by comparing the most recently received synchrophasor time stamp against the previously received time stamp and comparing the difference to the data rate interval (i.e.,  $1 / \text{Data\_Rate}$ ), where Data\_Rate is configured on the System Settings page.

Missed data may be a result of network congestion that leads to complete packet loss. It can also result from network latency causing the packet to be received at the RTAC after the synchrophasor time alignment wait period has elapsed, in which case it will be thrown away. You can adjust the duration of the wait period via the Waiting\_Period setting on the System Tags page.

## Considerations for Logic Engine Enabled Channels

### Task Cycle

When channels are optionally enabled for use in the logic engine, consideration needs to be given to the associated Cycle Time setting on the Main Controller settings page. SEL recommends setting Cycle Time to approximately  $1 / \text{Data\_rate}$ , where Data\_Rate is the C37.118 Message Rate setting on the System Tags page.

## Mapping From IEEE C37.118 Protocol to Logic Engine Tags

Corresponding logic engine tags will be created for channels that are enabled for use in the logic engine. The IEC tag data structures (e.g., MV, CMV, SPS) will be populated from the IEEE C37.118 data frame.

### Status Mapping

Common tag sub-structures, such as timestamp\_t and quality\_t, will be synchronized across all tags associated with a given PMU data set and mapped as described in tables *Table 2.102* and *Table 2.103*.

**Table 2.102 IEEE C37.118 Mapping to timeStamp\_t**

| IEEE C37.118 Field              | Manipulations                    | To Logic Engine Tag                                       |
|---------------------------------|----------------------------------|---|
| SOC                             | Convert to local time            | .value.dateTime   |
| FRACSEC value                   | Round via Time Variance setting* | .value.uSec   |
| Fault – Clock Failure           |                                  | .quality.accuracy = timeAccuracy_t.unspecified            |
| Within 10 s of UTC              |                                  | .quality.accuracy = timeAccuracy_t.unspecified            |
| Within 1 s of UTC               |                                  | .quality.accuracy = timeAccuracy_t.unspecified            |
| Within 100 ms of UTC            |                                  | .quality.accuracy = timeAccuracy_t.unspecified            |
| Within 10 ms of UTC             |                                  | .quality.accuracy = timeAccuracy_t.T0                     |
| Within 1 ms of UTC              |                                  | .quality.accuracy = timeAccuracy_t.T1                     |
| Within 100 µs of UTC            |                                  | .quality.accuracy = timeAccuracy_t.T2                     |
| Within 10 µs of UTC             |                                  | .quality.accuracy = timeAccuracy_t.T3                     |
| Within 1 µs of UTC              |                                  | .quality.accuracy = timeAccuracy_t.T5                     |
| Within 100 ns of UTC            |                                  | .quality.accuracy = timeAccuracy_t.T5                     |
| Within 10 ns of UTC             |                                  | .quality.accuracy = timeAccuracy_t.T5                     |
| Within 1 ns of UTC              |                                  | .quality.accuracy = timeAccuracy_t.T5                     |
| Clock Locked                    |                                  | .quality.accuracy = timeAccuracy_t.T5                     |
| STAT bit 13: PMU No Sync = TRUE |                                  | .quality.clock_not_synchronized<br>.quality.clock_failure |

**Table 2.103 IEEE C37.118 Mapping to quality\_t**

| <b>IEEE C37.118 Field</b>  | <b>To Logic Engine Tag</b>          |
|--|-------------------------------------|
| STAT bit 15 (Data Invalid) = FALSE<br>STAT bit 14 (PMU Error) = FALSE<br>STAT bit 12 (Sort by arrival) = FALSE | .validity = validity_t.good         |
| STAT bit 15 (Data Invalid) = TRUE<br>STAT bit 14 (PMU Error) = TRUE  | .validity = validity_t.invalid      |
| STAT bit 12 (Sort by arrival) = TRUE<br>STAT bit 15 (Data Invalid) = FALSE<br>STAT bit 14 (PMU Error) = FALSE  | .validity = validity_t.questionable |

## Measurement Mapping

Phasor, analog, and Boolean quantities within the PMU data set that are enabled for use in the logic engine will be mapped to respective CMV, MV, and SPS structures as described in *Table 2.104*.

**Table 2.104 IEEE C37.118 Measurement Mapping to Logic Engine Tags**

| <b>IEEE C37.118 Field</b> | <b>Manipulations</b>                               | <b>To Logic Engine Tag</b>   |
|---------------------------|--|--|
| Phasor                    | Convert to polar coordinates with angle in degrees | CMV.instCVal.mag<br>CMV.cVal.mag<br>CMV.instCVal.ang<br>CMV.cVal.ang |
| Analog                    |  | MV.instMag<br>MV.mag   |
| Boolean                   |  | SPS.stVal  |

Starting with RTAC firmware version R145-V0, the range and dead-band settings associated with IEEE C37.118 phasors and analogs are no longer included when those data are mapped to CMV and MV tags, respectively. This was done to promote the streaming nature of IEEE C37.118 data. If desired, the range and dead-band settings can be applied to the data in user logic. See the MVRRangeAndDeadbandCheck and CMVRangeAndDeadbandCheck functions in *Appendix B: IEC 61131-3 Programming Reference* for more information.

## Required System Settings and IEEE C37.118 Client Time Alignment

All PMUs communicating with IEEE C37.118 clients on the RTAC must be configured with the same Nominal\_Frequency and Data\_Rate as configured in the RTAC system settings.

The RTAC applies time alignment to all IEEE C37.118 clients. The system setting Waiting\_Period specifies how long the RTAC will wait to receive all IEEE C37.118 data messages for a given time stamp amongst all configured IEEE C37.118 clients. The internal counter, to which the Waiting\_Period is applied, begins upon the receipt of the first data message with a new time stamp. This relative form of time alignment eliminates the need for RTAC synchronization to a GPS time source. Once the set is received, or the Waiting\_Period duration has elapsed, the received samples will be made available to the rest of the system.

| System Variables and Tags |                   |        |                    |   |
|---------------------------|-------------------|--------|--------------------|---|
| Settings                  | Setting           | Value  | Range              | Description   |
| Communications            | Nominal_Frequency | 60     | 50,60              | Nominal Frequency   |
| Diagnostics               | Data_Rate         | 60     | 1,2,3,4,5,6,10,... | C37.118 Rate of Data Transmission   |
| User Sessions             | Waiting_Period    | 200    | 4-1000             | The amount of time to wait for each C37.118 input to have a value for the next timestamp. |
|                           | Ethernet_Port     | Eth_01 | Eth_01,Eth_02,...  | GOOSE Physical ethernet interface that messages will be transmitted and/or received ...   |

Set frequency, PMU rate of transmission, and time alignment waiting period

**Figure 2.192 System Tags**

Ensure configuration of all PMUs to the same frequency and data rate as the RTAC client. The RTAC accepts as valid only PMU messages that match the RTAC settings.

## IEEE C37.118 Axion PMU

Each SEL Axion module that provides IEEE C37.118.1-2011-compliant synchrophasor measurements represents an independent PMU with frequency, voltage, and current measurements. The following Axion modules provide such synchrophasor measurements:

- ▶ SEL-2245-4 AC Metering Module
- ▶ SEL-2245-411 Standard Current and Low-Voltage (LEA) Monitoring Module
- ▶ SEL-2245-22 DC Analog Input Extended Range Module
- ▶ SEL-2245-221 Low-Voltage (LEA) Monitoring Module
- ▶ SEL-2245-42 AC Protection Module

At a minimum, each Axion PMU includes its own PMU ID, station name, frequency measurement, and rate-of-change-of-frequency measurement. Additionally, each Axion PMU provides an optional global PMU ID configuration and a large station name (greater than 16 characters) to support Configuration 3 (CFG3) requests. The Axion automatically synchronizes all modules and their respective synchrophasor measurements to its IRIG-B input time source and requires no additional time alignment from the IEEE C37.118 server.

## Settings

An Axion PMU includes the settings shown in *Table 2.105*.

### NOTE

Only ac analog input modules that have current input channels (such as the SEL-2245-42 AC Protection module) support the Current Phasor Data Set. Additionally, the SEL-2245-42 AC Protection Module does not support IN or VS.

**Table 2.105 Axion PMU Settings**

| Setting                 | Range                               | Description   |
|-------------------------|-------------------------------------|---|
| Station Name            | 1–255 characters                    | The station name of the PMU                         |
| Current Phasor Data Set | All, Phase, Positive Sequence, None | Enable current phasor channels for the PMU data set |

| Setting                 | Range                               | Description   |
|-------------------------|-------------------------------------|---|
| Voltage Phasor Data Set | All, Phase, Positive Sequence, None | Enable voltage phasor channels for the PMU data set |
| PMU ID                  | 1–65534                             | The identifier of the PMU                           |
| Global PMU ID           | 0–2 <sup>128–1</sup>                | The global identifier (Advanced Setting) of the PMU |

Table 2.106 shows the current and voltage channels that the Axion PMU includes for each data set configuration.

**Table 2.106 Axion Voltage and Current Settings**

| Voltage/Current Phasor Data Set | PMU Current Channels           | Wye PMU Voltage Channels       | Delta PMU Voltage Channel |
|---------------------------------|--------------------------------|--------------------------------|---------------------------|
| All                             | IA, IB, IC, IN, I1, I2, and I0 | VA, VB, VC, VS, V1, V2, and V0 | VAB, VBC, VCA, V1, and V2 |
| Phase                           | IA, IB, IC, and IN             | VA, VB, VC, and VS             | VAB, VBC, and VCA         |
| Positive Sequence               | I1                             | V1                             | V1                        |
| None                            | No current channels            | No voltage channels            | No voltage channels       |

Table 2.107 shows the settings for Axion PMU message rate and message class. All Axion PMUs use the same synchrophasor message rate and message class.

**Table 2.107 Axion PMU Rate**

| Setting                         | Range   | Description  |
|---------------------------------|---|--|
| Synchrophasor Message Rate      | 1, 2, 4, 5, 10, 12, 15, 20, 30, 60, or 120 (Nominal_Frequency = 60)<br>1, 2, 5, 10, 25, 50, or 100 (Nominal_Frequency = 50) | The synchrophasor messaging rate (messages/second) |
| Synchrophasor Performance Class | P or M  | The synchrophasor performance class                |

<sup>a</sup> The Synchrophasor Message Rate must match the Data Rate of the IEEE C37.118 server. Message rates of 120 or 100 are only supported on the SEL-3350, SEL-3555, and SEL-3560 hardware with SEL-2245-42, SEL-2245-4, and SEL-2245-411 modules that use a performance class of P (protection).

<sup>b</sup> IEEE C37.118.1-2011 defines two performance classes: P (protection) and M (meter). P-class measurements use less filtering, resulting in faster response times and lower message latency. M-class measurements use more filtering, resulting in slower response times and higher message latency.

## Configuration

Configuring an Axion PMU does not require channel mapping or naming. After adding an ac analog input module (see *EtherCAT* on page 196), configure its PMU settings in the **Settings** tab under the PMU grouping, as shown in Figure 2.193.

| 22454200000, PRCTPT, AC 3CT/3PT Protection (1A/5A, 300V), Client - Ethernet [EtherCAT Protocol] |                         |                   |                                  |  |
|---|-------------------------|-------------------|----------------------------------|--|
| Properties  | Setting                 | Value             | Range                            | Description                              |
| Settings  | + Fundamental Tags      |                   |                                  |  |
| Analog Inputs   | + General               |                   |                                  |  |
| Diagnostics   | + Oscillography         |                   |                                  |  |
| Tags  | + PMU                   |                   |                                  |  |
|   | Station Name            | SEL_PRCTPT_1_ECAT | 1-255 (characters)               | The PMU station name                     |
|   | Current Phasor Data Set | Phase             | All,Phase,Positive Sequence,None | Current Phasor channels for PMU data set |
|   | Voltage Phasor Data Set | Phase             | All,Phase,Positive Sequence,None | Voltage Phasor channels for PMU data set |
|   | Global PMU Id           | 1                 | 0-34028236692093846346337460...  | Global identifier for this PMU           |
|   | PMU Id                  | 1                 | 1-65534                          | Identifier for this PMU                  |

Figure 2.193 Axion PMU Configuration

Add the Axion PMU to an IEEE C37.118 server by selecting the name of the module in the PMU Reference column in the PMUs tab of the server, as shown in *Figure 2.194*.

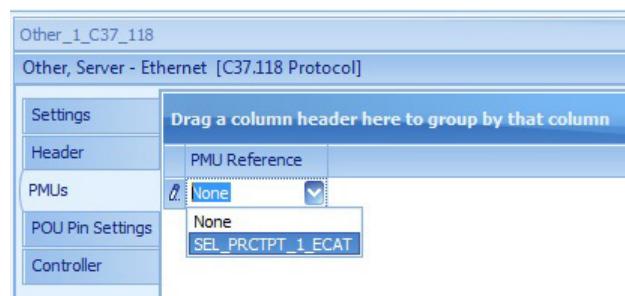


Figure 2.194 Add Axion PMU


Configure the Synchrophasor Messaging Rate and Synchrophasor Performance Class in the **Settings** tab in the EtherCAT I/O Network page. ACSELERATOR RTAC will indicate an error if the Synchrophasor Messaging Rate does not match the data rate of the IEEE C37.118 server.

| EtherCAT I/O Network |                                 |       |   |                                     |
|----------------------|---------------------------------|-------|---|-------------------------------------|
| Connections          | Setting                         | Value | Range                                       | Description                         |
| Settings             | + Synchrophasors                |       |   |                                     |
|                      | Synchrophasor Messaging Rate    | 60    | 1,2,4,5,10,12,15,20,30,60 (messages/second) | The synchrophasor messaging rate    |
|                      | Synchrophasor Performance Class | M     | P,M   | The synchrophasor performance class |

Figure 2.195 Axion PMU Message Rate Settings

## IEEE C37.118 Server PMU

A Server PMU is a tag list that defines a custom PMU data set within the RTAC logic engine. Data values, time stamps, and quality status associated with the data set must be specified by the user. This allows for the creation of a virtual PMU within the RTAC logic engine. An IEEE C37.118 server can be configured to transmit any PMU data set defined in the RTAC project, including IEEE C37.118 server PMUs, Axion PMUs *IEEE C37.118 Axion PMU on page 458*, and IEEE C37.118 client PMUs.

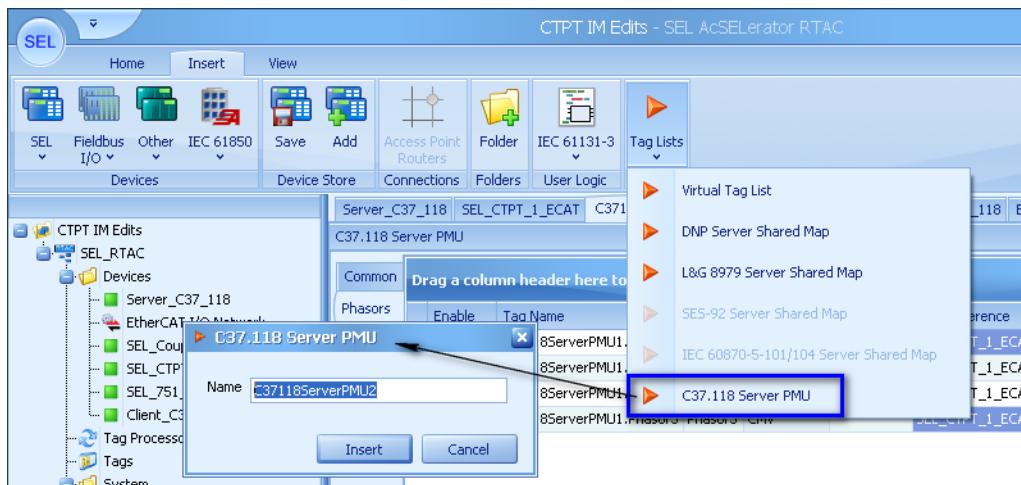

**Figure 2.196 Insert IEEE C37.118 Server PMU**

Add an IEEE C37.118 server PMU by selecting **Tag Lists** from the **Insert** menu. Give the PMU a unique name.

## Server PMU Time Stamps

The IEEE C37.118 server PMU data set is associated with a single time stamp that is derived from either a user-specified time stamp or the system time. The original time stamp is adjusted to conform to the IEEE C37.118-mandated sequence of sub-second values which begin at zero for the top of the second and are evenly divided based on the synchrophasor reporting rate.

## Tag Referencing

The IEEE C37.118 server PMU tag list allows the optional specification of a tag reference for all measurements and statuses, as well as a required tag reference for the Time Reference and Quality Reference settings on the **Settings** tab. Creation of a data assignment through use of the tag referencing differs from creation of a data assignment made through the Tag Processor or user logic. Instead of copying the value of the tag from the source tag to the destination tag, the software creates a direct link to the source tag in the memory of the RTAC. Because of this, working with reference tags within RTAC settings differs from use of the Tag Processor or user logic in the following ways:

- ▶ No data manipulation (such as scaling, offsetting, or logical math) can be performed on the data prior to assignment.
- ▶ Because both the source and destination tag point to the same memory location, a change to the destination tag changes the source tag (the tag reference), and a change to the source tag changes the destination tag.

### ⚠️ IMPORTANT

Only tags from communication protocol clients and tag lists are considered valid for tag referencing. This excludes variables declared in custom POU's or GVL's.

## Server PMU Configuration

The server PMU contains a tab for general settings as well as tabs for defining measurements and additional status information.

### Settings Tab Configuration

The **Settings** tab allows for the definition of global identifiers for the PMU data set as well as settings that can affect how an IEEE C37.118 server handles the data set.

### Time Reference

Assign a timestamp\_t tag or any tag that contains a timestamp\_t structure. This tag is used as the time reference for the PMU data set. This time reference will supersede the timestamp\_t substructure on each tag in the data set.

### Time Variance (Advanced Setting)

This is the maximum allowable amount that the time reference can be rounded in order to conform to an IEEE C37.118 sequence of sub-second values for the given Data\_Rate System Tags setting. If the time reference time stamp deviates by more than the specified time variance, the time stamp assigned to the IEEE C37.118 server PMU will not update. Any IEEE C37.118 servers configured in the RTAC project will observe this as a missing sample.

*Table 2.108* shows an example sequence of Time Reference values and the corresponding rounded sub-second time stamps that are assigned to the IEEE C37.118 server PMU data set.

**Table 2.108 PMU Time Stamp Rounding Example for System Tags**

| Time Reference Fraction of Second (in microseconds) | IEEE C37.118 Server PMU Fraction of Second (in microseconds) |
|---|--|
| 1000  | 0  |
| 15000   | 16667  |
| 34000   | 33333  |
| 48500   | 50000  |
| 69000   | 50000 (No change. Expected 66667 ± 2000)                     |
| 84000   | 83333  |
| 110000  | 100000   |

### Streaming (Advanced Setting)

When streaming mode is enabled, the Time Reference and Time Variance settings are disabled. Synchrophasor time stamps for the PMU data set will be derived from the system time. Note that when streaming mode is enabled, the outgoing IEEE C37.118 messages will indicate fault time quality for the entire message and will indicate "PMU Not Synchronized and Unlocked for over 1000 s" for the PMU data set within the message.

## Quality Reference

Assign a quality\_t tag or any tag that contains a quality\_t structure. This tag is used as the quality reference for the PMU data set. This quality reference will supersede the quality\_t substructure on each tag in the data set.

## Station Name

Assign a station name (1–255 characters) to the PMU data set. An IEEE C37.118 server that includes this data set will apply the station name to the associated STN field of any transmitted configuration frames.

## PMU ID

Assign a numerical ID between 1 and 65534 to the PMU data set. An IEEE C37.118 server that includes this data set will apply the ID to the associated IDCODE field of any transmitted configuration frames.

## Global PMU ID (Advanced Setting)

Optionally assign a global ID code for the PMU data set. This can be any whole number representable by a 128-bit unsigned integer. An IEEE C37.118 server that includes this data set will apply the global ID to the associated G\_PMU\_ID field of the CFG3 message, as defined by IEEE C37.118.2-2011. This setting provides support for unique identification in synchrophasor systems with more than 65534 PMUs.

## PMU Latitude, Longitude, and Elevation

Optionally assign global coordinates and elevation to the IEEE C37.118 server PMU data set. An IEEE C37.118 server that includes this data set will apply the coordinates and elevation to the corresponding fields in the CFG3 message.

## Measurement and Status Configuration

Configure the **Frequency**, **Status**, **Phasors**, **Analogs**, and **Digital**s tabs to fully define the PMU data set that will be made available to one or more IEEE C37.118 servers. Each tab contains a **Tag Reference** column that can be used to map directly from the memory space of an existing tag. If this field is left blank, the **Tag Name** column is enabled. This column specifies the name of the newly created tag which can be populated through user logic in the Tag Processor or a dedicated POU. The **Channel Name** field specifies the data channel name, the first 16 characters of which will appear in the CHNAM field of any outgoing IEEE C37.118 configuration frames transmitted by an IEEE C37.118 server that includes this data set.

## Frequency Tab Configuration

The **Frequency** tab allows for the user specification of the frequency and rate-of-change-of-frequency (ROCOF, denoted as DF\_DT in settings) quantities to be associated with the IEEE C37.118 server PMU. The inclusion of these quantities is required by the IEEE C37.118 standard. If either tag is disabled, an IEEE C37.118 server that includes this data set will set the invalid data flag (IEEE C37.118 Data Frame STAT bit 15 = TRUE) for the given PMU data set in the outgoing data message.

## Status Tab Configuration

The **Status** tab allows for user definition of additional information that is implicit to the IEEE C37.118 protocol.

- ▶ **PMTRIG** (PMU trigger) is a Boolean quantity, per PMU data set, in each IEEE C37.118 data message, which allows the PMU to inform an upstream device that a predefined condition has been met. This bit is typically allowed to be driven by user logic in most PMUs and is often used to initiate triggered archiving in upstream PDCs.
- ▶ **TREA** (trigger reason) is an integer value that is meant to be set in conjunction with an assertion of the PMTRIG Boolean quantity and is intended to provide additional information about the PMU trigger. The IEEE C37.118 standard specifies predefined interpretations of the trigger reason, as shown in *Table 2.109*.

**Table 2.109 Trigger Reason**


| Bit  | Reason                        |
|------|-------------------------------|
| 0    | Manual                        |
| 1    | Magnitude low                 |
| 2    | Magnitude high                |
| 3    | Phase angle diff              |
| 4    | Frequency high or low         |
| 5    | Df/dt high                    |
| 6    | Reserved                      |
| 7    | Digital                       |
| 8–15 | Available for user definition |

## Add IEEE C37.118 Data

- Step 1. Click on a tag type to add and configure tags.
- Step 2. Click + to add tags.
- Step 3. Change Channel Names of tags if necessary.
- Step 4. Assign a tag reference or populate the Tag Name tag in user logic.

Add as many as 3200 phasor tags, 3200 analog tags, and 4000 digital tags to the IEEE C37.118 server PMU data set by configuring the respective **Phasors**, **Analogs**, and **Digitals** tabs. The first 16 characters of each Channel Name setting, for each channel, will be used as the associated channel name (CHNAME).

field) within an outgoing IEEE C37.118 configuration frame that includes this data set. For phasor tags, the Phasor Type will be applied to the phasor type byte within the associated PHUNIT field of an outgoing IEEE C37.118 configuration frame.

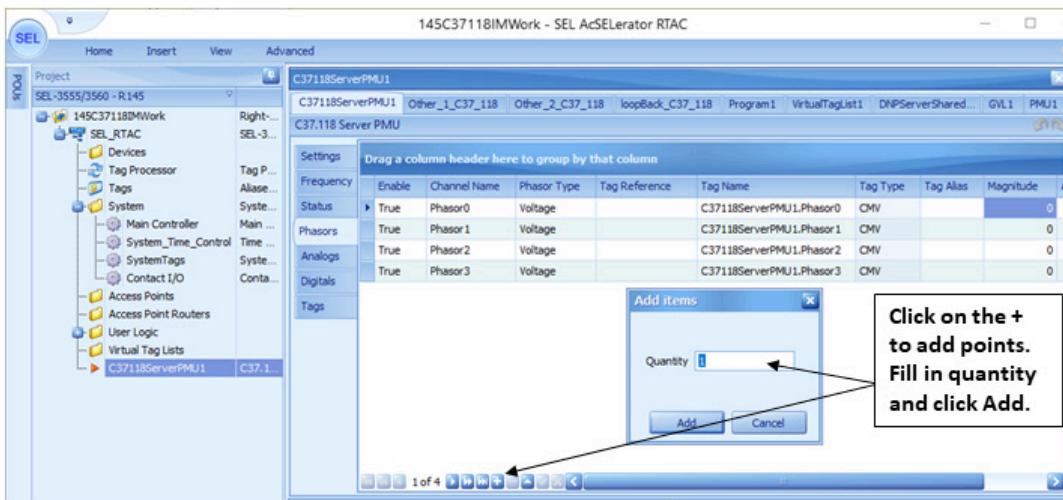

**Figure 2.197 Add IEEE C37.118 Tags**

## Mapping From Logic Engine Tags to IEEE C37.118 Protocol

An IEEE C37.118 server PMU tag list not only allows the specification of a custom PMU data set, but also converts the data, time stamp, and status indicators into an IEEE C37.118-formatted message for consumption by the IEEE C37.118 server. *Table 2.110*, *Table 2.111*, and *Table 2.112* detail the mapping from IEEE C37.118 server PMU tags to the IEEE C37.118 message format.

**Table 2.110 timestamp\_t Mapping to IEEE C37.118**

| From Logic Engine Tag  | Manipulations   | To C37.118 Field  |
|--|---|---|
| .value.dateTime  | Convert to UTC  | SOC   |
| .value.uSec  | Round subsecond value based on Time Variance setting and System Tags Data_Rate setting. | FRACSEC value   |
| <b>Unlocked Time (Bits 4-5 of STAT field)</b>  |   |   |
| .quality.clock_not_synchronized<br>OR<br>.quality.clock_failure<br>OR<br>.quality.accuracy = IEC_Unspecified |   | If TRUE: Unlocked for 1000 s or more<br><br>If FALSE: Locked or unlocked for less than 10 s |
| <b>FRACSEC Time Quality</b>  |   |   |
| .quality.clock_not_synchronized<br>OR<br>.quality.clock_failure<br>OR<br>.quality.accuracy = IEC_Unspecified |   | If TRUE: Fault—Clock Failure<br><br>If FALSE: defer to .quality.accuracy                    |
| .quality.accuracy = IEC_T0   |   | Within 10 ms of UTC   |
| .quality.accuracy = IEC_T1   |   | Within 1 ms of UTC  |
| .quality.accuracy = IEC_T2   |   | Within 100 µs of UTC  |

| From Logic Engine Tag  | Manipulations | To C37.118 Field   |
|--|---------------|--|
| .quality.accuracy = IEC_T3   |               | Within 100 µs of UTC   |
| .quality.accuracy = IEC_T4   |               | Within 10 µs of UTC  |
| .quality.accuracy = IEC_T5   |               | Clock Locked   |
| <b>PMU Time Quality (Bits 6-8 of STAT field)</b>   |               |  |
| .quality.clock_not_synchronized<br>OR<br>.quality.clock_failure<br>OR<br>.quality.accuracy = IEC_Unspecified |               | If TRUE: Estimated time error >10 ms or time error unknown<br><br>If FALSE: defer to .quality.accuracy |
| .quality.accuracy = IEC_T0   |               | Estimated time error <10 ms  |
| .quality.accuracy = IEC_T1   |               | Estimated time error <1 ms   |
| quality.accuracy = IEC_T2  |               | Estimated time error <100 µs   |
| .quality.accuracy = IEC_T3   |               | Estimated time error <100 µs   |
| .quality.accuracy = IEC_T4   |               | Estimated time error <10 µs  |
| .quality.accuracy = IEC_T5   |               | Estimated time error <1 µs   |

**Table 2.111 quality\_t Mapping to IEEE C37.118**


| From Logic Engine Tag  | To C37.118 Field          |
|--|---------------------------|
| .test<br>OR<br>.validity = IEC_Invalid<br>OR<br>.validity = IEC_Questionable | STAT bit 15: Data Invalid |
| .validity = IEC_Invalid  | STAT bit 14: PMU Error    |

**Table 2.112 Data Tags Mapping to IEEE C37.118**

| From Logic Engine Tag            | Manipulations                      | To C37.118 Field |
|----------------------------------|------------------------------------|------------------|
| CMV.instCVal.mag<br>CMV.cVal.mag | Convert to rectangular coordinates | Phasor           |
| MV.mag                           |                                    | Analog           |
| SPS.stVal                        |                                    | Digital          |

## IEEE C37.118 Server

Add an IEEE C37.118 server to transmit PMU data sets from IEEE C37.118 client PMUs, IEEE C37.118 server PMUs, or Axion PMUs. The IEEE C37.118 server applies time alignment to all PMU data sets added to the **PMUs** tab. See *Required System Settings and IEEE C37.118 Client Time Alignment on page 457* for additional information on synchrophasor time alignment in the RTAC.

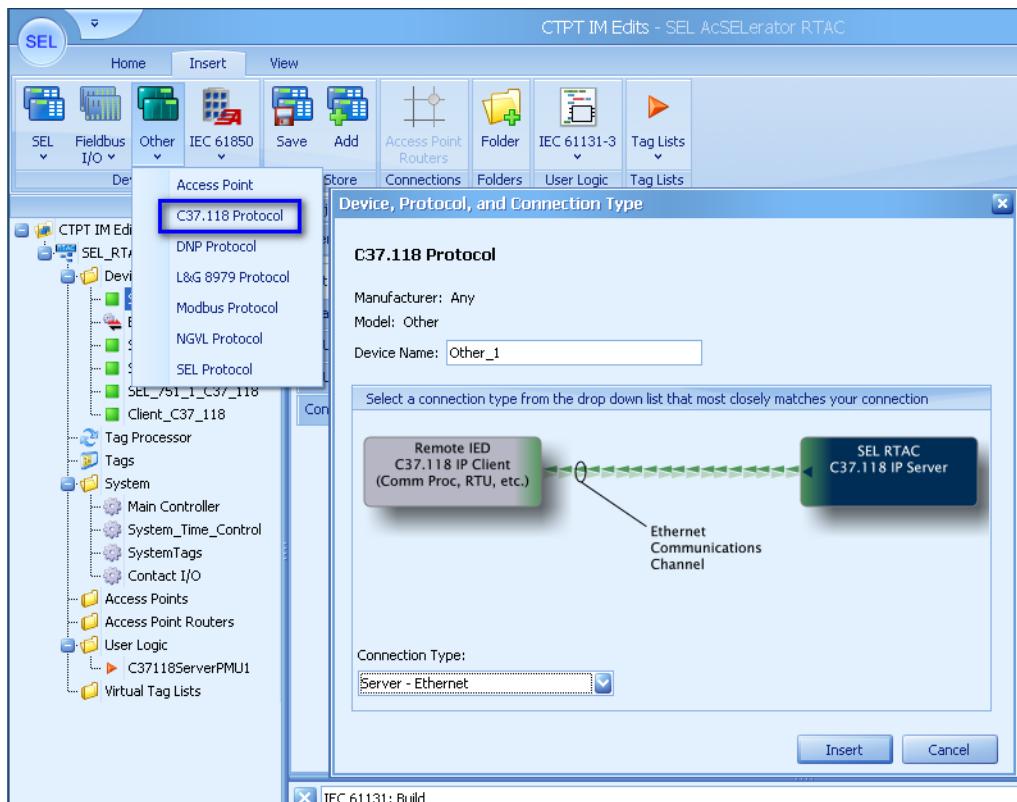

**Figure 2.198 Insert IEEE C37.118 Server Device**

Insert a non-SEL C37.118 device by selecting **Other** from the **Insert** ribbon. Give the device a unique name and select **Server – Ethernet** under **Connection Type**.

By selecting the **Settings** tab, you see all configurable items for communications. Check the **Description** column for details on each configuration item. Move the scroll bar or hover your mouse over a truncated description to see the entire text of a description. Type any necessary comments in the blank column to the far right.

| Setting             | Value | Range               | Description   | Comment |
|---------------------|-------|---------------------|---|---------|
| Transport Scheme    | TCP   | TCP, UDP, UDP...    | Choose the transport protocols and behavior desired.                |         |
| Client IP Address   |       | Valid IPv4 Addr...  | The remote IP address where output packets will be sent.            |         |
| Auto Client IP Port | True  | True, False         | Enable automatically inferring the Client IP Port.                  |         |
| Client IP Port      | 5712  | 1-65534             | The remote UDP port where output packets will be sent.              |         |
| Server IP Port      | 4712  | 1024-65534          | The local IP port that will accept commands.                        |         |
| PDC Id              | 1     | 1-65534             | Phasor data concentrator (PDC) identifier.                          |         |
| Data Rate           | 60    | 1,2,3,4,5,6,10...   | Number of data messages to output per second.                       |         |
| Waiting Period      | 200   | 4-1000 (millsec...) | Amount of time to wait for outputs to be available after the first. |         |

**Figure 2.199 IEEE C37.118 Server Device Settings**

## PDC ID

Assign the global ID for transmitted messages. This will be applied to the IDCODE field in outgoing IEEE C37.118 data messages.

## Data Rate

Data rate is the number of data messages transmitted per second. The IEEE C37.118 server does not require that the data rates associated with the incoming PMUs match the Data Rate setting (except for Axion PMUs); however, the incoming data rates and the IEEE C37.118 server Data Rate value must be divisible into each other. For example, an IEEE C37.118 server can use a Data Rate value of 30 messages per second while including PMUs that use data rates of 1, 2, 3, 4, 5, 6, 10, 12, 15, 20, 30, 60, 120, or 240 messages per second. An IEEE C37.118 server cannot, for example, use a Data Rate value of 20 messages per second while including PMUs that use data rates of 3, 6, 12, 15 or 30.

Data rate conversions from higher to lower are accomplished with simple decimation (no filtering applied).

Data rate conversions from low to high are accomplished by the insertion of zero-filled data samples and invalid quality indicators in between valid samples.

The data rate associated with Axion PMUs is required to match the IEEE C37.118 server Data Rate.

## Waiting Period

The Waiting Period setting defines the length of time after receiving the first value that the server will wait before determining that data are missing and declaring the message invalid. When this occurs, the value is set to zero and the status of the message is set to invalid in the corresponding IEEE C37.118 server PMU. Additionally, the IEEE C37.118 Controller POU **Missing\_Data\_Error** pin will assert and the **Missing\_Data\_Count** will increment.

## Communications Transport Scheme

Transport Scheme configures transport protocols and behavior.

### TCP

All messages are sent over a TCP connection. TCP provides a more robust communication path and can recover from some network problems, but adds additional latency.


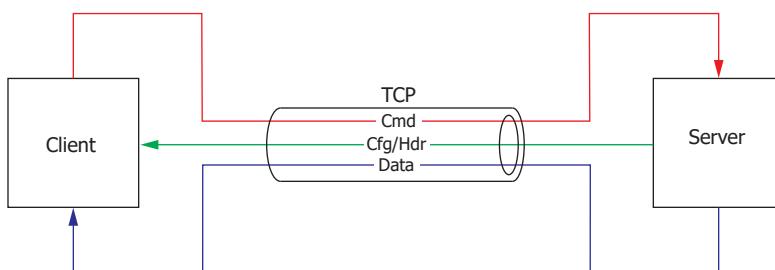


Figure 2.200 TCP Connection

## UDP

UDP communicates exclusively over UDP including commands, data, headers, and configuration messages. In this scheme, the client must know the server address and port number. The disadvantage of UDP is that server-to-client communication receives no confirmation, making troubleshooting errors in communication problematic. Because there is no retransmission of data in the event of an error, packets can be permanently lost. In this transport scheme, set **Auto Client IP Port** to **True** to automatically infer the Client IP Port.

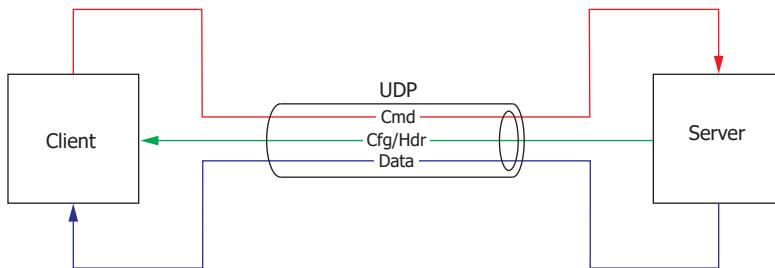


**Figure 2.201 UDP Connection**

## UDP\_S

Configuration and data messages are sent from the server to a UDP port on the client machine. No commands are required or accepted by the server. Configuration messages are sent when the IEEE C37.118 server is enabled and once per minute after that. In firmware versions R150-V0 and later, the Spontaneous Configuration setting allows control over the configuration sent once a minute. You can choose to transmit only standard configuration information, only extended configuration information, both types of information, or no configuration information.

UDP\_S provides more secure connections because no incoming connections and no additional firewall exceptions are required.

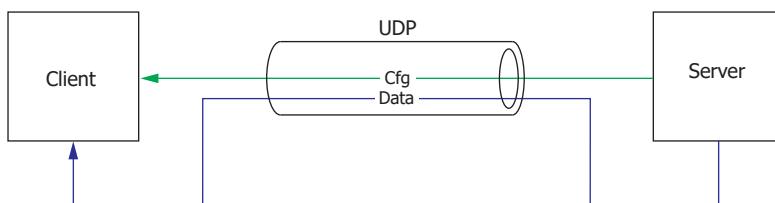

**Figure 2.202 UDP\_S Connection**

## UDP\_T

Command, configuration, and header messages are transmitted and received over a TCP connection, while the data are transmitted to a separate UDP port on the client machine. This allows the command and configuration messages to have the robust transport of TCP while reducing latency on the data messages through UDP. The TCP connection must be maintained for continued transmission of the data messages.

### NOTE

A large Time Variance increases the probability of successfully aggregating the tag, but introduces data to time stamp coherency errors.

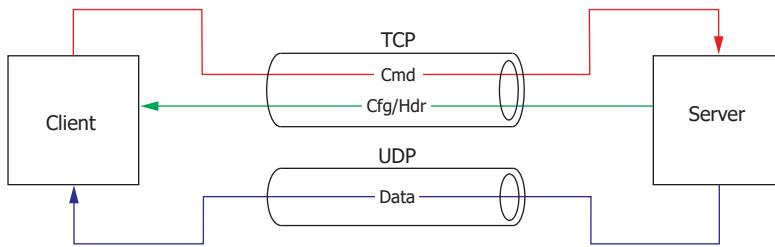


Figure 2.203 UDP\_T Connection

## UDP\_U

Only command messages are transmitted over a TCP connection. The configuration, header, and data messages are transmitted over UDP to the client machine. The TCP connection must be maintained for continued transmission of the data messages.

This is useful in certain firewall situations. Each port is largely unidirectional; the TCP connection is always command messages from the client to the server, and the configuration and data messages are always going to the UDP port on the client.

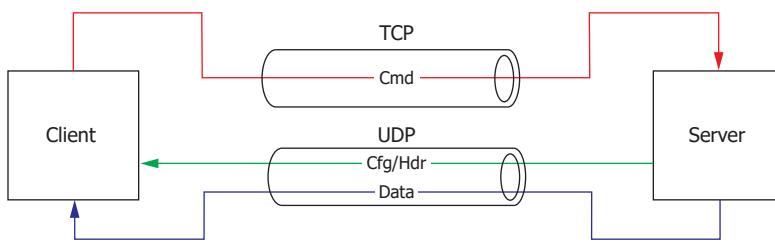


Figure 2.204 UDP\_U Connection

## Client IP Address

The remote IP address where output packets will be sent when using a connectionless Transport Scheme. Only available when the selected Transport Scheme is UDP, UDP\_S, UDP\_T, or UDP\_U.

## Auto Client IP Port

Automatically infer the Client IP Port. Only available in Transport Scheme UDP.

## Client IP Port

The remote UDP port where output packets will be sent when using certain connectionless Transport Schemes. Only available when the selected Transport Scheme is UDP\_S, UDP\_T, or UDP\_U.

## Server IP Port

Local TCP port that will accept connections.

## Enable Multicast

Only available in Transport Scheme UDP\_S.

## Multicast Group IP Address

The multicast group where output packets are sent.

## Ethernet Port

Specify which physical port is used to multicast IEEE C37.118 messages.

## Header Tab

The **Header** tab is where the human-readable header is written.

## PMU Tab

The **PMU** tab allows PMU data sets to be added to the given IEEE C37.118 server.

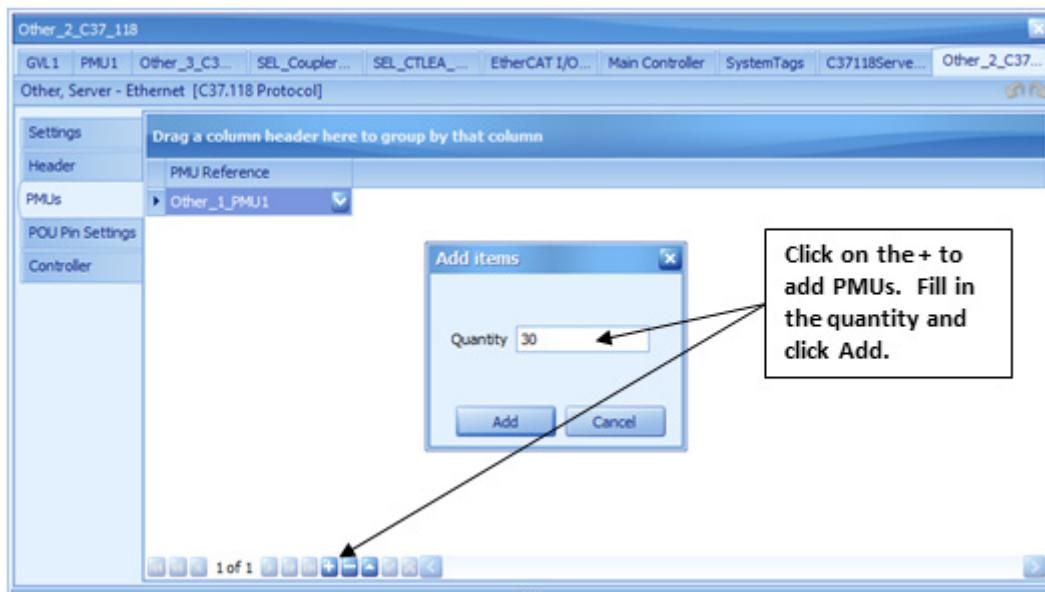


Figure 2.205 Server PMU Reference

Specify a PMU data set from the **PMU Reference** drop-down list. Note that PMU data sets from all configured IEEE C37.118 clients, Axion modules, and IEEE C37.118 server PMU tag lists will be available for inclusion in the IEEE C37.118 server configuration.

Note that the IEEE C37.118 server requires all referenced PMU datasets to use unique station names. Review *IEEE C37.118 Client Configuration on page 452*, *IEEE C37.118 Axion PMU on page 458*, and *IEEE C37.118 Server PMU on page 460* in this manual to identify the location of the associated Station Name settings.

## Using IEEE C37.118 Server POU Controller Outputs for Troubleshooting

This section details a subset of useful POU controller output pins. For advanced troubleshooting, set the **Visible** field to TRUE for all tags on the IEEE C37.118 server POU Pin Settings page and observe the **Controller** tab while online with the project.

### Missing\_Data\_Error and Missing\_Data\_Count

These outputs indicate the presence and quantity of missing data amongst the PMU data sets assigned to the IEEE C37.118 server. The most common cause of this condition is nonsynchronized time references amongst the PMU data sets. The IEEE C37.118 server applies time alignment to the included PMU data sets and will block data when detecting time references that differ more than the **Waiting Period** setting.

## Landis and Gyr LG 8979

In the mid 1980s, Landis and Gyr (LG) developed the Telegyr, or LG 8979 protocol, to provide byte-oriented half-duplex communications between the control center and remote terminal units. The RTAC supports a maximum of 10 LG 8979 client connections and 10 LG 8979 server connections simultaneously.

This section describes the configuration and use of LG 8979 protocol with ACSELERATOR RTAC. A list of supported function codes for client and server connections is included at the end of this section.

For a detailed description of client and server concepts and other general information on protocol configuration, see *Overview on page 129*.

## LG 8979 Client Configuration

Configure an LG 8979 client connection on any of the RTAC serial ports, or configure as a tunneled connection for use over Ethernet. The RTAC will poll for the configured data and store these data into global variables called tags. Use the Tag Processor to map these data to any other protocol, logs, user logic, etc.

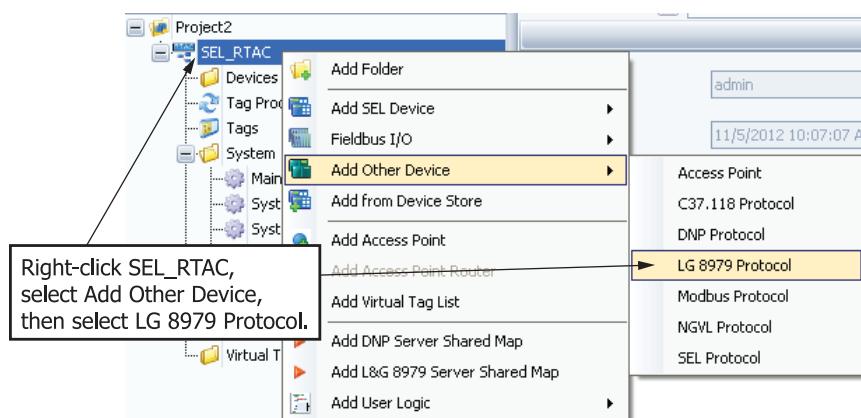


Figure 2.206 Insert LG 8979 Client

Give the device connection a unique name, and select the type of connection as shown in *Figure 2.1*.

## Settings Tab

Upon your selecting the **Settings** tab, the RTAC displays all configurable items for communication. Check the Description column for details on each configuration item. Move the slider bar, or hover your mouse over a truncated description to see the entire text of a description. Type any necessary comments in the blank column to the far right.

Select the **Advanced Settings** check box to enable configuration of advanced settings.

LG 8979 protocol-specific parameters that can be adjusted on the **Settings** tab include the following:

- **RTU Address.** The LG 8979 RTU address of the remote server.
- **Select Timer Count.** Configures the Timer Count field that is present in all SBO Select messages generated by the client when issuing an SBO command. Configure this parameter between 1–127 to use a common timer count value for all SBO Select Messages. Set this parameter to 0 to allow a per-point SBO timer count configurable via the `pulse_config.on_dur` field within the OperSPC structure of the SBO tag.
- **Auto Respond to SOE Log Change, Auto Respond to SOE Change, Auto Respond to Indication Change, and Auto Respond to Freeze Change.** When set to True, automatically respond to the presence of the SLG, SCH, IND, or FRZ flags (respectively) in an RTU response by sending a scan of the appropriate type to collect the change data. This allows for a standard polling configuration where the RTAC only issues Analog Change Report scans at a regular interval and then issues these four scans on exception.
- **Enable Startup Initialization.** When True, enable protocol initialization sequence on startup. The protocol initialization sequence includes the following:
  - A request for Firmware Configuration (FC 39)
  - A request to write Analog Deadbands for all configured analog input values (FC 34). The value written for each point is retrieved from the per-tag **Deadband Count** field on the Analog Inputs tab.
  - A request to write Accumulator Presets for all configured accumulator values (FC 36).
  - A request for a Force Report on any configured tag values that should be populated at startup (e.g., Analog Inputs, Indications, SOEs).

## Messages Tab

Define the type and frequency of messages the RTAC sends to the LG 8979 IED in the **Messages** tab. There are predefined messages by default, but you can adjust the default settings to alter the poll period, function, poll type, and range of points the messages use. See *Table 2.113*.

| Other, Client - Serial [L&G 8979 Protocol, AP, Com_01, 19200] |   |               |                      |             |       |       |        |
|---|---|---------------|----------------------|-------------|-------|-------|--------|
| Settings  | Drag a column header here to group by that column |               |                      |             |       |       |        |
|   | Message Name                                      | Function      | Point Type           | Point Range | Start | Count | Period |
| Analog Inputs   | Analog_Force_Report                               | Force Report  | Analog Input         | All         |       |       | 60000  |
| Analog References   | ADC_Force_Report                                  | Force Report  | Analog Reference     | All         |       |       | 60000  |
| Accumulators  | Indication_Force_Report                           | Force Report  | Indication           | All         |       |       | 60000  |
| Indications   | SOE_Force_Report                                  | Force Report  | SOE                  | All         |       |       | 60000  |
| SOEs  | Accumulator_Force_Report                          | Force Report  | Accumulator          | All         |       |       | 60000  |
| Digital Inputs  | Digital_Input_Force_Report                        | Force Report  | Digital Input Blocks | All         |       |       | 60000  |
| Select Before Operates  | Analog_Change_Report                              | Change Report | Analog Input         | All         |       |       | 1000   |
| Pulse Outputs   |   |               |                      |             |       |       |        |
| Digital Outputs   |   |               |                      |             |       |       |        |
| Analog Outputs  |   |               |                      |             |       |       |        |
| Messages  |   |               |                      |             |       |       |        |

Figure 2.207 LG 8979 Messages

Table 2.113 LG 8979 Messages

| Column Name  | Description  |
|--------------|--|
| Message Name | User-defined message name  |
| Function     | The function the message performs as either Force Report or Change Report  |
| Point Type   | The type of point requested for by the message                             |
| Point Range  | The range of points polled for by the message                              |
| Start        | The first point of a range of points                                       |
| Count        | The number of points within a range of points                              |
| Period       | The period of time in milliseconds in which the RTAC will send the message |

## Add Client Device Data

Select device data settings tabs such as Analog Inputs, Analog References, Accumulators, etc., to add and configure LG 8979 tags.

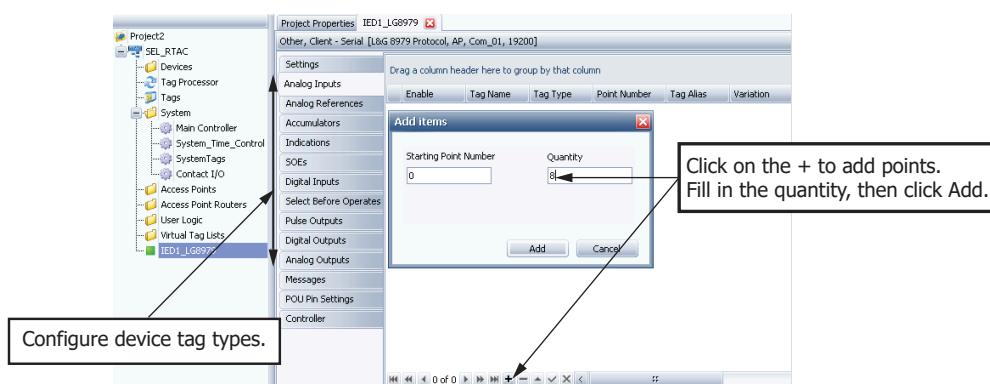


Figure 2.208 Add LG 8979 Client Tags

The following steps detail the addition of client device data.

- Step 1. Click on a device tag type tab to add and configure tags.
- Step 2. Click + to add tags (4096 tag limit per device tag type).  
Creating only the number of necessary tags will help the system run at optimum performance.
- Step 3. Change the names of the tags as necessary.
- Step 4. Change other tag-related information as necessary.  
Repeat these steps to configure all IED devices. When finished, configure one or more servers to deliver the data to remote client devices.

#### **NOTE**

Use Copy (**<Ctrl+C>**) and Paste (**<Ctrl+V>**) to populate columns of Tag names and to duplicate devices.

## **Device Tag Type Configuration Parameters**

Data and poll types have parameters that you must configure correctly to ensure proper system operation. ACCELERATOR RTAC will gray out configuration fields that do not apply to a specific device.

**Table 2.114 Common Device Tag Type Parameters**

| Parameter    | Description   | Default   |
|--------------|---|---|
| Enable       | Set this flag to True to enable processing of this tag.<br>Set this flag to False to disable processing.  | True  |
| Tag Name     | This parameter describes the tag. You can change this name as necessary.  | The default tag name contains the device name and tag type and is numbered 0–n tags |
| Point Number | This is the point number for which the LG 8979 client will poll. If points are not contiguous in the IED, change these point numbers to match the LG 8979 database for the IED. | Contiguous from 0 to the point count  |
| Tag Alias    | Enter an optional descriptive tag name in this field, and then reference this tag alias anywhere in the RTAC system in place of the actual tag name.                            |   |
| Comment      | Optional user-entered comment field   |   |

**Table 2.115 Digital Input, Indications, and SOEs Parameters**

| Parameter    | Description   | Default |
|--------------|---|---------|
| Tag Type     | See <i>Data Types</i> on page 1137 for more details.                  | SPS     |
| Block Number | The digital input block number. Each block contains 16 binary inputs. |         |

| Parameter    | Description   | Default  |
|--------------|---|--|
| Bit Number   | The bit placement for this digital input within the block specified | Bit number 0 is the first digital input, bit 1 is the second, and so forth |
| Status Value | The initialized value at startup                                    | False  |

**Table 2.116 Digital and Pulse Output and Select Before Operate Parameters**

| Parameter        | Description  | Default  |
|------------------|--|--|
| Tag Type         | See <i>Data Types on page 1137</i> for more details. In DNP, there are five binary output operations and one status. | Control operations is operSPC. Status is SPS                               |
| Block Number     | The digital input block number. Each block contains 16 binary inputs.  |  |
| Bit Number       | The bit placement for this digital input within the block specified  | Bit number 0 is the first digital input, bit 1 is the second, and so forth |
| Status Value     | The initialized state at startup   | False  |
| Control Model    | Defines if the control is a single pulse or persistent (latch) type control  | Defaults are set according to control type and cannot be changed           |
| Number of Pulses | Defines the number of pulses the control will issue each time this point is controlled                               | 1  |
| On Pulse Dur     | Defines the duration for an active pulse   |  |
| Off Pulse Dur    | Defines the duration for an inactive pulse   |  |

**Table 2.117 Accumulators Parameters**

| Parameter    | Description   | Default |
|--------------|---|---------|
| Tag Type     | See <i>Data Types on page 1137</i> for more details.  | BCR     |
| Actual Value | The initialized running value at startup  | 0       |
| Frozen Value | The default frozen value the tag will have before the RTAC initializes the tag upon startup |         |

**Table 2.118 Analog Input and Analog References Parameters**

| Parameter      | Description   | Default |
|----------------|---|---------|
| Tag Type       | See <i>Data Types on page 1137</i> for more details.  | MV      |
| Inst Magnitude | The initialized instantaneous value at startup  |         |
| Magnitude      | The initialized dead-banded value at startup  |         |
| Dead Band      | The number of units of change necessary to move the Inst Magnitude value into Magnitude. If $ instMag - mag  > db$ , then $mag := instMag$ . An excursion of this dead band will generate a time-stamped DNP event. |         |
| Zero Dead Band | The number of units at or below which Magnitude is forced to zero. If $ mag  < zeroDB$ , then $mag := 0$ .  |         |
| Max Value      | The maximum value allowed for this point. If $instMag > MaxValue$ , ".q.detailQual.outOfRange" is set.  |         |

| Parameter | Description   | Default |
|-----------|---|---------|
| H H Limit | The high-high alarm limit. Excursions beyond this limit cause the RTAC to generate a high-high alarm. |         |
| H Limit   | The high alarm limit. Excursions beyond this limit cause the RTAC to generate a high alarm.           |         |
| L Limit   | The low alarm limit. Excursions beyond this limit cause the RTAC to generate a low alarm.             |         |
| L L Limit | The low-low alarm limit. Excursions beyond this limit cause the RTAC to generate a low-low alarm.     |         |
| Min Value | The minimum value allowed for this point. If instMag < Min Value, ".q.detailQual.outOfRange" is set.  |         |


**Table 2.119 Analog Outputs**

| Parameter     | Description   | Default |
|---------------|---|---------|
| Variation     | The variation of the output type. Options are 12 bit signed or unsigned.                              |         |
| Status Value  | The initialized value at startup  |         |
| Control Value | The initialized control value at startup  |         |
| Max Value     | The maximum value allowed for this point. If InstMag > Max Value, ".q.detailQual.outOfRange" is set.  |         |
| H H Limit     | The high-high alarm limit. Excursions beyond this limit cause the RTAC to generate a high-high alarm. |         |
| H Limit       | The high alarm limit. Excursions beyond this limit cause the RTAC to generate a high alarm.           |         |
| L Limit       | The low alarm limit. Excursions beyond this limit cause the RTAC to generate a low alarm.             |         |
| L L Limit     | The low-low alarm limit. Excursions beyond this limit cause the RTAC to generate a low-low alarm.     |         |
| Min Value     | The minimum value allowed for this point. If instMag < Min Value, ".q.detailQual.outOfRange" is set.  |         |

## LG 8979 Server Configuration

Configure an LG 8979 server connection to communicate via serial or Ethernet tunneled to LG 8979 polling clients. Create binary input, analog input and other tag types in an LG 8979 Server Shared Map as placeholders for data that the clients will poll. Configure the LG 8979 server to use the configured shared map. Each LG 8979 server can use a unique map or share the same map. You can create a maximum of 10 LG 8979 shared maps in a project. Map data to those shared map tags by using the Tag Processor from client IED or other source tags in the RTAC database.

Insert a unique LG 8979 Server connection for each LG 8979 client connected to the RTAC.

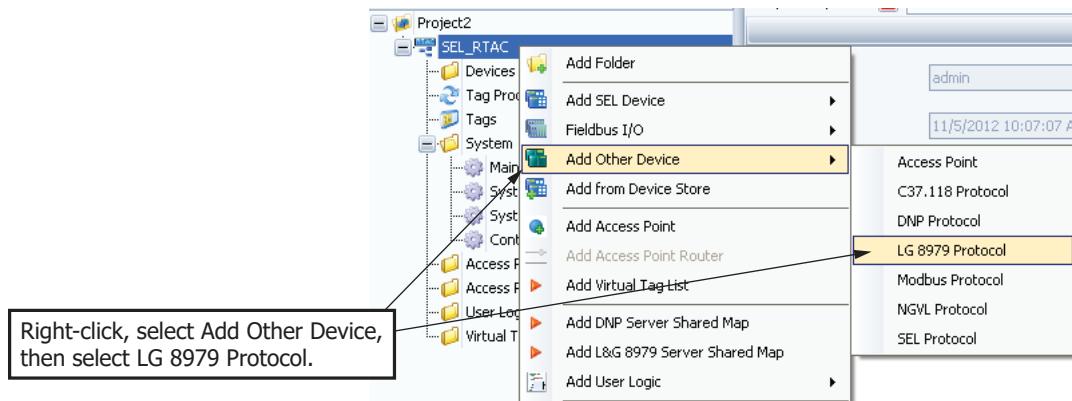

**Figure 2.209 Insert LG 8979 Server Device**


Give the device connection a unique name, and select the type of connection as shown in *Figure 2.3*. The **Settings** tab contains all the configurable items for communications. Note that you must enter an LG 8979 Server Shared Map name in the settings. This map contains all the tags that this LG 8979 server uses. Check the Description column for details on each configuration item. Move the slider or hover your cursor over the description to see the entire description text. Type any necessary comments in the blank column to the far right. Select the **Advanced Settings** check box to enable configuration of advanced settings.

## Add LG 8979 Share Map

The following steps detail the addition of a server shared map.

- Step 1. Under the **Insert** tab, select **Tag Lists**, then **LG 8979 Server Shared Map**.


This will insert a configurable tag list for an LG 8979 server. You can configure multiple LG 8979 servers to use this same shared tag list.

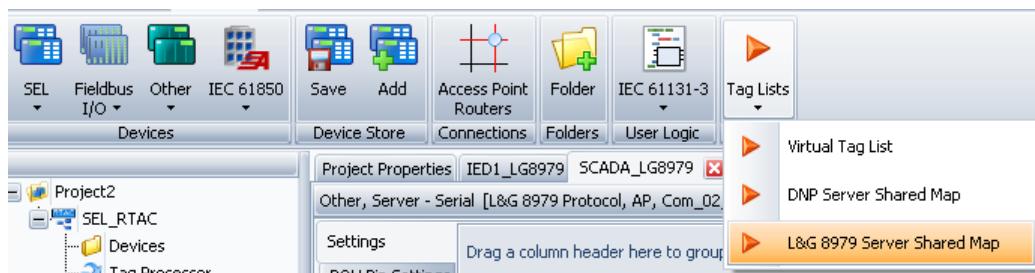

**Figure 2.210 Add LG 8979 Server Map**

- Step 2. Click on a device tag type tab to add and configure tags.  
 Step 3. Click + to add tags (4,096 tag limit per device tag type).  
 Creating only the number of necessary tags optimizes system performance.  
 Step 4. Change the names of the tags as necessary.  
 Step 5. Change other tag-related information as necessary.

Repeat *Step 2* through *Step 5* to configure all server tags. When finished, configure the LG 8979 server to use this custom map by selecting the LG 8979 Map Name under settings. Although more than one LG 8979 server can use the same map, each LG 8979 server will manage separate event queues. Configure the Tag Processor to populate these server connection tags with actual values.

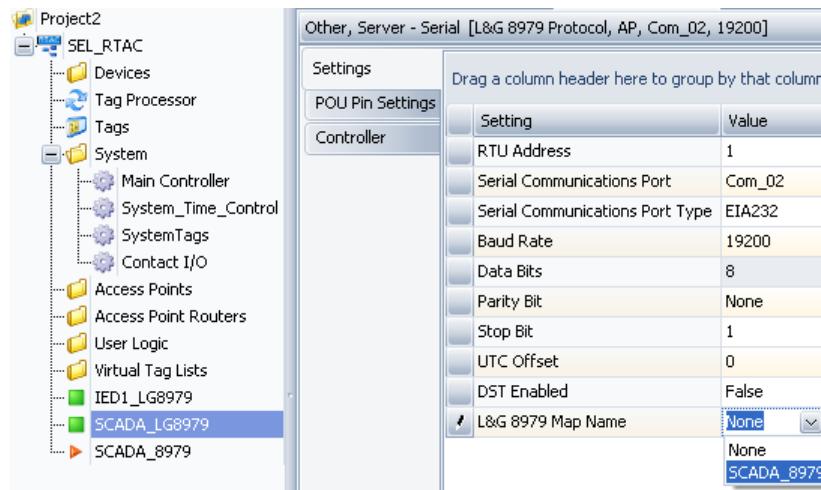

**Figure 2.211 Select LG 8979 Shared Map**

## Device Tag Type Configuration Parameters

Each device tag type has parameters that must be configured correctly to ensure proper system operation. Configuration columns in the LG 8979 Shared Map have the same meaning as in LG 8979 clients (described previously) except for the addition of fields that have special meaning in LG 8979 servers. Use these fields to alter the default object variations returned to a polling LG 8979 client.

## POU Pin Settings

See *POU Pin Settings (Advanced Usage)* on page 141 for a description of the **POU Pin Settings** tab.

## Tags

See *Tags (Overview)* on page 142 for a description of the **Tags** tab.

## Controller

See *Controller (Advanced Usage)* on page 141 for a description of the **Controller** tab.

## Supported Function Codes

**Table 2.120 LG 8979 Client Function Codes**

| Function Code                 | Description  |
|-------------------------------|--|
| 0 Analog Change Report        | Values that have exceeded an integrated delta value or values that have exceeded the configured dead band  |
| 1 Analog Force Report         | The present value of a point or group of points  |
| 5 ADC Reference Force Report  | The present value of ADC references  |
| 6 Indication Change Report    | Indications that have changed state at least once since the last reported value  |
| 7 Indication Force Report     | The present state and memory change of indications   |
| 8 SOE Change Report           | SOE report containing the state and time of SOEs that have changed since the last reported value   |
| 9 SOE Force Report            | All SOE entries  |
| 11 Digital Input Force Report | The present state of digital input points  |
| 12 Accumulator Change Report  | Accumulator values that have been frozen and not reported in the last read   |
| 13 Accumulator Force Report   | All frozen accumulator values  |
| 14 SOE Log Change Report      | All SOE log entries that have changed since the last interrogation   |
| 20 Analog Output              | Control an analog output value.  |
| 21 SBO Select                 | Select an SBO point to operate.  |
| 22 SBO Operate                | Operate the previously select SBO point.   |
| 23 Digital Output             | Immediate operate on a digital input point   |
| 24 Accumulator Freeze         | Freeze one or more accumulator point values.   |
| 25 Pulse Output               | Immediate control to raise or lower for a configured duration  |
| 26 Pulse Train Output         | A single message that controls several points for a raise or lower for a configurable duration   |
| 30 Restart RTU                | Perform a restart of the remote unit.  |
| 32 Time Synchronization       | Time synchronize the remote unit.  |
| 33 Time Bias                  | Message sent from the polling master and returned by the client for the purpose of determining how long it takes for the message to travel on the wire. The time bias is added to the time synchronization to compensate for time lost in data transmission. |
| 34 Analog Dead Bands          | Set dead bands for each analog point in the remote unit.   |
| 37 Continuation Request       | If the remote unit replies with the continuation bit set in the data message, the polling client sends a continuation request to the remote server. Upon receiving the continuation request, the remote server sends the next message.                       |
| 38 Repeat Last Message        | Upon receipt of the repeat last message function code, the server resends the last transmitted message.  |

| Function Code             | Description  |
|---------------------------|--|
| 39 Firmware Configuration | Upon receipt of the firmware configuration function code, the server replies with a number representing the firmware version.        |
| 63 Exception Report       | If the number of exceptions (data changes) exceed the server's change buffer capacity, the server will generate an exception report. |

In addition to the function codes listed in *Table 2.120*, the LG 8979 server supports the function codes shown in *Table 2.121*.

**Table 2.121 LG 8979 Server Function Codes**

| Function Code                | Description   |
|------------------------------|---|
| 2 Analog Group Change Report | Values that have exceeded an integrated delta value or values that have exceeded the configured dead band |
| 3 Analog Group Force Report  | The present value of a point or group of points   |
| 31 RTU Configuration         | The server reports the point configuration  |

## MIRRORED BITS

### Overview

MIRRORED BITS communications is a direct relay-to-relay communications protocol that allows IEDs to exchange information quickly, securely, and with minimal expense. The MIRRORED BITS message consists of eight transmit bits (TMBs) and eight receive bits (RMBs). The RTAC sends TMBs to IEDs. IEDs send TMBs to the RTAC, which receives these as RMBs.

The RTAC communicates MIRRORED BITS as would a relay, but it also acts as a data gateway between MIRRORED BITS and other protocols or programs running in the RTAC. For example, you can map MIRRORED BITS RMBs to DNP digital inputs to interface to a SCADA system. You can map control tags from user-defined logic or a remote client to TMBs to issue high-speed controls to an SEL IED through MIRRORED BITS.

When using MIRRORED BITS in user logic, SEL recommends that POU pin Rx\_OK\_Instantaneous and/or the validity of individual received MIRRORED BITS tags be considered before making assignments to other protocols or contact I/O. This helps prevent undesired actions being taken when communications are lost. In firmware versions R150-V0 and later, in the unlikely scenario where the logic engine detects a hardware issue with the serial port, the following diagnostics occur: POU pin Rx\_OK\_Instantaneous deasserts; POU pin RX\_ID\_Error resets to 0; POU pin Rx\_Under\_Run\_Error\_Count begins incrementing at every task interval; the validity of all MIRRORED BITS tags are set to invalid; MIRRORED BITS status values follow the setting "Channel Fail State"; and a diagnostic message is written to the System\_Hardware\_Failure system tag, which is logged by default to the SOE log.

## MIRRORED BITS Configuration

Because MIRRORED BITS is a peer-to-peer serial communications protocol, there are no client, server, or Ethernet options. You can configure MIRRORED BITS on an EIA-485/EIA-422 or EIA-232 serial line, but this configuration does not support multi-drop communication. You can configure as many MIRRORED BITS communications channels on one RTAC as there are serial ports not already used for another purpose.

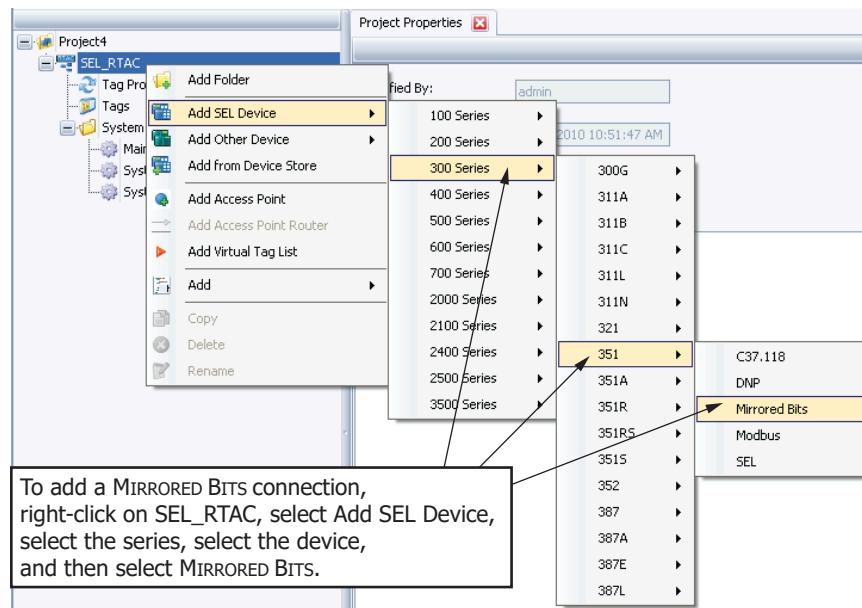


Figure 2.212 Insert MIRRORED BITS Device

Give the device connection a unique name, and select a connection type as shown in *Figure 2.1*. Note that MIRRORED BITS is a point-to-point serial protocol, so the only connection option is serial.

MIRRORED BITS is a peer-to-peer protocol designed for one-to-one high-speed serial communications; it cannot be multidropped. Insert one of these types of connections for each communications port on the RTAC that connects to a MIRRORED BITS IED connection via EIA-232 or EIA-485/EIA-422.

The **Settings** tab contains all configurable items for communications. Check the description column for details on each configuration item. Move the slider, or hover your mouse over the description to see the entire description text. Type any necessary comments in the blank column to the far right. Right-click on the title bar above the column headings or click **Options** to show advanced configuration settings. The following text explains some of the MIRRORED BITS-specific settings.

**MIRRORED BITS Message Type**

|         |  |
|---------|--|
| MB      | The standard MIRRORED BITS configuration using six data bits, one parity bit, and one stop bit for data encoding.  |
| MB8     | MIRRORED BITS using six data bits, one parity bit, and two stop bits for data encoding.  |
| MBT9600 | Provide for use over a Pulsar MBT-9600 modem.<br>Set data rate = 9600<br>A delay of at least 2 ms shall be inserted after each outgoing message<br>RTS shall be reset (to a negative voltage at the EIA-232 connector) |

**Accept Receive Identification**

The incoming MIRRORED BITS message will have an encoded address (historically called RXID). Configure this receive address to match the address in the message. The received message is only valid if its RXID matches the Accept Receive Identification. The MIRRORED BITS protocol driver will reject the message if the receive ID in the message does not match the receive address you configured.

**Send Transmit Identification**

The RTAC will encode the outgoing MIRRORED BITS message with this configurable transmit address (historically called TXID). The receiving device will match this address with its receive address to ensure that it has received a valid message.

**Receive MIRRORED BITS Bad Channel Pickup**

The number of seconds a MIRRORED BITS channel must be without communications before the RTAC considers the channel to be no longer functioning. If the channel drops out for more than this configurable number of seconds, the Rx\_Channel\_Bad output pin asserts.

**PPM MIRRORED BITS Unavailable Channel Pickup**

Used to detect degraded communication on this MIRRORED BITS channel. Communication is still occurring, but the RTAC is dropping some number of packets. The PPM setting specifies an acceptable bad or dropped packet error rate in parts per million (PPM). If the dropped packet rate exceeds this setting, the output pin Rx\_Channel\_Unavailable asserts. The present value of this calculation is contained in the POU output pin Rx\_Channel\_Unavailable\_PPM. For example, if the RTAC were to drop half the packets, the PPM error rate would be 500000.

**Transmission Mode**

Paced mode will send MIRRORED BITS at a rate of one message every 3 ms to allow for communications with relays that only communicate every quarter cycle (every 4 ms at 60 Hz). Set Transmission Mode to Normal to communicate to other RTACs and for 400-series relays. Note that this setting is locked out and unavailable for Baud Rates of 9600 or less.

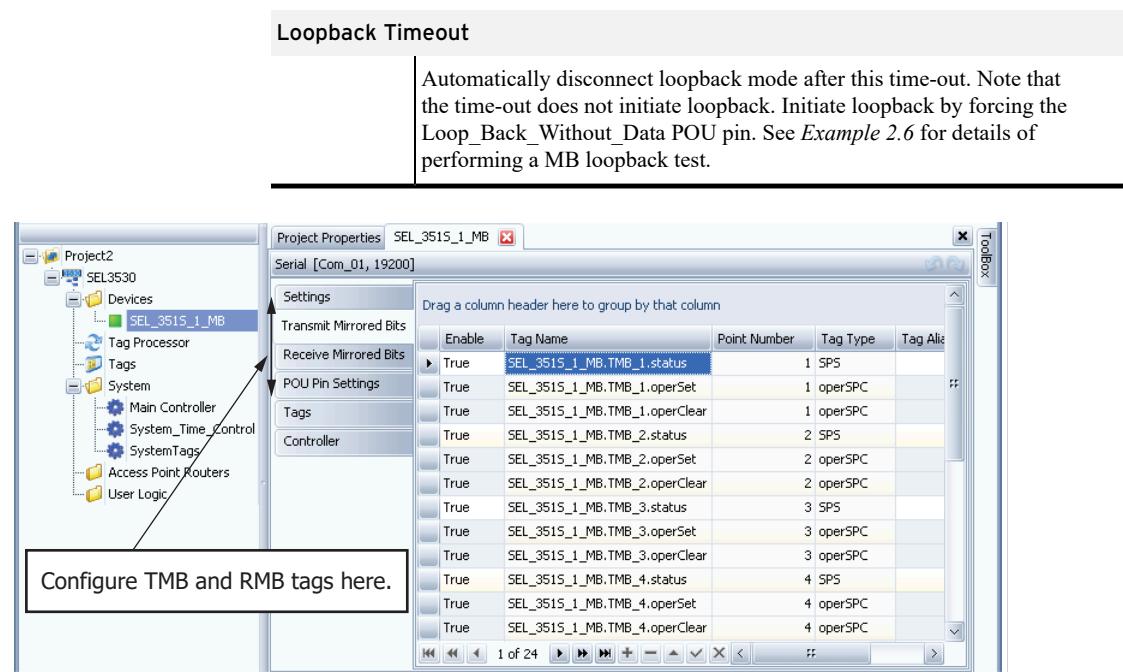


Figure 2.213 Configure MIRRORED BITS Tags

## Data Configuration Parameters

Configure default values and other information for transmit and receive MIRRORED BITS. Descriptions of common fields will only be detailed in *Transmit MIRRORED BITS* on page 484.

- Step 1. Click on the **Transmit Mirrored Bits** or **Receive Mirrored Bits** tab.
- Step 2. Change the names of the tags, as necessary (Receive MIRRORED BITS only).
- Step 3. Add alias names, as necessary.
- Step 4. Change other point-related information as needed.

## Transmit MIRRORED BITS

Transmit MIRRORED BITS populate outgoing messages to IEDs. They have a default value and are set through mapping in the Tag Processor or through custom logic.

Table 2.122 TX MIRRORED BITS Parameters

| Parameter | Description  | Default |
|-----------|--|---------|
| Enable    | Set this flag True to enable processing of this point.<br>Set this flag False to disable.        | True    |
| Tag Name  | The fixed tag name contains the device name and point type (TMB), and it is numbered 1–n points. |         |

| Parameter    | Description   | Default   |
|--------------|---|---|
| Point Number | The point number of these MIRRORED BITS. Note that point numbers are duplicated in sets of three. This is because the attributes, operSet, operClear, and status, belong to the same point. |   |
| Tag Type     | See <i>Data Types on page 1137</i> for more details.  | Each tag has three attributes. Two are controls (operSPC type), and one is a status (SPS type). |
| Tag Alias    | Enter an optional descriptive tag name in this field and then reference this tag alias anywhere in the RTAC system in place of the actual tag name.   |   |
| Status Value | The initialized value at startup.   | False   |
| Comment      | Optional user-entered comment field.  |   |

## Receive MIRRORED BITS

Receive MIRRORED BITS are contained in messages that come from another IED.

**Table 2.123 RX MIRRORED BITS Parameters**

| Parameter          | Description   | Default                                     |
|--------------------|---|---|
| Tag Name           | The configurable tag name contains the device name and point type (RMB), and it is numbered 1–n points.                             |   |
| Bit Number         | The bit in the received MIRRORED BITS message corresponding with this point.  |   |
| Channel Fail State | The state to which the RTAC will drive the MIRRORED BITS in the event of channel loss.  | True, False, or Previous (last known state) |
| Pickup Delay       | The number of consecutive packets in which an incoming bit must be asserted before the associated receive MIRRORED BITS asserts.    |   |
| Dropout Delay      | The number of consecutive packets in which an incoming bit must be deasserted before the associated receive MIRRORED BITS deassert. |   |

## MIRRORED BITS Tag

Each MIRRORED BITS point has three main components:

1. **operSet.ctlVal:** A rising-edge change to operSet.ctlVal will set the MIRRORED BITS to a value of 1.
2. **operClear.ctlVal:** A rising-edge change to operClear.ctlVal will set the MIRRORED BITS to a value of 0.
3. **status:** The present state of the MIRRORED BITS.

A rising edge triggers the change, so the values of operSet.ctlVal and operClear.ctlVal must go low before they can trigger another change. For example:

```
T-0: SEL_351R_1_MB.TMB_1.operSet := TRUE
SEL_351R_1_MB.TMB_1.status becomes TRUE (1)
T+1: SEL_351R_1_MB.TMB_1.operSet := TRUE
No change because operSet is already high
T+2: SEL_351R_1_MB.TMB_1.operClear := TRUE
SEL_351R_1_MB.TMB_1.status becomes FALSE (0)
```

Figure 2.214 illustrates the relationship of operSet, operClear, and status in the MIRRORED BITS data structure.

| SEL3530.Application.SEL_351S_1_MB |             |       |
|-----------------------------------|-------------|-------|
| Expression                        | Type        | Value |
| Transmit Mirrored Bits            |             |       |
| Receive Mirrored Bits             |             |       |
| POU Pin Settings                  |             |       |
| Tags                              |             |       |
| Controller                        |             |       |
| <b>TMB_1</b>                      | MRBC        |       |
| operSet                           | operSPC     |       |
| ctlVal                            | BOOL        | FALSE |
| q                                 | quality_t   |       |
| t                                 | timeStamp_t |       |
| pulseConfig_t                     |             |       |
| operClear                         | operSPC     |       |
| ctlVal                            | BOOL        | TRUE  |
| q                                 | quality_t   |       |
| t                                 | timeStamp_t |       |
| pulseConfig_t                     |             |       |
| status                            | SPS         |       |
| stVal                             | BOOL        | FALSE |
| q                                 | quality_t   |       |
| t                                 | timeStamp_t |       |

Figure 2.214 Online MIRRORED BITS

#### Example 2.6 Loopback Test With Controller


This is an example of forcing the Loop\_Back\_Without\_Data POU pin while online to initiate a loopback test. Forcing the pin to TRUE initiates the loopback test. Forcing the pin back to FALSE ends the test.

- Step 1. Download project to RTAC and stay online.
- Step 2. Click on the **Controller** tab.
- Step 3. Type **TRUE** in the prepared **Value** column for Loop\_Back\_Without\_Data pin.

#### NOTE

The RTAC will only increment the Tx\_Message\_Count when a transmit bit changes state. It is possible then for the RTAC to transmit many messages without incrementing this counter.

- Step 4. Press <F6> to force value.  
Loopback test begins.
- Step 5. Click on **TRUE**, and a dialog box prompts for another forced value.
- Step 6. Type **FALSE** in the dialog box, and click **Force**.
- Step 7. The value of Loop\_Back\_Without\_Data is False, and the test ends.
- Step 8. Enter <Shift+F6> to unforce the value.

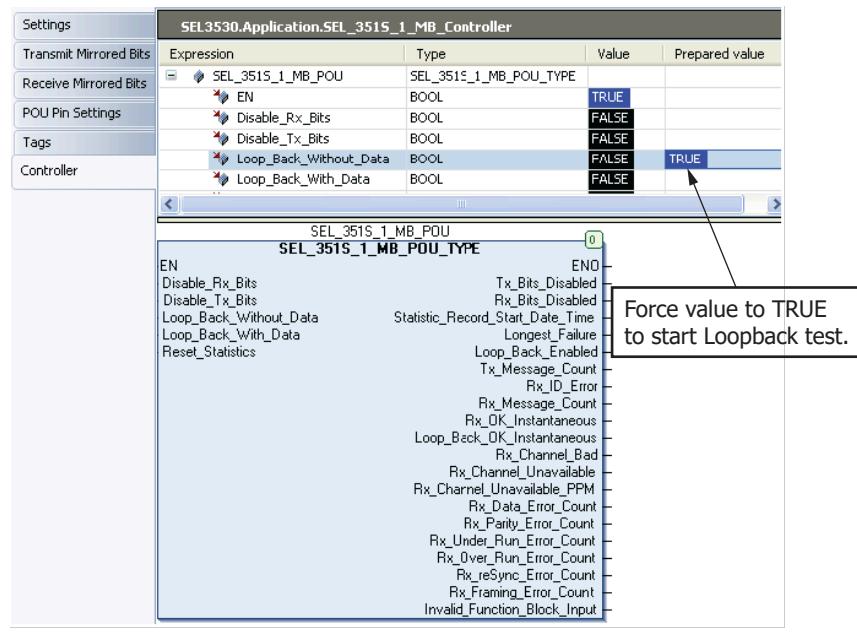

## Modbus

This section describes the configuration and usage of the Modbus protocol with ACSELERATOR RTAC. The RTAC supports Modbus RTU, Modbus/TCP, and Modbus serial tunneled over Ethernet. Modbus ASCII is not supported at this time. Configure the Modbus protocol clients or servers on any of the RTAC serial or Ethernet ports to communicate with Modbus IEDs, communications processors, RTUs, HMI systems, etc. See *Communication Protocol Device Count Support on page 149* for the number of Modbus servers and clients supported for each RTAC model.

### Supported Modbus Function Codes

- Read Coil Status, function code 01h
- Read Discrete Inputs, function code 02h
- Read Holding Registers, function code 03h
- Read Input Registers, function code 04h
- Write Single Coil, function code 05h
- Write Single Holding Register, function code 06h
- Write Multiple Coils, function code 0Fh
- Write Multiple Holding Registers, function code 10h
- Report Client/Server ID, function code 11


**Important:** Register addresses used with some Modbus devices, such as 30001 or 40001, are used for referencing legacy addressing schemes that designate different regions for the various register types into one address space. For example, register addresses in the 30000 range are for input registers, and addresses in the 40000 range are for holding registers. These addresses are for documentation purposes only and are not actually used in the Modbus protocol. The RTAC does not use these register offsets when setting up Modbus protocol.

### NOTE

Register addressing in RTAC Modbus is 0 based. For example, a holding register designated as address 40001 in a third-party device is configured as holding register address 0 in the ACCELERATOR RTAC project. For more details on Modbus addressing and conversion to raw 0-based addressing, see SEL white paper "Modbus Register Addressing and Data Type Variations."

## Modbus Client Configuration

Configure multiple concurrent Modbus client connections to communicate via serial or Ethernet to IEDs. The RTAC will poll data from these IEDs and store the data in its database. Use the Tag Processor to map these data to server connections, logs, user logic, etc.

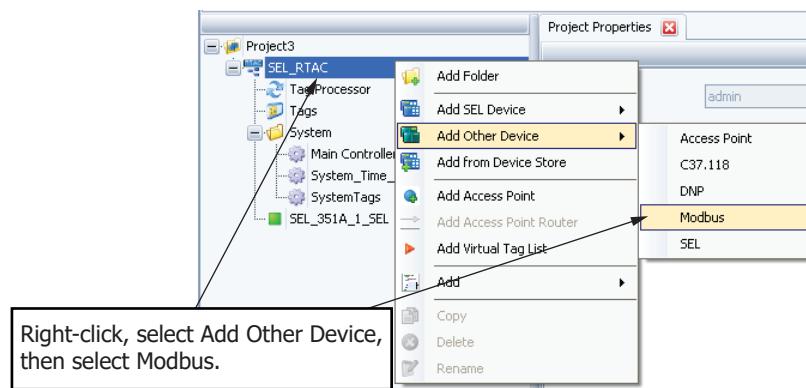

**Figure 2.215 Insert Modbus Client**

Give the device connection a unique name, and select the type of connection as shown in *Figure 2.1*.

## Settings Tab

Upon your selecting the **Settings** tab, the RTAC displays all configurable items for communication. Check the **Description** column for details on each configuration item. Move the slider bar, or hover your mouse over a truncated description to see the entire text of a description. Type any necessary comments in the blank column to the far right.

Select the **Advanced Settings** check box to enable configuration of advanced settings.

The **Server Modbus Address** field allows you to configure the address of the remote Modbus server with which this client will communicate. This value is typically in the range of 1–247 (in traditional serial-line communications, addresses 248–255 are reserved); however, a client can be assigned a value of 0 to dedicate that client for broadcast purposes. A broadcast client is used to issue command messages (using the various function codes to write coils and/or holding registers) that are received and processed by all servers listening on a multidrop communications network regardless of their address. In this mode, no configured polls are issued by the client and only write requests are allowable for Coils and/or Holding Register tags. Because Modbus servers receiving a broadcast write message do not issue a response, no retries are performed (the **Poll Timeout** and **Poll Retries** settings are ignored) and the **Intermessage**

**Transmit Delay** setting is expected to force a delay after a write request is issued before any subsequent requests are issued by this client or other clients on a multidrop network. While in broadcast mode, the **Offline** POU pin generally remains False because no responses from the remote servers are expected.

By default, multiple Modbus clients using the **Ethernet** connection method will each attempt to create their own unique TCP connection to the configured Modbus server IP and port, even in scenarios where the multiple clients are configured with an identical server IP and port. This is a common scenario when a port server performing Modbus TCP to Modbus RTU translation provides an Ethernet connection to a collection of serial Modbus devices connected to the port server. Depending on how many unique client connections are established by the RTAC to the port server, it is possible to exhaust all available listening ports on the port server and not be able to access additional devices. In this case, firmware versions R155-V0 and later provide an advanced setting, **Use Shared TCP Connection**, that can optionally be enabled on each Modbus client configured with the common server IP and port to force them to share a common TCP connection to the port server and poll each of the devices in a round-robin loop.

Select device data settings tabs such as **Coils**, **Discrete Inputs**, etc., to add and configure Modbus tags.

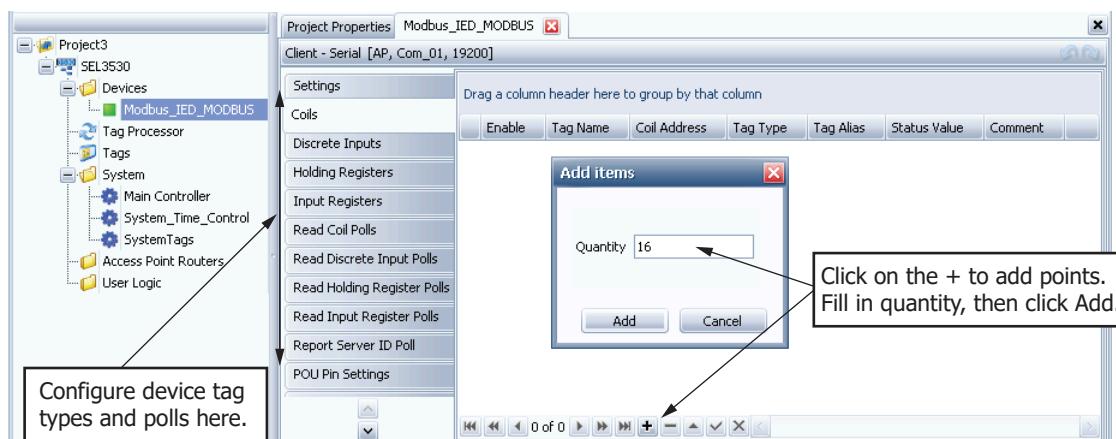


Figure 2.216 Add Modbus Client Tags

## Add Client Device Data

The following steps detail adding client device data.

- Step 1. Click on a device tag type tab to add and configure tags.
- Step 2. Click + to add tags (30,000 tag limit or 5,000 for an SEL-3505, per device tag type).

### NOTE

Use Copy (**<Ctrl+C>**) and Paste (**<Ctrl+V>**) to populate columns of Tag names and to duplicate devices.

Creating only the number of necessary tags will help the system run at optimum performance.

- Step 3. Change the names of the tags, if necessary.
- Step 4. Change other tag-related information as necessary.

Repeat these steps to configure all IED devices. When finished, configure one or more servers to deliver the data to remote client devices.

## Device Tag Type Configuration Parameters

Data and poll types have parameters that you must configure correctly to ensure proper system operation. ACSELERATOR RTAC will gray out configuration fields that do not apply to a specific device tag type. The common input parameters are configurable in all device tag types. The following tables list specific device tag type configuration parameters.

**Table 2.124 Common Input Parameters**

| Parameter    | Description   | Default |
|--------------|---|---------|
| Enable       | Tag processing enable. This flag must be True to enable processing of this tag. Setting this flag to False disables processing. | True    |
| Tag Name     | Configurable name that contains the device name and point description by default. You can change this name as necessary.        |         |
| Tag Type     | The data type of this tag. See <i>Data Types on page 1137</i> for more details.   |         |
| Tag Alias    | An optional descriptive tag name. If you use a Tag Alias, reference this alias, instead of the actual tag name, in the RTAC.    |         |
| Status Value | The default value for the tag prior to initialization of the tag at startup.  | False   |
| Comment      | Optional user-entered comment field.  |         |

Configure how many coils the RTAC will poll from the IED.

**Table 2.125 Coils**

| Parameter    | Description                                      | Default   |
|--------------|--|---|
| Coil Address | The bit address of the coil you want to operate. | Contiguous numbering from 0–n, where n = number of coils – 1. |

Configure how many discrete inputs the RTAC will poll from the IED.

**Table 2.126 Discrete Inputs**

| Parameter     | Description                 | Default   |
|---------------|-----------------------------|---|
| Input Address | The discrete input address. | Contiguous numbering from 0–n, where n = number of coils – 1. |

Configure how many holding registers the RTAC will poll from the IED.

**Table 2.127 Holding Registers**

| Parameter              | Description   | Default   |
|------------------------|---|---|
| Register Address Start | The starting address of each holding register in the polled Modbus IED. | Contiguous numbering from 0–n, where n = number of inputs – 1. If Variation = 32 bits, the consecutive numbering will skip every other register to allow two registers per tag. |
| Register Address Stop  | A noneditable field that indicates the ending register for this tag.    | The value of Register Address Start + 0 if Variation = 16 bit. If Variation = 32 bit, the value is Register Address Start + 1.  |

| Parameter      | Description  | Default |
|----------------|--|---------|
| Variation      | <p>Definition of the holding register size, type, sign, and configuration. You can swap the order of high and low bytes or registers by using the variation type.</p> <p>Variation types for single registers are as follows:<br/>           LSB = least significant byte first;<br/>           MSB = Most significant byte first;</p> <p>Variation types for multiple registers that are combined into one tag are as follows:<br/>           LSR=Least significant register first;<br/>           MSR=Most significant register first.</p> |         |
| Bit Reference  | Definition for each bit in a holding register. This parameter is applicable only when holding register type = MDBC.  |         |
| Control Value  | The initialized control value before the RTAC database is initialized at startup.  |         |
| Set Magnitude  | The default instantaneous value that the RTAC will write to the IED in a write holding register message.   |         |
| Inst Magnitude | The default instantaneous value prior to initialization of the tag at startup.   |         |
| Magnitude      | The default dead-banded value prior to initialization of the tag at startup.   |         |
| Dead Band      | The number of units of change necessary to move the Inst Magnitude value into Magnitude. If $ instMag - mag  > db$ , then $mag := instMag$ . An excursion of this dead band will cause the RTAC to generate a time-stamped event. Setting the dead band to 0 causes an event with every instantaneous magnitude the RTAC receives.   |         |
| Zero Dead Band | The number of units at or below which the Magnitude is forced to zero. If $ mag  < zeroDB$ , then $mag := 0$ .   |         |
| Max Value      | The maximum value allowed for this point.  |         |
| H H Limit      | The high-high alarm limit. Excursions beyond this limit cause the RTAC to generate a high-high alarm.  |         |
| H Limit        | The high alarm limit. Excursions beyond this limit cause the RTAC to generate a high alarm.  |         |
| L Limit        | The low alarm limit. Excursions beyond this limit cause the RTAC to generate a low alarm.  |         |
| L L Limit      | The low-low alarm limit. Excursions beyond this limit cause the RTAC to generate a low-low alarm.  |         |
| Min Value      | The minimum value allowed for this point.  |         |

Configure how many input registers the RTAC will poll from the IED.

**Table 2.128 Input Registers**

| Parameter              | Description  | Default   |
|------------------------|--|---|
| Register Address Start | The starting address of each holding register in the polled Modbus IED.  | Contiguous numbering from 0–n, where n = number of inputs – 1. If Variation = 32 bits, the consecutive numbering will skip every other register to allow two registers per tag. |
| Register Address Stop  | A noneditable field that indicates the ending register for this tag.   | The value of Register Address Start + 0 if Variation = 16 bit. If Variation = 32 bit, the value is Register Address Start + 1.  |
| Variation              | Definition of the input register size and configuration. You can swap the order of high and low bytes or registers by using the variation type.  |   |
| Bit Reference          | Definition for each bit in an input register. Applicable only when input register type = SPS.  |   |
| Number of Bytes        | The number of bytes to read for this tag. Applicable only when Tag Type = STR.   |   |
| Inst Magnitude         | The default instantaneous value prior to initialization of the tag at startup.   |   |
| Magnitude              | The default dead-banded value prior to initialization of the tag at startup.   |   |
| Dead Band              | The number of units of change necessary to move the Inst Magnitude value into Magnitude. If $ instMag - mag  > db$ , then $mag := instMag$ . An excursion of this dead band will generate a time-stamped event. Setting the dead band to 0 causes an event with every instantaneous magnitude the RTAC receives. |   |
| Zero Dead Band         | The number of units at or below which the Magnitude is forced to zero. If $ mag  < zeroDB$ , then $mag := 0$ .   |   |
| Max Value              | The maximum value allowed for this point.  |   |
| H H Limit              | The high-high alarm limit. Excursions beyond this limit cause the RTAC to generate a high-high alarm.  |   |
| H Limit                | The high alarm limit. Excursions beyond this limit cause the RTAC to generate a high alarm.  |   |
| L Limit                | The low alarm limit. Excursions beyond this limit cause the RTAC to generate a low alarm.  |   |
| L L Limit              | The low-low alarm limit. Excursions beyond this limit cause the RTAC to generate a low-low alarm.  |   |
| Min Value              | The minimum value allowed for this point.  |   |
| Inst Angle             | For a CMV data type, the default instantaneous angle value prior to initialization of the tag at startup. This is only available in Modbus Server.   |   |
| Angle                  | For a CMV data type, the default dead-banded angle value prior to initialization of the tag at startup. This is only available in Modbus Server.   |   |
| String Value           | Default string value before the RTAC is initialized on startup. Applicable only when Tag Type = STR.   |   |

Set up the number of read coil polls you want to use. If the coil status addresses you have configured are noncontiguous, you can break up the polling scheme into multiple polls. Each message can poll for a group of contiguous coils. Configure the following fields for each coil status poll.

**Table 2.129 Read Coil Polls**

| Parameter        | Description   | Default   |
|------------------|---|---|
| Poll Number      | Consecutive field indicating the poll entry.  | Sequential from 1–n, where n = total number of polls. |
| Starting Address | Starting coil address for that poll. Remember that the RTAC uses 0 relative addressing. |   |
| Quantity         | The number of coil points read for that poll operation.                                 |   |

## Read Discrete Input Polls

The setup for Read Discrete Input Polls is the same as for Read Coil Polls.

## Read Holding Register Polls

The setup for Read Holding Register Polls is the same as for Read Coil Polls.

## Read Input Register Polls

The setup for Read Input Register Polls is the same as for Read Coil Polls.

## Report Server ID Poll

The setup for Report Server ID Poll is similar to that for Holding Registers configuration. This poll will return the following three values:

- ▶ Modbus Server ID
- ▶ Run Indicator Status as defined by the Modbus IED vendor
- ▶ Server ID Data as defined by the Modbus IED vendor

## GE Relay Event Collection Event Collection

The RTAC can automatically collect COMTRADE event records and Sequential Events Recorder (SER) data from connected GE relays by using the Modbus protocol. To collect COMTRADE event records, perform the following steps:

- Step 1. Insert a Modbus client and configure communications settings as needed to communicate with the GE relay.
- Step 2. Select **POU Pin Settings** and set **Enable\_Event\_Collection** to True.
- Step 3. Under the **Settings** tab, adjust the Polling period between requests to locate new events as needed. The RTAC uses this value to periodically check for new events from the relay.

The RTAC will poll the relay periodically and collect any new events that are present.

## SER Logging

You can configure the RTAC to automatically collect SER data from a GE relay connected via Modbus and log that SER data into the RTAC SOE log. For each Modbus client, set the POU pin setting **Enable\_ASCII\_SER\_Logging\_Enabled** to True. Set the **ASCII SER Logging Poll Period** under the **Settings** tab to control how often the SER data are polled. To identify which device the SER came from, you can enter a unique device identifier by using the **Device G UID** setting. When the RTAC receives the events, it logs the SERs in the RTAC SOE log with the optional G UID name and a time stamp that is constructed from the response of the GE relay. If needed, convert the SER time stamp to the RTAC time reference with the **Adjust ASCII SER Logging Timestamps** setting.

## Modbus Server Configuration

Configure Modbus server or client connections to communicate via direct serial or Modbus TCP to polling masters (SCADA, HMIs, communications processors, etc.). Create tags in a Modbus Server Shared Map as placeholders for data that the RTAC will return to a polling client. Use the Tag Processor or Simple Tag Mapper to map data to these tags from client IED tags or other tags in the RTAC database.

### NOTE

In RTAC firmware versions R152 and earlier, tags were directly configured on each individual Modbus server device. In RTAC firmware versions R153 and later, each Modbus Server references a Modbus Server Shared Map that is potentially shared by multiple Modbus servers. Existing projects of earlier versions that are upgraded to version R153 or later have existing Modbus server devices split out into device and shared map components. The shared map has the same name as the existing Modbus server device and the new Modbus server device referencing that shared map is named <Existing Server Device Name>\_Device\_MODBUS. Following the upgrade, any pre-existing IEC 61131-3 user logic that references POU pins from the Modbus server device will need to be manually updated to refer to the new device name.

The **Ethernet** connection type uses Modbus TCP messaging, and the **Ethernet Tunneled Serial** device connection type uses Modbus RTU messaging encapsulated into TCP/IP frames. When using one of the Ethernet-based communication methods, you can configure the server to allow connections from a comma-separated list of as many as 20 client IP addresses. Alternatively, the server can be configured to allow anonymous connections, which means any client on the RTAC network can connect and poll for Modbus data. Note, however, that the Modbus server only allows one client connection at a time and is designed for a "connect and stay connected" type of communications scheme.

Generally, if configured to allow anonymous connections, each Ethernet-based server device must use a uniquely configured **Server IP Port**. Multiple servers can share the same port number if the servers are configured to not allow anonymous connections and are configured with a unique list of allowable clients.

When configuring a server with the **Ethernet** connection type, multiple servers can be configured to allow anonymous connections and listen on the same **Server IP Port** in the following scenarios:

- ▶ Each server is configured with a unique **Server MODBUS Address** between 1 and 247. This configuration allows for a collection of Modbus TCP servers that are each queried by a single client in a round-robin polling style over the same TCP/IP channel by using the server's specified address. This emulates a common application performed by port servers that provides Modbus TCP access to multi-drop EIA-485 networks of Modbus RTU devices.
- ▶ In projects with firmware version R153 or later, each server is configured with a **Server MODBUS Address** of 255 and uses the same Modbus Server Shared map. This configuration allows for a collection of Modbus TCP servers that each offer an identical register map, listen on an identical TCP port, and communicate to remote clients over unique TCP/IP channels opened by each client. Incoming client connection requests are connected to the next available server in the collection in a first come, first served manner. This configuration is useful when an application demands that a large group of clients need to simultaneously connect to a single Modbus server. Since each RTAC Modbus server device only allows a single connection at a time, this collection of servers is available on a single TCP port and, by using an identical register map, will appear to external clients as a single Modbus server that accepts multiple simultaneous connections. Add as many Modbus servers as you need to support the required number of simultaneous client connections. It is important that each Modbus server in the collection use the same Modbus Server Shared map so that each client connection is presented with a consistent register map.

When configuring a server with the **Ethernet** connection type, the **Server MODBUS Address** value is configurable as 1–247 or 255. 255 is a reserved address assigned to a server to indicate that it will respond to all queries it receives from a client, regardless of the address specified in the query. Prior to firmware version R153, this address was internally fixed as 255 when using this type of Modbus server. In projects with firmware versions R153 and later, the address is configurable.

When configuring a server with the **Ethernet Tunneled Multidrop Serial** connection type, multiple servers can be configured to allow anonymous connections and listen on the same **Server IP Port**. These servers must use a unique **Server MODBUS Address** from 1–247 and communicate individually with a single client connection, similar to the servers configured with an **Ethernet** connection type.

To insert a Modbus Server to your project from the project tree right-click menu, use the **Add Other Device - Modbus Protocol** option or select **Other** from the Insert tool ribbon. Give the device connection a unique name and select the type of connection, as shown in *Figure 2.3*.

The **Settings** tab contains all configurable items for communications. Check the Description column for details on each configuration item. Move the slider, or hover your cursor over the description to see the entire description text. Type any necessary comments in the Comment column to the far right. Select the **Advanced Settings** check box to enable configuration of advanced settings.

## Add Modbus Server Shared Map

All tags associated with a Modbus server are configured on a Modbus Server Shared map. As many as 120 shared maps can be added to a project and shared across multiple servers. Add a Modbus Server Shared Map to your project by right-clicking and pulling up the Project Tree menu. Select **Add Tag List > Modbus Server Shared Map** or select the **Tag Lists** option from the Insert ribbon.

- Step 1. Click on a Modbus register type tab to add tags for Discrete Inputs, Coils, Input Registers, and Holding Registers.
- Step 2. Click + to add tags (30,000 tag limit or 5,000 for the SEL-3505, per device tag type).

Creating only the number of tags necessary optimizes system performance.
- Step 3. Change the names of the tags, if necessary.
- Step 4. Change other tag-related information as necessary.
- Step 5. Revisit the Modbus Server device and assign the shared map to the **Map Name** setting.
- Step 6. Repeat these steps to configure all shared maps. When finished, configure the Tag Processor or Simple Tag Mapper to populate these shared maps tags with actual values.

## Device Tag Type Configuration Parameters

Each device tag type has parameters that you must configure correctly for proper Modbus responses. Configuration columns have the same meaning as in Modbus client configuration (see *Modbus Client Configuration on page 488*) except for the addition of fields that have special meaning in Modbus server configuration. Use these fields to manipulate data returned in Modbus server configuration. For example, you can change the device tag type, value limits, etc.

Bit reference also differs between Modbus server and client configurations. In Modbus client configuration, the bit reference specifies the bit in the data stream that will populate the client tag. In Modbus server configuration, the bit reference specifies the bit in the server tag that returns to a polling client or master. Populate the specified bits in a server tag through values in the Tag Processor.

---

### Example 2.7 Packed Status Bits From an IED Input Register


This example illustrates how to access individual status bits from a 16-bit packed input register. You can access individual bits by using the bit reference either in the protocol point setup or in the Tag Processor. This example uses the Modbus Client protocol tag configuration.

- Step 1. On the **Insert** ribbon, select **Other** and then **Modbus**.
- Step 2. Configure the device as Client Serial and change the Device Name to **IED1**.
- Step 3. On the resulting **Modbus Client** configuration screen, click on the **Input Registers** tab.

Step 4. Add 16 Input Register tags and make the following changes:

- Change Tag Type to single point status (SPS).
- Change Register Address Start to 0 for all 16 tags.
- Press <Ctrl+S> to save.
- Change Bit Reference to increment from 0–15.

The RTAC will take a single bit  $n$ , where  $n$  = bit reference, from Register 0 and place it in IED\_Modbus\_IREG\_n.

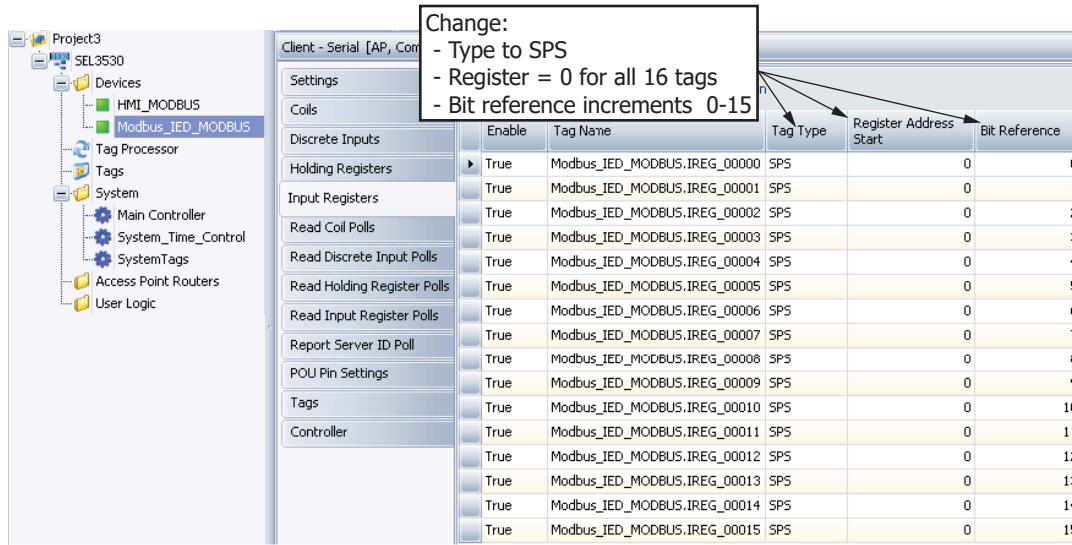

## POU Pin Settings

Use POU pin settings and the Controller tab to view the present state of the Modbus server operation and to modify some of the behavior of the Modbus protocol. See *Table 2.130* for the settings descriptions.

**Table 2.130 Modbus Server POU Pin Settings**

| Pin Name                     | Pin Type    | Description   | Default   |
|------------------------------|-------------|---|-----------|
| Communications_Offline_Timer | Input TIME  | Assigned from the Communications Offline Timer Advanced setting.  | T#10000MS |
| Disable_Controls             | Input BOOL  | Disables all coil and holding register controls through the server. Note: If other Modbus server instances are assigned to the same Modbus Server Shared Map as this server, asserting Disable_Controls will also disable controls for those other Modbus server instances. | False     |
| Disable_Tag_Updates          | Input BOOL  | Disables updating of tag values. Note: If other Modbus server instances are assigned to the same Modbus Server Shared Map as this server, asserting Disable_Tag_Updates will also disable updates for those other Modbus server instances.                                  | False     |
| EN                           | Input BOOL  | Enables this Modbus server device.  | True      |
| Reset_Statistics             | Input BOOL  | Resets all communications statistics.   | False     |
| Controls_Disabled            | Output BOOL | Indicates controls are disabled via the Disable_Controls POU input pin.   | False     |


| <b>Pin Name</b>               | <b>Pin Type</b> | <b>Description</b>   | <b>Default</b> |
|-------------------------------|-----------------|--|----------------|
| Direct_Transparent_Connection | Output BOOL     | A direct transparent connection is presently established through this Modbus server using an access point.   | False          |
| ENO                           | Output BOOL     | Indicates this Modbus server device is running.  | False          |
| Illegal_Data_Address          | Output BOOL     | Asserts when a connected client attempts to read an invalid data address. Stays asserted for at least one processing interval and then clears.   | False          |
| Illegal_Data_Value            | Output BOOL     | Asserts when a connected client attempts to write an invalid data value. Stays asserted for at least one processing interval and then clears.  | False          |
| Illegal_Function_Code         | Output BOOL     | Asserts when a connected client attempts to issue an unsupported function code. Stays asserted for at least one processing interval and then clears.   | False          |
| Invalid_Function_Block_Input  | Output BOOL     | Asserts when a constant or variable is assigned to an input pin and the value is not within an acceptable range.   | False          |
| Message_Failure               | Output BOOL     | Asserts for a single-processing interval following a message failure.  | False          |
| Message_Failure_Count         | Output UDINT    | Increments in value by one each time Message_Failure is asserted.  | 0              |
| Message_Success_Count         | Output UDINT    | Tracks the sum of the messages successfully sent or received.  | 0              |
| Messages_Received_Count       | Output UDINT    | Counts the number of messages received.  | 0              |
| Messages_Sent_Count           | Output UDINT    | Counts the number of messages sent.  | 0              |
| Offline                       | Output BOOL     | Set to True if a message has not been received for a period of time as defined by the Communications Offline Timer setting. For an Ethernet device type, this can also indicate a loss of the TCP/IP connection. | True           |

## Network Global Variable List (NGVL)

Use a Network Global Variable List (NGVL) to share a global variable list over an Ethernet network between a transmitting NGVL device and receiving NGVL devices, such as the SEL-1102 and the SEL-3530 RTAC. You can configure variables in an NGVL that are of standard data types (BOOL, REAL, etc.) and complex tag types (SPS, MV, CMV, etc.). The protocol supports transmitting variable lists from one device to another, to several, or to all devices on a given network. Data are transmitted on a configurable cyclical transmission interval, on change of tag value, or when triggered by a configurable Boolean event change of state. Configure other NGVL compatible devices on the network to receive the NGVL transmission by creating a matching tag list with matching tag list ID.

## NGVL Configuration

You can configure multiple NGVL connections in the RTAC as either transmit (sends global list data) or receive (receives global list data). The global variables you create in an NGVL are available anywhere in the RTAC for data mapping or manipulation just as any other global variable. The NGVL protocol handles the transmission of the values contained in the global variables.

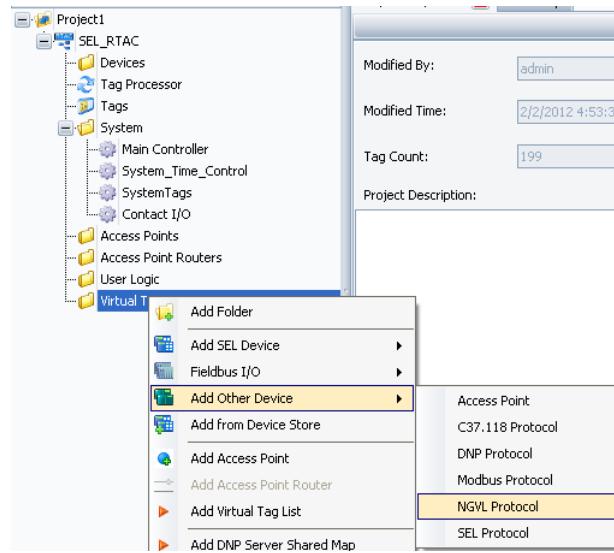**Figure 2.217 Insert NGVL**

Insert an NGVL by selecting **Other** from the **Insert** ribbon or right-clicking anywhere in the device tree (see *Figure 2.217*). Give the device connection a unique name and note you cannot select the connection type because it is a peer-to-peer Ethernet protocol.

By selecting the **Settings** tab, you see all the configurable items for communications. Configure the NGVL to be transmitted or received. Check the **Description** column for details on each configuration item. Move the slider bar or hover your mouse over a truncated description to see the entire text of a description. Type any necessary comments in the blank column to the far right.

Select the **Variables** tab to add the global variables. The global variables can be of any type supported in the RTAC. You can use data structures or simple variable types. Configure one RTAC to transmit a list, including a unique list ID. Then, configure another RTAC to receive the list. The receive list configuration must specify the same unique list ID and must contain the same data list as the transmitted list. Although it may be confusing to do so, you can use different names in the transmit and receive lists, but the data types must be the same.

```
Other, Ethernet Peer [NGVL Protocol]
Settings 1  VAR_GLOBAL
Variables 2  NET_BOOL1 : BOOL;
           NET_BOOL2 : BOOL;
           NET_BOOL3 : BOOL;
           NET_BOOL4 : BOOL;
           NET_NV : NV;
           NET_REAL : REAL;
           NET_TABLE : ARRAY [1..10] OF INT;
9  END_VAR
```

**Figure 2.218 Add NGVL Tags**

---

**Example 2.8 Configure a Transmit and a Receive NGVL on Two RTACs**

The following example demonstrates how to configure a transmit NGVL on one RTAC, then use that same list configuration on the receiving RTAC. Using the same NGVL configuration reduces the risk of user configuration error. In this example, RTAC 1 has an IP address of 192.168.1.2 on Eth 1 and RTAC 2 has an IP address of 192.168.1.5 on Eth 1.

- Step 1. In a blank RTAC project, insert an NGVL into the device list by right-clicking on the Virtual Tag Lists folder (or anywhere in the device tree), then select **Add Other Device > NGVL Protocol**.
- Step 2. Rename the **Device Name** to something meaningful and unique. In this example, we will call it **Transmit**.
- Step 3. Change the Broadcast Address to 192.168.1.255. This designates all addresses on the network that start with 192.168.1 are to receive this message. Leave the other configurations under **Settings** at their default values.
- Step 4. Click on Variables and configure several global variables as shown in the following table and *Figure 2.218*.

| Variable Name | Variable Type |
|---------------|---------------|
| My_bool       | BOOL          |
| My_real       | REAL          |
| My_MV         | MV            |

- Step 5. Map values to the global variables from other tags in the RTAC system.
- Step 6. Save the project.
- Step 7. Right-click on the new NGVL, select **Export Items**, ensure the NGVL device is selected to export to XML, and select **Export**.
- Step 8. Load project into the first RTAC (referred to in this example as RTAC 1).
- Step 9. Connect an Ethernet cable into **ETH 1** from RTAC 1 and into **ETH 1** of RTAC 2.
- Step 10. Select **Interfaces** on the RTAC 2 web interface and change the IP address of **Eth 1** to 192.168.1.5.
- Step 11. Create another RTAC project.
- Step 12. Right-click on **Virtual Tag Lists** (or anywhere in the device tree) and select **Import Items**. Assign the **XML Folder** to the same location in which the original NGVL was exported, ensure the check box is selected for the XML definition containing the original NGVL from *Step 7*, and select **Import**.
- Step 13. Change the GVL Type from **Transmit** to **Receive**.  
Ensure the List ID is the same.
- Step 14. Change the **Broadcast Address** to the IP address of RTAC 1, which is configured with the Transmit NGVL (192.168.1.2).
- Step 15. Save the project and load it into the second RTAC (referred to as RTAC 2).

Data from the NGVL on RTAC 1 are broadcast on the network. RTAC 2 receives the NGVL data and places the data into the corresponding NGVL tags in RTAC 2.

---

## OPC UA

### Overview


Originally known as "OLE for Process Control," OPC was introduced as a standard in the mid-1990s as a vendor-neutral mechanism to allow communications between industrial control equipment and software packages such as HMIs from different manufacturers. The specification for OPC was largely written around several components (such as OLE, COM and DCOM) developed by Microsoft and made available for exclusive use on the Microsoft Windows operating system. Thus, the original OPC Data Access (OPC DA) standard used for reading and writing data was limited to Windows-based devices and was not available for other PLCs and controllers that used proprietary operating systems or other standards such as Linux. Later renamed to Open Platform Communications, the OPC Foundation ([www.opcfoundation.org](http://www.opcfoundation.org)) maintains the standards and introduced a platform-neutral follow-up known as OPC Unified Architecture (UA).

With the original standard now referred to as OPC Classic, OPC UA offers all the functionality of the original protocol as well as cross-platform communication regardless of the hardware or operating system of the controller or PC. Unfortunately, OPC UA is not directly compatible with OPC Classic, so legacy software or other drivers using OPC Classic need to be upgraded to support OPC UA. OPC UA is a licensed feature available on the RTAC platform for certain models including the SEL-3350, SEL-3555, and SEL-3560, with firmware version R150-V0 or later. Presently, a single OPC UA server instance (supporting ten simultaneous connections) or as many as ten OPC UA client instances can be added to a project.

Any tag or variable inside the RTAC project can be made available to the OPC UA Server interface by using a simple tag configuration interface.

## OPC UA Client Configuration

Configure a client instance by selecting **OPC UA** from the **Other** protocols menu available from either the **Insert** ribbon or the right-click **Insert** menu.

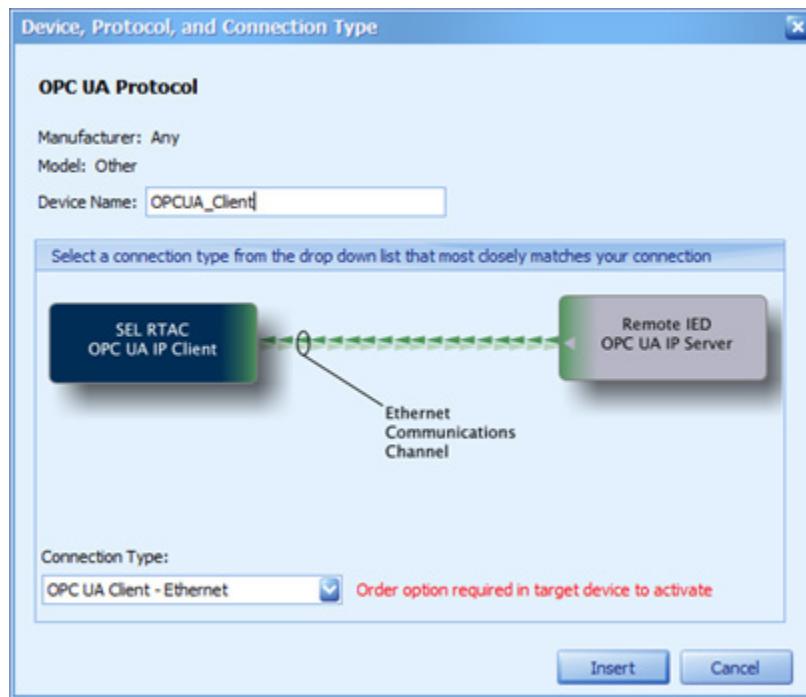

**Figure 2.219 Insert OPC UA Client**

Give the OPC UA client instance a unique **Device Name** and select **Insert** to add the instance to your project.


## Settings

The Settings tab shows some basic configuration parameters for the OPC UA client including which IP address and TCP port (the default is 4840) the client will use to communicate with the server. During setup of a communications session, the OPC UA client will request an update interval at which the server will publish data back to the client. The **Update Rate** parameter configures this interval; however, depending on configuration, a server may deny the requested interval and enforce a higher minimum rate.

## Tag Configuration

The Tag Configuration tab provides a mechanism for querying all variables from an OPC UA server that your PC can communicate with. This functionality does not require a physical RTAC, and ACSELERATOR RTAC can perform this action independently. The result of the query process provides a dialog box that allows selection of individual data elements from the server which are then configured as OPC UA client tags in your RTAC project by using two different modes known as **structured** or **unstructured**. Once the IP address and TCP port of your OPC UA server have been configured on the Settings tab, select **Update Variables** located at the top of the Tag Configuration tab and ACSELERATOR RTAC will attempt to connect to that OPC UA server endpoint and browse its complete tag structure. Depending on the size of the data map available on the server, this process can take as long as several minutes. The progress of each browsed element appears in the bottom status bar of ACSELERATOR RTAC to provide an indication of ongoing activity. Once the tag variable browsing

process is complete, the **Choose Variables** window appears, allowing you to browse the variable structure of the server and select a check box for each element you want the OPC UA client to poll, as shown in *Figure 2.220*. Once all of the elements you want the OPC UA client to poll are selected, select **OK**.

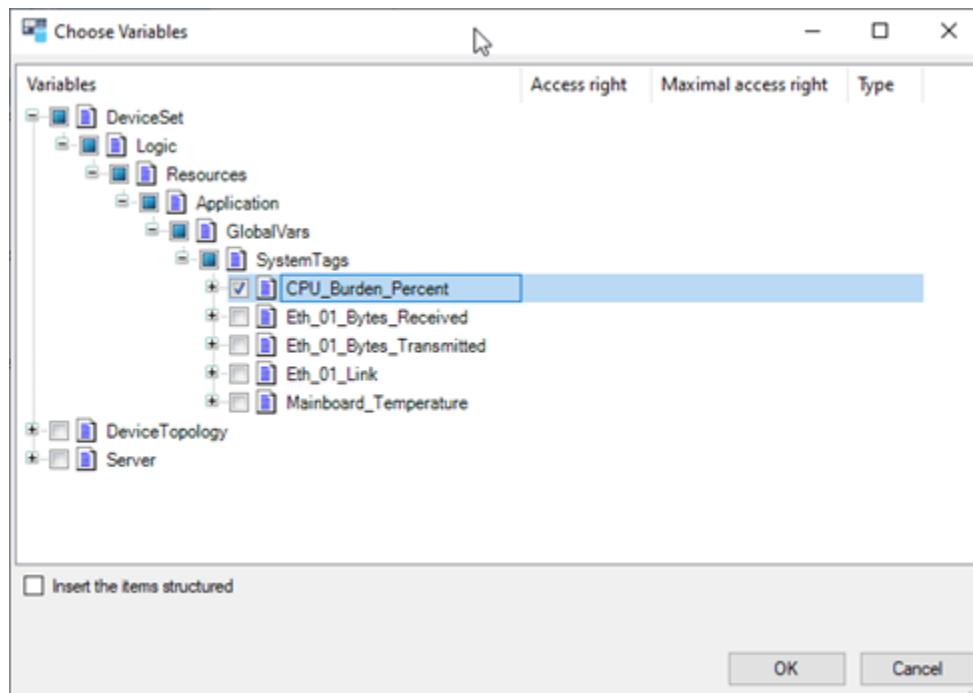

**Figure 2.220 OPC UA Client Tag Configuration—Choose Variables**

The bottom of the Choose Variables window has an **Insert the items structured** check box that allows for different methods of tag management and naming associated with this OPC UA client. By default, this check box is selected, and therefore tags will be inserted using structured mode, which maintains the variable structure provided by the server and uses a "dot separation" naming standard by which the tags are referenced in the RTAC project. For example, the CPU Burden Percent tag shown in *Figure 2.221* was originally defined as an INS data type by the server and contains a defined structure with several elements that can be referenced. To reference the stVal element of this tag using user logic or Tag Processor statements in your project, you would use a tag name of **DeviceName\_OPCUA.DeviceSet.Logic.Resources.Application. / GlobalVars.SystemTags.CPU\_Burden\_Percent.stVal**. Depending on the variable structure provided by the OPC UA server, the tag names defined on the client may be very long in length and potentially cumbersome to use in your user logic or data mapping. In such a case, you may want to insert the tags associated with your OPC UA client in unstructured mode instead.

| Variables          |              | Type Mappings |               |   |                    |
|--------------------|--------------|---------------|---------------|---|--------------------|
| Update variables   |              |               |               |   |                    |
| Local variable     | Access right | Update always | Create or Map | Type mapping                                | Remote variable    |
| DeviceSet          |              |               |               | DeviceSet                                   | DeviceSet          |
| Logic              |              |               |               | Logic                                       | Logic              |
| Resources          |              |               |               | Resources                                   | Resources          |
| Application        |              |               |               | Application                                 | Application        |
| GlobalVars         |              |               |               | GlobalVars                                  | GlobalVars         |
| SystemTags         |              |               |               | SystemTags#1                                | SystemTags         |
| CPU_Burden_Percent |              |               |               | Application_SEL_IEC_Types_INS               | CPU_Burden_Percent |
| stVal              |              |               |               | DINT  | stVal              |
| q                  |              |               |               | Application_SEL_IEC_Types_quality_t         | q                  |
| t                  |              |               |               | Application_SEL_IEC_Types_timeStamp_t       | t                  |
| rangeC             |              |               |               | Application_SEL_IEC_Types_rangeConfigDint_t | rangeC             |


Figure 2.221 OPC UA Client Tag Configuration—Structured

If the **Insert the items structured** check box is not selected when tags are added to the OPC UA client, the original variable name from the structure provided by the server is maintained; however, all structure elements will be separated by an underscore. *Figure 2.222* shows an example of this. To reference the same stVal element as in the prior example as a tag in your project, you would use a tag name of **DeviceName\_OPCUA.DeviceSet\_Logic\_Resources\_Application\_GlobalVars\_SystemTags\_CPU\_Burden\_Percent\_stVal**.

| Variables  |              | Type Mappings |               |               |
|--|--------------|---------------|---------------|---------------|
| Update variables   |              |               |               |               |
| Local variable   | Access right | Update always | Create or Map | Type mapping  |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_stVal                             |              |               |               | DINT          |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_q_detailQual_overflow             |              |               |               | BOOL          |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_q_detailQual_outOfRange           |              |               |               | BOOL          |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_q_detailQual_badReference         |              |               |               | BOOL          |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_q_detailQual_oscillatory          |              |               |               | BOOL          |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_q_detailQual_failure              |              |               |               | BOOL          |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_q_detailQual_oldData              |              |               |               | BOOL          |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_q_detailQual_inconsistent         |              |               |               | BOOL          |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_q_detailQual_inaccurate           |              |               |               | BOOL          |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_q_test                            |              |               |               | BOOL          |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_q_operatorBlocked                 |              |               |               | BOOL          |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_t_valueDateTime                   |              |               |               | DATE_AND_TIME |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_t_value_uSec                      |              |               |               | UDINT         |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_t_quality_leapSecondsKnown        |              |               |               | BOOL          |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_t_quality_clockFailure            |              |               |               | BOOL          |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_t_quality_clockNotSynchronized    |              |               |               | BOOL          |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_t_daylight_savings_time_enabled   |              |               |               | BOOL          |
| DeviceSet_Logic_Resources_Application_GlobalVars_SystemTags_CPU_Burden_Percent_t_daylight_savings_time_ACTIVATED |              |               |               | BOOL          |

Figure 2.222 OPC UA Client Tag Configuration—Unstructured

While tags inserted in unstructured mode do not provide an immediate benefit of simplified naming by default, they can be manually renamed after insertion to provide much shorter tag names that allow for easier use in the rest of the project. For example, as shown in *Figure 2.223*, the stVal component of the CPU Burden Percent tag has been manually renamed via the **Local Variable** column and significantly shortened in the process. Referencing this tag in your project would only require using **DeviceName\_OPCUA.Remote\_CPU\_Burden\_Percent\_stVal**. Whether you choose structured or unstructured mode is up to your configuration choice, but SEL recommends using only one method per OPC UA client.

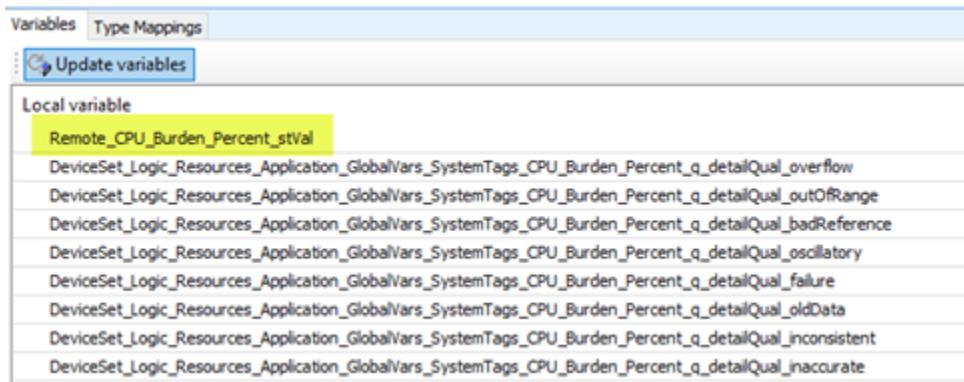

**Figure 2.223 OPC UA Client Tag Configuration—Unstructured With Custom Naming**

## POU Pin Settings


The POU Pin Settings tab is used to view the present state of the OPC UA Client protocol instance.

**Table 2.131 OPC UA Client POU Pin Settings**

| Pin Name      | Pin Type                      | Description   | Default |
|---------------|-------------------------------|---|---------|
| EN            | Input BOOL                    | Enables or disables this specific Function Block instance of the OPC UA client. When EN is FALSE, other inputs have no effect and the OPC UA client will not attempt communication with a server.   | TRUE    |
| ENO           | Output BOOL                   | Indicates that this specific Function Block instance of the OPC UA client is active if TRUE. If FALSE, the inputs have no effect and the OPC UA client will not attempt communication with a server. If EN is TRUE and ENO is FALSE, verify that the OPC UA Client license option is enabled on your RTAC.  | FALSE   |
| Error         | Output enum_OPCUAClient_Error | The OPC UA standard provides more than 250 numeric status codes that indicate possible errors or other exceptions that can be encountered in OPC UA communications. A complete list of these codes is available at <a href="https://reference.opcfoundation.org/v104/Core/docs/Part6/A.2/">https://reference.opcfoundation.org/v104/Core/docs/Part6/A.2/</a> . The enumerated Error output provides a translation of the raw numeric code values reported by this OPC UA client instance into shortened, named enumerated values as defined in the standard. Common enumerations that can be expected for this output include Good for normal communications and Timeout/BadCommunicationError for failed communications. | FALSE   |
| Error_Message | Output STRING(255)            | A descriptive message associated with the enumerated Error output, formatted as a string.   |         |
| Offline       | Output BOOL                   | If FALSE, indicates that there is at least one active OPC UA session with a server. This pin is set to TRUE when the communication link to the server has been severed.   | FALSE   |
| Status        | Output STRING                 | The current overall status of the OPC UA client. Other than an empty value, possible string values in this output include Connecting, Waiting, Connected, and Unlicensed.   |         |

## OPC UA Server Configuration

Configure a server instance by selecting **OPC UA** from the **Other** protocols menu available from either the **Insert** ribbon or the right-click **Insert** menu.

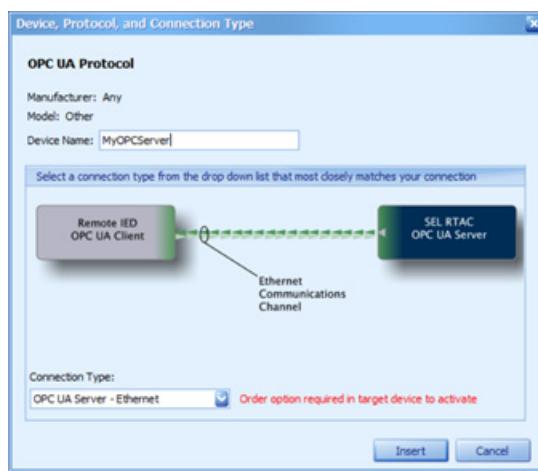

**Figure 2.224 Insert OPC UA Server**


Give the OPC UA server instance a unique **Device Name** and select **Insert** to add the instance to your project.

## Settings

The Settings tab shows some basic configuration parameters for the OPC UA server including on which TCP Port the service listens (the default is 4840) and whether to allow or disallow anonymous connections to the server. During setup of a communications session, an OPC UA client requests an interval for the cyclic rate at which the server will publish data change notifications to the client. The **Minimum Publishing Interval** parameter allows the server instance to enforce a lower-limit threshold for the rate at which these data updates from the server to the client occur; this can be used to throttle back data updates in the event of communications performance concerns.

## Tag Configuration

The Tag Configuration tab shows a list of all tags and variables in your project. This includes global tags, system tags, tags associated with client and server devices, virtual tag lists, global variable lists and custom user logic programs with internal variables. Each of these items has a drop-down menu interface that displays the individual tags/variables within that item (e.g., all tags enabled on an SEL client device). Each item and sub-item located under the drop-down menu has a corresponding check box that enables either the entire device/list or a particular tag for access to the OPC UA server interface, as shown in *Figure 2.225*.

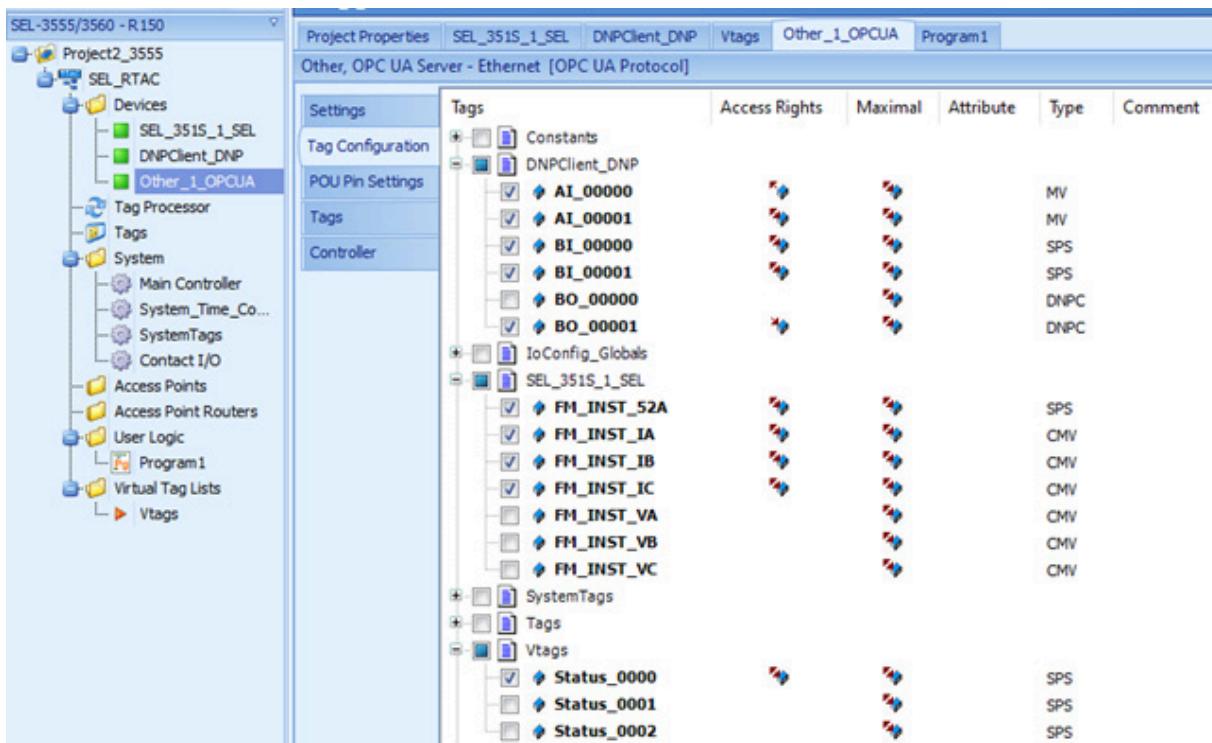**Figure 2.225** OPC UA Server Tag Configuration

Structured ACCELERATOR RTAC tags (such as those defined in *ACCELERATOR RTAC Data Types and Data Classes on page 1140*) that contain time-stamp and quality sub-attributes will pass through those attributes to the OPC UA variables as they are polled by a client. Mapping of the quality attribute is performed as follows:

**Table 2.132** OPC UA Server Quality Mapping

| ACCELERATOR RTAC Tag q.validity Value | OPC UA Variable Quality |
|---------------------------------------|-------------------------|
| validity_t.good                       | Good (0x00000000)       |
| validity_t.invalid                    | Bad (0x80000000)        |
| validity_t.questionable               | Uncertain (0x40000000)  |

**NOTE**


Only structured tags defined in client devices, server tag maps, and virtual tag lists provide time and quality attributes to OPC UA variables. Structured tags defined in custom IEC 61131-3 user logic (GVLs, Programs, etc.) do not pass through time and quality attributes to OPC UA variables.

If there are tags or values associated directly with device POU's that are not tags belonging to said device that you wish to expose to OPC UA (e.g., myDevice\_POU.Offline), the POU device instance where these quantities are available can be located under the **Tags** heading and can be enabled for OPC UA Server access there.

**NOTE**

The Tag Configuration tab is not available if IEC 61131-3 compile errors exist in the project.

Each enabled device and/or tag has an access attribute that can be configured for none, read-only, write-only, or read/write access via the icon displayed in the **Access Rights** column next to the tag name. Selecting this icon cycles through the various access rights; see *Figure 2.226* for a summary of the access type vs. the displayed icon.

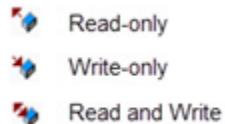

**Figure 2.226 OPC UA Server Tag Access Rights Configuration**

Note that in the present implementation of OPC UA server, configured access rights, when used with a tag that happens to be of a type considered to be a complex variable structure (e.g., DNPC), only apply against the entire structure of that tag. For example, if a tag of type DNPC was selected for read-only access, only a client write operation to the entire DNPC structure is blocked, whereas a write attempt to an element within that structure (e.g., `openClose.ctlVal`) would be allowed.

## Tags

The Tags tab is used to view a summary of all tags and variables that have been enabled for OPC UA server access as well as a list of their access rights and tag type. *Figure 2.227* shows a sample Tags tab with the Tag configuration example explained previously.

| Other, OPC UA Server - Ethernet [OPC UA Protocol] |   |            |          |
|---|---|------------|----------|
| Settings  | Drag a column header here to group by that column |            |          |
| Tag Configuration                                 | Tag Name  | Tag Access | Tag Type |
| POU Pin Settings                                  | DNPClient_DNP.AI_00000                            | Read       | MV       |
| Tags  | DNPClient_DNP.AI_00001                            | ReadWrite  | MV       |
|   | DNPClient_DNP.BI_00000                            | ReadWrite  | SPS      |
|   | DNPClient_DNP.BI_00001                            | ReadWrite  | SPS      |
|   | DNPClient_DNP.BO_00001                            | Write      | DNPC     |
|   | SEL_351S_1_SEL.FM_INST_52A                        | ReadWrite  | SPS      |
|   | SEL_351S_1_SEL.FM_INST_IA                         | ReadWrite  | CMV      |
|   | SEL_351S_1_SEL.FM_INST_IB                         | ReadWrite  | CMV      |
|   | SEL_351S_1_SEL.FM_INST_IC                         | ReadWrite  | CMV      |
|   | Vtags.Status_0000                                 | ReadWrite  | SPS      |

**Figure 2.227 OPC UA Server Tags Tab Summary Display**

## POU Pin Settings

The POU Pin Settings tab is used to view the present state of the OPC UA Server protocol.


**Table 2.133 OPC UA Server POU Pin Settings**

| <b>Pin Name</b>   | <b>Pin Type</b> | <b>Description</b>  | <b>Default</b> |
|-------------------|-----------------|---|----------------|
| EN                | Input BOOL      | Enables or disables this specific Function Block instance of the OPC UA server. When EN is False, other inputs have no effect and OPC UA clients are not allowed to connect to the server.  | True           |
| Reset_Statistics  | Input BOOL      | Resets internal counters tracked by the OPC UA server instance. Of note are the Cumulated data items located in the Server > ServerDiagnostics > ServerDiagnosticsSummary node.   | False          |
| ENO               | Output BOOL     | Indicates that this specific Function Block instance of the OPC UA Server is active if True. If False, the inputs have no effect and OPC UA clients are not allowed to connect. If EN is True and ENO is False, verify that the OPC UA Server license option is enabled on your RTAC. | False          |
| Offline           | Output BOOL     | If False, indicates that there is at least one active OPC UA session. This pin is set to True when the communication link to all clients has been severed.  | True           |
| SessionCount      | Output UDINT    | An active count of the number of client sessions connected to this OPC UA server instance.  | 0              |
| SubscriptionCount | Output UDINT    | An active count of the number of subscriptions to this OPC UA server instance that have been established by active connected client sessions.   | 0              |

## Connecting to an RTAC OPC UA Server


Connection to the RTAC's OPC UA server via an OPC UA client is a straightforward process. The following example shows a sample process using UAExpert software (available at [www.unified-automation.com](http://www.unified-automation.com)), a free OPC UA client available for Windows and Linux operating systems.

Once UAExpert is installed, the first stage is to add an instance of an OPC UA server connection. Using the **Add Server** dialog in the upper left panel, select **Custom Discovery** and enter the URL of the OPC UA server in the format of **opc.tcp://[RTAC-IP-Address]**. Select **OK** on the URL configuration dialog and navigate to the tree node created for that URL endpoint. You will see an entry labeled **OPCUAServer@[YourRTACHostName] (opc.tcp)** with one or two sub-entries labeled as **None(uatcp-uasc-uabinary)**. Select one of these entries and select **OK**. *Figure 2.228* shows a sample layout of this connection tree.

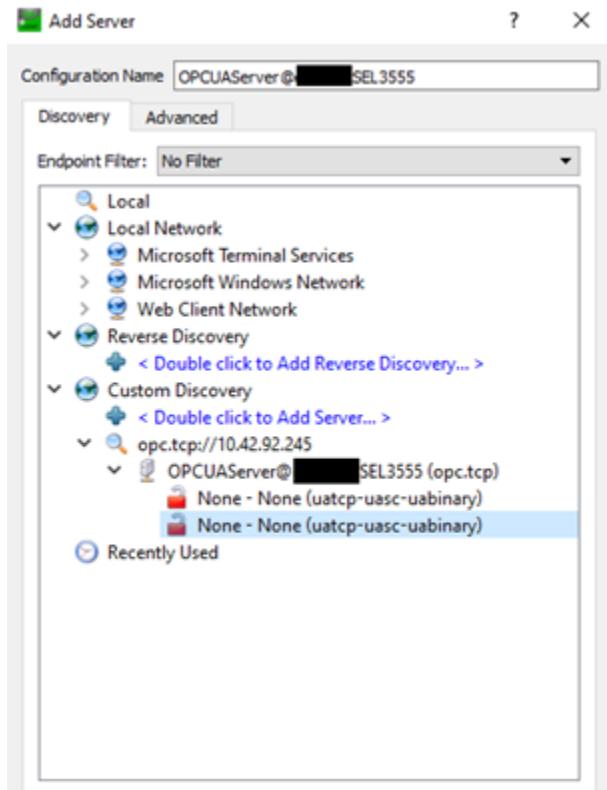

**Figure 2.228 Configuring an OPC UA Client Connection**

Right-click the server entry in the upper left panel and select **Connect**. Once the connection process succeeds, the Variable Browser panel in the lower left will populate with a connection tree. To locate the bulk of tags and variables that were made available in your RTAC project, navigate to **Objects > DeviceSet > Logic > Resources > Application > GlobalVars**. There, you will see individual folder nodes for each device and/or tag list that has tags enabled for OPC UA browsing. Expanding these folder entries displays all configured tags associated with that device. Each of the tags can then be expanded by using the drop-down arrow to display any and all sub-elements. Any of these tags or their sub-elements can be dragged over to the **Data Access View** workspace either as a complex object or a simple fundamental data type. *Figure 2.229* shows an example of this interface.

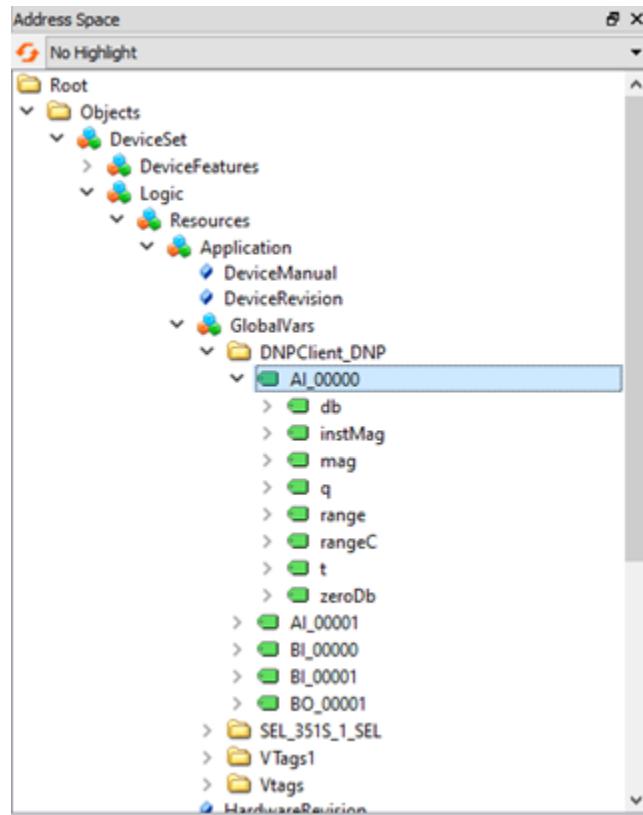

**Figure 2.229 Browsing OPC UA Variables**

Once the tag variable has been dragged over to the Data Access View workspace, it will be shown as either a fundamental quantity of a known OPC UA data type (e.g., Float, Int32) if it can be represented as such or a complex ExtensionObject. *Figure 2.230* shows an example of this interface.

| Data Access View |                 |   |              |                               |                 |                  |   |
|------------------|-----------------|---|--------------|-------------------------------|-----------------|------------------|---|
| #                | Server          | Node Id   | Display Name | Value                         | Datatype        | Source Timestamp | S |
| 1                | OPCUAServer@... | NS4[String]\var\Logic.Application.DNPClient_DNP.AI_00000            | AI_00000     | Double click to display value | ExtensionObject | 11:45:04.823 AM  | 1 |
| 2                | OPCUAServer@... | NS4[String]\var\Logic.Application.DNPClient_DNP.AI_00000.instMag    | instMag      | 1234                          | Float           | 11:45:04.804 AM  | 1 |
| 3                | OPCUAServer@... | NS4[String]\var\Logic.Application.DNPClient_DNP.AI_00000.q.validity | validity     | 0 (good)                      | Int32           | 11:45:04.795 AM  | 1 |

**Figure 2.230 Viewing OPC UA Variables**

Right-clicking in the Data Access View provides an option to adjust the **Subscription Settings** associated with the client-to-server connection. These settings include a parameter called **Publishing Interval** that controls the rate at which data are updated from the server to the client, as shown in *Figure 2.231*. The lower limit of this value is limited by the **Minimum Publishing Interval** parameter that was configured in the **Settings** tab of the OPC UA server.

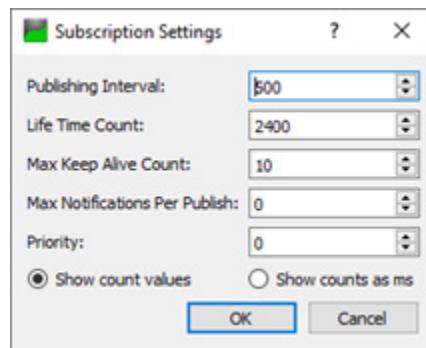


Figure 2.231 OPC UA Client Subscription Settings

## OPC UA Security Configuration

In firmware version R153 and later, OPC UA client and server protocols on the RTAC support Message Security Modes and Security Policies. When a server is configured, these settings are defined as a minimum security level so that the client can upgrade to stronger security modes as they are available. Both the client and server support anonymous authentication; username and password authentication is not presently supported on the RTAC. Support for security modes in the client and server is outlined as follows:

Table 2.134 OPC UA Security Modes and Policies Support

| Message Security Mode | Security Policy     | RTAC OPC UA server | RTAC OPC UA client |
|-----------------------|---------------------|--------------------|--------------------|
| None                  | None                | x                  | x                  |
| Sign                  | Basic128Rsa15       |                    | x                  |
| Sign                  | Basic256            |                    | x                  |
| Sign                  | Basic256Sha256      |                    | x                  |
| Sign                  | Aes128Sha256RsaOaep |                    | x                  |
| Sign                  | Aes256Sha256RsaPss  |                    | x                  |
| Sign and Encrypt      | Basic128Rsa15       |                    | x                  |
| Sign and Encrypt      | Basic256            |                    | x                  |
| Sign and Encrypt      | Basic256Sha256      | x                  | x                  |
| Sign and Encrypt      | Aes128Sha256RsaOaep | x                  | x                  |
| Sign and Encrypt      | Aes256Sha256RsaPss  | x                  | x                  |

### NOTE

The **Update Variables** function in the ACCELERATOR RTAC OPC UA client will also use the configured security mode on the device. Because ACCELERATOR RTAC is not part of the X.509 certificate chain that the RTAC itself is part of, ACCELERATOR RTAC generates its own certificate that must be individually trusted by the remote server. This certificate is named **AcRTAC Datasource OpcUa Browser**.

The RTAC OPC UA server and client use the active X.509 certificate for establishing the secure connection. This certificate must be generated via the RTAC web interface and contain a subject alternative name (SAN) with the IP address of the RTAC being used for OPC UA communications. Note that if the RTAC was upgraded to firmware version R153 or later from a firmware version prior to R153 and a custom certificate was already present, a new certificate must be generated to ensure the proper certificate extensions required by OPC UA are present. A client that wishes to connect to the RTAC OPC UA server must trust the certificate presented by the server. If the OPC UA client is another RTAC, perform the following steps to trust the RTAC X.509 server certificate:

- Step 1. Activate a custom certificate on the RTACs running the OPC UA server and client.
- Step 2. Connect to the web interface of the RTAC with the OPC UA server and use your web browser to view the certificate offered by the RTAC. Confirm that the certificate contains Extensions with the Subject Alternative Name (SAN) attribute that contains the server RTAC's IP address. The certificate must also contain the Certificate Key Usage and Extended Key Usage extensions. Save the certificate to your PC in .CRT format.
- Step 3. Double-click the .CRT file in Windows Explorer and use the Windows Certificate dialog to export or copy the certificate to a format supported by the RTAC (base-64 encoded X.509 .CER format is recommended).
- Step 4. Open the exported .CER certificate using a text editor (e.g., Notepad) and confirm that the -----BEGIN CERTIFICATE----- and -----END CERTIFICATE----- delimiters are present with encoded data between them. Select all the text in the file and copy it to the Windows clipboard.
- Step 5. Connect to the web interface of the RTAC where the OPC UA client is configured and select the CA Certificates navigation link under the Security heading. Create a new CA certificate and give it a name to indicate that it is the public certificate of the OPC UA server RTAC. Paste the text file contents into the Certificate content field and select **Submit** to accept the server certificate.

To connect the RTAC OPC UA client to a third-party OPC UA server, the method to extract the server certificate will vary, but *Step 3* to *Step 5* of adding this certificate to the client RTAC's CA certificate store are the same. If the certificates used in the OPC UA secure connection are signed by a separate CA authority, only the CA certificate of the signing authority needs to be added to the client CA certificates page.

The RTAC OPC UA server will automatically trust any certificate provided by an OPC UA client (there is no quarantine process for the RTAC OPC UA server). The OPC UA client connecting to the server will likely need to trust the RTAC server certificate, typically by releasing it from quarantine.

## **SEL Protocol**

---

You can configure multiple SEL protocol client and server devices to communicate with SEL IEDs and allow engineering access to the RTAC and its connected devices. ACCELERATOR RTAC supports the configuration of SEL protocol on any of the RTAC serial or Ethernet ports. ACCELERATOR RTAC

includes preconfigured device definition files (DDFs) that contain the necessary template data map information for communicating with supported SEL relays. Advanced users can also define custom DDFs to communicate with other SEL products. The RTAC SEL client can detect and notify if any polled devices have changes in their configurations. See *Communication Protocol Device Count Support on page 149* for the number of SEL protocol servers and clients supported for each RTAC model.


## SEL Client Configuration

The RTAC SEL Client supports the following:

- ▶ Auto-configure
- ▶ Auto-bps detection
- ▶ Compressed ASCII messages (e.g., History, Status)
- ▶ Fast Meter messages (e.g., Demand Meter, Meter, Peak Meter)
- ▶ Limited Fast Meter for SEL-100 and SEL-200 series relays
- ▶ IED configuration change monitor
- ▶ Access password management
- ▶ Unsolicited write messages
- ▶ User-configured flex parse messages
- ▶ SER logging to SOE log
- ▶ Event filtering and collection
- ▶ Remote access and file transfer

User-configured flex parse messages provide the tools to create custom messages and parse data from those messages into tags. See *Flex Parse Protocol on page 327* for more detail. There can be only one client association (a relay, for example) for each client connection. Only one lower-tier communications processor (RTAC, SEL-2032, etc.) is valid per client connection.

The ACCELERATOR RTAC software SEL client provides a DDF for each supported device. Each DDF is a template containing a superset of every point available for each SEL device. Select which points you want to use from the superset by setting Enable = TRUE in the data type tabs. Save the project and upload it into the RTAC. The RTAC will perform an autoconfiguration on each SEL device to which it is connected and compare the results with your configuration. Tags configured in the RTAC project that are not found during the autoconfiguration process will be marked with an invalid quality. Verify the RTAC configuration while offline and make the necessary changes to resolve the unmatched data tags.

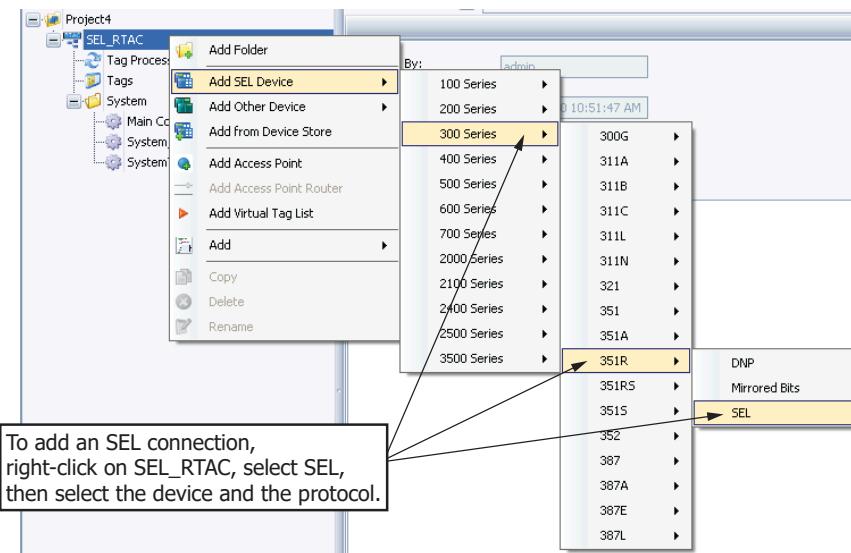

**Figure 2.232 Insert SEL Client**

To insert an SEL client, choose **SEL** under the Insert ribbon or right-click on **SEL\_RTAC**. Select the IED series, the specific device, and then the SEL protocol.

Give the device connection a unique name, and select the connection type as shown in *Figure 2.1*. Because SEL protocol is a point-to-point protocol, multi-drop options are not available for selection.

The **Settings** tab contains communications and time configuration parameters. Check the Description column for details on each configuration item. Move the slider, or hover your cursor over a description to see the entire text of an item description. Type any necessary comments in the blank column to the far right. Select the **Advanced Settings** check box to enable configuration of advanced settings.

## Tag Configuration

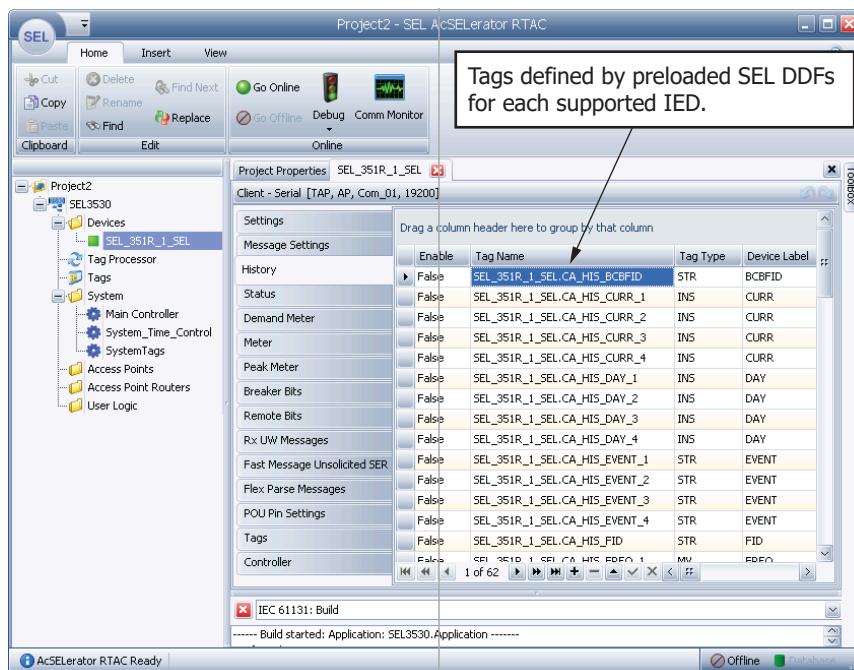


Figure 2.233 Tag Configuration

ACSELERATOR RTAC contains predefined DDFs for each supported SEL IED, so you typically do not have to add data tags. In the majority of applications, the word bit and analog metering values of interest are located in the **Meter** tab. By default, all SEL Client tags are disabled; if you want to use these tags in your project, set the **Enable** field to True. Enabling only the tags that you need helps optimize system performance. After making your modifications, you can use the **Export Items** functionality to create XML templates for each customized IED type. Use the exported XML template in other projects that have the same SEL client configuration requirements.

### NOTE

Use Copy (**<Ctrl+C>**) and Paste (**<Ctrl+V>**) to populate columns of Tag names and to duplicate Devices. Save the configuration by selecting **Save** or pressing **<Ctrl+S>**.

Each message in the SEL protocol returns a specific group of data. The Message Names in the **Message Settings** tab define the labels for each data group setting tab. For example, **History**, **Status**, **Demand Meter**, etc., are each data groups from different messages. Configure each tag in each data group by clicking on that configuration tab. The ACSELERATOR RTAC grays out nonapplicable configuration columns.

Table 2.135 SEL Tag Configuration Parameters

| Parameter | Description   | Default              |
|-----------|---|----------------------|
| Enable    | The processing enable flag. Set this flag to True to enable processing of this tag. Set this flag to False to disable processing. | False for most tags. |
| Tag Name  | The default tag name contains the device name and tag description. You can change this name as necessary.                         |                      |
| Tag Type  | The data type of this tag. See <i>Data Types on page 1137</i> for more details.   |                      |

| Parameter                 | Description   | Default |
|---------------------------|---|---------|
| Device Label              | The logical name of a group of data in an SEL protocol message. Typically, but not always, a label is unique in a message.  |         |
| Tag Alias                 | An optional descriptive tag name. Use this tag alias anywhere in the RTAC system in place of the actual tag name.   |         |
| Device Label Instance     | When a label in a message is not unique, the Device Label Instance identifies the occurrence of the label for the data element you want in the message.   | 0       |
| Device Label Data Index   | Specifies the data element within the data group under a particular label.  |         |
| Device Bit Label          | The logical name of a group of binary data in an SEL protocol message. Typically, but not always, a Device Bit Label is unique in a message.  |         |
| Device Bit Label Instance | When a device bit label in a message is not unique, the Device Bit Label Instance identifies the occurrence of the device bit label for the data element you want in the message.   | 0       |
| Status Value              | The default value for the tag prior to initialization of the tag at startup.  | False   |
| Inst Magnitude            | The default instantaneous value prior to initialization of the tag at startup.  |         |
| Magnitude                 | The default dead-banded value prior to initialization of the tag at startup.  |         |
| Dead Band                 | The number of units of change necessary to move the Inst Magnitude value into Magnitude. If $ instMag - mag  > db$ , then $mag := instMag$ . An excursion from this dead band causes the RTAC to generate a time-stamped event. Setting the dead band to 0 causes an event for every time the RTAC receives an instantaneous magnitude. |         |
| Zero Dead Band            | The number of units at or below which the RTAC forces Magnitude to zero. If $ mag  < zeroDB$ , then $mag := 0$ .  |         |
| Max Value                 | The maximum value the RTAC allows for this point.   |         |
| H H Limit                 | The high-high alarm limit. Excursions beyond this limit cause the RTAC to generate a high-high alarm.   |         |
| H Limit                   | The high alarm limit. Excursions beyond this limit cause the RTAC to generate a high alarm.   |         |
| L Limit                   | The low alarm limit. Excursions beyond this limit cause the RTAC to generate a low alarm.   |         |
| Min Value                 | The minimum value the RTAC allows for this point.   |         |
| Inst Angle                | The instantaneous angle value measured in degrees.  |         |
| Angle                     | A snapshot value of Inst Angle at the time of an Inst Magnitude excursion past the dead-band value.   |         |
| Actual Value              | The default actual value of a BCR type tag before initialization on startup.  |         |
| String Value              | The default string value the tag will have prior to initialization of the tag at startup.   |         |
| Comment                   | Optional user-entered comment field.  |         |

## Configuration Monitor

Use the Check IED Configuration settings to monitor configuration changes in connected SEL devices. Select the **Advanced Settings** check box under the **Settings** tab to expose these settings. The IED configurations are monitored as follows:

- Step 1. The RTAC sends each user-defined Command String found under the **Check IED Configuration Commands** tab at the interval, in minutes, defined by the setting **Period between attempts to detect a change in the configuration of the connected IED**. This setting is found under the **Settings** tab.
- Step 2. The RTAC calculates a 32-bit CRC on the response for all characters between STX and ETX. In addition to the per-response CRC, in firmware versions R151-V0 and later, a SHA-256 is also calculated across all responses.
- Step 3. The response CRC is compared to a CRC stored in the nonvolatile memory that was calculated for the same response previously sent.
- Step 4. If a mismatch is detected, or if the response is not received within the **Timeout for a Check IED Configuration request**, the process repeats until one of the following occurs:
  - a. **Number of retries for a Check IED Configuration request** is met.
  - b. The calculated CRC matches the stored CRC.
- Step 5. If the CRC cannot be validated, the **Check\_IED\_Configuration\_Error** output POU pin is pulsed for one task cycle.
- Step 6. If one or more of the CRCs do not match the stored CRCs, the **Check\_IED\_Configuration\_Mismatch** output POU pin is pulsed and the calculated CRCs are stored in nonvolatile memory and used the next time the **Check\_IED\_Configuration** POU pin is triggered (either manually or via the time period defined in the settings). In firmware versions R151-V0 and later, the calculated SHA-256 is also stored in nonvolatile memory and the **Check\_IED\_Configuration\_Mismatch\_Count** POU output pin increments.

If the number of CRCs stored in the nonvolatile memory is not equal to the number of user-defined requests, all stored CRCs are deleted and the **Check\_IED\_Configuration\_Mismatch** output POU pin will pulse the next time the configuration monitor process completes.

In firmware versions R151-V0 and later, Check IED Configuration exceptions are exposed as reports on the RTAC's file system and available via the File Manager in the web interface, SFTP server, and MMS server file transfer. These reports are stored within the **CONFIGURATION\_MONITOR** directory in a subdirectory named for the SEL client device. Each report is a text file with a file name in the following format: **<Device Name>\_Configuration\_Change.txt**. These files are formatted for Compressed ASCII and contain the following items:

- Virtual Port Number of the device
- Name of the device

- ▶ Custom GUID of the device
- ▶ A two-column table containing a time stamp and SHA-256 representing the last ten configuration mismatch events. Events are listed in descending order.

The following is a sample of how these report files are formatted.

---

```
"VIRTUAL_PORT_NUMBER", "254", "076E"
"DEVICE_NAME", "SEL_451_1", "067D"
"DEVICE_GUID", "Custom451GUID", "0856"
"DETECTED", "SHA256_HASH", "061E"
"2022-10-21 00:33:41.000000", "6566DDD1F90536B41AAA26849442CB1044169995799C88097E88B5F1F56A8B0A", "1414"
"2022-10-21 00:33:14.000000", "CA885AA430EEC3B46285F7488CA4481BE5F7F154F84F0316C8E543F53F5EFC1E", "1478"
```

---

Autoconfiguration and transparent connections will interfere with this process. The process will resume once autoconfiguration is complete and all transparent or direct transparent connections are closed.

## Access Passwords


You can configure the Level 1 and Level 2 access passwords that the RTAC uses to connect to the relay under the **Settings** tab. You can also, through user logic, modify the Level 1 and Level 2 access passwords in real time by setting the `Level_1_Password` or `Level_2_Password` POU pins and asserting the `Write_Level_1_Password` or `Write_Level_2_Password` POU pins. When `Write_Level_1_Password` or `Write_Level_2_Password` is asserted, the Level 1 or Level 2 access passwords are updated with the value of `Level_1_Password` or `Level_2_Password`, respectively. Through the use of custom logic, it is possible for the RTAC to perform password management and allow controlled engineering access to users without the user knowing the relay passwords. Whenever passwords are modified, it is good practice to log the new POU pin password values, pass the new values to SCADA, or in some other way store the password values as part of a backup contingency plan.

As described in *SEL Server Configuration on page 541*, you can transparently connect to SEL clients through the SEL server connection (available in firmware versions R134-V0 and later). Set **Enable Password Monitor** to True in each SEL client to allow the RTAC to detect when the transparently connected user uses the **PAS** command to change the relay password, capture the password the user enters, and automatically update the passwords in the SEL client in the RTAC project.

### **WARNING**

Any modifications made to the Level 1 and Level 2 access passwords (via the password pins) while the project is running in the RTAC will be overwritten when new settings are downloaded to the RTAC. Before downloading a project to the RTAC, you should first read the currently running project to retain the current value of the Level 1 and Level 2 access passwords. Failure to do so will result in the inability to access the relays.

## Message Settings

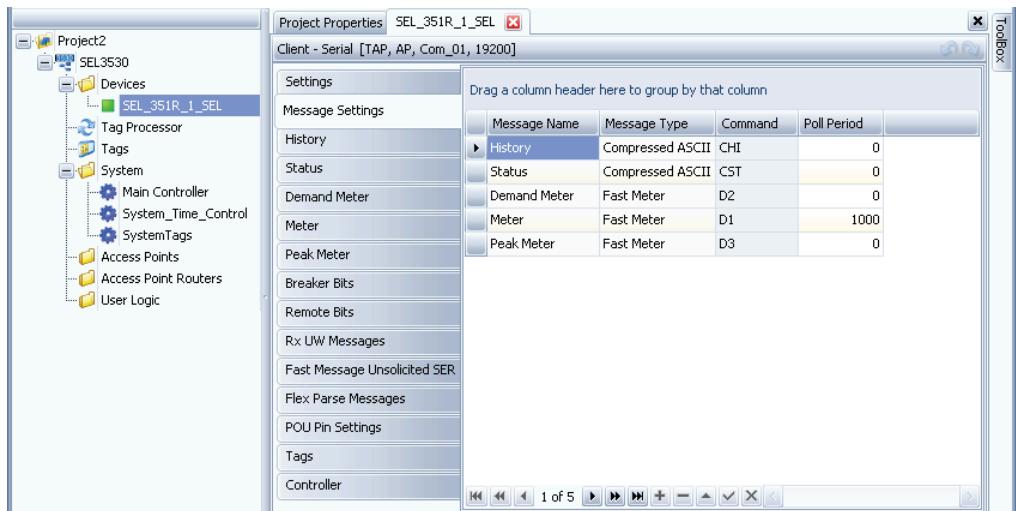

**Figure 2.234 Message Settings**

As shown in *Figure 2.234*, the **Message Settings** tab defines which messages the RTAC sends to the SEL IED and how often it sends them. You can adjust the default settings to alter the poll period or the commands the messages use.

| Column Name  | Description  |
|--------------|--|
| Message Name | User-defined message name  |
| Message Type | Which SEL message type is used to get the data   |
| Command      | Which SEL command is sent in the message to get the data                               |
| Poll Period  | User-defined time in milliseconds between messages. A value of 0 disables the message. |

See each relay-specific instruction manual for information on which points to poll and what messages and commands to use to poll each device. The RTAC supports SEL Compressed ASCII (CASCII), SEL Fast Operate, SEL Fast Meter, Unsolicited Write, and SEL Fast SER. The SEL client uses the configuration on each message name tab to parse the data from messages. When the same data are available in CASCII and binary, always use the binary message data. CASCII is compressed, but it is neither as efficient nor as secure as binary messages. Binary messages are also uninterrupted by transparent engineering access, while such access does interrupt CASCII messages.

See the SEL application guide "Configuration and Fast Meter Messages" (AG95-10) for a comprehensive description of SEL binary messages.

## Fast Message Unsolicited SER Data

An SEL IED generates time-stamped Sequential Events Recorder (SER) data for any word bits that are located in its configured SER equations. The RTAC can request to receive unsolicited notifications of new SER data through an SEL protocol mechanism known as Unsolicited Fast SER messages. These messages are enabled via the **Enable\_Unsolicited\_SER\_RX** setting located on the **POU Pin Settings** tab (this feature is enabled by default). The RTAC automatically

routes all SER data it receives from SEL client devices to all configured SEL server device connections. No configuration is necessary on SEL client or SEL server device connections to enable this feature. The RTAC can use received unsolicited SER data through two exclusive methods.

With the first method, you can create and configure tags under the **Fast Message Unsolicited SER** tab. The RTAC identifies which tag to populate with received SER data based on either the index or the label. The index identifies sequentially which SER point the SEL IED identifies. For example, the first SER point configured in the IED is Index 1, the second is Index 2, etc. The label identifies the SER point by the label the SEL IED defined. You generally should refer to the SER point by label; the SER point order can change because it is configurable in the IED. The RTAC assigns all unsolicited SER data (states and times) to these tags.

To use the second method in assigning unsolicited SER data in the RTAC, you do not create tags in the **Fast Message Unsolicited SER** tab. Instead, set the enable flag to True for binary tags in the **Meter** tab in the SEL client configuration. As the RTAC receives unsolicited SER data, it searches through the **Meter** tab for a binary tag label that matches the SER data table. When it finds a match, it assigns the time and state to that tag. This allows you to map an SEL binary tag (for example, IN\_201) to a DNP binary tag in the Tag Processor and update the DNP tag automatically with unsolicited SER data. Note that this functionality is only available for tags located on the **Meter** tab and does not apply to tags located on other tabs that contain word bits, such as **Targets 2**.


## Flex Parse Messages

Use Flex Parse Messages to create custom commands as long as 255 bytes and optionally parse the response messages. You can configure the RTAC to send a Command String to the connected SEL device at a configurable Poll Period interval. You can also configure the Start of Response Parse Expression and other parse expressions to enable the RTAC to determine when a valid response is received and to interpret the returned message and populate user-created tags. You can define parse expressions in SEL type class expressions or Perl 5 regular expressions (regex). It is important to note that the SEL client will not send user-defined flex parse messages to the configured device until after the auto-configuration is complete. For details, including SEL type class expressions, regex, and examples of using flex parse within the SEL client or using flex parse directly with other devices, please refer to *Flex Parse Protocol* on page 327 in this instruction manual.

Add a flex parse command by performing the following steps:

- Step 1. After adding an SEL device, click on **Flex Parse Messages**.
- Step 2. Click on + to add a message, then click on **Add**.
- Step 3. Configure the Command String, which is the message that will be sent to the SEL device.
- Step 4. Configure the timing parameters to dictate how often the command should be sent and the time allotted for the command to complete.
- Step 5. Configure the Start of Response Expression that the RTAC will compare with the incoming message to ensure it is parsing the correct message.

Step 6. Configure individual flex parse tags and parsing messages by using the information in *Flex Parse Protocol on page 327*. The configuration for flex parse messages added to an SEL client and flex parse messages added to a Flex Parse Protocol client is the same.

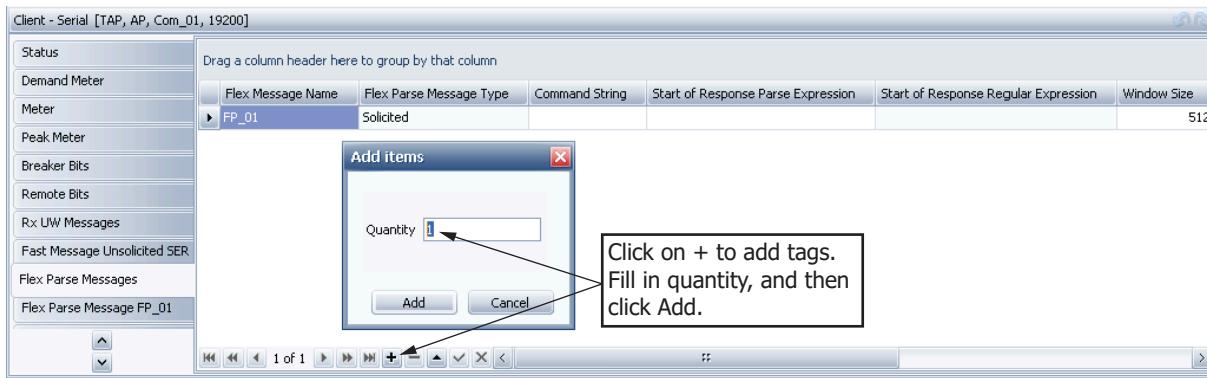

**Figure 2.235 Add Flex Parse Message**


## Flex Parse Capture to File

In firmware versions R147 and later, flex parse messages can be configured to save the IED response to a text file on the RTAC file system. Enable this functionality by toggling the **Capture To File** parameter of a configured flex parse message to True. When the flex parse message response is received, it is stored in the **FLEX\_PARSE** directory and in a subdirectory named for the SEL Client device name in the following format: <SEL Client Name>\_<Flex Parse Message Name>.Capture. New files will overwrite older ones.

## Unsolicited Write Messages

Unsolicited write messages can be configured to periodically write to specific memory locations on a remote device. An SEL client or SEL server configuration can receive unsolicited write messages from a remote device and can transmit unsolicited write messages to another device. Unsolicited write messages are typically only used when interfacing with a legacy communication processor (SEL-2020, SEL-2030, SEL-2032) or configuring the RTAC to write data into Remote Analog signals on a compatible IED.

Configure transmit unsolicited write (Tx UW) messages in SEL client or server to create, define, and write tag values into memory locations in a target SEL IED. Configure receive unsolicited write (Rx UW) messages in SEL client or server to create and define tags and memory locations in the RTAC to which another SEL device will write. A remote SEL IED uses UW messages to write data to these memory locations.

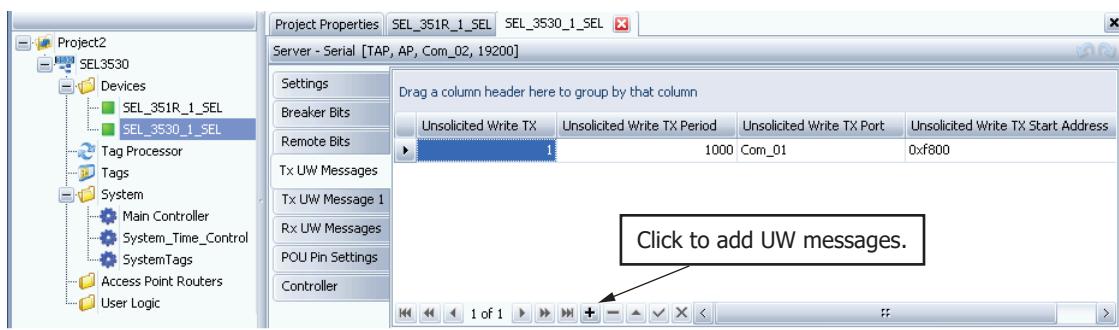**Figure 2.236 Unsolicited Write Messages**

Add Tx UW messages to send data to the remote SEL IED. Click + to add a number of Tx UW messages. Configure each message.

| Column                             | Description   |
|------------------------------------|---|
| Unsolicited Write TX               | The order in which the RTAC sends the Tx UW messages.   |
| Unsolicited Write TX Period        | The time period in milliseconds between each UW transmission.   |
| Unsolicited Write TX Port          | The port the RTAC uses for this UW communication.   |
| Unsolicited Write TX Start Address | The starting address in hexadecimal format on the receiving RTAC to which the transmitting device will be sending data. |

Each Tx UW message you add causes ACSELERATOR RTAC to create a **Tx UW Message** tab. Use each **Tx UW Message** tab to add and configure data tags for its respective Tx UW message. The maximum number of registers an unsolicited message can contain is 117, so if you configure each tag in the UW Message tab to use one register, you can configure a maximum of 117 tags. However, you can configure as many as 2000 tags to address as many as 1872 individual bits ( $16 \text{ bits} \cdot 117 \text{ registers}$ ) by using the following configuration:

#### NOTE


Use Copy and Paste to populate columns of tag names and to duplicate devices.

Tag Type = SPS

Treat As = BOOL

Address Range Start = Use the same register address for each group of 16 tags.

Bit Index = Increment from 0–15 for each group of 16 tags of the same register address.

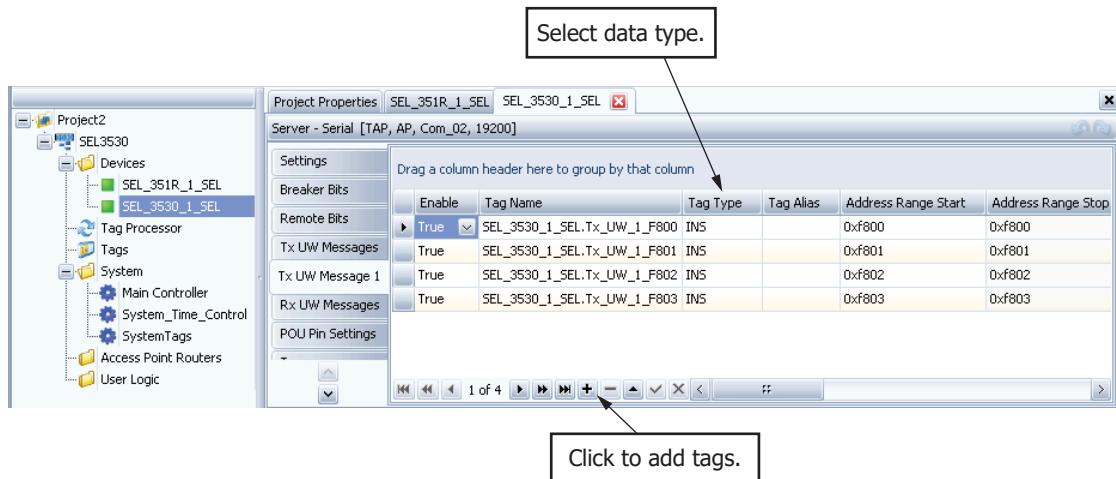

**Figure 2.237 SEL Unsolicited Write Tags**

To add Tx UW tags:

- Step 1. Add an SEL server device.
- Step 2. Click on the **Tx UW Message *n*** (where *n* is the Tx UW message number) tab to add and configure tags.
- Step 3. Click **+** to add tags (10,000 tag limit or 5000 for SEL-3505, per device tag type).

Creating and enabling only the number of tags necessary helps optimize system performance.

- Step 4. Change tag names, if necessary.
- Step 5. Change other tag-related information as necessary.

Configure each Tx UW message group of data tags. The settings for each tab depend upon the Tag Type you have selected for that tag. ACSELERATOR RTAC grays out nonapplicable configuration columns. The configuration settings have the same meaning as those for SEL client configuration, except as the following table describes.

| Setting Column      | Description   |
|---------------------|---|
| Address Range Start | The beginning address on the target SEL IED to which the RTAC will write the Tx UW tag value.   |
| Address Range Stop  | The ending address on the target SEL IED beyond which the RTAC will not write the Tx UW tag.  |
| Treat As            | Convert the tag value to this data type when writing to the target. For example, to send two bytes of data per tag, change the Treat As type to INT. Remember to renumber the Address Range Start as needed if you change the Treat As data type. |

Configure Rx UW messages and tags in the same way as Tx UW messages and tags. Remember that Rx UW messages define data that are coming from an SEL device. The remote SEL IED will populate the tags you define in the Rx UW messages by writing to the memory locations you have defined for each tag. Use the Tag Processor to map those values to other tags in the RTAC.

## Remote Bits and Breaker Bits

Add remote bits (RB) and breaker bits (BB) as necessary. Link RB and BB tags in the Tag Processor to control tags in the RTAC. The RTAC will issue controls to a remote SEL IED through the configured RBs and BBs.

## ASCII SER Logging

You can configure the RTAC to automatically collect SER data from an SEL client and log those SER data into the RTAC SOE log. For each SEL client, set the POU pin setting **Enable\_ASCII\_SER.Logging** to True. Select the **Advanced Settings** check box under the **Settings** tab and locate the applicable settings under the Event section.

The **ASCII SER Logging Collection Period** is the interval at which the RTAC sends the ASCII SER command to the SEL relay to collect the events. To identify which device the SER came from, you can enter a unique device identifier by using the Device GUID setting. When the RTAC receives the events, it notifies each configured SEL server that new SERs have been collected and logs the SERs in the RTAC SOE log. The SER event is logged into the SOE with the optional GUID name and a time stamp that is constructed from the response of the ASCII SER command. If needed, modify the date format with the **ASCII SER Logging Date Format** setting.

The command to collect the ASCII SER data is dependent on the SEL device with the **CSE** command taking precedence over the **SER** command. The **ASCII SER Logging Command Parameter** setting configures the value appended to the ASCII SER command; this determines the count of the SER records returned from the command. Upon a subsequent execution of the ASCII SER command, if the last-known SER record (determined by a word bit name and time stamp) is no longer present in the command output, the ASCII SER collection process will reset its last-known record time reference based on the newest record data available to it. If this reset occurs, an RTAC SOE log entry is created indicating that a **Sequence Restart** has occurred and that SER records may have been lost and will not be retrieved by the RTAC using this collection mechanism. This may occur, for example, if there is a chattering word bit logged to the IED SER that causes events to be generated at a rate greater than that allowed by the SER collection interval and the record count determined by the SEL client settings.

## Event Filtering and Collection

You can configure the RTAC to collect events automatically from each configured SEL client if the relay supports the compressed ASCII history (CHI) message. Depending on configuration, the RTAC can store event information (fault current, location, time of event, etc.) for the first event of the most recent fault and/or all event information in the RTAC database. The RTAC stores new event information in tags available to any RTAC protocols and applications from the event tab. Enable this feature by changing the setting **Enable New Event Filtering** to True. The RTAC can also store as many as 576 records of all event information it retrieves from the compressed ASCII event (CEV) message into nonvolatile storage in the RTAC database. Enable this feature by changing the setting **Enable Event Collection** to True. Once the RTAC stores

event information in the database, that information is available to SEL server connections configured in the RTAC through special event commands. These two event collection methods are neither exclusive nor dependent upon each other.

## Configure New Event Filtering

- Step 1. Insert an SEL client for the correct SEL relay type.
- Step 2. On the **Settings** tab, set **Enable New Event Filtering** to True.
- Step 3. Select the **Advanced Settings** check box to enable configuration of advanced settings. You can now edit the settings related to event filtering, collection, and reporting.

The event polling period dictates how often the RTAC sends a **CHI** command to determine whether there are any new events. If the relay replies to one of these solicited polls with new events, or if the relay sends an unsolicited short event report at any time, the RTAC knows at least one event is ready for filtering/collection/reporting. It is important to note that the **History, Compressed ASCII** command in the message settings tab populates tags in the **History** tab; it is not part of this event-collection process.

The RTAC defines the newest event as either a single event or the first in a group of events in which the time stamp is greater (by the configured New Event Lockout Period) than for adjacent events. If Report New Event On Detection = True, then the RTAC uses the new event data to populate the tags in the **History - New Event** tab. If Report New Event On Detection = FALSE or a new event is unavailable, the tags do not update unless the POU pin report\_new\_event is asserted.

If the POU pin Reset\_New\_Event is asserted or the period specified by New Event Hold Duration expires, the RTAC replaces the time stamp and quality of the History - New Event tags with the present system time and invalid quality. The New Event Reset Location Value and the New Event Reset Event Value are used to assign values to the NEW\_EVENT\_FAULT\_LOC and NEW\_EVENT\_EVENT tags respectively. Additionally, if the POU pin Report\_New\_Event is asserted and the RTAC finds no new event after issuing a **CHI** command, it replaces the data in the History - New Events tags as if the Reset\_New\_Event pin had been asserted.

## Configure CEV Event Collection

- Step 1. Insert an SEL client for a particular SEL relay (or use one already configured for event filtering).
- Step 2. On the appropriate settings tab, set **Enable Event Collection** to True.
- Step 3. Select the **Advanced Settings** check box to enable configuration of advanced settings. The **Event Polling Period** settings works the same as in new event filtering except that it is the period at which the RTAC will issue a compressed ASCII event history (CHI) message to detect new events and follow up with the CEV command to retrieve any uncollected events that are detected. The RTAC will also request a CHI report if it receives a short event report from the relay; on SEL relays, this is typically enabled by setting the AUTO parameter on the RTAC-connected-serial port to 'Y'.

In event collection, all event information is gathered from the CEV reports and stored in nonvolatile RAM in the RTAC. When event collection is first enabled, only the 12 most recent entries are collected from each relay, with a maximum of 576 event records stored in the RTAC's memory. If 576 records already exist in the database, the next record stored will cause the oldest 64 records to be purged before the new record is stored, resulting in a new total of 513 records.

Optionally, use the **Event Collection Parameter** setting on the **Settings** tab to modify the **CEV** command that the RTAC sends to collect the events. For example, an entry in the Event Collection Parameter setting of **S16 L12** will result in the command **CEV x S16 L12** to the relay, where *x* is the event number and S16 L12 specifies 16 samples plus 12 cycles. Do not use the **TERSE** or **NSUM** parameters; these will result in a compressed event report that the RTAC does not recognize.

When the RTAC collects and stores new CEV event records, it sends a message to each configured SEL server notifying it that there are new events ready for collection. An SEL server can then use this information to issue a notification to an external event aggregator such as ACCELERATOR TEAM® SEL-5045 Software or the SEL Blueframe® Data Management and Automation (DMA) application suite. If the **Enable New Event Filtering** setting is set to **TRUE** and CEV event collection is left disabled, the RTAC will detect new events but not store event data in the database. Neither will it notify configured SEL servers that there are event data available.

You can download collected CEV events in the RTAC web interface by selecting the **Event Collection** tab. Enter the start and end dates for the events you want to download and select **Download**. CEV events are also available from the RTACs SFTP interface if an SFTP server has been added to the project. They are made available in the **EVENTS/CEV** directory, where a named subdirectory will exist for each separate SEL client.

In project versions R153 and later, the **Generate Comtrade** setting is available. If CEV event collection is enabled and **Generate Comtrade** is set to **True**, each collected CEV record is automatically converted into an equivalent COMTRADE record. This matching COMTRADE record can be retrieved by using the same web and SFTP interface options previously described.

## Configure COMTRADE Event Collection

- Step 1. Insert an SEL client for a particular SEL relay (or use one already configured for event filtering).
- Step 2. On the appropriate settings tab, set **Enable Comtrade Collection** to **True**.
- Step 3. Select the **Advanced Settings** check box to enable configuration of advanced settings. The **Comtrade Polling Period** is used to define the period at which the RTAC will issue a **FILE DIR** or **FILE DIR EVENTS** command to search for new COMTRADE events.

In addition to collecting CEV-based events with the SEL client, COMTRADE collection is also supported for SEL IEDs that support the COMTRADE event storage format. Most RTACs support storing as many as 1024 COMTRADE events at a single time, however the SEL-3555 and SEL-3560 RTACs support storing 10,000 COMTRADE events. This COMTRADE collection count is shared with COMTRADE events collected through Modbus, MMS, and

EtherCAT CT/PT modules. The COMTRADE event collection queue is separate from the 576 CEV collection count. Also, as with CEV event collection, when COMTRADE event collection is first enabled, only the most recent 12 events are collected from an SEL IED.

Starting in firmware version R147, COMTRADE collection is also available via FTP, if the SEL client is configured to use an Ethernet-tunneled-serial connection. The **Connection to use when performing Comtrade Event Collection** parameter allows the SEL connection to use either the Primary SEL protocol connection (typically a Telnet session) or a separate FTP connection to the SEL relay to collect COMTRADE events. Some SEL relays have large COMTRADE files, which may prevent the files from being collected in a reasonable amount of time via the primary connection. For these files, SEL recommends using the FTP collection method as the transfer will complete much faster and not block the primary connection during the transfer. Once FTP is selected as the connection type, use the **FTP Username for Comtrade Event Collection** and **FTP Password for Comtrade Event Collection** parameters to configure the login for the FTP connection, based on the IEDs FTP settings. The FTP Password can be selected from the stored copy of the IEDs Level\_1 or Level\_2 password from the RTACs database.

Some SEL relays have multiple types of COMTRADE event reports; for these relays, you can configure the RTAC to collect any desired event types. Use the **List of Event types to be collected** parameter with a comma-separated list of the different event types to configure which specific COMTRADE files to collect. Relay-specific instruction manuals document what types of events each relay supports. Some examples of event types include traveling-wave (TW), high-resolution (HR), and 10 kHz (TDR). Note that the RTAC collects high-resolution COMTRADE event types by default because that is the most common event type across SEL relays. If the RTAC detects multiple copies of the same COMTRADE record ID on an IED, it will prioritize the record that was named with COMNAME format, as these are typically stored in the updated COMTRADE 2011 format.

You can download collected COMTRADE events in the RTAC web interface by selecting the **Event Collection** tab. Enter the start and end dates for the events you want to download and select **Download**. COMTRADE events are also available from the RTAC's SFTP interface if an SFTP server has been added to the project. They are made available in the **EVENTS/COMTRADE** directory, where a named subdirectory exists for each separate SEL client.

## Configure Tiered Communication Processor Event Collection

In firmware version R149-V0 and later, it is possible for the RTAC to collect CEV and COMTRADE event records from IEDs that are connected as children to SEL-2020, SEL-2030, or SEL-2032 Communications Processors to which the RTAC is configured to communicate. These child IEDs are configured as unique entries under a single SEL Client device associated with the communications processors. To configure event collection from communication processor child IEDs, perform the following:

- Step 1. Insert an SEL client configured as an SEL-2020, SEL-2030, or SEL-2032 Communications Processor.
- Step 2. On the **Settings** tab, set **Enable Event Collection** to True.

- Step 3. Select the **Advanced Settings** check box to enable configuration of advanced settings. The **Event Polling Period** parameter is used to determine the period at which the RTAC will attempt event collection from child IEDs using the method specified by the **Child IED Event Polling Mode** parameter.
- Step 4. The **Pre-Termination Timeout**, **Termination String**, and **Post-Termination Timeout** parameters should be configured with values matching the communication processor parameters **TERTIME1**, **TERSTRING**, and **TERTIME2** on the specific port that is communicating to the RTAC. These values are used by the RTAC to navigate to and from the communications processor-connected Child IEDs.
- Step 5. The **Child IED Event Polling Mode** parameter is used to configure how the RTAC will interface with the communications processor to collect child IED events. The two options available for configuration are as follows:
- ▶ **Round-Robin Polling.** In this mode, the RTAC will use the **POR x** command to transparently connect to each configured child IED, at the interval specified by the Event Polling Period setting. Once a connection to the child IED is established, if CEV collection is configured, the **CHIS** command is used to determine if any new CEV records need to be collected. If COMTRADE collection is configured, a direct transparent connection (**POR x D**) is used to establish connectivity to the child IED and the **FILE DIR** command is used to determine if any new COMTRADE records need to be collected.
  - ▶ **Fault-Register Polling.** In this mode, it is assumed that the communications processor has some Math Move statements programmed in order to populate a 16-bit 'fault register' in which each bit state represents a new event being available on a particular port (bit 0 for port 1, bit 1 for port 2, etc.). The RTAC will periodically use the **VIEW** command to check the state of the fault register configured via the **Fault Register Address** setting (e.g., 16:USER:FAULT). If any bit in the register is set for a particular port, then the **POR** command is used to establish a transparent connection to the child IED on that specific port. Once all events are collected, the RTAC will exit the child IED transparent connection and issue a **TOG** command to clear the appropriate bit in the fault register. Fault-Register polling is considered more efficient than Round-Robin polling, but some programming is required in the communications processor to enable it. More details on the required programming are available in the SEL application guide *Configuring ACCELERATOR TEAM and the SEL-2032 for Event Collection* (AG2015-15), specifically in the section *Configure the SEL-2032*.

Step 6. On the **Child IEDs** tab, use the + button to add a row for each child IED present on the communications processor for which events should be collected. Each child IED row has the following parameters associated with it:

- **IED Name.** The name of the IED associated with the communications processor.
- **IED Virtual Port Number.** The communications processor serial port connected to the child IED. Used as an identifier used to initiate the Transparent connections to the child IED. Must be between ports 1–16.

Each configured row on the **Child IEDs** tab will create a sub-item (named for the child IED Name) that can be accessed in the project tree under the communications processor SEL client. This sub-item will contain configurable parameters for that particular child IED. These parameters include the following:

- **IED GUID.** A unique database identifier to be associated with this IED's events. Used by TEAM and Blueframe DMA in order to uniquely identify events from this particular child IED when configured to collect events from the RTAC using a direct database connection.
- **Level 1 Password.** The child IED Level 1 password. Used to log in to the ACC level of the child IED to perform automatic configuration and event retrieval functions. When a secure engineering access session is established through an SEL server and the parent SEL Protocol device connects to the child device, the stored child IED Level 1 password is automatically issued for an ACC access attempt made by the user (see *SEL Server Commands on page 544* for more details). This password can be updated here or via web API password-vault calls.
- **Level 2 Password.** The child IED Level 2 password. When a secure engineering access session is established through an SEL server and the parent SEL Protocol device connects to the child device, the stored child IED Level 2 password is automatically issued for a 2AC access attempt made by the user (see *SEL Server Commands on page 544* for more details). This password can be updated here or via web API password-vault calls.
- **Fault Register Logic Bit.** The communications processor per-port logic bit used to populate the FAULT register; only used in Fault-Register Polling mode. Following successful collection of events from a child IED, the RTAC exits the transparent connection to the child IED, logs in to the 2AC level of the communications processor, and issues the **TOG <port>:C<bit>** command, where <port> is equal to the child IED virtual port and <bit> is equal to the configured logic bit.
- **Format used to define Event filenames.** Selects the format of filenames for collected CEV and COMTRADE events. Configured as either Default or COMNAME; see *Event Collection File Naming on page 532* for more details.

- **List of names used to define event filenames.** When COMNAME event naming is used, this string is appended to the embedded filename time stamp as part of the file name.
- **Event Formats to be Collected.** Select the type of events to collect from a child IED. Select from CEV, COMTRADE, or Both.
- **CEV Event Collection Parameter.** Optional parameter appended to the CEV command when retrieving CEV events.
- **List of Comtrade Event types to be collected.** Comma-delimited list of Comtrade Event types to be collected. Defaults to HR (high-resolution), but others can be configured such as MHR, TW, etc.

CEV and COMTRADE events collected from child IEDs are available for download from the RTAC web interface by selecting the **Event Collection** tab. The events will be associated by name with the child IED Name assigned to the IED on the Child IEDs tab. Any CEV events collected from child IEDs are made available in the SEL Server command-line interface via **CAR** and **SUM** commands; they will be associated with the parent communications processor SEL client. CEV and COMTRADE events are also available from the RTAC's SFTP interface if an SFTP server has been added to the project. They are made available in the **/EVENTS/CEV/** and **/EVENTS/COMTRADE/** directories, where a named subdirectory will exist for each separate unique child IED.

Collecting event records through a communications processor generates a relatively large amount of data traffic that the hardware was not designed to handle on a regular basis. Some configuration choices that should be considered include the following:

- **RTS/CTS Handshaking.** Hardware flow control (also known as RTS/CTS handshaking) should be enabled (**RTS\_CTS = Y**) on both the SEL IED serial port and the communications processor serial port. It is also important that a serial cable that supports the RTS/CTS lines (such as the SEL-C273A) be used to connect the SEL IED to the communications processor.
- **Connection Type to RTAC.** Options exist to allow the RTAC to communicate to the communications processor either serially or via Ethernet to an SEL-2701 card installed in Port 17 or 18 of the communications processor. The most bandwidth-efficient and high-performance choice for collecting CEV and COMTRADE events from child IEDs connected to a communications processor is with a 19200 baud (or higher) serial connection. Using this connection method requires a dedicated communications processor serial port configured with the **DEVICE** parameter set to **M** (master) and the **PROTOCOL** parameter set to **S** (SEL protocol). This serial connection should use an SEL-C273A cable to connect the communications processor to the RTAC and also enable RTS/CTS handshaking on both ends.
- **SEL-2701 Communications.** If you choose to configure the RTAC to communicate via Ethernet to the communications processor, ensure that the port that has the SEL-2701 card installed (Port 17 or 18) has the **T1RECV** parameter set to **Y** and the **T1PNUM** set to a known Telnet port, such as 23. Note that the effective bandwidth provided to the SEL-2701 for access to other communications processor serial

ports is 9600 baud. If COMTRADE event collection is desired through a SEL-2701 connection, any SEL IED port from which events are to be collected must *not* be configured for a speed exceeding 9600 baud; otherwise, failed event retrieval or loss of data can occur.

- **Unsolicited SER Data and Writes.** In a tiered event collection application performing COMTRADE record collection, the SEL client connecting to the communications processor should be configured to disable unsolicited SER data reporting. If this is not done, the SEL client may mistakenly interact with the Fast SER buffer of the child IED itself if a direct transparent connection happens to be established when the SEL client issues a periodic Unsolicited SER Enable/Disable message. This feature can be disabled from the **POU Pin Settings** tab by modifying the default value of the **Enable\_Unsolicited\_SER\_RX** Pin Name to FALSE. For the same reasons listed above, the use of **Tx UW Messages and Rx UW Messages** should also be avoided.

## Event Collection File Naming

Starting in firmware version R148-V0 and later, the format for how an event is named on the RTAC file system is a configurable option. Events can maintain the standard format, which was used prior to R148, or the event can be named in compliance with the COMNAME standard.

For CEV collected events, the formatting shall be as follows.

If Event\_Name\_Format is configured as default:

- Format: SEL\_event\_<sequence # -- 0 - (n-1) events>.cev
- Example: "SEL\_event\_3.cev"

If Event\_Name\_Format is configured as COMNAME:

- Format: <Event's Faulted Timestamp -- YYMMDD,hhmmss000000>, <Time Code+t>, <COMNAME\_Event\_Name\_String>, <Event Number -- 0, 10000-65535>.cev
- The time stamp stored with the .cev file (displayed by the Web), shall be the time stamps extracted from the CHI response.
- The value of Time Code (i.e., UTC Offset) shall be derived from interpreting the Event's Trigger time stamp and the SEL Client Date-Time settings.
- The event reference will be derived from the "REF\_NUM" value (10000–65535) from the CHI response, if it exists; otherwise, it will be 0.
- Example:
  - 170220,215117461,+2h30t,StationId,DeviceId,Company,10009.cev

For COMTRADE collected events, the formatting shall be as follows.

If Event\_Name\_Format is configured as default:

- The file name of the zipped COMTRADE event files and ZIP file shall be the base file name of the COMTRADE Event files from the relays file directory response.
- The entire ZIP file name shall be uppercase; the cfg/dat/hdr file names may be mixed-case and the extension shall be lowercase.

- The time stamp stored with the COMTRADE Event files (displayed by the Web), shall be the time stamps extracted from the relay's directory response. If the relay's directory response does not include time stamps for the COMTRADE Event files, the time of retrieval shall be used.
- Example:
  - "170220,215117461,2T,T400L,0L#53,KAY,TDR,10009.CFG/DAT/HDR" becomes:
    - 170220,215117461,2T,T400L,0L#53,KAY,TDR,10009.ZIP
    - 170220,215117461,2T,T400L,0L#53,KAY,TDR,10009.cfg
    - 170220,215117461,2T,T400L,0L#53,KAY,TDR,10009.dat
    - 170220,215117461,2T,T400L,0L#53,KAY,TDR,10009.hdr
  - "StationA,SEL-T401L,SEL-T401L,200313,232558.5775,-1h30t,No.10000,MHR.CFG/DAT/HDR" becomes:
    - STATIONA,SEL-T401L,SEL-T401L,200313,232558.5775,-1H30T,NO.10000,MHR.ZIP
    - StationA,SEL-T401L,SEL-T401L,200313,232558.5775,-1h30t,No.10000,MHR.cfg
    - StationA,SEL-T401L,SEL-T401L,200313,232558.5775,-1h30t,No.10000,MHR.dat
    - StationA,SEL-T401L,SEL-T401L,200313,232558.5775,-1h30t,No.10000,MHR.hdr
  - "HR\_10001.CFG/DAT/HDR" becomes:
    - HR\_12345.ZIP
    - HR\_12345.cfg
    - HR\_12345.dat
    - HR\_12345.hdr

If Event\_Name\_Format is configured as COMNAME:

- The name of the zipped COMTRADE event files and ZIP file shall be as follows:
  - Format: <Event's Faulted Timestamp -- YYMMDD,hhmmss000000>, <Time Code+t>, <COMNAME\_Event\_Name\_String>, <Event Type -- e.g., "HR", "TDR", etc.>, <Event Number -- 10000-65535>.CFG/DAT/HDR/ZIP
- The entire ZIP file name shall be uppercase; the cfg/dat/hdr file names may be mixed-case and the extension shall be lowercase.
- Presence and accuracy of milliseconds and microseconds in the Event's file name shall be dependent on the presence and accuracy of the Event's Trigger time stamp.
- The time stamp stored with the COMTRADE Event files (displayed by the Web), shall be the time stamps extracted from the relay's directory response. If the relay's directory response does not include time stamps for the COMTRADE Event files, the time of retrieval shall be used.

- The value of Time Code (i.e., UTC Offset) shall be derived from interpreting the Event's Trigger time stamp and the SEL clients Date-Time settings.
- Example:
  - "170220,215117461,2T,T400L,0L#53,KAY,TDR,10009.CFG/DAT/HDR" becomes:
    - 170220,215117461,2T,STATIONID2,DEVICEID2,COMPANY2, TDR,10009.ZIP
    - 170220,215117461,2t,StationId2,DeviceId2,Company2,TDR, 10009.cfg
    - 170220,215117461,2t,StationId2,DeviceId2,Company2,TDR, 10009.dat
    - 170220,215117461,2t,StationId2,DeviceId2,Company2,TDR, 10009.hdr
  - "StationA,SEL-T401L,SEL-T401L,200313,232558.5775,-1h30t, No.10000,MHR.CFG" becomes:
    - 200313,2325585775,-1H30T,STATIONID3,DEVICEID3, COMPANY3,MHR,10000.ZIP
    - 200313,2325585775,-1h30t,StationId3,DeviceId3,Company3, MHR,10000.cfg
    - 200313,2325585775,-1h30t,StationId3,DeviceId3,Company3, MHR,10000.dat
    - 200313,2325585775,-1h30t,StationId3,DeviceId3,Company3, MHR,10000.hdr
  - "HR\12345.CFG/DAT/HDR" becomes:
    - 200102,030405666,+2H30T,STATIONID1,DEVICEID1, COMPANY1,HR,12345.ZIP
    - 200102,030405666,+2h30t,StationId1,DeviceId1,Company1, HR,12345.cfg
    - 200102,030405666,+2h30t,StationId1,DeviceId1,Company1, HR,12345.dat
    - 200102,030405666,+2h30t,StationId1,DeviceId1,Company1, HR,12345.hdr

## Remote Engineering Access and File Transfer Monitor

The SEL client supports remote engineering access to the connected SEL device. There are two methods for configuring engineering access. The first method is to configure a transparent connection by using an access point and access point router (APR). For further information on this method, refer to *Section 4: Engineering Access*. The second method uses the SEL server device type. For more information on this method, refer to *SEL Server Configuration on page 541*.

When a remote engineering access attempt is initiated through an SEL server via the **PORT** command with a serial connection to the IED, access is only available through the primary data polling connection. If an Ethernet-tunneled-serial connection is in use, the RTAC will attempt to open a secondary Ethernet connection to the SEL client device. If the SEL client device receives no response within the time configured in the **Secondary Transparent Connection**

**Timeout**, and **Allow Transparent on Polling Connection** is set to True, the SEL server establishes an engineering access session on the primary data polling connection. To force the remote engineering access session to always use the primary data polling connection, set the **Secondary Transparent Connection Timeout** value to 0. Note that the **Direct\_Transparent\_Connection** and **Transparent\_Connection** POU pins on an SEL Protocol client only indicate active connections when they are established over the primary data polling connection. If you want to use these POU pins (e.g., to indicate user access) while using a device configured with an Ethernet-tunneled-serial connection, ensure that the **Secondary Transparent Connection Timeout** value is set to 0. To disable remote engineering access for an SEL client, set **Disable Remote Access** in the **Settings** tab to True.

Both engineering access methods support file transfers for reading settings from the connected SEL IED. When engineering access is successfully established through a transparent connection or through an SEL server device, the SEL client monitors the connection for a Ymodem file transfer initiation via the **FILE READ** command. If the SEL client detects a file transfer initiation, the connection switches to a direct transparent connection. If the engineering access connection is on the primary data polling connection, all data polling is suspended until the file transfer succeeds or fails. To disable the file transfer monitor function for a particular SEL client, set **Enable File Transfer Monitor** in the **Settings** tab to False.

## POU Pin Settings

Use POU pin settings to view the present state of the SEL client operation and to modify some of the behavior of the protocol. Setting the **Visible** field to TRUE will cause the POU pin to appear in the **Controller** tab. Some pins have their **Default Value** field grayed out and not editable—these pins are controlled by various settings located on the **Settings** tab. See *Table 2.136* for settings descriptions.

**Table 2.136 SEL Client POU Pin Settings**

| Pin Name                          | Pin Type   | Description  | Default |
|-----------------------------------|------------|--|---------|
| Check_For_Comtrade_Event          | Input BOOL | A rising-edge trigger that causes the system to check for new COMTRADE files.                | FALSE   |
| Check_IED_Configuration           | Input BOOL | Initiate an attempt to detect a change in the configuration of the IED.                      | FALSE   |
| Check_IED_Configuration_Period    | Input TIME | Governs the periodic attempts to detect a change in the configuration of the IED.            | FALSE   |
| Delete_All_Acked_Event_Collection | Input BOOL | Delete all of the acknowledged stored events that are associated with this SEL client.       | FALSE   |
| Delete_All_Event_Collection       | Input BOOL | Delete all of the stored events that are associated with this SEL client.                    | FALSE   |
| Disable_Controls                  | Input BOOL | While TRUE, processing of any controllable tags is blocked.                                  | FALSE   |
| Disable_Remote_Access             | Input BOOL | While TRUE, disallow usage of transparent connections to the IED.                            | FALSE   |
| Disable_Tag_Updates               | Input BOOL | While TRUE, the value of all tags (status/value, quality, and time stamps) shall not change. | FALSE   |
| EN                                | Input BOOL | Enable this specific SEL client.   | TRUE    |

| Pin Name  | Pin Type         | Description   | Default |
|---|------------------|---|---------|
| Enable_ASCII_SER_Logging  | Input BOOL       | Enable collection of SER via the CSE command and logging of new SER events into the RTAC SOE log. The default value is determined by the <b>Enable ASCII SER Logging</b> setting on the Settings tab. | FALSE   |
| Enable_Comtrade_Collection  | Input BOOL       | Enable Comtrade event collection from the relay. The default value is determined by the <b>Enable Comtrade Collection</b> setting on the Settings tab.  | FALSE   |
| Enable_Event_Collection   | Input BOOL       | Enable CEV event collection from a relay or relays connected by a Communications Processor. The default value is determined by the <b>Enable Event Collection</b> setting on the Settings tab.        | FALSE   |
| Enable_File_Transfer_Monitor  | Input BOOL       | Enable X/YMODEM file transfer monitor during transparent connections. The default value is determined by the <b>Enable File Transfer Monitor</b> setting on the Settings tab.                         | TRUE    |
| Enable_New_Event_Filtering  | Input BOOL       | Enable event filtering and updates to NEW_EVENT tags. The default value is determined by the <b>Enable New Event Filtering</b> setting on the Settings tab.   | FALSE   |
| Enable_Unsolicited_SER_RX   | Input BOOL       | Enable the reception of Unsolicited SER messages via Fast Message.  | TRUE    |
| Enable_Unsolicited_Write_RX   | Input BOOL       | Enable and disable the reception of Unsolicited Write messages via Fast Message.  | FALSE   |
| Initiate_Auto_Configuration   | Input BOOL       | A rising-edge trigger that causes the Autoconfiguration process to be initiated.  | FALSE   |
| Level_1_Password  | Input STRING(32) | The string used to update the stored IED Level 1 password.  |         |
| Level_2_Password  | Input STRING(32) | The string used to update the stored IED Level 2 password.  |         |
| Poll_XXXXXX (Repeat for each polling message: CASCII, Fast Meter, Fast Message)                 | Input BOOL       | A rising-edge trigger that causes a single message poll to be transmitted.  | FALSE   |
| Poll_XXXXXX_Period (Repeat for each polling message: CASCII, Fast Meter, Fast Message)          | Input TIME       | Governs the periodic transmission cycle of the polling message.   | FALSE   |
| Report_New_Event  | Input BOOL       | A rising-edge trigger that causes the collection and reporting of the new event data.   | FALSE   |
| Reset_New_Event   | Input BOOL       | A rising-edge trigger that causes the new event data to be reset/expire immediately.  | FALSE   |
| Reset_Statistics  | Input BOOL       | On the rising-edge trigger, all counter POU outputs are reset.  | FALSE   |
| Send_Unsolicited_Write_TX_message (where <i>message</i> represents the message instance)        | Input BOOL       | A rising-edge trigger that causes a transmission of the Unsolicited Write message.  | FALSE   |
| Send_Unsolicited_Write_TX_message_Period (where <i>message</i> represents the message instance) | Input TIME       | Governs the periodic transmission cycle of the Unsolicited Write message.   | FALSE   |
| Write_Level_1_Password  | Input BOOL       | While TRUE, causes the Level_1_Password setting to be updated with the value of Level_1_Password input.   | FALSE   |
| Write_Level_2_Password  | Input BOOL       | While TRUE, causes the Level_2_Password setting to be updated with the value of Level_2_Password input.   | FALSE   |

| Pin Name                           | Pin Type     | Description   | Default |
|------------------------------------|--------------|---|---------|
| ASCII_SERLoggingEnabled            | Output BOOL  | Asserted when logging of SOE records from data collected via the SER command is enabled via the Enable_ASCII_SERLogging input pin.  | FALSE   |
| ASCII_SERLoggingPending            | Output BOOL  | Asserted while SER records are being actively collected via the SER command.  | FALSE   |
| ASCII_SERLoggingSequenceRestart    | Output BOOL  | Pulses for one processing interval when the previous logged SOE record cannot be found in the new SER command output, indicating that data loss may have occurred. Typically occurs after a period of rapid SER event generation on the IED, shifting the visibility of the last collected SER record beyond that visible by the number of displayed records specified by the <b>ASCII SER Logging Command Parameter</b> setting. | FALSE   |
| ASCII_SERLoggingStored             | Output BOOL  | Pulses for one processing interval upon logging of a new SOE record collected from the SER command.   | FALSE   |
| ASCII_SERLoggingStoredCount        | Output UDINT | Increments each time an SOE record, collected from the SER command, is logged.  | 0       |
| AutoConfigurationFailure           | Output BOOL  | Asserts when an Autoconfiguration completes and was not successful; remains asserted until the rising-edge of Auto_Configuration_Pending.   | FALSE   |
| AutoConfigurationPending           | Output BOOL  | Asserts at the start of the startup autoconfiguration or re-autoconfiguration process when Initiate_Auto_Configuration is asserted. Remains asserted until the process completes (successfully or terminates because of a failure).   | FALSE   |
| BufferOverflow                     | Output BOOL  | Asserts for one processing interval after an overflow condition (e.g., the loss of Unsolicited SER events) is detected.   | FALSE   |
| CASCIIFailure                      | Output BOOL  | Asserts for at least one processing interval when an error is detected in an ASCII message transaction such as a flex parse response, CEV event collection attempt or ASCII-based SER retrieval.  | FALSE   |
| CASCIIFailureCount                 | Output UDINT | Running sum of failed ASCII message transactions.   | 0       |
| CASCIISuccessCount                 | Output UDINT | Running sum of successful ASCII message transactions.   | 0       |
| CheckIEDConfigurationDelay         | Output BOOL  | Asserts when Check_IED_Configuration processing is triggered and the previous triggering of Check_IED_Configuration processing hasn't yet completed.  | FALSE   |
| CheckIEDConfigurationDN            | Output BOOL  | Asserts for one processing interval when IED Check Configuration processing completes.  | FALSE   |
| CheckIEDConfigurationError         | Output BOOL  | Asserts for one processing interval when the IED Check Configuration processing fails (e.g., a checksum error was encountered in the CASCII output).  | FALSE   |
| CheckIEDConfigurationMismatch      | Output BOOL  | Asserts for one processing interval when a change in the IED's configuration has been detected.   | FALSE   |
| CheckIEDConfigurationMismatchCount | Output UDINT | Increments each time a change in the IED's configuration is detected.   | 0       |

| Pin Name                             | Pin Type     | Description  | Default |
|--------------------------------------|--------------|--|---------|
| Comtrade_Collection_Enabled          | Output BOOL  | Asserts when Comtrade Event Collection is enabled, typically via the <b>Enable Comtrade Collection</b> parameter on the Settings tab.  | FALSE   |
| Comtrade_Event_Collection_Count      | Output UDINT | Running count of the number of COMTRADE event records that have been collected during this session. Resets upon an assert of Reset_Statistics or EN transitioning to TRUE.   | 0       |
| DDF_Configuration_Mismatch           | Output BOOL  | Asserts when the autoconfiguration process completes in failure due to a mismatch of the expected IED type contained in the FID string. Commonly encountered when an SEL client is configured for an incorrect type as compared to the actual connected IED.   | FALSE   |
| Delete_All_Acked_Event_Collection_DN | Output BOOL  | Asserts for a processing interval when event collection deletions have completed after having been requested by the Delete_All_Acked_Event_Collection input pin.   | FALSE   |
| Delete_All_Event_Collection_DN       | Output BOOL  | Asserts for a processing interval when event collection deletions have completed after having been requested by the Delete_All_Event_Collection input pin.   | FALSE   |
| Direct_Transparent_Connection        | Output BOOL  | Indicates TRUE when the port is direct transparently connected (i.e., SEL server or access point) or the port is transparently connected and a file transfer is active. During the transparent connection period, processing of all SEL messaging is blocked. All ASCII and binary traffic passes through the direct transparent link.   | FALSE   |
| ENO                                  | Output BOOL  | Indicates that this SEL client instance is active.   | FALSE   |
| Event_Collection_Count               | Output UDINT | Running count of the number of CEV event records that have been collected and stored in nonvolatile memory.  | 0       |
| Event_Collection_Enabled             | Output BOOL  | Asserts when Enable_Event_Collection is asserted (typically via the <b>Enable Event Collection</b> parameter on the Settings tab) and a successful autoconfiguration has completed, indicating support for CHIS and CEV CASCII messages to allow collection of CEV events. If Enable_Event_Collection is asserted and this output pin does not assert following autoconfiguration, the IED does not support the required CASCII messages for CEV event collection. | FALSE   |
| Event_Collection_Pending             | Output BOOL  | Asserts when a CEV or COMTRADE event record is being actively collected.   | FALSE   |
| Event_Collection_Stored              | Output BOOL  | Asserts for a single processing interval when a collected CEV or COMTRADE event has been stored in nonvolatile memory.   | FALSE   |
| Fast_Message_Failure                 | Output BOOL  | Asserts for at least one processing interval when an error is detected in a Fast Message transaction.  | FALSE   |
| Fast_Message_Failure_Count           | Output UDINT | Running sum of failed Fast Message transactions.   | 0       |
| Fast_Message_Read_Success_Count      | Output UDINT | Running sum of successful Fast Message transactions.   | 0       |

| Pin Name   | Pin Type     | Description  | Default |
|--|--------------|--|---------|
| Fast_Message_Success_Count   | Output UDINT | Running sum of successful Fast Message transactions.   | 0       |
| Fast_Meter_Failure   | Output BOOL  | Asserts for at least one processing interval when an error is detected in a Fast Meter message transaction.  | FALSE   |
| Fast_Meter_Failure_Count   | Output UDINT | Running sum of failed Fast Meter message transactions.   | 0       |
| Fast_Meter_Success_Count   | Output UDINT | Running sum of successful Fast Meter message transactions.   | 0       |
| Fast_Operate_TX_Enabled  | Output BOOL  | Asserts while the transmission of Fast Operate messages is enabled.  | FALSE   |
| Fast_Operate_TX_Success_Count  | Output UDINT | Running sum of valid Fast Operate messages transmitted.  | 0       |
| Invalid_Function_Block_Input   | Output BOOL  | Asserted when the SEL client function block has received an invalid input (e.g., input to Timer is outside of range, invalid User Message command, Invalid Level # Password, etc.).  | FALSE   |
| Message_Received_Count   | Output UDINT | Running sum indicating the number of messages received from the remote device.   | 0       |
| Message_Sent_Count   | Output UDINT | Running sum indicating the number of messages transmitted to the remote device.  | 0       |
| New_Event_Detected   | Output BOOL  | Asserts for one processing interval after a new event has been detected, either via polling with the CHI command or receipt of an unsolicited message from the IED.  | FALSE   |
| New_Event_Filtering_Enabled  | Output BOOL  | Asserts when new event filtering is enabled.   | FALSE   |
| New_Event_Report_Delay   | Output BOOL  | Asserts if a previous triggering of the message (e.g., Report_New_Event was asserted) is waiting to be processed. Deasserts when the response for the previously triggered message is received.  | FALSE   |
| New_Event_Report_DN  | Output BOOL  | Asserts for one processing interval after a new event has been reported (e.g., the new event tags have been populated).  | FALSE   |
| Offline  | Output BOOL  | If TRUE, indicates the communications channel is offline due to the IED not responding to a data poll request or command that expects a response. If FALSE, indicates the communications channel is online (deasserted when a valid response is received and ENO is asserted). | TRUE    |
| Poll_XXXXX_Delay (Repeat for each polling message: CASCII, Fast Meter, Fast Message)           | Output BOOL  | Asserts when this message is triggered and the previous triggering of this Poll_XXXXX is not yet complete.   | FALSE   |
| Poll_XXXXX_DN (Repeat for each polling message: CASCII, Fast Meter, Fast Message)              | Output BOOL  | Asserts for one processing interval when the message transaction is complete.  | FALSE   |
| Send_Unsolicited_Write_TX_message_Delay (where <i>message</i> represents the message instance) | Output BOOL  | Asserts when this message is triggered and the previous triggering of this Send_Unsolicited_Write_TX_message is not yet complete.  | FALSE   |
| Send_Unsolicited_Write_TX_message_DN (where <i>message</i> represents the message instance)    | Output BOOL  | Asserts for one processing interval when the message transmission is complete.   | FALSE   |

| <b>Pin Name</b>                    | <b>Pin Type</b> | <b>Description</b>  | <b>Default</b> |
|------------------------------------|-----------------|---|----------------|
| Slow_Poll_Mode_Enabled             | Output BOOL     | Asserted when Slow Poll mode is enabled due to the IED not responding to a solicited message request and exceeding the number of message retries.   | FALSE          |
| Transparent_Connection             | Output BOOL     | Indicates TRUE when the port is transparently connected to an external source (i.e., SEL server or transparent access point). During the transparent connection period, the SEL client actively performs all binary messaging; ASCII messaging is blocked. When a file transfer is detected, a transparent connection will transition to a direct transparent connection and all binary and ASCII messaging is blocked. | FALSE          |
| Unacked_Event_Collection_Count     | Output UDINT    | Running count of the number of CEV and COMTRADE event records that have been collected and stored in nonvolatile memory but not acknowledged.   | 0              |
| Unresolved_Tag_Reference_Count     | Output UDINT    | Following Autoconfiguration, indicates the number of tags that have been enabled that contain data references that do not exist in the connected IED.   | 0              |
| Unresolved_Tag_Reference_Error     | Output BOOL     | Asserts when Autoconfiguration completes and one or more tags that have been enabled on tag tabs (e.g., the Meter tab) contain data references that do not exist in the connected IED. Commonly encountered if a tag is enabled that refers to a Relay Word bit that does not exist on the actual IED (e.g., an input contact on an expansion card that is not present on the actual connected IED).                    | FALSE          |
| Unsolicited_ASCII_Message_RX       | Output BOOL     | Asserts for at least one processing interval after an Unsolicited ASCII message has been received from the IED.   | FALSE          |
| Unsolicited_SER_RX_Enabled         | Output BOOL     | Asserts while the reception of Unsolicited SER messages is enabled.   | FALSE          |
| Unsolicited_SER_RX_Overflow        | Output BOOL     | Asserts for one processing interval upon receipt of an SOE Overflow message.  | FALSE          |
| Unsolicited_SER_RX_Overflow_Count  | Output UDINT    | Running sum of received Fast SOE Overflow messages.   | 0              |
| Unsolicited_SER_RX_Success_Count   | Output UDINT    | Running sum of valid Fast Unsolicited SER messages received.  | 0              |
| Unsolicited_Write_RX_Enabled       | Output BOOL     | Asserts while the reception of Unsolicited Write messages is enabled.   | FALSE          |
| Unsolicited_Write_RX_Success_Count | Output UDINT    | Running sum of valid Fast Unsolicited Write messages received.  | 0              |
| Unsolicited_Write_TX_Enabled       | Output BOOL     | Asserts while the transmission of Unsolicited Write messages is enabled.  | FALSE          |
| Unsolicited_Write_TX_Success_Count | Output UDINT    | Running sum of valid Fast Unsolicited Write messages transmitted.   | 0              |
| Write_Level_1_Password_DN          | Output BOOL     | Asserts for one processing interval when the Level_1_Password setting has been updated.   | FALSE          |
| Write_Level_2_Password_DN          | Output BOOL     | Asserts for one processing interval when the Level_2_Password setting has been updated.   | FALSE          |

## SEL Server Configuration

The RTAC supports one primary SEL protocol communications session with one upper-tier SEL device (such as another RTAC) per SEL server connection. Create SEL unsolicited write tags in an SEL server as placeholders that the server will use to exchange data with a polling RTAC. Use the Tag Processor to map those tags to client IED or other source tags in the RTAC database. You can also configure RBs and BBs for control messages. The primary SEL protocol session is associated with all SEL protocol data exchanges mentioned previously as well as unsolicited SER reporting and event notifications.

Each SEL server in the RTAC supports only one primary SEL protocol client connection. If more than one SEL client will connect to this RTAC, create another SEL server for each client connection.

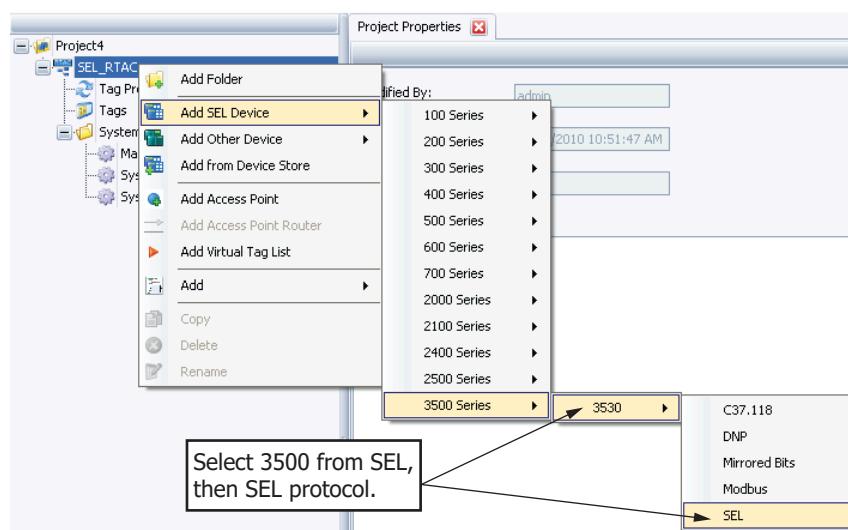


Figure 2.238 SEL Server

For example, insert an RTAC from the SEL ribbon menu under the **Insert** ribbon or from right-clicking on **SEL\_RTAC** in the device pane. Select **3500 Series**, then **3530**, then **SEL protocol**.

Give the device a unique name, or accept the default as shown in *Figure 2.3*. Select either **Server – Serial** or **Server – Ethernet Tunneled Serial**.

The **Settings** tab contains all configurable items for communication and time. Check the Description column for details on each configuration item. Move the slider, or hover your cursor over the description to see the entire description text. Type any necessary comments in the blank column to the far right. Select the **Advanced Settings** check box to enable configuration of advanced settings.

## Multiple Simultaneous Connections Support

The SEL server supports multiple connections. All connections other than the primary connection are secondary connections and will only allow ASCII command line sessions. If **Allow Anonymous SEL IP Clients** is set to True, then all connections are accepted. If **Allow Anonymous SEL IP Client** is set to False, then only the IP addresses configured in the **Client IP Address** and **Engineering Access IP Address** may connect to the SEL server.

## Primary SEL Protocol Connection Configuration

The primary SEL protocol connection is associated with sending all unsolicited message notifications (including SER, event report oscillography, SOE, and configuration change notifications) and such other SEL protocol functions as unsolicited writes and remote bit operation. An SEL server device accepts only one primary connection. If **Allow Anonymous SEL IP Clients** is set to False, the Client IP Address and Client IP Port settings determine the primary SEL protocol connection. If **Allow Anonymous SEL IP Clients** is set to True, the primary connection is associated with the first successful connection to the SEL server.

## Unsolicited Notifications

You can configure the SEL server to send notifications to other applications when new event report oscillography, SOE data, IED configuration change, and custom notification events are available for collection. To configure this capability, assign the **Client IP Address** and **Client IP Port** settings to specify the address and listening port on the reporting application. Note that assigning a non-zero **Client IP Port** forces the **Allow Anonymous SEL IP Clients** setting to False and disables the setting to enforce the entry of a valid **Client IP Address**. Following that, navigate to the **POU Pin Settings** tab in the SEL server. Set the default value of the following input pins to TRUE to enable unsolicited notifications of the specified type:

- ▶ **Enable\_Unsolicited\_ASCII\_SER\_Notice\_TX**: send notifications when the RTAC has new SOE data available.
- ▶ **Enable\_Unsolicited\_Event\_Report\_TX** : send notifications when new event report oscillography is available.
- ▶ **Enable\_Unsolicited\_Config\_Change\_Notice\_TX**: send notifications when new SEL protocol client IED Configuration Change events are available.
- ▶ **Enable\_Unsolicited\_Custom\_Notification\_TX**: send notifications when new Custom Notifications are available.

There are two exclusive event report oscillography notifications because there are two different automated methods for collecting event report oscillography from the RTAC. The legacy method uses the commands available in the SEL server to read event reports through an ASCII data session. See *Table 2.137* for the **CAR archive** and other SEL server commands. The database collection method uses a direct connection to the RTAC database over a TLS tunnel, which encrypts the data transfer. COMTRADE event collection is supported during use of the database collection method. Select an event collection mechanism in accordance with the security and infrastructure requirements of your organization. To configure which notification the SEL server sends, navigate to the **Settings** tab and configure the **New Event Notification** . For legacy event collection, select **Legacy**, and for the database collection method, select **Encrypted Database**. If you select **Legacy**, the SEL server sends a New Event notification when new CEV events are available for collection. If you select **Encrypted Database**, the SEL server sends a notification when either a new CEV or COMTRADE event is available.

A new custom notification is created by writing a new string to the **New\_Custom\_Notification\_Message** POU input pin. This message is available, along with a time stamp, in the **CNO** terminal command output while logged in to the SEL server.

When new SOE data are available, the SEL server sends the NEW SOE message. When new IED configuration change records are available, the NEW IED CONFIGURATION message is sent. When a new custom notification is available, the NEW CUSTOM NOTIFICATION message is sent. In systems where more than a single RTAC may be reporting to a centralized application, an RTAC-specific GUID can be configured under the **SystemTags** configuration using the **Device\_GUID** setting. If configured, this GUID value will be included with each unsolicited notification message.

The respective notifications repeat every minute until the notified application collects and subsequently acknowledges receipt of the new event collection, SOE data, IED configuration change, or custom notification.

## Unsolicited Messages

See *SEL Client Configuration on page 514* for a discussion of unsolicited messages.

## Remote Bits and Breaker Bits

Add RBs and BBs as necessary. The RTAC will receive controls from a remote SEL client through the use of configured RBs and BBs. Link RB and BB tags in the Tag Processor to control tags in the RTAC.

## SEL Server SER Data

As discussed in *SEL Client Configuration on page 514*, the RTAC automatically routes all SER data from all SEL client connections to all configured SEL server connections. The RTAC can also generate local system SER data from any configured RTAC tags. The RTAC automatically routes all local system SER data to all configured SEL server connections.

- Step 1. Under **System**, click **SystemTags**, then click on the **SEL Server SER** tab.
- Step 2. Click on the + icon to add the number of SER tags necessary.
- Step 3. Configure the Tag Name and SEL Label, if needed.
- Step 4. Map the new SER tags as Destinations in the Tag Processor.
- Step 5. Map Source Expressions in the Tag Processor to populate the SER tags with data.

The RTAC will generate an SER message for each change of state it detects in the defined system SER tags. All configured SER server device connections will transmit these unsolicited SER messages.

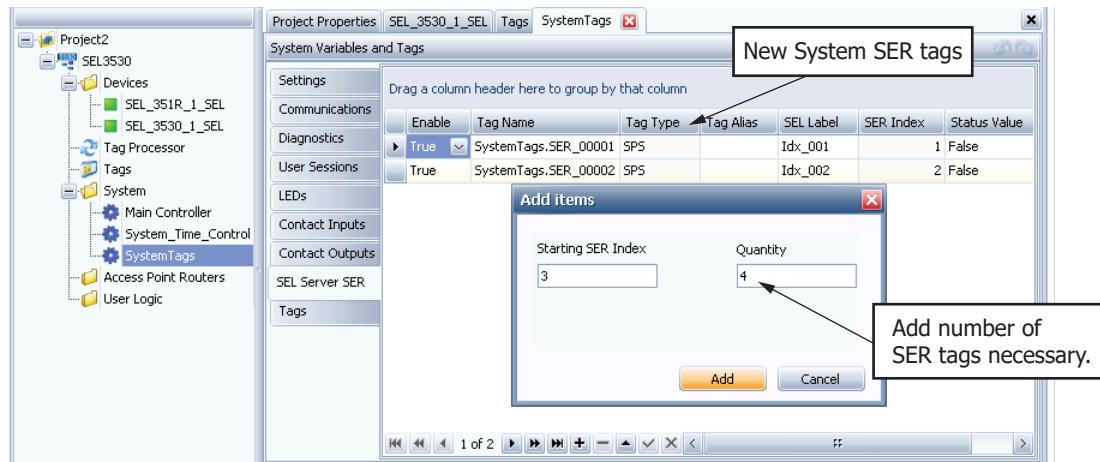


Figure 2.239 System SER Tags

## SEL Server Commands

The SEL server for the RTAC is similar to other SEL devices in supporting user authentication and other commands to provide an interactive user session. From the advanced options under the settings tab, set Perform Authentication = True if you want the RTAC to authenticate users before allowing access to other SEL server commands. Login usernames and passwords are those you configure through the RTAC web interface as local accounts or accounts you manage through an LDAP central authentication server. If user authentication is turned on, you can log in to the SEL server through a terminal emulation program as you would any SEL relay or IED. Enter the correct username and password, then enter **ACC** to reach Level 1 access and **2AC** to reach Level 2 access. If user authentication is not enabled, you must enter **ACC** and then use the password **OTTER** to enter Level 1 access. Enter **2AC** with password **TAIL** to enter Level 2 access. You can change the default passwords of **OTTER** and **TAIL** using the **PAS** command from Level 2. In firmware versions R151-V0 and later, the Level 1 and Level 2 passwords can be changed via the **Level 1 Password** and **Level 2 Password** advanced settings available on the Settings tab. SEL server authentication has three access levels associated with RTAC user account levels:

- ▶ Level 0: Attain this level upon successful login. This is also the level you access if client authentication is disabled.
- ▶ Level 1: Access Level 1 by entering the **ACC** command. User manager and monitor local system roles can attain Level 1 access.
- ▶ Level 2: Access Level 2 by entering the **2AC** command. Administrator and engineer local system roles can attain Level 2 access. From Level 2 you can change the default SEL server ACC and 2AC passwords.

Table 2.137 lists SEL server commands.

Table 2.137 SEL Server Commands (All Commands Access Level 1)

| Command    | Description   |
|------------|---|
| <b>ACC</b> | Gain access to Level 1. Password = OTTER if Perform Authentication = FALSE. |
| <b>2AC</b> | Gain access to Level 2. Password = TAIL if Perform Authentication = FALSE.  |

| Command                                     | Description  |
|---|--|
| <b>CAR ACK ALL</b>                          | Acknowledge all events.  |
| <b>CAR ACK <i>port</i> ALL</b>              | Acknowledge all events for the specified <i>port</i> number.   |
| <b>CAR ACK [<i>port</i>] [<i>event</i>]</b> | Acknowledge all events for the specified <i>port</i> number and/or <i>event</i> number.  |
| <b>CAR READ <i>port event</i></b>           | Retrieve detailed event data for the specified <i>port</i> number and <i>event</i> number. Each event has a unique <i>event</i> number.  |
| <b>CAR SUM</b>                              | Retrieve event report summary.   |
| <b>CAR SUM ALL</b>                          | Retrieve event report summary for all ports.   |
| <b>CAR SUM <i>port</i></b>                  | Retrieve event report summary for the specified <i>port</i> number.  |
| <b>CMO ACK ALL</b>                          | Acknowledge Configuration Change events for all ports.   |
| <b>CMO ACK <i>port</i></b>                  | Acknowledge Configuration Change event for the specified <i>port</i> number.   |
| <b>CMO SUM ALL</b>                          | Output a CASCII-formatted report of the latest unacknowledged Configuration Change events for all ports.   |
| <b>CMO SUM <i>port</i></b>                  | Output a CASCII-formatted report of the latest unacknowledged Configuration Change event for the specified <i>port</i> number.   |
| <b>CNO ACK ALL</b>                          | Acknowledge all Custom Notifications. This removes all logged notifications from the CNO SUM output.   |
| <b>CNO ACK <i>NID</i></b>                   | Acknowledge a specific Custom Notification, using the notification ( <i>NID</i> ) value shown in the CNO SUM command output. This removes the specified logged notification from the CNO SUM output.   |
| <b>CNO SUM ALL</b>                          | Output a CASCII-formatted report of all unacknowledged Custom Notifications, starting with the oldest notification first. Optionally add the NEW command line option to the end of the command to list notifications starting with the newest first.   |
| <b>CNO SUM <i>count</i></b>                 | Output a CASCII-formatted report of a specified count of unacknowledged Custom Notifications, starting with the oldest notification first. Optionally add the NEW command line option to the end of the command to list notifications starting with the newest first.  |
| <b>EXI</b>                                  | When using an Ethernet-tunneled-serial connection, return to Access Level 0 and disconnect from the session.   |
| <b>FIL SHOW <i>file_path_and_name</i></b>   | Outputs the content of the listed file in ASCII format. SEL server setting <b>Perform Authentication</b> must be TRUE. The full file path is required and must be preceded by FILES/ (i.e., FILES/ <i>file_path_and_name</i> ). For example, if the FTP server is enabled, a valid command would be <b>FIL SHOW FILES/ftplog.txt</b> . |
| <b>ID</b>                                   | Display RTAC ID information.   |

| Command             | Description  |
|---------------------|--|
| <b>PAS</b>          | From the 2AC level, change the SEL server default user passwords for either Level 1 or Level 2. To use, enter <b>PAS n &lt;Enter&gt;</b> (where n is either 1 or 2) and follow the prompts to change the default password. |
| <b>POR n</b>        | Transparently connect to the SEL client configured on Port n.  |
| <b>POR n DIRECT</b> | Create a direct transparent connection to the SEL client configured on Port n.   |
| <b>QUI</b>          | Return to Access Level 0.  |
| <b>STA</b>          | Show other clients who have active direct/transparent connections.   |
| <b>WHO</b>          | List information for configured SEL clients.   |

## Engineering Access to SEL Client Devices

The **POR** command provides an immediate direct transparent or transparent connection to the SEL client configured on the indicated port. For example, to transparently connect to an SEL device on Port 1 without using an Access Point Router, follow these steps:

- Step 1. Configure an SEL server using an Ethernet tunneled serial connection or serial connection, as desired.
- Step 2. Load the project into the RTAC.
- Step 3. Connect to the SEL server by using the Ethernet serial tunneled IP port number or directly by using a serial cable, depending on your configuration.
- Step 4. If you have configured the **Perform Authentication** setting as True, log in as described previously in this section.
- Step 5. Enter the command **POR 1** and press <Enter>. You are transparently connected to the SEL device configured on Port 1. Alternatively, enter the command **POR 1 D** and press <Enter>. You now have a direct transparent connection to the SEL device configured on Port 1.
- Step 6. Press <Ctrl+D> to exit the transparent connection and return to the SEL server.

When a single connection is initiated through the SEL server to an SEL client, the server either creates a new connection to the client or uses the primary connection, which provides for binary data transfer. The client connection type and the settings in the client device determine the behavior of the connection. Clients configured for serial connections automatically use the primary connection because serial communications channels only support one connection. Clients configured for Ethernet communication create a secondary connection if configured in the client settings. See *SEL Client Configuration on page 514* for more information.

When engineering access initiates multiple connections to the same SEL client device, the SEL server attempts to create a new connection to the client if the use of secondary connections is configured in the client settings. Many SEL IEDs support multiple concurrent Telnet sessions. For every connection you initiate through the SEL server, the server attempts to create a unique session to the IED until the IED rejects the connection request. At that point, the server may attempt to use the primary connection if the client settings allow it.

If the **Perform Authentication** setting is True, during engineering access sessions made to SEL client devices, the Change Access Level Monitoring feature can be used. This feature is activated when the RTAC user account that originally logged into the SEL server session is assigned a role that contains the **Relay ACCess** and/or **Relay 2ACcess** permissions (see *Table 7.7* for more details). By default, the Administrator user role is assigned both of these permissions. When this feature is active, an engineering access session to an SEL client device (or defined child IED there-of) is monitored for the ACC or 2AC command; if these user commands are seen in the engineering access session, the RTAC will automatically issue the stored Level 1 Password and/or Level 2 Password to the device. In a system with password management in use, this allows for authenticated and authorized engineering access to SEL client devices without the end user being aware of the actual SEL IED password. Additional IED access levels such as CAL, BAC, (etc) are not monitored or controlled.

If you change the SEL device password while transparently connected, you will interrupt normal SEL client polling operations. To resolve this, you can either change the password in the SEL client configuration in the RTAC project and resend the project, or you can configure the system to do it automatically. Set the advanced setting **Enable Password Monitor** on each SEL client to True and resend the project. Each time you transparently connect to one of the SEL clients through the SEL server, the RTAC monitors for password changes and automatically updates the configured passwords in each affected SEL client.

**! IMPORTANT**

You must read the project from the RTAC to ensure you have the latest passwords. Resending an older project to the RTAC will erase passwords that have been stored during a transparent connection password monitoring activity. During a project send operation, the **Retain Password Vault** option in the Options tab can be enabled to preserve the passwords present in the RTAC and ignore those from the project being sent.

## Command Examples

Example: CAR SUM

The CAR SUM response format is as follows:

"NEWEVENT=000000000000..., "CSUM",

Where CSUM is the message checksum, and the zeros following NEWEVENT total 254 characters. Each character in the response corresponds to a virtual port on the RTAC. The first character is for **Port 1**, the second is for **Port 2**, and so on. If there are unacknowledged reports for a given port, the RTAC sets the corresponding character to a value of one in the **CAR SUM** response. If no ports have unacknowledged events, the **CAR SUM** response contains 254 zeros.

Example: CAR SUM ALL

The **CAR SUM ALL** command responds with a summary of all event reports for all ports configured for event collection. The event summary contains a header row followed by zero or more rows of data. Data rows are organized in descending chronological order.

Command:

**CAR SUM ALL**

Response:

```
"EVENT ID","FID","PORT","MONTH","DAY","YEAR","HOUR","MIN","SEC",
"MSEC","USEC","EVENT","CURR","TARGETS","STATUS","CSUM"
227,"SEL-421-R127-V0-Z012011-D20090218",3,7,6,2010,10,25,21,123,
"OVR",0,"","UNACK","CSUM"
228,"SEL-421-R127-V0-Z012011-D20090218",3,7,6,2010,10,24,21,123,
"TRIG",0,"","UNACK","CSUM"
229,"SEL-421-R127-V0-Z012011-D20090218",3,7,6,2010,10,23,21,123,
"OVR",0,"","UNACK","CSUM"
230,"SEL-421-R127-V0-Z012011-D20090218",3,7,6,2010,10,22,21,123,
"TRIG",0,"","ACK","CSUM"
231,"SEL-351-R225-V0-Z012011-D20080315",4,7,6,2010,10,22,10,123,
"TRIG",0,"","ACK","CSUM"
232,"SEL-351-R225-V0-Z012011-D20080315",4,7,6,2010,9,30,21,123,
"OVR",0,"","UNACK","CSUM"
233,"SEL-734-R325-V0-Z012011-D20060520",2,7,5,2010,6,22,21,673,
"TRIG",0,"","UNACK","CSUM"
234,"SEL-734-R325-V0-Z012011-D20080520",16,7,1,2010,11,43,31,225,
"OVR",0,"","UNACK","CSUM"
```

Example CAR READ

Command:

**CAR READ 3 23**

Response:

```
"CMD","EVENT ID","FID","CSUM"
"CEV 1 S8","232","SEL-421-R127-V0-Z012011-D20090218","CSUM"
[Event Report. 232]
```

where [Event Report. 232] is the response to the **CEV 1 S8** command associated with Port 3 on the RTAC. The RTAC transfers the report in CASCII format.

Example: CMO SUM ALL

The **CMO SUM ALL** command responds with a summary of the most recent configuration change events for all ports that have unacknowledged events. The configuration change summary contains a header row followed by zero or more rows of data. The data rows contain the virtual port number, name, and GUID of the device that detected the configuration change event as well as a time stamp and SHA-256 from the event. An example of the response format is as follows:

Command:

### **CMO SUM ALL**

Response:

```
"PORT", "DEVICE_NAME", "DEVICE_GUID", "DETECTED", "SHA256_HASH", "0F1B"
252, "SEL_751_1", "", "2022-10-23 23:16:52.000000", "48B4628041CD2CACA
66B628F82EB20C33053B1E90019EFE502E80AEEAA06D5AE", "1871"
254, "SEL_451_1", "Custom451GUID", "2022-10-23 23:16:23.000000", "6566
DDD1F90536B41AAA26849442CB1044169995799C88097E88B5F1F56A8B0A", "1C6E"
```

## **Password Command and Managing User Accounts**

Starting in R145-V0 users are able to manage passwords for local accounts on the RTAC. In order for this functionality to be active the SEL server setting **Perform Authentication** must be true. If this setting is false, the password command will work in the same manner as specified in *Table 2.137*.

Example Password Command (R145-V0 and later):

Command: **PAS**

Response: User Name: ?

Command: Enter the account name for which to change the password.

Response: New Password: ?

Command: Enter a new desired password for the specified local account.

Response: Confirm New Password: ?

Command: Re-enter the password to confirm.

Response: Password Changed

## **POU Pin Settings**

Use POU pin settings to view the present state of the SEL server operation and to modify some of the behavior of the protocol. Setting the **Visible** field to TRUE will cause the POU pin to appear in the **Controller** tab. Some pins have their **Default Value** field grayed out and not editable—these pins are controlled by various settings located on the **Settings** tab. See *Table 2.138* for settings descriptions.

**Table 2.138 SEL Server POU Pin Settings**

| <b>Pin Name</b>                            | <b>Pin Type</b> | <b>Description</b>   | <b>Default</b> |
|--|-----------------|--|----------------|
| Communications_Offline_Timer               | Input TIME      | The Offline pin will assert if the server has not received a valid message during this time period. The timer is reset when a valid message is received. If the timer is set to zero, the server will be set online after the first received message or when an IP connection occurs, and it will stay online until it is disabled or the IP connection is closed. | T#300000MS     |
| Disable_Controls                           | Input BOOL      | When TRUE, all incoming Alternate Fast Operate commands sent to this specific SEL Server are blocked.  | FALSE          |
| Disable_Remote_Access                      | Input BOOL      | While TRUE, processing of all received data is disabled, any existing logged-on users are reduced to access level 0, and transmission of all data is disabled (e.g., Event Report, SER (ASCII, Fast Message), etc.) except for Unsolicited Write messages. Any existing Transparent connections via the PORT command are terminated.                               | FALSE          |
| Disable_Tag_Updates                        | Input BOOL      | While TRUE, the value of all tags (status/value, quality, and time stamps) shall not change.   | FALSE          |
| EN   | Input BOOL      | Enable this specific SEL server.   | TRUE           |
| Enable_File_Transfer_Monitor               | Input BOOL      | Enable X/YMODEM file transfer monitor during transparent connections.  | TRUE           |
| Enable_Unsolicited_ASCII_SER_Notify_TX     | Input BOOL      | While TRUE, enables the server to periodically send an unsolicited ASCII SER report summary message to the configured Client IP address and port if uncollected ASCII SERs exist.  | FALSE          |
| Enable_Unsolicited_Config_Change_Notify_TX | Input BOOL      | While TRUE, enables the server to periodically send an unsolicited Configuration Change report summary message to the configured Client IP address and port if unacknowledged configuration changes are present.   | FALSE          |
| Enable_Unsolicited_Custom_Notification_TX  | Input BOOL      | While TRUE, enables the server to periodically send an unsolicited Custom Notification report summary message to the configured Client IP address and port if unacknowledged custom notifications are present.   | FALSE          |
| Enable_Unsolicited_Event_Report_TX         | Input BOOL      | While TRUE, enables the server to periodically send an unsolicited event report summary message to the configured Client IP address and port if uncollected event reports exist.   | FALSE          |
| Enable_Unsolicited_SER_TX                  | Input BOOL      | Enable and disable the transmission of Unsolicited SER messages via Fast Message.  | TRUE           |

| Pin Name                            | Pin Type          | Description   | Default |
|-------------------------------------|-------------------|---|---------|
| Enable_Unsolicited_Write_RX         | Input BOOL        | Enable and disable the reception of Unsolicited Write messages via Fast Message.  | FALSE   |
| New_Custom_Notification_Message     | Input STRING(255) | A non-empty string written to this input triggers the creation of a new custom notification associated with the specified string.   | FALSE   |
| Reset_Statistics                    | Input BOOL        | On the rising-edge trigger, all counter POU outputs are reset.  | FALSE   |
| Set_ClockFail                       | Input BOOL        | When this pin is set to TRUE, this will set the ClockFail bit in the timestamp_t structure of any SEL server tags.  | FALSE   |
| Set_ClockNotSynchronized            | Input BOOL        | When this pin is set to TRUE, this will set the ClockNotSynchronized bit in the timestamp_t structure of any SEL server tags.   | FALSE   |
| Authentication_Failure              | Output BOOL       | Set to true for one processing interval after the failure of 3 authentication attempts.   | FALSE   |
| Authentication_In_Progress          | Output BOOL       | Set to TRUE when Perform_Authentication is enabled and the authentication process is started. For a serial connection, the authentication process is started if a communication time-out has occurred and a character is received by the server. For tunneled-serial connections, the authentication is started when a connection is established with a client. It is set to FALSE when the authentication process is complete. | FALSE   |
| Authentication_Success              | Output BOOL       | Set to TRUE upon a successful authentication attempt. Set to FALSE when the connection either times out or is terminated.   | FALSE   |
| Direct_Transparent_Connection       | Output BOOL       | Set to TRUE when a Direct Transparent connection to this SEL server is established, or when a Transparent connection is established and a file transfer is active.  | FALSE   |
| Engineering_Access_Connection_Count | Output UDINT      | Indicates the number of engineering access connections that are active on this SEL Server.  | 0       |
| ENO                                 | Output BOOL       | Indicates that this specific SEL server is active.  | FALSE   |
| Fast_Message_Configuration_Changed  | Output BOOL       | Represents the state of the configuration-changed bit in the Fast Message header returned by the SEL server.  | FALSE   |
| Fast_Message_Failure                | Output BOOL       | Set to TRUE for one processing interval after a Fast Message Error is detected.   | FALSE   |

| <b>Pin Name</b>                             | <b>Pin Type</b> | <b>Description</b>  | <b>Default</b> |
|---|-----------------|---|----------------|
| Fast_Message_Failure_Count                  | Output UDINT    | The number of Fast Message errors that have occurred.   | 0              |
| Fast_Message_Power_Up                       | Output BOOL     | Represents the state of the power-up status bit in the Fast Message header returned by the SEL server.  | FALSE          |
| Fast_Message_Success_Count                  | Output UDINT    | The number of Fast Messages sent successfully.  | 0              |
| Fast_Operate_RX_Enabled                     | Output BOOL     | Indicates whether the SEL server is ready to accept Alternate Fast Operate messages from the remote client device.  | FALSE          |
| Fast_Operate_RX_Failure                     | Output BOOL     | Set to True for one processing interval when a Fast Operate receive error is detected.  | FALSE          |
| Fast_Operate_RX_Failure_Count               | Output UDINT    | The number of Fast Operate receive errors that have been detected.  | 0              |
| Fast_Operate_RX_Success_Count               | Output UDINT    | The number of Fast Operate messages that have been successfully received.   | 0              |
| Invalid_Function_Block_Input                | Output BOOL     | Set to TRUE when an SEL server function block input is invalid.   | FALSE          |
| Message_Received_Count                      | Output UDINT    | The number of messages received by this SEL Server.   | 0              |
| Message_Sent_Count                          | Output UDINT    | The number of messages sent by this SEL Server.   | 0              |
| Offline                                     | Output BOOL     | For all connection types, the Offline pin is set to TRUE when there has been no valid communication activity for the Communication_Offline_Timeout period. For tunneled-serial connections, the Offline pin is also set when the IP port is disconnected. | FALSE          |
| Port_Transparent_Count                      | Output UDINT    | A count that indicates the number of active Transparent connections that have been initiated to SEL Clients via the PORT command. If 0, no active Transparent connections exist to any SEL Clients.   | 0              |
| Transparent_Connection                      | Output BOOL     | Set to TRUE when a Transparent connection to this SEL server is established.  | FALSE          |
| Unsolicited_ASCII_SER_Notify_Sent_Count     | Output UDINT    | The number of unsolicited ASCII SER notification messages successfully sent to the configured Client IP/port.   | 0              |
| Unsolicited_ASCII_SER_Notify_TX_Enabled     | Output BOOL     | Indicates whether the server is enabled to transmit an unsolicited ASCII SER summary response.  | FALSE          |
| Unsolicited_Config_Change_Notify_Sent_Count | Output UDINT    | The number of unsolicited IED Configuration Change notification messages successfully sent to the configured Client IP/port.  | 0              |

| Pin Name  | Pin Type     | Description  | Default |
|---|--------------|--|---------|
| Unsolicited_Config_Change_Notify_TX_Enabled     | Output BOOL  | Indicates whether the server is enabled to transmit an unsolicited IED Configuration Change summary response.    | FALSE   |
| Unsolicited_Custom_Notification_Overflow        | Output BOOL  | Set to TRUE if one or more new custom notifications are lost due to system burden.                               | FALSE   |
| Unsolicited_Custom_Notification_Sent_Count      | Output UDINT | The number of unsolicited Custom Notification messages successfully sent to the configured Client IP/port.       | 0       |
| Unsolicited_Custom_Notification_TX_Enabled      | Output BOOL  | Indicates whether the server is enabled to transmit an unsolicited Custom Notification summary response.         | FALSE   |
| Unsolicited_Event_Report_Sent_Count             | Output UDINT | The number of unsolicited Event Report notification messages successfully sent to the configured Client IP/port. | 0       |
| Unsolicited_Event_Report_TX_Enabled             | Output BOOL  | Indicates whether the server is enabled to transmit an unsolicited Event Report summary response.                | FALSE   |
| Unsolicited_SER_TX_Enabled                      | Output BOOL  | Indicates whether unsolicited transmission of Fast SER messages has been enabled by the remote device.           | FALSE   |
| Unsolicited_SER_TX_Overflow                     | Output BOOL  | Set for TRUE for one processing interval when a Fast SER data loss is detected.                                  | FALSE   |
| Unsolicited_SER_TX_Overflow_Count               | Output UDINT | The number of Fast SER data loss events that have occurred.  | 0       |
| Unsolicited_SER_TX_Success_Count                | Output UDINT | The number of unsolicited Fast SER messages that have been successfully sent.                                    | 0       |
| Unsolicited_Unacked_ASCII_SER_Count             | Output UDINT | The number of unacknowledged ASCII SERs present.   | 0       |
| Unsolicited_Unacked_ASCII_SER_Present           | Output BOOL  | Set to TRUE if at least one unacknowledged ASCII SER is present.   | FALSE   |
| Unsolicited_Unacked_Config_Change_Count         | Output UDINT | The number of unacknowledged IED Configuration Changes present.  | 0       |
| Unsolicited_Unacked_Config_Change_Present       | Output BOOL  | Set to TRUE if at least one unacknowledged IED Configuration Change is present.                                  | FALSE   |
| Unsolicited_Unacked_Custom_Notification_Count   | Output UDINT | The number of unacknowledged Custom Notifications present.   | 0       |
| Unsolicited_Unacked_Custom_Notification_Present | Output BOOL  | Set to TRUE if at least one unacknowledged Custom Notification is present.                                       | FALSE   |
| Unsolicited_Unacked_Event_Report_Count          | Output UDINT | The number of unacknowledged Event Reports present.  | 0       |

| <b>Pin Name</b>                          | <b>Pin Type</b> | <b>Description</b>  | <b>Default</b> |
|--|-----------------|---|----------------|
| Unsolicited_Unacked_Event_Report_Present | Output BOOL     | Set to TRUE if at least one unacknowledged Event Report is present.   | FALSE          |
| Unsolicited_Write_RX_Enabled             | Output BOOL     | Indicates whether the remote device has been commanded by this SEL server to send unsolicited write messages. | FALSE          |
| Unsolicited_Write_RX_Success_Count       | Output UDINT    | The number of times an unsolicited write message has been successfully received.                              | 0              |
| Unsolicited_Write_TX_Enabled             | Output BOOL     | Indicates whether the remote device has requested that this SEL server send unsolicited write messages.       | FALSE          |
| Unsolicited_Write_TX_Success_Count       | Output UDINT    | The number of times an unsolicited write transmission was successfully sent.                                  | 0              |

## SES-92

---

SES-92 is a byte-oriented, asynchronous serial client/server-based (master/slave) protocol derived from the Landis & Gyr TELEGYR 8979 protocol. Designed to provide supervisory control and data acquisition (SCADA) between master stations and remote terminal units (RTUs), the SES-92 protocol supports features such as remote download of analog dead bands, report by exception, time synchronization, and counter freeze capability. The RTAC supports as many as 10 SES-92 server and 10 SES-92 client connections simultaneously.


This section describes the configuration and use of the SES-92 protocol with ACCELERATOR RTAC. The RTAC supports function codes listed in *Table 2.149*, as defined in the SES-92 Protocol Specification version 2.0, unless otherwise noted within this manual.

For a detailed description of client and server concepts and other general information on protocol configuration, see *Overview on page 129*.

## SES-92 Client Configuration

Configure an SES-92 client connection on any RTAC serial ports, or configure it as a tunneled connection for use over Ethernet. The RTAC will poll for the configured data and store these data into global variables called tags. Use the Tag Processor to map these data to any other protocol, logs, user logic, etc.

Give the device connection a unique name, and select the type of connection as shown in *Figure 2.240*.

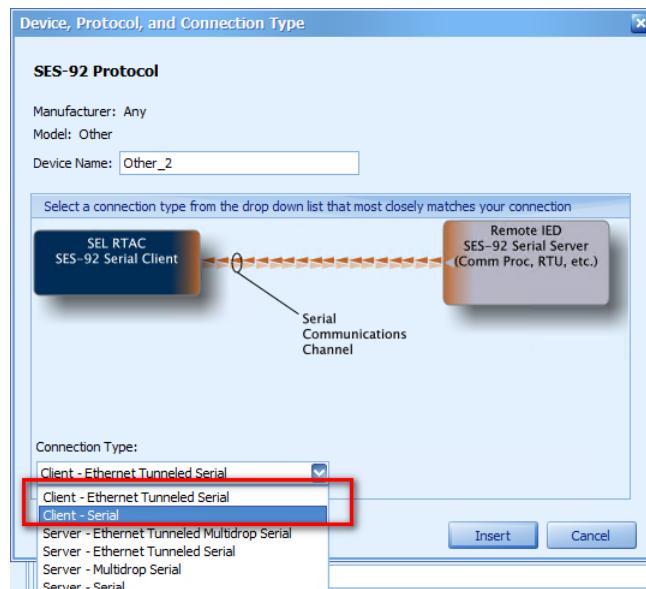**Figure 2.240 Adding SES-92 Client**

## Settings Tab

Upon selecting the **Settings** tab, the RTAC displays all configurable items for communication. Check the Description column for details on each configuration item. Move the slider bar or hover your mouse over a truncated description to see the entire text of a description. Type any necessary comments in the blank column to the far right.

Click the **Advanced Settings** check box to enable configuration of advanced settings.

## Messages Tab

Define the type and frequency of messages the RTAC sends to the SES-92 IED in the **Messages** tab. There are predefined messages by default, but you can adjust the default settings to alter the poll period, function, poll type, and range of points the messages use.

| Project Properties     |  | Other, Client - Serial [SES-92 Protocol, AP, Com_01, 19200] |                       |        |       |       |     |        |  |
|------------------------|--|---|-----------------------|--------|-------|-------|-----|--------|--|
|                        |  | Drag a column header here to group by that column           |                       |        |       |       |     |        |  |
| Settings               |  | Message Name  | Function              | Type   | Range | Start | End | Period |  |
| Messages               |  | Dump_Status   | Dump Data             | Status | All   |       |     | 60000  |  |
| Analog Inputs          |  | DumpExtended_Status   | Dump Extended Data    | Status | All   |       |     | 60000  |  |
| Status Inputs          |  | Exception_Status  | Report Exception Data | Status | All   |       |     | 1000   |  |
| SBO Trip/Close Outputs |  | Dump_Analog   | Dump Data             | Analog | All   |       |     | 60000  |  |
| SBO Setpoint Outputs   |  | Exception_Analog  | Report Exception Data | Analog | All   |       |     | 60000  |  |
| POU Pin Settings       |  |   |                       |        |       |       |     |        |  |
| Controller             |  |   |                       |        |       |       |     |        |  |


**Table 2.139 SES-92 Messages**

| Column Name  | Description   |
|--------------|---|
| Message Name | User-defined message name                               |
| Function     | Dump Data, Dump Extended Data, or Report Exception Data |

| Column Name | Description  |
|-------------|--|
| Type        | The type of data that will be polled (Status or Analog)                                    |
| Range       | The range of points that will be polled (All or Start/End)                                 |
| Start       | The first point that will be polled (0–4095)   |
| End         | The last point that will be polled (0–4095)  |
| Period      | The period of time (in milliseconds) in which the RTAC will send the message (0–100000000) |

## Add Client Device Data

Select device data settings tabs such as **Analog Inputs**, **Status Inputs**, **SBO Trip/Close Outputs**, or **SBO Setpoint Outputs** to add and configure SES-92 tags.

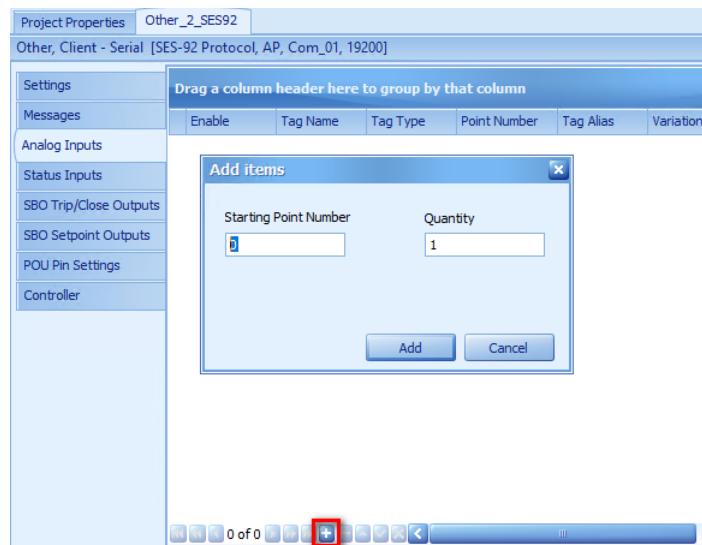

The following steps detail the addition of client device data.

- Step 1. Click a device tag type tab to add and configure tags.
- Step 2. Click the + button to add tags (as many as 4096 per device tag type). Creating only the number of necessary tags will help the system run at optimum performance.
- Step 3. Change the names of the tags as necessary.
- Step 4. Change other tag-related information as necessary.

## Device Tag Type Configuration Parameters

Data and poll types have parameters that you must configure correctly to ensure proper system operation. ACSELERATOR RTAC will gray out configuration fields that do not apply to a specific device.

**Table 2.140 Device Tag Type Configuration Parameters**

| <b>Parameter</b> | <b>Description</b>  | <b>Default</b>   |
|------------------|---|--|
| Enable           | Set this flag to True to enable processing of this tag. Set this flag to False to disable processing.   | True   |
| Tag Name         | This parameter describes the tag. You can change this name as necessary.  | The default tag name contains the device name and tag type and is numbered 0–n tags. |
| Point Number     | This is the point number for which the SES-92 client will poll. If points are not contiguous in the IED, change these point numbers to match the SES-92 database for the IED. | Contiguous from 0 to the point count.  |
| Tag Alias        | Enter an optional descriptive tag name in this field, and then reference this tag alias anywhere in the RTAC system in place of the actual tag name.                          |  |
| Status Value     | This is the default value of the tag.   | 0 or False   |
| Comment          | Optional user-entered comment field   |  |

## POU Pin Settings and Controller

**Table 2.141 POU Pin Settings and Controller**

| <b>Pin Name</b>                          | <b>Pin Type</b>                    | <b>Description</b>  | <b>Default</b> |
|--|------------------------------------|---|----------------|
| Disable_Controls                         | Input BOOL                         | While True, processing of any controllable tags is blocked.   | FALSE          |
| Disable_Tag_Updates                      | Input BOOL                         | The POU will not update or process changes to tags while this input is True.  | FALSE          |
| EN                                       | Input BOOL                         | The EN input enables or disables this specific function block instance. Other inputs have no effect while EN is False.                                    | TRUE           |
| Issue_Dump_Diagnostics                   | Input BOOL                         | On the rising edge, issue a Dump Diagnostics message to the RTU.  | FALSE          |
| Issue_Dump_Diagnostics_Period            | Input TIME<br>(0, 100–10000000 ms) | The period at which to issue a Dump Diagnostics message to the RTU.   | T#0MS          |
| Issue_Poll_Exception_Data                | Input BOOL                         | On the rising-edge, issue a Poll Exception Data message to the RTU.   | FALSE          |
| Issue_Poll_Exception_Data_Period         | Input TIME                         | The period at which to issue a Poll Exception Data message to the RTU.  | T#0MS          |
| Issue_RTU_Configuration_-Complete        | Input BOOL                         | On the rising-edge, issue a RTU Configuration Complete message to the RTU.  | FALSE          |
| Issue_RTU_Configuration_-Complete_Period | Input TIME<br>(0, 100–10000000 ms) | The period at which to issue a RTU Configuration Complete message to the RTU.   | T#0MS          |
| Issue_Sync_Protocol_Version              | Input BOOL                         | On the rising-edge, issue a Synchronize Protocol Version message to the RTU.  | FALSE          |
| Issue_Sync_Protocol_Version_-Period      | Input TIME                         | The period at which to issue a Synchronize Protocol Version message to the RTU.   | T#0MS          |
| Issue_Time_Sync                          | Input BOOL                         | Requests time-synchronization message(s) to be sent on the rising edge. Time-synchronization processing is defined by the Propagation Delay Type setting. | FALSE          |

| <b>Pin Name</b>                  | <b>Pin Type</b>                     | <b>Description</b>  | <b>Default</b> |
|----------------------------------|-------------------------------------|---|----------------|
| Issue_Time_Sync_Period           | Input TIME<br>(0, 100–100000000 ms) | Defines the interval used by the client to issue time-synchronization messages. Setting to zero causes the related function to be non-periodic.   | T#600000MS     |
| Reset_Statistics                 | Input BOOL                          | On the rising-edge trigger, all counter POU outputs are reset.  | FALSE          |
| Issue_<Name>                     | Input BOOL                          | Request message to be sent on the rising edge.  |                |
| Issue_<Name>_Period <sup>a</sup> | Input TIME<br>(0, 100–100000000 ms) | Defines the interval used by the client to issue the message. Setting to zero causes the related function to be non-periodic.   |                |
| ADC_Flag_Status                  | Output BOOL                         | Contains the status of the Diagnostic Flag's Status Byte ADC flag from the last Diagnostic Dump response.   | FALSE          |
| ALG_Flag_Status                  | Output BOOL                         | Contains the status of the Frame Header's Analog Exceptions flag from the last response received.   | FALSE          |
| Control_Overflow                 | Output BOOL                         | Asserted for a single processing interval when a Control operation could not be queued.   | FALSE          |
| Control_Overflow_Count           | Output UDINT                        | Running sum of dropped Control operations.  | 0              |
| Controls_Disabled                | Output BOOL                         | Asserted when the Disable_Controls input is asserted. This indicates that the client will not issue control commands.   | FALSE          |
| Direct_Transparent_Connection    | Output BOOL                         | Indicates that the communications have been interrupted by a direct transparent connection through an access point router.  | FALSE          |
| ENO                              | Output BOOL                         | Indicates that this specific function block instance is active if True. If False, the inputs have no effect and the outputs are not updated.  | FALSE          |
| ERR_Flag_Status                  | Output BOOL                         | Contains the status of the Frame Header's Error flag from the last response received.   | FALSE          |
| FW_Flag_Status                   | Output BOOL                         | Contains the status of the Diagnostic Flag's Status Byte F/W flag from the last Diagnostic Dump response.   | FALSE          |
| HW_Flag_Status                   | Output BOOL                         | Contains the status of the Diagnostic Flag's Status Byte H/W flag from the last Diagnostic Dump response.   | FALSE          |
| Invalid_Function_Block_Input     | Output BOOL                         | True when a function block input currently has an invalid or out-of-range value.  | FALSE          |
| Issue_<Name>_DN <sup>a</sup>     | Output BOOL                         | Asserts for a single processing interval once the message has completed.  |                |
| Issue_<Name>_Delay <sup>a</sup>  | Output BOOL                         | Asserts when the message is triggered and the previous triggering of the message has not completed. Deasserts when on the rising edge of Issue_<Name>_DN.   |                |
| Issue_Dump_Diagnostics_Delay     | Output BOOL                         | Asserts when the Dump Diagnostics message is triggered and the previous triggering of the Dump Diagnostics message has not completed. Deasserts when on the rising edge of Issue_Dump_Diagnostics_DN. | FALSE          |
| Issue_Dump_Diagnostics_DN        | Output BOOL                         | Asserts for a single processing interval once the message has completed.  | FALSE          |

| Pin Name                                  | Pin Type     | Description   | Default |
|---|--------------|---|---------|
| Issue_Poll_Exception_Data_Delay           | Output BOOL  | Asserts when the Poll Exception message is triggered and the previous triggering of the Poll Exception message has not completed. Deasserts when on the rising edge of Issue_Poll_Exception_Data_DN.                                | FALSE   |
| Issue_Poll_Exception_Data_DN              | Output BOOL  | Asserts for a single processing interval when the message has completed.  | FALSE   |
| Issue_RTU_Configuration_ - Complete_Delay | Output BOOL  | Asserts when the RTU Configuration Complete message is triggered and the previous triggering of the RTU Configuration Complete message has not completed. Deasserts when on the rising edge of Issue_RTU_Configuration_Complete_DN. | FALSE   |
| Issue_RTU_Configuration_ - Complete_DN    | Output BOOL  | Asserts for a single processing interval when the message has completed.  | FALSE   |
| Issue_Sync_Protocol_Version_ - Delay      | Output BOOL  | Asserts when the Sync Protocol Version message is triggered and the previous triggering of the Sync Protocol Version message has not completed. Deasserts when on the rising edge of Issue_Sync_Protocol_Version_DN.                | FALSE   |
| Issue_Sync_Protocol_Version_DN            | Output BOOL  | Asserts for a single processing interval when the message has completed.  | FALSE   |
| Issue_Time_Sync_Delay                     | Output BOOL  | Asserts when the time-synchronization message is triggered and the previous triggering of the time-synchronization message has not completed. Deasserts when on the rising edge of Issue_Time_Sync_DN.                              | FALSE   |
| Issue_Time_Sync_DN                        | Output BOOL  | Asserts for a single processing interval when all time-synchronization processing has successfully completed.   | FALSE   |
| LCD_Flag_Status                           | Output BOOL  | Contains the status of the Diagnostic Flag's Status Byte LCD flag from the last Diagnostic Dump response.   | FALSE   |
| LOP_Flag_Status                           | Output BOOL  | Contains the status of the Diagnostic Flag's Status Byte LOP flag from the last Diagnostic Dump response.   | FALSE   |
| Message_Failure                           | Output BOOL  | Asserts for a single processor cycle when a message is processed that does not conform to the expected protocol format. This may be because of an incomplete response or corrupted data in the message response.                    | FALSE   |
| Message_Failure_Count                     | Output UDINT | A running sum indicating the number of messages that have failed to be sent or received.  | 0       |
| Message_Received_Count                    | Output UDINT | A running sum indicating the number of messages received from the remote device.  | 0       |
| Message_Sent_Count                        | Output UDINT | A running sum indicating the number of messages transmitted to the remote device.   | 0       |
| Message_Success_Count                     | Output UDINT |   | 0       |

| Pin Name        | Pin Type    | Description   | Default |
|-----------------|-------------|---|---------|
| Offline         | Output BOOL | This output is False when protocol communications are in process.<br><b>Note:</b> Protocol communications may be in process, but no successful data are exchanged because of settings configuration issues. | TRUE    |
| PWR_Flag_Status | Output BOOL | Contains the status of the Diagnostic Flag's Status Byte PWR flag from the last Diagnostic Dump response.   | FALSE   |
| RST_Flag_Status | Output BOOL | Contains the status of the Diagnostic Flag's Status Byte RST flag from the last Diagnostic Dump response.   | FALSE   |
| STS_Flag_Status | Output BOOL | Contains the status of the Frame Header's Status Exceptions flag from the last response received.   | FALSE   |
| SYN_Flag_Status | Output BOOL | Contains the status of the Diagnostic Flag's Status Byte SYN flag from the last Diagnostic Dump response.   | FALSE   |

<sup>a</sup> <Name> = Each configured message.

## Supported Function Codes

The SES-92 client shall support the following function codes:

- ▶ Special Functions
  - Poll Exception Data (x00)
  - Repeat Last Message (x01)
  - Continue Message (x02)
  - Synchronize Protocol Version (x03)
- ▶ Digital Input Functions
  - Dump Status Data (x10)
  - Report Status Exception Data (x11)
  - Dump Extended Status Data (x12)
- ▶ Analog Input Functions
  - Dump Analog Data (x20)
  - Report Analog Exception Data (x21)
- ▶ Time-Synchronization Functions
  - Synchronize Time (x52)
- ▶ Control Output Functions
  - SBO Trip/Close Select (x60)
  - SBO Trip/Close Execute (x61)
  - SBO Setpoint Select (x62)
  - SBO Setpoint Execute (x63)
  - DO Setpoint Execute (x64)
- ▶ RTU Functions
  - Dump Diagnostics Request (x73)
  - RTU Configuration Complete (x79)

# SES-92 Server Configuration

Configure an SES-92 server connection to communicate via serial or Ethernet tunneled to SES-92 polling clients. Create binary input, analog input, and other tag types in an SES-92 server shared map as placeholders for data that the clients will poll. Configure the SES-92 server to use the configured shared map. Each SES-92 server can use a unique map or share the same map with other configured SES-92 server connections. You can create a maximum of 10 SES-92 shared maps in a project. Map data to those shared map tags by using the Tag Processor from client IED or other source tags in the RTAC database.

Insert a unique SES-92 server connection for each SES-92 client connected to the RTAC.


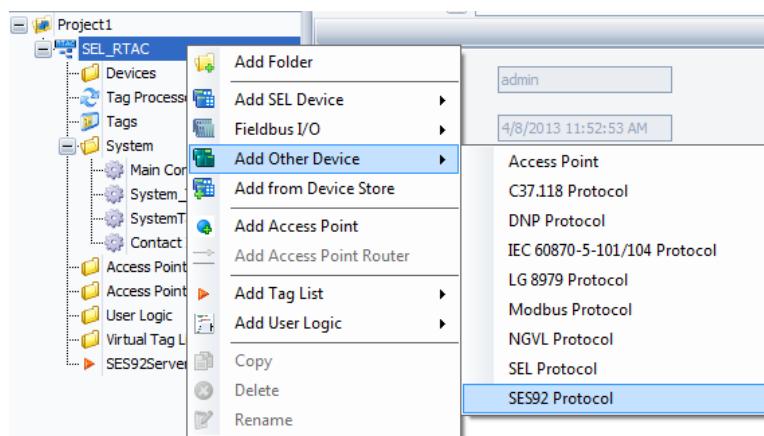


Figure 2.241 Insert SES-92 Server

Give the device connection a unique name, and select the type of connection as shown in *Figure 2.3*. The **Settings** tab contains all the configurable items for communications. Note that you must enter an SES-92 server shared map name in the settings. This map contains all the tags that this SES-92 server uses. Check the **Description** column for details on each configuration item. Move the slider or hover your cursor over the description to see the entire description text. Type any necessary comments in the blank column to the far right. Select the **Advanced Settings** check box to enable configuration of advanced settings.

## Add SES-92 Share Map


Step 1. Under the **Insert** tab, select **Tag Lists > SES-92 Server Shared Map**.

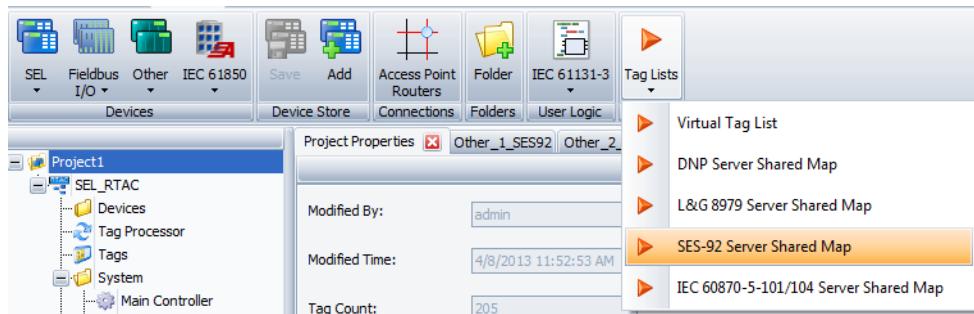

**Figure 2.242 Add SES-92 Server Map**

- Step 2. Click on a device tag type tab to add and configure tags.
- Step 3. Click + to add tags (4,096 tag limit per device tag type). Creating only the number of necessary tags optimizes system performance.
- Step 4. Change the names of the tags as necessary.
- Step 5. Change other tag-related information as necessary.

Repeat *Step 2* through *Step 5* to configure all server tags. When you are finished, configure the SES-92 server to use this custom map by selecting SES-92 Map Name in the **Setting** column. Although more than one SES-92 server can use the same map, each SES-92 server will manage separate event queues. Configure the Tag Processor to populate these server connection tags with actual values.

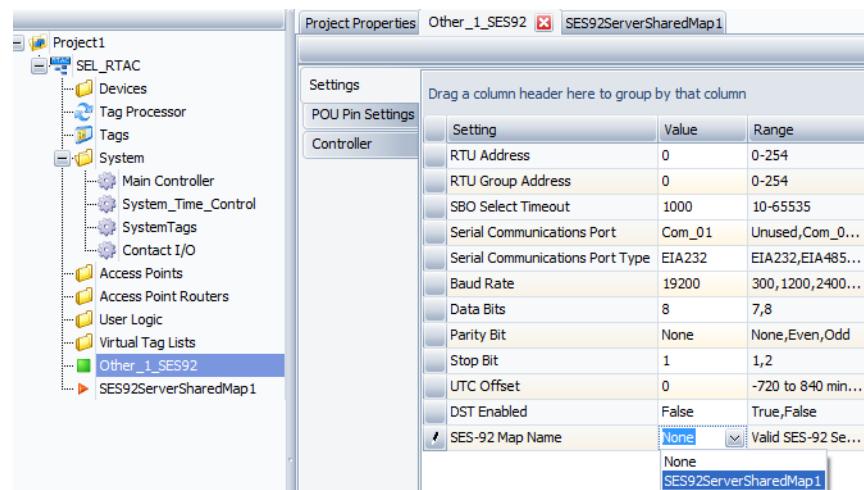

**Figure 2.243 Select SES-92 Shared Map**

## Device Tag Type Configuration Parameters

Each device tag type has parameters that must be configured correctly to ensure proper system operation. *Table 2.142–Table 2.147* describe the columns used to configure the SES-92 Server tags. ACSELERATOR RTAC will gray out configuration fields that do not apply to a specific device.

**Table 2.142 Common Device Tag Type Parameters**

| Parameter    | Description   | Default                              |
|--------------|---|--------------------------------------|
| Enable       | Set this flag to TRUE to enable processing of this tag. Set this flag to FALSE to disable processing.   | True                                 |
| Tag Name     | This parameter describes the tag. You can change this name as necessary.  |                                      |
| Point Number | This is the point number for which the SES-92 client will poll. If points are not contiguous in the IED, change these point numbers to match the SES-92 database for the IED. | Contiguous from 0 to the point count |
| Tag Alias    | Enter an optional descriptive tag name in this field, and then reference this tag alias anywhere in the RTAC system in place of the actual tag name.                          |                                      |
| Comment      | Optional user-entered comment field   |                                      |

**Table 2.143 Status Input Parameters**

| Parameter    | Description  | Default |
|--------------|--|---------|
| Tag Type     | See <i>Data Types on page 1137</i> for more details. Maximum 4096 status input tags. | SPS     |
| Status Value | The initialized value at startup   | False   |
| Comment      | Optional user-entered comment field  |         |

**Table 2.144 SBO Trip/Close Output Parameters**

| Parameter             | Description  | Default |
|-----------------------|--|---------|
| Tag Type              | See <i>Data Types on page 1137</i> for more details. Maximum 256 SBO tags. | SPC     |
| Control Model         | Nonconfigurable field  | Persist |
| On/Off Pulse Duration | Nonconfigurable field  |         |

**Table 2.145 Accumulator and Solid State Meter Parameters**

| Parameter    | Description  | Default |
|--------------|--|---------|
| Tag Type     | See <i>Data Types on page 1137</i> for more details. Maximum 256 accumulator and 256 solid state meter tags. | BCR     |
| Actual Value | The initialized running value at startup   | 0       |
| Frozen Value | The initialized value at startup   | 0       |

**Table 2.146 Analog Input Parameters**

| Parameter       | Description  | Default |
|-----------------|--|---------|
| Tag Type        | See <i>Data Types on page 1137</i> for more details. Maximum 4096 analog input tags.   | INS     |
| Inst Magnitude  | The initialized instantaneous value at startup   |         |
| Magnitude       | The initialized dead-banded value at startup   |         |
| Dead Band Count | The number of units of change necessary to move the Inst Magnitude value into Magnitude. If $ instMag - mag  > db$ , then $mag := instMag$ . |         |

| Parameter      | Description  | Default |
|----------------|--|---------|
| Zero Dead Band | The number of units at or below which Magnitude is forced to zero. If $ mag  < zeroDB$ then $mag := 0$ . |         |
| Max Value      | The maximum value allowed for this point. If $instMag > Max Value$ , ".q.detailQual.outOfRange" is set.  |         |
| H H Limit      | The high-high alarm limit. Excursions beyond this limit cause the RTAC to generate a high-high alarm.    |         |
| H Limit        | The high alarm limit. Excursions beyond this limit cause the RTAC to generate a high alarm.              |         |
| L Limit        | The low alarm limit. Excursions beyond this limit cause the RTAC to generate a low alarm.                |         |
| L L Limit      | The low-low alarm limit. Excursions beyond this limit cause the RTAC to generate a low-low alarm.        |         |
| Min Value      | The minimum value allowed for this point. If $instMag < Min Value$ , ".q.detailQual.outOfRange" is set.  |         |

**Table 2.147 SBO Setpoint Output Parameters**

| Parameter     | Description   | Default |
|---------------|---|---------|
| Tag Type      | See <i>Data Types on page 1137</i> for more details. Maximum 256 set-point output tags. | INC     |
| Variation     | If the oper control word is 12-bit signed or 12-bit unsigned                            |         |
| Set Magnitude | The initialized value at startup  | 0       |

## POU Pins

Use POU pin settings to view the present state of the SES-92 server operation and to modify some of the behavior of the SES-92 protocol. Setting the **Visible** field to True will cause the POU pin to appear in the **Controller** tab. See *Table 2.148* for the settings descriptions.

**Table 2.148 SES-92 POU Pin Settings**

| Pin Name                     | Pin Type   | Description   | Default   |
|------------------------------|------------|---|-----------|
| Communications_Offline_Timer | Input TIME | The time to wait for a poll from the client before determining the communications are offline. Configure in the <b>Settings</b> tab.  | T#10000MS |
| Disable_Controls             | Input BOOL | Disables controls through the protocol. Note: If other SES-92 server instances are assigned to the same SES-92 Server Shared Map as this server, asserting Disable_Controls will also disable controls for those other SES-92 server instances. | False     |
| Disable_Tag_Updates          | Input BOOL | Disables updating of tag values. Note: If other SES-92 server instances are assigned to the same SES-92 Server Shared Map as this server, asserting Disable_Tag_Updates will also disable updates for those other SES-92 server instances.      | False     |
| EN                           | Input BOOL | Enables this instance of SES-92.  | True      |
| PWR_Flag                     | Input BOOL | If this input pin is set to TRUE, the PWR flag is set to 1 in RTU Diagnostic data transmitted to the client.  | False     |
| Reset_Statistics             | Input BOOL | Resets all communications statistics.   | False     |

| Pin Name                      | Pin Type     | Description  | Default |
|-------------------------------|--------------|--|---------|
| SYN_Flag                      | Input BOOL   | If this input pin is set to TRUE, the SYN flag is set to 1 in RTU Diagnostic data transmitted to the client.   | False   |
| ACC                           | Output BOOL  | Set to TRUE when unacknowledged frozen Accumulator and/ or Solid State Meter data exists.  | False   |
| ALG                           | Output BOOL  | Set to TRUE when unacknowledged Analog Input exception data exists.  | False   |
| Controls_Disabled             | Output BOOL  | Indicates controls have been disabled.   | False   |
| Direct_Transparent_Connection | Output BOOL  | Indicates an access point router has disabled protocol communications and is using this port for direct transparent communications.  | False   |
| ENO                           | Output BOOL  | Indicates this instance of SES-92 is running.  | False   |
| ERR                           | Output BOOL  | Set to TRUE whenever the SES-92 Server ERR flag is transmitted in the message frame headers.   | False   |
| Freeze                        | Output BOOL  | Asserts for one processing interval when a Freeze command is received from the client.   | False   |
| Message_Failure               | Output BOOL  | Indicates the last message failed.   | False   |
| Message_Failure_Count         | Output UDINT | The number of times Message_Failure has been True.   | 0       |
| Message_Received_Count        | Output UDINT | The number of messages received.   | 0       |
| Message_Sent_Count            | Output UDINT | The number of messages sent.   | 0       |
| Message_Success_Count         | Output UDINT | The number of messages successfully sent to the client.  | 0       |
| Offline                       | Output BOOL  | Set to TRUE when Message_Received_Count has not been incremented for the number of ms defined in the Communication_Offline_Timeout setting.  | True    |
| SOE                           | Output BOOL  | Set to TRUE when unacknowledged digital status change events exist in the SES-92 Server SOE event collection.  | False   |
| SOE_Overflow                  | Output BOOL  | A Boolean flag that is asserted for a single processing interval if one or more digital status change events are discarded as a result of the SES-92 Server event collection being full. | False   |
| SOE_Overflow_Count            | Output UDINT | The number of times that the SOE_Overflow pin has been asserted.   | 0       |
| STS                           | Output BOOL  | Set to TRUE when unacknowledged Status Input exception data exists.  | False   |

## Tags

See *Tags (Overview)* on page 142 for a description of the **Tags** tab.

## Controller

See *Controller (Advanced Usage)* on page 141 for a description of the **Controller** tab.

## Supported Function Codes

Table 2.149 SES-92 Function Codes

| Function Code | Description                          | Notes  |
|---------------|--------------------------------------|--|
| 0h            | Poll Exception                       | Response to FC 0h is the same as if the following sequence of commands has been received:<br>1. Report Status Exception Data<br>2. Report Analog Exception Data<br>3. Dump Accumulator Data<br>4. Dump Solid-State Meter Data  |
| 1h            | Repeat Last Message                  |  |
| 2h            | Continue Message                     |  |
| 3h            | Synchronize Protocol Version         |  |
| 10h           | Dump Status Data                     | MCD reset if point quality changes.  |
| 11h           | Report Status Exception Data         | MCD reset if point quality changes. Events are maintained in a 10,000-entry circular buffer.   |
| 12h           | Dump Extended Status Data            | FC 12h is always the response to FC 12h request and is also the response to a Dump Status Data if any points have validity not = good. Dump and Extended Status requested stop point ID is increased in the response to provide 8-bit atomicity in the response message. |
| 20h           | Dump Analog Data                     | All requested points are always returned. Invalid or nonexistent values reported as -2048.   |
| 21h           | Report Analog Exception Data         |  |
| 24h           | Assign Dead Band and Group           | Configured dead band values are used until updated through the protocol by using FC 24h.   |
| 30h           | Freeze Accumulator                   |  |
| 31h           | Dump Accumulator Data                | Reports value of 0 for tags with validity not = good.  |
| 33h           | Dump Solid State Meter Data          | Reports value of 0 for tags with validity not = good.  |
| 50h           | Dump Digital Status Change Data      |  |
| 52h           | Synchronize Time                     | Response to FC 52h indicates a success, but the command is ignored by the RTAC.  |
| 53h           | Read Time                            |  |
| 54h           | Set Time Bias                        |  |
| 60h           | SBO Trip/Close Select                | Pulse on duration is the product of 10 ms and the control length from the <b>SELECT</b> command.   |
| 61h           | SBO Trip/Close Execute               | Execution time of control is one processing interval.  |
| 62h           | SBO Setpoint Select                  |  |
| 63h           | SBO Setpoint Execute                 | Set point tag trigger is asserted for one processing interval.   |
| 64h           | DO (Direct Operate) Setpoint Execute |  |
| 70h           | Reset RTU                            | EN POU pin is toggled False then back to True. Any OPB settings and integrity scan count, if included, are ignored.  |
| 73h           | Dump Diagnostic Request              | Subfunction diagnostic information is not returned.  |
| 77h           | Suppress Data                        |  |


| Function Code | Description                   | Notes  |
|---------------|-------------------------------|--|
| 78h           | Dump RTU Operating Parameters | The PRI, FRZ, COV, and RAE flags are always clear. Max message length and Message Integrity Count are set at zero. This establishes max message length to 261 bytes and disables integrity scan functionality. |
| 79h           | RTU Configuration Complete    |  |

## SNMP

### SNMP Manager/Client Configuration

Configure a Simple Network Management Protocol (SNMP) Manager/Client connection to communicate via Ethernet to IEDs. The RTAC will poll data from these IEDs and store the data it receives in tags. Use the Tag Processor to map these data to any protocol, logs, user logic, etc. The SNMP protocol typically refers to IEDs that make SNMP requests or collect data as managers (in the RTAC platform, this is the same functionality as a client) and IEDs that provide SNMP data as agents (in the RTAC platform, this is the same functionality as a server). As such, the terms manager/client and agent/server will be used interchangeably in the RTAC platform. As of firmware version R154, the RTAC supports version 2C (v2c) and version 3 (v3) of the SNMP protocol.

To add an SNMP Manager/Client connection, select **SNMP** from the **Other Device** menu.

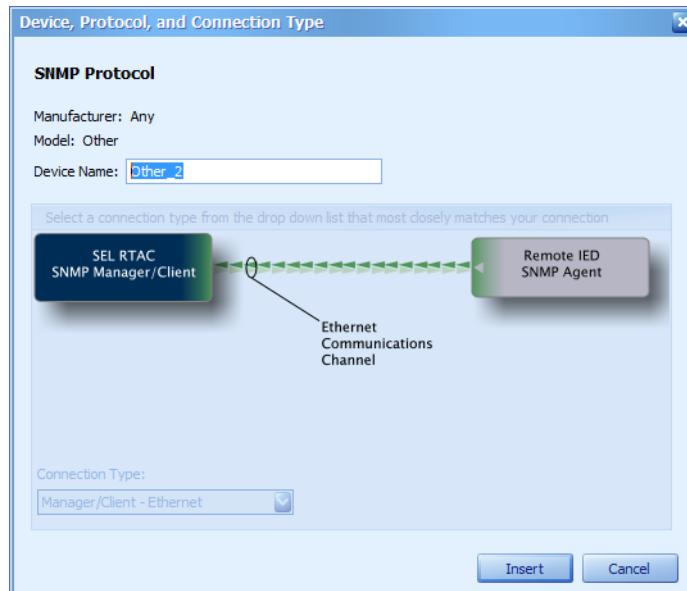

**Figure 2.244 Adding SNMP Manager/Client**

Give the device connection a unique name and select the connection type, as shown in *Figure 2.244*. Refer to *Client Connection Types on page 135* for a description of each connection type.

## Settings Tab

The **Settings** tab contains all configurable items for communications. Check the **Description** column for details on each configuration item. Move the slider or hover your cursor over a description to see the entire text of an item description. Type any applicable comments in the blank column to the far right. Select the **Advanced Settings** check box to enable configuration of advanced settings. Toggle the **SNMP Version** setting between v2c and v3 to select the version of SNMP protocol to use. When in v2c mode, the **Community String Password** setting is used. When in v3 mode, the remaining Security settings such as **User Name**, **Security Level**, and the group of Authentication and Encryption settings are used.

## Polls Tab

The **Polls** tab contains all the poll requests that the SNMP client will use to collect data from the server. To add additional poll requests use the + button. As many as 50 polls are supported. Each poll will request a list of OIDs, which are configured using the Status OIDs and Control OIDs.

| Other, Manager/Client - Ethernet [SNMP Protocol] |   |             |  |
|--|---|-------------|--|
|  | Drag a column header here to group by that column |             |  |
|  | Poll Number                                       | Poll Period |  |
|  | 1   | 300000      |  |
|  | 2   | 300000      |  |
|  | 3   | 300000      |  |
|  | 4   | 300000      |  |
|  | 5   | 300000      |  |

[Navigation icons: back, forward, first, last, search, etc.]

Figure 2.245 SNMP Manager/Client Polls

Table 2.150 Poll Tab Parameters

| Column Name | Description   |
|-------------|---|
| Poll Number | Name of poll group.   |
| Poll Period | The period in which the RTAC will generate this request. The units for poll period are in milliseconds. A value of 0 disables the poll from being issued on a periodic basis. The range of poll period is 0, 1000–100000000 milliseconds. |

## SNMP OIDs

To configure tags for the SNMP Manager/client, go to the **Status OIDs** or **Control OIDs** tab.

- Step 1. Click on the tab for the appropriate tag type to add and configure tags.
- Step 2. Click + to add tags. Create only the necessary number of tags to optimize system performance.
- Step 3. Rename the tags as necessary.
- Step 4. Configure other tag parameters as necessary.

| Other, Manager/Client - Ethernet [SNMP Protocol] |   |                              |          |           |                        |           |
|--|---|------------------------------|----------|-----------|------------------------|-----------|
| Settings   | Drag a column header here to group by that column |                              |          |           |                        |           |
|  | Enable  | Tag Name                     | Tag Type | Tag Alias | SNMP OID               | SNMP Type |
|  | True  | Other_1_SNMP.Status_OID_0001 | SPS      |           | 1.3.6.1.2.1.2.2.1.8.8  | Integer32 |
|  | True  | Other_1_SNMP.Status_OID_0002 | SPS      |           | 1.3.6.1.2.1.2.2.1.8.9  | Integer32 |
|  | True  | Other_1_SNMP.Status_OID_0003 | SPS      |           | 1.3.6.1.2.1.2.2.1.8.10 | Integer32 |
|  | True  | Other_1_SNMP.Status_OID_0004 | SPS      |           | 1.3.6.1.2.1.2.2.1.8.11 | Integer32 |
|  | True  | Other_1_SNMP.Status_OID_0005 | SPS      |           | 1.3.6.1.2.1.2.2.1.8.12 | Integer32 |
|  | True  | Other_1_SNMP.Status_OID_0006 | SPS      |           | 1.3.6.1.2.1.2.2.1.8.13 | Integer32 |
|  | True  | Other_1_SNMP.Status_OID_0007 | SPS      |           | 1.3.6.1.2.1.2.2.1.8.14 | Integer32 |
|  | True  | Other_1_SNMP.Status_OID_0008 | SPS      |           | 1.3.6.1.2.1.2.2.1.8.15 | Integer32 |
| True   |   | Other_1_SNMP.Status_OID_0009 | SPS      |           | 1.3.6.1.2.1.2.2.1.8.16 | Integer32 |

**Figure 2.246 SNMP Manager/Client Sector Map**

## SNMP-Specific Tag Configuration

There are several columns specific to SNMP points. Each have the following behavior.

**Table 2.151 SNMP Point Behavior**

| Column Name   | Description  |
|---------------|--|
| SNMP OID      | This is the OID that the RTAC will issue to the server/agent. The period preceding the first digit is optional.  |
| SNMP OID Name | Each digit in the OID has a name correlation. The OID can also be represented by the named format as well as the number format.  |
| SNMP Type     | This is the type that the data will be returned to the RTAC via the SNMP protocol definition. This field shows the available tag formats SNMP data can be represented as in the RTAC's logic engine.   |
| Size          | This setting only applies for the data type STRC and SNMP data type Octet String. When a rising edge is applied to the trigger bit in the operSTR structure, the RTAC will write the number of bytes specified by the Size setting from the string in the ctlVal in the operSTR structure.   |
| Treat As      | This setting only applies when the RTAC data type is STR and the SNMP Type is OCTET String. Since this SNMP data type can represent both text and number data, these data can be used two ways in the RTAC logic engine. When set to Text, the most significant bit of the data received by the SNMP client will be placed in the most significant bit of the STR tag, creating a visible string. This causes the RTAC to treat the received data as text. When set to Number, the data received by the SNMP client will have the least significant bit placed in the least significant bit of the STR tag. In this mode, the tag will not appear as an ASCII string when viewed while online with the RTAC. This causes the RTAC to treat the data as a received integer. |
| Poll Number   | This setting tells the RTAC which poll request to ask the agent/server for the configured OID. Multiple tags are assignable to the same poll number.   |

## Polling Behavior of SNMP Manager/Client

SNMP uses UDP to exchange information. UDP is a connectionless transport protocol. This means that unlike TCP the RTAC will only know if the agent/server is active and communicating when it receives a response or unsolicited message. If the RTAC generates a request to the agent/server and receives no response for the duration of request time-out setting, the RTAC will issue a series of retry requests. Once the configured series of request retries and subsequent time-outs have expired, the RTAC will assert the offline pin until the next successful communication sequence occurs with the agent/server. During this period of time, all other communication requests will be paused and queued until a response is returned or retries are expired.

## Configuring SNMP Traps/Inform in the RTAC

Traps and Inform messages are unsolicited messages sent from the agent/server to the manager/client without a request from the manager/client. When this unsolicited message is sent to the RTAC it will contain the status OID number and the status value. As long as the correct OID is configured in the **Status OIDs** or **Control OIDs** tab, the RTAC will receive the trap and update the appropriate tag. Trap and Inform messages are configured in the agent/server IED for sending data to managers/clients.

## POU Pins

Use POU pin settings to view the present state of the SNMP Manager/client operation and to modify some of the behavior of the protocol. Setting the **Visible** field to True will cause the POU pin to appear in the **Controller** tab. See *Table 2.152* for the settings descriptions.

**Table 2.152 SNMP Manager/Client POU Pin Settings**

| Pin Name                       | Pin Type                                   | Description  | Default                        |
|--------------------------------|--|--|--------------------------------|
| EN                             | Input BOOL                                 | The EN input enables or disables this specific Function Block instance. Other inputs have no effect while EN is False.   | True                           |
| Disable_Tag_Updates            | Input BOOL                                 | The POU will not update tags or process changes to tags while this input is True.  | False                          |
| Disable_Controls               | Input BOOL                                 | While True, the processing of any controllable tags is blocked.  | False                          |
| Reset Statistics               | Input BOOL                                 | On rising-edge trigger, all counter POU output are reset.  | False                          |
| Issue_<XX> <sup>a</sup>        | Input BOOL                                 | Request poll to be sent, on the rising edge.   | False                          |
| Issue_<XX>_Period <sup>a</sup> | Input: Time (0, 25–100000000 milliseconds) | Defines the interval used by the Client to issue the poll. Setting to zero causes the related function to be non-periodic.   | Reference Polls—Message_Period |
| ENO                            | Output BOOL                                | Indicates this specific Function Block Instance is active if True. If False, the inputs have no effect and the outputs are not updated.  | False                          |
| Offline                        | Output BOOL                                | This output is False when protocol communications are in process. Note: Protocol communications may be in process but no successful data exchange due to settings configuration issue.                           | False                          |
| Controls_Disabled              | Output BOOL                                | Asserted when Disable_Controls input is asserted. This indicates the client will not issue control commands.   | False                          |
| Message_Sent_Count             | Output UDINT                               | Running sum indicating the number of messages transmitted to the remote device.  | False                          |
| Message_Received_Count         | Output UDINT                               | Running sum indicating the number of messages received from the remote device.   | 0                              |
| Message_Failure                | Output BOOL                                | Asserts for a single processor cycle when a message is processed that does not conform to the expected protocol format. This may be because of an incomplete response or corrupted data in the message response. | False                          |
| Message_Failure_Count          | Output UDINT                               | Running sum indicating the number of failed messages.  | 0                              |
| Response_Timeout_Count         | Output UDINT                               | Count of Application Layer Message response timeouts.  | 0                              |

| Pin Name                      | Pin Type           | Description  | Default |
|-------------------------------|--------------------|--|---------|
| Issue_<XX>_DN <sup>a</sup>    | Output BOOL        | Asserts for a single processing interval once the message is completed successfully. Completion of the message is dependent on the configuration of the message. | False   |
| Issue_<XX>_Delay <sup>a</sup> | Output BOOL        | Asserts when this message is triggered and the previous triggering of this message has not completed. Deasserts when on the rising-edge of Issue_<Name>_DN.      | False   |
| Last_Rec_Error_Message        | Output String(255) | Contains the last received error message. The message displayed is the result returned to the RTAC from the SNMP agent/server.                                   | "       |
| Data_Type_Mismatch            | Output BOOL        | Will assert if an OID is returned with a data type that does not match the configured data type. This will be cleared on a rising edge of Reset_Statistics.      | False   |

<sup>a</sup> <XX> = Each configured poll.

## SNMP Agent/Server Configuration

The SNMP protocol typically refers to IEDs that make SNMP requests or collect data as managers (in the RTAC platform, this is the same functionality as a client) and IEDs that provide SNMP data as agents (in the RTAC platform, this is the same functionality as a server). As such, the terms manager/client and agent/server will be used interchangeably in the RTAC platform. As of firmware version R154, the RTAC supports version 2C (v2c) and version 3 (v3) of the SNMP protocol. To add an SNMP Manager/Client connection, select **SNMP** from the **Other Device** menu.

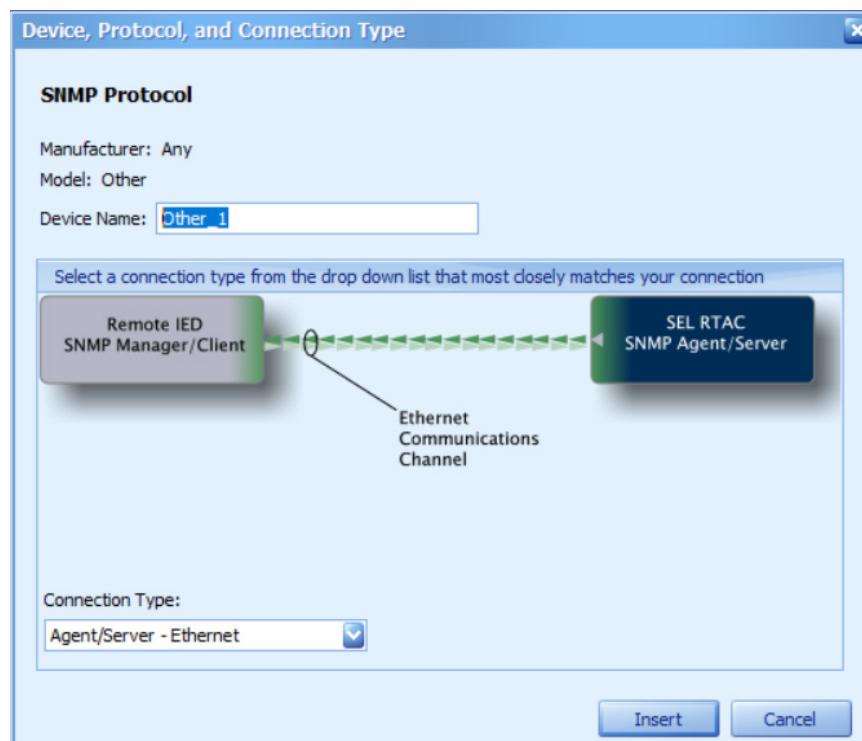


Figure 2.247 Adding SNMP Manager/Client Connection

Give the device connection a unique name and select the connection type, as shown in *Figure 2.247*. Refer to *Client Connection Types on page 135* for a description of each connection type. Only a single instance of an SNMP agent can be added to the RTAC project. Because SNMP is UDP-based, it does not maintain an active connection to a single client. The SNMP agent/server can be configured to answer requests only from a list of manager/client IP addresses or accept requests from any manager/client.

## Settings Tab

The **Settings** tab contains all configurable items for communications. Check the **Description** column for details on each configuration item. Move the slider or hover your cursor over a description to see the entire description. Type any applicable comments in the blank column to the right. Select the **Advanced Settings** check box to enable configuration of advanced settings. Toggle the **SNMP Version** setting between v2c and v3 to select the version of SNMP protocol to use. When in v2c mode, the **Read-Only Community String Password** setting is used. When in v3 mode, open the **User Settings** tab to configure one or more user accounts and associated security requirements that a client must specify to poll the SNMP server.

## SNMP Agent Data

The RTAC SNMP agent implements the system and interface MIB to provide overall system information such as firmware version and host name, as well as the configuration and port state of the RTACs Ethernet interfaces. It provides additional system data covered in the following table. The SNMP agent/server does not allow for any custom data mappings.

| System Tag                          | Description                                   | SNMP OID                          | SNMP Data Type |
|-------------------------------------|---|-----------------------------------|----------------|
| CPU_Burden_Percent_5_Second_Average | The five second average CPU burden percentage | .1.3.6.1.4.1.31823.1.3500.1.1.1.0 | Integer32      |
| Memory_KBytes_Used                  | The number of Kilobytes of memory in use      | .1.3.6.1.4.1.31823.1.3500.1.1.2.0 | Integer32      |
| Mainboard_Temperature               | The temperature of the mainboard in Celsius   | .1.3.6.1.4.1.31823.1.3500.1.1.3.0 | Integer32      |

## POU Pins

Use POU pin settings to view the present state of the SNMP agent/server operation and to modify some of the behavior of the protocol. Setting the **Visible** field to True will cause the POU pin to appear in the **Controller** tab.

| Pin Name                     | Pin Type   | Description  | Default |
|------------------------------|------------|--|---------|
| EN                           | Input BOOL | The EN input enables or disables this specific Function Block instance. Other inputs have no effect while EN is False.                       | True    |
| Disable_Tag_Updates          | Input BOOL | The POU will not update tags or process changes to tags while this input is True.  | False   |
| Communications_Offline_Timer | Input TIME | If the SNMP Agent/Server does not receive a request for a time period longer than what is specified by this pin the offline pin will assert. | T#10s   |

| Pin Name                     | Pin Type     | Description  | Default |
|------------------------------|--------------|--|---------|
| Reset_Statistics             | Input BOOL   | On rising-edge trigger, all counter POU output are reset.  | False   |
| Message_Sent_Count           | Output UDINT | Running sum indicating the number of messages transmitted to the remote devices.   | 0       |
| Message_Received_Count       | Output UDINT | Running sum indicating the number of messages received from the remote device.   | 0       |
| Message_Failure              | Output BOOL  | Asserts for a single processor cycle when a message is processed that does not conform to the expected protocol format.  | False   |
| Message_Failure_Count        | Output UDINT | Running sum indicating the number of messages that have been detected as failed messages.  | 0       |
| Invalid_Function_Block_Input | Output BOOL  | The function block has received invalid input which it cannot process.   | False   |
| ENO                          | Output BOOL  | Indicates this specific Function Block Instance is active if True. If False, the inputs have no effect and the outputs are not updated.  | False   |
| Offline                      | Output BOOL  | This output is FALSE when protocol communications are in process.<br><br><b>NOTE</b><br>If protocol communications are in process, but there is no successful exchange of data, a settings configuration issue may be present. | False   |

## Web API Communications

Web APIs are available for data exchange in firmware versions R146-V0 and later. All API communications require an authenticated user using basic authentication in https with a valid user account on the RTAC that has the appropriate permissions. Each API documents the necessary permissions.

Any data sent or returned via the APIs that represent a time stamp must conform to the ISO 8601 string definition of a time stamp.

## API Documentation

Web API formats, inputs, and outputs are documented on the RTAC web interface. Click on an API category to see additional details about each API.

Only authenticated users can see all details of each API, including the description of each API and its inputs, outputs, and potential returned error messages.

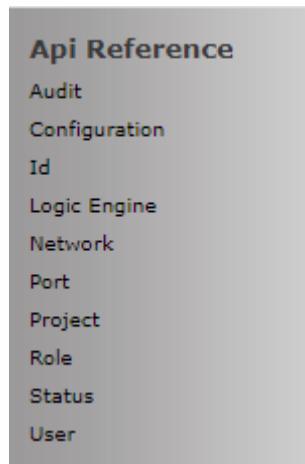


Figure 2.248 API Documentation Example

## Network Audit Utilities API

The network audit utilities are only supported on the SEL-3350, SEL-3532, SEL-3555, and SEL-3560. Audits are restricted to local area networks only and cannot be performed in the 127.0.0.0/8 network. The network audit utility includes the following functionality:

- ▶ Targeting of a single host, multiple hosts, or an entire network
- ▶ Host discovery
- ▶ Reporting of each open TCP and UDP port for each host listed or discovered

Audit results are available in the AUDITS directory on the RTAC file manager.

Use the API to trigger a network audit and then use the response to retrieve the results in a separate request.

Starting in firmware version R147-V0, network audits can also be initiated and collected on the RTAC's web interface.

Starting in firmware version R150-V0, network audits can also be initiated and collected via the RTAC's logic engine.

## Auth API

The Auth API allows an authorization token to be generated that can be used with additional API requests (instead of using RTAC account credentials). The token is valid for one hour after generation.

## Configuration API

The Configuration API provides an aggregate response to multiple other API calls, returning all the information in a single response. Data returned by this API include information from the ID, Status, Fingerprint, Ports, Network, Users, Role, and Projects APIs.

## Fingerprint API

The Fingerprint API provides the ability to track RTAC configuration changes by exporting a 40-digit, hexadecimal fingerprint value. This value is created based on the following items and will change when any of them change:

- ▶ Password Vault Entries
- ▶ Logic Engine Application
- ▶ Project Settings
- ▶ Ethernet Settings
- ▶ Hosts
- ▶ URL Whitelist Settings
- ▶ Web Proxy Settings
- ▶ Website Settings
- ▶ X.509 Certificates
- ▶ CA Certificates
- ▶ SSH Authorized Keys
- ▶ SSH Host Keys
- ▶ LDAP Settings
- ▶ User Accounts
- ▶ RADIUS Settings
- ▶ HMI Diagrams
- ▶ Licensed Features
- ▶ Firmware ID (FID)
- ▶ Serial Number

## Firmware API

The Firmware API facilitates a staged firmware update to the RTAC where the firmware upgrade file is first sent to the RTAC and then applied with a separate command.

## HMI API

The HMI API provides the ability to upload, list, and delete RTAC HMI projects in .hprjson or .hprz format.

## ID API

The ID API provides summary information about the RTAC relating to firmware and licensing. It contains the following information:

- ▶ Serial Number
- ▶ Product Number
- ▶ Firmware Version
- ▶ Firmware Hash (SHA-256)

- BIOS Version
- Licensed Features

## Logic Engine API

The Logic Engine API allows current tag information to be queried. Tags or variables defined in IEC 61131-3 logic are not available via this API. The logic engine API allows users to get current values from the logic engine and update logic engine values through the API. Each request has its own permission requirements. A tag name referenced in the URL must have the following format: Global Variable list name/variable name. For example, if a DNP client had the configuration name feeder\_2\_DNP and a binary input name of BI\_0000, the tag name in the URL would be feeder\_2\_DNP/BI\_0000. POU pins are also available—to get the offline pin status, the tag name would be feeder\_2\_DNP\_POU/Offline. Tag names are referenced in the same manner in logic, but instead of the . notation, a "/" is used.

### Write Logic Engine Tag

The write logic engine tag request will update the logic engine value for the requested tag name. There are several requirements for the write to be successful:

- Write format must exactly match the tag structure as returned in the GET request for logic engine value response
- No overflow on any integer or float type
- Enumeration strings are valid
- Strings contain valid ASCII characters
- Strings cannot contain any Unicode special characters
- Hexadecimal values are formatted with a leading 0x
- Datetime value adheres to valid ISO 8601 standard string for date and time
- Tag List name and tag name are separated by "/"

## Network API

The Network API provides information about the network interfaces on the RTAC.

Required Permissions:

- API Login
- Network Read

The following information can be accessed via this API:

- List of interfaces on the RTAC
- MAC addresses
- Operational status of each interface
- IP address and configured gateway address
- Configuration information about the interfaces

## Ports API

The Ports API provides information about the open ports on the RTAC interfaces. It will return all TCP and UDP ports that are open on the RTAC including the service that is using the port.

## Projects API

The Projects API provides information about and allows interaction with the active RTAC project. It also provides information about device connections in the project including the name, protocol type, and communication status (disabled, offline, online) of those devices.

## Role API

The Role API is for viewing and managing RTAC user roles. Custom user roles can be added and given permissions that grant access to specific RTAC data and actions. The full list of permissions can be found on the User Roles section of the RTAC web interface by adding a new user role. The factory-default user roles and their respective permissions cannot be deleted or edited but can be viewed using this API.

## Serial API

The Serial API provides information about the usage and configuration of serial ports in the active RTAC project.

The following information is returned in this API.

- ▶ Serial Port Number (e.g., Com\_01)
- ▶ Port Configuration (baud rate, data bits, stop bits, etc.)
- ▶ Port Type (EIA-232 or EIA-485)
- ▶ Port Power Enabled/Disabled

## Status API

The Status API provides information about the project on the RTAC including memory usage, storage usage, and users logged in.

The following information is returned in this API.

- ▶ Active Project Name
- ▶ Current Memory Statistics
- ▶ Current Storage Statistics
- ▶ Logged In User Statistics

## Users API

The Users API provides information about the local users on the RTAC.

The following information is returned in this API:

- Role associated with the account
- Permissions associated with the account
- Time when the account was created
- Time when the account password was last changed

---

---

## S E C T I O N   3

---

# Tag Processor

## Overview

---

Use the Tag Processor to log tag values, enable tag value visualization in the RTAC web interface, and map data values from sources to destinations. Source data typically enter the SEL Real-Time Automation Controller (RTAC) from an IED or from a global variable. Destination data are typically data leaving the RTAC to go to SCADA, an HMI, or some other remote polling device. A Source Expression can be a simple data tag (such as Relay1\_DNP.AI\_0000) or an IEC 61131-3 expression. The Tag Processor moves data values from Source Expressions on the right into Destination Tags on the left in the same row of the Tag Processor. Data mapping in the Tag Processor does not dictate data position or order in a given protocol or application. The RTAC completes all assignments in the Tag Processor before passing the data to the protocols. You can use the Tag Processor to map any tag and any attribute of a tag in the ACCELERATOR RTAC SEL-5033 Software project.

Use the Tag Processor grid for the following example tasks:

- ▶ Simple mapping of tags from IED protocols to remote polling protocols
- ▶ Mapping attributes of different source tags to a destination tag
- ▶ Simple calculations such as analog scaling
- ▶ Complex IEC 61131-3 calculations
- ▶ Conditional statements using IEC 61131-3 logic expressions
- ▶ Logging of changes in tag values (the first several tags come preconfigured for logging)
- ▶ Configuring real-time tag value visualization in the RTAC web interface

# Tag Processor Data Entry


---

Although the syntax is not the same, data entry in the Tag Processor grid is similar to data entry in a spreadsheet. Use one of the following methods to enter tag names into the Tag Processor.

- Type the name of the point. Note that the autocomplete feature will display tags by matching against what you have typed. Begin with the device name followed by the type, and use periods (.) between each tag component (e.g., Relay\_1\_DNP.AI\_0000.instMag).
  - Relay\_1\_DNP = Client device name
  - AI\_0000 = First analog input point
  - instMag = Instantaneous value for this point (see *Data Types on page 1137* for details)
- Highlight and copy the columns of tag names from previously configured client and server connections and paste these tag names into the **Source Expression** and **Destination Tag Name** columns, respectively. Note that pasting a group of tags in the Tag Processor will add new rows automatically in the grid.
- Copy and paste directly from device documentation by highlighting and copying a column from a Microsoft Excel spreadsheet, text file, or other tabular column of names, and then pasting this information into the appropriate **Tag Processor** column.
- Create the RTAC database mapping from a SCADA system database. Populate a spreadsheet with SCADA and IED tag names as mapped in the SCADA database. Copy the two columns of tags and paste these columns directly into the **Source Expression** and **Destination Tag Name** columns in the Tag Processor.
- Populate the **Source Expression** and **Destination Tag Name** columns using the Tag Selector tool, as described in *Tag Selector on page 111*.

Press the  icon to save and compile the project. The error icon () typically indicates a syntax error or an undefined destination tag. The alert symbol () typically indicates an IEC 61131-3 logic error on that line. Compile errors appear in the output window at the bottom of the Tag Processor screen. Double-click on errors to display the error location. The save operation generates code that you can view by clicking the **Code** tab at the bottom of the Tag Processor. ACCELERATOR RTAC generates this code automatically each time you save the project. This code serves as a noneditable debugging aid.

Notice the Tag Processor POU capacity gauge at the top of the Tag Processor screen. This gauge indicates how close you are to exceeding the maximum recommended amount of generated code. The maximum allowed number of assignment rows in the Tag Processor is 10,000, but the lines of generated code will vary depending on what assignments are configured. A reading of 100 percent on the Tag Processor POU capacity gauge indicates ACCELERATOR RTAC has generated 300,000 characters of structured text to perform the configured mapping. Exceeding 100 percent could cause the application to run out of memory on your PC. You can reduce memory usage and still retain the same functionality by copying generated code and placing it in an IEC 61131-3 custom logic program. Then, delete the assignments from the Tag Processor to clear those lines of code.

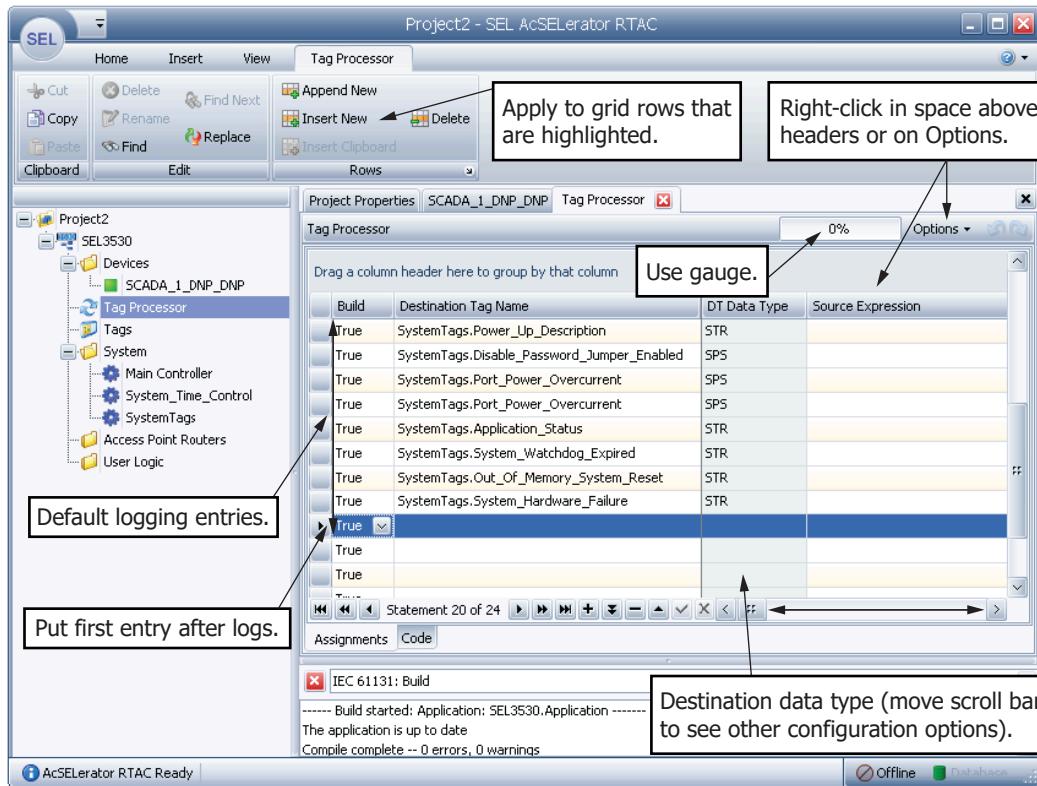
**Figure 3.1 Tag Processor Grid**

The two main columns in the Tag Processor are Destination Tag Name and Source Expression. View other columns by sliding the horizontal scroll bar.

Customize your view of the Tag Processor by right-clicking in space above headers or by selecting **Options** and then selecting the following:

- **Columns:** Show/hide all configuration parameter columns.
- **Run Time Column Customization:** Configure which columns appear and in which order.
- **Various Layouts:** Apply filters to view only certain data rows. Defaults include analog, digital, show all, and logging layout filters. Create and save custom layout filters as necessary. Select Default Layout to undo any changes you have made and to display all columns.
- **Export to XLS:** Export visible columns to an XLS (Excel spreadsheet) format.
- **Export to XML:** Export visible columns to an XML format.
- **Auto-Fill Time and Quality Source:** When a tag has a status, quality, and time stamp in the destination column and only a status mapped in the source column, this option automatically populates the quality source and time source columns. This makes it so that the destination tag will receive status updates with corresponding time stamps and good quality.

- **Treat Code not Generated as Error:** Tag processor statements that do not generate a valid mapping or logic statement indicate this with an exclamation mark on the left side of the tag processor row. Normally, this warning does not produce an IEC 61131 compile error and the project can be sent to the RTAC as-is. When this option is selected, these warnings generate compile errors that must be resolved before sending the project to the RTAC.

- Right-click on any column header to do the following:

#### NOTE

By default, the first several rows in the table are assigned to system tags for logging. You can delete these default logging assignments, but SEL recommends keeping them for NERC CIP requirements.

- **Sort Ascending:** Sort Tag Processor by this column from low to high (A–Z, 0–9).
- **Sort Descending:** Sort Tag Processor by this column from high to low (Z–A, 9–0).
- **Clear Sorting:** Clear active sort options (return to default).
- **Group By This Column:** Group data by this column type rather than by tag name.
- **Group by Box:** Group data by this box rather than by tag name.
- **Column Chooser:** Organize the order and which columns to view.
- **Best Fit:** Adjust automatically the width of a column you select to the largest size entry.
- **Clear Filter:** Clear active filter.
- **Filter Editor:** Provide logic to implement a filter on tag names or other point attributes.
- **Best Fit (all columns):** Adjust automatically the width of all columns to accommodate largest entry sizes.
- **Select Column:** Highlight an entire column for copy/paste, etc., operations.

**Table 3.1 Available Columns in the Tag Processor**

| Parameter            | Description   | Default                   | Field Type   |
|----------------------|---|---------------------------|--|
| Build                | Determine if the Tag Processor will evaluate this row.  | True                      | Constant (BOOL)  |
| Destination Tag Name | Any tag name in the system that can accept a value mapped to it.  |                           | Any tag name (operAPC, BCR, STR, STRING, TIM, TIME, BYTE, WORD, DWORD, SINT, USINT, INT, UINT, DINT, UDINT, REAL, MV, CMV, operINC, INS, SPS, operSPC) |
| DT Data Type         | Data type of the destination tag.   | Supplied by system lookup | Not assignable. Generated automatically.   |
| DT Bit Reference     | The bit in the Destination Tag that the Tag Processor will replace with the value of the Source Expression. |                           | Constant (0–31)  |

| Parameter          | Description   | Default                    | Field Type   |
|--------------------|---|----------------------------|--|
| Source Expression  | Any tag in the database. Can also contain any structured text with tag(s).  |                            | Any tag name or expression (operAPC, BCR, STR, STRING, TIM, TIME, BYTE, WORD, DWORD, SINT, USINT, INT, UINT, DINT, UDINT, REAL, MV, CMV, operINC, INS, SPS, operSPC).<br>May also use instructions if not associated with a Destination Tag. |
| SE Data Type       | Source Expression data type or global variable definitions (see <i>Example 3.4</i> ).   | Supplied by system lookup  | Generated automatically  |
| Live Data Enable   | Set this to Viewable to enable visibility of the Destination Tag on the Live Data page in the RTAC web interface. Set to Forceable to allow the tag to be forced from the Live Data page. Live Data supports a wide variety of tag and variable types. See <i>Live Data on page 639</i> for more information.                                       | FALSE                      | Constant (BOOL)  |
| Live Data Labels   | Provide a comma-separated list of labels (as many as 255 characters) to associate with this tag in Live Data. Live Data can be filtered by labels to make locating data faster. See <i>Live Data on page 639</i> for more information.  |                            | Constant (STRING(255))   |
| SE Bit Reference   | The bit in the source expression that the Tag Processor will assign to the destination tag.   |                            | Constant (0–31)  |
| Time Source        | The time stamp the Tag Processor assigns to the Destination Tag. A time stamp from any tag can be used, and this overrides the time stamp of the Source Expression tag. Example values: System_Time or SEL_421_1_DNP.BI_0001.t. Using a different time source when mapping non control types to control types may cause incorrect control behavior. |                            | Variable (timestamp_t)   |
| Time Offset        | ACCELERATOR RTAC will add the value in this field to the Destination Tag time-stamp value. The format is T#ns, where n is any whole number.   |                            | Constant (TIME)<br>Variable (TIME)   |
| Quality Source     | The quality value the Tag Processor assigns to the Destination Tag. A quality source from any tag can be used, and this overrides the quality of the source expression tag. Example value: SEL_421_1_DNP.BI_0001.q.   |                            | Variable (quality_t)   |
| Instruction Number | Noneditable reference value linked to the structured text shown under the <b>Code</b> tab at the bottom of the Tag Processor grid.  | Unique Identifier          | Not assignable. Generated automatically.   |
| Solve Order        | Configurable order for the solution of Tag Processor logic. Numbers do not need to be unique.   | Follows instruction number | Constant (DINT)  |
| Description        | A user-editable field for applicable comments. Not used in the logic engine.  |                            | Constant (Any string)  |
| Control Type       | Editable only on control type tags.   |                            | Constant (Pulse, Persist)  |
| Operator Blocked   | Enter a tag or constant of type Boolean. The Tag Processor maps this value to the Destination Tag operatorBlocked attribute.  |                            | Constant (BOOL)<br>Variable (BOOL)   |

**584 Tag Processor**  
**Tag Processor Data Entry**


| Parameter                     | Description  | Default   | Field Type  |
|-------------------------------|--|---|---|
| On Pulse Dur                  | Editable only on control type tags. Length of on pulse in milliseconds.  | 1000  | Constant (UDINT)<br>Variable (UDINT)                        |
| Off Pulse Dur                 | Editable only on control type tags. Length of off pulse in milliseconds.   | 1000  | Constant (UDINT)<br>Variable (UDINT)                        |
| Number of Pulses              | Editable only on control type tags.  | 1   | Constant (USINT)<br>Variable (USINT)                        |
| PU Delay                      | Pick-up delay.   |   | Constant (Between T#10ms and T#1000000s)<br>Variable (TIME) |
| DO Delay                      | Drop-out delay.  |   | Constant (Between T#10ms and T#1000000s)<br>Variable (TIME) |
| Dead Band                     | Editable only on analog tags of type MV or CMV. The number of units that dictates a significant value change. The excursion of the dead band moves instMag to mag. |   | Constant (REAL)<br>Variable (REAL)                          |
| Zero Dead Band                | Editable only on analog tags of type MV or CMV. If Mag < Zero Dead Band, then Mag := 0.  |   | Constant (REAL)<br>Variable (REAL)                          |
| Range Min                     | User-defined threshold value.  |   | Constant (REAL or DINT)<br>Variable (REAL or DINT)          |
| Range Max                     | User-defined threshold value.  |   | Constant (REAL or DINT)<br>Variable (REAL or DINT)          |
| Range Low Low Lim             | User-defined threshold value.  |   | Constant (REAL or DINT)<br>Variable (REAL or DINT)          |
| Range Low Lim                 | User-defined threshold value.  |   | Constant (REAL or DINT)<br>Variable (REAL or DINT)          |
| Range High Lim                | User-defined threshold value.  |   | Constant (REAL or DINT)<br>Variable (REAL or DINT)          |
| Range High High Lim           | User-defined threshold value.  |   | Constant (REAL or DINT)<br>Variable (REAL or DINT)          |
| Logging Enable                | Set to True to enable the logic engine logging of this tag.  | True for default logged points. False for all others. | Constant (BOOL)   |
| Logging - Priority            | User-defined priority for log item filtering.  |   | Constant (STRING(255))<br>Variable (STRING(255))            |
| Logging - Category            | User-defined category for log item filtering.  |   | Constant (STRING(255))<br>Variable (STRING(255))            |
| Log Initial State             | Set to True to log startup value of tags. If False, the RTAC system will wait to log changes until after the system reaches a ready state.                         | False   | Constant (BOOL)   |
| Logging - On Message          | User-configurable message that logic engine enters into the log when the tag value asserts.  |   | Constant (STRING(255))<br>Variable (STRING(255))            |
| Logging - Off Message         | User-configurable message that logic engine enters into the log when the tag value deasserts.  |   | Constant (STRING(255))<br>Variable (STRING(255))            |
| Logging - Time Change Trigger | If True, the logic engine will log the tag upon a change in the tags time stamp.   |   | Constant (BOOL)<br>Variable (BOOL)                          |

| Parameter                           | Description  | Default | Field Type                                       |
|-------------------------------------|--|---------|--|
| Logging Time Change Trigger Message | The text that the logic engine logs when the time stamp of the destination tag changes. The RTAC will use this message if no Logging-On or Logging-Off messages are defined. Applies to types SPS, MV, CMV, INS, and STR.  |         | Constant (STRING(255))<br>Variable (STRING(255)) |
| Logging Alarm Enable                | When true, the logic engine considers the logged value an alarm. These tags are logged in the SOE log but also appear in the Alarm Summary of the web interface. The alarm entry is red when in alarm, then returns to black when no longer in alarm state. Applies to types SPS, MV, CMV, INS, and STR. | False   | Constant (BOOL)<br>Variable (BOOL)               |
| Logging Alarm State                 | If True, the logged item will go into alarm when state changes from deasserted to asserted. Applicable only when Logging Alarm Enable is True.   |         | Constant (BOOL)<br>Variable (BOOL)               |
| Logging Chatter Count               | Number of changes allowed within the Chatter Time before the logic engine removes a tag's log items because of chattering. Once activated, a chatter filter remains active for a time duration equal to 10x that of the time period defined in the Chatter Time.   |         | Constant (UINT)                                  |
| Logging Chatter Time                | The time window in which tag value changes are counted to determine a chattering condition. Calculated using the timestamp_t value associated with the logged tag.   |         | Constant (TIME)                                  |
| Logging Comment                     | User-defined comment.  |         | Constant (STRING(255))<br>Variable (STRING(255)) |
| Logging Display Tag Name            | Displayed tag name in the SOE report. If empty, the SOE report displays the Destination Tag Name.  |         | Constant (STRING(255))                           |

### Example 3.1 Simple Source-to-Destination Tag Mapping

The following example illustrates simple tag mapping between a relay and a SCADA system using the DNP3 protocol. For more information regarding how to add and configure DNP client and server devices, see *Section 2: Communications*.

- Step 1. Insert a DNP device and configure it as a server. Name it **SCADA\_1**.
- Step 2. Insert a DNP shared map and name it **SCADA\_1**. Configure the DNP server device to use this shared map.
- Step 3. Configure DNP shared map **SCADA\_1** with two binary inputs, two analog inputs, and one binary output.

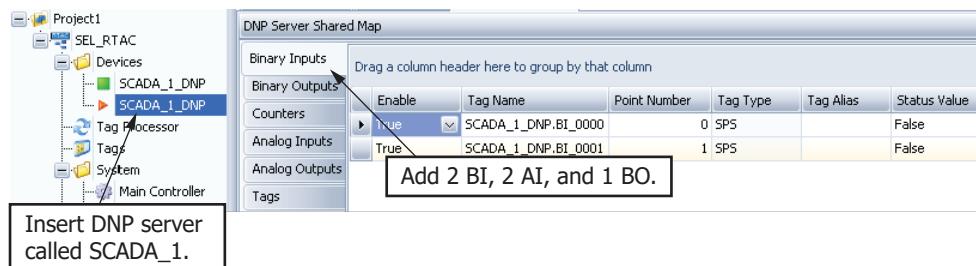

**Figure 3.2 Insert DNP Server**

- Step 4. Insert a DNP device, and configure it as a client. Name it **Feeder\_1**.

- Step 5. Configure Feeder\_1 with two binary inputs, two analog inputs, and one binary output.

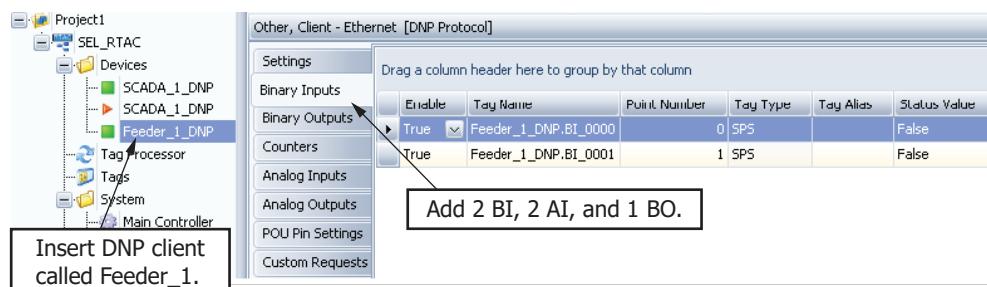


Figure 3.3 Insert DNP Client

- Step 6. Click on the **Tag Processor** tab from the list view in the left pane of the screen.
- Step 7. Click on **+** to add the total number of SCADA\_1 tags. In this example, that number will be 10.

**NOTE**

The Tag Processor inserts new rows automatically if the number of tags you paste exceeds the number of available rows.

- Step 8. Populate the **Destination Tag Name** column starting on the first available row with the two binary input tags from SCADA\_1. Either type in the tags directly into the Tag Processor grid or select/copy/paste from the SCADA\_1 tag lists. See *Section 3: Tag Processor*.
- Step 9. Populate the **Destination Tag Name** column starting on the first available row after the binary inputs with the two analog input tags from SCADA\_1.
- Step 10. Populate the **Destination Tag Name** column starting on the first available row after the analog inputs with the binary output status from SCADA\_1. See *Figure 3.5*.
- Step 11. Finish populating the destination column with the BO structure from Feeder\_1, as in *Figure 3.5*.

The source column is for data entering the RTAC, and the destination column is for data exiting the RTAC, so control output mapping is the reverse of input mapping in the Tag Processor. Data enter the RTAC from Feeder\_1 and exit via the SCADA\_1 tags. Control data, however, enter the RTAC from SCADA\_1 and exit via the Feeder\_1 tag. Data quality for destination analog, status, and counter tags also comes from the source or IED tag. Data quality for control values, however, is provided by the server tags and transferred to the client tags. This infers that control data tags from an IED will inherit invalid quality if the server connection is not working even if the client connection has no problems. Note that one element of the control structure (the control status) is an input to the RTAC provides, and that mapping is similar to any other status input. See *Figure 3.6*.

Note also that DNP binary outputs have special structures to facilitate different control types as well as to enable mapping of one control type to another. To forward to Feeder\_1 all binary output commands the RTAC receives from SCADA\_1, map the entire

control output type structure. This ensures that DNP commands will pass transparently to the IED as the RTAC receives these commands from SCADA\_1. Were you to map a control from Modbus, there would be only one entry in the Tag Processor per control point, because Modbus lacks the complex control structure of DNP.

- Step 12. Populate the Source Expression columns with Feeder\_1 inputs and outputs as in *Figure 3.5*.

In some cases, you do not have to map all DNP BO control types. For example, the DNP server may always receive Trip and Close commands and the IED may only need Trip and Close commands. In that case, only map the Trip and Close control types.

Some situations require a conversion from one DNP BO type to another. For example, the polling master may only be able to send trip/close commands, but the IED can only accept latch on/off commands. Map the different DNP BO types to each other in the Tag Processor. Change the Control Type column to force the source control type to match the destination control type. In this example, change Control Type to Persist to match that of the Latch controls in the Destination Tag Name column. See *Figure 3.4*. When SCADA\_1 sends a trip command to BO\_0000, the RTAC will issue a DNP message with the BO LatchOff command to the configured point on Feeder\_1.


#### NOTE

Control types of Source Expressions must match those of the Destination Tag Names to which they are assigned. To force a match, change the type in the Control Type column.


| Destination Tag Name              | DT Data Type | Source Expression             | Control Type |
|-----------------------------------|--------------|-------------------------------|--------------|
| Feeder_1_DNP.BO_0000.operLatchOn  | OPERSPC      | SCADA_1_DNP.BO_0000.operClose | Persist      |
| Feeder_1_DNP.BO_0000.operLatchOff | OPERSPC      | SCADA_1_DNP.BO_0000.operTrip  | Persist      |

**Figure 3.4 DNP BO Type Conversion**

**588 Tag Processor**  
**Tag Processor Data Entry**

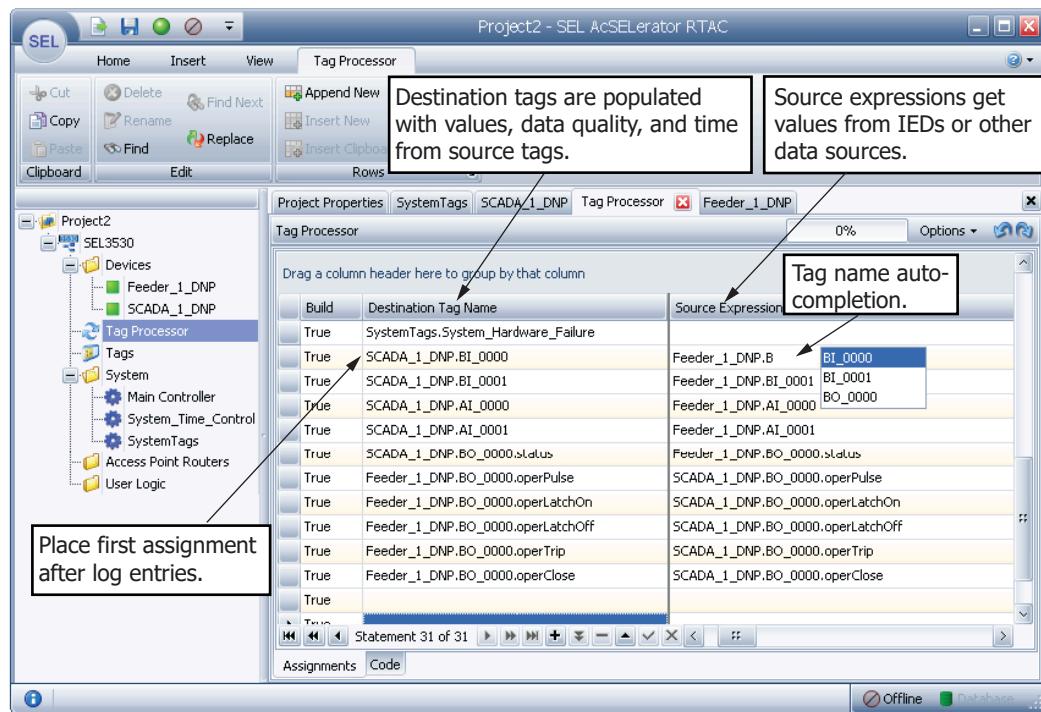

**Figure 3.5 Simple Tag Mapping**

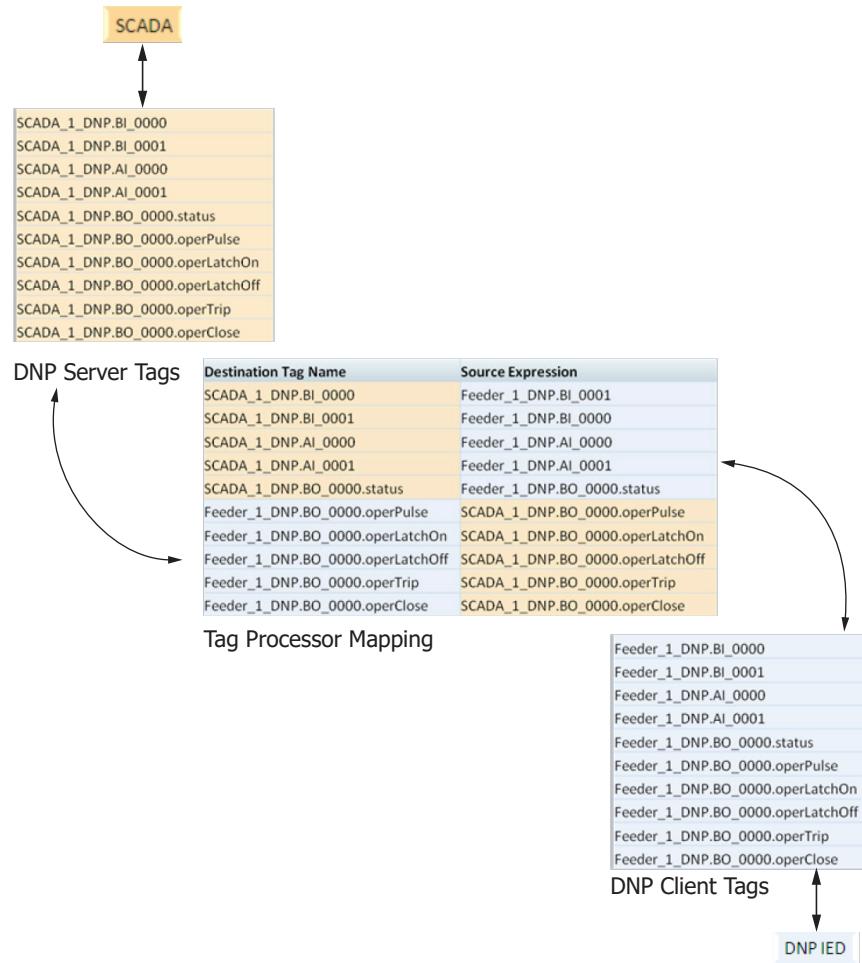
**Figure 3.6 Tag Processor Data Flow**


---

**Example 3.2 IEC 61131-3 Code in the Tag Processor**


Use any structured text statements in the Tag Processor to modify values or select conditionally which tags to use. This example illustrates the following Tag Processor features:

- ▶ Conditional statements that you can use to create a primary/backup IED relay
- ▶ A SELECT statement that you can use to choose automatically between two tag values
- ▶ Boolean logic that you can use on two binary input points
- ▶ A complex calculation to create a derived value

- Step 1. Start with the project in *Example 3.1*.
- Step 2. Add two more binary input tags and two analog input tags to SCADA\_1.
- Step 3. Insert a DNP device and configure the device as a client. Name it **Line\_1**. This will represent a transmission line protective relay.
- Step 4. Add two binary inputs and two analog inputs to Line\_1.


**590 Tag Processor**  
**Tag Processor Data Entry**

- Step 5. Copy and paste Line\_1. Rename Line\_1copy to Line\_1\_Bak.  
 This will represent the backup relay on Transmission Line 1. See Figure 3.7.

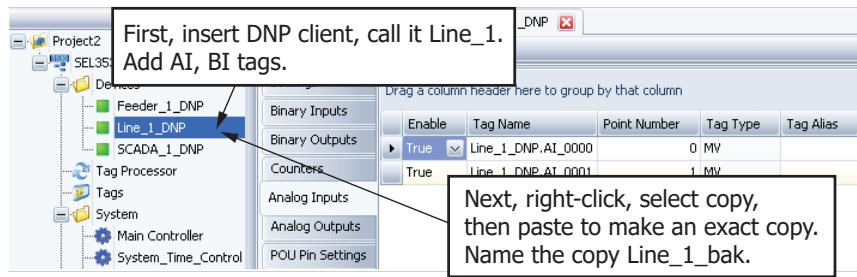

**Figure 3.7 Insert Primary and Backup IED**

- Step 6. Highlight the entries in the Tag Processor from the previous example and then select the button to delete the entries.
- Step 7. Select the button to add lines to the Tag Processor as necessary.
- Step 8. Type in or copy/paste the tags from Feeder\_1, Line\_1, and Line\_1\_Bak to the Tag Processor, as shown in Figure 3.8.
- Step 9. Type in or copy/paste the tags from SCADA\_1 to the Tag Processor, as shown in Figure 3.8.

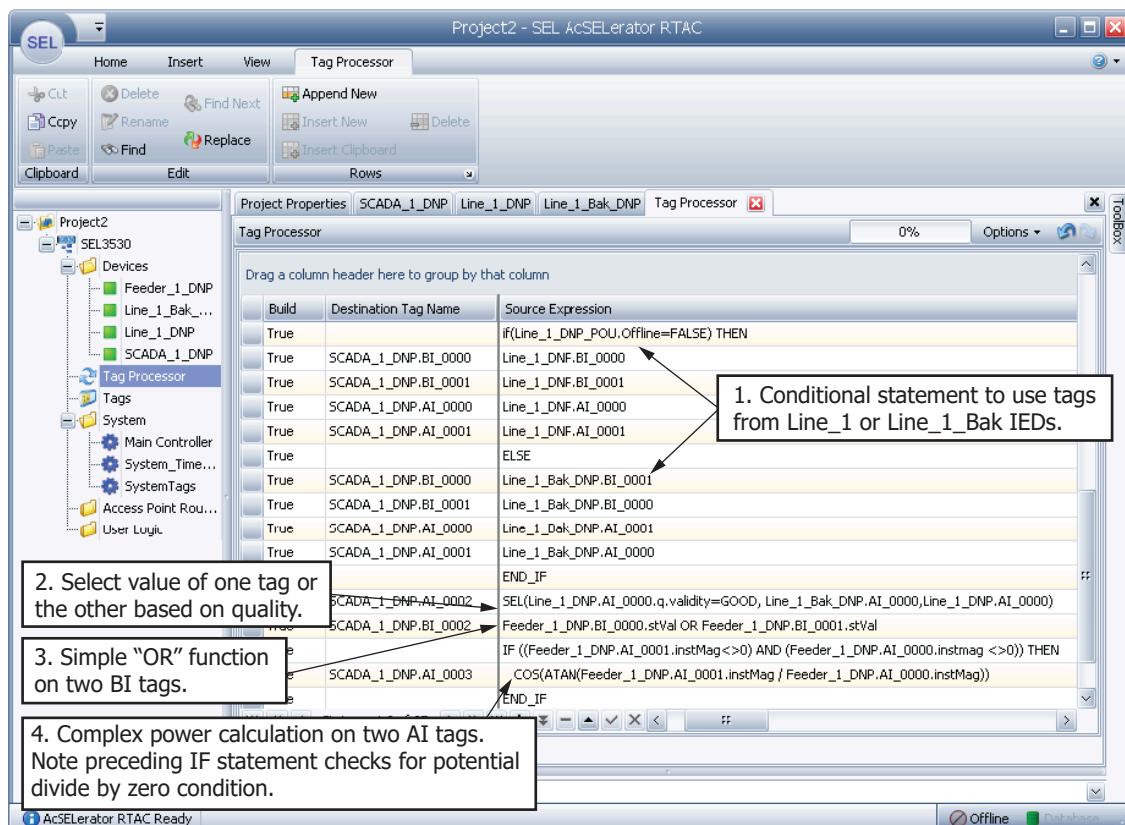

**Figure 3.8 IEC 61131-3 Logic in Tag Processor**

The following describes the specific syntax of the embedded IEC 61131-3 structured text in *Figure 3.8*:

1. The IF statement is checking to ensure Line\_1 is not offline. If there is an unrecoverable communication error, the Offline POU pin will become True. As long as the Line\_1 Offline POU pin = FALSE, Line\_1 data will populate SCADA\_1 tags. If Line\_1 Offline = True, the backup relay (Line\_1\_Bak) tags will populate SCADA\_! tags.
2. The RTAC uses the **SELECT** command to send the value of one tag or the other to the SCADA\_1 tag. If the expression "Line\_1\_DNP.AI\_0000.q.validity=GOOD" is true, then the value of the Line\_1 tag maps to the SCADA\_1 tag. Otherwise (if the quality is not good for that point), the RTAC uses the Line\_1\_Bak tag. This is a good feature to use if you have only one or two values that are acting as a primary and backup.

#### NOTE

If you use IEC 61131-3 logic in the Tag Processor, review the generated structured text in the Code tab after you save the project. Verify that the code the Tag Processor generates matches your intentions and look for any "invalid statement" warnings.

3. You can use any combination of Boolean logic operators as a source expression. In this example, SCADA\_1\_DNP.BI\_0002 is true if either BI\_0000 OR BI\_0001 are true. By ORing the stval of the tag, you will lose the time and quality of the original two tags being ORed.
4. You can use any combination of math operations on any tags as a source expression. In this example, we illustrate how we can calculate power from the reactive and real power values of two analog input tags.

---

#### Example 3.3 Defining a Local Variable in the Tag Processor

This example will further demonstrate embedding IEC 61131-3 logic by defining a local variable directly in the Tag Processor.

- Step 1. Start with any project in ACCELERATOR RTAC.
- Step 2. Open the Tag Processor.
- Step 3. In a blank source expression (SE) Data Type column, type **TEMPVAL : REAL**. You can use any supported data type when defining the new local variable. Variable names are not case sensitive.
- Step 4. Type **TEMPVAL** in the Destination Tag Name column.
- Step 5. Create an assignment in the Source Expression column. See *Figure 3.9*.
- Step 6. Press <Ctrl+S> to save and compile the project.

You will notice there are no compile errors. The new variable is created as a global and recognized throughout the ACCELERATOR RTAC project.

| In-line local variable definition. |                      |       |  |              |
|------------------------------------|----------------------|-------|--|--------------|
| Build                              | Destination Tag Name | DT... | Source Expression                          | SE Data Type |
| True                               | TEMPVAL              |       | Primary_server_IP_DNP.AI_0000.instMag * 10 | REAL         |
| True                               |                      |       |  |              |

Figure 3.9 Local Variable Definition in Tag Processor

#### Example 3.4 Populating the Tag Processor From Excel


This example illustrates how we can use a preconfigured Excel spreadsheet to populate the Tag Processor. We presume in this example that the control center developed the spreadsheet with predefined names to which the RTAC must adhere.

- Step 1. Start with a blank project in ACSELERATOR RTAC.
- Step 2. See the spreadsheet in *Figure 3.10*. It has SCADA points and IED points as we recorded these points from the master control center configuration sheets (presumed for this example).
- Step 3. Select, copy, and paste the rows from the spreadsheet. Note that the spreadsheet must have either a blank middle column for a bulk copy/paste, or you must copy the columns one at a time. Correct columns are as follows:
  - Column 1 = Destination or SCADA tag names
  - Column 2 = blank
  - Column 3 = Source or IED tag names
  - Column 4 = Optional RTAC data type for the source tag (see *Appendix B: IEC 61131-3 Programming Reference* for data types). Typically, it is best to let the system determine this value.

| Copy three columns and paste in Tag Processor. Do not include headers. |   |                                   |  |
|--|---|-----------------------------------|--|
| A  | B | C                                 |  |
| 1 SCADA_1_Map  |   | IED Points                        |  |
| 2 SCADA_1_DNP_BI_0000  |   | Feeder_1_DNP_Communication_Status |  |
| 3 SCADA_1_DNP_BI_0001  |   | Feeder_1_DNP.Mirrored_Bit_ROKB    |  |
| 4 SCADA_1_DNP_BI_0002  |   | Feeder_1_DNP.Mirrored_Bit_ROKA    |  |
| 5 SCADA_1_DNP_BI_0003  |   | Feeder_1_DNP.Target_ENABLE        |  |
| 6  |   |                                   |  |
| 7 SCADA_1_DNP_AI_0000  |   | Feeder_1_DNP.Phase_A_Current      |  |
| 8 SCADA_1_DNP_AI_0001  |   | Feeder_1_DNP_Phase_B_Current      |  |
| 9 SCADA_1_DNP_AI_0002  |   | Feeder_1_DNP.Phase_C_Current      |  |
| 10 SCADA_1_DNP_AI_0003   |   | Feeder_1_DNP_Neutral_Current      |  |
| 11   |   |                                   |  |

Figure 3.10 SCADA Mapping Spreadsheet

- Step 4. Paste the columns you copied into the first destination tag name entry available. If no blank destination tag name entry exists, press to create one. The Tag Processor will create and populate as many rows as you paste from the spreadsheet. You must select the entire cell for the paste operation to work correctly.
- Step 5. The source and destination tags are now mapped, but these tags still do not exist in the ACSELERATOR RTAC database. Note in *Figure 3.11* that ACSELERATOR RTAC does not fill out the source and destination data types because the tags are not yet defined. A appears beside each undefined tag.

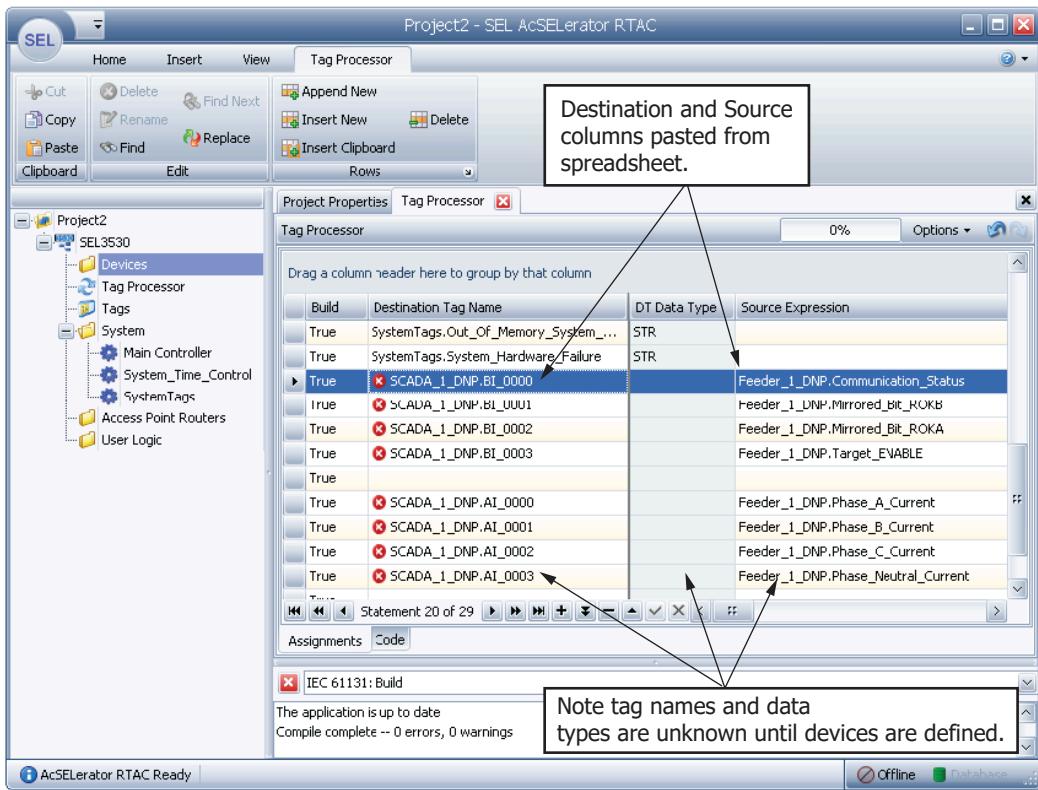

**Figure 3.11 Copy/Paste Spreadsheet Tags**

### Create Destination Tags:

Step 6. From the menu ribbon, insert a DNP device and define this device as a DNP server. Name it **SCADA\_1**.

Step 7. Add four binary input and four analog input tags. In this example, the names that ACSELERATOR RTAC generated automatically match those of the spreadsheet, so nothing more is necessary.

### Create Source Tags:

Step 8. From the menu ribbon, insert a DNP device, and define this device as a DNP client. Name it **Feeder\_1**.

Step 9. Add four binary input and four analog input tags.

In this example, the names that ACSELERATOR RTAC automatically generated do *not* match those of the spreadsheet.

Step 10. Copy the binary input names from the spreadsheet and paste these names on top of the binary input tags in the Feeder\_1 device. See *Figure 3.12* and *Figure 3.13*. Alternatively, you can paste custom tag names into the Alias columns within each data type configuration page.


Step 11. Repeat *Step 10* for the analog input names in the spreadsheet.

Step 12. Press the **Tag Processor** tab to return to the Tag Processor view.

Step 13. Press **S** or <Ctrl+S> to save. Note that data types are filled out correctly and that the **X** symbols are gone.

**Tag Processor Data Entry**

Copy BI tag names and paste over BI tag names in Feeder\_1 device configuration. Repeat for AI tag names.

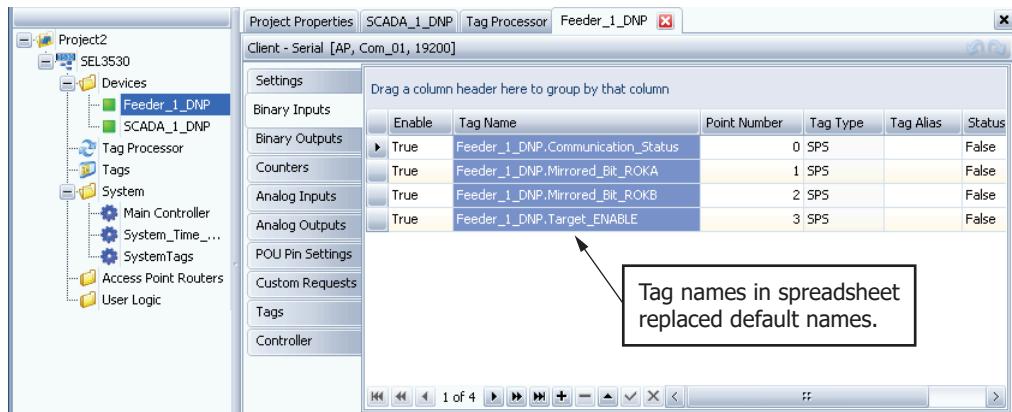
**Figure 3.12 Custom Tag Names in Spreadsheet****Figure 3.13 Feeder\_1 Default Tag Names Replaced****Example 3.5 Access Individual Bits in the Tag Processor**

This example illustrates the syntax to access individual bits from tags in the Tag Processor. This is an alternate method for packing/accessing individual bits into a tag and is valid in user logic as well as in the Tag Processor. Care should be taken when performing bit-wise operations. Note that floating point tags and signed integers are represented in memory differently than unsigned tags.

*Figure 3.14* shows the syntax for accessing individual bits of a tag by placing a .0, .1, etc., after the tag name. While online with the project, click on **Tools > Display Mode > Binary** from the Home ribbon menu to see the binary representation of the tag (see *Figure 3.15*).

| Destination Tag Name                       | DT Data Type | Source Expression | SE Data Type |
|--|--------------|-------------------|--------------|
| Modbus_IED_MODBUS.HREG_00000.oper.ctVal.0  | BOOL         | TRUE              | BOOL         |
| Modbus_IED_MODBUS.HREG_00000.oper.ctVal.1  | BOOL         | FALSE             | BOOL         |
| Modbus_IED_MODBUS.HREG_00000.oper.ctVal.2  | BOOL         | TRUE              | BOOL         |
| Modbus_IED_MODBUS.HREG_00000.oper.ctVal.3  | BOOL         | TRUE              | BOOL         |
| Modbus_IED_MODBUS.HREG_00000.oper.ctVal.4  | BOOL         | TRUE              | BOOL         |
| Modbus_IED_MODBUS.HREG_00000.oper.ctVal.5  | BOOL         | FALSE             | BOOL         |
| Modbus_IED_MODBUS.HREG_00000.oper.ctVal.6  | BOOL         | TRUE              | BOOL         |
| Modbus_IED_MODBUS.HREG_00000.oper.ctVal.7  | BOOL         | TRUE              | BOOL         |
| Modbus_IED_MODBUS.HREG_00000.oper.ctVal.8  | BOOL         | TRUE              | BOOL         |
| Modbus_IED_MODBUS.HREG_00000.oper.ctVal.9  | BOOL         | FALSE             | BOOL         |
| Modbus_IED_MODBUS.HREG_00000.oper.ctVal.10 | BOOL         | FALSE             | BOOL         |
| Modbus_IED_MODBUS.HREG_00000.oper.ctVal.11 | BOOL         | TRUE              | BOOL         |
| Modbus_IED_MODBUS.HREG_00000.oper.ctVal.12 | BOOL         | FALSE             | BOOL         |
| Modbus_IED_MODBUS.HREG_00000.oper.ctVal.13 | BOOL         | TRUE              | BOOL         |
| Modbus_IED_MODBUS.HREG_00000.oper.ctVal.14 | BOOL         | FALSE             | BOOL         |
| Modbus_IED_MODBUS.HREG_00000.oper.ctVal.15 | BOOL         | FALSE             | BOOL         |

**Figure 3.14 Bit Access in the Tag Processor**

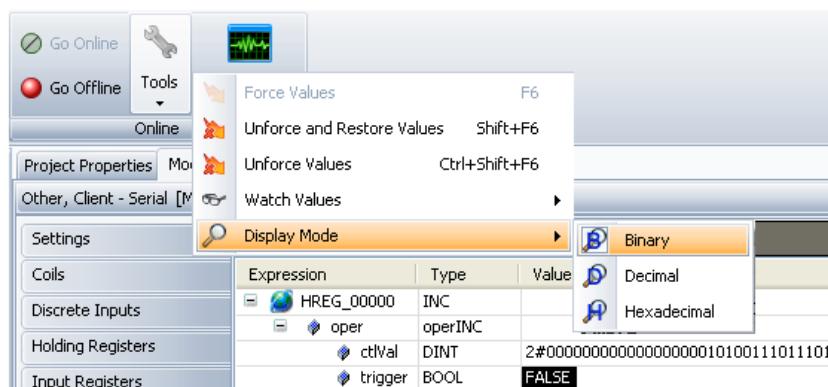

**Figure 3.15** Binary Display Mode

### Example 3.6 Visualize Tag Data on RTAC Web Interface

- Step 1. Configure a valid assignment in the Tag Processor, including a Source Expression and Destination Tag Name.
  - Step 2. In the column Live Data Enabled, set the value = Viewable.
  - Step 3. Save the project and send to the RTAC.
  - Step 4. In the RTAC web interface, click the menu item Live Data.


The live data for the tags selected is displayed on the web interface.

## Alias Tags

The format of TagNames is always as follows: devicename\_protocol.pointname (i.e., Line\_1\_DNP.BI\_0001). You can change the pointname and devicename, but the structure must remain the same. Alias tags do not follow this format, and you have greater flexibility in naming tags. Place user-created alias tags in the

alias tags column in each device setup. Once you assign an alias name to a tag, it replaces that tag throughout the system. For example, use alias tags in the Tag Processor in place of device tag names. Use the following rules when creating alias tags:

- Make each alias tag a unique name within a project.
- Start with a letter.
- Use any combination of letters and numbers you want.
- Instead of spaces or dashes, use the underscore (\_) character.
- Do not have two underscore characters together.
- Do not use special characters.

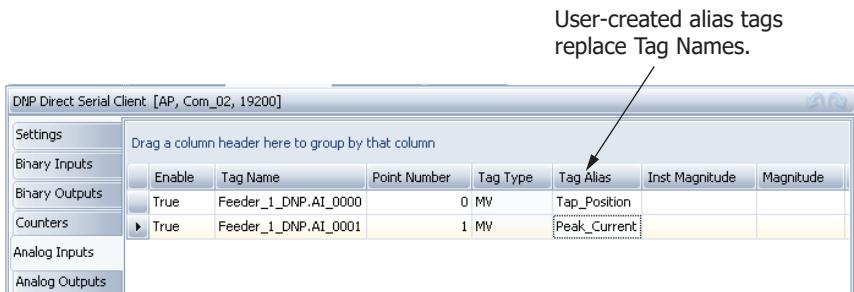

User-created alias tags replace Tag Names.

| DNP Direct Serial Client [AP, Com_02, 19200] |   |        |                      |              |              |           |
|--|---|--------|----------------------|--------------|--------------|-----------|
| Settings                                     | Drag a column header here to group by that column |        |                      |              |              |           |
|  | Binary Inputs                                     | Enable | Tag Name             | Point Number | Tag Type     | Tag Alias |
|  | Binary Outputs                                    | True   | Feeder_1_DNP.AI_0000 | 0 MV         | Tap_Position |           |
|  | Counters  | True   | Feeder_1_DNP.AI_0001 | 1 MV         | Peak_Current |           |
|  | Analog Inputs                                     |        |                      |              |              |           |
|  | Analog Outputs                                    |        |                      |              |              |           |
|  |   |        |                      |              |              |           |

Figure 3.16 Alias Tags

## Special Tag Processor Functions

Although you can perform IEC 61131 logic on individual variables in the Tag Processor, most device tag types are structures of variables. The structures contain not only the present value of the tag but also time data, quality data, etc. For example, this statement adds two instantaneous analog values:

✓ Feeder\_1\_DNP.AI\_0000.instMag + Feeder\_1\_DNP.AI\_0001.instMag

But this example will not:

✗ Feeder\_1\_DNP.AI\_0000 + Feeder\_1\_DNP.AI\_0001

To perform math or logic on an entire tag structure, you can use the special built-in Tag Processor functions described in this section.

### ABS\_vector\_t

This function receives a vector\_t data type with either a positive or negative magnitude and an angle of any arbitrary floating-point value. It will produce an equivalent vector\_t with a positive magnitude and an angle evaluated from 0 degrees to +360 degrees such that it equivalently represents the original vector.

Inputs:

IN : vector\_t

Output:

Returns modified vector\_t tag with a positive magnitude and an angle wrapped between 0 and +360 degrees (inclusive of 0).

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression         | SE Data Type |
|----------------------|--------------|---------------------------|--------------|
| Vector.Vec2          | VECTOR_T     | ABS_vector_t(Vector.Vec1) | VECTOR_T     |

**Figure 3.17 ABS\_vector\_t Example**

## ADD\_CMV

This function adds the instCVal of two CMV tags using vector addition (first converting to rectangular coordinates, then adding real and imaginary parts).

Inputs:

IN1, IN2 : CMV

Output:

Returns modified CMV tag as follows:

- instCVal is the result of IN1.instCVal + IN2.instCVal
- time is the most recent time between the two input CMV tags
- q is the result of merging the quality attributes of IN1 and IN2 to reflect the worse case

Example in Tag Processor:

| Destination Tag Name        | DT Data Type | Source Expression                                 | SE Data Type |
|-----------------------------|--------------|---|--------------|
| VirtualTagList1.Status_0000 | CMV          | ADD_CMV(Feeder1.Status_0000, Feeder1.Status_0002) | CMV          |

**Figure 3.18 ADD\_CMV Example**

## ADD\_INS

This function adds the stVal of two INS tags.

Inputs:

IN1, IN2 : INS

Output:

Returns modified INS tag as follows:

- stVal is the result of IN1.stVal + IN2.stVal
- time is the most recent time between the two input INS tags
- q is the result of merging the quality attributes of IN1 and IN2 to reflect the worse case

Example in Tag Processor:

| Destination Tag Name  | DT Data Type | Source Expression  | SE Data Type |
|-----------------------|--------------|--|--------------|
| HMI_MODBUS.IREG_00000 | INS          | ADD_INS (IED1_MODBUS.IREG_00000, IED1_MODBUS.IREG_00001) | INS          |

**Figure 3.19 ADD\_INS Example**

## ADD\_MV

This function adds the instMag of two MV tags.

Inputs:

IN1, IN2 : MV

Output:

Returns modified MV tag as follows:

- instMag is the result of IN1.instMag + IN2.instMag
- time is the most recent time between the two input MV tags
- q is the result of merging the quality attributes of IN1 and IN2 to reflect the worse case

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression                                | SE Data Type |
|----------------------|--------------|--|--------------|
| SCADA1_DNP.AI_0000   | MV           | ADD_MV(Feeder1_DNP.AI_0000, Feeder1_DNP.AI_0001) | MV           |

**Figure 3.20 ADD\_MV Example**

## ADD\_vector\_t

This function takes two vectors and returns the vector sum of their values (by converting them to rectangular coordinates and then adding real and imaginary parts).

Inputs:

IN1, IN2 : vector\_t

Output:

Returns modified vector\_t tag of the sum of the two inputs

Example in Tag Processor:

| Destination Tag Name  | DT Data Type | Source Expression                     | SE Data Type |
|-----------------------|--------------|---------------------------------------|--------------|
| Vector.Vec1_Plus_Vec2 | VECTOR_T     | ADD_vector_t(Vector.Vec1,Vector.Vec2) | VECTOR_T     |

**Figure 3.21 ADD\_vector\_t Example**

## AND\_SPS

This function performs a logical AND on the stVal of two SPS tags.

Inputs:

IN1, IN2 : SPS

Output:

Returns modified SPS tag as follows:

- stVal is the result of IN1.stVal AND IN2.stVal
- time is the most recent time between the two input SPS tags
- q is the result of merging the quality attributes of IN1 and IN2 to reflect the worse case

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression                                  | SE Data Type |
|----------------------|--------------|--|--------------|
| SCADA1_DNP.BI_0000   | SPS          | AND_SPS (Feeder1_DNP.BI_0000, Feeder1_DNP.BI_0001) | SPS          |

**Figure 3.22 AND\_SPS Example**

## DIV\_CMV

This function divides the instCVal of the first CMV tag by that of the second CMV tag by first dividing the magnitude of the first CMV by that of the second CMV and then subtracting the angle of the second CMV from that of the first.

Inputs:

IN1, IN2 : CMV

Output:

First returns modified CMV tag as follows:

- instCVal is the result of IN1.instCVal / IN2.instCVal
- time is the most recent time between the two input CMV tags
- q is the result of merging the quality attributes of IN1 and IN2 to reflect the worse case

Example in Tag Processor:

| Destination Tag Name        | DT Data Type | Source Expression                                 | SE Data Type |
|-----------------------------|--------------|---|--------------|
| VirtualTagList1.Status_0000 | CMV          | DIV_CMV(Feeder1.Status_0000, Feeder1.Status_0002) | CMV          |

**Figure 3.23 DIV\_CMV Example**

## DIV\_INS

This function divides the stVal of the first INS tag by that of the second INS tag.

Inputs:

IN1, IN2 : INS

Output:

Returns modified INS tag as follows:

- stVal is the result of IN1.stVal / IN2.stVal
- time is the most recent time between the two input INS tags
- q is the result of merging the quality attributes of IN1 and IN2 to reflect the worse case

Example in Tag Processor:

| Destination Tag Name  | DT Data Type | Source Expression  | SE Data Type |
|-----------------------|--------------|--|--------------|
| HMI_MODBUS.IREG_00000 | INS          | DIV_INS (IED1_MODBUS.IREG_00000, IED1_MODBUS.IREG_00001) | INS          |

**Figure 3.24 DIV\_INS Example**

## DIV\_MV

This function divides the instMag of the first MV tag by that of the second MV tag.

Inputs:

IN1, IN2 : MV

Output:

Returns modified MV tag as follows:

- instMag is the result of IN1.instMag / IN2.instMag
- time is the most recent time between the two input MV tags
- q is the result of merging the quality attributes of IN1 and IN2 to reflect the worse case

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression                                 | SE Data Type |
|----------------------|--------------|---|--------------|
| SCADA1_DNP.AI_0000   | MV           | DIV_MV (Feeder1_DNP.AI_0000, Feeder1_DNP.AI_0001) | MV           |

**Figure 3.25 DIV\_MV Example**

## DIV\_vector\_t

This function divides the first vector\_t tag by the second vector\_t tag.

Inputs:

IN1, IN2 : vector\_t

Output:

Returns a vector\_t of the quotient of IN1 divided by IN2.

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression                            | SE Data Type |
|----------------------|--------------|--|--------------|
| Vector.quotient      | VECTOR_T     | DIV_vector_t(Vector.dividend,Vector.divisor) | VECTOR_T     |

**Figure 3.26 DIV\_vector\_t Example**

## EQ\_vector\_t

This function takes two vector\_t data types as inputs and evaluates their equivalence as vectors. Vectors that have different magnitudes or angles but which resolve to the same polar coordinate will be considered equivalent. For example, both  $1\angle 30^\circ$  and  $-1\angle -150^\circ$  are considered equivalent, and in such a case, the function will return True.

Inputs:

IN1, IN2 : vector\_t

Output:

Returns a Boolean value of True if both magnitudes and angles are equivalent; False otherwise.

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression                    | SE Data Type |
|----------------------|--------------|--------------------------------------|--------------|
| Vector.AreEqual      | BOOL         | EQ_vector_t(Vector.Vec1,Vector.Vec2) | BOOL         |

**Figure 3.27 EQ\_vector\_t Example**

## MULT\_CMV

This function multiplies the instCVal of the first CMV tag by that of the second CMV tag by first multiplying the magnitudes of each CMV and then adding the angles of each CMV.

Inputs:

IN1, IN2 : CMV

Outputs:

Returns modified CMV tag as follows:

- instCVal is the result of IN1.instCVal \* IN2.instCVal
- time is the most recent time between the two input CMV tags
- q is the result of merging the quality attributes of IN1 and IN2 to reflect the worse case

Example in Tag Processor:

| Destination Tag Name        | DT Data Type | Source Expression                                  | SE Data Type |
|-----------------------------|--------------|--|--------------|
| VirtualTagList1.Status_0000 | CMV          | MULT_CMV(Feeder1.Status_0000, Feeder1.Status_0002) | CMV          |

**Figure 3.28 MULT\_CMV Example**

## MULT\_INS

This function multiplies the stVal of the first INS tag by that of the second INS tag.

Inputs:

IN1, IN2 : INS

Output:

Returns modified INS tag as follows:

- stVal is the result of IN1.stVal \* IN2.stVal
- time is the most recent time between the two input INS tags
- q is the result of merging the quality attributes of IN1 and IN2 to reflect the worse case

Example in Tag Processor:

| Destination Tag Name  | DT Data Type | Source Expression   | SE Data Type |
|-----------------------|--------------|---|--------------|
| HMI_MODBUS.IREG_00000 | INS          | MULT_INS (IED1_MODBUS.IREG_00000, IED1_MODBUS.IREG_00001) | INS          |

**Figure 3.29 MULT\_INS Example**

## MULT\_MV

This function multiplies the instMag of the first MV tag by that of the second MV tag.

Inputs:

IN1, IN2 : MV

Output:

Returns modified MV tag as follows:

- instMag is the result of IN1.instmag \* IN2.instMag
- time is the most recent time between the two input MV tags
- q is the result of merging the quality attributes of IN1 and IN2 to reflect the worse case

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression                                  | SE Data Type |
|----------------------|--------------|--|--------------|
| SCADA1_DNP.AI_0000   | MV           | MULT_MV (Feeder1_DNP.AI_0000, Feeder1_DNP.AI_0001) | MV           |

**Figure 3.30 MULT\_MV Example**

## MULT\_vector\_t

This function multiplies the first vector\_t tag by the second vector\_t tag.

Inputs:

IN1, IN2 : vector\_t

Outputs:

Returns a vector\_t of the product of IN1 multiplied by IN2.

Example in Tag Processor:

| Destination Tag Name   | DT Data Type | Source Expression                      | SE Data Type |
|------------------------|--------------|--|--------------|
| Vector.VecA_Cross_VecB | VECTOR_T     | MULT_vector_t(Vector.VecA,Vector.VecB) | VECTOR_T     |

**Figure 3.31 MULT\_vector\_t Example**

## NORM\_vector\_t

This function receives a vector\_t data type with either a positive or negative magnitude and an angle of any arbitrary floating-point value. It will produce an equivalent vector\_t with a positive magnitude and an angle evaluated between -180 degrees and +180 degrees such that it equivalently represents the original vector.

Inputs:

IN : vector\_t

Output:

Returns modified vector\_t tag with a positive magnitude and an angle wrapped between -180 and +180 degrees (inclusive of +180).

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression          | SE Data Type |
|----------------------|--------------|----------------------------|--------------|
| Vector.Vec1_Norm     | VECTOR_T     | NORM_vector_t(Vector.Vec1) | VECTOR_T     |

**Figure 3.32 NORM\_vector\_t Example**

## NOT\_SPS

This function performs a logical NOT on the stVal of SPS tag.

Inputs:

IN : SPS

Output:

Returns modified SPS tag as follows:

- stVal is the result of NOT (IN1.stVal)
- time is the time of IN
- q is the quality of IN

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression             | SE Data Type |
|----------------------|--------------|-------------------------------|--------------|
| SCADA1_DNP.BI_0000   | SPS          | NOT_SPS (Feeder1_DNP.BI_0000) | SPS          |

**Figure 3.33 NOT\_SPS Example**

## OR\_operSPC

This function effectively performs a logical OR of ctlVal of the first operSPC and that of the second operSPC.

Inputs:

IN1, IN2 : operSPC

Output:

Returns modified operSPC tag as follows:

IF (IN1.ctlVal = True) AND (IN1.q.operatorBlocked = FALSE)  
 OR\_operSPC := IN1

ELSEIF IN2.ctlVal = True) AND (IN2.q.operatorBlocked = FALSE)  
 OR\_operSPC := IN2

Example in Tag Processor:

| Destination Tag Name          | DT Data Type | Source Expression   | SE Data Type |
|-------------------------------|--------------|---|--------------|
| Feeder1_DNP.BO_0000.operClose | OPERSPC      | OR_operSPC (SCADA1_DNP.BO_0000.operClose, SCADA2_DNP.BO_0000.operClose) | OPERSPC      |

**Figure 3.34 OR\_operSPC Example**

## OR\_SPS

This function performs a logical OR on the stVal of two SPS tags.

Inputs:

IN1, IN2 : SPS

Output:

Returns modified SPS tag as follows:

- stVal is the result of IN1.stVal OR IN2.stVal
- time is the most recent time between the two input SPS tags
- q is the result of merging the quality attributes of IN1 and IN2 to reflect the worse case

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression                                 | SE Data Type |
|----------------------|--------------|---|--------------|
| SCADA1_DNP.BI_0000   | SPS          | OR_SPS (Feeder1_DNP.BI_0000, Feeder1_DNP.BI_0001) | SPS          |

**Figure 3.35 OR\_SPS Example**

## REF\_vector\_t

This function calculates the angle between the reference angle and the input quantity and produces a vector with its angle adjusted proportionally to the referenced vector.

Inputs:

Ref : vector\_t

In : vector\_t

Output:

Returns the reference-adjusted equivalent of the vector.

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression                    | SE Data Type |
|----------------------|--------------|--------------------------------------|--------------|
| Vector.VecA_Refd     | VECTOR_T     | REF_vector_t(Vector.Ref,Vector.VecA) | VECTOR_T     |

**Figure 3.36 REF\_vector\_t Example**

## ROOT\_CMV

This function calculates the square root of the instCVal of the input CMV tag by first evaluating the square root of the magnitude component and then dividing the angle component by two.

Inputs:

IN : CMV

Output:

Returns modified CMV tag as follows:

- instCVal is the result of  $\sqrt{\{IN1.instCVal\}}$
- time is directly populated from the input tag
- q is directly populated from the input tag

Example in Tag Processor:

| Destination Tag Name        | DT Data Type | Source Expression             | SE Data Type |
|-----------------------------|--------------|-------------------------------|--------------|
| VirtualTagList1.Status_0000 | CMV          | ROOT_CMV(Feeder1.Status_0000) | CMV          |

**Figure 3.37 ROOT\_CMV Example**

## ROOT\_MV

This function calculates the square root of the instMag of the input MV tag.

Inputs:

IN : MV

Output:

Returns modified MV tag as follows:

- instMag is the result of  $\sqrt{\{IN1.instMag\}}$
- time is directly populated from the input tag
- q is directly populated from the input tag

Example in Tag Processor:

| Destination Tag Name        | DT Data Type | Source Expression            | SE Data Type |
|-----------------------------|--------------|------------------------------|--------------|
| VirtualTagList1.Status_0001 | MV           | ROOT_MV(Feeder1.Status_0001) | MV           |

**Figure 3.38 ROOT\_MV Example**

## SCALE\_CMV

This function scales the instCval.mag, using the input parameters.

OFFSET, CEILING, and FLOOR inputs are optional. OFFSET defaults to 0, while CEILING and FLOOR default to the maximum positive and negative values representable by the REAL data type, respectively.

### NOTE

When using a negative scaling factor or offset, it is possible to generate vector values with negative magnitudes, which may be undesirable when representing a phasor or vector quantity. If this occurs, use either NORM\_vector\_t on page 602 or ABS\_vector\_t on page 596 to normalize both the magnitude to positive and the angle to a value bound by  $\pm 180$  degrees or 0-360 degrees, respectively.

Inputs:

IN : CMV

SCALE : REAL

OFFSET : REAL (Optional)

CEILING : REAL (Optional)

FLOOR : REAL (Optional)

Output:

Returns modified CMV tag as follows:

- instCVal.mag is the result of:

(\* Calculate the scaling \*)

```
SCALE_CMV.instCVal.mag := IN.instCVal.mag * SCALE +
OFFSET;
```

(\* Check for ceiling and floor \*)

```
IF SCALE_CMV.instCVal.mag > CEILING THEN
```

```
SCALE_CMV.instCVal.mag := CEILING;
```

```
END_IF
```

```
IF SCALE_CMV.instCVal.mag < FLOOR THEN
```

```
SCALE_CMV.instCVal.mag := FLOOR;
```

```
END_IF
```

- time is the time of IN

- q is the quality of IN

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression                                    | SE Data Type |
|----------------------|--------------|--|--------------|
| SCADA_DNP.AI_0020    | MV           | SCALE_CMV (SEL_3515_1_SEL.VA , 100.0, 10000, 1E7, 0) | CMV          |

**Figure 3.39 SCALE\_CMV Example**

## SCALE\_INS

This function scales the stVal by using the input parameters.

OFFSET, CEILING, and FLOOR inputs are optional. OFFSET defaults to 0, while CEILING and FLOOR default to the maximum positive and negative values representable by the DINT data type, respectively.

Inputs:

IN : INS

SCALE : REAL

OFFSET : DINT (Optional)

CEILING : DINT (Optional)

FLOOR : DINT (Optional)

Output:

Returns modified INS tag as follows:

- stVal is the result of:

(\* Calculate the scaling \*)

```
SCALE_INS.stVal := IN.stVal * SCALE + OFFSET;
```

```
(* Check for ceiling and floor *)
IF SCALE_INS.stVal > CEILING THEN
    SCALE_INS.stVal := CEILING;
END_IF
IF SCALE_INS.stVal < FLOOR THEN
    SCALE_INS.stVal := FLOOR;
END_IF
► time is the time of IN
► q is the quality of IN
```

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression  | SE Data Type |
|----------------------|--------------|--|--------------|
| SCADA_DNP.AI_0022    | MV           | SCALE_INS( SEL_3530_1_SEL.Rx_UW_1_F800, 10, 0, 10000000, -10000000 ) | INS          |

**Figure 3.40 SCALE\_INS Example**

## SCALE\_MV

This function scales the instMag, using the input parameters.

OFFSET, CEILING, and FLOOR inputs are optional. OFFSET defaults to 0, while CEILING and FLOOR default to the maximum positive and negative values representable by the REAL data type, respectively.

Inputs:

```
IN : MV
SCALE : REAL
OFFSET : REAL (Optional)
CEILING : REAL (Optional)
FLOOR : REAL (Optional)
```

Output:

Returns modified MV tag as follows:

```
► instMag is the result of:
(* Calculate the scaling *)
SCALE_MV.instMag := IN.instMag * SCALE + OFFSET;
(* Check for ceiling and floor *)
IF SCALE_MV.instMag > CEILING THEN
    SCALE_MV.instMag := CEILING;
END_IF
IF SCALE_MV.instMag < FLOOR THEN
    SCALE_MV.instMag := FLOOR;
END_IF
► time is the time of IN
► q is the quality of IN
```

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression   | SE Data Type |
|----------------------|--------------|---|--------------|
| SCADA_DNP.AI_0021    | MV           | SCALE_MV ( SEL_3515_1_SEL.P_WATTS , 50, 200, 1000000, 0 ) | MV           |

**Figure 3.41 SCALE\_MV Example**

## SCALE\_BCR

This function scales the actVal, using the input parameters.

OFFSET, CEILING, and FLOOR inputs are optional. OFFSET and FLOOR default to 0, while CEILING defaults to the maximum positive value representable by the UDINT data type.

Inputs:

IN : BCR  
 SCALE : REAL  
 OFFSET : LINT (Optional)  
 CEILING : UDINT (Optional)  
 FLOOR : UDINT (Optional)

Output:

Returns modified BCR tag as follows:

► actVal is the result of:

```
(* Calculate the scaling *)
SCALE_BCR.actVal := IN.actVal * SCALE + OFFSET;
(* Check for ceiling and floor *)
IF SCALE_BCR.actVal > CEILING THEN
    SCALE_BCR.actVal := CEILING;
END_IF
IF SCALE_BCR.actVal < FLOOR THEN
    SCALE_BCR.actVal := FLOOR;
END_IF
```

► time is the time of IN

► q is the quality of IN

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression  | SE Data Type |
|----------------------|--------------|--|--------------|
| SCADA_DNP.AI_0021    | MV           | SCALE_BCR(SEL_3530_1_SEL.Rx_UW_1_F807, 10, 0, 1000000, 10) | BCR          |

**Figure 3.42 SCALE\_BCR Example**

## SCALE\_vector\_t

This function uses the input parameters to scale the magnitude of a vector\_t.

OFFSET, CEILING, and FLOOR inputs are optional. OFFSET defaults to 0, and CEILING and FLOOR default to the maximum positive and negative values representable by the REAL data type, respectively.

### NOTE

When using a negative scaling factor or offset, it is possible to generate vector values with negative magnitudes, which may be undesirable when representing a phasor or vector quantity. If this occurs, use either NORM\_vector\_t on page 602 or ABS\_vector\_t on page 596 to normalize both the magnitude to positive and the angle to a value bound by  $\pm 180$  degrees or 0-360 degrees, respectively.

Inputs:

```
IN : vector_t
SCALE : REAL
OFFSET : REAL (Optional)
CEILING : REAL (Optional)
FLOOR : REAL (Optional)
```

Output:

Returns modified vector\_t tag as follows:

- mag is the result of:
 

```
(* Calculate the scaling *)
SCALE_vector_t.mag := IN.mag * SCALE + OFFSET;
(* Check for ceiling and floor *)
IF SCALE_vector_t.mag > CEILING THEN
  SCALE_vector_t.mag := CEILING;
END_IF
IF SCALE_vector_t.mag < FLOOR THEN
  SCALE_vector_t.mag := FLOOR;
END_IF
```

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression                            | SE Data Type |
|----------------------|--------------|--|--------------|
| Vector.Scaled        | VECTOR_T     | SCALE_vector_t(Vector.VecA,50,200,1000000,0) | VECTOR_T     |

**Figure 3.43 SCALE\_vector\_t Example**

## SUB\_INS

This function subtracts the stVal of two INS tags.

Inputs:

IN1, IN2 : INS

Output:

**Special Tag Processor Functions**

Returns modified INS tag as follows:

- stVal is the result of IN1.stVal – IN2.stVal
- time is the most recent time between the two input INS tags
- q is the result of merging the quality attributes of IN1 and IN2 to reflect the worse case

Example in Tag Processor:

| Destination Tag Name  | DT Data Type | Source Expression  | SE Data Type |
|-----------------------|--------------|--|--------------|
| HMI_MODBUS.IREG_00000 | INS          | SUB_INS (IED1_MODBUS.IREG_00000, IED1_MODBUS.IREG_00001) | INS          |

**Figure 3.44 SUB\_INS Example**

## **SUB\_MV**

This function subtracts the instMag of two MV tags.

Inputs:

IN1, IN2 : MV

Output:

Returns modified MV tag as follows:

- instMag is the result of IN1.instMag – IN2.instMag
- time is the most recent time between the two input MV tags
- q is the result of merging the quality attributes of IN1 and IN2 to reflect the worse case

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression                                 | SE Data Type |
|----------------------|--------------|---|--------------|
| SCADA1_DNP.AI_0000   | MV           | SUB_MV (Feeder1_DNP.AI_0000, Feeder1_DNP.AI_0001) | MV           |

**Figure 3.45 SUB\_MV Example**

## **SUB\_CMV**

This function subtracts the instCVal of two CMV tags (first converting to rectangular coordinates, then subtracting the real and imaginary parts of the second CMV from those of the first).

Inputs:

IN1, IN2 : CMV

Output:

Returns modified CMV tag as follows:

- instCVal is the result of IN1.instCVal – IN2.instCVal
- time is the most recent time between the two input CMV tags
- q is the result of merging the quality attributes of IN1 and IN2 to reflect the worse case

Example in Tag Processor:

| Destination Tag Name        | DT Data Type | Source Expression                                 | SE Data Type |
|-----------------------------|--------------|---|--------------|
| VirtualTagList1.Status_0000 | CMV          | SUB_CMV(Feeder1.Status_0000, Feeder1.Status_0002) | CMV          |

**Figure 3.46 SUB\_CMV Example**

## SUB\_vector\_t

This function takes two vectors and returns the result of the first vector minus the second.

Inputs:

IN1, IN2 : vector\_t

Output:

Returns the value of the first vector minus the second.

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression                     | SE Data Type |
|----------------------|--------------|---------------------------------------|--------------|
| Vector.VecAB         | VECTOR_T     | SUB_vector_t(Vector.VecA,Vector.VecB) | VECTOR_T     |

**Figure 3.47 SUB\_vector\_t Example**

## XOR\_SPS

This function performs a logical XOR on the stVal of two SPS tags.

Inputs:

IN1, IN2 : SPS

Output:

Returns modified SPS tag as follows:

- ▶ stVal is the result of IN1.stVal XOR IN2.stVal
- ▶ time is the most recent time between the two input SPS tags
- ▶ q is the result of merging the quality attributes of IN1 and IN2 to reflect the worse case

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression                                  | SE Data Type |
|----------------------|--------------|--|--------------|
| SCADA1_DNP.BI_0000   | SPS          | XOR_SPS (Feeder1_DNP.BI_0000, Feeder1_DNP.BI_0001) | SPS          |

**Figure 3.48 XOR\_SPS Example**

**This page intentionally left blank**

---

---

## S E C T I O N   4

---

# Engineering Access

## Overview

---

A transparent connection provides a data tunnel between two or more Ethernet or serial communications ports. Each port configured in a transparent connection is an access point. The SEL Real-Time Automation Controller (RTAC) redirects communications traffic from one access point, or port, through a second access point and vice versa. We designate one access point as the source. This access point, typically a PC used for engineering access, third-party software, etc., initiates communication. Subsequent access points are the destinations of the connection. These are typically IEDs connected to the RTAC. The RTAC links access points together through an access point router (APR). In this way, the APR enables the RTAC as a port switch. Configure access points and a maximum of 100 APRs in ACCELERATOR RTAC® SEL-5033 Software to accommodate one or many transparent connections.

There are two main categories of transparent connections:

1. Standard transparent: enables ASCII tunneling through a port while leaving undisturbed the underlying binary communication occurring on that port. An example would be SEL protocol interleaving ASCII engineering access with an SEL relay while the RTAC is polling the relay via Fast Meter commands.
2. Direct transparent: enables binary or ASCII tunneling through a port to an IED but turns off the underlying communication occurring on that port. An example would be third-party software configuring an IED with Modbus. The RTAC will discontinue polling the Modbus IED on that port during a direct transparent session and will direct tunneled messages through to the IED instead.

Within an APR, you can also perform actions on the strings as they pass from source to destination and back. Actions you can perform include issuing commands, stripping characters from a string, inserting tag values into a string, and searching a string for a given value.

## Configuration

---

The following examples illustrate how to configure the RTAC for standard transparent and direct transparent connections.

#### Example 4.1 Standard Transparent Connection

Configure the RTAC as a port switch to access four SEL relays from a remote engineering PC. The RTAC will prompt you for a password. After you enter the password, you can use the **PORT** command to switch to the ports attached to the relays. This example contains five access points:

- ▶ One Ethernet connection into the RTAC (source)
- ▶ Four SEL relays connected to the RTAC via direct serial connections (destinations)

Step 1. Open a blank project in ACSELERATOR RTAC and insert the relays and access point.

Step 2. On the ribbon menu, click **Insert** and then **SEL**.

Step 3. Select an SEL-351S relay that uses the SEL protocol as a Client-Serial.

Step 4. Right-click on the inserted relay, select **Copy**, and then paste the copy on Devices. Paste three copies for a total of four SEL-351S IEDs for this example. Rename the copies as shown in *Figure 4.1*.


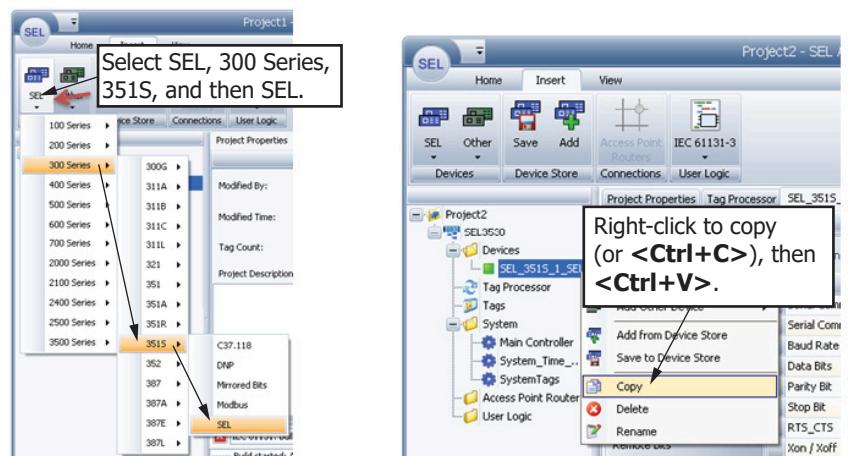


Figure 4.1 Configure Four SEL Access Points


Step 5. On the ribbon menu, click **Insert** and then **Other**.

Step 6. Insert an access point and configure this access point as **Ethernet Incoming**. This tells the RTAC that the access point will be listening for a connection. Conversely, you can configure other access points as outgoing to create connections to generic IEDs, etc. Client protocols, such as the SEL relays we inserted, already have an outgoing access point built in.

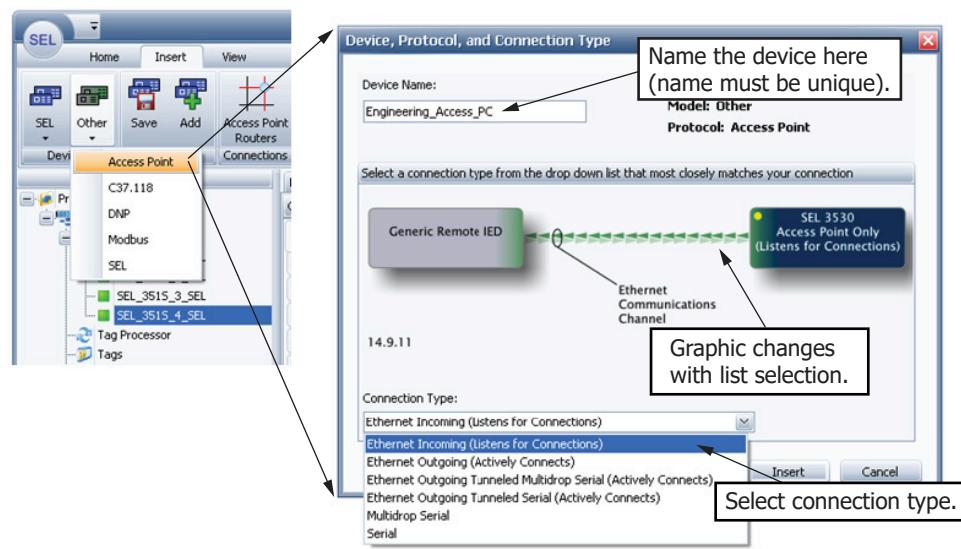

**Figure 4.2 Insert Source Access Point**

Step 7. Configure the access point **Local Port Number** in the **Settings** tab of the new access point. You will address this IP port when you create the tunnel session with the RTAC. There is no IP address setting because all active network interfaces on the RTAC will listen for the connection.

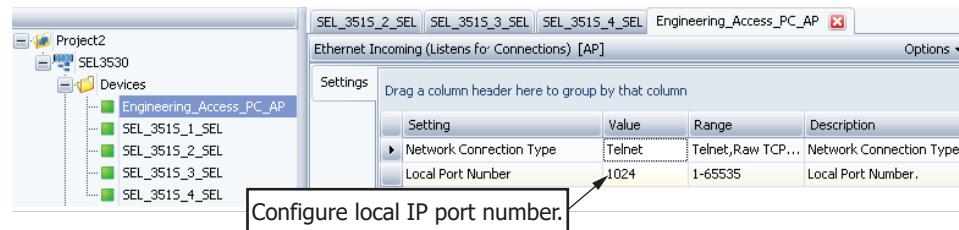


**Figure 4.3 Configure Source Access Point**

Step 8. On the **Insert** ribbon, click **Access Point Routers**. In this example, we want the RTAC to emulate an SEL-2030, so select each of the SEL\_351S\_n\_SEL\_TAP entries. See *Figure 4.4*.

Every device added to the RTAC is an access point. SEL IEDs have an extra access point designated \_TAP for transparent connection sessions. Select the \_TAP entry to permit the SEL binary protocol to continue to poll the SEL IED during an ASCII transparent connection session. Select the \_AP entry to create a direct transparent connection that will stop all polling during a transparent connection with the device. *Example 4.2* describes the setup of this type of connection.

Step 9. Select **Enable Legacy Commands** to force the RTAC to require a login and the **PORT** command in the tunnel session. Configure as illustrated in *Figure 4.4*.

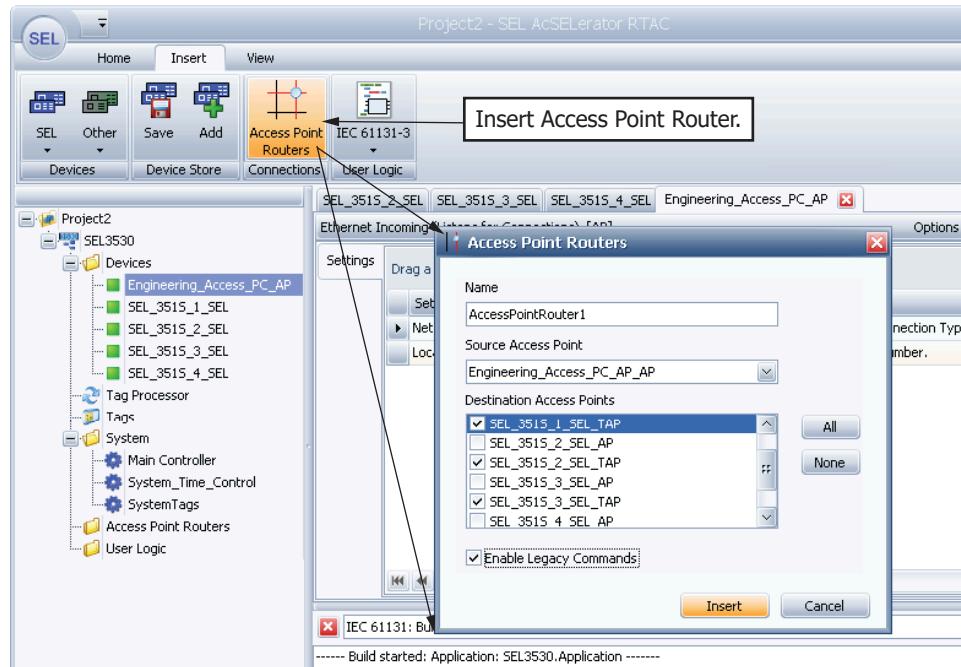

**Figure 4.4 Insert Access Point Router**

Step 10. Save the project and notice that this example created one APR automatically for each device. Each of the four APRs has the same source access point.


Step 11. Click on **AccessPointRouter1\_1**.

Step 12. Change the **Source\_Authentication** setting to **TRUE** and save.

This setting will force the RTAC to ask for a username and password to gain access to this APR. The username and password are configured via the RTAC web interface as described in *Section 7: Security and Account Management*. This setting is also global to all APRs. Configure for a particular group, so you only have to change it in one of the four APRs that are created in this example.

Step 13. Load the project into the RTAC.

Step 14. Test the project by opening HyperTerminal (or other terminal emulation program) as a Winsock connection. Enter the IP address of the connected RTAC and the Local Port Number you configured in *Engineering\_Access\_PC\_AP*. Click **OK**.

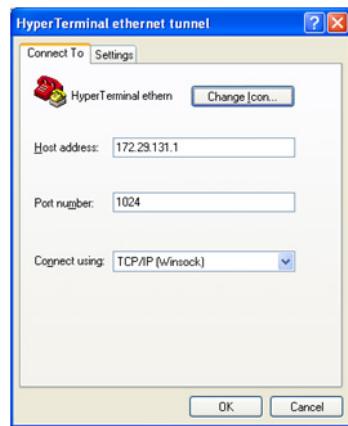**Figure 4.5 HyperTerminal Configuration**

Step 15. Press the connect icon in HyperTerminal to connect and log in to the RTAC.

Type **PORT n**, where *n* is the Legacy\_Port\_Command\_ID corresponding to the desired port number, to connect transparently to one of the SEL-351S relays. Press <**Ctrl+D**> to exit a port.

The Legacy\_Port\_Command\_ID setting field displays the ID that you will use for each APR. The default ID for the first APR is 1, with subsequent APR IDs incrementing thereafter. Had we also selected the \_AP (direct transparent) APs as shown in *Figure 4.4*, we would have available additional APRs with unique port command IDs for each direct transparent connection. To open a transparent connection to **PORT 1**, type **Port 1** while connected to the RTAC through HyperTerminal to gain interleaved access to the device on PORT 1. To open a direct transparent connection on PORT1, type **Port 1 D** while connected to the RTAC through HyperTerminal to gain direct access to the relay on PORT 1. Configure the unique Legacy\_Port\_Command\_ID, along with the default **PORT** command in Source\_Rx\_Message under POU Pin Settings within each APR.


**Example 4.2 Direct Transparent Connection**

This example shows how you can transparently connect to an IED without logging on to the RTAC or entering a **PORT** command. As soon as you connect to the RTAC, the APR directs communications to the access point you have configured in your project. In this example, that access point is a Modbus device. But you can follow the same steps to create a standard interleaved transparent connection to an SEL relay by configuring an SEL client instead of a Modbus client in this example.

Configure the RTAC to poll a Modbus IED. Then, use third-party software running on a PC to communicate with that IED through the RTAC. This example assumes that you have a Modbus IED connected to the RTAC on one serial port and an application running on your PC that can use Modbus protocol to configure the IED. The PC is connected to the RTAC on another serial port.


- Step 1. On the **Insert** ribbon, click **Other** and then **Modbus**.
- Step 2. Configure the Modbus device as **Client-Serial**.
- Step 3. Configure to poll some points from a connected Modbus IED. See *Section 2: Communications* for details on configuring a Modbus client.
- Step 4. Ensure that communications parameters (data rate, etc.) are correct in the Modbus client connection for the Modbus IED.
- Step 5. From the **Insert** ribbon, click **Other** and then **Access Point**.  
Configure as **Serial**.
- Step 6. Ensure that communications parameters are correct in the Serial access point connection for the Modbus PC application.
- Step 7. Insert an APR. This time, do not select Enable Legacy Commands. See *Figure 4.6*.

We want the APR to connect the source access point (configuration software on the PC) automatically with the destination access point (Modbus IED) when the source initiates a connection.

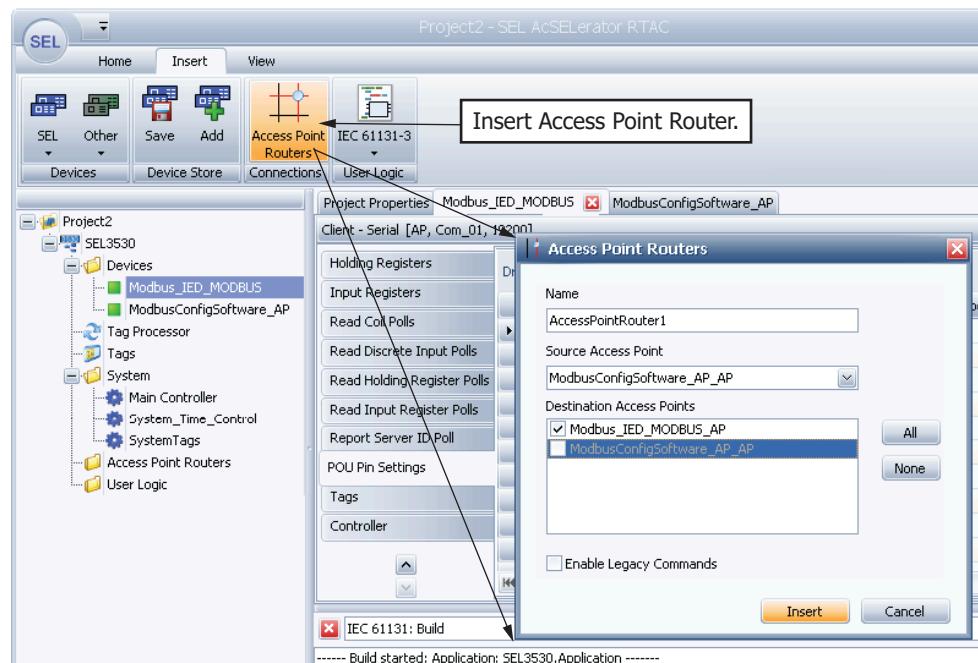

**Figure 4.6 Direct Transparent Modbus**

- Step 8. Select the new access point router from the left menu. In this example, it is **AccessPointRouter\_1**.
- Step 9. Click on the **POU Pin Settings** tab.
- Step 10. Set **Auto\_Connect = TRUE**. This enables automatic connection and eliminates the need to log in or use the **PORT** command to connect manually to a port.

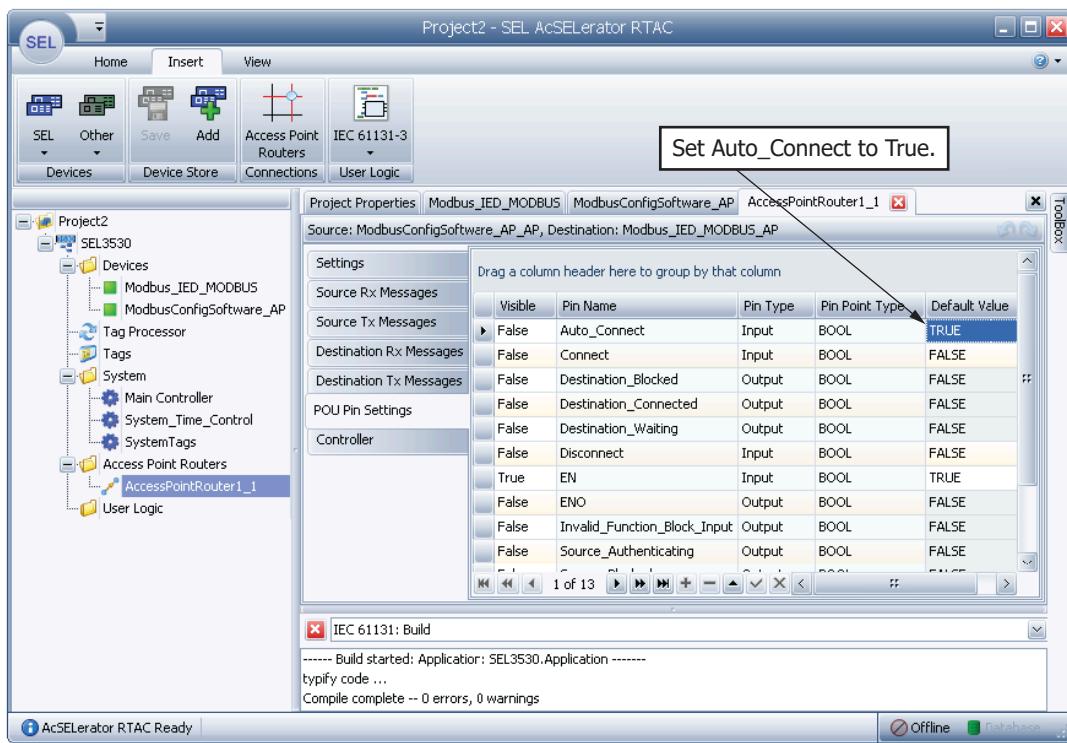

**Figure 4.7 Enable Autoconnection**

Step 11. Save the project and load it into the RTAC.

To test this project, you will need a Modbus IED connected to the serial port Com\_01. You will also need a PC that is running a Modbus software application designed to connect to the IED. Connect the PC to Com\_02. When the Modbus software attempts to communicate, the RTAC will automatically stop polling the Modbus IED and direct all communications traffic from Com\_02 to Com\_01. The RTAC will redirect data it receives on Com\_01 to Com\_02. When Com\_2 stops receiving data from the PC, the RTAC will allow its Modbus polling task to resume polling the IED on Com\_01.

---

Along with transparent or direct transparent communications, you can also configure the APR to perform special actions. Each action is associated with either all messages or, more typically, with the messages sent to or received from the source or the destination. To create an action on a message, perform the following steps:

- Step 1. Determine what message you want the action to apply to. Options are **Source Rx Messages**, **Destination Rx Messages**, **Source Tx Messages**, and **Destination Tx Messages**.
- Step 2. Click on the corresponding tab in the APR configuration and then click on the + box at the bottom of the screen to add the number of messages needed. For example, if you needed the action to send the MET command to the destination, click on Destination Tx Messages and add one message. When you add a message, the software will

create three new POU pins in the POU pin settings with a name associated with the new message you created. For example, if you created one new Destination Tx Message, the software creates the following new pins:

| Pin Name                            | Pin Type | Usage  |
|-------------------------------------|----------|--|
| Destination_Tx_Message_1            | Input    | Use this pin to configure the string value of the message.   |
| Trigger_Destination_Tx_Message_1    | Input    | Toggle this pin from <b>False</b> to <b>True</b> to force the transmit of this message to the destination. |
| Trigger_Destination_Tx_Message_1_DN | Output   | This pin toggles <b>TRUE</b> for one process cycle after the trigger input has been asserted.              |

Step 3. Configure the string value in the new message.

Step 4. Optionally, use the trigger and DN pins to perform the actions needed.

By entering information in the transmit and/or receive strings in a special syntax, you can cause the APR to perform four main categories of special functions:

- ▶ Commands
- ▶ ASCII control and key characters
- ▶ Tag name replacement
- ▶ ASCII string hex representation

## Commands

Commands are special syntax that perform actions when they are interpreted by the RTAC firmware. Commands are always enclosed in curly brackets {} and are ASCII characters that are not case sensitive. Some commands apply to both source and destination, whereas other commands are specific to only source or destination. *Table 4.1* shows a list of available commands with XX indicating you must specify **SOURCE** or **DESTINATION** as part of the command.

**Table 4.1 APR Command Summary**

| Command              | Function  |
|----------------------|---|
| {CONNECT}            | Connects the source and destination access points. Same functionality as asserting the Connect input pin.   |
| {DISCONNECT}         | Disconnects the source and destination access points. Same functionality as asserting the Disconnect input pin.   |
| {ENABLE_HW_FLOW_XX}  | Enables hardware flow control on access points associated with serial port.   |
| {DISABLE_HW_FLOW_XX} | Disables hardware flow control on access points associated with serial port.  |
| {ENABLE_SW_FLOW_XX}  | Enables software flow control on access points associated with serial port.   |
| {DISABLE_SW_FLOW_XX} | Disables software flow control on access points associated with serial port.  |
| {ASSERT_RTS_XX}      | Forces RTS high on serial ports associated with this access point. Only applies if HW flow control is turned off by {DISABLE_HW_FLOW_XX} or the setting RTS_CTS is FALSE. |

| Command                      | Function  |
|------------------------------|---|
| {DEASSERT_RTS_XX}            | Removes the force RTS high condition on serials ports associated with this access point. Only applies if HW flow control is turned off by {DISABLE_HW_FLOW_XX} or the setting RTS_CTS is FALSE.   |
| {WAIT_FOR_CTS_XX}            | Inhibits transmit until CTS asserts. This command is reset when the transparent connection is terminated; so, it must be issued after a connection is made to be active.  |
| {ASSERT_SERIAL_PORT_POWER}   | Asserts serial-port power.  |
| {DEASSERT_SERIAL_PORT_POWER} | Deasserts forced serial-port power.   |
| {DELAY_Y_XX}                 | Adds a delay of Y, where Y is an integer between 0–60000 ms.  |
| {ECHO_ON_XX}                 | Enables character echo for Source Tx or Destination Tx or both.   |
| {ECHO_OFF_XX}                | Disables character echo for Source Tx or Destination Tx or both.  |
| {TIME_OUT_Y_XX}              | Terminates the transparent connection if no characters are received in Y seconds, where Y is an integer between 0–60000 seconds. A value of 0 disables time out.  |
| {REPLACE_XX arg1   arg2}     | Replaces characters in a data stream entering the RTAC in the direction specified by XX or both directions when XX is left blank. For example, <b>REPLACE_SOURCE</b> replaces characters coming in the source access point.   |
| {STOP_REPLACE_XX}            | Used to stop replacing characters/bytes in the direction specified by XX or both directions when XX is left blank.  |
| {STRIP_XX argument}          | Used to strip characters, where argument is a sequence of characters that will be stripped from the data stream entering the RTAC in the direction specified by XX or both directions when XX is left blank (i.e., <b>STRIP_SOURCE</b> strips characters coming in the Source Access point). If numerous strip commands are issued, the strip function is processed in the order that they were received. |
| {STOP_STRIP_XX}              | Stops all stripping of data. However, the {FAST_OP_ENABLE} and {FAST_OP_DISABLE} are still in effect.   |
| {FAST_OP_ENABLE}             | Enables transmitting of SEL Fast Operate commands from the source to destination (destination to source are always permitted). The status of this command is not maintained through device restart.   |
| {FAST_OP_DISABLE}            | Disables SEL Fast Operate commands from source to destination. The status of this command is not maintained through device restart.   |

## String Stripping

Using the **STRIP** command, you can search for and strip out any characters from the incoming string. The syntax is {STRIP\_XX\_argument}, where XX is either **SOURCE** or **DESTINATION**, and argument is a sequence of characters to be stripped from the data stream. If XX is left out, the APR will strip the character sequence from both source and destination streams. Multiple consecutive strip commands are executed in the order they are configured. For example, {STRIP ab} followed by {STRIP bc} applied to the string 'abcdefg' will result in 'cdefg' because the 'ab' was stripped off first, so there was not a match for 'bc'.

Examples:

- ▶ Source\_Tx\_Message\_1 = {STRIP\_SOURCE<SP>} will strip all space characters from the Tx data.
- ▶ Source\_Tx\_Message\_8 = {STRIP\_SOURCE<0104>} would disable a MODBUS Force Coil for Outstation Address 1.

## String Replacement

Use the **REPLACE** command to match character strings and replace with other character strings. Arg1 is the sequence of characters to be replaced by the sequence of characters in arg2. If the length of arg2 is greater than the length of arg1, arg1 is fully populated by arg2 and extra characters from arg2 that do not fit in arg1 are dropped. If the length of arg1 is greater than arg2, arg1 is populated by arg2 characters and all trailing characters in arg1 not replaced by arg2 characters are stripped. White spaces after arg1 and before arg2 are removed. To use literal white spaces at the start or end of these arguments, use the binary notation, i.e., <20>.

Examples:

- Source\_Tx\_Message\_6 = {REPLACE <HT> | <SP>} would replace all horizontal tabs with a space.
- Source\_Tx\_Message\_7 = {REPLACE abc | defg} would replace 'abc' with 'def'.
- Source\_Tx\_Message\_8 = {REPLACE abc | d} would change the string 'abc' to 'd'.

## ASCII Control and Key Characters

You can place ASCII control and key characters in a message string in the SPR. These single-byte strings must be preceded with the dollar sign special character \$. For example, this string has a carriage control and line feed \$R\$L. The \$ also escapes a following special character so that it is treated like a string rather than a special character. You must use two dollar signs, (\$\$), for the following characters: { } [ ] < >. For example, this is a less than sign \$\$<.

Table 4.2 shows examples of using the \$ character. Notice control and key characters are not case sensitive.

**Table 4.2 ASCII Controls and Keys**

| String     | Result          |
|------------|-----------------|
| \$\$       | One dollar sign |
| \$'        | A single quote  |
| \$"        | A double quote  |
| \$L or \$1 | Line feed       |
| \$N or \$n | Newline         |
| \$P or \$p | Form feed       |
| \$R or \$r | Carriage return |
| \$T or \$t | Tab             |
| \$\$ {     | {               |
| \$\$ <     | <               |
| \$\$ ]     | ]               |

You can also wrap the control and key characters with the greater than and less than signs and use the delimiters space, +, -, or \_. For example, all of the following are equivalent representations of carriage return, line feed:

- \$0D\$0A
- \$r\$L
- <CR><LF>
- <CTRL-M><CTRL-J>
- <CTRL M><CTRL J>
- <CTRL\_M><CTRL\_J>
- <CTRL+M><CTRL+J>

A special case ASCII control can be used to append a security check, such as a checksum or cyclic redundancy check (CRC), onto the end of a message. The format is <[XXXX]>, where you replace XXXX with the respective CRC special string. For example, you could send the following string as a Modbus message:

<01047E910009><[CRC\_16\_MODBUS]>

The security check strings available are shown in *Table 4.3*.

**Table 4.3 Security Check Strings**

| <b>Control</b> | <b>Attribute</b>        | <b>Attribute Value</b> |
|----------------|-------------------------|------------------------|
| CRC_8          | Width                   | 8                      |
|                | Polynomial              | 07h                    |
|                | Initial                 | 00h                    |
|                | Reflect data bit order  | True                   |
|                | Reflect CRC bit order   | True                   |
|                | Final XOR               | 00h                    |
| CRC_16         | Width                   | 16                     |
|                | Polynomial              | 8005h                  |
|                | Initial                 | 0000h                  |
|                | Reverse data byte order | False                  |
|                | Reverse CRC byte order  | False                  |
|                | Reflect data bit order  | True                   |
|                | Reflect CRC bit order   | True                   |
|                | Final XOR               | 0000h                  |
| CRC_16_CCITT   | Width                   | 16                     |
|                | Polynomial              | 1021h                  |
|                | Initial                 | FFFFh                  |
|                | Reverse data byte order | False                  |
|                | Reverse CRC byte order  | False                  |
|                | Reflect data bit order  | False                  |

| <b>Control</b> | <b>Attribute</b>        | <b>Attribute Value</b> |
|----------------|-------------------------|------------------------|
| CRC_16_X25     | Reflect CRC bit order   | False                  |
|                | Final XOR               | 0000h                  |
|                | Width                   | 16                     |
|                | Polynomial              | 1021h                  |
|                | Initial                 | FFFFh                  |
|                | Reverse data byte order | False                  |
|                | Reverse CRC byte order  | False                  |
|                | Reflect data bit order  | False                  |
| CRC_16_MODBUS  | Reflect CRC bit order   | False                  |
|                | Final XOR               | 0000h                  |
|                | Width                   | 16                     |
|                | Polynomial              | 8005h                  |
|                | Initial                 | FFFFh                  |
|                | Reverse data byte order | False                  |
|                | Reverse CRC byte order  | True                   |
|                | Reflect data bit order  | True                   |
| CRC_16_DNP     | Reflect CRC bit order   | True                   |
|                | Final XOR               | 0000h                  |
|                | Width                   | 16                     |
|                | Polynomial              | 3D65h                  |
|                | Initial                 | 0000h                  |
|                | Reverse data byte order | False                  |
|                | Reverse CRC byte order  | False                  |
|                | Reflect data bit order  | True                   |
| CRC_16_SEL     | Reflect CRC bit order   | True                   |
|                | Final XOR               | FFFFh                  |
|                | Width                   | 16                     |
|                | Polynomial              | 8005h                  |
|                | Initial                 | FFFFh                  |
|                | Reverse data byte order | False                  |
|                | Reverse CRC byte order  | True                   |
|                | Reflect data bit order  | True                   |
| CRC_32         | Reflect CRC bit order   | True                   |
|                | Final XOR               | 0000h                  |
| CRC_32         | Width                   | 32                     |
|                | Polynomial              | 04C11DB7h              |

| Control     | Attribute               | Attribute Value |
|-------------|-------------------------|-----------------|
| CRC_32_I363 | Initial                 | FFFFFFFh        |
|             | Reverse data byte order | False           |
|             | Reverse CRC byte order  | False           |
|             | Reflect data bit order  | True            |
|             | Reflect CRC bit order   | True            |
|             | Final XOR               | FFFFFFFh        |
|             | Width                   | 32              |
|             | Polynomial              | 04C11DB7h       |
|             | Initial                 | FFFFFFFh        |
|             | Reverse data byte order | False           |
| Checksum    | Reverse CRC byte order  | False           |
|             | Reflect data bit order  | False           |
|             | Reflect CRC bit order   | False           |
|             | Final XOR               | FFFFFFFh        |
|             | 8_Standard              |                 |
| 8_XOR       |                         |                 |
| SEL_FastOp  |                         |                 |
| 16_Standard |                         |                 |

## Tag Name Replacement

If you enter a Virtual Tag tag name in a string in the APR and enclose the tag name in [ ], the actual value of the tag will be used instead of the tag name. For example, if a global tag VirtualTagList1.User\_logged\_off = Joe, then the string, User [VirtualTagList1.User\_logged\_off.strVal] has logged off, will result in User Joe has logged off. You must use a Virtual Tag as the tag name.

## String Capture

You can also capture a value from a string into a Virtual Tag of type STR. The APR will search for the string you have configured and place the data into the Virtual Tag name enclosed in [ ]. For example, configure a Virtual Tag of type STR called VirtualTagList1.new\_password. If the received message is SET PAS 1 OTTER<0A> and the configured string in the APR is SET PAS 1 [VirtualTagList1.new\_password]<0A>, then VirtualTagList1.new\_password.strVal will be set to OTTER.

The APR will gather as many as 255 characters or until the terminating sequence is reached. In the example given, the terminating sequence is a carriage return.


## ASCII String Hex Representation

As in *ASCII Control and Key Characters on page 622*, all characters in the APR strings are considered ASCII characters unless framed in the following special characters: <>, [ ], { } or preceded by \$ or \$\$ . You can, therefore, send out a string of hex values that will not be interpreted as ASCII characters. For example, if you want to send the decimal value 17, you would enter the string <11>. In hexadecimal 11 is decimal 17. This allows you to create and send binary messages, such as Modbus, DNP, or other binary strings through the APR. For example, the string <010407D00005><[CRC\_16\_MODBUS]> is a Modbus read input register poll (Opcode 4) to IED Address 1, polling 5 registers starting at 2000, or 07D0 in hexadecimal.

### Example 4.3 Source Receive String Value Capture

You can monitor incoming messages in an Access Point Router for a certain sequence of characters and then capture the data following the matched sequence into a Virtual Tag of STR type. This example demonstrates monitoring a remote access connection for a set password command to the connected relay, capturing that password, and applying the new password to the SEL client. All of the original receive message is still passed through the APR and only a copy of the password is captured in this example. This example uses an SEL-451-5 relay with version R305 firmware. More current versions of SEL-451 firmware perform password management somewhat differently and will not work with this example, but the concepts of capturing data are still applicable.

- Step 1. Insert an SEL-451 as SEL protocol, serial client.
- Step 2. Insert an access point as **Other, Ethernet Incoming (Listens for Connections)**. In this example, the access point is renamed Incoming\_Access\_AP. Set the **Network Connection Type** to **Telnet** for this example.
- Step 3. Insert an access point router and select the access point from Step 2 as the source and the SEL-451 TAP from Step 1 as the destination. See *Figure 4.8*.

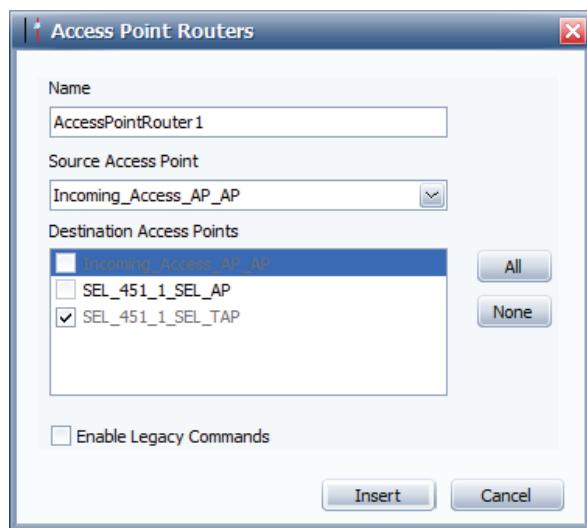

**Figure 4.8 Insert Access Point Router**

- Step 4. Create a virtual tag list by clicking on **Tag Lists** under the **Insert** ribbon.

- Step 5. Create a new virtual tag by clicking on the + on the bottom of the screen and change the tag type to **STR** and save the project.
- Step 6. In the access point router, click **Source RX Messages**, and then click on the + to add one message.
- Step 7. In the access point router, click **POU Pin Settings**. Set the Default Value for Auto\_Connect = TRUE. Notice there is a new input pin called **Source\_Rx\_Message\_1**. This is where we will define what string the RTAC will look for from the source access point.
- Step 8. Configure the Default Value for the POU Pin Setting Source\_Rx\_Message\_1 as follows:

**PAS 1 [VirtualTagList1.Status\_0000]<CR>**

| Source: Incoming_Access_AP_AP, Destination: SEL_451_1_SEL_TAP |         |                              |          |                |   |
|---|---------|------------------------------|----------|----------------|---|
| Drag a column header here to group by that column             |         |                              |          |                |   |
| Settings  | Visible | Pin Name                     | Pin Type | Pin Point Type | Default Value                           |
| Source Rx Messages  | False   | Auto_Connect                 | Input    | BOOL           | TRUE                                    |
| Source Tx Messages  | False   | Connect                      | Input    | BOOL           | FALSE                                   |
| Destination Rx Messages                                       | False   | Destination_Blocked          | Output   | BOOL           | FALSE                                   |
| Destination Tx Messages                                       | False   | Destination_Connected        | Output   | BOOL           | FALSE                                   |
| POU Pin Settings  | False   | Destination_Waiting          | Output   | BOOL           | FALSE                                   |
| Controller  | False   | Disconnect                   | Input    | BOOL           | FALSE                                   |
|   | True    | EN                           | Input    | BOOL           | TRUE                                    |
|   | False   | ENO                          | Output   | BOOL           | FALSE                                   |
|   | False   | Invalid_Function_Block_Input | Output   | BOOL           | FALSE                                   |
|   | False   | Source_Authenticating        | Output   | BOOL           | FALSE                                   |
|   | False   | Source_Blocked               | Output   | BOOL           | FALSE                                   |
|   | False   | Source_Connected             | Output   | BOOL           | FALSE                                   |
|   | False   | Source_Rx_Message_1          | Input    | STRING(252)    | PAS 1 [VirtualTagList1.Status_0000]<CR> |
|   | False   | Source_Rx_Message_1_DN       | Output   | BOOL           | FALSE                                   |
|   | False   | Source_Waiting               | Output   | BOOL           | FALSE                                   |

**Figure 4.9 Configure Capture Message**

The RTAC monitors the source receive messages for a string that matches 'PAS 1'. When it finds the string, it will capture a copy of all characters following the matched string until it reaches the termination (which in this example is <CR>) or 252 bytes, whichever comes first. The captured characters are placed into a global virtual tag of type STR called **VirtualTagList1.Status\_0000**. The entire message, including the characters that were copied and captured, is still passed through the access point router.

- Step 9. On a new line in the Tag Processor, type **VirtualTagList1.Status\_0000.str- Val** in the Source Expression column and **SEL\_451\_1\_SEL\_POU.Level\_1\_Password** in the Destination Tag Name column to assign the new password value to the SEL-451 client Level 1 password POU pin setting.
- Step 10. Save the project and load it into the RTAC.

To test the project, wait until the RTAC completes autoconfiguration with the SEL-451. Then transparently connect to the relay through the RTAC. Log in to Level 1, then Level 2 on the relay (ACC and 2AC, respectively) by using the correct passwords. Use the **PAS 1** command to change the Level 1 password.

**PAS 1 OTTER123**

### POU Pin Settings

While on-line with ACSELERATOR RTAC, check the POU pin SEL\_451\_1\_SEL\_POU.Level\_1\_Password. It should change to OTTER123 to match the new Level 1 password you configured in the relay through the transparent connection.

## POU Pin Settings

Use POU pin settings to customize how the access point router operates in your project and to view the present state of the APR operations. Setting the Visible field to **True** will cause the POU pin to appear in the **Controller** tab. See *Table 4.4* for the settings descriptions. You can specify destination and source message strings as a manually entered string contained within single quotes or as a tag of type STRING. If you use a tag of type STRING, you can manipulate that string value in user logic and then trigger when the string is sent or automatically change the string you are trying to match.

**Table 4.4 APR POU Pin Settings**

| Pin Name                     | Pin Type    | Description   | Default Value |
|------------------------------|-------------|---|---------------|
| Auto_Connect                 | Input BOOL  | Set TRUE to connect as soon as traffic is detected on the source AP.  | FALSE         |
| Connect                      | Input BOOL  | Automatically toggles when a connection is made. You can force to TRUE to force a connection.   | FALSE         |
| Disconnect                   | Input BOOL  | Automatically toggles when connection is closed. You can force to TRUE to close a connection.   | FALSE         |
| EN                           | Input BOOL  | Enables this APR. You can force to FALSE to disable this APR.   | TRUE          |
| xx_Rx_Message_n              | Input STR   | The <i>n</i> th user-configurable message string for the message received from the xx (source or destination) AP. Typically this is used to match what is received from the source.       |               |
| xx_Tx_Message_n              | Input STR   | The <i>n</i> th user-configurable message string to transmit to the xx (source or destination) AP.  |               |
| Trigger_xx_Tx_Message_n      | Input BOOL  | Trigger the transmission to xx (source or destination)  | FALSE         |
| xx_Blocked                   | Output BOOL | xx (source or destination) is blocking a connection to APR.   | FALSE         |
| xx_Connected                 | Output BOOL | xx (source or destination) is connected to APR  | FALSE         |
| Trigger_xx_Tx_Message_n_DN   | Output BOOL | Indicates the <i>n</i> th transmission of the xx (source or destination) message has completed.   | FALSE         |
| xx_Rx_Message_n_DN           | Output BOOL | Indicates the <i>n</i> th receive message of the xx (source or destination) has completed. This is determined by comparing the incoming message with the user-configured xx_RX_n_Message. |               |
| Source_Authenticating        | Output BOOL | Source is in the process of authenticating connection.  | FALSE         |
| xx_waiting                   | Output BOOL | xx (source or destination) is waiting for connection.   | FALSE         |
| Invalid_Function_Block_Input | Output BOOL | The APR function block has received some invalid input.   | FALSE         |
| ENO                          | Output BOOL | The APR is enabled.   | FALSE         |

---

---

## S E C T I O N   5

---

# Web Interface and Reports

## Overview

---

The devices in the SEL Real-Time Automation Controller (RTAC) and SEL Axion® family provide a variety of ways to access data from configured settings and connected IEDs through use of a web browser. The RTAC web interface provides remote IED status and reports; local sequence of events reports; and an optional full-featured, web-based HMI; as well as a capable set of tools for both live data viewing and communications troubleshooting.

The Ethernet interfaces of an RTAC as well as a number of security parameters are configured via the web interface. See *Section 7: Security and Account Management* for more details on these sections of the web interface.

The **Network Utilities** page allows you to test network connectivity to remote IP addresses as well as connections to specified TCP service ports on those remote IPs. An "All Ethernet" communications capture can also be launched from this page to provide a downloaded pcap file containing all Ethernet traffic received and sent to and from the RTAC.

The **Connected IED** report shows remote IEDs by physical port and, for Ethernet connections, which TCP/UDP ports are in use. It provides information about connection type, settings, and communication status. In firmware versions R151-V0 and later, SEL-3555, SEL-3560, and SEL-3350 RTACs include an online protocol dissector provides a tool for viewing detailed communications activity for both serial and Ethernet-based IEDs. The dissector automatically decodes traffic into a navigation tree containing a plain-text summary of the protocol traffic in question to allow for quick troubleshooting of communications issues. Multiple simultaneous serial and network traffic captures can be launched to create pcap files; these files are useful for detailed communications captures and offline protocol analysis and troubleshooting.

The **Alarm Summary** and **Sequence of Events** (SOE) reports provide comprehensive logging for all tags in the RTAC, including those that connected IEDs provide. The logging system compensates for time-stamp differential between data from different IEDs, so all data are in sequence and on the same time reference. The RTAC can log changes in state for Booleans, changes in value for strings, and for a change in time stamp for Booleans, analogs, or strings. The RTAC can also log alarms on analog values that cross defined thresholds. Configure tags for logging in the Tag Processor or use one of the logger function blocks in IEC 61131 custom programs. On most RTAC models, the logger stores as many as 30,000 records; on SEL-3350, SEL-3555, and SEL-3560 RTACs, as many as 500,000 records can be stored. The RTAC can log bursts of as many as 500 log entries in 100 ms or 100 entries per second continuously without losing information.

The RTAC makes CEV and COMTRADE events collected from remote IEDs available in an **Event Collection** table. Event collection is configured in ACCELERATOR RTAC SEL-5033 Software. These events can be sorted by time or device and can be downloaded or deleted from the web interface.

Values of any tag or POU pin in the RTAC settings can be viewed on the **Live Data** page. This feature must be enabled by tag in ACCELERATOR RTAC. Not only do these values update in close to real time, they can also be forced from the web interface. This is useful for testing, troubleshooting, and commissioning.


The **Diagnostics** page provides a detailed description of the RTAC network interface state, including information about the firewall, physical interface, routing table, exe-GUARD®, PRP, and the ARP table.

Most devices in the RTAC and Axion family support the optional web-based HMI (the SEL-3505 and SEL-3505-3 currently do not). The HMI is a configurable option and can either be included in the order from the factory or can be added after the fact by contacting your SEL sales representative. The web-based HMI allows you to view and control any tags configured in the RTAC. Use ACCELERATOR Diagram Builder™ SEL-5035 Software to build custom HMI screens and load them into the RTAC. Build one-line diagrams, annunciators, and graphical representations that contain control buttons and display data from any tag. Because the HMI is web-based, multiple people can view it simultaneously.

## Web HMI and Dashboard Settings

---

ACCELERATOR Diagram Builder provides not only a full-featured HMI development environment, but it also allows you to select HMI tags directly from the database in the RTAC or in an ACCELERATOR RTAC project. Use ACCELERATOR Diagram Builder to build new HMI projects containing multiple screens animated with objects linked to RTAC database tags and load the new HMI project into the RTAC. Once the HMI project is loaded into the RTAC, you can launch it from the RTAC's web interface (see *Figure 5.1*).

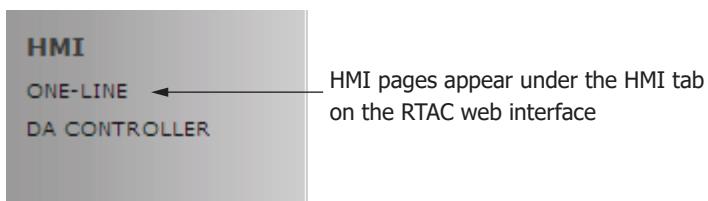

**Figure 5.1 HMI Project Display**

In firmware versions R152 and later, the HMI Runtime binary and HMI project files can be updated via the RTAC web interface. The **Device Management** tab displays the current version of the Runtime binary and allows you to upload an updated version. The **Project Management** tab has an **HMI Project Upload** sub-tab on which HMI project files are listed and from which they can be uploaded and downloaded. HMI project files must be saved by Diagram Builder in **hprjson** or **hprz** format to be uploaded successfully.

Settings on the RTAC dashboard allow you to configure when the web interface should log out of a user session because of inactivity. You can also configure the RTAC to allow HMI pages to remain active indefinitely, but in a read-only mode that prevents users from issuing controls unless they are logged on. The following table describes RTAC web Dashboard tab settings, including those pertaining to session time-out behavior.

**Table 5.1 Web Interface Dashboard Settings**

| <b>Label</b>                   | <b>Description</b>   |
|--------------------------------|--|
| Host Name                      | The network hostname as defined in the <b>Network</b> tab under Ethernet > Edit Global Settings.   |
| Device Name                    | User-configurable descriptive name.  |
| Device Location                | User-configurable location description.  |
| Device Description             | User-configurable description of this device.  |
| Allowed Web Connections        | The number of concurrent web connections this device will accept.<br><b>Note:</b> This is not the same as Number of Users Logged In, which includes ODBC connections through ACCELERATOR RTAC and other programs. The number of users logged on includes sessions not logged off that are closed. The counter will not decrease until those sessions time out.   |
| Web Session Time-out           | The Web Session Time-out has a range of 0–720 minutes. A setting from 1 to 720 minutes (12 hours) will cause the web interface to log out of the active session after the defined period of inactivity. If the range is set to 0, the web interface will not log out after any period of inactivity as long as the network connection is good and the browser session remains open. When this setting is set to 0, the HMI will remain open and users can acknowledge alarms and send controls without authenticating. If Enable HMI Read-Only Mode is selected and an HMI diagram is presently in focus, the RTAC changes the HMI session to read-only mode. If HMI Read-Only Mode is selected, the defined behavior will occur regardless of the Web Session Time-Out value. |
| HMI Read-Only Mode Time-out    | Once the HMI session has entered read-only mode, this is the maximum amount of time a communications failure can exist between the RTAC and HMI before the RTAC logs off the user and closes the web session.  |
| Enable HMI Read-Only Mode      | A flag that enables read-only mode in an HMI screen when the Web Session Time-out expires. Once the HMI is in read-only mode, a user can view data in the HMI, but the RTAC will prompt the user to log in if the user attempts to operate a control from the HMI or navigate to another non-HMI tab on the RTAC web interface.  |
| Tie Alarm LED to OUT101        | A flag that asserts the output OUT101 if the Alarm LED is asserted. Default value is enabled. OUT101 is NC when this box is selected and NO when this box is not selected.   |
| Password History Count         | A parameter allowing optional user password history enforcement. See <i>Section 7: Security and Account Management</i> for more details.   |
| Power Source Scale (0.5 - 1.5) | Applies a custom (per-RTAC) scaling factor to the supply voltage System Tag(s). See <i>Section 11: Testing and Troubleshooting</i> for more details.   |
| Default Home Page              | Allows assignment of a global non-default page (or HMI project) to launch upon logging in to the RTAC web interface other than the Dashboard. This applies to all users on the RTAC, unless a custom default home page has been uniquely associated with their user account.   |

## Kiosk Feature

SEL-3555, SEL-3560, and SEL-3350 RTACs possess a local DisplayPort and USB-A connectors for connection of a monitor as well as keyboard and mouse. This display will by default be a locally running web browser linked to the RTACs web interface. In firmware versions R142-V0 and later, a Kiosk feature is available via the local display on the SEL RTAC. Kiosk mode allows specific applications to be run locally on the RTAC.

In Kiosk mode, the **Applications** menu (accessible via the bottom left corner of the display) provides the following functionality.

## Local RTAC UI

This option launches a web browser that defaults to the RTAC's web interface. Enter or exit the full-screen local display of the web interface by pressing <F11>. Once full-screen mode has been exited, other IP addresses or hostnames can be specified in the address bar of the browser provided the URL has been entered into the Local Display URL Whitelist located under the Security heading.

## Virtual Keyboard

A virtual keyboard that can be docked to the bottom of the screen and can be used with all local applications.

## Settings

### Calibrate Touchscreen

This option brings up the same options as the touchscreen calibration shortcut keys.

### Display

This option allows you to adjust the following display settings:

- Connected monitors
- Resolution
- Refresh rate
- Rotation
- Reflection

## Kiosk Feature Keyboard Shortcut Keys

Various keyboard shortcut keys can be used on the local display interface to interact with the web browser as well as calibrate a locally connected touchscreen monitor.

**Table 5.2 Kiosk Feature Shortcut Keys**

| Shortcut Keys    | Description                           |
|------------------|---------------------------------------|
| <F11>            | Enter or exit full-screen mode        |
| <Alt+T>          | Calibrate touchscreen                 |
| <Ctrl+T>         | Calibrate touchscreen                 |
| <Ctrl+Shift+Del> | Delete browser cache                  |
| <Alt+F4>         | Close the selected/active application |


# Web Proxy

---

Web Proxies allow for configuration of a URL on the RTAC that will trigger the RTAC to create a proxy connection to another web server via one of its Ethernet interfaces. When configuring a web proxy, it is important to note that the identity of the remote host is not verified. Setting **Remote URL** to proxy to an untrusted host can potentially expose users of the web proxy to malicious cybersecurity attacks. Web proxies should only be configured on a trusted network.


Access to web proxies can be configured to be used by either unauthorized or authorized users. Authorized user confirmation is done by account type. A web proxy is a role-based permission that can be tied to a user account to allow access to the configured proxy.

Web proxies can be accessed via a remote connection or from the local display interface.

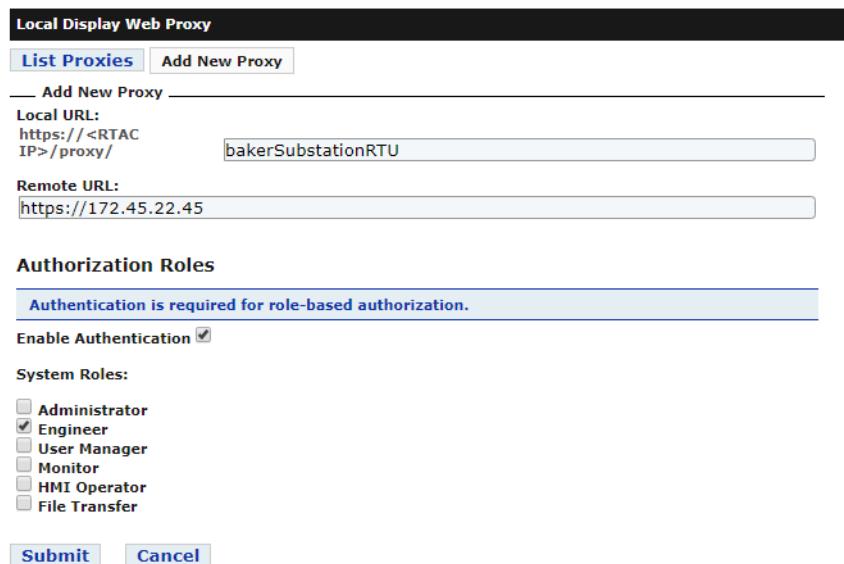

The screenshot shows the 'Local Display Web Proxy' configuration interface. At the top, there are 'List Proxies' and 'Add New Proxy' buttons. Below them is a 'Local URL' field containing 'https://<RTAC IP>/proxy/' followed by a text input field with 'bakerSubstationRTU'. Under 'Remote URL', there is a text input field with 'https://172.45.22.45'. In the 'Authorization Roles' section, a message says 'Authentication is required for role-based authorization.' Below this, the 'Enable Authentication' checkbox is checked. Under 'System Roles', several checkboxes are available: 'Administrator' (unchecked), 'Engineer' (checked), 'User Manager' (unchecked), 'Monitor' (unchecked), 'HMI Operator' (unchecked), and 'File Transfer' (unchecked). At the bottom are 'Submit' and 'Cancel' buttons.

**Figure 5.2** New Web Proxy Configuration

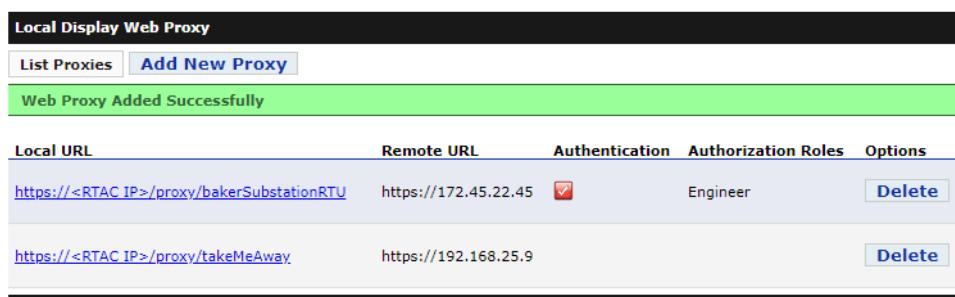

The screenshot shows the 'Local Display Web Proxy' list page. It displays a success message 'Web Proxy Added Successfully' in a green bar. Below it is a table with columns: Local URL, Remote URL, Authentication, Authorization Roles, and Options. The first row shows 'https://<RTAC IP>/proxy/bakerSubstationRTU' as the Local URL, 'https://172.45.22.45' as the Remote URL, 'checked' in the Authentication column, 'Engineer' in the Authorization Roles column, and a 'Delete' button in the Options column. The second row shows 'https://<RTAC IP>/proxy/takeMeAway' as the Local URL, 'https://192.168.25.9' as the Remote URL, 'unchecked' in the Authentication column, and a 'Delete' button in the Options column.

**Figure 5.3** Web Proxy List

Note that the success of an RTAC web proxy connection to a remote web interface varies depending on the complexity of the web server implementation of that remote interface. Remote web interfaces from the following devices have been verified to work with an RTAC web proxy as of firmware version R155-V0:

- SEL-3555 RTAC (SEL-3555-R154-V0-Z000097-D20250326)
- SEL-351S Relay (SEL-351S-7-R518-V3-Z107106-D20250111)
- SEL-411L Relay (SEL-411L-1-R128-V0-Z018004-D20220324)
- SEL-751 Relay (SEL-751-R300-V3-Z008004-D20210104)
- SEL-851 Relay (SEL-851-R100-V2-Z001001-D20230821)
- SEL-3610 Port Server (SEL-3610-R208-V2-Z014006-D20201216)

## Network Utilities

---

Web-based ping and TCP port check utilities are found on the **Network Utilities** page. They are used to determine whether communication can be established from the RTAC to a remote host over an Ethernet network. An "All Ethernet" communication capture can also be launched from this location to generate a pcap file containing all Ethernet traffic sent to and received from the RTAC.

The Ping utility checks that basic network connectivity to a remote address is possible using ICMP messages. To use this tool, enter an IPv4 or IPv6 address, the number of pings to send (Count), and the number of seconds to allow before a ping is considered failed because of lack of response (Time-out). Once these three items are set as desired, press the **Ping** button. The results of the ping test will be displayed in text below the entry fields.

| Ping                                |        |                    |
|-------------------------------------|--------|--------------------|
| IP Address:                         | Count: | Timeout (seconds): |
| 10.42.92.1                          | 4      | 5                  |
| <input type="button" value="Ping"/> |        |                    |

```
PING 10.42.92.1 (10.42.92.1): 56 data bytes
64 bytes from 10.42.92.1: seq=0 ttl=255 time=0.953 ms
64 bytes from 10.42.92.1: seq=1 ttl=255 time=0.961 ms
64 bytes from 10.42.92.1: seq=2 ttl=255 time=0.961 ms
64 bytes from 10.42.92.1: seq=3 ttl=255 time=0.953 ms

--- 10.42.92.1 ping statistics ---
4 packets transmitted, 4 packets received, 0% packet loss
round-trip min/avg/max = 0.953/0.957/0.961 ms
```

Figure 5.4 Network Utilities: Ping

The TCP port check utility allows further testing of connectivity to a remote IP address by attempting to connect to a specified TCP service port. This can serve the purpose of testing firewall/router rules (ensuring a port is open through the complete network path) as well as confirming if a particular service is open on a remote host. The results will be formatted as in the following examples and will display a STATE of **open** or **closed**. Note that in these examples, TCP port 23 is open and port 24 is not.

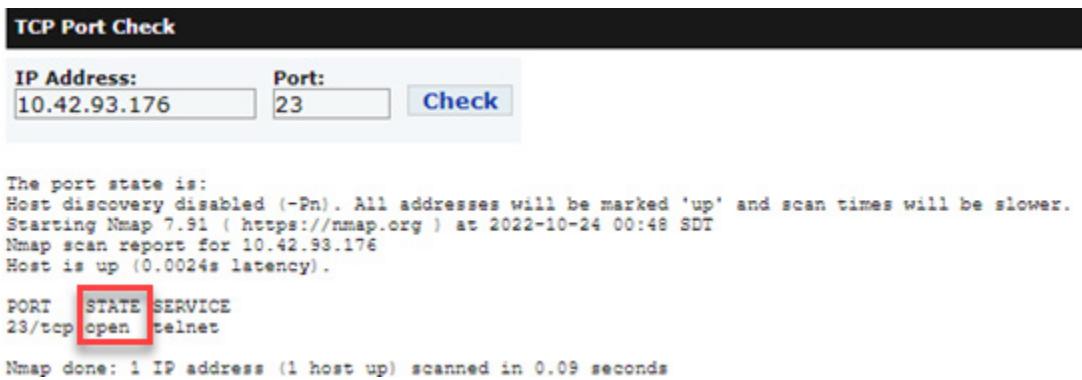


Figure 5.5 Network Utilities: TCP Port Check—Open Port

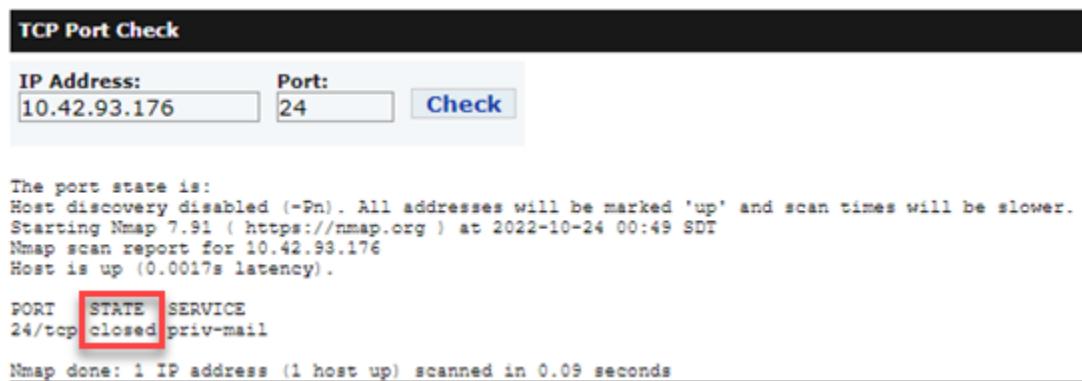


Figure 5.6 Network Utilities: TCP Port Check—Closed Port

Select **Start** under the Network Capture heading to begin an All Ethernet communication capture. A .pcap file will begin downloading to your web browser after initiating this capture. Select **Stop** when you are satisfied with the volume or duration of captured traffic.

## Viewing and Troubleshooting Connected IEDs

View information about port configuration and record network and serial device traffic using the Connected IEDs report on the RTAC web interface. Graphics representing serial and Ethernet ports of the specific RTAC hardware model are displayed here, with gray indicating that a communication port is not configured for use with any protocol and green indicating that a port has been configured. The Connected IEDs report is divided into two main sections for devices: one for **Ethernet Devices** and one for **Serial Devices**. Each device section lists all client and server devices configured in the project along with their protocol type. Each device has a **Status** icon displayed to the left of the device name. A green Status icon indicates that the device is communicating successfully (i.e., the Offline POU pin is FALSE), and a red Status icon indicates the device has encountered a communications failure (i.e., the Offline POU pin is TRUE). A gray Status icon indicates the device is disabled (i.e., the ENO POU pin is FALSE).

## Viewing and Troubleshooting Connected IEDs

The **Ethernet Devices** section of the Connected IEDs report shows the Ethernet interface (e.g., Eth\_01) that the protocol is actively bound to as well as the source and destination IP addresses used in the conversation. Any TCP or UDP ports in use by the client/server device will also be displayed here. Clicking on the hyperlink displayed over each remote TCP port will launch the Network Utilities page with the TCP Port Check tool fields automatically populated to those that you selected.

The **Serial Devices** section of the Connected IEDs report shows the serial port in use for the client/server device (e.g., Com\_03) as well as various serial parameters associated with the connection such as Baud Rate, Data Bits, Parity Bits and so on.

See *Figure 5.7* for a sample display of how the Connected IEDs report is displayed on SEL-3530-4 hardware; other hardware models will display their unique port layout.

**Device Interfaces**

|        |        |        |        |        |
|--------|--------|--------|--------|--------|
| USB_B1 | Eth_01 | Eth_02 | Com_03 | Com_04 |
| Com_01 | Com_02 |        |        |        |

**Ethernet Devices**

| Status                              | Remote Device | Protocol   | Interface              | Source IP    | Destination IP | Port     |
|-------------------------------------|---------------|------------|------------------------|--------------|----------------|----------|
| <input type="checkbox"/>            | SEL_3555_1    | SEL Server | Eth_01, Eth_02, USB_B1 | *            | 10.42.92.246   | TCP:3253 |
| <input checked="" type="checkbox"/> | SEL_451_1     | SEL Client | Eth_01                 | 10.42.92.246 | 10.42.93.146   | TCP:23   |
| <input type="checkbox"/>            | SEL_751_1     | SEL Client | Eth_01                 | 10.42.92.246 | 10.42.93.176   | TCP:23   |
| <input checked="" type="checkbox"/> | SEL_751_1     | SEL Client | Eth_01                 | 10.42.92.246 | 10.42.93.176   | TCP:21   |

**Serial Devices**

| Status                              | Remote Device | Protocol   | Interface | Port Type | Baud Rate | Data Bits | Parity Bit | Stop Bits | Full Duplex | Port Power | Hardware Flow Control | Software Flow Control |
|-------------------------------------|---------------|------------|-----------|-----------|-----------|-----------|------------|-----------|-------------|------------|-----------------------|-----------------------|
| <input checked="" type="checkbox"/> | Other_1       | DNP Client | Com_03    | EIA232    | 19200     | 8         | None       | 1         | true        | false      | false                 | false                 |

Figure 5.7 Connected IEDs Report

## Web-Based Serial and Network Traffic Captures

The RTAC can capture multiple simultaneous connections of network or serial device traffic. To start a serial or Ethernet capture from the Connected IEDs page, select the check box to the left of the device Status icon and, from the **Actions** dropdown menu above the list of devices, select **Capture Packets**. Once the packet capture has started, an entry will appear under the **Packet Captures** heading. When enough data have been captured, the pcap file download will begin automatically. Select the **Stop** button associated with the entry to cease the packet capture and automatically complete the download of the associated pcap file. Selecting **Capture All Ethernet Traffic** will launch the Network Utilities page from which an "All Ethernet" capture operation can be initiated.

| <b>Packet Captures</b> |                               |               |                     |
|------------------------|-------------------------------|---------------|---------------------|
| <b>File</b>            | <b>Start Time</b>             | <b>Status</b> | <b>Stop Capture</b> |
| Other_1.pcap           | 2022-10-25 01:07:54.926626+01 | Capturing...  | <b>Stop</b>         |

**Figure 5.8 Connected IED Packet Capture**


## Online Packet Dissector

In firmware versions R151-V0 and later, SEL-3555, SEL-3560, and SEL-3350 RTACs include an online packet dissector available from the Connected IEDs page. The packet dissector facilitates online communications troubleshooting with serial and Ethernet variations of the following supported client and server protocols that the RTAC uses to communicate with devices:

- ▶ SEL Protocol
- ▶ DNP
- ▶ Modbus RTU and TCP
- ▶ IEC 60870-5-101 and 104
- ▶ IEC 61850 MMS
- ▶ IEC 61850 GOOSE
- ▶ IEEE C37.118 Synchrophasors
- ▶ L&G 8979
- ▶ CP2179

To launch the online packet dissector, select the check box beside one or more devices and, from the **Actions** dropdown menu, select **Inspect Packets**. As shown in *Figure 5.9*, the packet dissector includes a top pane that is updated with any new received or transmitted messages and a bottom pane that shows the dissection of a packet selected from the top frame. All dissected messages are displayed in layered format, with the different layered protocols broken apart into separate tree views. Ethernet-based captures are typically built on an Ethernet II/IPv4/TCP connection stack and serial-based captures use an RTAC Serial Line header.

**638 Web Interface and Reports**  
**Viewing and Troubleshooting Connected IEDs**

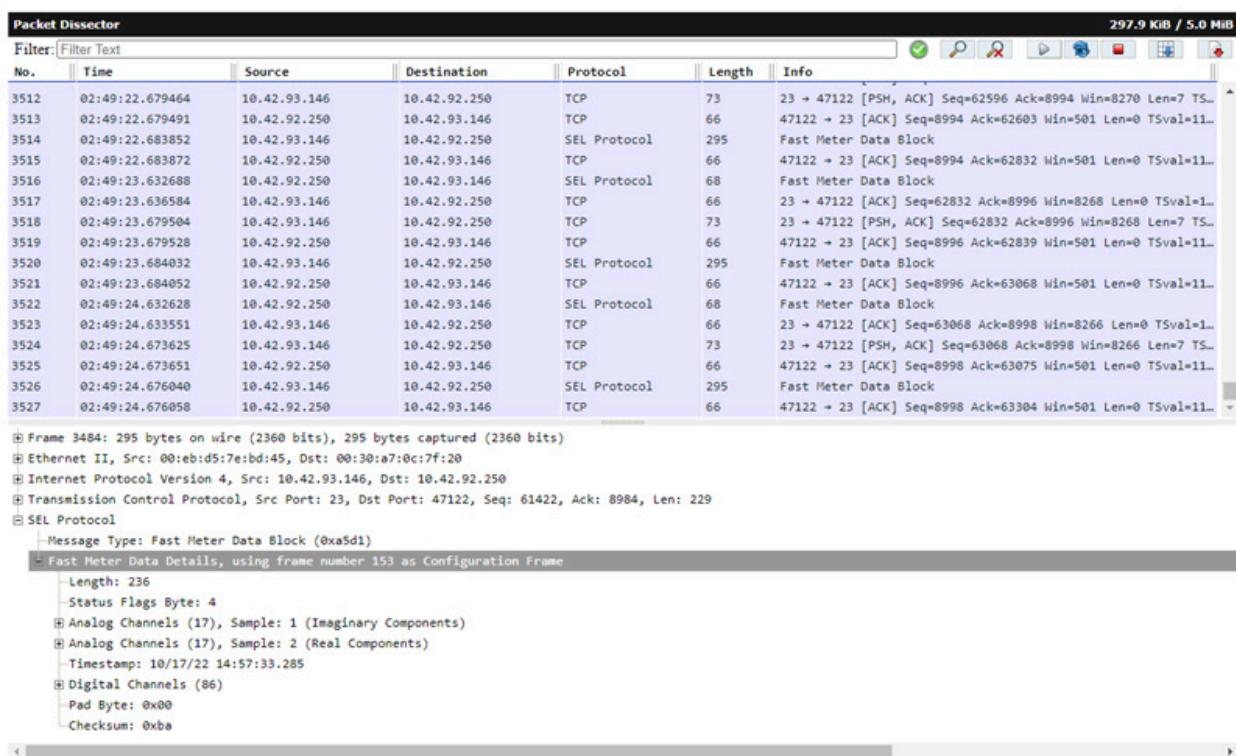

**Figure 5.9 Packet Dissector**

Display filters can be entered into the **Filter** field on the top of the dissection display to filter down the displayed list of packets to those of interest. These filters use the same syntax as Wireshark display filters and a successfully applied filter will change to green text; a filter using incorrect syntax will display with red text and not be applied. An example of a successful filter to only display SEL protocol traffic (and hide, for example, packets that only contain TCP acknowledgements):

| Packet Dissector |                 |              |              |              |        |                       |
|------------------|-----------------|--------------|--------------|--------------|--------|-----------------------|
| Filter: selfm    |                 |              |              |              |        |                       |
| No.              | Time            | Source       | Destination  | Protocol     | Length | Info                  |
| 61               | 05:08:32.232715 | 10.42.92.250 | 10.42.93.176 | SEL Protocol | 68     | Fast Meter Data Block |
| 63               | 05:08:32.255483 | 10.42.93.176 | 10.42.92.250 | SEL Protocol | 322    | Fast Meter Data Block |
| 65               | 05:08:33.232706 | 10.42.92.250 | 10.42.93.176 | SEL Protocol | 68     | Fast Meter Data Block |
| 67               | 05:08:33.254212 | 10.42.93.176 | 10.42.92.250 | SEL Protocol | 322    | Fast Meter Data Block |
| 69               | 05:08:34.232653 | 10.42.92.250 | 10.42.93.176 | SEL Protocol | 68     | Fast Meter Data Block |

**Figure 5.10 Packet Dissector—Successful Filter**

Typical filters that could be applied include:

- **dnp3** - show all DNP traffic.
- **dnp3.al.func == 0x81** - show all DNP outstation responses.
- **selfm** - show all SEL Protocol traffic.
- **selfm.fastmsg.funccode == 0x18** - show all Unsolicited Fast SER messages in an SEL protocol conversation.
- **synphasor** - show all IEEE C37.118 traffic.
- **modbus** - show all Modbus RTU or Modbus TCP traffic.

- **modbus.func\_code == 3** - show all Modbus Holding Register read requests / responses.
- **iec60870\_asdu** - show all IEC 60870-5-101 and 104 traffic containing ASDU payloads.

Use the buttons at the top of the packet dissection interface to:

- Apply a display filter
- Clear the display filter
- Start/Resume the capture
- Restart the capture
- Stop the capture
- Enable or disable autoscroll to the bottom
- Download a pcap file of all captured traffic for offline troubleshooting

## Live Data

---

The **Live Data** page displays the near real-time status of any Live Data enabled tag (this is done in the **Tag Processor** or in custom logic). Many data types are supported.

| Live Data  |                                | # Forced = 0 | Force    | Unforce                    | Unforce & Restore |       |
|--|--------------------------------|--------------|----------|----------------------------|-------------------|-------|
| Name   | Label                          | Status       | Prepared | Timestamp                  | Quality           | Type  |
| SEL_351S_Feeder_4_SEL.FM_INST_52A                      | Feeder 4, Binaries             | false        |          | 2017-04-03 20:57:31.108961 | invalid           | SPS   |
| SEL_351S_Feeder_4_SEL.FM_INST_79LO                     | Feeder 4, Binaries             | false        |          | 2017-04-03 20:57:31.108961 | invalid           | SPS   |
| SEL_351S_Feeder_4_SEL.FM_INST_1A                       | Feeder 4, Currents             | 0.0@ 0.0     |          | 2017-04-03 20:57:31.108961 | invalid           | CMV   |
| SEL_351S_Feeder_4_SEL.FM_INST_1B                       | Feeder 4, Currents             | 0.0@ 0.0     |          | 2017-04-03 20:57:31.108961 | invalid           | CMV   |
| SEL_351S_Feeder_4_SEL.FM_INST_1C                       | Feeder 4, Currents             | 0.0@ 0.0     |          | 2017-04-03 20:57:31.108961 | invalid           | CMV   |
| SEL_351S_Feeder_4_SEL.FM_INST_P_WATTS                  | Feeder 4                       | 0.0          |          | 2017-04-03 20:57:31.108961 | invalid           | MV    |
| SEL_351S_Feeder_4_SEL.FM_INST_Q_VARS                   | Feeder 4                       | 0.0          |          | 2017-04-03 20:57:31.108961 | invalid           | MV    |
| SEL_351S_Feeder_4_SEL.FM_INST_RMB1A                    | Feeder 4, Binaries, High Speed | false        |          | 2017-04-03 20:57:31.108961 | invalid           | SPS   |
| SEL_351S_Feeder_4_SEL.FM_INST_RMB2A                    | Feeder 4, Binaries, High Speed | false        |          | 2017-04-03 20:57:31.108961 | invalid           | SPS   |
| SEL_351S_Feeder_4_SEL.FM_INST_TMB1A                    | Feeder 4, Binaries, High Speed | false        |          | 2017-04-03 20:57:31.108961 | invalid           | SPS   |
| SEL_351S_Feeder_4_SEL.FM_INST_TMB2A                    | Feeder 4, Binaries, High Speed | false        |          | 2017-04-03 20:57:31.108961 | invalid           | SPS   |
| SEL_351S_Feeder_4_SEL.FM_INST_VA                       | Feeder 4, Voltages             | 0.0@ 0.0     |          | 2017-04-03 20:57:31.108961 | invalid           | CMV   |
| SEL_351S_Feeder_4_SEL.FM_INST_VB                       | Feeder 4, Voltages             | 0.0@ 0.0     |          | 2017-04-03 20:57:31.108961 | invalid           | CMV   |
| SEL_351S_Feeder_4_SEL.FM_INST_VBAT                     | Feeder 4, Voltages             | 0.0          |          | 2017-04-03 20:57:31.108961 | invalid           | MV    |
| SEL_351S_Feeder_4_SEL.FM_INST_VC                       | POU Pins                       | 0.0@ 0.0     |          | 2017-04-03 20:57:31.108961 | invalid           | CMV   |
| -SEL_351S_Feeder_4_SEL.POU.Auto_Configuration_Failure  | POU Pins                       | false        |          | ---                        | ---               | BOOL  |
| -SEL_351S_Feeder_4_SEL.POU.Event_Collection_Count      | POU Pins                       | 0            |          | ---                        | ---               | UDINT |
| -SEL_351S_Feeder_4_SEL.POU.Initiate_Auto_Configuration | POU Pins                       | false        |          | ---                        | ---               | BOOL  |
| -SEL_351S_Feeder_4_SEL.POU.Message_Received_Count      | POU Pins                       | 0            |          | ---                        | ---               | UDINT |
| SEL_351S_Feeder_4_SEL.POU.Message_Sent_Count           | POU Pins                       | 4871         |          | ---                        | ---               | UDINT |

**Figure 5.11** Live Data Page

Tag structures can be expanded by clicking the + icon to the left of the tag name. Tags can be filtered using the filter controls at the top of the page. Basic and Advanced filter controls can be toggled by clicking the **Basic** and **Advanced** links to the right of the filter controls. Data can be filtered by name, label (as defined in either the Tag Processor or user logic), status, quality, or type. Filters can be saved and reused. Saved filters are saved on the RTAC itself and are made available across user accounts and web browsers.

When using the advanced filter input more complex filter rules can be written. See *Table 5.3* for special operators available for advanced filter expressions.

**Table 5.3 Live Data Advanced Filtering Operators**

| Character | Function                              | Example  |
|-----------|---------------------------------------|--|
| OR        | Logical OR                            | Name ~ 'IA' OR Name ~ 'IB'                         |
| AND       | Logical AND                           | Name ~ '52A' AND Status ~ 'false'                  |
| NOT       | Logical NOT                           | Name ~ '52A' AND NOT Status ~ 'false'              |
| =         | Equals                                | Status = 'false'                                   |
| ~         | Contains                              | Name ~ '79LO'                                      |
| in        | Is left side found in right side list | Name ~ '79LO' AND Label in ('Binaries', 'Analogs') |

## Forcing Values

Tag values can be forced from the webpage by using the **Prepared** column in the Live Data table. Because forcing from the Live Data page is functionally equivalent to forcing values in Custom Logic, see *Using Online Debug on page 919*. Most elements of the tag can be forced in this manner, including elements of the quality and time substructures (if present). When preparing to force an analog value that includes both magnitude and angle, you can either expand the instMag substructure and prepare both magnitude and angle in their own cell, or you can type **mag@ang** in the cell associated with the top level of the tag. *Figure 5.12* illustrates both force preparation methods, as well as Boolean force preparation.

### NOTE

Use caution when forcing values. Depending on the RTAC configuration, it may be possible to send controls or operate contacts.

| Name                                  | Status                     | Prepared   |
|---------------------------------------|----------------------------|------------|
| SEL_351S_Feeder_4_SEL.FM_INST_52A     | false                      |            |
| SEL_351S_Feeder_4_SEL.FM_INST_79LO    | true                       |            |
| SEL_351S_Feeder_4_SEL.FM_INST_IA      | 98.0@ 0.0                  |            |
| SEL_351S_Feeder_4_SEL.FM_INST_IB      | 101.0@ -120.0              |            |
| SEL_351S_Feeder_4_SEL.FM_INST_IC      | 86.0@ 120.0                |            |
| SEL_351S_Feeder_4_SEL.FM_INST_P_WATTS | 2.16e05                    |            |
| SEL_351S_Feeder_4_SEL.FM_INST_Q_VARS  | 327.0                      |            |
| SEL_351S_Feeder_4_SEL.FM_INST_RMB1A   | true                       | false      |
| SEL_351S_Feeder_4_SEL.FM_INST_RMB2A   | true                       |            |
| SEL_351S_Feeder_4_SEL.FM_INST_TMB1A   | false                      | true       |
| SEL_351S_Feeder_4_SEL.FM_INST_TMB2A   | false                      |            |
| SEL_351S_Feeder_4_SEL.FM_INST_VA      | 0.0@ 0.0                   | 25.0@ 42.0 |
| SEL_351S_Feeder_4_SEL.FM_INST_VB      | 0.0@ 0.0                   |            |
| instCVal                              | 0.0@ 0.0                   |            |
| mag                                   | 0.0                        | 25.0       |
| ang                                   | 0.0                        | 42.0       |
| cVal                                  | 0.0@ 0.0                   |            |
| range                                 | normal                     |            |
| q                                     | good                       |            |
| t                                     | 2017-02-08 20:04:35.548966 |            |

**Figure 5.12 Forcing Live Data**

Once all force values have been prepared, press **Force**. *Figure 5.13* shows an example of the Live Data page with values forced.

| Name                                  | Status                     | Prepared |
|---------------------------------------|----------------------------|----------|
| SEL_351S_Feeder_4_SEL.FM_INST_52A     | false                      |          |
| SEL_351S_Feeder_4_SEL.FM_INST_79LO    | true                       |          |
| SEL_351S_Feeder_4_SEL.FM_INST_IA      | 98.0@ 0.0                  |          |
| SEL_351S_Feeder_4_SEL.FM_INST_IB      | 101.0@ -120.0              |          |
| SEL_351S_Feeder_4_SEL.FM_INST_IC      | 86.0@ 120.0                |          |
| SEL_351S_Feeder_4_SEL.FM_INST_P_WATTS | 2.16e05                    |          |
| SEL_351S_Feeder_4_SEL.FM_INST_Q_VARS  | 327.0                      |          |
| SEL_351S_Feeder_4_SEL.FM_INST_RMB1A   | F false                    |          |
| SEL_351S_Feeder_4_SEL.FM_INST_RMB2A   | true                       |          |
| SEL_351S_Feeder_4_SEL.FM_INST_TMB1A   | F true                     |          |
| SEL_351S_Feeder_4_SEL.FM_INST_TMB2A   | false                      |          |
| SEL_351S_Feeder_4_SEL.FM_INST_VA      | F 25.0@ 42.0               |          |
| SEL_351S_Feeder_4_SEL.FM_INST_VB      | 25.0@ 42.0                 |          |
| instCVal                              | 25.0@ 42.0                 |          |
| mag                                   | F 25.0                     |          |
| ang                                   | F 42.0                     |          |
| cVal                                  | 0.0@ 0.0                   |          |
| range                                 | normal                     |          |
| q                                     | good                       |          |
| t                                     | 2017-02-08 20:04:35.548966 |          |

**Figure 5.13 Live Data After Force**

Press **Unforce** to release the force but leave the values in place until they are overwritten by some other mechanism, or press **Unforce & Restore** to release the force and restore the tags to their preforce values.

## Adding Tags to Live Data

Tags can be added to the Live Data page by using either settings in the Tag Processor or code in custom logic. The following data types are supported (see *Data Types on page 1137* for additional information about these types):

| Standard Types   |              |                |
|------------------|--------------|----------------|
| BOOL             | LINT         | TOD            |
| BYTE             | LREAL        | UDINT          |
| DATE             | LWORD        | UINT           |
| DINT             | REAL         | USINT          |
| DT               | SINT         | ULINT          |
| DWORD            | STRING(255)  | WORD           |
| INT              | TIME         |                |
| Enumerated Types |              |                |
| cmdQual_t        | ledColor_t   | tcmd_t         |
| colorRG_t        | orCategory_t | timeAccuracy_t |
| dbpos_t          | range_t      | timeSource_t   |
| dir_t            | source_t     | validity_t     |
| Structured Types |              |                |
| ACD              | IOC          | operUNC        |
| ACT              | LBCR         | originator_t   |
| APC              | LBCRC        | quality_t      |
| BCR              | LEDC         | SBRC           |

**Live Data**

|                 |          |               |
|-----------------|----------|---------------|
| BCRC            | MDBC     | SRBC          |
| CMV             | MRBC     | SPC           |
| dateTime_t      | MV       | SPS           |
| detailQuality_t | operAPC  | STR           |
| DNPC            | operBAC  | STRC          |
| DPC             | operBSC  | TIM           |
| DPS             | operINC  | timeQuality_t |
| DST_t           | operISC  | timeSource    |
| I870DC          | operLAPC | timestamp_t   |
| I870SC          | operLINT | UNC           |
| INC             | operSPC  | UNS           |
| INS             | operSTR  | vector_t      |

To add tags to Live Data from the Tag Processor, use the **Live Data Enabled** column. Set the value of this column to **Forceable** to allow the value to be forced from the **Live Data** page, or **Viewable** to make the value read-only on the **Live Data** page. Use the **Live Data Labels** column to configure a comma-separated list of labels (limit 255 characters per label) to associate the tag with. These labels can be used to sort data on the Live Data page. *Figure 5.14* provides an example of Live Data configuration in the Tag Processor.

| Build | Destination Tag Name                        | DT Data Type | Source Expression | SE Data Type | Live Data Enabled | Live Data Labels                 |
|-------|---|--------------|-------------------|--------------|-------------------|----------------------------------|
| True  |   |              |                   |              | False             |                                  |
| True  | SEL_351S_Feeder_4_SEL.FM_INST_52A           | SPS          |                   |              | Forceable         | 'Feeder 4, Binaries'             |
| True  | SEL_351S_Feeder_4_SEL.FM_INST_79LO          | SPS          |                   |              | Forceable         | 'Feeder 4, Binaries'             |
| True  | SEL_351S_Feeder_4_SEL.FM_INST_RMB1A         | SPS          |                   |              | Forceable         | 'Feeder 4, Binaries, High Speed' |
| True  | SEL_351S_Feeder_4_SEL.FM_INST_RMB2A         | SPS          |                   |              | Forceable         | 'Feeder 4, Binaries, High Speed' |
| True  | SEL_351S_Feeder_4_SEL.FM_INST_TMB1A         | SPS          |                   |              | Forceable         | 'Feeder 4, Binaries, High Speed' |
| True  | SEL_351S_Feeder_4_SEL.FM_INST_TMB2A         | SPS          |                   |              | Forceable         | 'Feeder 4, Binaries, High Speed' |
| True  | SEL_351S_Feeder_4_SEL.FM_INST_IA            | CMV          |                   |              | Forceable         | 'Feeder 4, Currents'             |
| True  | SEL_351S_Feeder_4_SEL.FM_INST_IB            | CMV          |                   |              | Forceable         | 'Feeder 4, Currents'             |
| True  | SEL_351S_Feeder_4_SEL.FM_INST_IC            | CMV          |                   |              | Forceable         | 'Feeder 4, Currents'             |
| True  | SEL_351S_Feeder_4_SEL.FM_INST_P_WATTS       | MV           |                   |              | Forceable         | 'Feeder 4'                       |
| True  | SEL_351S_Feeder_4_SEL.FM_INST_Q_VARS        | MV           |                   |              | Forceable         | 'Feeder 4'                       |
| True  | SEL_351S_Feeder_4_SEL.FM_INST_VA            | CMV          |                   |              | Forceable         | 'Feeder 4, Voltages'             |
| True  | SEL_351S_Feeder_4_SEL.FM_INST_VB            | CMV          |                   |              | Forceable         | 'Feeder 4, Voltages'             |
| True  | SEL_351S_Feeder_4_SEL.FM_INST_VBAT          | MV           |                   |              | Forceable         | 'Feeder 4, Voltages'             |
| True  | SEL_351S_Feeder_4_SEL.FM_INST_VC            | CMV          |                   |              | Forceable         | 'POU Pins'                       |
| True  | SEL_351S_Feeder_4_SEL.POU.Auto_Configur...  | BOOL         |                   |              | Viewable          | 'POU Pins'                       |
| True  | SEL_351S_Feeder_4_SEL.POU.Initiate_Auto_... | BOOL         |                   |              | Viewable          | 'POU Pins'                       |
| True  | SEL_351S_Feeder_4_SEL.POU.Event_Collecti... | UDINT        |                   |              | Viewable          | 'POU Pins'                       |
| True  | SEL_351S_Feeder_4_SEL.POU.Message_Rece...   | UDINT        |                   |              | Viewable          | 'POU Pins'                       |
| True  | SEL_351S_Feeder_4_SEL.POU.Message_Sent...   | UDINT        |                   |              | Viewable          | 'POU Pins'                       |

**Figure 5.14** Enable Live Data in the Tag Processor

To add tags to Live Data from user logic, use the **LiveData** function block in a custom logic program. The **LiveData** function block requires exactly six inputs at declaration. *Figure 5.15* provides an example of how to declare an instance of this function block.

```

VAR
    Recloser52A : LiveData(
        ADR(SEL_651RA_SEL.FM_INST_52A3P), // Address of tag to be added to Live Data
        '651RA Breaker Status',           // Text to be used on Live Data page
        'SPS',                           // Data type
        '651RA, Binaries',              // Label list (comma separated)
        TRUE,                            // Forceable (TRUE = yes)
        0);                             // Task ID (0 = Main Task, 1 = Automation Task)
END_VAR

```

**Figure 5.15 Example LiveData Function Block Declaration**

The LiveData function block does not need to be called or executed for data to appear on the Live Data page; it must only be declared. However, you can control some aspects of the value's appearance on the Live Data page, and doing this requires calling the function block. *Figure 5.16* provides an example of how to control the visibility and the color of data when displayed on the Live Data page.

```

1  PROGRAM LiveDataProgram
2  VAR
3      Recloser52A : LiveData(
4          ADR(SEL_651RA_SEL.FM_INST_52A3P), // Address of tag to be added to Live Data
5          '651RA Breaker Status',           // Text to be used on Live Data page
6          'SPS',                           // Data type
7          '651RA, Binaries',              // Label list (comma separated)
8          TRUE,                            // Forceable (TRUE = yes)
9          0);                             // Task ID (0 = Main Task, 1 = Automation Task)
10
11     visibility       : BOOL;           // TRUE = visible, FALSE = invisible
12     breakerDataColor : colorRG_t := RED; // Options: red, green, off
13 END_VAR
...
1  Recloser52A(EN := visibility, Color := breakerDataColor);
2

```

**Figure 5.16 Control Visibility and Color of Data on Live Data Page**

## Log Settings

---

### Default Log Entries

Within the Tag Processor, the RTAC has several default log entries of certain system tags to provide common security and audit logs. Default log entries include user log in/log off, user settings changes, the number of logon attempts for a user, and other audit-related tags. These default log items are valuable for security and for troubleshooting system issues and should not be removed.

You can configure the RTAC to log changes of tag values with time-stamped log messages. The log messages are visible in the SOE report located on the RTAC web interface and can be downloaded as a comma-separated variable (CSV) file. You can use the Tag Processor to configure all log settings or you can configure logging in user-defined programs.

The RTAC supports logging of the following tag types:

- **SPS:** log triggered by change of state of .stVal. You must enter a logging on and logging off message for the RTAC to log the change. The function block is called Logger\_SPS.
- **MV:** log triggered by change of the instMag value (based on range parameters in the tag configuration or in the Tag Processor). Logging on and off messages are not configurable, because the range attribute is the message. For example, if the value exceeds the .rangeC.hhLim, the log contains the time of the excursion and the message "High\_High." The function block is called Logger\_MV.
- **CMV:** log triggered by change of the instCval.mag value (based on range parameters in the tag configuration or in the Tag Processor). Logging on and off messages are not configurable, because the range attribute is the message. The function block is called Logger\_CMV.
- **INS:** log triggered by change of the .stVal value (based on range parameters in the tag configuration or in the Tag Processor). Logging on and off messages are not configurable, because the range attribute is the message. The function block is called Logger\_INS.
- **STR:** log triggered by change of string value. Configure a logging on and logging off message. The function block is called Logger\_STR.
- **BOOL:** log triggered by change of Boolean value. Configure a logging on and logging off message. The function block name is Logger\_Basic.
- **ACT, ACD:** log triggered by change of state of .general, .neut, .phsA, .phsB, and .phsC attributes. You must enter a logging on and logging off message for the RTAC to log the change; these messages will be concatenated with the particular attribute name that changed. The function blocks for logging ACT and ACD are called Logger\_ACT and Logger\_ACD.
- **ENS:** log triggered by change of the enumerated value. Configure a logging on and logging off message. Logging of ENS tag types is accomplished with the Logger\_STR function block.
- **Time Change Trigger:** log triggered by the change of the configure time source or the time of the tag if no source is configured. Configure a Time Change Trigger message and check the box for Time Change Trigger. Time change logs and logs based on tag values are mutually exclusive.

Use the following steps to enable logging of a tag.


- Step 1. Click on the **Tag Processor** tab.
- Step 2. Click on the **Options** button in the Tag Processor column header, and select **Logging Layout** from the menu. This will show columns related to logging configuration.

#### NOTE

You must configure the Logging On message, Logging Off message, or the Logging Time Change Trigger message to generate log entries. The RTAC does not log blank messages.

- Step 3. Place the tag you want to log in the **Destination Tag Name** column.
- Step 4. Set **Logging Enable = True**.
- Step 5. Set up other parameters you want to log based on time, value change, edge trigger, etc.

See *Section 3: Tag Processor* for a description of each logging parameter in the Tag Processor grid.

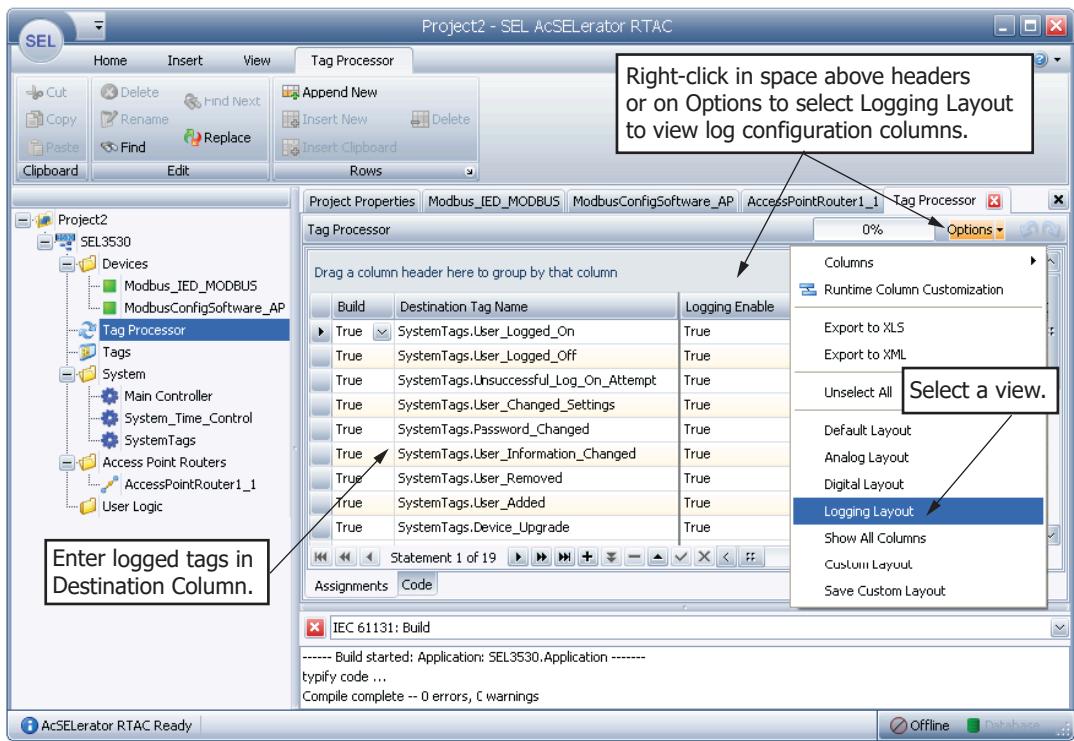

**Figure 5.17 Logging a Tag**

## Other Settings

You can use other logging settings in the Tag Processor to do the following:

- ▶ Set logging categories and priorities.
- ▶ Enable logging of alarms based on high and low alarm limits, change of time or change of state. The logged alarms appear in the event log and flash when in alarm state.

### NOTE

Log messages and categories, can contain US-ASCII or international Unicode characters.

- ▶ Filter alarming and logging with an antichatter filter. This defines the maximum number of changes (Logging Chatter Counts) within a period of time (Logging Chatter Time) that the RTAC permits before it considers the point to be chattering. When the Tag Processor determines the point is chattering, it will remove all but the first entry of this chattering point and log a message indicating this action has been taken.

---

**Example 5.1 Log Lamp Test Button Usage**

This example will illustrate how to log a status change. We will configure the Tag Processor to create a log entry each time you depress or release the lamp test button. See *Figure 5.18* for the completed example. We show here only columns necessary for this example.


- Step 1. In the Tag Processor, insert the tag SystemTags.Lamp\_Test\_Button\_Status.stVal into an open line in the Destination Tag Name column.

This is the status indication of whether the lamp test button has been depressed.

- Step 2. Right-click in space above headers, and select **Logging Layout** to show only the columns related to logging.
- Step 3. Scroll to the right to complete the following configuration changes:

- **Logging Enable:** Set to True to enable logging of this tag.
- **Logging Alarm Enabled:** Optional. Set to True if you want the RTAC to also display the log entry in the Alarm Summary of the RTAC web interface when it logs the point. Set to False to log only.
- **Logging Alarm State:** Optional if Logging Alarm Enabled is True. Determines if the point goes into alarm when the value is True (button depressed) or when the value is False (button released). A pop-up warning appears on the RTAC web interface to notify the user whenever alarms occur.
- **Logging Category:** Set to any string enclosed in single quote marks ('Internal', for example). You can use this category to sort logs when viewing them.
- **Logging On Message:** Set to any string enclosed in single quote marks ('Lamp button depressed', for example). The RTAC logs this message when the status is True.
- **Logging Off Message:** Set to any string enclosed in single quote marks ('Lamp button released', for example). The RTAC logs this message when the status is False.

- Step 4. Save the project and send it to the RTAC.
- Step 5. When the transmission is finished, complete the steps under Viewing Logs Via Web Interface to open the web browser and view the RTAC logs.
- Step 6. Depress the lamp test button long enough for the RTAC to detect the change (lamp test sampling is one second), and note the updated log message at the bottom of the RTAC webpage screen.
- Step 7. Release the button, and note the updated log message reflecting that the button has been released.

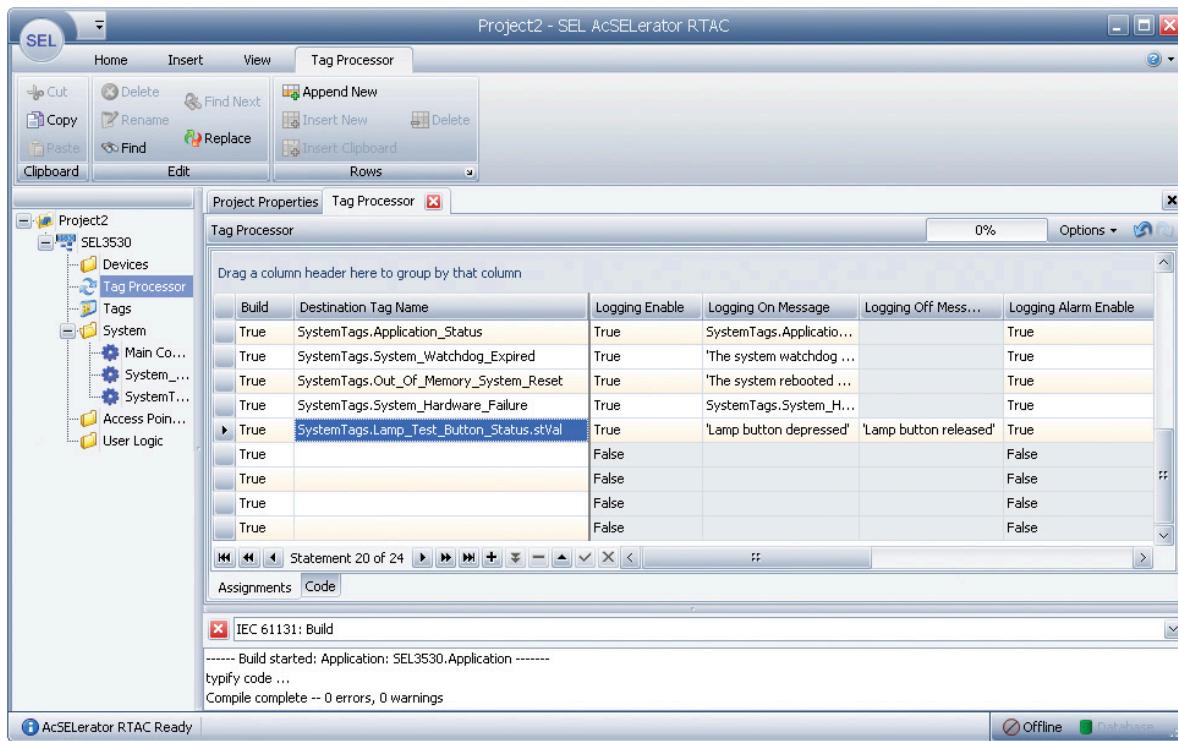**Figure 5.18 Example Log Entry**

### Example 5.2 Log an INS Value With Time Change Trigger

Normally, an INS value is logged based on the change of the range attributes. The resulting log entry shows the time, tag name, and range value (such as High, High\_High, Low, etc.). This example uses the CONCAT function to log the message "My value changed. Value =" along with the INS value each time the time stamp changes.

- Step 1. Right-click in the space above headers, and select the **Logging Layout** to show only the columns related to logging.
- Step 2. Enter an INS tag name and stVal attribute in the Tag Processor Destination Tag Name column.
- Step 3. Configure the following:

| Setting                             | Value   |
|-------------------------------------|---|
| Logging Enable                      | True  |
| Logging Time Change Trigger         | True  |
| Logging Time Change Trigger Message | concat (('My value changed. Value ='),<br>DINT_TO_STRING(test_point.stVal)) |

Each time the INS time value changes, the RTAC will log the defined message string along with the present INS stVal value.

---

#### Example 5.3 Log a Digital Input in an SEL-2240 System

*Example 5.1* illustrated how to log a tag that originates within the RTAC. The time stamp associated with such a point will be the RTAC system time when the log entry is created. This example will show how to log a tag along with a time stamp that is created independently from the RTAC logic engine. The illustration uses a digital input from the SEL-2240, connected via EtherCAT protocol. The same principles apply to other protocols, such as DNP or C37.118.

- Step 1. Create a project that includes an I/O network and at least one SEL-2240 Digital Input Module. Refer to *EtherCAT* on page 196 for specific configuration steps.
- Step 2. In the Tag Processor, insert the SOE tag for input\_001. As described in *DC Mode Processing (DC Control Voltage)* on page 210, this tag includes a time stamp that is accurate within 1 ms, regardless of the logic engine task cycle time. Verify that the debounce settings for this input are appropriate for the application.

As you can see in *Figure 5.19*, enter the tag name without the .stVal attribute. The SPS tag type includes a time attribute that will contain the original time stamp. If you enter the tag name with the .stVal attribute, the logged time stamp will be the RTAC system time when the log is created.

| Build  | Destination Tag Name                  | DT Data Type | Logging Enable | Log Initial State | U  |
|--------|---------------------------------------|--------------|----------------|-------------------|----|
| True   | SystemTags.Port_Power_Overcurrent     | SPS          | True           | False             | Fr |
| True   | SystemTags.Application_Status         | STR          | True           | False             | Fr |
| True   | SystemTags.System_Watchdog_Expired    | STR          | True           | False             | Tr |
| True   | SystemTags.Out_Of_Memory_System_Reset | STR          | True           | False             | Tr |
| True   | SystemTags.System_Hardware_Failure    | STR          | True           | False             | Tr |
| True   | SystemTags.HMI_Control_Operation      | STR          | True           | False             | Fr |
| True   | SystemTags.HMI_Analog_Write_Operation | STR          | True           | False             | Fr |
| ► True | Node_1_Slot_B_ECAT.INPUT_SOE_001      | SPS          | False          |                   | Fr |

**Figure 5.19 Example 5.3 Tag Entry**

- Step 3. Scroll to the right to complete the logging configuration changes you want. See *Example 5.1* for details.
  - Step 4. Save the project, and send it to the RTAC.
  - Step 5. Assert the contact input, and view the log by using the instructions shown in *Viewing Logs Via Web Interface* on page 648.
- 

## Viewing Logs Via Web Interface

---

You can view logs in the RTAC's web interface. The web interface log entries contain all the data related to a particular log. Notice the log entry in *Figure 5.20* of several log in attempts. The username is left as **Unknown** until three consecutive attempts, at which time the user is locked out and the user's name is logged. **Feeder1 breaker**, configured to display when in alarm, is red when logged in alarm state and returns to black when the state returns to normal. The **Alarm Summary** is very similar to the SOE report with the exception that it

contains only logged items that are configured with Logging Alarm Enabled, and it also automatically updates every 10 seconds to show any new or updated entries. Use the following steps to configure the log entry to show only columns you want:

- Step 1. Connect to the RTAC through one of the Ethernet ports or the USB-B interface.
- Step 2. Open a web browser.
- Step 3. Enter **HTTPS://** followed by the RTAC Ethernet address.

#### NOTE


The RTAC and PC must be on the same Ethernet subnet to enable web communications.

- Step 4. Log in to the RTAC web interface.
- Step 5. Note the alarm summary at the bottom of each webpage.
- Step 6. To view all logs, events, and alarms, click **Alarm Summary** or **SOE** under **Reports**.
- Step 7. Filter the report as needed using the filtering categories located at the top of the page.
- Step 8. Apply a check to any items on this list that you want to clear from the list or acknowledge.
- Step 9. Select an action from the **Actions** drop-down list to apply to the entries that are checked.

| Details                          | Time Stamp | Priority | Category | Tag Name                               | Message   | Ack Time Stamp | Origin   |
|----------------------------------|------------|----------|----------|--|---|----------------|----------|
| [ open ] 2015-09-02 19:39:14.004 |            |          | FEEDER1  | Tags.Feeder1_breaker                   | CLOSE   |                | SEL_RTAC |
| [ open ] 2015-09-02 19:39:00.019 |            |          | FEEDER1  | Tags.Feeder1_breaker                   | TRIP  |                | SEL_RTAC |
| [ open ] 2015-09-02 19:38:14.611 |            |          | Security | SystemTags.User_Logged_On              | sel logged on device via Web  |                | SEL_RTAC |
| [ open ] 2015-09-02 19:38:02.416 |            |          | Security | SystemTags.Unsuccessful_Log_On_Attempt | hacker login attempt failed - Lockout   |                | SEL_RTAC |
| [ open ] 2015-09-02 19:38:02.103 |            |          | Security | SystemTags.Unsuccessful_Log_On_Attempt | Unknown login attempt failed  |                | SEL_RTAC |
| [ open ] 2015-09-02 19:37:47.051 |            |          | Security | SystemTags.Unsuccessful_Log_On_Attempt | Unknown login attempt failed  |                | SEL_RTAC |
| [ open ] 2015-09-02 19:37:42.940 |            |          | Security | SystemTags.Unsuccessful_Log_On_Attempt | Unknown login attempt failed  |                | SEL_RTAC |
| [ open ] 2015-09-02 19:37:20.142 |            |          | Security | SystemTags.User_Changed_Settings       | Time System modified settings   |                | SEL_RTAC |
| [ open ] 2015-09-02 19:37:18.476 |            |          | Security | SystemTags.User_Logged_Off             | sel logged off device via ODBC  |                | SEL_RTAC |
| [ open ] 2015-09-02 19:37:18.249 |            |          | Security | SystemTags.User_Logged_Off             | sel logged off device via ODBC  |                | SEL_RTAC |
| [ open ] 2015-09-02 19:37:16.514 |            |          | Internal | SystemTags.Power_Up_Description        | RTAC started with firmware: SEL-3530-X885-V1-Z001001-D20150829, project: Project2 |                | SEL_RTAC |
| [ open ] 2015-09-02 19:37:12.574 |            |          | Security | SystemTags.User_Logged_On              | sel logged on device via ODBC   |                | SEL_RTAC |
| [ open ] 2015-09-02 19:37:12.473 |            |          | Security | SystemTags.User_Logged_Off             | sel logged off device via ODBC  |                | SEL_RTAC |
| [ open ] 2015-09-02 19:37:07.765 |            |          | Security | SystemTags.User_Logged_Off             | sel logged off device via ODBC  |                | SEL_RTAC |
| [ open ] 2015-09-02 19:37:00.086 |            |          | Security | SystemTags.User_Changed_Settings       | sel modified settings   |                | SEL_RTAC |

**Figure 5.20 View SOE Summary**

You can also clear all logs from the web interface in one step. Under the **System** heading, click on **Device Management**. Select the **Delete Logs** check box, and then click **Submit**. This operation cannot be undone.

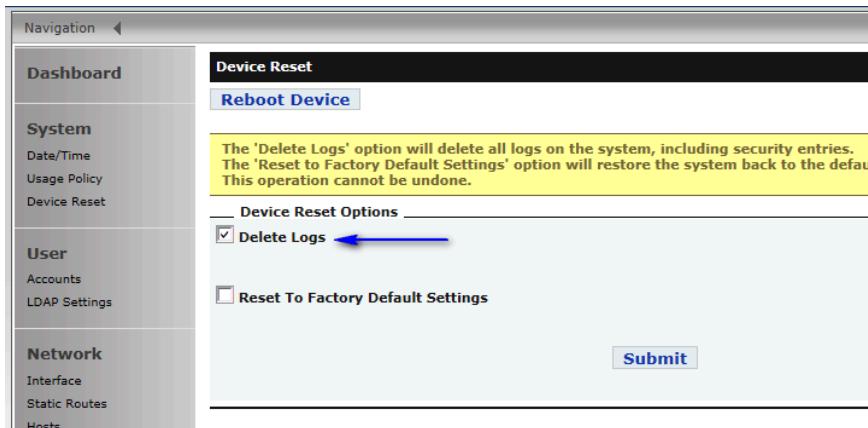**Upload Projects From the Web Interface****Figure 5.21 Delete Logs**

## **Upload Projects From the Web Interface**

Starting with firmware version R136, the RTAC supports a project-upload feature for the web interface. This feature allows you to send previously exported project files to the RTAC even when the ACCELERATOR RTAC software is not installed on the computer. This function is available for Administrator, Engineer, and HMI Operator user accounts. See *Section 7: Security and Account Management* for more information on web-interface user-account privileges.

- Step 1. Connect to the RTAC through one of the Ethernet ports or the USB-B interface.
- Step 2. Open a web browser.
- Step 3. Enter **HTTPS://** followed by the RTAC Ethernet address.
- Step 4. Log into the RTAC web interface.
- Step 5. Under the **System** heading, select **Project Management**.
- Step 6. Select **Choose File**, locate the desired project file, and click **Open**.
- Step 7. Select **Upload**. Note that once successfully uploaded, the project is loaded into the internal memory of the RTAC as an inactive project.
- Step 8. Once uploaded, the project name appears in the list. Click **Activate** to apply the settings to the connected RTAC.

**NOTE**

If you have created a custom password for the exported project, the RTAC will prompt you to enter the password before it is enabled in the RTAC. See *Section 7: Security and Account Management* for more details on encrypting passwords.


**NOTE**

Project EXP files created in ACCELERATOR RTAC version 1.35.151.xxx or newer are only compatible with the Web Project Upload feature in RTAC firmware versions R147-VO or later.

If there is insufficient storage space on the RTAC to store an uploaded file, the error message, "ERROR: Insufficient storage space," will display.

An attempt to upload a file with an extension other than .exp results in the software displaying the error message, "ERROR: Invalid Project File."


You can use the applicable buttons to rename or delete projects that have been uploaded to the **Project Upload** page. To organize the project list, click the **Create Directory** button to create a new folder. Add existing projects in the list to the directory by left-clicking and dragging the project file icon  into the folder.

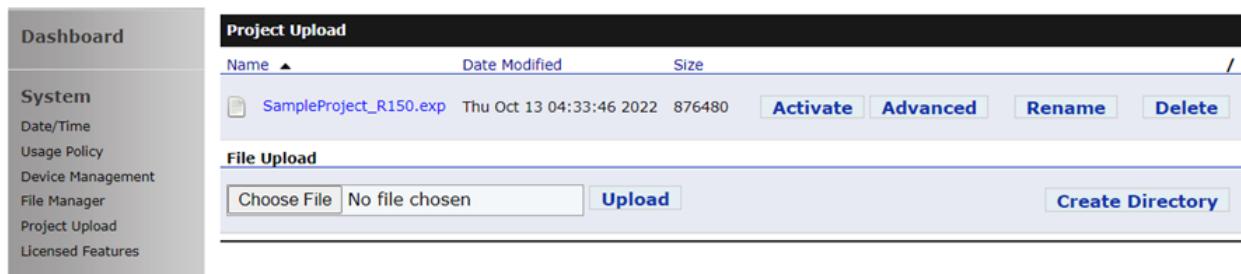

The screenshot shows the 'Project Upload' section of the web interface. On the left is a sidebar with links to 'Dashboard', 'System' (including Date/Time, Usage Policy, Device Management, File Manager, Project Upload, Licensed Features), and 'File Manager'. The main area has a header 'Project Upload' with columns for 'Name', 'Date Modified', and 'Size'. A single project, 'SampleProject\_R150.exp', is listed with details: Thu Oct 13 04:33:46 2022, 876480 bytes. Below this is a 'File Upload' section with a 'Choose File' input set to 'No file chosen', an 'Upload' button, and a 'Create Directory' button.

**Figure 5.22 Project Upload Screen**

Starting in R147, projects uploaded via the web interface can be activated with advanced settings that may be embedded with the uploaded project. These can be selected individually by selecting the **Advanced** button, checking the boxes beside the individual items and then clicking **Activate**.

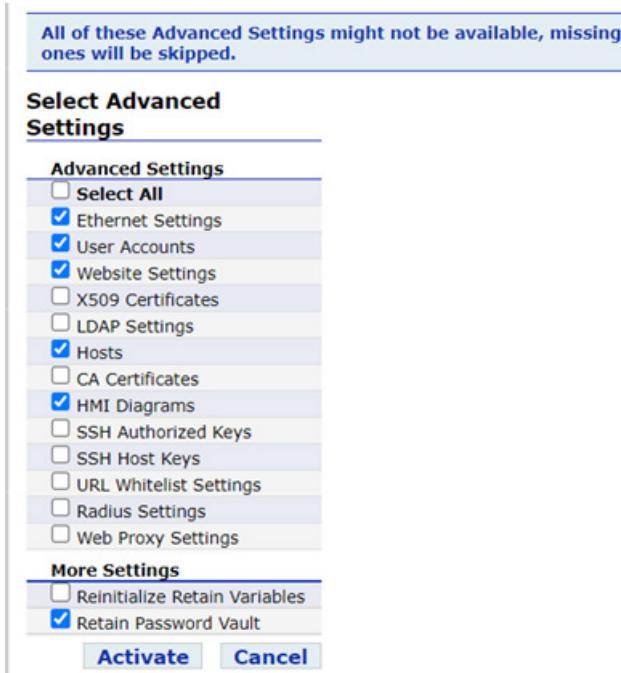

This is a modal dialog titled 'Select Advanced Settings'. It contains a message box at the top stating 'All of these Advanced Settings might not be available, missing ones will be skipped.' Below is a list of 'Advanced Settings' with checkboxes. Most checkboxes are checked. At the bottom are 'More Settings' checkboxes, and buttons for 'Activate' and 'Cancel'.

| Advanced Settings                   |                        |
|-------------------------------------|------------------------|
| <input type="checkbox"/>            | Select All             |
| <input checked="" type="checkbox"/> | Ethernet Settings      |
| <input checked="" type="checkbox"/> | User Accounts          |
| <input checked="" type="checkbox"/> | Website Settings       |
| <input type="checkbox"/>            | X509 Certificates      |
| <input type="checkbox"/>            | LDAP Settings          |
| <input checked="" type="checkbox"/> | Hosts                  |
| <input type="checkbox"/>            | CA Certificates        |
| <input checked="" type="checkbox"/> | HMI Diagrams           |
| <input type="checkbox"/>            | SSH Authorized Keys    |
| <input type="checkbox"/>            | SSH Host Keys          |
| <input type="checkbox"/>            | URL Whitelist Settings |
| <input type="checkbox"/>            | Radius Settings        |
| <input type="checkbox"/>            | Web Proxy Settings     |

**More Settings**

|                                     |                               |
|-------------------------------------|-------------------------------|
| <input type="checkbox"/>            | Reinitialize Retain Variables |
| <input checked="" type="checkbox"/> | Retain Password Vault         |

**Activate**   **Cancel**

**Figure 5.23 Project Upload Screen**

## RAID Support and Configuration

---

### RAID—Redundant Array of Independent Disks

The SEL-3555 provides RAID-1 storage management for the RTAC's file system data. RAID-1 manages mirrored copies of its file system data on two disks and enhances the RTAC's data storage resiliency. Only SEL-3555 RTACs that include three or more solid-state drives (SSDs) are compatible with RAID data management.

### NOTE

When a RAID is created using disks of different sizes, each resulting RAID component is constrained to the size of the smallest disk in the RAID.

## Setting and Initializing RAID

Configure RAID settings using the RTAC web interface. Select the **Device Management** link from the navigation panel to view and edit the RAID settings. The system disk (designated as "System") includes the RTAC firmware image and is not compatible with RAID. *Figure 5.24* shows the RAID settings for an RTAC with four SSDs.

RAID

Disks allocated to RAID are dedicated to data storage only. Existing data will be moved from the system disk to the RAID.

RAID Settings

SATA-04 (System)  
 SATA-03  
 SATA-02  
 SATA-01

Create

Select SATA ports containing disks to dedicate to RAID.

Figure 5.24 RAID Setting View With All SATA Ports Occupied

Activate RAID storage using at least two of the non-System SATA disks. Select the desired SATA ports to dedicate to RAID and select the **Create** button. Once initialized, the RTAC will begin synchronizing all RAID components. The following table lists the possible RAID states based on the number of operational disks in the RAID configuration:

| Number of Operational Disks in RAID | Normal Operation   | Error State(s)  |
|-------------------------------------|--|---|
| One                                 | RAID status is <i>Degraded</i> , indicating that RAID is operational after completing initialization, but only one disk is present and redundancy is not available.  | If a RAID disk fails, the RAID status is <i>Failed</i> .    |
| Two                                 | RAID status is <i>Ready</i> , indicating that RAID has completed initializing and is fully synchronized.   | If both RAID disks fail, the RAID status is <i>Failed</i> . |
| Three                               | RAID status is <i>Ready</i> , indicating that RAID has completed initializing and is fully synchronized. In this state, the RTAC uses a third disk designated as a spare for automatic RAID recovery when one of the active disks fail.<br>RAID activates a <i>Rebuild</i> to synchronize data to the spare disk if either of the active disks fail. | If all RAID disks fail, the RAID status is <i>Failed</i> .  |

## Identifying a Failed Disk

The following example provides methods for identifying a SATA disk failure. The example system consists of a three-disk RAID where SATA Ports 1 and 2 are synchronized and SATA Port 3 is available as a spare disk. In this example, the disk in SATA-01 fails and RAID rebuilds the spare SATA-03 for mirroring.



**Figure 5.25 Web Page View Normal Operation Three-Disk RAID**


The following three methods provides indication that a SATA 1 disk failed:

1. The RTAC's Sequence of Events (SOE) by default logs any changes in the RAID status. In this three-disk RAID example, the RAID status message will be "RAID-1 (mirror) using SATA-02 and SATA-03 is rebuilding". If a RAID status message SOE log appears, follow the next two steps to check SATA port status.
2. SATA port status information is available in the RTAC's Web Interface via the **Device Management** link. The RTAC Web Page provides the individual SATA port status. The failed disk is indicated by "Failed" next to the SATA port. See *RAID and SATA Status Information on page 654* for further details regarding status messages.



**Figure 5.26 Web Interface SATA Port Failure Indication**

3. The RTAC's SystemTags also provide SATA port status information. If connected to RTAC via ACCELERATOR RTAC, view the RTAC's SATA RAID Status system tags.

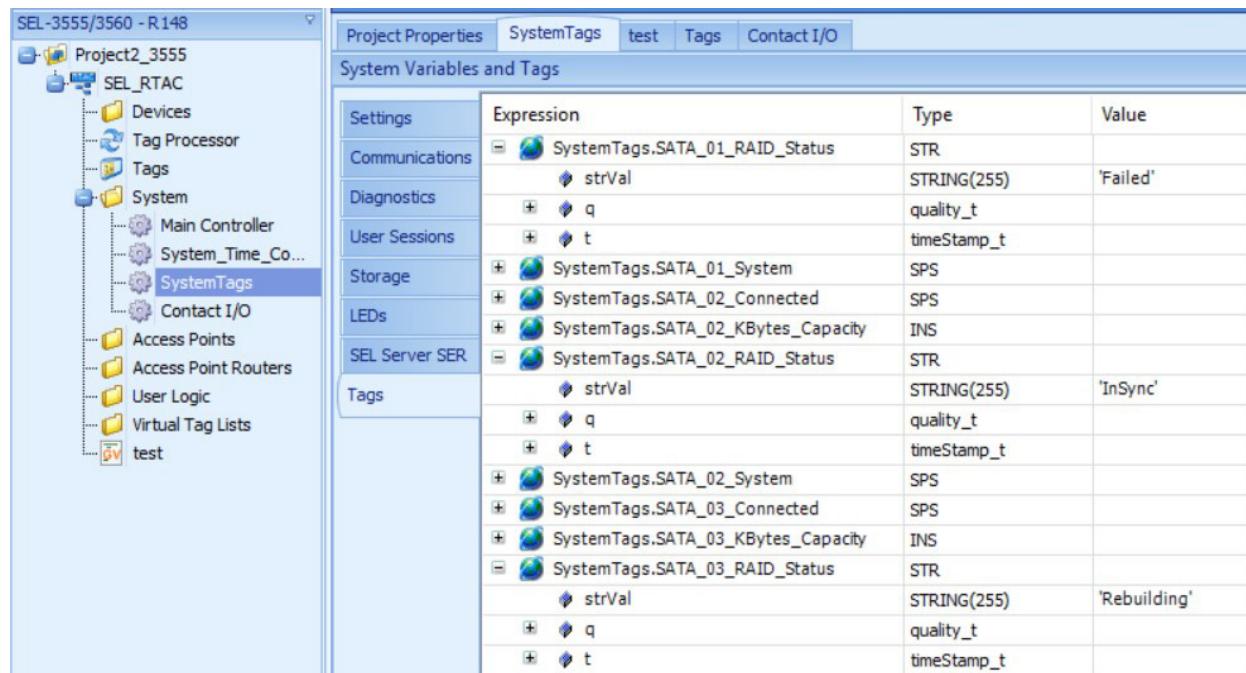

**Figure 5.27** ACSELERATOR RTAC SATA Port SystemTags View

After identifying a failed disk, see *SATA Drives* in the *SEL-3555 Instruction Manual* for details on removing and installing a new disk. Once a failed disk has been replaced, RAID will automatically initialize and begin rebuilding a copy of the file system data on the new disk.

## RAID and SATA Status Information

The following table describes the possible states that RAID may operate in:

| Status       | Description   |
|--------------|---|
| Initializing | RAID is created and synchronizing for the first time.                 |
| Ready        | RAID has finished initializing/rebuilding and is ready for operation. |
| Degraded     | RAID is operational but is missing disks.                             |
| Rebuilding   | RAID was previously Degraded and is now re-synchronizing.             |
| Failed       | All the disks in the RAID have failed or are missing.                 |
| Checking     | The RAID is operational, and an integrity check is being performed.   |

Additionally, the following table describes the possible states that SATA bays may operate in:

| Status     | Description  |
|------------|--|
| InSync     | The disk is in the RAID and is fully synchronized. |
| Rebuilding | The disk is currently rebuilding in the RAID.      |
| Spare      | The disk is reserved as a hot-spare for the RAID.  |
| Failed     | The disk was in the RAID and failed.               |

---

---

## S E C T I O N   6

---

# Axion Bay Control and SEL Touchscreen

## Overview

---

The SEL-2240 Axion Bay Controller combines modular I/O cards, advanced automation, a powerful logic engine, current and voltage measurements, a programmable color touchscreen display, and advanced communication protocols to provide comprehensive monitoring and reliability for your bay control application. Choose from a variety of digital and analog modules to fit your application requirements. The advanced automation capability combined with the diversity and flexibility of I/O modules allows you to implement any blocking or interlocking scheme required by the switching devices in your substation. Use the Axion Bay Controller as an economical and powerful alternative for monitoring and controlling one or more substation bays at the transmission or distribution level.

The 10-slot SEL-2242 can be configured with an optional LCD touchscreen. This option is only available in rack-mount configurations, and an SEL-2241 must be installed in Slot A for proper operation.

## Navigating SEL Touchscreen Applications

---

The touchscreen provides the ability to configure custom screens to monitor breakers, disconnect switches, and analog and digital quantities as well as the ability to control the position of breakers and switches. Additionally, the touchscreen provides default applications for viewing SOE reports and device information, as well as updating device settings.

This section covers all configuration aspects of the touchscreen applications and features. The Home screen is the introductory screen containing all folders and applications. The additional applications provide access to settings, reports, and device information, as well as any custom screens you have created. The following folders and applications are available from the Home screen:

- Custom Screens Application
- Reports Folder
  - Sequence of Events (SOE) Application
  - Alarm Summary Application
- Settings Folder
  - Port F Application
  - Touchscreen Settings Application

- Device Information Folder
  - RTAC Status Application
    - Device Information Screen
    - System Statistics Screen
  - EtherCAT Information Application
    - EtherCAT Status Screen
    - Module Status Screen
- User Login Folder
- Rotating Display Application
- Alarm Application Screens

## Custom Screens Application

Design custom screen configurations for the touchscreen to match your system. Display your bay configuration as a single-line diagram on the touchscreen. You can create as many as 25 custom screens. Create detailed single-line diagrams using operational buttons, breakers, disconnect switches, analog labels, digital labels, and ANSI and IEC symbols. This variety of elements allows for designing custom screens that reflect the status of the breaker and disconnects, bus voltages, and power flow through the breaker. In addition to single-line diagrams, you can design custom screens to show the status of digital and analog tags defined in the RTAC logic engine. Use ACCELERATOR® Bay Screen Builder SEL-5036 Software in conjunction with ACCELERATOR RTAC to design your custom screens.

## Circuit Breaker Symbol Settings and Status Logic

The Axion Bay Controller supports as many as 120 circuit breakers. Use the fb\_BreakerOpenControl and fb\_BreakerCloseControl function blocks in the PowerSystemAutomation library to implement appropriate circuit breaker operation logic for open and close commands from the touchscreen. These function blocks handle local and remote control operations and breaker interlock conditions. For more information on these function blocks, refer to the PowerSystemAutomation section in the Programming Reference instruction manual.

*Table 6.1* shows typical ANSI and IEC breaker symbols that are supported by Bay Screen Builder.

**Table 6.1 Breaker Control States**

| Type                             | Breaker Color Sequence <sup>a</sup> | State 1 (Closed) | State 2 (Open) | State 3 (Alarm) |
|----------------------------------|-------------------------------------|------------------|----------------|-----------------|
| ANSI Breaker                     | Red, Green, Amber                   |                  |                |                 |
| ANSI and IEC Load Breaker Switch | Red, Green, Amber                   |                  |                |                 |

| Type              | Breaker Color Sequence <sup>a</sup> | State 1 (Closed)  | State 2 (Open)  | State 3 (Alarm)   |
|-------------------|-------------------------------------|---|---|---|
| IEC Truck Breaker | Red, Green, Amber                   |  |  |  |

<sup>a</sup> Bay Screen Builder allows you to set the breaker color sequence property for each of these states to match your system convention.

## Disconnect Switch Control

The Axion Bay Controller supports as many as 120 two-position disconnect switches and 120 three-position disconnect switches. Use the `fb_DisconnectSwitchControl` function block in the `PowerSystemAutomation` library to implement appropriate disconnect switch operation for open and close commands from the touchscreen. This function block handles local and remote control operations, interlock conditions, and immobility conditions, and also provides switch alarm and status information. For more information on these function blocks, refer to the `PowerSystemAutomation` section in the Programming Reference instruction manual.

*Table 6.2* shows typical ANSI and IEC disconnect switch symbols that are available to use in custom screens.

**Table 6.2** Disconnect Switch Control States

| Type  | Interior Color      | State 1 (Closed)   | State 2 (Open)  | State 3 (Alarm)   |
|---|---------------------|--|---|---|
| ANSI and IEC Disconnect (Two-Position)                  | Gray or Transparent |   |  |  |
| ANSI and IEC Motor-Operated Disconnect (Two-Position)   | Gray or Transparent |   |  |  |
| ANSI and IEC Disconnect (Three-Position)                | Gray or Transparent | <br> |  |  |
| ANSI and IEC Motor-Operated Disconnect (Three-Position) | Gray or Transparent | <br> |  |  |

## Three-Position Disconnect Switch Control Options

The control options available on a three-position disconnect switch depend on the state of the in-line and earthing switch position. *Table 6.3* shows the control options available based on the state of the switches.

**Table 6.3 Three-Position Disconnect Switch**

| State  | Control Option 1 | Control Option 2  |
|--|------------------|-------------------|
| In-Line Switch Position: <b>Closed</b><br>Earthing Switch Position: <b>Open</b>              | OPEN IN-LINE SW  | CLOSE IN-LINE SW  |
| In-Line Switch Position: <b>Open</b><br>Earthing Switch Position: <b>Open</b>                | CLOSE IN-LINE SW | CLOSE EARTHING SW |
| In-Line Switch Position: <b>Open</b><br>Earthing Switch Position: <b>Closed</b>              | OPEN EARTHING SW | CLOSE EARTHING SW |
| In-Line Switch Position: <b>Any</b><br>Earthing Switch Position: <b>In-Progress or Alarm</b> | NO CONTROL       | NO CONTROL        |
| In-Line Switch Position: <b>In-Progress or Alarm</b><br>Earthing Switch Position: <b>Any</b> | NO CONTROL       | NO CONTROL        |
| In-Line Switch Position: <b>Closed</b><br>Earthing Switch Position: <b>Closed</b>            | NO CONTROL       | NO CONTROL        |

## Digital and Analog Labels

The Axion Bay Controller supports as many as 1,000 digital labels and 480 analog labels across all custom screens. You can use digital labels to show text on the screen based on the status value of a Boolean tag or expression, and analog labels to show the numeric value of an RTAC analog tag (REAL or Integer).

## Navigation and Operation Buttons

The Axion Bay Controller supports as many as 100 navigation buttons and 100 operation buttons across all custom screens. Use operation buttons to send control commands to the RTAC logic engine. Navigation buttons provide a way to link to other screens, allowing you to map on-screen buttons to navigate to a chosen screen.

## Single Screen Limitations

Each custom screen element contains status tag inputs for displaying the status of that element. Status tag inputs require an RTAC tag or expression mapped to these inputs (see *Tag Mapping on page 681*). The sum of the number of status tags across all symbols in a single screen must not exceed 120. *Table 6.4* shows how many status tags are used for each screen item.

**Table 6.4 Status Tags Per Screen Items**

| Symbol                           | Status Tags |
|----------------------------------|-------------|
| Circuit Breaker                  | 3           |
| Disconnect Switch                | 4           |
| Three-Position Disconnect Switch | 8           |

| Symbol        | Status Tags |
|---------------|-------------|
| Digital Label | 1           |
| Analog Label  | 1           |


## Local/Remote Control

The Axion Bay Controller requires user logic for controlling breakers and disconnect switches either locally via the touchscreen or remotely via the communication protocols. RTAC projects with firmware version R152 and later provide the option to enable a global local/remote control function that supervises the operation of breakers and disconnect switches. Apply this supervision by defining the local and remote close conditions and by using the PowerSystemAutomation library's disconnect switch and breaker control function blocks to make the local control logic assignments. To enable local/remote control supervision of the breaker and disconnect switches, navigate to the SEL Touchscreen **Settings** tab and set **Enable Global Local/Remote Mode** to **True**, as shown in *Figure 6.1*.



**Figure 6.1** Enable Global Local/Remote Mode Setting

Once the project is saved, assign a Boolean logical input to the Touchscreen **Local** POU input pin either via the Controller CFC block or via external an POU.

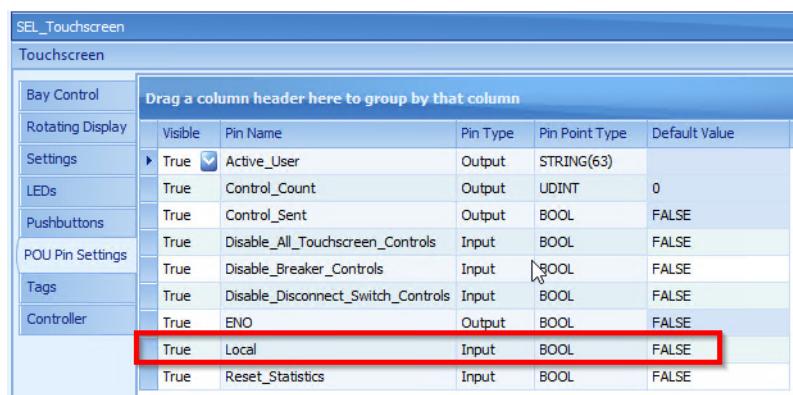

**Figure 6.2** Local POU Input Pin

### NOTE

The Local POU pin is hidden when **Enable Global Local/Remote Mode** is False.

The Axion Touchscreen performs the following based on the states of the Enable Global Local/Remote Mode input and the Local POU input pin.

- When **Enable Global Local/Remote Mode** is False, the Local POU input pin is hidden, and the Axion Touchscreen processes open and close commands from the front panel. When this mode is active, "LR" appears in the Axion touchscreen footer.
- When **Enable Global Local/Remote Mode** is True, the Local POU input pin is available. If the Local POU input evaluates to False, the Axion control is in Remote mode, and any controls attempted from the touchscreen are rejected and the touchscreen breaker and disconnect switch tags are not updated. When this mode is active, "R" appears in the Axion touchscreen footer.
- When **Enable Global Local/Remote Mode** is True and the Local POU input evaluates to True, the Axion control is in Local mode. Any controls attempted from the touchscreen are accepted and the touchscreen breaker and disconnect switch tags update. When this mode is active, "L" appears in the Axion touchscreen footer.

For an example use case of the Enable Global Local/Remote Mode setting, see the PowerSystemAutomation section of the SEL RTAC Programming Reference instruction manual.

## SOE Application Configuration

The SOE application allows you to view the most recent 1,024 SOE reports from the touchscreen. Apply the logging category filter to limit the logs to specific categories defined in the Tag Processor.

### SOE and Alarm Category Filter Configuration

The SOE application provides the ability to display only those logs that are relevant to your application. By default, any tag configured in the Tag Processor (*Tag Processor Data Entry on page 580*) with the SOE Logging Category of "Bay Control" is displayed in the SOE report. An empty SOE and Alarm Category results in displaying all RTAC SOE logs in the SOE application. To include additional logging categories, update the SEL Touchscreen setting **SOE and Alarm Category Filter** to include the desired logging categories. The setting input format is a comma-separated list of IEC 61131-3 strings. *Figure 6.3* shows the expected formatting for the requirement.

| SEL_Touchscreen       |                                       |  |                                    |
|-----------------------|---------------------------------------|--|------------------------------------|
| Touchscreen           |                                       |  |                                    |
| Bay Control           | Setting                               | Value  | Range                              |
| Announcer             | Unacknowledged Tile Indication        | True   | True, False                        |
| SOE and Alarm Summary | SOE and Alarm Category Filter         | 'Bay Control', 'Station 1 Control', 'Tie Bay Status' | List of STRING(255)                |
|                       | Disable SOE and Alarm Tag Name Column | False  | True, False                        |
| Touchscreen           | Date Format                           | YMD  | DMY, MDY, YMD                      |
|                       | Display Home Screen                   | home   | home, Navigation Favorites [sl...] |
|                       | Display Time-Out                      | 15   | 1-30 (minutes)                     |
|                       | Rotating Display Transition Time      | 5  | 3-15 (seconds)                     |
|                       | Backlight Active Brightness           | 6  | 1-10                               |
|                       | Enable Global Local/Remote Mode       | False  | True, False                        |

Figure 6.3 SOE Logging Category Filter Example

## SOE and Alarm Summary Display Column Configuration

By default, the SOE application layout includes the following columns: Date, Time, Tag Name, and Message. The **Logging Display Tag Name** column of the Tag Processor allows you to set a descriptive message to be displayed on the **Tag Name** column of the SOE application of the SEL Touchscreen. If the **Logging Display Tag Name** column is left empty, then the **Tag Name** column shows the name of the tag that drives the alarm point (the tag name configured in the **Destination Tag Name** column of the Tag Processor). SEL-2241 RTAC firmware versions R152 and later allow you to hide the Tag Name column by setting the SEL Touchscreen setting **Disable SOE and Alarm Tag Name Column** to True. Figure 6.4 shows the SOE application layout with the Tag Name column disabled.

| Sequence of Events |          |              | 2023/09/11   22:06:41        |
|--------------------|----------|--------------|------------------------------|
|                    | DATE     | TIME         | MESSAGE                      |
| ◀                  | 23/09/11 | 21:42:37.054 | Substation Breaker Opened    |
| ▶                  | 23/09/11 | 21:42:37.054 | Substation Breaker Closed    |
| ✖                  | 23/09/11 | 21:30:10.096 | Breaker Isolation Complete   |
| ✖                  | 23/09/11 | 21:30:10.096 | Breaker SF6 Pressure Alarm   |
| ✖                  | 23/09/11 | 21:30:10.096 | Substation Breaker Opened    |
| ▲                  | 23/09/11 | 20:53:40.500 | Breaker SF6 Pressure Warning |
| ▼                  | 23/09/11 | 20:53:29.200 | Breaker SF6 Pressure Alarm   |
| ▼                  | 23/09/11 | 20:53:23.600 | Substation Breaker Closed    |

Figure 6.4 SOE Application Layout When Disable SOE and Alarm Tag Name Column Is True

## SOE Tag Slicing

The SOE application automatically formats tags that exceed 20 characters via tag slicing to improve tag name visibility on the SOE screen. Slicing occurs by adding two periods ("..") so that the first 12 and last 8 characters of the tag are displayed with ".." in between the start and the end of the tag name.

If a tag name or message exceeds the Tag Name and Message column width, the SOE screen clips the rightmost characters to fit the message in the tag window. Use the Logging Display Tag Name of the Tag Processor (*Tag Processor Data Entry on page 580*) to create display names that fit within the touchscreen. *Figure 6.5* and *Figure 6.6* show an example configuration of the tag processor **Logging Display Tag Name** setting and the updated touchscreen SOE reports tag name.

| Tag Processor                                     |                           |                  |                    |                     |
|---|---------------------------|------------------|--------------------|---------------------|
| Drag a column header here to group by that column |                           |                  |                    |                     |
| Build   | Destination Tag Name      | Logging Category | Logging On Message | Logging Off Message |
| True  | SEL_24DI_1_ECAT.INPUT_001 | 'Bay Control'    | 'Asserted'         | 'Deasserted'        |

**Figure 6.5** Tag Processor Logging Display Tag Name Configuration

| Sequence of Events |          |              |                      | 2024/04/29 | 22:36:49 |
|--------------------|----------|--------------|----------------------|------------|----------|
|                    | DATE     | TIME         | TAG NAME             | MESSAGE    |          |
| ↶                  | 24/04/29 | 23:00:02.122 | SEL_24DI_1.INPUT_001 | Deasserted |          |
| ⏸                  | 24/04/29 | 23:00:00.658 | SEL_24DI_1.INPUT_001 | Asserted   |          |
| ↑                  | 24/04/29 | 22:25:26.400 | Switch 1             | Closed     |          |
| ↓                  | 24/04/29 | 22:25:26.400 | SF6 Pres Alarm       | Deasserted |          |
| ↑                  | 24/04/29 | 22:25:26.400 | SF6 Pres Warn        | Deasserted |          |
| ↓                  | 24/04/29 | 22:25:24.400 | Switch 1             | Opened     |          |
| ↑                  | 24/04/29 | 22:25:24.400 | SF6 Pres Alarm       | Asserted   |          |
| ↓                  | 24/04/29 | 22:25:24.400 | SF6 Pres Warn        | Asserted   |          |

Page 1 / 3



**Figure 6.6** SOE Display Tag Name Comparison

## SOE Date Display Configuration

Configure the SOE screen date display in the ACCELERATOR RTAC SEL Touchscreen Settings. *Table 6.5* shows the possible date display options.

**Table 6.5** Touchscreen Date Display Format

| Date Format Setting Value | SOE Screen Date Display <sup>a</sup> |
|---------------------------|--------------------------------------|
| MDY                       | mm/dd/yyyy                           |
| YMD                       | yyyy/mm/dd                           |
| DMY                       | dd/mm/yyyy                           |

<sup>a</sup> "mm" is the two-digit month, "dd" is the two-digit day, and "yyyy" is the four-digit year.

Additionally, modifications to the "Date Format" setting are reflected in the header of all screens.

## SOE Automatic Refresh

SEL-2241 RTAC firmware versions R152 and later provide the capability to automatically refresh the SOE screen. The device has two operating modes: Play and Pause. The SOE application defaults to Play mode, which automatically refreshes the screen as new data are available. In Play Mode, the SOE application displays the most recent logs and disables the navigation buttons (the up and down arrows), as shown in *Figure 6.7*.

| Sequence of Events |          |              |                       | 2024/04/29   22:44:26 |
|--------------------|----------|--------------|-----------------------|-----------------------|
|                    | DATE     | TIME         | TAG NAME              | MESSAGE               |
| ↻                  | 24/04/29 | 23:00:02.122 | SEL_24DI_1..INPUT_001 | Deasserted            |
|                    | 24/04/29 | 23:00:00.658 | SEL_24DI_1..INPUT_001 | Asserted              |
|                    | 24/04/29 | 22:25:26.400 | Switch 1              | Closed                |
|                    | 24/04/29 | 22:25:26.400 | SF6 Pres Alarm        | Deasserted            |
| ☒                  | 24/04/29 | 22:25:26.400 | SF6 Pres Warn         | Deasserted            |
| ▲                  | 24/04/29 | 22:25:24.400 | Switch 1              | Opened                |
| ▼                  | 24/04/29 | 22:25:24.400 | SF6 Pres Alarm        | Asserted              |
| ▼                  | 24/04/29 | 22:25:24.400 | SF6 Pres Warn         | Asserted              |
| Page 1 / 3         |          |              |                       |                       |

**Figure 6.7 SOE Application in Play Mode**

To scroll through the SOE logs, press the Pause button. When the SOE screen is paused, the navigation buttons are enabled, allowing you to scroll through all SOE records. If new SOE events become available while the SOE screen is paused, "New Records Available" appears in the application footer. To view the latest records, press the Play button to resume the automatic refreshing behavior.

## SOE With Alarm Rows

In RTAC firmware versions R153 and later, the SOE application displays log entries that are also configured as alarm points in red text when the alarm condition is asserted. *Figure 6.8* shows the SOE application with active alarm points. For more information about alarm point configuration, see *Alarm Summary Application Configuration on page 664*.

| Sequence of Events |          |              |                      | 2024/04/29 | 23:01:56 |
|--------------------|----------|--------------|----------------------|------------|----------|
|                    | DATE     | TIME         | TAG NAME             | MESSAGE    |          |
| ◀                  | 24/04/29 | 23:01:26.900 | SF6 Pres Alarm       | Asserted   |          |
| ⏸                  | 24/04/29 | 23:00:02.122 | SEL_24DI_1.INPUT_001 | Deasserted |          |
|                    | 24/04/29 | 23:00:00.658 | SEL_24DI_1.INPUT_001 | Asserted   |          |
|                    | 24/04/29 | 22:59:29.900 | SF6 Pres Alarm       | Deasserted |          |
| trash              | 24/04/29 | 22:59:05.900 | Switch 1             | Opened     |          |
| ▲                  | 24/04/29 | 22:58:58.800 | SF6 Pres Alarm       | Asserted   |          |
| ▼                  | 24/04/29 | 22:58:56.300 | SF6 Pres Warn        | Asserted   |          |
|                    | 24/04/29 | 22:58:34.600 | SF6 Pres Warn        | Deasserted |          |

Page 1 / 4

🔔 LR | 

Figure 6.8 SOE Application With Active Alarm Points

## Alarm Summary Application Configuration

RTAC firmware versions R153 and later support the Alarm Summary application. This application is similar to the SOE application, but it only contains tags with alarm logging enabled via the Tag Processor or user logic. The Alarm Summary application displays the most recent 1,024 unacknowledged or active alarms and provides users the ability to view, acknowledge, or unacknowledge alarm conditions.

### Alarm Summary Settings and Configuration

Like the SOE application, the Alarm Summary application provides the ability to display only logs that are relevant to your application. Use the SEL Touchscreen setting **SOE and Alarm Category Filter** to include the desired logging categories in the touchscreen Alarm Summary application. See *SOE and Alarm Category Filter Configuration on page 660* for more details on configuring the Alarm Category Filter.

Provide more descriptive messages for the Alarm Summary tag assertion and deassertion fields by using the Logging Display Tag Name column settings. See *SOE and Alarm Summary Display Column Configuration on page 661* for more details on disabling the tag name column.

Figure 6.9 shows the required fields to configure an RTAC tag as an alarm via the RTAC's Tag Processor. Like the SOE application, the alarm tags must be enabled for Logging, contain a Logging Category that matches the SOE and Alarm Category Filter, and be enabled for alarm logging.

| Tag Processor                                     |                      |                |                  |                          |                    |                     |                      |                     |
|---|----------------------|----------------|------------------|--------------------------|--------------------|---------------------|----------------------|---------------------|
| Drag a column header here to group by that column |                      |                |                  |                          |                    |                     |                      |                     |
| Build   | Destination Tag Name | Logging Enable | Logging Category | Logging Display Tag Name | Logging On Message | Logging Off Message | Logging Alarm Enable | Logging Alarm State |
| True  | Alarm_Point1         | True           | 'Bay Control'    | 'AlarmCondition1'        | 'Asserted'         | 'Deasserted'        | True                 | True                |

Figure 6.9 Alarm Point Configuration Fields Via Tag Processor

## Alarm Summary Screen Usage

The Alarm Summary application supports both play and pause operating modes. The application automatically defaults to play mode, where it refreshes with the most recent unacknowledged or active alarms. Press the pause button or tap any of the logs to stop new alarms from appearing in the table. Once paused, you can navigate through alarms using the navigation arrows.

| Alarm Summary |          |              |                      | 2024/05/01 | 16:01:57 |
|---------------|----------|--------------|----------------------|------------|----------|
|               | DATE     | TIME         | TAG NAME             | MESSAGE    |          |
|               | 24/04/30 | 17:42:43.400 | Switch 1             | Opened     |          |
|               | 24/04/30 | 17:42:30.001 | SF6 Pres Alarm       | Asserted   |          |
|               | 24/04/30 | 17:32:43.700 | SEL_24DI_1.INPUT_001 | Asserted   |          |
|               |          |              |                      |            |          |
|               |          |              |                      |            |          |
|               |          |              |                      |            |          |
|               |          |              |                      |            |          |

**Figure 6.10** Alarm Summary Play Mode With Possible Alarm States

Alarms can be in four states depending on if the alarm is active, inactive, acknowledged, or unacknowledged. Any unacknowledged alarms have a flashing background. The following table provides the expected text colors and backgrounds for each of the possible alarm states. If an alarm is both acknowledged and inactive it will not be displayed on the alarm summary screen.

| <b>Active/Inactive</b> | <b>Acknowledged/<br/>Unacknowledged</b> | <b>Text Color</b> | <b>Background Color</b>        |
|------------------------|---|-------------------|--------------------------------|
| Active                 | Acknowledged                            | Red               | White                          |
| Active                 | Unacknowledged                          | Red               | Blinking (Light Red/<br>White) |
| Inactive               | Acknowledged                            | Not displayed     | Not displayed                  |
| Inactive               | Unacknowledged                          | Black             | Blinking (Gray/<br>White)      |

If no alarms are active or unacknowledged, the Alarm Summary application remains in Play mode and the footer message reports "No data available." as shown in *Figure 6.11*.

| Alarm Summary      |      | 2024/04/30   16:12:35 |         |
|--------------------|------|-----------------------|---------|
| DATE               | TIME | TAG NAME              | MESSAGE |
|                    |      |                       |         |
| No data available. |      |                       |         |
|                    |      |                       |         |

**Figure 6.11 Alarm Summary No Data Available**

## Alarm Acknowledgement/Unacknowledgement

Alarms can be acknowledged and unacknowledged using the Alarm Summary screen. To acknowledge an active or inactive alarm, pause the screen by tapping the pause button or by tapping anywhere on the screen, then navigate to the desired unacknowledged alarm and select the row. Users must have permissions to acknowledge or unacknowledge alarms. If the user is not logged in with the permissions defined in *Table 6.11*, they are prompted to login. Once logged in, the user can view the alarm details and either acknowledge it or exit the screen using the close button. *Figure 6.12* shows the options for a previously unacknowledged alarm.

| Opened             |                                | 2024/04/30   17:51:46 |
|--------------------|--------------------------------|-----------------------|
| Tag Name           | <b>Switch 1</b>                |                       |
| Alarm State        | <b>Active</b>                  |                       |
| Active Timestamp   | <b>2024/04/30 17:42:43.400</b> |                       |
| <b>ACKNOWLEDGE</b> |                                | <b>CLOSE</b>          |
|                    |                                |                       |

**Figure 6.12 Alarm Acknowledge View**

Alarms can be unacknowledged through the Alarm Summary application if they were previously acknowledged and the alarm is still active. To unacknowledge an alarm, pause the screen and tap the desired acknowledged alarm row. The user can view the active alarm and acknowledgement details, unacknowledged this alarm, or exit the screen using the close button. *Figure 6.13* shows the options for a previously acknowledged alarm.

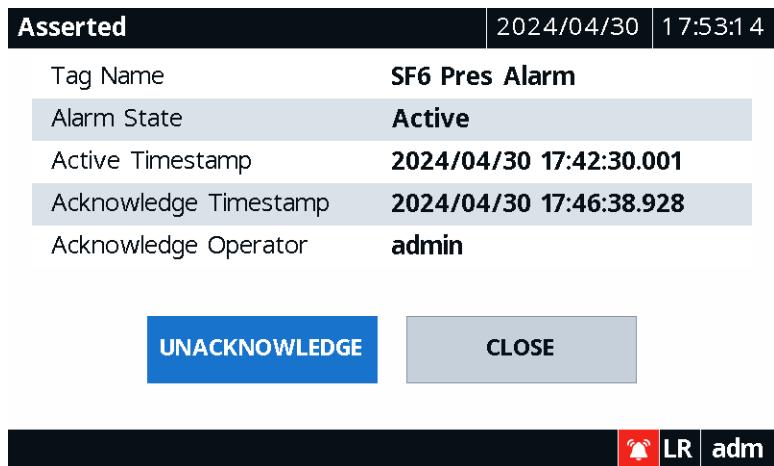


Figure 6.13 Alarm Unacknowledge View

## Touchscreen Settings Application

The Touchscreen Settings application provides the settings shown in *Table 6.6*.

**Table 6.6 Touchscreen Settings**

| Setting Name                     | Range        | Description   |
|----------------------------------|--------------|---|
| Display Time-Out                 | 1–30 minutes | Controls front-panel LCD time-out.  |
| Rotating Display Transition Time | 3–15 seconds | Determines the speed of transition from one rotating display screen to another. |
| Backlight Active Brightness      | 1–10         | Controls the screen brightness.   |

Set the initial values of the touchscreen settings in ACCELERATOR RTAC under the **Settings** tab of the SEL Touchscreen (see *Settings on page 679* for more information). These settings can be adjusted dynamically at runtime from the actual touchscreen by tapping the **Settings** folder and selecting the **Touchscreen Settings** application. Downloading a project to the SEL-2241 restores the touchscreen settings to the values set in ACCELERATOR RTAC.

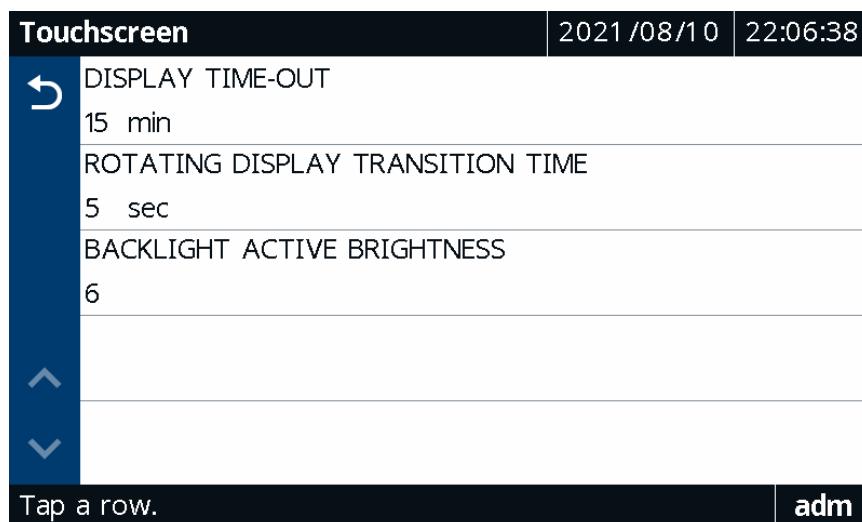



Figure 6.14 Touchscreen Settings Application

## Front Ethernet Port (Port F)

The Axion Bay Controller includes Port F, a 10/100 BASE-T front-panel maintenance Ethernet port that can be used to perform the following tasks:

- ▶ Access the RTAC web page
- ▶ Connect to ACCELERATOR RTAC
- ▶ Upgrade firmware


You can disable Port F via the RTAC web interface or via the **Port F** application on the touchscreen, as shown in *Figure 6.15*. This operation may take as long as one minute.

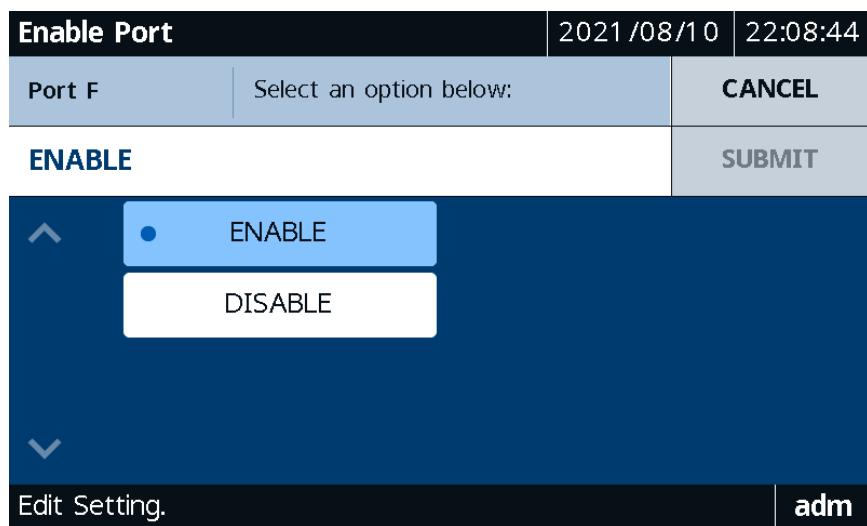

**Figure 6.15** Port F Enable/Disable Port

## DHCP Server

Port F includes a DHCP server option that can be enabled or disabled via the **Interface** tab of the RTAC web interface, as shown in *Figure 6.16*.

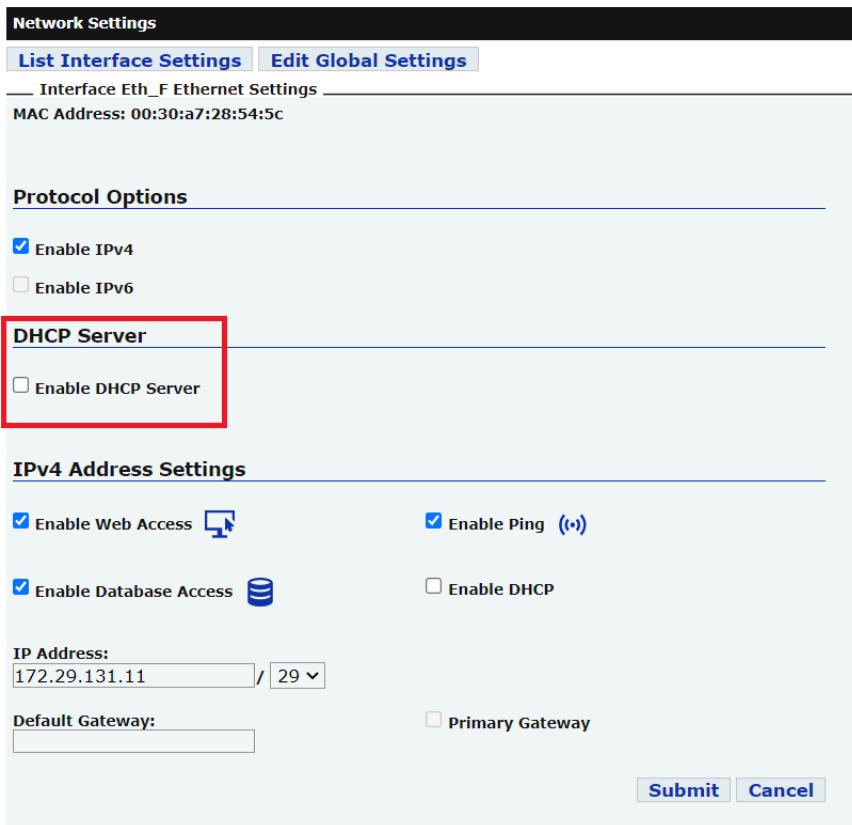**Figure 6.16 DHCP Server Front Port Option**

When the DHCP server is disabled, use the **Interface** tab of the RTAC web interface to assign the proper IPv4 Address settings to Port F.

When the DHCP server is enabled, Port F issues the IP configuration to any computer or laptop that is configured for DHCP, allowing for a simple connection during initial setup and maintenance. When the DHCP server is enabled, the IP settings of Port F are set to a static address of **172.29.131.11/29**.

## Device Information

Tap the **Device Info** folder to navigate to the Device Info screen, where you can access the RTAC Status and EtherCAT Info applications.

### RTAC Status

The RTAC Status application includes a Device Information screen and a System Statistics screen; use the on-screen up and down arrows to transition between the two.

*Table 6.7* shows the information provided on the Device Information screen of the RTAC Status application.

**Table 6.7 RTAC Status > Device Information Screen Contents**

|             |  |
|-------------|--|
| Host Name   | The RTAC network host name, as defined in the Network tab of the RTAC web interface. |
| Device Name | The RTAC device name, as defined in the dashboard of the RTAC web interface.         |

|                       |   |
|-----------------------|---|
| Device Location       | The RTAC device location, as defined in the dashboard of the RTAC web interface.    |
| Device Description    | The RTAC device description, as defined in the dashboard of the RTAC web interface. |
| Firmware Version      | The RTAC firmware version.  |
| Serial Number         | The RTAC serial number.   |
| Current Project       | The active RTAC project name.   |
| Modified Project Time | The time at which the RTAC project was last modified.                               |

*Table 6.8* shows the information provided on the System Statistics screen of the RTAC Status application.

**Table 6.8 RTAC Status > System Statistics Screen Contents**

|                       |  |
|-----------------------|--|
| Main Task Usage       | RTAC Main task usage, in percentage.       |
| Automation Task Usage | RTAC Automation task usage, in percentage. |
| Memory Usage          | The number of used bytes of memory.        |
| Memory Available      | The number of free bytes of memory.        |
| Storage Usage         | The number of used bytes for storage.      |
| Storage Available     | The number of free bytes for storage.      |

## EtherCAT Info

The EtherCAT Info application consists of the EtherCAT Status and Module Status screens; use the on-screen up and down arrows to transition between the two.

### EtherCAT Status

The EtherCAT Status screen provides general information regarding the state the Axion EtherCAT I/O network, as shown in *Table 6.9*.

**Table 6.9 EtherCAT Status Screen Contents**

|                                    |   |
|------------------------------------|---|
| EtherCAT Status                    | <p>The state of the EtherCAT network.</p> <p>Possible states include the following:</p> <ul style="list-style-type: none"> <li>▶ <b>Not Available</b>—indicates that the RTAC project main task does not include the EtherCAT I/O network</li> <li>▶ <b>Disabled</b>—indicates that no EtherCAT communications are configured or the EtherCAT I/O network POU is disabled</li> <li>▶ <b>Initializing</b>—indicates that the EtherCAT I/O network is in the process of enabling</li> <li>▶ <b>Running</b>—indicates that the EtherCAT I/O network is operational</li> <li>▶ <b>Client Failed</b>—indicates that the EtherCAT network client failed</li> <li>▶ <b>Network Failed</b>—indicates that the EtherCAT I/O network has failed while Disable on Network Error is set to FALSE</li> </ul> |
| Message Failure Count <sup>a</sup> | The message failure counter provided by the Axion EtherCAT I/O POU.   |

|                                    |   |
|------------------------------------|---|
| Server Attached Count <sup>a</sup> | The number of modules connected to the Axion's EtherCAT I/O network.                                |
| Server Detached Count <sup>a</sup> | The number of modules detected by the RTAC client not attached to the Axion's EtherCAT I/O network. |
| Configuration Failure <sup>a</sup> | Status of the Axion's EtherCAT I/O network configuration  |
| Number of Nodes <sup>a</sup>       | The number of nodes configured in the RTAC project.   |

<sup>a</sup> Displays "Not Available" if EtherCAT Status is either "Disabled" or "Not Available".

## Module Status

The Module Status screen provides the status of all modules in the EtherCAT I/O network. Each module status page provides the status of a module (as shown in *Table 6.10*) and that module's position (slot) in the EtherCAT node. The Module Status screen provides as many as two nodes per page. Use the on-screen arrows to navigate between these pages.

**Table 6.10 Module Status Indications**

| Indication | Description  |
|------------|--|
|            | The module in the specified slot is operational.   |
|            | The module in the specified slot is not operational or the module is reporting an operational error. |
|            | There is no module in the specified slot.  |

## User Login

Tap the **User Login** folder to navigate to the Login and Logout applications. The Login application is available when no user is actively logged in to the device. The Logout application is available when a user has successfully logged in to the device.

To log in to the Axion Bay Controller via the touchscreen, tap the **Username** and **Password** fields on the Login application and enter the username and password, respectively, associated with your RTAC user account. All touchscreen applications are available for viewing without logging in, but some operations can only be performed by a logged-in user. *Table 6.11* shows the operations that require user login.


**Table 6.11 Touchscreen Operations That Require User Login**

| Application Name | Folder Name | Touchscreen Operations                          | RTAC Required User Permission |
|------------------|-------------|---|-------------------------------|
| Custom Screens   | NA          | Operate breakers and switches on custom screens | HMI Local Write, Web Login    |
| Alarm Summary    | Reports     | Acknowledge and unacknowledge alarm points      | Report Write, Web Login       |

| Application Name | Folder Name   | Touchscreen Operations                     | RTAC Required User Permission |
|------------------|---------------|--|-------------------------------|
| Alarms           | NA            | Acknowledge and unacknowledge alarm points | Report Write, Web Login       |
| Port F           | Port Settings | Enable/disable Port F control              | Network Write, Web Login      |

When one of the operations listed in *Table 6.11* is initiated and no user is presently logged in to the touchscreen, the device automatically enters the authentication screen, which requires that a user with corresponding permissions log in before the operation is performed. When one of the operations is initiated and a user *is* logged in, but lacks the permissions for that operation, the device similarly enters the authentication screen.

Upon successful login, the touchscreen footer message includes the first three characters associated with the user account that is logged in. *Figure 6.17* shows an active username of "admin" successfully logged in to the touchscreen.

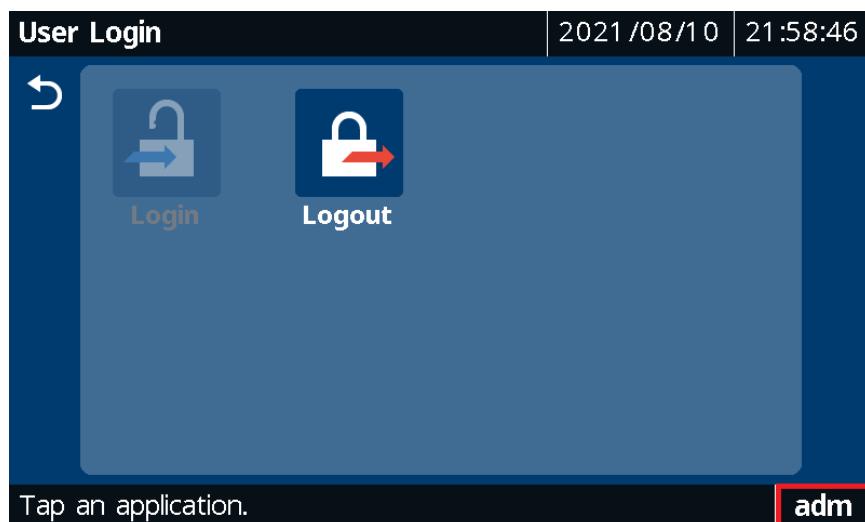

**Figure 6.17 Username 'admin' Logged in Successfully**

Additionally, the SEL\_Touchscreen\_POU.Active\_User output tag (see *Controller on page 680*) provides the username of the user account that is actively logged in to the touchscreen. If a logged-in user account is inactive for a period greater than the Touchscreen Display Time-Out setting, the RTAC automatically logs the user out of the device.

## Rotating Display Application

The Rotating Display application provides a series of screens presented in a predefined sequence (see *Rotating Display on page 678*). You can pick as many as 30 screens through which the display can rotate. The rotating display begins automatically after the inactivity timer expires, but you can also tap the application on the Home screen to start it at any time. While the rotating display is active, tapping any screen or pressing a pushbutton takes you to the screen presently displayed.

## Available Screens

The following screens are available to be added to the rotating display:

- ▶ SOE
- ▶ Alarm Summary
- ▶ Device Information
- ▶ System Statistics
- ▶ EtherCAT Status
- ▶ Module Status
- ▶ All custom screens
- ▶ All alarm pages

## Alarms Application

The SEL Touchscreen Alarms application provides Alarm screens for visual indication of alarms caused by faults or other abnormal conditions. The Alarm screens consist of a series of tiles arranged in a matrix form. Each tile is assigned to a specific alarm point defined in the RTAC. The tile background flashes and changes colors to represent the active, inactive, acknowledged, and unacknowledged state of the alarm point. As many as 25 alarm screens can be configured in the SEL Touchscreen. RTAC firmware versions R153 and later support the alarm application. If the RTAC project does not include alarm pages, the touchscreen device disables the Alarms application.

## Alarm Settings and Page Configuration

The tiles in the alarm screens of the SEL Touchscreen Alarms application use different background colors and color flashing to indicate the four possible states of an alarm point configured in the RTAC:

- ▶ Active and unacknowledged
- ▶ Active and acknowledged
- ▶ Inactive and unacknowledged
- ▶ Inactive and acknowledged


Use the Flash settings in the SEL Touchscreen device Settings tab, shown in *Figure 6.18*, to enable flashing on any of the four alarm states.

| SEL_Touchscreen  |                                |       |             |
|------------------|--------------------------------|-------|-------------|
| Touchscreen      |                                |       |             |
| Bay Control      | Setting                        | Value | Range       |
| Rotating Display | Alarms                         |       |             |
| Settings         | Flash on Normal/Acknowledged   | False | True, False |
| LEDs             | Flash on Normal/Unacknowledged | True  | True, False |
| Pushbuttons      | Flash on Alarm/Acknowledged    | False | True, False |
|                  | Flash on Alarm/Unacknowledged  | True  | True, False |

**Figure 6.18** Alarm Flashing Settings

When flashing is enabled for an alarm state, the tile background color alternates between its normal configured color and a dark tint of that color when in the alarm state.

To add an alarm page, press the  button in the Alarms tab. For each page that you add, set the display page name, the Grid Format, and the alarm tile font sizes, as shown in *Figure 6.19*.

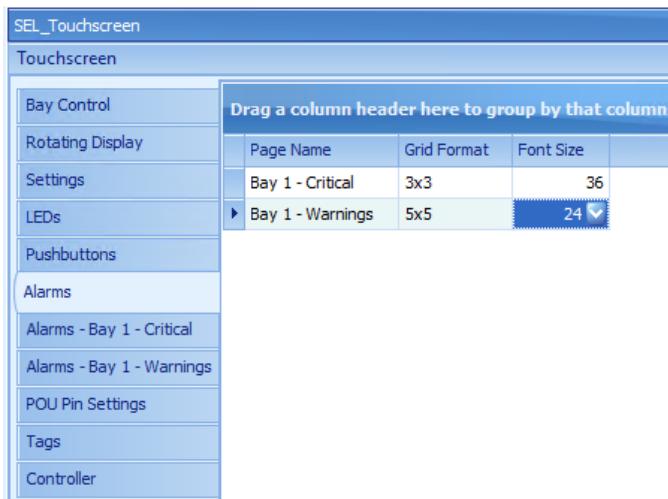

**Figure 6.19** Alarm Settings Configuration

*Table 6.12* provides settings information, range, and usage notes for each of the previously listed alarm settings. After the settings are updated, save the RTAC project to apply the settings to the subsequent alarm tabs.

**Table 6.12** Alarm Settings Information

| Setting Name | Range / Usage Note   |
|--------------|--|
| Page Name    | Supports as many as 40 characters including alphanumeric characters, square brackets, spaces, underscores, periods, and dashes. If the characters entered exceed the allocated header space, the page name text is truncated from the right and appended with an ellipsis. |
| Grid Format  | The alarm page (columns and rows) format. The supported grid formats include 3x3, 3x4, 3x7, 4x4, 4x5, and 5x5.   |
| Font Size    | The font size for all alarm tiles on the page. The supported range includes 22, 24, 26, and 36.  |

### NOTE

Larger fonts are better suited for smaller grid formats, e.g. 3x3. Smaller fonts are better suited for larger grid formats or when the tiles require more descriptive alarm text.

The Touchscreen device adds an additional alarm page tab that is formatted as "Alarms - Page Name" for each page that is added in the Alarms tab. Use these alarm page tabs to define each tile's alarm point, display text information, background color, and flash speed. *Figure 6.20* shows an alarm page tab with nine tiles (3x3 grid format).

| Drag a column header here to group by that column |     |        |                             |                     |                     |                     |                           |                             |                          |                            |             |
|---|-----|--------|-----------------------------|---------------------|---------------------|---------------------|---------------------------|-----------------------------|--------------------------|----------------------------|-------------|
|   | Row | Column | Alarm Point                 | Display Text Line 1 | Display Text Line 2 | Display Text Line 3 | Normal/Acknowledged Color | Normal/Unacknowledged Color | Alarm/Acknowledged Color | Alarm/Unacknowledged Color | Flash Speed |
| Bay Control                                       | 1   | 1      | VirtualTagList1.Status_0000 | Field               | Overvolt            |                     | White                     | White                       | Red                      | Red                        | Slow        |
| Rotating Display                                  | 1   | 2      | VirtualTagList1.Status_0001 | Coolant             | Overflow            |                     | White                     | White                       | Red                      | Red                        | Slow        |
| Settings  | 1   | 3      | VirtualTagList1.Status_0002 | Seal Gas            | Pressure            |                     | White                     | White                       | Red                      | Red                        | Slow        |
| LEDs  | 2   | 1      | VirtualTagList1.Status_0003 | Out of Step         |                     |                     | White                     | White                       | Red                      | Red                        | Slow        |
| Pushbuttons                                       | 2   | 2      | VirtualTagList1.Status_0004 | Fan                 | Failure             |                     | White                     | White                       | Red                      | Red                        | Slow        |
| Alarms  | 2   | 3      | VirtualTagList1.Status_0005 | Trip Coil           | Fault               |                     | White                     | White                       | Red                      | Red                        | Slow        |
| Alarms - Bay 1 - Critical                         | 3   | 1      | VirtualTagList1.Status_0006 | Close Coll          | Fault               |                     | White                     | White                       | Red                      | Red                        | Slow        |
| Alarms - Bay 1 - Warnings                         | 3   | 2      | VirtualTagList1.Status_0007 | Load                | Unbalanced          |                     | White                     | White                       | Red                      | Red                        | Slow        |
| POU Pin Settings                                  | 3   | 3      | VirtualTagList1.Status_0008 | Relay #110          | Closed              |                     | White                     | White                       | Red                      | Red                        | Slow        |
| Tags  |     |        |                             |                     |                     |                     |                           |                             |                          |                            |             |
| Controller  |     |        |                             |                     |                     |                     |                           |                             |                          |                            |             |

**Figure 6.20** Alarm Page Settings

The alarm page tabs provide a row for each alarm tile in the grid. The **Row** and **Column** columns help identify the tile's location on the alarm page. Rows are numbered from top to bottom and columns are numbered from left to right.

For example, in a 3x3 grid format, the top left tile is Row 1, Column 1, and the bottom right tile is Row 3 Column 3. Each alarm tile supports as many as three rows of static display text to identify the alarm condition and provide additional alarm information as required. On each alarm page, populate as few or as many of the alarm tiles as desired.

The **Alarm Point** setting is the SPS tag that drives the alarm status. As shown in *Figure 6.9*, alarm points must meet the following two requirements to be added to the alarm page **Alarm Point**.

- ▶ Alarm points must be enabled for Alarm Logging in the Logging Layout view of the Tag Processor.
- ▶ The Logging Category filter of the alarm point, in the Logging Layout view of the Tag Processor, must be included in the SEL Touchscreen setting **SOE and Alarm Category Filter**.
- ▶ If the **Logging Display Tag Name** Tag Processor column setting is configured for the alarm point being assigned, use the configured Logging Display Tag Name in place of the Destination Tag Name.

**Display Text Line 1**, **Display Text Line 2**, and **Display Text Line 3** are the settings for the three lines of static text to be displayed on the tiles. Depending on the chosen alarm page settings for Grid Format and Font Size, Display Text Line 1 and/or Display Text 3 settings may be disabled in the tiles of the alarm page.

**Normal/Acknowledged Color**, **Normal/Unacknowledged Color**, **Alarm/Acknowledged Color**, and **Alarm/Unacknowledged Color** are the settings for the tile background color on the different alarm states. The following options are available: Amber, Black, Blue, Gray, Green, Orange, Pink, Red, Violet, and White.

The **Flash Speed** setting determines the rate at which the background color of the tile flashes according to the four flash settings in the Settings tab, as listed in *Alarm Settings and Page Configuration on page 673*. The options for this setting are **Slow** (change color shade every second), **Fast** (change color shade every 250 milliseconds), and **None** (disable flashing for the specific tile).

## Alarm Tile Usage

From the Home Screen, navigate to the Alarms application by selecting the Alarms application icon. Navigate to any of the configured alarm pages by using the up and down navigation buttons. If any assigned alarm point goes to the alarm state, the alarm tile mapped to that alarm point displays the user-configured color. The alarm tiles update automatically when a state change is detected. Similar to the Alarm Summary application, the Alarm page provides users with the ability to view alarm information and acknowledge or unacknowledge alarms by selecting the tiles.

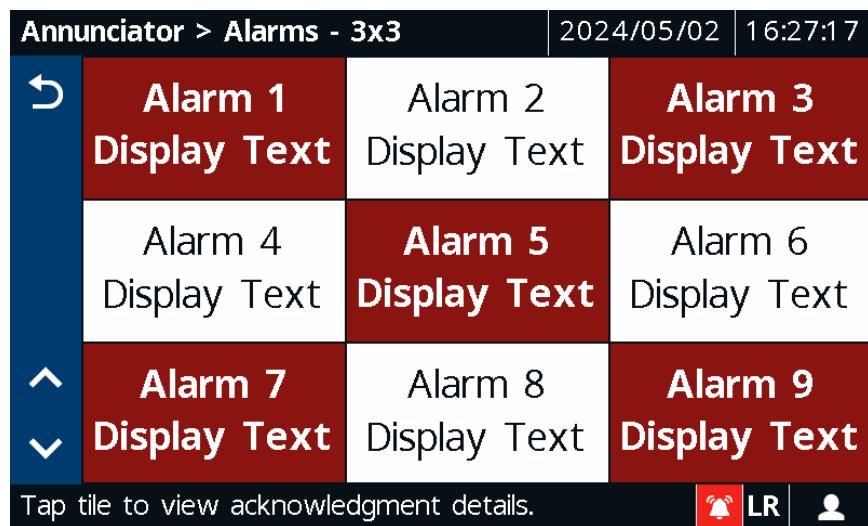



Figure 6.21 Active Alarm Page in 3x3 Grid Format

## ACCELERATOR RTAC Settings and Configuration

The SEL Touchscreen device is only available in RTAC and Axion projects and can only be downloaded to an SEL-2241 RTAC.


## Adding an SEL Touchscreen to the Project

To add an SEL Touchscreen device to a project, select **Insert > SEL Axion > SEL Touchscreen**, as shown in *Figure 6.22*.

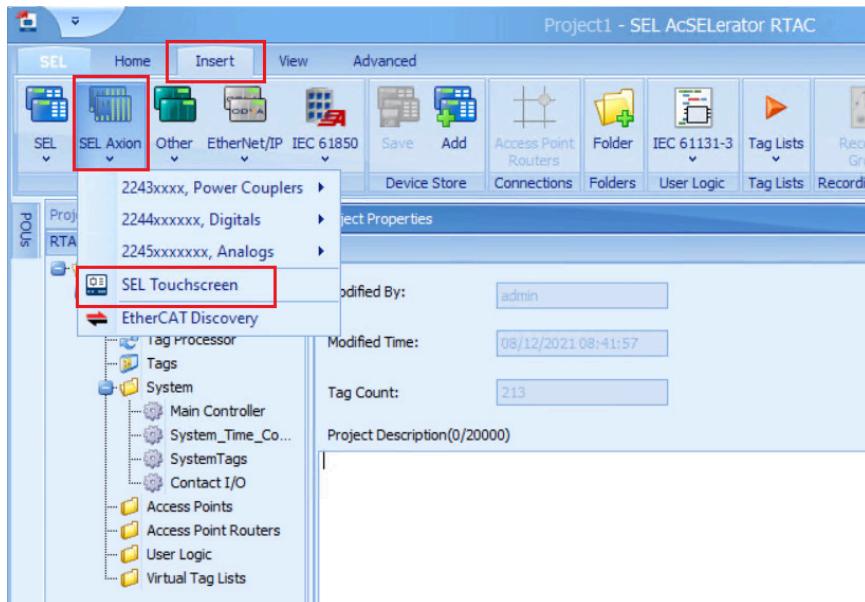

**Figure 6.22 Insert SEL Touchscreen in Project**

The SEL Touchscreen device in the project tree initially contains 13 sub-items corresponding to the 13 default screens, as shown in *Figure 6.23*. Use these default screens as a starting point from which to create your project.

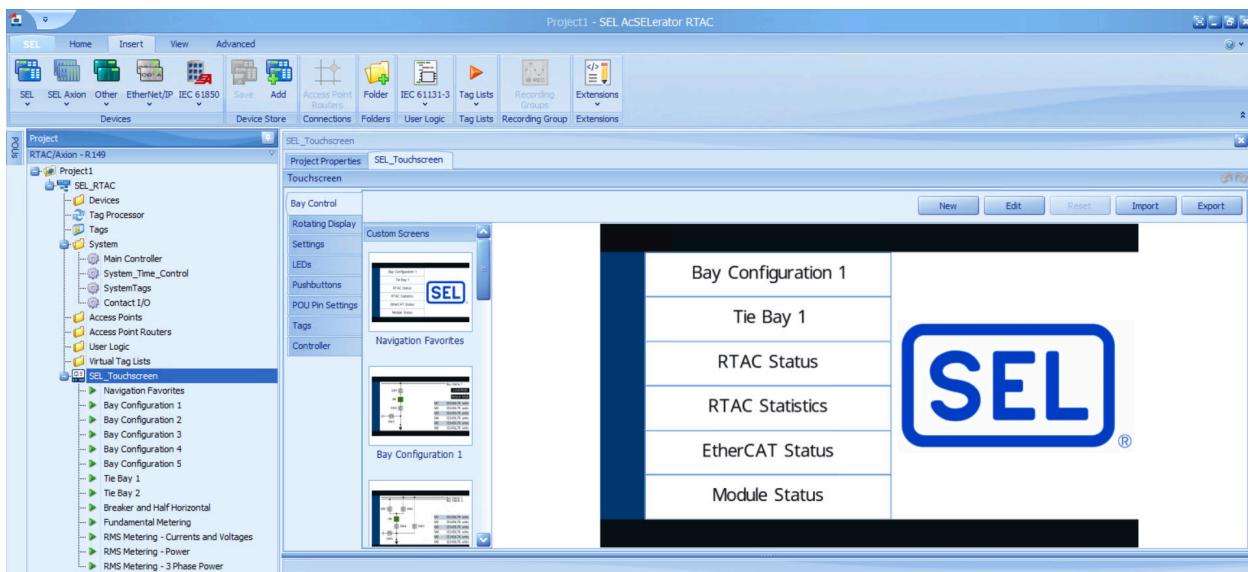

**Figure 6.23 ACCELERATOR RTAC Default SEL Touchscreen Layout**

## SEL Touchscreen Tabs

The SEL Touchscreen device in the ACCELERATOR RTAC project tree contains the following tabs:

### Bay Control


This tab shows a preview of the custom screens in the project. The Display Package File (.ldme) contains all of the custom screens shown in this tab. In addition, this tab contains five buttons that provide flexibility to create or edit your current screen configuration, as shown in *Table 6.13*.

**Table 6.13 Bay Control Tab Buttons**

| Button Name | Description  |
|-------------|--|
| New         | Opens a new instance of Bay Screen Builder with no default screens. Use this option to create a new Display Package File for the RTAC project.   |
| Edit        | Edit the current Display Package File. This button opens an instance of Bay Screen Builder with the current set of screens. You can add new screens to the project or edit or remove existing screens. When finished, use the Publish Package option to send and update the changes to the ACCELERATOR RTAC project. |
| Reset       | Resets to the default Display Package File. This action overwrites any existing screens in the project and replaces them with the default screens.   |
| Import      | Import a Display Package File. This action overwrites any existing screens in the project and replaces them with the screens contained in the imported Display Package File.   |
| Export      | Exports the Display Package File that contains the current screens in the ACCELERATOR RTAC project. You can then import the file into a different SEL-3530, SEL-3530-4, SEL-2241, or SEL-2241-2 project or into ACCELERATOR Diagram Builder™ SEL-5035 Software.  |

### Rotating Display

*Figure 6.24* provides an overview of the Rotating Display tab in ACCELERATOR RTAC. This tab provides the ability to define the screens to display in the Rotating Display application.

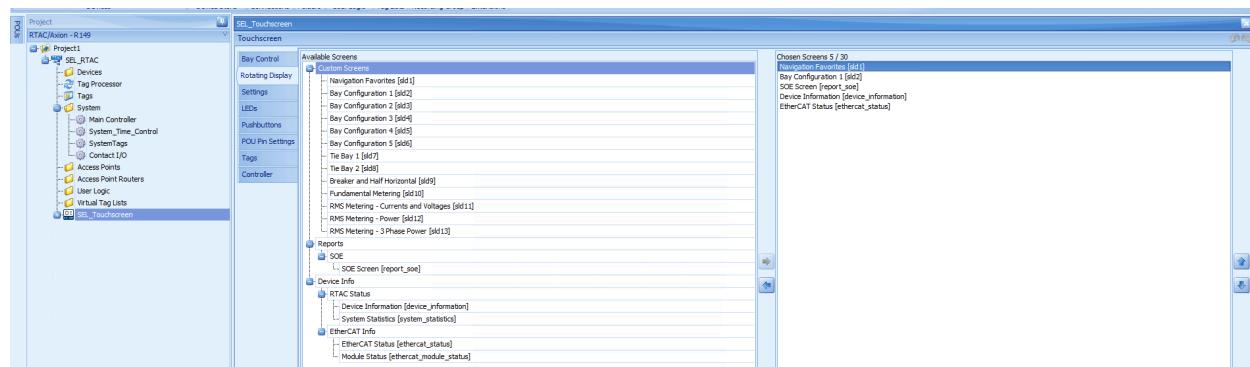

**Figure 6.24 Rotating Display Configuration**

To add a screen to the Rotating Display application, select the screen in the **Available Screens** list on the left and click the right arrow button to move it to the **Chosen Screens** list on the right. To remove a screen from the Rotating Display application, do the opposite—select the screen in the **Chosen Screens** list on the right and click the left arrow button to move it to the **Available Screens** list. To re-order the screens in the Rotating Display application, select a screen in the **Chosen Screens** list and click the up or down arrow buttons to move the screen up or down in the list. The Rotating Display application supports as many as 30 screens. *Table 6.14* shows the settings that affect the Rotating Display.

## Settings

This tab includes the configurable settings for the SEL Touchscreen.

**Table 6.14 SEL Touchscreen Settings Tab**

| Setting Name                          | Default Value | Range   | Description  |
|---------------------------------------|---------------|---|--|
| Flash on Normal/Acknowledged          | False         | True, False   | If True, the alarm tile background color flashes when the alarm point is in the inactive and acknowledged state.   |
| Flash on Normal/Unacknowledged        | True          | True, False   | If True, the alarm tile background color flashes when the alarm point is in the inactive and unacknowledged state.   |
| Flash on Alarm/Acknowledged           | False         | True, False   | If True, the alarm tile background color flashes when the alarm point is in the active and acknowledged state.   |
| Flash on Alarm/Unacknowledged         | True          | True, False   | If True, the alarm tile background color flashes when the alarm point is in the active and unacknowledged state.   |
| SOE and Alarm Category Filter         | 'Bay Control' | List of STRING(255)   | As many as 50 SOE logging categories surrounded by single quotes and separated by commas. Only SOE logs of these categories will be displayed on the touchscreen.  |
| Disable SOE and Alarm Tag Name Column | 'False'       | True, False   | Format of the SOE application display columns. When False, the SOE application displays both the Tag Name and Message columns. When True, the SOE application displays only the Message column allowing for more descriptive log messages. |
| Date Format                           | YMD           | DMY, MDY, YMD   | Date format used in touchscreen applications   |
| Display Home Screen                   | home          | home, SOE screen, Device Information, System Statistics, EtherCAT Status, Module Status, and all Custom Screens | Determines the screen to display upon startup or when the <b>Home</b> button is pressed  |
| Display Time-Out                      | 15            | 1–30 minutes  | Length of time for which the display must be inactive before the Rotating Display starts   |
| Rotating Display Transition Time      | 5             | 3–15 seconds  | Length of time for which each screen is shown when the Rotating Display is running   |
| Backlight Active Brightness           | 6             | 1–10  | Brightness of the backlight  |
| Enable Global Local/Remote Mode       | False         | True, False   | Enables Local and Remote mode for all bays in the project.   |

## LEDs

The LEDs tab lists the tags to control the 7 indicator LEDs and 12 pushbutton LEDs located on the touchscreen. Use the **On Color** and **Off Color** settings to set the desired color of each LED when asserted and deasserted, respectively.

## Pushbuttons

The Pushbuttons tab lists the tags for monitoring the status of the six pushbuttons located on the touchscreen. Each pushbutton can be assigned to navigate to a specific screen, allowing for quick access via the front panel. *Figure 6.25* shows an example of configuring the screens for each pushbutton.

| SEL_Touchscreen  |   |                             |          |           |              |                             |
|------------------|---|-----------------------------|----------|-----------|--------------|-----------------------------|
| Touchscreen      |   |                             |          |           |              |                             |
| Bay Control      | Drag a column header here to group by that column |                             |          |           |              |                             |
| Rotating Display | Enable  | Tag Name                    | Tag Type | Tag Alias | Status Value | Screen                      |
| Settings         | True  | SEL_Touchscreen.Pushbutton1 | SPS      |           | False        | Bay Configuration 1 [sld2]  |
| LEDs             | True  | SEL_Touchscreen.Pushbutton2 | SPS      |           | False        | Navigation Favorites [sld1] |
| Pushbuttons      | True  | SEL_Touchscreen.Pushbutton3 | SPS      |           | False        | OFF                         |
| POU Pin Settings | True  | SEL_Touchscreen.Pushbutton4 | SPS      |           | False        | OFF                         |
| Tags             | True  | SEL_Touchscreen.Pushbutton5 | SPS      |           | False        | OFF                         |
| Controller       | True  | SEL_Touchscreen.Pushbutton6 | SPS      |           | False        | OFF                         |

**Figure 6.25 SEL Touchscreen Pushbuttons Tab**

## Alarms

The Alarms tab allows as many as 25 alarm pages to be defined. See *Alarm Summary Application Configuration* on page 664 for details on settings, ranges, and usage of the Alarms application.

## Controller

Use the Controller tab to monitor the real-time values of the touchscreen POU input and output pins. *Table 6.15* lists all the available POU input and output pins on the touchscreen and provides a description of each.

**Table 6.15 SEL Touchscreen Controller POU Pins**

| Pin Name                           | Pin Type     | Description   |
|------------------------------------|--------------|---|
| Disable_All_Touchscreen_Controls   | Input: BOOL  | When True, all controls (breakers, switches and operation buttons) issued from the touchscreen are blocked.   |
| Disable_Breaker_Controls           | Input: BOOL  | When True, touchscreen breaker controls issued from the touchscreen are blocked.  |
| Disable_Disconnect_Switch_Controls | Input: BOOL  | When True, disconnect switch controls issued from the touchscreen are blocked.  |
| Local                              | Input: BOOL  | When True, the touchscreen is in Local control mode. When False, the touchscreen is in Remote control mode. This input is only visible when Enable Global Local/Remote Mode is set to True. |
| Reset_Statistics                   | Input: BOOL  | On rising-edge, all counter POU outputs are reset.  |
| ENO                                | Output: BOOL | When True, indicates that the touchscreen is enabled.   |
| Control_Sent                       | Output: BOOL | Asserts when a control is issued from the touchscreen.  |

| Pin Name      | Pin Type       | Description   |
|---------------|----------------|---|
| Active_User   | Output: STRING | Shows the username of the user currently authenticated in the touchscreen. This value is empty when no user is authenticated. |
| Control_Count | Output: UDINT  | The total number of controls issued from the touchscreen.   |

## Tag Mapping

Each custom screen in the project has a corresponding sub-item under SEL Touchscreen in the project tree. Each screen sub-item presents the grids required to map the status and control quantities of the symbols present in that screen. The tag mapping grids are organized in tabs according to the type of touchscreen symbol on the custom screen. Breakers, disconnect switches, and three-position disconnect switches provide a Mode setting for configuring each element for status monitoring only or for both control and monitoring. When Mode is set to CONTROL, the element's control tags are available in the RTAC logic engine and the status tags are available for mapping to Boolean expressions or tags. When Mode is set to MONITOR, only the status tags are available for mapping to Boolean expression or tags.

You can select an element's symbol in the preview screen (in the upper left) or the element's name in the element list (in the lower left) to highlight the first row of that element for tag mapping, as shown in *Figure 6.26*.


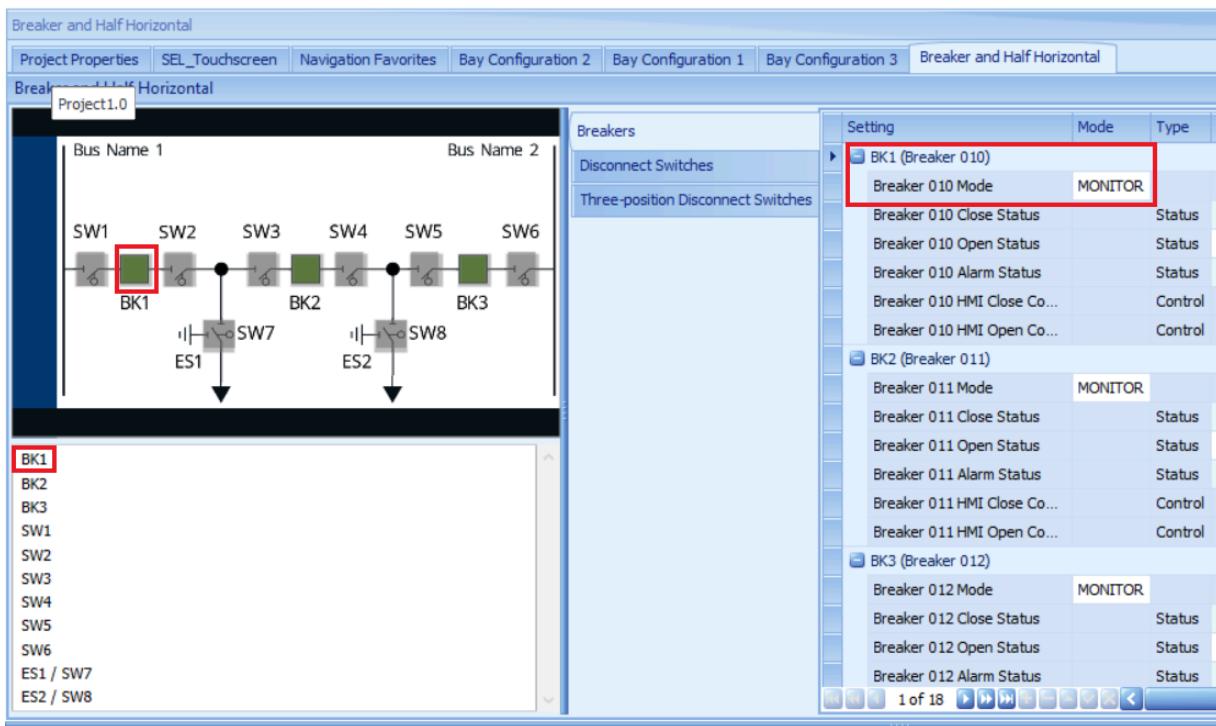


Figure 6.26 Select an Element for Tag Mapping

## Analog Labels

The Analog Labels tab provides for mapping of the status tag for all the analog labels present in the corresponding screen, as shown in *Figure 6.27*. Map the integer or REAL tag that contains the value to be displayed in the analog label.

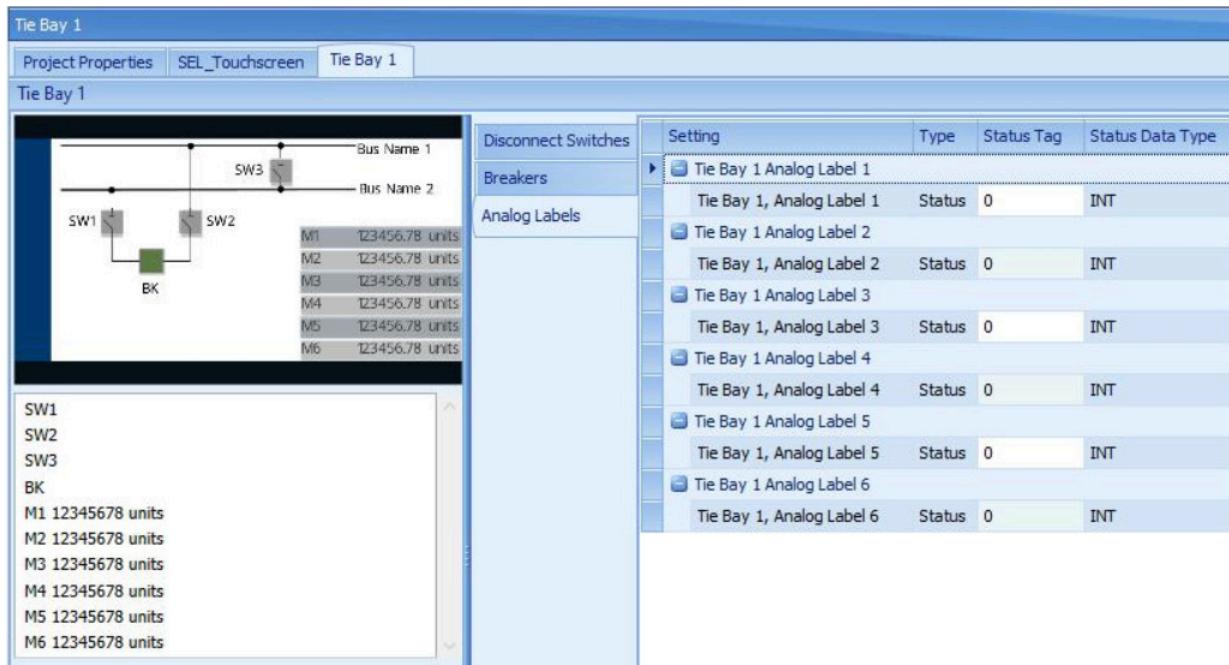


**Figure 6.27 Analog Label Tag Mapping**

## Breakers

The Breakers tab provides for mapping of the status tags required for all the circuit breakers present in the corresponding screen, as shown in *Figure 6.28*. Map the Boolean tags or expressions that indicate the open, closed, and alarm status of each circuit breaker.


Additionally, this tab provides the name of the control tags that receive the open and close circuit breaker commands. Issuing an open or close control command from the touchscreen causes the respective open or close control tag to assert for one RTAC processing interval.

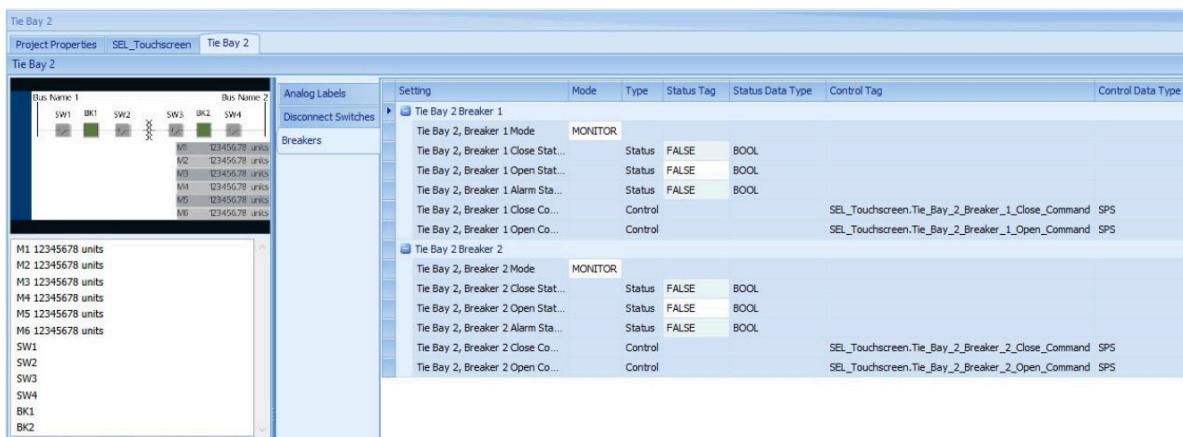

**Figure 6.28 Breaker Tag Mapping**

## Digital Labels

The Digital Labels tab provides for mapping of the status tags for all the digital labels present in the corresponding screen, as shown in *Figure 6.29*. Map the Boolean tag or expression that contains the value to be displayed in the digital label.

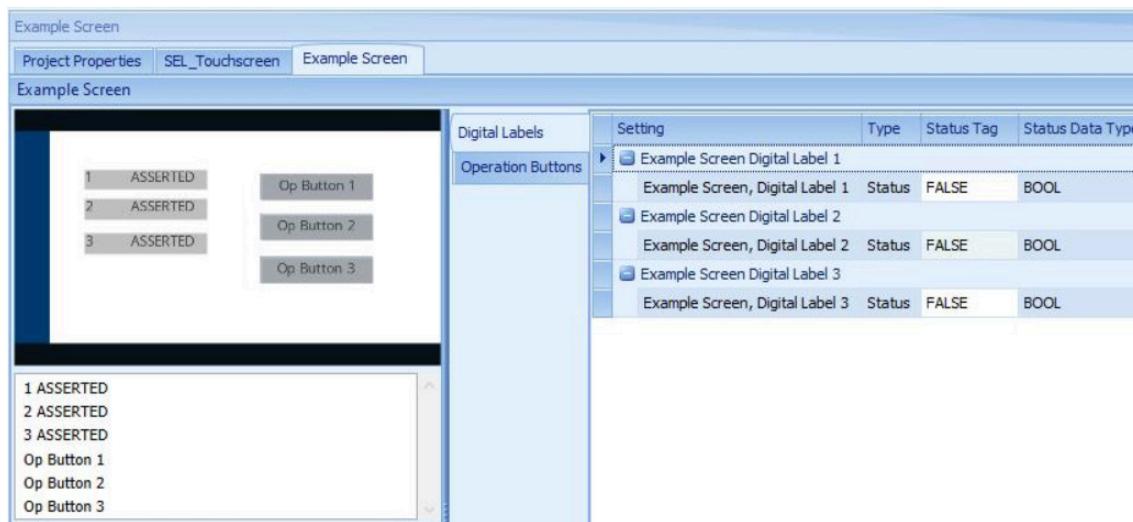


**Figure 6.29** Digital Label Tag Mapping

## Disconnect Switches

The Disconnect Switches tab provides for mapping of the status tags required for all the disconnect switches present in the corresponding screen. Map the Boolean tags or expressions that indicate the open, closed, alarm, and in-progress status of the disconnect switch.


Additionally, this tab provides the name of the control tags that receive the open and close disconnect switch commands. Issuing an open or close control command from the touchscreen causes the respective open or close control tag to assert for one RTAC processing interval.

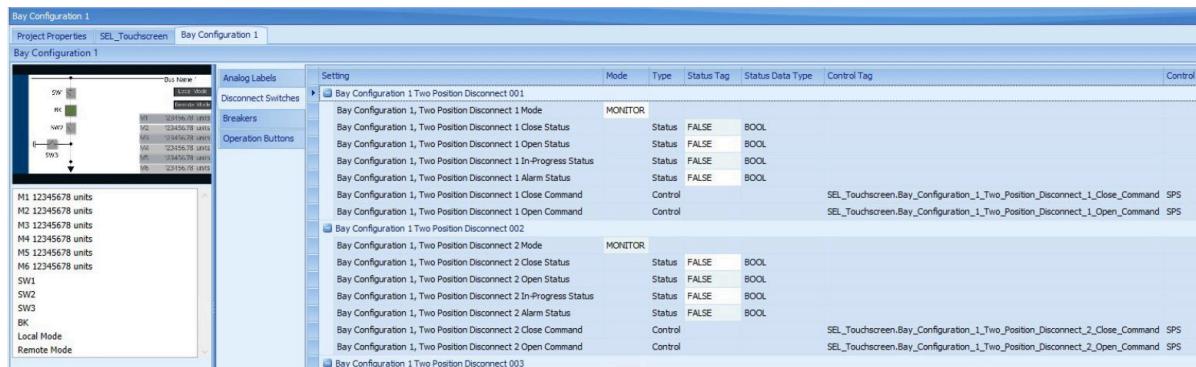

**Figure 6.30** Disconnect Switch Tag Mapping

## Navigation Buttons


The Navigation Buttons tab provides for mapping of the on-screen navigation button screen links, as shown in *Figure 6.31*. The Screen column provides a dropdown menu of all available screens allowed for navigation.

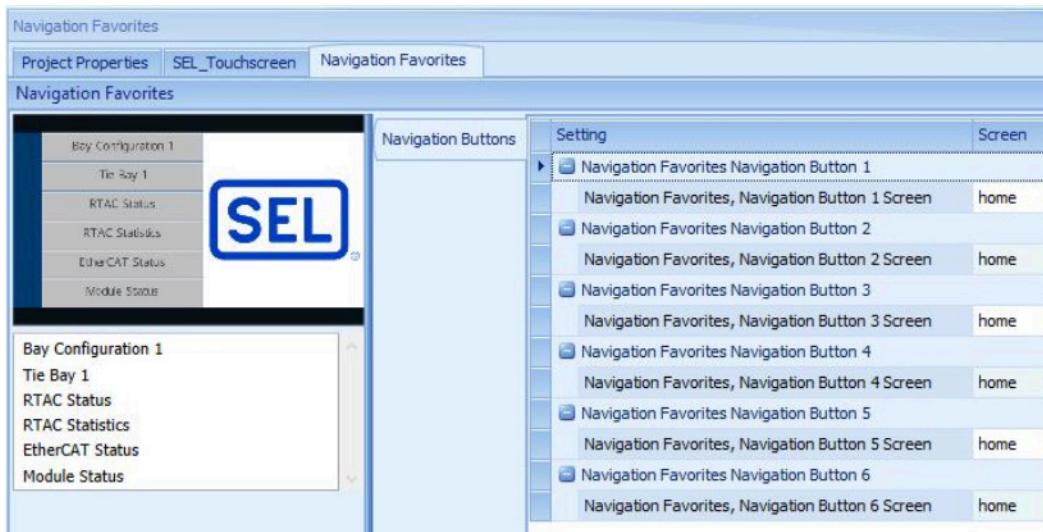

**Figure 6.31 Navigation Tag Mapping**

## Operation Buttons

The Operation Buttons tab provides for mapping of each on-screen button to a corresponding control, as shown in *Figure 6.32*. Pressing an operation button on the touchscreen causes the associated control tag to assert for one RTAC processing interval.

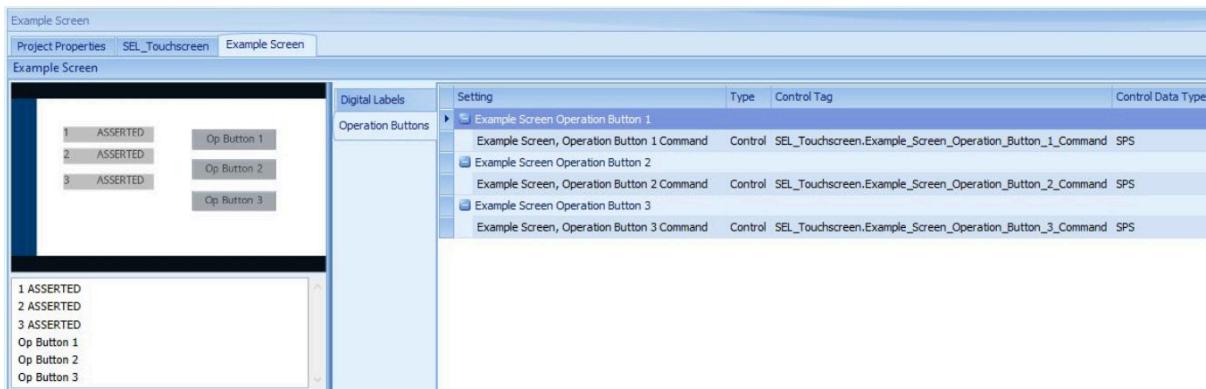


**Figure 6.32 Operation Buttons Tag View**

## Three-Position Disconnect Switches

The Three-position Disconnect Switches tab provides for mapping of the status tags required for all the three-position disconnect switches present in the corresponding screen, as shown in *Figure 6.33*. Map the Boolean tags or expressions that indicate the open, closed, alarm, and in-progress status of the earthing and in-line switches of the three-position disconnect switch.

This tab also provides the name of the control tags that receive the open and close disconnect switch commands for the earthing and in-line switches of the three-position disconnect switch. Issuing an open or close control command from the touchscreen causes the respective open or close control tag to assert for one RTAC processing interval.

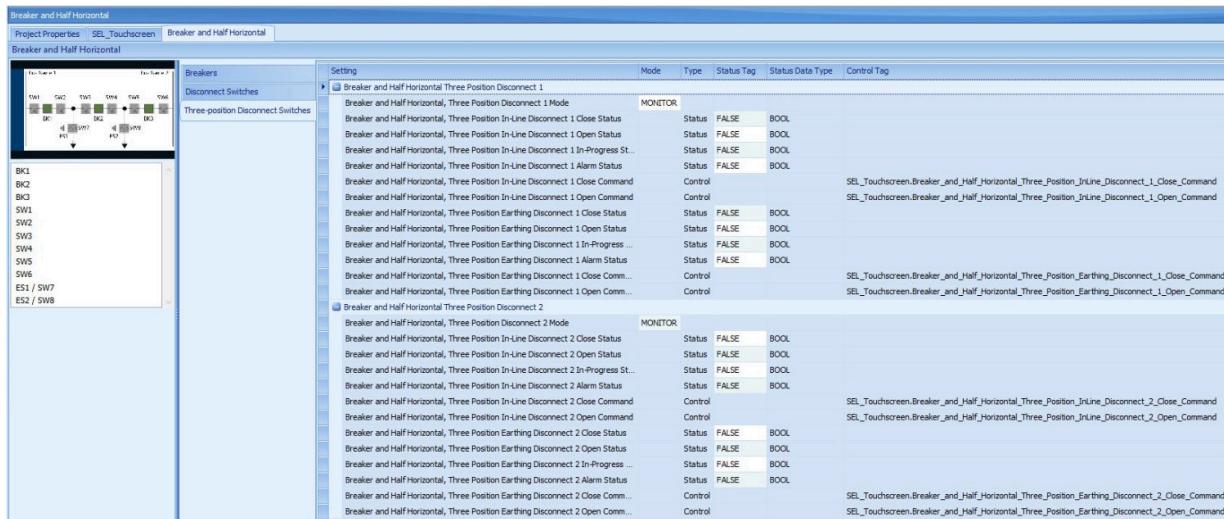

**Figure 6.33 Three-Position Disconnect Switch Tag Mapping**

## Touchscreen Diagnostics

The RTAC's System Tags provide touchscreen diagnostic information. *Table 6.16* identifies the System Tags related to the touchscreen.

**Table 6.16 Touchscreen System Tags**

| System Tag Name               | Description  |
|-------------------------------|--|
| Touchscreen_Status            | Indicates the status of the touchscreen. See <i>Table 6.17</i> for the possible states for Touchscreen_Status. |
| Touchscreen_Error_Message     | The touchscreen error message.   |
| Touchscreen_Control_Operation | Indicates that the touchscreen issued a control operation.   |

*Table 6.17* describes the possible states of SystemTags.Touchscreen\_Status.

**Table 6.17 Touchscreen Possible States**

| Status         | Description  |
|----------------|--|
| Not Available  | The Axion backplane does not contain an SEL Touchscreen device.                                  |
| Not Configured | There is no SEL Touchscreen device in the RTAC project.  |
| Enabled        | The touchscreen is operational.  |
| Initializing   | The RTAC is in the process of enabling the touchscreen.  |
| Failed         | The touchscreen has reported a failure. Check the value of SystemTags.Touchscreen_Error_Message. |

**This page intentionally left blank**

---

---

## S E C T I O N   7

---

# Security and Account Management

## Overview

---

This section describes security features and procedures in the SEL Real-Time Automation Controller (RTAC) family of products, and in ACCELERATOR RTAC® SEL-5033 Software. The RTAC provides physical and cybersecurity measures to block unauthorized access as well as logging and alarming to report access activity.

## Ethernet Security

---

You can configure RTAC Ethernet security settings in the RTAC web interface. To access the RTAC web interface, connect the RTAC to your PC via Ethernet or with a USB-B cable and, in a web browser, enter <https://> and the IP address or hostname of the RTAC. If you are connecting to an SEL-3530, SEL-3505, or SEL-2241 RTAC with a USB-B cable, enter 172.29.131.1 for the IP address. If you are connecting to an SEL-3555, SEL-3560, or SEL-3350 RTAC using an Ethernet connection, the default IP address for Eth-1 is 192.168.1.2. If you use the hostname as configured in the RTAC web interface, the RTAC will need to be on a network that can resolve the hostname to the IP address.

When you connect to the RTAC web interface for the first time, there are no defined user accounts. The RTAC prompts you for a username and also for two password entries. The username defines the first administrator account on the box. The password entry is the password for that username and must be a complex password. A complex password must be from 8 to 72 characters long and contain at least one of each of the following character types: number, lowercase letter, uppercase letter, and special character. The RTAC prompts you to enter the password twice to ensure both entries match exactly. Once you enter the new username and password, the RTAC prompts you to use the new username and password to log in. If you forget the username and password you have created, you cannot log in to the RTAC and must apply internal jumpers to override login authentication. See *Section 3: Factory Reset* in the *SEL-3555, SEL-3505, SEL-3530, SEL-3530-4, or SEL-2240 Instruction Manual* for jumper positions.



**Figure 7.1 Initial RTAC Login**

Once you establish a web session, the RTAC monitors usage and closes the session automatically if it is inactive longer than the timeout you have configured. From the web interface, you can set security settings related to individual Ethernet ports, global Ethernet connectivity, and passwords.

## Secure Ethernet Access

The RTAC communicates by using varied standard secure Ethernet methods depending on the connection type. Web access is encrypted through the use of HTTPS over a Transport Layer Security (TLS) socket. HTTPS is a secure HTTP connection that prevents both the chance for man-in-the-middle attacks and clear text transmission of the web session. Remote engineering access over Ethernet is configurable to use Telnet or Secure Shell (SSH) between the RTAC and the remote PC. When using SSH, the RTAC will disconnect the attempted connection after three failed connection attempts. Other connections, such as project downloading and gateway access, are encrypted over ODBC connections via TLS sockets.

Typically, SSH connections require user login authentication. Click on **SSH Keys** under the **Security** section of the RTAC web interface to upload, delete, or edit authorized SSH keys to authenticate incoming SSH connections to allow access without a password. To add an authorized SSH key, click on **Add New SSH Authorized Keys**, then fill in the following information:

- **Name:** Enter a name for the key.
- **SSH Key Mode:** Define SSH type as SSH-RSA or SSH-DSS.
- **SSH Authorized Key:** Paste the key contents into this box.

Press **Submit** to complete the process. You can back up the key contents with other RTAC settings when you read the RTAC project by using ACCELERATOR RTAC software.

## Denial-of-Service Monitoring

The RTAC monitors Ethernet traffic for bursts of Ethernet traffic that may be denial of service (DOS) attacks. If the amount of Ethernet traffic addressed to the RTAC causes processing exceeding 80 percent of the configured watchdog time-out, the RTAC will log the message Impending watchdog failure; adjusting system priorities. At that time, the RTAC adjusts system priorities, including Ethernet traffic priorities, to prevent a watchdog time-out

condition. After five minutes of lowered priorities, if the traffic has diminished, the priorities are reset to normal and the RTAC logs the following message System priorities restored to normal. If the traffic continues at the same or greater volume and rate, the watchdog timer will expire and log the message System Watchdog has expired.

## Tunneled Serial Encryption

To achieve data encryption in tunneled serial connections, set the Serial Tunneling Mode to SSL/TLS or to SSH. A tunneled protocol or engineering access channel configured as SSH authenticates access using either a username and password combination, or through SSH key exchange. If the SSH Password field is left empty in the Ethernet Tunneled Serial configuration, authentication defaults to SSH key exchange. Manage SSH keys as described in *Secure Ethernet Access on page 688*.

The same mechanisms that are used to establish an HTTPS connection to the RTAC web server are also used to encrypt a tunneled communications session using TLS/SSL. A public key infrastructure is necessary to exchange valid certificates and verify received certificates. This infrastructure includes the active X.509 certificate used by the RTAC when a client initiates a TLS/SSL connection and the certificate authorities (CA) certificates used to verify X.509 certificates received by the RTAC.

Typically, clients validate the server certificate, however, all servers configured in the RTAC that use a TLS/SSL Ethernet tunnel have the option to validate the client X.509 certificate as well. If **Verify SSL Certificate** in an Ethernet Tunneled Serial server is set to **True**, the server validates the client X.509 certificate to verify that the signing chain is recognized. All CAs in the chain of trust must be installed in the CA certificate page on the RTAC web server to successfully authenticate the client X.509 certificate. This includes the X.509 certificate of the client, itself, which must also be stored as a CA certificate on the RTAC acting as the data server. See *X.509 Certificates on page 1190* and *CA Certificates on page 1193* for examples of adding X.509 and CA certificates.

## Individual Port Settings

Each Ethernet port has settings to customize secure access. The USB-B port, which acts as an Ethernet interface, has similar but non-configurable settings. See *Figure 7.2*.

**Table 7.1 IP Security Settings**

| Ethernet Setting       | Description   |
|------------------------|---|
| Enable NIC             | Enables/disables the network interface card (NIC).  |
| Enable PING            | Enables/disables the ability to ping the NIC.   |
| Enable EtherCAT        | Dedicates this port to EtherCAT connections. You must have at least one port dedicated to EtherCAT on an RTAC to use EtherCAT in a project. Axions have dedicated EtherCAT ports and therefore do not need to use this setting. |
| Enable Database Access | Enables open database connectivity (ODBC) connections such as Microsoft Excel.  |
| Enable Web Access      | Enables/disables ability to access the web interface on that NIC.   |
| Enable Bonding         | Provides configuration of bonding of that NIC with another (not available on USB-B).  |

| <b>Ethernet Setting</b> | <b>Description</b>   |
|-------------------------|--|
| Enable Bridge           | Provides configuration of bridging of that NIC with other interfaces (not available on USB-B).   |
| Enable PRP Pairing      | Provides configuration of PRP of that NIC with other interfaces (not available on USB-B).  |
| Enable DHCP             | Allows a DHCP server to assign a dynamic IP address to that NIC (not available on USB-B).  |
| IP Address              | Provides configuration of IPV4 and IPV6 IP addresses and subnet masks. In IPV4, the subnet mask is designated by Classless Inter-Domain Routing (CIDR) notation. IPV6 uses prefix length to define subnets and is similar to CIDR notation with an expanded value range from 0 to 128. This range defines the number of bits of the IP address (starting from the left) that belong to a subnet for IPV4, and a prefix length in IPV6. The RTAC's network interface will first route any network packets with IP addresses that do conform to the configured mask, then will attempt to route network packets to the default gateway, if configured. See <i>Table 7.2</i> for a lookup of IPV4 CIDR values compared to traditional subnet mask values. If DHCP is selected for IPV4, unique IP addresses are to be assigned by a DHCP server. Similarly for IPV6, a Unique Local Address (ULA) is assigned at initial startup. |
| Enable IPv4/IPv6        | Provides configuration options, including enable/disable, for IPv4 and IPv6 addresses.   |
| Default Gateway         | Defines the default gateway for this interface. The default gateway is the IP address of a router that provides a path to a network that is not part of the subnet of this interface. You must configure a default gateway if incoming Ethernet traffic to this interface is not on this interface's subnet.   |
| Primary Gateway         | Indicates this default gateway is the router the RTAC will use if initiating traffic to an interface on a different subnet domain.   |

**NOTE**

Do not set unused Ethernet ports to an active subnet.

**Table 7.2 CIDR Notation**

| <b>CIDR Value</b> | <b>Subnet Mask</b> |
|-------------------|--------------------|
| /32               | 255.255.255.255    |
| /31               | 255.255.255.254    |
| /30               | 255.255.255.252    |
| /29               | 255.255.255.248    |
| /28               | 255.255.255.240    |
| /27               | 255.255.255.224    |
| /26               | 255.255.255.192    |
| /25               | 255.255.255.128    |
| /24               | 255.255.255.000    |
| /23               | 255.255.254.000    |
| /22               | 255.255.252.000    |
| /21               | 255.255.248.000    |
| /20               | 255.255.240.000    |
| /19               | 255.255.224.000    |
| /18               | 255.255.192.000    |
| /17               | 255.255.128.000    |
| /16               | 255.255.000.000    |
| /15               | 255.254.000.000    |

| CIDR Value | Subnet Mask     |
|------------|-----------------|
| /14        | 255.252.000.000 |
| /13        | 255.248.000.000 |
| /12        | 255.240.000.000 |
| /11        | 255.224.000.000 |
| /10        | 255.192.000.000 |
| /9         | 255.128.000.000 |
| /8         | 255.000.000.000 |
| /7         | 254.000.000.000 |
| /6         | 252.000.000.000 |
| /5         | 248.000.000.000 |
| /4         | 240.000.000.000 |
| /3         | 224.000.000.000 |
| /2         | 192.000.000.000 |
| /1         | 128.000.000.000 |
| /0         | 000.000.000.000 |

## Subnet Usage

Unless connected physically to the same network, each Ethernet interface should use a different subnet. For example, if two RTAC network interface cards (NICs) have the same subnet, but one is not connected to the local area network (LAN), the RTAC may send some messages erroneously to the disconnected interface. The resulting misdirected messages are lost, because the RTAC has no way of verifying whether the disconnected interface is a valid path on which to send the messages. Use port bridging if you want two network interfaces to work as a common, unmanaged switch.

---

### Example 7.1 Incorrect Subnet Setup

The following example illustrates an incorrect setup that will result in communications problems with the RTAC. Three RTAC NICs have the same subnet. Two NICs physically connect to the same LAN, but one does not.

|   |                          |   |
|---|--------------------------|---|
| ✓ | Eth1 IP = 10.201.10.1/24 | Connected to local switch communicating with local IEDs.                |
| ✓ | Eth2 IP = 10.201.10.4/24 | Connected to local switch communicating with remote control center LAN. |
| ✗ | EthF IP = 10.201.10.5/25 | Disconnected (will create communications errors on other two ports.)    |

The RTAC will direct some network traffic to the disconnected interface because it is on the same subnet as the other two NICs. To resolve the problem, either physically connect EthF to the local switch or reconfigure it to a different subnet. For example, set the IP address to 10.201.x.5, where x = a number except 10 in the range of 1–255.

---

| Status | Interface Name | IP Address       | Default Gateway    | MAC Address       | Enable Ping | Enable ODBC Access | Enable Web Access | Options              |
|--------|----------------|------------------|--------------------|-------------------|-------------|--------------------|-------------------|----------------------|
|        | Eth_01         | 192.169.10.20/24 |                    | 00:30:a7:02:3d:db | True        | True               | True              | <a href="#">Edit</a> |
|        | Eth_02         | 10.203.86.204/10 | <b>10.203.80.1</b> | 00:30:a7:02:3d:dc | False       | True               | True              | <a href="#">Edit</a> |
|        | USB_B1         | 172.29.131.1/24  |                    | 00:30:a7:02:3d:dd | True        | True               | True              | <a href="#">Edit</a> |

**Figure 7.2** Ethernet Settings

## IPv6 Configuration

Configuring IPv6 addresses can be done in the RTAC's local interface or from the web interface. IPv6 is disabled by default from the factory. Each enabled interface can have a unique IPv6 global IP address so that other devices on the network are able to communicate with the RTAC. The RTAC also supports enabling IPv6 and IPv4 addresses simultaneously on the same interface.

IPv6 configuration includes the ability to enable web access. If enabled, the user can log into the RTAC's web interface to check diagnostics, view or retrieve event reports, load firmware, and perform other functions. Database access can also be enabled for IPv6. This allows the user to load an RTAC project using the ACCELERATOR RTAC software. After loading a project, the RTAC will enable and the project will execute, but viewing live data in the software is *not* supported over IPv6. Interface bonding, bridging, and PRP pairing is configurable for IPv6 and will simultaneously be applied to IPv4 (if also enabled). Also similar to IPv4, IPv6 will be disabled if EtherCAT is enabled on a specific interface.

The format for logging in to the RTAC's web interface using IPv6 is slightly different than with IPv4. The web server still uses https, but requires that the IPv6 address be inside a pair of square brackets. The general form is **https://[\*IPv6 address\*]** (e.g., https://[fdd2:67de:aa41:2::1]).

The following communications protocols in the RTAC support IPv6:

- ▶ SEL Server
- ▶ DNP Server
- ▶ Modbus Server
- ▶ FTP/SFTP Server
- ▶ HTTPS/API Interfaces
- ▶ HTTP/HTTPS Server

## Bridging and Bonding

You can configure RTAC Ethernet ports as standalone network interfaces with individual IP addresses, or configure them to work together using bridging or bonding settings. Multiple pairs of bonded interfaces and a single set of bridged interfaces can be configured simultaneously.

### **IMPORTANT**

Aggregate mode on the RTAC only works when used with other aggregate bonding capable devices on the network.

### **IMPORTANT**

Bonding methods do not provide simple switch or routing functionality.

- Bridging enables two or more network interfaces to work as a common unmanaged switch. Bridging ports establish switch-like functionality that you can use to configure multiple devices into a ring network without requiring an external switch. When you add an Ethernet interface to the bridge, it shares the same IP address as other ports on the bridge but maintains its own MAC address. If the bridged Ethernet interface receives a packet intended for itself, it processes that packet normally. If the bridged Ethernet interface receives a packet intended for another address, it forwards that packet to its destination from the port best suited to send it. The bridge interface runs Spanning Tree Protocol (STP) to determine which port forwards packets. On interfaces with bridging enabled, you can optionally disable STP. When STP is not active on bridged interfaces, the RTAC will not participate in network topology changes. The bridge STP configuration parameters are the following:
  - Bridge Priority = 32768
  - Hello Time = 2 s
  - Max Age = 20 s
  - Forward Delay = 15 s
- Bonding in backup mode enables only one of the Ethernet interfaces at a time, and they both share the same IP address. The RTAC checks the link status at the link frequency (in milliseconds) to determine if that interface is still working. If the link is failed on that interface for longer than the down delay (the count of the number of link inspections), that interface is considered failed. The RTAC then activates the second port.
- Bonding in aggregate mode enables both Ethernet interfaces to share the same IP address. Used with the correct external networking equipment, this provides the ability to increase bandwidth while offering a fully redundant network communications path. To use aggregate mode, connect an Ethernet cable to both of the bonded ports, then to the aggregate bonding compliant device, such as a managed switch. If one cable is broken, the RTAC routes all traffic onto the second cable. If both cables are functioning, the RTAC distributes traffic between the two cables, thus increasing available bandwidth.

## Parallel Redundancy Protocol

The RTAC platform implements Parallel Redundancy Protocol (PRP) based on the IEC 62439-3:2012 standard. PRP provides high availability for Ethernet communications by sending the same Ethernet packet over two separate networks with a sequence number and an A or B tag attached to it. The device receiving a PRP packet will accept the first packet it receives from the A or B pair and discard the other packet.

Ethernet interface control from the IEC 61131 logic engine is not supported for interfaces that have PRP enabled. The Ethernet configuration status will not read accurately and changes to the Ethernet interface will not be applied.

To configure PRP, navigate to the Ethernet interface Port Configuration page. To configure an interface to belong in a PRP pair, that interface cannot have DHCP enabled, be bridged or bonded, or have EtherCAT enabled. Starting in firmware version R147-V0, the RTAC supports as many as five pairs of PRP-enabled interfaces. In firmware versions prior to R147-V0, only one pair of PRP-enabled interfaces is supported.

The screenshot shows the 'Interface PRP Pairing' configuration page. It includes the following fields:

- Enable pairing on this interface (LAN A)**
- Pair this interface to:**  
Eth\_01 ▾ (LAN B)
- Supervisor Frame Destination Address LSB:** 0
- Supervisor Frame Interval (sec):** 2
- Entry Timeout (msec):** 500

**Figure 7.3 Interface PRP Pairing Page**

The settings shown in *Figure 7.3* are defined as follows:

- **Supervisor Frame Destination Address LSB:** This setting allows the user to define the least-significant byte in the supervisor frame address periodically sent out onto the network. SEL recommends leaving this at the default value unless there is a conflict for the supervisor frame multi-cast address. That address is 01-15-4E-00-01-XX per the IEC 61439-3 standard, where XX is the configurable setting. The range for this setting is 0–255 in decimal, and it will appear in the MAC address as hexadecimal when transmitted.
- **Supervisor Frame Interval:** The period at which the RTAC will send the supervisor frame out on the PRP network. The purpose of the supervisor frame is for a separate IED to monitor the status of PRP connected devices and provide statistics about the PRP networks.
- **Entry Timeout:** The time for which the RTAC will monitor for duplicate sequence numbers received from a single device. For high-bandwidth-consumption PRP networks, SEL recommends this number be set toward the bottom end of the allowed range. For low-bandwidth PRP networks, you can increase this value. This setting might need to be adjusted if the bandwidth of the PRP network is in excess of 70 Mbps.

The bottom of the diagnostics page on the web interface displays statistics about active PRP connections, as shown in *Figure 7.4*.

| PRP Diagnostics:  |                              |            |            |        |       |  |  |
|-------------------|------------------------------|------------|------------|--------|-------|--|--|
| #                 | Source MAC                   | Next A Seq | Next B Seq | LAN ID | Error |  |  |
| 1                 | 00:30:A7:02:80:CD            | 54786      | 54786      | TRUE   |       |  |  |
| ARP Table:        |                              |            |            |        |       |  |  |
| ? (10.203.80.1)   | at 70:ca:9b:98:4c:cc [ether] | on prp0    |            |        |       |  |  |
| ? (10.203.80.100) | at 00:30:a7:05:9e:44 [ether] | on prp0    |            |        |       |  |  |
| ? (10.203.85.252) | at 00:30:a7:02:80:cd [ether] | on prp0    |            |        |       |  |  |

**Figure 7.4 Active PRP Connections**

The values shown in *Figure 7.4* are defined as follows:

- ▶ **Source MAC:** Because PRP works at Layer 2 (i.e., below the IP address layer), all PRP connections are identified by the MAC address of the IED with which the RTAC is communicating. This MAC address can be correlated with an IP address by looking at the address resolution table (ARP table), displayed below the PRP statistics.
- ▶ **Sequence Numbers:** The next predicted sequence number that the RTAC expects to see from a PRP conversation. When this number increments, it indicates that the PRP connection is communicating. If this number does not change, the implication is that there is no PRP traffic for that conversation.
- ▶ **LAN ID Error:** As seen in the configuration for PRP, each interface is assigned to the A or B network. If the A interface receives a B packet or vice versa, this value will show True. During the configuration of PRP, each interface is labeled as A or B.

## Global Ethernet Settings

The RTAC also has Global settings that provide Ethernet security and settings, shown in *Figure 7.2* and *Table 7.3*.

**Table 7.3 Global IP Settings**

| Global Ethernet Settings                 | Description   |
|--|---|
| Enable HTTP Redirect                     | Enables automatic http (TCP Port 80) to https (TCP Port 443) port forwarding. If this setting is disabled, a user in a web browser must explicitly specify <b>https://</b> before the RTAC's IP address in the address bar when attempting a connection to the RTAC's web interface. Disabled by default. |
| Hostname                                 | The network name of the RTAC.   |
| Socket TCP Keep Alive Time (Seconds)     | The time for which the RTAC will wait while not receiving any TCP traffic on a socket connection before sending TCP keep alive probes (range: 1–7200).  |
| Socket TCP Keep Alive Probes             | The number of probes that will be sent before determining that the TCP socket should be closed if no response is received (range: 1–2000).  |
| Socket TCP Keep Alive Interval (Seconds) | The time for which the RTAC will wait between sending TCP keep alive probes (range: 1–7200).  |
| DNS Suffix                               | Specifies the DNS Suffix to append to the configured Hostname of the RTAC when accessing it by its fully qualified domain name (e.g., a Hostname of <b>mySEL3555RTAC</b> and a DNS Suffix of <b>ad.mynetwork.com</b> would be accessed with a network address of <b>mySEL3555RTAC.ad.mynetwork.com</b> ). |
| Primary Nameserver                       | Specifies the IP address of the Primary DNS Nameserver.   |
| Secondary Nameserver                     | Specifies the IP Address of the Secondary DNS Nameserver.   |

## Static Routes

Static routes allow a user to specify a path for Ethernet traffic other than the active default gateway IP address. The most common use case of static routes for substation applications is for a network where multiple routers exist and the RTAC needs to communicate with IEDs behind each router.

Starting in firmware R154-V0, it is possible to configure a static route with a Remote Gateway address that cannot initially be communicated to at startup via existing subnets and routing. This supports applications where an IP alias is added later in runtime (via functions in the Ethernet\_Control library) to enable communications to the gateway. Note that this introduces the possibility of configuring invalid static routes, so use this feature with caution.

Table 7.4 Static Route Settings

| Static Route Settings | Description   |
|-----------------------|---|
| Remote Gateway        | The gateway IP address of the router with which to communicate.   |
| Remote Network        | The desired network/IP address with which to communicate. This can be a single IP address, such as 172.29.45.13, or a range of IP addresses specified with a CIDR notation, such as 172.29.45.0/24. If specifying a range of IP addresses, the octet, which is part of a range that changes, needs to be 0. |
| Network Interface     | Configure the physical network interface that the RTAC will use to communicate to the router gateway.   |

## Hosts

Adds host names with their respective IP addresses to the RTAC hosts table. The RTAC needs this information for LDAP configuration.

## URL Whitelist

Firmware versions R143 and later support whitelisting of webserver domains to which a user can navigate by using the RTAC web interface. The URL Whitelist is under the **Security** section of the RTAC web interface. URLs can be added or deleted from this list, as shown in *Figure 7.5*.



Figure 7.5 URL Whitelist

URLs are not case sensitive. The URL must conform to the following rules and formats:

URL Format: [scheme://[.]host[:port]][/path][@query]

- *Scheme* can be http, https, ftp, etc. This field is optional and must be followed by ://. Note that while a file server can be reached via the web interface, no files can be downloaded onto the RTAC via this mechanism.
- An optional dot (.) can prefix the host field to disable subdomain matching.
- The *host* field is required and is a valid hostname or IP address. It can also end with an asterisk (\*) to indicate a prefix match.

- An optional *port* can come after the host. It must be a valid port value from 1 to 65535.
- An optional *path* can come after the port. Any string can be used for this value.
- An optional *query*, which is a set of key-value and key-only tokens delimited by an ampersand (&), can be included at the end of the URL. The key-value tokens are separated by an equals symbol (=). A query token can optionally end with an asterisk (\*) to indicate a prefix match. Token order is ignored during matching.

If you prefer that the RTAC not impose any whitelist restrictions, then you can add a single rule such as "http://\*" and/or "https://\*" to allow access to any URL.

---

**Example 7.2 IP Address**


Entering the IP address, as shown above, allows you to navigate to the IP address registered as 192.168.1.12. Because only the hostname is included, you can add any prefix (e.g., *http://*192.168.1.12 or *https://*192.168.1.12).

---

**Example 7.3 No Access to Subdomains**


This example shows how to allow access to a domain without access to any of its subdomains. Access to any associated subdomains (for example, www.steve.grc.com) is not allowed.

---

**Example 7.4 Using a Nonstandard Port to Access a Web Server**


This example shows how to append a port to the destination URL to use a different port than http (80) or https (443).

---

**Example 7.5 Allowing Access to Any HTTPS Connection**


This example shows how to allow for access to any destination that begins with *https://*. This provides similar functionality to the filter of *\*.443*, which allows access to any domain or IP connection with Port 443. Note that it is not possible to whitelist an IP range; for example, a filter of *192.168.1.\** will *not* allow access to any IP in the Class D IP range.

## ACCELERATOR RTAC Software Passwords and User Accounts

The RTAC system has two account schemes as well as accounts and passwords associated with communications protocol sessions. The first designates who can use the ACCELERATOR RTAC configuration software and what rights these users have. The second defines users and their privileges in the RTAC. This second scheme applies to the RTAC web interface, open database connections (ODBC), and transparent connections.

Communications protocol session accounts and passwords provide authentication of communications sessions. The ACCELERATOR RTAC encrypts and stores these passwords.

### ACCELERATOR RTAC Configuration Software Passwords

Once you are logged in as administrator, set up user accounts in ACCELERATOR RTAC:

- Step 1. Click the **SEL action button > Options > User Accounts**.
- Step 2. Click on  to add users.
- Step 3. Create a name and strong password.

A strong password must meet the following criteria:

- minimum eight characters
- at least one digit
- at least one special character (!, \$, etc.)
- at least one capitalized letter
- at least one lowercase letter

*Table 7.5* provides all valid characters that are supported in ACCELERATOR RTAC passwords. These same characters are enforced when downloading or reading projects from RTACs.

**Table 7.5 Valid ACCELERATOR RTAC Database Password Characters**

|         |   |
|---------|---|
| Alpha   | A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, Q, R, S, T, U, V, W, X, Y, Z,<br>a, b, c, d, e, f, g, h, i, j, k, l, m, n, o, p, q, r, s, t, u, v, w, x, y, z |
| Numeric | 0, 1, 2, 3, 4, 5, 6, 7, 8, 9  |
| Special | '!', '!', '#', '\$', '%', '&', '(', ')', '*', '+', '!', '-', '.', '/', ':', '<', '=', '>', '?', '@', '[', '\\", ]', '^', '_', `', {,  , }, ~                  |

- Step 4. Assign a user role.


- Administrator
- Create/delete projects
- Unlock improperly closed projects

- Create/delete user accounts
- Send/read projects to/from RTACs
- Set project passwords and export encryption pass phrases
- Engineer
  - Create/delete projects
  - Send/read projects to/from RTACs
  - Set project passwords and export encryption pass phrases

Step 5. Click **Close**.

Step 6. Click **Ok**.

ACCELERATOR RTAC automatically saves changes, after which these changes are ready for use. See *Figure 7.6*.

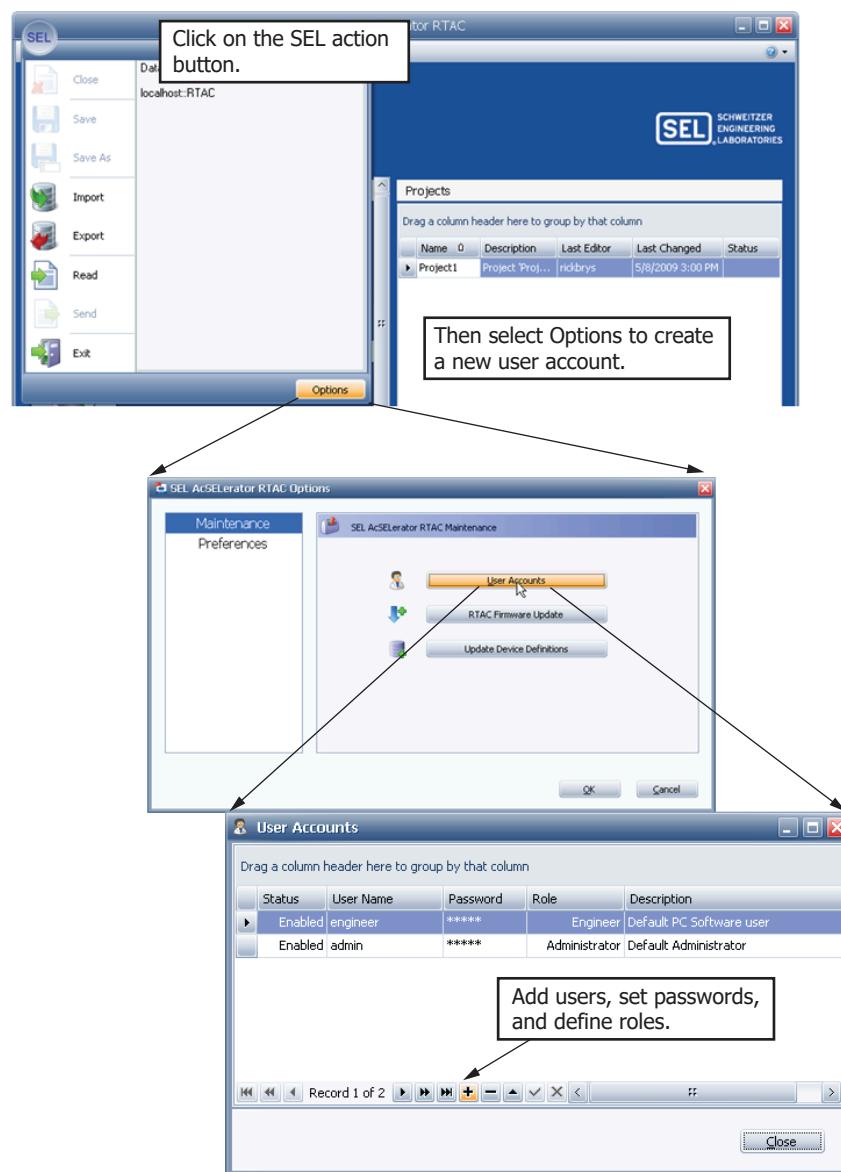

**Figure 7.6 ACCELERATOR RTAC User Accounts**

## Protocol Passwords

Communications protocol passwords provide authentication of authorized communications sessions and are necessary for elevating access levels for restricted services. ACCELERATOR RTAC project versions prior to R136-V0 store protocol passwords in plain text. In projects created for ACCELERATOR RTAC project versions R136 and later, all communications protocol passwords are encrypted, ensuring that sensitive passwords are not disclosed to unauthorized persons. The ACCELERATOR RTAC database stores the password cypher text is with asterisk characters replacing the encrypted cypher text in the ACCELERATOR RTAC password fields. Converting project versions to R136-V0 or later encrypts the passwords in the converted project. In firmware revisions R150-V0 and later, when a project is downloaded or activated via the web there is a true/false option to use the protocol passwords from the project or to keep the current protocol passwords on the RTAC. True uses the protocol passwords from the RTAC project; false keeps the current protocol passwords on the RTAC.

| Communications        |        |                   |   |
|-----------------------|--------|-------------------|---|
| Xon / Xoff            | True   | True, False       | Use Xon/Xoff Software Handshaking Control.    |
| Serial Tunneling Mode | Telnet | Telnet, Raw TC... | Serial tunneling mode to be used.             |
| Server IP Port        | 23     | 1-65535           | TCP port of the remote SEL server connection. |
| Level 1 Password      | *****  | 0-32 (characters) | Server Logon String for level 1 access.       |
| Level 2 Password      | *****  | 0-32 (characters) | Server Logon String for level 2 access.       |

Figure 7.7 Hidden Passwords in an SEL Client

## Password Report

Starting in firmware revision R136, passwords for IED communications are encrypted and obfuscated in the ACCELERATOR RTAC software. Some users want to see the passwords included in the project configuration, often to verify that the RTAC configuration contains the correct passwords. To accommodate this, starting in firmware revision R141, a report is available on the RTAC web interface with an Administrator account or a custom account with the password report permission included.

The report generates a CSV file that contains the IED name in the ACCELERATOR RTAC configuration, setting name, and the corresponding password.

This report does not contain any passwords for user accounts on the RTAC.

## Project Passwords

Add explicit project-level security by setting project passwords from the ACCELERATOR RTAC homepage or from within a project (available in R136 firmware or later). If a project is password-protected, the user must provide a valid password before the project will open with ACCELERATOR RTAC. Project passwords must follow the same password rules defined for an RTAC user account (see *ACCELERATOR RTAC Configuration Software Passwords on page 698*). Once a project password has been created, it can be changed or disabled by an administrative user with the current project password.

Complete the following steps to set a project password:

- Step 1. Open ACCELERATOR RTAC software.
- Step 2. Log in to the RTAC database.
- Step 3. Right-click an unlocked project in the **Projects** window and click **Set Password**.
- Step 4. From the **Set Password** pop-up window, enter a new password in both the top and bottom fields. The horizontal bar beneath the confirmation field provides a gauge for password strength. The **Set** button becomes selectable once the software considers the password strong and both lines match.



**Figure 7.8 ACCELERATOR RTAC Project Password Management**

- Step 5. Click the **Set** button.

You also can set project passwords from an open project by clicking **Password** () from the toolbar of the **Home** tab and selecting **Set Password** from the drop-down menu. Alternatively, you can set project passwords with the keyboard combination <Ctrl+L>.

A password-protected project will display **Password On** in the ACCELERATOR RTAC projects view **Status** column. This field will otherwise be blank. From an open project, the password status is shown in the status bar in the bottom right corner of the window.

| Name     | Description | Last Editor | Last Accessed    | Status      | Version | RTAC Type  |
|----------|-------------|-------------|------------------|-------------|---------|------------|
| Project1 |             | admin       | 3/1/2016 3:45 PM | Password On | R136    | RTAC/Axion |

**Figure 7.9 Project Password Status**

Disable passwords from within the **Projects** view by right-clicking on the desired project and selecting **Disable Password**. You must enter the current password before you can remove password protection from the project. You can also accomplish this from within a project by clicking the **Password** button () and selecting **Disable Password** or typing the keyboard combination <Ctrl+D>.

Set or disable a single password for multiple projects by selecting all of the desired projects in the ACCELERATOR RTAC **Projects** view and performing the previous *Step 1* through *Step 4*.

## Project Export Encryption


ACCELERATOR RTAC encrypts all exported projects through use of a default hidden pass phrase that generates a pseudo-random number based on the hash-based message authentication code and the secure hash algorithm. The software uses this number to augment the symmetric encryption of the project data with additional pseudo-randomness. You can also enter a custom pass phrase to serve as this number. Once you have enabled this feature, the RTAC prompts you to create a new pass phrase when exporting a project. Similarly, the RTAC prompts you to enter this pass phrase when you import the project into ACCELERATOR RTAC or into the RTAC via the web interface. Once you import the project into the ACCELERATOR RTAC software, the pass phrase is not necessary to open the project.

Once you are logged in to the ACCELERATOR RTAC, enable the export encryption passphrase prompt:

- Step 1. Click the **SEL** action button, then **Options > Preferences**.
- Step 2. Select the **Prompt for passphrase to encrypt project export** check box.
- Step 3. Click **OK**.

Now encrypt an exported project:

- Step 1. From the ACCELERATOR RTAC start page, click the desired project to highlight it.
- Step 2. Click the **SEL Application** button or right-click the project name ( ) and click the **Export** icon ( ).
- Step 3. From the **Set Encryption Passphrase** pop-up window, enter a new password in both the top and bottom fields. The horizontal bar beneath the confirmation field provides a gauge for password strength. When the bar is filled, the password is considered strong, and the **Set** button becomes selectable.

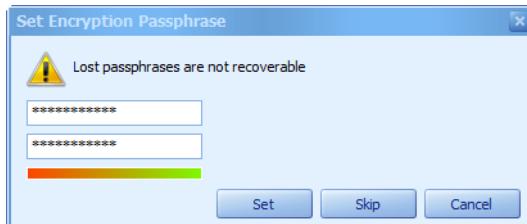

**Figure 7.10 ACCELERATOR RTAC Project Export Encryption Management**

- Step 4. Click **Set**. You also can click **Skip** to use the default encryption seed for this exported project.

## RTAC Web Interface User Accounts

User accounts for the RTAC are configured via the web interface. For firmware versions R100–R140, user account information is located in the User Accounts section. For firmware versions R141 and higher, refer to *Customizable User Accounts in R141 and Higher* on page 704. Starting in version R147, the IP address from which a user logs into the RTAC will be included in the login message in the Sequence of Events log.

## User Accounts in R100-R140

Set up user accounts in the RTAC web interface. You must configure at least one Administrator account on the RTAC and you should not configure that account to expire. Complete the following steps to configure a new user on the RTAC:

- Step 1. Log in to the web interface in an **HTTPS** web session.
- Step 2. Click on **User** and then **Accounts**.
- Step 3. Click **Add New User**, as shown in *Figure 7.11*.
- Step 4. Enter new username.
- Step 5. Assign user role.

**Table 7.6 Account Access**

|                            | <b>Administrator</b> | <b>User Account Manager</b> | <b>Engineer</b> | <b>Monitor</b> | <b>HMI Operator</b> | <b>File Transfer</b> |
|----------------------------|----------------------|-----------------------------|-----------------|----------------|---------------------|----------------------|
| User Account Settings      | Read/Write           | Read/Write                  | Read            | No Access      | No Access           | No Access            |
| Ethernet/System Settings   | Read/Write           | Read/Write                  | Read/Write      | Read           | Read                | No Access            |
| Project Settings           | Read/Write           | No Access                   | Read/Write      | No Access      | No Access           | No Access            |
| Reports and Diagnostics    | Read/Write           | Read                        | Read/Write      | Read           | Read/Write          | No Access            |
| Device Management          | Read/Write           | Read                        | Read            | Read           | Read                | No Access            |
| Engineering Access         | Read/Write           | No Access                   | Read/Write      | No Access      | No Access           | No Access            |
| Operate HMI Controls       | Yes                  | No                          | Yes             | No             | Yes                 | No                   |
| S/FTP Access               | Read/Write           | Read                        | Read/Write      | Read           | Read                | Read/Write           |
| Web Communication Captures | Read/Write           | No Access                   | Read/Write      | No Access      | No Access           | No Access            |
| Web Live Data              | Read/Write           | No Access                   | Read/Write      | Read           | Read                | No Access            |

- Step 6. If you assign an expiration date, the account will automatically become inactive on the date you assign.

**NOTE**

You cannot create a user with the name diag. An internal RTAC application already uses this username.

**NOTE**

Users who log in via LDAP will appear in the accounts list. Deleting these users will not remove their ability to log in to the RTAC as that is managed through the LDAP server.

- Step 7. Noncomplex passwords are simple text strings. Complex passwords must contain the following:

- Minimum eight characters
- At least one digit

- At least one special character (!, \$, etc.)
- At least one capitalized letter
- At least one lowercase letter

Step 8. Select the **Account Enabled** check box and press **Submit**. The account is now ready for use.

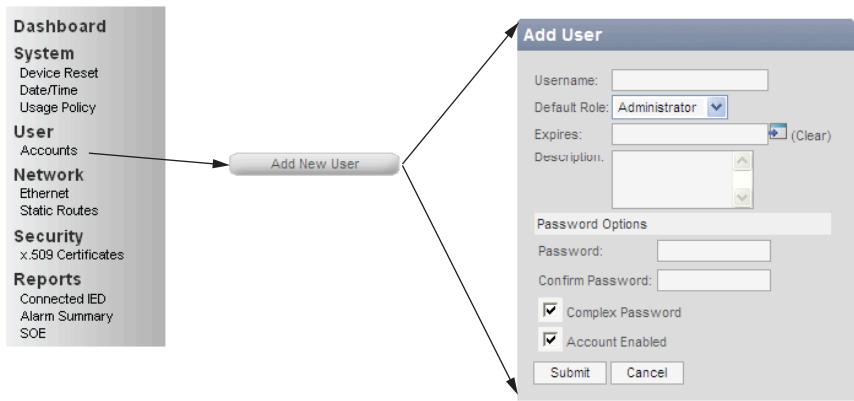


Figure 7.11 RTAC Web Access User Accounts

## Customizable User Accounts in R141 and Higher

Starting in firmware revision R141, user accounts are described in terms of permissions. *Table 7.7* shows all permissions in the RTAC and a description for them. Note that the standard user accounts created prior to R141 still exist. Also note that User Manager and the Monitor roles have reduced capabilities starting in R141. Other accounts, such as Administrator, Engineer, HMI Operator, and File Transfer contain the exact same permissions as prior to R141. *Table 7.8* shows the permissions associated with each default user role.

When upgrading to R141 or later from a pre-R141 firmware version, note the following:

Account names can no longer share the same name as account roles. If an account has the same name as an account role in R141 or later, the account name will have an underscore appended to it. For example, if a user account named Administrator in R140 is used to update the RTAC firmware version to R141 or later, that account will be renamed as Administrator\_. A common username is Administrator; however, since this matches one of the account types, any spelling of Administrator is no longer a valid username after R141.

Table 7.7 Available Permissions

| RTAC Permission Name | Default Account  | Description   |
|----------------------|--|---|
| Account Write        | Administrator, User Manager                                  | Authorized to modify and create User Accounts. LDAP configuration requires the following permissions: Account Write, Network Write, and Security Write. Authorizes ACCELERATOR RTAC to send User Accounts and LDAP Settings when sending a project to the RTAC. |
| API Login            | Administrator, Engineer, User Manager, Monitor, HMI Operator | Authorized to login via the API. Individual API calls may require additional permissions.   |

| <b>RTAC Permission Name</b> | <b>Default Account</b>  | <b>Description</b>   |
|-----------------------------|---|--|
| Database Login              | Administrator, Engineer   | Authorized access to Port 5432. This access is needed to download configurations from ACCELERATOR RTAC, collect data with ACCELERATOR TEAM SEL-5045 Software, ODBC queries, and perform firmware upgrades. |
| Device Password Read        | Administrator   | Authorized to retrieve passwords from all connections that require a password in the active RTAC configuration.  |
| Device Password Write       | Administrator   | Authorized to write new passwords for IEDs in the active project via API.  |
| Device Settings             | Administrator, Engineer   | Authorized to modify Device Information and Date/Time on the web interface. Authorizes ACCELERATOR RTAC to send Website settings when sending a project to the RTAC.                                       |
| Diagnostic Settings         | Administrator, Engineer, File Transfer                                      | Authorized to read diagnostic information.   |
| Engineering Access          | Administrator, Engineer   | Authorized to access the SEL Server and other access points.   |
| Factory Settings            | Administrator   | Authorized to restore the device to the factory-default settings.  |
| File Read                   | Administrator, Engineer, User Manager, Monitor, HMI Operator, File Transfer | Authorized to read files via File Manager and the file system via protocols that support file transfer mechanisms.   |
| File Write                  | Administrator, Engineer, File Transfer                                      | Authorized to write files via File Manager and the file system via protocols that support file transfer mechanisms. This permission inherits File Read.  |
| Firmware Upgrade            | Administrator, Engineer   | Authorized to apply Firmware to the device.  |
| Force Data                  | Administrator, Engineer   | Authorized to force data through Live Data and ACCELERATOR RTAC software. This permission inherits Live Data.  |
| HMI Local Write             | Administrator, Engineer, HMI Operator                                       | Authorized to issue controls on the HMI via the local display.   |
| HMI Remote Write            | Administrator, Engineer, HMI Operator                                       | Authorized to issue controls on the HMI via a remote web browser connection.   |
| IED Connection Information  | Administrator, Engineer   | Authorized to read the Connected IED page.   |
| Live Data                   | Administrator, Engineer, User Manager, Monitor, HMI Operator                | Authorized to read the Live Data webpage.  |
| Logic Engine API Read       | Administrator   | Authorized to read tags from the RTAC logic engine via the API.  |
| Logic Engine API Write      | Administrator   | Authorized to write tags to the RTAC logic engine via the API.   |
| Manage Audits               | Administrator   | Authorized to create or delete audit reports.  |
| Network Read                | Administrator, Engineer, User Manager, Monitor, HMI Operator                | Authorized to read network settings.   |

**706 Security and Account Management**  
**RTAC Web Interface User Accounts**

| <b>RTAC Permission Name</b> | <b>Default Account</b>  | <b>Description</b>  |
|-----------------------------|---|---|
| Network Utilities           | Administrator, Engineer   | Authorized to run Comm Monitor and network utilities. This permission inherits Network Read.  |
| Network Write               | Administrator, Engineer   | Authorized to modify network settings. Authorizes ACSELERATOR RTAC to send Ethernet Settings and Hosts when sending a project to the RTAC. This permission inherits Network Utilities.  |
| Project Read                | Administrator, Engineer   | Authorized to read projects from the web interface and ACSELERATOR RTAC software via PROJECTS directory for file transfer protocols.  |
| Project Write               | Administrator, Engineer   | Authorized to send projects from the web interface and ACSELERATOR RTAC software via PROJECTS directory for file transfer protocols. This permission inherits Project Read.   |
| Reboot Device               | Administrator, Engineer, User Manager, Monitor, HMI Operator                | Authorized to reboot the device.  |
| Relay ACCcess               | Administrator, Engineer   | Authorized to enter Access Level 1 on the SEL server.   |
| Relay 2ACCcess              | Administrator   | Authorized to enter Access Level 2 on the SEL server.   |
| Report Delete               | Administrator, Engineer, HMI Operator                                       | Authorized to delete SOE events, either individually on the SOE page, or all events via Device Management page. Authorized to delete events from the Event Collection webpage. This permission inherits Report Write.   |
| Report Read                 | Administrator, Engineer, User Manager, Monitor, HMI Operator, File Transfer | Authorized to read SOE, Alarm Summary, and Event Collection webpages. Authorizes access to the EVENTS directory for protocols that support file transfer mechanisms.  |
| Report Write                | Administrator, Engineer   | Authorized to acknowledge SOE, Alarms, and Events. This permission inherits Report Read.  |
| Security Read               | Administrator, Engineer, User Manager                                       | Authorized to read CA Certificates, X.509 Certificates, SSH Keys, and the Usage Policy. Authorizes ACSELERATOR RTAC to read CA certificates, SSH Authorized Keys, SSH Host Keys, X.509 Certificates, and Usage Policy when reading a project from the RTAC.                                       |
| Security Write              | Administrator, Engineer, User Manager                                       | Authorized to edit CA Certificates, X.509 Certificates, SSH Keys, and the Usage Policy. Authorizes ACSELERATOR RTAC to send CA certificates, SSH Authorized Keys, SSH Host Keys, X.509 Certificates, and Usage Policy when sending a project to the RTAC. This permission inherits Security Read. |
| SFTP Login                  | Administrator, Engineer, User Manager, Monitor, HMI Operator, File Transfer | Authorized to log in to the file system via SFTP or FTP.  |
| Web Login                   | Administrator, Engineer, User Manager, Monitor, HMI Operator                | Authorized to log in via the Web interface.   |

**Table 7.8 Default Users and Associated Permissions**

| <b>Default Roles</b> | <b>Permissions</b>   |
|----------------------|--|
| Administrator        | Account Write, Database Login, Device Password Read, Device Settings, Diagnostic Settings, Engineering Access, Factory Settings, File Read, File Write, Firmware Upgrade, Force Data, HMI Local Write, HMI Remote Write, IED Connection Information, Live Data, Network Read, Network Utilities, Network Write, Project Read, Project Write, Reboot Device, Report Delete, Report Read, Report Write, Security Read, Security Write, SFTP Login, Web Login |
| User Account Manager | Account Write, File Read, Live Data, Network Read, Reboot Device, Report Read, Security Read, Security Write, SFTP Login, Web Login  |
| Engineer             | Database Login, Device Settings, Diagnostic Settings, Engineering Access, File Read, File Write, Firmware Upgrade, Force Data, HMI Local Write, HMI Remote Write, IED Connection Information, Live Data, Network Read, Network Utilities, Network Write, Project Read, Project Write, Reboot Device, Report Delete, Report Read, Report Write, Security Read, Security Write, SFTP Login, Web Login  |
| Monitor              | File Read, Live Data, Network Read, Reboot Device, Report Read, SFTP Login, Web Login  |
| HMI Operator         | File Read, HMI Local Write, HMI Remote Write, Live Data, Network Read, Reboot Device, Report Delete, Report Read, SFTP Login, Web Login  |
| File Transfer        | Diagnostic Settings, File Read, File Write, Report Read, SFTP Login  |

To use an account with customizable permissions, first create a new user role. Navigate to the **User Roles** page to create new user roles. This page allows for user role management, including editing, deleting, and adding new roles. This page lists all existing user roles on the RTAC. Default user roles cannot be removed or modified.

**Table 7.9 User Roles Columns**

| <b>Column Name</b> | <b>Description</b>  |
|--------------------|---|
| Role Name          | Contains the name for the user role.  |
| Description        | Contains notes about the user role. Non-default user accounts may include user-created descriptions.  |
| Members            | This column includes information about the account that may have inherited permissions from other user roles.<br>Direct Members: User roles that were directly selected when creating the user role.<br>Eventual Members: User roles that Direct members user roles referenced. |
| Permissions        | Contains a list of permissions for the user roles. If all permissions do not fit on the screen, a tooltip appears when hovering over the permission text to list all permissions.   |
| Options            | Contains the options for editing, copying, and deleting a user role. Default user roles cannot be edited or deleted.  |

When you add a new role, you can include a description. To resize the **Role** description box, click and drag on the bottom right corner. This allows for all text to be easily viewed. When creating a new user role, you can select existing roles on the unit to provide a starting set of permissions for the new role. Many users want custom roles based on default accounts. Selecting an existing role will populate all permissions associated with that role. Additional permissions can be added but removing roles that were inherited from another role is not possible. In this case, deselect the role. All permissions associated with the previously selected role remain selected but can now be removed.

The screenshot shows the 'Add New Role' page. At the top, there's a header 'Add New Role' and a section titled 'Basic Information'. Under 'Basic Information', there are two input fields: 'Role Name:' and 'Role Description:'. Below this is a section titled 'Members'. On the left, under 'System Roles', there is a list of roles: Administrator, Engineer, User Manager, Monitor, HMI Operator, and File Transfer. On the right, under 'User Roles', there is a list of roles: Custom1, Custom2, custom3, custom4, custom5, and custom6.

**Figure 7.12 Add New Role Page**

This page also includes each individual permission, as shown in *Table 7.10*.

**Table 7.10 Individual Permissions**

| Column Name    | Description  |
|----------------|--|
| Name           | Contains the name of the permission.   |
| Inherited From | Shows information about why the permission is being included if the user did not specifically select the permission. Often selecting an existing permission will show the user role from which the permission was included. Also, some permissions automatically inherit other permissions. Typically, write-oriented permissions inherit associated read permissions. |
| Description    | Contains information about each permission.  |

Each permission is focused on access to a particular function on the RTAC platform. To access some functionality, users may need to enable multiple permissions. *Table 7.11* shows a few examples of functionality that requires multiple permissions.

**Table 7.11 Example Functionality Requiring Multiple Permissions**

| Functionality   | Necessary Permissions  |
|---|--|
| Configuring LDAP  | Account Write, Network Write, and Security Write   |
| Sending a project to the RTAC via RTAC software                   | Database Login, Project Write (if advanced settings are to be sent, additional permissions are required) |
| Sending a project to the RTAC via the web interface               | Web Login, Project Write   |
| HMI operator (includes acknowledging alarms and sending controls) | Web Login, HMI Local Write, HMI Remote Write, and Report Write   |

To create a new user account, navigate to the **Accounts** page. Select **Add New User**. When adding a new account, multiple user roles can be selected.

Usernames can contain any 7-bit ASCII printable character with the following exceptions: @ # \$ % ^ & + = { } [ ] ; " ' , < > ? \. Spaces are also not allowed in usernames.

Passwords can contain any 7-bit ASCII printable character with no exceptions.

In RTAC firmware versions of R149 and later, user account password history enforcement can be enabled via the **Password History Count** setting available on the web interface dashboard. This setting has a range of 0–24 and configures the number of previously used passwords that a user may not change their password to (to prevent reuse of previously used passwords). The default value is 0 (i.e., password history enforcement is disabled).

The 7-bit ASCII printable characters include the entire English alphabet, upper and lower case, numbers, and some special characters included on keyboards.

**Figure 7.13 Add New User Page**

In addition, accounts can be configured to expire on a specific date and time or be disabled while still existing on the unit.

Once a new user account is created, per-account **Settings** are accessible through the Accounts tab on the web interface. Per-account settings that are configurable include the following:

- Web Session Time-out
- HMI Read-Only Mode Time-out
- Enable HMI Read-Only Mode
- Default Home Page

A full description of these settings is available in *Table 5.1* and if they are configured for a user these settings values are shaded out and unavailable on the main web interface dashboard.

In RTAC firmware versions R152 and later, on RTAC models that support a local display port (SEL-3350, SEL-3555, and SEL-3560), each user account also supports a configurable per-monitor Auto-Login Home page. This setting is used to assign a default web interface page or HMI to load on the local display

if the user account is configured as the Auto-Login account for a given RTAC. If multiple monitors are present, each monitor can be assigned a different default page to load. The monitors are listed in the same order they are displayed in the **Display** settings available on the local display Kiosk.

## Centralized User Accounts With LDAP

Many IT departments use Lightweight Directory Access Protocol (LDAP) to manage the users and devices on their corporate networks. LDAP is a powerful and flexible protocol that allows for fast information lookups from servers that are optimized for read access. The information stored on LDAP servers can be any type of record-based information that is stored in a directory structure. Examples include user and device lists, phone books, and recipes.

The RTAC includes LDAP as a mechanism for centralized user management. With LDAP, you can manage users at a central server. When a user who does not have a local account requests access to the RTAC, the RTAC will poll the central directory to verify that the user is authorized to access the unit (see *Figure 7.14*).

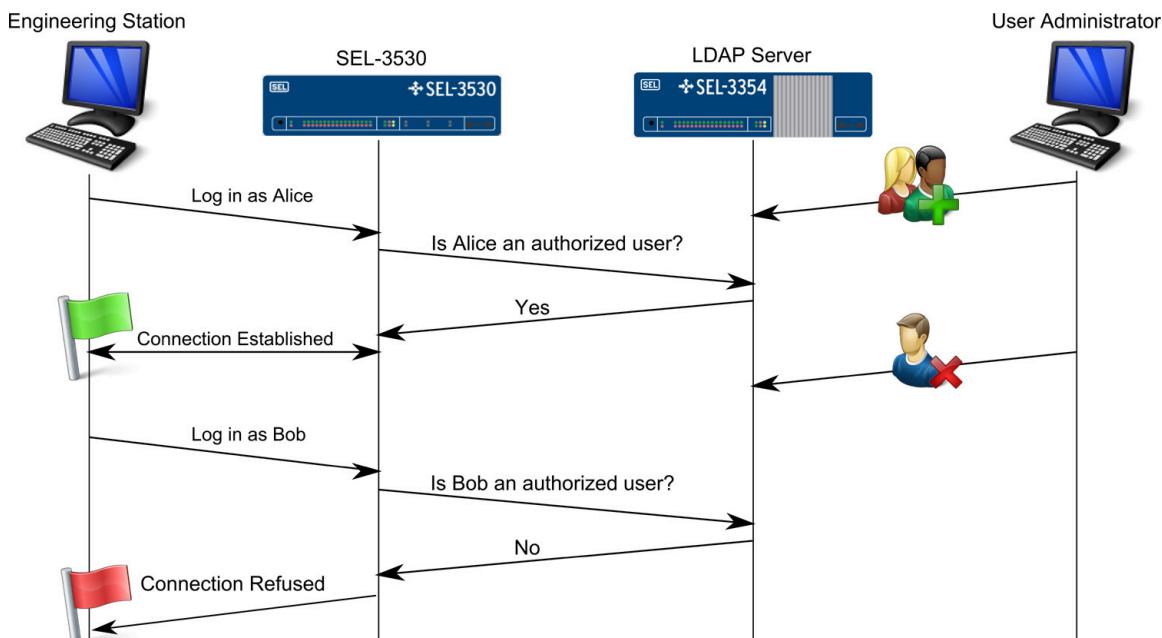


Figure 7.14 LDAP Login Process

For the RTAC to support this behavior, you must configure certain parameters in the RTAC to allow it to communicate with your LDAP server. All of these parameters are configurable through the RTAC web interface. To configure LDAP on your RTAC, access the RTAC web interface and use an account with administrative privileges to log in.

To begin, the RTAC needs to know the name and IP address of your LDAP server. Select the Host link for the navigation panel on your webpage to view and edit the Host settings (see *Figure 7.15*).

| HOST SETTINGS            |               |                              |
|--------------------------|---------------|------------------------------|
| <a href="#">Add Host</a> |               | <a href="#">Reload Table</a> |
| Hostname                 | IP Address    | Options                      |
| raven.rdttest.local      | 10.203.40.206 | <a href="#">Delete</a>       |

**Figure 7.15 Host Settings**

The RTAC needs the name and IP address of your LDAP server to determine how to contact it. The Host Settings page provides a method to statically map IP addresses with hostnames for such devices as your LDAP servers. To map an IP address to a hostname, select the Add Host button. This will show the Add Host form (see *Figure 7.16*).

The screenshot shows a web-based configuration interface for adding a new host. The top navigation bar has a 'Hosts' tab. Below it, there are two buttons: 'List Hosts' and 'Add New Host'. The 'Add New Host' button is highlighted. Below these buttons is a form field labeled 'Add Host' with a placeholder 'Hostname:' and a text input box. Below that is another form field labeled 'IP Address:' with a text input box. At the bottom of the form are two buttons: 'Submit' and 'Cancel'.

**Figure 7.16 Add Host**

Populate the Add Host form with the correct hostname and IP address of an LDAP server. The RTAC supports as many as 64 hosts. For your convenience, we have included in *Table 7.12* a form for your LDAP administrators to complete. Ask your LDAP Administrators to complete the form, and then map the information they provide into the RTACs Host Settings.

## LDAP Certificates

LDAP requires X.509 authentication to create binds between the server and client. This ensures that attackers do not spoof the authentication server to gain unauthorized access. The RTAC supports base64 (.cer files) X.509 and CA certificates and does not support any of the binary formats. The RTAC requires that the root certificate of the LDAP servers certificate chain be stored locally. Follow the instruction in *CA Certificates on page 1193* to install the required CA certificates for LDAP X.509 authentication.

## LDAP Settings

Now that your RTAC knows the names and locations of your LDAP servers, we can configure the RTAC to access those servers. Select the **LDAP Settings** link from the navigation panel on your webpage to view the LDAP parameters (see *Figure 7.17*).


**712 Security and Account Management**  
**Centralized User Accounts With LDAP**

| LDAP SETTINGS                    |   |                     |               |
|----------------------------------|---|---------------------|---------------|
| <b>Modify LDAP Settings</b>      |   |                     |               |
| <b>LDAP Enabled</b>              | <b>User ID Attribute</b>  |                     |               |
| Yes                              | (\$AMAccountName=(USERNAME))                                      |                     |               |
| <b>Group Member Attribute</b>    | <b>Server Synchronization Interval</b>                            |                     |               |
| memberOf                         | Every Request   |                     |               |
| <b>Search Base</b>               | ou=global,dc=rctest,dc=local                                      |                     |               |
| <b>Bind DN</b>                   |   |                     |               |
| <br>                             |   |                     |               |
| <b>Add LDAP Server</b>           |   | <b>Reload Table</b> |               |
| Priority                         | LDAP Server Hostname  | Port                | Options       |
| 1                                | raven.rctest.local  | 389                 | <b>Delete</b> |
| <br>                             |   |                     |               |
| <b>Modify Attribute Mappings</b> |   |                     |               |
| Local Attribute                  | LDAP Attribute  | <b>Reload Table</b> |               |
| First Name                       | givenName   |                     |               |
| Last Name                        | sn  |                     |               |
| Email                            | mail  |                     |               |
| Telephone                        | phone   |                     |               |
| <br>                             |   |                     |               |
| <b>Add Group Mapping</b>         |   | <b>Reload Table</b> |               |
| Device Role                      | DH  | Options             |               |
| Administrator                    | CN=All_Subs_Administrators,OU=Groups,OU=Global,DC=rctest,DC=local | <b>Delete</b>       |               |

**Figure 7.17 LDAP Settings**

*Figure 7.17 shows the **LDAP Settings** page and all the options for communicating with your LDAP servers. To simplify configuration, we have included in *Table 7.12* a form for your LDAP administrators to complete. You can then use the information from this form to populate all of the LDAP fields.*

To modify the LDAP settings, select the **Modify LDAP Settings** button located at the top of the main page. This will show the Edit LDAP Settings form on the right side of the page (see *Figure 7.18*).

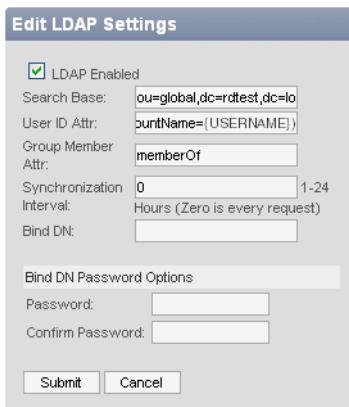

**Figure 7.18 Edit LDAP Settings**

You can consider the LDAP Search Base as the root directory from which to begin your user search. Form this by listing all of the components of the search base separated by commas and going from the most specific component to the broadest component. In the figure above, the Search Base configuration is ou=global,dc=rdtest,dc=local. In this search base, dc refers to domain component. The domain components combine with "." to create the search domain. In this case, the search domain is rdtest.local. The "ou" component is the organizational unit, or directory, from which to begin the search. You can interpret this search base as, "Start the search from the Global directory residing on an LDAP server in the rdtest.local domain."

One other common LDAP component is cn. The abbreviation "cn" is short for common name. It is a name that refers to a specific object that may or may not be unique. Examples of common names are groups and usernames.

#### NOTE

The broader your search base, the more users/groups can access the RTAC. Be aware that broader search bases can take significantly more time to search than search bases that specify organizational units or groups.

The User ID and Group Member attributes are the LDAP labels that identify the usernames and groups of system users. If you enter these incorrectly, the RTAC will be unable to determine which LDAP fields to search for usernames or privileges.

The synchronization interval setting exists to reduce the overhead associated with pulling account information, such as attributes and role mappings, from an LDAP server. The RTAC caches this information locally for centralized users, improving their access times. You can then determine an interval, from 0 to 24 hours, at which the RTAC synchronizes this information. If you set the synchronization interval to 0, then the RTAC synchronizes every time someone logs on. When you use centralized accounts, a successful LDAP bind is necessary every time someone logs on, even if the account information is cached locally.

The RTAC supports both authenticated and anonymous binds to your LDAP servers. Authenticated binds use a service account to access the LDAP server. If the LDAP service account is revoked, or if the password expires, the RTAC will be unable to access the LDAP server, and centralized users will be unable to access the RTAC. Anonymous binds forgo the use of service accounts. Learn from your LDAP administrators which method they prefer for your system.

Obtain the necessary configuration information from your LDAP administrators, and enter the settings. For your convenience, we have included a form in *Table 7.12* for your LDAP administrators to complete. Ask your LDAP administrators to complete the form, and then map the information they provide into the LDAP settings for the RTAC.

## LDAP Server

To improve availability when one or more LDAP servers may be inaccessible, the RTAC supports access to multiple LDAP servers. To add an LDAP server, select the **Add LDAP Server** button. This will show the Add LDAP Server form on the right side of the page (see *Figure 7.19*).



|           |                   |
|-----------|-------------------|
| Hostname: | raven.rtest.local |
| Port:     | 389               |
| Submit    | Cancel            |


**Figure 7.19 Add LDAP Server**

You can identify LDAP servers by their hostnames and port numbers. Use port 389, unless your LDAP administrator specifies a different port number. Use the form in *Table 7.12* to obtain this information from your LDAP Administrators.

The RTAC allows for two LDAP servers for redundancy and increased availability. The RTAC assigns a priority to each LDAP server and queries the servers in their order of priority until it identifies the user attempting to access the RTAC, or until it exhausts the list.

## Attribute Mappings

The RTAC can pull user attributes from your LDAP server and store those attributes on the local machine. To map your LDAP attributes to RTAC attributes, select the **Modify Attribute Mappings** button. This selection causes the RTAC to display the Edit Attribute Mappings form on the right side of the page (see *Figure 7.20*).

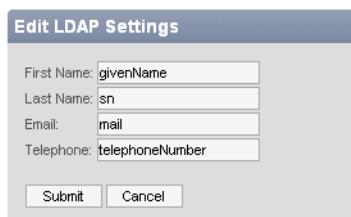

|             |                 |
|-------------|-----------------|
| First Name: | givenName       |
| Last Name:  | sn              |
| Email:      | mail            |
| Telephone:  | telephoneNumber |
| Submit      | Cancel          |

**Figure 7.20 Edit Attribute Mappings**

The field labels in the Edit Attribute Mappings form are the titles for the RTAC attributes. To map LDAP attributes to these local attributes, enter the appropriate LDAP attributes into the text boxes. These settings are optional. You can use the form in *Table 7.12* to obtain this information from your LDAP Administrators.

## Group Mappings

The RTAC has specific device roles that you can map to LDAP group memberships. Select the **Add Group Mapping** button to configure a new group mapping. This will expand a table that shows all of the LDAP groups the RTAC can access—based upon your search base (see *Figure 7.21*).

| Device Role  | DN  | Options                               |
|--|---|---------------------------------------|
| Administrator  | CN=All_Subs_Administrators,OU=Groups,OU=Global,DC=rdtest,DC=local | <input type="button" value="Delete"/> |
| <div style="border: 1px solid #ccc; padding: 5px;"> <div style="display: flex; justify-content: space-between;"> <span>Administrator</span> <span style="border: 1px solid #ccc; padding: 2px;">Selected DN:<br/><b>None</b></span> <span><input type="button" value="Add"/> <input type="button" value="Cancel"/></span> </div> <div style="margin-top: 10px; border: 1px solid #ccc; padding: 5px; background-color: #f9f9f9;"> <ul style="list-style-type: none"> <li>▼ ou=global,dc=rdtest,dc=local           <ul style="list-style-type: none"> <li>▼ Groups               <ul style="list-style-type: none"> <li>▶ All_Subs_Administrators</li> <li>▶ All_Subs_IED_Engineers</li> <li>▶ All_Subs_IED_Monitors</li> <li>▶ All_Subs_UserManagers</li> </ul> </li> <li>Users</li> </ul> </li> </ul> </div> </div> |   |                                       |

**Figure 7.21 Group Mappings**

To configure a group mapping, select the RTAC user type from the drop-down box on the left, and navigate through the tree to the user or group that should be given the roles privileges. Select the user or group, and select the **Add** button to create the mapping. Your server administrator may need to create new groups and assign members appropriate for these mappings. Work with your LDAP administrator, and use the form in *Table 7.12* to determine group mappings.

**Table 7.12 LDAP Settings Form**

LDAP Hosts (Input these settings on the Hosts page, need at least one):

Hostname: IP Address:

Hostname: IP Address:

LDAP Settings (Input these settings on the LDAP Settings page):

Search Base:

User ID Attribute:

Group Member Attribute:

Bind DN (Optional, if left blank will use anonymous binds):

Bind DN Password (Optional, required only if not using anonymous binds):

LDAP Servers (Input these settings on the LDAP Settings page, need at least one):

Hostname: Port Number:

Hostname: Port Number:

Hostname: Port Number:

**Centralized User Accounts With RADIUS**

Attribute Mappings (Optional, input these settings on the LDAP Settings page):

First Name Attribute:

Last Name Attribute:

Email Attribute:

Telephone Attribute:

Device Roles (Required to map user privileges, input these settings on the LDAP settings page):

Administrator Group/User DN:

Engineer Group/User DN:

User Manager Group/User DN:

Monitor Group/User DN:

---

## Centralized User Accounts With RADIUS

The SEL RTAC supports the basic NAS client authentication functionality of the RADIUS protocol. By configuring the RADIUS settings, you can log in using credentials not stored on the RTAC.

SEL cannot guarantee that the device will be compatible with all possible RADIUS server architectures and implementations. Configure communications with a RADIUS server on the RADIUS Settings page in the RTAC web interface.

**Radius Settings**

**Enable RADIUS Authentication**

**Primary Server**

|             |                  |
|-------------|------------------|
| Host        | IP Address       |
| radius-test | Ex: 192.168.0.10 |

|                           |
|---------------------------|
| Authentication Port (UDP) |
| 1812                      |

**Backup Server (Optional)**

|      |                  |
|------|------------------|
| Host | IP Address       |
|      | Ex: 192.168.0.10 |

|                           |
|---------------------------|
| Authentication Port (UDP) |
| 1812                      |

**Common Settings**

|                      |
|----------------------|
| RADIUS Shared Secret |
| *****                |

|                       |                      |
|-----------------------|----------------------|
| Confirm Shared Secret | Authentication Types |
| *****                 | PAP                  |

|                                 |
|---------------------------------|
| Connection Timeout (in seconds) |
| 2                               |

Prevent Sending Unencrypted Username

**Test RADIUS Authentication**

**Test** Test RADIUS Authentication

**Submit**

**Figure 7.22 RADIUS Settings****Table 7.13 Radius Settings in the RTAC**

| Setting Name                       | Description  |
|------------------------------------|--|
| Enable Radius Authentication       | Select this check box to enable RADIUS authentication on the RTAC  |
| Primary Server Host and Ip Address | The host setting allows you to select any host that is already configured on the Hosts page. When selecting a host, the IP Address field will automatically populate. If the user enters a new host name with a corresponding IP address, the pair will be added to the Hosts page after submitting the RADIUS settings. In addition, if a host is selected and then the IP address is changed on this page, the change will be reflected in the Hosts page after submitting settings. |
| Primary Authentication Port        | The UDP port on which the RTAC will attempt to contact the Primary RADIUS server. The port range is 1024–65534.  |
| Backup Server Host and IP Address  | These fields are optional. If populated, when the RADIUS client is unable to exchange information with Primary server, the Backup server will be contacted.  |
| Backup Authentication Port         | The UDP port on which the RTAC will attempt to contact the Backup RADIUS server. The port range is 1024–65534.   |
| Shared Secret                      | The Shared Secret is a string that is determined by the RADIUS server and must match in order for authentication requests to be successful.  |
| Authentication Types               | The RTAC supports PAP, EAP-PEAPv0/MSCHAPv2, EAP-TTLS/PAP. This is the method in which the RTAC will communicate with the RADIUS server. When selecting an EAP method type, the RTAC will require the full CA certificate chain for the RADIUS server. This certificate will be imported on the CA certificates page.   |

**Security Logging**

| <b>Setting Name</b>                  | <b>Description</b>  |
|--------------------------------------|---|
| Connection Timeout                   | This is the time for which the RTAC will wait for the RADIUS server to respond to an authentication request. The RTAC will attempt to connect to the Primary server three times before waiting for the connection time-out period. If the RTAC does not receive a response, then the RTAC will attempt to authenticate and repeat this process with the backup server if configured. The range is 1–10 seconds. |
| Prevent Sending Unencrypted Username | Select this check box to hide usernames by using "anonymous" as a username to send requests to the RADIUS server. When this is done, the actual username is sent in the encrypted portion of the message.   |


The RTAC SEL RADIUS Dictionary can be downloaded from the RADIUS Settings page. The dictionary lists all current account types configured on the RTAC including both default roles and custom roles. This file defines the SEL vendor-specific attributes that must be defined on your RADIUS server and which are used by your device to appropriately grant or restrict privileges for users.

Communications with the RADIUS server can also be tested via the RADIUS Settings page. Enter the username and password configured on the RADIUS server and the RTAC will send the credentials to confirm or deny authentication.

## Security Logging

---

Logging provides a method for you to audit authorized and unauthorized access and changes in the system. You can log changes in the RTAC by placing a variable in the Tag Processor and enabling logging of that variable. The RTAC has ten specific User Sessions tags that can log user activity on the RTAC (see *Figure 7.23*). See also *Section 5: Web Interface and Reports* for details on logging.

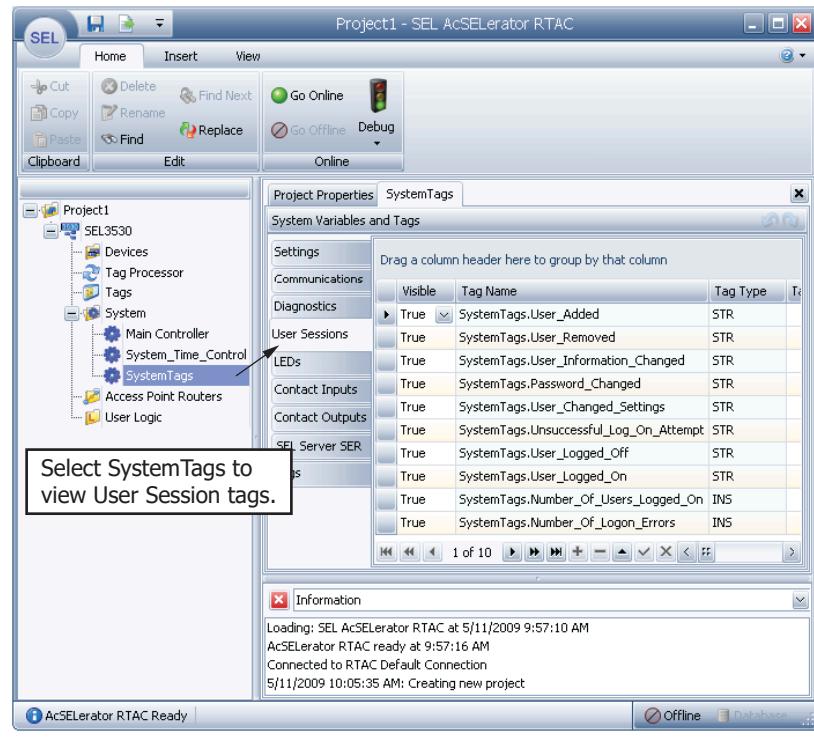


**Figure 7.23 System User Tags**

#### Example 7.6 Toggle Alarm Contact Upon User Login

By default, ACSELERATOR RTAC enables logging of User\_Logged\_On and User\_Logged\_Off. ACSELERATOR RTAC also creates a log status bit automatically for every log entry. Each time ACSELERATOR RTAC logs the tag, this status bit toggles True/False to indicate the logging action. You can map this status bit in the Tag Processor grid in the same way you can map any other digital indication point.

This example illustrates mapping this bit to the RTAC alarm contact. When someone logs on, the alarm contact (OUT101) pulses closed, and the front-panel LED illuminates briefly.

- Step 1. Open a blank project in ACSELERATOR RTAC. This example assumes that the default logging of User\_Logged\_On is in the Tag Processor grid.
- Step 2. Press the save icon or <Ctrl+S> to compile the blank project and generate the Tag Processor code.
- Step 3. Click on the **Code** tab at the bottom of the Tag Processor to reveal the code that the Tag Processor generated (see *Figure 7.24*).
- Step 4. Notice that the code is in a program called TagProcessing. Data within that program are global; you can map these data within ACSELERATOR RTAC.
- Step 5. Notice that each log entry is a variable structure called Logger1, Logger2, etc. The logged bit is in that variable structure.

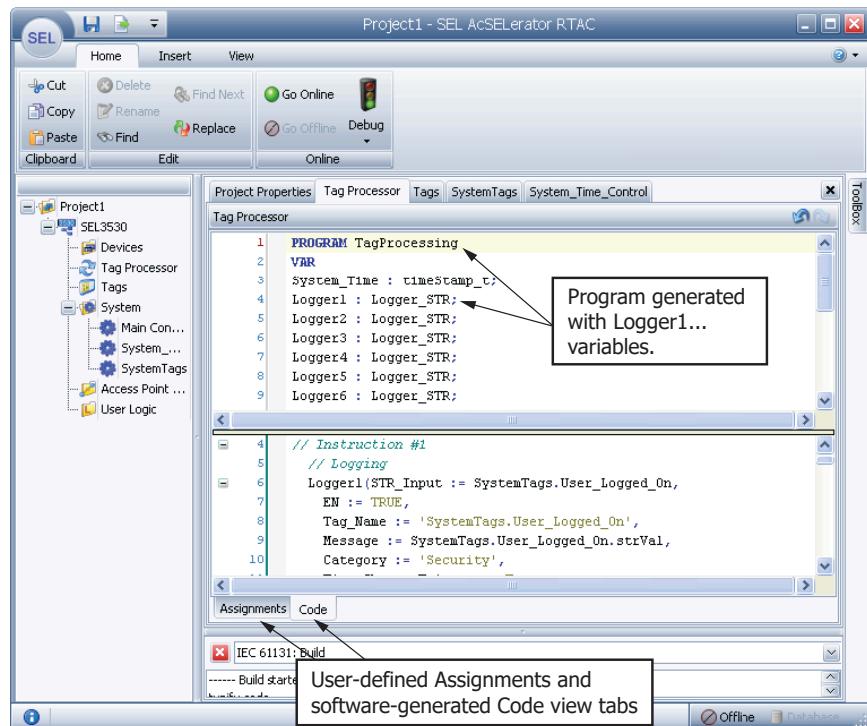

**Figure 7.24 Tag Processor Code View**

- Step 6. Click on the **Assignments** tab on the bottom of the Tag Processor to return to the grid view. We will assign the log bit to the alarm contact in the grid.
- Step 7. Press the **+** icon to create a new line, if necessary.
- Step 8. On the first blank line in the **Destination Tag Name** column, enter the operSet attribute for the alarm contact tag. The operSet attribute, when True, causes the alarm contact to close.

SystemTags.OUT101.operSet.ctlVal

- Step 9. On the same line in the **Source Expression** column, enter the full tag name of the bit that indicates that RTAC has logged a login action. This tag name contains the program name, the variable in the program, and the structure entity from that variable:

TagProcessing.Logger1.event\_logged

| Build | Destination Tag Name             | Source Expression                  |
|-------|----------------------------------|------------------------------------|
| True  | SystemTags.OUT101.operSet.ctlVal | TagProcessing.Logger1.event_logged |

**Figure 7.25 Event Logged Status**

- Step 10. On the next blank line under the **Destination Tag Name** column, enter the operClear attribute for the alarm contact tag. The operClear attribute appears as follows:

SystemTags.OUT101.operClear.ctlVal

Step 11. On the same line in the Source Expression column, enter the full tag name of the bit that indicates that RTAC has logged a login action, and negate that action by adding a NOT before the rest of the tag name. This will cause RTAC to toggle the set and clear attributes when the event\_logged value toggles.

NOT TagProcessing.Logger1.event\_logged

| Build | Destination Tag Name                 | Source Expression                      |
|-------|--------------------------------------|--|
| True  | SystemTags.OUTPUT101.openSet.ctVal   | TagProcessing.Logger1.event_logged     |
| True  | SystemTags.OUTPUT101.openClear.ctVal | NOT TagProcessing.Logger1.event_logged |

**Figure 7.26 Inverted Event Logged Status**

Step 12. Save and download the project into the RTAC.

Step 13. Open a web browser; enter <https://> and the IP address of the RTAC.

Step 14. Log in at the prompt and notice that the RTAC alarm relay clicks closed and then open and that the front-panel alarm LED flashes on and then off at the same time. We did not map the alarm LED, because the RTAC has mapped the LED internally to the alarm contact.

## Syslog

The Syslog protocol, defined in RFC 3164, defines how a device can send system event notification messages across IP networks to remote syslog servers. Syslog is commonly used to send system logs such as security events, system events, and status messages. For example, a printer can send a message that it is running low on ink. The syslog packet size is limited to 1024 bytes and is formatted into three parts: PRI, HEADER, and MSG.

1. **PRI:** A number enclosed in angle brackets that represents both the Facility and Severity of the message. This number is derived as:

$$\text{PRI} = \text{Facility code} \cdot 8 + \text{Severity}$$

The Facility code in the RTAC is fixed at 23. The severity is derived from the user-configurable Logging Priority string in the Tag Processor found in the logging layout. *Table 7.14* shows the numeric equivalent of various case-sensitive strings. Any strings that do not precisely match those in *Table 7.14* will have a numeric code of 6. For example, an item configured in the Tag Processor with a Logging Priority of Critical would have a <186> in the PRI field of the syslog message.

**Table 7.14 Syslog Message Severities Supported in the RTAC**

| Numeric Code | Logging Priority String |
|--------------|-------------------------|
| 0            | Emergency               |
| 1            | Alert                   |
| 2            | Critical                |
| 3            | Error                   |
| 4            | Warning                 |
| 5            | Notice                  |

| Numeric Code | Logging Priority String |
|--------------|-------------------------|
| 6            | Informational           |
| 7            | Debug                   |

2. **HEADER:** The message origination time stamp and source. Time stamps are based on the time of the originating host, so it is critical to have all devices time synchronized to accurately correlate events. The source of the message is the RTAC hostname, as defined on the RTAC web interface dashboard.
3. **MSG:** The human readable body of the message. Messages are constructed from fields in the Tag Processor logging layout and associated tag information as shown in *Table 7.15*.

**Table 7.15 Syslog MSG Configuration**


| Message Component | Description                                 |
|-------------------|---|
| Logging Device    | Fixed name of RTAC Logger                   |
| Event Time Stamp  | Time stamp of the associated tag            |
| Log Severity      | Logging Priority specified in Tag Processor |
| Log Category      | Logging Category specified in Tag Processor |
| Tag Name          | Destination Tag specified in Tag Processor  |
| Log Message       | Logging Message specified in Tag Processor  |
| Logging Comment   | Logging Comment specified in Tag Processor  |

Note the following Syslog message generated when user SEL logged in to the RTAC web interface on March 21, 2015, at 12:09:58.593:

<190>Mar 21 2015 12:10:08 SEL-3530-xxxxxx RTAC Logger: 2015-03-21 12:09:58.593, Informational, Security, SystemTags. User\_Logged\_On, 'SEL logged on device via Web'.

Configure the RTAC to send Syslog messages by performing the following steps:

- Step 1. Configure logging as defined the in *Security Logging on page 718*, using the logging priorities defined in *Figure 7.27*.

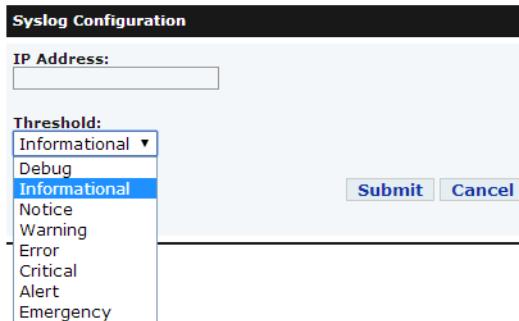**Figure 7.27 Configure Syslog**

- Step 2. In the RTAC web interface, click on **Syslog** under the **Network** heading.
- Step 3. Click on **Add Syslog Destination**.

- Step 4. Enter the IP Address of the Syslog server. Ensure the RTAC and Syslog server are on the same subnet or you have sufficient routing configured such that the RTAC can reach the Syslog server.
- Step 5. Select the threshold that correlates to the logging priority you configured in the Tag Processor logging settings.

The threshold is rated from top to bottom, with Debug as the lowest priority and Emergency as the highest. All logged items that are of the threshold priority or above are sent as Syslog messages to the Syslog server. For example, configure the threshold as Critical. All logs with a priority of Error, Warning, Notice, Informational, or Debug are not sent via Syslog. All logs that are Critical, Alert, or Emergency are sent via Syslog. The RTAC will store as many as 10,000 Syslog messages before writing over the oldest entry.

**This page intentionally left blank**

---

---

## S E C T I O N    8

---

# Time Synchronization

## Overview

---

There are two major aspects to date and time management in the SEL Real-Time Automation Controller (RTAC) family of products. The first is the synchronization and sourcing of date and time. For example, the RTAC can accept IRIG-B input, make adjustments for geographical location, and then source DNP time to an IED. The second major aspect is the time stamp associated with each piece of data. Data that enter or exit with or without time stamps need to be processed appropriately.

## Precision Time Protocol (PTP)

---

RTAC supports PTP slave-clock functionality as per the IEEE 1588-2008 standard. PTP is an industry standard protocol for time synchronization of distributed nodes in packet-based networks like Ethernet.

In firmware versions R143 and later, PTP is supported via bonding in backup mode. PTP is also supported when PRP is enabled.

The RTAC supports listening to a single grandmaster clock. The network may contain multiple master clocks, which will communicate amongst themselves to elect a grandmaster clock. The RTAC will then listen to the grandmaster clock messages and synchronize to that signal.

## Definitions

**PTP Domain:** A PTP domain is a logical grouping of clocks that are synchronized to each other.

**PTP Master Clock:** A PTP master clock is a clock capable of providing a time source to which other clocks on that path synchronize.

**PTP Grandmaster Clock:** A PTP grandmaster clock is a master clock that has been elected as the primary time source for the PTP domain via the best master clock algorithm.

**PTP Slave Clock:** A PTP slave clock is a clock capable of synchronizing to a PTP master clock. The RTAC is a slave clock.

## PTP V1 vs. V2

PTP V2 signaling is a significant departure from V1 and is not backwards compatible. The RTAC supports PTP V2 signaling.

## Accuracy

When the RTAC is synchronized to a PTP time source and used to distribute time to additional IEDs, the outgoing signal will be accurate to within 500 µs of the RTAC system time. Certain applications, such as IEEE C37.118 synchrophasor measurements, rely on accuracies of 1 µs or better. In firmware revisions R150-V0 and later, 1 µs accuracy is available on Ports 1–4 on the SEL-3350 and Ports 3–10 on the SEL-3555.

## Profiles

The RTAC supports the delay request response and peer-to-peer default PTP profiles according to the IEEE 1588-2008 standard. A PTP profile is a set of required and prohibited PTP options as well as the ranges and defaults of configurable attributes that is used to meet the requirements of a particular application.

In firmware versions R144 and later, PTP Profile is supported.

### IEC/IEEE 61850-9-3 Power Profile

The IEC/IEEE 61850-9-3 profile allows for compliance with the highest synchronization classes of IEC 61850-5 and IEC 61869-9.

### IEEE C37.238-2011 Power Profile

The IEEE C37.238-2011 power profile is an extension of IEC/IEEE 61850-9-3 that provides additional information about real-time clock performance and optional local time zone information. These additions were meant to position this profile as a replacement for IRIG-B and to support local display applications.

*Table 8.1* lists the attributes of each profile and the corresponding compliance level of the RTAC.

**Table 8.1** Profile Comparison and RTAC Support

|                                | <b>IEEE C37.238-2011</b> | <b>IEC 61850-9-3</b> | <b>Peer-to-Peer</b>           | <b>Delay-Request</b>          | <b>RTAC Implementation</b> |
|--------------------------------|--------------------------|----------------------|-------------------------------|-------------------------------|----------------------------|
| <b>General PTP Attributes</b>  |                          |                      |                               |                               |                            |
| Number of PTP Ports            | 1                        | 1 or more            | NA                            | NA                            | 1                          |
| Log Announcement Interval      | 1 second                 | Variable             | Range (0 to 4)<br>Default: 1  | Range (0 to 4)<br>Default: 1  | 1 second                   |
| Log Sync Interval              | 1 second                 | Variable             | Range (-1 to 1)<br>Default: 0 | Range (-1 to 1)<br>Default: 0 | 1 second                   |
| Announce Receipt Timeout       | 3                        | 3                    | Range (2 to 10)<br>Default: 3 | Range (2 to 10)<br>Default: 3 | 3 seconds                  |
| Log Min delay request interval | 1 second                 | Variable             | Range (0 to 5)<br>Default: 0  | Range (0 to 5)<br>Default: 0  | 1 second                   |
| Priority 1                     | 255 (slave-only)         | 255 (slave-only)     | 128                           | 128                           | 128                        |

|                                 | <b>IEEE C37.238-2011</b>   | <b>IEC 61850-9-3</b>              | <b>Peer-to-Peer</b>               | <b>Delay-Request</b>              | <b>RTAC Implementation</b>         |
|---------------------------------|--|-----------------------------------|-----------------------------------|-----------------------------------|------------------------------------|
| Priority 2                      | 255 (slave-only)   | 255 (slave-only)                  | 128                               | 128                               | 128                                |
| Domain Number                   | 238  | Default: 0                        | Default: 0                        | Default: 0                        | Settable 0–127, 238                |
| <b>Path Delay Mechanism</b>     |  |                                   |                                   |                                   |                                    |
| Delay Mechanism                 | Peer-to-Peer (P2P)   | Peer-to-Peer (P2P)                | Default: P2P                      | Default: E2E                      | Settable (P2P, E2E)                |
| Best Master Clock Determination | Best master clock (BMC) algorithm  | Best master clock (BMC) algorithm | Best master clock (BMC) algorithm | Best master clock (BMC) algorithm | Best master clock (BMC) algorithm  |
| Clock Accuracy                  | 254 (slave-only)   | 35 (optional) (slave-only)        | NA                                | NA                                | 254                                |
| Clock Class                     | 255 (slave-only)   | NA                                | NA                                | NA                                | 255                                |
| <b>Transport Mechanism</b>      |  |                                   |                                   |                                   |                                    |
| Transport                       | IEEE802.3  | IEEE802.3                         | NA                                | NA                                | Settable (IEEE802.3, UDP)          |
| VLAN Tagging                    | Required:<br>VLAN Priority = 4,<br>VLAN ID = 0   | Not required                      | NA                                | NA                                | Supported                          |
| <b>Management Mechanism</b>     |  |                                   |                                   |                                   |                                    |
| SNMP Support                    | Optional   | Optional                          | NA                                | NA                                | Not supported                      |
| <b>Clock Types</b>              |  |                                   |                                   |                                   |                                    |
| One-Step                        | Required   | Required                          | NA                                | NA                                | Supported                          |
| Two-Step                        | Required   | Required                          | NA                                | NA                                | Supported                          |
| clockIdentity                   | EUI-64 constructed based on EUI-48   | NA                                | NA                                | NA                                | EUI-64 constructed based on EUI-48 |
| <b>TLV</b>                      |  |                                   |                                   |                                   |                                    |
| Alternate Time Offset Indicator | Required   | NA                                | NA                                | NA                                | Supported                          |
| Management                      | Required   | NA                                | Management message                | Management message                | Supported                          |
| Management Error Status         | Required   | NA                                | NA                                | NA                                | Supported                          |
| Organization Extension          | IEEE C37.238   | NA                                | NA                                | NA                                | IEEE C37.238                       |
| Order of TLVs                   | Order requirement:<br>ORGANIZATION_EXTENSION...<br>ALTERNATE_TIME_OFFSET...<br>Required:<br>organizationID<br>organizationSubType Grandmaster ID<br>GrandmasterTimeInaccuracy<br>NetworkTimeInaccuracy | NA                                | NA                                | NA                                | Supported                          |

## PTP Settings

The ACSELERATOR RTAC software provides settings for configuring PTP on the **System\_Time\_Control** page.

| Setting                                 | Description   |
|---|---|
| Set_PTP_Transport (UDP, IEEE 802.3)     | Set the transport scheme to UDP for routable synchronization over Layer 3 communications. Use this setting when the RTAC must synchronize to a master/grandmaster clock over a wide area network.<br>Set the transport scheme to IEEE 802.3 for Layer 2 communications. Use this setting for time synchronization among devices within a local network.   |
| Set_PTP_Domain (0–127)                  | Set the Set_PTP_Domain setting in accordance with the master-clock configuration of your system.  |
| Set_PTP_Path_Delay_Mechanism (P2P, E2E) | Set the path delay mechanism to determine the manner in which path delay is calculated to provide an accurate offset at the slave clock.<br>Peer delay request is the peer-to-peer (P2P) calculation method by which each device in the network contributes to the calculation of the overall path delay. This occurs through calculation of the delay to each device's peer and adding it to the synchronization message. This method is highly accurate but usually requires a specially engineered network because all intermediate switches and routers must be IEEE 1588 compliant.<br>The end-to-end (E2E) path-delay mechanism calculates the overall path delay by using only timing information from the grandmaster and slave clocks. This method allows for greater versatility than does P2P because it permits non-IEEE-1588 compliant switches and routers within the communications network. |
| Enable_PTP_Power_Profile                | Enables the RTAC to process PTP Power Profile.  |
| Set_PTP_Interface_1                     | Select an Ethernet interface that will participate in PTP time synchronization.   |
| Set_PTP_Interface_2                     | Select a second Ethernet interface that will participate in PTP time synchronization simultaneously with PTP Interface 1.   |


## Time Source Settings

The RTAC can receive time synchronization from IRIG-B, precision time protocol (PTP), network time protocol (NTP), DNP, and i870. If one time source fails, the RTAC begins using the next highest priority time source automatically. You can configure the priority of each time source in ACSELERATOR RTAC SEL-5033 Software. Default order is IRIG-B, PTP, NTP, i870, and DNP. DNP and i870 have configurable timeouts to determine if they have failed as a time source, whereas predetermined criteria determine whether IRIG-B, PTP, and NTP are failed or good.


System time-synchronization parameters are contained in the **System\_Time\_Control** tab. The RTAC also has time-related settings in the protocols that support time synchronization, but these settings are used to adjust time-stamped data and not for synchronization of the RTAC system time. IRIG-B is the default primary system time source. The RTAC adjusts selectively the valid time-synchronization messages that it receives from IRIG-B to local time from universal time (UTC) and for Daylight-Saving Time (DST) according to the configuration in the **System\_Time\_Controller**. The system time is set to this adjusted time. If the IRIG-B time message fails, the RTAC uses secondary time source messages for time synchronization. The default secondary time source is PTP. If the PTP time source fails, the RTAC uses the tertiary source for time. If the RTAC determines that all time sources have failed, the free running clock will provide the system time. See *Figure 8.1*.

The RTAC has a unique time-synchronization algorithm that provides a high-accuracy clock even when all time sources fail. Rather than setting the system clock with every time-synchronization message it receives from a time source and not setting the clock at all if there is no valid time source, the RTAC uses time-synchronization messages to tune the system time. This implies that the system time will become gradually closer to the time-synchronization message time until it is within the specified accuracy. An exception is when the RTAC system time is outside a reasonable range (one second) from the time-synchronization message. When the RTAC detects this situation, it sets the Time\_Sync\_Outside\_Slew\_Threshold pin and sets the system clock immediately to match the time-synchronization message.

If the system loses all time sources, the system retains the tuning information and adjusts the free-running clock constantly to account for inherent drift. The constant tuning adjustments reduce clock drift greatly, and the system maintains accuracy of time measurements even in the absence of a valid time source.

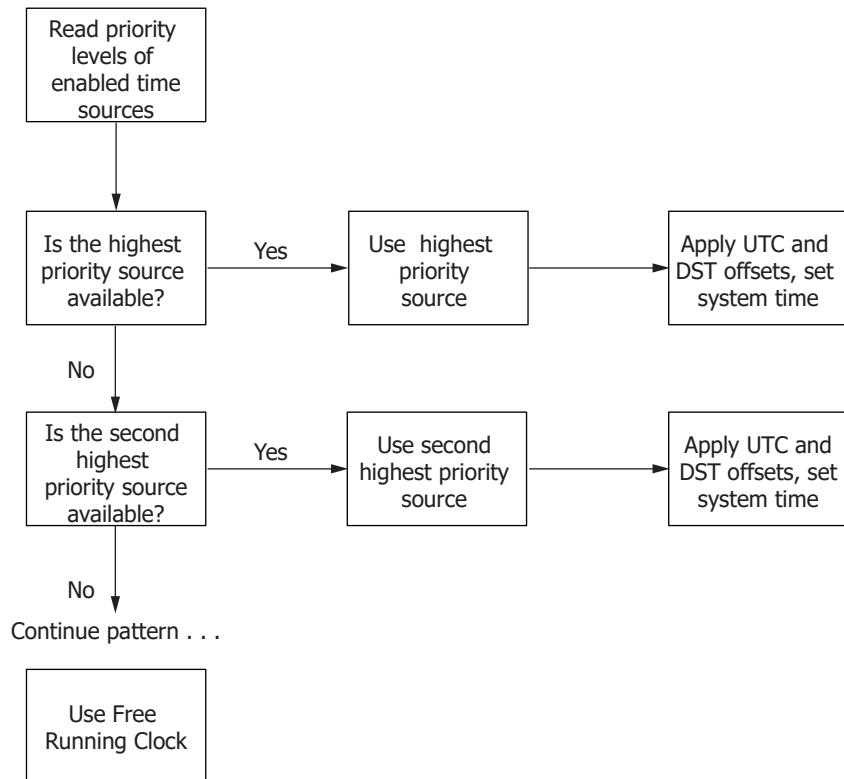

**Figure 8.1 Time-Synchronization Message Selection**

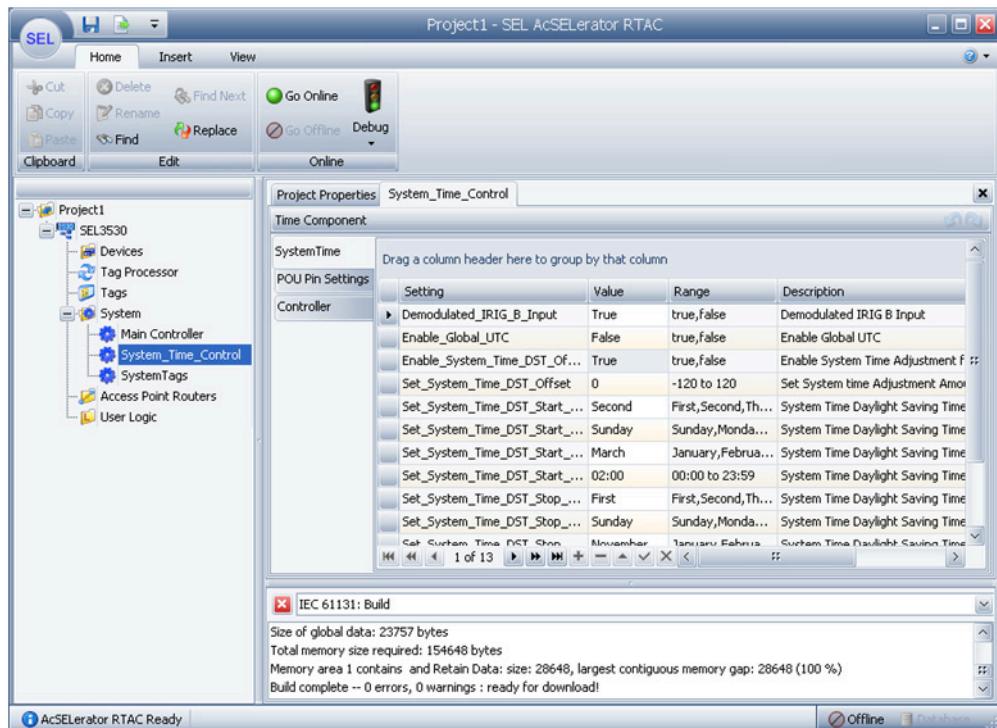


**Figure 8.2 System Time Settings**

Enable DST offset by setting `Enable_System_Time_DST_Offset` to True in the **SystemTime** settings tab. Configure related DST parameters to determine start/stop date and time of DST, offset, etc. Other parameters in the **SystemTime** tab are as follows.

**Table 8.2 SystemTime Parameters**

| Parameter  | Description   | Default       |
|--|---|---------------|
| <code>Demodulated_IRIG_B_INPUT</code>              | Set True to receive demodulated IRIG-B, False for modulated.  | True          |
| <code>Enable_Global_UTC</code>                     | Set True to revert all system time offsets to 0 and disable all DST settings.   | False         |
| <code>Enable_System_Time_DST_Offset</code>         | Set True to apply daylight-saving time offset configuration to the system time.   | True          |
| <code>Set_DNP_Failure_Timeout</code>               | The maximum number of seconds between DNP time-synchronization messages from a DNP client. Excursion of this timeout marks the DNP time source as failed.   | 10800 seconds |
| <code>Set_i870_Failure_Timeout</code>              | The maximum number of seconds between IEC 60870-5 time synchronization messages from an IEC 60870-5 client. Excursion of this timeout marks the IEC 60870-5 time source as failed.  | 10800 seconds |
| <code>Set_PTP_Transport</code>                     | Select the appropriate PTP network transport scheme (UDP, IEC 802.3)  | UDP           |
| <code>Set_PTP_Domain</code>                        | Select the appropriate PTP domain (0–127).  | 0             |
| <code>Set_PTP_Path_Delay_Mechanism</code>          | Select the appropriate path delay mechanism (P2P, E2E).   | P2P           |
| <code>Set_PTP_Interface</code>                     | Select the interface on which to listen to PTP traffic.   | None          |
| <code>Apply_System_Time_UTC_Offset_Globally</code> | Set to True to copy the user configured <code>Set_System_Time_UTC_Offset</code> POU pin value to all POU time settings and automatically determine if the time needs to use the value or not. This setting is mutually exclusive with <code>Enable_Global_UTC</code> and, once set, will disable manual configuration of UTC offsets in each POU. | True          |

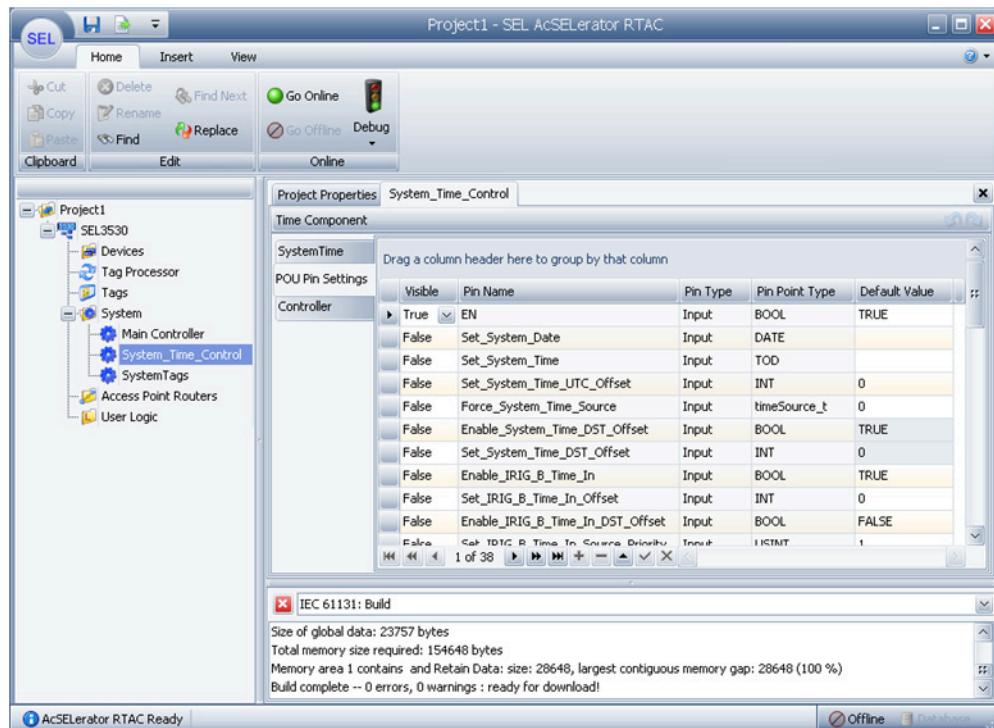**Figure 8.3 SystemTime POU Pin Settings**

Set time source priorities, DST and UTC offsets per time source, and NTP server information in the system time **POU Pin Settings** tab.

**Table 8.3 Pertinent System Time POU Pin Settings**

| Parameter                          | Description  | Default |
|------------------------------------|--|---------|
| Set_System_Date                    | Manually set system date (online only). Equivalent to setting on the web interface and ignored if a better time source is available. |         |
| Set_System_Time                    | Manually set system time (online only). Equivalent to setting on the web interface and ignored if a better time source is available. |         |
| Set_System_Time_Offset             | Offset in minutes from UTC. Used typically to adjust to local time.  | 0       |
| Enable_IRIG_B_Time_In              | Enable IRIG-B as a time source.  | True    |
| Set_IRIG_B_Time_In_Offset          | Configurable offset if necessary.  | 0       |
| Enable_IRIG_B_Time_In_DST_Offset   | Apply DST offset to IRIG-B time.   | False   |
| Set_IRIG_B_Time_In_Source_Priority | Priority of IRIG-B as a time source. Highest priority is 1.  | 1       |
| Enable_IRIG_B_Time_Out             | Enable IRIG-B time output time synchronization.  | True    |
| Set_IRIG_B_Time_Out_Offset         | Configurable offset if necessary.  | 0       |
| Enable_IRIG_B_Time_Out_DST_Offset  | Apply a DST offset to IRIG-B output time messages. The DST settings are in the <b>SystemTime</b> settings tab.                       | True    |

| Parameter  | Description  | Default   |
|--|--|-----------|
| Force_System_Time_Source   | Force which time source the system will use. This is an enumerated value for the time sources, defined as follows:<br>0 - NULL<br>1 - IRIG-B<br>2 - NTP<br>3 - DNP<br>4 - Free Running<br>5 - IED Protocol<br>6 - I6870<br>7 - PTP | 0         |
| Enable_DNP_Time_In   | Enable DNP as a time source.   | True      |
| Set_DNP_Time_In_Offset   | Configurable offset if necessary.  | 0         |
| Enable_DNP_Time_In_DST_Offset  | Apply DST offset to DNP time.  | False     |
| Set_DNP_Time_In_Source_Priority  | Priority of DNP as a time source. Highest priority is 1.   | 3         |
| Enable_DNP_Time_Out  | Enable DNP clients to output time synchronization messages.  | True      |
| Set_DNP_Time_Out_Offset  | Configurable offset if necessary.  | 0         |
| Enable_DNP_Time_Out_DST_Offset   | Apply a DST offset to DNP output time messages. The DST settings are in the <b>SystemTime</b> settings tab.  | False     |
| Enable_NTP_Time_In   | Enable NTP as a time source.   | True      |
| Set_NTP_Time_Server_1_IP<br>Set_NTP_Time_Server_2_IP<br>Set_NTP_Time_Server_3_IP | IP address of NTP servers. As many as three are configurable.  | 192.0.0.1 |
| Set_NTP_Time_In_Source_Priority  | Priority of NTP as a time source. Highest priority is 1.   | 2         |
| Enable_NTP_Time_Out  | Enable NTP clients to output time-synchronization messages.  | True      |
| Enable_PTP_Time_In   | Enable PTP as a time source.   | True      |
| Set_PTP_Time_In_Source_Priority  | Priority of PTP as a time source. Highest priority is 1.   | 2         |
| Enable_i870_Time_In  | Enable i870 as a time source.  | True      |
| Enable_i870_Time_In_DST_Offset   | Apply DST offset to i870 time.   | True      |
| Enable_i870_Time_Out   | Enable IEC 60870-5 clients to output time synchronization messages.  | True      |
| Enable_i870_Time_Out_DST_Offset  | Apply a DST offset to i870 output time messages. The DST settings are in the <b>SystemTime</b> settings tab.   | True      |
| Set_i870_Time_In_Offset  | Configurable offset if necessary.  | 0         |
| Set_i870_Time_Out_Offset   | Configurable offset if necessary.  | 0         |
| Set_i870_Time_In_Source_Priority   | Priority of i870 as a time source. Highest priority is 1.  | 5         |

## Source Time Stamps

The logic engine uses the RTAC system time to time-stamp local data (including system tags), contact I/O, and non-time-stamped data it receives from client protocols. Typically, DNP and SEL IEDs communicating with the RTAC obtain time synchronization with the RTAC through IRIG-B or the DNP3 protocol. In those cases, the RTAC logic engine stores these time stamps without change.

The RTAC may receive other time-stamped data from IEDs that are either not time synchronized by the RTAC or that perhaps have different UTC or DST offsets. These external data time stamps will not be in reference to the RTAC system time. Configuration parameters in protocols that support time synchronization provide UTC and DST offset parameters per device. Using these parameters, the RTAC adjusts time stamps on data it reads from each IED to bring all time into reference with RTAC time. The RTAC database stores tag values with adjusted time stamps.

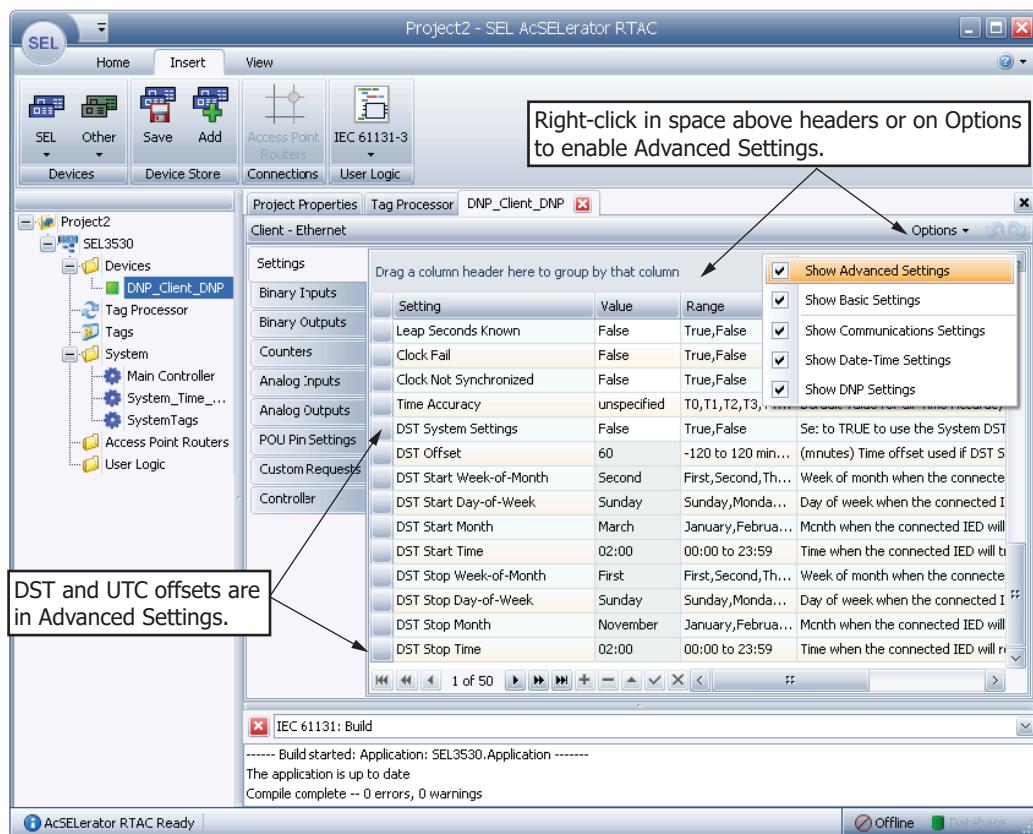


Figure 8.4 Client Time Settings

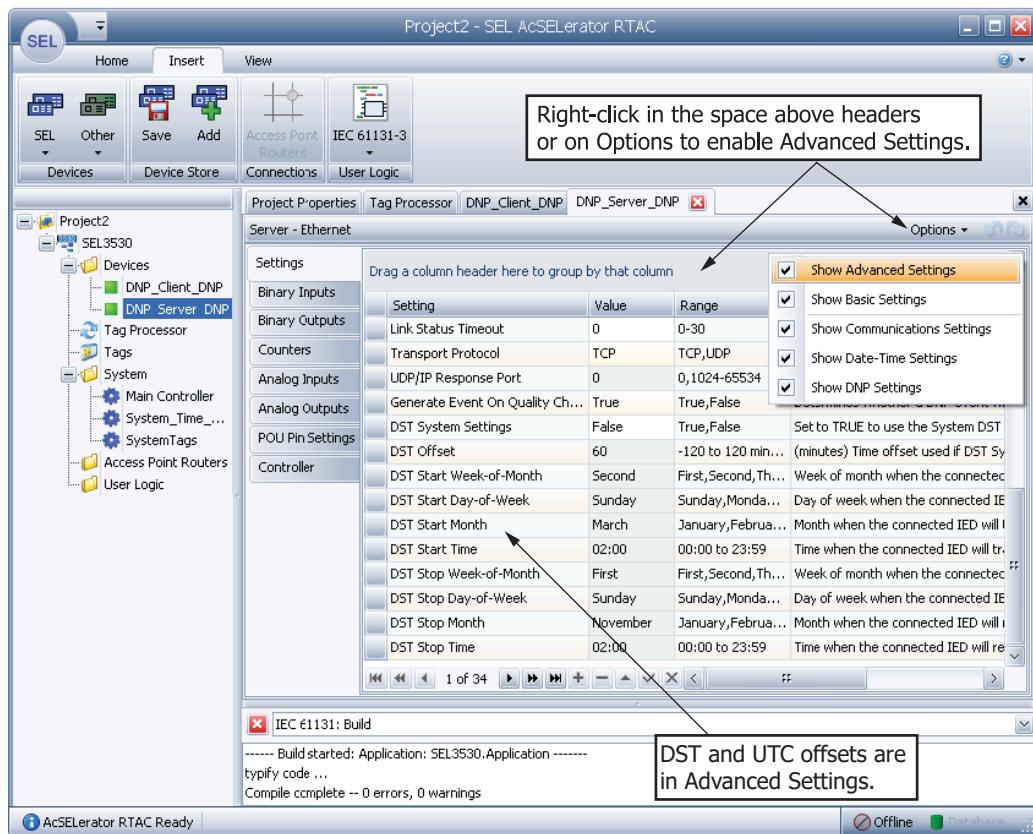


Figure 8.5 Server Time Settings

## Destination Time Stamps

A DNP server device will return time-stamped event data to a polling RTAC client. The RTAC adjusts these data for any configured UTC and DST offsets before storing these data in the RTAC database. The DNP server also has DST and UTC offsets, which you can configure to alter further the time stamps of the event data. As an example, you could configure the RTAC to store and display all data in local time, but the polling client is expecting all returned data time stamps to be in UTC time. By applying the correct offsets in the DNP server configuration, the RTAC will adjust all data time stamps to UTC time.

---

---

## SECTION 9

---

# Custom Logic

## Overview

---

This section contains description of three specific tasks where you can take advantage of the powerful and easy-to-use IEC 61131-3 programming environment in ACCELERATOR RTAC SEL-5033 Software.

1. Creation of a Source Expression in the Tag Processor. Use IEC 61131-3 Structured Text to manipulate a combination of source tags, and then transfer the result to the Destination Tag.
2. Creation of programs, functions, and function blocks in the IEC 61131-3 User Logic area. Refer to *Appendix B: IEC 61131-3 Programming Reference* for function and data type reference.
3. Creation of custom logic in the IEC 61131-3 Continuous Function Chart (CFC) under a device **Controller** tab. This area contains all the controlling elements (PINs) related to that device. Use this feature for advanced applications.

## Logic in the Tag Processor

---

You can enter structured text statements that use any global tags within the ACCELERATOR RTAC database in the Source Expression column in the Tag Processor. Use this functionality to scale values, combine values, or logically manipulate data for transfer to the Destination tag. See *Section 3: Tag Processor* for details and examples of writing logic in the Tag Processor grid.

## IEC 61131-3 Programming Overview

---

Create custom programs, functions, and function blocks by inserting an IEC 61131-3 User Logic block. The programming language is easy to learn and powerful. Insert a block, and select which of three types of logic blocks you want to create.

## Program

- A program is the most basic logic block. You cannot use functions and function blocks without first inserting a program.
- Programs can be standalone units. They contain logic to perform a single task, perform multiple tasks, or invoke functions and function blocks.
- A program must have a unique name in a project.
- Programs can access global system variables and act directly on them. In the examples this section provides, programs toggle light-emitting diodes (LEDs).
- Many programs can be in a single project.

- Programs act independently of each other.
- Local scratch pad variable (VAR) data from one program are not accessible by any other program.
- Any actions one program performs on global variables such as LEDs, etc. are available to other programs.
- Programs can call any number of functions or function blocks.
- Programs can contain any number of variables.

## Function

- A function is a routine that a program or calling logic block can call to perform repetitive tasks. SQRT() is a good example of a standard function.
- Multiple programs can access any given function.
- A function must have a unique name in a project.
- It is not necessary to declare or set up functions in the calling logic block.
- Generally, functions do not read global system variables directly unless the calling logic block passes the values of those variables to the function.
- Generally, functions do not write directly to any global system variables.
- The logic block calls functions in the following two ways:
  - By assignment: SomeVariable := FunctionName (InValue1, InValue2);  
InValue1 and InValue2 are VAR\_INPUTs in the function.  
SomeVariable is a locally defined VAR the same type as the function.  
The output of the function is assigned to SomeVariable.
  - By call using VAR\_OUTPUTs: FunctionName (real, out1 => LocVar1, out2 => LocVar2)  
out1 and out2 are VAR\_OUTPUTs in the function.  
LocVar1 and LocVar2 are locally declared VARs.  
The data type is real.
- The function call assignment must have the same number of arguments in parentheses as the function contains input variables.
- The function must assign return value(s) to the function name or OUTPUT\_VARS before the function returns control to the logic block (see *Figure 9.6*).
- The design of a function is to always return a certain output for the same inputs. For example, SQRT(3) always returns the same value.
- A function does not retain values from one call to the next unless the function uses VAR\_STAT (static variables).

## Function Block

- A function block is a routine for which a program or calling logic block can have definitions for multiple instances to perform specific tasks. Each instance is unique and separate.
- Function block instances retain any values they use. This makes function blocks unique from functions. For each use of a function block instance, the instance updates values according to inputs and previous results.

- A function block must have a unique name in a project.
- The VAR section of a program or calling logic block contains the definition for a function block instance.
- A logic block can contain definitions for multiple instances of a function block (each with a unique name).
- Function blocks typically do not directly access and act on global system variables.
- To activate or cause function blocks to run, reference their data elements: e.g., FB\_instanceName (FB\_INvarName := someValue).
- Use the calling logic block at any time after function block activation to access the values of each function block instance. Do the following to accomplish this:
  - Declare the data elements you want in the function block as output variables (VAR\_OUTPUT)
  - Access data elements in the calling logic block by referencing the function block name and output variable: e.g., Value\_I\_Want := FB\_instanceName.FB\_OUTvarName;

### NOTE

You must reference the function block each processing interval to keep the function block running. For example, the following code will not allow a TON timer to execute correctly:

```
if a then
  my_ton(IN:=tempBool, PT:=T#3S);
  a:=FALSE;
end_if
```

If a is True the first run of the program, the TON function block instance, my\_ton, will start timing. Because a is set to FALSE, subsequent iterations of the program will not execute the function block reference. This results in the function block my\_ton no longer executing and therefore never counting up to the value PT.

## General Rules

See *Appendix B: IEC 61131-3 Programming Reference* for programming syntax and definitions. Following are some general rules for custom user logic development:

- Ensure values used in a logic statement are of the same type or of a type that can be converted to the same type. Mismatched value types will result in compilation errors. Refer to *Variables on page 1064* for data type conversions.
- Exercise caution when programming to not perform illegal logical operations. Illegal operations, such as corrupting memory by writing outside the bounds of an array or misusing pointers, can cause a memory exception error. Never-ending FOR and WHILE loops can exhaust the Watchdog timeout period. Such issues may cause undesirable effects, including replacing a halted project with the default project.

- Exercise caution when programming custom logic using pointers. User logic references to uninitialized or invalid pointers will lead to access violations. User logic references to incorrect memory locations will return incorrect or unexpected values into memory. Writing to invalid memory locations can cause crashes in other unexpected program areas such as protocol drivers. Additionally, exercise caution when performing pointer manipulation to traverse memory. Indexing memory locations of GVL variables or other elements not contained in arrays or data structures cannot be guaranteed. It is the right of the compiler to arrange logic into efficient memory segments on the controller. Inclusion of pragmas like {attribute 'subsequent'} to group variables into contiguous blocks of memory can be used, but the de-referenced content at a memory location should always be verified prior to use. Pragmas are suggestions to the compiler and should not be considered a guarantee. To ensure elements are grouped into contiguous segments, use fundamental programming functions such as arrays or data structures.
- Exercise caution when creating logic that indexes project elements. Elements such as client or server tag lists and virtual tag lists may be displayed within the software in order of point index for user convenience, but this may not be the way points are arranged in memory. Changing or modifying of variable names can cause unexpected changes to variable memory addresses within controller memory. Never assume any group of variables or points are arranged in any particular order unless arrays or data structures are used.
- Press the Save icon  or <Ctrl+S> to save the project and compile the changes. The compiler will check the logic statements for errors and warnings and report these errors and warnings in the **Output** window.
- Always check the **Output** window for errors and warnings. Double-click on the error message to find the line with that error.
- Use parentheses to ensure maintenance of the correct order of calculation. For example,  $(4 + 2) * 6$  is not the same as  $4 + (2 * 6)$ .
- When using global tags, use the appropriate value in the data tag structure. For example: Instantaneous analog input value: Relay1\_DNP.AI\_0001.instMag
- In CFC or LD functions such as ADD, SUB, etc., you can add input pins by dragging the pin tool from the ToolBox on to the function box.
- In CFC or LD functions, you can add or remove the EN and ENO pins by right-clicking on the function box.
- In CFC or LD functions, right-click on the function box or individual input and output pins to see available options.
- Observe operator precedence when writing logic (see *Table 9.1*).

**Table 9.1 IEC 61131-3 Operation Order of Precedence (Highest to Lowest)<sup>a</sup>**

| Operation                     | Symbol  |
|-------------------------------|---|
| Parentheses                   | (expression)  |
| Function evaluation Examples: | identifier (argument list)<br>MAX(X, Y, Z), COUNT (A) |
| Exponentiation                | EXPT  |
| Negation                      | -   |
| Complement                    | NOT   |

| Operation            | Symbol                         |
|----------------------|--------------------------------|
| Multiply             | *                              |
| Divide               | /                              |
| Modulo               | MOD                            |
| Add                  | +                              |
| Subtract             | -                              |
| Comparison           | <, >, <=, >=<br>LT, GT, LE, GE |
| Equality             | =                              |
| Inequality           | $\diamond$                     |
| Boolean AND          | &<br>AND                       |
| Boolean Exclusive OR | XOR                            |
| Boolean OR           | OR                             |

<sup>a</sup> Adapted from the table at <http://www.plcopen.org>.

## Variables

A variable is a tag with a unique name and a specific data type that allows you to reference data in the logic blocks as well as elsewhere in the SEL-5033.

- A program, function, or function block uses variables to store data values.
- A VAR is a definition statement you can use to create local variables. A local variable is only accessible to the logic block in which it is defined. You cannot pass or share these variables among logic blocks directly. The behavior of VARs differs according to the type of logic block in which they are created.
- Programs retain VAR values while a program is running.
- A function retains values as long as the function is executing. Once the function terminates (returns to the program), all VAR values are lost.
- Function blocks retain values as long as the program is running. Each time ACCELERATOR RTAC activates a function block, the function block uses all previous results in its VAR variables to perform logic and calculations, similarly to a program.

The following variable declarations are available in user logic:

- VAR\_INPUT is a definition statement that functions or function blocks use to identify variables whose values will come from a logic block. Functions and function blocks must contain VAR\_INPUT variable definitions before a calling logic block can pass data to a function or function block.
- VAR\_OUTPUT is a definition statement that a function or function block uses to identify variables whose values the calling logic block can access. You can create any number of VAR\_OUTPUTS to allow sharing of data. The function or function block will retain values of VAR\_OUTPUTS for

as long as the logic block exists. Note that VAR\_OUTPUTs will have the same names for each function block instance, but they each have individual values and memory space. A calling logic block accesses function block data through a VAR\_OUTPUT or VAR\_IN\_OUT variable.

- VAR\_STAT is a definition statement that a function or function block uses to identify tags that maintain their value after the execution is complete. You can access static variables only within the scope in which you declare these variables. An example would be a counter within a function or function block that retains its value between calls to that function.
- VAR\_TEMP is a definition statement available in programs and function blocks. Temp vars are only available within the program or function block in which they are defined and are automatically reinitialized every time the function block or program is called.
- VAR CONSTANT is a definition statement that can apply to a local or global list of identifiers. Constants have the same appearance as variables but are fixed values, set at declaration time, and are used in the same way as literals, such as 1, 9, or any other explicitly typed-out number. You can use constants in places throughout a program where fixed values would normally occur. The advantage of using constants is that you can change the values in the declaration section rather than searching through a program to find every instance of the value. You can also use a constant in the declaration of an array. A constant list has the following format:

VAR CONSTANT


the list of constants in this format:

<identifier> : <Type> := <value>;

END\_VAR

- VAR\_IN\_OUT is a definition statement that a function block uses to identify tags that act as VAR\_IN and VAR\_OUT at the same time. The calling logic block and function block can read and write to VAR\_IN\_OUT variables.
- VAR\_GLOBAL is a definition statement that global variable lists (GVLs) use to identify tags that you can access globally throughout the RTAC.
- VAR\_GLOBAL RETAIN is a definition statement that you can use on GVLs to identify tags that retain their values after a reboot or project download. For example, click on IEC-61131-3 under the **Insert** ribbon, then select **GVL**. You can rename the GVL here. Then, change the keywords VAR\_GLOBAL to VAR\_GLOBAL RETAIN and configure the global variables just as you would any variable list in the RTAC. The variables will retain their values through a power cycle, reboot, or after the project is resent to the RTAC.

Note that attempting to initialize RETAIN variables in the declaration is ignored. The values in existing memory will be used when a project is sent or the unit is power-cycled. To initialize the retained variables to a specific value, you must do this in a program. Variables in a retained list can be initialized to their default values by selecting the **Re-initialize Retain Variables** check box in the Options tab when sending a project to the RTAC.

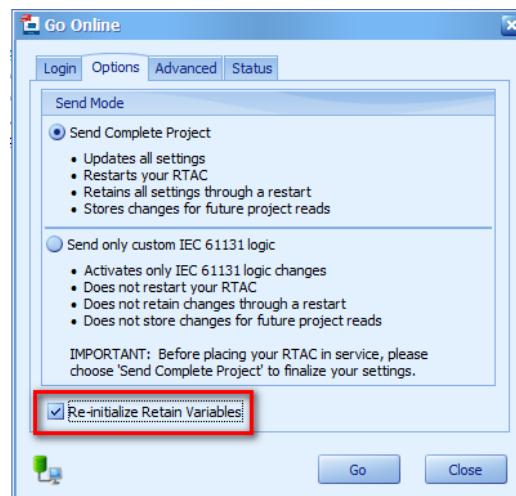

An important characteristic of retained memory is that the order of the retained variable list is important to keeping values available through power cycles and project sends. If a retained list is created and then used in service and a configuration change requires adding variables to the retained list, the best practice is to add the new variables to the end of the retained list so as not to interfere with the present order. If the order of the retained list is changed, a recommended practice is to re-initialize the variables upon the project being sent, as shown in the previous figure. It is also recommended that only one retained list be used in a single RTAC project.

The memory allocated for retained variables is 28.5 KB. To calculate how many variables can be stored in retained memory, use **SIZEOF(<variable name>)** to see how many bytes of memory that variable consumes, and then multiply that by the variables declared in the retained list. The following figure shows several examples of determining how many bytes a variable uses.

```
1 | size_DWORD 4 := SIZEOF(var_dword 0);
2 | size_REAL 4 := SIZEOF(var_real 0);
3 | size_MV 96 := SIZEOF(var_MV);
4 | size_SPS 56 := SIZEOF(var_sps); RETURN;
```

## Cross References

Cross references show all locations of a tag or variable within a project and indicate how the tag or variable is being used in each location. Examples of usage include declaration of the tag or variable, write operations, and read operations. You can find all locations of any tag or variable in your project by performing the following steps:

- Step 1. Within a structured text program, function, or function block, right-click on the tag or variable you want to cross reference.
- Step 2. Select **Browse > Browse Cross References**.

The software will find all instances of the tag or variable within the project and display the results in an output window. Double-click any of the references to navigate to the location of that tag or variable usage. By default, the scope of this search is limited to the active program. To find references elsewhere in the project, you must change the scope to include the entire project.

## Creating User Logic

---

Write custom programs, functions, and function blocks by inserting an IEC 61131-3 user logic block. Write custom logic to perform tasks from simple analog scaling and data conversions to advanced closed loop control. The RTAC supports the following three IEC 61131-3 languages:


- ▶ Structured Text (ST): This is a simple, non-graphical programming language very similar to Pascal.
- ▶ Continuous Function Chart (CFC): This is a graphical function block diagram interface that is unconstrained to position in determining logic flow. You can reconfigure the execution order of each logic statement in ST, CFC, or LD.
- ▶ Ladder Logic Diagram (LD): This is the industry-standard relay ladder logic that uses logical ladder rungs to define logic flow.

## Insert a Program

### NOTE

You can perform column editing in Structured Text by pressing **<Ctrl+Alt+right-click>** and dragging over the column. The editor replicates anything you type in a highlighted column in every row of that column.

- Step 1. Right-click on SEL\_RTAC in the device tree, or click on the **Insert** ribbon and select an IEC 61131-3 user logic block. Recall that there must be at least one program, because functions and function blocks cannot operate independently.
- Step 2. Identify the type of programming you want to do (ST, CFC, or LD).
- Step 3. Create variables in the top window. Enter user logic in the bottom window.

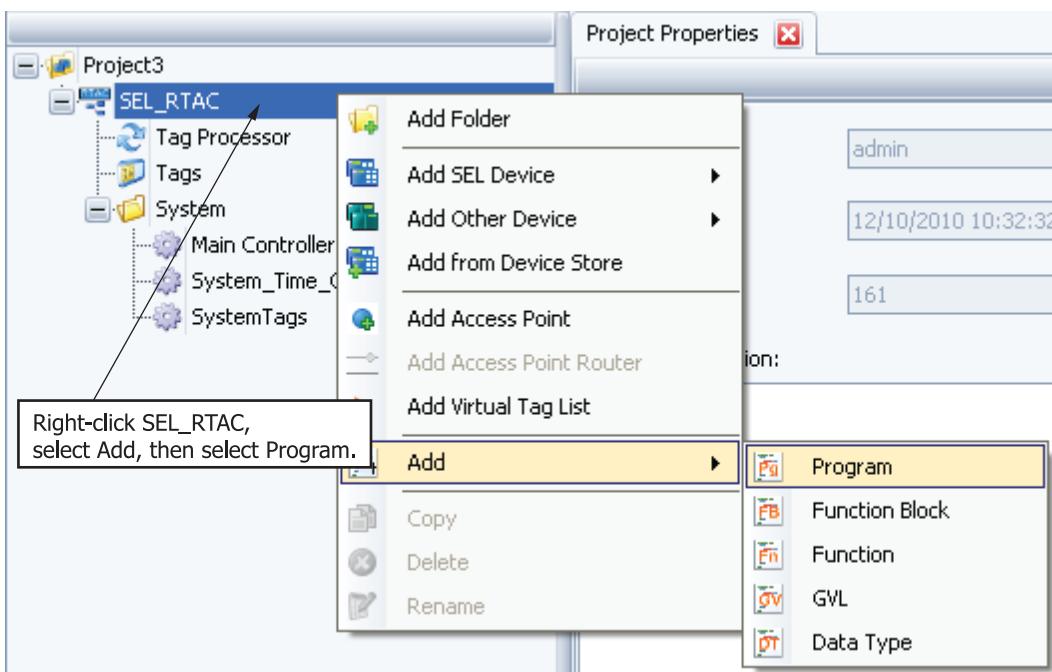


**Figure 9.1 Inserting a Program**

If you select ST, enter your structured text logic statements in the bottom window.

If you select CFC or LD, use the ToolBox on the right side of the screen to drag and drop logic elements onto the bottom window. The ToolBox contains graphical CFC or LD elements including input boxes, output boxes, and generic logic blocks. You can undock and move the ToolBox by clicking on the stickpin icon and then dragging the ToolBox by the header. You can re-dock the ToolBox by dragging your mouse to one of the dock points that appear when you are moving the ToolBox. You can also hide the ToolBox by clicking on the x in the ToolBox window. Un-hide the ToolBox by selecting Show ToolBox in the View ribbon menu.

In CFC, you can define a generic object box by dragging one onto the programming window, right-clicking on ???, and selecting **Input Assistant**. Select the applicable function from the Input Assistant function list.

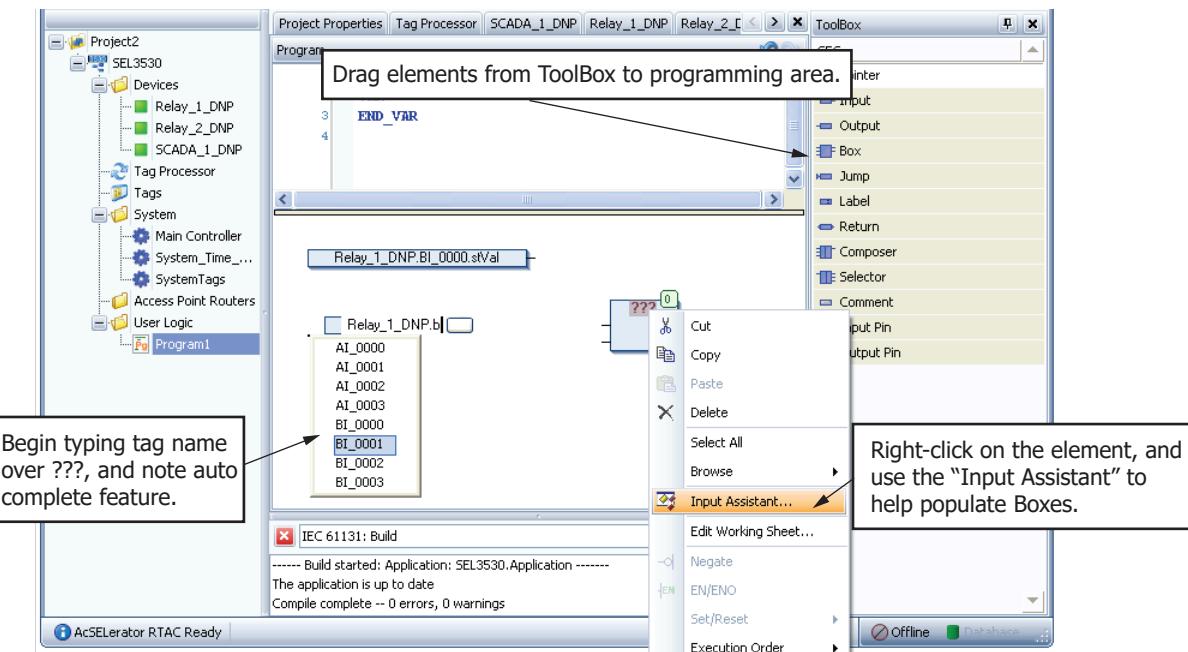

**Figure 9.2** Input Assistant

## Examples

The following programming examples demonstrate use of a program, a function, and a function block. In a Boolean test, we OR together binary input points that we configured previously in two client device connections (Relay\_1\_DNP and Relay\_2\_DNP). The four examples do essentially the same thing, but they look quite different. The examples demonstrate the different tools available as well as different programming styles that have essentially the same result.

1. The first program is in CFC. It compares two binary input values and sets Auxiliary LED 1 on the front panel to ON if either status becomes true and toggles it to OFF if both points are false. Notice on this program the use of negate to reverse the values of the inputs before they enter the AND gate.
2. The second program is in LD. Its function is exactly the same as the previous CFC program.
3. The third program is in ST. It uses an IF THEN ELSE statement to perform the same functionality on LED 2.
4. The fourth program uses a function call as well as a function block to perform the same end result, toggling LEDs 3 and 4, respectively.

---

### Example 9.1 Continuous Function Chart

- Step 1. Select **Insert IEC 61131-3** from the ribbon.
- Step 2. Select **Program**.
- Step 3. In the pop-up window, give the program a unique name and select **CFC** from the drop-down menu.
- Step 4. Click **Insert**.
- Step 5. Drag one **Box** element from the ToolBox on the right to the bottom window worksheet.

- Step 6. Drag two **Input** elements  and place these elements to the left of the Box element.
- Step 7. Drag one **Output** element  and place this element to the right of the Box element.
- Step 8. Change the ??? in the Box element to OR. Either type in OR, or use the Input Assistant.
- Step 9. Change the ??? in the **Input** and **Output** elements as the following example shows. Note that the software helps you complete point names.
- Step 10. Click on the pin on the **Input** element and, while depressing the mouse button, drag the line over to the input pin of the Box element. This action connects the logic blocks with lines.
- Step 11. As the example shows, repeat *Step 10* for the second **Input** box.
- Step 12. In this example, there are two similar sets of logic. To save time, copy and paste the logic blocks to create duplicates. To select the elements of the program, do one of the following:
- Right-click on the blank part of the page, and then choose **Select All**.
  - While holding down the <Ctrl> key, click the edge of each element box with the mouse.
  - Click on the upper left-hand corner of the programming screen. With the left mouse button depressed, drag a selection box over all the elements to mark them all as selected.
- Step 13. Press <Ctrl+C> to copy, <Ctrl+V> to paste (or use the **Copy** and **Paste** menu buttons).

**NOTE**

In the lower right-hand corner of the program worksheet area is a zoom tool. Use this to increase/decrease the visible workspace in the worksheet.

- Step 14. While holding down the <Ctrl> key, click on the edge of one of the duplicate boxes and drag the duplicated boxes below the original set of boxes. All duplicate boxes should move together and maintain their spatial order. If you do not hold down the <Ctrl> key, the boxes may become deselected and may fail to move together. If this happens, drag the boxes separately or reselect each box while holding down the <Ctrl> key, and attempt to move them again as a group.
- Step 15. Change the names/logic in the duplicate boxes to match *Figure 9.3*. You can copy and paste any item in a CFC in a similar manner.
- 

## Continuous Function Chart Solve Order


*Figure 9.3* shows *Example 9.1* and also small green squares containing numbers in them. Because this program is written in CFC, there are no hard spatial relationships dictating the solve order of the logic. The numbers in the green squares indicate the default solve order. Pay special attention to solve order when testing your programs to ensure that the results are what you expect.

Testing your program may reveal that it is necessary to change the solve order of your program. For example, your program may be comparing results of a multi-step calculation before that calculation completes. This situation could cause unexpected and unwanted results. Keep in mind that watching the values change is not a good indication that the solve order is correct. Changes could occur and affect logic much faster than you can observe these changes on the screen.

Perform the following steps to change the default solve order.

- Step 1. Right-click on the **Logic** box to change its solve order.
- Step 2. From the pop-up menu, select **Execution Order**.
- Step 3. Select one of the options to change the execution order of that box.
- Step 4. In the following example, the execution order appears backwards. Perform the following steps to correct the order:
  - a. Right-click any block, and then select **Execution Order**.
  - b. Select **Order** by data flow.

The numbers in the green boxes will change to 0, 1, 2, 3 in order.

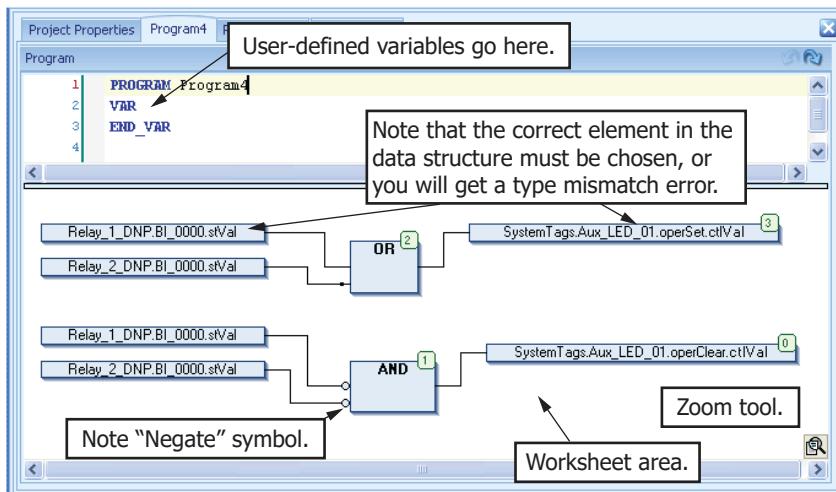


**Figure 9.3 Example CFC Program**


---

#### Example 9.2 Ladder Logic Diagram (LD)


- Step 1. Select **Insert IEC 61131-3** from the ribbon.
- Step 2. Select **Program**.
- Step 3. In the pop-up window, give the program a unique name and select program language **LD** from the drop-down menu.
- Step 4. Click **Insert**.
- Step 5. By default, the ToolBox covers the left side of the workspace. Move the ToolBox by first clicking on the tack icon, then grab the ToolBox header and move it to the right of the screen.

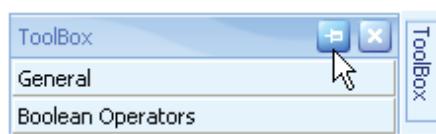

- Step 6. In the ToolBox, select the **Ladder elements** tab.
- Step 7. Click on **Contact**, and drag it onto the workspace. Place it on the **Start here!** icon, and release the mouse button.
- Step 8. Replace the ??? above the newly placed contact with `Relay_1_DNP.BI_0000.stVal`.
- Step 9. In the ToolBox, click on **Parallel contact** and drag it onto the workspace. Place it on the down arrow that appears on the ladder (also refer to *Figure 9.4*).

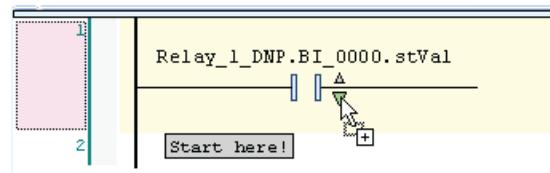

- Step 10. In the ToolBox, click on **Coil** and drag it onto the workspace. Place it on the **Add output or jump here!** icon to complete the circuit.
- Step 11. Replace the ??? above the contacts and coil with the tag names shown in *Figure 9.4*. This ladder is a logical OR of the two status tags, with the output controlling the coil at the end of the ladder.
- Step 12. In the ToolBox, click on **Network** and drag it onto the workspace. Place it on the down icon to insert another network ladder.
- Step 13. Drag a **Contact** from the toolbox onto the new network.
- Step 14. Drag another **Contact** from the toolbox and place it on the icon beside the contact from *Step 13*.
- Step 15. Drag a **Coil**, and place it at the end of that ladder.
- Step 16. Replace the ??? above the contacts and coil with the tag names shown in *Figure 9.4*. This ladder is a logical AND of the two status tags with the output controlling the coil at the end of the ladder.

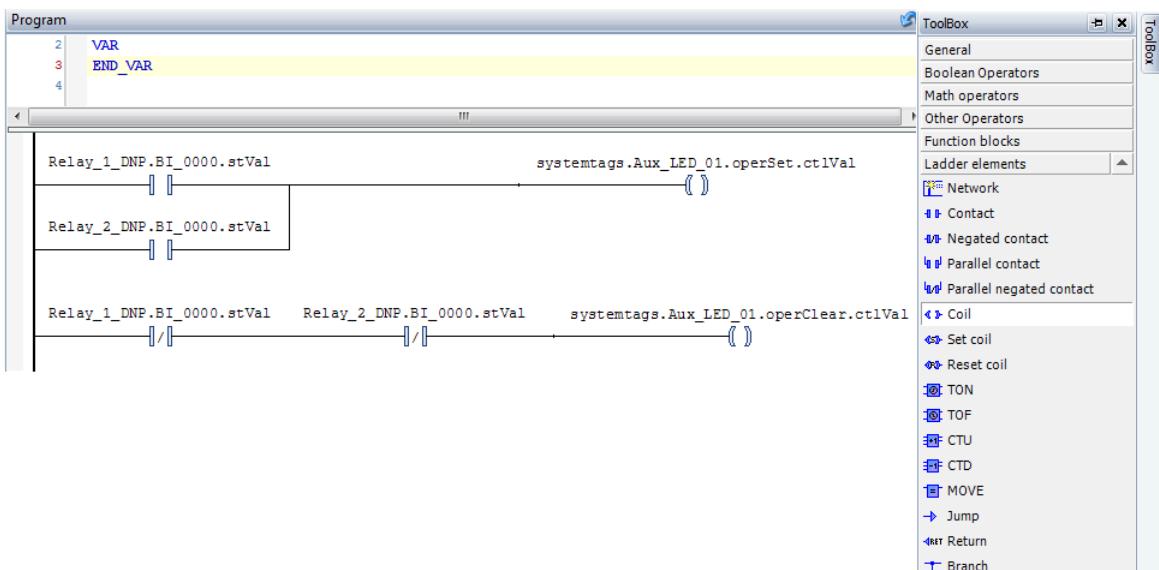

**Figure 9.4 Example LD Program**

### Example 9.3 Structured Text

- Step 1. Select **Insert IEC 61131-3** from the ribbon.
- Step 2. Select **Program**.
- Step 3. In the pop-up window, give the program a unique name and select **ST** from the drop-down menu.
- Step 4. Click **Insert**.

In this example, there are no user-defined variables. If there were, these variables would go in the user-defined variable section. All variables in use here are system tags.

```

PROGRAM Program1
VAR
END_VAR

IF (Relay_1_DNP.BI_0000.stVal OR Relay_2_DNP.BI_0000.stVal) THEN
    SystemTags.Aux_LED_02.operClear.ctlVal := FALSE;
    SystemTags.Aux_LED_02.operSet.ctlVal := TRUE;
ELSE
    SystemTags.Aux_LED_02.operSet.ctlVal := FALSE;
    SystemTags.Aux_LED_02.operClear.c := TRUE;
END_IF

```

**Figure 9.5 Example ST Program**

### Example 9.4 Structured Text Program Using a Function and a Function Block

This example is actually two examples in one. The first is ST using a function call. The second is identical to the first, except that it uses a function block. This example demonstrates that programs can use both functions and function blocks, and it shows the differences between functions and function blocks.

- Step 1. Insert a program, select **ST**, and provide a unique name for the program. We named it **PGM\_Using\_Function\_and\_FunctionBlock** in the example.
- Step 2. Insert a function, select **ST**, and give the function a unique name. We named it **OR\_Pnts\_FN** in the example.
- Step 3. Insert a function block, select **ST**, and give the function block a unique name. We named it **OR\_Two\_Points\_FB** in the example.
- Step 4. Create an instance of the function block in the program, by creating a unique name and defining the instance as type **OR\_Two\_Points\_FB**.

You can define any number of uniquely named instances as that same type in any number of separate programs. In this example, the instance is named **my\_OR\_FB**.


Note that we can activate the function block, or cause it to run, by referring to its name and assigning values to its input variables.

Step 5. The calling program can access output variables from the function block at any time after activation of the function block. Access these variables by using the following format: function block instance name.output variable name. This is illustrated in the following function block variable accessed by the sample program:

```
my_OR_FB.LED_off;
```

Step 6. You can access the results of the function after an assignment statement calls the function. An assignment statement calls the function and places the resulting value in a variable of the same type as the function. This is illustrated in the following function call invoked by the sample program:

```
LED_State := OR_2_Pnts_FN(DI_Value1, DI_Value2);
```

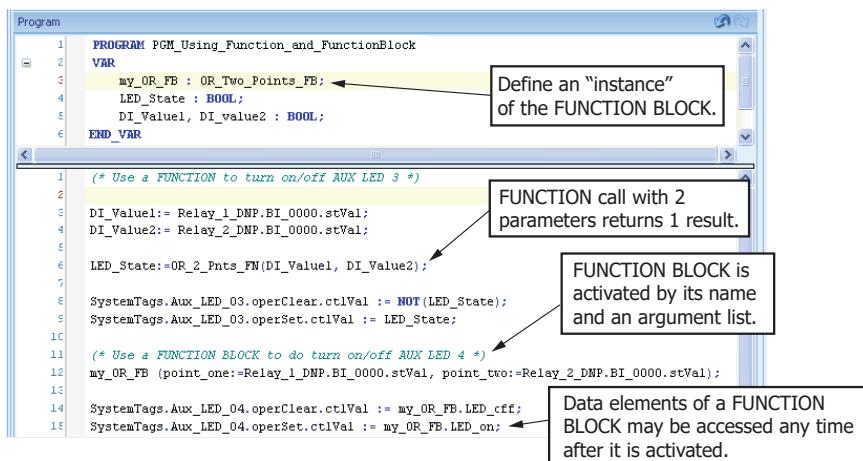

The screenshot shows a ladder logic program titled "Program" with the following code:

```


PROGRAM PGM_Using_Function_and_FunctionBlock
VNR
    my_OR_FB : OR_Two_Points_FB; ← Define an "instance" of the FUNCTION BLOCK.
    LED_State : BOOL;
    DI_Value1, DI_Value2 : BOOL;
END_VNR

1 (* Use a FUNCTION to turn on/off AUX LED 3 *)
2
3 DI_Value1:= Relay_1_DNP.BI_0000.stVal;
4 DI_Value2:= Relay_2_DNP.BI_0000.stVal;
5
6 LED_State:=OR_2_Pnts_FN(DI_Value1, DI_Value2); ← FUNCTION call with 2 parameters returns 1 result.
7
8 SystemTags.Aux_LED_03.operClear.ctlVal := NOT(LED_State);
9 SystemTags.Aux_LED_03.operSet.ctlVal := LED_State;
10
11 (* Use a FUNCTION BLOCK to do turn on/off AUX LED 4 *)
12 my_OR_FB (point_one:=Relay_1_DNP.BI_0000.stVal, point_two:=Relay_2_DNP.BI_0000.stVal);
13
14 SystemTags.Aux_LED_04.operClear.ctlVal := my_OR_FB.LED_off;
15 SystemTags.Aux_LED_04.operSet.ctlVal := my_OR_FB.LED_on; ← FUNCTION BLOCK is activated by its name and an argument list.
    
```

Annotations explain the code:

- "Define an "instance" of the FUNCTION BLOCK." points to the declaration of `my_OR_FB`.
- "FUNCTION call with 2 parameters returns 1 result." points to the assignment statement `LED_State:=OR_2_Pnts_FN(DI_Value1, DI_Value2)`.
- "FUNCTION BLOCK is activated by its name and an argument list." points to the call to `my_OR_FB` with arguments `point_one` and `point_two`.
- "Data elements of a FUNCTION BLOCK may be accessed any time after it is activated." points to the access of `my_OR_FB.LED_on` and `my_OR_FB.LED_off`.

Figure 9.6 Using a Function and Function Block in a Program

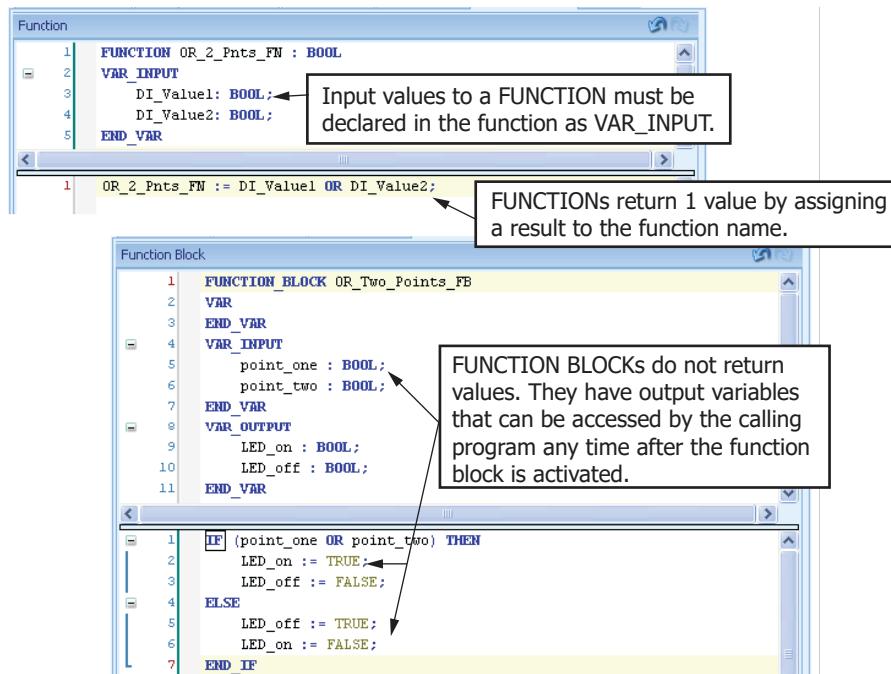

The screenshot shows two code editors side-by-side.

**Function Editor:**

```

FUNCTION OR_2_Pnts_FN : BOOL
VNR
    VAR_INPUT
        DI_Value1: BOOL; ← Input values to a FUNCTION must be declared in the function as VAR_INPUT.
        DI_Value2: BOOL;
    END_VAR
    OR_2_Pnts_FN := DI_Value1 OR DI_Value2; ← FUNCTIONS return 1 value by assigning a result to the function name.
    
```

**Function Block Editor:**

```

FUNCTION_BLOCK OR_Two_Points_FB
VNR
END_VAR
VAR_INPUT
    point_one : BOOL;
    point_two : BOOL;
END_VAR
VAR_OUTPUT
    LED_on : BOOL;
    LED_off : BOOL;
END_VAR
1 IF (point_one OR point_two) THEN
2     LED_on := TRUE; ← FUNCTION BLOCKs do not return values. They have output variables
3     LED_off := FALSE; that can be accessed by the calling
4 ELSE program any time after the function
5     LED_off := TRUE; block is activated.
6     LED_on := FALSE;
7 END_IF
    
```

Annotations explain the code:

- "Input values to a FUNCTION must be declared in the function as VAR\_INPUT." points to the declaration of `DI_Value1` and `DI_Value2`.
- "FUNCTIONS return 1 value by assigning a result to the function name." points to the assignment statement `OR_2_Pnts_FN := DI_Value1 OR DI_Value2`.
- "FUNCTION BLOCKs do not return values. They have output variables that can be accessed by the calling program any time after the function block is activated." points to the declaration of `point_one` and `point_two`, and the assignment statements within the `IF` block.

Figure 9.7 Example Function and Function Block

**This page intentionally left blank**

---

---

## S E C T I O N    1 0

---

---

# Extensions

Extensions are purpose-built modules that are optionally inserted into a project to perform a specific task. In general they provide a simple table interface to enter settings and use those entries to generate IEC 61131-3 user logic to accomplish a task. IEC 61131-3 libraries can accompany extensions in order to encapsulate large amounts of IEC 61131-3 programming into modular packages. See the *SEL RTAC Programming Reference Manual* for more details on the various IEC 61131-3 libraries that are available.

Each extension has an associated version that is shown in the descriptive tool bar when the extension is open. The second digit of the extension version corresponds to a minimum compatible project version, as shown in *Table 10.1*. This digit increments with each major project version.

**Table 10.1 Extension Project Version Compatibility**

| <b>Extension Version</b> | <b>Minimum Compatible Project Version</b> |
|--------------------------|---|
| 1.27.x.x                 | R144                                      |
| 1.28.x.x                 | R145                                      |
| 1.29.x.x                 | R146                                      |
| 1.30.x.x                 | R147                                      |
| 1.31.x.x                 | R148                                      |
| 1.32.x.x                 | R149                                      |
| 1.33.x.x                 | R150                                      |
| 1.34.x.x                 | R151                                      |
| 1.35.x.x                 | R152                                      |
| 1.36.x.x                 | R153                                      |
| 1.37.x.x                 | R154/R200                                 |
| 1.38.x.x                 | R155/R201                                 |

The third and fourth digits in the extension version increment for revisions to the extension that do not require the use of a newer Real-Time Automation Controller (RTAC) firmware or project version.

When an extension is first inserted into a project, the latest compatible version of the extension available in the local ACCELERATOR RTAC® SEL-5033 Software library extensions package is automatically selected. If an extension is present in an existing project and that project is upgraded to a later project version where a newer compatible version of the extension is present in the local library extensions package (as designated by the second digit in the version), then that extension and any accompanying IEC 61131-3 library is automatically updated during the conversion process. This automatically allows the use of features that became available in newer versions of extensions after the initial use of the extension in a project. In addition, if a newer revision of an extension is present in the local library extensions package (defined by the third and fourth digits in the version) and an existing compatible project is opened, the

extension is also automatically updated. This can cause situations where if a project was read from an RTAC containing the older extension version and then subsequently opened with the newer extension present, then because of this update, settings will have to be resent to the RTAC to go back online.

Extensions packages are distributed in .rext format and contain both a table layout definition XML file and a Python file to control user logic generation. Both of these files are hashed by SEL to provide digital signature files of their contents. In the event that these contents are modified, ACCELERATOR RTAC generates a notification to the user to indicate the problem with the extension's digital signature. For software compatible with firmware version R152 or later, this notification message is considered a settings error message that prevents the project from going online with an RTAC. However, an Advanced user preference is available under the ACCELERATOR RTAC options that allows for this error message to be adjusted to a warning (notification only) message or to be ignored (no notification).

## 87L Comm Monitor

### Overview

The 87L Comm Monitor extension tracks communication health indicators for communications-assisted differential protection schemes. This extension sources data from SEL protocol SER tags as well as by parsing ASCII text reports from connected IEDs.

#### NOTE

- The 87L Comm Monitor extension requires a project version of R152 or higher.
- The 87L Comm Monitor extension requires the RTAC to have the ConditionMonitoring library license.
- This extension is capable of modifying settings of existing SEL clients.
- This extension is not capable of adding new SEL clients to the project.

### Supported IEDs

- SEL-411L Advanced Line Differential Protection, Automation, and Control System

### Theory of Operation SEL-411L

The 87L Comm Monitor extension performs the following when a project is saved:

- Automatically configures a given SEL client with the appropriate Flex parse messages and parse expressions for extracting health indicators from 87L Communications reports from the IED.
- Adds and enables Relay Word bits relevant to 87L comm monitoring to the Targets 2 tab of the SEL client (see *Table 10.2*).

- Generates a virtual tag list, named after the extension instance, that contains alert tags for each monitored data point (see *Alerts\_87LCommMonitor tag list on page 757* for more information).
- Generates IEC 61131-3 code to associate the underlying IEC 61131-3 class instance with relevant SEL client tags and POU pins as well as tags from the newly generated tag list.

When a project is sent to the RTAC, the runtime code performs the following:

- Operates the SEL client Flex parse Send controls on the user-specified interval, or upon manual trigger, for both COM 87L reports and COM 87L statistics reset.
- Upon receipt of a COM 87L response, parsed tags are assessed for alert conditions as per *Table 10.3*.
- If enabled, raw COM 87L report text is written to a TXT file and stored in a user-specified directory and in a subdirectory named after the SEL client.
- Evaluates unsolicited SER data points (see *Table 10.2*) for alert conditions. In order for alert conditions to be evaluated, the associated Relay Word bits must be present in the IED's SER settings. It is the responsibility of the user to add these Relay Word bits to the IED's SER equation and configure the IED for unsolicited SER transmission for the relevant communications port.
- If enabled, alert conditions are logged to a CSV report and stored in the user specified directory as noted in *SOE/Summary CSV and COM 87L Reports on page 756*.
- A virtual tag list is automatically generated and populated with SPS tags. Runtime code will update an SPS tag on an alert condition associated with its monitored data point (see *Alerts\_87LCommMonitor tag list on page 757*).
- If enabled, alert conditions are logged to the SOE page on the RTAC web interface.

## Automatic Client Configuration

This extension will automatically modify the settings of an associated SEL client, including Flex parse messages and additions to the Targets 2 tab. All modified settings will include "Managed by 87L Comm Monitor Extension" in the Comment field.

## Monitored SER Points

*Table 10.2* shows the SER points from the SEL-411L that this extension monitors for unsolicited updates. It is the responsibility of the user to add these Relay Word bits to the relay SER equation.

**Table 10.2 SEL-411L Alert Conditions and Tag List Outputs**

| <b>Relay Word Bit</b> | <b>Alert Condition</b> | <b>Autogenerated Tag List Tag Names</b> |
|-----------------------|------------------------|---|
| 87ERR1                | On assertion           | <Client Name>_SER_ERR1_Alert            |
| 87ERR2                | On assertion           | <Client Name>_SER_ERR2_Alert            |

| <b>Relay Word Bit</b> | <b>Alert Condition</b>                | <b>Autogenerated Tag List Tag Names</b> |
|-----------------------|---------------------------------------|---|
| 87HSB                 | Asserts more than 5 times in 24 hours | <Client Name>_SER_87HSB_Alert           |
| 87USAFE               | Asserts more than 5 times in 1 hour   | <Client Name>_SER_87USAFE_Alert         |
| 87LST                 | On assertion                          | <Client Name>_SER_87LST_Alert           |
| 87BLK                 | On assertion                          | <Client Name>_SER_87BLK_Alert           |
| 87BLKL                | On assertion                          | <Client Name>_SER_87BLKL_Alert          |
| 87TOK                 | On deassertion                        | <Client Name>_SER_87TOK_Alert           |
| 87SYNL                | On assertion                          | <Client Name>_SEL_SER_87SYNL_Alert      |
| 87C1BCH               | On assertion                          | <Client Name>_SEL_SER_87C1BCH_Alert     |
| 87C2BCH               | On assertion                          | <Client Name>_SEL_SER_87C2BCH_Alert     |
| 87C3BCH               | On assertion                          | <Client Name>_SEL_SER_87C3BCH_Alert     |
| 87LSP                 | On assertion                          | <Client Name>_SEL_SER_87LSP_Alert       |

## Monitored COM 87L Report Data Points

Table 10.3 shows the elements this extension monitors from the SEL-411L COM 87L report.

**Table 10.3 SEL-411L Monitored COM 87L Report Data Points and Conditions**

| <b>Monitored COM 87L Report Data Point</b>                       | <b>Alert Condition</b>  | <b>Tag List Tag Name</b>                                       |
|--|---|--|
| Global Status  | String equals "DISABLED" or "IN TEST"   | <IED Name>_Comm_87L_Status_Alert                               |
| Channel <i>x</i> Status  | String equals "ALARM"   | <IED Name>_Channel_ <i>x</i> _Status_Alert                     |
| Channel <i>x</i> Role, Channel <i>x</i> 2SD Role, and 24hr Usage | Channel Role is "In Use", 2SD Role is "Primary", and 24hr Usage is below the user-settable "Primary Availability" threshold | <IED Name>_Channel_ <i>x</i> _24hr_Usage_Alert                 |
| Channel <i>x</i> Sync Config and Sync Status                     | Sync Status is "Channel-based" when Sync Config is "Ext-time-based"   | <IED Name>_Channel_ <i>x</i> _Synch_Status_Alert               |
| Channel <i>x</i> Lost Packet Count 24hr                          | Count exceeds the user-settable "24-hour Lost Packet Threshold" setting   | <IED Name>_Channel_ <i>x</i> _Lost_Packet_Count_24hr_Alert     |
| Channel <i>x</i> Max Lost Packet Count 24hr                      | Any update to the maximum   | <IED Name>_Channel_ <i>x</i> _Max_Lost_Packet_Count_24hr_Alert |
| Channel <i>x</i> Round-Trip Delay (ms)                           | Any update to the maximum   | <IED Name>_Channel_ <i>x</i> _Max_Round_Trip_Delay_Alert       |
| Channel <i>x</i> Transmit Delay (ms)                             | Any update to the maximum   | <IED Name>_Channel_ <i>x</i> _Max_Transmit_Delay_Alert         |
| Channel <i>x</i> Receive Delay (ms)                              | Any update to the maximum   | <IED Name>_Channel_ <i>x</i> _Max_Receive_Delay_Alert          |
| Channel <i>x</i> Asymmetry (ms)                                  | Any update to the maximum   | <IED Name>_Channel_ <i>x</i> _Max_Asymmetry_Alert              |

## 87L Mode considerations

The SEL-411L may be configured for one of a handful of operational modes depending on the communication medium and number of channels in the scheme. Not all monitored data points (specified in *Table 10.3*) pertain to each mode. This extension automatically determines the 87L mode during its online configuration period and updates the tag list tags for the relevant data points. All other tag list tags will maintain a q.validity of invalid. For example, an SEL-411L using an E87CH setting of 2E (i.e., a two-terminal Ethernet application) will display information for one 87L communications channel; channel 2 and 3 tags that appear in the tag list, as well as tags that rely on multiple channels, will maintain an invalid quality.

Review the E87CH setting in the relay to determine or configure the mode. The detected mode is also reported as part of the Controller tab Status POU output pin for the given client upon successful online configuration with the SEL-411L. See *POU Outputs* on page 757 for more information.

## Settings

The following sections describe the 87L Comm Monitor settings interface.

### Settings Tab

Use the **Settings** tab to define global settings for each IED monitored by the extension.

**Table 10.4 Settings**

| Setting Name         | Description   |
|----------------------|---|
| COM 87L Poll Period  | The COM 87L report poll period. Set to 0 for trigger-only polling.  |
| COM 87L Reset Period | The COM 87L reset command period. This will reset the 87L Comm statistics in the relay. Set to 0 for trigger-only resets.   |
| Multi Poll Mode      | The polling scheme applied when multiple IEDs are monitored. Configuring this setting to Round-Robin will reduce instantaneous burden in configurations with more than ten IEDs while increasing the overall time to complete a round of polling amongst the clients. |

### Report Settings Tab

Use the **Report Settings** tab to define file name formatting and directory management settings. These settings apply both to the SOE/Summary CSV report and raw COM 87L reports. See the extension for descriptions of each setting.

### IEDs: 411L Tab

Use the **IEDs: 411L** tab to define settings for a specific 87L Comm Monitor and associate the monitor with an SEL-411L SEL protocol client. This page supports as many as 100 clients. All settings on this page other than the optional triggers are static settings that cannot be changed during runtime.

**Table 10.5 IEDs: 411L**

| Column Name                      | Description  |
|----------------------------------|--|
| Enable                           | Use this setting for static enabling/disabling of a given monitor. This can be useful during commissioning or testing.   |
| IED Name                         | This setting provides a dropdown list of all SEL clients in the project. Select any supported client to associate with this monitor.   |
| Primary Availability Threshold % | Threshold percentage (0–100) against which the availability of a primary channel (parsed from the COM 87L report) will be assessed. Not applicable for 87L modes for less than two channels.   |
| 24-hour Lost Packet Threshold    | Threshold against which the 24-hour lost packet count (parsed from the COM 87L report) will be assessed.   |
| Enable SOE Logging               | Enable or disable logging of 87L Comm alerts to the RTAC SOE.  |
| Enable Status Report Generation  | Enable or disable logging of 87L Comm alerts to a CSV file located within the directory specified by Report Settings > Directory.  |
| Raw COM 87L Report Retention     | This setting allows the raw COM 87L response from a supported IED to be stored in a file located within a subdirectory of the directory specified on the Reports tab. The name of the subdirectory contains the name of the SEL client. This setting can be configured to disable all COM 87L report retention, to save COM 87L reports only when content from the report has driven an alert condition, or to save all COM 87L reports. |
| COM 87L Poll Trigger             | (Optional) Reference a logic engine BOOL variable for driving the COM 87L poll manually or with custom logic.  |
| COM 87L Clear/Reset Trigger      | (Optional) Reference a logic engine BOOL variable for driving the COM 87L RESET poll manually or with custom logic.  |

## Outputs

### SOE/Summary CSV and COM 87L Reports

If enabled for the supported IED, 87L Comm alerts and operational issues are recorded to a dedicated CSV-formatted file. All IEDs with reporting enabled log data to the same CSV file. In addition, COM 87L reports from the IED are optionally stored and managed in the RTAC file system.

**Table 10.6 SOE/Summary CSV Report Format**

| Column Name                   | Description   |
|-------------------------------|---|
| Timestamp                     | The RTAC system time at the time of log generation  |
| Log Type                      | Event or Summary  |
| Asset ID                      | <Client Name>_87LCommMonitor  |
| Summary Status                | Indicates one of the following in order of precedence: (1) the number of active alerts, (2) the number of alert assertions since the last summary, or (3) "NOMINAL OPERATION".<br><br>(I.e., if there are no active alerts, the number of alert assertions since the last summary is displayed; if there are no active alerts <i>and</i> no alert assertions since the last summary, "NOMINAL OPERATION" is displayed.) |
| Alert Message                 | An alert or informational message associated with a monitored SER or COM 87L data point.  |
| Timestamp From COM 87L Report | Either a copy of the time stamp from the COM 87L report (i.e., the time stamp displayed when the Alert Message column indicates an update to a maximum counter) or "NA".  |

## File Name Formatting

SOE/Summary CSV and raw COM 87L report file names are IEEE C37.232-2011 (COMNAME) compliant and use the following formats, respectively:

yyymmdd,hmmssuuuuu,T,Station ID,RTAC,Company Name,File Name Postfix,SOE.csv

yyymmdd,hmmssuuuuu,T,Station ID,<Client Name>,Company Name,File Name Postfix.txt

where:

The time stamp (hhmmssuuuuu) is given in UTC or local time as defined by **Record Time In UTC**, and represents the first time stamp in that file.

T represents the time-stamp offset from UTC.

**Station ID, Company Name, and File Name Postfix** are defined on the **Report Settings** tab.

## Alerts\_87LCommMonitor tag list

A dedicated tag list is generated to contain SPS alert indicators for each monitored data point for each configured client.

The SPS points are updated by alert level such that the deassertion of a tag list point occurs when the monitored data point evaluates to a non-alert condition, either via a COM 87L poll or receipt of an unsolicited SER point.

Tags are generated to accommodate the greatest possible 87L mode configuration. During runtime, the extension only populates tags that are relevant to the 87L mode used by the IED. All other tag list tags maintain a q.validity of invalid. The comments field of the tag list provides a list of 87L modes for which a tag is relevant. Consider filtering or sorting the tags based on the content in the Comment field to obtain the logic tags that are relevant to an IED's 87L mode.

## POU Outputs

The Controller tab POU output pins provide global information as well as information pertaining to each monitored IED, as shown in *Table 10.7*.

**Table 10.7 87L Communication Monitor Outputs**

| POU Output Pin         | Data Type   | Description   |
|------------------------|-------------|---|
| <b>Global</b>          |             |   |
| ENO                    | BOOL        | True if the supporting IEC 61131-3 code has been initialized successfully.  |
| Error                  | BOOL        | True if any client's Error pin is True.   |
| ErrorMsg               | STRING(255) | Copy of the Status string of the first client with Error = True. Clients are evaluated in top-down order as they appear on the POU output.                        |
| <b>Client-Specific</b> |             |   |
| <Client Name>_Status   | STRING(255) | Indicates nominal operation and reports the 87L mode when <Client Name>_Error = False. Otherwise, provides details on operational/configuration status and error. |

| POU Output Pin             | Data Type | Description  |
|----------------------------|-----------|--|
| <Client Name>_Error        | BOOL      | Indicates an operational/configuration error with the 87L Comm monitor for this client.                          |
| <Client Name>_LastAlert    | STR       | A time-stamped string detailing the last observed 87L Comm alert condition.                                      |
| <Client Name>_Initializing | BOOL      | True if <Client Name>_Error = False and the associated 87L Comm monitor has not completed runtime configuration. |
| <Client Name>_Busy         | BOOL      | True if the associated 87L Comm monitor is awaiting Flex parse completion for a supported IED.                   |

## CommProc Converter

---

### Overview

The Communications Processor (CommProc) Converter extension is designed to parse as many as three existing communications processor settings files originally created by SEL-5020 Settings Assistant Software (in the .SET format) and create equivalent RTAC settings.

### Theory of Operation

The extension is inserted into an existing RTAC project (version R151 or later) and as many as three .SET files are assigned for conversion on the Settings Files tab. If **Build RTAC Settings** is toggled to True, when the project settings are saved, settings files will be parsed for appropriate configuration data and matching RTAC project settings will be populated. The extension will populate the following RTAC project elements:

- ▶ SEL Client devices on appropriate ports, with tags enabled to match those used in the .SET file
- ▶ A DNP server device (serial or Ethernet) with a DNP server shared map and Simple Tag Mapper extension instance to match the math move logic present in the .SET file

During the settings file conversion process, a conversion log file is written out to the Extension Logs directory that resides in the standard ACCELERATOR RTAC Logs location. This log file contains details of the port configuration parsed from the .SET file as well as all math statements in the project, including those used for DNP mapping. Following the Build RTAC Settings procedure, the extension should be manually deleted out of the RTAC project because it is no longer needed.

### Settings Tabs

Two settings tabs are available in the CommProc Converter extension:

- ▶ General Settings
- ▶ Settings Files

### General Settings

*Table 10.8* lists the settings available in the General Settings tab.

**Table 10.8 General Settings**

| <b>Setting Name</b>            | <b>Setting Description</b>   |
|--------------------------------|--|
| Build RTAC Settings            | Boolean value; defaults to False. Toggle this setting to True and save your settings to trigger the process that parses the .SET files and creates equivalent RTAC settings.   |
| Use Paired Remote Bit Commands | Boolean value; defaults to False. This setting determines the type of DNP binary output mapping created for the DNP server map for SEL IED ports with a SEND_OPER setting of Y or YP. A value of True in this setting will map one DNP binary output to a pair of remote bits for pulse operations only (no set or clear is possible). See <i>DNP Binary Output Mapping</i> on page 764 for more information.  |
| DNP Server Serial Port         | 16, 32, or 48; default is 16. When multiple .SET files are parsed to create RTAC settings, it is likely that multiple DNP master ports will be discovered and have their math move statements parsed. The maps from each of these DNP ports are aggregated together to create a single unified map of binary inputs, analog inputs, counters, and binary outputs. This setting chooses the destination serial port for the unified DNP server, i.e., Port 16, 32, or 48. |

## Settings Files

The Settings Files tab provides the settings shown in *Table 10.9* for between one and three user-added rows, each representing a single .SET file to be parsed for RTAC settings.

**Table 10.9 Settings Files**

| <b>Setting Name</b>       | <b>Setting Description</b>   |
|---------------------------|--|
| SET File Path             | Full system path to the .SET file. This settings field includes a file browse button for navigating to and opening a .SET file saved on the local PC.  |
| Port Server IP (Optional) | Optional valid IP address. The default behavior of the CommProc Converter extension is to create RTAC settings using SEL Protocol client devices configured for serial connections to the RTAC, because the RTAC is intended to be a drop-in replacement for an existing in-rack communications processor with serial cables already connected to all IEDs. This settings field allows for an alternate configuration in which a port server device (such as the SEL-3610 Port Server) replaces the communications processor in the rack, and serial cables from the IEDs connect to the port server device (instead of an RTAC). In this configuration, Ethernet-Tunneled-Serial SEL Protocol client devices are added to the project and the Server IP port on those devices links to this port server IP. This setting is used in conjunction with the adjacent <b>Base TCP Port</b> setting. |
| Base TCP Port             | Integer value between 1 and 65518. Disabled when the <b>Port Server IP (Optional)</b> setting is empty. This value is used to determine a Server IP port number to assign to SEL Protocol client devices when they are added in Ethernet-Tunneled-Serial mode. The first SEL Protocol device is assigned the Base TCP Port value, the second SEL Protocol device is assigned the Base TCP Port value + 1, and so on.   |

## SET File Parsing

As each .SET file is parsed to create RTAC settings, the following settings groups are used:

- ▶ PORT
- ▶ AUTO
- ▶ MATH

The LOGIC and USER settings groups from the .SET file are not used to create RTAC settings.

## PORT Settings

For each of the ports (as many as 18) present in a .SET file, the settings shown in *Table 10.10* determine the type of device to add to the resulting RTAC file.

**Table 10.10 PORT Settings**

| Port Numbers | PORT Setting(s)              | Device Type                                       |
|--------------|------------------------------|---|
| 1–16         | DEVICE = S                   | SEL IED (specific type determined by FID setting) |
| 1–16         | DEVICE = M, PROTOCOL = S     | Master/SEL  |
| 1–16         | DEVICE = M, PROTOCOL = M     | Master/Modbus                                     |
| 1–16         | DEVICE = M, PROTOCOL = D     | Master/DNP  |
| 17 and 18    | DEVICE = 0 (2701), ENDNP = Y | Master/DNP (Ethernet)                             |

For SEL IEDs, each PORTID setting is stored and used later to name the SEL Protocol client device when it gets added to the RTAC project. The name is prepended with "Px\_" (where x denotes the port number 1–48) and appended with a sanitized port id. PORTID values of Ports 1–16 are assigned from the first parsed .SET file, 17–32 from the second, and 33–48 from the third. The PORTID value is sanitized to replace all special characters (i.e., non-alphanumeric) with underscores and to remove any double underscores, leading underscores, and trailing underscores. Additionally, any reserved protocol identifier suffixes (e.g., \_DNP or \_MB) are removed if they are present at the end of the device name.

Some SEL IEDs contained in .SET files are legacy models that do not have a matching RTAC device definition file. These devices are not added to the project, and an entry in the conversion log is made to indicate such instances. This applies to the following devices:

- ▶ SEL-BFR
- ▶ SEL-121G-5/SEL-221G-5
- ▶ SEL-121G-9/SEL-221G-9
- ▶ SEL-167-2/SEL-267-2
- ▶ SEL-167-4/SEL-267-4
- ▶ SEL-167-5/SEL-267-5
- ▶ SEL-49

## AUTO Settings

For Ports 1–16, the SEND\_OPER setting is stored. A value of Y or YP in this setting associated with an SEL IED port will cause all breaker and remote bits to be automatically enabled and mapped to the DNP server port in the resulting RTAC settings.

Other AUTO settings such as Flex parse messaging and unsolicited write (W) are ignored.

## MATH Settings

Math statements are parsed from the .SET file as follows:

- ▶ Math statements on Ports 1–18 are processed and stored in the conversion log. However, only the math statements located on Ports 16–18 are ultimately used to determine what SEL IED tags will be enabled and mapped to a DNP server.
- ▶ Math statements that contain scaling values applied against analog values (e.g., \*10 or /1.732) are stored and later applied to the analog inputs in the DNP map.
- ▶ Math statements that contain references to communications processor input/output signals (e.g., IN1–IN16, OUT1–OUT4) are translated into matching System Tags (e.g., SystemTags.IN201–IN216, SystemTags.OUT201–OUT204) when RTAC project settings are generated.
- ▶ Math statements that contain sources that use raw addressing rather than word bit or analog names (e.g., 1:200Bh vs. 1:METER:IA) are not used to enable SEL Client tags or generate DNP mapping.
- ▶ Math statements that reference the USER data region are not used to enable SEL Client tags or generate DNP mapping.

Ports 17 and 18 with SEL-2701 Ethernet Processor cards enabled for DNP3 will have their DNPMAP setting checked for a value of AUTO or CUSTOM. A value of AUTO will parse math statements from the port, and a value of CUSTOM will parse the first custom DNP map for binary inputs (as many as 1024), analog inputs (as many as 512), and counters (as many as 128). Each point index statement is parsed using a similar technique to that used for math statements and added to the conversion log to be used later to determine what RTAC SEL Protocol Client tag names to enable and map.

## RTAC Settings Generation

During the Build RTAC Settings operation, all relevant information parsed from the .SET file(s) is used to generate matching RTAC project settings. Depending on the port configuration in the .SET file, the following device types are added to the RTAC project settings:

**Table 10.11 RTAC Device Types**

| .SET File Port Type   | RTAC Device Type                         | Notes   |
|-----------------------|--|---|
| SEL IED               | SEL Protocol client of matching FID type | Serial connection type, unless <b>Port Server IP (Optional)</b> is configured, in which case an Ethernet-Tunneled-Serial connection type is used. The device is named for the sanitized PORTID value discussed in <i>PORT Settings</i> on page 760. |
| Master/SEL            | SEL Protocol server—serial               | The device will have a name of Px_Eng_Access, where x is the serial port number of the original device.   |
| Master/Modbus         | Modbus server—serial                     | The device will have a name of Px_SCADA, where x is 12, 14, or 16 (depending on the original port number).  |
| Master/DNP            | DNP Server—serial                        | The device will have a name of Px_SCADA, where x is assigned from the value of the <b>DNP Server Serial Port</b> setting.   |
| Master/DNP (Ethernet) | DNP server—Ethernet                      | The device will have a name of E17_SCADA or E18_SCADA.  |

## SEL Protocol Client Configuration

SEL Protocol clients are added to the RTAC settings to match each SEL IED port configuration parsed from the .SET file settings. *Table 10.12* shows the specific settings that are adjusted on the Settings and POU Pin Settings tab(s) of each client.

**Table 10.12 SEL Protocol Client Settings**

| Setting Name                        | Value Applied  |
|-------------------------------------|--|
| Serial Communications Port          | Com_xx, where xx is a two-digit value of the serial port number (e.g., Com_03)                                       |
| Baud Rate                           | The BAUD value from the parsed PORT settings   |
| RTS_CTS                             | The RTS_CTS value from the parsed PORT settings  |
| Server IP Address                   | The <b>Port Server IP (Optional)</b> value from the Settings Files tab   |
| Server IP Port                      | The <b>Base TCP Port</b> value from the Settings Files tab, incremented by 1 for each subsequent SEL Protocol client |
| Virtual Port Number                 | The serial communications port number (e.g., 3)  |
| New Event Hold Duration             | 600000 (in ms, corresponding to a 10-minute fault location hold time)  |
| New Event Reset Location Value      | 0.0  |
| POU Pin: Enable_New_Event_Filtering | True   |

When the SEL Protocol clients are configured, tags are selectively enabled based on their references in math statements that were originally located on ports configured for DNP in the original .SET file (Ports 16–18). The data region and raw signal name from the source data portion of the math statement are used to identify the tag (e.g., 1:TARGET:52A would resolve to a data region of "TARGET" and a raw signal name of "52A") and the Enable field is set to True for these tags on the appropriate tab. The name of the tab containing RTAC tags to enable is determined by the data region name from the source settings. The equivalency lookup for these regions is shown in *Table 10.13*.

**Table 10.13 SEL Protocol Tag Data Region Lookup**

| Communications Processor Data Region | RTAC Tag Tab Name   |
|--------------------------------------|---------------------|
| TARGET, METER, STATE                 | Meter               |
| DEMAND                               | Demand Meter        |
| ENERGY                               | Energy Message      |
| HISTORY                              | History             |
| LOCAL                                | History - New Event |
| METER2                               | Meter 2             |

For example, an original source reference of 1:TARGET:52A would cause the Enable field to be set to True for a tag named FM\_INST\_52A located on the Meter tab of the specific device located on Com\_01.

Some signal names in the math statements of a communications processor .SET file must be modified for compliance with RTAC tag name standards. These signal names are automatically modified when locating an equivalent SEL Protocol client tag to enable. *Table 10.14* shows these signal names and their replacements.

**Table 10.14 SEL Protocol Tag Rename Replacements**

| Communications Processor Signal Name Partial Value | RTAC Tag Name Replacement |
|--|---------------------------|
| (V)  | <empty>                   |
| (KV)   | <empty>                   |
| (A)  | <empty>                   |
| (MVAR)   | _VARS                     |
| (MW)   | _WATTS                    |
| !ALARM   | NOTALARM                  |

SEL Protocol clients with an AUTO SEND\_OPER setting of Y or YP in their original settings configuration will have all SBRC and SRBC control tags enabled on the Breaker Bits and Remote Bits tabs.

## DNP Server Configuration

When required, a DNP serial server is added to the RTAC settings to match the Port 16 Master/DNP configurations parsed from the .SET file(s). *Table 10.15* shows the specific settings that are adjusted on the Settings tab of the server.

**Table 10.15 DNP Server Serial Settings**

| Setting Name               | Value Applied   |
|----------------------------|---|
| Serial Communications Port | Com_16, Com_32, or Com_48 (depending on the value of the <b>DNP Server Serial Port</b> setting) |
| Baud Rate                  | The BAUD value from the parsed PORT settings  |
| Server DNP Address         | The ADDRESS value from the parsed PORT settings   |
| Client DNP Address         | The REP_ADDR value from the parsed PORT settings  |

If the parsed communications processor settings contain an Ethernet-based DNP instance on Port 17 or 18, a DNP server Ethernet connection type is added to the project with the settings assignments shown in *Table 10.16*.

**Table 10.16 DNP Server Ethernet Settings**

| Setting Name                   | Value Applied   |
|--------------------------------|---|
| Server IP Port                 | The DNPPNUM value from the parsed PORT settings   |
| Server DNP Address             | The DNPNADR value from the parsed PORT settings   |
| Client DNP Address             | The RPADDR01 value from the parsed PORT settings  |
| Allow Anonymous DNP IP Clients | False   |
| Client IP Addresses            | A comma-separated list of the DNPIPx values from the parsed PORT settings (where x is 1–10) |

An associated DNP server shared map, named Px\_Map\_DNP (where x is 16, 32, or 48, denoting those ports for serial DNP servers) or Ex\_Map\_DNP (where x is equal to 17 or 18, denoting those ports for Ethernet DNP servers), is added for each DNP server. This shared map is assigned to the Map Name field on its corresponding DNP server. The DNP server shared map has the exact required number of binary inputs, analog inputs, counters, and binary outputs automatically added to it. This includes any reserved (unmapped) tags that are not populated with any source data. Any comments parsed from the end of the original .SET file math move statements (e.g., any text following a "#" character) are assigned as comments on Binary Input, Analog Input, and Counter tags added to the DNP server shared map.

## DNP Tag Mapping

Mapping SEL Protocol Client tags to DNP Server tags is accomplished through use of an instance of the Simple Tag Mapper extension added to the project. This extension is named prg\_x\_Mapping (where x is equal to P16, P32, P48, E17, or E18), and it is associated with the similarly named DNP server. This extension facilitates the mapping of binary inputs, analog inputs, counters, and binary outputs. It automatically handles mapping of SEL Protocol tags into binary inputs, analog inputs, and counters, along with any binary input inversions (NOTs), binary input Boolean logic (AND, OR), or analog input scaling values (multiplication or division). As described in the DNP shared map configuration, original math move statements that use source data from a USER or FLEX region are reserved a DNP server shared map tag and also a position in the Simple Tag Mapper mapping tables, but the line does not specify a client tag. The Simple Tag Mapper extension is configured with a default Binary Output map to facilitate SCADA/DNP commands issued to breaker or remote bits on the SEL clients (see *DNP Binary Output Mapping* on page 764 for more information).

## DNP Binary Output Mapping

Legacy communications processors such as the SEL-2030 and SEL-2032 do not allow for a customized Binary Output map, and instead rely on a set of parameters on the DNP port to autogenerate a template map that has accommodations for each port and a specified number of breaker and remote bits. The CommProc Converter extension does away with this template scheme and uses a more straightforward process of enabling mapping for each command tag available on SEL Protocol clients where the original settings contain an AUTO SEND\_OPER setting of Y or YP. This autogenerated command map uses the General setting **Use Paired Remote Bit Commands** to decide which mapping template to use for each SEL Protocol client. *Table 10.17* and *Table 10.18* show the DNP binary output mapping when **Use Paired Remote Bit Commands** is set to True or False, respectively, using an example SEL Protocol client with 2 breaker bits and 16 remote bits.

**Table 10.17 DNP Binary Output Mapping (Paired)**

| Binary Output Index [Command Code(s)] | SEL Client Mapping  |
|---------------------------------------|---------------------|
| BO Index 0 [Close, Latch On]          | Breaker Bit 1 Close |
| BO Index 0 [Trip, Latch Off]          | Breaker Bit 1 Trip  |
| BO Index 1 [Close, Latch On]          | Breaker Bit 2 Close |
| BO Index 1 [Trip, Latch Off]          | Breaker Bit 2 Trip  |

| <b>Binary Output Index [Command Code(s)]</b> | <b>SEL Client Mapping</b> |
|--|---------------------------|
| BO Index 2 [Close, Latch On, Pulse]          | Remote Bit 1 Pulse        |
| BO Index 2 [Trip, Latch Off]                 | Remote Bit 2 Pulse        |
| BO Index 3 [Close, Latch On, Pulse]          | Remote Bit 3 Pulse        |
| BO Index 3 [Trip, Latch Off]                 | Remote Bit 4 Pulse        |
| BO Index 4 [Close, Latch On, Pulse]          | Remote Bit 5 Pulse        |
| BO Index 4 [Trip, Latch Off]                 | Remote Bit 6 Pulse        |
| BO Index 5 [Close, Latch On, Pulse]          | Remote Bit 7 Pulse        |
| BO Index 5 [Trip, Latch Off]                 | Remote Bit 8 Pulse        |
| BO Index 6 [Close, Latch On, Pulse]          | Remote Bit 9 Pulse        |
| BO Index 6 [Trip, Latch Off]                 | Remote Bit 10 Pulse       |
| BO Index 7 [Close, Latch On, Pulse]          | Remote Bit 11 Pulse       |
| BO Index 7 [Trip, Latch Off]                 | Remote Bit 12 Pulse       |
| BO Index 8 [Close, Latch On, Pulse]          | Remote Bit 13 Pulse       |
| BO Index 8 [Trip, Latch Off]                 | Remote Bit 14 Pulse       |
| BO Index 9 [Close, Latch On, Pulse]          | Remote Bit 15 Pulse       |
| BO Index 9 [Trip, Latch Off]                 | Remote Bit 16 Pulse       |

**Table 10.18 DNP Binary Output Mapping (Non-Paired)**

| <b>Binary Output Index [Command Code(s)]</b> | <b>SEL Client Mapping</b> |
|--|---------------------------|
| BO Index 0 [Close, Latch On]                 | Breaker Bit 1 Close       |
| BO Index 0 [Trip, Latch Off]                 | Breaker Bit 1 Trip        |
| BO Index 1 [Close, Latch On]                 | Breaker Bit 2 Close       |
| BO Index 1 [Trip, Latch Off]                 | Breaker Bit 2 Trip        |
| BO Index 2 [Close, Latch On]                 | Remote Bit 1 Set          |
| BO Index 2 [Trip, Latch Off]                 | Remote Bit 1 Clear        |
| BO Index 2 [Pulse]                           | Remote Bit 1 Pulse        |
| BO Index 3 [Close, Latch On]                 | Remote Bit 2 Set          |
| BO Index 3 [Trip, Latch Off]                 | Remote Bit 2 Clear        |
| BO Index 3 [Pulse]                           | Remote Bit 2 Pulse        |
| BO Index 4 [Close, Latch On]                 | Remote Bit 3 Set          |
| BO Index 4 [Trip, Latch Off]                 | Remote Bit 3 Clear        |
| BO Index 4 [Pulse]                           | Remote Bit 3 Pulse        |
| BO Index 5 [Close, Latch On]                 | Remote Bit 4 Set          |
| BO Index 5 [Trip, Latch Off]                 | Remote Bit 4 Clear        |
| BO Index 5 [Pulse]                           | Remote Bit 4 Pulse        |
| BO Index 6 [Close, Latch On]                 | Remote Bit 5 Set          |
| BO Index 6 [Trip, Latch Off]                 | Remote Bit 5 Clear        |

| <b>Binary Output Index [Command Code(s)]</b> | <b>SEL Client Mapping</b> |
|--|---------------------------|
| BO Index 6 [Pulse]                           | Remote Bit 5 Pulse        |
| BO Index 7 [Close, Latch On]                 | Remote Bit 6 Set          |
| BO Index 7 [Trip, Latch Off]                 | Remote Bit 6 Clear        |
| BO Index 7 [Pulse]                           | Remote Bit 6 Pulse        |
| BO Index 8 [Close, Latch On]                 | Remote Bit 7 Set          |
| BO Index 8 [Trip, Latch Off]                 | Remote Bit 7 Clear        |
| BO Index 8 [Pulse]                           | Remote Bit 7 Pulse        |
| BO Index 9 [Close, Latch On]                 | Remote Bit 8 Set          |
| BO Index 9 [Trip, Latch Off]                 | Remote Bit 8 Clear        |
| BO Index 9 [Pulse]                           | Remote Bit 8 Pulse        |
| BO Index 10 [Close, Latch On]                | Remote Bit 9 Set          |
| BO Index 10 [Trip, Latch Off]                | Remote Bit 9 Clear        |
| BO Index 10 [Pulse]                          | Remote Bit 9 Pulse        |
| BO Index 11 [Close, Latch On]                | Remote Bit 10 Set         |
| BO Index 11 [Trip, Latch Off]                | Remote Bit 10 Clear       |
| BO Index 11 [Pulse]                          | Remote Bit 10 Pulse       |
| BO Index 12 [Close, Latch On]                | Remote Bit 11 Set         |
| BO Index 12 [Trip, Latch Off]                | Remote Bit 11 Clear       |
| BO Index 12 [Pulse]                          | Remote Bit 11 Pulse       |
| BO Index 13 [Close, Latch On]                | Remote Bit 12 Set         |
| BO Index 13 [Trip, Latch Off]                | Remote Bit 12 Clear       |
| BO Index 13 [Pulse]                          | Remote Bit 12 Pulse       |
| BO Index 14 [Close, Latch On]                | Remote Bit 13 Set         |
| BO Index 14 [Trip, Latch Off]                | Remote Bit 13 Clear       |
| BO Index 14 [Pulse]                          | Remote Bit 13 Pulse       |
| BO Index 15 [Close, Latch On]                | Remote Bit 14 Set         |
| BO Index 15 [Trip, Latch Off]                | Remote Bit 14 Clear       |
| BO Index 15 [Pulse]                          | Remote Bit 14 Pulse       |
| BO Index 16 [Close, Latch On]                | Remote Bit 15 Set         |
| BO Index 16 [Trip, Latch Off]                | Remote Bit 15 Clear       |
| BO Index 16 [Pulse]                          | Remote Bit 15 Pulse       |
| BO Index 17 [Close, Latch On]                | Remote Bit 16 Set         |
| BO Index 17 [Trip, Latch Off]                | Remote Bit 16 Clear       |
| BO Index 17 [Pulse]                          | Remote Bit 16 Pulse       |

Subsequent SEL Protocol client devices added to the binary output mapping will increment the BO index positions as needed to fully map each breaker bit and remote bit available on the client to the DNP server.

# CtPt Monitor

---

## Overview

The CtPt Monitor extension provides health assessment of CT or PT assets through differential analysis of streaming measurements from redundant CTs or PTs.

## Theory of Operation

When redundant measurement transformers (CTs or PTs) are connected to a single line or bus (respectively), the set of transformers will produce equivalent secondary output currents or voltages (within a known margin of error as specified by the CT or PT manufacturer), which can be converted to digital measurements. By continually scrutinizing these streaming measurements for relative differences, it is possible to identify a failing measurement transformer. Secondarily, this comparative analysis can be used to validate and monitor both the analog-to-digital conversion processes in the connected sampling equipment and wiring between devices. A user-specified deviation percentage, pickup time, and chatter count threshold are used to drive a time-stamped alert, indicating an asset health issue.

This extension uses class\_StreamingCTPTMonitor and class\_CmReportWriter from the ConditionMonitoring library. See ConditionMonitoring in the Programming Reference for additional information.

### NOTE

The CtPt Monitor extension requires the RTAC to have the ConditionMonitoring library license.

## Features

This extension provides the following features:

- Monitor two or more redundant assets per monitor group.
- Multiple monitor groups can be added to a single extension instance.
- Breaker status can be incorporated in order to define monitor groups with dynamic sub-grouping (useful for Pt monitoring).
- CMV data channels can be assessed for both magnitude and angle deviation.
- Optional status reporting via dedicated event/periodic driven report files, SCADA tag mapping, and RTAC SOE reports.
- Generates optional report files with IEEE C37.232 COMNAME compliant file names.
- Assets are monitored in two ways:
  - Against a specified reference measurement
  - Against an average of all monitored measurements (the averaging function removes outliers from its calculation)

- Monitor groups can be enabled or disabled dynamically with user logic.
- Alert thresholds can either be configured with a static value or updated dynamically for complex monitoring applications.
- Optionally enabled generic time-alignment algorithm provides time-coherence among measurements sourced from various communication protocols that do not provide built-in time alignment.
- Support for CMV, MV, and INS data types provides compatibility with measurements sourced from various communication protocols. Note that processing is performed on magnitudes by default. Monitoring of CMV angles can be enabled.
- Settable magnitude scaling / angle rotation factors provides for monitoring of CTs or PTs separated by a power transformer.

## Settings

The following sections describe the CtPt Monitor settings interface.

### Static vs. Dynamic Settings

The following sections describe the settings of the extension. The **Setting Type** column indicates one of the following options:

1. Static: This input type is intended to be set once and cannot change after going online. Settings of this type cannot be assigned to a tag reference, logic engine object, or the output of an expression/equation.
2. Dynamic: This accepts several types of inputs:
  - Tag references
  - Function Block outputs/Function returns
  - Expressions
  - Literals (for example, "True" for a Boolean data type or "5.0" for a REAL data type)

For non-literal inputs to dynamic settings, the **Data Type** column indicates the required data type for the input tag reference, logic engine object, or expression output.

### Monitor Group Settings

Use the **Monitor Groups** tab to define global settings for each group of redundant measurement Assets.

**Table 10.19 CtPt Monitor Group Settings**

| Setting Name         | Data Type | Setting Type | Description   | Default Value                         |
|----------------------|-----------|--------------|---|---------------------------------------|
| Group ID             | STRING    | Static       | Identification string for the monitor group.                            | Group_<n> (where n is the row number) |
| Enable Monitor Group | BOOL      | Dynamic      | Enable or disable the Monitor group with a Boolean value or expression. | TRUE                                  |

| <b>Setting Name</b>           | <b>Data Type</b>  | <b>Setting Type</b> | <b>Description</b>   | <b>Default Value</b> |
|-------------------------------|---|---------------------|--|----------------------|
| Minimum Signal Magnitude      | REAL  | Dynamic             | Minimum signal level required from all measurements associated with a given asset monitor subprocess to enable the monitor.  | 0                    |
| Magnitude Deviation Threshold | REAL  | Dynamic             | (Percentage) Absolute deviation from the reference required to drive a health alert indication.  | 5.00                 |
| Enable CMV Angle Monitor      | BOOL  | Static              | Enable angle monitoring for all CMV channels in this group.  | FALSE                |
| Angle Deviation Threshold     | REAL  | Dynamic             | (Degrees) Absolute deviation from the reference required to drive a health alert indication.   | 15.00                |
| Alert Pickup/Dropout Time     | INT   | Static              | (Seconds) Maximum time a sustained deviation beyond Magnitude/Angle Deviation Threshold is allowed prior to alert assertion with type EXPIRATION. In addition, the amount of time an alert assertion will be held after an alert condition clears. | 60                   |
| Chatter Threshold             | INT   | Static              | The number of deviations beyond Magnitude/Alert Deviation Threshold within a period of Alert Pickup/Dropout Time is allowed prior to an alert assertion with type CHATTER.   | 1000                 |
| Monitor Mode                  | Relative Reference,<br>Relative with Topology,<br>Defined Reference | Static              | Select defined or relative reference (with or without topology processing) modes.  | Relative Reference   |
| Enable Time-Alignment         | BOOL  | Static              | Apply time-alignment to all reference and/or monitored channels associated with the monitor group.   | FALSE                |
| Data Rate                     | INT   | Static              | (Msg/sec) Time-alignment rate.   | 1                    |
| Maximum Wait-Time             | INT   | Static              | (Milliseconds) The amount of time that the time-alignment subprocess waits to receive all expected samples for a given time stamp.<br><br>Values less than the task cycle time are rounded up to the task cycle time.                              | 200                  |
| Log To SOE                    | STRING  | Static              | Log warnings and/or alerts to the RTAC SOE record. Set to None to disable.   | None                 |
| Log To Report Files           | BOOL  | Static              | Log warnings and alerts to dedicated SOE/Summary and Detail files in the RTAC file system.   | FALSE                |
| Output Group Alert Tag        | SPS/DPS/BOOL  | Dynamic             | Optionally map group level alerts to the specified tag. Useful for SCADA/HMI reporting.  | Blank                |
| Output Group Warning Tag      | SPS/DPS/BOOL  | Dynamic             | Optionally map group level warnings to the specified tag. Useful for SCADA/HMI reporting.  | Blank                |

## Monitor Mode Considerations

The **Monitor Mode** setting is provided to allow for monitoring scheme flexibility. Advantages and limitations of each mode are summarized as follows:

- Monitor Mode = Relative Reference
  - General use-case: Each redundant CT or PT connected to a common power system asset is monitored against each other.
  - Advantages: No single point of failure.

- Limitations: This monitoring scheme is only capable of accurately identifying simultaneous CT or PT failures in as many as  $(n / 2 - 1)$  CTs/PTs for an even number of monitored CTs/PTs and  $(n - 1) / 2$  CTs/PTs for an odd number of monitored CTs/PTs (where  $n$  is the number of monitored PTs or CTs).
- Special Considerations: This mode calculates a reference signal for comparison against each monitored channel. This reference signal is derived from the outlier-reduced average of all monitored channel samples for a snapshot in time. See class `_StreamingCTPTMonitor` in the Programming Reference for more information.
- ▶ Monitor Mode = Relative With Topology
  - General use-case: Same as Relative Reference mode but extends to include breaker status. This enables a single monitor group to, for example, track the status of all PTs in a topology-complex arrangement, such as a breaker-and-a-half scheme.
  - Advantages: This monitoring scheme can identify simultaneous PT failures in as many as  $(n - 1)$  PTs (where  $n$  is the number of monitored PTs or CTs in a group of electrically connected PTs). This monitoring scheme also incorporates breaker status to enable dynamic sub-grouping of monitored PTs.
  - Limitations: This scheme requires additional configuration via specification of breaker status tags and topology node IDs.
- ▶ Monitor Mode = Defined Reference
  - General use-case: One CT or PT is designated as a point-of-reference for use in monitoring other CTs or PTs connected to a common power system asset.
  - Advantages: This monitoring scheme can identify simultaneous CT or PT failures in as many as  $(n - 1)$  CTs or PTs (where  $n$  is the number of monitored PTs or CTs).
  - Limitations: This scheme is contingent on the reference PTs or CTs continually operating within manufacturer specifications. Thus, the reference CTs or PTs are single points of failure in this scheme.

## Report Settings Tab

The **Report Settings** tab contains all configurable items for report generation and file management of generated files. See the **Description** column for details on each configuration item. Move the slider or hover your cursor over a description to see the entire text of an item description. Type any applicable comments in the blank column on the right side.

## Report Files

When a given monitor group is selected for logging to report files, it will generate content within two types of files:

- ▶ **SOE/Summary Reports:** These are comma-separated values (CSV) files that are formatted for human review. They contain time-stamped alerts and warnings that are written to the file in an event-driven manner. New rows are appended to the bottom of the file. These files also contain summary information, which is written to the file on a period defined

by **Summary Logging Interval**, where **Summary Logging Interval** can be set to zero to disable periodic summary content generation. SOE/Summary reports are written to **Directory/Soe+Summary/**, where **Directory** is specified on the **Report Settings** tab. The **Soe+Summary** directory is managed independently in accordance with the directory management settings specified on the **Report Settings** tab.

- **Detail Reports:** These are comma-separated values (CSV) files that are formatted for machine parsing to aid in analytics generation. Column labels are appended with :A or :S (for analog or string, respectively) to aid in machine parsing. Analog columns take the form of a floating-point number with a maximum of three significant digits (e.g., -1234.123 or +1234.123). String columns contain as many as 255 ASCII characters. These reports contain time-stamped alerts that are written to the file in an event-driven manner. New rows are appended to the bottom of the file. Detail reports are written to **Directory/Detail/**, where **Directory** is specified on the **Report Settings** tab. The **Detail** directory is managed independently in accordance with the directory management settings specified on the **Report Settings** tab.

SOE/Summary and Detail report file names are of the following formats, respectively:

yymmdd,hmmssuuuuu,T,Station ID,Company Name,File Name  
Postfix,SOE.csv

yymmdd,hmmssuuuuu,T,Station ID,Company Name,File Name  
Postfix,DET.csv

where:

the time stamp (hhmmssuuuuu) is given in UTC or local time as defined by **Record Time In UTC**, and represents the first time stamp in that file.

T represents the time-stamp offset from UTC.

**Station ID, Company Name, and File Name** are defined on the **Report Settings** tab.

The SOE/Summary report is formatted as shown in *Table 10.20*.

**Table 10.20 SOE/Summary Report File Format**

| Column Label                | Description  |
|-----------------------------|--|
| Timestamp                   | Originating time stamp of the event. Formatted as YYYY-MM-DD:HH:MM:SS.uuuuu  |
| Log Type                    | Indicates either "Event" for event-driven content or "Summary" for periodically generated content.                                     |
| Asset ID                    | Unique asset identifier. Formatted as [GroupName]:[CtPtID].  |
| Summary Element             | Description of the Summary Value for the given row for a specified group. Formatted as [GroupName]:[Summary value description]         |
| Summary Value               | Summary information for the specified group.   |
| Alert Mag                   | The value of the specified monitored channel (magnitude or angle) at the time of alert/warning assertion.                              |
| Angle Deviation             | The signed deviation (degrees) of the given angle monitoring channel against the reference at the time of alert/warning assertion.     |
| Percent Magnitude Deviation | The signed deviation (percent) of the given magnitude monitoring channel against the reference at the time of alert/warning assertion. |

| Column Label          | Description  |
|-----------------------|--|
| Reference Measurement | The value of the reference measurement at the time of alert/warning assertion.   |
| Monitor Disabled      | Boolean indication of monitor enable status at the time of alert/warning assertion.  |
| Quality Alert         | Boolean indication of bad quality associated with the monitored channel or dependent measurement channels.   |
| Status                | Status string which provides specific information about the given alert/warning.   |
| Monitor Group         | A comma-separated list of CtPt IDs against which the specified asset is monitored. This list can change dynamically when using <b>Monitor Groups.Monitor Mode = Relative With Topology</b> |

The Summary rows within the SOE/Summary report are formatted as shown in *Table 10.21*.

**Table 10.21 Summary Content in the SOE/Summary Report**

| Status Element                                | Description   |
|---|---|
| [GroupName]:Status                            | Status category of the group at the time of summary generation (NOMINAL, WARNING, ALERT).   |
| [GroupName]:Status Description                | Additional information about the status category. If not NOMINAL, lists specific CtPt IDs associated with the warning/alert condition.  |
| Ave Group Magnitude Percent / Angle Deviation | A group average of the individual rolling averages of the Percent Magnitude Deviation or Angle Deviation of the channels in the specified group. Per-channel rolling averages are approximated over a window of 10 times the Monitor Group's <b>Alert Pickup/Dropout Time</b> using an exponential moving average with startup bias correction. |

The Detail report is formatted as shown in *Table 10.22*. Note that the number of columns in use scales with the number of groups/monitored channels.

**Table 10.22 Detail Report Format**

| Column Label   | Description  |
|--|--|
| Timestamp  | Originating time stamp of the event. Formatted as YYYY-MM-DD:HH:MM:SS.uuuuuu   |
| <b>The following columns are repeated for each monitored channel of each associated monitor group:</b> |  |
| [GroupName]:[CtPtID]:Alert Mag:A   | Value of the specified monitored channel (magnitude or angle) at the time of alert assertion.                              |
| [GroupName]:[CtPtID]:Angle Deviation:A   | The signed deviation (degrees) of the given angle monitoring channel against the reference at the time of alert assertion. |
| [GroupName]:[CtPtID]:Percent Magnitude Deviation:A   | The signed deviation (percent) of the given angle monitoring channel against the reference at the time of alert assertion. |
| [GroupName]:[CtPtID]:Reference Measurement:A   | The value of the reference measurement at the time of alert assertion.   |
| [GroupName]:[CtPtID]:Status:S  | Status string which indicates the alert type (CHATTER or EXCURSION).   |

## Measurement Channel Settings

For each row added to the **Monitor Groups** tab, a new child subitem will be added to the extension, as shown in *Figure 10.1*. The child object is used to specify all measurements associated with the given monitor group.

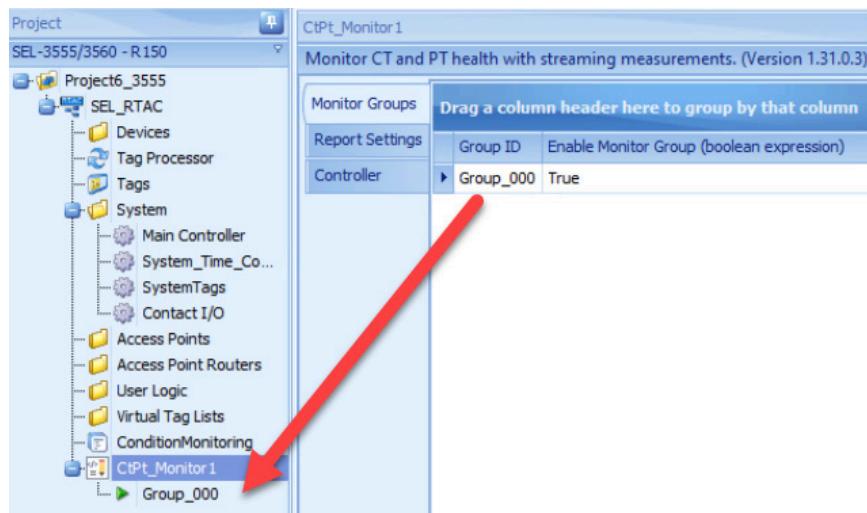


Figure 10.1 CtPt Monitor Group Measurement Channel Specification Page

## Monitored Channels

Each subitem will contain a **Monitored Channels** tab for specifying measurements of all CTs or PTs to be monitored. Select the + button to add as many rows as needed for the monitor group.

Table 10.23 Monitored Channel Settings

| Setting Name                    | Data Type/Range         | Setting Type | Description   | Default Value                             |
|---------------------------------|-------------------------|--------------|---|---|
| CT/PT ID                        | STRING                  | Static       | Identification string for the monitored asset.  | Dynamically generated based on row number |
| Channel Source Tag              | CMV, MV, or INS         | Dynamic      | Measurement channel source tag.   |   |
| Phase                           | 0, 1, 2, A, B, C, or NA | Static       | Electrical phase or sequence component associated with the Channel Source Tag. For Monitor Mode = Relative Reference, each phase represented must correspond to at least two monitored channels.            | A   |
| Magnitude Scale Factor          | REAL                    | Static       | Multiplication factor to be applied to the channel measurement prior to processing.   | 1.0                                       |
| Angle Rotation Factor           | REAL (-180 to +180)     | Static       | Offset factor to be applied to an angle component of a specified CMV channel prior to processing. Ignored if channel type is not CMV. Disabled if <b>Report Settings.Enable CMV Angle Monitor = False</b> . | 0.0                                       |
| Node                            | INT (1 to 64)           | Static       | Topology node associated with this channel. Disabled if <b>Report Settings.Monitor Mode is not = Relative With Topology</b> .   | 1   |
| Optional Output Asset Alert Tag | SPS, DPS, BOOL          | Dynamic      | Optionally map alerts for this individual channel to the specified tag. Useful for SCADA/HMI reporting.   | Blank                                     |

## Breaker/Switch Status Channels

For monitor groups configured with Monitor Mode = Relative With Topology, the associated subitem contains a **Breaker/Switch Status Channels** tab in addition to the **Monitored Channels** tab. Select the + button to add as many rows as needed for the monitor group.

**Table 10.24 Breaker/Switch Status Channels Settings**

| Setting Name | Data Type/Range             | Setting Type | Description  | Default Value |
|--------------|-----------------------------|--------------|--|---------------|
| Status Tag   | SPS                         | Dynamic      | Breaker/Switch Status channel (where TRUE = closed).   | Blank         |
| Phase        | 0, 1, 2, A, B, C, 3P, or NA | Static       | Electrical phase or sequence component associated with the breaker/switch. Select <b>3P</b> for three-pole breakers. | A             |
| Node 1       | INT (1 to 64)               | Static       | Topology node electrically connected to Node 2 when the breaker/switch is closed.                                    | 1             |
| Node 2       | INT (1 to 64)               | Static       | Topology node electrically connected to Node 1 when the breaker/switch is closed.                                    | 2             |

## Reference Channels

For monitor groups configured with Monitor Mode = Defined Reference, the associated subitem contains a **Reference Channels** tab in addition to the **Monitored Channels** tab. Use the **Reference Channels** tab to specify all measurements from reference CTs or PTs. Reference CT/PT measurements are used to assist in determining the health status of monitored CTs/PTs (as specified on the **Monitored Channels** tab). Reference CTs/PTs are not monitored for health status. Select the + button to add a reference channel row.

The following are special considerations for the **Reference Channels** tab:

- Reference Channel settings are identical to Monitor Channel settings with the exception that CT/PT ID string, Node, and Output Asset Alert Tag settings are not included.
- Each reference channel must be assigned a unique Phase.
- The Phase of each monitored channel within the associated **Monitored Channels** tab must have a corresponding reference channel measurement with the same Phase setting.

## Outputs


The CtPt Monitor generates a POU object on the **Controller** tab with the outputs shown in *Table 10.25*.

**Table 10.25 CtPt Monitor POU Outputs**

| Output Name  | Data Type   | Description  | Default Value |
|--------------|-------------|--|---------------|
| Initialized  | BOOL        | TRUE if all monitor groups have successfully initialized.                  | FALSE         |
| Error        | BOOL        | TRUE if any monitor group is in an unrecoverable error state.              | FALSE         |
| ErrorMessage | STRING(255) | Error description for general errors pertaining to the extension instance. | Blank         |

| <b>Output Name</b>  | <b>Data Type</b> | <b>Description</b>  | <b>Default Value</b> |
|---------------------|------------------|---|----------------------|
| AssetAlert          | BOOL             | TRUE if at least one monitored channel from any defined monitor group is in an alert state.                         | FALSE                |
| AssetWarning        | BOOL             | TRUE if at least one monitored channel from any defined monitor group is experiencing a quality/availability issue. | FALSE                |
| <Group ID 1>_Status | Custom Data Type | Custom data type containing asset health information for all monitored channels in <Group ID 1>.                    |                      |
| ⋮                   | ⋮                | ⋮   | ⋮                    |
| <Group ID n>_Status | Custom Data Type | Custom data type containing asset health information for all monitored channels in <Group ID n>.                    |                      |

Figure 10.2 shows an example of the POU output pins for a scenario where three monitor groups were added to the extension: LineX\_CTs, LineY\_CTs, and LineZ\_CTs.

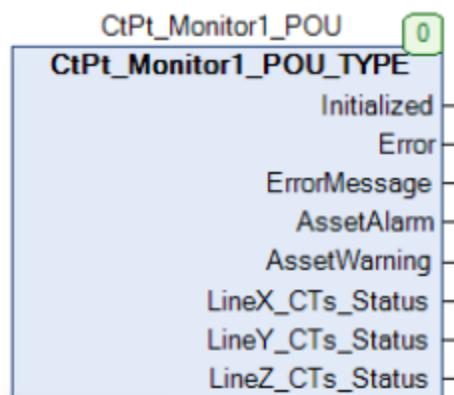

**Figure 10.2 Example CtPt Monitor POU Outputs**

## Definition of Custom Data Types

The extension will dynamically generate data structures that are tailored to each monitor group. For example, the LineX\_CTs\_Status, LineY\_CTs\_Status, and LineZ\_CTs\_Status outputs shown in Figure 10.2 each represent a custom data structure. The purpose of the structure is to contain asset health information for each monitored asset in each monitor group. These custom data structures are formatted as shown in Table 10.26.

**Table 10.26 Custom Data Types Used on CtPt Monitor POU Output**

| <b>Element Name</b> | <b>Data Type</b>       | <b>Description</b>   |
|---------------------|------------------------|--|
| Alert               | BOOL                   | TRUE if any monitored channel in this group is in an alert state.                        |
| Warning             | BOOL                   | TRUE if any monitored channel in this group is experiencing quality/availability issues. |
| Error               | BOOL                   | TRUE if any extension level errors persist (e.g., licensing errors).                     |
| GroupStatus         | struct_CPTGGroupStatus | Additional group-level information about the collection of monitored channels.           |

| Element Name        | Data Type   | Description   |
|---------------------|---|---|
| <CtPtID 1>          | Struct_CtPtStatusOutput   | A dedicated status structure for the first channel added to the <b>Monitored Channels</b> tab for the given monitor group. The element name corresponds to the user-specified <b>CT/PT ID</b> . If the channel is of type CMV and <b>Monitored Channels.Enable CMV Angle Monitoring = TRUE</b> , this CT/PT ID will be applied to two unique structures with <b>_Mag</b> and <b>_Ang</b> identifiers. |
| ⋮                   | ⋮   | ⋮   |
| <CtPtID n>          | Struct_CtPtStatusOutput   | A dedicated status structure for the last channel added to the <b>Monitored Channels</b> tab for the given monitor group. The element name corresponds to the user-specified <b>CT/PT ID</b> . If the channel is of type CMV and <b>Monitored Channels.Enable CMV Angle Monitoring = TRUE</b> , this structure will be replicated for <b>_Mag</b> and <b>_Ang</b> subgroups.                          |
| MonitorAddressArray | ARRAY [1 .. ArrayEndIndex]<br>OF POINTER TO<br>struct_CTPStatusOutput | Array of pointers to elements <CtPtID 1> through <CtPtID n>.  |
| ArrayStartIndex     | UDINT   | Fixed at 1. This is useful when navigating the MonitorAddressArray with a loop.   |
| ArrayEndIndex       | UDINT   | Equal to the number of monitored channels added to the <b>Monitored Channels</b> page for the given monitor group.  |

## General Usage of Custom Data Structures

Each custom data structure contains struct\_CTPStatusOutput structures (defined in *ConditionMonitoring* in the Programming Reference Manual) for channels defined on the **Monitored Channels** tab of each monitor group.

Additionally, a struct\_CTPTGroupStatus structure is included to represent the group level status indicators. This allows status information from the group and each monitored asset to be referenced in subsequent logic via dot notation as follows:

```
ExtensionInstance_POU.GroupID_Status.CtPTID.<Element from  
struct_CTPStatusOutput>
```

## Advanced Usage of Custom Structures

Asset health information for a given monitor group can be accessed programmatically by using the MonitorAddressArray, ArrayStartIndex, and ArrayEndIndex in a FOR or WHILE loop.

## Usage of struct\_CTPStatusOutput


For each monitor group defined in the extension, the associated POU provides an output structure containing status information for each asset specified on the **Monitored Channels** page. This status structure is detailed in the Programming Reference Manual as a part of the ConditionMonitoring library.

## Usage of struct\_CTPGroupStatus

The struct\_CTPGroupStatus is intended to provide group level indicators for the full collection of channels defined on the **Monitored Channels** page. This status structure is detailed in the Programming Reference Manual as a part of the ConditionMonitoring library.

### Example 1: Four-CT Line

This example demonstrates the necessary configuration to monitor four redundant CT sets (all phases) for the topology example shown in *Figure 10.3*.

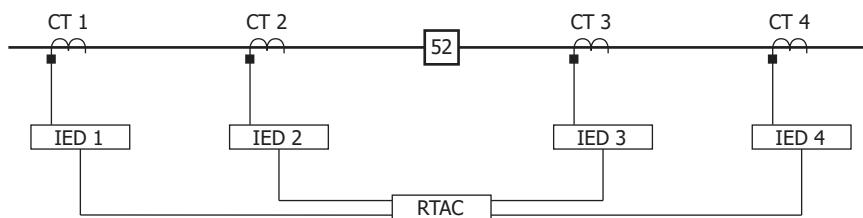

**Figure 10.3** Line With Four Redundant CT Sets

### Objective

Monitor the health of Phase A, B, and C for CT Groups 1–4. Monitor magnitudes only.


### Assumptions

1. IEDs 1–4 are SEL-421 relays.
2. The X terminal of each IED is wired to each respective CT.
3. IED data are streamed to the RTAC via IEEE C37.118 protocol.
4. C37.118 clients are added to the RTAC project (each with a single PMU dataset).
5. C37.118 client PMUs are named SEL\_421\_n\_IEDn, where  $n = 1\text{--}4$ .
6. The line monitored by IEDs 1–4 is referred to as Line\_1.
7. The minimum current to consider the line active is 30 A.
8. Phase angles are disregarded.

### Method

Perform the following to use a single monitor group from a single instance of the extension to track the health of Phases A, B, and C for all four CT sets.

- Step 1. Configure four C37.118 clients.
- Step 2. Add an instance of the CtPt Monitor extension via the **Insert** menu and **Extensions** button.
- Step 3. Select + on the **Monitor Groups** tab to add a new monitor group row, as shown in *Figure 10.4*.

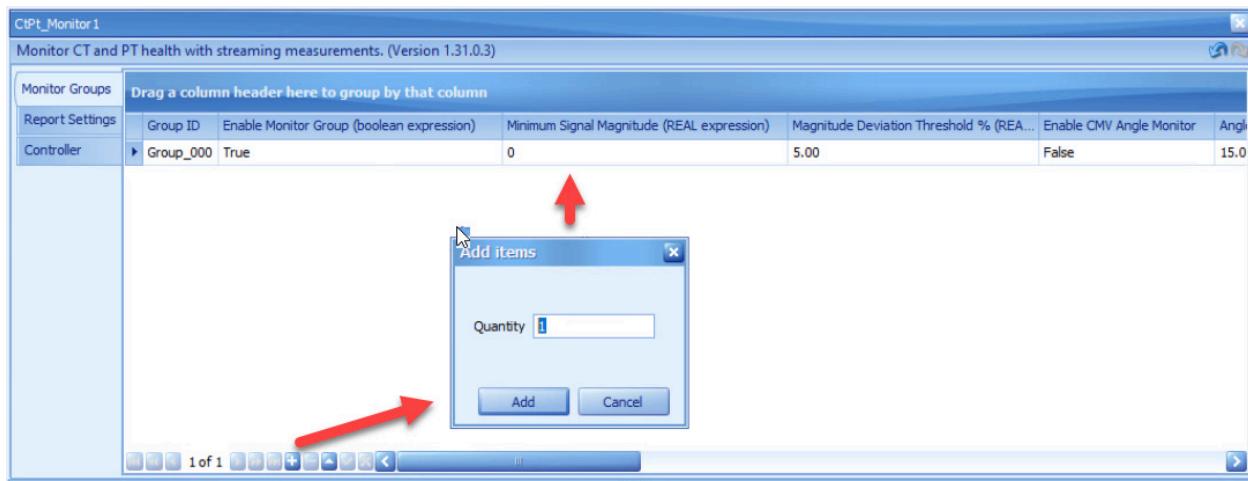


**Figure 10.4 Add a Monitor Group for All CTs on the Line**

Step 4. Configure the new monitor group with the settings shown in *Table 10.27*.

**Table 10.27 CtPt Monitor Example 1 Monitor Group Settings**

| Setting Name                  | Example Setting   | Notes  |
|-------------------------------|---|--|
| GroupID                       | Line_1_CTs  | Descriptor for the redundant CT group  |
| Enable Monitor Group          | NOT (SEL_421_1_C37_118_POU.Offline<br>OR SEL_421_2_C37_118_POU.Offline<br>OR SEL_421_3_C37_118_POU.Offline OR<br>SEL_421_4_C37_118_POU.Offline) | Enables monitor group only if all data streams are established   |
| Minimum Signal Magnitude      | 30  |  |
| Magnitude Deviation Threshold | 5.00  | Alert on greater than 5 percent variance in the CT magnitude values  |
| Enable CMV Angle Monitor      | False   |  |
| Angle Deviation Threshold     | NA  |  |
| Alert Pickup/Dropout Time     | 60  |  |
| Chatter Threshold             | 10  |  |
| Monitor Mode                  | Relative Reference  |  |
| Enable Time-Alignment         | False   | Time alignment is not needed because the RTAC already time-aligns all C37.118 client streams prior to data entry into the logic engine |
| Data Rate                     | NA  |  |
| Maximum Wait-Time             | NA  |  |
| Log To SOE                    | Alerts  |  |
| Log To Report Files           | False   |  |
| Output Group Alert Tag        | NA  |  |
| Output Group Warning Tag      | NA  |  |

Step 5. Open the subitem labeled **Line\_1\_CTs**, as shown in *Figure 10.5*.

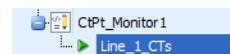**Figure 10.5 Select the Child Page for the Line\_1\_CTs Group**

Step 6. On the **Monitored Channels** tab, select the + button and add 12 rows.

Step 7. Configure the settings for the 12 rows, as shown in *Figure 10.6*.

| Reference Channels | Drag a column header here to group by that column |                                   |                   |       |                        |                   |             |
|--------------------|---|-----------------------------------|-------------------|-------|------------------------|-------------------|-------------|
| Monitored Channels | CtPt ID   | Channel Source Tag (CMV, MV, INS) | Channel Data Type | Phase | Magnitude Scale Factor | Angle Rotation... | Node (1-64) |
|                    | CT1_A   | SEL_421_1_IED1.IAXPM              | CMV               | A     | 1.0                    |                   |             |
|                    | CT2_A   | SEL_421_2_IED2.IAXPM              | CMV               | A     | 1.0                    |                   |             |
|                    | CT3_A   | SEL_421_3_IED3.IAXPM              | CMV               | A     | 1.0                    |                   |             |
|                    | CT4_A   | SEL_421_4_IED4.IAXPM              | CMV               | A     | 1.0                    |                   |             |
|                    | CT1_B   | SEL_421_1_IED1.IBXPM              | CMV               | B     | 1.0                    |                   |             |
|                    | CT2_B   | SEL_421_2_IED2.IBXPM              | CMV               | B     | 1.0                    |                   |             |
|                    | CT3_B   | SEL_421_3_IED3.IBXPM              | CMV               | B     | 1.0                    |                   |             |
|                    | CT4_B   | SEL_421_4_IED4.IBXPM              | CMV               | B     | 1.0                    |                   |             |
|                    | CT1_C   | SEL_421_1_IED1.ICXPM              | CMV               | C     | 1.0                    |                   |             |
|                    | CT2_C   | SEL_421_2_IED2.ICXPM              | CMV               | C     | 1.0                    |                   |             |
|                    | CT3_C   | SEL_421_3_IED3.ICXPM              | CMV               | C     | 1.0                    |                   |             |
|                    | CT4_C   | SEL_421_4_IED4.ICXPM              | CMV               | C     | 1.0                    |                   |             |

**Figure 10.6 Configure Monitored Channels for Line\_1\_CTs Group**

Each channel added to the **Monitored Channels** tab will correspond to a status structure that is available as an output of the CtPt Monitor POU.

Step 8. Map status output indicators from the POU output to the desired target. Examples include:

- ▶ Virtual Tag List for use with an RTAC HMI
- ▶ SCADA protocol map (DNP, Modbus, etc.)
- ▶ Direct reference in a Report Generator extension instance for building custom asset health reports
- ▶ Log asset status to the RTAC SOE

*Figure 10.7* shows the POU output structure for this example as viewed from the **Controller** tab.

| Expression            | Type                       | Value          |
|-----------------------|----------------------------|----------------|
| CtPt_Monitor1_POU     | CtPt_Monitor1_POU_T...     | TRUE           |
| Initialized           | BOOL                       | TRUE           |
| Error                 | BOOL                       | FALSE          |
| ErrorMessage          | STRING(255)                | "              |
| AssetAlarm            | BOOL                       | FALSE          |
| AssetWarning          | BOOL                       | FALSE          |
| Line_1_CTs_Status     | struct_Line_1_CTs          |                |
| Alert                 | BOOL                       | FALSE          |
| Warning               | BOOL                       | FALSE          |
| Error                 | BOOL                       | FALSE          |
| StatusDescription     | STRING(255)                | 'No Deviation' |
| + GroupStatus         | ConditionMonitoring.str... |                |
| + CT1_A               | ConditionMonitoring.str... |                |
| CtPtID                | STRING(255)                | 'CT1_A'        |
| Phase                 | ENUM_PHASEID               | PHASE_A        |
| MonitorEnabled        | BOOL                       | TRUE           |
| + Alert               | SPS                        |                |
| AlertMag              | REAL                       | 0              |
| PercentDeviation      | REAL                       | -3.43688226    |
| AngleDeviation        | REAL                       | 0              |
| ReferenceMeasurement  | REAL                       | 504.333344     |
| QualityAlert          | BOOL                       | FALSE          |
| MonitorGroup          | STRING(255)                | '1,2,3,4,5,'   |
| Status                | STRING(255)                | 'NO_DEVIATION' |
| + CT2_A               | ConditionMonitoring.str... |                |
| + CT3_A               | ConditionMonitoring.str... |                |
| + CT4_A               | ConditionMonitoring.str... |                |
| + CT1_B               | ConditionMonitoring.str... |                |
| + MonitorAddressArray | ARRAY [1..5] OF POIN...    |                |
| ArrayStartIndex       | UDINT                      | 1              |
| ArrayEndIndex         | UDINT                      | 5              |

Figure 10.7 POU Output Status Indicators

## Example 2: Three-CT Monitoring Group With Applied Scaling for Transformer Low-Side CT

This example demonstrates the necessary configuration to monitor two redundant CT sets (all phases) against a known-good CT set and incorporates scaling to factor out an intermediate transformer. *Figure 10.8* shows the topology for this example.

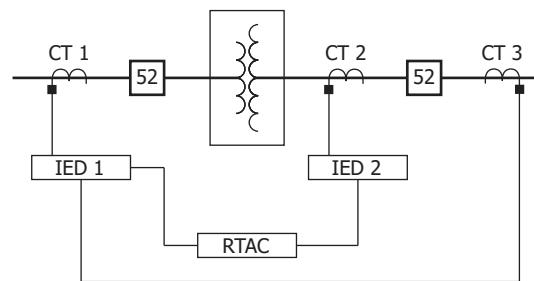


Figure 10.8 CT Monitoring Group With Applied Scaling for Transformer Low-Side CTs

## Objective

Monitor the health of Phase A, B, and C for CT 1 and CT 3 by using CT 2 as a defined reference. Monitor magnitude and angle.

## Assumptions

1. IED 1 and IED 2 are SEL-421 relays that correspond to SEL\_421\_1\_SEL and SEL\_421\_2\_SEL in this example RTAC configuration, respectively.
2. CT 2 is used as a known-good reference against which CT 1 and CT 3 will be monitored.
3. IED data are streamed to the RTAC over SEL Fast Meter protocol at polling rate of 1 message/second.
4. The line monitored by IED 1 and IED 2 is referred to as Line\_2.
5. The minimum (post-scaled) current to consider the line active is 30 A.
6. Transformer turns ratio: 1:100. This corresponds to a current scaling ratio of 1:0.01.
7. The transformer is Delta-Wye connected, incurring a 30-degree phase shift.

## Method

Perform the following to use a single monitor group from a single instance of the extension to track the health of Phases A, B, and C for CT 1 and CT 3.

- Step 1. Configure two SEL clients in the RTAC project.
- Step 2. Add an instance of the CtPt Monitor extension via the **Insert** menu and **Extensions** button.
- Step 3. Select + on the **Monitor Groups** tab to add a new monitor group row, as shown in *Figure 10.4*. Add a single monitor group for all CTs on the line.
- Step 4. Configure the new monitor group with the settings shown in *Table 10.28*.

**Table 10.28 CtPt Monitor Example 2 Monitor Group Settings**

| Setting Name                  | Example Setting  | Notes  |
|-------------------------------|--|--|
| GroupID                       | Line_2_CTs   | Descriptor for the redundant CT group  |
| Enable Monitor Group          | NOT<br>(SEL_421_1_SEL_POU.Offline<br>OR SEL_421_2_<br>SEL_POU.Offline) | Reference to a Boolean value defined in a separate program   |
| Minimum Signal Magnitude      | 30   |  |
| Magnitude Deviation Threshold | 5.00   | Alert on greater than 5 percent variance in the CT magnitude values  |
| Enable CMV Angle Monitor      | True   |  |
| Angle Deviation Threshold     | 5  | Alert on greater than 5 degrees variance in the CT angle values  |
| Alert Pickup/Dropout Time     | 60   |  |
| Chatter Threshold             | 10   |  |
| Monitor Mode                  | Defined Reference  |  |
| Enable Time-Alignment         | True   | Time alignment is applied in this example to guarantee time coherence between IED 1 and IED 2 measurements |
| Data Rate                     | 1  | samples/second   |

| Setting Name             | Example Setting   | Notes        |
|--------------------------|-------------------|--------------|
| Maximum Wait-Time        | 3000              | milliseconds |
| Log To SOE               | Alerts + Warnings |              |
| Log To Report Files      | False             |              |
| Output Group Alert Tag   | NA                |              |
| Output Group Warning Tag | NA                |              |

Step 5. Open the subitem labeled **Line\_2\_CTs**, as shown in *Figure 10.9*.



**Figure 10.9 Select the Child Page for the Line\_2\_CTs Group**

Step 6. On the **Monitored Channels** tab, select the + button and add six rows.

Step 7. Configure the settings for the six rows, as shown in *Figure 10.10*.

| Line_2_Cts         |   |                                   |                   |       |                        |   |             |
|--------------------|---|-----------------------------------|-------------------|-------|------------------------|---|-------------|
| Reference Channels | Drag a column header here to group by that column |                                   |                   |       |                        |   |             |
|                    | CtPt ID   | Channel Source Tag (CMV, MV, INS) | Channel Data Type | Phase | Magnitude Scale Factor | Angle Rotation Factor (-180 to 180 Degrees) | Node (1-64) |
|                    | CT1_A   | SEL_421_1_SEL.FM_INST_IA1         | CMV               | A     | 0.01                   | 30  |             |
|                    | CT1_B   | SEL_421_1_SEL.FM_INST_IB1         | CMV               | B     | 0.01                   | 30  |             |
|                    | CT1_C   | SEL_421_1_SEL.FM_INST_IC1         | CMV               | C     | 0.01                   | 30  |             |
|                    | CT3_A   | SEL_421_1_SEL.FM_INST_IA2         | CMV               | A     | 1.0                    | 0.0   |             |
|                    | CT3_B   | SEL_421_1_SEL.FM_INST_IB2         | CMV               | B     | 1.0                    | 0.0   |             |
|                    | ▶ CT3_C   | SEL_421_1_SEL.FM_INST_IC2         | CMV               | C     | 1.0                    | 0.0   |             |

**Figure 10.10 Configure Monitored Channels for Line\_2\_CTs Group**

Step 8. On the **Reference Channels** tab, select the + button and add three rows.

Step 9. Configure the settings for the three rows, as shown in *Figure 10.11*.

| Line_2_Cts         |   |                   |       |                        |
|--------------------|---|-------------------|-------|------------------------|
| Reference Channels | Drag a column header here to group by that column |                   |       |                        |
|                    | Channel Source Tag (CMV, MV, INS)                 | Channel Data Type | Phase | Magnitude Scale Factor |
|                    | SEL_421_2_SEL.FM_INST_IA1                         | CMV               | A     | 1.0                    |
|                    | SEL_421_2_SEL.FM_INST_IB1                         | CMV               | B     | 1.0                    |
|                    | ▶ SEL_421_2_SEL.FM_INST_IC1                       | CMV               | C     | 1.0                    |

**Figure 10.11 Configure Reference Channels for Line\_2\_CTs Group**


#### NOTE

Only channels defined in the **Monitored Channels** tab will correspond to status structures on the POU output. Reference channels do not have a corresponding status structure.

Step 10. Map status output indicators from the POU output to the desired target, as described in *Example 1: Four-CT Line* on page 777.

## Example 3: PT Monitoring Over a Breaker-and-a-Half Scheme

This example demonstrates the necessary configuration to monitor six redundant PT sets (all phases) for the topology example shown in *Figure 10.12*.

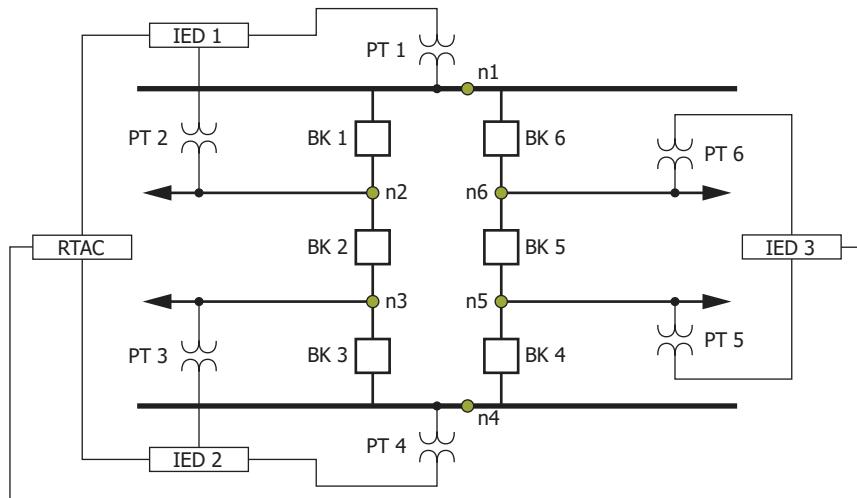

**Figure 10.12 PT Monitoring Over a Breaker-and-a-Half Scheme**

## Objectives

- ▶ Monitor the health of Phase A, B, and C for PTs 1–6, incorporating breaker status from three-phase breaker sets BK 1–6.
- ▶ Monitor magnitude and angle.
- ▶ Configure automated report generation.
- ▶ Map group status tags to an HMI tag list.

## Assumptions

1. IEDs 1–3 are SEL-451 relays.
2. The Z and Y terminals of each IED are wired to a unique PT.
3. IED data are streamed to the RTAC over the IEEE C37.118 protocol.
4. C37.118 clients are added to the RTAC project, each with a single PMU dataset.
5. C37.118 client PMUs are named SEL\_451\_n\_IEDn, where n = 1–3.
6. Three-phase breaker status is monitored by IED 1 and transmitted to the RTAC as six digital channels within the C37.118 stream.
7. A global variable list called GVL1 is defined and contains a variable of type REAL, called Vnominal, which defines the nominal voltage of the system.
8. A virtual tag list called HMI\_Tags is defined and contains two SPS tags: Station\_A\_PT\_Monitor\_Warning and Station\_A\_PT\_Alarms.

## Method

Perform the following to configure a single CtPt monitor group to monitor all PTs in a breaker-and-a-half scheme.

- Step 1. Configure three C37.118 clients.
- Step 2. Add an instance of the CtPt Monitor extension via the **Insert** menu and **Extensions** button.
- Step 3. Select + on the **Monitor Groups** tab to add a new monitor group row, as shown in the previous examples.
- Step 4. Configure the new monitor group with the settings shown in *Table 10.29*.

**Table 10.29 CtPt Monitor Example 3 Monitor Group Settings**

| Setting Name                  | Example Setting  | Notes  |
|-------------------------------|--|--|
| GroupID                       | StationA_Pts   | Descriptor for the redundant PT group  |
| Enable Monitor Group          | NOT (SEL_4521_1_C37_118_POU.Offline OR SEL_451_2_C37_118_POU.Offline OR SEL_451_3_C37_118_POU.Offline) | Enables monitor group only if all data streams are established   |
| Minimum Signal Magnitude      | 0.1*GVL1.Vnominal  |  |
| Magnitude Deviation Threshold | 5.00   | Alert on greater than 5 percent variance in the PT magnitude values  |
| Enable CMV Angle Monitor      | True   |  |
| Angle Deviation Threshold     | 5  | Alert on greater than 5 degrees variance in the PT angle values  |
| Alert Pickup/Dropout Time     | 60   |  |
| Chatter Threshold             | 10   |  |
| Monitor Mode                  | Relative With Topology   |  |
| Enable Time-Alignment         | False  | Time alignment is not needed because the RTAC already time-aligns all C37.118 client streams prior to data entry into the logic engine |
| Data Rate                     | NA   |  |
| Maximum Wait-Time             | NA   |  |
| Log To SOE                    | Alerts + Warnings  |  |
| Log To Report Files           | True   |  |
| Output Group Alert Tag        | HMI_Tags.Station_A_PT_Alarms   |  |
| Output Group Warning Tag      | HMI_Tags.Station_A_PT_Monitor.Warning  |  |

- Step 5. Configure the **Report Settings** tab as desired or leave the default settings.
- Step 6. Open the subitem labeled **StationA\_Pts**.
- Step 7. On the **Monitored Channels** tab, select the + button and add 18 rows.
- Step 8. Configure the settings for the 18 rows, as shown in *Figure 10.13*.

| Station_A_PTs                  |      |   |                                   |                |       |                        |                 |
|--------------------------------|------|---|-----------------------------------|----------------|-------|------------------------|-----------------|
| Station_A_PTs                  |      | IED1  |                                   |                |       |                        |                 |
| Monitored Channels             |      | Drag a column header here to group by that column |                                   |                |       |                        |                 |
| Breaker/Switch Status Channels |      | CtPt ID   | Channel Source Tag (CMV, MV, INS) | Channel Dat... | Phase | Magnitude Scale Factor | Angle Rotati... |
|                                | PT1A | SEL_451_1IED1.VAZPM                               | CMV                               | A              | 1.0   | 0.0                    | 1               |
|                                | PT2A | SEL_451_1IED1.VAYPM                               | CMV                               | A              | 1.0   | 0.0                    | 2               |
|                                | PT3A | SEL_451_2IED2.VAZPM                               | CMV                               | A              | 1.0   | 0.0                    | 3               |
|                                | PT4A | SEL_451_2IED2.VAYPM                               | CMV                               | A              | 1.0   | 0.0                    | 4               |
|                                | PT5A | SEL_451_3IED3.VAZPM                               | CMV                               | A              | 1.0   | 0.0                    | 5               |
| ▶                              | PT6A | SEL_451_3IED3.VAYPM                               | CMV                               | A              | 1.0   | 0.0                    | 6               |
|                                | PT1B | SEL_451_1IED1.VBZPM                               | CMV                               | B              | 1.0   | 0.0                    | 1               |
|                                | PT2B | SEL_451_1IED1.VBYPM                               | CMV                               | B              | 1.0   | 0.0                    | 2               |
|                                | PT3B | SEL_451_2IED2.VBZPM                               | CMV                               | B              | 1.0   | 0.0                    | 3               |
|                                | PT4B | SEL_451_2IED2.VBYPM                               | CMV                               | B              | 1.0   | 0.0                    | 4               |
|                                | PT5B | SEL_451_3IED3.VBZPM                               | CMV                               | B              | 1.0   | 0.0                    | 5               |
|                                | PT6B | SEL_451_3IED3.VBYPM                               | CMV                               | B              | 1.0   | 0.0                    | 6               |
|                                | PT1C | SEL_451_1IED1.VCZPM                               | CMV                               | C              | 1.0   | 0.0                    | 1               |
|                                | PT2C | SEL_451_1IED1.VCYPM                               | CMV                               | C              | 1.0   | 0.0                    | 2               |
|                                | PT3C | SEL_451_2IED2.VCZPM                               | CMV                               | C              | 1.0   | 0.0                    | 3               |
|                                | PT4C | SEL_451_2IED2.VCYPM                               | CMV                               | C              | 1.0   | 0.0                    | 4               |
|                                | PT5C | SEL_451_3IED3.VCZPM                               | CMV                               | C              | 1.0   | 0.0                    | 5               |
|                                | PT6C | SEL_451_3IED3.VCYPM                               | CMV                               | C              | 1.0   | 0.0                    | 6               |

**Figure 10.13 Configure Monitored Channels for StationA\_PTs Group**

Step 9. On the **Breaker/Switch Status Channels** tab, select the + button and add six rows.

Step 10. Configure the settings for the six rows, as shown in *Figure 10.14*.

| Station_A_PTs                  |                     |   |                   |       |               |               |
|--------------------------------|---------------------|---|-------------------|-------|---------------|---------------|
| Monitored Channels             |                     | Drag a column header here to group by that column |                   |       |               |               |
| Breaker/Switch Status Channels |                     | Status Tag (SPS)                                  | Channel Data Type | Phase | Node 1 (1-64) | Node 2 (1-64) |
|                                | SEL_451_1IED1.B52A1 | SPS   | 3P                | 1     | 2             |               |
|                                | SEL_451_1IED1.B52A2 | SPS   | 3P                | 2     | 3             |               |
|                                | SEL_451_1IED1.B52A3 | SPS   | 3P                | 3     | 4             |               |
|                                | SEL_451_1IED1.B52A4 | SPS   | 3P                | 4     | 5             |               |
|                                | SEL_451_1IED1.B52A5 | SPS   | 3P                | 5     | 6             |               |
| ▶                              | SEL_451_1IED1.B52A6 | SPS   | 3P                | 6     | 1             |               |

**Figure 10.14 Configure Breaker Status Channels for StationA\_PTs Group**

Step 11. StationA\_Pts status indicators can now be observed in the following locations:

- ▶ CtPt\_Monitor1\_POU.Station\_A\_PTs\_Status
- ▶ HMI\_Tags Virtual Tag List
- ▶ RTAC SOE Log
- ▶ RTAC File System

# Digital Fault Recorder

## Overview

The Digital Fault Recorder (DFR) extension automates the process of creating an RTAC project for DFR applications. It is used with SEL-2241-2, SEL-3555/3560, and SEL-3350 RTAC models and uses Axion nodes containing EtherCAT IO modules with measurements of voltages and currents of substation assets. The Digital Fault Recorder extension requires a project version of R152 or higher.

## Theory of Operation

The Digital Fault Recorder extension is configured based on the concept of substation assets. Substation assets are defined as either a bus, generic asset, single-channel, or a transmission line. Bus assets provide only voltage measurements; generic and transmission line assets provide voltage and current measurements. Single-channel assets are used for miscellaneous voltage and current channel terminations that do not fit into the three-phase power paradigm specified by SEL\_PRCTPT modules (e.g., neutral current measurements).

The overall workflow of the extension is as follows:

- Step 1. Insert the Digital Fault Recorder extension into the project.
- Step 2. Configure General settings with overall DFR parameters.
- Step 3. Configure Axion nodes with chassis and module layout.
- Step 4. Configure bus, generic, single-channel, and transmission line substation assets by associating them with SEL\_PRCTPT modules defined in the Axion node configuration and setting desired trigger conditions.
- Step 5. Optionally configure digital input, digital output, and analog input channels.
- Step 6. Optionally configure Local Monitoring.
- Step 7. Optionally configure user-defined custom analog or digital channels that use tags from elsewhere in the project.
- Step 8. Toggle **Build DFR** to True and save the settings to populate the project with the necessary components to make the RTAC act as a Digital Fault Recorder.

## Features

RTAC project components added and configured by the Digital Fault Recorder extension include the following:

- Axion EtherCAT modules.
- SEL\_PRCTPT modules configured with required settings and tags for voltage and current measurements.
- An EtherCAT IO network.
- Tag lists for bus, generic, single-channel, and transmission line substation assets.
- Live Data view for substation asset tags.

- Recording Trigger instances to provide high and low trigger ranges for all enabled asset triggers for voltage, current, sequence component, frequency, power measurements, and harmonics.
- A Recording Group instance to enable high-resolution COMTRADE event record generation for all SEL\_PRCTPT measurement points associated with assets as well as enabled digital input channels on SEL\_24DI or SEL\_32DI modules.
- For SEL-3350 and SEL-3555/3560 projects, a Continuous Recording Group instance to enable optional logging of 3 kHz channel data from SEL\_PRCTPT modules used on any asset, enabled digital input channels on SEL\_24DI and SEL\_32DI modules, and phasor measurement data points from all assets.
- Local Monitoring logic to provide DFR status indications to local annunciation points such as auxiliary LEDs and digital output contacts.
- User-defined custom channel logic to map status and analog tags from elsewhere in the project into DFR triggers, Recording Group custom channels, Continuous Recording Group custom channels, and SOE logging. Tags configured in custom channels that are determined to exist in the automation task will cause generation of logic that uses the CrossTaskData library to transfer the values of those tags to the main Task for use in the DFR.
- RTAC SOE logging of all digital inputs, digital outputs, and asset trigger conditions. (You can optionally configure the logged SOE reports to be written out to CSV file(s) in the RTAC File Manager.)
- Logic to detect fault events and automatically calculate single-ended fault location for transmission line assets with **Enable Fault Location** set to True. Calculation results are logged into managed CSV files in the RTAC's File Manager.
- C37.118 server output of all phasors associated with substation assets.
- Organization of all configured project components into a managed **Digital Fault Recorder** folder in the project tree.

## Settings

### General Settings

The **General Settings** tab is used to configure various parameters that are used throughout the DFR project and to build the DFR project settings based on the extension settings. *Table 10.30* provides a summary of these settings.

**Table 10.30 General Settings Names and Descriptions**

| Setting Name             | Description  |
|--------------------------|--|
| Build DFR                | Boolean (true or false). Set this value to True and save the project to build the DFR settings.  |
| System Nominal Frequency | 50 or 60 (Hz). The nominal frequency of the Digital Fault Recorder.  |
| System Phase Rotation    | ABC or ACB. The phase rotation of all substation assets. During a Build DFR operation, this value is assigned to all SEL_PRCTPT modules.                     |
| Station Name             | String (as many as 64 characters). Name of the substation or the location that the DFR is monitoring. Used in the COMTRADE event records configuration file. |
| Company Name             | String (as many as 64 characters). Name of the company or DFR owner. Used in the COMTRADE event records configuration file.                                  |

| Setting Name                     | Description  |
|----------------------------------|--|
| Minimum Live Voltage             | 0–100 (%). The minimum voltage, as a percentage of an asset's nominal voltage, required to enable recording trigger conditions that are only valid when voltage measurements are present. For a bus asset, these are frequency triggers; for a transmission line asset, these are frequency and power triggers.  |
| Store DFR events in SOE Log      | Boolean (true or false). Set this value to True to record RTAC digitals and trigger conditions in the RTAC's SOE log.  |
| Generate SOE Log CSV Files       | Boolean (true or false). Set this value to True to generate text-based CSV files on the RTAC file system that contain RTAC SOE log entries.  |
| SOE Log CSV File Contents        | All or Filtered. Set to All to include all RTAC SOE records in the CSV file or to Filtered to only include Digital Inputs and Custom Channel Digitals with a Filtered SOE CSV value of True.   |
| Enable Local DFR Monitoring      | Boolean (true or false). Set this value to True to enable local monitoring of the status of the DFR with output to RTAC auxiliary LEDs and digital output contacts.  |
| Enable Synchrophasor Server      | Boolean (true or false). Set this value to True to enable PMU output for all configured assets via an IEEE C37.118 Synchrophasor Server.   |
| Synchrophasor Server PDC ID      | Integer (1–65534). PDC ID assigned to the managed IEEE C37.118 Synchrophasor Server.   |
| Enable Custom Channels           | Boolean (true or false). Set this value to True to enable configuration of user-defined custom digital and analog channels for triggers and inclusion in DFR COMTRADE and SOE records.   |
| Include High-Resolution Channels | Boolean (true or false). Set this value to True to include high-resolution 3 kHz analog channels in the Continuous Recording records. Each 3 kHz channel will consume approximately 600–700 MB of disk space per day. Setting this to False saves disk space and allows for longer retention durations on smaller drives. This setting is only enabled on SEL-3350 or SEL-3555/3560 projects.                          |
| Include PMU Channels             | Boolean (true or false). Include PMU Channels in the Continuous Recording records. This setting is only enabled on SEL-3350 or SEL-3555/3560 projects.   |
| PMU Data Rate                    | 30/60/120 or 25/50/100 (messages/second). Data Rate assigned to logged PMU channels and, optionally, the IEEE C37.118 Synchrophasor Server. Rates of 30/60/120 are for a nominal frequency of 60 Hz, and rates of 25/50/100 are for 50 Hz.   |
| Data Retention Duration          | Integer between 1 and 365 (days). The retention period for Continuous Recording data. Continuous Recording data are deleted from the RTAC once the age of the data exceed that specified by the retention period. If total disk space remaining is less than 4 GB before reaching the retention period, the oldest data are automatically deleted. This setting is only enabled on SEL-3350 or SEL-3555/3560 projects. |
| Recording Rate                   | 1, 2, 4, 8, or 24 (kHz). Fault record recording rate in kHz. Must be set to 24 kHz to enable fault location features.  |
| Recording Length Min.            | Real number between 0.5 and <i>max</i> (seconds; where <i>max</i> = 576 / <b>Recording Rate</b> ). The minimum length of the fault oscillography capture.  |
| Recording Length Max.            | Real number between the value of <b>Recording Length Min.</b> and <i>max</i> (seconds; where <i>max</i> = 576 / <b>Recording Rate</b> ). The maximum length of the fault oscillography capture.  |
| Pre-Trigger Length               | Real number between 0.05 and the value of <b>Recording Length Min.</b> (seconds). The pre-trigger length of the fault oscillography capture.   |
| Configure DFR Extension From CSV | Use the browse button to populate this field with a path to a valid CSV file containing a DFR configuration.   |
| EtherCAT Bandwidth Usage         | Estimated percentage of EtherCAT bandwidth utilization given the current node/asset configuration. Must remain under 100% to allow DFR settings build operations.  |

## Node Configuration

The **Node Configuration** tab allows configuration of an EtherCAT IO Network of as many as 16 Axion nodes. These nodes are configured in a tabular format in which each row is populated with Axion IO modules to match your specific hardware. During a Build DFR operation, the extension node configuration is used to automatically add IO modules to the project and attach them to the EtherCAT IO network. This automation removes the manual process of adding Axion IO modules and configuring the EtherCAT IO network. Specifics of node configuration via the DFR extension are as follows:

- ▶ Each node can be configured as a 10- or 4-slot Axion chassis.
- ▶ Each node added to the configuration is represented as a subitem on the DFR extension, named from **Node\_1** to **Node\_16**. To generate default settings on a new node subitem, save your settings after adding each node to the Node Configuration tab.
- ▶ When added to the DFR extension settings, each node in an SEL-3350 or SEL-3555/3560 project is populated with a Power Coupler module (SEL-2243) in Slot A. Power Couplers can also be added to Slots B and C. In SEL-2241-2 projects, an SEL\_2241\_2\_RTAC module is added to Slot A of the first node and a Power Coupler is added to Slot B. Subsequent nodes have a Power Coupler added to Slot A.
- ▶ Modules of each supported type can be added to the node configuration so long as the EtherCAT Bandwidth Usage calculation remains under 100 percent. A maximum of 60 modules can be added to a single project, depending on the selection of modules and their usage across the Substation Assets.
- ▶ Slots B–J allow for configuration of the following module types:
  - ▶ SEL\_PRCTPT (SEL-2245-42; the associated CT ratio, PT ratio, and PT connection are assigned to the module on the node subitem).
  - ▶ SEL\_32DI (SEL-2244-4)
  - ▶ SEL\_24DI (SEL-2244-2)
  - ▶ SEL\_16DO (SEL-2244-3)
  - ▶ SEL\_10DO (SEL-2244-5)
  - ▶ SEL\_CTPT (SEL-2245-4)
  - ▶ SEL\_CTEA (SEL-2245-411)
  - ▶ SEL\_AIER (SEL-2245-22)
  - ▶ SEL\_4LEA (SEL-2245-221)
  - ▶ SEL\_16AI (SEL-2245-2)
  - ▶ SEL\_8AO (SEL-2245-3)
- ▶ If the configured module type supports multiple variants (Power Coupler, SEL\_32DI, SEL\_24DI, SEL\_16DO, SEL\_10DO), the module variant field is configurable.
- ▶ Each module has a configurable name that must meet the following rules:
  - ▶ Maximum length of 16 characters
  - ▶ Must be unique

- Must use tag name compliant patterns (i.e., only alphanumeric characters and underscores are allowed; underscores must not be sequential)
- Must not have a leading or trailing underscore
- If an SEL\_24DI or SEL\_32DI digital input module is added to the node configuration, a **DigitalInputs** subitem is added to the DFR extension. This subitem contains either 24 or 32 fixed rows, respectively, representing the inputs belonging to each digital input module in the configuration. Each input has the following configurable items:
  - Input enable/disable
  - A channel name that gets applied to the input in the fault record and Continuous Recording COMTRADE records as well as SOE logs and live data
  - Input voltage type of DC or AC
  - Pickup and dropout timers
  - A trigger enable/disable and trigger type that controls whether a rising edge, falling edge, or transition of an input triggers a fault record
  - A setting to control whether this individual digital input is included in filtered SOE Log CSV File output
- If an SEL\_16DO or SEL\_10DO module is added to the node configuration, a **DigitalOutputs** subitem is added to the DFR extension. This subitem contains 16 or 10 fixed rows, respectively, representing the outputs belonging to each SEL\_16DO or SEL\_10DO module in the configuration. Each output has the following configurable items:
  - Output enable/disable
  - A channel name that gets applied to the output in the fault record and Continuous Recording COMTRADE records as well as SOE logs and live data
- If an SEL\_AIER analog input module is added to the node configuration, an **AnalogInputs** subitem is added to the DFR extension. This subitem contains four fixed rows representing the four DC analog inputs belonging to each SEL\_AIER module in the configuration. Each input has the following configurable items:
  - Input enable/disable
  - A channel name that gets applied to the input in the fault record and Continuous Recording COMTRADE records as well as to triggering and live data
  - Physical Low/High and Engineering Units Low/High settings to facilitate scaling of the 0–300 Vdc input to a configurable range
  - A nominal value to use for configuring high and low trigger thresholds against
  - A units value that gets applied to the input in the fault record and Continuous Recording COMTRADE records. The value must consist of 1–32 alphabetic-only characters.
  - Optional high and low triggers with configurable thresholds that are a percentage-based reference to the nominal value
  - Trigger pickup time delay, hysteresis, and trigger type settings to allow for tuning of the trigger behavior

## Substation Assets

The **Substation Assets** tab allows configuration of as many as 64 bus, generic, single-channel, or transmission line substation assets. Specifics of substation asset configuration are as follows:

- Each asset has a configurable name. This name is assigned to a per-asset subitem located on the DFR extension that contains settings specific to this asset. This name must meet the following requirements:
  - Maximum length of 64 characters
  - Must be unique
  - Must use tag name compliant patterns (i.e., only alphanumeric characters and underscores are allowed; underscores must not be sequential)
  - Must not have a leading or trailing underscore
- Each asset can be configured as a bus, generic, single-channel, or transmission line asset. After adding a new asset or changing the asset type of an existing asset, save your settings to generate the settings tables on the asset subitem.

Each bus, generic, single-channel, or transmission line asset supports configuration of a variety of trigger types that are selectively enabled in order to generate a COMTRADE fault record based on the value in question exceeding a high or low trigger limit. Voltage and current triggers are enabled in the DFR by default and sequence component, frequency, and power triggers can be enabled if desired. Voltage, current, and sequence component triggers are configured in percentages based on nominal voltage and maximum load current. Frequency and power triggers are configured in Hz and kilo (kW, kVAr, kVA).

The following asset quantities are available for configuration as a trigger:

- Voltage Triggers
  - VA High and Low (or VAB for delta)
  - VB High and Low (or VBC for delta)
  - VC High and Low (or VCA for delta)
  - VN High (NA for delta)
- Current Triggers
  - IA High
  - IB High
  - IC High
  - IN High
- Sequence Component Triggers
  - V1 High and Low
  - V2 High
  - V0 High (NA for delta)
  - I1 High (transmission line and generic assets only)
  - I2 High (transmission line and generic assets only)
  - I0 High (transmission line and generic assets only)

- ▶ Frequency Triggers
  - Frequency High and Low
  - Rate-of-Change of Frequency - Positive and Negative
- ▶ Power Triggers
  - kW High and Low
  - kVAr High and Low
  - kVA High and Low
- ▶ Harmonic Triggers
  - High limit trigger on harmonic orders 2 to 63
  - High limit trigger on interharmonic subgroups 1 to 62
  - High limit trigger on total harmonic distortion (THD)

If the General setting **Store DFR events in SOE Log** is set to True, any triggers that are generated will produce an entry in the RTAC's SOE log. Optionally configure a pickup delay or hysteresis for each trigger in order to prevent conditions where triggers can chatter.

## Bus Assets

**Bus Assets** are defined as substation assets that only provide voltage measurements. Those voltage measurements are used to optionally provide the following trigger types:

- ▶ Voltage Triggers
- ▶ Sequence Component Triggers
- ▶ Frequency Triggers
- ▶ Harmonic Triggers

The **Settings** tab for a bus asset contains settings that allow for configuration of the asset, as shown in *Table 10.31*.

**Table 10.31 Bus Asset Settings Names and Descriptions**

| Setting Name                         | Description   |
|--------------------------------------|---|
| Primary Voltage Source               | The Axion SEL_PRCTPT module voltage reference for this bus asset.   |
| Secondary Bus Voltage Source         | The Axion module voltage reference for an alternate redundant bus for this asset. Recommended in double-bus, ring-bus, and breaker-and-a-half bus schemes. When all the voltage measurements associated with the primary voltage source module fall below the value of ( <b>Nominal Voltage</b> times <b>Minimum Live Voltage</b> <sup>a</sup> ) for a time period greater than the <b>Voltage Measurement Switchover Time</b> , the asset tags will be populated with the values from the secondary module. Asserting the <b>UseSecondaryBus</b> tag associated with this asset will force the use of the secondary module tags. |
| Voltage Measurement Sswitchover Time | 0.00–5.00 (seconds). The switchover time delay for primary and secondary bus measurements when minimum live voltage is detected.  |
| Nominal Voltage                      | Positive real numbers. The nominal primary fundamental voltage magnitude (kV) of the bus. Input line-to-line voltage for delta-connected PTs or line-to-neutral voltage for wye-connected PTs.  |
| Enable Continuous Recording          | Boolean (true or false). Set this value to True to enable recording of the analog channels and event trigger output of this asset in the Continuous Recording records.  |

<sup>a</sup> This is a General setting defined in Table 10.30.

*Table 10.32* shows the quantities available as tags in an RTAC project for a bus asset configured with a **Primary Voltage Source** of an SEL\_PRCTPT module with a PT connection of Wye.

**Table 10.32 Bus Asset Tags—Wye**

| Tag Name                  | Tag Type | Description   |
|---------------------------|----------|---|
| VA_FUND                   | CMV      | Fundamental Voltage Phase A   |
| VB_FUND                   | CMV      | Fundamental Voltage Phase B   |
| VC_FUND                   | CMV      | Fundamental Voltage Phase C   |
| V0_FUND                   | CMV      | Fundamental Zero-Sequence Voltage   |
| V1_FUND                   | CMV      | Fundamental Positive-Sequence Voltage   |
| V2_FUND                   | CMV      | Fundamental Negative-Sequence Voltage   |
| FREQ                      | MV       | Fundamental Frequency   |
| ROCOF                     | MV       | Fundamental Rate-of-Change of Frequency   |
| VA_PM <sup>a, b</sup>     | CMV      | Voltage Phase A Phasor Measurement  |
| VB_PM <sup>a, b</sup>     | CMV      | Voltage Phase B Phasor Measurement  |
| VC_PM <sup>a, b</sup>     | CMV      | Voltage Phase C Phasor Measurement  |
| V0_PM <sup>a, b</sup>     | CMV      | Zero-Sequence Voltage Phasor Measurement  |
| V1_PM <sup>a, b</sup>     | CMV      | Positive-Sequence Voltage Phasor Measurement  |
| V2_PM <sup>a, b</sup>     | CMV      | Negative-Sequence Voltage Phasor Measurement  |
| FREQ_PM <sup>a, b</sup>   | MV       | Synchrophasor Frequency Measurement   |
| ROCOF_PM <sup>a, b</sup>  | MV       | Synchrophasor Rate of Change of Frequency Measurement   |
| SecondaryBusActive        | SPS      | Indication that the Secondary Bus Voltage Source <sup>c</sup> is active                             |
| UseSecondaryBus           | BOOL     | Input used by external user logic to force the use of the Secondary Bus Voltage Source <sup>c</sup> |
| EventTrigger <sup>a</sup> | BOOL     | Indication that asserts when a trigger associated with this asset has occurred                      |

<sup>a</sup> Tag is included in Continuous Recording records.

<sup>b</sup> Tag is only enabled if the general settings Enable Synchrophasor Server or Include PMU Channels is True.

<sup>c</sup> Defined in Table 10.31.

*Table 10.33* shows the quantities available as tags in an RTAC project for a bus asset configured with a **Primary Voltage Source** of an SEL\_PRCTPT module with a PT connection of Delta.

**Table 10.33 Bus Asset Tags—Delta**

| Tag Name | Tag Type | Description                  |
|----------|----------|------------------------------|
| VAB_FUND | CMV      | Fundamental Voltage Phase AB |
| VBC_FUND | CMV      | Fundamental Voltage Phase BC |
| VCA_FUND | CMV      | Fundamental Voltage Phase CA |

| Tag Name                  | Tag Type | Description   |
|---------------------------|----------|---|
| V1_FUND                   | CMV      | Fundamental Positive Sequence Voltage   |
| V2_FUND                   | CMV      | Fundamental Negative Sequence Voltage   |
| FREQ                      | MV       | Fundamental Frequency   |
| ROCOF                     | MV       | Fundamental Rate of Change of Frequency   |
| VAB_PM <sup>a, b</sup>    | CMV      | Voltage Phase AB Phasor Measurement   |
| VBC_PM <sup>a, b</sup>    | CMV      | Voltage Phase BC Phasor Measurement   |
| VCA_PM <sup>a, b</sup>    | CMV      | Voltage Phase CA Phasor Measurement   |
| V1_PM <sup>a, b</sup>     | CMV      | Positive Sequence Voltage Phasor Measurement  |
| V2_PM <sup>a, b</sup>     | CMV      | Negative Sequence Voltage Phasor Measurement  |
| FREQ_PM <sup>a, b</sup>   | MV       | Synchrophasor Frequency Measurement   |
| ROCOF_PM <sup>a, b</sup>  | MV       | Synchrophasor Rate of Change of Frequency Measurement   |
| SecondaryBusActive        | SPS      | Indication that the Secondary Bus Voltage Source <sup>c</sup> is active                             |
| UseSecondaryBus           | BOOL     | Input used by external user logic to force the use of the Secondary Bus Voltage Source <sup>c</sup> |
| EventTrigger <sup>a</sup> | BOOL     | Indication that asserts when a trigger associated with this asset has occurred                      |

<sup>a</sup> Tag is included in Continuous Recording records.

<sup>b</sup> Tag is only enabled if the general settings Enable Synchrophasor Server or Include PMU Channels is True.

<sup>c</sup> Defined in Table 10.31.

## Transmission Line and Generic Assets

Transmission line and generic assets are defined as substation assets that use voltage and current measurements. Generic assets are functionally identical to transmission line assets but they do not include settings for fault location. Generic assets are intended as a general-purpose placeholder to represent real-world assets such as the following:

- ▶ Transformers
- ▶ Inverters
- ▶ Reactors
- ▶ Capacitor Banks

Voltage and current measurements are used to optionally provide the following trigger types:

- ▶ Voltage Triggers
- ▶ Current Triggers
- ▶ Sequence Component Triggers
- ▶ Frequency Triggers
- ▶ Power Triggers
- ▶ Harmonic Triggers

The **Settings** tab for a transmission line or generic asset contains settings that allow for configuration of the asset, as shown in *Table 10.34*.

**Table 10.34 Transmission Line and Generic Asset Settings Names and Descriptions**

| Setting Name                                       | Description   |
|--|---|
| Line Voltage Source                                | The Axion SEL_PRCTPT module voltage reference for this asset.   |
| Current Measurement Calculation                    | Name(s) of the Axion module(s) used to measure the three-phase current of the asset. See settings below for supported calculations.   |
| Bus Voltage Source                                 | Name of the bus substation asset connected to the asset, which is used to measure the voltage of the transmission line.   |
| Voltage Source for Calculations                    | Line or Bus. The voltage source to use for power and fault location calculations.   |
| Nominal Voltage                                    | Positive real number. The nominal primary fundamental voltage magnitude (kV) of the asset. Input line-to-line voltage for delta-connected PTs or line-to-neutral for wye-connected PTs.   |
| Maximum Load Current                               | Positive real number. The maximum expected load current magnitude of the asset. This value is used as the 100 percent reference for overcurrent triggers.   |
| Enable Continuous Recording                        | Boolean (true or false). Set this value to True to enable recording of the analog channels and event trigger output of this asset in Continuous Recording records.  |
| Enable Fault Location <sup>a</sup>                 | Boolean (true or false). Set this value to True to enable fault location calculations for this asset following fault record generation. If True, when the project is saved, a number of parameters associated with the fault location calculation will enable and become available for configuration. The General setting <b>Recording Rate</b> must be configured as 24 kHz. |
| Positive Sequence Impedance Magnitude <sup>a</sup> | Real number between 0.25 and 1275 (secondary Ohms). Positive-sequence line impedance magnitude.   |
| Positive Sequence Impedance Angle <sup>a</sup>     | Real number between 5 and 90 (degrees). Positive-sequence line impedance angle.   |
| Zero Sequence Impedance Magnitude <sup>a</sup>     | Real number between 0.25 and 1275 (secondary Ohms). Zero-sequence line impedance magnitude.   |
| Zero Sequence Impedance Angle <sup>a</sup>         | Real number between 5 and 90 (degrees). Zero-sequence line impedance angle.   |
| Line Length <sup>a</sup>                           | Positive real number. Length of the transmission line. This value has no specified units and can be entered in either miles or km to produce a fault location output in desired units.  |
| Restraint Factor 0 <sup>a</sup>                    | Real number between 0.02 and 0.5. Ratio of the magnitude of zero-sequence current to the magnitude of the positive-sequence current.  |
| Restraint Factor 2 <sup>a</sup>                    | Real number between 0.02 and 0.5. Ratio of the magnitude of negative-sequence current to the magnitude of the positive-sequence current.  |
| Nominal Current Input Secondary <sup>a</sup>       | 1 or 5. Secondary Nominal Input Current Rating  |
| Time Window <sup>a</sup>                           | Real number between 2 and 24 (seconds). Time window, in seconds, centered on the trigger time, used to calculate fault location.  |
| Secondary Open Pole Current Detection <sup>a</sup> | Real number between 0.05 and 5.00 (amperes). The secondary current level at which the DFR declares a single pole open and blocks fault location calculations.   |

<sup>a</sup> Transmission line assets only.

The **Current Measurement Calculation** setting of a transmission line or generic asset can be assigned to a single SEL\_PRCTPT module or a pair of SEL\_PRCTPT modules. This calculation is useful in breaker-and-a-half substation layouts where the total current of a line requires two measurement points depending on the breaker positions. Any modules used in a calculation

pair can be used one additional time for a calculation on another line asset. If a calculation is enabled, appropriate logic, Recording Group, and Continuous Recording Group settings are generated in order to produce the calculated result. Acceptable calculation formats are as follows:

- ModuleName1+ModuleName2
- ModuleName1–ModuleName2

A transmission line or generic asset can be configured to represent a variety of voltage measurement scenarios. If a line PT is available, configure an available SEL\_PRCTPT module using the **Line Voltage Source** setting. Optionally configure the **Bus Voltage Source** setting to an existing bus asset from the DFR configuration. The **Voltage Source for Calculations** setting can be assigned to either Line or Bus, so a reliable source of three-phase measurements can be used for power and fault location calculations. If three-phase measurements are available from a Line source, that is ideally used for calculations. If, for example, only a single line PT is available, then the Bus Voltage Source is useful for performing the three-phase dependent power and fault location calculations.

If fault location calculations are enabled for a transmission line asset, the calculations are performed following a trigger and the subsequent generation of a new fault record. Calculation results (fault location and type) are made available in the asset-specific tags and are also logged to a CSV report file. This report file is contained in a **FaultLocationCalculations** directory available in the RTAC's file manager and is named in compliance with the COMNAME standard, with the file name containing the time stamp of the record's creation as well as the station name and company name. The columns in the CSV file are named as follows:

- **Timestamp**. The time stamp of the completion of the fault location calculation.
- **Log Type**. A fixed value that always indicates Event.
- **Asset ID**. Matches the name of the transmission line asset on which the calculation was performed.
- **Fault Location**. The calculated fault location result.
- **Fault Type**. The calculated fault type result (e.g., AG).
- **Fault Time**. The trigger time of the fault associated with the location.

*Figure 10.15* shows a sample fault location calculation record file.

|   | A                          | B        | C        | D              | E            | F                          |
|---|----------------------------|----------|----------|----------------|--------------|----------------------------|
| 1 | Timestamp                  | Log Type | Asset ID | Fault Location | Fault Type   | Fault Time                 |
| 2 | 2023-08-19-11:25:02.312148 | Event    | Line1    | 39.989         | BCG          | 2023-08-19-11:16:23.564161 |
| 3 | 2023-08-19-11:25:06.964148 | Event    | Line2    | 0              | NoFaultFound | NA                         |
| 4 | 2023-08-19-11:25:12.212163 | Event    | Line3    | 0              | NoFaultFound | NA                         |
| 5 | 2023-08-19-11:25:16.240149 | Event    | Line4    | 0              | NoFaultFound | NA                         |
| 6 |                            |          |          |                |              |                            |

**Figure 10.15 Sample Fault Location Record File**

*Table 10.35* shows the quantities available as tags in an RTAC project for a transmission line or generic asset configured with a **Line Voltage Source** of an SEL\_PRCTPT module with a PT connection of Wye.

**Table 10.35 Transmission Line and Generic Asset Tags—Wye**

| <b>Tag Name</b>            | <b>Tag Type</b> | <b>Description</b>                                    |
|----------------------------|-----------------|---|
| VA_FUND                    | CMV             | Fundamental Voltage Phase A                           |
| VB_FUND                    | CMV             | Fundamental Voltage Phase B                           |
| VC_FUND                    | CMV             | Fundamental Voltage Phase C                           |
| V0_FUND                    | CMV             | Fundamental Zero-Sequence Voltage                     |
| V1_FUND                    | CMV             | Fundamental Positive-Sequence Voltage                 |
| V2_FUND                    | CMV             | Fundamental Negative-Sequence Voltage                 |
| VA_PM <sup>a, b</sup>      | CMV             | Voltage Phase A Phasor Measurement                    |
| VB_PM <sup>a, b</sup>      | CMV             | Voltage Phase B Phasor Measurement                    |
| VC_PM <sup>a, b</sup>      | CMV             | Voltage Phase C Phasor Measurement                    |
| V0_PM <sup>a, b</sup>      | CMV             | Zero-Sequence Voltage Phasor Measurement              |
| V1_PM <sup>a, b</sup>      | CMV             | Positive-Sequence Voltage Phasor Measurement          |
| V2_PM <sup>a, b</sup>      | CMV             | Negative-Sequence Voltage Phasor Measurement          |
| IA_FUND                    | CMV             | Fundamental Current Phase A                           |
| IB_FUND                    | CMV             | Fundamental Current Phase B                           |
| IC_FUND                    | CMV             | Fundamental Current Phase C                           |
| I0_FUND                    | CMV             | Fundamental Zero-Sequence Current                     |
| I1_FUND                    | CMV             | Fundamental Positive-Sequence Current                 |
| I2_FUND                    | CMV             | Fundamental Negative-Sequence Current                 |
| IN_CALC_FUND               | CMV             | Calculated Neutral Current                            |
| IA_PM <sup>a, b</sup>      | CMV             | Current Phase A Phasor Measurement                    |
| IB_PM <sup>a, b</sup>      | CMV             | Current Phase B Phasor Measurement                    |
| IC_PM <sup>a, b</sup>      | CMV             | Current Phase C Phasor Measurement                    |
| I0_PM <sup>a, b</sup>      | CMV             | Zero-Sequence Current Phasor Measurement              |
| I1_PM <sup>a, b</sup>      | CMV             | Positive-Sequence Current Phasor Measurement          |
| I2_PM <sup>a, b</sup>      | CMV             | Negative-Sequence Current Phasor Measurement          |
| IN_CALC_PM <sup>a, b</sup> | CMV             | Calculated Neutral Current Phasor Measurement         |
| FREQ                       | MV              | Fundamental Frequency                                 |
| ROCOF                      | MV              | Fundamental Rate-of-Change of Frequency               |
| FREQ_PM <sup>a, b</sup>    | MV              | Synchrophasor Frequency Measurement                   |
| ROCOF_PM <sup>a, b</sup>   | MV              | Synchrophasor Rate-of-Change-of-Frequency Measurement |
| P3_FUND <sup>a</sup>       | MV              | Fundamental Real Power                                |
| Q3_FUND <sup>a</sup>       | MV              | Fundamental Reactive Power                            |

| Tag Name                             | Tag Type | Description  |
|--------------------------------------|----------|--|
| S3_FUND <sup>a</sup>                 | CMV      | Fundamental Apparent Power   |
| FaultAnalysisInProgress <sup>c</sup> | BOOL     | Indication that a fault location calculation is in process                     |
| FaultAnalysisDone <sup>c</sup>       | BOOL     | Indication that a fault location calculation has completed                     |
| FaultAnalysisFaultLoc <sup>c</sup>   | MV       | The last fault location calculated for this asset                              |
| FaultAnalysisFaultType <sup>c</sup>  | STR      | The last fault type calculated for this asset (e.g., AG)                       |
| FaultAnalysisError <sup>c</sup>      | BOOL     | Indication that an error occurred during fault location calculations           |
| FaultAnalysisErrorDesc <sup>c</sup>  | STR      | Description of the last error that occurred during fault location calculations |
| EventTrigger <sup>a</sup>            | BOOL     | Indication that asserts when a trigger associated with this asset has occurred |

<sup>a</sup> Tag is included in Continuous Recording records.

<sup>b</sup> Tag is only enabled if the general settings Enable Synchrophasor Server or Include PMU Channels is True.

<sup>c</sup> Transmission line assets only.

Table 10.36 shows the quantities available as tags in an RTAC project for a transmission line or generic asset with a **Line Voltage Source** of an SEL\_PRCTPT module with a PT connection of Delta.

**Table 10.36 Transmission Line and Generic Asset Tags-Delta**

| Tag Name               | Tag Type | Description                                  |
|------------------------|----------|--|
| VAB_FUND               | CMV      | Fundamental Voltage Phase AB                 |
| VBC_FUND               | CMV      | Fundamental Voltage Phase BC                 |
| VCA_FUND               | CMV      | Fundamental Voltage Phase CA                 |
| V1_FUND                | CMV      | Fundamental Positive-Sequence Voltage        |
| V2_FUND                | CMV      | Fundamental Negative-Sequence Voltage        |
| VAB_PM <sup>a, b</sup> | CMV      | Voltage Phase AB Phasor Measurement          |
| VBC_PM <sup>a, b</sup> | CMV      | Voltage Phase BC Phasor Measurement          |
| VCA_PM <sup>a, b</sup> | CMV      | Voltage Phase CA Phasor Measurement          |
| V1_PM <sup>a, b</sup>  | CMV      | Positive-Sequence Voltage Phasor Measurement |
| V2_PM <sup>a, b</sup>  | CMV      | Negative-Sequence Voltage Phasor Measurement |
| IA_FUND                | CMV      | Fundamental Current Phase A                  |
| IB_FUND                | CMV      | Fundamental Current Phase B                  |
| IC_FUND                | CMV      | Fundamental Current Phase C                  |
| I0_FUND                | CMV      | Fundamental Zero-Sequence Current            |
| I1_FUND                | CMV      | Fundamental Positive-Sequence Current        |
| I2_FUND                | CMV      | Fundamental Negative-Sequence Current        |
| IN_CALC_FUND           | CMV      | Calculated Neutral Current                   |

| Tag Name                             | Tag Type | Description  |
|--------------------------------------|----------|--|
| IA_PM <sup>a, b</sup>                | CMV      | Current Phase A Phasor Measurement   |
| IB_PM <sup>a, b</sup>                | CMV      | Current Phase B Phasor Measurement   |
| IC_PM <sup>a, b</sup>                | CMV      | Current Phase C Phasor Measurement   |
| I0_PM <sup>a, b</sup>                | CMV      | Zero-Sequence Current Phasor Measurement                                       |
| I1_PM <sup>a, b</sup>                | CMV      | Positive-Sequence Current Phasor Measurement                                   |
| I2_PM <sup>a, b</sup>                | CMV      | Negative-Sequence Current Phasor Measurement                                   |
| IN_CALC_PM <sup>a, b</sup>           | CMV      | Calculated Neutral Current Phasor Measurement                                  |
| FREQ                                 | MV       | Fundamental Frequency  |
| ROCOF                                | MV       | Fundamental Rate-of-Change of Frequency  |
| FREQ_PM <sup>a, b</sup>              | MV       | Synchrophasor Frequency Measurement  |
| ROCOF_PM <sup>a, b</sup>             | MV       | Synchrophasor Rate-of-Change-of-Frequency Measurement                          |
| P3_FUND <sup>a</sup>                 | MV       | Fundamental Real Power   |
| Q3_FUND <sup>a</sup>                 | MV       | Fundamental Reactive Power   |
| S3_FUND <sup>a</sup>                 | CMV      | Fundamental Apparent Power   |
| FaultAnalysisInProgress <sup>c</sup> | BOOL     | Indication that a fault location calculation is in process                     |
| FaultAnalysisDone <sup>c</sup>       | BOOL     | Indication that a fault location calculation has completed                     |
| FaultAnalysisFaultLoc <sup>c</sup>   | MV       | The last fault location calculated for this asset                              |
| FaultAnalysisFaultType <sup>c</sup>  | STR      | The last fault type calculated for this asset (e.g., AG)                       |
| FaultAnalysisError <sup>c</sup>      | BOOL     | Indication that an error occurred during fault location calculations           |
| FaultAnalysisErrorDesc <sup>c</sup>  | STR      | Description of the last error that occurred during fault location calculations |
| EventTrigger <sup>a</sup>            | BOOL     | Indication that asserts when a trigger associated with this asset has occurred |

<sup>a</sup> Tag is included in Continuous Recording records.<sup>b</sup> Tag is only enabled if the general settings Enable Synchrophasor Server or Include PMU Channels is True.<sup>c</sup> Transmission line assets only.

## Single-Channel Assets

A Single-Channel asset allows configuration of measurements for isolated voltage and current signals that are not part of a standard three-phase voltage or current set associated with bus or line assets. Each single-channel asset allows for three voltage channels and three current channels with individually configurable PT and CT ratios optionally enabled for triggering. The following are some examples of isolated measurements that are ideal for single-channel asset usage:

- ▶ Neutral grounding resistors
- ▶ Neutral CTs associated with lines
- ▶ Ground CTs on live tank breakers
- ▶ Tertiary CTs on transformers

Single-Channel assets are not recommended for use with single-phase bus PTs. In those scenarios, a bus asset should be used instead. Do not wire multiple voltage inputs to a module used in a single-channel asset if the voltages belong to different frequency sources (e.g., generators or isolated buses).

Voltage and current measurements are used to optionally provide the following trigger types:

- ▶ Single-channel voltage triggers
- ▶ Single-channel current triggers

The **Settings** tab for a single-channel asset contains settings that allow for configuration of each of the six unique channels on the asset, as shown in *Table 10.37*.

**Table 10.37 Single-Channel Asset Settings Names and Descriptions**

| Setting Name                           | Description  |
|--|--|
| Voltage and Current Measurement Source | The Axion SEL_PRCTPT Module measurement source for this single-channel asset   |
| Frequency Reference                    | The frequency reference source for this single-channel asset. Either "Self" or any other bus, generic, or transmission line asset.                                 |
| Enable VA Channel                      | Enable the VA channel of the specified SEL_PRCTPT module for a single-channel measurement  |
| VA Channel Name                        | Channel name of the VA measurement used in triggers and recording  |
| VA Channel Ratio                       | PT Ratio applied to the VA measurement   |
| Enable VB Channel                      | Enable the VB channel of the specified SEL_PRCTPT module for a single-channel measurement  |
| VB Channel Name                        | Channel name of the VB measurement used in triggers and recording  |
| VB Channel Ratio                       | PT ratio applied to the VB measurement   |
| Enable VC Channel                      | Enable the VC Channel of the specified SEL_PRCTPT module for a single-channel measurement  |
| VC Channel Name                        | Channel name of the VC measurement used in triggers and recording  |
| VC Channel Ratio                       | PT ratio applied to VC measurement   |
| Enable IA Channel                      | Enable the IA channel of the specified SEL_PRCTPT module for a single-channel measurement  |
| IA Channel Name                        | Channel name of the IA measurement used in triggers and recording  |
| IA Channel Ratio                       | CT ratio applied to IA measurement   |
| Enable IB Channel                      | Enable the IB channel of the specified SEL_PRCTPT module for a single-channel measurement  |
| IB Channel Name                        | Channel name of the IB measurement used in triggers and recording  |
| IB Channel Ratio                       | CT ratio applied to IB measurement   |
| Enable IC Channel                      | Enable the IC channel of the specified SEL_PRCTPT module for a single-channel measurement  |
| IC Channel Name                        | Channel name of the IC measurement used in triggers and recording  |
| IC Channel Ratio                       | CT ratio applied to IC measurement   |
| Enable Continuous Recording            | Boolean (true or false). Set this value to True to enable recording of the analog channels and event trigger output of this asset in Continuous Recording records. |

The **Frequency Reference** setting is used to assign the frequency source of the SEL\_PRCTPT module associated with all six channels on the single-channel asset. This is most often used to configure the module to self-track its channel frequencies from its own voltage inputs, or to use the voltage inputs from another bus asset in the configuration. The custom channel names settings for the six channels are applied to the VA, VB, VC, IA, IB, and IC signals for display in live data and COMTRADE records. The PT and CT ratio settings for the six channels are applied to each raw signal value in both the 61131-3 tag mapping logic as well as the Recording Group and Continuous Recording Group calculations for each channel.

*Table 10.38* shows the quantities available as tags in an RTAC project for a single-channel asset.

**Table 10.38 Single-Channel Asset Tags**

| Tag Name                  | Tag Type | Description  |
|---------------------------|----------|--|
| VA_FUND                   | CMV      | Fundamental Voltage Phase A  |
| VB_FUND                   | CMV      | Fundamental Voltage Phase B  |
| VC_FUND                   | CMV      | Fundamental Voltage Phase C  |
| VA_PM <sup>a, b</sup>     | CMV      | Voltage Phase A Phasor Measurement   |
| VB_PM <sup>a, b</sup>     | CMV      | Voltage Phase B Phasor Measurement   |
| VC_PM <sup>a, b</sup>     | CMV      | Voltage Phase C Phasor Measurement   |
| IA_FUND                   | CMV      | Fundamental Current Phase A  |
| IB_FUND                   | CMV      | Fundamental Current Phase B  |
| IC_FUND                   | CMV      | Fundamental Current Phase C  |
| IA_PM <sup>a, b</sup>     | CMV      | Current Phase A Phasor Measurement   |
| IB_PM <sup>a, b</sup>     | CMV      | Current Phase B Phasor Measurement   |
| IC_PM <sup>a, b</sup>     | CMV      | Current Phase C Phasor Measurement   |
| FREQ_PM <sup>a, b</sup>   | MV       | Synchrophasor Frequency Measurement (unused, only present for PMU compatibility)                   |
| ROCOF_PM <sup>a, b</sup>  | MV       | Synchrophasor Rate of Change of Frequency Measurement (unused, only present for PMU compatibility) |
| EventTrigger <sup>a</sup> | BOOL     | Indication that asserts when a trigger associated with this asset has occurred                     |

<sup>a</sup> Tag is included in Continuous Recording records.

<sup>b</sup> Tag is only enabled if the general settings Enable Synchrophasor Server or Include PMU Channels is True.

## Harmonic Triggers

The Harmonic Triggers tab is used to configure high limit triggers based on the following quantities:

- ▶ Harmonics: any harmonic order, from 2nd to 63rd, on the available voltage or current channels of the asset.
- ▶ Interharmonics: any interharmonic subgroup, from 1st to 62nd, on the available voltage or current channels of the asset.
- ▶ Total Harmonic Distortion (THD): THD calculation on the available voltage or current channels of the asset. The THD calculation considers harmonic components up to the 63rd order.

Available channels for harmonic, interharmonic, and THD triggers depend on Substation Asset type and configuration:

- ▶ On bus assets, only voltage channels are available.
- ▶ On transmission line assets and generic assets where Line Voltage Source is set to a PRCTPT module and a single PRCTPT module is used to measure line current, voltage and current channels are available.
- ▶ On transmission line assets and generic assets where Line Voltage Source is set to a PRCTPT module and Current Measurement Calculation is set to an addition or subtraction of the current measurements of 2 PRCTPT modules, only voltage channels are available.
- ▶ On transmission line assets and generic assets where Line Voltage Source is set to None and a single PRCTPT module is used to measure line current, only current channels are available.
- ▶ On transmission line assets and generic assets where Line Voltage Source is set to None and Current Measurement Calculation is set to an addition or subtraction of the current measurements of 2 PRCTPT modules, no channels are available for harmonic, interharmonic or THD triggers.

Multiple triggers based on consecutive harmonic orders or interharmonic subgroups with the same pickup threshold may be configured in a single row of the Harmonic Triggers tab. To configure harmonic or interharmonic triggers, perform the following:

- Step 1. Add a row to the Harmonic Triggers tab.
- Step 2. Select the quantity type (harmonic or interharmonic).
- Step 3. Select the channel. It may be a specific voltage or current phase (if available), or select VABC or IABC to apply the trigger to all three phases.
- Step 4. Use the Starting Order/Subgroup and Ending Order/Subgroup settings to define the harmonic order range or interharmonic subgroup range. To apply the trigger to a single harmonic order or interharmonic subgroup, enter the same value for both settings.
- Step 5. Use the Group setting to select if the trigger applies to all harmonic orders or interharmonic subgroups in the range, or only odd or even orders within the range.
- Step 6. Use the Threshold setting to enter the limit threshold to be applied to all harmonic orders or interharmonic subgroups in the selected range. This setting is entered as a percentage of the fundamental. For guidance on how to set the proper thresholds, refer to local regulations or relevant standards such as IEEE 519.

To configure Total Harmonic Distortion (THD) triggers, perform the following:

- Step 1. Add a row to the Harmonic Triggers tab.
- Step 2. Select the Quantity Type (THD).
- Step 3. Select the channel. It may be a specific voltage or current phase (if available), or select VABC or IABC to apply the trigger to all three phases.
- Step 4. Use the Threshold setting to enter the limit threshold to be applied to the THD quantity. This setting is entered as a percentage of the fundamental.

During the Build DFR process, the DFR Extension creates Virtual Tags to monitor each individual harmonic order, interharmonic subgroup, or THD quantity defined in the Harmonic Triggers tab. These Virtual Tags are added to the Live Data View. For each Harmonic Triggers tab row where Enable Triggering is set to True, the DFR Extension creates the proper trigger logic to trigger a DFR fault record when any defined quantity exceeds the high limit threshold.

The DFR Extension creates individual tags per asset to monitor each harmonic quantity configured on the asset. For harmonic and interharmonic quantities, the DFR Extension generates a tag per channel, per quantity (harmonic or interharmonic), and per harmonic order (or interharmonic subgroup). For THD quantities, the DFR Extension generates a tag per channel. The harmonic, interharmonic, and THD tags are REAL values scaled as a percentage of the fundamental harmonic of the channel.

In addition to the harmonic, interharmonic, and THD Virtual Tags, the DFR Extension also creates the following two Boolean tags on the asset:

- ▶ **QUALITY\_HARMONICS**: True when the quality of the harmonic measurement is good.
- ▶ **HARMONIC\_TRIGGER**: True when a harmonic, interharmonic, or THD quantity configured on the asset exceeds the high limit threshold. This indicates that the DFR Extension has triggered on a harmonic, interharmonic, or THD quantity of the asset.

*Figure 10.16* shows an example of harmonic triggers configured by the user (top) and their corresponding Virtual Tags generated during the Build DFR process (bottom). The first row generates five REAL tags to monitor harmonic orders 3, 5, 7, 9, and 11 on VA channel, and the second row generates three REAL tags to monitor THD on channels IA, IB and IC.

The screenshot shows two tables. The top table is a configuration table for triggers, with rows for Settings, Voltage Triggers, Overcurrent Triggers, Sequence Components Triggers, Frequency Triggers, Power Triggers, and Harmonic Triggers. The bottom table is a list of harmonic virtual tags, showing columns for Value, Tag Name, and Type.

|                              | Enable | Enable Triggering                   | Quantity Type | Channel | Group | Starting Order/Subgroup | Ending Order/Subgroup | Threshold (% of Fundamental) |
|------------------------------|--------|-------------------------------------|---------------|---------|-------|-------------------------|-----------------------|------------------------------|
| Voltage Triggers             | True   | <input checked="" type="checkbox"/> | Harmonic      | VA      | Odd   | 3                       | 11                    | 3                            |
| Overcurrent Triggers         | True   | True                                | THD           | IABC    | Odd   | 3                       | 5                     | 5                            |
| Sequence Components Triggers |        |                                     |               |         |       |                         |                       |                              |
| Frequency Triggers           |        |                                     |               |         |       |                         |                       |                              |
| Power Triggers               |        |                                     |               |         |       |                         |                       |                              |
| Harmonic Triggers            |        |                                     |               |         |       |                         |                       |                              |

|      | Value                        | Tag Name | Type |
|------|------------------------------|----------|------|
| True | Line1_Tags.VA_HARMONIC_3     | REAL     |      |
| True | Line1_Tags.VA_HARMONIC_5     | REAL     |      |
| True | Line1_Tags.VA_HARMONIC_7     | REAL     |      |
| True | Line1_Tags.VA_HARMONIC_9     | REAL     |      |
| True | Line1_Tags.VA_HARMONIC_11    | REAL     |      |
| True | Line1_Tags.IA_THD            | REAL     |      |
| True | Line1_Tags.IB_THD            | REAL     |      |
| True | Line1_Tags.IC_THD            | REAL     |      |
| True | Line1_Tags.QUALITY_HARMONICS | BOOL     |      |
| True | Line1_Tags.HARMONICS_TRIGGER | BOOL     |      |

Figure 10.16 Harmonic Virtual Tags

## Local Monitoring

The Local Monitoring feature can be enabled by toggling the **Enable Local Monitoring** setting on the **General Settings** tab to True and saving the project. Doing so adds a **LocalMonitoring** subitem to the DFR Extension that contains six indications, as shown in *Table 10.39*.

Table 10.39 Local Monitoring Status Indications

| Status Indicator    | Description                                      | Notes  |
|---------------------|--|--|
| Enabled             | The DFR is enabled.                              | This is an aggregate of the following conditions:<br>► The EtherCAT IO network and all modules in nominal status.<br>► All fault recording and recording trigger logic instances enabled.  |
| Ready               | The DFR is ready to trigger.                     | Represents the Ready POU output status of the Fault Recorder Recording Group instance.   |
| Recording           | The DFR is recording an event.                   | Latches in when any of the trigger instances assert a trigger output. Latches out when the New_Event_Ready POU output of the Recording Group asserts.  |
| New Event Available | There is a new DFR event ready to be downloaded. | Pulses for 10 seconds when a new COMTRADE fault record is available for download.  |
| Synchronized        | The DFR is synchronized to an external clock.    | Indicates the presence of high-quality IRIG-B or PTP time sync on the RTAC and all attached SEL_PRCTPT modules.  |
| Alarm               | The DFR is in alarm mode.                        | Asserts after a 30-second pickup delay for any of the following conditions:<br>► The EtherCAT IO network status is abnormal<br>► RTAC CPU Burden is greater than 75 percent for a time period longer than 1 minute<br>► The total available storage remaining is one of the following:<br>➤ Less than 10 percent of total size<br>➤ Less than 4 GB<br>► The total available system memory (RAM) remaining is less than 10 percent. |

Each status indicator can be assigned to any of the following local annunciation options:

- ▶ OUT101 Alarm Contact
- ▶ Auxiliary LEDs 01 through 04
- ▶ Any enabled digital outputs configured on SEL\_16DO or SEL\_10DO cards

Each Local Monitoring indication is logged to the SOE and enabled for viewing in the Live Data view on the web interface.

Local Monitoring also calculates the following disk space storage and usage statistics available for viewing in the Live Data view on the web interface:

- ▶ Percent remaining
- ▶ Total remaining (GB)
- ▶ Last full days usage (GB)
- ▶ Approximate number of days of storage remaining (before older Continuous Recording data begin to be overwritten)

## User-Defined Custom Channels

User-defined custom channels can be enabled by toggling the **Enable Custom Channels** setting on the **General Settings** tab to True and saving the project. Doing so adds a **CustomChannels** subitem to the DFR Extension. This subitem contains two tabs, Digital Channels and Analog Channels, that allow for configuration of tags from elsewhere in the RTAC project. These tabs allow for configuration of RTAC tags for DFR triggering and inclusion in Fault Recording and Continuous Recording COMTRADE records. The following are some examples of external signals that may be desirable to use for DFR triggers:

- ▶ TRIP Relay Word bits sourced from a device protocol such as SEL or DNP clients.
- ▶ Indications contained in GOOSE receive instances.
- ▶ SCADA commands sourced from server protocol tags.

Digital channels allow for configuration of status tags for DFR triggering. The following configuration options are available:

- ▶ Enable: Enables the digital channel for DFR usage.
- ▶ Tag Name: The name of a valid SPS or BOOL tag in the RTAC project.
- ▶ Channel Name: The name of the custom channel to use in trigger SOE entries and COMTRADE records.
- ▶ Enable Trigger: Use this digital channel to trigger the DFR.
- ▶ Pickup Time (ms), Dropout Time (ms): Configurable timers to apply to the trigger in the Recording Triggers configuration.
- ▶ Trigger Type: Rising-edge, falling-edge, state-change, or level-based trigger.

- ▶ Time Source: When an SPS tag type is used for the channel, this setting is available to configure as Origin or System Time. If Origin is selected, the time stamp in the SPS tag is aligned with the digital status change in the resulting COMTRADE record. Use a setting of System Time to align the digital status change with the RTAC system time.
- ▶ A setting to control whether this individual digital channel is included in filtered SOE Log CSV File output.

Analog Channels allow for configuration of numeric tags for DFR triggering. The following configuration options are available:

- ▶ Enable: Enables the analog channel for DFR usage.
- ▶ Tag Name: The name of a valid numeric tag of one of the following types: APC, BCR, BYTE, CMV, DINT, DWORD, INC, INS, INT, LBCR, LINT, LREAL, LWORD, MV, REAL, SINT, UDINT, UINT, ULINT, UNS, USINT, WORD, or vector\_t.
- ▶ Channel Name: The name of the custom channel to use in trigger SOE entries and COMTRADE records.
- ▶ A nominal value to use for configuring high and low trigger thresholds against.
- ▶ A units value that gets applied to the channel in the fault record and Continuous Recording COMTRADE records. The value must consist of 1–32 alphabetic-only characters.
- ▶ Optional high and low triggers with configurable thresholds that are a percentage-based reference to the nominal value.
- ▶ Trigger pickup time delay, hysteresis, and trigger type settings to allow for tuning of the trigger behavior.

If any of the tags specified in the Digital or Analog Channels tabs are determined to reside in the automation task, additional logic will be automatically generated to accommodate this scenario. A common example of this would be GOOSE RX devices that operate at a faster task rate to achieve better time-stamp accuracy. The resolution of transitions from signals that originate in the automation task is limited to the resolution of the main task, i.e., 4 ms. If a signal in the automation task asserts and deasserts at a rate faster than 4 ms, it could be missed by the DFR trigger logic that resides in the main task.

## Logic-Based External DFR Triggers

The **Controller** tab on the DFR extension contains a single function block that does not perform any logic, but which has the following POU inputs:

- ▶ External\_Event\_Trigger (Type: BOOL)
- ▶ External\_Event\_Trigger\_ID (Type: STRING(128))

Custom user logic can be created outside of the managed DFR extension content to use these two inputs to define external triggers from other sources. *Figure 10.17* shows an example of custom user logic used to create an external DFR trigger.

```

PROGRAM ExternalTriggers
1
2
3 // 'TRIP' LED from IED
4 IF SEL_421_1_SEL.FM_INST_TRIPLED.stVal THEN
5   Digital_FaultRecorder1_POU.External_Event_Trigger := SEL_421_1_SEL.FM_INST_TRIPLED.stVal;
6   Digital_FaultRecorder1_POU.External_Event_Trigger_ID := 'SEL421_TRIP';
7 // External SCADA Trigger from DNP
8 ELSIF SCADAMap_DNP.BO_00000.operPulse.ctlVal THEN
9   Digital_FaultRecorder1_POU.External_Event_Trigger := SCADAMap_DNP.BO_00000.operPulse.ctlVal;
10  Digital_FaultRecorder1_POU.External_Event_Trigger_ID := 'SCADA_Trigger';
11 ELSE
12   Digital_FaultRecorder1_POU.External_Event_Trigger := FALSE;
13   Digital_FaultRecorder1_POU.External_Event_Trigger_ID := '';
14 END_IF

```

Figure 10.17 Sample User Logic for External DFR Trigger

## CSV Configuration

Each time a project containing the DFR extension is saved, a CSV configuration file named **DFRBuilder\_Configuration.csv** is written out to the current user's Documents folder under the **AcSELerator RTAC\Logs\Extension Logs** subfolder. The file contains all the settings from the DFR extension formatted in a human and machine-readable format. This CSV file can be modified in an external software package to customize DFR settings. Once complete, select the **Configure DFR Extension from CSV** browse button on the general settings tab to specify a CSV file that was modified to contain desired settings. When the project is saved, the DFR settings present in the CSV file are applied to the extension, overwriting whatever was in place prior to the import.

The CSV file contains start and end markers between which formatted configuration data are stored, typically as a header with column names, followed by additional rows representing the settings for a specific extension tab. This provides a defined format to represent all DFR settings, including:

- ▶ General Settings
- ▶ Node Configuration
- ▶ Substation Assets
- ▶ Digital Inputs
- ▶ Digital Outputs
- ▶ Analog Inputs
- ▶ Custom Channels
- ▶ Local Monitoring

## Build DFR

During the Build DFR process, the following actions are taken based on the settings present on the DFR extension:

- ▶ The project main task cycle time is forced to 4 ms and the automation task cycle time is set to 1 ms.
- ▶ General setting System Nominal Frequency is applied to the Nominal\_Frequency SystemTags setting.

- All EtherCAT modules from the node configuration subitems of the extension are added to the project and named with a node/slot designator prefix. For example, a module named MyModule present on Node 1 and located in Slot D is added to the project as N1SD\_MyModule\_ECAT.
- The EtherCAT IO network is configured with all nodes present in the extension settings and all modules are attached to the network in the desired slot positions. An IEC 61131-3 POU named ECAT\_Livedata is added to the project to provide visibility of EtherCAT network status to the Live Data view on the web interface.
- For SEL-3350 and SEL-3555/3560 projects, Port 1 on the Slot A power coupler is connected to an RTAC. Port 2 is used to daisy-chain connections to Port 1 of the Slot A coupler in the next node (and so on).
- For SEL-2241-2 projects, an SEL-2241 RTAC is assigned to Slot A on the first node. A power coupler is assigned to Slot B and Port 1 is left unconnected. Port 2 of the Slot B power coupler is connected to Port 1 of the Slot A power coupler in the next node (and so on).
- If the inserted module is an SEL\_PRCTPT module, additional configuration steps are taken including the following:
  - CT ratio, PT ratio, and PT connection values are applied from the node configuration dialog.
  - Global setting System Phase Rotation is applied to the module.
  - Based on the usage of the module across all substation assets, appropriate voltage and/or current tags are enabled.
  - Unique frequency groups are created on the EtherCAT IO network for each module that is used as a voltage source for a substation asset.
  - Any modules configured on single-channel assets are assigned PT and CT ratio setting values of 1. The per-channel ratios are applied later in the Recording Group and Continuous Recording group calculations.
- If the inserted module is an SEL\_24DI or SEL\_32DI module, the SOE tag setting is enabled and pickup/dropout timers are applied from the DigitalInputs configuration subitem table on the extension. If a trigger is enabled on any of the inputs, a Digital\_Input\_Triggers recording trigger extension is added to the project containing those triggers.
- If the inserted module is an SEL\_AIER module, the module is configured for DC input mode, the four input channels are enabled, and the input channel settings are configured from the **Extended Range** tab on the **AnalogInputs** subitem on the extension. An Analog\_Input\_Triggers recording trigger extension is added to the project and is configured with the high and low trigger configuration of the four analog inputs from the AnalogInputs subitem.
- A Recording Group instance named FaultRecording is added to the project and all SEL\_PRCTPT, SEL\_24DI, and SEL\_32DI modules are added to the instance. The FaultRecording instance is configured as follows:
  - Any voltage or current channels used by assets are named according to that asset.
  - A custom channel is created for each fundamental quantity present on an asset and the tag type is assigned as vector\_t. An IEC 61131-3 POU FaultRecording\_CustomChannelMapping is created, which provides mapping of Asset Virtual Tag Lists into the Recording Group custom channels.

- Any current channels used in a transmission line asset current measurement source calculation are named according to their module names and calculations are created to sum or subtract the three-phase values to determine a true asset measurement value.
- Any voltage or current channels enabled on a single-channel asset create an entry on the calculations tab where the PT or CT ratio is multiplied against the raw input to create the scaled input contained in the COMTRADE record.
- The digital input channel name from the DigitalInputs subitem is applied to the Input x Latest Channel Name on the Digital Channels tab.
- Any user-defined custom channels are added to the Custom Channels tab and settings are applied from the custom channel configuration.
- Each substation asset generates the following items:
  - A virtual tag list containing appropriate tags for the asset.
  - An IEC 61131-3 user logic POU that provides mapping into the virtual tag list tags from the actual SEL\_PRCTPT module tags assigned to the asset. This POU also contains the required calculations for the asset, such as current summation and power.
  - An IEC 61131-3 user logic POU that provides live data viewing for the virtual tag list tags.
  - A pair of Recording Trigger instances to represent all enabled triggers from the asset configuration.
  - A C37.118 Server PMU Tag List populated with phasors from that asset.
- If at least one asset has the **Enable Continuous Recording** option enabled, a Continuous Recording Group instance named ContinuousRecording is added to the project. The instance is configured as follows:
  - If the General setting **Include High-Resolution Channels** is enabled, any SEL\_PRCTPT modules associated with assets enabled for continuous recording are added to the Continuous Recording Group instance. The voltage or current channels associated with the SEL\_PRCTPT are named according to the asset with the same rules applied to their usage as in a standard Recording Group.
  - Calculations are added for SEL\_PRCTPT current channels used in asset Current Measurement Source calculations, with the same rules applied to their usage as in a standard Recording Group.
  - The C37.118 Server PMU tag list associated with each asset is added to the Continuous Recording Group instance.
  - Any SEL\_24DI or SEL\_32DI modules in the DFR are added to the Continuous Recording Group instance and the channels are enabled and named according to the same rules applied to their usage in a standard Recording Group.
  - Any user-defined custom channels are added to the Custom Channels tab and settings are applied from the custom channel configuration.
- If the Local Monitoring feature is enabled, a Local\_Monitoring IEC 61131-3 POU and Local\_Monitoring\_Tags virtual tag list are added to the project containing all the required logic for the monitored features as well as indication assignments.

- If the Synchrophasor Server feature is enabled, a C37.118 server is added to the project (named Server\_C37118) and all PMU tag lists are attached to it. The General settings **Synchrophasor Server PDC ID** and **PMU Data Rate** are applied to the C37.118 server.
- If General setting **Store DFR events in SOE Log** is enabled, an SOE\_Logging IEC 61131-3 POU is added to the project to perform SOE logging for all enabled digital input and output channels. This setting is also applied to Recording Triggers associated with the substation assets to optionally produce SOE log entries for the asset triggers.
- If General setting **Generate SOE Log CSV Files** is enabled, an SOE\_CSV\_Log IEC 61131-3 POU is added to the project to perform CSV text file generation from RTAC SOE log entries. If the General setting **SOE Log CSV File Contents** is set to Filtered, then additional logic is added to ensure the CSV text file will only contain Digital Inputs and Custom Channel Digitals with the **Filtered SOE CSV** setting value set to True.
- If **Enable Fault Location** is set to True for any transmission line assets, the FaultLocation and ConditionMonitoring libraries are inserted into the project and a FaultLocationCalculations IEC 61131-3 POU is added to the project to perform the required fault location calculations and associated report generation.
- All generated project content is moved into a managed **Digital Fault Recorder** folder in the project tree. Subsequent Build DFR operations will delete this folder and repopulate it with the new generated content.

## How to Access Digital Fault Recorder Data

The RTAC web interface provides facilities for accessing all the data records and logs created by the DFR. The following types of records and logs can be accessed:

- High-resolution fault records (in COMTRADE format)
- Continuous Recording records (in COMTRADE format)
- Sequence of Events Logs
- Fault Location Calculation Results (in CSV format)

High-resolution DFR fault COMTRADE records are generated when a trigger condition asserts for one of the assets. Fault records are accessed via the following procedure:

- Step 1. Log in to the RTAC's web interface using a compatible web browser. The user account used to log in to the RTAC must have the **Report Read** role-based permission.
- Step 2. Select **Event Collection** under the **Reports** category on the left.
- Step 3. The resulting table lists each fault record available on the DFR associated with the FaultRecording device. Select a record to download a COMTRADE .zip file to your PC.

Continuous Recording COMTRADE records are generated on-demand based on a requested date/time range and channel selection. Perform the following to access Continuous Recording records:

- Step 1. Log in to the RTAC's web interface using a compatible web browser. The user account used to log in to the RTAC must have the **Report Read** role-based permission.
- Step 2. Select **Continuous Recording Groups** under the **Reports** category on the left.
- Step 3. Make note of the ContinuousRecording entry and the available Start Time and End Time of available data. Select **Download** on the right side of the entry.
- Step 4. Enter a valid **Start Time and End Time** based on the range of available data shown on the prior page. Optionally toggle the End Time selector to use a fixed duration of data that will be contained in the resultant COMTRADE record.
- Step 5. Under the **Available Channels** dialog, select the channels you want to include in the COMTRADE record. High-resolution 3 kHz channels are labeled for the asset and voltage or current phase. Synchrophasor channels are labeled for the asset and voltage or current phase, and appended with **\_PM**.
- Step 6. Select **Download** at the bottom. (You will be returned to the previous screen.) Once the record is generated, it will be automatically downloaded by your web browser.

Sequence of Events logs are accessed via the RTAC's web interface. Perform the following to access Sequence of Events logs:

- Step 1. Log in to the RTACs web interface using a compatible web browser. The user account used to log in to the RTAC must have the **Report Read** role-based permission.
- Step 2. Select **SOE** under the **Reports** category on the left.
- Step 3. The resulting table shows all of the Sequence of Events report logs. The following types of SOE records are included in this report:
  - RTAC security logs (e.g., "User logged in").
  - If General setting **Store DFR events in SOE Log** is enabled: All digital input or digital output state changes and asset triggers (e.g., overvoltage or undervoltage).
  - If the Local Monitoring feature is enabled: All DFR status changes (e.g., DFR Ready, New Event Available).
- Step 4. If desired, CSV records can be offloaded from the RTAC by selecting **Download CSV** at the top of the Sequence of Events report.
- Step 5. If **Generate SOE Log CSV Files** is enabled, SOE CSV text files are automatically generated in the **DFR\_Soe\_Logs** directory.

Fault location calculation results are also available via the RTAC's web interface. Perform the following to access the fault location calculation results:

- Step 1. Log in to the RTAC's web interface using a compatible web browser. The user account used to log in to the RTAC must have the **File Read** role-based permission.
- Step 2. Select **File Manager** under the **System** category on the left.

- Step 3. Navigate to the **FaultLocationCalculations** and **SOE+Summary** subdirectories to display a list of all fault location CSV reports.
- Step 4. See *Transmission Line and Generic Assets on page 794* for more information on formatting and content of fault location CSV records.

## Examples

### Sample System

This example demonstrates the DFR extension workflow to configure a single bus (Bus 1) and transmission line (Line 1) given the breaker-and-a-half substation design shown in *Figure 10.18*.

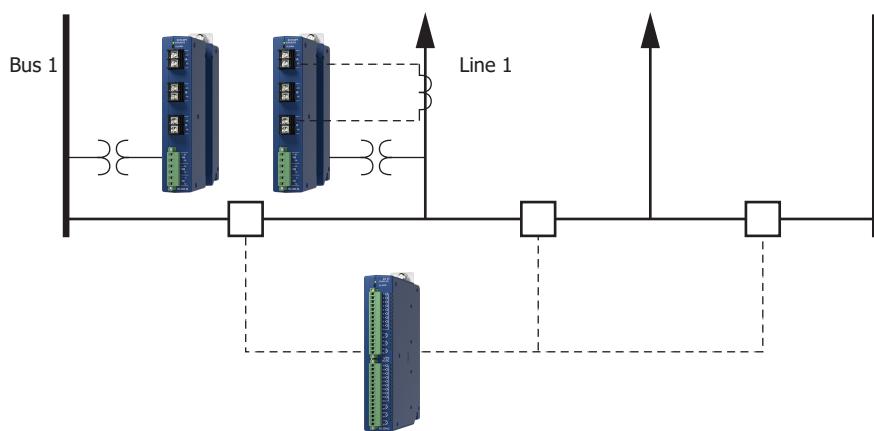


Figure 10.18 Sample Breaker-and-a-Half Substation

### Example 1: Breaker-and-a-Half Substation—DFR Configures Transmission Line and Bus

#### Objective

The DFR extension configures triggered high-resolution fault recordings, Continuous Recording, and Sequence of Events records for the sample substation. Additionally, the DFR extension configures digital inputs that monitor the status of all breakers in the substation. Bus 1 generates high-resolution fault recordings based upon standard overvoltage and undervoltage trigger conditions. Line 1 generates high resolution fault recordings based on standard overvoltage, undervoltage, and overcurrent trigger conditions.

#### Assumptions

1. An SEL-3350 or SEL-3555 ACCELERATOR RTAC project (version R152 or later) is open.
2. Bus 1 contains a three-phase wye-connected PT measurement point.
3. Line 1 includes three-phase Line CTs and three-phase wye-connected PT measurement points.
4. One SEL\_PRCTPT Axion module is designated to measure the Bus 1 voltage.
5. One SEL\_PRCTPT Axion module is designated to measure the Line 1 voltage and current.

6. One SEL\_24DI Axion module is designated to detect the breaker statuses.
7. The system requires ABC phase rotation and operates at 60 Hz nominal frequency.
8. The Bus and Line PT ratios are 35 and the Line CT ratio is 250.

## Method

Perform the following DFR extension configuration steps to generate all RTAC objects to meet this example's objective.

### Add a DFR Extension and Configure Global Settings

- Step 1. Add an instance of the DFR extension via the **Insert** menu and **Extensions** button.
- Step 2. Select the **General Settings** tab of the DFR extension and configure the settings as follows:

| <b>General Settings</b>     |              |
|-----------------------------|--------------|
| <b>Setting Name</b>         | <b>Value</b> |
| System Nominal Frequency    | 60 Hz        |
| System Phase Rotation       | ABC          |
| Station Name                | Substation1  |
| Company Name                | DFROwner     |
| Minimum Live Voltage        | 10 %         |
| Store DFR events in SOE Log | True         |
| Enable Local DFR Monitoring | False        |
| Enable Synchrophasor Server | False        |

| <b>Recording Settings—Fault Recording</b> |              |
|---|--------------|
| <b>Setting Name</b>                       | <b>Value</b> |
| Recording Rate                            | 24 kHz       |
| Recording Length Min.                     | 5 seconds    |
| Recording Length Max.                     | 5 seconds    |
| Pre-trigger Length                        | 2.5 seconds  |

- Step 3. Select the **Node Configuration** tab and add a 10-slot Axion chassis to the extension.
- Step 4. Select the **Substation Assets** tab and add two assets to the extension with the following settings:

| <b>Asset Name</b> | <b>Asset Type</b> |
|-------------------|-------------------|
| Bus1              | Bus               |
| Line1             | Transmission Line |

- Step 5. Save the project settings by pressing <Ctrl+S>.

## Configure DFR Axion Node

Step 1. Open the **Node\_1** subitem and configure the Node to contain the following:

- ▶ One Power\_Coupler module
- ▶ Two SEL\_PRCTPT modules
- ▶ One SEL\_24DI module

Update the **Axion Module Variant** fields for the Power\_Coupler and SEL\_24DI modules to reflect the appropriate module types.

Step 2. In the **Node\_1** subitem, rename the four modules added in *Step 1* to PwrCoupler1, PRCTPT1, PRCTPT2, and DIMod1, respectively.

Step 3. Save the project settings by pressing <Ctrl+S>.

### NOTE

The extension automatically connects an RTAC to the Node 1 Power Coupler.

## Configure Bus1 Asset Settings and Triggers

Step 1. Open the **Bus1** subitem and select the **Settings** tab. Configure the settings as follows:

| Setting                             | Value   | Notes   |
|-------------------------------------|---------|---|
| Primary Voltage Source              | PRCTPT1 |   |
| Secondary Voltage Source            | None    |   |
| Voltage Measurement Switchover Time | 0.00    |   |
| Nominal Voltage                     | 230.00  | When using wye-connected PTs, this is the line-to-neutral voltage.  |
| Enable Continuous Recording         | True    | Record Bus1 asset tags in the Continuous Recording recorder. Tags recorded with this setting include VA_PM, VB_PM, VC_PM, V0_PM, V1_PM, V2_PM, FREQ_PM, ROCOF_PM, and EventTrigger. |

Step 2. Select the **Voltage Triggers** tab and enable the Phase A, Phase B, and Phase C overvoltage and undervoltage triggers. For each phase, set the **Oversupply Threshold** to 105 and the **Undersupply Threshold** to 95. This is equivalent to 105 percent of nominal (e.g.,  $230.00 \cdot 1.05 = 241.50$  kV) and 95 percent of nominal, respectively.

Step 3. Set the pickup time to 16 ms for each trigger condition.

Step 4. Save the project settings by pressing <Ctrl+S>.

## Configure Line1 Asset Settings and Triggers

Step 1. Open the **Line1** subitem and select the **Settings** Tab. Configure the settings as follows:

| Setting                         | Value   | Notes                                  |
|---------------------------------|---------|--|
| Line Voltage Source             | PRCTPT2 |  |
| Current Measurement Calculation | PRCTPT2 | Optionally sum two SEL_PRCTPT modules. |

| Setting                         | Value   | Notes   |
|---------------------------------|---------|---|
| Bus Voltage Source              | None    | Optionally add the Bus Voltage Source for power calculations and fault location. Use if three-phase PTs are not available on the transmission line.   |
| Voltage Source for Calculations | Line    | If both the Line Voltage Source and the Bus Voltage Source are available, choose which voltage source is used for power calculations and fault location.  |
| Nominal Voltage                 | 230.00  | Using wye-connected PTs, insert the line-to-neutral voltage. Voltage triggers are a percentage of nominal based on this setting value.  |
| Maximum Load Current            | 1250.00 | Insert the maximum expected transmission line load current. Current triggers are configured as a percentage of this value.  |
| Enable Continuous Recording     | True    | Record Line1 asset tags in the Continuous Recording recorder. Tags recorded with this setting include VA_PM, VB_PM, VC_PM, V0_PM, V1_PM, V2_PM, IA_PM, IB_PM, IC_PM, I0_PM, I1_PM, I2_PM, FREQ_PM, ROCOF_PM, P3_Fund, Q3_Fund, S3_Fund, and EventTrigger. |
| Enable Fault Location           | False   |   |

- Step 2. Select the **Voltage Triggers** tab and enable the Phase A, Phase B and Phase C overvoltage and undervoltage triggers. For each phase, set the **Oversupply Threshold** to 110 and the **Undersupply Threshold** to 90. This is equivalent to 110 percent and 90 percent of nominal.
- Step 3. Select the **Current Triggers** tab and enable the Phase A, Phase B, Phase C, and neutral overcurrent trigger conditions. For each phase, set the **Overcurrent Threshold** to 125. This is equivalent to 125 percent of the **Maximum Load Current** setting.
- Step 4. Set the **Neutral Overcurrent Threshold** to 5. This is equivalent to 5 percent of the **Maximum Load Current** setting.
- Step 5. Set the pickup time to 16 ms for each trigger condition.
- Step 6. Save the project settings by pressing <Ctrl+S>.

## Configure Digital Input Channels

- Step 1. Open the **DigitalInputs** subitem.
- Step 2. Update the **Channel Names** of INPUT\_001, INPUT\_002, INPUT\_003 to reflect the breaker names.
- Step 3. Set **Enable Trigger** to True for INPUT\_001, INPUT\_002, and INPUT\_003.
- Step 4. Set the **Digital Input Trigger Type** to Falling Edge. Note that this generates a fault record when the digital input changes from True to False.

## Build DFR

- Step 1. Select the **General Settings** tab of the DFR extension and set the **Build DFR** setting to True.
- Step 2. Save the project settings by pressing <Ctrl+S>.

Step 3. Allow the project a couple of minutes to add all objects into the RTAC project tree.

## Example 2: DFR Extension Configures Advanced Features

This example demonstrates the DFR extension workflow to enable fault location, C37.118 PMU Servers, and Local Monitoring given the breaker-and-a-half substation design defined in *Sample System on page 812*.

### Objective

The DFR extension configures fault location on Transmission Line 1 and enables C37.118 PMU Servers on the substation assets. Additionally, the DFR extension configures local monitoring to indicate the status and health of the DFR system with an SEL\_16DO module.

### Assumptions

- Example 1 is complete.
- One SEL\_16DO Axion module has six contact outputs available for reporting DFR local monitoring status.
- Line1 has known line parameters used for fault locating.

### Method

#### Add Digital Output Module to Axion Node

- Step 1. Open the **Node\_1** subitem and configure the node to contain an SEL\_16DO module. Update the **Axion Module Variant** field to the appropriate module type.
- Step 2. In the **Node\_1** subitem, rename the digital output module to DO1.
- Step 3. Save the project settings by pressing <Ctrl+S>.

#### Update Digital Output Channel Names

- Step 1. Open the digital output subitem and update the following Channel Names:

| Output Number | Enable Output | Channel Name                     |
|---------------|---------------|----------------------------------|
| OUTPUT_001    | True          | LocalMonitoringAlarm             |
| OUTPUT_002    | True          | LocalMonitoringSynchronized      |
| OUTPUT_003    | True          | LocalMonitoringReady             |
| OUTPUT_004    | True          | LocalMonitoringRecording         |
| OUTPUT_005    | True          | LocalMonitoringNewEventAvailable |
| OUTPUT_006    | True          | LocalMonitoringEnabled           |

- Step 2. Save the project settings by pressing <Ctrl+S>.

## Enable Local Monitoring and C37.118 Synchrophasor Server

Step 1. Select the **General Settings** tab of the DFR extension and configure the settings as follows:

| General Settings            |       |
|-----------------------------|-------|
| Setting Name                | Value |
| Enable Local DFR Monitoring | True  |
| Enable Synchrophasor Server | True  |

Step 2. Save the project settings by pressing <Ctrl+S>.

## Enable Fault Location on Transmission Line 1

Step 1. Open the **Line1** subitem and the **Settings** tab. Configure the settings as follows:

| Setting Name          | Value | Notes   |
|-----------------------|-------|---|
| Enable Fault Location | True  | Enable when Line1 transmission line parameters are known. |

Step 2. Save the project settings by pressing <Ctrl+S>.

Step 3. Configure the transmission line asset with the following settings:

| Setting Name                          | Value | Notes  |
|---------------------------------------|-------|--|
| Positive Sequence Impedance Magnitude | 7.8   | Insert the Line1 secondary positive-sequence impedance magnitude in ohms.  |
| Positive Sequence Impedance Angle     | 84    | Insert the Line1 positive-sequence impedance angle in degrees.   |
| Zero Sequence Impedance Magnitude     | 24.8  | Insert the secondary Line1 zero-sequence impedance magnitude in ohms.  |
| Zero Sequence Impedance Angle         | 81.5  | Insert the Line1 zero-sequence impedance angle in degrees.   |
| Line Length                           | 100   | Length of the transmission line (Line1). This value is used to indicate the fault location on transmission line in the report generated by the extension.  |
| Restraint Factor 0                    | 0.1   | Ratio of the magnitude of zero-sequence current to the magnitude of the positive-sequence current.   |
| Restraint Factor 2                    | 0.1   | Ratio of the magnitude of the negative-sequence current to the magnitude of the positive-sequence current.   |
| Nominal Current Input Secondary       | 5     | Secondary nominal input current rating of the attached CT. This value is used in identifying the fault type.   |
| Time Window                           | 2     | Time window, in seconds, centered on the trigger time of the event record. This is used to calculate the fault location. A smaller time window results in quicker fault location reports. A larger time window analyzes more of the event record for fault locating, but results in slower fault location reports. |

Step 4. Save the project settings by pressing <Ctrl+S>.

## Configure the 16 Digital Outputs to Display Local Monitoring Outputs

The Local Monitoring application can assign status information detected by the DFR to auxiliary LEDs, local outputs, or Axion digital outputs. This example assigns the Local Monitoring status to Axion digital outputs.

- Step 1. Assign the following Local Monitoring status indicators to the Axion digital output channels:

| Status Indicator    | Assignment                       | Notes  |
|---------------------|----------------------------------|--|
| Enabled             | LocalMonitoringEnabled           | Axion I/O modules, Recording Group, Continuous Recording Group, and Recording Trigger POU's are enabled and operational. |
| Ready               | LocalMonitoringReady             | Recording Group POU output; indicates the DFR is ready to accept trigger conditions.                                     |
| Recording           | LocalMonitoringRecording         | Recording Group POU output; indicates the DFR is in the process of creating an event record.                             |
| New Event Available | LocalMonitoringNewEventAvailable | Recording Group POU output; indicates a new event is ready for download.   |
| Synchronized        | LocalMonitoringSynchronized      | The DFR RTAC is synchronized to a high-accuracy IRIG-B or PTP time source.   |
| Alarm               | LocalMonitoringAlarm             | The DFR RTAC detected an alarm condition.  |

- Step 2. Save the project settings by pressing <Ctrl+S>.

## Build DFR

- Step 1. Select the **General Settings** tab of the DFR extension and set **Build DFR** to True.
- Step 2. Save the project settings by pressing <Ctrl+S>.
- Step 3. Allow the project a couple of minutes to add all objects into the RTAC project tree.

# DMA Link

---

## Overview

The DMA Link extension automates the process of configuring an RTAC project file to integrate with the SEL Blueframe® Data Management and Automation (DMA) application suite. It is used with existing RTAC project files to quickly and reliably ensure that SEL Client and SEL Server devices in the project file are configured for DMA Disturbance Monitoring, DMA Credential Management, and DMA Configuration Monitoring. The DMA Link extension requires a project version of R152 or higher.

## Theory of Operation

The overall workflow of the DMA Link extension is as follows:

1. Insert the DMA Link extension into the project.
2. Configure the Settings tab with DMA parameters.

3. Toggle **Refresh Extension** to True and save the settings to modify SEL Client devices and add SEL Server devices for integration with DMA.
4. (Optional) Update the entries on the SEL Clients tab for each SEL Client device.
5. (Optional) Update the entries on the SEL Servers tab for each SEL Server device.
6. (Optional) Use the table of devices on the SEL Clients tab for use in copy/pasting into Blueframe Resource Management profiles.
7. (Optional) Export the configuration to a set of files prepared for import into Blueframe Resource Management.

## Features

RTAC project components added and configured by the DMA Link extension include the following:

- ▶ SEL Client devices modified with required settings for DMA Disturbance Monitoring, DMA Configuration Monitoring, and DMA Credential Management.
- ▶ SEL Server devices added and configured for DMA Listening and Blueframe Direct Resource Access (engineering access).

The complete configuration may optionally be exported to files prepared for import into Blueframe Resource Management.

## Settings Tab

The **Settings** tab is used to configure various parameters to update existing SEL Client devices in the RTAC project. These parameters also configure and add necessary SEL Server devices to the RTAC project. *Table 10.40* provides a summary of these settings.

**Table 10.40 Settings Names and Descriptions**

| Setting Name   | Description   |
|--|---|
| Refresh Extension  | Boolean (true or false). Set this value to True and save the project to update SEL Client and SEL Server devices in the project.  |
| Blueframe DMA IP Address   | The TCP/IP address of the Blueframe DMA connection.   |
| Enable DMA Listening   | 0–65535. DMA listening port. Setting this to 0 disables DMA Listening. Default is 5000.   |
| RTAC GUID  | String (as many as 255 characters). An identifier used to associate data with this RTAC device within DMA.  |
| Create Custom Device GUID from SEL Client Device Name <sup>a</sup> | Boolean (true or false). Set this value to True to create the initial Device GUID from the SEL Client Name. Set this to False to require manual GUID configuration per device. Default is True.   |
| Custom Device GUID Format  | None, Prefix, or Postfix. Set this to Prefix to apply the Custom Device GUID String to the beginning of the SEL Client Name, Postfix to apply the Custom Device GUID String to the end of the SEL Client Name, or None to omit the Custom Device GUID String from the SEL Client Name. Default is Prefix. |
| Custom Device GUID String  | String (as many as 32 characters). The string to add to the SEL Client Name as either a prefix or postfix (depending on the Custom Device GUID Format setting).   |
| Disturbance Monitoring Enabled                                     | Boolean (true or false). Set this value to True if using DMA Disturbance Monitoring. Default is True.   |

| Setting Name                       | Description  |
|------------------------------------|--|
| Event Collection Type <sup>a</sup> | CEV or COMTRADE. The initial Event Collection method for each SEL Client. This can be overridden on each SEL Client. Default is CEV.                                       |
| SER Collection Interval            | 250–100000000 (milliseconds). The interval at which to issue the ASCII <b>SER</b> command to collect and log new Sequential Events Recorder (SER) data. Default is 900000. |
| Event/SER Collection Timeout       | 100–65535 (milliseconds). The time-out period for event and SER data collection. Default is 30000.   |
| Credential Management Enabled      | Boolean (true or false). Set this value to True if using DMA Credential Management. Default is True.   |
| Configuration Monitoring Enabled   | Boolean (true or false). Set this value to True if using DMA Configuration Monitoring. Default is True.  |
| Configuration Check Interval       | 0 or 15–65535 (minutes). The period between attempts to detect a change in the configuration of the connected IED. Default is 1440.  |
| RTAC IP Address                    | The IP address of the RTAC that is/will be running this project.   |
| JSON Output Directory              | The file or folder directory in which to place the generated JSON files.   |
| Generate JSON                      | Set to True to generate the JSON files necessary to import into Blueframe Resource Management.   |

<sup>a</sup> These settings correspond to initial configuration parameters of SEL Client devices newly added to a project. The corresponding parameters can be modified later on a per-Client basis.

The Refresh Extension operation performs the following configuration for RTAC SystemTags settings:

- ▶ Sets **Device\_GUID** to the RTAC GUID parameter from the DMA Link extension Settings tab.
- ▶ Sets **Station\_Name** to the RTAC GUID parameter from the DMA Link extension Settings tab.

If there is a validation error for any of the settings, the Refresh Extension operation will not run until the error is corrected.

## SEL Clients Tab

The SEL Clients tab displays all the SEL Client devices that exist in the RTAC project. During the Refresh Extension operation, rows are automatically added to or removed from the SEL Clients tab to reflect the most recent state of SEL Client devices in the project file. Devices newly added to the SEL Clients tab are configured with the settings denoted as initial configuration parameters in *Table 10.40*. For devices already present on the SEL Clients tab, all settings are updated *except for Device GUID and Event Collection Type*. These two settings can be updated to be written to the SEL Client device on each save action on a per-device basis.

During a Refresh Extension operation, each new SEL Client device is added to the SEL Clients tab with the following values:

- ▶ **SEL Client Name:** The name of the SEL Client device from the project.
- ▶ **Device Model:** Formatted as SEL-XYZ; based on the device type that was selected to create the SEL Client device.

► **Device GUID:**

- If the SEL Client device contains a non-blank **Device GUID**, that value is written to the SEL Clients tab.
- If the SEL Client device contains a blank **Device GUID**:
  - If **Create Custom Device GUID from SEL Client Device Name** is set to True:
    - If **Custom Device GUID Format** is set to None, the **SEL Client Name** is used as the **Device GUID**.
    - If **Custom Device GUID Format** is set to Prefix or Postfix, the **Custom Device GUID String** is added to the beginning or end, respectively, of the **SEL Client Name**, and the result is used as the **Device GUID**.
  - If **Create Custom Device GUID from SEL Client Device Name** is set to False, the **Device GUID** is left blank and a warning message appears stating that a Device GUID cannot be blank.

**NOTE**

If the **Device GUID** of a device is updated on the SEL Clients tab, the updated value is written to the **Device GUID** of the specific SEL Client device when the settings are saved. Writing a blank is not allowed.

► **Virtual Port Number:** This value is read from the SEL Client device for reference purposes to assist in configuration of Blueframe DMA resources.

► **Event Collection Type:**

- If **Disturbance Monitoring Enabled** is set to True:
  - If **Event Collection Type** is set to CEV, **Enable Event Collection** is set to True.
  - If **Event Collection Type** is set to COMTRADE, **Enable Comtrade Collection** is set to True.
- If **Disturbance Monitoring Enabled** is False, both **Enable Event Collection** and **Enable Comtrade Collection** are read from the SEL Client device and **Event Collection Type** is set as follows:
  - If **Enable Event Collection** is True and **Enable Comtrade Collection** is False, the **Event Collection Type** parameter on the SEL Clients tab is shown as CEV.
  - If **Enable Event Collection** is False and **Enable Comtrade Collection** is True, the **Event Collection Type** on the SEL Clients tab is shown as COMTRADE.
  - If *both* **Enable Event Collection** and **Enable Comtrade Collection** are False, the **Event Collection Type** on the SEL Clients tab is shown as None.
  - If *both* **Enable Event Collection** and **Enable Comtrade Collection** are True, the **Event Collection Type** on the SEL Clients tab is shown as None, and in addition, the **Enable Event Collection** and **Enable Comtrade Collection** settings on the SEL Client device are updated to False because this condition is considered an error (only one of these methods should be enabled at any given time).

## NOTE

If the **Event Collection Type** of a device is updated on the SEL Clients tab, the updated values for **Enable Event Collection** and **Enable Comtrade Collection** are written to the specific SEL Client device as follows when the settings are saved:

- If Event Collection Type is updated to CEV: Enable Event Collection is set to True and Enable Comtrade Collection is set to False.
- If Event Collection Type is updated to COMTRADE: Enable Event Collection is set to False and Enable Comtrade Collection is set to True.
- If Event Collection Type is updated to None: Both Enable Event Collection and Enable Comtrade Collection are set to False.
- For SEL Client types that do not support CEV or COMTRADE event collection (such as the SEL-2032 or SEL-2440), selecting an Event Collection Type value other than None is ignored and Enable Event Collection and Enable Comtrade Collection are both forced to False.

For SEL Client devices already present on the SEL Clients tab, each Refresh Extension operation performs the following:

- If **Disturbance Monitoring Enabled** is set to True:
  - Sets **ASCII SER Logging Collection Period** to the value of **SER Collection Interval** from the DMA Link extension Settings tab.
  - Sets **Enable\_ASCII\_SER\_Logging** to True.
  - Sets **Poll CASCII Inactivity Timeout** to the value of **Event/SER Collection Timeout** from the DMA Link extension Settings tab.
- If **Configuration Monitoring Enabled** is True, sets **Period between attempts to detect a change in the Configuration of the connected IED** to the value of **Configuration Check Interval** from the DMA Link extension Settings tab.
- If **Credential Management Enabled** is True, sets **Enable Password Monitor** to True.

If an SEL Client device previously added to the SEL Clients tab is deleted from the RTAC project, the next save action will delete the corresponding row from the SEL Clients tab.

If a new SEL Client device is added to the RTAC project after a Refresh Extension operation, toggle the **Refresh Extension** setting to True and save the settings. This will add the new SEL Client device to the SEL Clients tab and configure the appropriate settings based on the user-input parameters on the DMA Link Settings tab.

## SEL Servers Tab

The SEL Servers tab displays all the SEL Server devices that exist in the RTAC project. During the Refresh Extension operation, rows are automatically added to or removed from the SEL Servers tab to reflect the most recent state of SEL Server devices in the project file. Devices newly added to the SEL Servers tab are configured based on the parameters that were entered on the **Settings** tab (see *Table 10.40*).

- ▶ Add DMA\_Listening\_SEL if that device name does not already exist in the project file and **Enable DMA Listening** is a non-zero value. This SEL Server device is used to report new events, SER reports, and configuration changes to DMA.
- ▶ Add DMA\_Eng\_Access\_SEL if that device name does not exist in the project file. This SEL Server device is used to provide engineering access to Blueframe via Direct Resource Access functionality.

During a Refresh Extension operation, each new SEL Server device is added to the SEL Servers tab with the following values:

- ▶ **SEL Server Name:** The name of the SEL Server device from the project.
- ▶ **Serial Tunneling Mode:** This value is read from the SEL Server device.

### NOTE

If **Serial Tunneling Mode** is updated on the SEL Servers tab, the updated value is written to the **Serial Tunneling Mode** setting of the specific SEL Server device when the settings are saved. In addition, the **Perform Authentication** setting is updated either to True when **Serial Tunneling Mode** is SSH or SSL/TLS, or to False when **Serial Tunneling Mode** is Raw TCP or Telnet.

- ▶ **Serial IP Port:** This value is read from the SEL Server device.

### NOTE

If **Serial IP Port** is updated on the SEL Servers tab, the updated value is written to the **Serial IP Port** setting of the specific SEL Server device when the settings are saved.

- ▶ **Client IP Address:** This value is read from the SEL Server device.

### NOTE

If **Client IP Address** is updated on the SEL Clients tab, the updated value is written to the **Client IP Address** setting of the specific SEL Server device when the settings are saved.

The Refresh Extension operation performs additional configuration for the DMA\_Listening\_SEL and DMA\_Eng\_Access\_SEL SEL Server devices as follows:

- ▶ Sets **Allow Anonymous SEL IP Clients** to True (because we are restricting the DMA\_Listening\_SEL and DMA\_Eng\_Access\_SEL SEL Server devices to only connect to the **Blueframe DMA Address**).
- ▶ Set **Client IP Address** to the value of **Blueframe DMA IP Address**.

- Sets **Client IP Port** to one of the following:
  - For DMA\_Listening\_SEL, sets **Client IP Port** to the value of **Enable DMA Listening**.
  - For DMA\_Eng\_Access\_SEL, sets **Client IP Port** to 0.
- Sets **Disable Remote Access** to False.
- Set **Enable Port Command** as follows:
  - For DMA\_Listening\_SEL, sets **Enable Port Command** to False.
  - For DMA\_Eng\_Access\_SEL, sets **Enable Port Command** to True.
- Sets **New Event Notification** to Encrypted Database.
- Sets **Serial Tunneling Mode** to SSH.

**NOTE**

This only applies when a Refresh Extension operation adds a new DMA\_Listening\_SEL or DMA\_Eng\_Access\_SEL SEL Server device to the SEL Servers tab. Subsequent Refresh Extension operations do not update **Serial Tunneling Mode** for these SEL Server devices.

- Sets **Perform Authentication** as follows:

**NOTE**

The following only apply when a Refresh Extension operation adds a new DMA\_Listening\_SEL or DMA\_Eng\_Access\_SEL SEL Server device to the SEL Servers tab. Subsequent Refresh Extension operations do not update **Perform Authentication** for these SEL Server devices.

- If **Serial Tunneling Mode** is SSH or SSL/TLS: True.
- If **Serial Tunneling Mode** is Telnet or Raw TCP: False.
- **Server IP Port:** This value is read from the SEL Server device for reference purposes to assist in configuration of DMA resources. In addition, this is an editable field on the SEL Servers tab in the DMA Link extension.

**NOTE**

This only applies when a Refresh Extension operation adds a new DMA\_Listening\_SEL or DMA\_Eng\_Access\_SEL SEL Server device to the SEL Servers tab. Subsequent Refresh Extension operations do not update **Server IP Port** for these SEL Server devices.

- Sets **Enable\_Unsolicited\_SER\_TX** to False.
- If the **Disturbance Monitoring Enabled** parameter from the DMA Link extension Settings tab is set to True, configures the following for the DMA\_Listening\_SEL SEL Server device:
  - Sets **Enable\_Unsolicited\_ASCII\_SER\_Notify\_TX** to True.
  - Sets **Enable\_Unsolicited\_Event\_Report\_TX** to True.
- If the **Configuration Monitoring Enabled** parameter from the DMA Link extension Settings tab is set to True, configures the following for the DMA\_Listening\_SEL SEL Server device:
  - Sets **Enable\_Unsolicited\_Config\_Change\_Notify\_TX** to True.

If an SEL Server device previously added to the SEL Servers tab is deleted from the RTAC project, the next save action will delete the corresponding row from the SEL Servers tab.

If a new SEL Server device is added to the RTAC project after a Refresh Extension operation, toggle the **Refresh Extension** to True and save the settings. This will add the new SEL Server device to the SEL Servers tab and configure the appropriate settings based on the user-input parameters on the DMA Link Settings tab.

# Dynamic Disturbance Recorder

---

## Overview

The Dynamic Disturbance Recorder (DDR) extension is designed to simplify data archiving from the IEC 61131-3 logic engine to the sequestered file system of an SEL RTAC. Generated files are then managed based on parameters supplied by the user. The maximum rate at which a DDR can record data is directly related to the main task cycle time configured in an ACCELERATOR RTAC project. Data cannot be recorded at a rate faster than the main task cycle, and the effective data recording rate is a multiple of the main task cycle. See *Section 1: Getting Started* for more details on configuring the task cycle.

Configuring a DDR instance for Sequence of Events (SOE) Harvester CSV mode allows for the automatic detection of RTAC SOE records and the subsequent formatting and writing of these logs to a NERC PRC-002-2-compliant SOE CSV data file. The SOE CSV files created by the DDR are available in the RTAC's File Manager and the file names are formatted with IEEE C37.232-2011 (COMNAME) naming. An instance of the SOE Harvester can be configured to detect one of two different types of records:

- ▶ Local RTAC SOE log entries created by the RTAC. These are designated in the RTAC SOE log with an Origin source of SEL\_RTAC.
- ▶ Remote RTAC SOE log entries originally collected via ASCII Sequential Events Recorder (SER) collection features on SEL and Modbus client devices. This mode can be configured with all devices in a single file or a single device per file.

Whether the DDR is enabled is determined by the licensed options present in your RTAC. When you order a new RTAC with the DDR library extension, the licensed option is configured correctly at the factory. If you want to add this feature to an existing RTAC, contact your SEL sales representative to obtain an upgrade package.

### NOTE

No more than four instances of the DDR extension should be added to a single RTAC project.

## Settings Tab


The Settings tab contains all configurable items for data recording and file management of generated log files. See the **Description** column for details on each configuration item. Move the slider or hover your cursor over a description to see the entire text of an item description. Type any applicable comments in the blank column on the right side.

**NOTE**

Do not use the same Directory Path value on multiple instances of the DDR. This configuration is not supported and will behave unpredictably.

## Monitored Data Tab

Data tags that are monitored by a DDR are added to the Monitored Data tab.

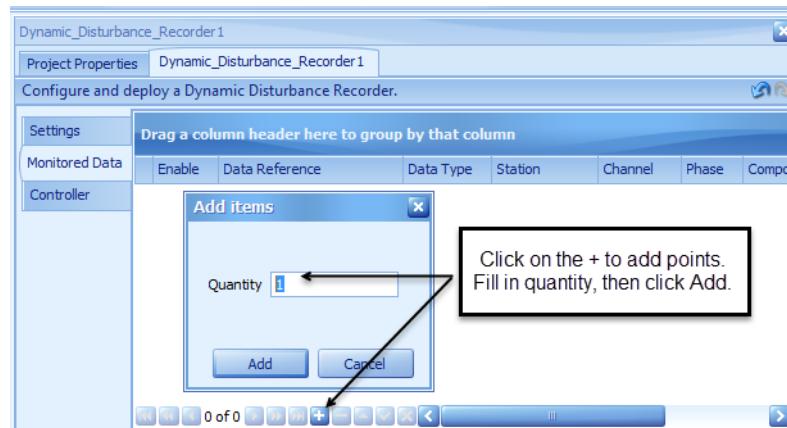

**Figure 10.19 Add Data Tags for Monitoring and Recording**

## Monitored Tag Configuration Parameters

Each monitored tag type has parameters that control whether the tag is recorded and what information is associated with recorded tag data.

**Table 10.41 Monitored Tag Type**

| Column Name    | Description  |
|----------------|--|
| Enable         | The point is monitored by the recorder when True.  |
| Data Reference | Source tag that is monitored by the recorder.  |
| Data Type      | The auto-detected data type of the monitored tag.  |
| Station        | User designation for data grouping.  |
| Channel        | User designation for data source.  |
| Phase          | Phase designation for the data. Only available for COMTRADE file formats.                                      |
| Component      | Component designation for the data. Only available for COMTRADE file formats.                                  |
| Unit           | The engineering units assigned to the quantity. Only available for analog quantities in COMTRADE file formats. |
| Default Value  | Default state of the Boolean status.   |
| Comment        | Optional user-entered comment field.   |

## SOE Harvesting Tab

When DDR is configured in SOE Harvester CSV mode, this tab is used to configure specified SEL and Modbus client devices with ASCII SER collection features enabled, which generates remote RTAC SOE entries. Each row represents one client device and its associated storage and formatting parameters. A single row with a blank Device Name parameter forces the SOE Harvester instance into local mode where it detects records generated by the RTAC rather than those retrieved from remote devices.

### SOE Harvesting Configuration Parameters

*Table 10.42* shows the available parameters for controlling the storage and formatting of SOE CSV records for each monitored device.

**Table 10.42 SOE Harvesting Parameters**

| Parameter                 | Description  |
|---------------------------|--|
| Enable                    | When True, remote SOE records from the specified device will be logged to an SOE Harvester CSV file.   |
| Device Name               | Drop-down list showing all available SEL and Modbus client devices in the project.   |
| Directory Path            | When the SOE Harvesting File Structure parameter is set to Multiple, this field is used to configure the individual directory path where SOE Harvester CSV records for the specified device are written.<br>When the SOE Harvesting File Structure parameter is set to Single, this field is disabled and CSV records are written to the path specified by the Directory Path parameter located on the Settings tab.   |
| File Name Postfix         | When the SOE Harvesting File Structure parameter is set to Multiple, this field is used to configure the individual file name postfix used in the naming of the CSV files created to store SOE records from the specified device.<br>When the SOE Harvesting File Structure parameter is set to Single, this field is disabled and CSV file postfixes are determined based on the File Name Postfix parameter located on the Settings tab.   |
| Station Label             | User-entered label used for the Station field in the resultant CSV text file.  |
| Device Label              | User-entered label prepended to the SOE description before being placed in the Device field in the resultant CSV text file. Only used in remote record mode.   |
| Trim Trailing Description | Enable detection and removal of additional descriptive text contained in parenthesis from the end of the SOE description field, following the new state. This option is primarily used by third-party Modbus devices capable of logging to RTAC SOE database. For example, given a Remote SOE message description of Latch Bit 1 Asserted (LT01), the resulting CSV log entry is written as: SOE log timestamp,UTC code,stationLabel,deviceLabel Latch Bit 1,Asserted. Only used in remote record mode |

## Controller Tab

Use the function blocks pins to view and modify the state of a DDR. See *Table 10.43* for the settings descriptions.

**Table 10.43 DDR POU Pin Settings**

| Pin Name       | Pin Type            | Description  | Default |
|----------------|---------------------|--|---------|
| EN             | Input: BOOL         | The EN input enables or disables this specific function block instance. Other inputs have no effect while EN is False. | True    |
| ActiveFileName | Output: String(255) | Name of the file to which logs are actively being written.   | ""      |

| <b>Pin Name</b>       | <b>Pin Type</b>     | <b>Description</b>   | <b>Default</b> |
|-----------------------|---------------------|--|----------------|
| ConsumedDirectorySize | Output: ULINT       | Size of all files in the monitored directory.  | 0              |
| MonitoredPoints       | Output: DINT        | The total number of tags monitored by the recorder. Applicable to CSV formats.   | 0              |
| AnalogPoints          | Output: DINT        | The number of analog tags monitored by the recorder. Applicable to COMTRADE formats.   | 0              |
| DigitalPoints         | Output: DINT        | The number of digital tags monitored by the recorder. Applicable to COMTRADE formats.  | 0              |
| Error                 | Output: BOOL        | A potential error condition was detected.  | False          |
| ErrorMessage          | Output: String(255) | Message describing the source of the Error flag.   | "              |
| QueryingRecords       | Output: BOOL        | Only present when DDR is configured in SOE Harvester CSV mode. Indicates that the DDR is actively querying the RTAC's SOE database for Remote SOE records. | "              |

### NOTE

When SOE Harvester CSV mode is enabled and the SOE Harvesting File Structure parameter on the Settings tab is set to Multiple, each row entry on the SOE Harvesting tab will generate a unique set of POU output pins specifically named for the device on the row in question. For example, a device named **SEL\_351S\_1\_SEL** on an enabled SOE Harvesting row will create 6 output pins named **ENO\_SEL\_351S\_1**, **ActiveFileName\_SEL\_351S\_1**, **ConsumedDirectorySize\_SEL\_351S\_1**, **Error\_SEL\_351S\_1**, **ErrorMessage\_SEL\_351S\_1**, and **QueryingRecords\_SEL\_351S\_1**.

## Supported File Formats

Four file formats are available which fall into three general categories:

- ▶ Discrete event entries, sourced from Tags
- ▶ Time-aligned log entries, sourced from Tags
- ▶ Discrete event entries, sourced from RTAC SOE records

The four formats are listed and described in this section.

### Discrete Event Log Entries, Sourced from Tags

#### SOE CSV

An ASCII CSV file in which each log represents the status value and the date and time value of a tag. Additional information in the log includes the time code (offset from UTC), station name, and channel name. This format is categorized as a discrete event log, i.e., a log is generated when the status value of the tag changes state. Supported tag data types include BOOL, BCR, CMV, DINT, DPS, INS, MV, REAL, SPS, STR, STRING, and UDINT. A sample file name and record are shown in *Figure 10.20* and *Figure 10.21*, respectively. The sample file shown in *Figure 10.21* is configured to monitor two SPS tags (representing breaker positions).



**Figure 10.20 Example SOE and Time-Aligned CSV File Name**

The time stamp of the file reflects the time of file creation, which may not be the time of the first log entry. The 1 and 0 in the sample record represent a TRUE and FALSE, respectively.

```
Date,Time,Time Code,Station,Device,Value
07/12/2018,15:16:05.441,-6,SubstationXYZ,Breaker1,1
07/12/2018,15:16:05.481,-6,SubstationXYZ,Breaker2,0
```

## Time-Aligned Log Entries, Sourced from Tags

The following two file formats are categorized as time-aligned logs in which all tags represented in a log entry are associated with a single time stamp. This category of files has three triggering mechanisms (detailed in *Triggering Conditions on page 831*).

### Time-Aligned CSV

An ASCII CSV file in which each log entry is a single line with all included tag values with a single time value. The order in which the data points are listed in the **Monitored Data** tab determines the position of the data in the log. A null entry, representing missing data for appropriate triggers, is represented as a blank entry (no characters) delimited by two commas. Supported tag data types include BOOL, BCR, CMV, DINT, DPS, INS, MV, REAL, SPS, STR, STRING, and UDINT. The created file name follows the format shown in *Figure 10.20*. A sample log is shown in *Figure 10.34*. This recorder is configured to monitor one of each of the following data types: CMV, INS, and SPS. Note in *Figure 10.21* that a phasor quantity, represented by a CMV data type, shows two entries: an entry for the magnitude and the angle of the phasor.

```
Timestamp,StationXYZ:PhA:Magnitude,StationXYZ:PhA:Angle,StationXYZ:BattVoltage,
StationXYZ:BattVoltage,StationXYZ:51A
2018/07/12 15:16:06.684,100.026,120.0,120,1
2018/07/12 15:16:07.684,100.026,120.0,120,1
```

### COMTRADE Float32

Two COMTRADE files are generated that adhere to IEC 60255-24:2013 and IEEE C37.111-2013. The first, a CFG file, is an ASCII file that includes information pertinent to the interpretation of a corresponding DAT file. The maximum size of the CFG file cannot exceed 1 MB. The size of the CFG file is related to the number of tags and the parameters given for those tags in the **Monitored Data** tab.

The DAT file contains the log entries and is a FLOAT32 binary file. Supported tag data types include CMV, MV, REAL, INS, DINT, SPS, and BOOL. The order of the points in the CFG and DAT file is the order in which the supported tag data types are listed above, followed by the order the points are listed in the

**Monitored Data tab.** For the COMTRADE format, missing data are filled with the hex value 0xFFFFFFFF in the binary DAT file for analog points. For binary points, missing data are represented as a zero. See IEC 60255-24:2013 and IEEE C37.111-2013 for more details pertaining to the COMTRADE file format. The generated files are named following the IEEE Standard for Common Format for Naming Time Sequence Data Files (COMNAME) C37.232-2011A. A sample file name and CFG file is shown in *Figure 10.21* and the screen that follows, respectively. The recorder is configured to monitor one of each of the following data types: CMV, INS, and SPS.



**Figure 10.21 Example COMTRADE Float32 File Name**

```
StationXYZ,RTAC,SEL,RTAC_Archive,2013
4,3A,1D
1,SubstationXYZ:Bay1_m,Am,CT,kA,1,0,0,-3.4028265E38,3.4028235E38,1,1,P
2,SubstationXYZ:Bay1_a,Aa,CT,kA,1,0,0,-3.4028265E38,3.4028235E38,1,1,P
3,SubstationXYZ:DC_Supply,,Battery,V,1,0,0,-3.4028235E38,3.4028235E38,1,1,P
1,Substation:51_Element,A,SEL_421,F
60
0
0,173
12/07/2018,15:16:06.684394 12/07/2018,15:16:06.684394 float32 1000
-6,-6
```

## Discrete Event Log Entries, Sourced From RTAC SOE Records SOE Harvester CSV

This format is an ASCII CSV file with formatting that matches that of the standard SOE CSV record type, which means that it is NERC PRC-002-2-compliant. The file name is assigned with IEEE C37.232-2011 (COMNAME) naming. RTAC SOE contents are written to file based on a trigger derived from a configured time reference or a periodic interval. The log file is configurable for a variable number of triggers that query for SOE records and append any new entries to the file.

An SOE Harvesting DDR instance can be used to record RTAC-generated SOE records (local records) or applied with SOE records created by client devices performing SER collection and logging from IEDs (remote records). Presently, remote records can only be retrieved and logged by SEL and Modbus client devices. These client devices should be time synchronized and must also produce SER records that are created in the same time zone. When the SOE harvester is used in remote mode, the file structure parameter can be set to either Single, in which records from all configured devices are written to a single file; or Multiple, in which records from each device are written to a unique file.

A DDR instance configured in SOE Harvester CSV remote mode assumes that all SER records for an IED follows the message format of My SER Message STATE, where the STATE portion of the message is isolated as the final CSV component for the Value column of the record file.

For example, consider the set of RTAC SOE records shown in *Table 10.44*:

**Table 10.44 Sample RTAC SOE Records**

| Time Stamp              | Category | Message                | Origin         |
|-------------------------|----------|------------------------|----------------|
| 2021-03-15 10:28:49.528 | Remote   | Latch Bit 1 Asserted   | MySELClient    |
| 2021-03-15 10:28:50.528 | Remote   | Latch Bit 1 Deasserted | MySELClient    |
| 2021-03-15 10:28:51.528 | Remote   | Latch Bit 1 On (LT01)  | MyModbusClient |
| 2021-03-15 10:28:52.528 | Remote   | Latch Bit 1 Off (LT01) | MyModbusClient |

The DDR instance is configured for SOE Harvesting CSV mode and two rows are added to the SOE Harvesting tab with settings as shown in *Table 10.45*:

**Table 10.45 SOE Harvesting Tab Settings**

| Enable | Device Name           | Directory Path | File Name Postfix | Station Label | Device Label  | Trim Trailing Description |
|--------|-----------------------|----------------|-------------------|---------------|---------------|---------------------------|
| True   | MySELClient_SEL       | (empty)        | (empty)           | Sub 1         | Primary Relay | False                     |
| True   | MyModbusClient_Modbus | (empty)        | (empty)           | Sub 1         | Backup Relay  | True                      |

The resulting CSV record file created in the RTAC's File Manager will contain the following contents:

```
Date,Time,Time Code,Station,Device,Value
03/15/2021,10:28:49.528,0,Sub 1,Primary Relay,Latch Bit 1,Asserted
03/15/2021,10:28:50.528,0,Sub 1,Primary Relay,Latch Bit 1,Deasserted
03/15/2021,10:28:51.529,0,Sub 1,Backup Relay,Latch Bit 1,On
03/15/2021,10:28:52.529,0,Sub 1,Backup Relay,Latch Bit 1,Off
```

When a DDR instance operates in local SOE mode, the CSV record format is identical to that of the remote mode output; however, the Device column is populated with the Tag Name parameter from the source SOE record and the Value column is populated with the complete SOE message.

## Triggering Conditions

For both the Time-Aligned CSV and COMTRADE Float32 formats, there are three types of triggers that generate logs. Only one trigger type can be configured per recorder. SOE Harvesting CSV only supports Time Change and Periodic triggers. The trigger types are as follows:

- **Time Change.** This trigger method monitors the tags listed in the **Monitored Data** tab for changes in the `dateTime_t` data structure. For more information on tag data structures, see *Appendix B: IEC 61131-3 Programming Reference*. A detected change in any `dateTime_t` data structure within a monitored tag creates a log with a time value. Each log entry contains all the points for which a time change was detected. By default, the first `dateTime_t` data structure for which a time change is detected is the time reference of the log entry. Using the optional Time Reference setting (found in the **Settings** tab), a user can specify a `timeStamp_t` data structure to be used as a time reference to better control when log entries are created and what time stamp is associated with the log. Any detected change in the `dateTime_t` data structure of the Time Reference setting will generate a log, and the time value associated with that log will be derived from the `dateTime_t` data structure of the Time Reference setting. Time Variance is an optional setting that allows users

to set a window around the time reference. If a time change is detected during the scan, but the time values of those data points do not fall within the time window (defined by the Time Variance setting) relative to the time reference, it will not be included in the log. Points that do not change or are outside the time window will have a null entry. This entry maintains the columnar position in the log entry as determined by the file format.

When SOE Harvester CSV mode is used, a change in the `dateTime_t` data associated with the Time Reference settings is used to trigger a write of all queued SOE data to file. If the number of accumulated triggers exceeds the SOE Harvester Triggers Per File setting and a subsequent trigger is encountered and queued data need to be written, a new CSV file is created.

- ▶ **Periodic.** This trigger method periodically samples all points at the specified interval set by the Logging Interval in the **Settings** tab, regardless of whether the time value or the data status value of the monitored tags change. The time value for the log entry is the system time of the RTAC at the time of the periodic interval. No null entries are present because all data are sampled. This is a snapshot of the tag status values as they are in the RTAC logic engine at the time of the periodic interval.

When SOE Harvester CSV mode is used, the expiration of the time period specified by the Periodic time entry is used to trigger a write of all queued SOE data to file. If the number of accumulated triggers exceeds the SOE Harvester Triggers Per File settings, and a subsequent trigger is encountered and queued data need to be written, a new CSV file is created.

- ▶ **Event.** This trigger method monitors a Boolean value set by the Trigger Signal in the **Settings** tab. When the Boolean trigger condition is evaluated as TRUE, a file is generated that contains a configurable number of pre-trigger and post-trigger log entries in addition to a log entry for the time the trigger signal asserted. New log entries are created at each main task cycle. The time period encompassed by the log is equal to the main task cycle time multiplied by the number of cycles set by the settings Pre-trigger task cycles and Post-trigger cycles plus a trigger sample for the asserted Trigger Signal. If a trigger condition is detected before the minimum configured Pre-trigger task cycles are met, a log will be created that contains the available pre-trigger log entries plus the trigger and the post-trigger log entries. If a trigger condition is detected before a previous trigger event is processed, it will be ignored. Like the Periodic trigger, a value is populated for each monitored tag regardless of change in data status or time stamp. Triggered file records cannot exceed 50 MB in total file size.

## File Management

A DDR automatically manages the rate at which files are generated and deleted. These behaviors are adjustable via three settings in the Settings tab: Max File Size, Max Folder Size, and Maximum Number of Days.

The rate at which files are generated is controlled by the Max File Size. This setting enables a compromise between the number of files generated and the maximum usable file size that analytic applications can successfully interpret. This will also determine how easy it is to move or transfer files. For optimal

file system performance, each recorder must be configured such that the rate of file generation does not exceed the ability of the file system to process the created files. When configuring your recorder, ensure that files are not created faster than once every 100 processing cycles as a general rule. To verify if the recorder is creating files at an unsustainable rate, monitor the ActiveFileName output POU Pin. If this name is changing faster than 100 processing cycles, the recorder may encounter issues when trying to create or delete files. Max File Size does not apply for SOE Harvesting CSV mode, as the Triggers Per File parameter is used to define when new CSV files are created.

Generated files persist in the file system until one of two conditions are met: (1) the files age out of Maximum Number of Days for file retention or (2) the configured Max Directory Size is exceeded. This setting is used to set an upper bounds on the amount of storage a recorder is allowed to consume in the sequestered file system. It also provides a means to provision storage between multiple recorders such that the overall available storage is not exceeded. Ensure an appropriate buffer so that maximum system storage is not exceeded.

The mechanisms for managing files differ between CSV and COMTRADE file format recorders. The CSV file format recorders assess the Maximum Number of Days threshold against current RTAC system time and deletes files that exceed the threshold. If the Max Directory Size is exceeded, files are deleted one at a time until the total directory size is less than the Max Directory Size. COMTRADE file format recorders assess the Maximum Number of Days threshold against the latest file time stamp (as shown in the file name) in the directory. Files that exceed that threshold are deleted. If the Max Directory Size is exceeded, files are deleted in units of one day until the total directory size is less than the Max Directory Size.

## Special Considerations for COMTRADE Logging

A DDR instance configured for COMTRADE record generation in a continuous recording application does bear some special considerations for the configuration.

- ▶ As discussed in the File Management section above, ensure that the **Maximum File Size** setting is tuned to prevent frequent and rapid generation of resultant COMTRADE zip files. Rapidly generating COMTRADE zip files can exceed the capabilities of the RTAC file system, possibly resulting in COMTRADE data loss.
- ▶ If using tags from PrCtPt modules in the Monitored Data, assign the **Enable Recorder** setting equal to **ECAT\_POU.Client\_State = 5**. This ensures that logging does not enable until the EtherCAT IO network is up and running with all modules reporting data and avoids erroneous invalid tag data being logged to the COMTRADE record on RTAC project startup.
- ▶ Recorders creating COMTRADE records and sampling data at greater than 60 samples per second (logging every 16.667 ms) can encounter gaps in data between subsequent COMTRADE records during times of system burden.

- Phasor measurement tags (ending in \_PM) from IEEE C37.118 clients are not time-aligned with phasor measurement tags from PrCtPt Axion modules before entering the logic engine. To maintain original time stamp accuracy, segregate C37.118 and PrCtPt Axion phasor measurement tags into dedicated instances of DDR or apply a time alignment pre-processing routine in logic (see *class\_TimeAlignment (Class)* in the *Programming Reference for ACCELERATOR RTAC SEL-5033 Software*).
- When logging IEEE C37.118 client or PrCtPt module phasor measurement tags and there are non-phasor tags also included in the recorder configuration, if there is a desire to maintain the original time stamp of the phasor tags then ensure the **Reference Time** setting is configured using the \_PM.t timestamp component of one of those phasor tags to enforce the use of those time stamps.
- If the Monitored Data configuration is changed (channels added or removed) on an existing continuous recording COMTRADE instance, ensure that the contents of the TEMP directory associated with that recorder are deleted before the new settings are activated. If not, a logic engine restart may result from the unexpected channel configuration.

## Email Plus

---

### Overview

The Email Plus extension provides Simple Mail Transfer Protocol (SMTP) client functionality and includes user authentication, Transport Layer Security (TLS) encryption, and detailed logging for each email sent. Multiple recipients can be specified, including carbon copy (Cc) and blind carbon copy (Bcc) recipients. The extension provides a text editor in which the email body can be formatted, including the ability to reference tags throughout the RTAC project. Emails are triggered by user logic or by any Boolean tag in the project, making the extension ideal for sending emails on alarm conditions. Email Plus is a licensed feature on the RTAC platform. When an RTAC has an active license of "ReportGenerator," Email Plus is also active on that RTAC unit.

Email Plus can be configured in 3 possible modes:

- **Triggered Report:** Use Triggered Report mode to define a fixed list of email recipients along with a Boolean trigger that generates and sends an email. The body contents of the email message are defined on the **Body Editor** tab where fixed text or html layouts can be mixed with dynamic values from tags or variables in the project.
- **Monitored Alarms:** Use Monitored Alarms mode and the associated **Monitored Alarms** tab to define a set of BOOL and SPS tags that are monitored for rising or falling edge changes along with associated messages to describe the state changes. Each alarm is assigned a Group between 1 and 10 that allows for categorization of alarms into different email recipient lists. Lists of recipients are defined on the **Group**

**Recipients** tab where email recipients are configured along with an associated group. During runtime, if a state change is detected in any of the monitored signals, a timestamped SOE-style email is generated and sent to the appropriate list of recipients.

- **Monitored Events:** Use Monitored Events mode and the associated **Monitored Events** tab to define a list of SEL Protocol client devices that are monitored for new events via tags on the **History - New Event** tab. When these tags indicate that the connected SEL IED has detected a new fault, the contents of those tags are used to generate a formatted "new event" email with details such as timestamp, event type, and fault location. The functionality can optionally wait for collection of an associated CEV or COMTRADE record from the IED and then include it as an attachment along with the new event email. The **Group Recipients** tab is also used in this mode to define the recipients of the new event emails.

See the EmailPlus section in the Programming Reference (available from the help menu of the RTAC configuration software) for additional information on Email Plus behavior and advanced configuration options.

## Settings Tab

The **Settings** tab contains all configurable items for the extension. See the **Description** column for details on each configuration item. Move the slider or hover your cursor over a description to see the entire text of an item description. Type any applicable comments in the blank column on the right side. See the EmailPlus library documentation in the Programming Reference for detailed information on acceptable formatting of email addresses and hostnames. The **Emailer Type** setting is used to select the operational mode of this Email Plus instance. Depending on which mode is selected, certain settings fields not applicable to the current mode will grey out and become unavailable.

If a hostname is used for the email server, the interface used for communications must be able to access a DNS server. There are two supported methods for this. First, you can configure the interface to use DHCP, which will automatically identify a DNS server via the lease process with the DHCP server. Second, you can manually configure a DNS server in the global network interface settings in the RTAC's web server.

## Body Editor Tab

The **Body Editor** tab is used when the Emailer Type is configured for Triggered Report. This tab provides a text editor for formatting the email body content that is issued when the email trigger asserts. The text editor behavior is described in detail in *Text Editor Tab on page 894*. This editor may contain any printable ASCII character or standard control characters (i.e., \n, \r, and \t). When characters outside the standard printable ASCII range must be used, it is recommended that HTML character encodings be used with the email body type configured for HTML.

## Recipient Groups Tab

The **Recipient Groups** tab is used when the configured Emailer Type is Monitored Alarms or Monitored Events. Multiple email recipients are configured on this tab and each recipient can be assigned into distinct groups, numbered from 1 to 10. When a monitored alarm or event source IED is configured, it is assigned to one of these groups. This allows for selectivity in which configured recipients receive a curated selection of alarms or events that are of interest to them.

## Monitored Alarms Tab

The **Monitored Alarms** tab is only used when the Emailer Type is configured for Monitored Alarms. Each row added to this tab specifies a monitored SPS or BOOL tag that is continuously checked for rising or falling edge events (with optional pickup and dropout delays). If an assert or deassert is detected, then an email is issued containing the timestamp of the event and the associated text string for the event. The per-alarm Group Assignment field is used to assign the alarm to a group between 1 to 10, that aligns with the groups enabled for each recipient on the **Recipient Groups** tab. An optional analog quantity can be included with the email body for either (or both) types of events. This analog must be a tag type of BCR, DINT, INS, MV, REAL or UDINT.

## Monitored Events Tab

The **Monitored Events** tab is only used when the Emailer Type is configured for Monitored Events. Each row added to this tab specifies an SEL Protocol Client device that is monitored for "new event" detections. The specified SEL Protocol device must have the **Enable\_New\_Event\_Filtering** POU input pin configured with a Default Value of TRUE and all tags on the **History - New Event** tab should be enabled in order for the Monitored Event functionality to generate the most complete Event Summary emails. The Attachment Record Type specifies a value of None, CEV or COMTRADE - this is used to optionally include the associated record file as an attachment to the Event Summary email. The Auto-Config Device field can be toggled to True and when the project is saved the extension will automatically configure the following aspects of the specified SEL Protocol device:

- The **Enable\_New\_Event\_Filtering** POU Pin has the Default Value configured to TRUE.
- All tags on the **History - New Event** tab are enabled.
- If the Attachment Record Type setting is configured as CEV, the **Enable Event Collection** setting on the **Settings** tab is enabled. If the Attachment Record Type setting is configured as COMTRADE, the **Enable Comtrade Collection** setting is enabled instead.
- The **Event Name Format** setting is configured as COMNAME. The associated **COMNAME Event Name String** setting is configured with a comma-separated value containing the Device Location and IED Name (with whitespace removed from both) from the Monitored Events tab. For example, a Device Location of "My Substation" and IED Name of "The 351 Feeder Relay" are used to create a COMNAME string of **MySubstation,The351FeederRelay**. This will produce a record file with a COMNAME compliant name such as **230523,042256552,-7t,MySubstation,The351FeederRelay,10010.zip**.

## Controller Tab

The extension controller has four output pins, as shown in *Table 10.46*.

**Table 10.46 Email Plus POU Pins**

| Pin Name      | Pin Type            | Description  | Default |
|---------------|---------------------|--|---------|
| Initialized   | Output: BOOL        | TRUE if the extension instance is successfully initialized   | FALSE   |
| RuntimeErrors | Output: STRING(255) | Lists any runtime errors encountered   |         |
| Status        | Output: STRING(255) | Lists the present status of the Email Plus instance. In Monitored Alarm configuration this includes indications of a startup delay and other activity. In Monitored Events configuration, this will indicate an active search for an event record for a particular device. |         |
| Busy          | Output: BOOL        | While TRUE, an email is being sent and no further emails can be triggered  | FALSE   |

## Falling Conductor Protection

### Overview

The Falling Conductor Protection extension automatically generates the required user logic to define the circuit parameters necessary to implement falling conductor protection systems as described in the technical paper "Catching falling conductors in midair — detecting and tripping broken distribution circuit conductors at protection speeds" available from [ieeexplore.ieee.org](http://ieeexplore.ieee.org). This extension provides a means for implementing falling conductor detection with streamlined configuration and simplified deployment. The logic algorithms implemented to perform falling conductor detection are described in full in the Falling Conductor Protection section of the Programming Reference Manual.

The falling conductor algorithm provides the following five methods of detection to best support various applications and to tailor the functionality to a system's inherent behavioral properties:

- ▶ Voltage change (i.e.,  $dV/dt$ ) method
- ▶ Zero-sequence voltage (i.e.,  $V_0$ ) magnitude method
- ▶ Zero-sequence voltage (i.e.,  $V_0$ ) angle method
- ▶ Negative-sequence voltage (i.e.,  $V_2$ ) magnitude method
- ▶ Negative-sequence voltage (i.e.,  $V_2$ ) angle method

Each instance of the extension inserted into the project represents a single circuit and uses the class \_FallingConductorMonitor object from the FallingConductorProtection ACCELERATOR RTAC library. Multiple extension instances may be inserted into a single project to support several circuits. Each circuit must contain one or more zones and similarly should contain two or more switches. The class \_FallingConductorMonitor object is intended to work specifically with phasor measurement units (PMUs) associated with IEEE C37.118 client devices to satisfy the measurement requirements that samples be time-synchronized and updated at consistent intervals. The IEDs/ PMUs with which the IEEE C37.118 client devices communicate are intended to have application-specific programming for the falling conductor protection algorithm to operate properly; this programming is out of the scope of this content.

In addition to being used in protection systems, the falling conductor algorithm and this extension can also be used solely for monitoring purposes. This may be beneficial where control applications might be impractical or undesirable, and it provides the ability to evaluate the system and algorithm without directly interfering with existing protection systems.

#### **NOTE**

The Falling Conductor Protection extension requires the RTAC to have the FallingConductorProtection library license.

## Settings Tab

The **Settings** tab provides the controls and set points for defining general circuit and protection parameters, including the ability to disable the algorithm or to disable protection control and use the system for monitoring only. General items such as the circuit's nominal voltage and phase/ground overcurrent set points used by traditional protection are specified here. SOE alarm conditions related to faulty sensors, blown fuses, or even zero-sequence current spikes can be enabled or disabled from the Settings tab. Additionally, the number of falling conductor detection methods can be specified using the **Affirmative Detection Type** input so that fault indication and related trip signals are only sent if the required number of detection methods indicate that a falling conductor fault has been detected.

The Settings tab contains five input fields (four required, one optional) that represent various circuit-wide operational conditions provided by SPS or BOOL tags typically sourced from the PMU representing the substation feeder source for the distribution circuit, as shown in *Table 10.47*.

**Table 10.47 Settings Tab Tag Configuration**

| Setting Name                  | Data Type | Required |
|-------------------------------|-----------|----------|
| Enable Test Mode Tag          | SPS       | Yes      |
| Disable FCP Tag               | SPS       | Yes      |
| Substation Breaker 52A Status | SPS       | Yes      |
| Round-Trip Time Output Tag    | SPS       | No       |
| Target Reset                  | BOOL      | Yes      |

## Advanced Settings Tab

The **Advanced Settings** tab provides tuning parameters for various pickup and dropout timers used in the falling conductor protection algorithms. In a normal scenario, these parameters do not need to be adjusted.

## Zones Tab

The **Zones** tab provides the ability to configure the discrete zones used to fully describe the circuit being protected by the falling conductor protection extension. One or more zones can be added to the Zones tab as individual rows where each row specifies the attributes necessary to populate the class\_FallingConductorMonitor.bootstrap\_Zone method to describe the circuit for the algorithmic processing.

Each zone's name must only contain characters valid for an IEC 61131-3 string, and the name must not be used by any other zones. The zone's phase voltages must directly reference CMV type tags from an IEEE C37.118 client's PMU, which will represent the zone's voltage in order to provide error detection. Additionally, if switches referencing a zone specify the g\_NO\_REFERENCE\_VOLTAGE tag provided by the FallingConductorProtection library, these switches will automatically reference the zone's voltages as their own for use in falling conductor detection.

## Switches Tab

Much like the Zones tab, one or more switches can be added to the **Switches** tab, where they are defined with all of the appropriate attributes to satisfy the class\_FallingConductorMonitor.bootstrap\_Switch method. Included among these attributes are a unique name, the name of the zone that the switch belongs to, and the name of the parent (upstream) zone; all voltage and current tags associated with the switch; the switch's 52A (breaker) contact status; a control point that can be used to issue a trip command; and a control to exclude the switch from falling conductor detection mechanisms.

All switches must define a zone reference, but it is possible to have zones that do not have the ability to clear faults themselves. In such cases, a parent zone can be defined to defer trip requests to the upstream zone. The zone reference defined for each switch must be a valid name from the list of valid (and unique) zone names as defined on the Zones tab. As such, this field is required for each switch in the table. The optional parent zone reference field defines the upstream zone to which trip requests should be deferred if the present zone is unable to execute them and clear any detected falling conductor faults itself. If this field is specified, it must be a valid zone name from the list of defined zone names on the Zones tab.

The **Switch Type** field specifies a switch as being an active switch (**Breaker Switch** or **Substation Breaker**) capable of tripping to clear faults or a passive device capable only of monitoring voltages and currents (**Fuse Tap** or **Non-Operational**). If specified as a Fuse Tap type switch, the falling conductor algorithm will make comparisons between that switch and others in the zone to monitor for what may be a blown-fuse condition instead of a true falling conductor scenario. In such cases, falling conductor related trip signals will be blocked to prevent false trip requests.

Each switch can specify phase and ground overcurrent pickup values that define the setting values used by traditional protection systems located at the switch. These values help the falling conductor algorithm block trip requests under conditions where the traditional protection schemes should intervene instead.

Several required tag fields must be configured for each switch. Each of these fields represent either an input tag that provides information for the falling conductor protection algorithm to operate properly or an output tag for the algorithm to provide feedback or control to the field device.

A useful feature for the configuration of the falling conductor protection extension is the combination of the **C37.118 Client** and **Autofill Client Tags** fields. When the **C37.118 Client** field is populated with an appropriate client device, the **Autofill Client Tags** field can be toggled to **True** to request that all voltages, currents, breaker statuses, and offline indications be filled automatically upon the next project save operation. After these fields are set and the project is saved, the phase voltages and currents will be loaded according

to what can be identified from the specified C37.118 client by searching the tag names. Tag fields will only be populated if the standard tag names shown in *Table 10.48* can be found on the respective client; otherwise, they will be left empty. If one or two of the voltages for a particular switch are not measured, they can be filled with the g\_NO\_REFERENCE\_VOLTAGE global variable so that the falling conductor algorithm will reference the zone voltages as their own to comprehensively monitor switches where only one phase voltage may be available. (The same *cannot* be done for phase currents.)

**Table 10.48 C37.118 Client Tag Naming Standards**

| Tag Field                   | PMU Partial Tag Name Match Criteria |
|-----------------------------|-------------------------------------|
| Phase A Voltage             | VA                                  |
| Phase B Voltage             | VB                                  |
| Phase C Voltage             | VC                                  |
| Phase A Current             | IA                                  |
| Phase B Current             | IB                                  |
| Phase C Current             | IC                                  |
| Switch 52A Status           | STATUS                              |
| Exclude Switch Point        | FCPDISABLED                         |
| Fault Status Point          | FAULT                               |
| IED Healthy Point           | IEDHEALTHY                          |
| Round-Trip Time Input Point | PINGPONG                            |

In addition to the voltages and currents, various indication signals provided by the client will also be searched for on the respective C37.118 client when tag autofilling is enabled. These include the following:

- ▶ Switch 52A Status (breaker status bit)
- ▶ Exclude Switch (switch excluded from falling conductor protection operations)
- ▶ Fault Status (switch has encountered a traditional protective fault)
- ▶ IED Healthy (switch reports overall good health status)
- ▶ Round-Trip Time Input (echo of signal asserted from Round-Trip Time class output)

At the same time, the client POU's .Offline tag will be populated into the Offline Indicator field during an autofill operation. Should the PMU not actually provide a breaker status bit, the Switch 52A Status field can be manually filled with the g\_BREAKER\_CLOSED constant so that the algorithm will ignore the breaker status and attempt to defer trip requests upstream when necessary.

The following three additional output tag fields must be manually populated in order to ensure proper class operation:

- ▶ Trip Control Output
- ▶ Test Mode Enabled Output
- ▶ Circuit FCP Disabled Output

These control point fields should be assigned to SPS tags belonging to a protection-class communications protocol such as IEC 61850 GOOSE. These SPS tags should be a component of a GOOSE transmit message subscribed to by the field device that is ultimately responsible for issuing the trip signal.

Although the falling conductor algorithm can be used for monitoring purposes only, it also provides the functionality required to send trip commands using the **Trip Control Output** specified for each switch. If no tripping is desired, or a switch does not provide the ability to trip (i.e., it is used for metering purposes only and not control), the Trip Control Output field can be populated with the g\_NO\_REFERENCE\_TRIP\_CONTROL constant so that the algorithm will attempt to defer the trip request to another switch in its zone that possesses tripping capabilities, or to a configured parent zone.

The **Test Mode Enabled Output** and **Circuit FCP Disabled Output** SPS tags are toggled simultaneously on all switches based on the state of the circuit-wide **Enable Test Mode Tag** and **Disable FCP Tag** input SPS tags assigned on the Settings tab. The states of the per-switch output tags follow that of the circuit-wide values, as shown in *Table 10.49*.

**Table 10.49 Test Mode and FCP Disabled Tag Logical Relationship**

| Circuit-Wide Enable Test Mode Tag | Per-Switch Test Mode Enabled Output | Circuit-Wide Disable FCP Tag | Per-Switch Circuit FCP Disabled Output |
|-----------------------------------|-------------------------------------|------------------------------|--|
| FALSE                             | TRUE                                | FALSE                        | FALSE                                  |
| TRUE                              | FALSE                               | TRUE                         | TRUE                                   |

To provide the ability to manually intervene and block switch(es) from operating during conditions where they should be blocked and locked out, or if they are simply unavailable for other reasons, an **Exclude Switch** point provides a means to inform the falling conductor algorithm that the specific point(s) should be blocked from falling conductor detection. In cases where a switch should never be disabled or no disabling control is used for a switch, the global constant g\_NEVER\_DISABLED\_SWITCH can be used.

## Controller Tab

The **Controller** tab provides interfacing with the class\_FallingConductorMonitor library outputs as shown in *Table 10.50*.

**Table 10.50 Controller Tab Function Block POU Outputs**

| Pin Name          | Pin Type    | Description  | Default |
|-------------------|-------------|--|---------|
| Enabled           | BOOL        | System Enable Indicator  | FALSE   |
| Licensed          | BOOL        | Indicator of successful license check                            | FALSE   |
| AlgorithmsEnabled | BOOL        | Indicator of enabled status of FCP algorithms                    | FALSE   |
| Error             | BOOL        | System Error Indicator   | FALSE   |
| ErrorDesc         | STRING(255) | Descriptive Message of Applicable Error                          |         |
| Trip              | BOOL        | Indicator that Trip Signal Has Been Sent to One or More Switches | FALSE   |
| FaultySensorAlarm | SPS         | Faulty Sensor Detection Alarm                                    | FALSE   |

| Pin Name           | Pin Type    | Description  | Default |
|--------------------|-------------|--|---------|
| FaultySensorDesc   | STRING(255) | Faulty Sensor Detection Description                    |         |
| dI0dtSpikeAlarm    | SPS         | Zero-sequence current rate-of-change spike alarm       | FALSE   |
| dI0dtSpikeDesc     | STRING(255) | Zero-sequence current rate-of-change spike description |         |
| BlownFuseDetected  | SPS         | Blown fuse detection indicator                         | FALSE   |
| BlownFuseDesc      | STRING(255) | Blown fuse detection description                       |         |
| BlockingFaultAlarm | SPS         | System Blocking Fault Alarm                            | FALSE   |
| BlockingFaultDesc  | STRING(255) | System Blocking Fault Alarm description                |         |
| dVdtFaultDetect    | BOOL        | dVdt Fault Detection Indicator                         | FALSE   |
| V0MagFaultDetect   | BOOL        | V0 Magnitude Fault Detection Indicator                 | FALSE   |
| V2MagFaultDetect   | BOOL        | V2 Magnitude Fault Detection Indicator                 | FALSE   |
| V0AngFaultDetect   | BOOL        | V0 Angle Fault Detection Indicator                     | FALSE   |
| V2AngFaultDetect   | BOOL        | V2 Angle Fault Detection Indicator                     | FALSE   |

Each configured Zone and Switch will also generate an output status on the Controller tab configured as a **struct\_ZoneStatus** or **struct\_SwitchStatus** and named for the **Zone ID** or **Switch ID** field on the Zones or Switches tab.

When using the falling conductor algorithm for monitoring purposes only, every switch should be set to use the `g_NO_REFERENCE_TRIP_CONTROL` global constant. Under these circumstances, the outputs from the Controller tab can be monitored to interpret the algorithm's processing decisions.

## FTPSync

---

### Overview

The FTPSync extension provides file synchronization between the RTAC file system and a remote FTP server. User-specified directories and/or IEDs will be monitored for new or updated content for periodic synchronization with the FTP server. Directories and IED events are tracked to ensure that content is synchronized only once and that no content is missed. The extension supports both FTP and SFTP.

Any files or IED events in the RTAC file system can be synchronized. Events collected from the following sources are available for monitoring:

- ▶ SEL Protocol Client COMTRADE
- ▶ SEL Protocol Client CEV
- ▶ MMS Protocol Client COMTRADE
- ▶ Modbus Protocol Client COMTRADE
- ▶ EtherCAT Module COMTRADE
- ▶ Courier Client COMTRADE
- ▶ IEC 60870-5-103 COMTRADE
- ▶ Recording Groups COMTRADE

For directories and IEDs of interest, the directory structure on the RTAC is mirrored to the FTP server. This prevents naming conflicts and allows you to easily locate synchronized content. To ensure that files will be synchronized successfully, confirm that the FTP server has permissions configured to allow the user to upload files, modify files, and create directories.

## Settings Tab

The **Settings** tab contains all configurable items for the extension. See the **Description** column for details on each configuration item. Move the slider or hover your cursor over a description to see the entire text of an item description. Type any applicable comments in the blank column on the right side.

## Monitored Directories Tab

The **Monitored Directories** tab is used to specify each RTAC file system directory to be monitored for FTP Synchronization.

## Monitored Events CEV Tab

The **Monitored Events CEV** tab is used to specify each SEL protocol client to be monitored for FTP synchronization of CEV event files. The **Client** field provides a dropdown list of all SEL protocol clients in the project. It is the responsibility of the user to configure the given client for CEV event collection.

## Monitored Events COMTRADE Tab

The **Monitored Events COMTRADE** tab is used to specify each protocol client or recording group to be monitored for FTP synchronization of COMTRADE event files. The **Client** field provides a dropdown list of all available clients and recording groups in the project. Supported client types for COMTRADE monitoring are listed above. It is the responsibility of the user to configure the client for COMTRADE event collection.

## SFTP Public Key Authentication

### NOTE

Public key authentication is available in firmware versions R147-VO and later.

Public key authentication can be used with SFTP as an alternative to providing a password. By placing the RTAC's public SSH key on the SFTP server, the SFTP server can authenticate the RTAC for file transfer and encrypt the communication.


First, it is assumed that a user exists on the SFTP server with permissions configured to allow the user to upload files, modify files, and create directories. The password for the user can be set to anything (because it will not be used) or left blank if required as such by the SFTP server. Consult the SFTP server's documentation pertaining to public key authentication for more information.

Next, prepare the key. In the RTAC web interface, select **SSH Keys** under **Security**. Copy the contents of the **Host Key** text box between "— BEGIN SSH2 PUBLIC KEY —" and "— END SSH2 PUBLIC KEY —".



**Figure 10.22 Copying the RTAC Host SSH Key**

Paste the copied text into an empty text file (e.g., in Notepad++). At the beginning of the file, type "ssh-rsa", followed by a space. At the end of the file, type a space, followed by "<username>@<RTAC hostname>", replacing "<username>" by the target username and "<RTAC hostname>" by the RTAC hostname, e.g., "sally@RTAC1". The RTAC hostname can be found in the web interface by selecting **Interface** under **Network**.

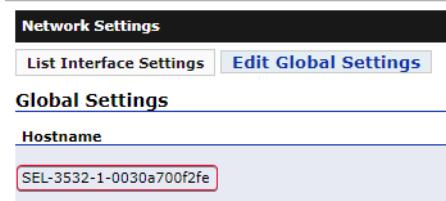

**Figure 10.23 Locating the RTAC Hostname**

The text should all be on a single line and look similar to the following (shown with line wrapping enabled):

```
ssh-rsa
AAAAB3NzaC1yc2EAAAQABAAQCSL3ko6ukv7+cZs+m4uvkTUJdIs0hPP3uvOrx+s
Y4qFBsUQQ9jMdxMFsWTcrTQtezAIKXVGYVV+kVcoAlV+jim2j7cGbNAJRZvj4C+krMTe
Wgk+tCWImBQk2KjjjKhChovGJd+/XXqxeHA0gWlWcfsnewdh5zg2WaD3uCv0w9eUpcVic
9RpfoSTNoqDwm1zauj8D8NLqkh3AMtI4L/99gHKrjdVzqOMR01NYyJo3Xqa/hB8g2piG
hXb/pEYhBiM51Txq+42YgiSCJ1WiRxZ2Agj4SRaDB4Lm5Z6t3fK9ywHKYhVNwtZvi+678
dHgUHH5Lm53BemloCS/td5.sally@SEL-2241-0030A705AD5A
```

**Figure 10.24 Example of Prepared Host Key**

At this point, the host key can be copied to the SFTP server. The steps involved vary depending on the SFTP server. Consult the SFTP server's documentation pertaining to public key authentication for more information.

Lastly, to set the FTSPSync extension instance to use public key authentication, set the **Username** field to the target username and the **Password** field to "HOST\_SSH\_KEY".

## Controller Tab

Each directory and IED will have output pins on the controller showing the current sync state for that item, numbered uniquely. Additionally, FileSyncInProgress indicates whether or not a sync is active. See *Table 10.51* for the pin descriptions.

**Table 10.51 FTPSync POU Pins**

| <b>Pin Name</b>            | <b>Pin Type</b>     | <b>Description</b>                                  | <b>Default</b> |
|----------------------------|---------------------|---|----------------|
| FileSyncInProgress         | Output: BOOL        | TRUE if a file sync is in progress                  | FALSE          |
| DirectoryName<number>      | Output: STRING(255) | The name of the directory or IED                    | N/A            |
| LastError<number>          | Output: STRING(255) | The last error encountered for the directory or IED | ""             |
| LastSyncSuccessful<number> | Output: BOOL        | TRUE if the last sync was successful                | False          |

## Grid Connect

### Overview

The Grid Connect extension is intended to provide a comprehensive interface to manage a complete Distributed Energy Resource (DER) configuration by using the IEC 61131-3 logic engine components built in the RTAC's GridConnect library solution. The extension provides all functionality necessary to organize data mapping between individual generation and storage assets by using their Modbus communications and the respective I/O necessary to interact with GridConnect control blocks. The extension also configures the requisite logic necessary to coordinate these control interfaces to manage the configured site from the perspective of the Point of Common Coupling (PCC) or the Point Of Interconnect (POI).

## Theory of Operation

Configuring the Grid Connect extension is based on the concept that each configuration asset will have a unique Modbus connection to exchange controls and status information. It is assumed that these assets will often use shared data maps, allowing the sharing and reuse of these maps. The extension presents several unique IEC 61131-3 functions that are used to provide a definition of the relationships between data maps and individual GridConnect control interfaces.

The overall workflow of the extension is as follows:

- Step 1. Define the appropriate Modbus maps for each asset type.
- Step 2. Specify the communications parameters for each Modbus client in relation to specific assets.
- Step 3. Configure the IEC 61131-3 data mapping resources for each Modbus map.
- Step 4. Apply the control parameter settings for general GridConnect control.
- Step 5. Set the desired mode functionality.

## Settings

### General Settings

The Settings tab is used to configure various parameters that are used throughout the GridConnect project and to build the DER management project settings based on the extension settings. *Table 10.52* provides a summary of these settings.

**Table 10.52 General Settings Names and Descriptions**

| <b>Setting Name</b>                | <b>Description</b>  |
|------------------------------------|---|
| GridConnect Version                | Version of GridConnect Library to use. Minimum 3.5.7.2 required.  |
| Persistent Data Write Interval     | The interval in which the class will periodically generate the managed JSON data file containing the present values of all monitored variables.   |
| Enable DDR Recording               | If True, set points and status indicators will be logged to unique files dependent on grid-connected or islanded operation on each evaluation period.   |
| New File Trigger                   | The criteria for which log files will be rotated. Specify whether files should be automatically rotated each day at midnight or whether they should be rotated after reaching a specific file size. |
| Max File Size                      | Maximum size (in bytes) allowed for a log file before rolling to a new file. May not be lower than 1 KB (1,024 bytes) or larger than 1 MB (1,048,576 bytes).  |
| Max Folder Size                    | Maximum size (in MB) allowed for within a log folder before removing the oldest log files. May not be lower than 100 MB or larger than 100 GB (102,400 MB).   |
| Log Persistent Data Runtime Errors | Set to True to log runtime errors to the SOE log.   |

## Persistent Data

The Persistent Data tab serves to permit the configuration of control inputs that should be retained through power cycles and device restarts. This table of values allows a user to enable persistence of a variety of control inputs for the master plant controller.

## Plant Devices

The Plant Devices tab allows the configuration to associate specific devices whose data represent information representing the complete interface. This should be the device that represents the communications for the master plant controller feedback data. This feeds back into the PlantMeasurementGood input pin on the master plant controller.

## Modbus Clients

The Modbus Clients tab allows the addition of as many as 256 unique Modbus clients that represent individual assets (inverter, battery, etc.). Check the project type for the maximum number of Modbus sessions that are allowed for that project type. The parameters for this page include the reduced set of configuration options necessary to instantiate communications clients. *Table 10.53* provides a summary of these settings.

**Table 10.53 Modbus Client Settings**

| <b>Setting Name</b> | <b>Description</b>   |
|---------------------|--|
| Modbus Device Name  | Name of the device to be added.  |
| Map Template        | Name of the Modbus map template to use.  |
| Asset Type          | Reflects the asset type defined on the Modbus Maps page for the selected template. |
| Connection Type     | Connection medium for the Modbus client.   |
| Server IP Address   | IPv4 address of the Modbus server.   |

| Setting Name                | Description                                       |
|-----------------------------|---|
| Server IP Port              | TCP port of the Modbus server.                    |
| Server Modbus Address       | RTU address.                                      |
| Serial Port                 | Serial port to use for connection.                |
| Serial Type                 | Serial hardware type.                             |
| Baud Rate                   | Baud rate for the serial connection.              |
| Parity Bit                  | Serial parity configuration.                      |
| Stop Bit                    | Stop bit configuration.                           |
| Full Duplex                 | Designator whether serial channel is full duplex. |
| Enable Port Auxiliary Power | Enable +5 V power on Pin 1.                       |

## Modbus Maps

The Modbus Maps tab allows users to define a number of shared Modbus maps that may be reused between each of the individual Modbus clients. It is possible to load the configuration of Modbus map data from a CSV file, if desired.

*Table 10.54* provides a summary of these settings.

**Table 10.54 Modbus Map Settings**

| Setting Name    | Description  |
|-----------------|--|
| Modbus Map Name | Name of the Modbus map to be added.  |
| Template Type   | Specifies a custom template or a layout defined by a CSV template file. For custom templates, the user must configure the template tag-for-tag.                              |
| Template File   | Path to the CSV file to be used as the template configuration.   |
| Asset Type      | PV Inverter, BESS Inverter, Capacitor, Load, or Reciprocating Generator. Defines the specific type of asset that the map should represent as relates to GridConnect library. |

## PCC Settings

The PCC Settings tab provides an interface to apply individual settings and logic tag inputs for the master plant controller that apply inputs from the PCC. *Table 10.55* provides a summary of these settings.

**Table 10.55 PCC Settings**

| Setting Name                   | Description   |
|--------------------------------|---|
| Enable                         | PCC control enable.   |
| ControlMode                    | Reactive power control mode.                                    |
| StorageOperationMode           | Operation mode in which storage inverters operate.              |
| FrequencyRegulationMode        | Frequency regulation mode.                                      |
| PLimitMode                     | Real power mode.  |
| EvaluationPeriod               | Time between closed-loop control algorithm executions.          |
| ControlRetryPeriod             | Time between control retries to field devices.                  |
| InverterModeChangeControlDelay | Time to delay sending set points after an inverter mode change. |

| Setting Name                         | Description   |
|--------------------------------------|---|
| QLimitHigh                           | Reactive power high limit.  |
| QLimitLow                            | Reactive power low limit.   |
| PFLagLimit                           | PCC lagging power factor limit (positive). Units are in PF.   |
| PFLeadLimit                          | PCC leading power factor limit (negative). Units are in PF.   |
| VLimitHigh                           | PCC high voltage limit. Units are in kV.  |
| VLimitLow                            | PCC low voltage limit. Units are in kV.   |
| dV_dQ                                | PCC ratio of the expected change in voltage to a change in reactive power. Units are in V/VAR.  |
| PlantPRating                         | PCC power output rating. Units are in kW.   |
| PlantQRating                         | PCC reactive power rating. Units are in kVAR.   |
| PlantLowPowerCutoff                  | Power output below which no power factor control occurs. Units are in kW.   |
| ResetPIControllers                   | A rising edge resets all closed-loop controllers. Outputs of the controllers are set to the proportional value of all summed power from managed assets.   |
| AdditionalStorageDischargeSetPoint   | Set point for storage inverters to output in addition to current PV output. If PLimitMode is Simple or Advanced, this set point will not contribute to meeting PSetpoint. Plant output should match PSetpoint + AdditionalStorageDischargeSetPoint. Units are in kW.  |
| PLimitDelay                          | Time between the last valid inverter response and application of the adaptive power limit. Units are in s.  |
| PowerClampMarginPercent              | The percentage of the inverter set point to initiate power clamping in Advanced mode when an inverter's response does not meet the set point.   |
| QuickStop                            | Stop signal. Sets power and Q output set points to zero, disregarding ramp rates on all inverters. Disables the master controller. This signal goes through to connected inverters even if the master controller is already disabled.   |
| EnforcePccPFLimitsForAllModes        | If True, PF lead and lag limits are enforced at the PCC for all reactive power modes based upon PlantP. If False, lead and lag limits are enforced for power factor control mode only.  |
| ResetPIControllersForSetpointChanges | If True, when a set point point change occurs, the PI controller resets to the current plant output. If False, when a set point changes, the PI controller remains at its current output and the system drives to a new set point. When False, the PI controller may need to work through any accumulated errors from the previous set point objective. |

## Plant Metering Inputs

The Plant Metering Inputs tab presents a configuration interface to specify the metering inputs representative of the overall plant. *Table 10.56* provides a summary of these settings.

**Table 10.56 Plant Metering Input Settings**

| Setting Name | Description   |
|--------------|---|
| PlantP       | PCC real power measurement tag. Units are in kW (positive values = flow from plant to grid).              |
| PlantQ       | PCC reactive power measurement tag. Units are in kVAR (positive values = flow from plant to grid).        |
| PlantPF      | PCC power factor measurement tag. Units are in PF (positive values = lagging, negative values = leading). |
| PlantV       | PCC voltage measurement tag or constant. Units are in kV.   |

| Setting Name     | Description   |
|------------------|---|
| PlantF           | PCC frequency tag or constant. Units are in Hz.   |
| Nominal Voltage  | Nominal voltage at the PCC.   |
| PCCBreakerClosed | The PCC connection status tag. If True, the connection is closed and connected to external power systems. If False, the connection is open and an island. |

## Simple/Advanced Power Control

The Simple/Advanced Power Control tab is a configuration page to modify both Simple and Advanced mode power control. *Table 10.57* provides a summary of these settings.

**Table 10.57 Simple/Advanced Power Control**

| Setting Name             | Description   |
|--------------------------|---|
| PSetpoint                | PCC power limit set point. Units are in kW.   |
| PDeadband                | PCC power limit deadband. Units are in kW.  |
| PLimitRampSetpoint       | Plant power limit ramp rate (real power change/second). Units are in kW/second. Setting to 0 results in no ramp supervision.                  |
| PKp                      | Proportional tuning parameter for power control.  |
| PKi                      | Integral tuning parameter for power control.  |
| ConstantPowerPickupTime  | The time to wait for storage assets to assist in achieving the PSetpoint at the PCC.  |
| ConstantPowerDropOutTime | The time to wait to stop using storage assets to assist with achieving the PSetpoint at the PCC.  |
| PLimitDelay              | Time between the last valid inverter response and application of the adaptive power limit. Units are in s.                                    |
| PowerClampMarginPercent  | The percentage of the inverter set point to initiate power clamping in Advanced mode when an inverter's response does not meet the set point. |

## PCC Metering Mode

The PCC Metering Mode tab provides the options to configure the GridConnect extension for PCC Metering Mode, separate from Simple or Advanced power control mode. *Table 10.58* provides a summary of these settings.

**Table 10.58 PCC Metering Mode Settings**

| Setting Name             | Description   |
|--------------------------|---|
| InitialSmoothingSetpoint | The percentage of the PV capacity that is the set point for the PV output in PCC metering mode when the collective PV output is less than this set point. Units are a percentage between 1 and 100. |
| MaxPExportSetpoint       | The maximum amount of real power that GridConnect exports at the PCC before reducing inverter set points to reduce exported power at the PCC. Units are in kW.                                      |
| MaxPIImportSetpoint      | The maximum amount of real power that GridConnect imports at the PCC before using storage assets to reduce importing real power at the PCC. Units are in kW.  |
| PLimitRampSetpoint       | Plant power limit ramp rate (real power change/second). Units are in kW/second. Setting to 0 results in no ramp supervision.  |
| PDeadband                | PCC power limit deadband. Units are in kW.  |

## VAR Control

The VAR Control tab provides the options to configure VAR control operating mode parameters. *Table 10.59* provides a summary of these settings.

**Table 10.59** **VAR Control Settings**

| Setting Name  | Description  |
|---------------|--|
| QSetpoint     | PCC reactive power control set point. Units are in kVAR.   |
| QDeadband     | PCC reactive power control deadband. Units are in kVAR.  |
| QKp           | Proportional tuning parameter for VAR control.   |
| QKi           | Integral tuning parameter for VAR control.   |
| QRampSetpoint | Plant reactive power ramp rate (reactive power change/second). Units are kVAR/second. Setting to 0 will result in no ramp supervision. |

## Voltage Control

The Voltage Control tab provides the options to configure voltage control operating mode parameters. *Table 10.60* provides a summary of these settings.

**Table 10.60** **Voltage Control Settings**

| Setting Name           | Description  |
|------------------------|--|
| VSetpoint              | PCC voltage control set point. Units are in kV.  |
| VDeadband              | PCC voltage control deadband. Units are in kV.   |
| OptionalLowerVDeadband | An optional lower deadband for voltage control. If greater than 0, this is applied as the lower deadband for voltage control.    |
| VKp                    | Integral tuning parameter for voltage control.   |
| VKi                    | Integral tuning parameter for voltage control.   |
| dV_dQ                  | PCC ratio of the expected change in voltage to a change in reactive power. Units are in V/VAR.                                   |
| QRampSetpoint          | Plant reactive power ramp rate (reactive power change/second). Units are in kVAR/s. Setting to 0 results in no ramp supervision. |

## Voltage Compensation


The Voltage Compensation tab provides the options to configure voltage compensation operating mode parameters. *Table 10.61* provides a summary of these settings.

**Table 10.61** **Voltage Compensation Settings**

| Setting Name                 | Description  |
|------------------------------|--|
| Open Four Point Curve Editor | Set to True, then save to open the editor for the voltage regulation four-point curve. |
| VCompensationV1              | Voltage compensation voltage Set Point 1. Units are in kV.                             |
| VCompensationV2              | Voltage compensation voltage Set Point 2. Units are in kV.                             |
| VCompensationV3              | Voltage compensation voltage Set Point 3. Units are in kV.                             |

| Setting Name    | Description  |
|-----------------|--|
| VCompensationV4 | Voltage compensation voltage Set Point 4. Units are in kV.   |
| VCompensationQ1 | Voltage compensation reactive power Set Point 1. Units are in kVAR.  |
| VCompensationQ2 | Voltage compensation reactive power Set Point 2. Units are in kVAR.  |
| VCompensationQ3 | Voltage compensation reactive power Set Point 3. Units are in kVAR.  |
| VCompensationQ4 | Voltage compensation reactive power Set Point 4. Units are in kVAR.  |
| QDeadband       | PCC reactive power control deadband. Units are in kVAR.  |
| VKp             | Proportional tuning parameter for voltage control.   |
| VKi             | Integral tuning parameter for voltage control.   |
| dV_dQ           | PCC ratio of the expected change in voltage to a change in reactive power. Units are in V/VAR.                                   |
| QRampSetpoint   | Plant reactive power ramp rate (reactive power change/second). Units are in kVAR/s. Setting to 0 results in no ramp supervision. |

Voltage compensation in Grid Connect is performed using a four-point curve. This curve can be modeled and edited in an interactive dialog window with the extension. To open the dialog, change the Open Four Point Curve Editor setting to **True** and save the project. With the dialog open, any of the four points may be modified by clicking them to move them to appropriate locations and selecting **Apply**.

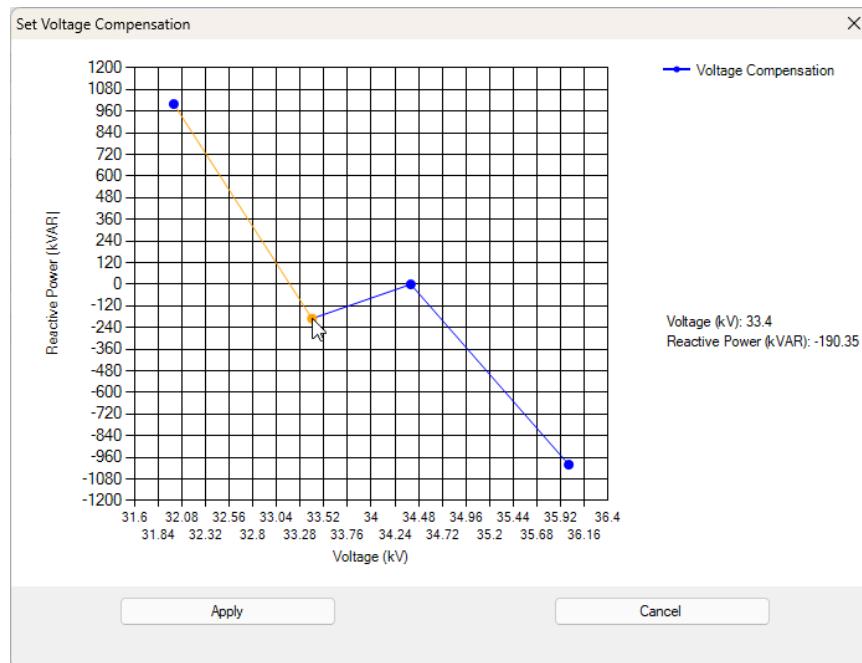

## Power Factor Control

The Power Factor Control tab provides the options to configure power factor control operating mode parameters. *Table 10.62* provides a summary of these settings.

**Table 10.62 Power Factor Control Settings**

| Setting Name   | Description   |
|----------------|---|
| PFSetspoint    | PCC power factor control set point. Units are in PF (positive values = lagging, negative values = leading).                     |
| PFDeadband     | PCC power factor control deadband. Units are in PF.   |
| PKp            | Proportional tuning parameter for power factor control.   |
| PKi            | Integral tuning parameter for power factor control.   |
| PFRampSetpoint | Plant power factor ramp rate (power factor change/second). Units are in PF/second. Setting to 0 results in no ramp supervision. |

## Power Factor Gradient

The Power Factor Gradient tab provides the options to configure power factor gradient operating mode parameters. *Table 10.63* provides a summary of these settings.

**Table 10.63 Power Factor Gradient Settings**

| Setting Name                 | Description   |
|------------------------------|---|
| PFCompensationSetpoint       | Power factor compensation nominal set point. Units are in PF.   |
| PFCompensationLowPowerCutoff | Power factor compensation low-power cutoff. Units are in percent (value should be between 0 and 100).                           |
| PFCompensationGradient       | Power factor compensation gradient. Units are in PF/kW.   |
| PFCompensationLowPFLimit     | Power factor compensation low-power factor limit. Units are in PF.  |
| PFDeadband                   | PCC power factor control deadband. Units are in PF.   |
| PKp                          | Proportional tuning parameter for power factor control.   |
| PKi                          | Integral tuning parameter for power factor control.   |
| PFRampSetpoint               | Plant power factor ramp rate (power factor change/second). Units are in PF/second. Setting to 0 results in no ramp supervision. |

## Solar Smoothing

The Solar Smoothing tab provides the options to configure solar smoothing operating mode parameters. *Table 10.64* provides a summary of these settings.

**Table 10.64 Solar Smoothing Settings**

| Setting Name           | Description  |
|------------------------|--|
| SolarSmoothingRampRate | The rate at which storage assets will ramp down from previous PV output. Units are in kW.                |
| SolarSmoothingRampTime | Time rate at which storage assets will discharge each ramp rate interval. Units are in seconds.          |
| SolarChargingRampRate  | The rate at which the PCC will increase ramp and dedicate excess PV energy to charging. Units are in kW. |
| SolarChargingRampTime  | Time rate at which SolarChargingRampRate will operate. Units are in seconds.                             |
| SmoothingStrategy      | Select a solar smoothing strategy to manage ramp rates and charging.                                     |

## Grid Connected Charging

The Grid Connected Charging tab provides the options to configure grid connected charging operating mode parameters. *Table 10.65* provides a summary of these settings.

**Table 10.65 Grid Connected Charging Settings**

| Setting Name             | Description   |
|--------------------------|---|
| StorageChargeSetpoint    | The amount of power used to charge storage assets. Each storage asset receives a proportional charge set point based on the power rating of the storage asset. Units are in kW. |
| AutomaticStorageCharging | Enables automatic charging of storage assets without specified user inputs. See storage inverter charging for additional details.   |
| AutomaticChargingSource  | Select a source to use for automatic charging.  |
| ReferenceChargeSOC       | This is a target value to keep storage assets SOC at by the automatic storage charging algorithm. Units are a percentage between 1 and 100.                                     |
| PVOutputChargeMargin     | The percentage of current PV output that will be used to charge storage assets when AutomaticStorageCharging is True. Units are a percentage between 1 and 100.                 |
| AutomaticChargeDelayTime | The amount of time to pass before the automatic charging algorithm to start after storage assets stop discharging.  |

## Capacitor Configuration

The Capacitor Configuration tab provides the options to configure capacitor configuration operating mode parameters. *Table 10.66* provides a summary of these settings.

**Table 10.66 Capacitor Configuration Settings**

| Setting Name             | Description   |
|--------------------------|---|
| CapacitorOperationPeriod | Minimum time between capacitor operations.  |
| CapacitorOperatePercent  | A capacitor will close/open when total inverter Q is greater/less than capacitor Q rating /* CapacitorOperatePercent. |
| CapacitorPickUpTime      | The amount of time to wait before closing a capacitor in when the requirement for VARs is met.                        |
| CapacitorDropOutTime     | The amount of time to wait before opening a capacitor when the requirement for VARs is met.                           |

## Frequency Regulation


The Frequency Regulation tab provides the options to configure Frequency Regulation operating mode parameters. *Table 10.67* provides a summary of these settings.

**Table 10.67 Frequency Regulation Settings**

| Setting Name                 | Description  |
|------------------------------|--|
| Open Four Point Curve Editor | Set to True, then save to open the editor for the frequency regulation four-point curve. |
| FRegulationF1                | Frequency regulation frequency Set Point 1. Units are in Hz.                             |
| FRegulationF2                | Frequency regulation frequency Set Point 2. Units are in Hz.                             |
| FRegulationF3                | Frequency regulation frequency Set Point 3. Units are in Hz.                             |

| Setting Name  | Description   |
|---------------|---|
| FRegulationF4 | Frequency regulation frequency Set Point 4. Units are in Hz.  |
| FRegulationP1 | Frequency regulation real power Set Point 1. Units are a percentage of PlantPRating higher than or less than PSetpoint (from 0 to 100). |
| FRegulationP2 | Frequency regulation real power Set Point 2. Units are a percentage of PlantPRating higher than or less than PSetpoint (from 0 to 100). |
| FRegulationP3 | Frequency regulation real power Set Point 3. Units are a percentage of PlantPRating higher than or less than PSetpoint (from 0 to 100). |
| FRegulationP4 | Frequency regulation real power Set Point 4. Units are a percentage of PlantPRating higher than or less than PSetpoint (from 0 to 100). |

Frequency regulation in Grid Connect is performed using a four-point curve. This curve can be modeled and edited in an interactive dialog window with the extension. To open the dialog, change the Open Four Point Curve Editor setting to **True** and save the project. With the dialog open, any of the four points may be modified by clicking them to move them to appropriate locations and selecting **Apply**.

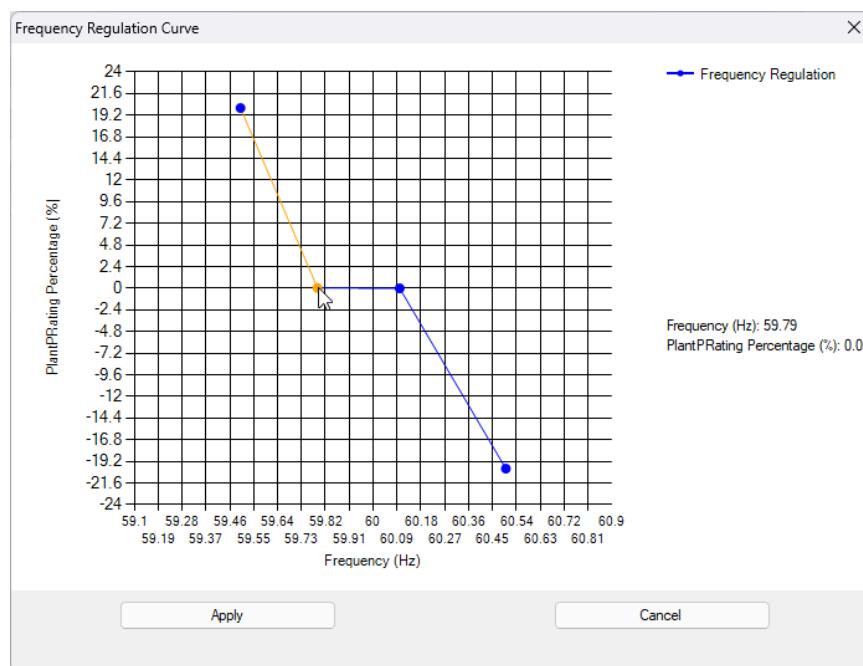

## Islanded Operation

The Islanded Operation tab provides the options to configure islanded operation operating mode parameters. *Table 10.68* provides a summary of these settings.

**Table 10.68 Islanded Operation Settings**

| Setting Name    | Description   |
|-----------------|---|
| EnableIsland    | If True, when islanding conditions exist, GridConnect will attempt to form and operate an island. If False, during islanded operation, all generation assets will be turned off. Otherwise, the setting will prevent an island being formed when False. |
| TargetIslandSOC | The target SOC level to charge the grid forming storage asset to when in islanded operations. Units are a percentage. Range is 1 to 100.  |

| Setting Name                    | Description   |
|---------------------------------|---|
| StartIslandCharging             | The SOC level at which to begin charging the grid forming storage asset when in islanded operations with currently active generation groups which support charging. If -1, GridConnect will ignore this charge level. Units are a percentage. Range is -1 to 100. |
| PvIslandSlewRate                | The overall ramp rate to use when increasing or decreasing PV set points in islanded operations. This ramp rate is split proportionally between all active PV inverters based upon each inverter's PRating. Units are in kW/s.                                    |
| PvReactiveIslandSlewRate        | The overall ramp rate to use when increasing or decreasing reactive power set points to PV assets. Units are in kVAR/s.   |
| PccConnectionClosed             | The PCC connection status. If True, the connection is closed and connected to external power systems. If False, the connection is open.   |
| InitialExpectedPCCState         | The default state of ExpectPccConnectionClosed.   |
| InternalFault                   | An indication that a fault has occurred in the island that cannot be isolated. If True, all generation will be shut down. An island cannot start when this setting is True.   |
| GridAvailableDelay              | The time to wait after GridAvailable transitions to True to shut down the island and start the transition back to grid connected operation.   |
| GridAvailable                   | The indication that external grid power is available and the site can be connected to the external grid. If the system behind the PCC is in the islanded mode and this input transitions to True, GridConnect returns to grid connected operation mode.           |
| IslandVoltage                   | The voltage that is monitored during islanded operations. PlantV is ignored during islanded operations. Units are in kV.  |
| IslandVoltageHigh               | The high limit of acceptable voltage during islanded operations. If GridConnect detects IslandVoltage > IslandVoltageHigh, all generation is shut down. When IslandVoltageHigh is 0, no monitoring for high voltage is performed. Units are in kV.                |
| IslandVoltageLow                | The low limit of acceptable voltage during islanded operations. If GridConnect detects IslandVoltage < IslandVoltagelow, all generation is shut down. When IslandVoltagelow is 0, no monitoring for low voltage is performed. Units are in kV.                    |
| GenTurnOnTimeout                | The time to wait for a generator to have the Synchronized pin asserted after GenOn asserts before marking the generator as unavailable. Minimum value is T#1S.  |
| IslandFrequencyDeviationTimeout | The time to wait after a frequency excursion has occurred during islanded operation before turning off all generation.  |
| IslandVoltageDeviationTimeout   | The time to wait after a voltage excursion has occurred during islanded operation before turning off all generation.  |
| IslandFrequency                 | The frequency that is monitored during islanded operations. PlantF is ignored during islanded operations.   |
| IslandFrequencyHigh             | The high limit of acceptable frequency during islanded operations. If GridConnect detects IslandFrequency > IslandFrequencyHigh, all generation is shut down. When IslandFrequencyHigh is 0, no monitoring for high frequency is performed. Units are in Hz.      |
| IslandFrequencyLow              | The low limit of acceptable frequency during islanded operations. If GridConnect detects IslandFrequency < IslandFrequencylow, all generation is shut down. When IslandFrequencylow is 0, no monitoring for low frequency is performed. Units are in Hz.          |
| PvPenetrationMode               | The mode used to restrict the PV output during islanded operations.   |
| MaxIslandPV                     | The maximum amount PV can contribute during islanded operations.  |
| IslandPvDeadband                | The deadband to bring the PV output within the PV set point during islanded operations. Units are in kW.  |
| IslandReset                     | If island operations are in islandErrorState, a rising edge on IslandReset must occur before GridConnect attempts to start the island again.  |

| Setting Name             | Description   |
|--------------------------|---|
| IslandBlackout           | Power system protection detected an issue that prevented the island from operating because of an imbalance between load and generation or other issues. If True, GridConnect sets all generation output to 0 and waits for user to reset. An island will not start if IslandBlackout is asserted.   |
| GridFormingMinFuel       | The percentage of fuel or charge the grid forming asset must have before the asset is selected as a grid forming asset. Units are in percentage. Range is 1 to 100.   |
| GridFormingVarPercentage | The percentage of VARs, which is generated during islanded operation, that should remain on the grid forming asset. Units are in percentage. Range is 1 to 100.   |
| AutomaticTransferSwitch  | If True, when an island is formed, the transfer switch automatically disconnects from the grid and turns on the grid forming asset. Island management starts when the grid forming asset is producing power. No island validation of load and generation capabilities occurs before redistributing set points. If False, island validation procedures occur before starting the island. |
| IslandSettleTime         | The time to wait after IslandOperationMode = RedistributeSetpoints before starting to adjust PV set points.   |

## OperationalData

The OperationalData subitem provides a static configuration for each asset (device) that should have some specific data attributes set statically or from data sources that do not originate with the Modbus data set sourced from the inverter itself. Many of these data may be set permanently during configuration and left to be unaltered at run time. However, it is possible for these data points to be configured to use logic engine tags, allowing real-time value updates during run time.

The OperationalData subitem is organized by unique asset type, separating assets according to the data that may be associated with them.

### PV Inverter

Assets defined as a PV Inverter type appear in the PV Inverter settings tab with each of the available settings defined in *Table 10.69*.

**Table 10.69** PV Inverter Operational Data Settings

| Setting Name   | Description   |
|----------------|---|
| IncludeCommand | Command to include the PV inverter in master plant control.   |
| ExcludeCommand | Command to remove the PV inverter from master plant control.  |
| PRating        | Power rating for the generator. Units are in kW.  |
| QRating        | Reactive power rating for the generator. Units are in kVAR.   |
| GridGroup      | The generation group to include this asset in during grid connected operation modes. Range is 1 to 10.  |
| AssetPError    | The amount of error that exists in the asset's response to a real power set point. This error value is used in power clamp logic when clamp is applied. This value should be slightly larger than the actual error from the asset. Units are a percentage. Range is 0 to 100.     |
| AssetQError    | The amount of error that exists in the asset's response to a reactive power set point. This error value is used in power clamp logic when clamp is applied. This value should be slightly larger than the actual error from the asset. Units are a percentage. Range is 0 to 100. |

| Setting Name         | Description   |
|----------------------|---|
| ContinuityAdjustment | The percentage amount to adjust PV set points by when returning to a proportional set point after system conditions have caused set points to be non-proportional. Units are a percentage. Range is 0–3.  |
| MinimumPVSetpoint    | When AssetP is less than the percentage of MinimumPVSetpoint of PRating, PLimitSetmag is set to the percentage of PRating. This accounts for conditions with lower power production or when the inverter produces no power at all. Units are a percentage. Range is 0 to 100. |

## BESS Inverter

Assets defined as a BESS Inverter type appear in the BESS Inverter settings tab with each of the available settings defined in *Table 10.70*.

**Table 10.70 BESS Inverter Operational Data Settings**

| Setting Name             | Description   |
|--------------------------|---|
| IncludeCommand           | Command to include the BESS inverter in master plant control.   |
| ExcludeCommand           | Command to remove the BESS inverter from master plant control.  |
| PRating                  | Power rating for the generator. Units are in kW.  |
| QRating                  | Reactive power rating for the generator. Units are in kVAR.   |
| GridGroup                | The generation group to include this asset in during grid connected operation modes. Range is 1 to 10.  |
| Reserve                  | If True, this asset is treated as a part of the reserve group that is used to supplement PCC objectives when the primary assets are unable to do so on their own.   |
| MinStateOfCharge         | A percentage value that the storage asset should not discharge the storage asset below. A value of 0 will not restrict discharging from the storage asset in any manner.  |
| MaxChargingPower         | The maximum amount of power that the storage asset is able to accept for charging. Units are in kW.   |
| MaxStateOfCharge         | A percentage value representing the maximum state of charge the storage asset should be charged to.   |
| RampChargingValues       | When True, uses a ramp when reaching the target charging value. When False, no ramp is used for charging set points.  |
| MinIslandOperation       | A percentage value of PRating that is the minimum utilization that this asset should have as the grid forming asset during islanded operations. Units are a percentage. Range is 1 to 100.  |
| GridFormingAsset         | If True, this asset is considered to be the single grid forming asset during islanded operation.  |
| IncrementalReserveMargin | The percentage of PRating that the asset is able to pick up without a significant deviation in output frequency. This is used for load acceptance criteria during islanded conditions. Units are a percentage. Range is 1 to 100.   |
| ColdLoadPickUp           | The percentage of PRating the asset is able to pick up without a significant deviation in output frequency when current asset output is 0. This is used for load acceptance criteria during islanded conditions. Units are a percentage. Range is 1 to 100.                       |
| StoragePSetpoint         | Storage real power set point. The storage asset only takes this set point when StorageOperationMode is either ManualStorage or DownRamp. Units are in kW.   |
| AssetPError              | The amount of error that exists in the asset's response to a real power set point. This error value is used in power clamp logic when clamp is applied. This value should be slightly larger than the actual error from the asset. Units are a percentage. Range is 0 to 100.     |
| AssetQError              | The amount of error that exists in the asset's response to a reactive power set point. This error value is used in power clamp logic when clamp is applied. This value should be slightly larger than the actual error from the asset. Units are a percentage. Range is 0 to 100. |

## Capacitor

Assets defined as a Capacitor type appear in the Capacitor settings tab with each of the available settings defined in *Table 10.71*.

**Table 10.71 Capacitor Operational Data Settings**

| Setting Name   | Description  |
|----------------|--|
| IncludeCommand | Command to include the capacitor inverter in master plant control.   |
| ExcludeCommand | Command to remove the capacitor inverter from master plant control.  |
| QRating        | Reactive power rating for the capacitor. Units are in kVAR.  |
| VRating        | Voltage rating of the capacitor. Units are in kV.  |
| SequenceNumber | The capacitor is dependent on another capacitor being closed first.<br>► 0 = The capacitor is not dependent on other capacitors.<br>► 1 = The capacitor is the first to be turned on and the last to be turned off.<br>► 2 = The capacitor will only be turned on if the capacitors with a sequence number of 1 is ON first.<br>► 3 = Follows 2.<br>► g_c_CAP_MAX = Follows g_c_CAP_MAX – 1. |

## Load

Assets defined as a Load type appears in the Load settings tab with each of the available settings defined in *Table 10.72*.

**Table 10.72 Load Operational Data Settings**

| Setting Name           | Description   |
|------------------------|---|
| IncludeCommand         | Command to include the load in master plant control.  |
| ExcludeCommand         | Command to remove the load from master plant control.   |
| PRating                | Power rating for the generator. Units are in kW.  |
| QRating                | Reactive power rating for the generator. Units are in kVAR.   |
| Disconnect             | A command to open the connection, provided system conditions allow for that. If True, GridConnect issues an open command and prevents attempts to include the load in grid operations until the Disconnect input is False. Disconnect issues the open command when energized when CanLoadBreak is True. |
| Connect                | A command to close the connection. If True, GridConnect issues a close command. GridConnect will not attempt to close if Disconnect is True.  |
| IsControllable         | If True, the asset can be dynamically included or excluded from the power system. If False, the asset is assumed to always be connected to the grid. Default is False.  |
| CanLoadBreak           | If True, the asset can be excluded from power system while energized. If False, the asset can only be excluded from power system when de-energized.   |
| IsMetered              | If True, the asset has metering available for historical data recording.  |
| HistoricalRecordLength | The number of values to buffer and calculate RunningAverage with.   |
| UseMeteredData         | If True, RunningAverage is used for nominal load acceptance instead of NominalPower during islanded operation. If False, NominalPower is used for nominal load acceptance during islanded operation.  |
| NominalPower           | The nominal amount of real power this load is expected to consume for use during islanded operation. If 0, the load configuration is considered invalid and will not be brought online during islanded operation.   |

| Setting Name    | Description  |
|-----------------|--|
| ExpectedPickup  | The amount of expected power from this load when initially energized during blackstart. If 0, NominalPower or RunningAverage is used for load acceptance criteria.   |
| ResetLoadStatus | A rising edge on ResetLoadStatus will deassert LoadUnAvailable, making the load available to inclusion in islanded operations again. ExpectedConnectionStatus is set to the current value of ConnectionStatus. |
| LoadTimeOut     | The time to wait before asserting LoadUnAvailable when ConnectionStatus does not match ExpectedConnectionStatus. Minimum value is T#5S.  |

## Reciprocating Generator

Assets defined as a Reciprocating Generator type appear in the Reciprocating Generator settings tab with each of the available settings defined in *Table 10.73*.

**Table 10.73 Reciprocating Generator Operational Data Settings**

| Setting Name             | Description   |
|--------------------------|---|
| IncludeCommand           | Command to include the Reciprocating Generator inverter in master plant control.  |
| ExcludeCommand           | Command to remove the Reciprocating Generator inverter from master plant control.   |
| PRating                  | Power rating for the generator. Units are in kW.  |
| QRating                  | Reactive power rating for the generator. Units are in kVAR.   |
| MinIslandOperation       | A percentage value of PRating that is the minimum utilization this asset should have as the grid forming asset during islanded operations.  |
| IncrementalReserveMargin | The percentage of PRating that the asset is able to pick up without a significant deviation in output frequency. This is used for load acceptance criteria during islanded conditions. Units are a percentage. Range is 1 to 100.                           |
| ColdLoadPickUp           | The percentage of PRating the asset is able to pick up without a significant deviation in output frequency when current asset output is 0. This is used for load acceptance criteria during islanded conditions. Units are a percentage. Range is 1 to 100. |
| MinFuelLevel             | A percentage value that the generator should not discharge below. A value of 0 will not restrict discharging from the generator asset in any manner.  |

## Modbus Map Data

Every Modbus map configured in the Grid Connect extension generates a subitem to define the various registers that are associated with each device set to use the map. If the Modbus map is configured to load data from a file, all settings are shown but disabled.

- ▶ Coils
- ▶ Discrete inputs
- ▶ Holding registers
- ▶ Input registers
- ▶ Coil polls
- ▶ Discrete input polls
- ▶ Holding register polls
- ▶ Input register polls

## Controller Tab

The Controller tab allows for interfacing with a few select GridConnect control inputs and outputs in real time. The Controller tab is generated when the extension is built for the first time and is updated with every subsequent successful build. *Table 10.74* lists the controller POU input and outputs.

**Table 10.74 Controller Tab Function Block POU Input and Outputs**

| Pin Name              | Pin Type  | Description  | Default |
|-----------------------|---|--|---------|
| Enable                | Input: BOOL   | Enable the controller  | TRUE    |
| PlantMeasurementsGood | Input: BOOL   | Flag to allow overriding or setting plant measurement status | TRUE    |
| QuickStop             | Input: BOOL   | Flag to allow overriding or setting quick stop control       | FALSE   |
| ResetPIControllers    | Input: BOOL   | Flag to allow overriding or setting PI controller reset      | FALSE   |
| Enabled               | Output: BOOL  | System Enable Indicator                                      | FALSE   |
| MasterPlantController | Output: POINTER TO GridConnect.fb_MasterPlantController | Pointer to the master plant controller object                |         |

## Data Mapping User Logic

For each Modbus map added to the Grid Connect extension, two mapping functions and two custom structures are added to the project. The names of each function and structure use the name of the Modbus map.

The fun\_<Modbus map name>\_IN function is responsible for mapping the sensory data from individual assets to their respective GridConnect library components. In the function, the VAR\_INPUT section has a structure that contains all the tags defined in the Modbus map where the column Asset Relationship is set to Input. It is expected that the user then generates IEC 61131-3 code to map the necessary data from the input structure to the correct GridConnect pin name in the VAR\_OUTPUT section. The GridConnect extension then applies this logic and mapping to each Modbus client and asset function block associated with that Modbus map. Conversely, the fun\_<Modbus map name>\_OUT function works the in the same manner but in reverse order. All the VAR\_INPUT values are outputs from the GridConnect library that are mapped by the user to the desired Modbus map quantities that have the column Asset Relationship set to Output. The GridConnect extension then maps this relationship for each Modbus client and asset function block associated with that Modbus map.

## Indirect Tagging

The Indirect Tagging extension automatically generates the user logic that is described in the SEL application guide *Using Shared Tags to Optimize an RTAC HMI* (AG2018-16). The purpose of this user logic is to dynamically map tag values from a single client (from a group of clients with identical tags) to a common set of data tags that can be in turn mapped to an RTAC HMI and

used to animate a template screen. Only mapping the single common set of tags to the RTAC HMI (as opposed to all the tags separately for each client) for use on a template screen can reduce burden on the system and increase performance, while decreasing overall configuration time of the HMI due to the use of template screens. Note that while AG2018-16 describes building the Indirect Tagging logic in the Tag Processor, the extension will generate raw IEC 61131-3 logic and does not require the use of the Tag Processor.

The extension requires that the user create two Virtual Tag lists. These two lists serve the following purposes:

- The first virtual tag list is known as the Data Map. It contains 'destination tags' that have matching tag names and tag types for each of the tags present on the templated identical client devices.

The tags on this virtual tag list are intended to be imported to the RTAC HMI and then used to populate a template HMI diagram that is common for multiple clients of a given common IED type. This list should be assigned to the Data Map field on the Shared Tag Map tab.
- The second virtual tag list is the Indirect Tagging Control list. It contains indirect tagging "control & indication tags" that are used to select and indicate the client device whose tags are presently mapped into the Data Map shared tag list. This list should contain the following tags:
  - Per Indirect Tagging instance:
    - On the Inputs tab, a tag of type 'STR' used for the purpose of a common Device Description.

This tag is used to provide a destination for a plain-text description Device Description Label of the presently selected client device that is mapped to the Data Map shared tags (e.g., "Feeder 5033").

The q.validity attribute of this STR tag is automatically forced to good by the Indirect Tagging extension logic.
    - Per client device:
      - On the Inputs tab, a tag of type 'SPS' used for the purpose of a Device Selection Indication.

This tag is set to TRUE if the client device is presently selected to map its tags into the Data Map shared tags.

This tag can be used to configure the Status Tag field present on a RTAC HMI Indirect Tagging Link Object.

The q.validity attribute of this SPS tag is automatically forced to good by the Indirect Tagging extension logic.
      - On the DNP Controls tab, a tag of type 'DNPC' used for the purpose of a Device Selection Control.

This tag is used to map to a controllable object in the RTAC HMI, such as an Indirect Tagging Link.

When the user selects this controllable object, the user logic will detect this action and re-configure the states of the device selection indication tags to map tags from the newly-selected client to the Data Map list.

This tag can be used to configure the Output Tag Name field present on a RTAC HMI Indirect Tagging Link Object.

## Shared Tag Map Tab

The Shared Tag Map tab contains a single row with global settings related to the Indirect Tagging logic generation.

- ▶ Data Map: A selection field that allows the user to choose the Virtual Tag List that contains tags with equivalent names to the tags on each of their templated devices. When the Indirect Tagging logic is executed, the tags on this virtual tag list become the 'destination tags' to which a given set of client tags are mapped.
- ▶ Device Description Tag: A field where the user enters the Device Description tag from the Indirect Tagging Control virtual tag list. It must be of type 'STR'.
- ▶ Tag Type: The detected tag type from the Device Description Tag field.
- ▶ Unresolved Client Tags: When the Indirect Tagging user logic is generated by the extension, it will attempt to map each tag it finds on the client devices configured on the Available Sources tab to a matching tag on the Data Map virtual tag list. If the mapping algorithm does not locate an appropriate match, this setting can be used to either Ignore this condition or flag an Error or Information message to the settings engineer that not all client tags were mapped.
- ▶ Process Tags: During a normal project save operation, the data map and client device tag lists are not refreshed in the Indirect Tagging extension unless another settings field in the extension has changed. If changes are made to the Data Map virtual tag list or the tags on any of the client devices, toggle this field to True and save your settings to force the extension to refresh these lists of tags and rebuild the IEC 61131-3 logic.

## Available Sources Tab

The Available Sources tab can be configured with a dynamic number of rows, with each row representing a single client device and the attribute tags associated with it.

- ▶ Client: A selection field that allows the user to choose a unique client device whose tags will be automatically queried, and subsequently mapped into Data Map Virtual Tag List tags in the user logic.
- ▶ Multiple Device Client: A True or False toggle that specifies whether the client device configured in the Client field has tags that represent a single device, or whether it has tags that represent many devices that will all need to be independently mapped into the Data Map. An example of this would be a tiered RTAC system where a lower tier RTAC communicates to several IEDs and concentrates data from multiple IEDs into a DNP server map. An upper tier RTAC that communicates to this DNP server would contain a DNP client device that would be considered a Multiple Device Client because it is a single client that contains tags from multiple devices. To reference the tags from each individual client, create multiple rows on the Available Sources tab and reference the client device multiple times, specifying a unique Multi-Device Name Filter with each row.
- ▶ Multi-Device Name Filter: This is a string field where a substring is specified to uniquely divide the tags belonging to a Multiple Device Client into the individual clients that make up that list. This string is assumed to be part of the tag name and is separated by an underscore with

the 'common' portion of the tag name following it. This string should not include the underscore that separates the 'per-device' portion of the tag name from the 'common' portion. For example, a DNP client may have a set of tags available such as the following.

- MyDNPClient\_DNP.Feeder1\_Breaker52A
- MyDNPClient\_DNP.Feeder2\_Breaker52A
- MyDNPClient\_DNP.Feeder3\_Breaker52A

In this configuration, the user should configure three rows on the Available Sources tab, reference the MyDNPClient\_DNP device for each row, and configure the Multi-Device Name Filter for each row as "Feeder1", "Feeder2", and "Feeder3". The Data Map virtual tag list should contain a single tag named Breaker52A to resolve to the tags from each of the individual clients.

- Device Description Label: This is a string field where the user can specify a per client string that is automatically copied into the Device Description tag contained in the Indirect Tagging Control virtual tag list.
- Device Selection Control Tag: This is a tag field that specifies a per-client operSPC tag from the Indirect Tagging Control virtual tag list. It must be of tag type operSPC, otherwise an error condition is generated.
- Device Selection Indication Tag: This is a tag field that specifies a per-client SPS tag from the Indirect Tagging Control virtual tag list. It must be of tag type SPS, otherwise an error condition is generated.
- Map Status From APC/INC/MDBC Tags: A True or False toggle that can be used to isolate and map only the *.status* component from tags of type APC, INC, and MDBC that also contain an *.oper* component. This is commonly used with Modbus client devices configured with Holding Register tags that are populated by Read Holding Register Polls and where the oper/writable component of the tag is not of interest (such as a metering value). If this option is enabled for a Modbus client device, any Holding Register tags of the following types will expect to find a corresponding identically named tag in the Data Map virtual tag list with the following relationships:
  - HReg Type -> Data Map Type
  - APC -> MV
  - INC -> INS
  - MDBC -> SPS

## Controller Tab

The Controller tab is a placeholder for the Indirect Tagging function block to execute and does not contain any useful POU pins.

## Indirect Tagging Extension Example

The following settings demonstrate an example use case for the indirect tagging extension.

Four identical SEL Protocol client devices are configured with these names:

1. SEL\_351S\_1\_SEL
2. SEL\_351S\_2\_SEL

3. SEL\_351S\_3\_SEL
4. SEL\_351S\_4\_SEL

These identical client devices are configured with the following tags enabled on the Meter and Remote Bits tabs:

| Tab         | Tag Name    | Tag Type |
|-------------|-------------|----------|
| Meter       | FM_INST_IA  | CMV      |
| Meter       | FM_INST_IB  | CMV      |
| Meter       | FM_INST_IC  | CMV      |
| Meter       | FM_INST_52A | SPS      |
| Remote Bits | FO_RB_RB1   | SRBC     |

A virtual tag list named TagControl is configured with the following tags:

| Tab          | Tag Name          | Tag Type |
|--------------|-------------------|----------|
| Inputs       | DeviceDescription | STR      |
| Inputs       | Device1_Selected  | SPS      |
| Inputs       | Device2_Selected  | SPS      |
| Inputs       | Device3_Selected  | SPS      |
| Inputs       | Device4_Selected  | SPS      |
| DNP Controls | Select_Device1    | DNPC     |
| DNP Controls | Select_Device2    | DNPC     |
| DNP Controls | Select_Device3    | DNPC     |
| DNP Controls | Select_Device4    | DNPC     |

A virtual tag list named HMI\_Tags is configured with the following tags:

| Tab                 | Tag Name    | Tag Type |
|---------------------|-------------|----------|
| Inputs              | FM_INST_IA  | CMV      |
| Inputs              | FM_INST_IB  | CMV      |
| Inputs              | FM_INST_IC  | CMV      |
| Inputs              | FM_INST_52A | SPS      |
| Remote Bit Controls | FO_RB_RB1   | SRBC     |

An instance of the Indirect Tagging extension has been inserted into the project using the **Insert > Extensions** toolbar item. The Tabs on this extension are configured as follows.

Shared Tag Map tab:

| Data Map | Device Description Tag       | Tag Type | Unresolved Client Tags | Process Tags |
|----------|------------------------------|----------|------------------------|--------------|
| HMI_Tags | TagControl.DeviceDescription | STR      | Ignore                 | True         |

Available Sources tab:

| Client         | Multiple Device Client | Multi-Device Name Filter | Device Description Label |
|----------------|------------------------|--------------------------|--------------------------|
| SEL_351S_1_SEL | False                  |                          | Feeder 1001              |
| SEL_351S_2_SEL | False                  |                          | Feeder 1002              |
| SEL_351S_3_SEL | False                  |                          | Feeder 1003              |
| SEL_351S_4_SEL | False                  |                          | Feeder 1004              |

| Device Selection Control Tag        | Tag Type | Device Selection Indication Tag | Tag Type | Map Status From APC/INC/MDBC Tags |
|-------------------------------------|----------|---------------------------------|----------|-----------------------------------|
| TagControl.Select_Device1.operPulse | operSPC  | TagControl.Device1_Selected     | SPS      | False                             |
| TagControl.Select_Device2.operPulse | operSPC  | TagControl.Device2_Selected     | SPS      | False                             |
| TagControl.Select_Device3.operPulse | operSPC  | TagControl.Device3_Selected     | SPS      | False                             |
| TagControl.Select_Device4.operPulse | operSPC  | TagControl.Device4_Selected     | SPS      | False                             |

When the project is saved and the Indirect Tagging Extension automatically creates the back-end IEC 61131-3 user logic, the following statements will be generated:


```

IF TagControl.Select_Device1.operPulse.ct1Val THEN
    TagControl.DeviceDescription.strVal := 'Feeder 1001';
    TagControl.Device1_Selected.stVal := TRUE;
    TagControl.Device2_Selected.stVal := FALSE;
    TagControl.Device3_Selected.stVal := FALSE;
    TagControl.Device4_Selected.stVal := FALSE;
ELSIF TagControl.Select_Device2.operPulse.ct1Val THEN
    TagControl.DeviceDescription.strVal := 'Feeder 1002';
    TagControl.Device1_Selected.stVal := FALSE;
    TagControl.Device2_Selected.stVal := TRUE;
    TagControl.Device3_Selected.stVal := FALSE;
    TagControl.Device4_Selected.stVal := FALSE;
ELSIF TagControl.Select_Device3.operPulse.ct1Val THEN
    TagControl.DeviceDescription.strVal := 'Feeder 1003';
    TagControl.Device1_Selected.stVal := FALSE;
    TagControl.Device2_Selected.stVal := FALSE;
    TagControl.Device3_Selected.stVal := TRUE;
    TagControl.Device4_Selected.stVal := FALSE;
ELSIF TagControl.Select_Device4.operPulse.ct1Val THEN
    TagControl.DeviceDescription.strVal := 'Feeder 1004';
    TagControl.Device1_Selected.stVal := FALSE;
    TagControl.Device2_Selected.stVal := FALSE;
    TagControl.Device3_Selected.stVal := FALSE;
    TagControl.Device4_Selected.stVal := TRUE;
END_IF
IF TagControl.Device1_Selected.stVal THEN
    SEL_351S_1_SEL.FO_RB_RB1 := HMI_Tags.FO_RB_RB1;
    HMI_Tags.FM_INST_52A := SEL_351S_1_SEL.FM_INST_52A;
    HMI_Tags.FM_INST_IA := SEL_351S_1_SEL.FM_INST_IA;
    HMI_Tags.FM_INST_IB := SEL_351S_1_SEL.FM_INST_IB;
    HMI_Tags.FM_INST_IC := SEL_351S_1_SEL.FM_INST_IC;
ELSIF TagControl.Device2_Selected.stVal THEN
    SEL_351S_2_SEL.FO_RB_RB1 := HMI_Tags.FO_RB_RB1;
    HMI_Tags.FM_INST_52A := SEL_351S_2_SEL.FM_INST_52A;
    HMI_Tags.FM_INST_IA := SEL_351S_2_SEL.FM_INST_IA;
    HMI_Tags.FM_INST_IB := SEL_351S_2_SEL.FM_INST_IB;
    HMI_Tags.FM_INST_IC := SEL_351S_2_SEL.FM_INST_IC;
ELSIF TagControl.Device3_Selected.stVal THEN
    SEL_351S_3_SEL.FO_RB_RB1 := HMI_Tags.FO_RB_RB1;
    HMI_Tags.FM_INST_52A := SEL_351S_3_SEL.FM_INST_52A;
    HMI_Tags.FM_INST_IA := SEL_351S_3_SEL.FM_INST_IA;
    HMI_Tags.FM_INST_IB := SEL_351S_3_SEL.FM_INST_IB;

```

```
HMI_Tags.FM_INST_IC := SEL_351S_3_SEL.FM_INST_IC;
ELSIF TagControl.Device4_Selected.stVal THEN
    SEL_351S_4_SEL.FO_RB_RB1 := HMI_Tags.FO_RB_RB1;
    HMI_Tags.FM_INST_52A := SEL_351S_4_SEL.FM_INST_52A;
    HMI_Tags.FM_INST_IA := SEL_351S_4_SEL.FM_INST_IA;
    HMI_Tags.FM_INST_IB := SEL_351S_4_SEL.FM_INST_IB;
    HMI_Tags.FM_INST_IC := SEL_351S_4_SEL.FM_INST_IC;
END_IF
TagControl.DeviceDescription.q.validity := validity_t.good;
TagControl.Device1_Selected.q.validity := validity_t.good;
TagControl.Device2_Selected.q.validity := validity_t.good;
TagControl.Device3_Selected.q.validity := validity_t.good;
TagControl.Device4_Selected.q.validity := validity_t.good;
```

To interface the RTAC HMI with this Indirect Tagging logic, a sample Diagram Builder template screen could be configured as shown in *Figure 10.25*.

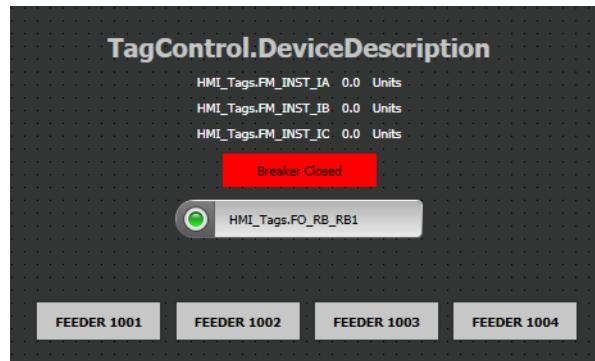

**Figure 10.25 Sample Diagram Builder Screen**

The four buttons on the bottom of this template screen are Indirect Tagging Link controls configured as shown in *Figure 10.26*. Note the use of the Select\_Device and Device\_Selected virtual tags from the TagControl virtual tag list.

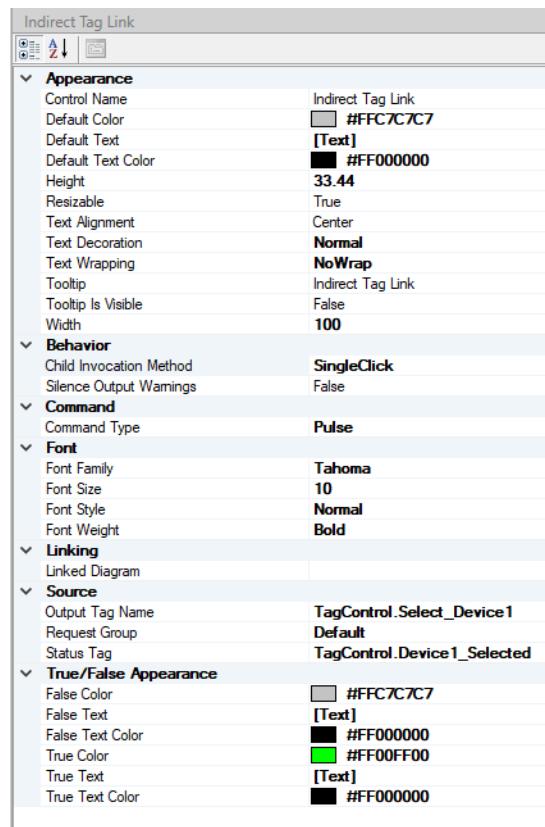


Figure 10.26 Indirect Tagging Link Controls

During runtime, the template screen appears as shown in *Figure 10.27* with a title at the top and the Indirect Tagging Link controls animated in green to indicate which device is presently selected for viewing on the template screen.

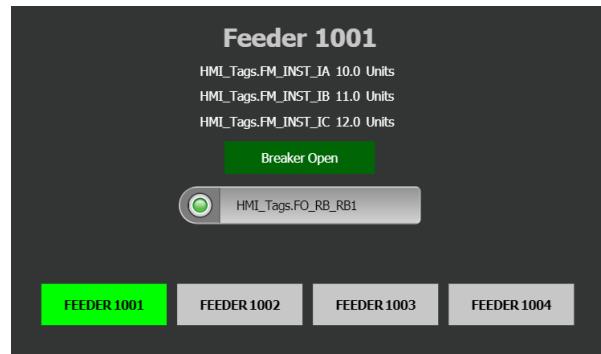


Figure 10.27 Runtime Template Screen

## MMS File Transfer

---

### Overview

The MMS File Transfer extension (supported in ACSELERATOR RTAC versions 1.36.152.8000 and newer) provides a minimal interface to generate IEC 61850 MMS clients necessary to collect files and an optional set of as many as 10 server sessions prepared for file collection (no IEC 61850 data

model is configured). This extension provides a single interface to manage the various file paths to be used for collection. The extension also presents options for managing the MMS server sessions, permitting access to a select set of IP addresses or allowing anonymous access. All configuration is focused on the collection of files without the need for dataset or report data access; as such, the configuration is presented without the need for constructing a complete ACCELERATOR Architect® SEL-5032 Software project. The process of generating this configuration automatically configures the following settings for each MMS IED created:

- ▶ IP Address
- ▶ MMS Comtrade Enable
- ▶ MMS File Recollection
- ▶ MMS FileServices Period
- ▶ Poll Period (fixed at 0)
- ▶ Request Timeout
- ▶ Request Retries
- ▶ Device GUID
- ▶ Generic file collection paths

## MMS Clients Tab

With the MMS Clients tab, users can add as many as 256 individual MMS clients from which files may be collected. Use this tab to enable collection from any individual devices that use a unique set of configuration parameters for each device.

Each of these fields is automatically populated in the Settings page of the respective MMS client device following a save action. Saving the extension with new settings triggers the regeneration of the IEC 61850 configuration and repopulates all managed settings. Any changes made to the settings manually will be overwritten during an extension save.

## File Paths Tab

With the File Paths tab, users may configure the various remote file paths from which files are collected from each MMS device. Each path may also be configured for recursive file collection, if desired. These settings map directly to the options used for each MMS client's Generic File Collection tab.

## MMS Server Tab

The MMS Server tab allows the optional inclusion of a single MMS server in the RTAC's IEC 61850 configuration. This server may have as many as 10 individual sessions, each allowing as many as 5 allowed IP addresses. If any session has a blank set of IP addresses, the MMS File Transfer extension enables an anonymous client to allow connections not specific to any IP address. To modify any of the session IP address fields, the user must first enable one or more server connections.

## CollectionMapping Page

After the generation of one or more MMS devices and one or more file paths, a page called CollectionMapping is generated as a child subitem of the extension. This page contains a single tab titled Mapping where users may select from a grid matrix to enable particular collection paths for each respective MMS client. This facility provides a simple way to enable file collection for common collection paths across a fleet of devices.

## Usage

After specific file paths have been enabled for one or more MMS client devices, a Save operation is necessary to generate the corresponding IEC 61850 configuration. This process may take several minutes depending on the number of configured devices and the number of file paths that must be configured.

When server sessions are enabled after the configuration has been saved, the data model and the following default IEC 61850 connections appear in the project navigation tree:

- ▶ ServerSession\_xx\_850 (xx = 01–10)
- ▶ SEL\_RTAC\_1
- ▶ MMS\_SERVER

Along with these default devices, a single MMS client appears for each of the respective IEDs configured on the MMS Clients tab of the extension. Each new device has the appropriate configuration settings assigned, as specified in *Overview on page 867*.

## MQTT Client

### Overview

The MQTT Client extension (supported in SEL-3350 and SEL-3555 project versions R153 and newer) allows users to establish a connection from the RTAC to an external MQTT (Message Queuing Telemetry Transport) broker to permit subscription to and publication of data. MQTT is broadly used throughout industrial processes where data are shared on a common bus and various devices may publish or subscribe to various process or control oriented topics.

The MQTT Client extension services all publications and subscriptions at the rate of the main task cycle. This means that all subscriptions will be collected in sync with all other traditional logic engine processing and that publications will be broadcast at the rate of the logic engine task. When publishing data on multiple topics, data published in the same processing cycle may be broken up and transmitted in subsequent processing cycles.

## Settings Tab

The MQTT Client extension supports configuration of many of the options used for TCP-based MQTT. This includes the ability to use TLS encryption and password-based authentication. Additionally, the extension allows the configuration of a "Last Will and Testament" which may be published in the event of the MQTT client disconnecting from the configured broker. *Table 10.75* provides a summary of these settings.

**Table 10.75 General Settings Names and Descriptions**

| Setting Name      | Description   |
|-------------------|---|
| Broker Host       | IPv4 address or hostname of the MQTT broker.  |
| Broker Port       | TCP port of the MQTT broker. Defaults to 1883.  |
| Enable TLS        | Set to True to enable TLS communications for the MQTT connection. Default is False.   |
| Username          | Optional username for the client to use when connecting with the MQTT broker.   |
| Password          | Optional password for the client to use when connecting with the MQTT broker.   |
| Client ID         | Optionally define the unique identifier for the client. String may only consist of alphanumeric characters and may not exceed a length of 255. If not provided, the Client ID will be generated automatically.  |
| Time Out          | Specify the time-out period (ms), after which the client will be considered disconnected. Set to 0 to disable time-out. Default is 0.   |
| Keepalive         | Interval (in seconds) for the keepalive signal to be sent to the broker. Default is 5.  |
| Last Will Message | Message content to be sent to all subscribers when the RTAC client disconnects from the broker. May not exceed 1,024 characters in length.  |
| Last Will Topic   | Topic under which the Last Will Message will be published in the event that the RTAC client disconnects from the broker.  |
| Retain Last Will  | When set to True, the Last Will Message will be configured as a retained message on the broker should the RTAC disconnect. Any new clients to subscribe to the Last Will Topic after the RTAC disconnects will receive a copy of the Last Will Message. Default is False. |

## Publications Tab

The MQTT Client may be configured to publish as many as 1000 messages. The Publications tab allows users to add a single row corresponding to each message that should be published and the criteria under which it will be transmitted. Publications will transmit data from existing tags in the configured project. Each message can be configured to transmit (publish) on a scheduled interval of a predetermined rate or to transmit only when the monitored data change. *Table 10.76* provides a summary of these settings.

The following tag types can be published directly from the MQTT Client:

- BOOL
- BYTE
- WORD
- DWORD
- LWORD
- SINT
- USINT

- INT
- UINT
- DINT
- UDINT
- LINT
- ULINT
- REAL
- LREAL
- TIME
- DATE\_AND\_TIME
- SPS
- DPS
- INS
- INC
- MV
- APC
- BCR
- LBCR
- vector\_t
- CMV
- STR
- STRING

**Table 10.76 Publications Setting Columns and Descriptions**

| Column Name         | Description   |
|---------------------|---|
| Enable              | Set to False to prevent the MQTT client from generating logic for the publication.  |
| MQTT Topic          | Fully qualified topic with which the MQTT message should be published; e.g., rtac/data/controlTag. Publish topics must be unique for each message.  |
| Tag Source          | Tag name for the data that may be published. When configured as a structured type, the instantaneous value (where applicable) will be published.  |
| Publication Trigger | Control whether the data should be published when the data value changes or on a pre-determined interval. Analog deadbands will apply (where applicable) for change detection.  |
| Scheduled Interval  | When configured to publish on an interval, this field defines the number of milliseconds between publications. When configured as a value lower than the task cycle time, data will be published once for every task cycle.                           |
| Deadband            | Value used to condition REAL and MV values to prevent unnecessary chatter.  |
| Zero Deadband       | Threshold below which absolute values of REAL and MV points will be set to zero.  |
| QoS                 | MQTT Quality of Service flag specifying the agreement defining the delivery guarantee. A value of 0 defines delivery at <i>most</i> once, a value of 1 defines delivery at <i>least</i> once, and a value of 2 requires delivery <i>exactly</i> once. |
| Retain Message      | Control to flag message data for retention within MQTT broker. Any new clients to subscribe to the topic after data were published will receive a copy of the Last Will Message. Default is False.  |

## Subscriptions Tab

The MQTT Client can be configured to subscribe to as many as 1000 individual message topics. Each subscription will correspond to a single tag generated for the Tags tab in the MQTT Client. All subscriptions are gathered as strings, and may be accessed as STRING(1024) values, but may also be stored as standard types. Each subscription can be stored in a tag of type SPS, MV, INS, or STR. *Table 10.77* provides a summary of these settings.

**Table 10.77 Subscriptions Setting Columns and Descriptions**

| Column Name | Description   |
|-------------|---|
| Enable      | Set to False to prevent the MQTT client from generating logic for the subscription.   |
| MQTT Topic  | Fully qualified topic with which the subscription should be associated; e.g., <i>rtac/data/controlTag</i> . Subscription topics must be unique for each message.  |
| Tag Name    | Name of the tag to generate for the subscription data.  |
| Tag Type    | Subscription data will be gathered as a string and may be stored as a STRING(1024) but can also be rendered as an SPS, MV, INS, or STR tag to retain time information. Should a topic represent a JSON data structure, it should be stored in a STR or STRING(1024) tag and external logic may be used to extract individual objects. |

## Protection Elements

### Overview

The Protection Elements extension includes the frequency element (81)

The frequency element (81) provides as many as 16 levels of overfrequency and underfrequency elements for each of the 32 assets. Each asset must be tied to an SEL-2245-42 AC Protection Module.

### Theory of Operation

The Protection Elements extension is configured based on the concept of substation assets. For a frequency element, substation assets may be a bus or feeder that is tied to an SEL-2245-42 to provide three-phase voltage measurements from the asset.

The overall workflow of the extension for frequency element is as follows:

Step 1. Configure the EtherCAT I/O Network in the project, including the SEL-2245-42 modules that provide voltage measurements from the assets. Enable the following tags in the SEL-2245-42 modules:


- ▶ <Module Name>.FREQ
- ▶ <Module Name>.QUALITY\_FREQ
- ▶ <Module Name>.V1\_FUND (No need to enable this tag if you are using Valpha for undervoltage supervision).

Step 2. Insert the Protection Elements extension into the project.

Step 3. Under General Settings, select the voltage source for undervoltage supervision: Valpha or V1. To understand the differences between Valpha and V1 undervoltage supervision, refer to *Undervoltage Supervision on page 875*.

- Step 4. Under Substation Assets, assign descriptive names to each of the assets to assist in checking for overfrequency or underfrequency events.
- Step 5. Save the project.
- Step 6. Configure the settings of each substation asset subitem:
- ▶ Associate the substation asset to the corresponding SEL-2245-42 that measures its voltage.
  - ▶ Set the Nominal L-N Voltage (secondary) setting of the substation asset and the Undervoltage Supervision Threshold as a percentage of the nominal voltage.
- Step 7. Configure the overfrequency and/or underfrequency elements associated with each substation asset: pickup value, pickup/dropout times, hysteresis, and supervision logic. Refer to *Frequency Elements on page 877*.
- Step 8. Toggle Build Frequency Element to **True** and save the settings to implement the necessary components and the frequency element logic.
- Step 9. Repeat *Step 8* if any of the following conditions are met:
- ▶ Protection Element extension settings are modified.
  - ▶ The settings of an SEL-2245-42 are modified.
  - ▶ The Nominal Frequency system tag is modified.

*Figure 10.28* shows the logic for each overfrequency and underfrequency element. As many as six frequency elements may be configured for each substation asset.

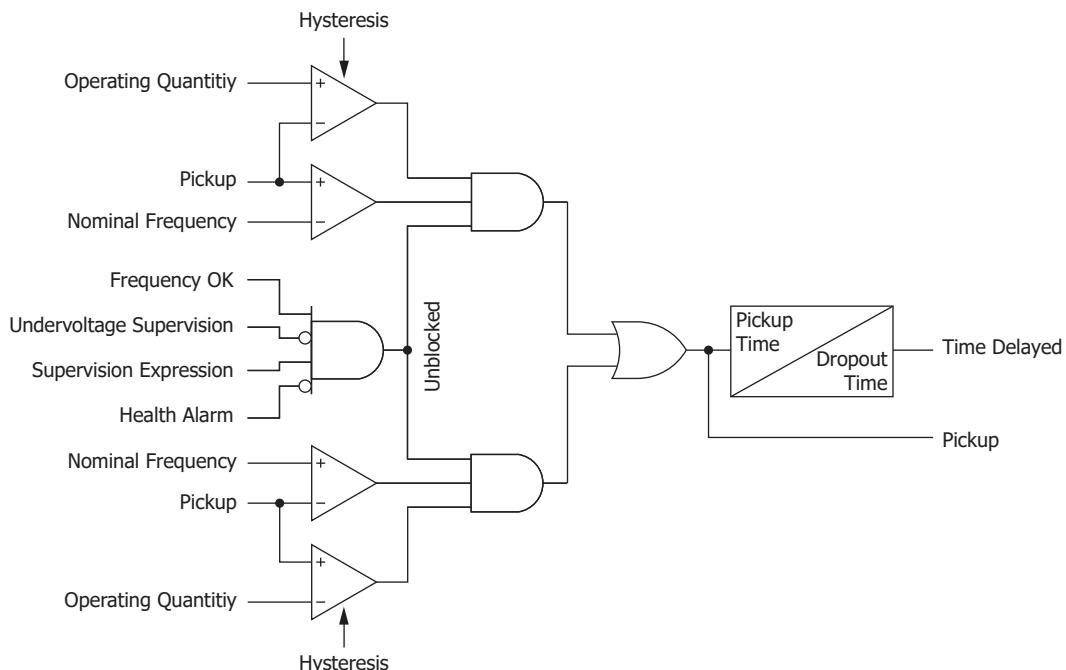

**Figure 10.28 Frequency Element Logic**

The input and output signals shown in *Figure 10.28* are mapped as follows:

- Operating Quantity input: Mapped from the .FREQ tag of the SEL-2245-42 tied to the substation asset in which the frequency element is configured. The user must manually enable this tag in the SEL-2245-42.
- Pickup input: Mapped from the Pickup setting of the frequency element. Refer to *Frequency Elements on page 877*.
- Nominal Frequency input: Mapped from the SystemTags.Nominal\_Frequency.stVal tag. The user must set the value of this tag according to the nominal frequency of the system.
- Hysteresis input: Mapped from the Hysteresis setting of the frequency element. Refer to *Frequency Elements on page 877*.
- Frequency OK input: Mapped from the .QUALITY\_FREQ tag of the SEL-2245-42 tied to the substation asset in which the frequency element is configured. The user must manually enable this tag in the SEL-2245-42. This .QUALITY\_FREQ tag becomes False under the following conditions:
  - The frequency measured by the SEL-2245-42 is outside the 40–90 Hz.
  - The absolute value of the rate-of-change of frequency (ROCOF) is greater than 15 Hz/s.
  - No voltage zero crossing is detected for at least 1 second by the SEL-2245-42.
- Undervoltage Supervision input: Mapped from the output of the Valpha undervoltage supervision logic or the V1 undervoltage supervision logic shown in *Undervoltage Supervision on page 875*. This signal supervises all the frequency elements defined in the substation asset. This signal is also mapped to the <Asset Name>\_UV controller output pin. Refer to *Controller Tab on page 878*.
- Supervision Expression input: Mapped from the Supervision setting of the frequency element. Refer to *Frequency Elements on page 877*.
- Health Alarm input: This input is True in the following cases:
  - If the voltage source for undervoltage supervision is set to Valpha when EtherCAT is not enabled or when the alpha voltage component logic reports bad quality.
  - If the voltage source for undervoltage supervision is set to V1 when EtherCAT is not enabled or when the SEL-2245-42 tied to the substation asset in which the frequency element is configured reports bad frequency quality (.QUALITY\_FREQ module tag is False).
- Pickup Time input: Mapped from the Pickup Time setting of the frequency element. Refer to *Frequency Elements on page 877*.
- Dropout Time input: Mapped from the Dropout Time setting of the frequency element. Refer to *Frequency Elements on page 877*.
- Pickup output: Mapped to the <Asset Name>\_<Frequency Element ID>.Pickup POU output pin. Refer to *Controller Tab on page 878*.
- Time Delayed output: Mapped to the <Asset Name>\_<Frequency Element ID>.TimeDelayed POU output pin. Refer to *Controller Tab on page 878*.
- Unblocked output: Mapped to the <Asset Name>\_<Frequency Element ID>.Unblocked POU output pin. Refer to *Controller Tab on page 878*.

## Substation Assets

The Substation Assets tab allows the configuration of as many as 32 substation assets. For the frequency protection element, each substation asset represents an asset, such as a bus or a feeder, that provides three-phase voltage measurements. The specifics of substation asset configuration are as follows:

- ▶ Each asset has a configurable name. This name is assigned to a per-asset subitem located in the Protection Elements extension that contains settings specific to this asset. This name must meet the following requirements:
  - Maximum length of 64 characters
  - Must be unique
  - Must use tag-name-compliant patterns (i.e., only alphanumeric characters and underscores are allowed; underscores must not be sequential)
- ▶ Each asset generates a corresponding subitem under the Protection Elements extension in the ACCELERATOR RTAC project tree. Each asset subitem contains the specific setting tables for the asset. After adding a new asset or editing the name of an existing asset, save your settings to generate the settings tables in the asset subitem.
- ▶ Each asset subitem contains the following tabs:
  - Settings tab: This tab contains the Voltage Source settings, which are used to assign the specific SEL-2245-42 that measures the voltage of the asset. This tab also contains the Nominal L-N Voltage (secondary) and Undervoltage Supervision Threshold settings that are used for undervoltage supervision of the frequency elements defined within the asset. For more information about these two settings, refer to *Undervoltage Supervision on page 875*.
  - Frequency Elements tab: This tab is used to configure frequency elements (overfrequency and underfrequency) on the substation asset. As many as 16 frequency elements may be configured on each asset. For more information on the frequency elements configuration, refer to *Frequency Elements on page 877*.

## Undervoltage Supervision

The user must define the source for undervoltage supervision that supervises all frequency elements on all substation assets defined in the extension. The frequency element in the Protection Elements extension supports two sources for undervoltage supervision: Valpha and V1. Select the source for undervoltage supervision in the General Settings tab of the extension. Each substation asset defined by the user supports different threshold settings for undervoltage supervision based on the nominal voltage of each asset. These two threshold settings are located in the Settings tab of each substation asset subitem under the Protection Elements extension.

## Valpha Undervoltage Supervision

The alpha voltage component (Valpha) is used to supervise the frequency elements defined in the extension. In the frequency element logic, the absolute value of Valpha is compared against the Valpha threshold. The frequency element disables if the absolute value of Valpha is less than the Valpha threshold for longer than 1 cycle.

*Table 10.78* shows how Valpha is calculated:

**Table 10.78 Valpha Calculation**

| Wye Connection                    | Delta Connection         |
|-----------------------------------|--------------------------|
| $Valpha = Va - [Vb / 2 + Vc / 2]$ | $Valpha = (Va + Vb) / 2$ |

where Va, Vb, and Vc are 3 kHz samples of the VA, VB, and VC channels, respectively, of the SEL-2245-42 that measures the voltage of the corresponding substation assets.


The Valpha threshold is calculated by the frequency element logic based on the Nominal L-N Voltage (secondary) and the Undervoltage Supervision Threshold user settings of the specific substation asset. The following equation shows how the Valpha threshold is calculated.

$$ValphaThreshold = \sqrt{2} \cdot 1.5 \cdot Vnom \cdot Vth$$

where:

- Vnom is the value of the Nominal L-N Voltage (secondary) user setting.
- Vth is the percentage value of the Undervoltage Supervision Threshold user settings.

The output of the logic in *Figure 10.29* supervises the frequency elements when Valpha is selected as the source for undervoltage supervision.

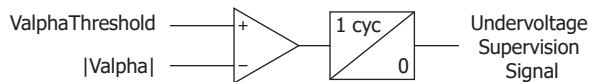


**Figure 10.29 Valpha Undervoltage Supervision Logic**

When Valpha is selected as the undervoltage supervision, the Protection Element extension adds an Axion Wave Server into the ACSELERATOR RTAC project when the frequency element is built (refer to the Build Frequency Element setting in *Theory of Operation on page 872*). The frequency element uses this Axion Wave Server to collect the Va, Vb, and Vc 3 kHz samples from the SEL-2245-42 modules to perform the Valpha calculation.

## Positive-Sequence (V1) Undervoltage Supervision

The magnitude of the positive-sequence voltage (V1) is used to supervise the frequency elements defined in the Protection Elements extension. The user must enable the V1\_FUND tag on all SEL-2245-42 modules that measures the voltage of the substation assets.

The output of the logic in *Figure 10.30* supervises the frequency elements when V1 is selected as the source for undervoltage supervision.

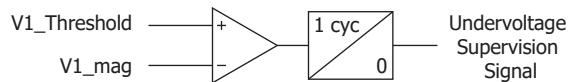

**Figure 10.30 Positive-Sequence Voltage (V1) Supervision Logic**

where:

V1\_mag is the value of the .V1\_FUND.mag tag of the SEL-2245-42 that provides voltage measurements of the substation asset.

V1\_Threshold is the product of the Nominal L-N Voltage (secondary) and the Undervoltage Supervision Threshold (percentage value) user settings of the specific substation asset. This product is scaled based on the following settings of the SEL-2245-42 that measures the voltage of the substation asset:

- ▶ Fundamental Voltage Scaling Magnitude
- ▶ Enable Fundamental CT and PT Ratios
- ▶ Phase PT Ratio

When the frequency element logic is built, the Protection Elements extension reads the previously listed settings from the corresponding SEL-2245-42 modules and applies those settings to the logic. If one of the previously listed SEL-2245-42 setting value is changed after the Frequency Elements extension is built, the user must build the frequency element again (refer to the Build Frequency Element setting in *Theory of Operation on page 872*) to update the frequency element logic to account for the new module settings.

**IMPORTANT:** When multiple SEL-2245-42 modules are added to an RTAC project, ACCELERATOR RTAC creates a frequency group for the first SEL-2245-42 that was added and automatically assigns all subsequent SEL-2245-42 modules to that frequency group. This makes all the modules in the project track the frequency of the first module by default. When positive-sequence voltage (V1) is used to supervise the frequency elements defined in the Protection Elements extension, define one frequency group for each SEL-2245-42 so each substation asset voltage source tracks its own frequency. For more information, refer to *Configuring the AC Protection Module on page 259*.

## Frequency Elements

The frequency elements are configured in the Frequency Elements tab of each substation asset subitem. As many as 16 frequency elements may be configured on each substation asset. When the Pickup setting is less than the nominal frequency, the element operates as an underfrequency element. When the Pickup setting is greater than the nominal frequency, the element operates as an overfrequency element. The nominal frequency must be defined in the System Tags of the RTAC under SystemTags.Nominal\_Frequency.

The following settings are required for each frequency element:

| Setting Name | Default Value | Notes   |
|--------------|---------------|---|
| Enable       | True          | When False, the frequency element is disabled.  |
| ID           | 81_nn         | Identification string of the frequency element. Must be unique within the substation asset. |

| Setting Name      | Default Value | Notes  |
|-------------------|---------------|--|
| Pickup (Hz)       | 59.75         | Pickup value in Hz. If this value is greater than the nominal frequency, the element operates as an overfrequency element. If this value is less than the nominal frequency, the element operates as an underfrequency element.  |
| Pickup Time (ms)  | 2000          | The time in ms that the frequency element output waits to assert after the assertion of the overfrequency or underfrequency condition. Frequency element pickup times are best set at no less than 5 cycles. Frequency is determined by a zero-crossing technique in the SEL-2245-42. If a voltage waveform offset occurs (e.g., due to a fault), the frequency measurement can be off for a few cycles. A 5-cycle or greater pickup time overrides this occurrence. |
| Dropout Time (ms) | 0             | The time in ms that the frequency element output waits to deassert after the deassertion of the overfrequency or underfrequency condition.   |
| Hysteresis        | 0             | Hysteresis value in Hz. Used to prevent the frequency element from chattering when operating at or near the pickup value.  |
| Supervision       | True          | IEC 61131-3 Structured Text Boolean expression. When the expression evaluates as False, the frequency element is blocked from operating.   |

## Controller Tab


The Controller tab allows interfacing with the frequency elements input and outputs in real time. The Controller tab is generated when the Protection Elements extension is built for the first time (refer to the Build Frequency Element setting in *Theory of Operation on page 872*) and is updated with every subsequent successful build. Each frequency element defined by the user has three corresponding output pins on the controller to indicate the state of the frequency element. Each substation asset element defined by the user has one corresponding output pin to indicate whether an undervoltage condition exists on the asset. *Table 10.79* lists the controller POU input and outputs.

**Table 10.79 Controller Tab Function Block POU Input and Outputs**

| Pin Name  | Pin Type     | Description   | Default |
|---|--------------|---|---------|
| EN  | Input: BOOL  | Enable the controller.  | TRUE    |
| ENO   | Output: BOOL | System enable indicator.  | FALSE   |
| <Asset Name>_<Frequency Element ID>.Pickup      | Output: BOOL | The frequency protection element has operated.  | FALSE   |
| <Asset Name>_<Frequency Element ID>.TimeDelayed | Output: BOOL | The frequency protection element delayed based on the Pickup Time and Dropout Time settings.  | FALSE   |
| <Asset Name>_<Frequency Element ID>.Unblocked   | Output: BOOL | When True, the frequency protection element is unblocked. When False, the frequency protection element is blocked from operating because the Supervision condition is not met or because of an undervoltage condition | FALSE   |
| <Asset Name>_UV                                 | Output: BOOL | An undervoltage condition exists on the substation asset.   | FALSE   |

## Example

This example demonstrates how to configure the Protection Elements extension to perform frequency element protection on Bus 1 and Bus 2 in the breaker-and-a-half substation design shown in *Figure 10.31*.

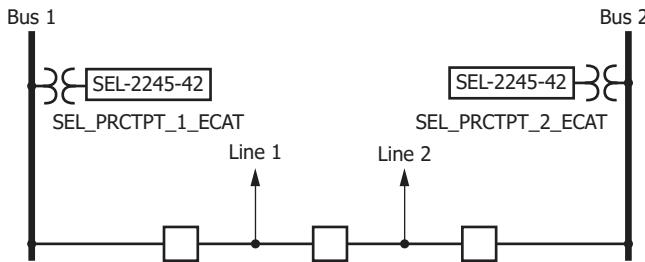

**Figure 10.31 Example**

## Assumptions

- An ACSELERATOR RTAC project that uses version R152 or later is open.
- Bus 1 and Bus 2 contain a three-phase wye-connected PT measurement point.
- One SEL-2245-42 with default name SEL\_PRCTPT\_1\_ECAT is designated to measure the Bus 1 voltage.
- One SEL-2245-42 with default name SEL\_PRCTPT\_2\_ECAT is designated to measure the Bus 2 voltage.
- Modules SEL\_PRCTPT\_1\_ECAT and SEL\_PRCTPT\_2\_ECAT have the following tags enabled in the Analog Inputs tab.
  - .FREQ
  - .QUALITY\_FREQ
  - .V1\_FUND
- The nominal frequency of the system is 50 Hz.
- The nominal voltage on the secondary side of the PTs is 70 Vrms.

## Requirements

- Two underfrequency elements shall be configured on each bus, one at 49.85 Hz and one at 49.9 Hz.
- The frequency protection element shall trigger a command when an underfrequency condition exists for 100 ms or longer.
- A positive-sequence voltage shall supervise the frequency elements. The frequency elements shall disable when the positive-sequence voltage is less than 65 percent of nominal voltage.
- An SEL-2440 MIRRORED BITS communication item exists in the ACSELERATOR RTAC project tree.
- The RTAC shall send a MIRRORED BITS command to an external SEL-2440 when any of the underfrequency elements trigger.
- The external SEL-2440 asserts or deasserts a MIRRORED BITS signal to enable or disable the frequency elements on the RTAC, respectively.


## Method

- Step 1. Under SystemTags, set Nominal\_Frequency to **50**.
- Step 2. Add a Protection Elements extension into the RTAC project.
- Step 3. Set **V1** as the voltage source for Undervoltage Supervision.
- Step 4. In the Substation Assets tab, create two substation assets for Bus 1 and Bus 2, respectively. In this example, we are naming them **Bus\_1** and **Bus\_2**.
- Step 5. Save the project.
- Step 6. Under Bus\_1 subitem, in the Settings tab, select the **SEL\_PRCTPT\_1\_ECAT** module as the voltage source. Enter **70** as the Nominal L-N Voltage (secondary) and **65** as the Undervoltage Supervision Threshold percentage.
- Step 7. Under Bus\_2 subitem in the Settings tab, select the **SEL\_PRCTPT\_2\_ECAT module** as the voltage source. Enter **70** as the Nominal L-N Voltage (secondary) and **65** as the Undervoltage Supervision Threshold percentage.
- Step 8. In the Frequency Elements tab of Bus\_1 and Bus\_2, create two frequency elements and configure them as follows:

**Table 10.80 Frequency Elements Settings**

| Enable | ID    | Pickup (Hz) | Pickup Time (ms) | Dropout Time (ms) | Hysteresis (Hz) | Supervision                      |
|--------|-------|-------------|------------------|-------------------|-----------------|----------------------------------|
| True   | 81U_1 | 49.85       | 100              | 0                 | 0               | SEL_2440_1_MB.RMB_1.status.stVal |
| True   | 81U_2 | 49.9        | 100              | 0                 | 0               | SEL_2440_1_MB.RMB_1.status.stVal |

- Step 9. Under the General Settings tab of the extension, set Build Frequency Element to **True** and save the project.
- Step 10. Verify that the Controller tab is properly created under the extension. Click the **Controller** tab and verify that the proper Pickup, TimeDelayed, and Unblocked outputs exist for both frequency elements in each substation asset.

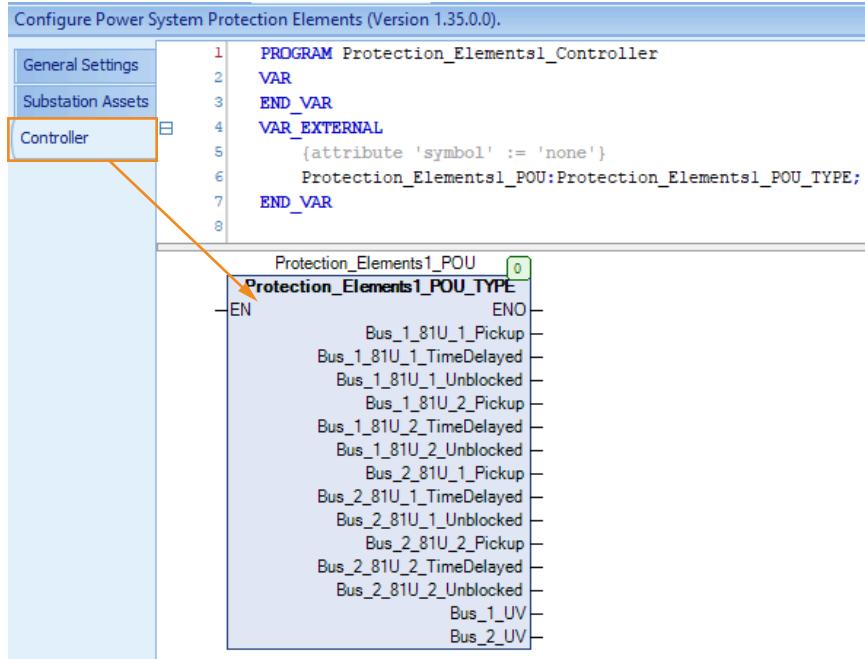**Figure 10.32 Protection Element POU**

Step 11. Create a program and enter the proper logic to trigger MIRRORED BITS control commands to the SEL-2440 when the different frequency elements assert.

```

1 | PROGRAM Program1
2 | VAR
3 | END_VAR
4 |
5 |
6 | SEL_2440_1_MB.TMB_1.operSet.ctlVal := Protection_Elements1_POU.Bus_1_81U_1_TimeDelayed AND Protection_Elements1_POU.Bus_1_81U_1_Unblocked;
7 | SEL_2440_1_MB.TMB_2.operSet.ctlVal := Protection_Elements1_POU.Bus_1_81U_2_TimeDelayed AND Protection_Elements1_POU.Bus_1_81U_2_Unblocked;
8 | SEL_2440_1_MB.TMB_3.operSet.ctlVal := Protection_Elements1_POU.Bus_2_81U_1_TimeDelayed AND Protection_Elements1_POU.Bus_2_81U_1_Unblocked;
9 | SEL_2440_1_MB.TMB_4.operSet.ctlVal := Protection_Elements1_POU.Bus_2_81U_2_TimeDelayed AND Protection_Elements1_POU.Bus_2_81U_2_Unblocked;


```

**Figure 10.33 Frequency Elements Outputs**

## Recording Triggers

### Overview

The Recording Triggers Extension is designed to configure simple analog and digital trigger event conditions for Axion Recording Groups and other event recording devices. When a trigger event condition occurs, the Recording Trigger Extension asserts its output and sends this output signal to all the associated recording devices to initiate oscillography data capture. *Figure 10.34* shows the interaction between the Recording Triggers Extension and the Axion Recording Groups. See *Configuring Axion Recording Groups* on page 268 for more information on Axion Recording Groups.

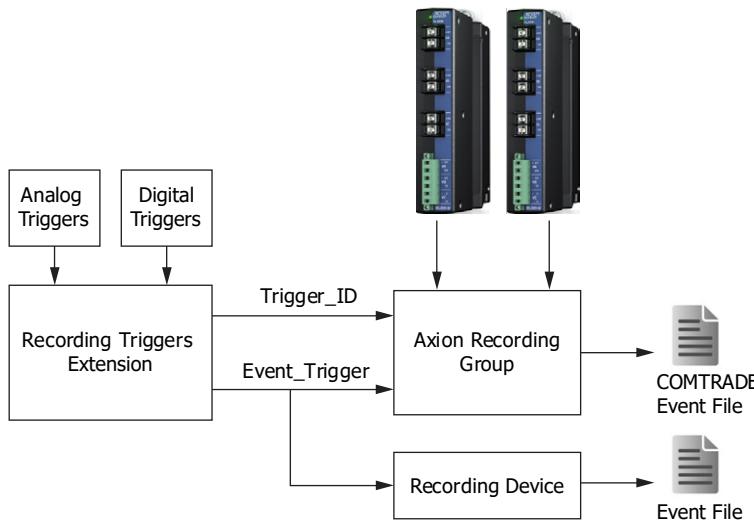

**Figure 10.34 Interaction Between Recording Triggers Extension and Recording Devices**

Use the **Insert** ribbon selection, as shown in *Figure 10.35*, to include an instance of the Recording Triggers extension into your project.



**Figure 10.35 Insert a Recording Triggers Extension**

Once you add a Recording Triggers Extension to a project, you will see the four tabs shown in *Figure 10.36*.



**Figure 10.36 Recording Triggers Extension Tabs**

The following sections describe the four tabs of the Recording Triggers Extension.

## Analog Triggers Tab

The **Analog Triggers** tab is used to configure triggers on analog input signals. Data tags that are monitored for analog triggers are added to the **Analog Triggers** tab. Three analog triggers can be configured on each analog data type added to the **Analog Triggers** tab:

- ▶ High threshold
- ▶ Low threshold
- ▶ Rate-of-change

## High-Threshold Trigger

The trigger output asserts if the value of the monitored analog signal raises above a predefined threshold value. High-threshold triggers have two operating modes: rising-edge and level.


### ► Rising-Edge Mode

When the observed analog value moves above the threshold for a time equal to the pickup time input, the Recording Trigger Extension sends a one-processing-interval pulse to the Event\_Trigger input of the associated Axion Recording Groups. Therefore, the associated Axion Recording Groups will produce an event file of minimum oscilloscopy record length.

### ► Level Mode


In this mode, the trigger output remains asserted for as long as the trigger condition exists. When the observed analog value moves above the threshold for a time equal to the pickup time input, the Recording Trigger Extension asserts the Event\_Trigger input of the associated Axion Recording Group. The trigger condition deasserts when the observed analog value moves below a value determined by the trigger threshold value and the hysteresis value. This results in an extended-length oscilloscopy recording.

*Figure 10.37* illustrates the operation of the rising-edge and level modes of the high-threshold trigger.

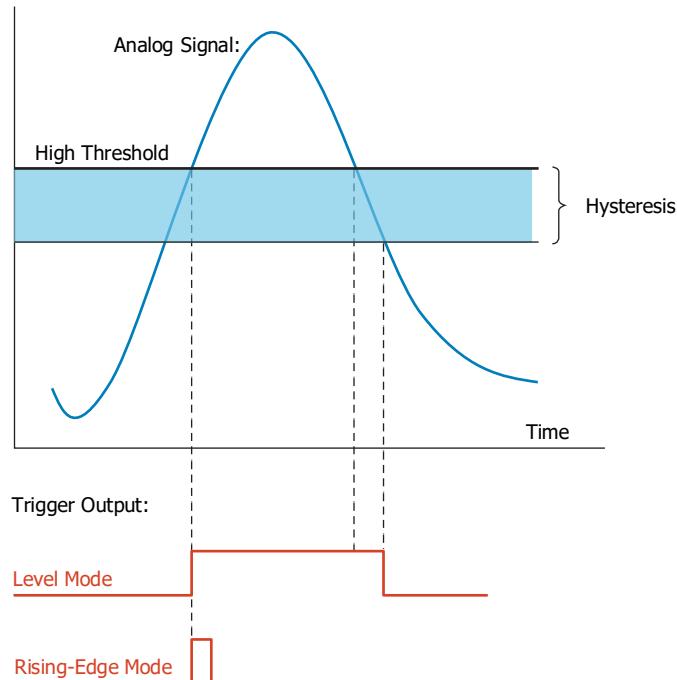


**Figure 10.37 High-Threshold Trigger: Rising-Edge and Level Output Modes**

*Figure 10.38* illustrates the operation of rising-edge and level modes of the high-threshold trigger with a pickup time applied.

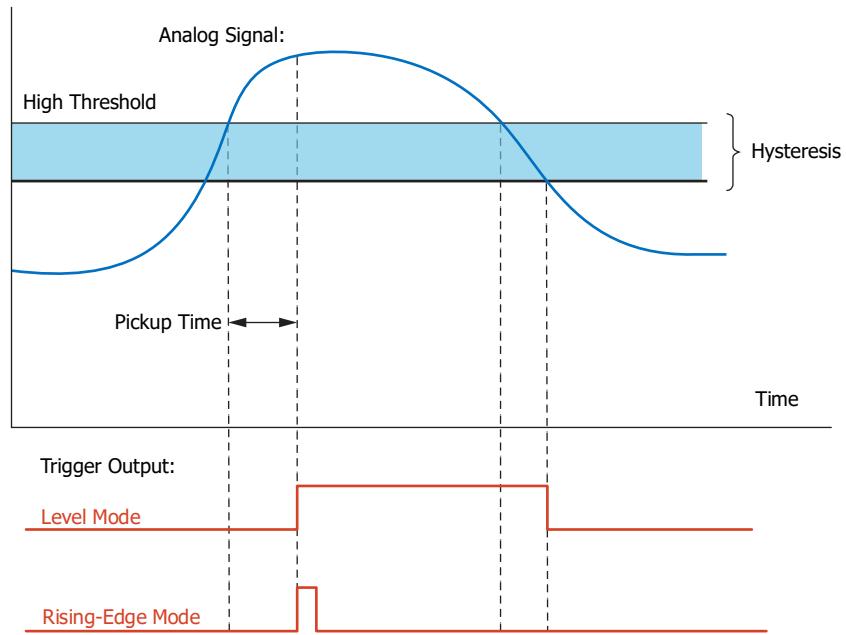

**Figure 10.38 High-Threshold Trigger: Rising-Edge and Level Output Modes with Pickup Timer**

Figure 10.39 illustrates the operation of rising-edge and level modes of the high-threshold trigger when the analog signal does not exceed the threshold for a time exceeding the pickup time.

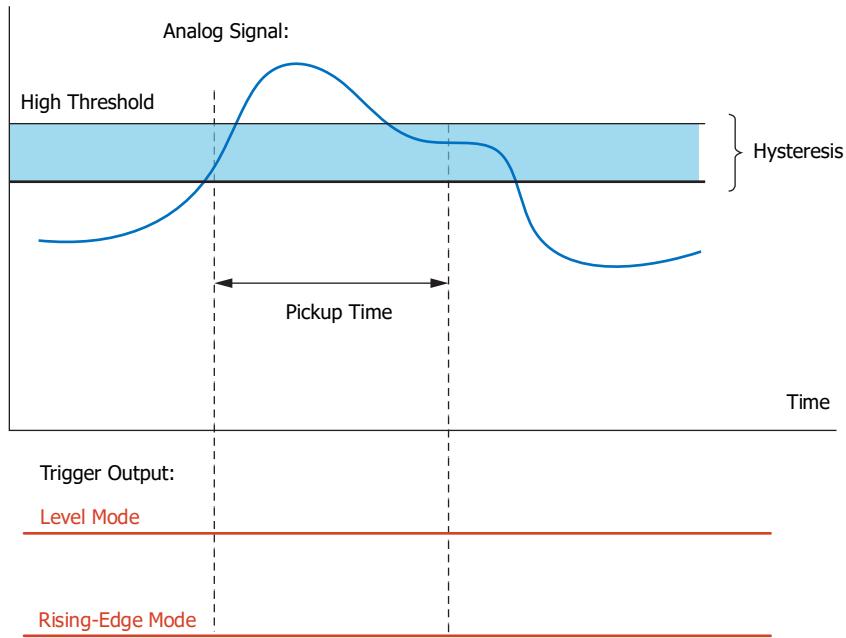

**Figure 10.39 High-Threshold Trigger: Rising-Edge and Level Output Modes with Pickup Timer No Operation**

## Low-Threshold Trigger

The output trigger asserts if the value of the monitored analog signal drops below a predefined threshold value. Low-threshold triggers have two operating modes: rising-edge and level.

### ► Rising-Edge Mode


When the observed analog value moves below the threshold for a time equal to pickup time, the Recording Trigger Extension sends a one-processing-interval pulse to the Event\_Trigger input of the associated Axion Recording Group. Therefore, the Recording Group will produce an event file of minimum oscilloscope record length.

### ► Level Mode

In this mode, the trigger output remains asserted for as long as the trigger condition exists. When the observed analog value moves below the threshold for a time equal to pickup time, the Recording Trigger Extension asserts the Event\_Trigger input of the associated Axion Recording Groups. The trigger condition deasserts when the observed analog value moves above a value determined by the trigger threshold value and the hysteresis value. This results in an extended-length oscilloscope recording.


The low-threshold trigger supports a minimum active trigger set point that provides the ability to block the recording trigger output from asserting due to low-threshold condition while the trigger is below this set point. For conditions where the analog signal exceeds the input threshold and in a single RTAC processing interval transitions below the low threshold and the minimum active trigger threshold, the trigger output will assert for one processing interval and trigger for this low-threshold condition.

*Figure 10.40* illustrates the operation of the rising-edge and level modes of the low-threshold trigger.

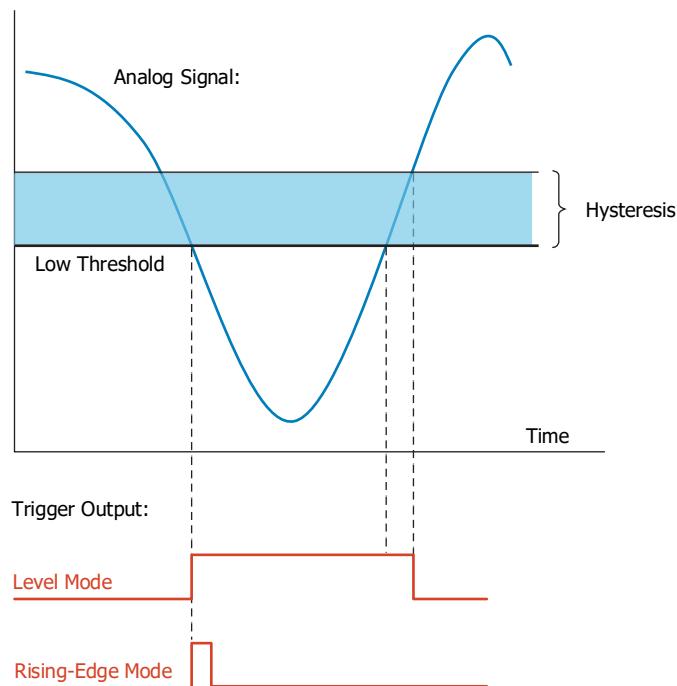


**Figure 10.40 Low-Threshold Trigger: Rising-Edge and Level Output Modes**

Figure 10.41 illustrates the operation of the rising edge and level modes of the low-threshold trigger with a pickup time applied.

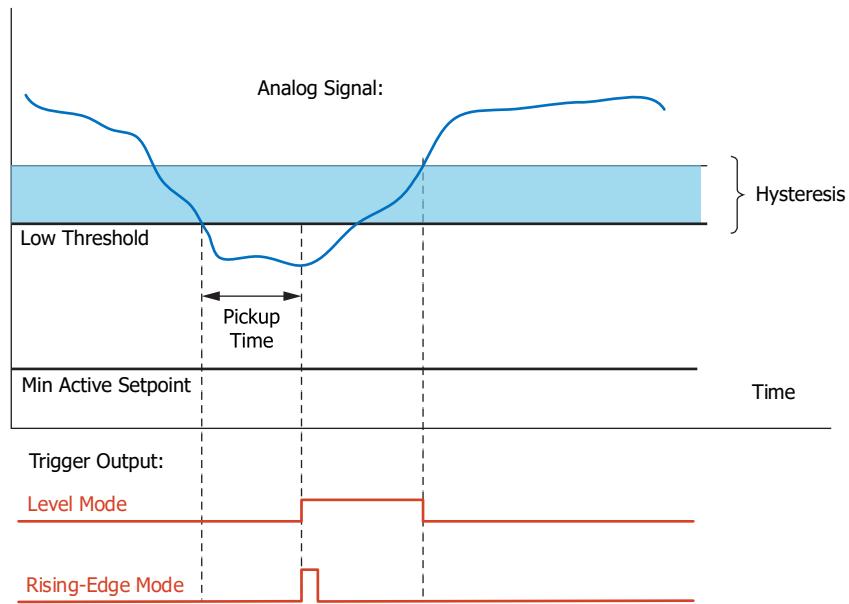

**Figure 10.41 Low-Threshold Trigger: Rising-Edge and Level Output Modes with Pickup Time**

Figure 10.42 illustrates the operation of the rising edge and level modes of the low-threshold trigger with a minimum active set point enabled.

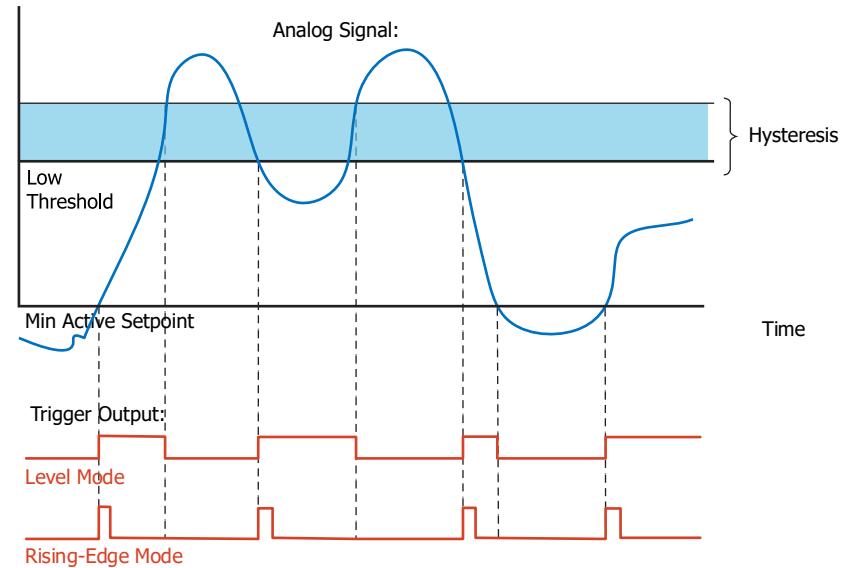

**Figure 10.42 Low-Threshold Trigger: Rising-Edge and Level Output Modes with Minimum Active Set Point**

## Rate-of-Change Trigger

The output trigger asserts if the value of the monitored analog signal rate-of-change exceeds a predefined rate over a predefined time period. Rate-of-change triggers have two operating modes: rising-edge and level.

### ► Rising-Edge Mode

When a rate-of-change event condition is detected in the observed analog value, the Recording Trigger Extension sends a one-processing-interval pulse to the Event\_Trigger input of the associated Axion Recording Groups. Therefore, the Recording Group will produce an event file of minimum oscillography record length.

### ► Level Mode

In this mode, the trigger output remains asserted for as long as the rate-of-change condition exists. When a rate-of-change event condition is detected in the observed analog value, the Recording Trigger Extension asserts the Event\_Trigger input of the associated Axion Recording Groups. The trigger condition deasserts when the rate-of-change of the analog signal returns to a value below the defined threshold.

## Columns

**Table 10.81 Analog Triggers Tab Column Definitions**

| Column                          | Description   |
|---------------------------------|---|
| Enable                          | The analog tag is monitored by the Recording Triggers Extension when True.  |
| Data Reference                  | Analog tag that is monitored by the Recording Triggers Extension. Allowed types are REAL, MV, SINT, USINT, INT, UINT, DINT, and INS.  |
| Data Type                       | The auto-detected data type of the monitored analog tag.  |
| Channel ID                      | String to identify the channel (e.g., VA, RealPower). The specific trigger ID string is appended to the Channel ID string to identify the Recording Group output event file.  |
| Threshold Units                 | Defines the units in which the trigger thresholds and hysteresis values are entered. There are three possible settings for this value: <ul style="list-style-type: none"> <li>► Engineering Units: The trigger thresholds and hysteresis values are entered as the actual status value of the analog channel.</li> <li>► Percentage-of-Nominal: The trigger thresholds and hysteresis values are entered as percentage of a nominal value.</li> <li>► Per-Unit: The trigger thresholds and hysteresis values are entered in per-unit values.</li> </ul> |
| Nominal/PU Base                 | The analog tag nominal value or per-unit base. This value is required if the Threshold Units column is set to Percentage-of-Nominal or Per-Unit.  |
| Enable High Trigger             | If True, the analog tag is monitored for high-threshold event triggers.   |
| High Threshold                  | Minimum value of the analog tag required to assert the trigger. This value must be entered in the units selected in the Threshold Units column.   |
| High Trigger Type               | Rising-edge mode or Level mode, as described in the High-Threshold Trigger section.   |
| High Trigger Hysteresis         | The hysteresis value. This value is subtracted from the High Threshold value to define the value at which the trigger deasserts when in Level mode. This value must be entered in the units selected in the Threshold Units column and is ignored in Rising-edge mode.  |
| High Threshold Pickup Time (ms) | The minimum time, in milliseconds, that the analog signal must be greater than or equal to the High-Threshold value before asserting the trigger output. This input defaults to 0 milliseconds and supports a range of 0 to 4,294,967,296.  |

| Column                              | Description  |
|-------------------------------------|--|
| High Trigger ID                     | String to identify the high-threshold trigger (e.g., 59element). This string is appended to the Channel ID string value to identify the Recording Group output event file.   |
| High Trigger Log                    | <p>There are three settings for this column:</p> <ul style="list-style-type: none"> <li>► SOE: An RTAC Sequence-of-Events (SOE) entry is created if a high-threshold condition is detected on the analog tag.</li> <li>► SOE + Alarm: In addition to creating an SOE entry, the high-threshold trigger event is displayed in the Alarm Summary of the RTAC web interface.</li> <li>► Disable: High-threshold trigger event conditions on the analog tag are not logged.</li> </ul> |
| Enable Low Trigger                  | If True, the analog tag is monitored for low-threshold event triggers.   |
| Low Threshold                       | Maximum value of the analog tag required to assert the trigger. This value must be entered in the units selected in the Threshold Units column.  |
| Low Trigger Type                    | Rising-edge mode or Level mode, as described in the Low-Threshold trigger section.   |
| Low Trigger Hysteresis              | The hysteresis value. This value is added to the Low Threshold value to define the value at which the trigger deasserts when in Level mode. This value must be entered in the units selected in the Threshold Units column and is ignored in Rising-edge mode.   |
| Low Trigger Pickup Time (ms)        | The minimum time, in milliseconds, that the analog signal must be less than or equal to the Low Threshold value before asserting the trigger output. This input defaults to 0 milliseconds and supports a range of 0 to 4,294,967,296.   |
| Low Trigger Minimum Active Setpoint | The minimum value that the analog signal must exceed to activate the low threshold logic. This set point defaults to -999,999 and supports any 32-bit floating point input.  |
| Low Trigger ID                      | String to identify the low-threshold trigger (e.g., 27element). This string is appended to the Channel ID string value to identify the Recording Group output event file.  |
| Low Trigger Log                     | <p>There are three settings for this column:</p> <ul style="list-style-type: none"> <li>► SOE: An RTAC Sequence-of-Events (SOE) entry is created if a low-threshold condition is detected on the analog tag.</li> <li>► SOE + Alarm: In addition to creating an SOE entry, the low-threshold trigger event is displayed in the Alarm Summary of the RTAC web interface.</li> <li>► Disable: Low-threshold trigger event conditions on the analog tag are not logged.</li> </ul>    |
| Enable Rate-of-Change               | If True, the analog tag is monitored for rate-of-change event triggers.  |
| Rate-of-Change                      | Minimum change of the analog input tag over a user-specified time window (ROC Time column) required to assert the trigger. This value must be entered in the units selected in the Threshold Units column.   |
| ROC Time (ms)                       | Time period, in milliseconds, at which the analog tag value is sampled to detect a rate-of-change condition. The effective value of the time window is a multiple of the main task cycle time.   |
| ROC Trigger Pickup Time (ms)        | The time, in milliseconds, that the rate of change condition must be present before asserting trigger output. This value defaults to 0 milliseconds.   |
| ROC Trigger Type                    | Rising-edge mode or Level mode, as described in the Rate-of-Change Trigger section.  |
| ROC Trigger ID                      | String to identify the rate-of-change trigger. This string is appended to the Channel ID string value to identify the Recording Group output event file.   |
| ROC Log                             | <p>There are three settings for this column:</p> <ul style="list-style-type: none"> <li>► SOE: an RTAC Sequence-of-Events (SOE) entry is created if a rate-of-change condition is detected on the analog tag.</li> <li>► SOE + Alarm: In addition to creating an SOE entry, the rate-of-change condition event is displayed in the Alarm Summary of the RTAC web interface.</li> <li>► Disable: Rate-of-change condition events on the analog tag are not logged.</li> </ul>       |

## Digital Triggers Tab

The **Digital Triggers** tab is used to configure triggers on digital signals. Boolean data tags that are monitored for digital triggers are added to the **Digital Triggers** tab. Each digital trigger has four possible operating modes:

- ▶ **Rising-Edge Mode**  
The output trigger asserts for one RTAC processing interval when the monitored digital tag changes from False to True.
- ▶ **Falling-Edge Mode**  
The output trigger asserts for one RTAC processing interval when the monitored digital tag changes from True to False.
- ▶ **State-Change Mode**  
The output trigger asserts for one RTAC processing interval when a change of state is detected in the monitored digital tag.
- ▶ **Level Mode**  
The output triggers remain asserted as long as the monitored digital signal is asserted.

The digital trigger tab also provides options for adding pickup and dropout time delays to each of the above operating modes. Use the pickup time input to set the minimum time, in milliseconds, that the digital trigger must be asserted before asserting the trigger output. The dropout time input allows setting the time, in milliseconds, following the input transition from true to false before deasserting the trigger output condition.

**Table 10.82 Digital Triggers Tab Column Definitions**

| Column                    | Description   |
|---------------------------|---|
| Enable                    | The digital tag is monitored by the Recording Triggers Extension when True.   |
| Data Reference            | Digital tag that is monitored by the Recording Triggers Extension. Allowed types are BOOL and SPS.  |
| Data Type                 | The auto-detected data type of the monitored analog tag.  |
| Trigger Type              | Rising-edge, Falling-edge, State-change, or Level.  |
| Trigger Pickup Time (ms)  | The time that the input signal must be asserted before asserting trigger output. This input defaults to 0 milliseconds.   |
| Trigger Dropout Time (ms) | The time that the input signal must be deasserted after a transition from TRUE to FALSE, before asserting trigger output. This input defaults to 0 milliseconds.  |
| Trigger ID                | String to identify the digital trigger. This string is used to identify the Recording Group output event file.  |
| Trigger Log               | There are three settings for this column:<br><ul style="list-style-type: none"> <li>▶ SOE: An RTAC Sequence-of-Events (SOE) entry is created if a digital trigger condition is detected on the analog tag.</li> <li>▶ SOE + Alarm: In addition to creating an SOE entry, digital trigger condition event is displayed in the Alarm Summary of the RTAC web interface.</li> <li>▶ Disable: Digital trigger condition events on the analog tag are not logged.</li> </ul> |

## Recording Devices Tab

The **Recording Devices** tab is used to set the recording devices that are triggered when a trigger event condition, analog or digital, is detected. Two types of tags can be entered in this tab:


- Axion Recording Group POU Type

The Axion Recording Groups added to the **Recording Devices** tab are automatically triggered by the Recording Triggers Extensions if a trigger event condition is detected. Additionally, the Recording Triggers Extensions sends the proper trigger ID to the Recording Group, as shown in *Figure 10.7*. The Axion Recording Group uses the trigger ID to identify the output event file.

- Boolean Type

Boolean tags added to the **Recording Devices** tab are automatically asserted by the Recording Triggers Extensions if a trigger event condition is detected. This allows to trigger a recording device different than a Recording Group, for example, the oscillography recording of an SEL-2245 Analog Input Module.

In the example shown in *Figure 10.43*, two tags have been associated to the Recording Devices tab: a Recording Group POU (named DFR) and the Event\_Trigger input pin of an SEL-2245 Analog Input Module. If a trigger event occurs, the Recording Triggers extension will send the trigger signal to both recording devices to start data capture.

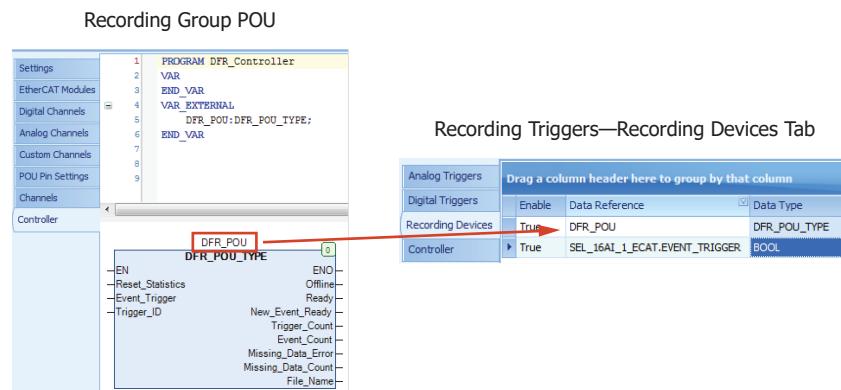

**Figure 10.43** Assigning an Axion Recording Group to a Recording Triggers Extension


## Controller Tab

The **Controller** tab contains the Recording Triggers Extension Program Organization Unit (POU). The Recording Triggers POU includes the following outputs:

**Table 10.83 Recording Triggers POU Output Pins**

| Pin Name                                  | Data Type                                      | Description  |
|---|--|--|
| ENO                                       | BOOL   | ENO reflects the state of the enabled input. When ENO is equal to TRUE, all enabled recording trigger rows configured in this extension are active.  |
| Event_Trigger_Out                         | BOOL   | This is the trigger output signal. This output becomes True when a trigger event condition is detected. This is the same signal that is sent to the devices in the <b>Recording Devices</b> tab to start data capture.   |
| Trigger_ID_Out                            | STRING(64)                                     | If a rising edge is detected in the Event_Trigger_Out output, the Trigger_ID_Out pin outputs the trigger ID string that identifies the trigger type. This output is sent to the Trigger_ID input pin of the Recording Groups associated to the <b>Recording Devices</b> tab when a trigger occurs. |
| Count_of_Enabled_Recording_Triggers       | UINT   | Equal to the total number of recording triggers that are enabled by this extension. This is useful when navigating the Recording_Trigger_Individual_Output_Array with a loop.  |
| Recording_Trigger_Individual_Output_Array | ARRAY[1.. n] OF struct_RecordTriggerOutputInfo | Array of elements for each individual recording trigger enabled in this instance of RecordingTriggers. This array's upper bound 'n' is equal to the total number of recording triggers that are enabled by this extension.   |

The Event\_Trigger\_Out output pin may be used to trigger other recording units such as a DDR extension. In this case, we need to assign the Event\_Trigger\_Out POU output pin of the Recording Triggers extension to the DDR input signal, as shown in *Figure 10.44*.

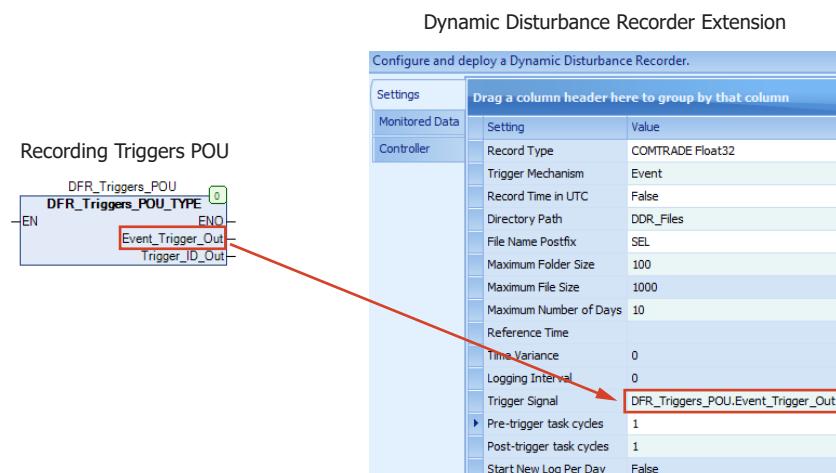**Figure 10.44 Triggering a DDR Using Recording Trigger Extension**

## Usage of Recording\_Trigger\_Individual\_Output\_Array

The Recording Trigger extension populates the Recording\_Trigger\_Individual\_Output\_Array pin each RTAC processing interval. For each row of the analog and digital triggers tab, a row of struct\_RecordingTriggerOutputInfo (see programming reference manual for structure details) is added to the Recording\_Trigger\_Individual\_Output\_Array. This data structure for each instance in this array is updated as described below:

- ▶ For analog trigger conditions, each row's struct\_RecordingTriggerOutputInfo.ChannelID is set equal to the recording triggers ChannelID extension input. For digital trigger conditions the extension does not update the struct\_RecordingTriggerOutputInfo.ChannelID field.
- ▶ If the extension detects a change of state in this rows trigger output the extension updates the struct\_RecordingTriggerOutputInfo.TriggerOutputInfo.stVal to match the TriggerOutput, sets struct\_RecordingTriggerOutputInfo.TriggerOutputInfo.t equal to the time that the state change is detected, and sets the struct\_RecordingTriggerOutputInfo.TriggerID equal to the row's TriggerID of the active TriggerOutput.
- ▶ The extension updates struct\_RecordingTriggerOutputInfo.TriggerOutput.q.validity to 'good' if the POU ENO output pin is equal to "TRUE".

## Report Generator

---

### Overview

Report Generator creates user-formatted reports on a triggered basis. Reports are saved in a user-specified directory in the RTAC file system. Report Generator offers several reporting modes, which allows individual files to contain one or more triggered reports. In addition to file generation, Report Generator also manages a circular file buffer in the target directory to keep the number of files within a user-specified limit. Report definition is accomplished via a generic, freeform text entry window. The reports can contain text as well as variables of types REAL, LREAL, MV, CMV, INS, SPS, BCR, STRING, DT, timestamp\_t, validity\_t, BOOL, and any of the various integer data types. When the trigger asserts, all text and the present value of any variables are written to a file. Reports can be saved as .txt, .html, or .csv files.

## Use-Cases

Configure multiple Report Generator instances to inform users about notable system events by using report formats, report trigger conditions, and delivery mechanisms customized to each event type. The following are a few examples of possible reports:

- ▶ Daily voltage excursion statistics reports saved in the RTAC file system
- ▶ Per-event transformer health indicator summary in TXT format pushed to an FTP server

- Physical access alarm email notification formatted in HTML for easy viewing on mobile devices
- Diagnostics report for all connected IEDs, updated hourly and viewable via the SEL server **FILE SHOW** command

## Global Settings Tab

The Settings tab contains the Global settings that are applied to each configured report in the Report Generator extension instance. The following reporting methods are available:

- **Single Report Files:** A new file is created to contain each triggered report. File names contain a time stamp that reflects the RTAC system time when the report was triggered. This time stamp has a resolution in seconds.
- **Multiple Report Files:** New triggered reports are appended to the same file. Reports appear in the file with the newest reports at the top. When the number of reports added to the file is equal to the user-configured Maximum Reports Per File setting, a new file is created to contain the new report. File names contain a time stamp that reflects the RTAC system time when the oldest report in the file was triggered. The time stamp resolution is down to the second.
- **Multiple Report Managed File:** New triggered reports are appended to the same file. Reports appear in the file with the newest reports at the top. When the number of reports added to the file is equal to the user-configured Maximum Reports Per File setting, the oldest report is deleted from the file and then the new report is added.

**Table 10.84 Global Settings Tab**

| Name                        | Description  |
|-----------------------------|--|
| Directory <sup>a, b</sup>   | The directory in which to store and manage report files. 100 characters max. / delimits the folder path. It cannot contain any file path manipulation variables (\\", \., \..). If the folder does not exist, it is created the first time that a file is written. |
| Maximum Files Per Directory | The maximum allowed number of files in the directory. When the limit is exceeded, the oldest file is deleted until the remaining number of files is within the limit.  |
| Report Method               | Single Report Files, Multiple Report Files, or Multiple Report Managed File.   |
| Maximum Reports Per File    | Only configurable when Report Method is Multiple Report Files or Multiple Report Managed File.   |
| Log Run-time Errors         | If TRUE, run-time errors are logged to the RTAC SOE viewer.  |

<sup>a</sup> The Directory setting can contain all printable ASCII characters between 16#20(Space) and 16#7E(tilde) except for ", ' ; < , % , > , ? , \, and |.

<sup>b</sup> Each instance of Report Generator added to an RTAC project uses a dedicated directory manager process. Each instance of Report Generator should use a unique directory location to avoid directory management conflicts.

## Reports Tab

Configure report-specific settings.

**Table 10.85 Reports Tab**

| Name                     | Description   |
|--------------------------|---|
| Report Name <sup>a</sup> | The name of the report to which the date and time are appended. 100 characters max. |
| Report Trigger           | Boolean input that triggers a new report on a rising edge.                          |

| Name      | Description  |
|-----------|--|
| File Type | TXT, HTML, or CSV. This sets the file name extension but does not affect the formatting of the file content. |

<sup>a</sup> The Directory setting can contain all printable ASCII characters between 16#20(Space) and 16#7E(tilde) except for ", :, <, %, >, ?, \, and |.

## Controller Tab

Use the function block pins to view and modify the state of a Report Generator instance.

**Table 10.86 Report Generator POU Output Pin Settings**

| Pin Name              | Pin Type    | Description  | Default Value |
|-----------------------|-------------|--|---------------|
| ConsumedDirectorySize | ULINT       | Size of all files in the monitored directory in units of bytes.  | 0             |
| DataStorageWarning    | BOOL        | Asserts if available file system storage space is 50 MB or less.   | FALSE         |
| Error                 | BOOL        | Indicates an internal processing error.  | FALSE         |
| ErrorMessage          | STRING(255) | A brief description of the issue driving the Error pin.  |               |
| Busy                  | BOOL        | When TRUE, this indicates that the report generator is processing a new report, in which case it ignores assertions of the Report Trigger. | TRUE          |

## Text Editor Tab

The Report Generator extension adds a dedicated text editor object for every report configured in the Report tab. The text editor object allows as many as 65535 Unicode characters. The text editor interprets curly brackets ("{" and "}") as special characters. References to logic engine tags can be placed within curly brackets. When the report is triggered, the current value of the referenced tag is written to the report as a string. An open curly bracket enables the autocompletion feature, which aids in tag selection. Tags using the following data types can be converted to strings within the text editor by using curly brackets:

- INT
- DINT
- UINT
- UDINT
- SINT
- USINT
- LINT
- ULINT
- WORD
- DWORD
- LWORD
- BYTE
- REAL

- ▶ LREAL
- ▶ STRING (up to STRING(255))
- ▶ DT
- ▶ timestamp\_t
- ▶ validity\_t
- ▶ BOOL (single variable or Boolean expression)

## Literal Usage of Curly Brackets

To incorporate curly brackets in a compiled report, use the backslash character to indicate the literal usage of a curly bracket character. For example, to print the string "Fault Type {2}" to a report, enter the following text in the Text Editor:

```
Fault Type \{2\}
```

## Type Formatting Behavior

Report Generator uses the \_TO\_STRING type conversion functions noted in *Type Conversion Functions on page 1077* for converting all simple data types to string. The following types are formatted using the indicated functions from the SELUtils library:

- ▶ REAL types are formatted with REAL\_TO\_FORMATTED\_STRING()
- ▶ LREAL types are formatted with LREAL\_TO\_FORMATTED\_STRING()
- ▶ timestamp\_t types are formatted with TIMESTAMP\_TO\_STRING()
- ▶ validity\_t types are formatted with VALIDITY\_TO\_STRING()

REAL\_TO\_FORMATTED\_STRING() and LREAL\_TO\_FORMATTED\_STRING() functions allow additional input arguments for number representation and decimal point accuracy.

Within the text editor, these input arguments can be added as comma-separated additions to a string conversion call in the format of {TagName, UseScientificNotation, SignificantDecimals}. For example:

```
{REALvar1, TRUE, 3}
```

See SELUtils in the Programming Reference (available from the help menu of the RTAC configuration software) for additional information on descriptions and ranges for allowed input arguments.

## Processing Considerations

Each instance of the Report Generator extension uses one instance of the FileIO library class\_BasicDirectoryManager and one or more instances of the FileIO library class\_FileWriter and class\_FileReader. The FileIO library supports a fixed number of file and directory manipulation operations per task cycle for the entire RTAC project. Calls for additional operations within a task cycle are buffered until resources are available to complete the work, which may lead to delays in file writing or directory management. Calls for additional operations within a task cycle over multiple task cycles may lead to an effective

freeze of one or more FileIO class instances. While File Writer operations for this extension are largely dictated by assertions of the Report Trigger input, Directory Manager class instances conduct file and directory manipulation operations on a continual basis. For this reason, SEL recommends that you limit the total number of Directory Manager class instances in the RTAC project to eight. This includes instances of library classes and extensions that use FileIO directory management (e.g., DDR, Trend Recorder, Report Generator).

## Simple Tag Mapper

---

### Overview

The Tag Mapper is used to automatically create the link between a collection of tags from client devices to a list of tags assigned to a server device, generally for SCADA or HMI display purposes. The Tag Mapper is an alternative to the Tag Processor. Tag Mapper focuses on rules for automatically mapping client data to servers, while the Tag Processor offers high levels of customization for client-to-server mapping. Tag Mapper uses a server map and populates the map with data gathered from protocol clients. It also allows for the configuration of other commonly used features, such as Live Data and SOE Logging. The Tag Mapper reduces the amount of time required to map data from protocol clients to SCADA servers.

Tag Mapper can be configured in a variety of configurations to perform automatic or manual tag mapping, live data views, or logging operations. The following are some example applications:

- ▶ Populate a server tag map on the **Server Map** tab and add all the client devices with tags you want to map to it on the **Available Sources** tab. When you perform a Process Map operation, all client device tags will automatically be sequentially mapped to the server shared map using a best-fit operation for client tag type vs. server tab name (e.g., an SPS tag on a client device should land on the Binary Inputs tab on a DNP server shared map). The mapping is displayed (and additionally user configurable) on a **Generated\_Map** subitem under the parent extension. You can optionally configure Live Data Templates and Logging Templates on the matching tabs to enable live data and SOE logging features for all tags that were mapped from client to server.
- ▶ Populate a server tag map on the **Server Map** tab and perform a Process Map operation without specifying any clients on the **Available Sources** tab. The **Generated\_Map** subitem will show all server tags without any client tags mapped to them. In the Tag Selector, move client device tags to the client tag column(s) on the **Generated\_Map** to manually populate the client-to-server tag map.
- ▶ Populate a server tag map on the **Server Map** tab and perform a Process Map operation as previously described. Open the CSV export file created in the Extension Logs folder in an external CSV editor tool (such as Microsoft Excel) and manually populate the client tag field(s) with valid tags from the project. Select **Import New Map from CSV** on the **Server Map** tab to populate the **Generated\_Map** with the desired mapping defined by the contents of the CSV file.

- Use the **Live Data Only** tab to configure project items (device, tag lists, etc.) for live data features. This allows use of the live data IEC 61131-3 logic generation features of Tag Mapper independent of any client-to-server tag mapping.
- Use the **Logging Only** tab to configure project items (device, tag lists, etc.) for SOE logging features. This allows use of the SOE logging IEC 61131-3 logic generation features of Tag Mapper independent of any client-to-server tag mapping.

## Setup

### Inserting Tag Mapper

From the **Insert** tab, expand the available extensions by selecting the **Extensions** button, and then select **Simple Tag Mapper**.

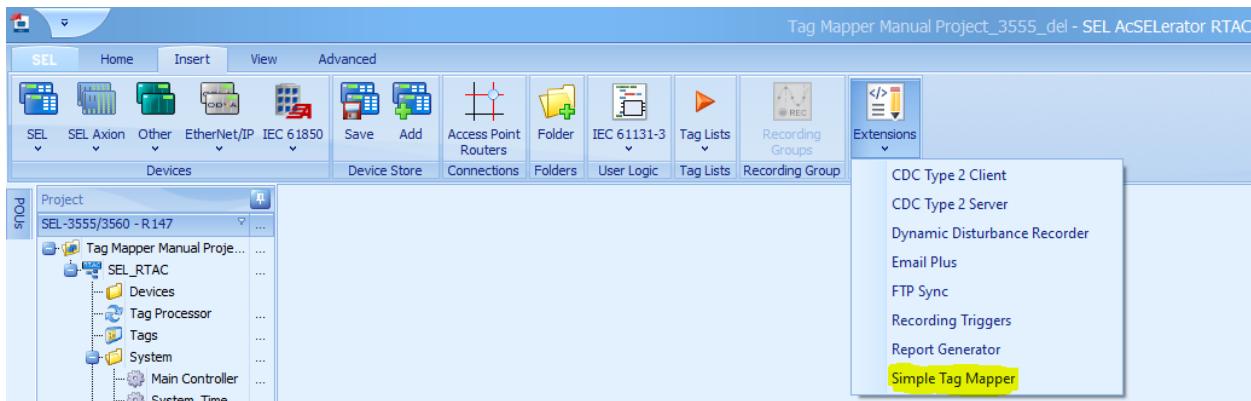


Figure 10.45 Creating Simple Tag Mapper

Tag Mapper supports mapping data to the following server protocol maps.

- DNP
- IEC 60870-5-101/104
- SES-92
- L&G 8979
- Modbus

### Server Map Tab

Available server maps in the project will populate the drop-down in the cell located under the **Server Shared Map** column. Adding an item in the **Server Map** tab will create a **Generated\_Map** subitem and associated row. This row will define the server map to map tags from client devices. The **Server Map** tab will be revisited after the data sources have been configured as a step to initiate the automatic tag mapping to the DNP server map.

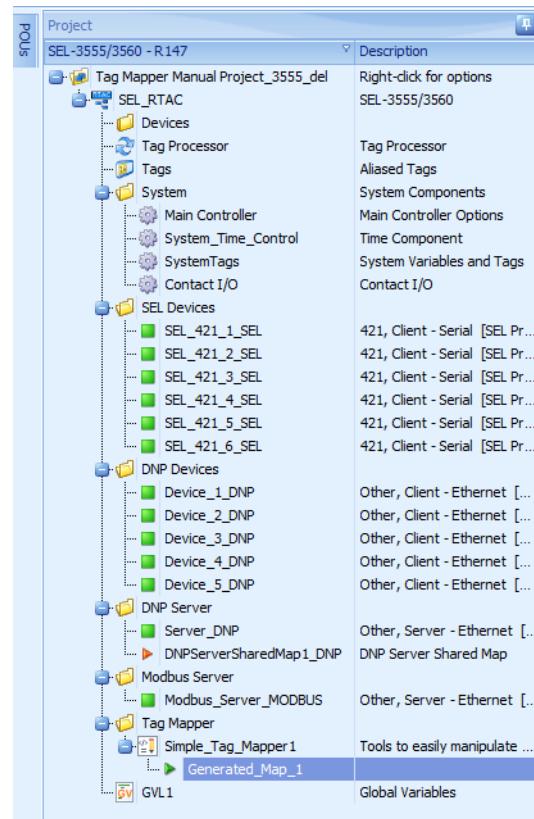


Figure 10.46 Generated Map

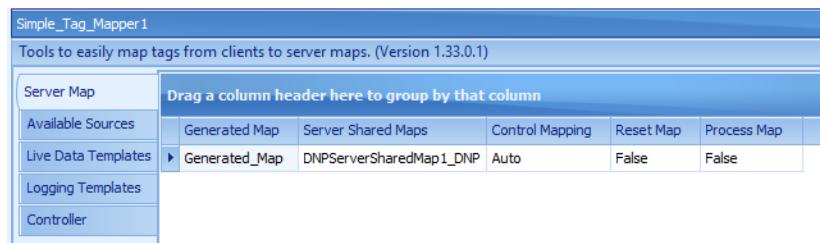


Figure 10.47 Assigning Server Shared Map

## Available Sources Tab

The **Available Sources** tab is where clients whose data will be mapped to the specified server map are configured. To add sources (clients) to this list, use the + button and enter the number of desired rows; each row will allow for selecting a single client device.

Supported client device types include:

- CP 2179
- DNP
- EtherCAT I/O Modules
- Flex Parse
- IEC 60870-5-101/104
- IEC 60870-5-103

- IEC 61850 MMS
- IEEE C37.118
- L&G 8979
- Modbus
- SEL Protocol
- SES-92
- SNMP

The columns in the **Available Sources** tab are detailed in the following subsections.

## Client

Use this blank cell to select the desired client device from a drop-down menu for each added row. The Tag Mapper will populate the server map with the tags from each client in the order that they appear in the Available Sources list. The order of the tags within a single client is controlled by:

1. Order of the data tabs in each protocol client.
2. The order that the tags were created in that tab. In most cases, this will be the same as the order of the tags as they appear in the tab.

| Client        | Automap Client Offline Status | Initialize Server Tab Spares | Server Tab Spares   |
|---------------|-------------------------------|------------------------------|---|
| Device_1_DNP  | True                          | False                        | Binary Inputs:0, Double Bit Inputs:0, Binary Outputs:0, Counters:0, Analog Inputs:0, An |
| Device_2_DNP  | True                          | False                        | Binary Inputs:0, Double Bit Inputs:0, Binary Outputs:0, Counters:0, Analog Inputs:0, An |
| Device_3_DNP  | True                          | False                        | Binary Inputs:0, Double Bit Inputs:0, Binary Outputs:0, Counters:0, Analog Inputs:0, An |
| Device_4_DNP  | True                          | False                        | ServerTab:SpareCount,   |
| Device_5_DNP  | True                          | False                        | ServerTab:SpareCount,   |
| SEL_421_1_SEL | False                         | False                        | ServerTab:SpareCount,   |
| SEL_421_2_SEL | False                         | False                        | ServerTab:SpareCount,   |
| SEL_421_3_SEL | False                         | False                        | ServerTab:SpareCount,   |
| SEL_421_4_SEL | False                         | False                        | ServerTab:SpareCount,   |
| SEL_421_5_SEL | False                         | False                        | ServerTab:SpareCount,   |
| SEL_421_6_SEL | False                         | False                        | ServerTab:SpareCount,   |
| Device_5_DNP  |                               |                              |   |
| SEL_421_1_SEL |                               |                              |   |
| SEL_421_2_SEL |                               |                              |   |
| SEL_421_3_SEL |                               |                              |   |
| SEL_421_4_SEL |                               |                              |   |
| SEL_421_5_SEL |                               |                              |   |
| SEL_421_6_SEL |                               |                              |   |

Figure 10.48 Available Sources

## Automap Client Offline Status

If set to True, the Offline bit of the client device is automatically mapped to a point in the server map. The Tag Mapper will use the first Binary Input allocated for a device for the Offline bit. This setting only applies to protocol clients that have an Offline bit, thus EtherCAT I/O modules are not supported and the value of this setting will be ignored for client devices of this type.

## Signal Sorting

The Signal Sorting option is used only with SEL Protocol client devices and is configured as either Standard or Terminal. When left at the default of Standard, no modification is made to order of client tags as they are mapped to a server, so the list of client tags is handled in default (alphabetical) order. For example, an SEL protocol client device with two sets of three-phase current tags would map them to the server in alphabetical order as follows: IA1, IA2, IB1, IB2, IC1, and finally IC2. If the setting is changed to Terminal and a Process Map operation is performed, the tags are mapped to the server grouped by terminal number: IA1, IB1, IC1, IA2, IB2, and finally IC2. A terminal-based sort order is applied to tags that have a partial name match on the following tag names:

- Terminal 1: FM\_INST\_I0\_1, FM\_INST\_I1\_1, FM\_INST\_I2\_1, FM\_INST\_IA1, FM\_INST\_IAB1, FM\_INST\_IAW1, FM\_INST\_IB1, FM\_INST\_IBC1, FM\_INST\_IBW1, FM\_INST\_IC1, FM\_INST\_ICA1, FM\_INST\_ICW1, FM\_INST\_VA1, FM\_INST\_VB1, FM\_INST\_VC1, F\_METER2\_IA1, F\_METER2\_IB1, F\_METER2\_IC1
- Terminal 2: FM\_INST\_I0\_2, FM\_INST\_I1\_2, FM\_INST\_I2\_2, FM\_INST\_IA2, FM\_INST\_IAB2, FM\_INST\_IAW2, FM\_INST\_IB2, FM\_INST\_IBC2, FM\_INST\_IBW2, FM\_INST\_IC2, FM\_INST\_ICA2, FM\_INST\_ICW2, FM\_INST\_VA2, FM\_INST\_VB2, FM\_INST\_VC2, F\_METER2\_IA2, F\_METER2\_IB2, F\_METER2\_IC2
- Terminal 3: FM\_INST\_I0\_3, FM\_INST\_I1\_3, FM\_INST\_I2\_3, FM\_INST\_IA3, FM\_INST\_IAB3, FM\_INST\_IAW3, FM\_INST\_IB3, FM\_INST\_IBC3, FM\_INST\_IBW3, FM\_INST\_IC3, FM\_INST\_ICA3, FM\_INST\_ICW3, F\_METER2\_IA3, F\_METER2\_IB3, F\_METER2\_IC3
- Terminal 4: FM\_INST\_I0\_4, FM\_INST\_I1\_4, FM\_INST\_I2\_4, FM\_INST\_IA4, FM\_INST\_IAB4, FM\_INST\_IAW4, FM\_INST\_IB4, FM\_INST\_IBC4, FM\_INST\_IBW4, FM\_INST\_IC4, FM\_INST\_ICA4, FM\_INST\_ICW4

## Spare Points

Three columns are used to allow users to specify (per client) some spare SCADA tags to be left open in a contiguous space in the automatically generated map for future manual point expansion from the client. Spares are defined by the data category defined in each server protocol (for e.g., "Binary Inputs" on a DNP shared map). The number of spares to reserve for each tab is defined by the values in the **Server Tab Spares** field in a comma-separated list formatted with <tab-name>:<number of spare tags> entries. To initialize this field with default values for each possible server tab, toggle the **Initialize Server Tab Spares** cell to 'True' and then save your settings. After this operation, the **Server Tab Spares** field will contain each tab name from the specified type of server or map on the **Server Map** tab associated with 0 spares. The field can then be manually edited to remove unused tag types or tag types for which you do not intend to define spares.

*Figure 10.49* shows an example of the format for spare points in **Server Tab Spares** column. This example uses the DNP protocol. The **Spare Arrangement** column is for assigning where the spare points are located with respect to tags mapped from the client device. When the map is generated, the automated mapping function will reserve the spare positions that are configured.

| Tools to easily manipulate and map tags. |              |   |                               |                              |   |                   |
|--|--------------|---|-------------------------------|------------------------------|---|-------------------|
| Server Map                               |              | Drag a column header here to group by that column |                               |                              |   |                   |
| Available Sources                        |              | Client  | Automap Client Offline Status | Initialize Server Tab Spares | Server Tab Spares   | Spare Arrangement |
| Live Data Templates                      | Device_1_DNP | True  |                               | False                        | Binary Inputs:4, Double Bit Inputs:0, Binary Outputs:0, Counters:0, Analog Inputs:0, Analog Outputs:0, Datasets:0 | Append to end     |
| Logging Templates                        | Device_2_DNP | True  |                               | False                        | Binary Inputs:5, Double Bit Inputs:0, Binary Outputs:0, Counters:0, Analog Inputs:0, Analog Outputs:0, Datasets:0 | Append to end     |
| Controller                               | Device_3_DNP | True  |                               | False                        | Binary Inputs:6, Double Bit Inputs:0, Binary Outputs:0, Counters:0, Analog Inputs:0, Analog Outputs:0, Datasets:0 | Append to end     |
|  | Device_4_DNP | True  |                               | False                        | ServerTab:SpareCount,   | None              |
|  | Device_5_DNP | True  |                               | False                        | ServerTab:SpareCount,   | None              |

**Figure 10.49 Spare Points**

The options within a drop-down menu are **Append to start** and **Append to end**. *Figure 10.50* is an example with five spare points appended to the end of the Device\_2\_DNP client device tags. Note that no **Client Tag** has been assigned in the spare positions and these are left open for future use by the settings engineer, who can manually add in new client tags to these positions without affecting the server tag assignments for all subsequent rows.

| Generated Map Details |  | Drag a column header here to group by that column |                                  |           |                          |           |          |
|-----------------------|--|---|----------------------------------|-----------|--------------------------|-----------|----------|
| Documentation         |  | Comment   | Server Tag                       | Server DT | Client Tag               | Client DT | Comments |
| Analogs               |  |   | DNPServerSharedMap1_DNP.BI_00000 | SPS       | Device_2_DNP_POU.Offline | BOOL      |          |
| Analogs               |  |   | DNPServerSharedMap1_DNP.BI_00001 | SPS       | Device_2_DNP.BI_00000    | SPS       |          |
| Analogs               |  |   | DNPServerSharedMap1_DNP.BI_00002 | SPS       | Device_2_DNP.BI_00001    | SPS       |          |
| Analogs               |  |   | DNPServerSharedMap1_DNP.BI_00003 | SPS       | Device_2_DNP.BI_00002    | SPS       |          |
| Analogs               |  |   | DNPServerSharedMap1_DNP.BI_00004 | SPS       | Device_2_DNP.BI_00003    | SPS       |          |
| Analogs               |  |   | DNPServerSharedMap1_DNP.BI_00005 | SPS       | Device_2_DNP.BI_00004    | SPS       |          |
| Binary                |  |   | DNPServerSharedMap1_DNP.BI_00006 | SPS       |                          |           |          |
| Binary                |  |   | DNPServerSharedMap1_DNP.BI_00007 | SPS       |                          |           |          |
| Binary                |  |   | DNPServerSharedMap1_DNP.BI_00008 | SPS       |                          |           |          |
| Binary                |  |   | DNPServerSharedMap1_DNP.BI_00009 | SPS       |                          |           |          |
| Binary                |  |   | DNPServerSharedMap1_DNP.BI_00010 | SPS       |                          |           |          |
| Binary                |  |   | DNPServerSharedMap1_DNP.BI_00011 | SPS       | Device_1_DNP_POU.Offline | BOOL      |          |
| Binary                |  |   | DNPServerSharedMap1_DNP.BI_00012 | SPS       | Device_1_DNP.BI_00000    | SPS       |          |

**Figure 10.50 Five Binary Input Spare Points Appended to End of Device\_2\_DNP Points**

| Generated Map Details |  | Drag a column header here to group by that column |                                  |           |                          |           |          |
|-----------------------|--|---|----------------------------------|-----------|--------------------------|-----------|----------|
| Documentation         |  | Comment   | Server Tag                       | Server DT | Client Tag               | Client DT | Comments |
| Analogs               |  |   | DNPServerSharedMap1_DNP.BI_00000 | SPS       |                          |           |          |
| Analogs               |  |   | DNPServerSharedMap1_DNP.BI_00001 | SPS       |                          |           |          |
| Analogs               |  |   | DNPServerSharedMap1_DNP.BI_00002 | SPS       |                          |           |          |
| Analogs               |  |   | DNPServerSharedMap1_DNP.BI_00003 | SPS       |                          |           |          |
| Analogs               |  |   | DNPServerSharedMap1_DNP.BI_00004 | SPS       |                          |           |          |
| Binary                |  |   | DNPServerSharedMap1_DNP.BI_00005 | SPS       | Device_2_DNP_POU.Offline | BOOL      |          |
| Binary                |  |   | DNPServerSharedMap1_DNP.BI_00006 | SPS       | Device_2_DNP.BI_00000    | SPS       |          |
| Binary                |  |   | DNPServerSharedMap1_DNP.BI_00007 | SPS       | Device_2_DNP.BI_00001    | SPS       |          |
| Binary                |  |   | DNPServerSharedMap1_DNP.BI_00008 | SPS       | Device_2_DNP.BI_00002    | SPS       |          |
| Binary                |  |   | DNPServerSharedMap1_DNP.BI_00009 | SPS       | Device_2_DNP.BI_00003    | SPS       |          |
| Binary                |  |   | DNPServerSharedMap1_DNP.BI_00010 | SPS       | Device_2_DNP.BI_00004    | SPS       |          |
| Binary                |  |   | DNPServerSharedMap1_DNP.BI_00011 | SPS       | Device_1_DNP_POU.Offline | BOOL      |          |

**Figure 10.51 Five Binary Input Spare Points Appended to the Beginning of Device\_2\_DNP Points**

## Mapping Controls

The Server Map tab contains a column labeled **Control Mapping** that defaults to a value of **Auto**. When in Auto mode and performing mapping of "command"-style tags (of type DNPC, DPC, IOC, MDBC, SBRC, SPC, SRBC) between dissimilar tag types, a best-fit operation is performed between the different command "types" within these tags (e.g., operSet, operClear, operPulse, etc.). These operations are applied such that a particular command type received on a server tag will be applied in a consistent way across the other command tags of a dissimilar tag type owned by the client devices. For example, a 'close' operation received on a DNP server (exposed as the operClose attribute of the DNPC tag) will always be applied as a 'remote bit set' (exposed as operSet) operation on an SRBC tag owned by a SEL Client device. The following lookup table shows the complete mapping available between the different command types. A <no-op> entry means that receiving that particular command type on a server tag of a given type will have no effect on the associated client tag (e.g., receiving a 'DNP pulse' on a DNPC tag and mapping that to an 'SBRC' [breaker bit control] tag on a SEL Client).

| Server Tag Type |              |   | Client Tag Types |           |           |           |           |           |           |
|-----------------|--------------|---|------------------|-----------|-----------|-----------|-----------|-----------|-----------|
|                 |              |   | DNPC             | DPC       | IOC       | MDBC      | SBRC      | SPC       | SRBC      |
| DNPC            | operClose    | → | operClose        | operSet   | operSet   | operSet   | operClose | operSet   | operSet   |
|                 | operLatchOff | → | operLatchOff     | operClear | operClear | operClear | operTrip  | operClear | operClear |
|                 | operLatchOn  | → | operLatchOn      | operSet   | operSet   | operSet   | operClose | operSet   | operSet   |
|                 | operPulse    | → | operPulse        | <no-op>   | operPulse | <no-op>   | <no-op>   | <no-op>   | operPulse |
|                 | operTrip     | → | operTrip         | operClear | operClear | operClear | operTrip  | operClear | operClear |
| DPC             | operClear    | → | operTrip         | operClear | operClear | operClear | operTrip  | operClear | operClear |
|                 | operSet      | → | operClose        | operSet   | operSet   | operSet   | operClose | operSet   | operSet   |
| MDBC            | operClear    | → | operTrip         | operClear | operClear | operClear | operTrip  | operClear | operClear |
|                 | operSet      | → | operClose        | operSet   | operSet   | operSet   | operClose | operSet   | operSet   |
| SPC             | operClear    | → | operTrip         | operClear | operClear | operClear | operTrip  | operClear | operClear |
|                 | operSet      | → | operClose        | operSet   | operSet   | operSet   | operClose | operSet   | operSet   |

Figure 10.52 shows an example of Control Mapping from a DNP and SEL client device to a DNP server using **Auto** mode.

The screenshot shows the software interface for the Simple Tag Mapper. The top navigation bar includes tabs for 'Generated\_Map', 'Simple\_Tag\_Mapper1', 'Generated\_Map', 'Other\_1\_DNP', 'Client\_DNP', 'SEL\_351S\_1\_SEL', and 'DNPServerSharedMap1\_DNP'. The main area is titled 'Generated Map Details' and contains sections for 'Documentation' and 'Binary Outputs'. A table is displayed with columns: Comment, Server Tag, Server DT, Client Tag, Client DT, and a delete icon. The data rows show the following mappings:

| Comment | Server Tag                       | Server DT | Client Tag                 | Client DT |
|---------|----------------------------------|-----------|----------------------------|-----------|
|         | DNPServerSharedMap1_DNP.BO_00000 | DNPC      | Client_DNP.BO_00000        | DNPC      |
|         | DNPServerSharedMap1_DNP.BO_00001 | DNPC      | SEL_351S_1_SEL.FO_RB_RB1   | SRBC      |
|         | DNPServerSharedMap1_DNP.BO_00002 | DNPC      | SEL_351S_1_SEL.FO_BRK_BRK1 | SRBC      |
|         | DNPServerSharedMap1_DNP.BO_00003 | DNPC      |                            |           |

Figure 10.52 Example Control Mapping: Auto

If the **Control Mapping** value is modified to **Auto-Paired** and the generated map is re-processed, client command tags are mapped identical to the fixed rules defined by **Auto** mapping above, with the exception of SEL Client device remote bit tags mapped to a DNP Server. In this scenario, each DNP Binary Output is assigned a pair of SEL Client remote bit tags via the PAIRED operator, as shown in *Figure 10.53*.

| Server Tag                       | Server DT | Client Tag                 | Client DT | Point Number | Event Class | Operator | Operator Inputs          |
|----------------------------------|-----------|----------------------------|-----------|--------------|-------------|----------|--------------------------|
| DNPServerSharedMap1_DNP.BO_00000 | DNPC      | SEL_351S_1_SEL.FO_RB_RB1   | SRBC      | 0            | 0           | PAIRED   | SEL_351S_1_SEL.FO_RB_RB2 |
| DNPServerSharedMap1_DNP.BO_00001 | DNPC      | SEL_351S_1_SEL.FO_RB_RB3   | SRBC      | 1            | 0           | PAIRED   | SEL_351S_1_SEL.FO_RB_RB4 |
| DNPServerSharedMap1_DNP.BO_00002 | DNPC      | SEL_351S_1_SEL.FO_RB_RB5   | SRBC      | 2            | 0           |          |                          |
| DNPServerSharedMap1_DNP.BO_00003 | DNPC      | SEL_351S_1_SEL.FO_BRK_BRK1 | SRBC      | 3            | 0           |          |                          |
| DNPServerSharedMap1_DNP.BO_00004 | DNPC      |                            |           | 4            | 0           |          |                          |
| DNPServerSharedMap1_DNP.BO_00005 | DNPC      |                            |           | 5            | 0           |          |                          |
| DNPServerSharedMap1_DNP.BO_00006 | DNPC      |                            |           | 6            | 0           |          |                          |

**Figure 10.53 Example Control Mapping: Auto-Paired**

If the **Control Mapping** value is modified to **Verbose** and the generated map is re-processed, client command tags will still be mapped to server tags of type DNPC, DPC, MDBC, and SPC, but each individual operSPC control element will be mapped out separately to allow for user customization that goes beyond the fixed rules defined by **Auto** mapping above.

| Server Tag Type |              |   | Client Tag Types |           |           |           |           |           |           |
|-----------------|--------------|---|------------------|-----------|-----------|-----------|-----------|-----------|-----------|
|                 |              |   | DNPC             | DPC       | IOC       | MDBC      | SBRC      | SPC       | SRBC      |
| DNPC            | operClose    | → | operClose        | <no-op>   | <no-op>   | <no-op>   | operClose | <no-op>   | <no-op>   |
|                 | operLatchOff | → | operLatchOff     | operClear | operClear | operClear | operClear | operClear | operClear |
|                 | operLatchOn  | → | operLatchOn      | operSet   | operSet   | operSet   | operSet   | operSet   | operSet   |
|                 | operPulse    | → | operPulse        | <no-op>   | operPulse | <no-op>   | <no-op>   | <no-op>   | operPulse |
|                 | operTrip     | → | operTrip         | <no-op>   | <no-op>   | <no-op>   | operTrip  | <no-op>   | <no-op>   |
| DPC             | operClear    | → | operTrip         | operClear | operClear | operClear | operTrip  | operClear | operClear |
|                 | operSet      | → | operClose        | operSet   | operSet   | operSet   | operClose | operSet   | operSet   |
| MDBC            | operClear    | → | operTrip         | operClear | operClear | operClear | operTrip  | operClear | operClear |
|                 | operSet      | → | operClose        | operSet   | operSet   | operSet   | operClose | operSet   | operSet   |
| SPC             | operClear    | → | operTrip         | operClear | operClear | operClear | operTrip  | operClear | operClear |
|                 | operSet      | → | operClose        | operSet   | operSet   | operSet   | operClose | operSet   | operSet   |

*Figure 10.54* shows an example of Control Mapping from a DNP and SEL client device to a DNP server using **Verbose** mode.

| Generated Map Details                             |         |   |           |                                      |           |         |
|---|---------|---|-----------|--------------------------------------|-----------|---------|
| Documentation                                     |         |   |           |                                      |           |         |
| Binary Outputs                                    |         |   |           |                                      |           |         |
| Drag a column header here to group by that column |         |   |           |                                      |           |         |
|   | Comment | Server Tag                                    | Server DT | Client Tag                           | Client DT | Comment |
|   |         | DNPServerSharedMap1_DNP.BO_00000.operClose    | operSPC   | Client_DNP.BO_00000.operClose        | operSPC   |         |
|   |         | DNPServerSharedMap1_DNP.BO_00000.operLatchOn  | operSPC   | Client_DNP.BO_00000.operLatchOn      | operSPC   |         |
|   |         | DNPServerSharedMap1_DNP.BO_00000.operLatchOff | operSPC   | Client_DNP.BO_00000.operLatchOff     | operSPC   |         |
|   |         | DNPServerSharedMap1_DNP.BO_00000.operPulse    | operSPC   | Client_DNP.BO_00000.operPulse        | operSPC   |         |
|   |         | DNPServerSharedMap1_DNP.BO_00000.operTrip     | operSPC   | Client_DNP.BO_00000.operTrip         | operSPC   |         |
|   |         | DNPServerSharedMap1_DNP.BO_00001.operClose    | operSPC   |                                      |           |         |
|   |         | DNPServerSharedMap1_DNP.BO_00001.operLatchOn  | operSPC   | SEL_351S_1_SEL.FO_RB_RB1.operSet     | operSPC   |         |
|   |         | DNPServerSharedMap1_DNP.BO_00001.operLatchOff | operSPC   | SEL_351S_1_SEL.FO_RB_RB1.operClear   | operSPC   |         |
|   |         | DNPServerSharedMap1_DNP.BO_00001.operPulse    | operSPC   | SEL_351S_1_SEL.FO_RB_RB1.operPulse   | operSPC   |         |
|   |         | DNPServerSharedMap1_DNP.BO_00001.operTrip     | operSPC   |                                      |           |         |
|   |         | DNPServerSharedMap1_DNP.BO_00002.operClose    | operSPC   | SEL_351S_1_SEL.FO_BRK_BRK1.operClose | operSPC   |         |
|   |         | DNPServerSharedMap1_DNP.BO_00002.operLatchOn  | operSPC   |                                      |           |         |
|   |         | DNPServerSharedMap1_DNP.BO_00002.operLatchOff | operSPC   |                                      |           |         |
|   |         | DNPServerSharedMap1_DNP.BO_00002.operPulse    | operSPC   |                                      |           |         |
|   |         | DNPServerSharedMap1_DNP.BO_00002.operTrip     | operSPC   | SEL_351S_1_SEL.FO_BRK_BRK1.operTrip  | operSPC   |         |
|   |         | DNPServerSharedMap1_DNP.BO_00003.operClose    | operSPC   |                                      |           |         |
|   |         | DNPServerSharedMap1_DNP.BO_00003.operLatchOn  | operSPC   |                                      |           |         |
|   |         | DNPServerSharedMap1_DNP.BO_00003.operLatchOff | operSPC   |                                      |           |         |
|   |         | DNPServerSharedMap1_DNP.BO_00003.operPulse    | operSPC   |                                      |           |         |
|   |         | DNPServerSharedMap1_DNP.BO_00003.operTrip     | operSPC   |                                      |           |         |

Figure 10.54 Example Control Mapping: Verbose

A final **Control Mapping** value that can be selected is **None**. In this mode, no client or server tags using a command tag type are selected for automatic mapping at all. This assumes a user who wishes to create their own custom command mapping in the Tag Processor or custom IEC 61131-3 user logic.

## Live Data Templates Tab

Live Data templates are added and configured in Tag Mapper and can be individually applied to the mapped tags. Adding and configuring templates is done from the **Live Data Templates** tab of the Tag Mapper using the + at the bottom of the active screen. The **Template Name** field associated with each entry on this tab should align with a corresponding name entered into the **Live Data Template** column that is present on each data type tab of **Generated\_Map\_1**. This allows for configuration of multiple live data templates and assignment of them on an ad-hoc basis to the tags in the generated map. The following lists the configurable columns with brief descriptions.

| Server Map  |               |            |          |                       |               |                                |                              |
|---|---------------|------------|----------|-----------------------|---------------|--------------------------------|------------------------------|
| Available Sources                                 |               |            |          |                       |               |                                |                              |
| Live Data Templates                               |               |            |          |                       |               |                                |                              |
| Logging Templates                                 |               |            |          |                       |               |                                |                              |
| Controller  |               |            |          |                       |               |                                |                              |
| Drag a column header here to group by that column |               |            |          |                       |               |                                |                              |
|   | Template Name | Tag Column | Function | Visibility Expression | Color Control | Below Threshold/Deassert Color | Above Threshold/Assert Color |
|   | Default1      | Server Tag | None     | TRUE                  | Variable      | Red                            | Green                        |
|   | Default2      | Server Tag | Viewable | TRUE                  | Static        | Green                          | Red                          |
|   | Default3      | Server Tag | Viewable | TRUE                  | Static        | Green                          | Red                          |

Figure 10.55 Live Data Templates

- Template Name: User-defined name. Unique names are enforced for each template.
- Tag Column: The drop-down assigns Live Data to Server Tag or Client Tag. With Server Tag selected, the Live Data viewer in the web interface will display the tag name as it appears in the **Server Tag** column of its respective data type. Likewise, with Client Tag selected, the Live Data viewer will display the tag name as it appears in the **Client Tag** column of its respective data type. Server Tag is the default setting.
- Function: The drop-down assigns None, Viewable, or Forceable to the Live Data template. If set to None, the tag will not be present in Live data on the RTAC Web Interface. If set to Viewable, the tag will be present. If set to Forceable, the **Prepared** column in the RTAC Web interface is accessible.
- Visibility Expression: This is a Boolean expression that can be used to dynamically control visibility of the signal in the Live Data viewer. For example, if a device goes offline, the POU.Offline Boolean for that device could be used to hide all now invalid data and leave only the communications failure alarm visible. Defaults to TRUE.
- Color Control: The drop-down assigns Variable or Static. Choosing **Static Color Control** will not animate the Live Data entry and all text will be displayed as black on the Live Data viewer. Live Data templates configured with a Variable color control can only be assigned to the following tag types: APC, BOOL, CMV, DPS, INC, INS, MV, SPS.
- Below (Above) Threshold/Deassert (Assert) Color: The drop-down assigns the Live Data text color to red, green, or off (inactive). The color refers to the color of the text of the tag in the RTAC Web Interface. For tag types of a discrete status type (BOOL, SPS, DPS), the assert/deassert colors from the template are assigned those colors to display in the web interface based on the present state of the tag.

For tag types of an analog type (APC, CMV, INC, INS, MV), the fields control the color of the live data entry when the analog is above or below a specified threshold. Thresholds are set in the **Live Data Threshold** column in the respective data type tabs of the generated map.

## Logging Templates


Logging templates are added and configured in Tag Mapper and can be individually applied to the mapped tags. Tags that are logged are viewable in the SOE section of the RTAC Web Interface. Supported tag types for logging include APC, BOOL, CMV, DNPC, DPC, DPS, INC, INS, MDBC, MV SBRC, SPC, SPS, SRBC and STR. Adding and configuring templates is done from the **Logging Templates** tab of the Tag Mapper using the + at the bottom of

the active screen. The **Template Name** field associated with each entry on this tab should align with a corresponding name entered into the **Logging Template** column that is present on each data type tab of **Generated\_Map\_1**. The following lists the configurable columns with brief descriptions.

- **Template Name:** User-defined name. Unique names for each template must be used.
- **Tag Column:** The drop-down assigns Logging to the Server Tag or Client Tag. With Server Tag selected, the Logging statements will be developed around the server tag. Likewise, with the Client Tag selected, the logging statements will be built around the client tag. Default setting is Server Tag.
- **Log Condition:** The drop-down assigns None, State, Time, State (initial), or Time (initial). The State conditions will log a change of state of the variable. For "State" configurations, any change in state will log the tag. For "State (initial)" configurations, a log entry will be generated when the tag value changes as well as an entry for the initial state of the tag. Likewise, for "Time" configuration options, any change in the time stamp will log the tag.
- **Alarm:** The drop-down assigns None, True, or False. This field will specify whether this signal is used to populate the 'Alarm' section of the RTAC web HMI when the value is in an alarm state. A value of True can be considered equivalent to 'Alarm on True' and a value of False can be considered equivalent to 'Alarm on False'. A value of None (default) means the signal will not be used for alarming.
- **Log Priority:** The drop-down assigns Debug, Informational, Notice, Warning, Error, Critical, or Alarm. The selected Log Priority will be displayed in the SOE report under the **Priority** column.
- **Log Category:** The drop-down assigns Security, Internal, Communications, Logic, Debug, or Tag Data. The selected Log Category will be displayed in the SOE report under the **Category** column. You can customize your own log category by double-clicking on this field and entering in your own string.

## Initiating Automap or Making Changes to a Shared Map

Some changes made to the Tag Mapper configuration are not immediately applied to the generated map upon saving the RTAC project. For example, adding a new Client device to the **Available Sources** tab will adjust the configuration of the Tag Mapper, but tags from this client will not be mapped to the **Generated\_Map** until the **Process Map** drop-down (in the **Server Map** tab) has been set to True and the project is saved (see *Figure 10.56*).

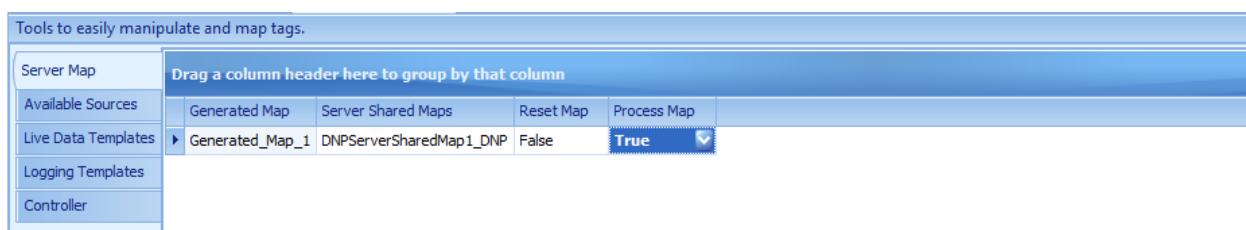

**Figure 10.56 Processing Mapping Changes**

The **Reset Map** drop-down, when set to True and saved, will rebuild the generated map, thereby undoing any fields in the Generated Map tabs that were manually edited, such as operator functions and logging/live data configuration.

The Generated\_Map\_1 subitem includes tabs with various Tag Mapper details. The **Generated Map Details** tab displays the server name, server type, and total number of mapped tags by type (AI, AO, BI, BO, etc.) in the **Server Details** section. Warnings associated with client tags that are unsupported data types, and those that were not able to be resolved to appropriate server tags will also be populated in this section. The **Mapping Details** section displays each source client device that is mapped and the number of each tag that is mapped. The mapping details are separated by tag type.

The **Documentation** tab includes information to aid in configuring Tag Mapper. The **Operator Functions** sections gives an overview and valid inputs associated with the **Operator** and **Operator Inputs** columns for the tag types. Other sections in this tab include information on Live Data and Logging functionality.

## Editing an Existing Map

This section details the process of manually adding points to an existing generated map. Utilizing spares in the Tag Mapper allows for individual point configuration like Operator, Logging, and Live Data, for example, to be conserved.

To add points to the generated map, navigate to the Generated\_Map\_1 data type. The following example is for adding binary input points.

Step 1. Verify that a sufficient number of spare client tags exist.

| Drag a column header here to group by that column |         |                                  |           |                       |           |          |                 |
|---|---------|----------------------------------|-----------|-----------------------|-----------|----------|-----------------|
| Generated Map Details                             | Comment | Server Tag                       | Server DT | Client Tag            | Client DT | Operator | Operator Inputs |
| Documentation                                     |         | DNPServerSharedMap1_DNP.BI_00048 | SPS       | Device_5_DNP.BI_00002 | SPS       |          |                 |
| Analog Inputs                                     |         | DNPServerSharedMap1_DNP.BI_00049 | SPS       | Device_5_DNP.BI_00003 | SPS       |          |                 |
| Analog Outputs                                    |         | DNPServerSharedMap1_DNP.BI_00050 | SPS       | Device_5_DNP.BI_00004 | SPS       |          |                 |
| Binary Outputs                                    |         | DNPServerSharedMap1_DNP.BI_00051 | SPS       |                       |           |          |                 |
| Binary Inputs                                     |         | DNPServerSharedMap1_DNP.BI_00052 | SPS       |                       |           |          |                 |
|   |         | DNPServerSharedMap1_DNP.BI_00053 | SPS       |                       |           |          |                 |
|   |         | DNPServerSharedMap1_DNP.BI_00054 | SPS       |                       |           |          |                 |
|   |         | DNPServerSharedMap1_DNP.BI_00055 | SPS       |                       |           |          |                 |
|   |         | DNPServerSharedMap1_DNP.BI_00056 | SPS       |                       |           |          |                 |
|   |         | DNPServerSharedMap1_DNP.BI_00057 | SPS       |                       |           |          |                 |
|   |         | DNPServerSharedMap1_DNP.BI_00058 | SPS       |                       |           |          |                 |
|   |         | DNPServerSharedMap1_DNP.BI_00059 | SPS       |                       |           |          |                 |
|   |         | DNPServerSharedMap1_DNP.BI_00060 | SPS       |                       |           |          | Default         |
|   |         | DNPServerSharedMap1_DNP.BI_00061 | SPS       |                       |           |          | Default         |
|   |         | DNPServerSharedMap1_DNP.BI_00062 | SPS       |                       |           |          | Default         |
|   |         | DNPServerSharedMap1_DNP.BI_00063 | SPS       |                       |           |          | Default         |
|   |         | DNPServerSharedMap1_DNP.BI_00064 | SPS       |                       |           |          | Default         |
|   |         | DNPServerSharedMap1_DNP.BI_00065 | SPS       |                       |           |          | Default         |
|   |         | DNPServerSharedMap1_DNP.BI_00066 | SPS       |                       |           |          | Default         |
|   |         | DNPServerSharedMap1_DNP.BI_00067 | SPS       |                       |           |          | Default         |

Step 2. Populate the **Server Tag** and **Client Tag** columns in **Generated\_Map\_1** with the desired points. Complete any necessary column configuration for the added points.

| Generated_Map_1       |   |                                  |           |                       |           |          |                 |              |
|-----------------------|---|----------------------------------|-----------|-----------------------|-----------|----------|-----------------|--------------|
| Generated Map Details | Drag a column header here to group by that column |                                  |           |                       |           |          |                 |              |
|                       | Comment   | Server Tag                       | Server DT | Client Tag            | Client DT | Operator | Operator Inputs | Logging Type |
| Analog Inputs         |   | DNPServerSharedMap1_DNP.BI_00048 | SPS       | Device_5_DNP.BI_00002 | SPS       |          |                 | Default      |
| Analog Outputs        |   | DNPServerSharedMap1_DNP.BI_00049 | SPS       | Device_5_DNP.BI_00003 | SPS       |          |                 | Default      |
| Binary Outputs        |   | DNPServerSharedMap1_DNP.BI_00050 | SPS       | Device_5_DNP.BI_00004 | SPS       |          |                 | Default      |
| Binary Inputs         |   | DNPServerSharedMap1_DNP.BI_00051 | SPS       | Device_5_DNP.BI_00005 | SPS       |          |                 |              |
|                       |   | DNPServerSharedMap1_DNP.BI_00052 | SPS       | Device_5_DNP.BI_00006 | SPS       |          |                 |              |
|                       |   | DNPServerSharedMap1_DNP.BI_00053 | SPS       | Device_5_DNP.BI_00007 | SPS       |          |                 |              |
|                       |   | DNPServerSharedMap1_DNP.BI_00054 | SPS       | Device_5_DNP.BI_00008 | SPS       |          |                 |              |
|                       |   | DNPServerSharedMap1_DNP.BI_00055 | SPS       | Device_5_DNP.BI_00009 | SPS       |          |                 |              |
|                       |   | DNPServerSharedMap1_DNP.BI_00056 | SPS       | Device_1_DNP_POU.EN   | BOOL      |          |                 |              |
|                       |   | DNPServerSharedMap1_DNP.BI_00057 | SPS       | Device_2_DNP_POU.EN   | BOOL      |          |                 |              |
|                       |   | DNPServerSharedMap1_DNP.BI_00058 | SPS       | Device_3_DNP_POU.EN   | BOOL      |          |                 |              |
|                       |   | DNPServerSharedMap1_DNP.BI_00059 | SPS       | Device_4_DNP_POU.EN   | BOOL      |          |                 |              |
|                       |   | DNPServerSharedMap1_DNP.BI_00060 | SPS       | Device_5_DNP_POU.EN   | BOOL      |          |                 | Default      |
|                       |   | DNPServerSharedMap1_DNP.BI_00061 | SPS       |                       |           |          |                 | Default      |
|                       |   | DNPServerSharedMap1_DNP.BI_00062 | SPS       |                       |           |          |                 | Default      |
|                       |   | DNPServerSharedMap1_DNP.BI_00063 | SPS       |                       |           |          |                 | Default      |
|                       |   | DNPServerSharedMap1_DNP.BI_00064 | SPS       |                       |           |          |                 | Default      |
|                       |   | DNPServerSharedMap1_DNP.BI_00065 | SPS       |                       |           |          |                 | Default      |
|                       |   | DNPServerSharedMap1_DNP.BI_00066 | SPS       |                       |           |          |                 | Default      |
|                       |   | DNPServerSharedMap1_DNP.BI_00067 | SPS       |                       |           |          |                 | Default      |

Step 3. Save the project. If an incompatible data type is used, the ACCELERATOR RTAC software will flag the incompatibility and the client tag will need to be moved or removed before the project can be loaded into RTAC hardware.

If spare points were included in the initial configuration of Generated\_Map\_1, points added to the Available Sources can be manually assigned to these spare points the same way as described in the previous example.

## Operator Functions

The Tag Mapper has defined operator functions that can be applied to the mapping of client tags to the server map in the Generated Map. The operators are chosen from a drop-down list in the mapping tables and are applied individually. The **Documentation** tab of the Generated Map includes instructions on all operator functions. Following is a list of operator functions, a brief description, and the data types that can be applied to the Tag Mapper.

### FAILOVER\_Q

*Figure 10.57* shows an example of how the FAILOVER\_Q operator can be used. In this example, Device\_2\_DNP and Device\_1\_DNP are redundant devices that are collecting the same data. Tag Mapper will map the client tag (Device\_2\_DNP.BI\_00000, in this example) if the Device\_2\_DNP client tag quality is good. If the client tag quality transitions to invalid, then the quality value for the alternate Device\_1\_DNP client tag(s) in the **Operator Inputs** column will be evaluated, and if they are good, the tag will be mapped to the server tag.

| Generated_Map_1                                   |         |                                  |           |                          |           |            |                       |
|---|---------|----------------------------------|-----------|--------------------------|-----------|------------|-----------------------|
| Drag a column header here to group by that column |         |                                  |           |                          |           |            |                       |
| Generated Map Details                             | Comment | Server Tag                       | Server DT | Client Tag               | Client DT | Operator   | Operator Inputs       |
| Documentation                                     |         | DNPServerSharedMap1_DNP.BI_00000 | SPS       |                          |           |            |                       |
| Analog Inputs                                     |         | DNPServerSharedMap1_DNP.BI_00001 | SPS       |                          |           |            |                       |
| Analog Outputs                                    |         | DNPServerSharedMap1_DNP.BI_00002 | SPS       |                          |           |            |                       |
| Binary Outputs                                    |         | DNPServerSharedMap1_DNP.BI_00003 | SPS       |                          |           |            |                       |
| Binary Inputs                                     |         | DNPServerSharedMap1_DNP.BI_00004 | SPS       |                          |           |            |                       |
|   |         | DNPServerSharedMap1_DNP.BI_00005 | SPS       | Device_2_DNP_POU.Offline | BOOL      |            |                       |
|   |         | DNPServerSharedMap1_DNP.BI_00006 | SPS       | Device_2_DNP.BI_00000    | SPS       | FAILOVER_Q | Device_1_DNP.BI_00000 |
|   |         | DNPServerSharedMap1_DNP.BI_00007 | SPS       | Device_2_DNP.BI_00001    | SPS       | FAILOVER_Q | Device_1_DNP.BI_00001 |
|   |         | DNPServerSharedMap1_DNP.BI_00008 | SPS       | Device_2_DNP.BI_00002    | SPS       | FAILOVER_Q | Device_1_DNP.BI_00002 |
|   |         | DNPServerSharedMap1_DNP.BI_00009 | SPS       | Device_2_DNP.BI_00003    | SPS       | FAILOVER_Q | Device_1_DNP.BI_00003 |
|   |         | DNPServerSharedMap1_DNP.BI_00010 | SPS       | Device_2_DNP.BI_00004    | SPS       | FAILOVER_Q | Device_1_DNP.BI_00004 |
|   |         | DNPServerSharedMap1_DNP.BI_00011 | SPS       | Device_2_DNP.BI_00005    | SPS       | FAILOVER_Q | Device_1_DNP.BI_00005 |
|   |         | DNPServerSharedMap1_DNP.BI_00012 | SPS       |                          |           |            |                       |

**Figure 10.57 FAILOVER\_Q**

## FAILOVER\_LIMIT

Figure 10.58 shows an example of how the FAILOVER\_LIMIT operator can be used. In this example, Device\_2\_DNP and Device\_1\_DNP are redundant devices that are collecting the same data. Tag Mapper will map the client tag (Device\_2\_DNP.AI\_00000, in this example) if the value is above the first entry in the **Operator Inputs**, a set point of '100'. If the client tag drops below this threshold, then the value for the remaining tag(s) in the **Operator Inputs** column will be mapped to the server tag in the order that they appear as long as they are above the threshold value.

| Generated_Map_1                                   |         |                                  |           |                       |           |                |                            |
|---|---------|----------------------------------|-----------|-----------------------|-----------|----------------|----------------------------|
| Drag a column header here to group by that column |         |                                  |           |                       |           |                |                            |
| Generated Map Details                             | Comment | Server Tag                       | Server DT | Client Tag            | Client DT | Operator       | Operator Inputs            |
| Documentation                                     |         | DNPServerSharedMap1_DNP.AI_00000 | MV        | Device_2_DNP.AI_00000 | MV        | FAILOVER_LIMIT | 100, Device_1_DNP.AI_00001 |
| Analog Inputs                                     | ▶       | DNPServerSharedMap1_DNP.AI_00001 | MV        | Device_2_DNP.AI_00001 | MV        |                |                            |
| Analog Outputs                                    |         | DNPServerSharedMap1_DNP.AI_00002 | MV        | Device_2_DNP.AI_00002 | MV        |                |                            |
| Binary Outputs                                    |         | DNPServerSharedMap1_DNP.AI_00003 | MV        | Device_2_DNP.AI_00003 | MV        |                |                            |
| Binary Inputs                                     |         | DNPServerSharedMap1_DNP.AI_00004 | MV        | Device_1_DNP.AI_00004 | MV        |                |                            |

**Figure 10.58 FAILOVER\_LIMIT**

## NOT/AND/OR/NAND/NOR

The logic operators must only be used with client tag types BOOL or SPS. The following details the usage of each:

- ▶ NOT does not take any Operator Input parameters but will apply the appropriate NOT or NOT\_SPS wrapper around the client tag and apply the logical result to the server tag.
  - ▶ AND/OR applies the selected logic operation between the client tag and all tags in the Operator Inputs list and applies the results to the server tag. With a client tag type of SPS, logic is written to operate on the stVal sub-attribute to allow use of the base IEC 61131 AND/OR operators. The q.validity of the server tag is assigned as invalid if the client tag or any tags in the Operator Inputs present a q.validity not equal to good.
  - ▶ NAND/NOR has the same behavior as AND/OR Operators, but the logical result is wrapped in a NOT.
- The time stamp of the server tag updates at the moment the logical result of the operation is different than the stored value already in the server tag.

Supported Client Tag Types: BOOL, SPS

Input(s): Operator Input(s) are only needed for AND/OR/NAND/NOR operators.

They should be entered as a comma-separated list of tags (with a tag type of either SPS or BOOL) to apply in a logical operation against the client tag (e.g., Tag2, Tag3 as operator inputs with an operator of 'AND' would resolve as 'ClientTag AND Tag2 AND Tag3').

In the following example, the AND, OR, NAND, and NOR logical operators are used.

| Generated_Map_1       |         |   |           |                       |           |          |                       |
|-----------------------|---------|---|-----------|-----------------------|-----------|----------|-----------------------|
| Generated Map Details |         | Drag a column header here to group by that column |           |                       |           |          |                       |
| Documentation         | Comment | Server Tag  | Server DT | Client Tag            | Client DT | Operator | Operator Inputs       |
| Analog Inputs         |         | DNPServerSharedMap1_DNP.BI_00000                  | SPS       | Device_2_DNP.BI_00000 | SPS       | AND      | Device_2_DNP.BI_00001 |
| Analog Outputs        |         | DNPServerSharedMap1_DNP.BI_00001                  | SPS       | Device_2_DNP.BI_00002 | SPS       | OR       | Device_1_DNP.BI_00002 |
| Binary Outputs        |         | DNPServerSharedMap1_DNP.BI_00002                  | SPS       | Device_2_DNP.BI_00003 | SPS       | NAND     | Device_1_DNP.BI_00004 |
| Binary Inputs         |         | DNPServerSharedMap1_DNP.BI_00003                  | SPS       | Device_2_DNP.BI_00004 | SPS       | NOR      | Device_2_DNP.BI_00003 |
|                       |         | DNPServerSharedMap1_DNP.BI_00004                  | SPS       |                       | SPS       |          |                       |

Figure 10.59 Boolean Operators

The following sample logic drawing shows a visual representation of the logic operation in place for the first row shown in *Figure 10.60*.

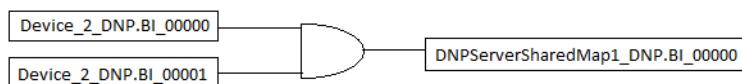


Figure 10.60 Boolean Operator: AND Logic Diagram

## TI/TON/TOF/TPUDO

The timer operators must only be used with a client tag of types BOOL or SPS. The following details the usage of each.

| Generated_Map_1       |   |                                  |           |                             |           |          |                 |
|-----------------------|---|----------------------------------|-----------|-----------------------------|-----------|----------|-----------------|
| Generated Map Details | Drag a column header here to group by that column |                                  |           |                             |           |          |                 |
|                       | Comment   | Server Tag                       | Server DT | Client Tag                  | Client DT | Operator | Operator Inputs |
|                       |   | DNPServerSharedMap1_DNP.BI_00000 | SPS       |                             |           |          |                 |
|                       |   | DNPServerSharedMap1_DNP.BI_00001 | SPS       |                             |           |          |                 |
|                       |   | DNPServerSharedMap1_DNP.BI_00002 | SPS       |                             |           |          |                 |
|                       |   | DNPServerSharedMap1_DNP.BI_00003 | SPS       |                             |           |          |                 |
|                       |   | DNPServerSharedMap1_DNP.BI_00004 | SPS       |                             |           |          |                 |
|                       |   | DNPServerSharedMap1_DNP.BI_00005 | SPS       | Device_2_DNP_POU.Offline    | BOOL      |          |                 |
|                       |   | DNPServerSharedMap1_DNP.BI_00006 | SPS       | Device_2_DNP.BI_00000.stVal | BOOL      | TON      | T#10s           |
|                       |   | DNPServerSharedMap1_DNP.BI_00007 | SPS       | Device_2_DNP.BI_00001.stVal | BOOL      | TOF      | T#15s           |

**Figure 10.61 Timer Examples**

## SCALE

Supported Client Tag Types: APC, CMV, DINT, INC, INS, MV, REAL, UDINT

Input(s): Comma-separated list of scaling parameters (e.g., 100, 0, 32767, -32768):

- ▶ Input 1: scaling multiplier (decimal values accepted)—mandatory
- ▶ Input 2: offset (optional, defaults to '0')—optional
- ▶ Input 3: ceiling (optional, defaults to full-scale maximum)—optional
- ▶ Input 4: floor (optional, defaults to full-scale minimum)—optional

| Generated_Map_1       |   |                                  |           |                       |           |          |                         |
|-----------------------|---|----------------------------------|-----------|-----------------------|-----------|----------|-------------------------|
| Generated Map Details | Drag a column header here to group by that column |                                  |           |                       |           |          |                         |
|                       | Comment   | Server Tag                       | Server DT | Client Tag            | Client DT | Operator | Operator Inputs         |
|                       |   | DNPServerSharedMap1_DNP.AI_00000 | MV        | Device_2_DNP.AI_00000 | MV        | SCALE    | 0.0001                  |
|                       |   | DNPServerSharedMap1_DNP.AI_00001 | MV        | Device_2_DNP.AI_00001 | MV        | SCALE    | 0.0001, 0, 32767,-32768 |
|                       |   | DNPServerSharedMap1_DNP.AI_00002 | MV        | Device_2_DNP.AI_00002 | MV        |          |                         |
|                       |   | DNPServerSharedMap1_DNP.AI_00003 | MV        | Device_2_DNP.AI_00003 | MV        |          |                         |
|                       |   | DNPServerSharedMap1_DNP.AI_00004 | MV        | Device_1_DNP.AI_00000 | MV        |          |                         |
|                       |   | DNPServerSharedMap1_DNP.AI_00005 | MV        | Device_1_DNP.AI_00001 | MV        |          |                         |

**Figure 10.62 Scaling Examples**

## PACK

The bit-pack function is only applicable for INS server tags. The client tag is ignored and the Operator Inputs field contains a comma-separated list of at least 1 (and up to 32) Boolean quantities and copies them into the individual bits in the .stVal DINT value contained in the INS server tag. The first operator input parameter is assigned to stVal.0, the second to stVal.1, and so on until stVal.31.

Supported Server Tag Types: INC, INS

Inputs: Comma-separated list of between 1–32 Boolean quantities to bit-pack into the server tag DINT (e.g., TRUE, FALSE, 0, 1, TRUE).

In the following example, the lowest six bits of the DNPServerSharedMap1\_DNP.AI\_00000 tag will be populated as per the following:

- 0 = TRUE
- 1 = TRUE
- 2 = FALSE
- 3 = TRUE
- 4 = TRUE
- 5 = Boolean state of Device\_2\_DNP.BI\_00000.stVal

| Generated_Map_1 |   |                                  |           |                       |           |          |  |
|-----------------|---|----------------------------------|-----------|-----------------------|-----------|----------|--|
| Documentation   | Drag a column header here to group by that column |                                  |           |                       |           |          |  |
|                 | Comment   | Server Tag                       | Server DT | Client Tag            | Client DT | Operator | Operator Inputs  |
| Analog Inputs   |   | DNPServerSharedMap1_DNP.AI_00000 | INS       | Device_2_DNP.AI_00000 | INS       | PACK     | TRUE, TRUE, FALSE, TRUE, TRUE, Device_2_DNP.BI_00000.stVal |
| Analog Outputs  |   | DNPServerSharedMap1_DNP.AI_00001 | MV        | Device_2_DNP.AI_00001 | MV        |          |  |
| Binary Outputs  |   | DNPServerSharedMap1_DNP.AI_00002 | MV        | Device_2_DNP.AI_00002 | MV        |          |  |
| Binary Inputs   |   | DNPServerSharedMap1_DNP.AI_00003 | MV        | Device_2_DNP.AI_00003 | MV        |          |  |
|                 |   | DNPServerSharedMap1_DNP.AI_00004 | MV        | Device_2_DNP.AI_00004 | MV        |          |  |
|                 |   | DNPServerSharedMap1_DNP.AI_00005 | MV        | Device_1_DNP.AI_00000 | MV        |          |  |

Figure 10.63 Bit Packing Example

## PAIRED

Configure a pair of client tag remote bits (e.g., RBxx:RByy) to align with DNP functionality in SEL IEDs. Issuing a 'trip' or 'latch-off' via a DNPC server tag will result in a pulse being issued to the SRBC tag present in the **Client Tag** column. This tag can be thought of as 'RBxx' in the remote bit pair. Issuing a 'close' or 'latch-on' or 'pulse-on' via a DNPC server tag will result in a pulse being issued to the SRBC tag present in the **Operator Inputs** field. This tag can be thought of as 'RByy' in the remote bit pair.


Input(s): A single client tag of type SRBC that specifies RByy in the remote bit pair.

### WARNING

Do not run a 'Process Map' or 'Reset Map' after paired remote bits have been configured. Otherwise, additional manual steps must be performed to correct the Binary Outputs table following this operation. Tag Mapper assumes that binary output tag assignments are a single server tag to single client tag and this is the mapping that will be generated whenever the 'Process Map' or 'Reset Map' toggle is selected. If a remote bit pair is configured between RB1 and RB2, for example, then this assumption is no longer valid because we now have a single server tag mapped to two client tags. The subsequent row containing RB2 in the client tag field must be deleted to avoid duplicating the assignment to this tag. However, if setting Process Map or Reset Map to True, then the automated mapping algorithm will re-add the RB2 binary output row that was removed and RB2 would have two assignments again.

The **Paired** operator is selectable for Binary Outputs in the **Operator** column of **Generated\_Map\_1**. The **Paired** operator is used when a binary output in the shared server map is applied to the two binary outputs of two available sources. The **Client Tag** in the **Binary Outputs** of **Generated\_Map\_1** is the primary target of the **Server Tag** and the paired target is defined in the **Operator Inputs** column.

In *Figure 10.64*, the first binary output of the shared server map, **DNPServerSharedMap1\_DNP.BO\_00000**, will pulse **Ethernet\_451\_SEL.FO\_RB\_RB1** and whenever a pulse, trip, or latch-on operation is issued to that binary output. Similarly, if a close or latch-off operation is issued to **DNPServerSharedMap1\_DNP.BO\_00000**, then **Ethernet\_451\_SEL.FO\_RB\_RB2** is pulsed.

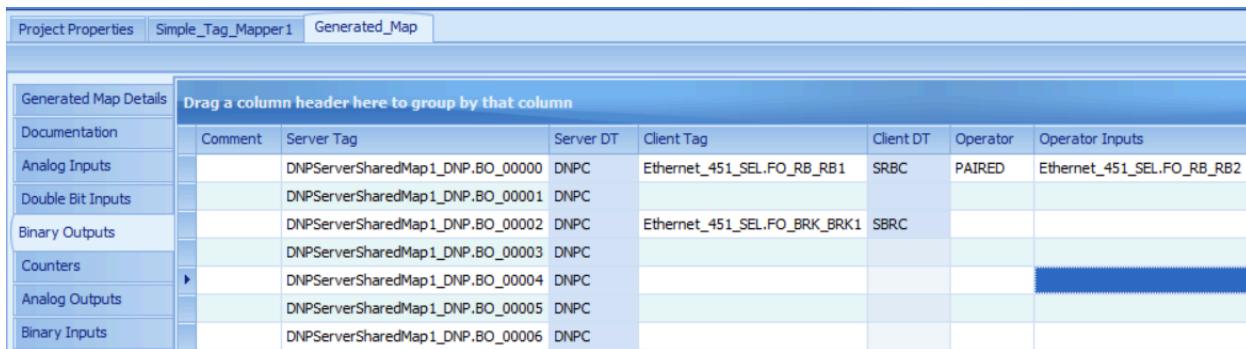

The screenshot shows the 'Generated\_Map' tab of the Simple Tag Mapper interface. A table lists paired binary outputs. The columns are: Comment, Server Tag, Server DT, Client Tag, Client DT, Operator, and Operator Inputs. The data rows are:


| Comment | Server Tag                       | Server DT | Client Tag                   | Client DT | Operator | Operator Inputs            |
|---------|----------------------------------|-----------|------------------------------|-----------|----------|----------------------------|
|         | DNPServerSharedMap1_DNP.BO_00000 | DNPC      | Ethernet_451_SEL.FO_RB_RB1   | SRBC      | PAIRED   | Ethernet_451_SEL.FO_RB_RB2 |
|         | DNPServerSharedMap1_DNP.BO_00001 | DNPC      |                              |           |          |                            |
|         | DNPServerSharedMap1_DNP.BO_00002 | DNPC      | Ethernet_451_SEL.FO_BRK_BRK1 | SBRC      |          |                            |
|         | DNPServerSharedMap1_DNP.BO_00003 | DNPC      |                              |           |          |                            |
|         | DNPServerSharedMap1_DNP.BO_00004 | DNPC      |                              |           |          |                            |
|         | DNPServerSharedMap1_DNP.BO_00005 | DNPC      |                              |           |          |                            |
|         | DNPServerSharedMap1_DNP.BO_00006 | DNPC      |                              |           |          |                            |

**Figure 10.64 Paired Binary Outputs**

## FUNCTION

The FUNCTION operator allows the user to specify an IEC 61131-3 function call in the **Operator Inputs** field. When this operator is used, the Client Tag field is disabled and unused. The return type of the function must be compatible with mapping to the server tag type.

Input: A single IEC 61131-3 function call in structured text format minus the trailing semicolon.

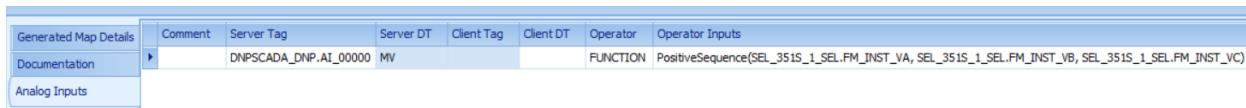

The screenshot shows the 'Generated\_Map' tab of the Simple Tag Mapper interface. A table lists a single row with a function operator. The columns are: Comment, Server Tag, Server DT, Client Tag, Client DT, Operator, and Operator Inputs. The data row is:

| Comment | Server Tag             | Server DT | Client Tag | Client DT | Operator | Operator Inputs   |
|---------|------------------------|-----------|------------|-----------|----------|---|
|         | DNPSACADA_DNP.AI_00000 | MV        |            |           | FUNCTION | PositiveSequence(SEL_351S_1_SEL.FM_INST_VA, SEL_351S_1_SEL.FM_INST_VB, SEL_351S_1_SEL.FM_INST_VC) |

**Figure 10.65 Function Operator Example**

## Live Data Only

Add rows to the **Live Data Only** tab and assign the Shared Map or Device value to a client device, server shared map, or virtual tag list. Each row will create a subitem on the extension named for the value in the Child Node Name setting field. After a save, the extension will scan the device or tag map and add all tags to rows on the subitem. Each row provides settings that allow for customization of the live data behavior of the tag assigned to that row, with each setting matching the equivalent behavior described on the **Live Data Templates** tab.

Tags that use a status type (BOOL, SPS, or DPS) provide two additional settings columns to allow for string-based enumeration of the Boolean state: a string to display in the live data when the status is asserted, and a string to display when the status is deasserted. The following is an example of these additional settings:

- Status Asserted = "The substation door is closed."
- Status Deasserted = "The substation door is open."

## Logging Only

Add rows to the **Logging Only** tab and assign the Shared Map or Device value to a client device, server shared map, or virtual tag list. Each row will create a subitem on the extension named for the value in the Child Node Name setting field. After a save, the extension will scan the device or tag map and add all tags to rows on the subitem. Each row provides settings to allow customization of the SOE logging behavior of the tag assigned to that row, with each setting matching the equivalent behavior described on the **Logging Templates** tab.

SOE Logging is supported for the following tag types:

- APC
- BOOL
- CMV
- DNPC
- DPC
- DPS
- INC
- INS
- IOC
- MDBC
- MV
- SBRC
- SPC
- SPS
- SRBC
- STR

## CSV Input/Output File

Tag Mapper creates a user-readable .csv file that serves as a record for the tag mapping and configuration of all tags in tabular form. This file can be provided to the HMI or SCADA programmers as documentation for how the HMI/SCADA client should be configured to collect data from the RTAC. The following figures show the top row of the .csv matches the column titles in **Generated\_Map\_1**. In project versions R153 and later, Tag Mapper has the ability to import tag mapping from a CSV file with identical format to the output file and use that content to create a generated map.

| A   | B                                | C          | D                       | E          | F         | G        | H              |                  |
|-----|----------------------------------|------------|-------------------------|------------|-----------|----------|----------------|------------------|
| 1   | Comment                          | Server Tag | Server                  | Client Tag | Client ID | Operator | Operator Input | Logging Template |
| 181 | DNPServerSharedMap1_DNP.BI_00000 | SPS        | Device_2_DNP_POU.Offlin | BOOL       |           |          |                | Default          |
| 182 | DNPServerSharedMap1_DNP.BI_00001 | SPS        | Device_2_DNP.BI_00000   | SPS        |           |          |                | Default          |
| 183 | DNPServerSharedMap1_DNP.BI_00002 | SPS        | Device_2_DNP.BI_00001   | SPS        |           |          |                | Default          |
| 184 | DNPServerSharedMap1_DNP.BI_00003 | SPS        | Device_2_DNP.BI_00002   | SPS        |           |          |                | Default          |
| 185 | DNPServerSharedMap1_DNP.BI_00004 | SPS        | Device_2_DNP.BI_00003   | SPS        |           |          |                | Default          |

Figure 10.66 Column Header: Output .csv File

| Generated_Map_1       |   |                                  |           |                          |           |          |                 |                  |
|-----------------------|---|----------------------------------|-----------|--------------------------|-----------|----------|-----------------|------------------|
| Generated Map Details | Drag a column header here to group by that column |                                  |           |                          |           |          |                 |                  |
|                       | Comment   | Server Tag                       | Server DT | Client Tag               | Client DT | Operator | Operator Inputs | Logging Template |
|                       |   | DNPServerSharedMap1_DNP.BI_00000 | SPS       | Device_2_DNP_POU.Offline | BOOL      |          |                 | Default          |
|                       |   | DNPServerSharedMap1_DNP.BI_00001 | SPS       | Device_2_DNP.BI_00000    | SPS       |          |                 | Default          |
|                       |   | DNPServerSharedMap1_DNP.BI_00002 | SPS       | Device_2_DNP.BI_00001    | SPS       |          |                 | Default          |
|                       |   | DNPServerSharedMap1_DNP.BI_00003 | SPS       | Device_2_DNP.BI_00002    | SPS       |          |                 | Default          |
|                       |   | DNPServerSharedMap1_DNP.BI_00004 | SPS       | Device_2_DNP.BI_00003    | SPS       |          |                 | Default          |

**Figure 10.67 Column Header: Tag Mapper**

The file is initially created the first time **Process Map** is set to True and the project is saved. Subsequent project saves will update the .csv file if the **Process Map** is set to True and changes have been made to **Generated\_Map\_1**.

The name of the .csv file is titled **SimpleTagMapper\_ClientToServerMapping.csv** and is created in the following Windows directory path:

**Documents\AcRTAC\Logs\Extension Logs**

If the CSV file content for client-to-server tag mapping has been modified, the updated CSV data can be imported into Tag Mapper using the **Create New Map from .CSV** file browser setting on the Server Map tab. Use the file browser to navigate to the modified CSV file and save the project settings. During import, the CSV content is evaluated to ensure that all client and server tags exist in the project.

## Syslog Collector

---

### Overview

The Syslog Collector extension (supported in project versions R153 and newer) provides a simple interface to configure the required Access Point and user logic to listen for incoming Syslog messages. Syslog listening on the RTAC may be configured to use either UDP or TCP connections, and received messages may optionally be logged in the RTAC's SOE, allowing the RTAC to forward Syslog messages according to its own Syslog publishing configuration.

**This page intentionally left blank**

---

---

## SECTION 11

---

# Testing and Troubleshooting

## Overview

---

Use the data and procedural information this section provides for aid in SEL-2240 Axion® testing and for troubleshooting performance, communication, and run-time issues. This information is applicable to all RTAC modules, the SEL-2243 Power Coupler, and all Axion I/O modules.

## Self-Test

---

The RTAC performs a variety of startup self-tests for all Axion modules and stores the results of these tests in system tags. The RTAC also updates various run-time statistics data in system tags. See *Table 11.2* for a list of system tags.


## POST

The RTAC performs a Power-On Self-Test (POST) at startup. You can view POST values on the Dashboard page of the web interface. *Table 11.2* lists the items the RTAC tests. These include memory, communication drivers, and hardware controllers.

## Run-Time Diagnostics

The RTAC monitors CPU usage, memory usage, power, and many other system variables continuously. The system stores the values of these monitored variables in system tags and also displays some of them on the RTAC web interface **Dashboard**. You can configure system tags so that the RTAC will log these tags when they stray beyond a user-configurable boundary or state. View the resulting logs and some real-time values in the web interface. See *Section 5: Web Interface and Reports* for instructions on how to set up tags for logging. View system jumper settings and web session status from the indicators at the top of the RTAC web interface (see *Figure 11.1*).


Use ACCELERATOR RTAC SEL-5033 Software to view all real-time system tag values while you are online with the RTAC. Once you are online, click on **System Tags** in the left menu, and then click the **Tags** tab. For example, under **System Tags > Diagnostics**, **Eth\_XX\_Connections\_Active** shows how many TCP connections are currently active on that interface on the RTAC. A single web session can have multiple TCP connections. You can also click on **Tags** in the left menu to see the total time in microseconds to complete processing for the currently loaded project (see *Figure 11.2*).

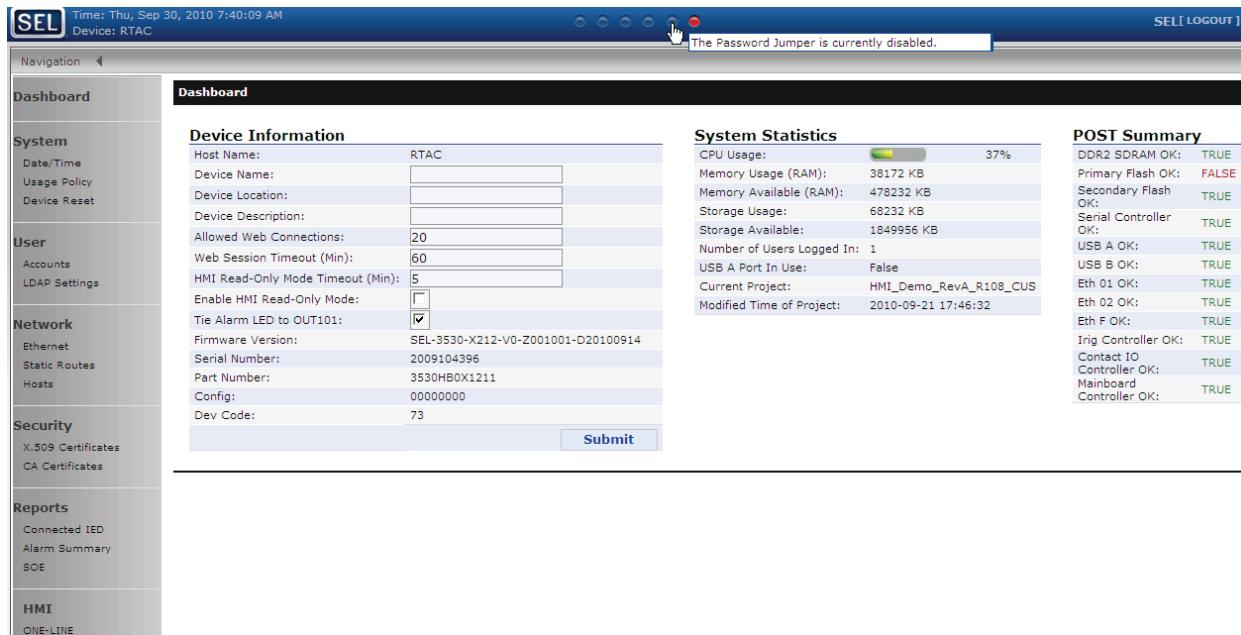

**Figure 11.1 Web Interface Dashboard**

### NOTE

Eth\_XX\_Connections\_Active under the Diagnostics tab does not reflect the number of users logged on. It shows all TCP connections to the RTAC. A single web session will have multiple TCP connections.

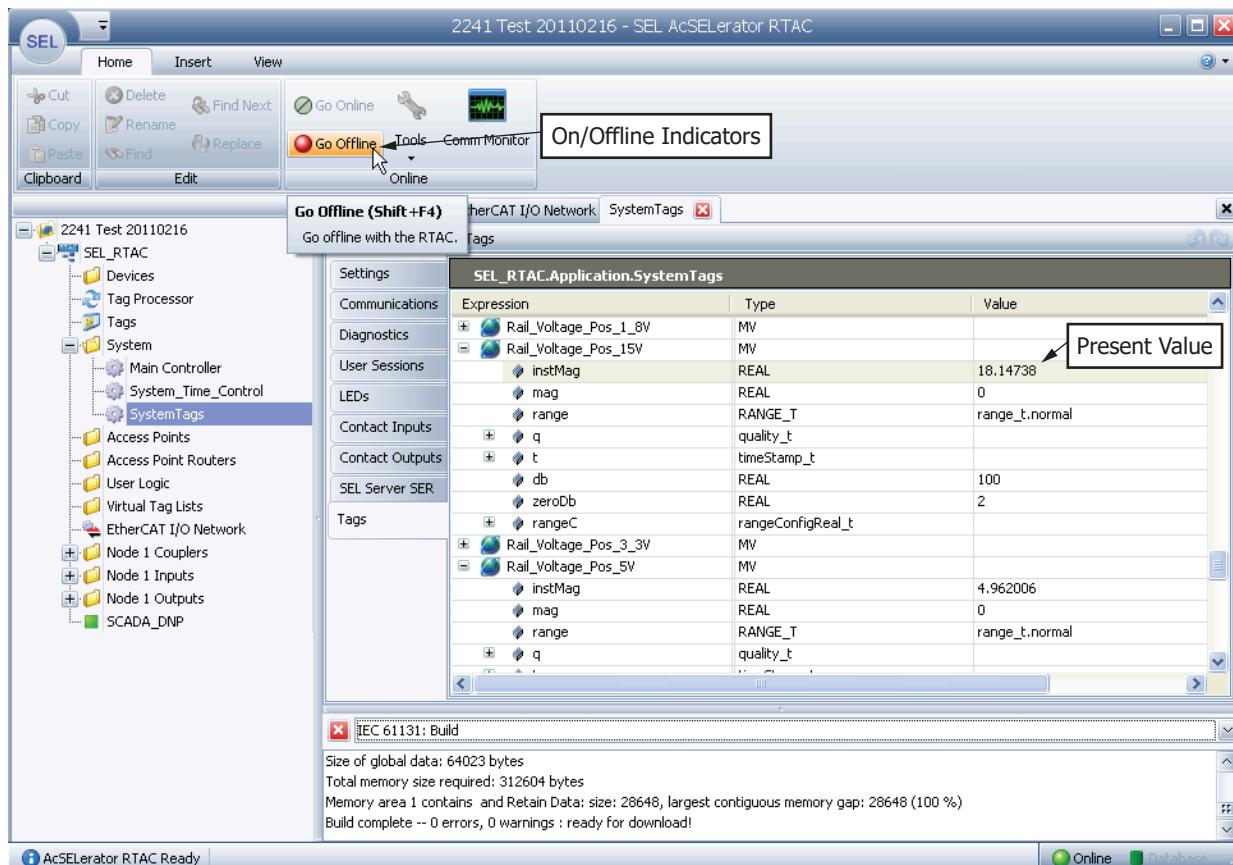

**Figure 11.2 View Diagnostics Online**

## Power Source Scale

Use the power source scale factor to calibrate dc source voltage readings. The measured supply voltage is multiplied by the power source scale factor to populate the supply voltage system tag. The supply voltage is measured as an instantaneous value, so if the supply voltage is ac, the supply voltage system tag will continually change to reflect samples along the ac sine wave. The power source scale, therefore, is not applicable when supply voltage is from an ac source.

### NOTE

Supply measurements are not rms values. Consequently, a value of 160 for a 120 Vac input is not unusual.

## Using Online Debug

While online with the RTAC, you can use testing and debugging tools to force tags to static values, create tag watch windows, and change the display mode of tags.

## Force Tags

Create a project in ACCELERATOR RTAC and then save and send the project to a connected RTAC. Once you have sent the project successfully, ACCELERATOR RTAC remains in the online state until you click the Go Offline icon  or until the online time-out expires. This example illustrates forcing a toggle of the alarm contact on and off. While online with the RTAC, do the following:

- Step 1. Click SystemTags on the left menu.
- Step 2. Click **Tags** in the **System Variables and Tags** window.

### NOTE

The RTAC forces tag values at the beginning of each task or program organizational unit (POU). If you force a DNP tag, for example, the force will occur directly before DNP runs. DNP can overwrite the forced value, but the RTAC refreshes the DNP tag to the forced value when the next POU runs.

- Step 3. Expand the OUT101 tag by clicking .
- Step 4. Expand the variables operSet and operClear.  
  
Notice that the values are FALSE for both variables.
- Step 5. Click in the **Prepared Value** field for the operSet->ctlVal line and type **TRUE**.
- Step 6. Click off the field to remove focus from that field.
- Step 7. Press **<F6>**.


The value will change to TRUE, and the relay will close. The **ALARM** LED also illuminates.

### NOTE

The software automatically releases all forced values and goes offline with the RTAC project if no user activity is detected within the online time-out. You can change the online time-out by clicking the round SEL action button, selecting Options, and then selecting the Preferences tab.

- Step 8. Click on the **Prepared Value** field again. Notice that ACCELERATOR RTAC displays a dialog box in which you can enter a new forced value. Type **FALSE** and click **OK**. Next, press **<F6>** to force ctlVal to **FALSE**.
- Step 9. Click in the **Prepared Value** field for the operClear->ctlVal field and type **TRUE**.
- Step 10. Press **<F6>**.

The value changes to True, the relay opens, and the **ALARM** LED extinguishes. Press **<Shift+F6>** to unforce all values.

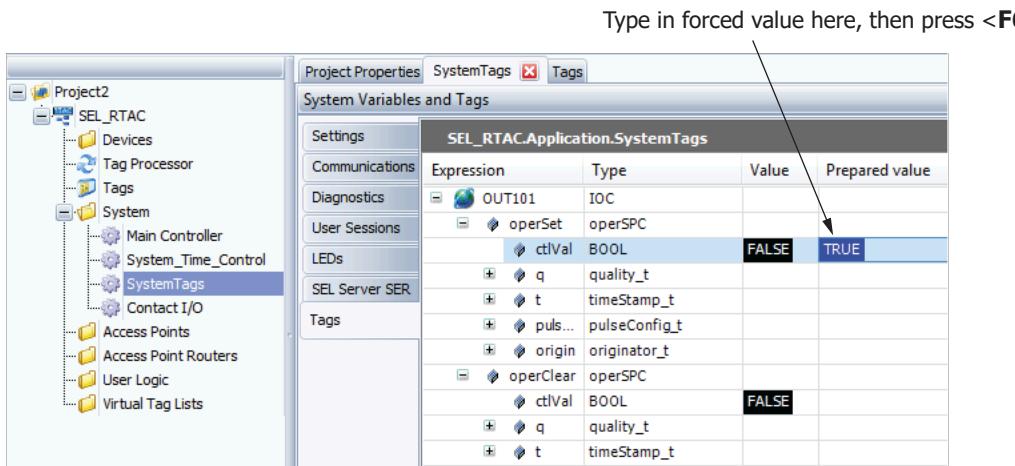**Figure 11.3 Forcing Values While Online****NOTE**

Because function memory is temporary in nature, you cannot view live values or step through logic in a function as you would a program without placing a breakpoint in that function.

## Debugging

Select **Tools** on the **Home** ribbon once you are online with the project. You will notice many features that allow you to set break-points in user-developed IEC 61131 logic and controls to step through the code and run to a certain point. **Clean Build**, also located on the **Home** ribbon, is used to completely rebuild the entire project. Although this is visible, your project is already rebuilt each time you save and send to the RTAC without using this feature.

**Table 11.1 Advanced Debugging Tools**

| Function Key     | Name                       | Description  |
|------------------|----------------------------|--|
| <F5>             | Start                      | Resume program execution after stopping at a breakpoint or run to operation.   |
| <Not Applicable> | Stop                       | Stops execution of the project. When a project is stopped, a warning banner appears in ACSELERATOR RTAC to alert the user to the situation.  |
| <F6>             | Force Values               | Force the value that you have manually entered in the Prepared Value column while online with the project.   |
| <Shift+F6>       | Unforce and Restore Values | Unforce all forced values and return them to the values they were previous to the force action.  |
| <Ctrl+Shift+F6>  | Unforce Values             | Unforce all forced values but leave the forced value in place. The project can overwrite the value any time after this operation.  |
| <F8>             | Step into                  | Use this operation after a stop in execution (e.g., a breakpoint) to execute the next single step.   |
| <F10>            | Step over                  | Use this operation after a stop in execution (e.g., a breakpoint) to execute the next single line of code. Or, if the next line is a function/function block call, execute all the code associated with that call. |
| <Shift+F10>      | Step out                   | Use this operation after a stop in execution (e.g., a breakpoint) to return to the start of the application or, if executing nested routine, to the calling instruction.   |

| Function Key | Name                   | Description   |
|--------------|------------------------|---|
| <F12>        | Run to Cursor          | Executes all instructions up to the line where the cursor is currently residing.                          |
|              | Set Next Statement     | Executes the line where the cursor is currently positioned.   |
|              | Show Current Statement | Brings the current position of execution back to focus.   |
|              | New Breakpoint         | Adds a new breakpoint at the current position of the cursor.  |
| <F9>         | Toggle Breakpoint      | Toggles enable/disable of breakpoint at the current position of the cursor.                               |
|              | View Breakpoints       | Provides a list of all currently defined breakpoints.   |
|              | View Callstack         | Displays a list of POU's, showing relationships and current execution location.                           |
|              | Watch Values           | Opens watch windows in which you can view all forced tags, or only certain tags that are in watch status. |
|              | Display Mode           | Provides ability to change the format of displayed data.  |

## Tag Cross-References

Cross references show all locations of a tag or variable within a project and indicate how the tag or variable is being used in each location. Examples of usage include declaration of the tag or variable, write operations, and read operations. You can find all locations of any tag or variable in your project by performing the following steps:

- Step 1. Within a structured text program, function, or function block, right-click the tag or variable you want to cross reference.
- Step 2. Select **Browse > Browse Cross References**.


The software will find all instances of the tag or variable within the project and display the results in an output window. Double-click any of the instances to navigate to the location of that tag or variable usage. By default, the scope of this search is limited to the active program. To find references elsewhere in the project, you must change the scope to include the entire project.

## Force Window

You can use the **Watch Forced Values** window found on the **Tools** menu of the **Home** ribbon or press <Ctrl+Alt+F> to view all forced tags.

- Step 1. While online with the RTAC in ACCELERATOR RTAC, force several values according to the explanation in the previous example.
- Step 2. Click **Tools** in the **Home** ribbon menu.
- Step 3. Select **Watch Values**, and then select **Watch Forced Values**.

The Watch all Forces pane will appear at the bottom of the window. From this window, you can view and change the values of all presently forced tags. You can also unforce selected tags or all tags, leaving the values untouched or restoring the tags to their original values. If this window is not visible, click the **Watch all Forces** tab at the bottom of the pane.

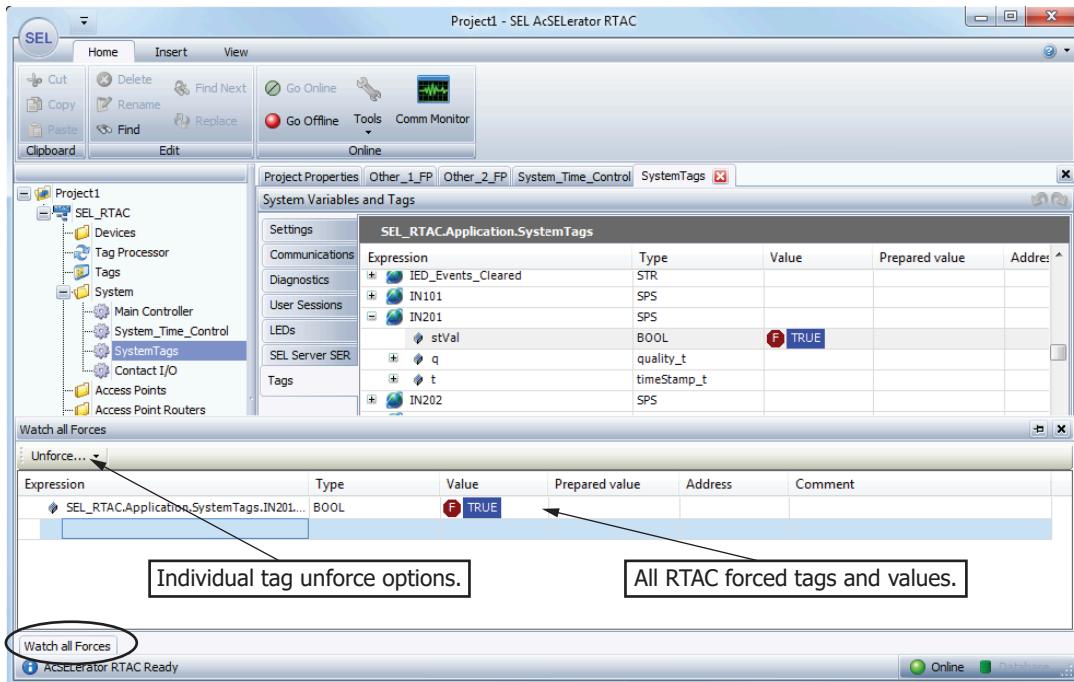

**Figure 11.4 Forced Values Window**

## Watch Window

You can also configure as many as four watch windows to view live data of selected tags.


- Step 1. From the **Online** group in the **Home** ribbon, select **Tools**. Then click on **Watch Values** and then on **Watch1 (<Ctrl+Alt+W>)**.

### NOTE


The RTAC requests display data updates from its database every 200 ms.

- Step 2. In the **Watch 1** pane, type in the tag names in the **Expression** column.
- Step 3. You can force and view any tag in the **Watch** window(s).
- Step 4. If you have more than one **Watch** pane, switch to the others by selecting the tabs at the bottom of the screen.

**924 Testing and Troubleshooting  
Using Online Debug**

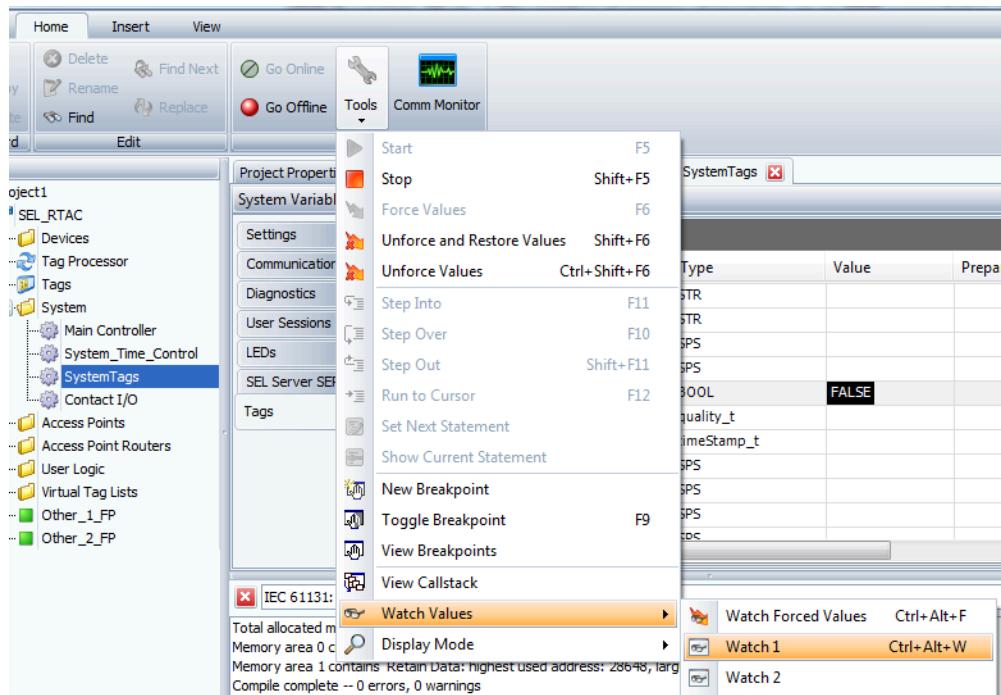

**Figure 11.5 Create a Watch Window**

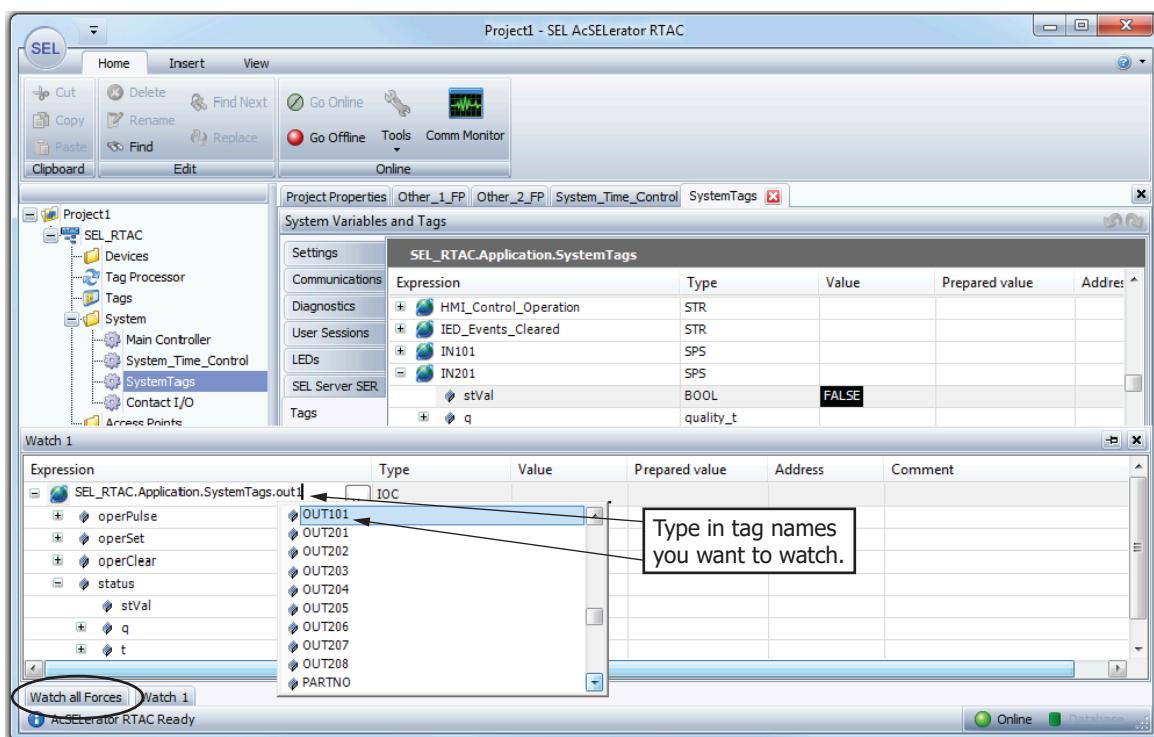

**Figure 11.6 Watch Values Window**

## Data Display Mode

Change the online tag value data display mode to decimal, hex, or binary.

Step 1. While online, click **Tools** on the **Home** ribbon, and then select **Display Mode**.

Step 2. Select the display mode you want to use. The displayed data values will change to reflect the new setting.

**Example:** CPU\_Burden\_Percent has a value of 37 percent. The display value will change if you have selected hex or binary. Hex is represented by a preceding 16#, whereas 2# represents binary.

## Watchdog

---


A watchdog is a type of system self-test designed to prevent errant tasks or configurations from rendering the RTAC unusable. The RTAC includes the following watchdog tasks:

### NOTE

Find errant tasks by logging the diagnostics tag Application\_Status in the Tag Processor. The RTAC will log an event every time any tasks restart.

1. **Real-Time Engine (RTE) Performance Watchdog:** Monitors run time of tasks to ensure that no task attempts to monopolize CPU resources (a program that has entered into an endless loop, for example). From the Main Controller setting tab, set the task watchdog time in ACSELERATOR RTAC. See *Figure 11.7* to set RTE Performance Watchdog. Time-out results in the following:

- The default project replaces the existing project in the RTAC.
- After the default project loads, ACSELERATOR RTAC posts a log message indicating expiration of the RTEWatchdog. The RTAC ALARM LED illuminates.
- All contacts deassert.

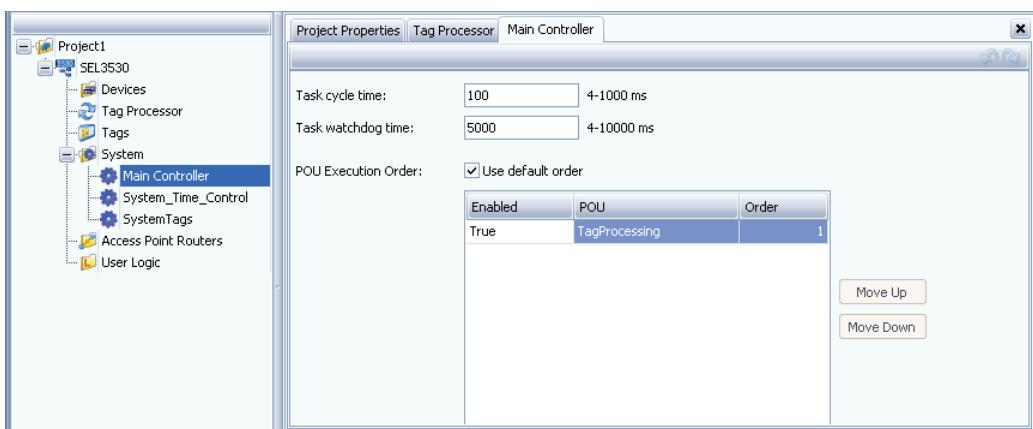

**Figure 11.7 Set RTE Performance Watchdog Time-Out**

2. **RTE Exception Watchdog:** Monitors task exceptions such as NULL pointer references. When it detects an exception, the RTAC will:
  - Replace the existing project with the default project.
  - Log a message indicating that the RTE experienced an exception.
  - Cause the RTAC **ALARM** LED to illuminate.
  - Deassert all contacts.
3. **Application Watchdog:** Monitors critical applications such as protocol tasks, date/time, etc. If a task exits unexpectedly, the RTAC takes the following steps:
  - Restarts the application.
  - Logs a configurable message indicating which application restarted.
  - Leaves the contact states or the **ALARM** LED unaffected.
4. **Out of Memory (OOM) Watchdog:** Monitors system for out-of-memory conditions. If the RTAC detects out-of-memory conditions, it does the following:
  - Loads default project in place of the existing one.
  - Logs an out-of-memory message when the default project is loaded.
  - Deasserts all contacts.
  - Stops all communication (serial and Ethernet).
  - Illuminates the **ALARM** LED.
5. **SystemWatchdog:** Detects faulted processes/hardware to avoid unstable operating conditions. If the system watchdog is not reset within 10 seconds, the RTAC takes the following steps:
  - Illuminates the RTAC **ALARM** LED.
  - Stops all serial and Ethernet communication.
  - Deasserts all contacts.
  - Writes to diagnostics region of RAM to indicate expiration of the system watchdog.
  - Creates a user-configurable log message after reboot. The log message indicates expiration of the System Watchdog.
  - Remains in an alarm state until the next cycling of power.
6. **Denial-of-Service (DoS) Detection:** Detects excessive activity on the Ethernet channels that could be an indication of a DoS attack. Adjusting the TaskWatchdog Time in the Main and Automation Task tabs of your project can assist in delaying these actions. If the system detects excessive Ethernet traffic, the SEL-2241 takes the following steps:
  - At 80 percent of watchdog timeout, adjusts priorities of Ethernet traffic to prevent a watchdog timeout.
  - At 80 percent of watchdog timeout, logs the message, "Impending watchdog failure; adjusting system priorities" in the Sequence of Events (SOE) log.
  - After 5 minutes of lowered priorities and Ethernet traffic returning to normal levels, Ethernet traffic priorities adjust back to normal.

- After 5 minutes of lowered priorities and Ethernet traffic returning to normal levels, logs the message "System priorities restored to normal" in the SOE log.
- If watchdog times out, follows steps described for SystemWatchdog and logs message, "System Watchdog has expired."

Multiple System Watchdog timeouts may indicate a hardware or firmware problem with the RTAC.

## User Sessions

---

The RTAC logs run-time user session changes (log in, log off, etc.) by inserting an SOE log entry with a configurable string. You can customize this string value in ACCELERATOR RTAC. For example, SystemTags.User\_Logged\_On has a default string value of "<username> Logged On". Customize the string value by performing the following steps:

- Step 1. Click the Tag Processor tab in ACCELERATOR RTAC.
- Step 2. Find SystemTags.User\_Logged\_On in the Destination Tag Name column. If you have deleted the default logging entries, type in the tag in the first open row.
- Step 3. Right-click the heading bar and select Logging Layout.
- Step 4. Scroll to the right until you find the column titled Logging On Message.
- Step 5. Replace the contents with the string value you want (maximum 255 characters) enclosed in single quotes (').
- Step 6. Find SystemTags.User\_Logged\_Off in the Destination Tag Name column. If you have deleted the default logging entries, type in the tag in the first open row.
- Step 7. Replace the contents in that row of the Logging On Message with the string you want (maximum 255 characters) enclosed in single quotes (').
- Step 8. Save the project and load it into the RTAC.

The Logging On Message is the message the RTAC logs when the logging condition is true. The RTAC will log the new string messages the next time someone logs on or off the RTAC web interface.

Notice in *Figure 11.9* that the Logging On Message column is next to the Tag Type column to make it easier to see. You can make navigation easier by dragging any columns in the Tag Processor grid to other positions.

The default string is the strVal of the tag. If you want to revert to using the default string, enter SystemTags.User\_Logged\_On.strVal for the Logging On Message.

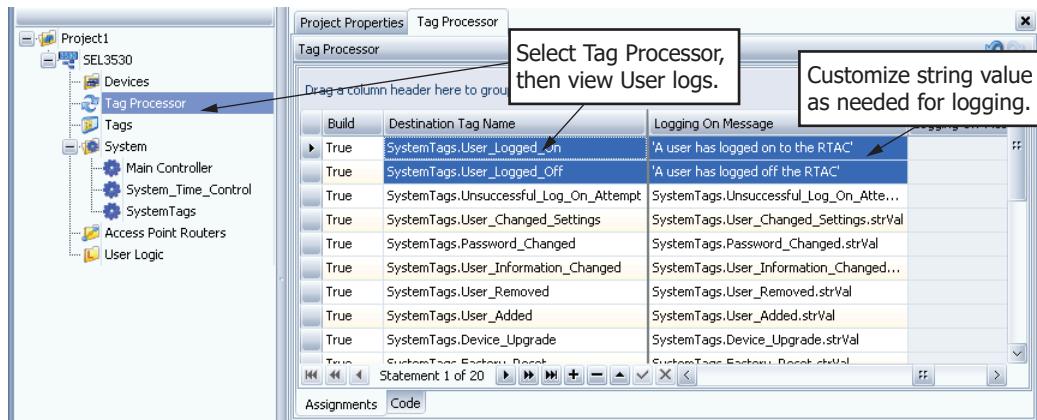


Figure 11.8 Customize Diagnostic Strings

## System Tags

The system tags listed in *Table 11.2* represent a superset of items available in RTAC devices. Not all of the system tags apply to all RTACs. For example, the SEL-3530 RTAC has programmable LEDs and integrated inputs, represented by system tags, that do not exist in the SEL-3530-4 or SEL-2241. When a new ACSELERATOR RTAC project is created, several system tags are configured in the Tag Processor to create SOE log entries by default for troubleshooting and security audit purposes. These tags are marked with an "x" in the SOE Log column in *Table 11.2*.

Table 11.2 Self-Test System Tags

| System Tag Name       | Description  | Data Type | SOE Log |
|-----------------------|--|-----------|---------|
| <b>Power</b>          |  |           |         |
| Rail_Voltage_Pos_15V  | +15 Vdc rail voltage (Not available in the SEL-3505, SEL-3505-3, SEL-3555, or SEL-3350)  | MV        |         |
| Rail_Voltage_Pos_5V   | +5 Vdc rail voltage (Not available in the SEL-3505, SEL-3505-3, SEL-3555, or SEL-3350)   | MV        |         |
| Rail_Voltage_Neg_5V   | -5 Vdc rail voltage (Not available in the SEL-3505, SEL-3505-3, SEL-3555, or SEL-3350)   | MV        |         |
| Rail_Voltage_Pos_3_3V | +3.3 Vdc rail voltage (Not available in the SEL-3350)                                    | MV        |         |
| Rail_Voltage_Neg_3_3V | -3.3 Vdc rail voltage (Not available in the SEL-3350)                                    | MV        |         |
| Rail_Voltage_Neg_15V  | -15 Vdc rail voltage (Not available in the SEL-3505, SEL-3505-3, SEL-3555, or SEL-3350)  | MV        |         |
| Rail_Voltage_Pos_1_8V | +1.8 Vdc rail voltage (Not available in the SEL-3555 or SEL-3350)                        | MV        |         |
| Rail_Voltage_Pos_1_2V | +1.2 Vdc rail voltage (Not available in the SEL-3505, SEL-3505-3, SEL-3555, or SEL-3350) | MV        |         |
| Supply_A_OK           | Power Supply A OK (SEL-3350 only)  | SPS       |         |
| Supply_A_Present      | Power Supply A present (SEL-3350 only)   | SPS       |         |
| Supply_B_OK           | Power Supply B OK (SEL-3350 only)  | SPS       |         |
| Supply_B_Present      | Power Supply B present (SEL-3350 only)   | SPS       |         |

| System Tag Name                           | Description   | Data Type  | SOE Log |
|---|---|------------|---------|
| Supply_Voltage_Neg_Gnd                    | DC value between negative and ground (Not available in the SEL-2241, SEL-3505, SEL-3505-3, SEL-3555, or SEL-3350) | MV         |         |
| Supply_Voltage_Pos_Gnd                    | DC value between positive and ground (Not available in the SEL-2241, SEL-3505, SEL-3505-3, SEL-3555, or SEL-3350) | MV         |         |
| Supply_Voltage_Pos_Neg                    | DC value between positive and negative (Not available in the SEL-2241, SEL-3505, or SEL-3350)                     | MV         |         |
| Supply_Voltage_Pos_Neg_B                  | DC value between positive and negative of the second power supply (SEL-3555 only)                                 | MV         |         |
| <b>Hardware</b>                           |   |            |         |
| IN101_Voltage                             | Value of the dc voltage present across the IN101 input contact (SEL-3350 only)                                    | MV         |         |
| Lamp_Test_Button_Status                   | Indicates the front-panel Lamp Test button status   | SPS        |         |
| Mainboard_Temperature                     | Temperature of the main board   | MV         |         |
| Port_Power_Overcurrent                    | Port Power Overcurrent Alarm state (Not available in the SEL-3505)  | SPS        | x       |
| Touchscreen_Control_Operation             | Indicates that the touchscreen issued a control operation (SEL-2241 only)   | STR        | x       |
| Touchscreen_Error_Message                 | The touchscreen error message (SEL-2241 only)   | STR        | x       |
| Touchscreen_Status                        | Indicates the status of the touchscreen (SEL-2241 only)   | STR        |         |
| USB_Power_Overcurrent                     | USB Overcurrent Alarm state (SEL-3350 and SEL-3555 only)  | SPS        |         |
| VGA_Power_Overcurrent                     | VGA Overcurrent Alarm state (SEL-3350 and SEL-3555 only)  | SPS        |         |
| <b>LEDs (Also for Remaining Aux LEDs)</b> |   |            |         |
| Aux_LED_01.offColor                       | The color of the LED when operSet is FALSE and operclear is TRUE (Options are red, green, off)                    | ledColor_t |         |
| Aux_LED_01.onColor                        | The color of the LED when operSet is TRUE and operclear is FALSE (Options are red, green, off)                    | ledColor_t |         |
| Aux_LED_01.operClear                      | Set operClear.ctlVal to TRUE and operSet.ctlVal to FALSE to turn LED to offColor                                  | operSPC    |         |
| Aux_LED_01.operSet                        | Set operSet.ctlVal to TRUE and operClear.ctlVal to FALSE to turn LED to onColor                                   | operSPC    |         |
| Aux_LED_01.status                         | Current state of the LED (TRUE if onColor is TRUE, FALSE if offColor is TRUE)                                     | SPS        |         |
| <b>Power-On Self-Test (POST)</b>          |   |            |         |
| POST_DDR2_SDRAM_OK                        | SDRAM configured and working  | SPS        |         |
| POST_Primary_Flash_OK                     | Primary Flash configured and working  | SPS        |         |
| POST_Secondary_Flash_OK                   | Secondary Flash configured and working (Not available in the SEL-3555 or SEL-3350)                                | SPS        |         |
| POST_Serial_Controller_OK                 | Serial controller configured and working  | SPS        |         |
| POST_USB_B_OK                             | USB-B port configured and working   | SPS        |         |

**930 Testing and Troubleshooting**  
**System Tags**

| System Tag Name                      | Description  | Data Type | SOE Log |
|--------------------------------------|--|-----------|---------|
| POST_Eth_01_OK                       | Ethernet_01 controller configured and working  | SPS       |         |
| POST_Eth_02_OK                       | Ethernet_02 controller configured and working  | SPS       |         |
| POST_Contact_IO_Controller_OK        | Contact I/O controller configured and working  | SPS       |         |
| POST_Mainboard_Controller_OK         | Main board controller configured and working   | SPS       |         |
| <b>System Statistics</b>             |  |           |         |
| Application_Status                   | The name of any application that has restarted   | STR       | x       |
| CPU_Burden_Percent                   | Instantaneous CPU burden percent   | INS       |         |
| CPU_Burden_Percent_5_Second_Average  | Five second average CPU burden percent   | INS       |         |
| Discarding_Data                      | Continuous Recording Groups are attempting to log data at a rate the RTAC cannot maintain and data are being discarded without being logged    | STR       | x       |
| Exceeded_Storage_Space_Limit         | Continuous Recording Groups have consumed the maximum allowable space on the RTAC disk and older data are being removed as new data are logged | STR       | x       |
| Factory_Reset                        | Settings have been reset to factory defaults   | STR       | x       |
| HMI_Analog_Write_Operation           | A string message with the tag name of the analog output control issued by the HMI  | STR       | x       |
| HMI_Control_Operation                | A string message with the username who issued the analog output via the HMI  | STR       | x       |
| IED_Events_Cleared                   | A string message with the username who deleted archived event reports  | STR       |         |
| Log_Overflow                         | Indicates an SOE log overflow condition  | SPS       | x       |
| Memory_KBytes_Used                   | Kilobytes of memory in use   | INS       |         |
| Memory_KBytes_Remaining              | Kilobytes of unused memory available   | INS       |         |
| Out_Of_Memory_System_Reset           | The system has reset due to an out of memory condition   | STR       | x       |
| Power_Up                             | Unit has had a power cycle   | SPS       |         |
| RTC_Battery_Voltage                  | Real time clock battery voltage  | MV        |         |
| Storage_Flash_KBytes_Used            | Number of kilobytes used in Flash  | INS       |         |
| Storage_Flash_KBytes_Remaining       | Number of unused kilobytes in Flash  | INS       |         |
| Storage_Flash_Total_Bad_Erase_Blocks | Number of bad erase blocks in Flash  | INS       |         |
| Storage_Flash_Maximum_Erase_Count    | Maximum physical erase block erase count   | INS       |         |
| System_Hardware_Failure              | The system has detected a hardware failure, such as a RAM failure  | STR       | x       |
| System_Watchdog_Expired              | The system has reset due to the watchdog timer expiring  | STR       | x       |
| <b>Security and Audit</b>            |  |           |         |
| Device_Upgrade                       | Unused Future Tag  | STR       |         |
| Disable_Password_Jumper_Enabled      | The disable password jumper is enabled   | SPS       | x       |
| DNP_Authentication_Message           | Indicates DNP Server Secure Authentication activity  | STR       | x       |
| ExeGuard_Enabled                     | OS security features enabled and active  | SPS       | x       |

| <b>System Tag Name</b>                              | <b>Description</b>  | <b>Data Type</b> | <b>SOE Log</b> |
|---|---|------------------|----------------|
| ExeGuard_Security_Alert                             | Text string indicating a ExeGuard alert   | STR              | x              |
| Logs_Cleared  | Indicates that someone cleared the logs   | STR              | x              |
| Number_Of_Files_Open                                | The number of files open  | INS              |                |
| Number_Of_Logon_Errors                              | The number of login errors  | INS              |                |
| Number_Of_Users_Logged_On                           | The number of users logged in   | INS              |                |
| Password_Changed                                    | Someone changed a password  | STR              | x              |
| Power_Up_Description                                | Text string indicating devices have turned on   | STR              | x              |
| Serial_Number                                       | RTAC serial number  | STR              |                |
| Settings_Change                                     | Someone changed the settings  | SPS              |                |
| System_Master_Reset_Jumper_Enabled                  | The system master reset jumper is enabled   | SPS              |                |
| Unsuccessful_Log_On_Attempt                         | A string message indicating that there were unsuccessful login attempts. The user's name is not supplied until the third consecutive attempt. | STR              | x              |
| User_Added  | Someone added a user  | STR              | x              |
| User_Changed_Settings                               | Someone changed user settings   | STR              | x              |
| User_File_System_Activity                           | Text string indicating file system usage (e.g., downloaded, uploaded, deleted) by a specified user on SFTP/FTP server                         | STR              | x              |
| User_Information_Changed                            | Someone changed user information  | STR              | x              |
| User_Logged_Off                                     | A user logged out   | STR              | x              |
| User_Logged_On                                      | A user logged in  | STR              | x              |
| User_Removed  | Someone removed a user  | STR              | x              |
| Whitelist_Alert                                     | Text string indicating a Whitelist alert  | STR              | x              |
| <b>Communications (For All Ethernet Interfaces)</b> |   |                  |                |
| Eth_01_Bad_Packets_Transmitted                      | Number of bad packets transmitted   | INS              |                |
| Eth_01_Bytes_Received                               | Number of bytes received  | INS              |                |
| Eth_01_Bytes_Transmitted                            | Number of bytes transmitted   | INS              |                |
| Eth_01_Collisions                                   | Number of collisions detected   | INS              |                |
| Eth_01_Connections_Active                           | Number of active connections  | INS              |                |
| Eth_01_Link   | Link is detected  | SPS              |                |
| Eth_01_Packets_Received                             | Number of packets received  | INS              |                |
| Eth_01_Packets_Transmitted                          | Number of packets transmitted   | INS              |                |
| Eth_01_Ports_Active                                 | Number of TCP ports active  | INS              |                |
| Eth_01_Received_Packets_Dropped                     | Number of received packets dropped  | INS              |                |
| Eth_01_Transmitted_Packets_Dropped                  | Total transmitted packets that were dropped   | INS              |                |
| <b>EtherCAT</b>                                     |   |                  |                |
| ECAT_ERROR  | SEL-2241 embedded EtherCAT controller error code  | STR              |                |
| ECAT_STATUS   | SEL-2241 embedded EtherCAT controller status code   | STR              |                |

| System Tag Name          | Description  | Data Type | SOE Log |
|--------------------------|--|-----------|---------|
| <b>RAID</b>              |  |           |         |
| RAID_Error_Message       | RAID Error Message   | STR       | x       |
| RAID_KBytes_Capacity     | Capacity of the RAID in kilobytes, or 0 if RAID has not been created               | INS       |         |
| RAID_KBytes_Remaining    | The RAID amount of disk space remaining  | INS       |         |
| RAID_KBytes_Used         | The RAID amount of disk space consumed   | INS       |         |
| RAID_Progress_Percent    | Progress of the RAID operation (0–100%)  | INS       |         |
| RAID_Status              | Status of the RAID (Initialization, Ready, Checking, Degraded, Rebuilding, Failed) | STR       |         |
| RAID_Status_Message      | Information about the new status of RAID   | STR       | x       |
| SATA_<n>_Connected       | Device exists on SATA <n>, where <n> is 01 through 04                              | SPS       |         |
| SATA_<n>_KBytes_Capacity | Capacity of the device attached to SATA <n>, where <n> is 01 through 04            | INS       |         |
| SATA_<n>_RAID_Status     | RAID status of the device attached to SATA <n>, where <n> is 01 through 04         | STR       |         |
| SATA_<n>_System          | Device exists on SATA <n> and is the system boot disk, where <n> is 01 through 04  | STR       |         |

## Troubleshooting

Use this table to identify possible solutions to RTAC problems you are having.

| Problem  | Possible Cause  | Solution  |
|--|---|---|
| Front-panel <b>ENABLED</b> LED is dark   | Input power not present   | Verify input power is present. Check fuse.                        |
|  | Invalid logic project installed                                     | Reload a known good project with ACCELERATOR RTAC software.       |
| PC does not recognize USB-B as an Ethernet port                                  | Missing USB Ethernet driver   | Download and install the SEL USB Ethernet driver SELusbGadget.inf |
|  | PC failed to reinitialize driver                                    | Reboot PC and retry.  |
| RTAC does not respond to a device connected to Ethernet (ETH F, ETH 1, or ETH 2) | Incorrect IP address  | Verify IP address.  |
|  | Invalid subnet  | Verify subnet and submask.  |
|  | Incorrect or disconnected cable                                     | Verify cable is cross-over if needed.                             |
|  | Ethernet port disabled  | Verify settings via web interface.                                |
|  | More than one port configured for the same subnet                   | Use different subnet for each Ethernet port on the RTAC.          |
| RTAC does not work correctly with device connected to a serial port              | Cable not connected   | Verify cable is secure.   |
|  | Cable is incorrect type   | Verify the cable pinout and type needed.                          |
|  | The RTAC and other device have mismatched communications parameters | Verify communications parameters.                                 |
|  | One device has received an XOFF, halting communications             | Verify XON/XOFF are not used unless needed.                       |

| <b>Problem</b>  | <b>Possible Cause</b>  | <b>Solution</b>   |
|---|--|---|
| RTAC does not synchronize with IRIG-B   | Configuration incorrect  | Verify configuration in the ACCELERATOR RTAC project, and reload into the RTAC.   |
|   | Cable disconnected   | Verify cable is secure.   |
| Unable to read or send a project with ACCELERATOR RTAC                          | Version mismatch between RTAC firmware and PC software   | Verify versions. Use web interface with RTAC and About ACCELERATOR on PC software.  |
| Unable to go online with project, or other network related issues are occurring | Certain needed network ports are closed. The software needs the following ports to operate correctly:  | Enable use of these ports by either turning off or adding exceptions to the firewall and antivirus software.  |
|   | <b>5432 (TCP Incoming):</b> ACCELERATOR RTAC project download/retrieval  |   |
|   | <b>1217 (TCP Incoming):</b> ACCELERATOR RTAC online status monitoring and point forcing  |   |
|   | <b>5433 (TCP Incoming):</b> RTAC firmware upgrades   |   |
|   | <b>15453 (TCP Incoming):</b> Communications Traffic Monitoring for diagnostics/testing   |   |
|   | <b>443 (TCP Incoming):</b> HTTPS (RTAC web server)   |   |
| Password not accepted in web interface and when projects are read or sent       | <b>80 (TCP Incoming):</b> HTTP (RTAC web server, if the global network setting Enable HTTP Redirect is enabled, automatically redirects to port 443) |   |
|   | Incorrect password   | Use correct password. Override login and reset if needed.   |
| "Temporary Authorization Token expired" error indication on RTAC web interface  | RTAC web server connection logged out due to inactivity exceeding the web session time-out   | Reload the RTAC web interface login page.   |
| Front-panel <b>ENABLED</b> LED is dark, <b>ALARM</b> LED is illuminated         | RTAC project has an invalid project  | Normally, the RTAC will reset an invalid project to the factory-default project. If the RTAC remains in this disabled state, you can reset to factory settings. |
| <b>ALARM</b> LED is illuminated on all Axion modules                            | EtherCAT protocol not enabled in RTAC  | Verify intended project was loaded in the RTAC.   |
|   | EtherCAT error   | Use Online mode in ACCELERATOR RTAC to determine root cause of the error (see examples in this section).  |
| All module LEDs in an Axion node are dark                                       | Input power is not present   | Verify input power is present.  |


## Troubleshooting an EtherCAT Network

### NOTE

Always ensure that power couplers are not connected to any Ethernet switches or other Ethernet devices, including RJ45-to-fiber-optic converters. The power coupler EtherCAT ports are only for direct connections between power couplers of the same type or to an RTAC EtherCAT port. Connecting a power coupler to any other Ethernet device can cause the EtherCAT network to stop communicating completely or have unpredictable behavior.

ACCELERATOR RTAC provides a number of online diagnostics to assist troubleshooting in case of an EtherCAT network error. While the Axion is designed and tested to operate reliably over many years, the most common sources of network problems you will experience will be either a network cable failure between nodes or component failure in an I/O module. Recall from *Controlling EtherCAT Response to Network Errors on page 288* that you can select one of two automatic responses to a network error: 1) immediate shutdown of the network, or 2) "ride-through" operation where the Axion attempts to continue operation with all available modules.

We will use the sample network shown in *Figure 11.9* to illustrate the basic troubleshooting steps necessary to find root cause of a failure in an Axion system. The sample system includes four Axion nodes with an SEL-2241 RTAC module installed in Node 1. The diagram is simplified to only show the RTAC and power couplers, but each node also has a number of I/O modules.

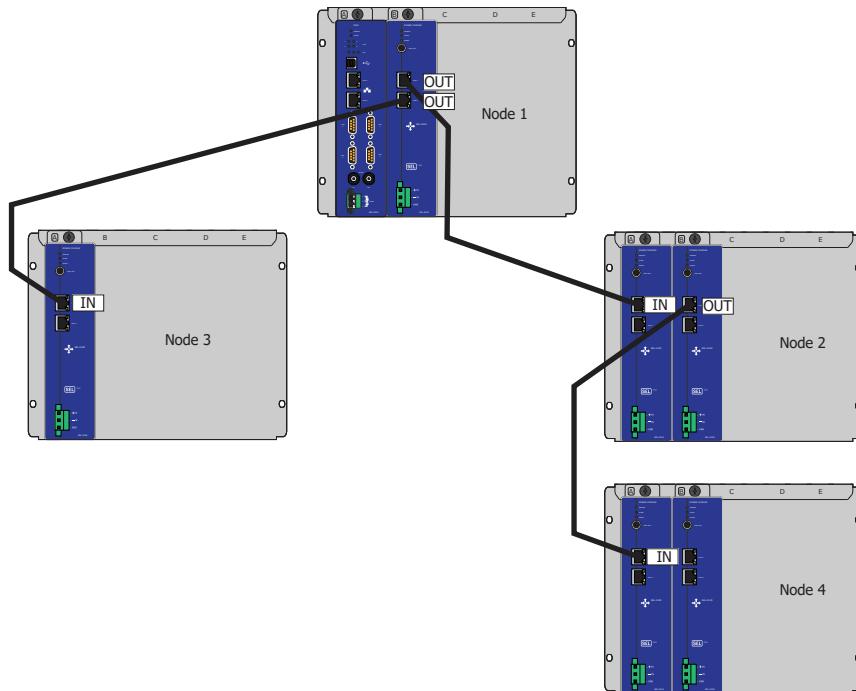

**Figure 11.9 Sample Axion System for Troubleshooting Illustrations**

The SEL-2243 Power Coupler provides two Ethernet ports dedicated for EtherCAT. These ports are labeled **PORT 1** and **PORT 2** respectively. For the following figures, we have used IN and OUT labels to denote the ports operating in the IN mode and OUT mode for EtherCAT. An IN port is the port by which a node is connected to an upstream node or an external RTAC and is designated

in the figures by a label of IN. **PORT 2** in a power coupler never operates as an IN port. OUT ports make a connection to a downstream node and are designated in the figures by a label of OUT. When you use an SEL-2241 RTAC rather than an external RTAC, the first power coupler in the node containing the RTAC uses the backplane connector as an IN port for EtherCAT. Therefore, you can use both ports on the first coupler in OUT mode.

## Example 1: Configuration Error


As described in *Node Connections Editor on page 288*, the RTAC will automatically initialize, configure, and start the EtherCAT network after you load a project from the ACCELERATOR RTAC software. To accomplish this, the ACCELERATOR project must include specific information about the placement of modules within an SEL-2240 node and the network connections between nodes. This example illustrates the network errors you would receive in case a physical I/O module does not match the module listed in the software project. Referring back to *Figure 11.10*, in slot H of Node 1 we installed a digital output module that had all Form A contacts. However, in the project, the module was configured to have eight Form A and eight Form B contacts. The remainder of the project and physical network were matched. *Figure 11.11* shows the properties for the erroneous module.

| Properties             |   |                                      |                                  |
|------------------------|---|--------------------------------------|----------------------------------|
|                        | Drag a column header here to group by that column |                                      |                                  |
| Form A Digital Outputs | Setting   | Value                                | Description                      |
| Form B Digital Outputs | Vendor  | Schweitzer Engineering Laboratories  | EtherCAT Module Vendor.          |
| Diagnostics            | Description                                       | 2244313200, 16DO, 8 Form A, 8 Form B | EtherCAT Module Description.     |
| Tags                   | Product Code                                      | 0x0041d070                           | EtherCAT Module Product Code.    |
|                        | Revision  | 0x00000000                           | EtherCAT Module Revision Number. |

**Figure 11.10 Network Error Illustration for Example 1**


In online mode, the node connections editor (Connections tab) provides a visual summary of the network state. As you can see in *Figure 11.11*, a white-on-red "X" will display next to any module that is not operational on the network. During network initialization, all modules will have such an indicator. The ALARM LED on the modules will be illuminated, as well.

The RTAC initializes EtherCAT after it is enabled, and the run-time engine is started. Be aware that other protocol connections may be fully enabled before EtherCAT starts running. During EtherCAT startup, ACCELERATOR RTAC (in online mode) will display startup status at the bottom of the software window in the status bar. *Figure 11.11* shows the initial message during this process "Beginning EtherCAT boot sequence...".

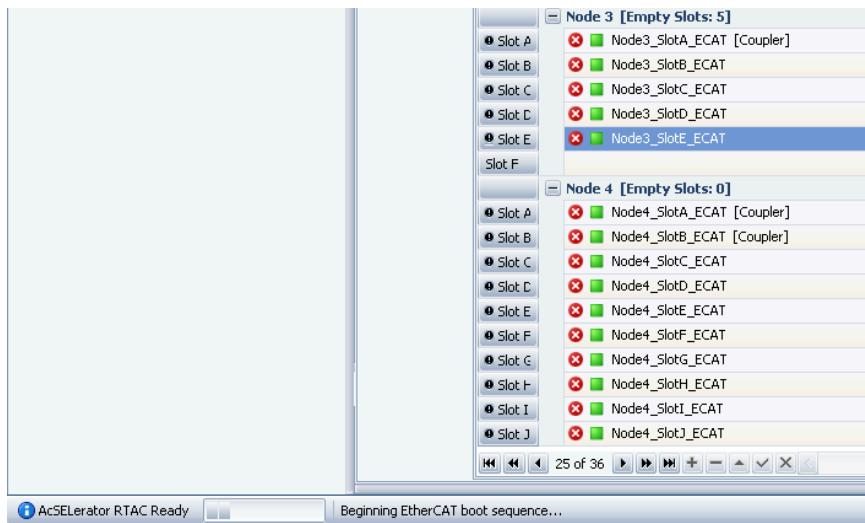


**Figure 11.11 Network Initialization**

Figure 11.12 shows the status messages for the remaining portions of a successful configuration process. Even though this process may take a number of minutes, you can be confident that the procedure is progressing successfully as long as the status bar does not display an error message. No user interaction is needed during the configuration process. The **ENABLED** LED on the modules will illuminate once the network is operating.

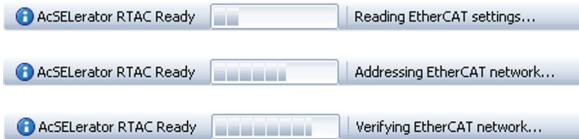

**Figure 11.12 Network Configuration Status Messages**

For this example, the RTAC will recognize the module error during the Addressing phase of network initialization. Figure 11.13 illustrates the error indicators in ACSELERATOR RTAC. In the node connections editor Connections tab, notice that slots H and I both have an error indication (there was no module installed in Slot J); the rest of the modules in Node 1 do not display an error. Also, the status bar provides the following message, "EtherCAT server alias program error during Client State 2." Network aliasing is part of the automatic EtherCAT network addressing process. This error message indicates that at least one module on the network does not match the project. The RTAC was unable to finish configuration and startup of the network. Depending on the location of the erroneous module, other nodes in the network may display error indicators for all modules. The RTAC stops addressing the network once an error occurs, so all unaddressed modules will continue to display the error indicator.

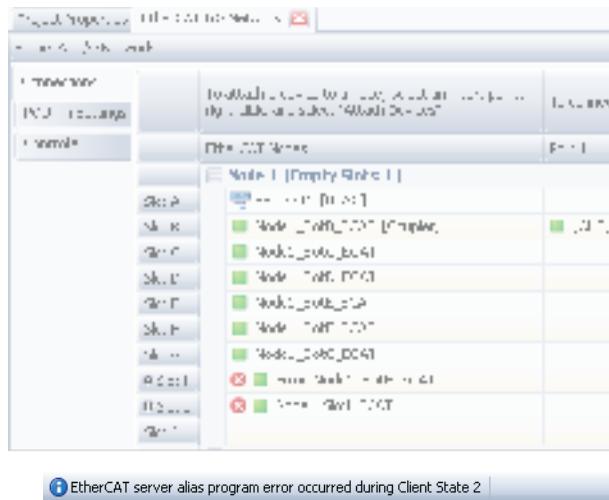**Figure 11.13 Configuration Error Because of Mismatched Module**

When troubleshooting an error similar to this case, the first module in a node with an error indication is likely the cause of the problem.

**NOTE**

ACCELERATOR RTAC would display exactly the same error indicators if the two modules in slots H and I were installed in reverse order.

Use the following steps to troubleshoot the problem:

- Step 1. Visually verify that the part number of the installed module matches the ACCELERATOR RTAC project. In this case we would see that the module and project do not match. Once the project is modified and downloaded, the network would initialize normally. If there were more than one error, ACCELERATOR RTAC would display a different error location the second time the project is loaded.
- Step 2. If you do not find a part number mismatch, verify that the module is properly inserted into the node and has power by checking that the **ALARM LED** is illuminated.
- Step 3. Verify that all internode network connections match the project settings (listed in the Node Connections Editor).
- Step 4. If the problem persists, replace the module and attempt to restart EtherCAT (refer to *Replacing a Failed Module* in the *SEL-2240 Instruction Manual*).

In this example the server alias program error was caused by a module mismatch. You would receive the same error code if you connected the wrong Ethernet port on an external SEL-3530 or SEL-3530-4 to an Axion node. For example, if you set Ethernet Port 1 on an SEL-3530 as the dedicated EtherCAT port, but then physically connect to Ethernet Port 2, the system will report a server alias program error because the RTAC module would not be able to communicate with the Axion I/O modules.

## Example 2: Cable Failure to a Terminal Node

The next two examples describe the symptoms and troubleshooting for internode network cable failures. As illustrated in *Figure 11.14*, we will first look at a cable failure between Node 1 and Node 3.


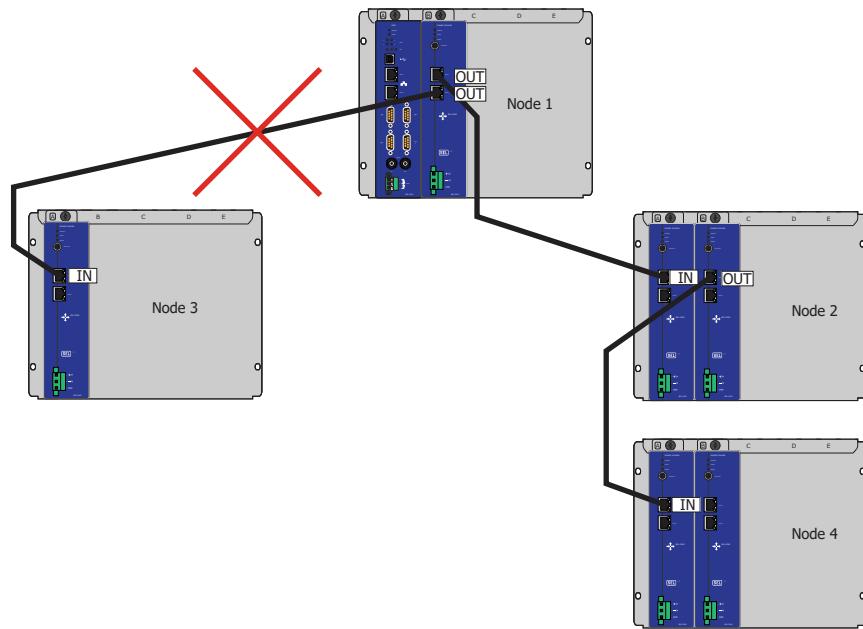


Figure 11.14 Network Cable Fault

If this cable becomes disconnected or broken, online you would see the network status shown in *Figure 11.15*. Nodes 1, 2, and 4 would not display an error, but all modules in Node 3 would have an error indication. Additionally, the status bar would display the message "EtherCAT network failed."

If you have the EtherCAT POU pin "Disable\_On\_Network\_Error" set to TRUE (default value), then all EtherCAT control messages will stop as soon as the RTAC recognizes that a network fault has occurred. All outputs will deassert and the **ALARM** LEDs on all modules will illuminate. If the "Disable\_On\_Network\_Error" pin is set to FALSE, the RTAC will continue to read and write data to all available modules (Nodes 1, 2, and 4). Only the **ALARM** LEDs on the Node 3 modules would be illuminated.

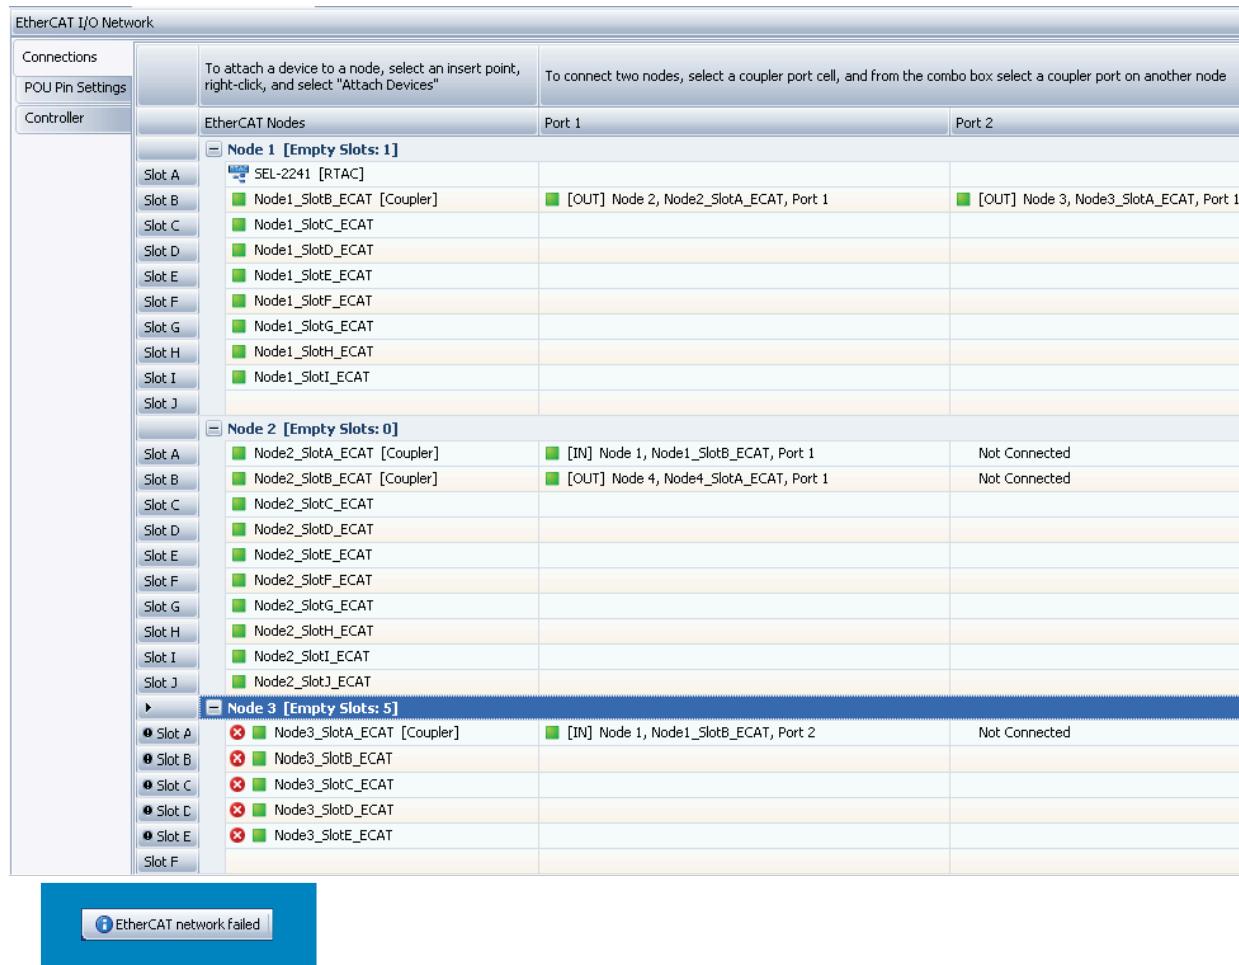

**Figure 11.15** Connections Status for Network Cable Fault Between Node 1 and Node 3

Additionally, the individual modules have diagnostics that can be helpful for continuous monitoring and troubleshooting, as described in *Common Diagnostic Tags* on page 206. Referring to *Figure 11.16*, the status of modules in Node 3 will become "Non-Operational." Monitoring of module status and tag quality will provide immediate indication of a network problem.

| SEL_RTAC.Application.Node3_SlotB_ECAT |  |         |  |                   |
|---------------------------------------|--|---------|--|-------------------|
| Properties                            | Expression                             | Comment | Type   | Value             |
| Form A Digital Outputs                | =  ERROR<br>+  strVal<br>+  q<br>+  t  |         | STR<br>STRING(255)<br>quality_t<br>timeStamp_t | 'No Error'        |
| Diagnostics                           | =  STATUS<br>+  strVal<br>+  q<br>+  t |         | STR<br>STRING(255)<br>quality_t<br>timeStamp_t | 'Non-Operational' |
| Tags                                  |  |         |  |                   |

**Figure 11.16** Module Status in Node 3

The ERROR tag shown in *Figure 11.16* is "No Error"; which the RTAC reads from the module. Because none of the modules in Node 3 are available on the network once the cable is disconnected, no updated value can be read. The tag retains the last value. The combination of the STATUS and ERROR tags should be used for monitoring. *Figure 11.17* shows the same diagnostics for a module

in one of the unfaulted nodes. In the figure you can see that the STATUS tag has the value of "Operational" and the ERROR tag has the value Cable Error. The modules in Nodes 1, 2, and 4 would all have these values. All of these diagnostics agree with the information we saw in the node connection editor; the error is coming from Node 3 or the cable between Node 1 and Node 3.


| SEL_RTAC.Application.Node1_SlotE_ECAT |            |         |             |               |
|---------------------------------------|------------|---------|-------------|---------------|
| Properties                            | Expression | Comment | Type        | Value         |
| Digital Inputs                        | ERROR      |         | STR         | STRING(255)   |
|                                       | strVal     |         | STRING(255) | 'Cable Error' |
| Diagnostics                           | q          |         | quality_t   |               |
|                                       | t          |         | timeStamp_t |               |
| Tags                                  | STATUS     |         | STR         | STRING(255)   |
|                                       | strVal     |         | STRING(255) | 'Operational' |
|                                       | q          |         | quality_t   |               |
|                                       | t          |         | timeStamp_t |               |

**Figure 11.17 Module Status in Unfaulted Nodes**

- Step 1. At Node 3, verify that the incoming network cable is properly connected to the IN port on the power coupler.
- Step 2. At Node 3, verify that the node has incoming power by checking LED status.
- Step 3. At Node 1, verify that the outgoing network cable is properly connected to the OUT port on the power coupler.
- Step 4. Verify continuity in the network cable between Node 1 and Node 3.
- Step 5. If needed, verify that all internode network connections match the project settings (listed in the Node Connections Editor).
- Step 6. If the "Disable\_On\_Network\_Error" POU pin is FALSE, the network will automatically start in Node 3 once communications return. If the pin is TRUE, manually restart EtherCAT as described in *Replacing a Failed Module With Disabled Network (Disable\_On\_Network\_Error = TRUE)* in the *SEL-2240 Instruction Manual*.

## Example 3: Cable Failure to a Node With Downstream Connections

This example also evaluates a cable failure. In this case, the problem is between Node 1 and Node 2. As we will see, the symptoms will be different from Example 2 because Node 2 has an OUT connection to Node 4.

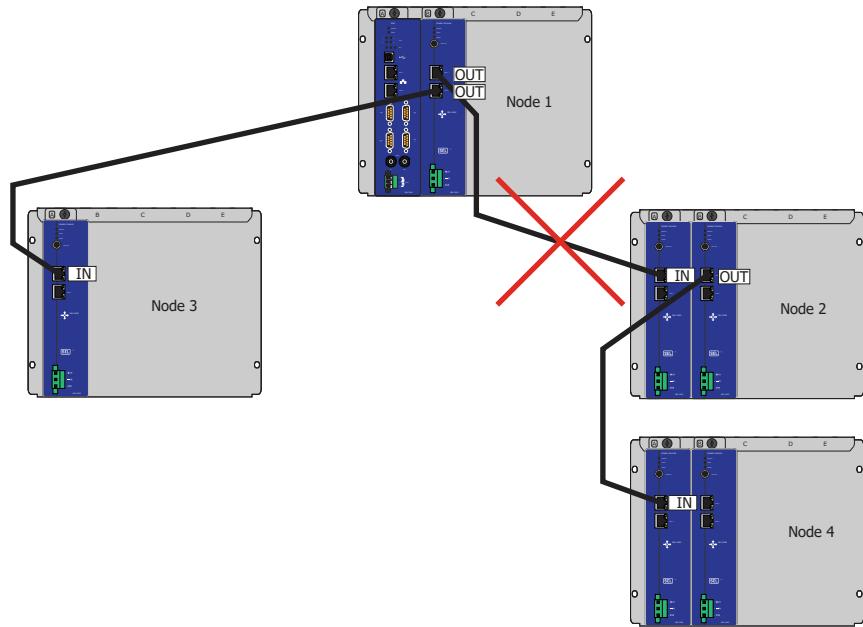**Figure 11.18 Network Cable Fault**

As you can see from *Figure 11.19*, the cable fault results in error indications for all of the modules in Node 2 and Node 4. Node 1 and Node 3 would report "Operational" modules and a "Cable Error." The node connections editor in *Figure 11.19* shows that the power coupler in Slot B of Node 2 provides connectivity for Node 4. Using the rule of thumb that the first module with an error is likely the cause, then we would troubleshoot the problem by assuming that the error is coming from Node 2 or the cable between Node 1 and Node 2.

- Step 1. At Node 2, verify that the incoming network cable is properly connected to the IN port on the power coupler.
- Step 2. At Node 2, verify that the node has incoming power by checking LED status.
- Step 3. At Node 1, verify that the outgoing network cable is properly connected to the OUT port on the power coupler.
- Step 4. Verify continuity in the network cable between Node 1 and Node 2.
- Step 5. If needed, verify that all internode network connections match the project settings (listed in the Node Connections Editor).
- Step 6. If the "Disable\_On\_Network\_Error" POU pin is FALSE, the network will automatically start in nodes 2 and 4 once communications return. If the pin is TRUE, manually restart EtherCAT as described in *Replacing a Failed Module With Disabled Network (Disable\_On\_Network\_Error = TRUE)* in the SEL-2240 Instruction Manual.

| EtherCAT I/O Network |   |  |               |
|----------------------|---|--|---------------|
| Connections          | To attach a device to a node, select an insert point, right-click, and select "Attach Devices". |  |               |
| POU Pin Settings     | To connect two nodes, select a coupler port cell, and from the combo box select a coupler port. |  |               |
| Controller           | EtherCAT Nodes  | Port 1   | Port 2        |
| Slot J               |   |  |               |
| ▶                    | <b>Node 2 [Empty Slots: 0]</b>  |  |               |
| ● Slot A             | ✗ <input checked="" type="checkbox"/> Node2_SlotA_ECAT [Coupler]                                | <input checked="" type="checkbox"/> [IN] Node 1, Node1_SlotB_ECAT, Port 1  | Not Connected |
| ● Slot B             | ✗ <input checked="" type="checkbox"/> Node2_SlotB_ECAT [Coupler]                                | <input checked="" type="checkbox"/> [OUT] Node 4, Node4_SlotA_ECAT, Port 1 | Not Connected |
| ● Slot C             | ✗ <input checked="" type="checkbox"/> Node2_SlotC_ECAT  |  |               |
| ● Slot D             | ✗ <input checked="" type="checkbox"/> Node2_SlotD_ECAT  |  |               |
| ● Slot E             | ✗ <input checked="" type="checkbox"/> Node2_SlotE_ECAT  |  |               |
| ● Slot F             | ✗ <input checked="" type="checkbox"/> Node2_SlotF_ECAT  |  |               |
| ● Slot G             | ✗ <input checked="" type="checkbox"/> Node2_SlotG_ECAT  |  |               |
| ● Slot H             | ✗ <input checked="" type="checkbox"/> Node2_SlotH_ECAT  |  |               |
| ● Slot I             | ✗ <input checked="" type="checkbox"/> Node2_SlotI_ECAT  |  |               |
| ● Slot J             | ✗ <input checked="" type="checkbox"/> Node2_SlotJ_ECAT  |  |               |
| ▶                    | <b>Node 3 [Empty Slots: 5]</b>  |  |               |
| Slot A               | <input checked="" type="checkbox"/> Node3_SlotA_ECAT [Coupler]                                  | <input checked="" type="checkbox"/> [IN] Node 1, Node1_SlotB_ECAT, Port 2  | Not Connected |
| Slot B               | <input checked="" type="checkbox"/> Node3_SlotB_ECAT  |  |               |
| Slot C               | <input checked="" type="checkbox"/> Node3_SlotC_ECAT  |  |               |
| Slot D               | <input checked="" type="checkbox"/> Node3_SlotD_ECAT  |  |               |
| Slot E               | <input checked="" type="checkbox"/> Node3_SlotE_ECAT  |  |               |
| Slot F               |   |  |               |
| ▶                    | <b>Node 4 [Empty Slots: 0]</b>  |  |               |
| ● Slot A             | ✗ <input checked="" type="checkbox"/> Node4_SlotA_ECAT [Coupler]                                | <input checked="" type="checkbox"/> [IN] Node 2, Node2_SlotB_ECAT, Port 1  | Not Connected |
| ● Slot B             | ✗ <input checked="" type="checkbox"/> Node4_SlotB_ECAT [Coupler]                                |  | Not Connected |
| ● Slot C             | ✗ <input checked="" type="checkbox"/> Node4_SlotC_ECAT  |  |               |
| ● Slot D             | ✗ <input checked="" type="checkbox"/> Node4_SlotD_ECAT  |  |               |
| ● Slot E             | ✗ <input checked="" type="checkbox"/> Node4_SlotE_ECAT  |  |               |
| ● Slot F             | ✗ <input checked="" type="checkbox"/> Node4_SlotF_ECAT  |  |               |
| ● Slot G             | ✗ <input checked="" type="checkbox"/> Node4_SlotG_ECAT  |  |               |
| ● Slot H             | ✗ <input checked="" type="checkbox"/> Node4_SlotH_ECAT  |  |               |
| ● Slot I             | ✗ <input checked="" type="checkbox"/> Node4_SlotI_ECAT  |  |               |
| ● Slot J             | ✗ <input checked="" type="checkbox"/> Node4_SlotJ_ECAT  |  |               |

**Figure 11.19** Connections Status for Network Cable Fault Between Node 1 and Node 2

## Example 4: Module Failure

As a final example, we will evaluate an individual module failure in a network.

*Figure 11.20* shows the connection status if the module in Slot C of Node 3 stops functioning. Unlike the network status in Example 1, no modules in any other node have an error indication. Using the troubleshooting rule of thumb, we would start troubleshooting the module in Slot C.

|          |  |   |               |
|----------|--|---|---------------|
| Slot A   | <input checked="" type="checkbox"/> Node3_SlotA_ECAT [Coupler] | <input checked="" type="checkbox"/> [IN] Node 1, Node1_SlotB_ECAT, Port 2 | Not Connected |
| Slot B   | <input checked="" type="checkbox"/> Node3_SlotB_ECAT           |   |               |
| ● Slot C | ✗ <input checked="" type="checkbox"/> Node3_SlotC_ECAT         |   |               |
| ● Slot D | ✗ <input checked="" type="checkbox"/> Node3_SlotD_ECAT         |   |               |
| ● Slot E | ✗ <input checked="" type="checkbox"/> Node3_SlotE_ECAT         |   |               |
| Slot F   |  |   |               |

**Figure 11.20** Connections Status for an Individual Module Failure

- Step 1. Verify that the module is properly inserted into the node and has power by checking that the **ALARM** LED is illuminated.
- Step 2. If the problem persists, replace the module and attempt to restart EtherCAT (refer to *Replacing a Failed Module* in the *SEL-2240 Instruction Manual*).
- Step 3. If needed, verify that all internode network connections match the project settings (listed in the Node Connections Editor).

**This page intentionally left blank**

---

---

## A P P E N D I X    A

---

# Firmware and Manual Versions

## Firmware

---

### Determining the Firmware Version

To find the firmware version number in your SEL Real-Time Automation Controller (RTAC) family of products, including the SEL-2240 Axion®, log in to the RTAC web interface and find Firmware Version on the Dashboard display page.

The firmware version will be either a standard release or a point release. A standard release adds new functionality to the firmware beyond the specifications of the existing version. A point release is reserved for modifying firmware functionality to conform to the specifications of the existing version. Each standard release will be maintained with periodic point release updates for a period of no more than two years. Point releases of RTAC firmware will typically occur every three to four months and may contain Cybersecurity patches and usability enhancements, but no new functionality or features will be introduced in point releases.

A standard release is identified by a change in the R-number of the device FID number.

Existing firmware:

FID=SEL-2241-**R100**-V0

Standard release firmware:

FID=SEL-2241-**R101**-V0

A point release is identified by a change in the V-number of the device FID string.

Existing firmware:

FID=SEL-2241-R100-**V0**

Point release firmware:

FID=SEL-2241-R100-**V1**

## Revision History

*Table A.1–Table A.8* lists the firmware versions, revision descriptions, and corresponding instruction manual date codes. In the Affected Models column, "All" indicates that the revision note applies to all models and FID numbers listed in the Firmware, Software, and Manual Versions column. The most recent firmware version is listed first.

Starting with revisions published after March 1, 2022, changes that address security vulnerabilities are marked with "[Cybersecurity]". Other improvements to cybersecurity functionality that should be evaluated for potential cybersecurity importance are marked with "[Cybersecurity Enhancement]".

#### **NOTE**

The SEL-3560 uses the same firmware as the SEL-3555. The SEL-3560 will show the SEL-3555 FID string on the web interface. All revision notes which apply to the SEL-3555 firmware are also applicable to the SEL-3560.

Starting in firmware version R151-V0, RTAC firmware uses a licensed open-source software called Timescale. More information on Timescale can be found at [github.com/timescale](https://github.com/timescale).

Starting in firmware version R153-V0, automatic BIOS updates for the SEL-3555-1 are disabled. In order to upgrade to the latest BIOS version (1.9.49152.65), legacy SEL-3555-1 hardware must first be updated to firmware version R145-V1 or later. If the hardware is updated to R153-V0 without first updating to an earlier firmware version of R145-V1 or later, the BIOS version will not be updated during the firmware upgrade process. Automatic upgrades to the BIOS version of the SEL-3555-2 are unaffected.

Starting with firmware version R154-V0, an equivalent 200-series firmware version is also available for SEL-3350 and SEL-3555/3560 hardware. The 200-series firmware has feature-parity with the equivalent 100-series release but contains an underlying operating system that is 64-bit, rather than the 32-bit operating system used by 100-series firmware. Any new RTAC models (e.g., SEL-2241-2) will only have a 200-series firmware release. Underlying enhancements available with the 64-bit operating system include:

- ▶ A modern, better-supported version of the operating system.
- ▶ Each individual process running on the RTAC gains access to more memory. This provides benefits for memory-intensive processes such as the local display running a large RTAC HMI, or the Continuous Recording Groups feature logging 3 kHz data.
- ▶ Future-proofing of the operating system. 64-bit versions support time and clock values later than the Linux end-of-epoch date of January 19, 2038.

#### **NOTE**

Existing SEL-3350 or SEL-3555/3560 hardware with 100-series firmware that are upgraded to a 200-series version of firmware cannot be subsequently downgraded to a 100-series version of firmware.

The ACSELERATOR RTAC SEL-5033 Software version indicates the minimum version number that you must use for that firmware release. Newer versions of ACSELERATOR RTAC always work with older versions of firmware.

The following list indicates the tables where the RTAC and Axion firmware revision histories can be found:

- ▶ RTACs: *Table A.1*
- ▶ SEL-2245-2: *Table A.2*
- ▶ SEL-2245-22: *Table A.3*
- ▶ SEL-2245-221: *Table A.4*
- ▶ SEL-2245-3: *Table A.5*

- SEL-2245-4: *Table A.6*
- SEL-2245-411: *Table A.7*
- SEL-2245-42: *Table A.8*

**Table A.1 RTAC Firmware Revision History**

| Firmware, Software, and Manual Versions  | Summary of Revisions  | Affected Models                                 |
|--|---|---|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R155-V0-Z000037-D20250723<br>SEL-3530-4-R155-V0-Z000037-D20250723 | [Cybersecurity] Resolved an issue in the OPC UA server where a specially crafted client message could trigger a restart of the logic engine.  | 2241-2,<br>3350,<br>3555                        |
| SEL-2241-R155-V0-Z000037-D20250723<br>SEL-3505-R155-V0-Z000037-D20250723<br>SEL-3505-3-R155-V0-Z000037-D20250723     | [Cybersecurity Enhancement] Enhanced the IEC 60870-5-104 server and client to support encrypted TLS/SSL connections.  | All   |
| SEL-3555-R155-V0-Z000037-D20250723<br>SEL-3350-R155-V0-Z000037-D20250723   | [Cybersecurity Enhancement] Resolved an issue where performing a reset to factory-default settings did not clear File Manager or Project Upload content.  | All   |
| SEL-3555-R201-V0-Z000037-D20250723<br>SEL-3350-R201-V0-Z000037-D20250723<br>SEL-2241-2-R201-V0-Z000037-D20250723     | Added a Continuous Waveform Streaming client for the SEL-735 meter.   | 2241-2,<br>3350,<br>3555;<br>200-series<br>only |
| ACSELERATOR RTAC Software Version:<br>1.155.201.xxx  |   |   |
| Manual Date Code: 20250730   |   |   |
|  | Added the Alarm API to support an enhanced RTAC HMI Alarm Viewer, enabling configurable acknowledgment sequence options and alarm historical lookup. Note: The HMI runtime update with the updated Alarm Viewer is not included with this firmware update and must be installed separately. | All   |
|  | Added a DNS Lookup tool to the Network Utilities page in the web interface.   | All   |
|  | Added support for Georgian fonts to the Axion Touchscreen display.  | 2241,<br>2241-2                                 |
|  | Enhanced the custom screens application on the Axion Touchscreen display to support as many as 1,000 digital labels.  | 2241,<br>2241-2                                 |
|  | Enhanced the SEL server with the ability to create custom client notifications.   | All   |
|  | Enhanced the SEL server with an <b>EXI</b> command to terminate an Ethernet-tunneled-serial connection.   | All   |
|  | Enhanced the Modbus client to support using a shared TCP tunnel with other clients when configured with an Ethernet connection type and using shared Server IP and Port destinations.   | All   |
|  | Enhanced the DNP, Modbus, IEC 60870-5-101/104, and IEC 61850 MMS servers to support a configurable startup delay timer.   | All   |
|  | Enhanced the IEC 60870-5-104 server to support as many as four simultaneous redundant connections.  | All   |
|  | Enhanced the SEL protocol client to expose the Enable New Event Filtering and Enable ASCII SER Collection settings as Basic settings rather than requiring direct use of the associated POU Pin Settings.   | All   |
|  | Resolved an issue in the Modbus client where the device would not re-enable if previously disabled via the EN POU pin.  | All   |
|  | Resolved an issue in Continuous Recording Groups where incorrect units were assigned to PMU channels in the generated COMTRADE CFG file.  | 3350,<br>3555                                   |

| <b>Firmware, Software, and Manual Versions</b> | <b>Summary of Revisions</b>  | <b>Affected Models</b>                                |
|--|--|---|
|  | Resolved an issue in Recording Groups COMTRADE records where Digital Output change time stamps from SEL-2245-5 modules appeared 1 ms later than the actual transition time.  | 2241,<br>2241-2,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Resolved an issue where the SFTP server could restart if used on an SEL-3555 with a RAID configuration.  | 3555  |
|  | Resolved an issue where the SFTP server would reject subsequent connections after an SSH key was added or deleted with the web interface, or after many previous connections with file upload or download activity.          | All   |
|  | Resolved an issue where a COMTRADE record created by an SEL-2245-4 CTPT EtherCAT Axion module could contain incorrect channel names.   | 2241,<br>2241-2,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Resolved an issue where an RTAC-provided web proxy would fail to allow proper interaction with the configured destination web page.  | All   |
|  | Resolved an issue where a Continuous Recording Group configured with a large number of PMUs sourced from EtherCAT modules could cause a logic engine restart.  | 3350,<br>3555   |
|  | Resolved an issue in the IEC 61850 MMS client where COMTRADE retrieval could fail to retrieve the full set of record components (CFG, DAT, HDR) or could continuously re-collect a record if File Re-collection was enabled. | 2241,<br>2241-2,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Resolved an issue where the SEL-3350 would not generate an SOE record for a system watchdog reset.   | 3350  |
|  | Resolved an issue where network latency could cause a TCP connection to be prematurely terminated.   | All   |
|  | Resolved an issue where an SEL-3560S was unable to accept IRIG-B input on the COM1 serial port.  | 3560S   |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b>                                |
|--|--|---|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R154-V1-Z000133-D20250723<br>SEL-3530-4-R154-V1-Z000133-D20250723 | Includes all the functions of firmware version R154-V0 and R200-V0 with the following additions:   |   |
| SEL-2241-R154-V1-Z000133-D20250723<br>SEL-3505-R154-V1-Z000133-D20250723<br>SEL-3505-3-R154-V1-Z000133-D20250723     | [Cybersecurity] Resolved an issue in the OPC UA server where a specially crafted client message could trigger a restart of the logic engine.   | 2241-2,<br>3350,<br>3555                              |
| SEL-3555-R154-V1-Z000133-D20250723<br>SEL-3350-R154-V1-Z000133-D20250723   | [Cybersecurity Enhancement] Resolved an issue where performing a reset to factory-default settings did not clear File Manager or Project Upload content.   | All   |
| SEL-3555-R200-V1-Z000133-D20250723<br>SEL-3350-R200-V1-Z000133-D20250723<br>SEL-2241-2-R200-V1-Z000133-D20250723     | Resolved an issue in the Modbus client where the device would not re-enable if previously disabled via the EN POU pin.   | All   |
| ACCELERATOR RTAC Software Version:<br>1.154.200.xxx  | Resolved an issue in Continuous Recording Groups where incorrect units were assigned to PMU channels in the generated COMTRADE CFG file.   | 3350,<br>3555   |
| Manual Date Code: 20250730   | Resolved an issue in Recording Groups COMTRADE records where Digital Output change time stamps from SEL-2245-5 modules appeared 1 ms later than the actual transition time.  | 2241,<br>2241-2,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Resolved an issue where the SFTP server could restart if used on an SEL-3555 with a RAID configuration.  | 3555  |
|  | Resolved an issue where the SFTP server would reject subsequent connections after an SSH key was added or deleted with the web interface, or after many previous connections with file upload or download activity.          | All   |
|  | Resolved an issue where a COMTRADE record created by an SEL-2245-4 CTPT EtherCAT Axion module could contain incorrect channel names.   | 2241,<br>2241-2,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Resolved an issue where an RTAC-provided web proxy would fail to allow proper interaction with the configured destination web page.  | All   |
|  | Resolved an issue where a Continuous Recording Group configured with a large number of PMUs sourced from EtherCAT modules could cause a logic engine restart.  | 3350,<br>3555   |
|  | Resolved an issue in the IEC 61850 MMS client where COMTRADE retrieval could fail to retrieve the full set of record components (CFG, DAT, HDR) or could continuously re-collect a record if File Re-collection was enabled. | 2241,<br>2241-2,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Resolved an issue where the SEL-3350 would not generate an SOE record for a system watchdog reset.   | 3350  |
|  | Resolved an issue where network latency could cause a TCP connection to be prematurely terminated.   | All   |
|  | Resolved an issue where an SEL-3560S was unable to accept IRIG-B input on the COM1 serial port.  | 3560S   |

**950 Firmware and Manual Versions**  
**Firmware**

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models                                       |
|--|--|---|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R154-V0-Z000097-D20250326<br>SEL-3530-4-R154-V0-Z000097-D20250326   | [Cybersecurity Enhancement] Updated the Restricted BIOS to version 12.8.49152.165 in the SEL-3555-2/SEL-3560-2 and to version 11.5.49152.280 in the SEL-3350.  | 2241-2,<br>3350,<br>3555                              |
| SEL-2241-R154-V0-Z000097-D20250326<br>SEL-3505-R154-V0-Z000097-D20250326<br>SEL-3505-3-R154-V0-Z000097-D20250326<br>SEL-3555-R154-V0-Z000097-D20250326<br>SEL-3350-R154-V0-Z000097-D20250326 | [Cybersecurity Enhancement] Enhanced the SNMP client (manager) and server (agent) protocols to support SNMPv3 with added authentication and encryption options.  | All   |
| SEL-3555-R200-V0-Z000097-D20250326<br>SEL-3350-R200-V0-Z000097-D20250326<br>SEL-2241-2-R200-V0-Z000097-D20250326   | Added support for the SEL-2241-2 Axion RTAC module.  | 2241-2;<br>200-series<br>only                         |
| ACCELERATOR RTAC Software Version:<br>1.154.200.xxx  | Added support for the SEL-2244-4 32 Digital Input module.  | 2241,<br>2241-2,<br>3350,<br>3530,<br>3530-4,<br>3555 |
| Manual Date Code: 20250326   |  |   |
|  | Added support for collecting power quality measurements from SEL-2245-42 AC Protection modules.<br><br><b>NOTE</b><br>Upgrading to firmware version R154 or later or R200 or later will require a firmware update for existing SEL-2245-42 modules to firmware version R105. | 2241-2,<br>3350,<br>3555                              |
|  | Added support for enabling and disabling autonegotiation on SFP-compatible Ethernet ports.   | 2241-2,<br>3350,<br>3555                              |
|  | Updated the RTAC HMI Runtime Binary file to version 3.9.1.229.   | 2241,<br>2241-2,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Enhanced the IEC 60870-5-101 and -104 servers to support per-tag blocking of control operations with Act Con Negative responses to requests when the q.test bit is asserted on the status sub-tag of the controllable tag.   | All   |
|  | Enhanced the IEC 61850 MMS client and server to be Edition 2.1 compliant.  | 2241,<br>2241-2,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Enhanced the packet dissector to support OPC UA protocol.  | 2241-2,<br>3350,<br>3555                              |
|  | Enhanced static route functionality to support remote gateway IP addresses on subnets that are later added with IP Alias functions.  | All   |
|  | Enhanced the OPC UA server protocol to add advanced settings for Maximum Nodes Per Read, Maximum Nodes Per Write, and Maximum Nodes Per Browse.  | 2241-2,<br>3350,<br>3555                              |
|  | Enhanced the embedded web interface documentation for RTAC web API calls.  | All   |

| <b>Firmware, Software, and Manual Versions</b> | <b>Summary of Revisions</b>   | <b>Affected Models</b>                                |
|--|---|---|
|  | Enhanced the Courier client to support IED password authentication when performing event collection.  | All   |
|  | Enhanced RecordingGroups to support modifying the device name that is displayed in the COMTRADE file.   | 2241,<br>2241-2,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Resolved an issue where an SNMP client (manager) device would not issue polls correctly.  | All   |
|  | Modified the ClockSyncKind and the MMS server LTIM.TmSyn values to be IEC 61850 Edition 2.1 compliant.  | All   |
|  | Resolved an issue where an SEL-2245-42 AC Protection module configured with a Delta PT Connection would not produce an event record.                                  | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555            |
|  | Resolved an issue where state changes in a Recording Group custom channel using a tag type of SPS would not be detected when a System Time UTC Offset was configured. | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555            |
|  | Resolved an issue where tag time stamps on EtherCAT IO modules could be 1 hour ahead when the RTAC was configured with daylight-saving time disabled.                 | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555            |
|  | Resolved an issue where the RTAC could issue an incorrect daylight-saving time offset in an IRIG-B output signal.   | All   |
|  | Resolved an issue where the RTAC could produce unexpected DNS queries if DNS nameservers were configured.   | 3350,<br>3555   |
|  | Resolved an issue where a CA certificate with a duration longer than 20 years could not be loaded.  | All   |
|  | Resolved an issue in the SNMP client (manager) and SFTP server where the device would not re-enable following a toggle of the EN function block input.                | 3555  |
|  | Resolved an issue where the IEC 61850 MMS client could not enable reports on some MMS servers.  | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555            |
|  | Resolved an issue where the Comm Monitor could crash if the packet dissector was used with an SFTP server present in the project.                                     | 3350,<br>3555   |
|  | Resolved an issue in the System Time Controller where the Force_System_Time_Source POU input pin did not accept a value of 7 for PTP.                                 | All   |
|  | Resolved an issue with the web interface SOE viewer where filtering display criteria (Priority, Category, etc.) using accented characters did not work as expected.   | All   |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b>                     |
|--|--|--|
|  | Resolved an issue in the SNMP server (agent) where an incorrect enterprise ID was present in the sysObjectID OID.  | All  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R153-V3-Z000151-D20250723<br>SEL-3530-4-R153-V3-Z000151-D20250723<br>SEL-2241-R153-V3-Z000151-D20250723<br>SEL-3505-R153-V3-Z000151-D20250723<br>SEL-3505-3-R153-V3-Z000151-D20250723<br>SEL-3555-R153-V3-Z000151-D20250723<br>SEL-3350-R153-V3-Z000151-D20250723 | Includes all the functions of firmware version R153-V2 with the following additions:<br><br>[Cybersecurity] Resolved an issue in the OPC UA server where a specially crafted client message could trigger a restart of the logic engine.<br><br>[Cybersecurity Enhancement] Resolved an issue where performing a reset to factory-default settings did not clear File Manager or Project Upload content. | 3350,<br>3555                              |
| ACSELERATOR RTAC Software Version:<br>1.37.xxx   | Resolved an issue in the Modbus client where the device would not re-enable if previously disabled via the EN POU pin.   | All  |
| Manual Date Code: 20250730   | Resolved an issue in Continuous Recording Groups where incorrect units were assigned to PMU channels in the generated COMTRADE CFG file.   | 3350,<br>3555                              |
|  | Resolved an issue in Recording Groups COMTRADE records where Digital Output change time stamps from SEL-2245-5 modules appeared 1 ms later than the actual transition time.  | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Resolved an issue where the SFTP server could restart if used on an SEL-3555 with a RAID configuration.  | 3555                                       |
|  | Resolved an issue where the SFTP server would reject subsequent connections after an SSH key was added or deleted with the web interface, or after many previous connections with file upload or download activity.  | All  |
|  | Resolved an issue where an RTAC-provided web proxy would fail to allow proper interaction with the configured destination web page.  | All  |
|  | Resolved an issue where a Continuous Recording Group configured with a large number of PMUs sourced from EtherCAT modules could cause a logic engine restart.  | 3350,<br>3555                              |
|  | Resolved an issue in the IEC 61850 MMS client where COMTRADE retrieval could fail to retrieve the full set of record components (CFG, DAT, HDR) or could continuously re-collect a record if File Re-collection was enabled.   | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Resolved an issue where the SEL-3350 would not generate an SOE record for a system watchdog reset.   | 3350                                       |
|  | Resolved an issue where network latency could cause a TCP connection to be prematurely terminated.   | All  |
|  | Resolved an issue where an SEL-3560S was unable to accept IRIG-B input on the COM1 serial port.  | 3560S                                      |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>   | <b>Affected Models</b>                     |
|--|---|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R153-V2-Z000125-D20250324<br>SEL-3530-4-R153-V2-Z000125-D20250324<br>SEL-2241-R153-V2-Z000125-D20250324<br>SEL-3505-R153-V2-Z000125-D20250324<br>SEL-3505-3-R153-V2-Z000125-D20250324<br>SEL-3555-R153-V2-Z000125-D20250324<br>SEL-3350-R153-V2-Z000125-D20250324 | Includes all the functions of firmware version R153-V1 with the following additions:<br><br>[Cybersecurity Enhancement] Updated the Restricted BIOS to version 12.8.49152.165 in the SEL-3555-2/SEL-3560-2 and to version 11.5.49152.280 in the SEL-3350. |  |
| ACSELERATOR RTAC Software Version:<br>1.37.xxx   | Resolved an issue where an SEL-2245-42 AC Protection module configured with a Delta PT Connection would not produce an event record.  | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555 |
| Manual Date Code: 20250326   | Resolved an issue where state changes in a Recording Group custom channel using a tag type of SPS would not be detected when a System Time UTC Offset was configured.   | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Resolved an issue where tag time stamps on EtherCAT IO modules could be 1 hour ahead when the RTAC was configured with daylight-saving time disabled.   | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Resolved an issue where a CA certificate with a duration longer than 20 years could not be loaded.  | All  |
|  | Resolved an issue in the SNMP client (manager) and SFTP server where the device would not re-enable following a toggle of the EN function block input.  | 3555                                       |
|  | Resolved an issue where the IEC 61850 MMS client could not enable reports on some MMS servers.  | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Resolved an issue where the Comm Monitor could crash if the packet dissector was used with an SFTP server present in the project.   | 3350,<br>3555                              |
|  | Resolved an issue in the System Time Controller where the Force_System_Time_Source POU input pin did not accept a value of 7 for PTP.   | All  |
|  | Resolved an issue with the web interface SOE viewer where filtering display criteria (Priority, Category, etc.) using accented characters did not work as expected.   | All  |
|  | Resolved an issue in the SNMP server (agent) where an incorrect enterprise ID was present in the sysObjectID OID.   | All  |
| Firmware Identification (FID) Numbers:<br>SEL-2241-R153-V1-Z000081-D20241014   | Includes all the functions of firmware version R153-V0 with the following addition:   |  |
| ACSELERATOR RTAC Software Version:<br>1.37.xxx   | Resolved an internal manufacturing issue introduced in firmware version R153-V0 that affected SEL-2241 models.  | 2241                                       |
| Manual Date Code: 20241023   |   |  |

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models                            |
|--|--|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R153-V0-Z000058-D20240918<br>SEL-3530-4-R153-V0-Z000058-D20240918<br>SEL-2241-R153-V0-Z000058-D20240918<br>SEL-3505-R153-V0-Z000058-D20240918<br>SEL-3505-3-R153-V0-Z000058-D20240918<br>SEL-3555-R153-V0-Z000058-D20240918<br>SEL-3350-R153-V0-Z000058-D20240918 | [Cybersecurity Enhancement] Added the Security and Auth web APIs to manage the X.509 certificates, CA certificates, and LDAP settings.   | All  |
|  | [Cybersecurity Enhancement] Enhanced the Network web API to manage the Hosts settings.   | All  |
|  | [Cybersecurity Enhancement] Enhanced the OPC UA server and client protocols to support the Sign and Encrypt security mode.   | 3350,<br>3555,<br>3560                     |
| ACCELERATOR RTAC Software Version:<br>1.37.xxx   | [Cybersecurity Enhancement] Enhanced the IIoT library packages to support the HTTPS and MQTT TLS-based connections.  | All  |
| Manual Date Code: 20240918   | [Cybersecurity Enhancement] Resolved an issue where sending a Licensed Feature upgrade package to the RTAC caused the web interface to display an incorrect firmware hash value.   | All  |
|  | Updated the RTAC HMI Runtime Binary file to version 3.8.0.58.  | All  |
|  | Added the Network Event Capture tool to allow the automatic creation of trigger-based Ethernet communication monitor captures with configurable pre- and post-trigger durations.   | 3350,<br>3555,<br>3560                     |
|  | Added support for licensed features to allow temporary demonstration periods for as many as 90 days for licensed protocols and libraries.  | All  |
|  | Enhanced the collection for COMTRADE events (in the SEL Protocol, IEC 61850 MMS, etc.) to retrieve the event time stamp from the CFG file.   | All  |
|  | Enhanced the SEL-3350 and SEL-3555 to support 100 virtual tag lists in a project.  | 3350,<br>3555,<br>3560                     |
|  | Enhanced the SEL-3350 to support as many as 50,000 tags in a project.  | 3350                                       |
|  | Enhanced the Modbus server to support shared tag maps.   | All  |
|  | Enhanced the Modbus "Server - Ethernet" device connection type to support a <b>Server Modbus Address</b> parameter. An address of 255 allows for previous "reply to all" behavior and addresses of 1–247 allow for a multi-drop collection of unique Modbus TCP servers on a single TCP channel. | All  |
|  | Enhanced the SEL Protocol client so that collected CEV event records can be converted into equivalent COMTRADE records.  | All  |
|  | Enhanced engineering sessions via an SEL Protocol server to automatically issue configured Level 1 or Level 2 passwords to the defined child IEDs of an SEL Protocol client communication processor, such as an SEL-2032, for authorized users.  | All  |
|  | Enhanced the Axion Protection CT/PT and AC Metering EtherCAT modules to provide IEEE C37.118 PMU streaming rates of 120 Hz and 100 Hz.   | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Enhanced the OPC UA client protocol to add an advanced setting for an optional server endpoint path.   | 3350,<br>3555,<br>3560                     |
|  | Enhanced the Axion touchscreen capabilities to support an alarm summary screen and customized annunciator screens.   | 2241                                       |
|  | Enhanced the IP Alias support to allow use with interfaces that are bridged, bonded, or configured in a PRP pair.  | All  |

| <b>Firmware, Software, and Manual Versions</b> | <b>Summary of Revisions</b>  | <b>Affected Models</b>                              |
|--|--|---|
|  | Enhanced the IP Alias support to issue a gratuitous ARP when adding or removing an IP alias.   | All   |
|  | Enhanced the DNP client to expose configurable event buffers so that more events can be received simultaneously.   | All   |
|  | Increased the EtherCAT network bandwidth on the SEL-3350 to support additional modules and tags.   | 3350  |
|  | Resolved an issue where the COMTRADE event collection files did not contain accurate time and date file attributes within the contents of the ZIP file.  | All   |
|  | Enhanced the Recording Groups to allow Custom Channels with an SPS data type.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555          |
|  | Enhanced the Recording Groups so that they can be used without a Protection CT/PT module.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555          |
|  | Modified the IEC 60870-5-101 and IEC 60870-5-104 client and server behavior to address minor compatibility issues.   | All   |
|  | Resolved an issue where connecting new Axion nodes to unused Power Coupler ports could cause unpredictable behavior in the EtherCAT I/O network.   | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555          |
|  | Resolved an issue where the Axion touchscreen was not able to load a custom screen containing many objects.  | 2241  |
|  | Resolved an issue where the RADIUS PAP Authentication would not succeed.   | All   |
|  | Removed the eDNA protocol. Existing projects upgrading to firmware version R153 will have all eDNA protocol devices removed.   | 3555,<br>3560                                       |
|  | Removed support for the SEL-3532 CompactFlash conversion kit. Firmware version R152 and associated point releases are the last supported series of firmware for the SEL-1102, SEL-3332, SEL-3351, and SEL-3354 hardware. | 3532  |
|  | Resolved an issue where the active X.509 certificate was not removed during the factory-default reset process.   | All   |
|  | Resolved an issue introduced in firmware version R150-V0 that caused the IEC 61850 MMS client not to preserve and restore the last known EntryID values from the server reports during a restart after a power cycle.    | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555,<br>3560 |
|  | Resolved an issue that caused the Ethernet interfaces to be unresponsive after a settings send or an Ethernet settings change on the web interface.  | All   |
|  | Resolved an issue introduced in firmware version R152-V0 where the web interface could not be logged into when a user account configuration had no user assigned the default Administrator role.                         | All   |

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models                            |
|--|--|--|
|  | Resolved an issue in the web interface where the PING IP address on the Network Utilities did not automatically populate.  | All  |
|  | Resolved an issue introduced in firmware version R150-V0 where a project containing a large embedded IEC 61850 SCD configuration did not send to an RTAC.  | All  |
|  | Resolved an issue in IEC 61850 where an SCD configuration containing MMS clients configured as RTAC client inputs with a total aggregate number of tags greater than 65,535 caused the IEC 61850 MMS client devices to not enable. | 3555,<br>3560                              |
|  | Resolved an issue introduced in firmware version R150-V0 where the daylight-saving time offset was not properly applied to the tag time stamps.  | All  |
|  | Resolved an issue where syslog messages were issued with an incorrect time stamp.  | All  |
|  | Resolved an issue where an incorrect password was automatically issued to a child IED when using engineering access via the SEL Protocol server.   | All  |
|  | Resolved an issue where the <b>ENABLED</b> LED did not illuminate following a factory-default reset via the hardware jumper.   | All  |
| Firmware Identification (FID) Numbers:<br><br>SEL-3530-R152-V4-Z000359-D20250723<br>SEL-3530-4-R152-V4-Z000359-D20250723<br>SEL-2241-R152-V4-Z000359-D20250723<br>SEL-3505-R152-V4-Z000359-D20250723<br>SEL-3505-3-R152-V4-Z000359-D20250723<br>SEL-3532-N-R152-V4-Z000359-D20250723<br>SEL-3555-R152-V4-Z000359-D20250723<br>SEL-3350-R152-V4-Z000359-D20250723 | Includes all the functions of firmware version R152-V3 with the following additions:   |  |
|  | [Cybersecurity] Resolved an issue in the OPC UA server where a specially crafted client message could trigger a restart of the logic engine.   | 3350,<br>3555                              |
|  | [Cybersecurity Enhancement] Resolved an issue where performing a reset to factory-default settings did not clear File Manager or Project Upload content.   | All  |
| ACCELERATOR RTAC Software Version:<br><br>1.36.xxx   | Resolved an issue in the Modbus client where the device would not re-enable if previously disabled via the EN POU pin.   | All  |
| Manual Date Code: 20250730   | Resolved an issue in Continuous Recording Groups where incorrect units were assigned to PMU channels in the generated COMTRADE CFG file.   | 3350,<br>3555                              |
|  | Resolved an issue in Recording Groups COMTRADE records where Digital Output change time stamps from SEL-2245-5 modules appeared 1 ms later than the actual transition time.  | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Resolved an issue where the SFTP server could restart if used on an SEL-3555 with a RAID configuration.  | 3555                                       |
|  | Resolved an issue where the SFTP server would reject subsequent connections after an SSH key was added or deleted with the web interface, or after many previous connections with file upload or download activity.                | All  |
|  | Resolved an issue where an RTAC-provided web proxy would fail to allow proper interaction with the configured destination web page.  | All  |
|  | Resolved an issue where a Continuous Recording Group configured with a large number of PMUs sourced from EtherCAT modules could cause a logic engine restart.  | 3350,<br>3555                              |
|  | Resolved an issue in the IEC 61850 MMS client where COMTRADE retrieval could fail to retrieve the full set of record components (CFG, DAT, HDR) or could continuously re-collect a record if File Re-collection was enabled.       | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555 |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>   | <b>Affected Models</b>                     |
|--|---|--|
|  | Resolved an issue where the SEL-3350 would not generate an SOE record for a system watchdog reset.  | 3350                                       |
|  | Resolved an issue where network latency could cause a TCP connection to be prematurely terminated.  | All  |
|  | Resolved an issue where an SEL-3560S was unable to accept IRIG-B input on the COM1 serial port.   | 3560S                                      |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R152-V3-Z000334-D20250324<br>SEL-3530-4-R152-V3-Z000334-D20250324<br>SEL-2241-R152-V3-Z000334-D20250324<br>SEL-3505-R152-V3-Z000334-D20250324<br>SEL-3505-3-R152-V3-Z000334-D20250324<br>SEL-3532-N-R152-V3-Z000334-D20250324<br>SEL-3555-R152-V3-Z000334-D20250324<br>SEL-3350-R152-V3-Z000334-D20250324 | Includes all the functions of firmware version R152-V2 with the following additions:  |  |
|  | [Cybersecurity Enhancement] Updated the Restricted BIOS to version 12.8.49152.165 in the SEL-3555-2/SEL-3560-2 and to version 11.5.49152.280 in the SEL-3350.       | 3350,<br>3555                              |
| ACCELERATOR RTAC Software Version:<br>1.36.xxx   | Resolved an issue where an SEL-2245-42 AC Protection module configured with a Delta PT Connection would not produce an event record.                                | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555 |
| Manual Date Code: 20250326   | Resolved an issue where tag time stamps on EtherCAT IO modules could be 1 hour ahead when the RTAC was configured with daylight-saving time disabled.               | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Resolved an issue in the SNMP client (manager) and SFTP server where the device would not re-enable following a toggle of the EN function block input.              | 3555                                       |
|  | Resolved an issue where the IEC 61850 MMS client could not enable reports on some MMS servers.  | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555 |
|  | Resolved an issue where the Comm Monitor could crash if the packet dissector was used with an SFTP server present in the project.                                   | 3350,<br>3555                              |
|  | Resolved an issue in the System Time Controller where the Force_System_Time_Source POU input pin did not accept a value of 7 for PTP.                               | All  |
|  | Resolved an issue with the web interface SOE viewer where filtering display criteria (Priority, Category, etc.) using accented characters did not work as expected. | All  |
|  | Resolved an issue in the SNMP server (agent) where an incorrect enterprise ID was present in the sysObjectID OID.   | All  |

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models                                     |
|--|--|---|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R152-V2-Z000294-D20240918<br>SEL-3530-4-R152-V2-Z000294-D20240918<br>SEL-2241-R152-V2-Z000294-D20240918<br>SEL-3505-R152-V2-Z000294-D20240918<br>SEL-3505-3-R152-V2-Z000294-D20240918<br>SEL-3532-N-R152-V2-Z000294-D20240918<br>SEL-3555-R152-V2-Z000294-D20240918<br>SEL-3350-R152-V2-Z000294-D20240918 | Includes all the functions of firmware version R152-V1 with the following additions:<br><br>[Cybersecurity Enhancement] Resolved an issue where sending a Licensed Feature upgrade package to the RTAC caused the web interface to display an incorrect firmware hash value. |   |
| ACSELERATOR RTAC Software Version:<br>1.36.xxx   | Resolved an issue where the active X.509 certificate was not removed during the factory-default reset process.   | All   |
| Manual Date Code: 20240918   | Resolved an issue introduced in firmware version R150-V0 that caused the IEC 61850 MMS client not to preserve and restore the last known EntryID values from the server reports during a restart after a power cycle.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555,<br>3560 |
|  | Resolved an issue that caused the Ethernet interfaces to be unresponsive after a settings send or an Ethernet settings change on the web interface.  | All   |
|  | Resolved an issue introduced in firmware version R152-V0 where the web interface could not be logged into when a user account configuration had no user assigned to the default Administrator role.  | All   |
|  | Resolved an issue in the web interface where the PING IP address on the Network Utilities did not automatically populate.  | All   |
|  | Resolved an issue introduced in firmware version R150-V0 where a project containing a large embedded IEC 61850 SCD configuration did not send to an RTAC.  | All   |
|  | Resolved an issue in IEC 61850 where an SCD configuration containing MMS clients configured as RTAC client inputs with a total aggregate number of tags greater than 65,535 caused the IEC 61850 MMS client devices to not enable.   | 3555,<br>3560                                       |
|  | Resolved an issue introduced in firmware version R150-V0 where the daylight-saving time offset was not properly applied to the tag time stamps.  | All   |
|  | Resolved an issue where syslog messages were issued with an incorrect time stamp.  | All   |
|  | Resolved an issue where an incorrect password was automatically issued to a child IED when using engineering access via the SEL Protocol server.   | All   |
|  | Resolved an issue where the <b>ENABLED</b> LED did not illuminate following a factory-default reset via the hardware jumper.   | All   |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R152-V1-Z000234-D20240320<br>SEL-3530-4-R152-V1-Z000234-D20240320<br>SEL-2241-R152-V1-Z000234-D20240320<br>SEL-3505-R152-V1-Z000234-D20240320<br>SEL-3505-3-R152-V1-Z000234-D20240320<br>SEL-3532-N-R152-V1-Z000234-D20240320<br>SEL-3555-R152-V1-Z000234-D20240320<br>SEL-3350-R152-V1-Z000234-D20240320 | Includes all the functions of R152-V0 with the following additions:<br><br>[Cybersecurity Enhancement] Upgraded the Restricted BIOS to version 12.6.49152.98 in the SEL-3555-2 and SEL-3560-2 and to version 11.3.49152.117 in the SEL-3350.                                 | 3350,<br>3555,<br>3560                              |
| ACSELERATOR RTAC Software Version:<br>1.36.xxx   | [Cybersecurity Enhancement] Upgraded the OpenSSL open-source component.  | All   |
| Manual Date Code: 20240320   | Resolved an issue in the OPC UA server where time-stamp and quality metadata from RTAC tags did not pass through to the OPC UA variables.  | 3350,<br>3555,<br>3560                              |
|  | Resolved an issue where requesting Continuous Recording Groups data could take an extended period of time to generate a COMTRADE record.   | 3350,<br>3555,<br>3560                              |

| <b>Firmware, Software, and Manual Versions</b> | <b>Summary of Revisions</b>  | <b>Affected Models</b>                     |
|--|--|--|
|  | Resolved an issue where a Continuous Recording Group would continue to log data from offline EtherCAT modules.   | 3350,<br>3555,<br>3560                     |
|  | Resolved an issue where performing several thousand SFTP client file transfers over time could cause an unavailability of various features on the web interface and web API responses.   | All  |
|  | Resolved an issue where an SEL-3555 with a single SEL-3390E4 in the expansion slots would fail to synchronize to PTP.  | 3555                                       |
|  | Resolved an issue introduced in firmware version R150-V0 that could cause a loss of Ethernet connectivity if interfaces were configured in a bonded failover pair and those interfaces were both used for PTP time synchronization.  | All  |
|  | Resolved an issue where the IEC 61850 MMS server file system returned inaccurate time stamps for COMTRADE event records produced by Axion modules or retrieved using client devices such as SEL Protocol.  | All  |
|  | Resolved an issue where an IEC 61850 MMS client configured for generic file collection would continuously attempt to collect COMTRADE records if those files appeared in one of the recursive file paths configured for collection. Generic file collection now ignores COMTRADE records and those records are only collected using the MMS Comtrade Enable setting. | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Resolved an issue in the IEC MMS server where changes to the stSelD attribute no longer generated buffered or unbuffered reports.  | All  |
|  | Resolved an issue where the SEL client could leak memory during an autoconfiguration.  | All  |
|  | Resolved an issue in the IEC 60870-5-101 server where a failover serial port would not use the baud rate assigned in the Failover Baud Rate setting.   | All  |
|  | Resolved an issue in the web interface where the Connected IEDs page would fail to display the RTAC's port configuration and the web API network request would fail if an Ethernet port was bridged with two or more additional interfaces.  | All  |
|  | Resolved an issue where the RTAC's Ethernet interfaces would become unresponsive after a device that uses an active project containing user logic with an Ethernet_Interface_Control function block restarts.  | All  |
|  | Resolved an issue where disabling an unused Ethernet interface would cause other interfaces used in a bridged configuration to also disable.   | All  |
|  | Resolved an issue introduced in firmware version R149-V0 where a user who possesses the HMI Local Write permission was unable to issue commands when logged into the RTAC HMI on the local display.  | 3350,<br>3555,<br>3560                     |
|  | Resolved an issue introduced in firmware version R152-V0 that could cause the status web API call to fail if RAID was enabled.   | 3555                                       |
|  | Resolved an issue introduced in firmware version R152-V0 that could cause COMTRADE records created by recording groups to have incorrectly formatted samples.  | 3530,<br>3530-4,<br>2241                   |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>   | <b>Affected Models</b>                     |
|--|---|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R152-V0-Z000143-D20231107<br>SEL-3530-4-R152-V0-Z000143-D20231107<br>SEL-2241-R152-V0-Z000143-D20231107<br>SEL-3505-R152-V0-Z000143-D20231107<br>SEL-3505-3-R152-V0-Z000143-D20231107<br>SEL-3532-N-R152-V0-Z000143-D20231107<br>SEL-3555-R152-V0-Z000143-D20231107<br>SEL-3350-R152-V0-Z000143-D20231107 | [Cybersecurity Enhancement] Added the ability to generate an X.509 certificate with a 4096-bit RSA key length.  | All  |
|  | [Cybersecurity Enhancement] Enhanced the web interface dashboard with the addition of a Firmware Hash value representing the SHA-256 hash value of the last firmware upgrade file sent to the RTAC. When upgrading <i>from</i> prior firmware versions <i>to</i> R152-V0, you can enable this feature by sending the UPG file twice. The new Firmware Hash value is also available via the id web API call. | All  |
| ACSELERATOR RTAC Software Version:<br>1.36.xxx   | Added Continuous Recording Groups.  | 3350,<br>3555,<br>3560                     |
| Manual Date Code: 20231109   | Added a Trace Route tool to the Network Utilities page in the web interface.  | All  |
|  | Updated RTAC HMI Runtime Binary file to version 3.5.0.61.   | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Enhanced firmware upgrade functionality to allow use of remote (LDAP, RADIUS) users to perform the upgrade using the web interface or ACSELERATOR RTAC.   | All  |
|  | Enhanced the local display interface of SEL-3350, SEL-3555, and SEL-3560 hardware to support different default pages on multiple monitors.  | 3350,<br>3555,<br>3560                     |
|  | Enhanced the IEEE C37.118 client to provide a configurable Phasor Type (e.g., Voltage) and Phasor Component (e.g., A, B, C, Negative).  | All  |
|  | Enhanced the IEEE C37.118 server to map Phasor Types and Phasor Components into a CFG3 frame when reporting a PMU configuration sourced from a C37.118 client PMU in pass-through mode, a C37.118 server PMU tag list, or an SEL-2245-42 AC Protection module.  | All  |
|  | Enhanced the web interface Syslog configuration to allow use of a custom UDP destination port.  | All  |
|  | Enhanced the SEL-3350 to allow a mix of as many as 200 Modbus client and server devices per project.  | 3350                                       |
|  | Enhanced the SEL-3350 to allow as many as 32 frequency groups on the EtherCAT I/O Network.  | 3350                                       |
|  | Enhanced the web interface to facilitate updating the RTAC HMI Runtime Binary without the use of Diagram Builder software.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Enhanced the web interface to upload, list, and delete RTAC HMI projects without the use of Diagram Builder software. These features are also available in a new hmi web API call.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Enhanced the network web API call to report Syslog configuration details and network statistics for each interface.   | All  |
|  | Enhanced the status web API call to include details of system boot time, system uptime, Power-On Self-Test (POST) results, and power supply statuses.   | All  |

| <b>Firmware, Software, and Manual Versions</b> | <b>Summary of Revisions</b>   | <b>Affected Models</b>                     |
|--|---|--|
|  | Added the firmware web API call to facilitate staged RTAC firmware upgrades.  | All  |
|  | Enhanced the project active connections web API call to add the device GUID and virtual port for supported protocols.   | All  |
|  | Enhanced the web interface Configuration report and CONFIGURATION directory to add an "all" option.   | All  |
|  | Enhanced the DNP server to optionally allow Read requests between Control Select and Operate requests.  | All  |
|  | Enhanced the DNP server by adding a pair of settings to control Secure Authentication Aggressive Mode challenge behavior with standard and unsolicited responses.   | All  |
|  | Enhanced the web interface online packet dissector to include a separate window pane to display the raw hex and ASCII data associated with each packet.   | 3350,<br>3555,<br>3560                     |
|  | Enhanced the speed of Network Audit scans.  | 3350,<br>3555,<br>3560                     |
|  | Enhanced Recording Groups to allow Custom Channels with a data type of vector_t.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Enhanced Recording Groups to allow as many as 64 Calculations.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Enhanced the SEL-2245-2 (16 AI), SEL-2245-4 (CtPt), SEL-2245-22 (4 AI-ER) and SEL-2245-42 (Protection CT/PT) Axion EtherCAT module configuration to allow customized channel names in COMTRADE event records. | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Enhanced the speed of COMTRADE record generation when using SEL-2245-42 AC Protection modules.  | 3350,<br>3555                              |
|  | Enhanced the IEC 60870-5-101/104 server to support as many as 256 sector maps per server.   | All  |
|  | Enhanced the Axion touchscreen to support an SOE display with a Message-Only field.   | 2241                                       |
|  | Enhanced the Axion touchscreen to support a global local/remote input to block touchscreen controls when in remote control mode.  | 2241                                       |
|  | Resolved an issue in the DNP server where Secure Authentication Session Statistics Objects 121 and 122 were reported with invalid quality and a fixed Variation of 1.   | All  |
|  | Resolved an issue in the DNP server where Secure Authentication Aggressive Mode and Confirm as a Critical Function did not perform the expected messaging sequence when communicating to a client.            | All  |
|  | Resolved an issue where an RTAC could fail to synchronize to a Precision Time Protocol (PTP) source.  | All  |

| <b>Firmware, Software, and Manual Versions</b> | <b>Summary of Revisions</b>  | <b>Affected Models</b>                       |
|--|--|--|
|  | Resolved an issue introduced in firmware version R150-V0 where certain NTP clients could no longer synchronize to the RTAC NTP server.   | All  |
|  | Resolved an issue introduced in firmware version R150-V0 where, if the RTAC is connected to an IED using an SEL serial-to-fiber-optic transceiver, communications could fail to resume properly after an RTAC restart. | All  |
|  | Resolved an issue that could cause an SEL-3555 or SEL-3560 with 64 GB of RAM to experience a delayed startup.  | 3555,<br>3560                                |
|  | Resolved a regression that could cause an RTAC to reboot or fail over to the default project when an Ethernet network loop is present.   | 3530,<br>3530-4,<br>3505,<br>3505-3,<br>2241 |
|  | Resolved an issue introduced in firmware version R150-V0 where the communications inactivity time-out in the IEC 61850 MMS server was incorrectly enforced.  | All  |
|  | Resolved an issue in the IEC 61850 MMS client where the client could fail to enable if it contained a dataset with an FCDA referencing multiple data attributes within the same data object.                           | All  |
|  | Resolved an issue that could cause TCP/IP-based client protocols such as DNP and Modbus to fail to resume communications after intermittent network unavailability.  | All  |
|  | Resolved an issue in the IEC 60870-5-101/104 client where, if Custom Messages were configured, an unexpected common address could be assigned to sectors on the client.  | All  |
|  | Resolved an issue in the C37.118 server where being configured for UDP_S transport could cause the failover project to activate on restart.  | All  |
|  | Resolved an issue in the C37.118 client where disabling a non-present Phasor, Analog, or Digital channel could result in tag resolution errors and incorrect data being issued from the PMU to a C37.118 server.       | All  |
|  | Resolved an issue where Ethernet Tunneled Serial server protocols configured for SSL/TLS tunneling mode would fail to connect if the Verify SSL Certificate option was enabled.  | All  |
|  | Resolved an issue where an SEL server configured for SSH tunneling failed to accept new connections.   | All  |
|  | Resolved an issue in GOOSE Transmit instances where simultaneous changes to status and quality were reported across multiple transmitted messages.   | All  |
|  | Resolved an issue where a Recording Group containing an SEL-2245-42 (Protection CT/PT) module with all channels disabled would leak memory during COMTRADE record generation.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555   |
|  | Resolved an issue where the Axion touchscreen failed to load the SOE records screen.   | 2241   |
|  | Resolved an issue where the ID web API call failed to respond.   | 3350   |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>   | <b>Affected Models</b>                              |
|--|---|---|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R151-V7-Z000309-D20250324<br>SEL-3530-4-R151-V7-Z000309-D20250324<br>SEL-2241-R151-V7-Z000309-D20250324<br>SEL-3505-R151-V7-Z000309-D20250324<br>SEL-3505-3-R151-V7-Z000309-D20250324<br>SEL-3532-N-R151-V7-Z000309-D20250324<br>SEL-3555-R151-V7-Z000309-D20250324<br>SEL-3350-R151-V7-Z000309-D20250324 | Includes all the functions of firmware version R151-V6 with the following additions:<br><br>[Cybersecurity Enhancement] Updated the Restricted BIOS to version 12.8.49152.165 in the SEL-3555-2/SEL-3560-2 and to version 11.5.49152.280 in the SEL-3350. | 3350,<br>3555                                       |
| ACSELERATOR RTAC Software Version:<br>1.35.xxx   | Resolved an issue where tag time stamps on EtherCAT IO modules could be 1 hour ahead when the RTAC was configured with daylight-saving time disabled.   | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555          |
| Manual Date Code: 20250326   | Resolved an issue in the SNMP client (manager) and SFTP server where the device would not re-enable following a toggle of the EN function block input.  | 3555  |
|  | Resolved an issue where the IEC 61850 MMS client could not enable reports on some MMS servers.  | 2241,<br>3350,<br>3530,<br>3530-4,<br>3555          |
|  | Resolved an issue where the Comm Monitor could crash if the packet dissector was used with an SFTP server present in the project.   | 3350,<br>3555                                       |
|  | Resolved an issue in the System Time Controller where the Force_System_Time_Source POU input pin did not accept a value of 7 for PTP.   | All   |
|  | Resolved an issue with the web interface SOE viewer where filtering display criteria (Priority, Category, etc.) using accented characters did not work as expected.   | All   |
|  | Resolved an issue in the SNMP server (agent) where an incorrect enterprise ID was present in the sysObjectID OID.   | All   |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R151-V6-Z000267-D20240918<br>SEL-3530-4-R151-V6-Z000267-D20240918<br>SEL-2241-R151-V6-Z000267-D20240918<br>SEL-3505-R151-V6-Z000267-D20240918<br>SEL-3505-3-R151-V6-Z000267-D20240918<br>SEL-3532-N-R151-V6-Z000267-D20240918<br>SEL-3555-R151-V6-Z000267-D20240918<br>SEL-3350-R151-V6-Z000267-D20240918 | Includes all the functions of firmware version R151-V5 with the following additions:<br><br>Resolved an issue where the active X.509 certificate was not removed during the factory-default reset process.  | All   |
| ACSELERATOR RTAC Software Version:<br>1.35.xxx   | Resolved an issue introduced in firmware version R150-V0 that caused the IEC 61850 MMS client not to preserve and restore the last known EntryID values from the server reports during a restart after a power cycle.                                     | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555,<br>3560 |
| Manual Date Code: 20240918   | Resolved an issue that caused the Ethernet interfaces to be unresponsive after a settings send or an Ethernet settings change on the web interface.   | All   |
|  | Resolved an issue in the web interface where the PING IP address on the Network Utilities did not automatically populate.   | All   |
|  | Resolved an issue introduced in firmware version R150-V0 where a project containing a large embedded IEC 61850 SCD configuration did not send to an RTAC.   | All   |
|  | Resolved an issue in IEC 61850 where an SCD configuration containing MMS clients configured as RTAC client inputs with a total aggregate number of tags greater than 65,535 caused the IEC 61850 MMS client devices to not enable.                        | 3555,<br>3560                                       |

| Firmware, Software, and Manual Versions  | Summary of Revisions  | Affected Models  |
|--|---|--|
|  | Resolved an issue introduced in firmware version R150-V0 where the daylight-saving time offset was not properly applied to the tag time stamps.   | All  |
|  | Resolved an issue where syslog messages were issued with an incorrect time stamp.   | All  |
|  | Resolved an issue where an incorrect password was automatically issued to a child IED when using engineering access via the SEL Protocol server.  | All  |
|  | Resolved an issue where the <b>ENABLED</b> LED did not illuminate following a factory-default reset via the hardware jumper.  | All  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R151-V5-Z000220-D20240320<br>SEL-3530-4-R151-V5-Z000220-D20240320<br>SEL-2241-R151-V5-Z000220-D20240320<br>SEL-3505-R151-V5-Z000220-D20240320<br>SEL-3505-3-R151-V5-Z000220-D20240320<br>SEL-3532-N-R151-V5-Z000220-D20240320<br>SEL-3555-R151-V5-Z000220-D20240320<br>SEL-3350-R151-V5-Z000220-D20240320<br><br>ACSELERATOR RTAC Software Version:<br>1.35.xxx<br><br>Manual Date Code: 20240320 | Includes all the functions of R151-V4 with the following additions:<br><br>[Cybersecurity Enhancement] Upgraded the Restricted BIOS to version 12.6.49152.98 in the SEL-3555-2 and SEL-3560-2 and to version 11.3.49152.117 in the SEL-3350.<br><br>[Cybersecurity Enhancement] Upgraded the OpenSSL open-source component.<br><br>Resolved an issue in the OPC UA server where time-stamp and quality metadata from RTAC tags did not pass through to the OPC UA variables.<br><br>Resolved an issue where performing several thousand SFTP client file transfers over time could cause an unavailability of various features on the web interface and web API responses.<br><br>Resolved an issue where an SEL-3555 with a single SEL-3390E4 in the expansion slots would fail to synchronize to PTP.<br><br>Resolved an issue introduced in firmware version R150-V0 that could cause a loss of Ethernet connectivity if interfaces were configured in a bonded failover pair and those interfaces were both used for PTP time synchronization.<br><br>Resolved an issue where the IEC 61850 MMS server file system returned inaccurate time stamps for COMTRADE event records produced by Axion modules or retrieved using client devices such as SEL Protocol.<br><br>Resolved an issue where an IEC 61850 MMS client configured for generic file collection would continuously attempt to collect COMTRADE records if those files appeared in one of the recursive file paths configured for collection. Generic file collection now ignores COMTRADE records and those records are only collected using the MMS Comtrade Enable setting.<br><br>Resolved an issue in the IEC MMS server where changes to the stSel0 attribute no longer generated buffered or unbuffered reports.<br><br>Resolved an issue where the SEL client could leak memory during an autoconfiguration.<br><br>Resolved an issue in the IEC 60870-5-101 server where a failover serial port would not use the baud rate assigned in the Failover Baud Rate setting.<br><br>Resolved an issue in the web interface where the Connected IEDs page would fail to display the RTAC's port configuration and the web API network request would fail if an Ethernet port was bridged with two or more additional interfaces.<br><br>Resolved an issue where the RTAC's Ethernet interfaces would become unresponsive after a device that uses an active project containing user logic with an Ethernet_Interface_Control function block restarts. | 3350,<br>3555,<br>3560<br><br>All<br><br>3350,<br>3555,<br>3560<br><br>All<br><br>3350,<br>3555,<br>3560<br><br>All<br><br>3555<br><br>All<br><br>All<br><br>3350,<br>3530,<br>3530-4,<br>2241,<br>3555<br><br>All<br><br>All<br><br>All<br><br>All<br><br>All<br><br>All<br><br>All |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b>                       |
|--|--|--|
|  | Resolved an issue where disabling an unused Ethernet interface would cause other interfaces used in a bridged configuration to also disable.   | All  |
|  | Resolved an issue introduced in firmware version R149-V0 where a user who possesses the HMI Local Write permission was unable to issue commands when logged into the RTAC HMI on the local display.                    | 3350,<br>3555,<br>3560                       |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R151-V4-Z000183-D20231107<br>SEL-3530-4-R151-V4-Z000183-D20231107<br>SEL-2241-R151-V4-Z000183-D20231107<br>SEL-3505-R151-V4-Z000183-D20231107<br>SEL-3505-3-R151-V4-Z000183-D20231107<br>SEL-3532-N-R151-V4-Z000183-D20231107<br>SEL-3555-R151-V4-Z000183-D20231107<br>SEL-3350-R151-V4-Z000183-D20231107 | Includes all the functions of R151-V3 with the following additions:  |  |
|  | Resolved an issue where an RTAC could fail to synchronize to a Precision Time Protocol (PTP) source.   | All  |
|  | Resolved an issue introduced in firmware version R150-V0 where certain NTP clients could no longer synchronize to the RTAC NTP server.   | All  |
|  | Resolved an issue introduced in firmware version R150-V0 where, if the RTAC is connected to an IED using an SEL serial-to-fiber-optic transceiver, communications could fail to resume properly after an RTAC restart. | All  |
| ACSELERATOR RTAC Software Version:<br>1.35.xxx   | Resolved an issue that could cause an SEL-3555 or SEL-3560 with 64 GB of RAM to experience a delayed startup.  | 3555,<br>3560                                |
| Manual Date Code: 20231109   | Resolved a regression that could cause an RTAC to reboot or fail over to the default project when an Ethernet network loop is present.   | 3530,<br>3530-4,<br>3505,<br>3505-3,<br>2241 |
|  | Resolved an issue introduced in firmware version R150-V0 where the communications inactivity time-out in the IEC 61850 MMS server was incorrectly enforced.  | All  |
|  | Resolved an issue in the IEC 61850 MMS client where the client could fail to enable if it contained a dataset with an FCDA referencing multiple data attributes within the same data object.                           | All  |
|  | Resolved an issue that could cause TCP/IP-based client protocols such as DNP and Modbus to fail to resume communications after intermittent network unavailability.  | All  |
|  | Resolved an issue in the IEC 60870-5-101/104 client where, if Custom Messages were configured, an unexpected common address could be assigned to sectors on the client.  | All  |
|  | Resolved an issue in the C37.118 server where being configured for UDP_S transport could cause the failover project to activate on restart.  | All  |
|  | Resolved an issue in the C37.118 client where disabling a non-present Phasor, Analog, or Digital channel could result in tag resolution errors and incorrect data being issued from the PMU to a C37.118 server.       | All  |
|  | Resolved an issue where Ethernet Tunneled Serial server protocols configured for SSL/TLS tunneling mode would fail to connect if the Verify SSL Certificate option was enabled.  | All  |
|  | Resolved an issue where an SEL server configured for SSH tunneling failed to accept new connections.   | All  |
|  | Resolved an issue in GOOSE Transmit instances where simultaneous changes to status and quality were reported across multiple transmitted messages.   | All  |

| Firmware, Software, and Manual Versions   | Summary of Revisions   | Affected Models                            |
|---|--|--|
|   | Resolved an issue where a Recording Group containing an SEL-2245-42 (Protection CT/PT) module with all channels disabled would leak memory during COMTRADE record generation.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|   | Resolved an issue where the Axion touchscreen failed to load SOE records.  | 2241                                       |
|   | Resolved an issue where the id web API call failed to respond.   | 3350                                       |
| <p>Firmware Identification (FID) Numbers:<br/> SEL-3530-R151-V3-Z000148-D20230522<br/> SEL-3530-4-R151-V3-Z000148-D20230522<br/> SEL-2241-R151-V3-Z000148-D20230522<br/> SEL-3505-R151-V3-Z000148-D20230522<br/> SEL-3505-3-R151-V3-Z000148-D20230522<br/> SEL-3532-N-R151-V3-Z000148-D20230522<br/> SEL-3555-R151-V3-Z000148-D20230522<br/> SEL-3350-R151-V3-Z000148-D20230522</p> <p>ACSELERATOR RTAC Software Version:<br/> 1.35.xxx</p> <p>Manual Date Code: 20230522</p> | Includes all the functions of R151-V2 with the following additions:  |  |
|   | [Cybersecurity] Updated the cryptsetup, libarchive and net-snmp components to prevent possible privilege escalation, denial of service attacks, or information leakage from either remote authenticated and authorized users or those with local physical access from performing malicious actions. Contact SEL for additional details and possible mitigations. | All  |
|   | Resolved an issue where the SEL Protocol client could buffer a fast operate request made during a period of non-connectivity and issue the fast operate message when communications resumed.   | All  |
|   | Resolved an issue in the SEL Protocol client where CEV event collection from 400-series relays could fail when using a default <b>Poll ASCII Inactivity Timeout</b> value.   | All  |
|   | Resolved an issue introduced in R150-V0 where the system time displayed in the web interface would display incorrect values.   | All  |
|   | Resolved an issue that could cause the Web Packet Dissector to crash.  | 3350,<br>3555                              |
|   | Resolved an issue in the web interface where the event collection page could fail to display events when a large amount of collected events were present.  | All  |
|   | Resolved an issue introduced in R150-V0 where an SEL-3555 with a single SEL-3390T card receiving a PTP time synchronization input would fail to map time accuracy to SEL-2245-42 AC protection modules.  | 3555                                       |
|   | Resolved an issue where a project containing an EtherCAT IO network could encounter delays in time synchronization at startup.   | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|   | Resolved an issue introduced in R150-V0 where an EtherCAT IO network could encounter spurious network failures.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|   | Resolved an issue where a Recording Group could create a COMTRADE record with missing data.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|   | Resolved an issue where the front Ethernet port on an SEL-3530 could become unresponsive following an upgrade to R150-V0 firmware or later.  | 3530                                       |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b>                     |
|--|--|--|
|  | Resolved an issue introduced in R150-V0 where an MMS Client configured for Generic File Collection could fail to collect files.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Resolved an issue in the MMS client where buffered reports could not be enabled when the server declared support for ResvTms and the server was edition 2.0 compliant.   | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Resolved an issue in the MMS client where communications would not successfully be re-established after a temporary loss of connection to the IED.   | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Resolved an issue in the MMS client where controls would not be issued if the q.test bit was asserted in the operSPC tag structure.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Resolved an issue in the MMS server where RTAC system memory would be consumed over time and eventually cause an out of memory restart.  | All  |
|  | Resolved an issue where activating a new LDAP Certificate Authority root certificate required a device restart.  | All  |
|  | Resolved an issue introduced in R151-V0 where deleting an LDAP host could remove an unexpected host entry if multiple hosts were present.  | All  |
|  | To accommodate a hardware component change in the SEL-2241, SEL-3530, and SEL-3530-4, firmware versions earlier than R151-V3 will not function on units manufactured after July 5, 2023.   | 2241,<br>3530,<br>3530-4                   |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R151-V2-Z000102-D20230314<br>SEL-3530-4-R151-V2-Z000102-D20230314<br>SEL-2241-R151-V2-Z000102-D20230314<br>SEL-3505-R151-V2-Z000102-D20230314<br>SEL-3505-3-R151-V2-Z000102-D20230314<br>SEL-3532-N-R151-V2-Z000102-D20230314<br>SEL-3555-R151-V2-Z000102-D20230314<br>SEL-3350-R151-V2-Z000102-D20230314 | Includes all the functions of R151-V1 with the following additions:<br><br>Added support for 3U SEL-3350 automation controller hardware.<br><br>[Cybersecurity] Resolved an issue where an authenticated attacker with access to the database or file system could gain access to stored LDAP parameters such as the credentials used to authenticate to an LDAP server. | 3350<br><br>All                            |
| ACCELERATOR RTAC Software Version:<br>1.35.xxx   | [Cybersecurity] Updated the OpenSSL component to prevent possible information leakage from the RTAC web interface or a denial of service caused by an authenticated and authorized user uploading a malicious X.509 certificate.   | All  |
| Manual Date Code: 20230321   | Resolved an issue where an IEEE C37.118 server could occasionally skip data frames.  | All  |
|  | Resolved an issue in R150-V0 where the MMS client would not enable a buffered report control block if the ResvTms value returned by the server was -1.   | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Resolved an issue introduced in R151-V0 where the MMS client would issue incorrect values over the wire when writing to ENG data objects.  | 3530,<br>3530-4,<br>2241                   |
|  | Resolved an issue introduced in R150-V1 where SEL-3390S8 serial ports configured for protocols could become unresponsive.  | 3555                                       |

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models                                     |
|--|--|---|
|  | Resolved an issue in the DNP client where use of Dataset Objects could cause the DNP client to crash or become unresponsive.   | All   |
|  | Resolved an issue introduced in R150-V0 where a project could fail to send if it contained an EtherCAT I/O network and there was no link on the Ethernet interface assigned to the EtherCAT network.   | 3530,<br>3530-4,<br>3350,<br>3555                   |
|  | Resolved an issue where attempting to log in to the web interface using a browser or the local display could be excessively delayed following web project activation or factory-default settings restore.  | All   |
|  | Resolved an issue where the Axion Wave Server could fail to map a configured 50 Hz nominal frequency into IEEE C37.118 CFG and DATA frames and would instead show these as 60 Hz.  | 3555  |
|  | Resolved an issue introduced in R151-V0 where the SOE reports <b>Download CSV</b> feature could produce a file with incorrect formatting.  | All   |
|  | Resolved an issue that caused unexpected restarts or lock-ups of the local display.  | 3350  |
| Firmware Identification (FID) Numbers:<br><br>SEL-3530-R151-V1-Z000027-D20221212<br>SEL-3530-4-R151-V1-Z000027-D20221212<br>SEL-2241-R151-V1-Z000027-D20221212<br>SEL-3505-R151-V1-Z000027-D20221212<br>SEL-3505-3-R151-V1-Z000027-D20221212<br>SEL-3532-N-R151-V1-Z000027-D20221212<br>SEL-3555-R151-V1-Z000027-D20221212<br>SEL-3350-R151-V1-Z000027-D20221212 | Includes all the functions of R151-V0 with the following additions:  |   |
|  | [Cybersecurity] Resolved an issue introduced in R149-V0 where a Factory Default Reset would not reset DNS settings, such as the suffix or nameserver addresses.  | All   |
|  | Resolved an issue introduced in R151-V0 that could cause generation of a diagnostic core dump file if packet inspection was attempted on an NGVL device from the Connected IEDs page in the web interface.   | 3350,<br>3555,<br>3560                              |
| ACCELERATOR RTAC Software Version:<br>1.35.xxx   | Resolved an issue introduced in R150-V0 that could cause generation of a diagnostic core dump file upon sending settings or performing a factory reset.  | All   |
| Manual Date Code: 20221212   | Resolved an issue introduced in R149-V0 for SEL Protocol clients where erroneously assigning a device bit label to an analog tag not using the BINARIES device label could cause the SEL client to crash at the end of the autoconfiguration process.        | All   |
|  | Resolved an issue in the DNP client when configured for Ethernet with TCP communications where requests (controls, event polls, integrity polls, etc.) issued while the server is offline would block resumption of polling upon reconnection to the server. | All   |
|  | Resolved an issue introduced in R150-V0 in the MMS client where it would not enable reports or issue polls when setpoint tags were enabled.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555,<br>3560 |
|  | Resolved an issue where the usage policy displayed on the web interface did not maintain formatting of spaces or line breaks.  | All   |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>   | <b>Affected Models</b>                              |
|--|---|---|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R151-V0-Z000013-D20221109<br>SEL-3530-4-R151-V0-Z000013-D20221109<br>SEL-2241-R151-V0-Z000013-D20221109<br>SEL-3505-R151-V0-Z000013-D20221109<br>SEL-3505-3-R151-V0-Z000013-D20221109<br>SEL-3532-N-R151-V0-Z000013-D20221109<br>SEL-3555-R151-V0-Z000013-D20221109<br>SEL-3350-R151-V0-Z000013-D20221109 | [Cybersecurity Enhancement] Added support for a Restricted BIOS with a reduced set of functionality providing an enhanced security posture. Version 12.5.49152.260 is the updated version for the 3555-2/3560-2 and 11.2.49152.139 is the updated version for the 3350.   | 3350,<br>3555,<br>3560                              |
| ACSELERATOR RTAC Software Version:<br>1.35.xxx   | [Cybersecurity Enhancement] Removed support for TLSv1.1 for SSL/TLS connections established by protocols, https connections to the web interface, and connections on TCP port 5432. This change will introduce compatibility issues with older versions of ACSELERATOR RTAC, ACSELERATOR TEAM, and Diagram Builder. These external software packages may require a software update. | All   |
| Manual Date Code: 20221109   | [Cybersecurity Enhancement] Enhanced the Sequence of Events log to store 500,000 records.   | 3350,<br>3555,<br>3560                              |
|  | Updated RTAC HMI Runtime Binary file to version 3.4.3.304.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555          |
|  | Added support for functional naming for MMS client and GOOSE receive.   | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555,<br>3560 |
|  | Added support for LGOS logical nodes for GOOSE receive messages.  | All   |
|  | Enhanced MMS client to support collection of DPL, LPL, and VSS common data classes.   | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555,<br>3560 |
|  | Enhanced MMS client to support the set point functional constraint for common data classes CUG, ENG, ING, ORG, SPG, and TSG.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555,<br>3560 |
|  | Enhanced MMS server to support the set point functional constraint for common data classes ASG, CUG, ENG, ING, ORG, SPG, and TSG.   | All   |
|  | Enhanced MMS server to support LTIM and LTMS logical nodes.   | All   |
|  | Enhanced MMS server to support local-remote functionality.  | All   |
|  | Enhanced GOOSE to support simulation mode.  | All   |
|  | Added OPC UA client protocol.   | 3350,<br>3555,<br>3560                              |
|  | Enhanced the Connected IED tools in the web interface to add an online protocol dissector for debugging serial or Ethernet communications to DNP, Modbus, SEL, IEC 60870-5-101/104, IEC 61850 MMS, GOOSE, L&G 8979, CP2179, and IEEE C37.118 client and server devices.   | 3350,<br>3555,<br>3560                              |

| Firmware, Software, and Manual Versions | Summary of Revisions   | Affected Models                                     |
|---|--|---|
|   | Enhanced the Connected IED page in the web interface to add real-time device connection status information including the disabled/online/offline state.  | All   |
|   | Enhanced the Connections API to add device connection status and message sent and received counters.   | All   |
|   | Added an optional system-wide GUID that is used to identify a particular RTAC in unsolicited NEW EVENT, NEW SOE, and NEW IED CONFIGURATION messages generated by an SEL server.  | All   |
|   | Enhanced the SEL client to track the last ten IED configuration changes and create a report file in the RTAC's file system exposing the time stamp of the detected changes as well as a SHA256 hash of the settings.   | All   |
|   | Enhanced the SEL server to add the CMO SUM and CMO ACK commands to list and acknowledge new IED configuration changes.   | All   |
|   | Enhanced the SEL server to allow the Level 1 and Level 2 passwords to be configurable in the project and available in the password report. Level 1 and Level 2 passwords stored in projects upgraded to R151 will need to be re-assigned.  | All   |
|   | Increased the Recording Group custom channel limit from 128 to 512 quantities.   | All   |
|   | Improved frequency tracking step response performance on voltage input startup for SEL-2245-42 AC protection modules.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555,<br>3560 |
|   | [Cybersecurity] Resolved vulnerabilities in the RTAC web interface where an authenticated attacker could exploit various functions to cause information leakage of user credentials and underlying RTAC operating system behavior.   | All   |
|   | Resolved an issue where upgrading RTAC firmware could result in a scenario where X.509 certificates could no longer be generated, web proxies could not be created, and ACCELERATOR RTAC would not be capable of going online with an RTAC after sending settings, with a resulting error message of "Unable to connect to RTE." | All   |
|   | Resolved an issue where an IEEE C37.118 server may occasionally miss data messages while operating under burden.   | All   |
|   | Resolved an issue in EtherCAT I/O communications where spontaneous topology reconfigurations could occur, causing temporary module status errors.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555,<br>3560 |
|   | Resolved an issue introduced in R150-V0 where floating-point analog values in protocols could temporarily drop to near zero before being restored on the next polling cycle.   | 3530,<br>3530-4,<br>3505,<br>3505-3,<br>2241        |
|   | Resolved an issue introduced in R150-V0 where online monitoring of IEC 61131-3 programs could fail to resolve variable values if they were contained within certain code structures such as FOR loops and would instead only display a value of "???".   | All   |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b>                              |
|--|--|---|
|  | Resolved an issue introduced in R150-V0 where RTACs shipped prior to August 2012 could lose their licensed options during a firmware upgrade.  | 3530,<br>3530-4,<br>2241                            |
|  | Resolved an issue introduced in R150-V0 where a web interface project upload activation would fail during a second project activation attempt, requiring a power cycle to restore functionality.                                   | All   |
|  | Resolved an issue introduced in R150-V0 where a project containing GVLs with the RETAIN attribute could encounter unexpected restarts.   | 3350,<br>3555,<br>3560                              |
|  | To accommodate a hardware component change in the SEL-3505-3, firmware versions prior to R151-V0 will not function on units manufactured after November 11, 2022.  | 3505-3  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R150-V8-Z000303-D20240918<br>SEL-3530-4-R150-V8-Z000303-D20240918<br>SEL-2241-R150-V8-Z000303-D20240918<br>SEL-3505-R150-V8-Z000303-D20240918<br>SEL-3505-3-R150-V8-Z000303-D20240918<br>SEL-3532-N-R150-V8-Z000303-D20240918<br>SEL-3555-R150-V8-Z000303-D20240918<br>SEL-3350-R150-V8-Z000303-D20240918 | Includes all the functions of firmware version R150-V7 with the following additions:   |   |
|  | Resolved an issue where the active X.509 certificate was not removed during the factory-default reset process.   | All   |
|  | Resolved an issue introduced in firmware version R150-V0 that caused the IEC 61850 MMS client not to preserve and restore the last known EntryID values from the server reports during a restart after a power cycle.              | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555,<br>3560 |
| ACCELERATOR RTAC Software Version:<br>1.34.xxx   | Resolved an issue that caused the Ethernet interfaces to be unresponsive after a settings send or an Ethernet settings change on the web interface.  | All   |
| Manual Date Code: 20240918   | Resolved an issue introduced in firmware version R150-V0 where a project containing a large embedded IEC 61850 SCD configuration did not send to an RTAC.  | All   |
|  | Resolved an issue in IEC 61850 where an SCD configuration containing MMS clients configured as RTAC client inputs with a total aggregate number of tags greater than 65,535 caused the IEC 61850 MMS client devices to not enable. | 3555,<br>3560                                       |
|  | Resolved an issue introduced in firmware version R150-V0 where the daylight-saving time offset was not properly applied to the tag time stamps.  | All   |
|  | Resolved an issue where syslog messages were issued with an incorrect time stamp.  | All   |
|  | Resolved an issue where an incorrect password was automatically issued to a child IED when using engineering access via the SEL Protocol server.   | All   |
|  | Resolved an issue where the <b>ENABLED</b> LED did not illuminate following a factory-default reset via the hardware jumper.   | All   |

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models   |
|--|--|---|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R150-V7-Z000261-D20240320<br>SEL-3530-4-R150-V7-Z000261-D20240320<br>SEL-2241-R150-V7-Z000261-D20240320<br>SEL-3505-R150-V7-Z000261-D20240320<br>SEL-3505-3-R150-V7-Z000261-D20240320<br>SEL-3532-N-R150-V7-Z000261-D20240320<br>SEL-3555-R150-V7-Z000261-D20240320<br>SEL-3350-R150-V7-Z000261-D20240320<br>ACCELERATOR RTAC Software Version:<br>1.34.xxx<br>Manual Date Code: 20240320 | Includes all the functions of R150-V6 with the following additions:<br><br>[Cybersecurity Enhancement] Upgraded the Restricted BIOS to version 12.6.49152.98 in the SEL-3555-2 and SEL-3560-2 and to version 11.3.49152.117 in the SEL-3350.<br><br>[Cybersecurity Enhancement] Upgraded the OpenSSL open-source component.<br><br>Resolved an issue in the OPC UA server where time-stamp and quality metadata from RTAC tags did not pass through to the OPC UA variables.<br><br>Resolved an issue where performing several thousand SFTP client file transfers over time could cause an unavailability of various features on the web interface and web API responses.<br><br>Resolved an issue where an SEL-3555 with a single SEL-3390E4 in the expansion slots would fail to synchronize to PTP.<br><br>Resolved an issue introduced in firmware version R150-V0 that could cause a loss of Ethernet connectivity if interfaces were configured in a bonded failover pair and those interfaces were both used for PTP time synchronization.<br><br>Resolved an issue where the IEC 61850 MMS server file system returned inaccurate time stamps for COMTRADE event records produced by Axion modules or retrieved using client devices such as SEL Protocol.<br><br>Resolved an issue where an IEC 61850 MMS client configured for generic file collection would continuously attempt to collect COMTRADE records if those files appeared in one of the recursive file paths configured for collection. Generic file collection now ignores COMTRADE records and those records are only collected using the MMS Comtrade Enable setting.<br><br>Resolved an issue in the IEC MMS server where changes to the stSelD attribute no longer generated buffered or unbuffered reports.<br><br>Resolved an issue where the SEL client could leak memory during an autoconfiguration.<br><br>Resolved an issue in the IEC 60870-5-101 server where a failover serial port would not use the baud rate assigned in the Failover Baud Rate setting.<br><br>Resolved an issue in the web interface where the Connected IEDs page would fail to display the RTAC's port configuration and the web API network request would fail if an Ethernet port was bridged with two or more additional interfaces.<br><br>Resolved an issue where the RTAC's Ethernet interfaces would become unresponsive after a device that uses an active project containing user logic with an Ethernet Interface Control function block restarts.<br><br>Resolved an issue where disabling an unused Ethernet interface would cause other interfaces used in a bridged configuration to also disable.<br><br>Resolved an issue introduced in firmware version R149-V0 where a user who possesses the HMI Local Write permission was unable to issue commands when logged into the RTAC HMI on the local display. | 3350,<br>3555,<br>3560<br><br>All<br><br>3555<br><br>All<br><br>All<br><br>All<br><br>All<br><br>All<br><br>All<br><br>All<br><br>All<br><br>All<br><br>All<br><br>3350,<br>3555,<br>3560 |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b>                       |
|--|--|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R150-V6-Z000222-D20231107<br>SEL-3530-4-R150-V6-Z000222-D20231107<br>SEL-2241-R150-V6-Z000222-D20231107<br>SEL-3505-R150-V6-Z000222-D20231107<br>SEL-3505-3-R150-V6-Z000222-D20231107<br>SEL-3532-N-R150-V6-Z000222-D20231107<br>SEL-3555-R150-V6-Z000222-D20231107<br>SEL-3350-R150-V6-Z000222-D20231107 | Includes all the functions of R150-V5 with the following additions:<br><br>Resolved an issue in the MMS server where RTAC system memory would be consumed over time and eventually cause an out-of-memory restart.<br><br>Resolved an issue where an RTAC could fail to synchronize to a Precision Time Protocol (PTP) source. | All  |
| ACCELERATOR RTAC Software Version:<br>1.34.xxx   | Resolved an issue introduced in firmware version R150-V0 where certain NTP clients could no longer synchronize to the RTAC NTP server.   | All  |
| Manual Date Code: 20231109   | Resolved an issue introduced in firmware version R150-V0 where, if the RTAC is connected to an IED using an SEL serial-to-fiber-optic transceiver, communications could fail to resume properly after an RTAC restart.   | All  |
|  | Resolved an issue that could cause an SEL-3555 or SEL-3560 with 64 GB of RAM to experience a delayed startup.  | 3555,<br>3560                                |
|  | Resolved a regression that could cause an RTAC to reboot or fail over to the default project when an Ethernet network loop is present.   | 3530,<br>3530-4,<br>3505,<br>3505-3,<br>2241 |
|  | Resolved an issue introduced in firmware version R150-V0 where the communications inactivity time-out in the IEC 61850 MMS server was incorrectly enforced.  | All  |
|  | Resolved an issue that could cause TCP/IP-based client protocols such as DNP and Modbus to fail to resume communications after intermittent network unavailability.  | All  |
|  | Resolved an issue in the IEC 60870-5-101/104 client where, if Custom Messages were configured, an unexpected common address could be assigned to sectors on the client.  | All  |
|  | Resolved an issue in the C37.118 server where being configured for UDP_S transport could cause the failover project to activate on restart.  | All  |
|  | Resolved an issue in the C37.118 client where disabling a non-present Phasor, Analog, or Digital channel could result in tag resolution errors and incorrect data being issued from the PMU to a C37.118 server.   | All  |
|  | Resolved an issue where Ethernet Tunneled Serial server protocols configured for SSL/TLS tunneling mode would fail to connect if the Verify SSL Certificate option was enabled.  | All  |
|  | Resolved an issue where an SEL server configured for SSH tunneling failed to accept new connections.   | All  |
|  | Resolved an issue in GOOSE Transmit instances where simultaneous changes to status and quality were reported across multiple transmitted messages.   | All  |
|  | Resolved an issue where a Recording Group containing an SEL-2245-42 (Protection CT/PT) module with all channels disabled would leak memory during COMTRADE record generation.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555   |
|  | Resolved an issue where the Axion touchscreen failed to load SOE records.  | 2241   |
|  | Resolved an issue where the id web API call failed to respond.   | 3350   |

| Firmware, Software, and Manual Versions  | Summary of Revisions  | Affected Models                            |
|--|---|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R150-V5-Z000194-D20230522<br>SEL-3530-4-R150-V5-Z000194-D20230522<br>SEL-2241-R150-V5-Z000194-D20230522<br>SEL-3505-R150-V5-Z000194-D20230522<br>SEL-3505-3-R150-V5-Z000194-D20230522<br>SEL-3532-N-R150-V5-Z000194-D20230522<br>SEL-3555-R150-V5-Z000194-D20230522<br>SEL-3350-R150-V5-Z000194-D20230522 | Includes all the functions of R150-V4 with the following additions:<br><br>[Cybersecurity] Updated the cryptsetup, libarchive and net-snmp components to prevent possible privilege escalation, denial of service attacks, or information leakage from either remote authenticated and authorized users or those with local physical access from performing malicious actions. Contact SEL for additional details and possible mitigations.                                     |  |
| ACCELERATOR RTAC Software Version:<br>1.34.xxx   | Resolved an issue where the SEL Protocol client could buffer a fast operate request made during a period of non-connectivity and issue the fast operate message when communications resumed.  | All  |
| Manual Date Code: 20230522   | Resolved an issue in the SEL Protocol client where CEV event collection from 400-series relays could fail when using a default <b>Poll ASCII Inactivity Timeout</b> value.<br><br>Resolved an issue introduced in R150-V0 where the system time displayed in the web interface would display incorrect values.<br><br>Resolved an issue in the web interface where the event collection page could fail to display events when a large amount of collected events were present. | All  |
|  | Resolved an issue introduced in R150-V0 where an SEL-3555 with a single SEL-3390T card receiving a PTP time synchronization input would fail to map time accuracy to SEL-2245-42 AC protection modules.   | 3555                                       |
|  | Resolved an issue where a project containing an EtherCAT IO network could encounter delays in time synchronization at startup.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Resolved an issue introduced in R150-V0 where an EtherCAT IO network could encounter spurious network failures.   | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Resolved an issue where a Recording Group could create a COMTRADE record with missing data.   | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Resolved an issue where the front Ethernet port on an SEL-3530 could become unresponsive following an upgrade to R150-V0 firmware or later.   | 3530                                       |
|  | Resolved an issue introduced in R150-V0 where an MMS Client configured for Generic File Collection could fail to collect files.   | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Resolved an issue in the MMS client where buffered reports could not be enabled when the server declared support for ResvTms and the server was edition 2.0 compliant.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Resolved an issue in the MMS client where communications would not successfully be re-established after a temporary loss of connection to the IED.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b>                     |
|--|--|--|
|  | Resolved an issue in the MMS client where controls would not be issued if the q.test bit was asserted in the operSPC tag structure.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Resolved an issue where activating a new LDAP Certificate Authority root certificate required a device restart.  | All  |
|  | To accommodate a hardware component change in the SEL-2241, SEL-3530, and SEL-3530-4, firmware versions earlier than R150-V5 will not function on units manufactured after July 5, 2023.   | 2241,<br>3530,<br>3530-4                   |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R150-V4-Z000164-D20230313<br>SEL-3530-4-R150-V4-Z000164-D20230313<br>SEL-2241-R150-V4-Z000164-D20230313<br>SEL-3505-R150-V4-Z000164-D20230313<br>SEL-3505-3-R150-V4-Z000164-D20230313<br>SEL-3532-N-R150-V4-Z000164-D20230313<br>SEL-3555-R150-V4-Z000164-D20230313<br>SEL-3350-R150-V4-Z000164-D20230313 | Includes all the functions of R150-V3 with the following additions:  |  |
|  | [Cybersecurity] Resolved an issue where an authenticated attacker with access to the database or file system could gain access to stored LDAP parameters such as the credentials used to authenticate to an LDAP server.         | All  |
|  | [Cybersecurity] Updated the OpenSSL component to prevent possible information leakage from the RTAC web interface or a denial of service caused by an authenticated and authorized user uploading a malicious X.509 certificate. | All  |
| ACCELERATOR RTAC Software Version:<br>1.34.xxx   | Resolved an issue where an IEEE C37.118 server could occasionally skip data frames.  | All  |
| Manual Date Code: 20230321   | Resolved an issue in R150-V0 where the MMS client would not enable a buffered report control block if the ResvTms value returned by the server was -1.   | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|  | Resolved an issue introduced in R150-V1 where SEL-3390S8 serial ports configured for protocols could become unresponsive.  | 3555                                       |
|  | Resolved an issue in the DNP client where use of Dataset Objects could cause the DNP client to crash or become unresponsive.   | All  |
|  | Resolved an issue introduced in R150-V0 where a project could fail to send if it contained an EtherCAT I/O network and there was no link on the Ethernet interface assigned to the EtherCAT network.                             | 3530,<br>3530-4,<br>3350,<br>3555          |
|  | Resolved an issue where attempting to log in to the web interface using a browser or the local display could be excessively delayed following web project activation or factory-default settings restore.                        | All  |
|  | Resolved an issue where the Axion Wave Server could fail to map a configured 50 Hz nominal frequency into IEEE C37.118 CFG and DATA frames and would instead show these as 60 Hz.  | 3555                                       |
|  | Resolved an issue that caused unexpected restarts or lock-ups of the local display.  | 3350                                       |
|  | Resolved an issue introduced in R150-V2 where IN101 would not detect the presence of voltage.  | 3350                                       |

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models                                     |
|--|--|---|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R150-V3-Z000134-D20221212<br>SEL-3530-4-R150-V3-Z000134-D20221212<br>SEL-2241-R150-V3-Z000134-D20221212<br>SEL-3505-R150-V3-Z000134-D20221212<br>SEL-3505-3-R150-V3-Z000134-D20221212<br>SEL-3532-N-R150-V3-Z000134-D20221212<br>SEL-3555-R150-V3-Z000134-D20221212<br>SEL-3350-R150-V3-Z000134-D20221212 | Includes all the functions of R150-V2 with the following additions:<br><br>[Cybersecurity] Resolved an issue introduced in R149-V0 where a Factory Default Reset would not reset DNS settings, such as the suffix or nameserver addresses.   | All   |
| ACSELERATOR RTAC Software Version:<br>1.34.xxx   | Resolved an issue introduced in R150-V0 that could cause generation of a diagnostic core dump file upon sending settings or performing a factory reset.  | All   |
| Manual Date Code: 20221212   | Resolved an issue introduced in R149-V0 for SEL Protocol clients where erroneously assigning a device bit label to an analog tag not using the BINARIES device label could cause the SEL client to crash at the end of the autoconfiguration process.  | All   |
|  | Resolved an issue in the DNP client when configured for Ethernet with TCP communications where requests (controls, event polls, integrity polls, etc.) issued while the server is offline would block resumption of polling upon reconnection to the server.   | All   |
|  | Resolved an issue introduced in R150-V0 in the MMS client where it would not enable reports or issue polls when setpoint tags were enabled.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555,<br>3560 |
|  | Resolved an issue where the usage policy displayed on the web interface did not maintain formatting of spaces or line breaks.  | All   |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R150-V2-Z000123-D20221103<br>SEL-3530-4-R150-V2-Z000123-D20221103<br>SEL-2241-R150-V2-Z000123-D20221103<br>SEL-3505-R150-V2-Z000123-D20221103<br>SEL-3505-3-R150-V2-Z000123-D20221103<br>SEL-3532-N-R150-V2-Z000123-D20221103<br>SEL-3555-R150-V2-Z000123-D20221103<br>SEL-3350-R150-V2-Z000123-D20221103 | Includes all the functions of R150-V1 with the following additions:<br><br>[Cybersecurity Enhancement] Added support for a Restricted BIOS with a reduced set of functionality providing an enhanced security posture. Version 12.5.49152.260 is the updated version for the 3555-2/3560-2 and 11.2.49152.139 is the updated version for the 3350. | 3350,<br>3555,<br>3560                              |
| ACSELERATOR RTAC Software Version:<br>1.35.xxx   | [Cybersecurity] Resolved vulnerabilities in the RTAC web interface where an authenticated attacker could exploit various functions to cause information leakage of user credentials and underlying RTAC operating system behavior.   | All   |
| Manual Date Code: 20221109   | Resolved an issue where upgrading RTAC firmware could result in a scenario where X.509 certificates could no longer be generated, web proxies could not be created, and ACSELERATOR RTAC would not be capable of going online with an RTAC after sending settings, with a resulting error message of "Unable to connect to RTE."                   | All   |
|  | Resolved an issue where an IEEE C37.118 server may occasionally miss data messages while operating under burden.   | All   |
|  | Resolved an issue in EtherCAT I/O communications where spontaneous topology reconfigurations could occur, causing temporary module status errors.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555,<br>3560 |
|  | Improved frequency tracking step response performance on voltage input startup for SEL-2245-42 AC protection modules.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555,<br>3560 |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>   | <b>Affected Models</b>                       |
|--|---|--|
|  | Resolved an issue introduced in R150-V0 where floating-point analog values in protocols could temporarily drop to near zero before being restored on the next polling cycle.  | 3530,<br>3530-4,<br>3505,<br>3505-3,<br>2241 |
|  | Resolved an issue introduced in R150-V0 where online monitoring of IEC 61131-3 programs could fail to resolve variable values if they were contained within certain code structures such as FOR loops and would instead only display a value of "???".  | All  |
|  | Resolved an issue introduced in R150-V0 where RTACs shipped prior to August 2012 could lose their licensed options during a firmware upgrade.   | 3530,<br>3530-4,<br>2241                     |
|  | Resolved an issue introduced in R150-V0 where a web interface project upload activation would fail during a second project activation attempt, requiring a power cycle to restore functionality.  | All  |
|  | Resolved an issue introduced in R150-V0 where a project containing GVLs with the RETAIN attribute could encounter spurious watchdog resets.   | 3350,<br>3555,<br>3560                       |
|  | To accommodate a hardware component change in the SEL-3505-3, firmware versions prior to R150-V2 will not function on units manufactured after November 11, 2022.   | 3505-3                                       |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R150-V1-Z000062-D20220805<br>SEL-3530-4-R150-V1-Z000062-D20220805<br>SEL-2241-R150-V1-Z000062-D20220805<br>SEL-3505-R150-V1-Z000062-D20220805<br>SEL-3505-3-R150-V1-Z000062-D20220805<br>SEL-3532-N-R150-V1-Z000062-D20220805<br>SEL-3555-R150-V1-Z000062-D20220805<br>SEL-3350-R150-V1-Z000062-D20220805 | Includes all the functions of R150-V0 with the following additions:<br><br>Resolved an issue introduced in R150-V0 where project configurations would not enable if a tag name in the GOOSE transmit tags list matched a tag name in another protocol configuration.<br><br>Resolved an issue introduced in R150-V0 where the same MAC address was used for Ethernet ports in a bonded configuration.<br><br>Resolved an issue introduced in R150-V0 where IRIG distributed on serial ports did not properly apply daylight-saving time or UTC offset information.<br><br>Resolved an issue introduced in R150-V0 where the web interface was accessible but did not fully populate when the selected language was French.<br><br>Resolved an issue introduced in R150-V0 where increased CPU utilization occurred when an IRIG time signal was not present.<br><br>Removed the Authority Key Identifier (AKI) field from the X.509 certificate.<br><br>Resolved an issue where serial communication protocols that attempt to send data while simultaneously receiving data will stop communicating. | All  |
| ACCELERATOR RTAC Software Version:<br>1.34.xxx<br><br>Manual Date Code: 20220805   | Resolved an issue introduced in R148-V0 for unicast NGVL transmit messages that have cyclic transmission rates of 10 milliseconds or less. When the NGVL IP Broadcast Address cannot be resolved on the network, the IEC 61131-3 logic processing cycle which triggers transmitting data will take up to 3 seconds to complete.   | All  |
|  | Resolved an issue where project passwords for SEL server ACC and 2AC were always used regardless if the Retain Password Vault option was set to true on project activation.   | All  |
|  | [Cybersecurity] Resolved an issue where specially crafted IEC 61131-3 user logic could escalate database user privileges. This exploit required user authentication and authorization to load an RTAC project.  | All  |

| Firmware, Software, and Manual Versions  | Summary of Revisions  | Affected Models                                |
|--|---|--|
|  | [Cybersecurity] Resolved an issue where an unauthenticated user could access the password report.   | All  |
|  | [Cybersecurity] Modified the negative confirmation response time to a failed login attempt to be a variable amount of time between 2.5 and 5 seconds.   | All  |
|  | [Cybersecurity] Resolved an issue where an authenticated user with security write permission could cause additional CPU utilization (until the device was power cycled) by uploading a malformed X.509 certificate associated with CVE-2022-0778. All RTAC processes continued to function. | All  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R150-V0-Z000003-D20220601<br>SEL-3530-4-R150-V0-Z000003-D20220601<br>SEL-2241-R150-V0-Z000003-D20220601<br>SEL-3505-R150-V0-Z000003-D20220601<br>SEL-3505-3-R150-V0-Z000003-D20220601<br>SEL-3532-N-R150-V0-Z000003-D20220601<br>SEL-3555-R150-V0-Z000003-D20220601<br>SEL-3350-R150-V0-Z000003-D20220601 | Added support for OPC UA server.  | 3555<br>3350                                   |
|  | Enhanced MMS Server to support mode/behavior tags.  | All  |
|  | Enhanced individual GOOSE transmit and receive messages to be processed on separate Ethernet interfaces.  | All  |
| ACCELERATOR RTAC Software Version:<br>1.34.xxx   | Enhanced MMS Client to support generic file collection.   | 3530<br>3530-4<br>2241<br>3532<br>3555<br>3350 |
| Manual Date Code: 20220601   | Enhanced MMS Client to support common data class, ASG, with set point functional constraint.  | 3530<br>3530-4<br>2241<br>3532<br>3555<br>3350 |
|  | Enhanced Axion Wave Server to support access to 3k data stream via logic engine.  | 3555   |
|  | Added support for better than 1 $\mu$ s accuracy for PTP time synchronization.  | 3555<br>3350                                   |
|  | Decreased the startup time after a power cycle occurs.  | All  |
|  | Enhanced IEC 60870-101/104 client and server to support a combination of 256 connections.   | 3555   |
|  | Enhanced File System to include files that contain the same data from API interfaces.   | All  |
|  | Updated Logic Engine Compiler.  | All  |
|  | Added IEC 61131-3 functionality to trigger network audits from logic engine.  | 3555<br>3350                                   |
|  | Enhanced Modbus client to issue broadcasts with Modbus server address of 0.   | All  |
|  | Enhanced contact I/O to not operate when the test bit is asserted in the quality structure.   | All  |
|  | Updated MMS Client to use remote control as default orCat value.  | All  |
|  | Added an Origin filter to Sequence of Events log in the web browser.  | All  |
|  | Enhanced IEEE C37.118 server to send CFG2 or CFG3 in using udp_s transport mode.  | All  |

| <b>Firmware, Software, and Manual Versions</b> | <b>Summary of Revisions</b>  | <b>Affected Models</b>                         |
|--|--|--|
|  | Enhanced Modbus server to accept connections from a list of 20 client IP addresses.  | All  |
|  | Added RTAC's hostname to login page of RTAC webpage.   | All  |
|  | Enhanced the Connected IED display available on the RTAC webpage to display port types and layouts specific to the RTAC hardware on which the page is being viewed.  | All  |
|  | [Cybersecurity Enhancement] Added the option on project send/activation to retain passwords stored in the active RTAC project instead of overwriting them with passwords from the configuration being sent/activated. Defaults to false. | All  |
|  | [Cybersecurity Enhancement] Added fingerprint API.   | All  |
|  | [Cybersecurity] Resolved an issue where changes to web-proxy settings were not logged in the Sequence of Events log.   | All  |
|  | [Cybersecurity] Resolved CVE-2021-23017, an issue where UDP packets could be crafted to cause arbitrary code execution.  | 3350   |
|  | Resolved an issue introduced in R149-V1 where Ethernet ports that were paired could not be unpaired.   | 3530-4,<br>2241,<br>3532,<br>3555              |
|  | Resolved an issue introduced in R149-V0 where IN101 did not detect voltage.  | 3350   |
|  | Resolved an issue in IEEE C37.118 server where UTC offset was applied twice when using streaming mode.   | All  |
|  | Resolved an issue in Modbus server where message statistics did not increment after resetting the statistics.  | All  |
|  | Resolved an issue on the local display where a virtual keyboard could be made full-screen with no option to revert keyboard size.  | 3555<br>3350                                   |
|  | Resolved an issue in GOOSE receive where time stamp quality information was not populated from the message.  | All  |
|  | Resolved an issue in MMS server where setting RptEna on a report control block to False while already False previously returned an error.  | All  |
|  | Resolved an issue in R149-V0 where the IEC 61131-3 logic engine was unable to change the IP address of an Ethernet interface.  | All  |
|  | Resolved an issue where DNP client may stop communications when DNP clients do not have an endpoint to communicate with.   | All  |
|  | Resolved an issue in MMS client where report collection stops when data points in the report change faster than the configured task cycle time for an extended period of time.   | 3530<br>3530-4<br>2241<br>3532<br>3555<br>3350 |
|  | Resolved an issue in MMS client where MV or CMV points did not update when only instantaneous or magnitude attributes were included with the quality and time attributes.  | 3530<br>3530-4<br>2241<br>3532<br>3555<br>3350 |

| Firmware, Software, and Manual Versions  | Summary of Revisions  | Affected Models   |
|--|---|---|
|  | <p>Resolved an issue where the <b>ENABLED</b> LED did not illuminate when the factory reset jumper was applied.</p> <p>Resolved an issue in MMS client where buffered reports could not enable buffered reports in edition 2.1 servers by writing to resvTms.</p>   | All<br>3530<br>3530-4<br>2241<br>3532<br>3555<br>3350         |
|  | <p>Resolved an issue introduced in R147-V0 where sysCom library did not transmit or receive data to or from the logic engine.</p>   | All   |
|  | <p>Resolved an issue where Syslog messages generated by the RTAC contained an incorrect hostname following a firmware upgrade or RTAC hostname change.</p>  | All   |
|  | <p>Resolved an issue introduced in R148-V0 where a watchdog time-out occurred when using the EmailPlus library.</p>   | All   |
|  | <p>Resolved an issue which would cause a logic engine restart on project download when the IN101 tag was disabled.</p>  | 3350  |
|  | <p>Resolved an issue introduced in R148-V0 where web browser responsiveness decreased.</p>  | All   |
|  | <p>To resolve a hardware component change in the SEL-3505, firmware versions prior to R150-V0 will not function on units manufactured after June 6, 2022, or units that have serial number 1221570000 or later.</p>   | 3505  |
|  | <p>When an SSD is added to a RAID configuration, the drive is now erased prior to being added to the RAID.</p>  | 3555  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R149-V8-Z000140-D20231103<br>SEL-3530-4-R149-V8-Z000140-D20231103<br>SEL-2241-R149-V8-Z000140-D20231103<br>SEL-3505-R149-V8-Z000140-D20231103<br>SEL-3505-3-R149-V8-Z000140-D20231103<br>SEL-3532-N-R149-V8-Z000140-D20231103<br>SEL-3555-R149-V8-Z000140-D20231103<br>SEL-3350-R149-V8-Z000140-D20231103 | <p>Includes all the functions of R149-V7 with the following additions:</p> <p>Resolved an issue that could cause an SEL-3555 or SEL-3560 with 64 GB of RAM to experience a delayed startup.</p> <p>Resolved a regression that could cause an RTAC to reboot or fail over to the default project when an Ethernet network loop is present.</p> | 3555,<br>3560<br>3530,<br>3530-4,<br>3505,<br>3505-3,<br>2241 |
| ACCELERATOR RTAC Software Version:<br>1.33.xxx   | <p>Resolved an issue that could cause TCP/IP-based client protocols such as DNP and Modbus to fail to resume communications after intermittent network unavailability.</p>  | All   |
| Manual Date Code: 20231109   | <p>Resolved an issue in the C37.118 server where being configured for UDP_S transport could cause the failover project to activate on restart.</p>  | All   |
|  | <p>Resolved an issue in the C37.118 client where disabling a non-present Phasor, Analog, or Digital channel could result in tag resolution errors and incorrect data being issued from the PMU to a C37.118 server.</p>   | All   |
|  | <p>Resolved an issue where Ethernet Tunneled Serial server protocols configured for SSL/TLS tunneling mode would fail to connect if the Verify SSL Certificate option was enabled.</p>  | All   |
|  | <p>Resolved an issue where an SEL server configured for SSH tunneling failed to accept new connections.</p>   | All   |
|  | <p>Resolved an issue in GOOSE Transmit instances where simultaneous changes to status and quality were reported across multiple transmitted messages.</p>   | All   |

| <b>Firmware, Software, and Manual Versions</b>  | <b>Summary of Revisions</b>  | <b>Affected Models</b>                     |
|---|--|--|
|   | Resolved an issue where a Recording Group containing an SEL-2245-42 (Protection CT/PT) module with all channels disabled would leak memory during COMTRADE record generation.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|   | Resolved an issue where the Axion touchscreen failed to load SOE records.  | 2241                                       |
|   | Resolved an issue where the id web API call failed to respond.   | 3350                                       |
| <p>Firmware Identification (FID) Numbers:<br/> SEL-3530-R149-V7-Z000121-D20230518<br/> SEL-3530-4-R149-V7-Z000121-D20230518<br/> SEL-2241-R149-V7-Z000121-D20230518<br/> SEL-3505-R149-V7-Z000121-D20230518<br/> SEL-3505-3-R149-V7-Z000121-D20230518<br/> SEL-3532-N-R149-V7-Z000121-D20230518<br/> SEL-3555-R149-V7-Z000121-D20230518<br/> SEL-3350-R149-V7-Z000121-D20230518</p> <p>ACSELERATOR RTAC Software Version:<br/> 1.33.xxx</p> <p>Manual Date Code: 20230522</p> | Includes all the functions of R149-V6 with the following additions:  |  |
|   | [Cybersecurity] Updated the cryptsetup, libarchive and net-snmp components to prevent possible privilege escalation, denial of service attacks, or information leakage from either remote authenticated and authorized users or those with local physical access from performing malicious actions. Contact SEL for additional details and possible mitigations. | All  |
|   | Resolved an issue where the SEL Protocol client could buffer a fast operate request made during a period of non-connectivity and issue the fast operate message when communications resumed.   | All  |
|   | Resolved an issue in the SEL Protocol client where CEV event collection from 400-series relays could fail when using a default <b>Poll ASCII Inactivity Timeout</b> value.   | All  |
|   | Resolved an issue in the web interface where the event collection page could fail to display events when a large amount of collected events were present.  | All  |
|   | Resolved an issue where a Recording Group could create a COMTRADE record with missing data.  | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|   | Resolved an issue in the MMS client where communications would not successfully be re-established after a temporary loss of connection to the IED.   | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555 |
|   | Resolved an issue where activating a new LDAP Certificate Authority root certificate required a device restart.  | All  |
|   | To accommodate a hardware component change in the SEL-2241, SEL-3530, and SEL-3530-4, firmware versions earlier than R149-V7 will not function on units manufactured after July 5, 2023.   | 2241,<br>3530,<br>3530-4                   |
|   | Includes all the functions of R149-V5 with the following additions:  |  |
| <p>Firmware Identification (FID) Numbers:<br/> SEL-3530-R149-V6-Z000101-D20230313<br/> SEL-3530-4-R149-V6-Z000101-D20230313<br/> SEL-2241-R149-V6-Z000101-D20230313<br/> SEL-3505-R149-V6-Z000101-D20230313<br/> SEL-3505-3-R149-V6-Z000101-D20230313<br/> SEL-3532-N-R149-V6-Z000101-D20230313<br/> SEL-3555-R149-V6-Z000101-D20230313<br/> SEL-3350-R149-V6-Z000101-D20230313</p> <p>ACSELERATOR RTAC Software Version:<br/> 1.33.xxx</p> <p>Manual Date Code: 20230321</p> | [Cybersecurity] Resolved an issue where an authenticated attacker with access to the database or file system could gain access to stored LDAP parameters such as the credentials used to authenticate to an LDAP server.   | All  |
|   | [Cybersecurity] Updated the OpenSSL component to prevent possible information leakage from the RTAC web interface or a denial of service caused by an authenticated and authorized user uploading a malicious X.509 certificate.   | All  |
|   | Resolved an issue introduced in R149-V4 that could cause unexpected restarts or lock-ups of the local display.   | 3350                                       |
|   | Resolved an issue where an IEEE C37.118 server could occasionally skip data frames.  | All  |

| Firmware, Software, and Manual Versions  | Summary of Revisions  | Affected Models                              |
|--|---|--|
|  | Resolved an issue in the DNP client where use of Dataset Objects could cause the DNP client to crash or become unresponsive.  | All  |
|  | Resolved an issue where attempting to log in to the web interface using a browser or the local display could be excessively delayed following web project activation or factory-default settings restore.   | All  |
|  | Resolved an issue where the Axion Wave Server could fail to map a configured 50 Hz nominal frequency into IEEE C37.118 CFG and DATA frames and would instead show these as 60 Hz.   | 3555   |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R149-V5-Z000080-D20221207<br>SEL-3530-4-R149-V5-Z000080-D20221207<br>SEL-2241-R149-V5-Z000080-D20221207<br>SEL-3505-R149-V5-Z000080-D20221207<br>SEL-3505-3-R149-V5-Z000080-D20221207<br>SEL-3532-N-R149-V5-Z000080-D20221207<br>SEL-3555-R149-V5-Z000080-D20221207<br>SEL-3350-R149-V5-Z000080-D20221207<br><br>ACSELERATOR RTAC Software Version:<br>1.33.xxx<br><br>Manual Date Code: 20221212 | Includes all the functions of R149-V4 with the following additions:<br><br>[Cybersecurity] Resolved an issue introduced in R149-V0 where a Factory Default Reset would not reset DNS settings, such as the suffix or nameserver addresses.<br><br>Resolved an issue introduced in R149-V2 where an SEL-3505 or SEL-3505-3 RTAC would fail to synchronize to an IRIG-B input.<br><br>Resolved an issue introduced in R149-V0 for SEL Protocol clients where erroneously assigning a device bit label to an analog tag not using the BINARIES device label could cause the SEL client to crash at the end of the autoconfiguration process.<br><br>Resolved an issue in the DNP client when configured for Ethernet with TCP communications where requests (controls, event polls, integrity polls, etc.) issued while the server is offline would block resumption of polling upon reconnection to the server.<br><br>Resolved an issue where the usage policy displayed on the web interface did not maintain formatting of spaces or line breaks.  | All  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R149-V4-Z000072-D20221103<br>SEL-3530-4-R149-V4-Z000072-D20221103<br>SEL-2241-R149-V4-Z000072-D20221103<br>SEL-3505-R149-V4-Z000072-D20221103<br>SEL-3505-3-R149-V4-Z000072-D20221103<br>SEL-3532-N-R149-V4-Z000072-D20221103<br>SEL-3555-R149-V4-Z000072-D20221103<br>SEL-3350-R149-V4-Z000072-D20221103<br><br>ACSELERATOR RTAC Software Version:<br>1.33.xxx<br><br>Manual Date Code: 20221109 | Includes all the functions of R149-V3 with the following additions:<br><br>[Cybersecurity Enhancement] Added support for a Restricted BIOS with a reduced set of functionality providing an enhanced security posture. Version 12.5.49152.260 is the updated version for the 3555-2/3560-2 and 11.2.49152.139 is the updated version for the 3350.<br><br>[Cybersecurity] Resolved vulnerabilities in the RTAC web interface where an authenticated attacker could exploit various functions to cause information leakage of user credentials and underlying RTAC operating system behavior.<br><br>Resolved an issue where upgrading RTAC firmware could result in a scenario where X.509 certificates could no longer be generated, web proxies could not be created, and ACSELERATOR RTAC would not be capable of going online with an RTAC after sending settings, with a resulting error message of "Unable to connect to RTE."<br><br>Resolved an issue in EtherCAT I/O communications where spontaneous topology reconfigurations could occur, causing temporary module status errors. | 3350,<br>3555,<br>3560<br><br>All<br><br>All |
|  | To accommodate a hardware component change in the SEL-3505-3, firmware versions prior to R149-V4 will not function on units manufactured after November 11, 2022.   | 3505-3                                       |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>   | <b>Affected Models</b>                         |
|--|---|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R149-V3-Z000026-D20220804<br>SEL-3530-4-R149-V3-Z000026-D20220804<br>SEL-2241-R149-V3-Z000026-D20220804<br>SEL-3505-R149-V3-Z000026-D20220804<br>SEL-3505-3-R149-V3-Z000026-D20220804<br>SEL-3532-N-R149-V3-Z000026-D20220804<br>SEL-3555-R149-V3-Z000026-D20220804<br>SEL-3350-R149-V3-Z000026-D20220804 | Includes all the functions of R149-V2 with the following additions:<br><br>Removed the Authority Key Identifier (AKI) field from the X.509 certificate.<br><br>Resolved an issue where serial communication protocols that attempt to send data while simultaneously receiving data will stop communicating.                    | All<br>3350                                    |
| ACSELERATOR RTAC Software Version:<br>1.33.xxx   | Resolved an issue introduced in R148-V0 for unicast NGVL transmit messages that have cyclic transmission rates of 10 milliseconds or less. When the NGVL IP Broadcast Address cannot be resolved on the network, the IEC 61131-3 logic processing cycle which triggers transmitting data will take up to 3 seconds to complete. | All  |
| Manual Date Code: 20220805   | [Cybersecurity] Resolved an issue where specially crafted IEC 61131-3 user logic could escalate database user privileges. This exploit required user authentication and authorization to load an RTAC project.  | All  |
|  | [Cybersecurity] Resolved an issue where an unauthenticated user could access the password report.   | All  |
|  | [Cybersecurity] Resolved CVE-2021-23017, an issue where UDP packets could be crafted to cause arbitrary code execution.   | All  |
|  | [Cybersecurity] Modified the negative confirmation response time to a failed login attempt to be a variable amount of time between 2.5 and 5 seconds.   | All  |
|  | [Cybersecurity] Resolved an issue where an authenticated user with security write permission could cause additional CPU utilization (until the device was power cycled) by uploading a malformed X.509 certificate associated with CVE-2022-0778. All RTAC processes continued to function.                                     | All  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R149-V2-Z000051-D20220524<br>SEL-3530-4-R149-V2-Z000051-D20220524<br>SEL-2241-R149-V2-Z000051-D20220524<br>SEL-3505-R149-V2-Z000051-D20220524<br>SEL-3505-3-R149-V2-Z000051-D20220524<br>SEL-3532-N-R149-V2-Z000051-D20220524<br>SEL-3555-R149-V2-Z000051-D20220524<br>SEL-3350-R149-V2-Z000051-D20220524 | Includes all the functions of R149-V1 with the following additions:<br><br>Resolved an issue introduced in R149-V0 where IN101 did not detect voltage.<br><br>Resolved an issue introduced in R149-V1 where Ethernet ports that were paired could not be unpaired.  | 3350<br>3530-4<br>2241<br>3532<br>3555         |
| ACSELERATOR RTAC Software Version:<br>1.33.xxx   | Resolved an issue in GOOSE receive where time stamp quality information was not populated from the message.   | All  |
| Manual Date Code: 20220601   | Resolved an issue in R149-V0 where the IEC 61131-3 logic engine was unable to change the IP address of an Ethernet interface.   | All  |
|  | Resolved an issue where the <b>ENABLED</b> LED did not illuminate when the factory reset jumper was applied.  | All  |
|  | Resolved an issue in MMS client where MV or CMV points did not update when only instantaneous or magnitude attributes were included with the quality and time attributes.   | 3530<br>3530-4<br>2241<br>3532<br>3555<br>3350 |
|  | Resolved an issue introduced in R147-V0 where sysCom library did not transmit or receive data to or from the logic engine.  | All  |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b>                         |
|--|--|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R149-V1-Z000009-D20211214<br>SEL-3530-4-R149-V1-Z000009-D20211214<br>SEL-2241-R149-V1-Z000009-D20211214<br>SEL-3505-R149-V1-Z000009-D20211214<br>SEL-3505-3-R149-V1-Z000009-D20211214<br>SEL-3532-N-R149-V1-Z000009-D20211214<br>SEL-3555-R149-V1-Z000009-D20211214<br>SEL-3350-R149-V1-Z000009-D20211214 | Resolved an issue in MMS client where buffered reports could not enable buffered reports in edition 2.1 servers by writing to resvTms.   | 3530<br>3530-4<br>2241<br>3532<br>3555<br>3350 |
|  | Resolved an issue which would cause a logic engine restart on project download when the IN101 tag was disabled.  | 3350   |
|  | To resolve a hardware component change in the SEL-3505, firmware versions prior to R149-V2 will not function on units manufactured after June 6, 2022, or units that have serial number 1221570000 or later. | 3505   |
|  | Resolved an issue where Syslog messages generated by the RTAC could contain an incorrect hostname following a firmware upgrade or RTAC hostname change.  | All  |
| ACSELERATOR RTAC Software Version:<br>1.33.xxx<br><br>Manual Date Code: 20211214   | Includes all the functions of R149-V0 with the following additions:  |  |
|  | Resolved an issue in the MMS Client where data for MV or CMV tags do not always update correctly when only instantaneous or magnitude attributes are included in the data set.                               | All  |
|  | Resolved an issue introduced in R148-V0 where EtherCAT modules may not receive IRIG-B time synchronization when IRIG is connected to the device.   | 3555   |
|  | Resolved an issue introduced in R149-V0 where IRIG is not distributed to downstream SEL-3390E4 or SEL-3390S8 cards when a second SEL-3390S8 card is present.   | 3555   |
|  | Resolved an issue where the unit could restart unexpectedly when serial ports are configured for communication protocol use.   | 3350   |
|  | Resolved an issue introduced in R149-V0 in SEL Client where CEV events collected directly from SEL devices are not placed in the correct file location when accessed via FTP or FileIO.                      | All  |
|  | Resolved an issue where some Windows installations could cause the RTAC to become unresponsive after a USB-B cable is plugged in until the unit is power-cycled.   | 3530<br>3530-4<br>2241<br>3505<br>3505-3       |
|  | Resolved an issue introduced in R149-V0 where the Eth_F interface would appear on a unit that did not have an Eth_F interface and on which the 192.168.3.X subnet was not configurable.                      | 2241   |
|  | Resolved an issue introduced in R148-V0 where received NTP requests are not answered when the NTP client source UDP port is 123.   | All  |
|  | Resolved an issue where the Axion touchscreen becomes unresponsive after the user sends a configuration that only updates the Axion touchscreen configuration or after power-cycling.                        | 2241   |
|  | Resolved an issue introduced in R148-V0 where IRIG-B is not processed on Serial Port 1.  | 3555   |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b>                                    |
|--|--|---|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R149-V0-Z000004-D20210915<br>SEL-3530-4-R149-V0-Z000004-D20210915<br>SEL-2241-R149-V0-Z000004-D20210915<br>SEL-3505-R149-V0-Z000004-D20210915<br>SEL-3505-3-R149-V0-Z000004-D20210915<br>SEL-3532-N-R149-V0-Z000004-D20210915<br>SEL-3555-R149-V0-Z000004-D20210915<br>SEL-3350-R149-V0-Z000004-D20210915 | Added support for IPv6 when using the RTAC web interface, APIs, and DNP, Modbus, SEL, and SFTP protocols.<br><br>Added support for French language on web interface.                                     | All<br><br>3530<br>3530-4<br>2241<br>3532<br>3555<br>3350 |
| ACSELERATOR RTAC Software Version:<br>1.33.xxx   | Enhanced User API to include support for adding, deleting, and modifying user accounts.  | All   |
| Manual Date Code: 20210915   | Enhanced MMS Client to re-collect COMTRADE files when a change in time stamp is detected.  | 3530<br>3530-4<br>2241<br>3532<br>3555<br>3350            |
|  | Enhanced SEL Client to re-collect COMTRADE files when a change in time stamp is detected.  | All   |
|  | Encrypted port 1217 communications between ACSELERATOR RTAC software and RTAC firmware.  | All   |
|  | Added support for Axion Recording Group channel calculations.  | 3530<br>3530-4<br>2241<br>3555<br>3350                    |
|  | Added support for Axion Bay Controller and SEL-2242 touchscreen display.<br><br><b>Note:</b> The touchscreen display is only compatible with SEL-2241 RTACs with a serial number of 3212910001 or later. | 2241  |
|  | Added support to SEL Client devices to collect events from SEL relays connected as children through a tiered 2020/203x connection.   | All   |
|  | Added support to Modbus server for as many as 30,000 tags per data type.   | 3530<br>3530-4<br>2241<br>3532<br>3555<br>3350            |
|  | Updated BIOS for SEL-3350 to 1.1.49152.36.   | 3350  |
|  | Updated BIOS for SEL-3555-2 to 2.4.49152.159.  | 3555  |
|  | Added a setting to Global network settings which enables automatic redirect from http port 80 to https port 443 for web server connections. Setting defaults to false.                                   | All   |
|  | Enhanced DNP Server to support as many as 20 DNP Client IP addresses.  | All   |
|  | Enhanced Project API to include information about project connections.   | All   |
|  | Added support for SEL-3390T PCI Time card.   | 3555  |
|  | Added support for RTAC user accounts to optionally enforce password history.   | All   |
|  | Added support for user-defined primary and backup DNS servers.   | All   |

| <b>Firmware, Software, and Manual Versions</b> | <b>Summary of Revisions</b>   | <b>Affected Models</b>                 |
|--|---|--|
|  | Added support to Modbus Client to support COMTRADE and SOE collection when communicating with IEDs using GE UR firmware versions 8.0 and later.                   | All                                    |
|  | Removed traffic on TCP ports 15453 and 1217 from all live Ethernet communication captures.  | All                                    |
|  | Enhanced SEL Client to support the SEL-851.   | All                                    |
|  | Added option to web interface to re-initialize retained variables when activating a project.  | All                                    |
|  | Enabled HTTP Strict Transport Security (HSTS) in web interface.   | All                                    |
|  | Enabled virtual keyboard to be accessed via local display without a physical keyboard.  | 3532<br>3555<br>3350                   |
|  | Resolved an issue in SEL Server where multiple new event and SOE notifications were sent simultaneously.  | All                                    |
|  | Deprecated support for TLS 1.1 for RTAC web interface.  | All                                    |
|  | Resolved an issue in logic engine API where data structures that contain pulseConfig_t did not accept writes.   | All                                    |
|  | Deprecated support for PPP over modem communications.   | 3505                                   |
|  | Resolved an issue in GOOSE Transmit where incorrect values may be transmitted on second state change when GOOSE messages are in both automation and main threads. | All                                    |
|  | Resolved an issue in MMS Server where SBO cancel commands were not processed correctly after select had synchro or interlock check selected.                      | All                                    |
|  | Resolved an issue where removing a module from an active Axion backplane may cause other modules to restart.  | 3530<br>3530-4<br>2241<br>3555<br>3350 |
|  | Resolved an issue where EtherCAT modules may not synchronize time correctly after a firmware update or power cycle.   | 3555                                   |
|  | Resolved an issue where RAID may not correctly format SSDs depending upon the initial partitioning of the SSDs selected for RAID.                                 | 3555                                   |
|  | Resolved an issue in SEL server where first login attempt with an LDAP user account does not succeed.   | All                                    |
|  | Resolved an issue where GOOSE is not processed correctly on Ethernet interface 2 when bonded to Ethernet interface 1.   | 3555                                   |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b> |
|--|--|------------------------|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R148-V9-Z000093-D20230313<br>SEL-3530-4-R148-V9-Z000093-D20230313<br>SEL-2241-R148-V9-Z000093-D20230313<br>SEL-3505-R148-V9-Z000093-D20230313<br>SEL-3505-3-R148-V9-Z000093-D20230313<br>SEL-3532-N-R148-V9-Z000093-D20230313<br>SEL-3555-R148-V9-Z000093-D20230313<br>SEL-3350-R148-V9-Z000093-D20230313 | Includes all the functions of R148-V8 with the following additions:<br><br>[Cybersecurity] Resolved an issue where an authenticated attacker with access to the database or file system could gain access to stored LDAP parameters such as the credentials used to authenticate to an LDAP server.  | All                    |
| ACSELERATOR RTAC Software Version:<br>1.33.xxx   | [Cybersecurity] Updated the OpenSSL component to prevent possible information leakage from the RTAC web interface or a denial of service caused by an authenticated and authorized user uploading a malicious X.509 certificate.   | All                    |
| Manual Date Code: 20230321   | Resolved an issue introduced in R148-V7 that could cause unexpected restarts or lock-ups of the local display.   | 3350                   |
|  | Resolved an issue where an IEEE C37.118 server could occasionally skip data frames.<br><br>Resolved an issue in the DNP client where use of Dataset Objects could cause the DNP client to crash or become unresponsive.  | All                    |
|  | Resolved an issue where attempting to log in to the web interface using a browser or the local display could be excessively delayed following web project activation or factory-default settings restore.  | All                    |
|  | Resolved an issue where the Axion Wave Server could fail to map a configured 50 Hz nominal frequency into IEEE C37.118 CFG and DATA frames and would instead show these as 60 Hz.  | 3555                   |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R148-V8-Z000072-D20221207<br>SEL-3530-4-R148-V8-Z000072-D20221207<br>SEL-2241-R148-V8-Z000072-D20221207<br>SEL-3505-R148-V8-Z000072-D20221207<br>SEL-3505-3-R148-V8-Z000072-D20221207<br>SEL-3532-N-R148-V8-Z000072-D20221207<br>SEL-3555-R148-V8-Z000072-D20221207<br>SEL-3350-R148-V8-Z000072-D20221207 | Includes all the functions of R148-V7 with the following additions:<br><br>Resolved an issue introduced in R148-V5 where an SEL-3505 or SEL-3505-3 RTAC would fail to synchronize to an IRIG-B input.  | 3505,<br>3505-3        |
| ACSELERATOR RTAC Software Version:<br>1.33.xxx   | Resolved an issue in the DNP client when configured for Ethernet with TCP communications where requests (controls, event polls, integrity polls, etc.) issued while the server is offline would block resumption of polling upon reconnection to the server.   | All                    |
| Manual Date Code: 20221212   | Resolved an issue where the usage policy displayed on the web interface did not maintain formatting of spaces or line breaks.  | All                    |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R148-V7-Z000066-D20221103<br>SEL-3530-4-R148-V7-Z000066-D20221103<br>SEL-2241-R148-V7-Z000066-D20221103<br>SEL-3505-R148-V7-Z000066-D20221103<br>SEL-3505-3-R148-V7-Z000066-D20221103<br>SEL-3532-N-R148-V7-Z000066-D20221103<br>SEL-3555-R148-V7-Z000066-D20221103<br>SEL-3350-R148-V7-Z000066-D20221103 | Includes all the functions of R148-V6 with the following additions:<br><br>[Cybersecurity Enhancement] Added support for a Restricted BIOS with a reduced set of functionality providing an enhanced security posture. Version 12.5.49152.260 is the updated version for the 3555-2/3560-2 and 11.2.49152.139 is the updated version for the 3350. | 3350,<br>3555,<br>3560 |
| ACSELERATOR RTAC Software Version:<br>1.33.xxx   | [Cybersecurity] Resolved vulnerabilities in the RTAC web interface where an authenticated attacker could exploit various functions to cause information leakage of user credentials and underlying RTAC operating system behavior.   | All                    |
| Manual Date Code: 20221109   | Resolved an issue introduced in R148-V6 that prevented a project from being sent to an SEL-2241 RTAC controller.   | 2241                   |
|  | Resolved an issue where upgrading RTAC firmware could result in a scenario where X.509 certificates could no longer be generated, web proxies could not be created, and ACSELERATOR RTAC would not be capable of going online with an RTAC after sending settings, with a resulting error message of "Unable to connect to RTE."                   | All                    |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>   | <b>Affected Models</b>                              |
|--|---|---|
|  | Resolved an issue in EtherCAT I/O communications where spontaneous topology reconfigurations could occur, causing temporary module status errors.   | 3350,<br>3530,<br>3530-4,<br>2241,<br>3555,<br>3350 |
|  | To accommodate a hardware component change in the SEL-3505-3, firmware versions prior to R148-V7 will not function on units manufactured after November 11, 2022.   | 3505-3  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R148-V6-Z000022-D20220804<br>SEL-3530-4-R148-V6-Z000022-D20220804<br>SEL-2241-R148-V6-Z000022-D20220804<br>SEL-3505-R148-V6-Z000022-D20220804<br>SEL-3505-3-R148-V6-Z000022-D20220804<br>SEL-3532-N-R148-V6-Z000022-D20220804<br>SEL-3555-R148-V6-Z000022-D20220804<br>SEL-3350-R148-V6-Z000022-D20220804 | Includes all the functions of R148-V5 with the following additions:<br><br>Removed the Authority Key Identifier (AKI) field from the X.509 certificate.<br><br>Resolved an issue where serial communication protocols that attempt to send data while simultaneously receiving data will stop communicating.  | All<br>3350   |
| ACSELERATOR RTAC Software Version:<br>1.33.xxx   | Resolved an issue introduced in R148-V0 for unicast NGVL transmit messages that have cyclic transmission rates of 10 milliseconds or less. When the NGVL IP Broadcast Address cannot be resolved on the network, the IEC 61131-3 logic processing cycle which triggers transmitting data will take up to 3 seconds to complete.   | All   |
| Manual Date Code: 20220805   | [Cybersecurity] Resolved an issue where specially crafted IEC 61131-3 user logic could escalate database user privileges. This exploit required user authentication and authorization to load an RTAC project.  | All   |
|  | [Cybersecurity] Resolved an issue where an unauthenticated user could access the password report.   | All   |
|  | [Cybersecurity] Resolved CVE-2021-23017, an issue where UDP packets could be crafted to cause arbitrary code execution.   | All   |
|  | [Cybersecurity] Modified the negative confirmation response time to a failed login attempt to be a variable amount of time between 2.5 and 5 seconds.   | All   |
|  | [Cybersecurity] Resolved an issue where an authenticated user with security write permission could cause additional CPU utilization (until the device was power cycled) by uploading a malformed X.509 certificate associated with CVE-2022-0778. All RTAC processes continued to function.   | All   |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R148-V5-Z000059-D20220524<br>SEL-3530-4-R148-V5-Z000059-D20220524<br>SEL-2241-R148-V5-Z000059-D20220524<br>SEL-3505-R148-V5-Z000059-D20220524<br>SEL-3505-3-R148-V5-Z000059-D20220524<br>SEL-3532-N-R148-V5-Z000059-D20220524<br>SEL-3555-R148-V5-Z000059-D20220524<br>SEL-3350-R148-V5-Z000059-D20220524 | Includes all the functions of R148-V4 with the following additions:<br><br>Resolved an issue in GOOSE receive where time stamp quality information was not populated from the message.<br><br>Resolved an issue introduced in R148-V0 where IRIG-B is not processed on Serial Port 1.<br><br>Resolved an issue introduced in R148-V0 where EtherCAT modules may not receive IRIG-B time synchronization when IRIG is connected to the device. | All<br>3555<br>3555                                 |
| ACSELERATOR RTAC Software Version:<br>1.33.xxx   | Resolved an issue where the unit could restart unexpectedly when serial ports are configured for communication protocol use.  | 3350  |
| Manual Date Code: 20220601   | Resolved an issue in MMS client where MV or CMV points did not update when only instantaneous or magnitude attributes were included with the quality and time attributes.   | 3530<br>3530-4<br>2241<br>3532<br>3555<br>3350      |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b>                         |
|--|--|--|
|  | Resolved an issue where the <b>ENABLED</b> LED did not illuminate when the factory reset jumper was applied.   | All  |
|  | Resolved an issue introduced in R148-V0 where received NTP requests are not answered when the NTP client source UDP port is 123.   | All  |
|  | Resolved an issue introduced in R147-V0 where sysCom library did not transmit or receive data to or from the logic engine.   | All  |
|  | Resolved an issue in MMS client where buffered reports could not enable buffered reports in edition 2.1 servers by writing to resvTms.   | 3530<br>3530-4<br>2241<br>3532<br>3555<br>3350 |
|  | Resolved an issue which would cause a logic engine restart on project download when the IN101 tag was disabled.  | 3350   |
|  | To resolve a hardware component change in the SEL-3505, firmware versions prior to R148-V5 will not function on units manufactured after June 6, 2022, or units that have serial number 1221570000 or later.   | 3505   |
|  | Resolved an issue where Syslog messages generated by the RTAC could contain an incorrect hostname following a firmware upgrade or RTAC hostname change.  | All  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R148-V4-Z000020-D20210914<br>SEL-3530-4-R148-V4-Z000020-D20210914<br>SEL-2241-R148-V4-Z000020-D20210914<br>SEL-3505-R148-V4-Z000020-D20210914<br>SEL-3505-3-R148-V4-Z000020-D20210914<br>SEL-3532-N-R148-V4-Z000020-D20210914<br>SEL-3555-R148-V4-Z000020-D20210914<br>SEL-3350-R148-V4-Z000020-D20210914 | Includes all the functions of R148-V3 with the following additions:<br>Updated BIOS for SEL-3350 to 1.1.49152.36.<br>Updated BIOS for SEL-3555-2 to 2.4.49152.159.<br>Resolved an issue in SEL Server where multiple new event and SOE notifications were sent simultaneously.<br>Deprecated support for TLS 1.1 for RTAC web interface. | 3350<br>3555<br>All<br>All                     |
| ACCELERATOR RTAC Software Version:<br>1.33.xxx   | Resolved an issue in MMS Server where SBO cancel commands were not processed correctly after select had synchro or interlock check selected.   | All  |
| Manual Date Code: 20210915   | Encrypted port 1217 communications between ACCELERATOR RTAC software and RTAC firmware.  | All  |
|  | Resolved an issue in logic engine API where data structures that contain pulseConfig_t did not accept writes.  | All  |
|  | Added option to web interface to re-initialize retained variables when activating a project.   | All  |
|  | Enabled HTTP Strict Transport Security (HSTS) in web interface.  | All  |
|  | Removed traffic on TCP ports 15453 and 1217 from all live Ethernet communication captures.   | All  |
|  | Added support to Modbus Client to support COMTRADE and SOE collection when communicating with IEDs using GE UR firmware versions 8.0 and later.  | All  |
|  | Resolved an issue where RAID may not correctly format SSDs depending upon the initial partitioning of the SSDs selected for RAID.  | 3555   |
|  | Resolved an issue in SEL server where first login attempt with an LDAP user account does not succeed.  | All  |
|  | Resolved an issue where GOOSE is not processed correctly on Ethernet interface 2 when bonded to Ethernet interface 1.  | 3555   |

| Firmware, Software, and Manual Versions  | Summary of Revisions  | Affected Models  |
|--|---|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R148-V3-Z000012-D20210713<br>SEL-3530-4-R148-V3-Z000012-D20210713<br>SEL-2241-R148-V3-Z000012-D20210713<br>SEL-3505-R148-V3-Z000012-D20210713<br>SEL-3505-3-R148-V3-Z000012-D20210713<br>SEL-3532-N-R148-V3-Z000012-D20210713<br>SEL-3555-R148-V3-Z000012-D20210713<br>SEL-3350-R148-V3-Z000012-D20210713<br><br>ACSELERATOR RTAC Software Version:<br>1.32.xxx<br><br>Manual Date Code: 20210713 | Includes all the functions of R148-V2 with the following additions:<br><br>Resolved an issue in Modbus Server where the server disconnects the TCP socket connection after 15 seconds of inactivity.<br><br>Resolved an issue in project API and web server where project uploads are not accepted when the project name contains spaces.<br><br>Resolved an issue in logic engine API where the response is incomplete when data in the response contain values of NaN.<br><br>Resolved an incorrect example IP range in Network Audit configuration in the RTAC web interface.<br><br>Resolved an issue in C37.118 server where excessive CPU resources are used when using transport mode UDP_S with multicast enabled.<br><br>Resolved an issue introduced in R148-V0 where EIA-485/422 does not function when configured.<br><br>Resolved an issue introduced in R148-V0 where +5V port power on serial ports does not function when configured. | All  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R148-V2-Z000015-D20210414<br>SEL-3530-4-R148-V2-Z000015-D20210414<br>SEL-2241-R148-V2-Z000015-D20210414<br>SEL-3505-R148-V2-Z000015-D20210414<br>SEL-3505-3-R148-V2-Z000015-D20210414<br>SEL-3532-N-R148-V2-Z000015-D20210414<br>SEL-3555-R148-V2-Z000015-D20210414<br>SEL-3350-R148-V2-Z000015-D20210414<br><br>ACSELERATOR RTAC Software Version:<br>1.32.xxx<br><br>Manual Date Code: 20210414 | Includes all the functions of R148-V1 with the following additions:<br><br>Resolved an issue introduced in R148-V0 where SEL Client and C37.118 client will occasionally report 0 for analog values momentarily.<br><br>Resolved an issue introduced in R148-V0 where EtherCAT analog values will occasionally report 0 momentarily.<br><br>Resolved an issue where a connected IED page may not always load correctly when using Chromium-based browsers such as Microsoft Edge or Google Chrome.<br><br>Resolved an issue where the SNMP Client/Manager incorrectly deasserts to Offline and increments the Message_Received_Count POU pins.<br><br>Resolved an issue where SEL Client will not collect events from an SEL-700G when using FTP.<br><br>Resolved an issue where RADIUS will not authenticate when null characters are included in the authentication response from the server.   | 3530<br>3530-4<br>2241<br>3505<br>3505-3<br><br>3530<br>3530-4<br>2241<br><br>All<br><br>All<br><br>All<br><br>All |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R148-V1-Z000012-D20210320<br>SEL-3530-4-R148-V1-Z000012-D20210320<br>SEL-2241-R148-V1-Z000012-D20210320<br>SEL-3505-R148-V1-Z000012-D20210320<br>SEL-3505-3-R148-V1-Z000012-D20210320<br>SEL-3532-N-R148-V1-Z000012-D20210320<br>SEL-3555-R148-V1-Z000012-D20210320<br>SEL-3350-R148-V1-Z000012-D20210320<br><br>ACSELERATOR RTAC Software Version:<br>1.32.xxx<br><br>Manual Date Code: 20210320 | Includes all the functions of R148-V0 with the following additions:<br><br>Resolved an issue that may prevent users from logging in after restoring User Accounts settings during a project send while using an authenticated LDAP or Radius account.<br><br>Resolved an issue introduced in R148-V0 where fileIO may not read events into the logic engine.<br><br>Resolved an issue introduced in R148-V0 where a firmware downgrade to R142 or previous may not succeed.<br><br>Resolved an issue introduced in R148-V0 where Ethernet communications may be unavailable after updating firmware to R148-V0.   | All<br><br>All<br><br>All<br><br>3532<br>3555<br><br>3555  |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b>                   |
|--|--|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R148-V0-Z001187-D20210208<br>SEL-3530-4-R148-V0-Z001187-D20210208<br>SEL-2241-R148-V0-Z001187-D20210208<br>SEL-3505-R148-V0-Z001187-D20210208<br>SEL-3505-3-R148-V0-Z001187-D20210208<br>SEL-3532-N-R148-V0-Z001187-D20210208<br>SEL-3555-R148-V0-Z001187-D20210208<br>SEL-3350-R148-V0-Z001187-D20210208 | Added support for SEL-3350.  | 3350                                     |
|  | Added support for SNMP Agent/Server.   | All                                      |
|  | Added support for RAID 1.  | 3555                                     |
|  | Added Configuration API to support monitoring for configuration changes using a configuration fingerprint.   | All                                      |
|  | Increased support for DNP client/server count to 500.  | 3555                                     |
| ACCELERATOR RTAC Software Version:<br>1.32.xxx   | Added support for sleep mode on local display.   | 3532<br>3555<br>3350                     |
| Manual Date Code: 20210208   | Added support to name collected COMTRADE files according to IEEE COMNAME standard.   | All                                      |
|  | Enhanced Audit Utilities to include vendor information for MAC addresses in reports.   | 3532<br>3555<br>3350                     |
|  | Enhanced IEC 60870-103 client to support 16 elements for Measured Value II.  | All                                      |
|  | Enhanced Audit Utilities to support returning all TCP and UDP port states instead of only open ports as a part of the audit report.                              | 3532<br>3555<br>3350                     |
|  | Enhanced Modbus client to support COMTRADE and SOE collection from GE UR firmware versions 7.91 and later.   | All                                      |
|  | Updated BIOS for SEL-3555-2 to 2.3.49152.138.  | 3555                                     |
|  | Updated how SEL client tracks unsolicited event count statistics.  | All                                      |
|  | Updated Logic engine compiler.   | All                                      |
|  | Modified COMTRADE folder naming generated from Axion modules to match COMTRADE event file names.   | 3530<br>3530-4<br>2241<br>3555<br>3350   |
|  | Resolved an issue where subject alternative names are not included in the certificate signing request.   | All                                      |
|  | Resolved an issue introduced in R145-V0 where IEC 60870-103 may not send commands.   | 3530<br>3530-4<br>2241<br>3505<br>3505-3 |
|  | Addressed behavior due to changes in web browsers where users may remain logged in after closing a web browser session when the Web Session Timeout is set to 0. | All                                      |
|  | Resolved an issue on the SEL-3560 where serial ports on the expansion card were not numbered correctly.  | 3555                                     |
|  | Resolved an issue where IRIG-B output on PCI cards may have incorrect time offset when Enable_IRIG_B_TIME_OUT_DST_OFFSET is set to False.                        | 3555                                     |

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models                                |
|--|--|--|
|  | Resolved an issue where the sel_file.soe_request_descending function does not return SOE records if the ReturnAlarmSoeOnly input was set to True.  | All  |
|  | Increased COMTRADE collection storage count to 10,000.   | 3555   |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R147-V6-Z000056-D20221031<br>SEL-3530-4-R147-V6-Z000056-D20221031<br>SEL-2241-R147-V6-Z000056-D20221031<br>SEL-3505-R147-V6-Z000056-D20221031<br>SEL-3505-3-R147-V6-Z000056-D20221031<br>SEL-3532-N-R147-V6-Z000056-D20221031<br>SEL-3555-R147-V6-Z000056-D20221031 | Includes all the functions of R147-V5 with the following additions:<br><br>[Cybersecurity] Resolved vulnerabilities in the RTAC web interface where an authenticated attacker could exploit various functions to cause information leakage of user credentials and underlying RTAC operating system behavior.                    | All  |
| ACSELERATOR RTAC Software Version:<br>1.33.xxx<br><br>Manual Date Code: 20221109   | Resolved an issue where upgrading RTAC firmware could result in a scenario where X.509 certificates could no longer be generated, web proxies could not be created, and ACSELERATOR RTAC would not be capable of going online with an RTAC after sending settings, with a resulting error message of "Unable to connect to RTE." | All  |
|  | Resolved an issue in EtherCAT I/O communications where spontaneous topology reconfigurations could occur, causing temporary module status errors.  | 3530,<br>3530-4,<br>2241,<br>3555,<br>3560     |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R147-V5-Z000020-D20220726<br>SEL-3530-4-R147-V5-Z000020-D20220726<br>SEL-2241-R147-V5-Z000020-D20220726<br>SEL-3505-R147-V5-Z000020-D20220726<br>SEL-3505-3-R147-V5-Z000020-D20220726<br>SEL-3532-N-R147-V5-Z000020-D20220726<br>SEL-3555-R147-V5-Z000020-D20220726 | Includes all the functions of R147-V4 with the following additions:<br><br>[Cybersecurity] Resolved an issue where specially crafted IEC 61131-3 user logic could escalate database user privileges. This exploit required user authentication and authorization to load an RTAC project.  | All  |
| ACSELERATOR RTAC Software Version:<br>1.33.xxx<br><br>Manual Date Code: 20220805   | [Cybersecurity] Resolved an issue where an unauthenticated user could access the password report.<br><br>[Cybersecurity] Modified the negative confirmation response time to a failed login attempt to be a variable amount of time between 2.5 and 5 seconds.   | All  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R147-V4-Z000035-D20220519<br>SEL-3530-4-R147-V4-Z000035-D20220519<br>SEL-2241-R147-V4-Z000035-D20220519<br>SEL-3505-R147-V4-Z000035-D20220519<br>SEL-3505-3-R147-V4-Z000035-D20220519<br>SEL-3532-N-R147-V4-Z000035-D20220519<br>SEL-3555-R147-V4-Z000035-D20220519 | Includes all the functions of R147-V3 with the following additions:<br><br>Resolved an issue in GOOSE receive where time stamp quality information was not populated from the message.   | All  |
| ACSELERATOR RTAC Software Version:<br>1.33.xxx<br><br>Manual Date Code: 20220601   | Resolved an issue in MMS client where MV or CMV points did not update when only instantaneous or magnitude attributes were included with the quality and time attributes.  | 3530<br>3530-4<br>2241<br>3532<br>3555<br>3560 |
|  | Resolved an issue where the <b>ENABLED</b> LED did not illuminate when the factory reset jumper was applied.   | All  |
|  | Resolved an issue in MMS client where buffered reports could not enable buffered reports in edition 2.1 servers by writing to resvTms.   | 3530<br>3530-4<br>2241<br>3532<br>3555         |
|  | Resolved an issue where Syslog messages generated by the RTAC could contain an incorrect hostname following a firmware upgrade or RTAC hostname change.  | All  |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>   | <b>Affected Models</b> |
|--|---|------------------------|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R147-V3-Z000015-D20210911<br>SEL-3530-4-R147-V3-Z000015-D20210911<br>SEL-2241-R147-V3-Z000015-D20210911<br>SEL-3505-R147-V3-Z000015-D20210911<br>SEL-3505-3-R147-V3-Z000015-D20210911<br>SEL-3532-N-R147-V3-Z000015-D20210911<br>SEL-3555-R147-V3-Z000015-D20210911 | Includes all the functions of R147-V2 with the following additions:   |                        |
|  | Updated BIOS for SEL-3555-2 to 2.4.49152.159.   | 3555                   |
|  | Resolved an issue in SEL Server where multiple new event and SOE notifications were sent simultaneously.  | All                    |
|  | Deprecated support for TLS 1.1 for RTAC web interface.  | All                    |
| ACCELERATOR RTAC Software Version:<br>1.33.xxx   | Resolved an issue in GOOSE Transmit where incorrect values may be transmitted on second state change when GOOSE messages are in both automation and main threads. | All                    |
| Manual Date Code: 20210915   | Resolved an issue in MMS Server where SBO cancel commands were not processed correctly after select had synchro or interlock check selected.                      | All                    |
|  | Encrypted port 1217 communications between ACCELERATOR RTAC software and RTAC firmware.   | All                    |
|  | Resolved an issue in logic engine API where data structures that contain pulseConfig_t did not accept writes.   | All                    |
|  | Added option to web interface to re-initialize retained variables when activating a project.  | All                    |
|  | Enabled HTTP Strict Transport Security (HSTS) in web interface.   | All                    |
|  | Added support to Modbus Client to support COMTRADE and SOE collection when communicating with IEDs using GE UR firmware versions 8.0 and later.                   | All                    |
|  | Resolved an issue in logic engine API where the response is incomplete when data in the response contain values of NaN.   | All                    |
|  | Resolved an issue in IEEE C37.118 server where excessive CPU resources are used when using transport mode UDP_S with multicast enabled.                           | All                    |
|  | Resolved an incorrect example IP range in Network Audit configuration in the RTAC web interface.  | All                    |
|  | Resolved an issue in Modbus Server where the server disconnects the TCP socket connection after 15 seconds of inactivity.   | All                    |
|  | Resolved an issue where a connected IED page may not always load correctly when using Chromium-based browsers such as Microsoft Edge or Google Chrome.            | All                    |
|  | Resolved an issue in SEL server where first login attempt with an LDAP user account does not succeed.   | All                    |
|  | Resolved an issue where the SNMP Client/Manager incorrectly deasserts to Offline and increments the Message_Received_Count POU pins.                              | All                    |
|  | Resolved an issue where SEL Client will not collect events from an SEL-700G when using FTP.   | All                    |
|  | Resolved an issue where RADIUS will not authenticate when null characters are included in the authentication response from the server.                            | All                    |
|  | Resolved an issue in project API and web server where project uploads are not accepted when the project name contains spaces.                                     | All                    |
|  | Resolved an issue where GOOSE is not processed correctly on Ethernet interface 2 when bonded to Ethernet interface 1.   | 3555                   |

| Firmware, Software, and Manual Versions  | Summary of Revisions  | Affected Models                          |
|--|---|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R147-V2-Z000007-D20210318<br>SEL-3530-4-R147-V2-Z000007-D20210318<br>SEL-2241-R147-V2-Z000007-D20210318<br>SEL-3505-R147-V2-Z000007-D20210318<br>SEL-3505-3-R147-V2-Z000007-D20210318<br>SEL-3532-N-R147-V2-Z000007-D20210318<br>SEL-3555-R147-V2-Z000007-D20210318 | Includes all the functions of R147-V1 with the following additions:<br><br>Updated BIOS for SEL-3555-2 to 2.3.49152.138.  |  |
| ACSELERATOR RTAC Software Version:<br>1.31.xxx   | Resolved an issue introduced in R145-V0 where IEC 60870-103 may not send commands.  | 3530<br>3530-4<br>2241<br>3505<br>3505-3 |
| Manual Date Code: 20210320   | Addressed behavior caused by changes in web browsers where users may remain logged in after closing a web browser session when the Web Session Timeout is set to 0.<br><br>Enhanced Modbus Client to support COMTRADE and SOE collection from GE UR firmware versions 7.91 and later. | All                                      |
|  | Resolved an issue where the sel_file.soe_request_descending function does not return SOE records if the ReturnAlarmSoeOnly input was set to TRUE.   | All                                      |
|  | Resolved an issue that may prevent users from logging in after restoring User Accounts settings during a project send while using an authenticated LDAP or Radius account.  | All                                      |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R147-V1-Z000001-D20201026<br>SEL-3530-4-R147-V1-Z000001-D20201026<br>SEL-2241-R147-V1-Z000001-D20201026<br>SEL-3505-R147-V1-Z000001-D20201026<br>SEL-3505-3-R147-V1-Z000001-D20201026<br>SEL-3532-N-R147-V1-Z000001-D20201026<br>SEL-3555-R147-V1-Z000001-D20201026 | Includes all the functions of R147-V0 with the following additions:<br><br>Modified C37.118 server transport scheme UDP_S time to live count to 64.   | All                                      |
| ACSELERATOR RTAC Software Version:<br>1.31.xxx   | Resolved an issue in MIRRORED BITS RX where invalid validity may be incorrectly set when system time changes.   | All                                      |
| Manual Date Code: 20201026   | Resolved an issue in Audit Utilities where some hosts may not be included in the network audit report.  | 3532<br>3555                             |
|  | Resolved an issue in SEL Client introduced in R147-V0 where COMTRADE events are not successfully collected over serial connections.   | All                                      |
|  | Resolved an issue that may cause an erroneous one-hour offset to be introduced into protocol time stamps in the hour leading up to and following the exit of DST.   | All                                      |
|  | Modified Audit Utilities to support a configurable ARP request rate.  | 3532<br>3555                             |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R147-V0-Z000992-D20200820<br>SEL-3530-4-R147-V0-Z000992-D20200820<br>SEL-2241-R147-V0-Z000992-D20200820<br>SEL-3505-R147-V0-Z000992-D20200820<br>SEL-3505-3-R147-V0-Z000992-D20200820<br>SEL-3532-N-R147-V0-Z000992-D20200820<br>SEL-3555-R147-V0-Z000992-D20200820 | Added support for creating custom URLs on the RTAC that will proxy web traffic to and from an origin web server.  | All                                      |
| ACSELERATOR RTAC Software Version:<br>1.31.xxx   | Enhanced Audit Utilities API to manage multiple audit reports.  | 3555<br>3532                             |
| Manual Date Code: 20200820   | Added support to manage network audits via web interface.   | 3555<br>3532                             |
|  | Enhanced Logic Engine API to support grouping of tags.  | All                                      |
|  | Enhanced Logic Engine API to support streaming of tags and tag groups.  | All                                      |
|  | Added additional support to the Project Web API for activating projects.  | All                                      |
|  | Enhanced SEL client to support event collection via FTP.  | All                                      |
|  | Enhanced SEL client to save Flex parse responses to a file.   | All                                      |
|  | Added IP address of client machine to SOE when users log in, log out, or enter an incorrect password.   | All                                      |
|  | Enhanced PRP to support multiple pairs of PRP interfaces.   | 3555                                     |

| <b>Firmware, Software, and Manual Versions</b> | <b>Summary of Revisions</b>  | <b>Affected Models</b>                 |
|--|--|--|
|  | Enhanced MMS server to support 100 unbuffered reports and 100 buffered reports.  | All                                    |
|  | Added support for Bit mode in sysCom library for serial ports.   | All                                    |
|  | Added support for Axion Wave Server.   | 3555                                   |
|  | Updated HMI binz file to version 3.3.1.217.  | 3530<br>3530-4<br>2241<br>3532<br>3555 |
|  | Increased EtherCAT network bandwidth to support additional modules and tags.   | 3555                                   |
|  | Enhanced EtherCAT network to support 32 frequency groups.  | 3555                                   |
|  | Added support to EthernetIP for PRP.   | All                                    |
|  | Added support to SEL client for SEL-400G.  | All                                    |
|  | Resolved an issue where GOOSE may not receive messages on Ethernet Port 2. Only affects SEL-3555-2 and SEL-3560.   | 3555                                   |
|  | Removed session ID and username from web server GET requests.  | All                                    |
|  | Web interface changed to prevent web server cross-domain client access.  | All                                    |
|  | Resolved an issue in the DNP server where changing deadbands during runtime may cause the server to restart.   | All                                    |
|  | Resolved an issue where incoming time stamps from protocols may be shifted by the configured daylight-saving time offset when the transition to and from daylight-saving time occurs. The time-stamp shift behavior lasts for the duration of the configured UTC_offset after the daylight-saving time transition. | All                                    |
|  | Updated IEEE C37.118 clients to use time quality from PMU if available.  | All                                    |
|  | Added support to IEEE C37.118 server to choose polar or rectangular formatted phasors.   | All                                    |
|  | Resolved an issue where EtherCAT discovery may not return all modules correctly if modules swapped positions after a successful initialization.  | 3530<br>3530-4<br>2241<br>3555         |
|  | Enhanced EtherCAT discovery to provide an accurate message when no modules are connected.  | 3530<br>3530-4<br>2241<br>3555         |
|  | Resolved an issue in SEL client where SEL-321-0 may not complete autoconfiguration.  | All                                    |

| Firmware, Software, and Manual Versions  | Summary of Revisions  | Affected Models                        |
|--|---|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R146-V5-Z000027-D20220519<br>SEL-3530-4-R146-V5-Z000027-D20220519<br>SEL-2241-R146-V5-Z000027-D20220519<br>SEL-3505-R146-V5-Z000027-D20220519<br>SEL-3505-3-R146-V5-Z000027-D20220519<br>SEL-3532-N-R146-V5-Z000027-D20220519<br>SEL-3555-R146-V5-Z000027-D20220519 | Includes all the functions of R146-V4 with the following additions:   |  |
| ACSELERATOR RTAC Software Version:<br>1.33.xxx   | Resolved an issue in GOOSE receive where time stamp quality information was not populated from the message.   | All                                    |
| Manual Date Code: 20220601   | Resolved an issue in MMS client where MV or CMV points did not update when only instantaneous or magnitude attributes were included with the quality and time attributes. | 3530<br>3530-4<br>2241<br>3532<br>3555 |
|  | Resolved an issue where the <b>ENABLED</b> LED did not illuminate when the factory reset jumper was applied.  | All                                    |
|  | Resolved an issue in MMS client where buffered reports could not enable buffered reports in edition 2.1 servers by writing to resvTms.                                    | 3530<br>3530-4<br>2241<br>3532<br>3555 |
|  | Resolved an issue where Syslog messages generated by the RTAC could contain an incorrect hostname following a firmware upgrade or RTAC hostname change.                   | All                                    |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R146-V4-Z000010-D20210910<br>SEL-3530-4-R146-V4-Z000010-D20210910<br>SEL-2241-R146-V4-Z000010-D20210910<br>SEL-3505-R146-V4-Z000010-D20210910<br>SEL-3505-3-R146-V4-Z000010-D20210910<br>SEL-3532-N-R146-V4-Z000010-D20210910<br>SEL-3555-R146-V4-Z000010-D20210910 | Includes all the functions of R146-V3 with the following additions:   |  |
| ACSELERATOR RTAC Software Version:<br>1.33.xxx   | Updated BIOS for SEL-3555-2 to 2.4.49152.159.   | 3555                                   |
| Manual Date Code: 20210915   | Resolved an issue in SEL Server where multiple new event and SOE notifications were sent simultaneously.  | All                                    |
|  | Deprecated support for TLS 1.1 for RTAC web interface.  | All                                    |
|  | Resolved an issue in GOOSE Transmit where incorrect values may be transmitted on second state change when GOOSE messages are in both automation and main threads.         | All                                    |
|  | Resolved an issue in MMS Server where SBO cancel commands were not processed correctly after select had synchro or interlock check selected.                              | All                                    |
|  | Encrypted port 1217 communications between ACSELERATOR RTAC software and RTAC firmware.   | All                                    |
|  | Resolved an issue in logic engine API where data structures that contain pulseConfig_t did not accept writes.   | All                                    |
|  | Enabled HTTP Strict Transport Security (HSTS) in web interface.   | All                                    |
|  | Removed traffic on TCP ports 15453 and 1217 from all live Ethernet communication captures.  | All                                    |
|  | Added support to Modbus Client to support COMTRADE and SOE collection when communicating with IEDs using GE UR firmware versions 8.0 and later.                           | All                                    |
|  | Resolved an issue in logic engine API where the response is incomplete when data in the response contain values of NaN.   | All                                    |
|  | Resolved an issue in IEEE C37.118 server where excessive CPU resources are used when using transport mode UDP_S with multicast enabled.                                   | All                                    |
|  | Resolved an issue in Modbus Server where the server disconnects the TCP socket connection after 15 seconds of inactivity.   | All                                    |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b>                   |
|--|--|--|
|  | Resolved an issue where a connected IED page may not always load correctly when using Chromium-based browsers such as Microsoft Edge or Google Chrome.                     | All                                      |
|  | Resolved an issue in SEL server where first login attempt with an LDAP user account does not succeed.  | All                                      |
|  | Resolved an issue where the SNMP Client/Manager incorrectly deasserts to Offline and increments the Message_Received_Count POU pins.                                       | All                                      |
|  | Resolved an issue where RADIUS will not authenticate when null characters are included in the authentication response from the server.                                     | All                                      |
|  | Resolved an issue where GOOSE is not processed correctly on Ethernet interface 2 when bonded to Ethernet interface 1.  | All                                      |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R146-V3-Z000006-D20210318<br>SEL-3530-4-R146-V3-Z000006-D20210318<br>SEL-2241-R146-V3-Z000006-D20210318<br>SEL-3505-R146-V3-Z000006-D20210318<br>SEL-3505-3-R146-V3-Z000006-D20210318<br>SEL-3532-N-R146-V3-Z000006-D20210318<br>SEL-3555-R146-V3-Z000006-D20210318 | Includes all the functions of R146-V2 with the following additions:  |  |
|  | Updated BIOS for SEL-3555-2 to 2.3.49152.138.  | 3555                                     |
|  | Resolved an issue introduced in R145-V0 where IEC 60870-103 may not send commands.   | 3530<br>3530-4<br>2241<br>3505<br>3505-3 |
| ACCELERATOR RTAC Software Version:<br>1.30.xxx   | Addressed behavior caused by changes in web browsers where users may remain logged in after closing a web browser session when the Web Session Timeout is set to 0.        | All                                      |
| Manual Date Code: 20210320   | Enhanced Modbus Client to support COMTRADE and SOE collection from GE UR firmware versions 7.91 and later.   | All                                      |
|  | Modified C37.118 server transport scheme UDP_S time to live count to 64.   | All                                      |
|  | Resolved an issue in MIRRORED BITS RX where invalid validity may be incorrectly set when system time changes.  | All                                      |
|  | Resolved an issue where GOOSE may not receive messages on Ethernet Port 2. Only affects SEL-3555-2 and SEL-3560.   | 3555                                     |
|  | Resolved an issue in the DNP server where changing deadbands during runtime may cause the server to restart.   | All                                      |
|  | Removed session id and username from web server GET requests.  | All                                      |
|  | Web interface changed to prevent web server cross-domain client access.  | All                                      |
|  | Resolved an issue where the sel_file.soe_request_descending function does not return SOE records if the ReturnAlarmSoeOnly input was set to TRUE.                          | All                                      |
|  | Resolved an issue that may prevent users from logging in after restoring User Accounts settings during a project send while using an authenticated LDAP or Radius account. | All                                      |
|  | Resolved an issue in Audit Utilities where some hosts may not be included in the network audit report.   | 3532<br>3555                             |



| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>   | <b>Affected Models</b>         |
|--|---|--------------------------------|
|  | Resolved an issue where a Modbus server may not transmit ASCII values correctly.  | All                            |
|  | Resolved an issue where an SEL client may log ASCII SER data into the RTAC SOE log more than once.  | All                            |
|  | Resolved an issue where EtherCat CTPT COMTRADE events may lose data while time is synchronizing to a new source.  | 3530<br>3530-4<br>2241<br>3555 |
|  | Resolved an issue where Comm Monitor may not capture all data when EtherCAT is enabled.   | 3530<br>3530-4<br>2241<br>3555 |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R145-V4-Z000008-D20210910<br>SEL-3530-4-R145-V4-Z000008-D20210910<br>SEL-2241-R145-V4-Z000008-D20210910<br>SEL-3505-R145-V4-Z000008-D20210910<br>SEL-3505-3-R145-V4-Z000008-D20210910<br>SEL-3532-N-R145-V4-Z000008-D20210910<br>SEL-3555-R145-V4-Z000008-D20210910 | Includes all the functions of R145-V3 with the following additions:   |                                |
|  | Updated BIOS for SEL-3555-2 to 2.4.49152.159.   | 3555                           |
|  | Resolved an issue in SEL Server where multiple new event and SOE notifications were sent simultaneously.  | All                            |
|  | Deprecated support for TLS 1.1 for RTAC web interface.  | All                            |
| ACSELERATOR RTAC Software Version:<br>1.29.xxx   | Resolved an issue in GOOSE Transmit where incorrect values may be transmitted on second state change when GOOSE messages are in both automation and main threads. | All                            |
| Manual Date Code: 20210915   | Resolved an issue in MMS Server where SBO cancel commands were not processed correctly after select had synchro or interlock check selected.                      | All                            |
|  | Encrypted port 1217 communications between ACSELERATOR RTAC software and RTAC firmware.   | All                            |
|  | Enabled HTTP Strict Transport Security (HSTS) in web interface.   | All                            |
|  | Removed traffic on TCP ports 15453 and 1217 from all live Ethernet communication captures.  | All                            |
|  | Added support to Modbus Client to support COMTRADE and SOE collection when communicating with IEDs using GE UR firmware versions 8.0 and later.                   | All                            |
|  | Resolved an issue in IEEE C37.118 server where excessive CPU resources are used when using transport mode UDP_S with multicast enabled.                           | All                            |
|  | Resolved an issue in Modbus Server where the server disconnects the TCP socket connection after 15 seconds of inactivity.   | All                            |
|  | Resolved an issue where a connected IED page may not always load correctly when using Chromium-based browsers such as Microsoft Edge or Google Chrome.            | All                            |
|  | Resolved an issue in SEL server where first login attempt with an LDAP user account does not succeed.   | All                            |
|  | Resolved an issue where the SNMP Client/Manager incorrectly deasserts to Offline and increments the Message_Received_Count POU pins.                              | All                            |
|  | Resolved an issue where RADIUS will not authenticate when null characters are included in the authentication response from the server.                            | All                            |
|  | Resolved an issue where GOOSE is not processed correctly on Ethernet interface 2 when bonded to Ethernet interface 1.   | 3555                           |

## 1000 Firmware and Manual Versions

### Firmware

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models                        |
|--|--|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R145-V3-Z000006-D20210318<br>SEL-3530-4-R145-V3-Z000006-D20210318<br>SEL-2241-R145-V3-Z000006-D20210318<br>SEL-3505-R145-V3-Z000006-D20210318<br>SEL-3505-3-R145-V3-Z000006-D20210318<br>SEL-3532-N-R145-V3-Z000006-D20210318<br>SEL-3555-R145-V3-Z000006-D20210318 | Includes all the functions of R145-V2 with the following additions:<br><br>Updated BIOS for SEL-3555-2 to 2.3.49152.138.   | 3555                                   |
| ACSELERATOR RTAC Software Version:<br>1.29.xxx   | Resolved an issue introduced in R145-V0 where IEC 60870-103 may not send commands.   | 3530<br>3530-4<br>2241<br>3532<br>3555 |
| Manual Date Code: 20210320   | Addressed behavior caused by changes in web browsers where users may remain logged in after closing a web browser session when the Web Session Timeout is set to 0.        | All                                    |
|  | Enhanced the Modbus Client to support COMTRADE and SOE collection from GE UR firmware versions 7.91 and later.   | All                                    |
|  | Modified the C37.118 server transport scheme UDP_S time to live count to 64.   | All                                    |
|  | Resolved an issue in MIRRORED BITS RX where invalid validity may be incorrectly set when system time changes.  | All                                    |
|  | Resolved an issue where GOOSE may not receive messages on Ethernet Port 2. Only affects SEL-3555-2 and SEL-3560.   | 3555                                   |
|  | Resolved an issue in the DNP server where changing deadbands during runtime may cause the server to restart.   | All                                    |
|  | Removed session id and username from web server GET requests.  | All                                    |
|  | Web interface changed to prevent web server cross-domain client access.  | All                                    |
|  | Resolved an issue where the sel_file.soe_request_descending function does not return SOE records if the ReturnAlarmSoeOnly input was set to TRUE.                          | All                                    |
|  | Resolved an issue that may prevent users from logging in after restoring User Accounts settings during a project send while using an authenticated LDAP or Radius account. | All                                    |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R145-V2-Z000014-D20200610<br>SEL-3530-4-R145-V2-Z000014-D20200610<br>SEL-2241-R145-V2-Z000014-D20200610<br>SEL-3505-R145-V2-Z000014-D20200610<br>SEL-3505-3-R145-V2-Z000014-D20200610<br>SEL-3532-N-R145-V2-Z000014-D20200610<br>SEL-3555-R145-V2-Z000014-D20200610 | Includes all the functions of R145-V1 with the following additions:  |  |
|  | Resolved an issue where settings configured in the local display HMI during run time were lost after a power cycle.  | 3532<br>3555                           |
|  | Removed the option to log out of the desktop manager from the local display.   | 3532<br>3555                           |
|  | Resolved an issue where event logs may not restore properly.   | All                                    |
|  | Resolved an issue in GOOSE Receive where mapping DPS tag types to INS tag types may cause a logic engine restart.  | All                                    |
| ACSELERATOR RTAC Software Version:<br>1.29.xxx   | Added a Generate Log button on the Diagnostics page of the RTAC webpage.   | All                                    |
| Manual Date Code: 20200610   | Resolved an issue in SEL Client where an ASCII request may not access the correct permissions level before issuing the request.  | All                                    |
|  | Resolved an issue where event logs may not successfully download when included in a project send.  | All                                    |
|  | Resolved an issue where some RTAC projects may request an encryption password when activated through the RTAC's web interface.   | All                                    |
|  | Resolved an issue where DNP servers configured to use TLS may experience high CPU utilization after startup.   | All                                    |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b>         |
|--|--|--------------------------------|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R145-V1-Z000010-D20200122<br>SEL-3530-4-R145-V1-Z000010-D20200122<br>SEL-2241-R145-V1-Z000010-D20200122<br>SEL-3505-R145-V1-Z000010-D20200122<br>SEL-3505-3-R145-V1-Z000010-D20200122<br>SEL-3532-N-R145-V1-Z000010-D20200122<br>SEL-3555-R145-V1-Z000010-D20200122 | Includes all the functions of R145-V0 with the following additions:  |                                |
|  | Resolved an issue where URL whitelisting may not allow access to a URL.  | All                            |
|  | Resolved an issue where DNP or IEC 60870-5-101/104 servers may report duplicate events after a power cycle of one unit when using SCADA Protocol Redundancy. | All                            |
| ACSELERATOR RTAC Software Version:<br>1.29.xxx   | Resolved an issue where Live Data may cause a logic engine restart.  | All                            |
| Manual Date Code: 20200122   | Resolved an issue in DNP Server introduced in R144-V0 in which enabling unsolicited messaging at startup may not work.                                       | All                            |
|  | Resolved an issue where SEL client may go offline while reading large COMTRADE events.   | All                            |
|  | Resolved an issue where the web interface may not be viewable with Microsoft Internet Explorer.  | All                            |
|  | Resolved an issue with Live Data where tags may not reappear on the web interface after EN is set to FALSE.  | All                            |
|  | Resolved an issue where all user accounts may be lost during a firmware change.  | All                            |
|  | Resolved an issue where web interface logins may not succeed when five or more web sessions are active.  | 3555                           |
|  | Updated BIOS versions:<br>► SEL-3555: 1.9.49152.65<br>► SEL-3555-2: 2.2.49152.121  | 3555                           |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R145-V0-Z000001-D20190830<br>SEL-3530-4-R145-V0-Z000001-D20190830<br>SEL-2241-R145-V0-Z000001-D20190830<br>SEL-3505-R145-V0-Z000001-D20190830<br>SEL-3505-3-R145-V0-Z000001-D20190830<br>SEL-3532-N-R145-V0-Z000001-D20190830<br>SEL-3555-R145-V0-Z000001-D20190830 | Enhanced IEEE C37.118 client capabilities.   | All                            |
|  | Enhanced IEEE C37.118 Axion PMU capabilities.  | All                            |
|  | Enhanced IEEE C37.118 server capabilities.   | All                            |
|  | Added support for IEC 60870-5-103 client.  | All                            |
|  | Added support for IEC 60870-5-103 Dynamic Disturbance Recorder collection.   | All                            |
| ACSELERATOR RTAC Software Version:<br>1.29.xxx   | Enhanced SEL server to allow reading files via ASCII.  | All                            |
| Manual Date Code: 20190830   | Enhanced SEL server to manage passwords for local accounts.  | All                            |
|  | Enhanced Modbus server to support multiple servers on the same serial port or IP port.   | All                            |
|  | Added Licensed Features page to RTAC web interface.  | All                            |
|  | Enhanced S/FTP client to support creation of folders.  | All                            |
|  | Enhanced MMS server to support the stSel attribute for controls.   | All                            |
|  | Expanded CT ratio range for all ac inputs on Axion I/O modules.  | 3530<br>3530-4<br>2241<br>3555 |
|  | Resolved an issue in Live Data where string alarms may not clear.  | All                            |
|  | Resolved an issue on SEL-3555 where communications may not resume after an interruption on Serial Port 2.  | 3555                           |

## 1002 Firmware and Manual Versions

### Firmware

| Firmware, Software, and Manual Versions  | Summary of Revisions  | Affected Models                  |
|--|---|----------------------------------|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R144-V8-Z000031-D20200917<br>SEL-3530-4-R144-V8-Z000031-D20200917<br>SEL-2241-R144-V8-Z000031-D20200917<br>SEL-3505-R144-V8-Z000031-D20200917<br>SEL-3505-3-R144-V8-Z000031-D20200917<br>SEL-3532-N-R144-V8-Z000031-D20200917<br>SEL-3555-R144-V8-Z000031-D20200917<br><br>ACSELERATOR RTAC Software Version:<br>1.28.xxx<br><br>Manual Date Code: 20201026 | Includes all the functions of R144-V7 with the following additions:<br>Modified C37.118 server transport scheme UDP_S time to live count to 64.<br>Resolved an issue in MIRRORED BITS RX where invalid validity may be incorrectly set when system time changes.<br>Removed session ID and username from web service GET requests.<br>Web interface changed to prevent web server cross-domain client access.<br>Resolved an issue in the DNP server where changing deadbands during runtime may cause the server to restart.<br>Resolved an issue on SEL-3555-2 and SEL-3560 where GOOSE may not receive messages on Ethernet Port 2. Note that this does not affect the SEL-3555.<br>Resolved an issue in Live Data introduced in R144-V7 that may prevent tags from being displayed. | All                              |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R144-V7-Z000028-D20200610<br>SEL-3530-4-R144-V7-Z000028-D20200610<br>SEL-2241-R144-V7-Z000028-D20200610<br>SEL-3505-R144-V7-Z000028-D20200610<br>SEL-3505-3-R144-V7-Z000028-D20200610<br>SEL-3532-N-R144-V7-Z000028-D20200610<br>SEL-3555-R144-V7-Z000028-D20200610<br><br>ACSELERATOR RTAC Software Version:<br>1.28.xxx<br><br>Manual Date Code: 20200610 | Includes all the functions of R144-V6 with the following additions:<br>Removed the option to log out of the desktop manager from the local display.<br>Resolved an issue where settings configured in the local display HMI during run time were lost after a power cycle.<br>Resolved an issue in GOOSE Receive where mapping DPS tag types to INS tag types may cause a logic engine restart.<br>Added a Generate Log button on the Diagnostics page of the RTAC webpage.<br>Resolved an issue where DNP servers configured to use TLS may experience high CPU utilization after startup.   | 3555<br>3532<br>3555<br>All      |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R144-V6-Z000022-D20200420<br>SEL-3530-4-R144-V6-Z000022-D20200420<br>SEL-2241-R144-V6-Z000022-D20200420<br>SEL-3505-R144-V6-Z000022-D20200420<br>SEL-3505-3-R144-V6-Z000022-D20200420<br>SEL-3532-N-R144-V6-Z000022-D20200420<br>SEL-3555-R144-V6-Z000022-D20200420<br><br>ACSELERATOR RTAC Software Version:<br>1.28.xxx<br><br>Manual Date Code: 20200425 | Includes all the functions of R144-V5 with the following additions:<br>Resolved an issue in SEL Client where an ASCII request may not access the correct permissions level before issuing the request.<br>Resolved an issue where some RTAC projects may request an encryption password when activated through the RTAC's web interface.<br>Resolved an issue where web interface logins may not succeed when five or more web sessions are active.<br>Resolved an issue where event logs may not successfully download when included in a project send.  | All<br>All<br>All<br>3555<br>All |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R144-V5-Z000003-D20200122<br>SEL-3530-4-R144-V5-Z000003-D20200122<br>SEL-2241-R144-V5-Z000003-D20200122<br>SEL-3505-R144-V5-Z000003-D20200122<br>SEL-3505-3-R144-V5-Z000003-D20200122<br>SEL-3532-N-R144-V5-Z000003-D20200122<br>SEL-3555-R144-V5-Z000003-D20200122<br><br>ACSELERATOR RTAC Software Version:<br>1.28.xxx<br><br>Manual Date Code: 20200122 | Includes all the functions of R144-V4 with the following additions:<br>Resolved an issue where URL whitelisting may not allow access to a URL.<br>Resolved an issue where DNP or IEC 60870-5-101/104 servers may report duplicate events after a power cycle of one unit when using SCADA Protocol Redundancy.<br>Updated BIOS versions:<br>➤ SEL-3555: 1.9.49152.65<br>➤ SEL-3555-2: 2.2.49152.121   | All<br>All<br>3555               |

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models  |
|--|--|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R144-V4-Z000017-D20191015<br>SEL-3530-4-R144-V4-Z000017-D20191015<br>SEL-2241-R144-V4-Z000017-D20191015<br>SEL-3505-R144-V4-Z000017-D20191015<br>SEL-3505-3-R144-V4-Z000017-D20191015<br>SEL-3532-N-R144-V4-Z000017-D20191015<br>SEL-3555-R144-V4-Z000017-D20191015<br><br>ACSELERATOR RTAC Software Version:<br>1.28.xxx<br><br>Manual Date Code: 20191015   | Includes all the functions of R144-V3 with the following additions:<br><br>Resolved an issue where BIOS may not have updated after loading R144-V3.<br><br>Resolved an issue where CDC client may send more than one select during a control operation.<br><br>Resolved an issue where SEL client may go offline while reading large COMTRADE events.<br><br>Resolved an issue on SEL-3555 where communications may not resume after an interruption on Serial Port 2.<br><br>Resolved an issue in DNP Server introduced in R144-V0 in which enabling unsolicited messaging at startup may not work.   | 3555<br>All<br>All<br>All<br>All<br>All                |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R144-V3-Z000013-D20190508<br>SEL-3530-4-R144-V3-Z000013-D20190508<br>SEL-2241-R144-V3-Z000013-D20190508<br>SEL-3505-R144-V3-Z000013-D20190508<br>SEL-3505-3-R144-V3-Z000013-D20190508<br>SEL-3532-N-R144-V3-Z000013-D20190508<br>SEL-3555-R144-V3-Z000013-D20190508<br><br>ACSELERATOR RTAC Software Version:<br>1.28.xxx<br><br>Manual Date Code: 20190508   | Includes all the functions of R144-V2 with the following additions:<br><br>Resolved an issue in IEC 60870-5-101 server where an incorrect response for link status with function code 9 may be returned.<br><br>Resolved an issue where user-created Live Data filters did not persist through firmware upgrades.<br><br>Resolved an issue with Live Data performance for configurations that have many tags and aliases.<br><br>Resolved an issue with SEL client where relays that do not support Fast Meter may not complete autoconfiguration.<br><br>Resolved an issue introduced in R144-V2 where SEL-3555 BIOS may not update.<br><br>Added BIOS version to web interface dashboard.<br><br>Resolved issue where not all GOOSE messages were processed on SEL-3390-E4 cards.  | All<br>All<br>All<br>All<br>All<br>All<br>3555<br>3555 |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R144-V2-Z000010-D20190216<br>SEL-3530-4-R144-V2-Z000010-D20190216<br>SEL-2241-R144-V2-Z000010-D20190216<br>SEL-3505-R144-V2-Z000010-D20190216<br>SEL-3505-3-R144-V2-Z000010-D20190216<br>SEL-3532-N-R144-V2-Z000010-D20190216<br>SEL-3555-R144-V2-Z000010-D20190216<br><br><b>Note:</b> The SEL-3555 is not available for order after July 1st, 2019. The SEL-3555-2 is the replacement for the SEL-3555. The SEL-3555-2 does not support firmware versions prior to R144-V2.<br><br>ACSELERATOR RTAC Software Version:<br>1.28.xxx<br><br>Manual Date Code: 20190216 | Includes all the functions of R144-V1 with the following additions:<br><br>Updated BIOS versions:<br>► SEL-3555: 1.8.49152.54<br>► SEL-3555-2: 2.1.49152.52<br><br>Enhanced Dynamic Disturbance Recorder extension for projects created in or converted to R144 and later.<br><br>Resolved an issue introduced in R144-V0 where changes to the system UTC offset may not be applied to output time until a power cycle occurs.<br><br>Resolved an issue introduced in R144-V0 where DNP clients may restart when a DNP client receives a packet while enabling.<br><br>Resolved an issue introduced in R143-V0 where DNP server may use excessive CPU resources when enabling.<br><br>Resolved an issue where a firmware upgrade using the web interface could fail with an "Upload file is too large" error.<br><br>Added support for SEL-3555-2. | 3555<br>5033<br>All<br>All<br>All<br>3555<br>3555      |

## **1004 Firmware and Manual Versions**

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models                          |
|--|--|--|
|  | Resolved an issue in the SEL client that may prevent collection of COMTRADE events from an SEL-735.  | All                                      |
|  | Resolved an issue in the SEL client that may prevent collection of COMTRADE events from an SEL-751.  | All                                      |
|  | Resolved an issue that prevented gateway communications when PRP is enabled.   | All                                      |
|  | Resolved an issue in SEL client where Compressed ASCII message failures were incorrectly incremented after closing a transparent connection. | All                                      |
|  | Resolved an issue where receive MIRRORED BITS variable names could not be renamed.   | All                                      |
|  | Resolved an issue in CDC Type 2 server where controls may not be processed.  | All                                      |
|  | Resolved an issue in DNP server where static and event data may not report in the correct order.   | All                                      |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R143-V1-Z000002-D20200117<br>SEL-3530-4-R143-V1-Z000002-D20200117<br>SEL-2241-R143-V1-Z000002-D20200117<br>SEL-3505-R143-V1-Z000002-D20200117<br>SEL-3505-3-R143-V1-Z000002-D20200117<br>SEL-3532-N-R143-V1-Z000002-D20200117<br>SEL-3555-R143-V1-Z000002-D20200117 | Includes all the functions of R143-V0 with the following additions:  |  |
| ACSELERATOR RTAC Software Version:<br>1.26.xxx   | Resolved an issue where a watchdog time-out may occur after a network loop occurs with many ARP messages.                                    | 3530<br>3530-4<br>2241<br>3505<br>3505-3 |
| Manual Date Code: 20200122   | Resolved an issue where an Ethernet interface may become unresponsive after a network loop occurs with many ARP messages.                    | 3530<br>3530-4<br>2241<br>3505<br>3505-3 |
|  | Includes all the functions of R143-V0 with no additions.   | 3532<br>3555                             |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R143-V0-Z000210-D20180710<br>SEL-3530-4-R143-V0-Z000210-D20180710<br>SEL-2241-R143-V0-Z000210-D20180710<br>SEL-3505-R143-V0-Z000210-D20180710<br>SEL-3505-3-R143-V0-Z000210-D20180710<br>SEL-3532-N-R143-V0-Z000210-D20180710<br>SEL-3555-R143-V0-Z000210-D20180710 | Added support for SEL-2245-411 4 CT/4 LEA Monitoring Module.   | 3530<br>3530-4<br>2241<br>3555           |
| ACSELERATOR RTAC Software Version:<br>1.26.xxx   | Added support for EtherCAT discovery of connected Axion modules.   | 3530<br>3530-4<br>2241<br>3555           |
| Manual Date Code: 20180710   | Added support for single-mode fiber on the SEL-2243 Power Coupler.   | 3530<br>3530-4<br>2241<br>3555           |
|  | Added support for DNP secure authentication on DNP server.   | All                                      |
|  | Added support for PTP on bonded and PRP Ethernet interfaces.   | All                                      |
|  | Added URL whitelist to RTAC web interface.   | All                                      |
|  | Added support for 115200 baud rate for millisecond MIRRORED BITS.  | All                                      |
|  | Added support for Kiosk mode via the local display.  | 3532<br>3555                             |
|  | Added support for virtual keyboard on the local display.   | 3532<br>3555                             |

## 1006 Firmware and Manual Versions

## Firmware

| Firmware, Software, and Manual Versions  | Summary of Revisions  | Affected Models                          |
|--|---|--|
|  | Removed support for TLS 1.0.  | All                                      |
|  | Resolved an issue in which DNP multi-drop servers may stop responding if configured in failover mode.   | All                                      |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R142-V1-Z001001-D20200124<br>SEL-3530-4-R142-V1-Z001001-D20200124<br>SEL-2241-R142-V1-Z001001-D20200124<br>SEL-3505-R142-V1-Z001001-D20200124<br>SEL-3505-3-R142-V1-Z001001-D20200124<br>SEL-3532-N-R142-V1-Z001001-D20200124<br>SEL-3555-R142-V1-Z001001-D20200124 | Includes all the functions of R142-V0 with the following additions:<br><br>Resolved an issue where a watchdog time-out may occur after a network loop occurs with many ARP messages.                              | 3530<br>3530-4<br>2241<br>3505<br>3505-3 |
| ACSELERATOR RTAC Software Version:<br>1.25.xxx   | Resolved an issue where an Ethernet interface may become unresponsive after a network loop occurs with many ARP messages.   | 3530<br>3530-4<br>2241<br>3505<br>3505-3 |
| Manual Date Code: 20200122   | Includes all the functions of R142-V0 with no additions.  | 3532<br>3555                             |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R142-V0-Z001001-D20180330<br>SEL-3530-4-R142-V0-Z001001-D20180330<br>SEL-2241-R142-V0-Z001001-D20180330<br>SEL-3505-R142-V0-Z001001-D20180330<br>SEL-3505-3-R142-V0-Z001001-D20180330<br>SEL-3532-N-R142-V0-Z001001-D20180330<br>SEL-3555-R142-V0-Z001001-D20180330 | Added support for SES-92 Client.<br><br>Added support to compare two RTAC configurations in ACSELERATOR RTAC.<br><br>Enhanced IEC 60870-5-101/104 server to order interrogation response by IOA addresses.        | 5033                                     |
| ACSELERATOR RTAC Software Version:<br>1.25.xxx   | Added the ability to modify DNP addresses in DNP servers via the logic engine.  | All                                      |
| Manual Date Code: 20180330   | Addressed an issue where IEC 60870-5-101/104 or DNP servers may not send events from one server when SCADA Protocol Redundancy is enabled and both servers are actively communicating with clients.               | All                                      |
|  | Modified MMS client so that it does not change configured tags time stamps when validity transitions from Good to Invalid.  | 3530<br>3530-4<br>2241<br>3532<br>3555   |
|  | Addressed an issue where projects may not be activated through the RTAC web interface.  | All                                      |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R141-V0-Z001001-D20171107<br>SEL-3530-4-R141-V0-Z001001-D20171107<br>SEL-2241-R141-V0-Z001001-D20171107<br>SEL-3505-R141-V0-Z001001-D20171107<br>SEL-3505-3-R141-V0-Z001001-D20171107<br>SEL-3532-N-R141-V0-Z001001-D20171107<br>SEL-3555-R141-V0-Z001001-D20171107 | Added the ability to create custom user roles based upon selected access permissions.<br><br>Added the password report to the RTAC web interface.   | All                                      |
| ACSELERATOR RTAC Software Version:<br>1.24.xxx   | Added support for SEL-2245-4 AC Metering Module for enabling/disabling module tags individually to conserve EtherCAT bandwidth.<br><br><b>Note:</b> R141 requires upgrading the module firmware to be compatible. | 3530<br>3530-4<br>2241<br>3555           |
| Manual Date Code: 20171201   | Added support for SEL-2245-22 AI-ER module to run in AC voltage mode and increased oscillography to 24 kHz.<br><br><b>Note:</b> R141 requires upgrading the module firmware to be compatible.                     | 3530<br>3530-4<br>2241<br>3555           |
|  | Added UDP-only transportation scheme to IEEE C37.118 Server protocol.   | All                                      |
|  | Enhanced the web session time-out to include an infinite timeout option.  | All                                      |

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models  |
|--|--|--|
|  | Resolved an issue that could prevent auto-configuration from completing with some SEL-200 series relays.   | All  |
|  | Resolved an issue introduced in R139-V0 in which the state number in the GOOSE protocol would not increment on the first data change.  | All  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R140-V0-Z001001-D20170728<br>SEL-3530-4-R140-V0-Z001001-D20170728<br>SEL-2241-R140-V0-Z001001-D20170728<br>SEL-3505-R140-V0-Z001001-D20170728<br>SEL-3505-3-R140-V0-Z001001-D20170728<br>SEL-3532-N-R140-V0-Z001001-D20170728<br>SEL-3555-R140-V0-Z001001-D20170728<br><br>ACSELERATOR RTAC Software Version:<br>1.23.xxx<br><br>Manual Date Code: 20170728 | Added support for the SEL-2245-42 AC Protection Module for enabling/disabling module tags individually to conserve EtherCAT bandwidth.<br><br>Added support for IEEE C37.118 Server for the extended configuration message (CFG3).<br><br>Added support for recording groups for recording RTAC logic engine analog quantities.<br><br>Added a setting to recording groups to allow time aligning the trigger line to the RTAC logic assertion that triggered the recording group. | 3530<br>3530-4<br>2241<br>3555<br><br>All<br><br>3530<br>3530-4<br>2241<br>3555<br><br>All<br><br>3530<br>3530-4<br>2241<br>3555 |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R139-V2-Z001001-D20180202<br>SEL-3530-4-R139-V2-Z001001-D20180202<br>SEL-2241-R139-V2-Z001001-D20180202<br>SEL-3505-R139-V2-Z001001-D20180202<br>SEL-3505-3-R139-V2-Z001001-D20180202<br>SEL-3532-N-R139-V2-Z001001-D20180202<br>SEL-3555-R139-V2-Z001001-D20180202<br><br>ACSELERATOR RTAC Software Version:<br>1.22.xxx<br><br>Manual Date Code: 20180202 | Includes all the functions of R139-V1 with the following additions:<br><br>Addressed an issue where IEC 60870-5-101/104 or DNP servers may not send events out one server when SCADA Protocol Redundancy is enabled and both servers are actively communicating with clients.<br><br>Resolved an issue introduced in R139-V0 in which the state number in the GOOSE protocol would not increment on the first data change.   | All  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R139-V1-Z001001-D20170728<br>SEL-3530-4-R139-V1-Z001001-D20170728<br>SEL-2241-R139-V1-Z001001-D20170728<br>SEL-3505-R139-V1-Z001001-D20170728<br>SEL-3505-3-R139-V1-Z001001-D20170728<br>SEL-3532-N-R139-V1-Z001001-D20170728<br>SEL-3555-R139-V1-Z001001-D20170728<br><br>ACSELERATOR RTAC Software Version:<br>1.22.xxx<br><br>Manual Date Code: 20170728 | Includes all the functions of R139-V0 with the following additions:<br><br>Enhanced web server to modify DNP server addresses.<br><br>Enhanced MMS client to support 129-character rptID for report control blocks.<br><br>Resolved an issue introduced in R139 in which the last general interrogation report was not saved in the BRCB buffer.   | All  |

**1008 Firmware and Manual Versions****Firmware**

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b>         |
|--|--|--------------------------------|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R139-V0-Z001001-D20170505<br>SEL-3530-4-R139-V0-Z001001-D20170505<br>SEL-2241-R139-V0-Z001001-D20170505<br>SEL-3505-R139-V0-Z001001-D20170505<br>SEL-3505-3-R139-V0-Z001001-D20170505<br>SEL-3532-N-R139-V0-Z001001-D20170505<br>SEL-3555-R139-V0-Z001001-D20170505 | Added FTP and SFTP server.   | All                            |
| ACSELERATOR RTAC Software Version:<br>1.22.xxx   | Added support for the SEL-2245-42 AC Protection Module.  | 3530<br>3530-4<br>2241<br>3555 |
| Manual Date Code: 20170505   | Added support for configuring recording groups to combine events from multiple SEL-2245-42 AC Protection modules, SEL-2244 Digital I/O modules, or digital IEC 61131-3 tags. | 3530<br>3530-4<br>2241<br>3555 |
|  | Added support for Dynamic Disturbance Recording (DDR) Extension.   | 3530<br>3530-4<br>2241<br>3555 |
|  | Enhanced the RTAC webpage to support firmware updates.   | All                            |
|  | Added the ability to support IP aliasing on Ethernet interfaces from the logic engine.   | All                            |
|  | Enhanced X.509 certificates to have more options for the valid time period.  | All                            |
|  | Enhanced SEL Server to support direct transparent connections.   | All                            |
|  | Enhanced SEL Server to notify ACSELERATOR TEAM of uncollected SOE events.  | All                            |
|  | Enhanced transparent connections with SEL Client to preserve quality of meter tags.  | All                            |
|  | Enhanced Live Data to support filtering.   | All                            |
|  | Enhanced Live Data to have descriptive labels to filter on.  | All                            |
|  | Enhanced Live Data to support the enable/disable of forcing Live Data per point.   | All                            |
|  | Enhanced DNP server to allow individual DNP points to be excluded from a DNP server class 0 response.  | All                            |
|  | Enhanced IEC 60870-5-101/104 Client and Server to allow per-point control selection of Direct/SBO type.  | All                            |
|  | Enhanced image quality on the local display for certain resolutions.   | 3532<br>3555                   |
|  | Updated IEC 61850 MMS Client/Server and GOOSE for Edition 2 Certification.   | 3530<br>3530-4<br>2241<br>3555 |
|  | Resolved an issue introduced in R137 which would temporarily show SOE time stamps in UTC rather than local time when a new UTC offset was applied.                           | All                            |
|  | Resolved an issue in SEL Client where an incorrect offset may be applied to SOE time stamps collected from ASCII SER reports.  | All                            |
|  | Resolved an issue introduced in R137 where attempting to go online with a project could incorrectly detect a settings change.  | All                            |

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models  |
|--|--|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R138-V0-Z001001-D20170220<br>SEL-3530-4-R138-V0-Z001001-D20170220<br>SEL-2241-R138-V0-Z001001-D20170220<br>SEL-3505-R138-V0-Z001001-D20170220<br>SEL-3505-3-R138-V0-Z001001-D20170220<br>SEL-3532-N-R138-V0-Z001001-D20170220<br>SEL-3555-R138-V0-Z001001-D20170220<br><br>ACSELERATOR RTAC Software Version:<br>1.21.xxx<br><br>Manual Date Code: 20170220 | Enhanced Live Data to support forcing from the web interface.<br><br>Added Comm Monitor to Connected IED page on web interface.<br><br>Added Ping to Connected IED page on web interface.<br><br>Added Alstom Event Collection.<br><br>Resolved an issue in LG 8979 server where Analog Groups might not report assigned points correctly.<br><br>Resolved an issue in IEC 61850 MMS Client that could prevent communications from starting.   | All  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R137-V0-Z001001-D20170109<br>SEL-3530-4-R137-V0-Z001001-D20170109<br>SEL-2241-R137-V0-Z001001-D20170109<br>SEL-3505-R137-V0-Z001001-D20170109<br>SEL-3505-3-R137-V0-Z001001-D20170109<br>SEL-3532-N-R137-V0-Z001001-D20170109<br>SEL-3555-R137-V0-Z001001-D20170109<br><br>ACSELERATOR RTAC Software Version:<br>1.20.xxx<br><br>Manual Date Code: 20170109 | Added Simple Network Manager Protocol (SNMP) Manager/Client.<br><br>Added Parallel Redundancy Protocol (PRP).<br><br>Added support for CDC Type II Server Protocol.<br><br>Enhanced the SEL Client to support COMTRADE event collection.<br><br>Enhanced COMTRADE Collection Count from 256 to 1024.<br><br>Enhanced LG 8979 client to support configurable timer count per control point.<br><br>Resolved an issue with eDNA client where time stamps were not updated to the current time when sending data sync messages.   | All<br>3532<br>3555<br>All<br>All<br>All<br>3532<br>3555 |
|  | Resolved an issue where time stamps on SOE webpage may differ by one second relative to SOE time stamps shown on the HMI SOE viewer.<br><br>Resolved an issue introduced in R136 where the SEL-3555 may not synchronize the year correctly when connected to IRIG-B000.<br><br>Resolved an issue with SCADA Protocol Redundancy where duplicate events may be reported during a power cycle condition.<br><br>Resolved an issue introduced in R136 where COMTRADE events may not be collected via Modbus Client.<br><br>Resolved an issue in LG 8979 server where Analog Groups may not report assigned points correctly.<br><br>Resolved an issue which could prevent a project read process from completing if the SOE log was included. | All<br>3555<br>All<br>All<br>All<br>All                  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R136-V3-Z001001-D20180131<br>SEL-3530-4-R136-V3-Z001001-D20180131<br>SEL-2241-R136-V3-Z001001-D20180131<br>SEL-3505-R136-V3-Z001001-D20180131<br>SEL-3505-3-R136-V3-Z001001-D20180131<br>SEL-3532-N-R136-V3-Z001001-D20180131<br>SEL-3555-R136-V3-Z001001-D20180131<br><br>ACSELERATOR RTAC Software Version:<br>1.19.xxx<br><br>Manual Date Code: 20180202 | Includes all the functions of R136-V2 with the following addition:<br><br>Addressed an issue where projects may not be activated through the RTAC web interface.   | All  |

## 1010 Firmware and Manual Versions

### Firmware

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models |
|--|--|-----------------|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R136-V2-Z001001-D20170109<br>SEL-3530-4-R136-V2-Z001001-D20170109<br>SEL-2241-R136-V2-Z001001-D20170109<br>SEL-3505-R136-V2-Z001001-D20170109<br>SEL-3505-3-R136-V2-Z001001-D20170109<br>SEL-3532-N-R136-V2-Z001001-D20170109<br>SEL-3555-R136-V2-Z001001-D20170109 | Includes all the functions of R136-V1 with the following additions:  |                 |
|  | Resolved an issue in IEC 61850 MMS Server where time stamps may be reported incorrectly when status value changes occur less than the configured bufTime apart.  | All             |
| ACSELERATOR RTAC Software Version:<br>1.19.xxx   | Resolved an issue introduced in R134 that potentially allows unauthorized access via the web interface.  | All             |
| Manual Date Code: 20170108   | Resolved a potential issue introduced in R134 that could cause memory issues if user logic creates or modifies many files.   | All             |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R136-V1-Z001001-D20161026<br>SEL-3530-4-R136-V1-Z001001-D20161026<br>SEL-2241-R136-V1-Z001001-D20161026<br>SEL-3505-R136-V1-Z001001-D20161026<br>SEL-3505-3-R136-V1-Z001001-D20161026<br>SEL-3532-N-R136-V1-Z001001-D20161026<br>SEL-3555-R136-V1-Z001001-D20161026 | Includes all the functions of R136-V0 with the following addition:<br><br>Resolved an issue introduced in R136-V0 in the IEC 60870-5-104 server that could prevent data transfer after a TCP keep-alive time-out condition.  | All             |
| ACSELERATOR RTAC Software Version:<br>1.19.xxx   |  |                 |
| Manual Date Code: 20161026   |  |                 |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R136-V0-Z001001-D20160624<br>SEL-3530-4-R136-V0-Z001001-D20160624<br>SEL-2241-R136-V0-Z001001-D20160624<br>SEL-3505-R136-V0-Z001001-D20160624<br>SEL-3505-3-R136-V0-Z001001-D20160624<br>SEL-3532-N-R136-V0-Z001001-D20160624<br>SEL-3555-R136-V0-Z001001-D20160624 | Added IEC 60870-5-101/104 Client Protocol.<br><br>Enhanced the IEC 61850 MMS client to collect COMTRADE files.<br><br>Enhanced the IEC 61850 MMS server to serve files through MMS file transfer.<br><br>Added support to synchronize time from Precise Time Protocol (PTP).<br><br>Added support for SCADA Protocol Redundancy for DNP server and IEC 60870-5-101/104 server to support redundant RTAC systems. | All             |
| ACSELERATOR RTAC Software Version:<br>1.19.xxx   |  |                 |
| Manual Date Code: 20160624   | Added the ability to upload RTAC project files through the web interface.<br><br>Added the ability to configure network interfaces through IEC 61131-3.  | All             |
|  | Enhanced SEL transparent communications to support YMODEM file transfer.   | All             |
|  | Enhanced the SEL server to accept multiple simultaneous connections for engineering access.  | All             |
|  | Added support for Axion I/O modules on SEL-3555.   | 3555            |
|  | Enhanced SEL-3555 to support a combination of 256 DNP clients and servers.   | 3555            |
|  | Enhanced SEL-3555 to support a combination of 256 Modbus clients and servers.  | 3555            |
|  | Enhanced SEL-3555 to support a combination of 254 SEL clients and servers.   | 3555            |
|  | Enhanced SEL-3555 projects to support 100,000 tags.  | 3555            |
|  | Added eDNA client on SEL-3555 and SEL-3532.  | 3532<br>3555    |
|  | Enhanced ACSELERATOR RTAC to add password protection to projects.  | 5033            |

| <b>Firmware, Software, and Manual Versions</b>  | <b>Summary of Revisions</b>  | <b>Affected Models</b>                        |
|---|--|---|
|   | <p>Enhanced ACSELERATOR RTAC to encrypt and obfuscate passwords used for IED communications.</p> <p>Enhanced ACSELERATOR RTAC to import XML files into existing project configurations.</p> <p>Enhanced the IEC 60870-5-101 server to support failover.</p> <p>Resolved an issue in the LG 8979 client where the oscillatory bit was not updated correctly when the MCD bit was set in a change report.</p> <p>Resolved an issue that could prevent SEL Protocol communications with SEL-700GT relays.</p> <p>Resolved an issue introduced in R134 that could prevent retained variables from persisting through a power cycle.</p> <p>Updated SSH client and server to address CVE-2013-4421 and CVE-2013-4434.</p> | 5033  |
| <p>Firmware Identification (FID) Numbers:<br/>SEL-3530-R135-V3-Z001001-D20170109<br/>SEL-3530-4-R135-V3-Z001001-D20170109<br/>SEL-2241-R135-V3-Z001001-D20170109<br/>SEL-3505-R135-V3-Z001001-D20170109<br/>SEL-3505-3-R135-V3-Z001001-D20170109<br/>SEL-3532-N-R135-V3-Z001001-D20170109<br/>SEL-3555-R135-V3-Z001001-D20170109</p> <p>ACSELERATOR RTAC Software Version:<br/>1.18.xxx</p> <p>Manual Date Code: 20170108</p> | <p>Includes all the functions of R135-V2 with the following additions:</p> <p>Resolved an issue in IEC 61850 MMS Server where time stamps may be reported incorrectly when status value changes occur less than the configured bufTime apart.</p> <p>Resolved an issue introduced in R134 that potentially allows unauthorized access via the web interface.</p> <p>Resolved a potential issue introduced in R134 that could cause memory issues if user logic creates or modifies many files.</p>   | All   |
| <p>Firmware Identification (FID) Numbers:<br/>SEL-3530-R135-V2-Z001001-D20160212<br/>SEL-3530-4-R135-V2-Z001001-D20160212<br/>SEL-2241-R135-V2-Z001001-D20160212<br/>SEL-3505-R135-V2-Z001001-D20160212<br/>SEL-3505-3-R135-V2-Z001001-D20160212<br/>SEL-3532-N-R135-V2-Z001001-D20160212<br/>SEL-3555-R135-V2-Z001001-D20160212</p> <p>ACSELERATOR RTAC Software Version:<br/>1.18.xxx</p> <p>Manual Date Code: 20160212</p> | <p>Includes all the functions of R135-V1 with the following additions:</p> <p>Removed TLS cipher support for RC4.</p> <p>Upgraded default X.509 certificate digital hashing algorithm from SHA1 to SHA2.</p> <p>Upgraded default X.509 certificate RSA public key from 1024 to 2048 bits.</p> <p>Resolved an issue introduced in R134-V1 where communications to a DNP server could be disrupted after receiving an invalid DNP request.</p> <p>Resolved potential issue in MMS Client which could prevent dataset requests from being issued.</p>   | All<br>3530<br>3530-4<br>2241<br>3532<br>3555 |
| <p>Firmware Identification (FID) Numbers:<br/>SEL-3530-R135-V1-Z001001-D20160115<br/>SEL-3530-4-R135-V1-Z001001-D20160115<br/>SEL-2241-R135-V1-Z001001-D20160115<br/>SEL-3505-R135-V1-Z001001-D20160115<br/>SEL-3505-3-R135-V1-Z001001-D20160115<br/>SEL-3532-N-R135-V1-Z001001-D20160115<br/>SEL-3555-R135-V1-Z001001-D20160115</p> <p>ACSELERATOR RTAC Software Version:<br/>1.18.xxx</p> <p>Manual Date Code: 20160201</p> | <p>Resolved issue in ACSELERATOR RTAC version 1.18.7222.1758 where IEC 60870 server sector settings were not retained.</p>   | 5033  |

**1012 Firmware and Manual Versions**  
**Firmware**

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b>   |
|--|--|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R135-V1-Z001001-D20160115<br>SEL-3530-4-R135-V1-Z001001-D20160115<br>SEL-2241-R135-V1-Z001001-D20160115<br>SEL-3505-R135-V1-Z001001-D20160115<br>SEL-3505-3-R135-V1-Z001001-D20160115<br>SEL-3532-N-R135-V1-Z001001-D20160115<br>SEL-3555-R135-V1-Z001001-D20160115<br><br>ACSELERATOR RTAC Software Version:<br>1.18.xxx<br><br>Manual Date Code: 20160115 | Includes all the functions of R135-V0 with the following additions:<br><br>Resolved password monitoring issue in SEL client with password change detection and storage.<br><br>Resolved issue that could cause incorrect IRIG time distribution when multiple serial cards are in use. | All<br><br>3555  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R135-V0-Z001001-D20150904<br>SEL-3530-4-R135-V0-Z001001-D20150904<br>SEL-2241-R135-V0-Z001001-D20150904<br>SEL-3505-R135-V0-Z001001-D20150904<br>SEL-3505-3-R135-V0-Z001001-D20150904<br>SEL-3532-N-R135-V0-Z001001-D20150904<br>SEL-3555-R135-V0-Z001001-D20150904<br><br>ACSELERATOR RTAC Software Version:<br>1.18.xxx<br><br>Manual Date Code: 20150904 | Added IEC 61850 MMS Server.<br><br>Added docking and undocking of editor panels in ACSELERATOR RTAC.<br><br>Enhanced ACSELERATOR RTAC start menu to display RTAC type and enable right-click convert and rename of RTAC projects.  | 3530<br>3530-4<br>2241<br>3505<br>3505-3<br>3532<br><br>5033<br><br>5033 |
|  | Added a setting in SEL server to disable passthrough connections.  | 3530<br>3530-4<br>2241<br>3505<br>3505-3<br>3532                         |
|  | Added support for accessing SOE and event files in the logic engine by using the FileIO library.   | 3530<br>3530-4<br>2241<br>3505<br>3505-3<br>3532                         |
|  | Added a setting to LG 8979 client to skip startup initialization of the protocol communications.   | 3530<br>3530-4<br>2241<br>3505<br>3505-3<br>3532                         |
|  | Modified LG 8979 server to assert the MCD bit when oscillatory is asserted.  | 3530<br>3530-4<br>2241<br>3505<br>3505-3<br>3532                         |
|  | Enhanced Alarm Summary with automatic updates and alarm color changes.   | 3530<br>3530-4<br>2241<br>3505<br>3505-3<br>3532                         |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>   | <b>Affected Models</b>                           |
|--|---|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R134-V4-Z001001-D20170109<br>SEL-3530-4-R134-V4-Z001001-D20170109<br>SEL-2241-R134-V4-Z001001-D20170109<br>SEL-3505-R134-V4-Z001001-D20170109<br>SEL-3505-3-R134-V4-Z001001-D20170109<br>SEL-3532-N-R134-V4-Z001001-D20170109<br>SEL-3555-R134-V4-Z001001-D20170109 | Modified Live Data on the Web interface to use view filters, display Asserted/Deasserted instead of True/False for the status value, and change entry color when point is in alarm. | 3530<br>3530-4<br>2241<br>3505<br>3505-3<br>3532 |
|  | Modified IED Summary Report on the RTAC web interface to show bytes sent and received on each channel.  | 3530<br>3530-4<br>2241<br>3505<br>3505-3<br>3532 |
|  | Resolved potential vulnerability in firmware versions prior to R135 in which an affected DNP3 UDP or C37.118 UDP communications channel could be disrupted or terminated.           | 3530<br>3530-4<br>2241<br>3505<br>3505-3<br>3532 |
| ACCELERATOR RTAC Software Version:<br>1.17.xxx<br><br>Manual Date Code: 20170108   | Includes all the functions of R134-V3 with the following additions:   |  |
|  | Resolved an issue introduced in R134 that potentially allows unauthorized access via the web interface.   | All  |
| ACCELERATOR RTAC Software Version:<br>1.17.xxx<br><br>Manual Date Code: 20160212   | Resolved a potential issue introduced in R134 that could cause memory issues if user logic creates or modifies many files.  | All  |
|  | Includes all the functions of R134-V2 with the following additions:   |  |
|  | Removed TLS cipher support for RC4.   | All  |
|  | Upgraded default X.509 certificate digital hashing algorithm from SHA1 to SHA2.   | All  |
|  | Upgraded default X.509 certificate RSA public key from 1024 to 2048 bits.   | All  |
|  | Resolved potential vulnerability in firmware versions prior to R134-V2 in which an affected DNP3 UDP or C37.118 UDP communications channel could be disrupted or terminated.        | All  |
|  | Resolved potential issue in MMS Client which could prevent dataset requests from being issued.  | All  |
|  | Resolved an issue introduced in R134-V1 where communications to a DNP server could be disrupted after receiving an invalid DNP request.   | All  |
|  | Resolved password monitoring issue in SEL client with password change detection and storage.  | All  |
|  | Resolved issue that could cause incorrect IRIG time distribution when multiple serial cards are in use.   | 3555   |

## **1014 Firmware and Manual Versions**

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>   | <b>Affected Models</b>         |
|--|---|--------------------------------|
|  | Resolved an issue with web Live Data updates.   | All                            |
|  | Resolved an issue in CP2179 client that could cause the POU to go offline after an SBO operation.   | All                            |
|  | Resolved an issue that prevented the USB_B_Link diagnostic from functioning.  | All                            |
|  | Resolved an issue introduced in R132 that could cause transparent Ethernet tunneled connections to SEL-400 Series Relays to become unresponsive.  | All                            |
|  | Resolved an issue introduced in R133 that caused the quality and status bits to indicate incorrectly when EtherCAT modules were disconnected and Disable_On_Network_Error was set to FALSE. | 3530<br>3530-4<br>2241         |
|  | Resolved a potential issue introduced in R126 that could cause memory issues if there are more than 150 SEL IED events on the RTAC.   | All                            |
|  | Resolved an issue in EtherCAT time stamps where UTC offset was adjusted by seconds rather than by minutes.  | 3530<br>3530-4<br>2241         |
| Firmware Identification (FID) Number:<br>SEL-3555-R134-V0-Z001001-D20150311  | Initial version.  | 3555                           |
| ACSELERATOR RTAC Software Version:<br>1.17.xxx   |   |                                |
| Manual Date Code: 20150311   |   |                                |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R133-V1-Z001001-D20160212<br>SEL-3530-4-R133-V1-Z001001-D20160212<br>SEL-2241-R133-V1-Z001001-D20160212<br>SEL-3505-R133-V1-Z001001-D20160212<br>SEL-3505-3-R133-V1-Z001001-D20160212<br>SEL-3532-N-R133-V1-Z001001-D20160212 | Includes all the functions of R133-V0 with the following additions:   |                                |
| ACSELERATOR RTAC Software Version:<br>1.16.xxx   | Removed TLS cipher support for RC4.   | All                            |
| Manual Date Code: 20160212   | Upgraded default X.509 certificate digital hashing algorithm from SHA1 to SHA2.   | All                            |
|  | Upgraded default X.509 certificate RSA public key from 1024 to 2048 bits.   | All                            |
|  | Resolved potential vulnerability in firmware versions prior to R133-V1 in which an affected DNP3 UDP or C37.118 UDP communications channel could be disrupted or terminated.                | All                            |
|  | Resolved potential issue in MMS Client which could prevent dataset requests from being issued.  | 3530<br>3530-4<br>2241<br>3532 |
|  | Resolved password monitoring issue in SEL client with password change detection and storage.  | All                            |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R133-V0-Z001001-D20141103<br>SEL-3530-4-R133-V0-Z001001-D20141103<br>SEL-2241-R133-V0-Z001001-D20141103<br>SEL-3505-R133-V0-Z001001-D20141103<br>SEL-3505-3-R133-V0-Z001001-D20141103<br>SEL-3532-N-R133-V0-Z001001-D20141103 | Added SEL-2245-22 dc analog input extended range module.  | 3530<br>3530-4<br>2241         |
| ACSELERATOR RTAC Software Version:<br>1.16.xxx   | Updated C37.118 server implementation for IEEE C37.118.1a-2014 compliance with the SEL-2245-4 CT/PT module.   | 3530<br>3530-4<br>2241         |
| Manual Date Code: 20141103   | Enhanced C37.118 server when using SEL-2245-4 CT/PT modules to support as many as 64 phasor quantities at 60 messages per second.   | 3530<br>3530-4<br>2241         |
|  | Allowed tunneled DNP server connections to use primary and failover channels with matching TCP port numbers.  | All                            |

**1016 Firmware and Manual Versions**  
**Firmware**

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models                |
|--|--|--------------------------------|
|  | Added additional error messages in EtherCAT to display for invalid module settings or firmware.  | 3530<br>3530-4<br>2241         |
|  | Added UDP as a connection option for Access Points.  | All                            |
|  | Added option for 200 and 600 data rates to IEC 60870-5-101 protocol.   | All                            |
|  | Added an option to respond with a dump response to an exception request in SES-92 server.  | All                            |
|  | Resolved an issue introduced in R125 that could cause the IRIG out signal to differ from the RTAC system time by one second for a short period.                              | All                            |
|  | Resolved a vulnerability in OpenSSL that could allow unauthorized access to the web interface.   | All                            |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R132-V1-Z001001-D20160212<br>SEL-3530-4-R132-V1-Z001001-D20160212<br>SEL-2241-R132-V1-Z001001-D20160212<br>SEL-3505-R132-V1-Z001001-D20160212<br>SEL-3505-3-R132-V1-Z001001-D20160212<br>SEL-3532-N-R132-V1-Z001001-D20160212 | Includes all the functions of R132-V0 with the following additions:  |                                |
|  | Removed TLS cipher support for RC4.  | All                            |
|  | Upgraded default X.509 certificate digital hashing algorithm from SHA1 to SHA2.  | All                            |
|  | Upgraded default X.509 certificate RSA public key from 1024 to 2048 bits.  | All                            |
| ACSELERATOR RTAC Software Version:<br>1.15.xxx   | Resolved potential vulnerability in firmware versions prior to R132-V1 in which an affected DNP3 UDP or C37.118 UDP communications channel could be disrupted or terminated. | All                            |
| Manual Date Code: 20160212   |  |                                |
|  | Resolved potential issue in MMS Client which could prevent dataset requests from being issued.   | 3530<br>3530-4<br>2241<br>3532 |
|  | Resolved password monitoring issue in SEL client with password change detection and storage.   | All                            |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R132-V0-Z001001-D20140616<br>SEL-3530-4-R132-V0-Z001001-D20140616<br>SEL-2241-R132-V0-Z001001-D20140616<br>SEL-3505-R132-V0-Z001001-D20140616<br>SEL-3505-3-R132-V0-Z001001-D20140616<br>SEL-3532-N-R132-V0-Z001001-D20140616 | Added Syslog protocol.   | 3530<br>3530-4<br>2241<br>3505 |
|  | Added CP2179 client protocol.  | 3530<br>3530-4<br>2241<br>3505 |
| ACSELERATOR RTAC Software Version:<br>1.15.xxx   | Added support for TLSv1.2.   | 3530<br>3530-4<br>2241<br>3505 |
| Manual Date Code: 20140714   |  |                                |
|  | Added support for SEL-2245-2 DC AI Waveform Recording and Filter C. SEL-2245-2 module firmware must be upgraded to R102 or higher to use these features.                     | 3530<br>3530-4<br>2241         |
|  | Added support in DNP3 server to allow control actions with non-standard optypes.   | 3530<br>3530-4<br>2241<br>3505 |
|  | Added support in DNP3 server to allow serial tunneled connections for primary and secondary failover ports.  | 3530<br>3530-4<br>2241<br>3505 |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>   | <b>Affected Models</b>         |
|--|---|--------------------------------|
|  | Added configurable TCP keep-alive message rates.  | 3530<br>3530-4<br>2241<br>3505 |
|  | Added SSL/TLS or SSH tunneling for Ethernet protocols.  | 3530<br>3530-4<br>2241<br>3505 |
|  | Added support for converting a project for another RTAC type.   | 5033                           |
|  | Modified ACCELERATOR RTAC installation process to further protect database integrity during upgrade process.  | 5033                           |
|  | Added explanation in ACCELERATOR RTAC to indicate projects saved in R132 software version cannot be opened in earlier software versions. Changes also require user to resend entire project if the pre-R132 project is opened in R132 ACCELERATOR RTAC. | 5033                           |
|  | Enhanced software debugging utilities and library support.  | 5033                           |
|  | Enhanced ladder logic implementation to include rung comments.  | 5033                           |
|  | Resolved an issue in LG 8979 that could cause the server to stop responding after receiving certain malformed packets.  | 3530<br>3530-4<br>2241<br>3505 |
|  | Revised C37.118 client to as many as 32 inputs at 1 message per second.   | 3530<br>3530-4<br>2241<br>3505 |
|  | Revised SOE time-stamping to update the time stamp when the quality changes to invalid.   | 3530<br>3530-4<br>2241<br>3505 |
|  | Revised alarm acknowledge so that only unacknowledged alarms can be acknowledged.   | 3530<br>3530-4<br>2241<br>3505 |
|  | Resolved an issue with the SEL Client where the New Filtered Event Fault Location could reset when more than two events occur during the lockout period.  | 3530<br>3530-4<br>2241<br>3505 |
|  | Initial version.  | 3532                           |
|  | Initial version.  | 3505-3                         |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R131-V0-Z001001-D20140428<br>SEL-3530-4-R131-V0-Z001001-D20140428<br>SEL-2241-R131-V0-Z001001-D20140428<br>SEL-3505-R131-V0-Z001001-D20140428 | Added SEL-2245-3 dc analog output module.   | 3530<br>3530-4<br>2241         |
| ACCELERATOR RTAC Software Version:<br>1.14.xxx   |   |                                |
| Manual Date Code: 20140428   |   |                                |

## 1018 Firmware and Manual Versions

### Firmware

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models               |
|--|--|-------------------------------|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R130-V0-Z001001-D20140225<br>SEL-3530-4-R130-V0-Z001001-D20140225<br>SEL-2241-R130-V0-Z001001-D20140225<br>SEL-3505-R130-V0-Z001001-D20140225<br><br>ACSELERATOR RTAC Software Version:<br>1.14.xxx<br><br>Manual Date Code: 20140225 | Resolved an issue introduced in R126 where the SEL Client protocol could limit execution of multiple contemporaneous controls to one per processing cycle.   | All                           |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R129-V0-Z001001-D20140210<br>SEL-3530-4-R129-V0-Z001001-D20140210<br>SEL-2241-R129-V0-Z001001-D20140210<br>SEL-3505-R129-V0-Z001001-D20140210<br><br>ACSELERATOR RTAC Software Version:<br>1.14.xxx<br><br>Manual Date Code: 20140210 | Resolved an issue introduced in R126 that could prevent Axion modules from enabling after a power cycle.<br><br>Resolved an issue that could prevent a 61850 MMS device from reconnecting to the RTAC MMS Client following a cable disconnect/reconnect sequence when operating with a large number of IEDs.<br><br>Resolved an issue that could cause the date/time on an SEL-2241 RTAC to reset to midnight of 1/1/2000 if the SEL-2241 is rebooted on a Sunday and is not connected to IRIG. SEL-3530, SEL-3530-4, and SEL-3505 RTACs are not affected. | 3530<br>3530-4<br>2241        |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R128-V0-Z001001-D20140113<br>SEL-3530-4-R128-V0-Z001001-D20140113<br>SEL-2241-R128-V0-Z001001-D20140113<br>SEL-3505-R128-V0-Z001001-D20140113<br><br>ACSELERATOR RTAC Software Version:<br>1.14.xxx<br><br>Manual Date Code: 20140113 | Resolved an issue introduced in R126 that could cause Axion digital I/O tags to be incorrectly mapped if the tags are enabled or disabled from the default configuration.  | 3530<br>3530-4<br>2241        |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R127-V0-Z001001-D20131216<br>SEL-3530-4-R127-V0-Z001001-D20131216<br>SEL-2241-R127-V0-Z001001-D20131216<br>SEL-3505-R127-V0-Z001001-D20131216<br><br>ACSELERATOR RTAC Software Version:<br>1.14.xxx<br><br>Manual Date Code: 20131216 | Resolved potential issue in which asserted contact inputs may not be correctly reported directly following settings download. Inputs are reported correctly following power cycle of the RTAC. This issue impacts only onboard contact inputs; Axion I/O modules are unaffected.<br><br>Resolved an issue where the MMS Client could toggle offline or have a memory leak with a large number of IEDs.   | All<br>3530<br>3530-4<br>2241 |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R126-V0-Z001001-D20131206<br>SEL-3530-4-R126-V0-Z001001-D20131206<br>SEL-2241-R126-V0-Z001001-D20131206<br>SEL-3505-R126-V0-Z001001-D20131206<br><br>ACSELERATOR RTAC Software Version:<br>1.14.xxx<br><br>Manual Date Code: 20131206 | Modified download and restart method to greatly accelerate settings change time.<br><br>Added online edit capability for IEC 61131-3 programming.<br><br>Added pulse output support for contact output control points.<br><br>Extended range of supported characters for complex passwords.  | All<br>All<br>All<br>All      |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R126-V0-Z001001-D20131206<br>SEL-3530-4-R126-V0-Z001001-D20131206<br>SEL-2241-R126-V0-Z001001-D20131206<br>SEL-3505-R126-V0-Z001001-D20131206<br><br>ACSELERATOR RTAC Software Version:<br>1.14.xxx<br><br>Manual Date Code: 20131206 | Increased precision on contact input time stamps, especially when using ac input.<br><br>Added SSH mode for SEL server access.<br><br>Added ability to select default web or HMI homepage on web interface.  | All<br>All<br>All             |
|  | Modified DNP server to generate a freeze event if the freeze time is changed.  | All                           |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>   | <b>Affected Models</b> |
|--|---|------------------------|
|  | Added synchronization of RTE to top of second if EtherCAT is connected.   | 3530<br>3530-4<br>2241 |
|  | Added DNP client and server support for G20V1, immediate freeze.  | All                    |
|  | Resolved potential EIA-232 control line issue with DNP Server if channel failover feature is used.                                | All                    |
|  | Resolved potential issue with LDAP server failover.   | All                    |
|  | Resolved potential issue when using static routes on a bridged interface.   | All                    |
|  | Resolved an issue where the offset for IRIG input was not being applied.  | All                    |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R125-V0-Z001001-D20130827<br>SEL-3530-4-R125-V0-Z001001-D20130827<br>SEL-2241-R125-V0-Z001001-D20130827<br>SEL-3505-R125-V0-Z001001-D20130827 | Added SEL-2245-4 4CT/4PT ac metering module.  | 3530<br>3530-4<br>2241 |
| ACSELERATOR RTAC Software Version:<br>1.13.xxx   | Added IEEE C37.118 server protocol.   | All                    |
| Manual Date Code: 20130827   | Corrected an issue where DNP would continue switching RTS on the primary interface and fail to switch on the secondary interface. | All                    |
|  | Enhanced EtherCAT connection editor to allow inserting 4-slot chassis with associated module rules.                               | 3530<br>3530-4<br>2241 |
|  | Enhanced ACSELERATOR RTAC to allow collapsing sections of settings and include a check box for Advanced Settings.                 | 5033                   |
|  | Enhanced project export features to allow exporting and importing with XML files.   | 5033                   |
|  | Improved onboard hardware inputs time-stamp accuracy to 2 ms.   | All                    |
|  | Increased accuracy of Task Usage statistics displayed in the web server.  | All                    |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R124-V0-Z001001-D20130628<br>SEL-3530-4-R124-V0-Z001001-D20130628<br>SEL-2241-R124-V0-Z001001-D20130628<br>SEL-3505-R124-V0-Z001001-D20130628 | Added IEC 60870-5-101 and IEC 60870-5-104 server protocols.   | All                    |
|  | Added SES-92 server protocol.   | All                    |
|  | Added advanced-development startup switch to decrease download times for sending test projects.                                   | All                    |
| ACSELERATOR RTAC Software Version:<br>1.12.xxx   | Added setting to DNP client to disable startup messages.  | All                    |
|  | Added interframe delay setting for DNP server.  | All                    |
|  | Added ability to select 65534 as a DNP address.   | All                    |
|  | Improved HMI communications to reduce CPU burden and improve HMI load time.   | 3530<br>3530-4<br>2241 |
|  | Enhanced passwords to allow embedded spaces.  | All                    |
|  | Enhanced ACSELERATOR RTAC to allow 20000 characters in a project description.   | 5033                   |
|  | Enhanced web server performance by instructing PC web browser to cache pages.   | All                    |
|  | Modified web interface to show percent of real-time usage instead of percent of CPU usage.  | All                    |
|  | Removed divide by zero error with 64-bit number math.   | All                    |

**1020 Firmware and Manual Versions**  
**Firmware**

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models |
|--|--|-----------------|
|  | Resolved issue in DNP server where an Object 12, Var 3 with many points could cause a buffer overflow.   | All             |
|  | Resolved issue where Modbus server strings are not encoded properly.   | All             |
|  | Resolved issue that could cause MIRRORED BITS communications to not show invalid state even when the cable is disconnected.  | All             |
|  | Resolved issue in DNP server where quality change did not generate events.   | All             |
|  | Resolved time-synch issue in DNP client where first time-synch message is not accurate.  | All             |
|  | Resolved issue to allow IEC 61850 GOOSE to work more reliably over bridged interfaces.   | All             |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R123-V0-Z002001-D20130117<br>SEL-3530-4-R123-V0-Z002001-D20130117<br>SEL-2241-R123-V0-Z002001-D20130117<br>SEL-3505-R123-V0-Z002001-D20130117 | Resolved issue with communications counters that could cause the unit to reset.  | 5033            |
| ACSELERATOR RTAC Software Version:<br>1.11.41xx<br><br>Manual Date Code: 20130531  |  |                 |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R123-V0-Z001001-D20130117<br>SEL-3530-4-R123-V0-Z001001-D20130117<br>SEL-2241-R123-V0-Z001001-D20130117<br>SEL-3505-R123-V0-Z001001-D20130117 | Resolved issue with upgrading ACSELERATOR RTAC from pre-R122 versions to R123.<br><br>Resolved issue in which AI dead bands in DNP were reset to default values if a pre-R122 project is converted to R123.  | 5033            |
| ACSELERATOR RTAC Software Version:<br>1.11.41xx<br><br>Manual Date Code: 20130117  |  |                 |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R123-V0-Z001001-D20130117<br>SEL-3530-4-R123-V0-Z001001-D20130117<br>SEL-2241-R123-V0-Z001001-D20130117<br>SEL-3505-R123-V0-Z001001-D20130117 | Increased DNP/IP UDP listener ports from 32 to 128 layers.<br><br>Added support for IEC 61850 GOOSE on bridged Ethernet interfaces.<br><br>Modified SEL client event collection to accept relay events with nonstandard checksums.   | All             |
| ACSELERATOR RTAC Software Version:<br>1.11.41xx<br><br>Manual Date Code: 20130117  | Resolved issue that causes SEL server to become nonresponsive if unsolicited event reporting is enabled but <b>Allow Anonymous</b> is set to TRUE.<br><br>Resolved issue in which primary gateway was not configured if one of the interfaces were bridged or bonded to another interface.<br><br>Resolved issue in DNP client that may cause out-of-memory condition.<br><br>Resolved issue in DNP Server that may cause failure to start under certain setting conditions. | All             |

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>   | <b>Affected Models</b> |
|--|---|------------------------|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R122-V0-Z001001-D20121121<br>SEL-3530-4-R122-V0-Z001001-D20121121<br>SEL-2241-R122-V0-Z001001-D20121121<br>SEL-3505-R122-V0-Z001001-D20121121 | Added LG 8979 client protocol.  | All                    |
|  | Added LG 8979 server protocol.  | All                    |
|  | Increased valid DNP server point numbers to span 0–65535.   | All                    |
|  | Added INS as an analog data type in DNP client and DNP server.  | All                    |
| ACCELERATOR RTAC Software Version:<br>1.11.xxx   | Added support for control point tagging in the RTAC HMI.  | 3530<br>3530-4<br>2241 |
| Manual Date Code: 20121121   | Added support for IEC 61850 MMS client indexed buffered reports.  | 3530<br>3530-4<br>2241 |
|  | Added POU pins to IEC 61850 MMS client to indicate control states.  | 3530<br>3530-4<br>2241 |
|  | Enhanced DNP server to report only enabled tags in a sparse map.  | All                    |
|  | Resolved issue with C37.118 protocol on the SEL-700G Generator Protection Relay.  | All                    |
|  | Enhanced error checking in IEC 61850 MMS client for invalid CID files and configuration mismatch.                         | 3530<br>3530-4<br>2241 |
|  | Updated IEC 61850 MMS Client and GOOSE for KEMA certification.  | 3530<br>3530-4<br>2241 |
|  | Resolved software issue that sometimes resulted in the error message, "One or more library references failed to load."    | 5033                   |
|  | Resolved issue that sometimes caused incorrect logging of watchdog timeout message.                                       | All                    |
|  | Resolved issue resulting in incorrect saving of Ethernet settings on the web interface if the page is closed prematurely. | All                    |
|  | Resolved issue with matching IEC 61850 MMS client report names if some are only one character long.                       | 3530<br>3530-4<br>2241 |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R121-V0-Z001001-D20121031<br>SEL-3530-4-R121-V0-Z001001-D20121031<br>SEL-2241-R121-V0-Z001001-D20121031<br>SEL-3505-R121-V0-Z001001-D20121031 | Resolved issue that may cause intermittent connection failures with ACCELERATOR RTAC.                                     | All                    |
| ACCELERATOR RTAC Software Version:<br>1.10.xxx<br><br>Manual Date Code: 20121031   |   |                        |

**1022 Firmware and Manual Versions**  
**Firmware**

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b>   |
|--|--|--|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R120-V0-Z001001-D20120924<br>SEL-3530-4-R120-V0-Z001001-D20120924<br>SEL-2241-R120-V0-Z001001-D20120924<br>SEL-3505-R120-V0-Z001001-D20120924<br><br>ACSELERATOR RTAC Software Version:<br>1.10.xxx<br><br>Manual Date Code: 20121010 | Resolved issue with ACSELERATOR RTAC (v1.10.3427.1314) that caused update issues with INC and APC data types.<br><br>Updated web server to address potential denial of service (DOS) attacks.  | 5033<br><br>All  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R120-V0-Z001001-D20120924<br>SEL-3530-4-R120-V0-Z001001-D20120924<br>SEL-2241-R120-V0-Z001001-D20120924<br>SEL-3505-R120-V0-Z001001-D20120924<br><br>ACSELERATOR RTAC Software Version:<br>1.10.xxx<br><br>Manual Date Code: 20120924 | Resolved issue that may cause IRIG output to drift as much as one second.<br><br>Resolved issues with IEC 61850 MMS client that may cause polling and report collection to become disabled.  | All<br><br>3530<br>3530-4<br>2241  |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R119-V0-Z001001-D20120720<br>SEL-3530-4-R119-V0-Z001001-D20120720<br>SEL-2241-R119-V0-Z001001-D20120720<br>SEL-3505-R119-V0-Z001001-D20120720<br><br>ACSELERATOR RTAC Software Version:<br>1.10.xxx<br><br>Manual Date Code: 20120720 | Added support for Live Data visualization on web interface.<br><br>Added advanced filtering feature for SOE log.<br><br>Added support for as many as 100 DNP servers and DNP shared maps.<br><br>Added authentication string to IEC 61850 MMS client.<br><br>Increased max SEL flex parse messages from 30 to 50.<br><br>Modified DNP/IP Server to reply to the most recently connected polling client.<br><br>Modified SYS_TIME() function so you can use it in the automation and main tasks.<br><br>Added DCD option to DNP modem settings to allow DCD for carrier detect instead of CTS (applicable to COM_01 on RTACs or COM_05 on SEL-3505).<br><br>Modified DNP Client to interrupt an outstanding poll to issue a control operation.<br><br>Resolved potential issue in SEL Client that may trigger an out of memory condition if Flex Parse messages are configured and a port is constantly offline.<br><br>Upgraded operating system real-time kernel. | 3530<br>3530-4<br>2241<br><br>3530<br>3530-4<br>2241<br><br>3530<br>3530-4<br>2241<br><br>3530<br>3530-4<br>2241<br><br>3530<br>3530-4<br>2241<br><br>3530<br>3530-4<br>2241<br><br>3530<br>3530-4<br>2241<br><br>3530<br>3530-4<br>2241<br><br>3530<br>3530-4<br>2241<br><br>3530<br>3530-4<br>2241 |

| Firmware, Software, and Manual Versions  | Summary of Revisions  | Affected Models        |
|--|---|------------------------|
|  | Modified SEL Client Ethernet communications to prevent repeated auto-configuration when Fast SER messaging is enabled in settings but unsupported by the IED. | 3530<br>3530-4<br>2241 |
|  | Resolved potential issue with dropping MMS client buffered reports in SEL-351 communications.   | 3530<br>3530-4<br>2241 |
|  | Modified Modbus/TCP client to purge any pending controls when the channel transitions to an on-line state from an off-line state.                             | 3530<br>3530-4<br>2241 |
|  | Initial version.  | 3505                   |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R118-V0-Z001001-D20120427<br>SEL-3530-4-R118-V0-Z001001-D20120427<br>SEL-2241-R118-V0-Z001001-D20120427 | Revised for addition of 16 analog input and 10 FHC control output EtherCAT modules.   | All                    |
| ACSELERATOR RTAC Software Version:<br>1.9.xxx  |   |                        |
| Manual Date Code: 20120427   |   |                        |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R117-V0-Z001001-D20120316<br>SEL-3530-4-R117-V0-Z001001-D20120316<br>SEL-2241-R117-V0-Z001001-D20120316 | Enhanced ACSELERATOR RTAC to include the following:   | 5033                   |
|  | Improved retaining of alias tags and POU pin settings after resetting IEC 61850 configuration.  | 5033                   |
|  | Improved consistency of renaming and adding folders actions.  | 5033                   |
|  | Modified project description editing to retain formatting.  | 5033                   |
|  | Improved error checking to flag cross-assignment errors between automation and main task.   | 5033                   |
|  | Modified to decrease the frequency of auto-save/compile operations on an open project.  | 5033                   |
|  | Updated several device definition files.  | 5033                   |
|  | Added the FIND feature in Tags grid views.  | 5033                   |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R117-V0-Z001001-D20120316<br>SEL-3530-4-R117-V0-Z001001-D20120316<br>SEL-2241-R117-V0-Z001001-D20120316 | Resolved an issue introduced in R113 where digital input tags may be erroneously re-assigned when a user changes any SEL-2242-2 digital input setting.        | All                    |
| ACSELERATOR RTAC Software Version:<br>1.8.xxx  |   |                        |
| Manual Date Code: 20120316   |   |                        |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R116-V0-Z001001-D20120301<br>SEL-3530-4-R116-V0-Z001001-D20120301<br>SEL-2241-R116-V0-Z001001-D20120301 | Resolved issue that may prevent Ethernet communications if the last octet of the subnet mask is a non-zero value.   | All                    |
| ACSELERATOR RTAC Software Version:<br>1.8.xxx  | Modified the firmware upgrade to select the <b>Primary Gateway</b> check box if a default gateway was previously assigned.                                    | All                    |
| Manual Date Code: 20120301   |   |                        |

## 1024 Firmware and Manual Versions

**Firmware**

| <b>Firmware, Software, and Manual Versions</b>   | <b>Summary of Revisions</b>  | <b>Affected Models</b> |
|--|--|------------------------|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R115-V0-Z001001-D20120208<br>SEL-3530-4-R115-V0-Z001001-D20120208<br>SEL-2241-R115-V0-Z001001-D20120208 | Added IEC 61850 MMS Client support.  | All                    |
| ACSELERATOR RTAC Software Version:<br>1.8.xxx  | Added Network Global Variables (NGVLs) protocol.   | All                    |
| Manual Date Code: 20120208   | Provided ability to place GOOSE in automation task.  | All                    |
|  | Added ability to capture strings from access point router source receive messages.   | All                    |
|  | Added remediation for denial of service (DOS) attacks.   | All                    |
|  | Added default gateway for each Ethernet interface.   | All                    |
|  | Resolved issue where function block names did not show up in input assistant.  | All                    |
|  | Added ability to resolve DNP controls regardless of Tag Processor location in task list.   | All                    |
|  | Resolved issue to allow download of all 30,000 SOE logs via CSV.   | All                    |
|  | Added installation integrity check to assist resolving ACSELERATOR RTAC installation issues.   | 5033                   |
|  | Corrected out of memory conditions that may occur with excessive database access.  | All                    |
|  | Resolved issues caused by special characters in usernames.   | All                    |
|  | Resolved issue with restoring >500 event collection logs when sending a project with the Event Logs advanced option selected. The project would have to have been previously read with the Event Logs advanced read option selected from an RTAC that had event collection enabled and over 500 event logs stored. | All                    |
|  | Provided ability to configure IN101 for 12 volt input.   | All                    |
|  | Resolved issue where DNP server or Modbus server may not reply to polls if they have no tags defined.  | All                    |
|  | Added min time for GOOSE retransmission.   | All                    |
|  | Resolved issue where Modbus server may not reconnect after settings change.  | All                    |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R114-V0-Z001001-D20111010<br>SEL-3530-4-R114-V0-Z001001-D20111010<br>SEL-2241-R114-V0-Z001001-D20111010 | Added ability to assign multiple DNP servers to the same serial port.  | All                    |
| ACSELERATOR RTAC Software Version:<br>1.7.xxx  | Enhanced web interface to speed up webpage loading.  | All                    |
| Manual Date Code: 20111010   | Added HMI Operator user role.  | All                    |
|  | Enhanced web interface to address loading, communication, and stale session issues.  | All                    |
|  | Resolved issue with DNP shared map name changing during a save operation.  | All                    |
|  | Resolved issue with GOOSE MAC addressing to allow broader range of addresses.  | All                    |
|  | Resolved issue in DNP server failover with tunneled serial connections.  | All                    |
|  | Resolved issue with importing R108 project settings.   | 5033                   |
|  | Resolved autoconfiguration issue with the SEL-587.   | All                    |

| Firmware, Software, and Manual Versions  | Summary of Revisions  | Affected Models |
|--|---|-----------------|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R113-V0-Z001001-D20110721<br>SEL-3530-4-R113-V0-Z001001-D20110721<br>SEL-2241-R113-V0-Z001001-D20110721 | Added EtherCAT client protocol.   | 3530<br>3530-4  |
| ACSELERATOR RTAC Software Version:<br>1.6.xxx  | Added failover interface on DNP server.   | 3530<br>3530-4  |
| Manual Date Code: 20110721   | Added shared DNP maps.  | 3530<br>3530-4  |
|  | Added project templates to ACSELERATOR RTAC.  | 5033            |
|  | Enhanced DNP event buffer settings so that the buffer size can be defined based on the buffer type. | 3530<br>3530-4  |
|  | Added a communications offline timer for DNP server.  | 3530<br>3530-4  |
|  | Enhanced DNP server frozen counters to include a separate event class.                              | 3530<br>3530-4  |
|  | Added DDF for SEL-735.  | 5033            |
|  | Resolved issue with new event tags resetting unexpectedly.  | 3530<br>3530-4  |
|  | Resolved issue with AC input detection on input status points.                                      | 3530<br>3530-4  |
|  | Initial version.  | 2241            |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R112-V0-Z001001-D20110603<br>SEL-3530-4-R112-V0-Z001001-D20110603                                       | Updated ACSELERATOR RTAC to support Windows 7 64-bit operating systems.                             | 5033            |
| <b>Note:</b> This version of firmware is only compatible with versions of Diagram Builder greater than 1.1.0.1960.   | Resolved issue where flex parse messages do not recognize Level 2 passwords.                        | All             |
| ACSELERATOR RTAC Software Version:<br>1.5.xxx  | Added ability to support bursts of 5,000 events in logging function.                                | All             |
| Manual Date Code: 20110603   | Enhanced to support much faster project downloads.  | All             |
|  | Resolved issue where TXMB.status is not always updated correctly.                                   | All             |
|  | Resolved issue with detecting device reset jumper position.   | All             |
|  | Added SEL-751 support.  | All             |
|  | Added bridging support on Ethernet ports.   | All             |
|  | Added SEL client password pins to provide run-time password modifications.                          | All             |
|  | Resolved issue with occasional event collection delays.   | All             |
|  | Increased DNP and Modbus clients to 100 instances.  | All             |
|  | Added automation task cycle time for high-speed applications.                                       | All             |
|  | Added Level_1 and Level_2 password POU pins for SEL client.   | All             |
|  | Increase maximum log entries to 30,000.   | All             |

| Firmware, Software, and Manual Versions  | Summary of Revisions  | Affected Models |
|--|---|-----------------|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R111-V0-Z001001-D20110406<br>SEL-3530-4-R111-V0-Z001001-D20110406 | Resolved communications issues with some versions of SEL-501 IEDs.  | All             |
| ACSELERATOR RTAC Software Version:<br>1.4.xxx  | Resolved update issues with the status of transmit MIRRORED BITS.   | All             |
| Manual Date Code: 20110406   | Improved initialization procedure of multi-drop DNP clients when devices are not connected during startup.                            | All             |
|  | Resolved possible issue with loss of SEL Protocol SER data when SER data are generated at a very fast rate.                           | All             |
|  | Resolved potential issues with SEL client if autoconfiguration is triggered while Flex Parse messaging is in process.                 | All             |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R110-V0-Z001001-D20110201<br>SEL-3530-4-R110-V0-Z001001-D20110201 | Resolved issues with read/import/export of tags and Tag Processor statements introduced in R109.                                      | 5033            |
| ACSELERATOR RTAC Software Version:<br>1.4.xxx  | Resolved issue with import/export of new event and event collection POU pin settings.   | 5033            |
| Manual Date Code: 20110201   | Resolved issues manifested when using partial download option on projects that were converted from previous releases to R109 release. | All             |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R109-V0-Z001001-D20101230<br>SEL-3530-4-R109-V0-Z001001-D20101230 | Added IEC 61850 GOOSE messaging protocol.   | All             |
| ACSELERATOR RTAC Software Version:<br>1.4.xxx  | Added byte and register swapping for Modbus client and server.  | All             |
| Manual Date Code: 20101230   | Resolved issue with autoconfig on SEL-587 for PEAK and DEMAND METER values.   | All             |
|  | Modified software to allow contact outputs to function without any contact inputs defined.  | All             |
|  | Resolved issue with UTC offset on incoming IRIG signal.   | All             |
|  | Resolved issue in ACSELERATOR RTAC where on/off LED colors were reversed in virtual tags.   | All             |
|  | Added support for partial settings download.  | All             |
|  | Added support for as many as 32 DNP servers.  | All             |
|  | Increased DNP server capacity to 32 simultaneous connections.   | All             |
|  | Added local event collection, event archive, automatic event notification and transport to ACSELERATOR TEAM software.                 | All             |
|  | Added fault location/event processing to filter reclose sequences and provide fault location reset intervals.                         | All             |
|  | Support both odd and even parity with IRIG-B signals.   | All             |
| Firmware Identification (FID) Numbers:<br>SEL-3530-R108-V0-Z001001-D20101001<br>SEL-3530-4-R108-V0-Z001001-D20101001 | Increased analog, counter, and binary event buffer size to 10000 entries.   | All             |
| ACSELERATOR RTAC Software Version:<br>1.3.xxx  | Added SER label recognition functionality.  | All             |
| Manual Date Code: 20101001   | Added support for MOT upgrades.   | All             |
|  | Added support for web-based HMI.  | All             |
|  | Resolved issue with detecting password defeat jumper position.  | All             |
|  | Added support for virtual tags.   | All             |

| Firmware, Software, and Manual Versions  | Summary of Revisions  | Affected Models |
|--|---|-----------------|
| Firmware Identification (FID) Numbers:<br>SEL-3530-R107-V0-Z001001-D20100805<br>SEL-3530-4-R107-V0-Z001001-D20100805 | Changed DNP/IP clients to always use unique channels.   | 3530            |
| ACSELERATOR RTAC Software Version:<br>1.2.xxx  | Extended database keep-alive timer to compensate for low-bandwidth connections.   | 3530            |
| Manual Date Code: 20100805   | Forced echo on in transparent connections only when legacy or authentication modes are TRUE and destination is disconnected.<br><br>Changed autoconfigure to support SEL-251 Relay. | 3530            |
|  | Changed quality attributes of control points (operSPC, operINC, operAPC) to initialize as "good" on startup.  | 3530            |
|  | Initial version.  | 3530-4          |
| Firmware Identification (FID) Number:<br>SEL-3530-R106-V0-Z001001-D20100604  | Added flexible parsing for SEL Protocol.  | 3530            |
| ACSELERATOR RTAC Software Version:<br>1.2.xxx  | Added support for central authentication using LDAP.  | 3530            |
| Manual Date Code: 20100604   | Add support for as many as 10 DNP/IP clients for one DNP server.<br><br>Added support for Ladder Logic Diagram (LD).  | 3530            |
|  | Added support for SEL Protocol over IP.   | 3530            |
|  | Increased number of DNP block writes to 200 AO and 157 BO.  | 3530            |
|  | Increased upper limit on SEL client poll period setting.  | 3530            |
|  | Added DDFs for SEL relays that do not support binary messaging.   | 5033            |
| Firmware Identification (FID) Number:<br>SEL-3530-R105-V0-Z001001-D20100422  | Enhanced performance of project download and restart.   | 3530            |
| ACSELERATOR RTAC Software Version:<br>1.1.xxx  | Added full support for 17-port serial expansion card.   | 3530            |
| Manual Date Code: 20100422   |   |                 |
| Firmware Identification (FID) Number:<br>SEL-3530-R104-V0-Z001001-D20100305  | Corrected firmware issue with DNP tunneled serial.  | 3530            |
| ACSELERATOR RTAC Software Version:<br>1.1.xxx  |   |                 |
| Manual Date Code: 20100305   |   |                 |
| Firmware Identification (FID) Number:<br>SEL-3530-R103-V0-Z001001-D20100218  | Added SEL-100 and SEL-200 Series Relay support.   | 3530            |
| ACSELERATOR RTAC Software Version:<br>1.1.xxx  | Added insert in Tag Processor.  | 5033            |
| Manual Date Code: 20100218   | Simplified project tree in ACSELERATOR RTAC.<br><br>Added dial-out for DNP server.  | 5033            |
|  | Resolved issue with autoconfigure of certain relays.  | 3530            |
|  | Disabled RTAC before sending project by default.  | 5033            |
|  | Added option to create and convert pre-R103 compatible projects.  | 5033            |

## 1028 Firmware and Manual Versions

### Firmware

| Firmware, Software, and Manual Versions  | Summary of Revisions   | Affected Models |
|--|--|-----------------|
| Firmware Identification (FID) Number:<br>SEL-3530-R102-V0-Z001001-D20091214<br><br>ACSELERATOR RTAC Software Version:<br>1.0.xxx<br><br>Manual Date Code: 20091214 | Resolved issues in ACSELERATOR RTAC with DDFs and DDF updates.             | 5033            |
|  | Resolved issue with unsolicited write compatibility with SEL-203x devices. | 3530            |
|  | Resolved issue with SEL-387A autoconfig.                                   | 3530            |
|  | Added character echo to legacy command transparent connections.            | 3530            |
|  | Resolved issues related to system time and IRIG output signal.             | 3530            |
| Firmware Identification (FID) Number:<br>SEL-3530-R101-V0-Z001001-D20091102<br><br>ACSELERATOR RTAC Software Version:<br>1.0.xxx<br><br>Manual Date Code: 20091102 | Revised for compatibility with lead-free components.                       | 3530            |
|  | Initial version.   | 3530            |
|  |  |                 |

**Table A.2 SEL-2245-2 Firmware Revision History**

| Firmware Identification (FID) Number | Summary of Revisions  | ACSELERATOR RTAC Software Version | Manual Date Code |
|--------------------------------------|---|-----------------------------------|------------------|
| SEL-2245-2-R102-V1-Z001001-D20221201 | <p>Includes all the functions of SEL-2245-2-R102-V0 with the following additions:</p> <ul style="list-style-type: none"> <li>► Revised the firmware to allow replacement of the field-programmable gate array (FPGA) part. Firmware versions prior to R102-V1 will not function on units manufactured after December 16, 2022, or units that have serial number 3223500001 or later.</li> <li>► Enhanced self-diagnostic capabilities for failure detection.</li> </ul> | 1.35.xxx                          | 20230119         |
| SEL-2245-2-R102-V0-Z001001-D20140612 | <p>SEL-2245-2-R102 firmware is only compatible with RTAC firmware R132 or higher.</p> <ul style="list-style-type: none"> <li>► Added support for COMTRADE event reports.</li> <li>► Added Filter C as the default filter.</li> </ul>  | 1.15.xxx                          | 20140714         |
| SEL-2245-2-R101-V0-Z001001-D20121030 | <ul style="list-style-type: none"> <li>► Enhanced firmware to provide higher accuracy during electromagnetic disturbances.</li> </ul>   | 1.9.xxx                           | 20130531         |
| SEL-2245-2-R100-V0-Z001001-D20120427 | <ul style="list-style-type: none"> <li>► Initial version.</li> </ul>  | 1.9.xxx                           | 20120427         |

**Table A.3 SEL-2245-22 Firmware Revision History**

| <b>Firmware Identification<br/>(FID) Number</b> | <b>Summary of Revisions</b>   | <b>ACCELERATOR<br/>RTAC Software<br/>Version</b> | <b>Manual<br/>Date Code</b> |
|---|---|--|-----------------------------|
| SEL-2245-22-R102-V1-Z001001-D20221026           | <p>Includes all the functions of SEL-2245-22-R101-V0 with the following addition:</p> <ul style="list-style-type: none"> <li>► Revised the firmware to allow replacement of the field-programmable gate array (FPGA) part. Firmware versions prior to R102-V1 will not function on units manufactured after November 15, 2022, or units that have serial number 3223190001 or later.</li> </ul>   | 1.35.xxx   | 20221109                    |
| SEL-2245-22-R102-V0                             | <b>Note:</b> This firmware did not production release.  | —  | —                           |
| SEL-2245-22-R101-V0-Z001001-D20171107           | <ul style="list-style-type: none"> <li>► Added support for AC Mode metering.</li> <li>► Added 2, 4, 8, 24 kHz options to oscillography capture rates.</li> </ul> <p><b>Note:</b> RTAC firmware R141 requires upgrading module firmware to R101.</p> <p><b>Note:</b> SEL-2245-22 modules manufactured with firmware R100 did not receive calibration for AC Mode, and must be returned to the factory to meet the accuracy specifications for ac metering.</p> | 1.24.xxx   | 20171107                    |
| SEL-2245-22-R100-V0-Z001001-D20141006           | <ul style="list-style-type: none"> <li>► Initial version.</li> </ul>  | 1.16.xxx   | 20141103                    |

**Table A.4 SEL-2245-221 Firmware Revision History**

| <b>Firmware Identification<br/>(FID) Number</b> | <b>Summary of Revisions</b>   | <b>ACCELERATOR<br/>RTAC Software<br/>Version</b> | <b>Manual<br/>Date Code</b> |
|---|---|--|-----------------------------|
| SEL-2245-22-R102-V1-Z001001-D20221026           | <p>Includes all the functions of SEL-2245-22-R102-V0 with the following addition:</p> <ul style="list-style-type: none"> <li>► Revised the firmware to allow replacement of the field-programmable gate array (FPGA) part. Firmware versions prior to R102-V1 will not function on units manufactured after November 15, 2022, or units that have serial number 3223190001 or later.</li> </ul> | 1.35.xxx   | 20221109                    |
| SEL-2245-22-R102-V0-Z001001-D20181207           | <ul style="list-style-type: none"> <li>► Initial version.</li> </ul>  | 1.28.xxx   | 20181217                    |

**Table A.5 SEL-2245-3 Firmware Revision History**

| <b>Firmware Identification<br/>(FID) Number</b> | <b>Summary of Revisions</b>   | <b>ACCELERATOR<br/>RTAC Software<br/>Version</b> | <b>Manual<br/>Date Code</b> |
|---|---|--|-----------------------------|
| SEL-2245-3-R101-V0-Z001001-D20150123            | <ul style="list-style-type: none"> <li>► Enhanced User-Defined Safe Output capability for better performance in certain failure modes.</li> </ul> | 1.16.xxx   | 20150123                    |
| SEL-2245-3-R100-V0-Z001001-D20140428            | <ul style="list-style-type: none"> <li>► Initial version.</li> </ul>  | 1.14.xxx   | 20140428                    |

**1030 Firmware and Manual Versions**  
**Firmware**

**Table A.6 SEL-2245-4 Firmware Revision History**

| <b>Firmware Identification (FID) Number</b> | <b>Summary of Revisions</b>  | <b>ACCELERATOR RTAC Software Version</b> | <b>Manual Date Code</b> |
|---|--|--|-------------------------|
| SEL-2245-4-R106-V0-Z001001-D20240411        | ► Added support for 100 and 120 samples per second synchrophasor measurement rates.  | 1.36.xxx                                 | 20240419                |
| SEL-2245-4-R105-V1-Z001001-D20221026        | Includes all the functions of SEL-2245-4-R103-V1 with the following addition:<br>► Revised the firmware to allow replacement of the field-programmable gate array (FPGA) part. Firmware versions prior to R105-V1 will not function on units manufactured after November 15, 2022, or units that have serial number 3223190001 or later. | 1.35.xxx                                 | 20221109                |
| SEL-2245-4-R105-V0                          | <b>Note:</b> This firmware did not production release.   | —  | —                       |
| SEL-2245-4-R104-V0                          | <b>Note:</b> This firmware did not production release.   | —  | —                       |
| SEL-2245-4-R103-V1-Z001001-D20180629        | Includes all the functions of SEL-2245-4-R103-V0 with the following addition:<br>► Enhanced factory calibration procedure.   | 1.24.xxx                                 | 20180710                |
| SEL-2245-4-R103-V0-Z001001-D20171107        | ► Added support for enabling/disabling module tags individually to conserve EtherCAT bandwidth.<br><br><b>Note:</b> RTAC firmware R141 requires upgrading module firmware to R103.   | 1.24.xxx                                 | 20171107                |
| SEL-2245-4-R102-V0-Z001001-D20150807        | ► Resolved issue which in previous firmware caused the RMS power calculation to be incorrect for delta-connected voltages.<br>► Revised the reactive power quantity to include the sign.   | 1.17.xxx                                 | 20150807                |
| SEL-2245-4-R101-V0-Z001001-D20141006        | ► Updated for IEEE C37.118.1a-2014 compliance.   | 1.16.xxx                                 | 20141103                |
| SEL-2245-4-R100-V0-Z001001-D20130827        | ► Initial version.   | 1.13.xxx                                 | 20130827                |

**Table A.7 SEL-2245-411 Firmware Revision History**

| <b>Firmware Identification (FID) Number</b> | <b>Summary of Revisions</b>  | <b>ACCELERATOR RTAC Software Version</b> | <b>Manual Date Code</b> |
|---|--|--|-------------------------|
| SEL-2245-4-R106-V0-Z001001-D20240411        | ► Added support for 100 and 120 samples per second synchrophasor measurement rates.  | 1.36.xxx                                 | 20240419                |
| SEL-2245-4-R105-V1-Z001001-D20221026        | Includes all the functions of SEL-2245-4-R105-V0 with the following addition:<br>► Revised the firmware to allow replacement of the field-programmable gate array (FPGA) part. Firmware versions prior to R105-V1 will not function on units manufactured after November 15, 2022, or units that have serial number 3223190001 or later. | 1.35.xxx                                 | 20221109                |
| SEL-2245-4-R105-V0-Z001001-D20181207        | ► Added support for Phase/Gain Compensation on LEA inputs.   | 1.28.xxx                                 | 20181217                |
| SEL-2245-4-R104-V0-Z001001-D20180629        | ► Added support for SEL-2245-411 4 CT/4 LEA variant.   | 1.26.xxx                                 | 20180710                |

**Table A.8 SEL-2245-42 Firmware Revision History**

| Firmware Identification (FID) Number  | Summary of Revisions  | ACSELERATOR RTAC Software Version | Manual Date Code |
|---------------------------------------|---|-----------------------------------|------------------|
| SEL-2245-42-R105-V0-Z001001-D20250326 | <p><b>Note:</b> RTAC firmware versions R154 and R200 require upgrading module firmware to R105-V0.</p> <ul style="list-style-type: none"> <li>▶ Added Power Quality Harmonic, Interharmonic, and THD quantities.</li> <li>▶ Resolved an issue where the module may fail to produce an event record following a trigger when the PT Connection type is set to Delta.</li> </ul>  | 1.154.200.xxx                     | 20250326         |
| SEL-2245-42-R104-V1-Z001001-D20220408 | <p>Includes all the functions of SEL-2245-42-R104-V0 with the following addition:</p> <ul style="list-style-type: none"> <li>▶ Resolved an issue where the module may produce erroneous fundamental, rms, and THD measurements when the SEL Axion resynchronizes the module following a temporary disruption in the EtherCAT network or change in the system time.</li> </ul>   | 1.31.xxx                          | 20220408         |
| SEL-2245-42-R104-V0-Z001001-D20200731 | <p><b>Note:</b> RTAC firmware R147 requires upgrading module firmware to R104-V0.</p> <ul style="list-style-type: none"> <li>▶ Added support for Axion Wave Server.</li> <li>▶ Resolved an issue that prevents back-to-back event recording after 300 event triggers.</li> <li>▶ Resolved an issue that may prevent event data retrieval after triggering a large number of back-to-back event recordings.</li> </ul> | 1.31.xxx                          | 20200820         |
| SEL-2245-42-R103-V0-Z001001-D20181207 | <ul style="list-style-type: none"> <li>▶ Improved speed of Event Report collection.</li> </ul>  | 1.28.xxx                          | 20181217         |
| SEL-2245-42-R102-V1-Z001001-D20180523 | <p>Includes all the functions of SEL-2245-42-R102-V0 with the following addition:</p> <ul style="list-style-type: none"> <li>▶ Resolved an issue that caused the synchrophasor quantity VCA_PM to report as half of the magnitude.</li> </ul>   | 1.24.xxx                          | 20180523         |
| SEL-2245-42-R102-V0-Z001001-D20171107 | <ul style="list-style-type: none"> <li>▶ Enhanced module ADC self-diagnostics.</li> </ul>   | 1.24.xxx                          | 20171107         |
| SEL-2245-42-R101-V0-Z001001-D20170728 | <ul style="list-style-type: none"> <li>▶ Added support for enabling/disabling module tags individually to conserve EtherCAT bandwidth.</li> <li>▶ Resolved an issue that could cause THD tag to always read zero if the PT or CT ratios were not set to 1.</li> </ul>   | 1.23.xxx                          | 20170728         |
| SEL-2245-42-R100-V1-Z001001-D20170505 | <ul style="list-style-type: none"> <li>▶ Initial version.</li> </ul>  | 1.20.xxx                          | 20170505         |

## ACSELERATOR RTAC

ACSELERATOR RTAC configures the project sent to the RTAC. This software works with all RTAC hardware variants and is backwards compatible with all RTAC firmware versions.

**Table A.9 SEL-5033 Software Revision History**

| ACSELERATOR RTAC Software Version | Summary of Revisions  | Manual Date Code |
|-----------------------------------|---|------------------|
| 1.155.201.5000                    | <ul style="list-style-type: none"> <li>▶ [Cybersecurity] Resolved an issue in the installer for the Bay Screen Builder option that could allow arbitrary code execution by unprivileged users.</li> </ul> | 20250730         |

| ACSELERATOR<br>RTAC Software<br>Version | Summary of Revisions   | Manual<br>Date Code |
|---|--|---------------------|
|   | <ul style="list-style-type: none"> <li>► Enhanced the Digital Fault Recorder extension to add support for CSV configuration import/export, additional substation assets, conditional enabling of synchrophasor tags, and filtered SOE CSV log records.</li> <li>► Enhanced the Ethernet/IP protocol to include a Rockwell Automation license key in the generated EDS file to better integrate an RTAC communicating with a Rockwell controller.</li> <li>► Resolved an issue where Modbus Server Shared Map tags were not visible to the RTAC HMI or Logic Engine API. Existing projects containing Modbus Server Shared Maps that are read from an RTAC will require a settings resend to go back online.</li> <li>► Resolved an issue where importing a large number of Modbus clients from XML files could fail.</li> <li>► Resolved an issue where PC scaling properties could change the size of the Axion Touchscreen custom screen package.</li> <li>► Resolved an issue where a project containing multiple OPC UA client devices connected to OPC UA servers with similar variable structures could produce compile errors or unexpected client tag lists.</li> <li>► Resolved an issue in the Tag Processor where Time Source or Quality Source fields could be cleared unexpectedly. This behavior no longer occurs in project versions R155 and later.</li> </ul>   |                     |
| 1.154.200.4000                          | <ul style="list-style-type: none"> <li>► Addressed an issue where attempting a project conversion could result in an error.</li> </ul>   | 20250507            |
| 1.154.200.3500                          | <ul style="list-style-type: none"> <li>► [Cybersecurity] Added protection against an authenticated attacker maliciously modifying files to allow arbitrary code execution.</li> <li>► [Cybersecurity Enhancement] Enhanced connections between ACSELERATOR RTAC and the PC-based RTAC database to use TLS.</li> <li>► Added the MQTT Client extension.</li> <li>► Upgraded the Digital Fault Recorder extension to add single-channel assets, harmonic triggers, support for SEL-2241-2 project types, and other new features.</li> <li>► Enhanced project tree online status functionality by allowing per-project-type configurable polling intervals.</li> <li>► Updated the versions of the third-party IIoT 61131-3 library packages (e.g., HTTP, MQTT) to the latest available versions.</li> <li>► Enhanced the IEC 61850 MMS client to enable default visibility of additional POU pin statuses to aid with troubleshooting.</li> <li>► Enhanced the project conversion process to allow simultaneous conversion of RTAC projects by both project Type and Version.</li> <li>► Improved the performance of device rename operations when an OPC UA server is present in the project.</li> <li>► Improved the performance of project comparisons when differences are present in the Tag Processor.</li> <li>► Addressed an issue with project file backward compatibility when settings are created and loaded to an RTAC with a newer version of ACSELERATOR RTAC than is used to subsequently read the settings. When an incompatibility is detected in project versions R154 and later, a notice is posted following a read operation that settings must be re-sent to go back online.</li> <li>► Resolved an issue in the Modbus client and Modbus server shared map settings where changing the tag type of a holding register or input register would reset the variation to default.</li> <li>► Resolved an issue where a change to the Main or Automation task cycle interval did not trigger a resend during a subsequent Go Online attempt.</li> <li>► Resolved an issue where a large number of misleading settings errors could be generated if an OPC UA server was configured in a project and a 61131-3 compilation error or settings error was introduced.</li> <li>► Resolved an issue in the OPC UA client where tag variables were incorrectly named after being browsed and selected for use.</li> <li>► Resolved an issue where a project tree folder could erroneously be assigned a name of "Extensions".</li> <li>► Resolved an issue in XML import functionality where Ethernet/IP assemblies or Modbus tag settings could be lost.</li> <li>► Resolved an issue with the EtherCAT network bandwidth usage calculation when Axion AC Protection modules are configured for 3 kHz logging in a Continuous Recording Group.</li> <li>► Resolved an issue where an exception was generated when attempting to rename a Continuous Recording Group.</li> <li>► Resolved an issue where SEL-3350 project versions R148 and R149 could not add the maximum mixed total of SEL client and server devices.</li> </ul> | 20250326            |

| ACCELERATOR<br>RTAC Software<br>Version | Summary of Revisions  | Manual<br>Date Code |
|---|---|---------------------|
|   | <ul style="list-style-type: none"> <li>▶ Resolved an issue where the Pickup Delay and Dropout Delay settings could become locked out on an Axion digital input module.</li> </ul>   |                     |
| 1.37.153.8500                           | <ul style="list-style-type: none"> <li>▶ Added the CommProc Converter extension to convert legacy SEL-2020, SEL-2030, and SEL-2032 Communications Processor settings files into RTAC settings.</li> <li>▶ Upgraded the Digital Fault Recorder extension to add generic assets, analog input channel settings, user-defined custom channels, and other new features.</li> <li>▶ Upgraded the Simple Tag Mapper extension to add CSV map import, DNP and Modbus shared map settings integration, and live data/logging-only modes.</li> <li>▶ Enabled usage of the CAA FB Factory library.</li> <li>▶ Resolved an issue where pasting content into the Tag Processor caused a shift of focus to the project tree.</li> <li>▶ Resolved an issue introduced in version 1.37.153.8000 where projects could fail to automatically restore during an upgrade of ACCELERATOR RTAC from a previous version.</li> <li>▶ Resolved an issue introduced in version 1.37.153.8000 where projects could fail to open and would produce an error message stating "This schema should have an Automation task."</li> <li>▶ Resolved an issue introduced in version 1.37.153.8000 where a Modbus server imported from XML would not include tags.</li> </ul>  | 20241023            |
| 1.37.153.8000                           | <ul style="list-style-type: none"> <li>▶ [Cybersecurity Enhancement] Updated the WinSCP third-party component to maintain continuity of support.</li> <li>▶ Added the Grid Connect extension.</li> <li>▶ Added the DMA Link extension.</li> <li>▶ Added the 87L Comm Monitor extension.</li> <li>▶ Added a Tag Selector tool to allow browsing and easy selection of all tags in a project with drag-and-drop operations so that these tags can be copied into supported fields, such as the Simple Tag Mapper and Tag Processor.</li> <li>▶ Enhanced the project tree to display the connection status of devices as offline, online, or disabled while connected to an RTAC with firmware version R151 or later installed.</li> <li>▶ Enhanced the project tree to allow copy and paste operations for IEC 61131-3 User Logic elements (Programs, Functions, Function Blocks, Data Types, and GVLs) in RTAC projects with a firmware version of R148 or later.</li> <li>▶ Added an Other column to the Start Page project list that indicates the presence of the Advanced Read-In components (Ethernet Settings, HMI Projects, etc.) in a project.</li> <li>▶ Enhanced the task re-ordering dialog to support bulk assignment for the order of items in the main and automation tasks when using a custom order.</li> <li>▶ Added a prompt to confirm the overwrite of stored device passwords (e.g., Level 1 password for SEL Protocol client) when the settings are sent to an RTAC.</li> <li>▶ Enhanced the speed of the ACCELERATOR RTAC setup installer process.</li> <li>▶ Enhanced the speed and project version compatibility when creating a new project from XML content or importing XML content into an existing project.</li> <li>▶ Enabled usage of the CAA_Memory library.</li> <li>▶ Added the <b>to_string</b> attribute to internal system enumeration types, such as quality_t and validity_t. Existing user logic that casts these types to strings may need to be revised when upgrading the project to firmware version R153 or later.</li> <li>▶ Resolved an issue where a DNP server using an Ethernet-based connection type was not added to a project.</li> <li>▶ Resolved an issue where an incorrect project version was displayed after creating settings from XML content.</li> <li>▶ Resolved an issue where custom user logic using non-default access specifiers would force the settings to be resent when going online.</li> <li>▶ Resolved an issue where a MIRRORED BITS Protocol device could not be renamed if the device resided in the Automation Task.</li> <li>▶ Resolved an issue where a change to the custom user logic did not update a project's Last Modified time stamp.</li> <li>▶ Resolved an issue where a name used by a device and subsequently removed from the project could not be re-used.</li> <li>▶ Resolved an issue where an IEC 61850 SCD configuration file could not be re-applied to a project if advanced read-in project items such as Ethernet settings were present.</li> <li>▶ Resolved an issue introduced in 1.35.152.8000 where a project with a firmware version of R136 or earlier could fail to export.</li> </ul> | 20240918            |

| ACSELERATOR RTAC Software Version | Summary of Revisions  | Manual Date Code |
|-----------------------------------|---|------------------|
|                                   | <ul style="list-style-type: none"> <li>► Resolved an issue where a project containing aliased tags and an extension forced a settings resend when attempting to go online.</li> <li>► Resolved an issue in the Tag Processor where a Destination Tag containing a bit reference was not fully populated.</li> <li>► Resolved an issue in the IEC 60870-5-101 server where a failover serial port was unable to use a baud rate of 200 or 600.</li> <li>► Resolved an issue where an Axion touchscreen configured with a Bay Screen that used a name that was not IEC 61131-3-compliant caused an error.</li> <li>► Resolved an issue where a project containing an Axion touchscreen device could not be exported.</li> <li>► Resolved an issue where an Axion touchscreen could not be exported or imported in XML format.</li> <li>► Resolved an issue where a project containing NGVLs with custom data types could encounter issues with compiling, opening, cleaning, and exporting.</li> <li>► Resolved an issue where double-clicking on a function block in CFC logic no longer prompted users to select which instance of the function block to view.</li> <li>► Resolved an issue where browsing a library manager could cause unnecessary Windows processes to initiate.</li> <li>► Resolved an issue where debug-stepping into a method was no longer possible.</li> </ul>  |                  |
| 1.36.152.9500                     | <ul style="list-style-type: none"> <li>► Added the Protection Elements extension.</li> <li>► Added the MMS File Collection extension.</li> <li>► Enhanced the performance of the Set IEC 61850 Configuration operation when an SCD file is first applied to a project or when an OPC UA server is present in the project.</li> <li>► Added support for the SEL-787L and SEL-TWFL device definitions.</li> <li>► Resolved an issue introduced in 1.34.150.15000 where a banner displayed at the top of the CFC user logic diagrams could obscure the logic and also trigger false-positive differences during settings compare operations.</li> <li>► Resolved an issue where an SCD file containing a ConnectedAP definition with no Address element would fail to create an IEC 61850 MMS client when the SCD was applied to the project.</li> <li>► Resolved an issue where modifying Advanced Read-in Ethernet settings in a project would remove the associated Global Ethernet settings.</li> <li>► Resolved an issue where an IEEE C37.118 client device could not be copied and pasted in a project version R152.</li> <li>► Resolved an issue where channel names and phasor components on an IEEE C37.118 server PMU tag map could no longer be edited after a tag reference was assigned.</li> <li>► Resolved an issue introduced in 1.36.152.8000 where IEEE C37.118 client devices in project version R148 or later could no longer contain spaces in the PMU Station Name setting.</li> <li>► Resolved an issue where the AcRtacCmd command-line interface tool could fail to import XML project content used in non-English language versions of Windows.</li> <li>► Resolved an issue introduced in 1.36.152.8000 where right-click menu items could be obscured.</li> <li>► Resolved an issue where if a project contained an SEL Protocol client with child IEDs, the Main Controller tab could not be viewed. Existing projects containing child IEDs that were read from an RTAC will require the settings to be resent to the RTAC for the project to go back online.</li> <li>► Resolved an issue introduced in 1.36.152.8000 where a project with a folder containing an extension with an identical name as the folder could not be opened.</li> <li>► Resolved an issue introduced in 1.36.152.8000 where a project containing an extension could produce unexpected compile errors when saving or attempting to go online.</li> <li>► Resolved an issue introduced in 1.36.152.8000 where a project could display duplicated items (Devices, User Logic entries, etc.) in the project tree.</li> </ul> | 20240320         |
| 1.36.152.8000                     | <ul style="list-style-type: none"> <li>► [Cybersecurity Enhancement] Added an Advanced user preference category and an option to control the notification type when an unsigned extension is detected in the project. Choices include an Error notification message (default value), a Warning notification message, or to Ignore (i.e., no notification).</li> <li>► Added the Digital Fault Recorder extension.</li> <li>► Added support for Windows 11, Windows Server 2019, and Windows Server 2022.</li> <li>► Enhanced ACSELERATOR RTAC to run as a 64-bit application. 32-bit versions of Windows are no longer supported.</li> <li>► Enhanced performance of Set IEC 61850 Configuration operations when an SCD file is re-applied to a project of version R148 or later.</li> </ul>  | 20231109         |

| ACCELERATOR RTAC Software Version | Summary of Revisions  | Manual Date Code |
|-----------------------------------|---|------------------|
|                                   | <ul style="list-style-type: none"> <li>► Modified the behavior of Set IEC 61850 Configuration operations to no longer automatically enable ASG, CUG, ENG, ING, ORG, SPG, or TSG tags when an MMS client is first added to a project.</li> <li>► Enhanced XML Import functionality to preserve folder paths from the original directory and file structure.</li> <li>► Enhanced performance when ACCELERATOR RTAC is used with a remote database with 100 or more projects.</li> <li>► Enhanced the About AcCELERATOR RTAC dialog window to provide a Collect Support Data troubleshooting tool to automatically gather relevant log files and provide them in a zip file.</li> <li>► Modified the location for storing RTAC database and device connection configuration CSV files to the user's Local AppData directory.</li> <li>► Added support for SEL-411L-A and SEL-787Z DDFs.</li> <li>► Removed the Stop Logic Engine shortcut key and provided a more prominent warning banner when the logic engine is stopped.</li> <li>► Resolved an issue where the AcRtacCmd command line interface tool could fail to import or open projects on non-English versions of Windows.</li> <li>► Resolved an issue in the MMS client where the Tag Type column would not fully populate for Binary Control Tags.</li> <li>► Resolved an issue where Database Maintenance could fail on large databases due to a time-out.</li> <li>► Resolved an issue where a project would not be sent to an RTAC and an "Error occurred while writing project" error message was displayed.</li> <li>► Resolved an issue where Developer Mode library projects could unexpectedly remain locked after being closed. Library projects can no longer be closed when the Released attribute in the project is enabled.</li> <li>► Resolved an issue where an RTAC user account with a password containing a semicolon could not be used to read settings, send settings, or go online.</li> <li>► Resolved an issue where an existing SEL-3350 RTAC project converted to version R151 may not have the additional (3U-only) Contact I/O System Tags added.</li> <li>► Resolved an issue introduced in 1.34.150.15000 where a project version of R150 or newer with an IEC 61850 MMS Server had Mod, Beh, and Health tags with invalid quality. Existing R150 or R151 projects containing an IEC 61850 MMS server that are read from an RTAC will require a settings resend to go back online.</li> <li>► Resolved an issue in the Tag Processor where source or destination tag types of operBAC, operBSC, or operENC were not fully mapped and updates from the source to the destination tag were not issued. Existing projects using these statement types that are read from an RTAC will require a settings resend to go back online.</li> </ul> <p><b>NOTE</b><br/>EXP project backup files created in ACCELERATOR RTAC version 1.36.152.8000 or later that use an older project version can only be restored into ACCELERATOR RTAC versions of 1.34.150.15000 or later.</p> |                  |
| 1.35.151.23000                    | <ul style="list-style-type: none"> <li>► Resolved an issue introduced in 1.35.151.6000 where projects containing SEL Protocol client or server devices could force unnecessary setting resends when attempting to go online. Affected projects may need to be resent once to the RTAC to resolve the issue.</li> </ul>  | 20230823         |
| 1.35.151.22000                    | <ul style="list-style-type: none"> <li>► Resolved an issue introduced in 1.35.151.21000 where an upgrade installation of ACCELERATOR RTAC could fail to restore existing projects to the database if they were a project version of R125 or earlier.</li> <li>► Resolved an issue introduced in 1.35.151.21000 where ACCELERATOR RTAC could fail to send settings to an RTAC if the project contained a Visualization or a library that had a Visualization embedded in it.</li> </ul>  | 20230614         |
| 1.35.151.21000                    | <ul style="list-style-type: none"> <li>► Updated the SEL-5033 instruction manual.</li> <li>► [Cybersecurity] Modified ACCELERATOR RTAC installation paths to address an issue where executable binaries were written to a location where non-Admin users had write access by default.</li> <li>► Resolved an issue introduced in 1.35.151.6000 where large projects containing many devices or instances of custom user logic could encounter excessive delays at the "Build" stage when going online with an RTAC.</li> <li>► Resolved an issue where an IEC 60870-5-103 protocol client device could not be successfully copy/pasted in a project.</li> </ul>   | 20230522         |

| ACSELERATOR RTAC Software Version | Summary of Revisions   | Manual Date Code |
|-----------------------------------|--|------------------|
|                                   | <ul style="list-style-type: none"> <li>▶ Resolved an issue in the Tag Processor where destination tag types of operINC or operAPC would fail to issue updates from the source expression into the destination tag. Existing R151 projects using these statement types that are read from an RTAC will require a settings resend to go back online.</li> <li>▶ Resolved an issue introduced in 1.35.151.6000 where attempting to open a parameter list on an inserted 61131-3 user logic library could result in an unhandled exception error.</li> </ul>   |                  |
| 1.35.151.20000                    | <ul style="list-style-type: none"> <li>▶ Updated the SEL-5033 instruction manual.</li> <li>▶ Resolved an issue introduced in 1.34.150.15000 where CFC logic diagrams displayed truncated tag names.</li> <li>▶ Resolved an issue introduced in 1.34.150.15000 where a project that was created in a previous project version (e.g., R149) and subsequently exported could be restored into an older version of ACSELERATOR RTAC (e.g., 1.33.149.16000), but could not be successfully opened without first performing a right-click <b>Clean</b> operation on it.</li> <li>▶ Resolved an issue where projects with a version of R134 or prior that contained GOOSE devices could no longer be opened.</li> <li>▶ Resolved an issue where upgraded projects that contained extensions such as Dynamic Disturbance Recorder or CtPt Monitor would generate compile errors on those extensions following the upgrade.</li> <li>▶ Resolved an issue in certain extensions such as CtPt Monitor and Simple Tag Mapper where renaming an extension subitem to an invalid name and attempting to save could generate error messages that could not be cleared.</li> <li>▶ Updated a third-party component to resolve an issue introduced in 1.35.151.6000 that prevented projects from being created or opened. The ACSELERATOR RTAC installer will now automatically update the installed .NET Framework to version 4.7.2.</li> <li>▶ Resolved an issue introduced in 1.35.151.6000 where parameters associated with System Tags Contact I/O (e.g., Tag Alias or Pick Up Delay) could not be successfully modified.</li> <li>▶ Resolved an issue introduced in 1.34.150.15000 where projects that contained an SEL-T400L or SEL-T401L would not convert to R150.</li> <li>▶ Resolved an issue where certain RTAC project types (such as SEL-3530, SEL-3530-4, and SEL-3560) could no longer be read from an RTAC or restored from an EXP file.</li> <li>▶ Resolved an issue where projects containing IIoT libraries could not be sent to an RTAC.</li> <li>▶ Resolved an issue where projects containing an EtherCAT network would require a settings resend before allowing a user to go online with an RTAC.</li> </ul> | 20230321         |
| 1.35.151.6000                     | <ul style="list-style-type: none"> <li>▶ Updated the SEL-5033 instruction manual.</li> <li>▶ Removed support for Windows 7 and Windows Server 2008 operating systems.</li> <li>▶ Added Modification Type column to main menu to indicate the last type of change performed on the project: Created, Imported, Converted, Read from Device, or Modified by User.</li> <li>▶ Added support for logging of ACD, ACT, and ENS tag types in the Tag Processor.</li> <li>▶ Added support for IIoT libraries supporting MQTT, HTTP, and Web Socket communications supported by XML and JSON formatting. Use of these libraries requires a project version of R151-V0 or later.</li> <li>▶ Added a warning message displayed to the user when attempting to import an IEC 61850 SCD configuration that was not last saved by ACSELERATOR Architect. The user can choose to cancel or continue the SCD file import.</li> <li>▶ Resolved an issue where the ACSELERATOR RTAC installer could fail to install the RTAC USB driver, requiring manual user intervention in Windows Device Manager to fully use the USB-B connection to an RTAC.</li> <li>▶ Resolved an issue in the Tag Processor where Auto-Fill Time and Quality Source did not populate these fields for SINT or DINT source expressions.</li> <li>▶ Resolved an issue where importing IEC 61850 configurations with RTAC GOOSE subscriptions containing a vector would fail to generate the GRX device in the project.</li> <li>▶ Resolved an issue where GOOSE receive would not import mapped BCR data.</li> <li>▶ Resolved an issue in the IEEE C37.118 client where a channel name could be specified with more than 16 characters, which is unsupported by the protocol and would subsequently cause errors when attempting to open or export the project.</li> <li>▶ Resolved an issue where a project with advanced read-in items (e.g., hosts) that were cleared could not be re-opened.</li> <li>▶ Resolved an issue where creating a project from XML content would cause customized parameter values in an SEL Client XML file to be assigned default values in the resulting project.</li> </ul>  | 20221109         |

| <b>ACCELERATOR<br/>RTAC Software<br/>Version</b> | <b>Summary of Revisions</b>  | <b>Manual<br/>Date Code</b> |
|--|--|-----------------------------|
|  | <ul style="list-style-type: none"> <li>▶ Resolved an issue introduced in 1.34.150.15000 where custom parameters with enforced project uniqueness contained in XML template files could be modified unnecessarily upon import to an existing project.</li> <li>▶ Resolved an issue where a <b>Clean Project</b> operation would revert Advanced Read-In Ethernet Settings to their original values from the time of read.</li> <li>▶ Removed Event Collection and Sequence of Events backup/restoration from the Advanced Read/Send options.</li> <li>▶ Resolved an issue introduced in 1.34.150.15000 where an R150 project with an IEC 61131-3 library that contained an embedded Visualization or GlobalTextList could no longer be opened.</li> </ul>   |                             |
| 1.34.150.18000                                   | <ul style="list-style-type: none"> <li>▶ Updated the SEL-5033 instruction manual.</li> <li>▶ Modified Last Accessed column to Last Modified. The time stamp is updated on project close if any changes occurred to the project.</li> <li>▶ Resolved an issue when importing IEC 61850 configurations where MMS clients would generate duplicate reports when the SCL language contained optional attributes in the ExtRef element.</li> <li>▶ Resolved an issue when importing IEC 61850 configurations where the import would not complete when ConnectedAP contained OSI addressing information.</li> <li>▶ Resolved an issue when importing IEC 61850 configurations where MMS clients did not populate the IP address from the SCL when the ConnectedAP referenced a ServerAt element.</li> <li>▶ Resolved an issue introduced in 1.34.150.15000 where RTAC projects activated on RTACs that contained an MMS server, the MMS server ENO pin would not enable.</li> <li>▶ Resolved an issue where the tool ribbon inside a project would become un-available after opening a library manager window and clicking between other open windows.</li> </ul>  | 20220805                    |
| 1.34.150.15000                                   | <ul style="list-style-type: none"> <li>▶ Updated the SEL-5033 instruction manual.</li> <li>▶ Enhanced XML import to resolve naming conflicts when imported XML names match existing project item names.</li> <li>▶ Added an option when importing IEC 61850 configurations to update IP addresses changes from existing IEC 61850 IP addresses.</li> <li>▶ Removed Device store.</li> <li>▶ Updated file and folder selection dialogs.</li> <li>▶ [Cybersecurity] Resolved an issue when attempting to delete a user in the software.</li> <li>▶ Resolved an issue where IEEE C37.118 clients with child PMUs could not be copied and pasted.</li> <li>▶ Resolved an issue in the Tag Processor where quality and time mappings are removed after a device in the source column was renamed.</li> <li>▶ Resolved an issue where copy and pasting an SEL client serial connection does not maintain non-default settings from the original device.</li> <li>▶ Resolved an issue where RAID monitoring tags were added to Tag Processor logging statements after the RAID logging statements were deleted.</li> <li>▶ Resolved a compilation error when MMS server had a logical device with the name Main.</li> <li>▶ Resolved an issue where IEC 61131-3 global variable lists cannot be moved between main and automation tasks when an IEC 61850 configuration is present.</li> <li>▶ Resolved an issue where IEC 61850 Beh and Mod tags were flagged as invalid cross task errors when included in a GOOSE transmit message in the automation task.</li> <li>▶ Resolved an issue introduced in 1.32.148.7000 in the Tag Processor where warnings prevented project download.</li> <li>▶ Resolved an issue importing XML configurations with multiple recording groups.</li> <li>▶ Resolved an issue with copying/pasting IEDs or inserting IEC 61850 configurations when an extension is present in the project.</li> </ul> | 20220601                    |
| 1.33.149.16000                                   | <ul style="list-style-type: none"> <li>▶ Updated the SEL-5033 instruction manual.</li> <li>▶ Resolved an issue where discovering an EtherCAT topology could cause an unhandled exception if an EtherCAT network had already been discovered.</li> <li>▶ Resolved an issue where project downloads do not always complete when sending to an SEL-2241 with Axion touchscreen.</li> </ul>  | 20220112                    |
| 1.33.149.15000                                   | <ul style="list-style-type: none"> <li>▶ Updated SEL-5033 instruction manual.</li> <li>▶ Resolved an issue where Axion touchscreen configuration would not load on non-English versions of Windows.</li> </ul>   | 20211214                    |
| 1.33.149.12000                                   | <ul style="list-style-type: none"> <li>▶ Updated the SEL-5033 instruction manual.</li> <li>▶ Added support for SEL-2242 touchscreen configuration via integrated bay screen builder.</li> </ul>  | 20210915                    |

| ACSELERATOR<br>RTAC Software<br>Version | Summary of Revisions   | Manual<br>Date Code |
|---|--|---------------------|
|   | <ul style="list-style-type: none"> <li>▶ Encrypted port 1217 communications between ACSELERATOR RTAC software and RTAC firmware for supported firmware revisions.</li> <li>▶ Added support to the SCD import to process MMS subscriptions either from &lt;esel:ExtRef&gt; or &lt;ExtRef&gt; definitions.</li> <li>▶ Added support for the SEL-851 device definition file.</li> <li>▶ Resolved an issue when copying and pasting SEL clients where not all settings retained their source value.</li> <li>▶ Resolved an issue where R110 projects could not go online.</li> <li>▶ Resolved an issue with importing SCD files containing an enumeration that did not start with an alpha character.</li> <li>▶ Resolved an issue where the Tag Processor would incorrectly autogenerate variables with data type BIT, which is not supported in IEC 61131-3 programs.</li> <li>▶ Resolved an issue where a project would not open after a data type used in an NGVL list was renamed.</li> <li>▶ Resolved an issue introduced in version 1.32.148.7000 where non-English characters were not accepted in Tag Processor logging fields.</li> <li>▶ Resolved an issue where PMUs defined in an IEEE C37.118 server could not be deleted.</li> <li>▶ Resolved an issue introduced in version 1.30.147.xxx where firmware updates may not succeed for devices with current firmware versions R119–R123.</li> </ul> |                     |
| 1.32.148.9000                           | <ul style="list-style-type: none"> <li>▶ Updated the SEL-5033 instruction manual.</li> </ul>   | 20210713            |
| 1.32.148.8000                           | <ul style="list-style-type: none"> <li>▶ Updated the SEL-5033 instruction manual.</li> </ul>   | 20210414            |
| 1.32.148.7500                           | <ul style="list-style-type: none"> <li>▶ Resolved an issue where projects with nine or more frequency groups cannot be read from an RTAC.</li> <li>▶ Updated the command line interface to include settable ports for logic engine and project send/read.</li> <li>▶ Resolved an issue where importing a C37.118 client with multiple PMUs from XML may not succeed.</li> </ul>  | 20210320            |
| 1.32.148.7000                           | <ul style="list-style-type: none"> <li>▶ Added Simple Tag Mapper Extension.</li> <li>▶ Added CtPt Monitor Extension.</li> <li>▶ Added Indirect Tagging Extension.</li> <li>▶ Enhanced C37.118 PMU Station name to accept non-compliant IEC 61131-3 names.</li> <li>▶ Added support to specify a port for logic engine.</li> <li>▶ Added support to specify a port for project send/read.</li> <li>▶ Added support for copy and paste operations on the IEC 60870-5-103 client.</li> <li>▶ Enhanced password fields to allow a user to view the password while editing before obfuscating the password after the setting is no longer selected.</li> <li>▶ Resolved an issue where Default Gateway may be incorrect after reading a project that includes interface settings.</li> <li>▶ Resolved an issue where projects R132 and older with advanced settings included may not be able to open.</li> </ul>  | 20210208            |
| 1.31.147.4000                           | <ul style="list-style-type: none"> <li>▶ Updated the SEL-5033 instruction manual.</li> </ul>   | 20201130            |
| 1.31.147.3847                           | <ul style="list-style-type: none"> <li>▶ Updated the SEL-5033 instruction manual.</li> <li>▶ Updated Library Extension package to 3.20.10.0.</li> </ul>  | 20201026            |
| 1.31.147.3541                           | <ul style="list-style-type: none"> <li>▶ Enhanced Connection Directory to support import and export.</li> <li>▶ Enhanced the Preferences menu of ACSELERATOR RTAC to improve usability.</li> <li>▶ Added Radius and Web Proxy to Advanced Settings when reading a project.</li> <li>▶ When reading a project, the user is now prompted to rename the RTAC project if the name already exists in the database.</li> <li>▶ Advanced Settings are now editable in RTAC projects. Available settings include Ethernet, Hosts, and Website Description.</li> <li>▶ Added support for SEL-T401L DDF.</li> <li>▶ Resolved an issue that may prevent GOOSE POU moving to the Automation thread.</li> <li>▶ Added licensing information to the Help &gt; About section for WinSCP.</li> <li>▶ Added improved messaging when software is opened while FIPS is enabled.</li> <li>▶ Resolved an error that may occur when attempting to install libraries.</li> </ul>  | 20200820            |

| ACCELERATOR<br>RTAC Software<br>Version | Summary of Revisions   | Manual<br>Date Code |
|---|--|---------------------|
|   | <ul style="list-style-type: none"> <li>► Resolved an issue where IEC 61850 configuration information was lost while re-importing IEC 61850 configurations if an IEC 61850 configuration already existed.</li> <li>► Resolved an error message that appeared when attempting to commission a module that did not match the project configuration.</li> <li>► Resolved an error message that appeared when the Ethernet IP Explicit Message client poll period was set to 0.</li> <li>► Resolved an issue where the serial IEEE C37.118 server may not flag an invalid configuration when the number of phasors and message rate exceeded the amount of data that can be transmitted via the configured baud rate.</li> <li>► Resolved an issue where projects could not be sent to RTACs with firmware version R124 or R125.</li> </ul>   |                     |
| 1.30.146.4019                           | <ul style="list-style-type: none"> <li>► Duplicate time sources are now flagged as an error in projects R144 and later.</li> <li>► The IedType attribute is no longer considered when importing IEC 61850 configurations.</li> <li>► Resolved an issue introduced in version 1.30.146.xxx where firmware updates may not succeed for devices with current firmware versions R119–R131.</li> </ul>  | 20200610            |
| 1.30.146.3928                           | <ul style="list-style-type: none"> <li>► Resolved an issue where projects that contain IEC 61850 configurations could cause software version updates to not complete.</li> <li>► Resolved an issue where importing IEC 61850 configurations that contain 64-bit integers may not successfully complete.</li> </ul>   | 20200425            |
| 1.30.146.3665                           | <ul style="list-style-type: none"> <li>► Resolved an issue where station name changes for C37.118 tags did not automatically refactor the previous tag name.</li> <li>► Resolved an issue that could prevent additional users from being added to ACCELERATOR RTAC software.</li> <li>► Resolved an issue where cross task errors could occur when GOOSE transmit messages were in the automation task.</li> </ul>   | 20200325            |
| 1.30.146.3437                           | <ul style="list-style-type: none"> <li>► Updated the ACCELERATOR RTAC software visual interface.</li> <li>► Enhanced the RTAC database to support 64 bits.</li> <li>► Added hot key &lt;Ctrl+R&gt; to refactor a tag name.</li> <li>► Enhanced importing IEC 61850 configurations to include SCD and SSD file extensions.</li> <li>► Enhanced importing IEC 61850 process to include interface IP address and MMS poll period and to enable COMTRADE collection as settings from an SCL file.</li> <li>► Added an auto-fill source time and quality column button in the Tag Processor.</li> <li>► Resolved an issue where the clean flag may not remove all files during installation or uninstallation.</li> <li>► Resolved an issue where the Backup Projects process could encounter an error.</li> <li>► Resolved an issue in XML export where BRCB and URBCB tags were not exported.</li> <li>► Resolved an issue where Extensions may not work correctly.</li> <li>► Resolved an issue where a project could not be read successfully if an apostrophe was in the RTAC web interface Device Description.</li> </ul> | 20200224            |
| 1.29.145.20386                          | <ul style="list-style-type: none"> <li>► Resolved an issue where ACCELERATOR RTAC may not successfully read projects.</li> <li>► Resolved an issue that may occur when comparing projects in ACCELERATOR RTAC.</li> <li>► Resolved an issue in ACCELERATOR RTAC where a project may not be removed from a folder in the tree view.</li> <li>► Resolved an issue in ACCELERATOR RTAC where a project may always detect settings have changed if IEC 61131-3 programs or data types are completely commented out.</li> <li>► Resolved an issue in ACCELERATOR RTAC where the tag processor may not generate time and quality code for the auto-fill setting correctly. Projects that are updated from versions prior to R145 to R145 or later with base data types (BOOL, REAL, etc) as Source Expressions must have the Time Source and/or Quality Source columns manually populated with <b>System_Time</b> and/or <b>Good_Quality</b> to maintain the population of these values into the configured Destination Tag.</li> </ul>  | 20190830            |
| 1.28.144.16774                          | <ul style="list-style-type: none"> <li>► Added support in ACCELERATOR RTAC to perform database maintenance for improved performance.</li> <li>► Improved IEC 61850 configuration import time.</li> <li>► Added support for non-English characters in Tag Processor.</li> </ul>   | 20181221            |

| ACSELERATOR RTAC Software Version | Summary of Revisions  | Manual Date Code |
|-----------------------------------|---|------------------|
|                                   | ► Resolved an issue in Tag Processor where Live Data did not compile correctly when referencing variables declared in IEC 61131-3 programs and global variable lists.   |                  |
| 1.26.143.16172                    | ► Added support for Developer Mode.<br>► Enhanced version resolution for IEC 61131-3 libraries.<br>► Added support for refactoring tag names.<br>► Added support for logging tag type, DPS, in the tag processor.<br>► Resolved an issue introduced in RTAC software 1.26.143.15566 where projects with CP2179 clients did not compile.<br>► DNP Client setting, server IP port, no longer auto-increments when adding multiple DNP clients in the RTAC software. | 20180928         |
| 1.26.143.15566                    | ► Added support for the RTAC software command line interface to send projects that are password protected.<br>► Enhanced <Ctrl+X> functionality in the Tag Processor of the RTAC software.<br>► Resolved an issue introduced in RTAC software 1.25.xxx.xxxx in which R124 projects may not download.  | 20180710         |

## ICD File Revisions

---

The ICD file for the RTAC works for all RTAC hardware options. Configurations that use older class file versions can be used in newer firmware versions. This allows for configurations to be updated to the latest firmware without requiring an upgrade of the class file version. To input the new features that are added in newer ICD files, you must reconfigure the RTAC ICD file by using ACSELERATOR Architect® SEL-5032 Software.

**Table A.10** ICD Revision Table

| Class File Version | Summary of Revisions   | Minimum RTAC Firmware |
|--------------------|--|-----------------------|
| 010                | ► Added support for Edition 2.1 compliance.  | R154/R200             |
| 008                | ► Automatically add LGOS logical node to MMS Server, added Local/Remote Processing.          | R151                  |
| 006                | ► Added support for MMS server, added support for Edition 2 compliance.                      | R135                  |
| 003                | ► Made modifications to ICD file for Edition 1 certification for MMS client and GOOSE TX/RX. | R119                  |
| 002                | ► Added support for MMS client.  | R115                  |
| 001                | ► Initial CID file. Support for GOOSE TX and RX only.  | R108                  |

## Instruction Manual

---

The date code at the bottom of each page of this manual reflects the creation or revision date.

*Table A.11* lists the instruction manual versions and revision descriptions. The most recent instruction manual version is listed first.

**Table A.11 Instruction Manual Revision History**

| Date Code | Summary of Revisions  |
|-----------|---|
| 20250916  | <p><b>Section 10</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Theory of Operation and Features in DMA Link</i>.</li> <li>► Updated <i>Table 10.40: Settings Names and Descriptions</i>.</li> <li>► Added <i>Syslog Collector</i>.</li> </ul>   |
| 20250730  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Communication Protocol Device Count Support</i>.</li> <li>► Added <i>Continuous Waveform Streaming Protocol</i>.</li> <li>► Added <i>Add-On Profile License Key to EtherNet/IP</i>.</li> <li>► Updated <i>Overview in File Transfer Protocol</i>.</li> <li>► Added <i>IEC 60870-5-104 Server Encrypted Connections to IEC 60870-5-101/104 Server Configuration</i>.</li> <li>► Added <i>COMTRADE Collection to MMS Client File Services and Generic File Services</i>.</li> <li>► Updated <i>Criteria for Collecting Files in MMS Client File Services and Generic File Services</i>.</li> <li>► Updated <i>Settings Tab in Modbus Client Configuration</i>.</li> <li>► Updated the description for <i>Enable_ASCII_SER_Logging</i>, <i>Enable_Comtrade_Collection</i>, <i>Enable_Event_Collection</i>, <i>Enable_File_Transfer_Monitor</i>, and <i>Enable_New_Event_Filtering</i> in <i>Table 2.136: SEL Client POU Pin Settings</i>.</li> <li>► Updated <i>Unsolicited Notifications and POU Pin Settings</i> in <i>SEL Server Configuration</i> under <i>SEL Protocol</i>.</li> <li>► Added CNO, EXI, and QUI commands to <i>Table 2.137: SEL Server Commands (All Commands Access Level 1)</i>.</li> <li>► Added <i>Table 2.138: SEL Server POU Pin Settings</i>.</li> </ul> <p><b>Section 5</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Web Proxy</i>.</li> </ul> <p><b>Section 6</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Digital and Analog Labels in Navigating SEL Touchscreen Applications</i>.</li> </ul> <p><b>Section 10</b></p> <ul style="list-style-type: none"> <li>► Added R155/R201 to <i>Table 10.1: Extension Project Version Compatibility</i>.</li> <li>► Added SOE Log CSV File Contents, Include PMU Channels, and Configure DFR Extension From CSV to <i>Table 10.30: General Settings Names and Descriptions</i>.</li> <li>► Updated <i>Table 10.32: Bus Asset Tags—Wye</i>, <i>Table 10.33: Bus Asset Tags—Delta</i>, <i>Table 10.35: Transmission Line and Generic Asset Tags—Wye</i>, <i>Table 10.36: Transmission Line and Generic Asset Tags—Delta</i>, and <i>Table 10.38: Single-Channel Asset Tags</i>.</li> <li>► Added <i>CSV Configuration to Settings in Digital Fault Recorder</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► [Cybersecurity] Updated for RTAC firmware versions R155-V0/R201-V0, R154-V1/R200-V1, R153-V3, and R152-V4.</li> <li>► [Cybersecurity] Added software version information for 1.155.201.5000.</li> </ul> |
| 20250507  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Added software version information for 1.154.200.4000.</li> </ul>   |
| 20250326  | <p><b>General</b></p> <ul style="list-style-type: none"> <li>► Added references to SEL-2241-2 throughout.</li> <li>► Added <i>Appendix F: Cybersecurity Features</i>.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated <i>SEL-2243 Power Coupler and Configuring Axion Recording Groups in EtherCAT</i>.</li> <li>► Added <i>Fast High-Current Interrupting Control Outputs to SEL-2244 16 Digital Output and 10 Fast High-Current Digital Output Modules in EtherCAT</i>.</li> <li>► Added <i>Harmonic PQ Quantities on the SEL-2245-42 Module to EtherCAT</i>.</li> <li>► Added <i>Command Operation Negative Feedback to IEC 60870-5-101/104 Server Configuration</i>.</li> <li>► Updated <i>Interoperability Statement subsections in IEC 60870-5-101 and -104</i>.</li> <li>► Updated <i>Settings Tab in SNMP Manager/Client Configuration and SNMP Agent/Server Configuration</i>.</li> <li>► Added a note regarding OPC UA variables to <i>Tag Configuration</i> in <i>OPC UA Server Configuration</i>.</li> </ul> <p><b>Section 3</b></p> <ul style="list-style-type: none"> <li>► Updated Logging Chatter Count and Logging Chatter Time in <i>Table 3.1: Available Columns in the Tag Processor</i>.</li> </ul> <p><b>Section 5</b></p> <ul style="list-style-type: none"> <li>► Added a note regarding project EXP files to <i>Upload Projects From the Web Interface</i>.</li> </ul>   |

| Date Code | Summary of Revisions   |
|-----------|--|
|           | <p><b>Section 7</b></p> <ul style="list-style-type: none"> <li>► Updated Static Routes in <i>Ethernet Security</i>.</li> <li>► Moved <i>X.509 Certificates</i> and <i>CA Certificates</i> to <i>Appendix F: Cybersecurity Features</i>.</li> <li>► Added <i>Table 7.5: Valid ACSELERATOR RTAC Database Password Characters</i>.</li> </ul> <p><b>Section 9</b></p> <ul style="list-style-type: none"> <li>► Updated <i>General Rules</i> in <i>IEC 61131-3 Programming Overview</i>.</li> </ul> <p><b>Section 10</b></p> <ul style="list-style-type: none"> <li>► Added Extension Version 1.37.x.x to <i>Table 10.1: Extension Project Version Compatibility</i>.</li> <li>► Added EtherCAT Bandwidth Usage to <i>Table 10.30: General Settings Names and Descriptions</i>.</li> <li>► Updated <i>Node Configuration</i> and <i>Substation Assets</i> in <i>Settings</i> under <i>Digital Fault Recorder</i>.</li> <li>► Updated <i>Table 10.32: Bus Asset Tags—Wye</i> and <i>Table 10.33: Bus Asset Tags—Delta</i>.</li> <li>► Added Secondary Open Pole Current Detection to <i>Table 10.34: Transmission Line and Generic Asset Settings Names and Descriptions</i>.</li> <li>► Updated <i>Table 10.35: Transmission Line and Generic Asset Tags—Wye</i> and <i>Table 10.36: Transmission Line and Generic Asset Tags—Delta</i>.</li> <li>► Added <i>Single-Channel Assets</i> and <i>Harmonic Triggers</i> to <i>Settings</i> in <i>Digital Fault Recorder</i>.</li> <li>► Updated <i>Build DFR</i> in <i>Digital Fault Recorder</i>.</li> <li>► Added <i>MQTT Client</i>.</li> <li>► Added <i>Signal Sorting</i> to <i>Available Sources Tab</i> in <i>Simple Tag Mapper</i>.</li> <li>► Updating <i>Mapping Controls</i> in <i>Setup</i> under <i>Simple Tag Mapper</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► [Cybersecurity Enhancement] Updated for RTAC firmware versions R154-V0/R200-V0, R153-V2, R152-V3, and R151-V7.</li> <li>► Added information about 100-series and 200-series firmware to <i>Revision History in Firmware</i>.</li> <li>► Updated for SEL-2245-42 firmware version R105-V0.</li> <li>► Added software version information for 1.154.200.3500.</li> </ul> <p><b>Appendix C</b></p> <ul style="list-style-type: none"> <li>► Added a note regarding firmware version R154 on SEL-3555-1 hardware to <i>Overview</i>.</li> </ul> <p><b>Appendix D</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Overview</i>.</li> </ul> |
| 20241217  | <p><b>General</b></p> <ul style="list-style-type: none"> <li>► Removed the part number.</li> </ul>   |
| 20241023  | <p><b>Section 3</b></p> <ul style="list-style-type: none"> <li>► Added <i>ABS_vector_t</i>, <i>ADD_vector_t</i>, <i>DIV_vector_t</i>, <i>EQ_vector_t</i>, <i>MULT_vector_t</i>, <i>NORM_vector_t</i>, <i>REF_vector_t</i>, <i>SCALE_vector_t</i>, and <i>SUB_vector_t</i> to <i>Special Tag Processor Functions</i>.</li> <li>► Added a note about using a negative scaling factor or offset to <i>SCALE_CMV</i> in <i>Special Tag Processor Functions</i>.</li> </ul> <p><b>Section 10</b></p> <ul style="list-style-type: none"> <li>► Added <i>CommProc Converter</i>.</li> <li>► Added information about generic assets to <i>Digital Fault Recorder</i>.</li> <li>► Added user-defined custom channel logic to <i>Features</i> in <i>Digital Fault Recorder</i>.</li> <li>► Added Generate SOE Log CSV Files, Synchrophasor Server PDC ID, Enable Custom Channels, and PMU Data Rate to <i>Table 10.19: General Settings Names and Descriptions</i>.</li> <li>► Updated Recording Length Min. and Recording Length Max. in <i>Table 10.19: General Settings Names and Descriptions</i>.</li> <li>► Added information about using an SEL_AIER module to <i>Digital Fault Recorder</i>.</li> <li>► Added IN_CALC_FUND and IN_CALC_PM to <i>Table 10.24: Transmission Line and Generic Asset Tags—Wye</i> and <i>Table 10.25: Transmission Line and Generic Asset Tags—Delta</i>.</li> <li>► Added <i>User-Defined Custom Channels</i> to <i>Settings</i> in <i>Digital Fault Recorder</i>.</li> <li>► Updated <i>Build DFR</i> in <i>Digital Fault Recorder</i>.</li> <li>► Updated <i>Overview</i> in <i>Simple Tag Mapper</i>.</li> <li>► Added <i>FUNCTION</i> to <i>Operator Functions</i> in <i>Simple Tag Mapper</i>.</li> <li>► Added <i>Live Data Only</i> and <i>Logging Only</i> to <i>Simple Tag Mapper</i>.</li> </ul>  |

| Date Code | Summary of Revisions  |
|-----------|---|
|           | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for SEL-2241 firmware version R153-V1.</li> <li>► Added software version information for 1.37.153.8500.</li> </ul> <p><b>Appendix B</b></p> <ul style="list-style-type: none"> <li>► Added <i>CMV_TO_MV_MAG</i>, <i>CMV_TO_MV_ANG</i>, <i>Celsius_TO_FAHRENHEIT</i>, and <i>FAHRENHEIT_TO_CELSIUS</i> to <i>Custom Conversion Functions</i> in <i>IEC Operators and Extending Functions</i>.</li> </ul>   |
| 20240918  | <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Overview and Features</i>; <i>Logging in to the ACCELERATOR RTAC Database</i>; <i>Creating a New Project</i>; <i>Tag Selector</i>; <i>Save, Send a Project, and Go Online</i>; <i>Creating and Augmenting Projects With XML</i>; <i>Startup Switches</i>; <i>Software Install, Uninstall, and Backup</i>; and <i>Database Maintenance</i>.</li> <li>► Added <i>Connection Directory</i>.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Network Event Capture (Trigger-Based Communication Captures)</i>, <i>Modbus</i>, <i>SEL Protocol</i>, <i>MIRRORED BITS Configuration</i>, <i>EtherCAT Discovery</i>, <i>Alstom Event Collection (Courier Protocol)</i>, <i>IEC 60870-5-101 and -104</i>, and <i>eDNA</i>.</li> <li>► Updated <i>Example 2.5: Configure a Transmit and a Receive NGVL on Two RTACs</i>.</li> <li>► Updated <i>Table 2.104: SES-92 POU Pin Settings</i>.</li> <li>► Added <i>OPC UA Security Configuration</i>.</li> </ul> <p><b>Section 3</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Tag Processor Data Entry</i>.</li> </ul> <p><b>Section 6</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Navigating SEL Touchscreen Applications</i> and <i>ACCELERATOR RTAC Settings and Configuration</i>.</li> </ul> <p><b>Section 10</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Table 10.1: Extension Project Version Compatibility</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Firmware</i>.</li> <li>► [Cybersecurity Enhancement] Updated for RTAC firmware versions R153-V0, R152-V2, R151-V6, and R150-V8.</li> <li>► Added software version information for 1.37.153.8000.</li> <li>► Added a release note regarding local display lock-ups or unexpected restarts to R151-V2 and R150-V4.</li> <li>► Added release notes to R151-V0 regarding failure of online monitoring of IEC 61131-3 programs, RTACs losing their licensed options during a firmware upgrade, failure of web interface project upload activations, unexpected restarts in projects containing GVLs with the RETAIN attribute, and an SEL-3505-3 hardware component change.</li> </ul> <p><b>Appendix B</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Custom Functions</i>, <i>Predefined Function Blocks</i>, and <i>Identifiers</i>.</li> </ul> <p><b>Appendix C</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Overview and Settings Read</i>.</li> </ul> |
| 20240711  | <p><b>Section 10</b></p> <ul style="list-style-type: none"> <li>► Added <i>87L Comm Monitor</i> and <i>DMA Link</i>.</li> </ul>   |
| 20240419  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated first footnote in <i>Table 2.34: Axion PMU Rate</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for SEL-2245-4 and SEL-2245-411 firmware version R106-V0.</li> </ul>   |
| 20240418  | <p><b>Section 10</b></p> <ul style="list-style-type: none"> <li>► Added <i>Grid Connect</i>.</li> </ul>   |

**1044 Firmware and Manual Versions**  
**Instruction Manual**

| Date Code | Summary of Revisions   |
|-----------|--|
| 20240320  | <p><b>Section 2</b></p> <ul style="list-style-type: none"><li>▶ Updated <i>Modbus, SEL Protocol, and IEC 60870-5-101 and -104.</i></li><li>▶ Updated <i>MMS Client File Services and Generic File Services.</i></li><li>▶ Updated <i>Table 2.34: Axion PMU Rate.</i></li><li>▶ Updated <i>Tag Configuration in OPC UA.</i></li></ul> <p><b>Section 10</b></p> <ul style="list-style-type: none"><li>▶ Alphabetized extensions sections.</li><li>▶ Updated <i>Extensions introduction.</i></li><li>▶ Updated <i>Dynamic Disturbance Recorder and Email Plus.</i></li><li>▶ Added <i>MMS File Transfer and Protection Elements.</i></li><li>▶ Updated <i>Overview in Report Generator.</i></li></ul> <p><b>Section 11</b></p> <ul style="list-style-type: none"><li>▶ Updated <i>User Sessions.</i></li><li>▶ Updated <i>Table 11.2: Self-Test System Tags.</i></li></ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"><li>▶ [Cybersecurity Enhancement] Updated for RTAC firmware versions R152-V1, R151-V5, and R150-V7.</li><li>▶ Added Trace Route tool release note to R152-V0.</li><li>▶ Added RTAC HMI Runtime Binary file release note to R151-V0.</li><li>▶ Added software version information for 1.36.152.9500.</li></ul> <p><b>Appendix B</b></p> <ul style="list-style-type: none"><li>▶ Updated <i>Enumerations under Ethernet Interface Control.</i></li></ul>  |
| 20231109  | <p><b>Section 1</b></p> <ul style="list-style-type: none"><li>▶ Updated <i>Modify Existing Projects With XML</i> in <i>Creating and Augmenting Projects With XML.</i></li></ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"><li>▶ Updated <i>SCADA Protocol Redundancy.</i></li><li>▶ Updated <i>Communication Protocol Device Count Support.</i></li><li>▶ Updated <i>DNP Server Event Reporting and DNP Server Shared Tag Maps</i> in <i>DNP Server Configuration.</i></li><li>▶ Added <i>Flex Parse Capture to File to Flex Parse Messages</i> in <i>SEL Client Configuration.</i></li><li>▶ Added <i>Overview and Licensing to IEC 61850.</i></li><li>▶ Added a note regarding the Sync_Automation_To_GOOSE_RX System tag to <i>GOOSE Subscription (Receive) Processing</i> in <i>IEC 61850.</i></li><li>▶ Added a note to <i>Architect</i> in <i>MMS Client and GOOSE</i> stating that non-SEL ICD and CID files in which an IED name is configured the same as a logical name are not supported.</li><li>▶ Added <i>Continuous Recording Groups to EtherCAT.</i></li><li>▶ Added <i>Firmware API, HMI API, Serial API, and Users API to Web API Communications.</i></li><li>▶ Updated <i>Projects API</i> in <i>Web API Communications.</i></li></ul> <p><b>Section 5</b></p> <ul style="list-style-type: none"><li>▶ Updated <i>Web HMI and Dashboard Settings</i> with information specific to firmware versions R152 and later.</li><li>▶ Updated <i>Adding Tags to Live Data</i> in <i>Live Data.</i></li></ul> <p><b>Section 6</b></p> <ul style="list-style-type: none"><li>▶ Added <i>Local/Remote Control to Custom Screens Application</i> in <i>Navigating SEL Touchscreen Applications.</i></li><li>▶ Added <i>SOE Display Column Configuration and SOE Automatic Refresh</i> to <i>SOE Application Configuration</i> in <i>Navigating SEL Touchscreen Applications.</i></li><li>▶ Added <i>Disable SOE Tag Name Column and Enable Global Local/Remote Mode</i> settings to <i>Table 6.13: SEL Touchscreen Settings Tab.</i></li><li>▶ Added <i>Local pin</i> to <i>Table 6.14: SEL Touchscreen Controller POU Pins.</i></li></ul> <p><b>Section 7</b></p> <ul style="list-style-type: none"><li>▶ Updated <i>Customizable User Accounts in R141 and Higher</i> in <i>RTAC Web Interface User Accounts.</i></li></ul> |

| Date Code | Summary of Revisions  |
|-----------|---|
|           | <p><b>Section 10</b></p> <ul style="list-style-type: none"> <li>► Updated <i>High-Threshold Trigger</i> and <i>Low-Threshold Trigger</i> in <i>Analog Triggers Tab</i>.</li> <li>► Added High Threshold Pickup Time, Low Trigger Pickup Time, Low Trigger Minimum Active Setpoint, and ROC Trigger Pickup Time to <i>Table 10.6: Analog Triggers Tab Column Definitions</i>.</li> <li>► Updated <i>Digital Triggers Tab</i> in <i>Recording Triggers</i>.</li> <li>► Added Trigger Pickup Time and Trigger Dropout Time to <i>Table 10.7: Digital Triggers Tab Column Definitions</i>.</li> <li>► Added <i>Table 10.8: Recording Triggers POU Output Pins and Usage of Recording_Trigger_Individual_Output_Array to Controller Tab</i> in <i>Recording Triggers</i>.</li> <li>► Added Courier Client COMTRADE, IEC 60870-5-103 COMTRADE, and Recording Groups COMTRADE to list of sources of events available for monitoring in <i>Overview</i> under <i>FTPSync</i>.</li> <li>► Added <i>Monitored Directories Tab</i>, <i>Monitored Events CEV Tab</i>, and <i>Monitored Events COMTRADE Tab</i> to <i>FTPSync</i>.</li> <li>► Updated <i>Overview</i> in <i>Email Plus</i>.</li> <li>► Added <i>Body Editor Tab</i>, <i>Recipient Groups Tab</i>, <i>Monitored Alarms Tab</i>, and <i>Monitored Events Tab</i> to <i>Email Plus</i>.</li> <li>► Added Status to <i>Table 10.13: Email Plus POU Pins</i>.</li> <li>► Added <i>Digital Fault Recorder</i>.</li> </ul> <p><b>Section 11</b></p> <ul style="list-style-type: none"> <li>► Added model-specific information to Descriptions in <i>Table 11.2: Self-Test System Tags</i>.</li> <li>► Added Supply_A_OK, Supply_A_Present, Supply_B_OK, Supply_B_Present, Port_Power_Overcurrent, USB_Power_Overcurrent, and VGA_Power_Overcurrent to <i>Table 11.2: Self-Test System Tags</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► [Cybersecurity Enhancement] Updated for RTAC firmware versions R152-V0, R151-V4, R150-V6, and R149-V8.</li> <li>► [Cybersecurity Enhancement] Added software version information for 1.36.152.8000.</li> <li>► Revised hardware component change release notes for firmware versions R151-V3, R150-V5, and R149-V7 to include the SEL-2241 and SEL-3530-4 and to change the referenced manufacture date.</li> <li>► Revised release notes regarding loss of settings after a power cycle for firmware versions R146-V2, R145-V2, and R144-V7 to remove the SEL-3530, SEL-3530-4, and SEL-2241 from the list of affected devices and to specify that only settings configured in the <i>local display</i> HMI were affected.</li> <li>► Removed two release notes regarding the logic engine API from firmware version R145-V4.</li> <li>► Revised the affected models for the web interface login release note in firmware versions R145-V1 and R144-V6 to 3555.</li> <li>► Moved release note regarding addition of support for SEL-3555-2 from firmware version R143-V0 to version R144-V2.</li> <li>► Added release note to firmware version R132-V0 noting addition of support for TLSv1.2.</li> <li>► Added EtherCAT network release note to software version 1.35.151.20000.</li> </ul> <p><b>Appendix D</b></p> <ul style="list-style-type: none"> <li>► Added <i>Configure Dynamic Disturbance Recording With Continuous Recording Groups</i> to <i>RTAC and Axion Configuration</i>.</li> </ul> |
| 20230823  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Added software version information for 1.35.151.23000.</li> <li>► Corrected affected model to 3555 for BIOS update revision statement for firmware version R147-V2 in <i>Table A.1: RTAC Firmware History</i>.</li> </ul>   |
| 20230614  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Table 2.25: SEL Server Commands (All Commands Access Level 1)</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Added software version information for 1.35.151.22000.</li> <li>► Revised 1.35.151.6000 and 1.34.150.18000 software summaries.</li> </ul> <p><b>Appendix B</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Ethernet_Interface_Control</i> in <i>Predefined Function Blocks</i>.</li> </ul>  |
| 20230522  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Added software version information for 1.35.151.21000.</li> <li>► Updated for RTAC firmware versions R151-V3, R150-V5, and R149-V7.</li> </ul>  |

| Date Code | Summary of Revisions  |
|-----------|---|
| 20230321  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Data Configuration Parameters</i> in <i>MIRRORED BITS</i>.</li> <li>► Added "Tag Name" to <i>Table 2.27: RX MIRRORED BITS Parameters</i>.</li> </ul> <p><b>Section 10</b></p> <ul style="list-style-type: none"> <li>► Added a note to <i>Overview</i> in <i>Dynamic Disturbance Recorder</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Added software version information for 1.35.151.20000.</li> <li>► Updated for RTAC firmware versions R151-V2, R150-V4, R149-V6, and R148-V9.</li> <li>► Revised R151-V0 firmware summary for the SEL-3350.</li> </ul>   |
| 20230119  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for SEL-2245-2 firmware version R102-V1.</li> </ul>   |
| 20221212  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware versions R151-V1, R150-V3, R149-V5, and R148-V8.</li> </ul>   |
| 20221109  | <p><b>General</b></p> <ul style="list-style-type: none"> <li>► Renamed <i>Section 5</i> to <i>Web Interface and Reports</i>.</li> <li>► Removed <i>Section 7: Compare ACSELERATOR RTAC Configurations</i>.</li> </ul> <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Added link to license for open-source software Timescale in <i>Getting Started</i> under <i>Overview and Features</i>.</li> <li>► Added <i>Startup Time</i> to <i>Creating a New Project</i>.</li> <li>► Changed <i>Save and Download a Project</i> to <i>Save and Send a Project</i>.</li> <li>► Removed <i>Upload Projects From the Web Interface</i>.</li> <li>► Added <i>Compare ACSELERATOR RTAC Projects</i>.</li> <li>► Updated <i>RTAC Database on a Shared Server</i>.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Configuration Monitor</i> in <i>SEL Client Configuration</i> under <i>SEL Protocol</i>.</li> <li>► Added <i>POU Pin Settings</i> and <i>Table 2.24: SEL Client POU Pin Settings</i> to <i>SEL Client Configuration</i> under <i>SEL Protocol</i>.</li> <li>► Updated <i>Unsolicited Event, SOE, and Config Change Notifications</i> in <i>SEL Server Configuration</i> under <i>SEL Protocol</i>.</li> <li>► Added <b>CMO SUM ALL, CMO SUM port, CMO ACK ALL, and CMO ACK port</b> to <i>Table 2.25: SEL Server Commands (All Commands Access Level 1)</i>.</li> <li>► Added <i>Functional Naming</i> to <i>Features</i> in <i>IEC 61850</i>.</li> <li>► Added <i>GOOSE Simulation Mode, LGOS Statistics, and GOOSE Receive POU Pins</i> to <i>GOOSE Subscription (Receive) Processing</i> under <i>IEC 61850</i>.</li> <li>► Added <i>MMS Server LTIM and LTMS (Firmware Versions R151-V0 and Later)</i> to <i>MMS Server</i> under <i>IEC 61850</i>.</li> <li>► Added <i>Local and Remote Processing (Firmware R150-V0 and Earlier)</i> and <i>Local and Remote Processing (Firmware R151-V0 and Later)</i> to <i>MMS Server</i> under <i>IEC 61850</i>.</li> </ul> <p><b>Section 3</b></p> <ul style="list-style-type: none"> <li>► Updated <i>SCALE_CMV, SCALE_INS, and SCALE_MV</i> in <i>Special Tag Processor Functions</i>.</li> <li>► Added <i>SCALE_BCR</i> to <i>Special Tag Processor Functions</i>.</li> </ul> <p><b>Section 5</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Overview</i>.</li> <li>► Added <i>Password History Count, Power Source Scale (0.5 - 1.5), and Default Home Page</i> to list of <i>Dashboard</i> tab settings in <i>Web HMI and Dashboard Settings</i>.</li> <li>► Updated <i>Local RTAC UI in Kiosk Feature</i>.</li> <li>► Added <i>Kiosk Feature Keyboard Shortcut Keys</i> to <i>Kiosk Feature</i>.</li> <li>► Added <i>Network Utilities</i>.</li> <li>► Added information about the <i>Ethernet Devices</i> and <i>Serial Devices</i> sections of the <i>Connected IEDs</i> report to <i>Viewing and Troubleshooting Connected IEDs</i>.</li> <li>► Updated <i>Web-Based Serial and Network Traffic Captures</i> in <i>Viewing and Troubleshooting Connected IEDs</i>.</li> <li>► Added <i>Online Packet Dissector</i> to <i>Viewing and Troubleshooting Connected IEDs</i>.</li> <li>► Added <i>BOOL; ACT, ACD; and ENS</i> to <i>Default Log Entries</i> under <i>Log Settings</i>.</li> <li>► Added <i>Upload Projects From the Web Interface</i>.</li> </ul> |

| Date Code | Summary of Revisions  |
|-----------|---|
|           | <p><b>Section 11</b></p> <ul style="list-style-type: none"> <li>► Added <i>Figure 11.24: Example Control Mapping—Auto</i> and <i>Figure 11.25: Example Control Mapping—Verbose to Mapping Controls in Setup</i> under <i>Simple Tag Mapper</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware versions R151-V0, R150-V2, R149-V4, R148-V7, and R147-V6.</li> <li>► Updated for SEL-2245-22 and SEL-2245-221 firmware version R102-V1.</li> <li>► Updated for SEL-2245-4 and SEL-2245-411 firmware version R105-V1.</li> <li>► Added software version information for 1.35.151.6000.</li> </ul>   |
| 20220805  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware versions R150-V1, R149-V3, R148-V6, and R147-V5.</li> <li>► Added software version information for 1.34.150.18000.</li> </ul>   |
| 20220601  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Added OPC UA to <i>Communication Protocol Device Count Support</i>.</li> <li>► Updated <i>Table 2.14: DNP Server (Slave) Object</i>.</li> <li>► Updated <i>Table 2.15: DNP Client (Master) Object</i>.</li> <li>► Added <i>Table 2.16: DNP Secure Authentication Protocol Implementation Extra Information for Testing (PIXIT)</i>.</li> <li>► Added <i>Tag Configuration</i> in <i>SEL Client Configuration</i> under <i>SEL Protocol</i>.</li> <li>► Added <i>Ethernet Port Setting for GOOSE Messages</i> in <i>IEC 61850</i>.</li> <li>► Added <i>MMS Server Mode and Behavior (Firmware Versions R150-V0 and Later)</i> in <i>MMS Server</i> under <i>IEC 61850</i>.</li> <li>► Added <i>Axion Wave Processing</i> in <i>EtherCAT &gt; Axion Wave Server &gt; Overview</i>.</li> <li>► Updated <i>Table 2.137: Read/Write Access By Account Level</i>.</li> <li>► Added <i>Auth API</i> and <i>Fingerprint API</i> in <i>Web API Communications</i>.</li> <li>► Added <i>Table 2.140: Ethernet/IP Explicit Message Error Statuses</i> and <i>Table 2.141: Ethernet/IP Explicit Message Error and Extended Error Codes</i>.</li> <li>► Added <i>OPC UA</i>.</li> </ul> <p><b>Section 8</b></p> <ul style="list-style-type: none"> <li>► Added <i>Hosts</i> in <i>Ethernet Security</i>.</li> </ul> <p><b>Section 11</b></p> <ul style="list-style-type: none"> <li>► Added <i>Falling Conductor Protection</i>.</li> </ul> <p><b>Section 12</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Table 12.2: Self-Test System Tags</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware versions R150-V0, R149-V2, R148-V5, R147-V4, and R146-V5.</li> <li>► Added software version information for 1.34.150.15000.</li> </ul> <p><b>Appendix B</b></p> <ul style="list-style-type: none"> <li>► Added <i>Audit Utilities</i> in <i>Predefined Function Blocks</i>.</li> </ul> |
| 20220408  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for SEL-2245-42 firmware version R104-V1.</li> </ul>  |
| 20220112  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Added software version information for 1.33.149.16000.</li> </ul>   |
| 20211214  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R149-V1.</li> <li>► Added software version information for 1.33.149.15000.</li> </ul>   |
| 20210915  | <p><b>General</b></p> <ul style="list-style-type: none"> <li>► Added <i>Section 6: Axion Bay Control and SEL Touchscreen</i>.</li> </ul> <p><b>Section 8</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Table 8.1: IP Security Settings</i>.</li> <li>► Updated <i>Supported File Formats</i> in <i>Dynamic Disturbance Recorder</i>.</li> </ul>   |

**1048 Firmware and Manual Versions**  
**Instruction Manual**

| Date Code | Summary of Revisions  |
|-----------|---|
|           | <p><b>Section 11</b></p> <ul style="list-style-type: none"> <li>► Added <i>SOE Harvesting Tab</i> in <i>Dynamic Disturbance Recorder &gt; Overview</i>.</li> <li>► Added <i>IPv6 Configuration</i> in <i>Ethernet Security</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware versions R149-V0, R148-V4, R147-V3, R146-V4, and R145-V4.</li> <li>► Added software version information for 1.33.149.12000.</li> </ul>   |
| 20210713  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware versions R148-V3.</li> <li>► Added software version information for 1.32.148.9000.</li> </ul>   |
| 20210414  | <p><b>Section 10</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Table 10.11: Monitored Channel Settings</i>.</li> <li>► Updated <i>Table 10.14: CtPt Monitor Status Structure (struct_CTPTStatusOutput)</i>.</li> <li>► Updated <i>Figure 10.42: POU Output Status Indicators</i>.</li> <li>► Updated <i>Available Sources Tab</i> and <i>Indirect Tagging Extension Example</i> in <i>Indirect Tagging</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R148-V2.</li> <li>► Added software version information for 1.32.148.8000.</li> </ul>   |
| 20210320  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware versions R145-V3, R146-V3, R147-V2, and R148-V1.</li> <li>► Revised R148-V0 firmware summaries for all RTAC models.</li> <li>► Added software version information for 1.32.148.7500.</li> </ul>   |
| 20210208  | <p><b>General</b></p> <ul style="list-style-type: none"> <li>► Updated manual format.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Added R148 information to <i>Overview</i>.</li> <li>► Added <i>Event Collection File Naming</i>.</li> </ul> <p><b>Section 5</b></p> <ul style="list-style-type: none"> <li>► Added <i>RAID Support and Configuration</i>.</li> </ul> <p><b>Section 10</b></p> <ul style="list-style-type: none"> <li>► Added <i>Simple Tag Mapper</i>.</li> <li>► Added <i>CtPt Monitor</i>.</li> <li>► Added <i>Indirect Tagging</i>.</li> </ul> <p><b>Section 11</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Table 11.2: Self-Test System Tags</i> with RAID information.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Combined the RTAC firmware revision history tables into one (Table A.1).</li> <li>► Updated for RTAC firmware version R148-V0.</li> <li>► Updated for RTAC software version 1.32.xxx.</li> <li>► Added software version information for 1.30.146.4019, 1.31.147.3541, 1.31.147.3847, and 1.31.147.4000.</li> </ul> |
| 20201130  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC software version 1.31.xxx.</li> <li>► Revised R147-V1 firmware summaries for all RTAC models.</li> <li>► Revised R144-V8 firmware summaries for all RTAC models.</li> <li>► Revised R143-V0 firmware summary for the SEL-3555.</li> <li>► Revised R104-V0 firmware summary for the SEL-2245-42.</li> </ul>   |
| 20201026  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware versions R144-V8 and R147-V1.</li> </ul>  |

| Date Code | Summary of Revisions  |
|-----------|---|
| 20200820  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated <i>SEL Client in SEL Protocol</i>.</li> <li>► Added <i>Axion Wave Server</i>.</li> <li>► Updated <i>EtherNet/IP</i>.</li> </ul> <p><b>Section 5</b></p> <ul style="list-style-type: none"> <li>► Added <i>Web Proxy</i>.</li> </ul> <p><b>Section 10</b></p> <ul style="list-style-type: none"> <li>► Updated <i>FTPSync</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R147-V0.</li> </ul>   |
| 20200610  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R146-V2.</li> <li>► Updated for RTAC firmware version R145-V2.</li> <li>► Updated for RTAC firmware version R144-V7.</li> </ul>   |
| 20200425  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R146-V1.</li> <li>► Updated for RTAC firmware version R144-V6.</li> </ul>   |
| 20200224  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Added <i>Web API Communications</i>.</li> </ul> <p><b>Section 7</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Table 7.6: Available Permissions</i>.</li> </ul> <p><b>Section 10</b></p> <ul style="list-style-type: none"> <li>► Added <i>Email Plus</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R146-V0.</li> </ul>   |
| 20200122  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R145-V1.</li> <li>► Updated for RTAC firmware version R144-V5.</li> <li>► Updated for RTAC firmware version R143-V1.</li> <li>► Updated for RTAC firmware version R142-V1.</li> </ul>   |
| 20191015  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R144-V4.</li> </ul>   |
| 20190830  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Added <i>Password Command and Managing User Accounts in SEL Protocol</i>.</li> <li>► Added <i>IEEE C37.118 System Configuration</i> and <i>IEEE C37.118 Axion PMU in IEEE C37.118 Synchrophasors</i>.</li> <li>► Updated <i>IEEE C37.118 Client Configuration</i>.</li> <li>► Added <i>IEC 60870-5-103</i>.</li> </ul> <p><b>Section 7</b></p> <ul style="list-style-type: none"> <li>► Added <i>Static Routes in Ethernet Security</i>.</li> </ul> <p><b>Section 10</b></p> <ul style="list-style-type: none"> <li>► Added <i>Report Generator</i>.</li> <li>► Added <i>FTPSync</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R145-V0.</li> </ul> <p><b>Appendix B</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Table B.23: INS Attributes</i>.</li> </ul> |
| 20190508  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R144-V3.</li> </ul>   |

**1050 Firmware and Manual Versions**  
**Instruction Manual**

| Date Code | Summary of Revisions  |
|-----------|---|
| 20190315  | <b>Appendix A</b><br>► Revised R144-V2 firmware summary for SEL-3555 and SEL-3560.  |
| 20190216  | <b>Appendix A</b><br>► Updated for RTAC firmware version R144-V2.   |
| 20190111  | <b>Appendix A</b><br>► Updated for RTAC firmware version R144-V1.   |
| 20181217  | <b>Section 1</b><br>► Added <i>Software Maintenance</i> .<br><b>Section 2</b><br>► Added <i>SEL-2245-221 Low-Voltage (LEA) Monitoring Module</i> under <i>EtherCAT</i> .<br>► Added <i>CDC Type 2 Client Configuration</i> under <i>CDC Type 2</i> .<br><b>Section 7</b><br>► Added <i>Centralized User Accounts With RADIUS</i> .<br><b>Section 8</b><br>► Updated <i>Table 8.1: Profile Comparison and RTAC Support</i> .<br><b>Appendix A</b><br>► Updated for RTAC firmware version R144. |
| 20180928  | <b>Appendix A</b><br>► Updated for RTAC software version 1.26.xxx.  |
| 20180710  | <b>General</b><br>► Added <i>Section 11: Testing and Troubleshooting</i> .<br>► Added <i>Appendix C: Firmware Upgrade Instructions</i> .<br><b>Section 2</b><br>► Added <i>Secure Authentication to DNP3</i> .<br>► Added <i>SEL-2245-411 Standard Current and Low-Voltage (LEA) Monitoring Module</i> under <i>EtherCAT</i> .<br><b>Appendix A</b><br>► Updated for RTAC firmware version R143.  |
| 20180330  | <b>Appendix A</b><br>► Updated for RTAC firmware version R142.  |
| 20180202  | <b>Appendix A</b><br>► Updated for RTAC versions R139-V2 and R136-V3.   |
| 20171201  | <b>Appendix A</b><br>► Added information for RTAC firmware version R141.  |
| 20171107  | <b>Section 5</b><br>► Updated <i>Web HMI</i> .<br><b>Section 6</b><br>► Renamed <i>RTAC Web Interface, ODBC, and Transparent Connections Passwords to User Accounts in R100–R140</i> and moved to <i>RTAC Web Interface User Accounts</i> .<br>► Added <i>Password Report</i> .<br>► Added <i>RTAC Web Interface User Accounts</i> .<br><b>Appendix A</b><br>► Updated for RTAC firmware version R141.  |
| 20170728  | <b>Section 1</b><br>► Added <i>Table 1.1: Typical RTAC Startup Time</i> .<br><b>Section 2</b><br>► Updated <i>EtherCAT Recording Group</i> for support of Custom Analogs.   |

| Date Code | Summary of Revisions   |
|-----------|--|
|           | <p><b>Section 9</b><br/>       ► Added <i>Extensions</i>.</p> <p><b>Appendix A</b><br/>       ► Updated for RTAC firmware versions R139-V1 and R140.</p>   |
| 20170531  | <p><b>Section 2</b><br/>       ► Updated <i>Configuring Axion Recording Groups</i>.</p> <p><b>Appendix D</b><br/>       ► Updated <i>Overview</i>.<br/>       ► Added <i>Table D.1: Dynamic Disturbance and Recording System Performance</i>.</p>  |
| 20170505  | <p><b>Section 2</b><br/>       ► Updated <i>SER Server Commands</i>.<br/>       ► Added <i>Configuring Axion Recording Groups</i>.<br/>       ► Added <i>File Transfer Protocol</i>.</p> <p><b>Section 3</b><br/>       ► Updated <i>Table 3.1: Available Columns in the Tag Processor</i>.</p> <p><b>Section 5</b><br/>       ► Updated <i>Live Data</i>.</p> <p><b>Section 6</b><br/>       ► Updated <i>RTAC Web Interface, ODBC, and Transparent Connections Passwords</i>.</p> <p><b>Appendix A</b><br/>       ► Updated for RTAC firmware version R139.</p> <p><b>Appendix D</b><br/>       ► Added new <i>Section D: Configuring Dynamic Disturbance and Fault Recording Systems</i>.</p>   |
| 20170220  | <p><b>Section 2</b><br/>       ► Added <i>Alstom Event Collection</i>.</p> <p><b>Section 5</b><br/>       ► Changed section name from <i>Web HMI and Logging</i> to <i>Web HMI and Reports</i>.<br/>       ► Updated <i>Overview</i>.<br/>       ► Renamed <i>Connecting IED Report</i> to <i>Viewing and Troubleshooting Connected IEDs</i> and updated.<br/>       ► Added <i>Live Data</i>.</p> <p><b>Section 7</b><br/>       ► Updated <i>Table 7.1: Profile Comparison and RTAC Support</i>.</p> <p><b>Appendix A</b><br/>       ► Updated for RTAC firmware version R138-V0.</p> <p><b>Appendix B</b><br/>       ► Updated <i>Table B.12: BCR Attributes</i>.<br/>       ► Updated <i>Table B.37: timeStamp_t Attributes</i>.</p> |
| 20170109  | <p><b>Section 2</b><br/>       ► Updated <i>Configure Event Collection</i>.<br/>       ► Updated <i>Viewing Waveforms and Event Files</i>.<br/>       ► Added <i>SEL-2245-42 AC Protection Module</i>.<br/>       ► Added <i>CDC Type 2 Server Configuration</i>.<br/>       ► Added <i>SNMP Manager/Client Configuration</i>.</p> <p><b>Section 6</b><br/>       ► Updated <i>Table 6.1: IP Security Settings</i>.<br/>       ► Added <i>Parallel Redundancy Protocol</i>.</p> <p><b>Appendix A</b><br/>       ► Updated for RTAC firmware version R137-V0.</p>   |

**1052 Firmware and Manual Versions**  
**Instruction Manual**

| Date Code | Summary of Revisions   |
|-----------|--|
| 20170108  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware versions R136-V2, R135-V3, and R134-V4.</li> </ul>   |
| 20161026  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R136-V1.</li> </ul>  |
| 20160624  | <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Creating a New Project</i> for the addition of <b>Import Items</b> and <b>Export</b> to the Quick Access Toolbar.</li> <li>► Added <i>Upload Projects From the Web Interface</i> and <i>Creating and Augmenting Projects With XML</i>.</li> <li>► Removed <i>Creating a New Project From XML</i>.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Added <i>SCADA Protocol Redundancy, Interoperability Statement for IEC 60870-5-101 Client for the SEL RTAC, Interoperability Statement for IEC 60870-5-104 Client for the SEL RTAC, and eDNA</i>.</li> <li>► Updated <i>DNP3, Modbus, IEEE C37.118 Synchrophasors, EtherCAT, Interoperability Statement for IEC 60870-5-101 Server for the SEL RTAC, and Interoperability Statement for IEC 60870-5-104 Server for the SEL RTAC</i>.</li> <li>► Updated <i>SEL Protocol</i> and added the following subsections: <i>Remote Access and File Transfer, Multiple Simultaneous Connections Support, Primary SEL Protocol Connection Configuration, and Unsolicited Event and SOE Notification</i>.</li> <li>► Updated <i>IEC 61850</i> and added the following subsections: <i>MMS Client File Services, COMTRADE Collection, and IEC 61850 MMS Server File Services</i>.</li> <li>► Added <i>IEC 60870 101/104 Client Configuration</i> to <i>IEC 60870-5-101 and -104</i>.</li> </ul> <p><b>Section 6</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Passwords and User Accounts</i> and added the following subsections: <i>Protocol Passwords, Project Passwords, and Project Export Encryption</i>.</li> </ul> <p><b>Section 7</b></p> <ul style="list-style-type: none"> <li>► Added <i>Precision Time Protocol (PTP)</i>.</li> <li>► Updated <i>Time Source Settings</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R136-V0.</li> </ul> <p><b>Appendix B</b></p> <ul style="list-style-type: none"> <li>► Updated <i>IEC Operators and Extending Functions</i> and added the following subsections: <i>Custom Conversions Functions and Time Functions</i>.</li> <li>► Added information to <i>Predefined Function Blocks</i>.</li> </ul> |
| 20160212  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware versions R135-V2, R134-V3, R133-V1, and R132-V1.</li> </ul>  |
| 20160201  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for IEC 60870 issue in ACSELERATOR RTAC.</li> </ul>  |
| 20160115  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R135-V1.</li> <li>► Updated to include note about hardware compatibility with firmware versions R134 and earlier.</li> </ul>   |
| 20150904  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated <i>IEC 61850</i> section to include <i>MMS server</i>.</li> </ul> <p><b>Section 3</b></p> <ul style="list-style-type: none"> <li>► Updated information on the Alarm Summary and IED Report.</li> </ul> <p><b>Section 5</b></p> <ul style="list-style-type: none"> <li>► Improved the description for web session time-out usage.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R135-V0.</li> </ul>   |
| 20150807  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for SEL-2245-4 firmware version R102.</li> </ul>   |

| Date Code | Summary of Revisions  |
|-----------|---|
| 20150504  | <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Added references to SEL-3555.</li> <li>► Updated information related to the <b>Tools</b> menu item.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Added references to SEL-3555.</li> <li>► Replaced <i>Figure 2.41–Figure 2.44</i> and <i>Figure 2.86–Figure 2.87</i> to include more detail.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R134-V1 (R134-V2 for SEL-3532).</li> </ul> <p><b>Appendix C</b></p> <ul style="list-style-type: none"> <li>► Replaced <i>Figure C.3: Direct-Acting and Reverse-Acting Processes</i>, <i>Figure C.8: Cascade Control Example</i>, <i>Figure C.9: Configuration Example of Primary PID Controller</i>, and <i>Table C.4: Cascade Operating Modes</i> to include more detail.</li> </ul> |
| 20150311  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated maximum size of tag names to 100.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated IEC 60870-5-101 and -104 interoperability tables to reflect double transmission and new data rates.</li> <li>► Added <i>Flex Parse Protocol</i>.</li> </ul> <p><b>Section 7</b></p> <ul style="list-style-type: none"> <li>► Added new Global UTC time offset setting that provides more simple time configuration.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R134.</li> <li>► Added <i>Table A.11: SEL-3555 Firmware Revision History</i>.</li> </ul>  |
| 20150123  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated Safe Output information in <i>Configuring the DC Analog Output Module in EtherCAT</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Table A.4: SEL-2245-3 Firmware Revision History</i>.</li> </ul>   |
| 20141103  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated EtherCAT for addition of 4AI-ER module.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R133.</li> <li>► Added <i>Table A.3: SEL-2245-22 Firmware Revision History</i>.</li> </ul>  |
| 20140908  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated ACSELERATOR RTAC enhancements.</li> </ul>   |
| 20140714  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Added note about correct usage of power coupler EtherCAT ports.</li> <li>► Added EtherCAT Filter C information.</li> <li>► Added <i>Waveform Recording</i> and <i>Inputs</i> subsections to <i>SEL-2245-2 16 DC Analog Input Module</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R132.</li> </ul>   |
| 20140616  | <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Creating a New Project</i> subsection.</li> <li>► Updated <i>Figure 1.3: ACSELERATOR RTAC Project Creation Interface</i>.</li> <li>► Updated <i>Figure 1.5: Application Button and Quick Access Toolbar</i>.</li> <li>► Removed <i>Figure 1.7: New From XML Window</i>.</li> <li>► Updated <i>Startup Switches</i> subsection.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Added <i>CP2179</i> subsection.</li> <li>► Updated <i>Table 2.56: RTU Templates With Included Modules</i>.</li> <li>► Added <i>Interoperability Statement for IEC 60870-5-101 Server for the SEL Real-Time Automation Controller (RTAC)</i> and <i>Interoperability Statement for IEC 60870-5-104 Server for the SEL Real-Time Automation Controller (RTAC)</i> subsections.</li> </ul>                    |

| Date Code | Summary of Revisions  |
|-----------|---|
|           | <p><b>Section 6</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Table 6.1: IP Security Settings</i>.</li> <li>► Updated <i>Figure 6.2: Ethernet Settings</i> and <i>Figure 6.3: Routes and Certificates</i>.</li> <li>► Added <i>Syslog</i> subsection.</li> </ul> <p><b>Section 7</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Table 7.2: Pertinent System POU Pin Settings</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Added <i>Table A.6: SEL-3505-3 Firmware Revision History</i> and <i>Table A.9: SEL-3532 Firmware Revision History</i>.</li> </ul>   |
| 20140428  | <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Added <i>Table 1.1: Advanced Debugging Tools</i>.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Updated <i>EtherCAT</i> for addition of AO module.</li> <li>► Updated <i>Figure 2.83: New Pulse Config offDur = 0</i>.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R131.</li> <li>► Added <i>Table A.3: SEL-2245-3 Firmware Revision History</i>.</li> </ul> <p><b>Appendix B</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Table B.7: Integer Data Types</i> and <i>Table B.16: DPS Attributes</i>.</li> </ul> <p><b>Appendix C</b></p> <ul style="list-style-type: none"> <li>► Added new <i>Appendix C: Proportional-Integral-Derivative (PID) Function Block</i>.</li> </ul>  |
| 20140225  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R130.</li> </ul>  |
| 20140210  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R129.</li> </ul>  |
| 20140113  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R128.</li> </ul>  |
| 20131216  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R127.</li> </ul>  |
| 20131206  | <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Updated <i>Figure 1.5: Application Button and Quick Access Toolbar</i>.</li> <li>► Added <b>Export Items</b> option to <i>Application Button</i>.</li> <li>► Updated <i>Save and Download a Project</i> to include IEC 61131-3 logic information.</li> <li>► Updated export instructions in <i>Creating a New Project From XML</i>.</li> <li>► Removed <i>Test Mode</i> section in <i>Startup Switches</i>.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Added <i>Output Contact Pulse</i> section to <i>EtherCAT</i>.</li> <li>► Updated <i>Figure 2.84: Digital output Module Tag Attributes</i> and <i>Figure 2.85: Tag Processor for Trip-Close Pair Example</i>.</li> <li>► Updated <i>Example 2.8: Configure a Transmit and a Receive NGVL on two RTACs</i>.</li> </ul> <p><b>Section 6</b></p> <ul style="list-style-type: none"> <li>► Added maximum length specification for password in <i>Ethernet Security</i>.</li> <li>► Added information about X.509 certificate activation in <i>Ethernet Security</i>.</li> </ul> <p><b>Section 8</b></p> <ul style="list-style-type: none"> <li>► Added new <i>_project_version</i> information in <i>Variables</i> section in <i>IEC 61131-3 Programming Overview</i>.</li> </ul> |

| Date Code | Summary of Revisions  |
|-----------|---|
|           | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R126.</li> </ul> <p><b>Appendix B</b></p> <ul style="list-style-type: none"> <li>► Added Q1 output information in RS and SR function block sections in <i>Predefined Function Blocks</i>.</li> <li>► Added origin attribute to <i>Table B.8: APC Attributes</i>, <i>Table B.14: DNPC Attributes</i>, <i>Table B.19: INC Attributes</i>, <i>Table B.24: MDBC Attributes</i>, <i>Table B.25: MRBC Attributes</i>, <i>Table B.27: SPC Attributes</i>, <i>Table B.28: SBRC Attributes</i>, and <i>Table B.30: RBC Attributes</i>.</li> <li>► Added <i>DPC (Controllable Double Point)</i> section in <i>Data Types</i>.</li> <li>► Added <i>operPulse</i> attribute to <i>Table B.21: IOC Attributes</i>.</li> </ul>  |
| 20130827  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Added <i>IEEE C37.118 Server</i> and <i>IEEE C37.118 Server PMU</i> to protocols section.</li> <li>► Added <i>SEL-2245-4 CT/PT Module</i> to the <i>EtherCAT</i> protocol section.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R125.</li> </ul>   |
| 20130628  | <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Updated project view descriptions in <i>Creating a New Project</i>.</li> <li>► Added <i>Startup Switches</i> section that discusses advanced startup switches to facilitate library support and advanced development options.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Update max tag count to 5000 for SEL-3505.</li> <li>► Added <i>SES-92 server</i> protocol section.</li> <li>► Added <i>IEC 60870-5-101 and -104</i> server protocols section.</li> </ul> <p><b>Section 4</b></p> <ul style="list-style-type: none"> <li>► Added APR commands and controls information in <i>Configuration</i>.</li> <li>► Added <i>Table 4.1: APR Commands Summary</i>.</li> <li>► Added <i>POU Pin Settings</i> section.</li> </ul> <p><b>Section 5</b></p> <ul style="list-style-type: none"> <li>► Added clarifications for logging various data types in <i>Log Settings</i>.</li> </ul> <p><b>Section 7</b></p> <ul style="list-style-type: none"> <li>► Added <i>Force_System_Time_Source</i> to <i>Table 7.2: Pertinent System Time POU Pin Settings</i>.</li> </ul> <p><b>Section 8</b></p> <ul style="list-style-type: none"> <li>► Added <i>Cross References</i> in <i>IEC 61131-3 Programming Overview</i> with information about using cross referencing to find all instances of a tag or variable in the project.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R124.</li> </ul> <p><b>Appendix B</b></p> <ul style="list-style-type: none"> <li>► Added several new data types in <i>ACSELERATOR RTAC Data Types</i> and Data Classes for IEC 60870-5-101 protocol.</li> </ul> |
| 20130531  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R123 Z002.</li> <li>► Updated for SEL-2245-2 firmware version R101.</li> </ul>  |
| 20130207  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for ACSELERATOR RTAC revision 1.11.41xx.xxx.</li> </ul>   |
| 20130117  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Added note regarding anonymous client IP addressing when using unsolicited event reporting in SEL server.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R123.</li> </ul>  |

**1056 Firmware and Manual Versions**  
**Instruction Manual**

| Date Code | Summary of Revisions  |
|-----------|---|
| 20121121  | <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Added definition for a tag.</li> <li>► Added information on how to create a shared ACSELERATOR RTAC database.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Clarified that the SEL-3505 supports 10000 tags total.</li> <li>► Clarified event collection parameter usage.</li> <li>► Clarified MMS DataSet maximum is per IED.</li> <li>► Modified GOOSE TX and RX maximums to 150 each.</li> <li>► Added MICS and PICS documents in <i>IEC 61850</i>.</li> <li>► Added analog input module to <i>EtherCAT</i>.</li> <li>► Added <i>Landis and Gyr LG 8979</i>.</li> </ul> <p><b>Section 4</b></p> <ul style="list-style-type: none"> <li>► Modified <i>Example 4.3</i> to use an SEL-451 instead of an SEL-351S.</li> </ul> <p><b>Section 5</b></p> <ul style="list-style-type: none"> <li>► Added ODBC configuration steps for Windows 7.</li> </ul> <p><b>Section 6</b></p> <ul style="list-style-type: none"> <li>► Fixed typo in LDAP configuration that referred to SEL-5033 instead of RTAC as the LDAP client.</li> <li>► Added configuration information for certificate usage in <i>LDAP Configuration</i>.</li> </ul> <p><b>Section 8</b></p> <ul style="list-style-type: none"> <li>► Added note on referencing function blocks each processing cycle.</li> <li>► Modified figure in <i>Example 8.2</i> to reflect example description.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Added entry for R119 firmware regarding Modbus/TCP controls.</li> <li>► Updated for firmware version R122.</li> </ul> |
| 20121031  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for firmware version R121.</li> </ul>   |
| 20121010  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Amended R120 firmware revision history.</li> </ul>  |
| 20120924  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for firmware version R120.</li> </ul>   |
| 20120720  | <p><b>General</b></p> <ul style="list-style-type: none"> <li>► Included SEL-3505 as newest member of the RTAC family.</li> </ul> <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Update <i>Figure 1.3</i> to include SEL-3505.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Added note to exclude MMS, EtherCAT options from SEL-3505.</li> <li>► Modified max DNP servers to from 32 to 100.</li> </ul> <p><b>Section 3</b></p> <ul style="list-style-type: none"> <li>► Included information about new web-based tag visualization.</li> </ul> <p><b>Section 5</b></p> <ul style="list-style-type: none"> <li>► Added note to exclude HMI option from SEL-3505.</li> <li>► Updated figures to show SOE filtering features.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for firmware version R119.</li> </ul>   |
| 20120427  | <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Revised for addition of 16 analog inputs and 10 FHC digital output modules.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for firmware version R118.</li> </ul>   |

| Date Code | Summary of Revisions   |
|-----------|--|
| 20120423  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for ACCELERATOR RTAC maintenance release.</li> </ul>   |
| 20120316  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for firmware version R117.</li> </ul>  |
| 20120301  | <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for firmware version R116.</li> </ul>  |
| 20120208  | <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Added information about configuring connection configurations per RTAC.</li> <li>► Enhanced description of Controller function block.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Enhanced description of DNP failover methods.</li> <li>► Enhanced description of Modbus register variations.</li> <li>► Removed GOOSE.</li> <li>► Added IEC 61850 to include MMS client, GOOSE and IEC 61850 overview.</li> <li>► Inserted <i>Network Global Variables (NGVLs)</i>.</li> </ul> <p><b>Section 3</b></p> <ul style="list-style-type: none"> <li>► Updated figures in <i>Example 3.1</i>.</li> </ul> <p><b>Section 4</b></p> <ul style="list-style-type: none"> <li>► Added <i>Example 4.3</i> to illustrate capturing characters in source access point receive messages.</li> </ul> <p><b>Section 8</b></p> <ul style="list-style-type: none"> <li>► Clarified discussion of GLOBAL RETAIN variables.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R115.</li> </ul> <p><b>Appendix B</b></p> <ul style="list-style-type: none"> <li>► Corrected status type in <i>Table B.14</i>.</li> </ul> |
| 20111010  | <p><b>Section 1</b></p> <ul style="list-style-type: none"> <li>► Enhanced explanation of task cycle time behavior.</li> </ul> <p><b>Section 2</b></p> <ul style="list-style-type: none"> <li>► Added explanation of DNP server failover and port sharing.</li> <li>► Added description of DNP server event buffers configuration.</li> <li>► Described SEL client unsolicited write tag quantities.</li> </ul> <p><b>Section 3</b></p> <ul style="list-style-type: none"> <li>► Added example illustrating how to access individual bits in a tag.</li> </ul> <p><b>Section 5</b></p> <ul style="list-style-type: none"> <li>► Added logging function block names to logging description.</li> </ul> <p><b>Section 6</b></p> <ul style="list-style-type: none"> <li>► Added information regarding HMI Operator user role.</li> </ul> <p><b>Appendix A</b></p> <ul style="list-style-type: none"> <li>► Updated for RTAC firmware version R114.</li> </ul>  |
| 20110721  | <ul style="list-style-type: none"> <li>► Initial version.</li> </ul>   |

**This page intentionally left blank**

---

---

## A P P E N D I X    B

---

# IEC 61131-3 Programming Reference

## Overview

---

This section provides details about the following subjects related to IEC 61131-3 programming standards:

- ▶ *IEC Operands on page 1059*: Inputs or arguments used in logic statements.  
myNumber := 4 + 4;
- ▶ *IEC Operators and Extending Functions on page 1065*: Functions used on operands in logic statements to produce a result.  
myNumber := 4 + 4;
- ▶ *Predefined Function Blocks on page 1109*: A library of commonly used routines you can use in custom logic.  
TON() is a turn on delay function block.
- ▶ *Instructions on page 1127*: Logic statements that perform actions.  
FOR, WHILE, IF, etc.
- ▶ *Declarations on page 1132*: Statements that define operands and their characteristics.  
VAR, VAR\_INPUT...
- ▶ *Data Types on page 1137*: Standard predefinitions of operand types.  
myNumber : INT;

Other resources are widely available for the IEC 61131-3 programming standard. Note that the Real-Time Automation Controller (RTAC) only supports Structured Text (ST), Ladder Diagram (LD), and Continuous Function Chart (CFC) programming methods.

## IEC Operands

---

An operand is any input or argument in logic statements. Use the following as operands in RTAC-defined logic:

- ▶ *Constants on page 1059*
- ▶ *Variables on page 1064*
- ▶ *Functions on page 1064*

## Constants

A constant operand is a value in a logic program that does not change dynamically.

myNumber := 2 + x;

The number 2 here is a constant. Regardless of what else happens in the logic, 2 will remain 2.

Use the following data types to create constants as operands in IEC 61131-3 logic.

- ▶ *BOOL Constants on page 1060*
- ▶ *TIME Constants on page 1060*
- ▶ *DATE Constants on page 1061*
- ▶ *TIME\_OF\_DAY Constants on page 1061*
- ▶ *DATE\_AND\_TIME Constants on page 1062*
- ▶ *Number Constants on page 1062*
- ▶ *REAL Constants on page 1063*
- ▶ *STRING Constants on page 1063*
- ▶ *Typed Literals on page 1064*

## BOOL Constants

BOOL (Boolean) constants are the logical values TRUE and FALSE or 1 and 0, respectively. A digital input state is an example of a Boolean value. Although only a single bit is necessary (1 or 0), each BOOL constant uses eight bits of memory space.

IF (IED\_DNP.BI\_0000.stVal = TRUE) THEN

IED\_DNP.BI\_0000.stVal is compared to the constant value of TRUE, or 1 in this example.

See also data type *BOOL* on page 1137.

## TIME Constants

Generally, you will use TIME constants to operate the standard timer modules. Besides the 32-bit IEC 61131-3 time constant TIME, LTIME is also supported. This extension to the standard provides a time base for high-resolution timers. LTIME is 64 bits with a resolution in nanoseconds.

Syntax for TIME constant:

t#<time declaration>

You are not limited to using the format t#; you can also use T#, time, or TIME.

Include the following time units in the time declaration. You must use the time units in the following sequence, but not all time units are necessary.

- ▶ d: days
- ▶ h: hours
- ▶ m: minutes
- ▶ s: seconds
- ▶ ms: milliseconds

Examples of correct TIME constants in a Structured Text assignment (comments shown in parentheses to the right):

TIME1 := T#14ms;

TIME1 := T#100S12ms; (\* The highest component may be allowed to exceed its TIME1 := T#12h34m15s; limit \*)

The following would be incorrect:

TIME1 := t#5m68s; (\* limit exceeded in a lower component \*)

TIME1 := 15ms; (\* T# is missing \*)

TIME1 := t#4ms13d; (\* Incorrect order of entries \*)

Syntax for LTIME constant:

LTIME#<time declaration>

In the time declaration, you can include the time units you used previously with the TIME constant and add the following:

- us: microseconds
- ns: nanoseconds

Examples of correct LTIME constants in a Structured Text assignment:

LTIME1 := LTIME#1000d15h23m12s34ms2us44ns

LTIME1 := LTIME#2ns

LTIME1 := LTIME#3445343m3424732874823ns

See also *Time Data Types on page 1138*.

## DATE Constants

Use these constants to enter dates.

Syntax:

d#<date declaration>

You are not limited to using the format d#; you can also use the following: D#, date, DATE.

Enter the date declaration in the format <year-month-day>.

Internally, DATE values are assigned as DWORD values.

Examples:

DATE#1996-05-06

d#1972-03-29

See also *Time Data Types on page 1138*.

## TIME\_OF\_DAY Constants

Use this type of constant to store times of the day.

Syntax:

tod#<time declaration>

You are not limited to using the format tod#; you can also use the following:  
TOD#, time\_of\_day, TIME\_OF\_DAY.

Enter the time declaration in the format <hour:minute:second>.

You can enter seconds as real numbers; you can therefore specify fractions of a second.

Internally, TIME\_OF\_DAY values are assigned as DWORD values that contain the time in seconds since 00:00.

Examples:

TIME\_OF\_DAY#15:36:30.123 tod#00:00:00

See also *Time Data Types on page 1138*.

## DATE\_AND\_TIME Constants

You can combine DATE constants and TIME\_OF\_DAY constants to form DATE\_AND\_TIME constants.

Syntax:

dt#<date and time declaration>

You are not limited to using the format dt#; you can also use the following: DT#, date\_and\_time, DATE\_AND\_TIME.

Enter the date and time declaration in the format <year-month-day-hour:minute:second>. You can enter seconds as real numbers; you can therefore specify fractions of a second.

Internally DATE\_AND\_TIME values are assigned as DWORD values that contain the number of seconds since 01.01.1970, 00:00.

Examples:

DATE\_AND\_TIME#1996-05-06-15:36:30 dt#1972-03-29-00:00:00

See also *Time Data Types on page 1138*.

## Number Constants

Number constant values can be in binary, octal, decimal, and hexadecimal format. If an integer value is not in decimal (base-10) format, you must declare the base followed by the number sign (#) in front of the integer constant.

Always represent the values for the decimal numbers 10–15 in hexadecimal format by the letters A–F.

You can include the underscore character within the number.

**Table B.1 Examples of Number Constants**

|             |                                 |
|-------------|---------------------------------|
| 14          | (decimal or base-10 number)     |
| 2#1001_0011 | (binary or base-2 number)       |
| 8#67        | (octal or base-8 number)        |
| 16#A        | (hexadecimal or base-16 number) |

These number values can be of type BYTE, WORD, DWORD, SINT, USINT, INT, UINT, DINT, UDINT, REAL, or LREAL.

The compiler does not permit implicit conversions from larger to smaller variable types. This means that you cannot substitute a DINT variable for an INT variable. You must use a type conversion function such as described in *Type Conversion Functions on page 1077*.

## REAL Constants

Represent REAL and LREAL constants either as decimal fractions or exponentially. Use a period for the decimal point.

**Table B.2 Examples of REAL Constants**

|           |                     |
|-----------|---------------------|
| 7.4       | instead of 7,4      |
| 1.64E+009 | instead of 1,64e009 |

## STRING Constants

A string is a sequence of characters.

Surround all STRING constants with single quotation marks. You may also enter blank spaces and special characters (umlauts, for instance). The compiler will treat these characters similarly to all other characters.

Using the dollar sign "\$" in string constants will inform the software that the constant immediately following has special meaning. Note the following combinations and how the string constants change from face value.

**Table B.3 Examples of STRING Constants**

| Entered Combination | Interpretation   |
|---------------------|--|
| \$<two hex numbers> | hexadecimal representation of the eight bit character code |
| \$\$                | Dollar sign  |
| '                   | Single quotation mark                                      |
| \$L or \$l          | Line feed  |
| \$N or \$n          | New line   |
| \$P or \$p          | Page feed  |
| \$R or \$r          | Line break   |
| \$T or \$t          | Tab  |

Examples:

' w1Wüβ?'

' Abby and Craig '

':-)'

'costs (\$\$)'

## Typed Literals

The compiler assigns IEC constants to the smallest possible data type by default. If you must assign a data type explicitly to a constant, then you will use typed literals. In these cases, you must provide the constant with a prefix that determines the type.

Syntax:

<Type>#<Literal>

<Type> specifies the data type you want; possible entries are: BOOL, SINT, USINT, BYTE, INT, UINT, WORD, DINT, UDINT, DWORD, REAL, LREAL. Identify the type with uppercase letters.

<Literal> specifies the constant. The data you enter must fit within the data type you specify in <Type>.

Example:

var1 := DINT#34;

If the compiler cannot convert the constant to the target type without data loss, it issues an error message.

You can use typed literals wherever you can use normal constants.

## Variables

A variable has a unique name and specific data type, and it provides reference to a value stored in memory. Declare variables either locally in the declaration part of a program organizational unit (POU) or in a global variable list (GVL). Use the data type editor (DTE) to declare a structure variable.

You can use variables anywhere the declared type allows for them. You can access available variables through the Input Assistant.

You can reference various types of variables in different ways:

Two-dimensional array components:

<Fieldname>[Index1, Index2]

Structure variables:

<StructureName>.<VariableName>

Function Block and Program variables accessed by another program:

<FunctionBlockName>.<VariableName>

## Functions

In Structured Text, a function call can also appear as an operand. The result returned from that function is used in the context of the function call.

Example: (Result is assigned the value of Fct(7) added to 3)

Result := Fct(7) + 3;

# IEC Operators and Extending Functions

ACSELERATOR RTAC® SEL-5033 Software supports all IEC 61131-3 operators. These operators are recognized implicitly throughout the project.

Use operators in a POU similarly to the way that you use a function. See the following categories of operators:

- ▶ *Assignment Operators on page 1065*
- ▶ *Arithmetic Operators on page 1066*
- ▶ *Bitstring Operators on page 1068*
- ▶ *Bit-Shift Operators on page 1070*
- ▶ *Selection Operators on page 1073*
- ▶ *Comparison Operators on page 1074*
- ▶ *Type Conversion Functions on page 1077*
- ▶ *Numeric Functions on page 1085*
- ▶ *String Functions on page 1090*
- ▶ *Custom Functions on page 1095*

## Assignment Operators

On the left side of an assignment there is an operand (variable) to which the assignment operator := assigns a value for the expression on the right side of the assignment.

See the *MOVE* operator, which performs the same function, especially in CFC-type POUs.

Also see the *SET* and *RESET* operators.

Example:

```
var1 := var2 * 10;
```


After completion of this line, var1 has the tenfold value of var2.

## MOVE

Operator: Assignment of a variable to another variable of an appropriate type.

MOVE is available as a box in the CFC and LD editor. You can also add or remove the EN/ENO functionality on a variable assignment by right-clicking on the MOVE box and selecting EN/ENO from the list.

Only if en\_i is TRUE, var1 will be assigned to var2.

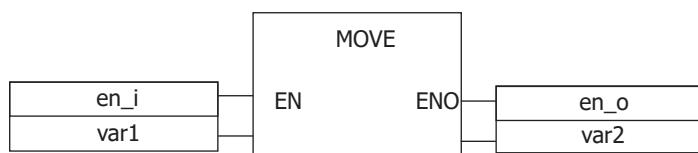

**Figure B.1 MOVE Example in CFC or LD in Conjunction With the EN/ENO Function**

Example in Structured Text:

```
var2 := MOVE(var1);  
(you get the same result with: var2 := var1;)
```

## RESET

Standard IEC 61131-3 does not prescribe this operator.

Operator: RESET R forces a RESET or FALSE on an output when an input goes TRUE. The output element will retain the value of FALSE. In LD logic, use the ladder element Reset coil.

Allowed types: BOOLEAN.

Example in Structured Text:

```
var1 R= var2;
```

This logic will reset Boolean element var1 to a value of FALSE if var2 becomes TRUE. Once RESET, var1 will remain FALSE independently of the value of var2.

Example:

```
var1 S= var2 R= fun1(par1,par2);
```

In this case, var2 gets the reset output value of fun1, but var1 gets the set output value of fun1 and does not get the set value of var2.

### **IMPORTANT**

Notice the behavior of the software in case of a multiple assignment. All set and reset assignments refer to the last member of the assignment.

## SET

Standard IEC 61131-3 does not prescribe this operator.

Operator: SET S forces a SET or TRUE on an output when an input goes TRUE. The output element will retain the value of TRUE. In LD logic, use the ladder element Set coil.

Allowed types: BOOLEAN.

Example in Structured Text:

```
var1 S= var2;
```

This logic will set Boolean element var1 to a value of TRUE if var2 becomes TRUE. Once SET, var1 will remain TRUE independently of the value of var2.

# Arithmetic Operators

The following operators, which the IEC 61131-3 standard prescribes, are available: ADD, MUL, SUB, DIV, MOD.

The extending operator SIZEOF is also available.

## ADD


Operator: Addition of variables. In LD, you can also select two or three inputs.

Allowed types: BYTE, WORD, DWORD, SINT, USINT, INT, UINT, DINT, UDINT, REAL, and LREAL.

You can also add two TIME variables to produce another time data type (e.g., t#45s + t#50s = t#1m35s).

Example in Structured Text:

```
var1 := 7 + 2 + 4 + 7;
```

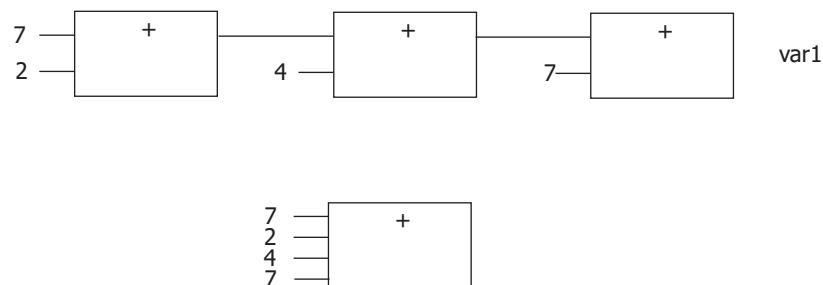

**Figure B.2 Two ADD Examples in CFC, LD**


## DIV

Operator: Division of one variable by another.

Allowed types: BYTE, WORD, DWORD, SINT, USINT, INT, UINT, DINT, UDINT, REAL, and LREAL.

Example in Structured Text:

```
var1 := 8/2; (* Result in var1 is 4 *)
```

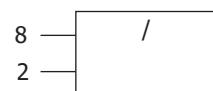

**Figure B.3 DIV Example in CFC, LD**


## MOD

Operator: Modulo Division of one variable by another. The result of this function will be the remainder of the division expressed as a whole number.

Allowed types: BYTE, WORD, DWORD, SINT, USINT, INT, UINT, DINT, UDINT.

Example in Structured Text:

```
var1 := 9 MOD 2 (* Result in var1 is 1 *)
```

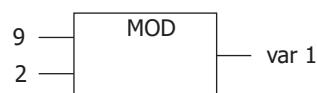

**Figure B.4 MOD Example in CFC, LD**

## MUL

Operator: Multiplication of variables.

Allowed types: BYTE, WORD, DWORD, SINT, USINT, INT, UINT, DINT, UDINT, REAL, and LREAL.

Example in Structured Text:

```
var1 := 7 * 2 * 4 * 7;
```

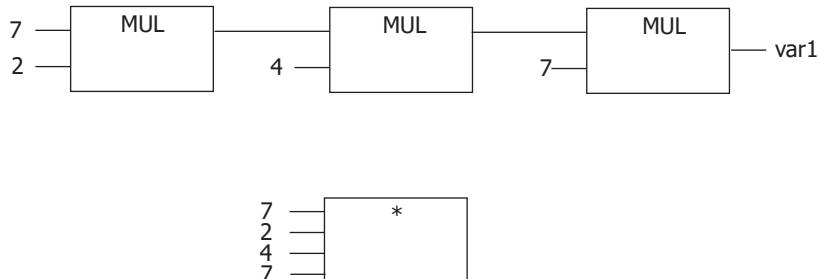


Figure B.5 Two MUL Examples in CFC, LD

## SUB

Operator: Subtraction of one variable from another.

Allowed types: BYTE, WORD, DWORD, SINT, USINT, INT, UINT, DINT, UDINT, REAL, and LREAL.

You can also subtract a TIME variable from another TIME variable to produce a third TIME type variable. Note that negative TIME values are undefined.

Example in Structured Text:

```
var1 := 7 - 2;
```

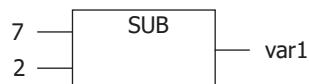


Figure B.6 SUB Example in CFC, LD

## Bitstring Operators

The following bitstring operators are available, matching the IEC 61131-3 standard: AND, OR XOR, NOT.

Bitstring operators compare the corresponding bits of two or several operands.


## AND

Bitstring Operator: Bitwise AND of bit operands. If the input bits each are 1, then the resulting bit will be 1. Otherwise, the resulting bit will be 0.

Allowed types: BOOL, BYTE, WORD, DWORD.

Example in Structured Text: (\* Result in var1 is 2#1000\_0010 \*) var1

```
var1 : BYTE;
var1 := 2#1001_0011 AND 2#1000_1010
```

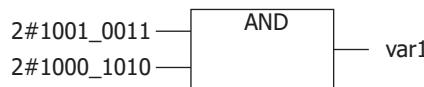

**Figure B.7 AND Example in CFC, LD**

## NOT

Bitstring Operator: Bitwise NOT operation of a bit operand. The resulting bit will be 1, if the corresponding input bit is 0. The resulting bit will be 0, if the corresponding input bit is 1.

Allowed types: BOOL, BYTE, WORD, DWORD.

Example in Structured Text: (\* Result in var1 is 2#0110\_1100 \*)

```
var1 : BYTE;
var1 := NOT 2#1001_0011
```



**Figure B.8 NOT Example in CFC, LD**


## OR

Bitstring Operator: Bitwise OR of bit operands. If at least one of the input bits is 1, the resulting bit will be 1. Otherwise, the resulting bit will be 0.

Allowed types: BOOL, BYTE, WORD or DWORD.

Example in Structured Text: (\* Result in var1 is 2#1001\_1011 \*)

```
var1 : BYTE;
var1 := 2#1001_0011 OR 2#1000_1010
```

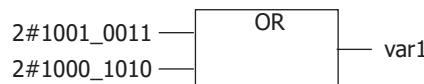

**Figure B.9 OR Example in CFC, LD**


## XOR

Bitstring Operator: Bitwise XOR operation of bit operands. If only one of the input bits is 1, then the resulting bit will be 1. If both or none are 1, the resulting bit will be 0.

Allowed types: BOOL, BYTE, WORD, DWORD.

Example in Structured Text: (\* Result is 2#0001\_1001 \*)

```
var1 : BYTE;
var1 := 2#1001_0011 XOR 2#1000_1010
```

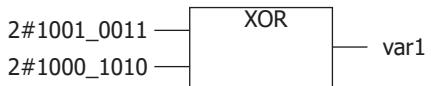

**Figure B.10 XOR Example in CFC, LD**

**NOTE**

It is important to understand the behavior of the XOR function in extended form (cases where you have more than two inputs). The logic engine checks the inputs in pairs and then compares the results again in pairs (this complies with the standard, but this behavior may not be anticipated). To ensure intended operation, group input comparisons within parentheses.

## Bit-Shift Operators

The following bit-shift operators, matching the IEC 61131-3 standard, are available: SHL, SHR, ROL, ROR.

**NOTE**

The software derives the number of bits it uses for the bit-shift operation from the data type of the input variable. If the input variable is a constant, the software uses the smallest possible data type. The data type of the output variable has no effect on the arithmetic operation.

The examples of bit-shift operations are given in hexadecimal notation. These examples illustrate how outputs can vary depending on the data type of the input variable, even though the values of the input variables are the same.

### ROL

Operator: Bitwise rotation of an operand to the left.


erg := ROL (in, n)

Allowed data types: BYTE, WORD, DWORD.

*in* will be shifted one bit position to the left *n* times while the bit that is farthest to the left (the one shifted out) will be reinserted from the right.

Example in Structured Text:

```
PROGRAM rol_st
VAR
    in_byte : BYTE := 16#45;
    in_word : WORD := 16#45;
    erg_byte : BYTE;
    erg_word : WORD;
    n : BYTE := 2;
END_VAR
    erg_byte := ROL(in_byte,n); (* Result is 16#15 *)
    erg_word := ROL(in_word,n); (* Result is 16#0114 *)
```

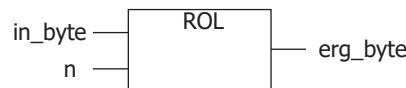**Figure B.11 ROL Example in CFC, LD**

## ROR

Operator: Bitwise rotation of an operand to the right.

`erg := ROR (in, n)`

Allowed data types: BYTE, WORD, DWORD.

*in* will be shifted one bit position to the right *n* times while the bit that is farthest to the right (the one shifted out) will be reinserted from the left.

Example in Structured Text:

```

PROGRAM ror_st VAR
    in_byte : BYTE := 16#45; in_word :
    WORD := 16#45;
    erg_byte : BYTE;
    erg_word : WORD;
    n : BYTE := 2;
END_VAR
    erg_byte := ROR(in_byte,n); (* Result is 16#51 *)
    erg_word := ROR(in_word,n); (* Result is 16#4011 *)
  
```

**Figure B.12 ROR Example in CFC, LD**

## SHL

Operator: Bitwise left shift of an operand.

`erg := SHL (in, n)`

*in*: Operand to be shifted to the left.

*n*: Number of bits by which *in* gets shifted to the left.

SHL populates least significant bits with zeros for each bit shifted to the left.

Allowed data types: BYTE, WORD, DWORD.

Example in Structure Text:


```

PROGRAM shl_st
VAR
    in_byte : BYTE := 16#45;
  
```

```

in_word : WORD := 16#45;
erg_byte : BYTE;
erg_word : WORD;
n : BYTE := 2;
END_VAR
erg_byte := SHL(in_byte,n); (* Result is 16#14 *)
erg_word := SHL(in_word,n); (* Result is 16#0114 *)

```

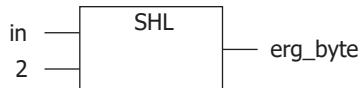

**Figure B.13 SHL Example in CFC, LD**

## SHR

Operator: Bitwise right shift of an operand.

erg := SHR (in, n)

*in*: Operand to be shifted to the right.

*n*: Number of bits by which *in* will shift to the right.

Allowed data types: BYTE, WORD, DWORD.


For unsigned operands (e.g., BYTE, WORD), SHR populates most significant bits with zeros for each bit shifted right. For operands of signed data types (e.g., INT), SHR replicates the sign bit into the most significant bits for each bit shifted right.

Example in Structured Text:

```

PROGRAM shr_st
VAR
    in_byte : BYTE := 16#45;
    in_word : WORD := 16#45;
    erg_byte : BYTE;
    erg_word : WORD;
    n : BYTE := 2;
END_VAR
erg_byte := SHR(in_byte,n); (* Result is 16#11 *)
erg_word := SHR(in_word,n); (* Result is 16#0011 *)

```

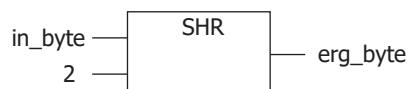

**Figure B.14 SHR Example in CFC, LD**

## Selection Operators

You can perform all selection operations also with variables. For clarity, we limit the following examples to the use of constants as operators: SEL, MAX, MIN, LIMIT, MUX.

### LIMIT

Selection Operator: Limiting.

$OUT := \text{LIMIT}(\text{Min}, \text{IN}, \text{Max})$  means:

*Max* is the upper limit, and *Min* is the lower limit for the result. Should the value *IN* exceed the upper limit *Max*, LIMIT will return *Max*. Should *IN* fall below *Min*, the result will be *Min*.

Allowed data types: IN and OUT can be any type of variable.

Example in Structured Text:

```
var1 := LIMIT(30,90,80); (* Result is 80 *)
```

### MAX

Selection Operator: Maximum function. Returns the greater of the two values.


$OUT := \text{MAX}(\text{IN0}, \text{IN1})$

Allowed data types: IN0, IN1, and OUT can be any type of variable.

Example in Structured Text:

```
var1 := MAX(30,40); (* Result is 40 *)
```

```
var1 := MAX(40,MAX(90,30)); (* Result is 90 *)
```

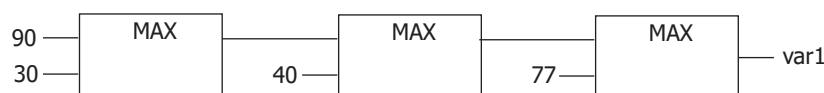

**Figure B.15 MAX Example in CFC, LD**

### MIN

Selection Operator: Minimum function. Returns the lesser of the two values.

$OUT := \text{MIN}(\text{IN0}, \text{IN1})$

Allowed data types: IN0, IN1, and OUT can be any type of variable.

Example in Structured Text:

```
var1 := MIN(90,30); (* Result is 30 *)
```

```
var1 := MIN(MIN(90,30),40); (* Result is 30 *)
```



**Figure B.16 MIN Example in CFC, LD**

## MUX

Selection Operator: Multiplexer

OUT := MUX(K, IN0, ..., INn)

MUX selects the  $K$ th value from among a group of values. MUX counts the first element as element number 0, the second element as number 1, etc.

Allowed data types: IN0, ..., INn and OUT can be any type of variable.

K must be BYTE, WORD, DWORD, SINT, USINT, INT, UINT, DINT, or UDINT.

### NOTE

Any element in the list that is an expression rather than a variable or constant will only be processed if selected by the value of K.

Examples in Structured Text:

```
var1 := MUX(0,30,40,50,60,70,80); (* Result is 30 *)
```

```
var1 := MUX(3,30,40,50,60,70,80); (* Result is 60 *)
```

## SEL

Selection Operator: Binary Selection. G determines whether IN0 or IN1 is assigned to OUT.

OUT := SEL(G, IN0, IN1) means:

OUT := IN0; if G = FALSE

OUT := IN1; if G = TRUE.

Allowed data types: IN0, IN1, OUT: any type. G must be BOOL.

Example in Structured Text:

```
var1 := SEL(TRUE,3,4); (* Result is 4 *)
```

### NOTE

If IN0 or IN1 are expressions, rather than simple variables or constants, the software will process only one of the two expressions according to the value of G.

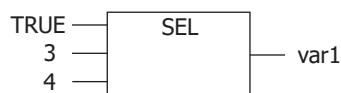


Figure B.17 SEL Example in CFC, LD

## Comparison Operators

The following operators, matching the IEC 61131-3 standard, are available: GT, LT, LE, GE, EQ, and NE.

These are Boolean operators, each of which compares two inputs (first and second operand).

**EQ**

Comparison Operator: Equal to.


A Boolean operator that returns the value TRUE when the operands are equal.

Allowed data types: VAR1 must be BOOL.

Other operands can be BOOL, BYTE, WORD, DWORD, SINT, USINT, INT, UINT, DINT, UDINT, REAL, LREAL, TIME, DATE, TIME\_OF\_DAY, DATE\_AND\_TIME, and STRING.

Example in Structured Text: (\* Result is TRUE \*)

```
VAR1 := 40 = 40;
```

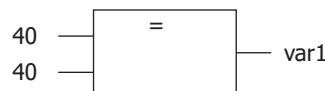

**Figure B.18 EQ Example in CFC, LD**

**GE**

Comparison Operator: Greater than or equal to.


A Boolean operator that returns the value TRUE when the value of the first operand is greater than or equal to the value of the second.

Allowed data types: VAR1 must be BOOL.

Other operands can be BOOL, BYTE, WORD, DWORD, SINT, USINT, INT, UINT, DINT, UDINT, REAL, LREAL, TIME, DATE, TIME\_OF\_DAY, DATE\_AND\_TIME, and STRING.

Example in Structured Text: (\* Result is TRUE \*)

```
VAR1 := 60 >= 40;
```

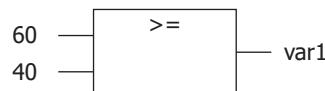

**Figure B.19 GE Example in CFC, LD**

**GT**

Comparison Operator: Greater than.

A Boolean operator that returns the value TRUE when the value of the first operand is greater than the value of the second.

Allowed data types: VAR1 must be BOOL.

Other operands can be BOOL, BYTE, WORD, DWORD, SINT, USINT, INT, UINT, DINT, UDINT, REAL, LREAL, TIME, DATE, TIME\_OF\_DAY, DATE\_AND\_TIME, and STRING.

Example in Structured Text: (\* Result is FALSE \*)

```
VAR1 := 20 > 30;
```

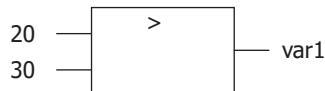


Figure B.20 GT Example in CFC, LD

## LE

Comparison Operator: Less than or equal to.

A Boolean operator that returns the value TRUE when the value of the first operand is less than or equal to the value of the second.

Allowed data types: VAR1 must be BOOL.

Other operands can be BOOL, BYTE, WORD, DWORD, SINT, USINT, INT, UINT, DINT, UDINT, REAL, LREAL, TIME, DATE, TIME\_OF\_DAY, DATE\_AND\_TIME, and STRING.

Example in Structured Text: (\* Result is TRUE \*)

```
VAR1 := 20 <= 30;
```

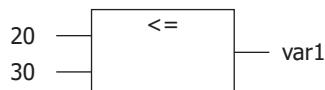


Figure B.21 LE Example in CFC, LD

## LT

Comparison Operator: Less than.

A Boolean operator that returns the value TRUE when the value of the first operand is less than the value of the second.

Allowed data types: VAR1 must be BOOL.

Other operands can be BOOL, BYTE, WORD, DWORD, SINT, USINT, INT, UINT, DINT, UDINT, REAL, LREAL, TIME, DATE, TIME\_OF\_DAY, DATE\_AND\_TIME, and STRING.

Example in Structured Text: (\* Result is TRUE \*)

```
VAR1 := 20 < 30;
```

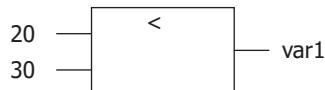


Figure B.22 LT Example in CFC, LD

## NE

Comparison Operator: Not equal to.

A Boolean operator that returns the value TRUE when the operands are not equal.

Allowed data types: VAR1 must be BOOL.

Other operands can be BOOL, BYTE, WORD, DWORD, SINT, USINT, INT, UINT, DINT, UDINT, REAL, LREAL, TIME, DATE, TIME\_OF\_DAY, DATE\_AND\_TIME, and STRING.

Example in Structured Text: (\* Result is FALSE \*)

```
VAR1 := 40 <> 40;
```



**Figure B.23 NE Example in CFC, LD**

## Type Conversion Functions

You can convert natively from any elementary type to any other elementary type. The system cannot, however, convert from a larger type to a smaller type (for example, from INT to BYTE or from DINT to WORD) implicitly. Use type conversion functions for this.

Syntax:

```
<elem.Typ1>_TO_<elem.Typ2>
```

### NOTE

When you perform a type conversion from a larger type to a smaller type, you risk losing some information.

Notice that in each \_TO\_STRING conversion, the string is generated left-justified. If the string is defined too small for the resulting conversion, the resulting string will be truncated from the right.

ACCELERATOR RTAC supports the following type conversions:

- ▶ *BOOL\_TO Conversions on page 1078*
- ▶ *TO\_BOOL Conversions on page 1079*
- ▶ *Conversion Between Integral Number Types on page 1079*
- ▶ *REAL\_TO/LREAL\_TO Conversions on page 1080*
- ▶ *TIME\_TO/TIME\_OF\_DAY Conversions on page 1080*
- ▶ *DATE\_TO/DT\_TO Conversions on page 1081*
- ▶ *STRING\_TO Conversions on page 1082*
- ▶ *TRUNC on page 1082*

The supported data types in IEC 61131-3 are shown in *Table B.4*. Although any type can be converted to any other type, some data may be lost or may no longer be meaningful.

**Table B.4 IEC Data Type**

|      |       |       |
|------|-------|-------|
| BOOL | LREAL | UDINT |
| BYTE | LTIME | UINT  |
| DATE | LWORD | ULINT |
| DINT | REAL  | USINT |

|       |        |         |
|-------|--------|---------|
| DT    | SINT   | WORD    |
| DWORD | STRING | WSTRING |
| INT   | TIME   |         |
| LINT  | TOD    |         |

## BOOL\_TO Conversions

Operator: Converting from data type BOOL to any other data type.

Syntax for a BOOL\_TO conversion operator:

`BOOL_TO_<data type>`


For number types, the result is 1 when the operand is TRUE; the result is 0 when the operand is FALSE.

For the STRING type, the result is TRUE when the operand is TRUE; the result is FALSE when the operand is FALSE.

Examples in Structured Text:

```
i := BOOL_TO_INT(TRUE); (* Result is 1 *)
str := BOOL_TO_STRING(TRUE); (* Result is "TRUE" *)
t := BOOL_TO_TIME(TRUE); (* Result is T#1ms *)
tof := BOOL_TO_TOD(TRUE); (* Result is TOD#00:00:00.001 *)
dat := BOOL_TO_DATE(FALSE); (* Result is D#1970-01-01 *)
dandt := BOOL_TO_DT(TRUE); (* Result is DT#1970-01-01-00:00:01 *)
```

Examples in CFC, LD:

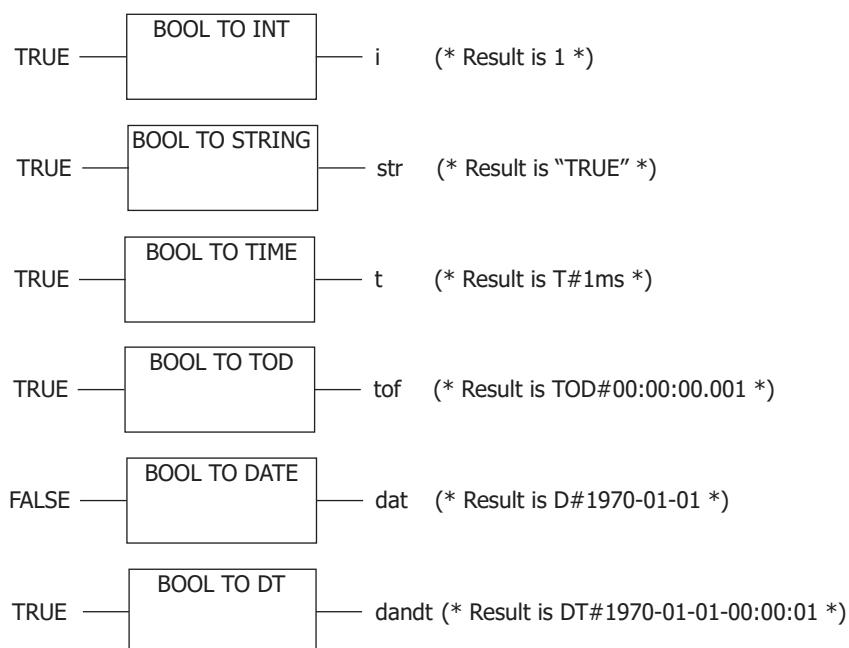

**Figure B.24 BOOL\_TO Conversions**

## TO\_BOOL Conversions

Operator: Converting from another variable type to BOOL.


Syntax for a TO\_BOOL conversion operator:

<data type>\_TO\_BOOL

The result is TRUE when the operand is not equal to 0. The result is FALSE when the operand equals 0.

The result is TRUE for STRING type variables when the operand is TRUE. Otherwise, the result is FALSE.

Examples in CFC, LD:

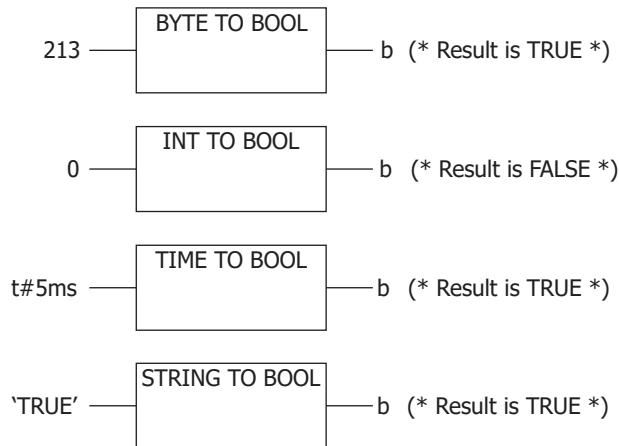

**Figure B.25 TO\_BOOL Conversions**

Examples in Structured Text:

```

b := BYTE_TO_BOOL(2#11010101); (* Result is TRUE *)
b := INT_TO_BOOL(0); (* Result is FALSE *)
b := TIME_TO_BOOL(T#5ms); (* Result is TRUE *)
b := STRING_TO_BOOL('TRUE'); (* Result is TRUE *)
  
```

## Conversion Between Integral Number Types

Conversion from an integral number type to another number type.

Syntax for the conversion operator:


<INT data type>\_TO\_<INT data type>

If the number you are converting exceeds the range limit, the first bytes for the number will be ignored.

Example in Structured Text:

```
si := INT_TO_SINT(4223); (* Result is 127 *)
```

If you save the integer 4223 (16#107f represented hexadecimally) as a SINT (short integer) variable, it will appear as 127 (16#7f represented hexadecimally) because the sign bit will be truncated.

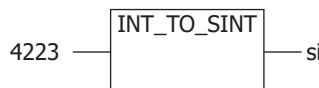

**Figure B.26 INT\_TO\_SINT Example in CFC, LD**

## REAL\_TO/LREAL\_TO Conversions

Operator: Converting from the variable type REAL or LREAL to a different type.


The value will be rounded up or down to the nearest whole number and converted into the new variable type. Exceptions to this are the variable types STRING, BOOL, REAL, and LREAL.

Please note that when you convert to type STRING, the total number of digits is limited to 16. If the (L)REAL-number has more digits, then the software rounds the 16th digit. If you define the length of the string too short, it will be truncated from the right.

Example in Structured Text:

```

i := REAL_TO_INT(1.5); (* Result is 2 *)
j := REAL_TO_INT(1.4); (* Result is 1 *)
i := REAL_TO_INT(-1.5); (* Result is -2 *)
j := REAL_TO_INT(-1.4); (* Result is -1 *)
  
```

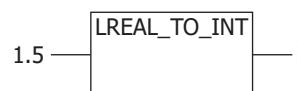

**Figure B.27 LREAL\_TO\_INT Example in CFC, LD**

## TIME\_TO/TIME\_OF\_DAY Conversions

Operator: Converting from the variable type TIME or TIME\_OF\_DAY to a different type.

Syntax for the conversion operator:

<time data type>\_TO\_<data type>


Time is stored internally in a DWORD in milliseconds (beginning with 12:00 a.m. for the TIME\_OF\_DAY variable). This millisecond value is the one converted.

For the STRING type variable, the result is a time constant.

Examples in Structured Text:

```

str := TIME_TO_STRING(T#12ms); (* Result is T#12ms *)
dw := TIME_TO_DWORD(T#5m); (* Result is 300000 *)
si := TOD_TO_SINT(TOD#00:00:00.012); (* Result is 12 *)
  
```

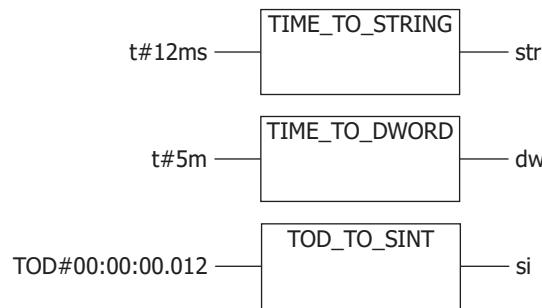

**Figure B.28 TIME\_TO Examples in CFC, LD**

## DATE\_TO/DT\_TO Conversions

Operator: Converting from the variable type DATE or DATE\_AND\_TIME to a different type.

Syntax for the conversion operator:

<date data type>\_TO\_<data type>

The date is stored internally in a DWORD in seconds since Jan. 1, 1970. This value in seconds is the converted value.


For STRING type variables, the result is the date constant.

Examples in Structured Text:

```

b := DATE_TO_BOOL(D#1970-01-01); (* Result is FALSE *)
i := DATE_TO_INT(D#1970-01-15); (* Result is 29952 *)
byt := DT_TO_BYTE(DT#1970-01-15-05:05:05); (* Result is 129 *)
str := DT_TO_STRING(DT#1998-02-13-14:20); (* Result is
'DT#1998-02-13-14:20' *)

```

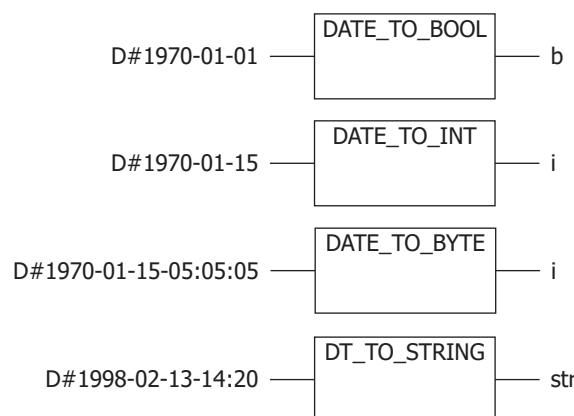

**Figure B.29 DATE\_TO Examples in CFC, LD**

## STRING\_TO Conversions

Operator: Converting from the variable type STRING to a different type.

Syntax for the conversion operator:

STRING\_TO\_<data type>

The operand from the STRING type variable must contain a value that is valid in the target variable type, or the result will be 0.

Examples in Structured Text:

```
b := STRING_TO_BOOL('TRUE'); (* Result is TRUE *)
w := STRING_TO_WORD('abc34'); (* Result is 0 *)
t := STRING_TO_TIME('T#127ms'); (* Result is T#127ms *)
```

Examples in CFC:

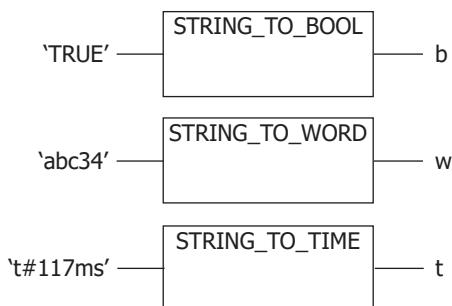


Figure B.30 STRING\_TO Examples in CFC, LD

## TRUNC

Operator: Converting from REAL to DINT. The whole number portion of the value will be used.

Examples in Structured Text:

```
i := TRUNC(1.9); (* Result is 1 *)
i := TRUNC(-1.4); (* Result is -1 *)
```

## Custom Conversion Functions

Custom conversions provide a means to perform conversion operations on ACCELERATOR RTAC data types and data classes.

## CMV\_TO\_MV\_MAG

Operator: Converting the magnitude field from the structure CMV to an MV type.


Inputs:

In : CMV;

Output: Returns an MV data type representing the magnitude of the phasor quantity and all relative quality and time information.

Examples in ST:

```
VarMagnitude := CMV_TO_MV_MAG(Var_CMV);
```

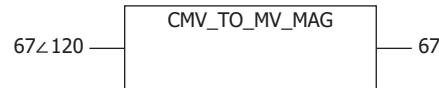

**Figure B.31 CMV\_TO\_MV\_MAG Example in CFC**

## CMV\_TO\_MV\_ANG

Operator: Converting the angle field from the structure CMV to an MV type.


Inputs:

In : CMV;

Output: Returns an MV data type representing the angle of the phasor quantity and all relative quality and time information.

Examples in ST:

```
VarAngle := CMV_TO_MV_ANG(Var_CMV);
```

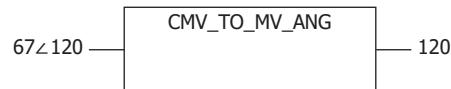

**Figure B.32 CMV\_TO\_MV\_ANG Example in CFC**

## operAPC\_TO\_TIME

Operator: Converting from the structure operAPC to a TIME data type.

The operAPC.setMag is converted to milliseconds based on the time unit supplied to the function and then converted to a TIME data type. Fractions of milliseconds are truncated. Maximum value is T#49d17h2m47s295ms.

Inputs:


In : operAPC;

TimeUnit : timeUnit\_t; (3 = DAY, 4 = HOUR, 5 = MINUTE, 6 = SECOND, 7 = MILLISECOND)

Output: Returns a TIME data type representing a combination of the number specified in the input IN (operAPC.setMag) and the unit of time specified in TimeUnit.

Examples in ST:

```
VarTime := operAPC_TO_TIME(Var_operAPC, 3); (Returns time in hours)
```

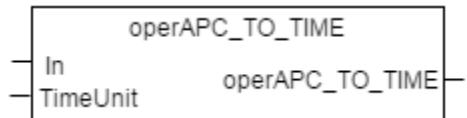

**Figure B.33 operAPC\_TO\_TIME Example in CFC**

## SPS2\_TO\_DPS

Operator: Convert two SPS data types to a DPS data type.

Inputs:

```

SPS1 : SPS;
SPS2 : SPS;
  
```


Output: Returns a DPS data type representing a combination of two SPS data types, according to the following table. The quality is assigned based on the input SPS that has the least data quality (for example, if SPS1 has q.validity = invalid then the DPS returns value q.validity = invalid). The time attributes are assigned by the most recently updated input.

**Table B.5 Status Value of Data Structures**

| SPS1  | SPS2  | DPS                |
|-------|-------|--------------------|
| False | False | dbpos_intermediate |
| False | True  | dbpos_off          |
| True  | False | dbpos_on           |
| True  | True  | dbpos_bad          |

Examples in ST:

```
VarDPS := SPS2_TO_DPS(SPS1, SPS2);
```

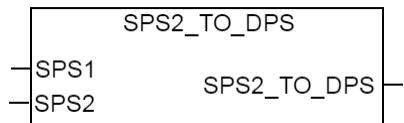

**Figure B.34 SPS2\_TO\_DPS Example in CFC**

## SPS\_TO\_DPS

Operator: Convert an SPS data type to a DPS data type

Inputs:

```
SPS1 : SPS;
```

Output: Returns a DPS data type representing the state of an SPS data type, according to the following table. All other data attributes are identical to the SPS1.

**Table B.6 Status Value of Data Structures**

| InSPS | DPS       |
|-------|-----------|
| False | dbpos_off |
| True  | dbpos_on  |

Examples in ST:

```
VarDPS := SPS_TO_DPS(SPS1);
```



**Figure B.35 SPS\_TO\_DPS Example in CFC**

## Numeric Functions

The following numeric IEC operators are available: ABS, SQRT, LN, LOG, EXP, SIN, COS, TAN, ASIN, ACOS, ATAN, EXPT.

### ABS

Operator: Returns the absolute value of a number.

ABS(-2) returns 2.

ACCELERATOR RTAC permits the following data type combinations for input and output tags.

**Table B.7 Permitted Data Type Combinations for Input and Output Tags**

| Input Tags | Output Tags                               |
|------------|---|
| IN         | OUT                                       |
| INT        | INT, REAL, WORD, DWORD, DINT              |
| REAL       | REAL                                      |
| BYTE       | INT, REAL, BYTE, WORD, DWORD, DINT        |
| WORD       | INT, REAL, WORD, DWORD, DINT              |
| DWORD      | REAL, DWORD, DINT                         |
| SINT       | REAL                                      |
| USINT      | REAL                                      |
| UINT       | INT, REAL, WORD, DWORD, DINT, UDINT, UINT |
| DINT       | REAL, DWORD, DINT                         |
| UDINT      | REAL, DWORD, DINT, UDINT                  |

Example in Structured Text:

```
i := ABS(-2);
```



Figure B.36 ABS Example in CFC, LD

## ACOS

Operator: Returns the arc cosine (inverse function of cosine) of a number.  
Calculates the value in radians.

The input variable can be type BYTE, WORD, DWORD, INT, DINT, REAL, SINT, USINT, UINT, and UDINT. The output variable will match the type of the input; numeric literals (e.g., 3.14159265) will output a variable of type LREAL.

Example in Structured Text: (\* Result in q is 1.0472 \*)

```
q := ACOS(0.5);
```

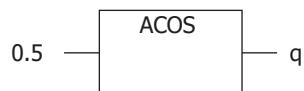


Figure B.37 ACOS Example in CFC, LD

## ASIN

Operator: Returns the arc sine (inverse function of sine) of a number.

The input variable can be type BYTE, WORD, DWORD, INT, DINT, REAL, SINT, USINT, UINT, and UDINT. The output variable will match the type of the input; numeric literals (e.g., 3.14159265) will output a variable of type LREAL.

Example in Structured Text: (\* Result in q is 0.523599 \*)

```
q := ASIN(0.5);
```

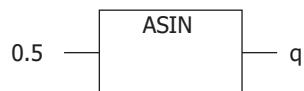


Figure B.38 ASIN Example in CFC, LD

## ATAN

Operator: Returns the arc tangent (inverse function of tangent) of a number.  
Calculates the value in radians.

The operand can be type BYTE, WORD, DWORD, INT, DINT, REAL, SINT, USINT, UINT, and UDINT. The output variable will match the type of the input; numeric literals (e.g., 3.14159265) will output a variable of type LREAL.

Example in Structured Text: (\* Result in q is 0.463648 \*)

```
q := ATAN(0.5);
```

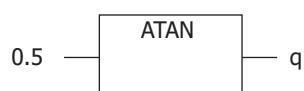


Figure B.39 ATAN Example in CFC, LD


## CELSIUS\_TO\_FAHRENHEIT

Non-IEC function: Returns the fahrenheit equivalent of the celsius temperature given.

The input variable can be type BYTE, WORD, DWORD, INT, DINT, REAL, SINT, USINT, UINT, and UDINT. The output variable must be type REAL.

Example in Structured Text: (\* Result in q is 68 \*)

```
q := CELSIUS_TO_FAHRENHEIT(20);
```

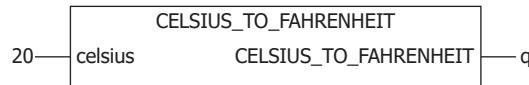

**Figure B.40 CELSIUS\_TO\_FAHRENHEIT Example in CFC, LD**


## COS

Operator: Returns the cosine of a number. Calculates the value in radians.

The input variable can be type BYTE, WORD, DWORD, INT, DINT, REAL, SINT, USINT, UINT, and UDINT. The output variable will match the type of the input; numeric literals (e.g., 3.14159265) will output a variable of type LREAL.

Example in Structured Text: (\* Result in q is 0.877583 \*)

```
q := COS(0.5);
```

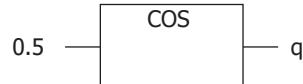

**Figure B.41 COS Example in CFC, LD**


## DEG\_TO\_RAD

Non-IEC function: Returns the radian equivalent of the degrees given.

The input variable can be type BYTE, WORD, DWORD, INT, DINT, REAL, SINT, USINT, UINT, and UDINT. The output variable must be type REAL.

Example in Structured Text: (\* Result in q is 0.08726647 \*)

```
q := DEG_TO_RAD(5);
```

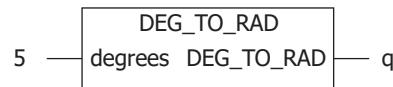

**Figure B.42 DEG\_TO\_RAD Example in CFC, LD**


## EXP

Operator: Returns the exponential function.

The input variable can be type BYTE, WORD, DWORD, INT, DINT, REAL, SINT, USINT, UINT, and UDINT. The output variable will match the type of the input; numeric literals (e.g., 3.14159265) will output a variable of type LREAL.

Example in Structured Text: (\* Result in q is 7.389056099 \*)

```
q := EXP(2);
```

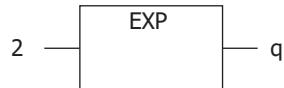

**Figure B.43 EXP Example in CFC, LD**

## EXPT


Operator: Exponentiation of a variable with another variable:

```
OUT = IN1^IN2.
```

The two operands can be type BYTE, WORD, DWORD, INT, DINT, REAL, SINT, USINT, UINT, and UDINT. The output variable will match the type of the input; numeric literals (e.g., 3.14159265) will output a variable of type LREAL.

Example in Structured Text: (\* Result is 49 \*)

```
var1 := EXPT(7,2);
```

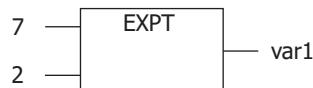

**Figure B.44 EXPT Example in CFC, LD**


## FAHRENHEIT\_TO\_CELSIUS

Non-IEC function: Returns the celsius equivalent of the fahrenheit temperature given.

The input variable can be type BYTE, WORD, DWORD, INT, DINT, REAL, SINT, USINT, UINT, and UDINT. The output variable must be type REAL.

Example in Structured Text: (\* Result in q is 20 \*)

```
q := FAHRENHEIT_TO_CELSIUS(68);
```

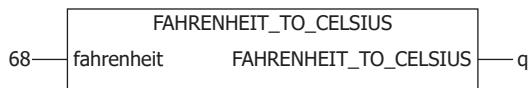

**Figure B.45 FAHRENHEIT\_TO\_CELSIUS Example in CFC, LD**


## LN

Operator: Returns the natural logarithm of a number.

The input variable can be type BYTE, WORD, DWORD, INT, DINT, REAL, SINT, USINT, UINT, and UDINT. The output variable will match the type of the input; numeric literals (e.g., 3.14159265) will output a variable of type LREAL.

Example in Structured Text: (\* Result in q is 3.80666 \*)

```
q := LN(45);
```

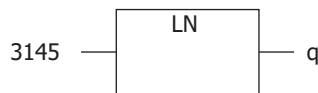

**Figure B.46 LN Example in CFC, LD**


## LOG

Operator: Returns the logarithm of a number in base-10.

The input variable can be type BYTE, WORD, DWORD, INT, DINT, REAL, SINT, USINT, UINT, and UDINT. The output variable will match the type of the input; numeric literals (e.g., 3.14159265) will output a variable of type LREAL.

Example in Structured Text: (\* Result in q is 2.49762 \*)

```
q := LOG(314.5);
```

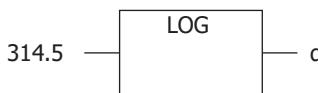

**Figure B.47 LOG Example in CFC, LD**


## RAD\_TO\_DEG

Non-IEC function: Returns the degrees equivalent of the radians given.

The input variable can be type BYTE, WORD, DWORD, INT, DINT, REAL, SINT, USINT, UINT, and UDINT. The output variable must be type REAL.

Example in Structured Text: (\* Result in q is 286.4789 \*)

```
q := RAD_TO_DEG(5);
```

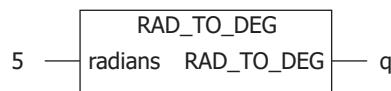

**Figure B.48 RAD\_TO\_DEG Example in CFC, LD**


## SIN

Operator: Returns the sine of a number.

The input variable can be type BYTE, WORD, DWORD, INT, DINT, REAL, SINT, USINT, UINT, and UDINT. The output variable will match the type of the input; numeric literals (e.g., 3.14159265) will output a variable of type LREAL.

Example in Structured Text: (\* Result in q is 0.479426 \*)

```
q := SIN(0.5);
```

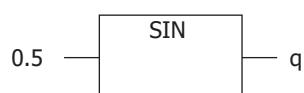

**Figure B.49 SIN Example in CFC, LD**


## SQRT

Operator: Returns the square root of a number.

The input variable can be type BYTE, WORD, DWORD, INT, DINT, REAL, SINT, USINT, UINT, and UDINT. The output variable will match the type of the input; numeric literals (e.g., 3.14159265) will output a variable of type LREAL.

Example in Structured Text: (\* Result in q is 4 \*)

```
q := SQRT(16);
```

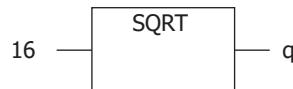

**Figure B.50 SQRT Example in CFC, LD**


## TAN

Operator: Returns the tangent of a number. Calculates the value in radians.

The input variable can be type BYTE, WORD, DWORD, INT, DINT, REAL, SINT, USINT, UINT, and UDINT. The output variable will match the type of the input; numeric literals (e.g., 3.14159265) will output a variable of type LREAL.

Example in Structured Text: (\* Result in q is 0.546302 \*)

```
q := TAN(0.5);
```

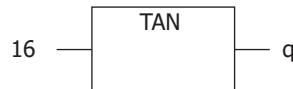

**Figure B.51 TAN Example in CFC, LD**

## String Functions

The following string IEC functions are available: CONCAT, DELETE, FIND, INSERT, LEFT, LEN, MID, REPLACE, RIGHT.

### CONCAT

This function is of type STRING and combines two strings into one.

Inputs:

STR1, STR2: STRING; (\* strings to be concatenated \*)


Return value:

STRING; (\* concatenated string \*)

CONCAT (STR1, STR2) connects STR1 to STR2 into a single string.

Example in ST: (\* Result in VarSTRING1 is Hello world \*)

```
VarSTRING1 := CONCAT('Hello', ' world');
```

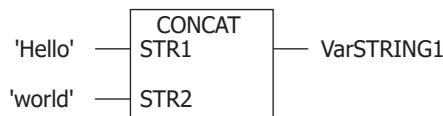

**Figure B.52 CONCAT Example in CFC, LD**

## DELETE

This function is of type STRING and removes a partial string from a larger string at a defined position.

Inputs:

STR : (\* STRING; string from which a part should be deleted \*)

LEN : INT; (\* length of the partial string to be deleted, number of characters \*)

POS : INT; (\* position in STR where the deletion of LEN characters should start, counted from left \*)


Return value:

STRING, string remaining after deletion

DELETE(STR, L, P) means: Delete L characters from STR, beginning with the character in the P position.

Example in ST:

```
var1 := DELETE ('SUXYSI',2,3);
```

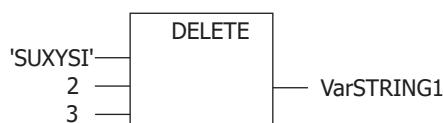

**Figure B.53 DELETE Example in CFC, LD**

## FIND

This function is of type INT and searches for the position of a partial string within a string.

Inputs:

STR1 : STRING; (\* string within which STR2 should be searched \*)

STR2 : STRING; (\* string whose position should be searched in STR1 \*)


Return value:

INT (\* start position of STR2 in STR1; "0" if STR2 is not found in STR1 \*)

FIND(STR1, STR2) means: Find the position of the first character where STR2 appears in STR1 for the first time. If STR2 is not found in STR1, then OUT := 0.

Example in ST:

```
arINT1 := FIND ('abcdef','de');
```

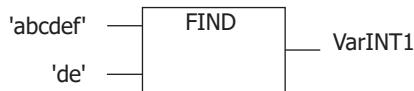

**Figure B.54 FIND Example in CFC, LD**

## INSERT

This function is of type STRING and inserts a string into another string at a defined point.

Inputs:

STR1 : STRING; (\* string into which STR2 has to be inserted \*)

STR2 : STRING; (\* string that has to be inserted into STR1 \*)

POS : INT; (\* Position in STR1 where STR2 has to be inserted, number of characters counted from left \*)


Return value:

STRING; (\* resulting string \*)

INSERT(STR1, STR2, POS) means: Insert STR2 into STR1 after position POS.

Example in ST:

```
VarSTRING1 := INSERT ('SUSI','XY',2);
```

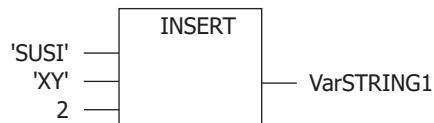

**Figure B.55 INSERT Example in CFC, LD**

## LEFT

This function is of type STRING and returns the left, initial string for a given string.

Inputs:

STR : STRING; (\* string to be analyzed \*)

SIZE : INT; (\* length of left initial string (number of characters) \*)

Return value:

STRING; (\* initial string \*)

LEFT (STR, SIZE) means: Return the first SIZE characters from the left in the string STR.

Example in ST:

```
VarSTRING1 := LEFT ('SUSI',3);
```



**Figure B.56 LEFT Example in CFC, LD**

## LEN

This function is of type STRING and returns the length of a string.

Input:


STR : STRING; (\* string to be analyzed \*)

Return value:

INT, length of string (number of characters)

Example in ST:

VarINT1 := LEN ('SUSI');

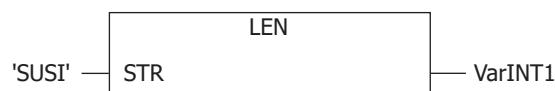

**Figure B.57 LEN Example in CFC, LD**

## MID

This function is of type STRING and returns a partial string from within a string.

Inputs:

STR : STRING; (\* string to be analyzed \*)

LEN : INT; (\* length of the partial string (number of characters) \*)

POS : INT; (\* start position for the partial string, number of characters counted from the left of STR \*)


Return value:

STRING; (\* partial string \*)

MID(STR, LEN, POS) means: Retrieve LEN characters from the STR string beginning with the character at position POS.

Example in ST:

VarSTRING1 := MID ('SUSI',2,2);

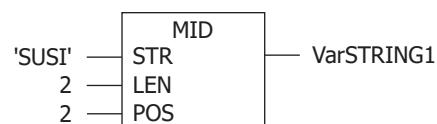

**Figure B.58 MID Example in CFC, LD**

## REPLACE

This function is of type STRING and replaces a partial string from a larger string with a third string.

Inputs:

STR1 : STRING; (\* string of which a part should be replaced by string STR2 \*)

STR2 : STRING: (\* string that should replace a part of STR1 \*)

L : INT; (\*length of partial string in STR1 that should be replaced \*)

P : INT; (\*position where STR2 should be inserted instead of the existing L characters \*)


Return value:

STRING; (\* resulting string \*)

REPLACE(STR1, STR2, L, P) means: Replace L characters from STR1 by STR2, beginning with the character in the P position.

Example in ST:

```
VarSTRING1 := REPLACE ('SUXYSI','K',2,2);
```

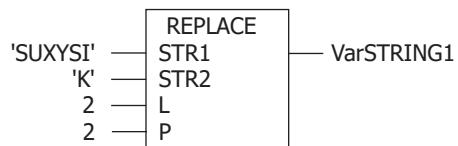

**Figure B.59 REPLACE Example in CFC, LD**

## RIGHT

This function is of type STRING and returns the right, initial string for a given string.

Inputs:

STR : STRING; (\* string to be analyzed \*)

SIZE : INT; (\* number of characters to be counted from the right in string STR \*)

Return value:

STRING; (\* initial right string \*)

RIGHT (STR, SIZE) means: Return the first SIZE character from the right in the string STR.

Example in ST:

```
VarSTRING1 := RIGHT ('SUSI',3);
```



**Figure B.60 RIGHT Example in CFC, LD**

## Custom Functions

The following non-IEC standard functions are available.

### **ACKNOWLEDGE\_ALL\_EVENTS**

Operator: This function is used to acknowledge all items in the RTAC SOE log from the IEC 61131-3 logic engine. There are no inputs.

Example in ST:

```
ACKNOWLEDGE_ALL_EVENTS();
```

### **CMVRangeAndDeadbandCheck**

CMVRangeAndDeadbandCheck is used by the Tag Processor to check the absolute value of the CMV tags instCVal.mag to determine if it exceeds the dead band, and if so, assign it to cVal.mag. The cVal.mag is then checked against the zero dead band and the various low and high limits. If a limit is exceeded, the .range is appropriately set. Finally, the .q.validity is set to questionable or good, depending on the instCVal range check and the .q.validity.

Structured Text Example:

```
CMVRangeAndDeadbandCheck(tCMV := VarCMV);
```



**Figure B.61 CMVRangeAndDeadbandCheck Example in CFC, LD**

### **DateCalc**

Operator: This function adds a time interval specified by Unit and Number to an existing DT variable.

Inputs:

Unit : timeUnit\_t; (0 = YEAR, 1 = MONTH, 2 = WEEK, 3 = DAY, 4 = HOUR, 5 = MINUTE, 6 = SECOND)

Number : DINT;

StartDate : DT;

Outputs: Returns a DT data type representing the addition of the Number of Units added to the StartDate.

Examples in ST:


```

PROGRAM DateCalc_Example
VAR
    systime : timestamp_t;
    resultantDate : DT;
END_VAR

// Determine the date and time 1 hour in the future
systime := SYS_TIME();
resultantDate := DateCalc(Unit := 4, Number := 1, StartDate := systime.value.dateTime);

```

**Figure B.62 DateCalc() Example**

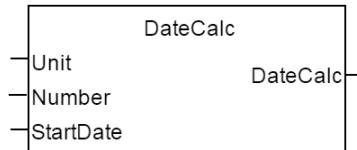

**Figure B.63 DateCalc Example in CFC**

## dateTime\_t\_Constructor

Operator: Constructs a dateTime\_t data structure from the provided inputs.

Inputs:

```


Year : DINT;
Month : DINT;
Day : DINT;
Hour : DINT;
Minute : DINT;
Second : DINT;
Millisecond : DINT;

```

Outputs: Returns a dateTime\_t data type representation of the provided time components.

Examples in ST:

```
Var(dateTime_t) := dateTime_t_Constructor(VarYear, VarMonth, VarDay,
                                         VarHour, VarMinute, VarSecond, VarMillisecond);
```

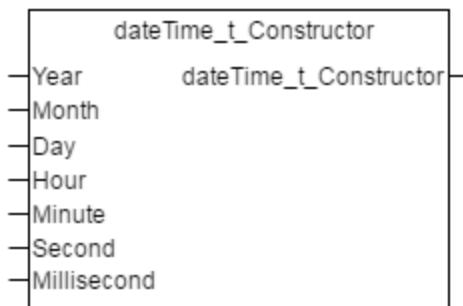

**Figure B.64 dateTime\_t\_Constructor Example in CFC**

## dateTime\_t\_Deconstructor

Operator: Deconstructs a dateTime\_t data structure into its constituent parts.

Inputs:

Value : dateTime\_t;

Outputs:

Year : DINT;

Month : DINT;

Day : DINT;

Hour : DINT;


Minute : DINT;

Sec : DINT;

Ms : DINT;

Examples in ST:

```
dateTime_t_Deconstructor (Value := Var(dateTime_t), Year => VarYear,
Month => VarMonth, Day => VarDay, Hour => VarHour, Minute =>
VarMinute, Sec => VarSec, Ms => VarMs);
```

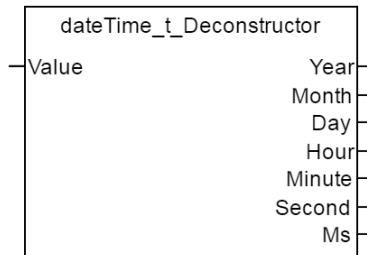

**Figure B.65 dateTime\_t\_Deconstructor Example in CFC**

## dateTime\_t\_TO\_DNP48

Operator: Converts a dateTime\_t data structure into three separate variables. Each variable contains 16 bits of the original dateTime\_t data structure.

Inputs:

Value : dateTime\_t;

Outputs:


HighRegister : DINT;T

MidRegister : DINT;

LowRegister : DINT;

Examples in ST:

```
dateTime_t_TO_DNP48 (VarValue, HighRegister => VarHigh, MidRegister
=> VarMed, LowRegister => VarLow);
```

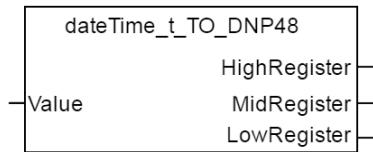

**Figure B.66** `dateTime_t_TO_DNP48` Example in CFC

## DayOfWeek

Operator: When given a DT variable, this function returns the day of week.

Inputs:

InDate : DT;


Outputs:

DayString : STRING;

Returns a dayOfWeek\_t that can be used interchangeably with a DINT data type (0 = SUNDAY, 1 = MONDAY, 2 = TUESDAY, 3 = WEDNESDAY, 4 = THURSDAY, 5 = FRIDAY, 6 = SATURDAY)

Examples in ST:

```
Var_dayOfWeek_t := DayOfWeek (VarDT, DayString => VarString);
```

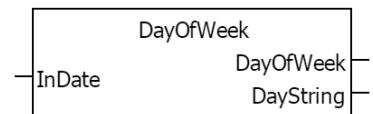

**Figure B.67** `DayOfWeek` Example in CFC

## DayOfYear

Operator: When given a DT variable, this function returns the day of year.


Inputs:

InDate : DT;

Outputs: Returns a DINT that represents day of year.

Examples in ST:

```
VarDINT := DayOfYear (VarDT);
```

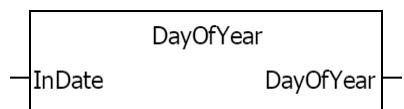

**Figure B.68** `DayOfYear` Example in CFC

## DNP48\_TO\_dateTime\_t

Operator: Converts three 16-bit values representing milliseconds since epoch to a DT data type. The three inputs when combined represent milliseconds since Jan 1, 1970.


Inputs:

```
HighRegister : DINT;  
MidRegister : DINT;  
LowRegister : DINT;
```

Outputs: Returns a DT data type representing the combined input register representing a 48-bit time.

Examples in ST:

```
Var_dateTime_t := DNP48_TO_dateTime_t (VarHigh, VarMed, VarLow);
```

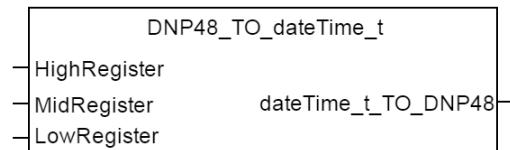

**Figure B.69 DNP48\_TO\_dateTIME\_t Example in CFC**

## Ethernet Interface Control

The following functions provide online control for enabling and disabling Ethernet interfaces on the RTAC, setting IP addresses, and configuring associated gateway addresses. The current state of the given interface can be accessed while in online mode with the ACCELERATOR RTAC from the **SystemTags > Communications** tab.

These functions are intended for use in advanced Ethernet interface control applications. For general applications, see *Ethernet\_Interface\_Control on page 1115*.

In firmware version R153-V0 and later, these functions are supported when an interface is bonded, bridged, or part of a PRP pair. They are not supported when EtherCAT is enabled.

### Functions

#### Enable\_ethernet\_link

Operator: Enables an Ethernet interface.

Inputs:

```
interface_id : Enum_interface_id
```

Input/Output:

```
response: Enum_config_response
```

Example in ST:

```
Enable_ethernet_link (Eth_01, Enum_config_response_1);
```

#### Disable\_ethernet\_link

Operator: Disables an Ethernet interface.

Inputs:

interface\_id : Enum\_interface\_id

Input/Output:

response : Enum\_config\_response

Example in ST:

```
Disable_ethernet_link (Eth_01, Enum_config_response_1);
```

### **Config\_IPv4\_addr**

Operator: Configures a static IPv4 address and subnet mask for an Ethernet interface by using CIDR notation; for example, 192.168.0.2/32.

Inputs:

Interface\_id : Enum\_interface\_id

Ipv4\_addr : STRING(255)

Input/Output:

Response : Enum\_config\_response

Example in ST:

```
Config_IPv4_addr (Eth_01, '192.168.1.4/32', Enum_config_response_1);
```

### **Config\_default\_gateway**

Operator: Adds a default gateway to the specified interface. Optionally allows gateway to be flagged as "primary default gateway."

Input:

interface\_id : Enum\_interface\_id

default\_gw : STRING(255)

is\_primary : BOOL

Input/Output:

Response : Enum\_config\_response

Example in ST:

```
Config_default_gateway (Eth_01, '192.168.1.1', TRUE,  
Enum_config_response_1);
```

### **Get\_ethernet\_state**

Operator: Returns the state of configuration change from the logic engine or web interface.

Input:

interface\_id : Enum\_interface\_id

Return:

is\_enabled : BOOL

Example in ST:

```
VarBOOL1 := Get_ethernet_state(Eth_01);
```

### **Get\_IPv4\_addr**

Operator: Returns the current IPv4 address of the specified Ethernet interface in CIDR notation; for example, 192.168.0.2/32.

Input:

```
interface_id : Enum_interface_id
```

Input/Output:

```
ipv4_addr : STRING(255)
```

Example in ST:

```
Get_IPv4_addr(Eth_01, VarSTRING1);
```

### **Get\_default\_gateway**

Operator: Returns the default gateway of the specified Ethernet interface in CIDR notation; for example, 192.168.0.2/32.

Input:

```
interface_id : Enum_interface_id
```

Input/Output:

```
default_gw : STRING(255)
```

Example in ST:

```
Get_default_gateway (Eth_01, VarSTRING2);
```

### **ADD\_IPv4\_addr**

Operator: This function is used to add an IP address alias to the specified interface.

Input:

```
interface_id : Enum_interface_id
```

```
ipv4_addr : STRING(255)
```

Input/Output:

```
Response : Enum_config_response
```

Example in ST:

```
ADD_IPv4_addr(Eth_01, '192.168.3.5/24', var_enum_config_response);
```

### **DEL\_IPv4\_addr**

Operator: This function is used to delete an IP address alias from the specified interface.

Input:

```
interface_id : Enum_interface_id  
ipv4_addr : STRING(255)
```

Input/Output:

```
Response : Enum_config_response
```

Example in ST:

```
DEL_IPv4_addr(Eth_01, '192.168.3.5/24', var_enum_config_response);
```

### **GET\_IPv4\_extra\_addrs**

Operator: This function is used to add additional IP aliases to the specified interface by using the ADD\_IPv4\_addr() function. This function needs to be given a starting address for an array of strings followed by the number of returning IP addresses. Each string in the array will contain one IP address. If the last index in the returned values contains an IP address, there are additional IP addresses on that interface. Once a null string is encountered in the array, there are no more additional IP addresses on that interface.

Input:

```
interface_id : Enum_interface_id  
ipv4_addr : POINTER TO STRING(255)  
num_ip4_addr : UDINT
```

Example in ST:

```
GET_IPv4_extra_addrs(eth_01, ADR(var_array_of.Strings), 10);
```

## **Enumerations**

### **Enum\_interface\_id**

Identifies a specific Ethernet interface on the device.

| Name     | Value |
|----------|-------|
| Eth_None | 0     |
| Eth_01   | 1     |
| Eth_02   | 2     |
| Eth_03   | 3     |
| Eth_04   | 4     |
| Eth_05   | 5     |
| Eth_06   | 6     |
| Eth_07   | 7     |
| Eth_08   | 8     |
| Eth_09   | 9     |

| Name   | Value |
|--------|-------|
| Eth_10 | 10    |
| Eth_F  | 11    |

### Enum\_config\_response

This enumeration is a union of all return codes that could be provided to the user when the configuration functions are called.

**Table B.8 Configuration Return Codes**

| Name                      | Value | Description   |
|---------------------------|-------|---|
| ERR_INVALID_IP_ADDRESS    | 0     | Indicates that the IP address does not conform to the format $W.X.X.X/Y$ (where $W = 0\text{--}223$ , $X = 0\text{--}255$ , and $Y = 1\text{--}32$ ).   |
| ERR_INTERFACE_NOT_PRESENT | 1     | Indicates that the interface identifier does not map onto a physical device interface.  |
| ERR_COMMAND_REJECTED      | 2     | Indicates that the current function call was unable to successfully complete. This may occur if a similar function call for the same Ethernet interface is in progress. This return code also indicates any other internal processing errors. |
| ERR_DHCP_INTERFACE        | 3     | Indicates that the operation cannot be performed because the interface is configured to use DHCP.   |
| OK_IN_PROGRESS            | 4     | Indicates that processing related to the function call has begun.   |
| OK_COMPLETED              | 5     | Indicates that the command was issued successfully.   |


## INSRangeCheck

The INSRangeCheck function performs range checking. The rangeC values and the stVal attribute of an INS tag are used to calculate and set the range attribute on that tag.

The INSRangeCheck function accepts an INS variable as an input/output parameter. The function returns with a BOOL result but programs that call this function can ignore it.

Structured Text Example:

```
INSRangeCheck(tINS := VarINS);
```

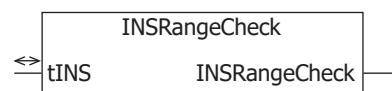

**Figure B.70 INSRangeCheck Example in CFC, LD**

## MERGE\_q

This function performs a logical OR for all of the quality bits of the two input qualities.

Inputs:

Qual\_1, Qual\_2 : quality\_t

Output:

Returns a modified quality\_t structure, where q is the result of an OR operation on each quality bit of Qual\_1 and Qual\_2 to reflect the worst case.

| Destination Tag Name | DT Data Type | Source Expression                                      | SE Data Type |
|----------------------|--------------|--|--------------|
| SCADA1_DNP.AI_0000.q |              | MERGE_q (Feeder1_DNP.AI_0000.q, Feeder1_DNP.AI_0001.q) | QUALITY_T    |

**Figure B.71 MERGE\_q Example in Tag Processor**

Example in ST:


```
SCADA1_DNP.AI_0000.q := MERGE_q (Feeder1_DNP.AI_0000.q,  
Feeder1_DNP.AI_0001.q)
```

## MVRangeAndDeadbandCheck

MVRangeAndDeadbandCheck is used by the Tag Processor to check the absolute value of the MV tags instMag attribute determine if the absolute value exceeds the dead band. If the absolute value of the MV tags instMag attribute exceeds the dead band, MVRangeAndDeadbandCheck assigns the value to the mag attribute. The value in the mag attribute is then checked against the zero dead band and the various low and high limits. If a limit is exceeded, the range attribute is appropriately set. Then the q.validity attribute is set to questionable or good, depending on the instMag value falling below the value specified in the rangeC.minVal attribute or above the value specified in the rangeC.maxVal attribute.

Structured Text Example:

```
MVRangeAndDeadbandCheck(tMV := VarMV);
```

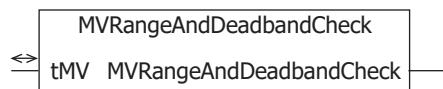

**Figure B.72 MVRangeAndDeadbandCheck Example in CFC, LD**

## Network Event Capture

### Functions

#### NetworkEventCapture

Call this function once to trigger an All-Ethernet network capture to save to the RTACs file manager. See *Network Event Capture (Trigger-Based Communication Captures)* on page 147 for a full description of use cases.

Inputs:

pre\_event : INT (1-60)

post\_event : INT (0-60)

Input/Output:

status : NetworkEventCaptureStatus

## Enumerations

### NetworkEventCaptureStatus

The enumerated state of a Network Event Capture operation.

| Name                        | Value | Description   |
|-----------------------------|-------|---|
| NO_ERROR                    | 0     | There were no errors encountered when creating the network event capture.   |
| IN_PROGRESS                 | 1     | The network event capture is in progress.   |
| OUT_OF_SPACE                | 2     | The RTAC does not have enough available space to run a network event capture. At least 2 GB of available space is required.   |
| NOT_LICENSED                | 3     | The RTAC is not licensed to run a network event capture. The AuditUtilities license is required to use network event capture. |
| INVALID_PRE_EVENT_DURATION  | 4     | The pre_event argument was outside the allowed values of 1–60.  |
| INVALID_POST_EVENT_DURATION | 5     | The post_event argument was outside the allowed values of 0–60.   |
| ERROR                       | 6     | An error occurred while processing the requested capture.   |
| BUSY                        | 7     | Cannot start this network event capture because another capture is in progress.   |

## Using the NetworkEventCapture Function (ST)

This example illustrates how the NetworkEventCapture function can be called based on a user logic trigger.

```

PROGRAM NetworkEventCapture_Example
VAR
    ResultStatus : NetworkEventCaptureStatus;
    LogicTrigger : R_TRIG;
END_VAR

// Trigger a network event capture if the Lamp Test Button is pressed
LogicTrigger( CLK := SystemTags.Lamp_Test_Button_Status.stVal );
IF LogicTrigger.Q THEN
    // 15 seconds pre-trigger, 30 seconds post-trigger
    NetworkEventCapture(pre_event := 15, post_event := 30, status := ResultStatus);
END_IF

```

**Figure B.73 NetworkEventCapture Example**

## SIZEOF

This function returns the number of bytes required by the given variable.

Example in ST: (\* Result is 10 \*)

```
PROGRAM SIZEOF_Example
VAR
    arr1:ARRAY[0..4] OF INT;
    var1:INT;
END_VAR

// Determine the array size
var1 := SIZEOF(arr1);
```

Figure B.74 SIZEOF() Example

## SYS\_TIME

This function returns the full time-stamp structure of the current system time.

The data type is timeStamp\_t.

Example in ST:

```
PROGRAM SysTime_Example
VAR
    systime : timestamp_t;
END_VAR

// Get the system time
systime := SYS_TIME();
```

Figure B.75 SYS\_TIME() Example

## TIME

This function returns the time (with millisecond accuracy) that has passed since the last system power cycle.

The data type is TIME.

Example in ST:

```
systime := TIME(); (Result e.g., : T#35m11s342ms)
```

## TRANSLATE

Operator: Translates the input value to a new value by scaling it by the ratio between Range In and Range Out.


Inputs:

```
IN : REAL;
Range_Min_In : REAL;
Range_Max_In : REAL;
Range_Min_Out : REAL;
Range_Max_Out : REAL;
```

Outputs: Returns a REAL value that is the IN input scaled based on the ranges provided.

Examples in ST:

```
VarReal := TRANSLATE (VarInReal, VarMinIn, VarMaxIn, VarMinOut,
VarMaxOut);
```

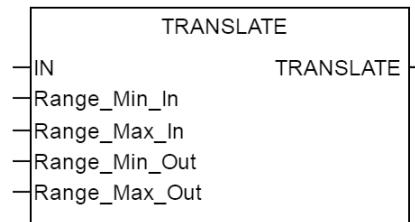

**Figure B.76 TRANSLATE Example in CFC**

## TRANSLATE\_MV

Operator: Translates the input value to a new value by scaling it by the ratio between Range In and Range Out. The quality and time attributes are transferred from the IN MV input structure to the returned MV data structure.


Inputs:

```
IN : MV;
Range_Min_In : REAL;
Range_Max_In : REAL;
Range_Min_Out : REAL;
Range_Max_Out : REAL;
```

Outputs: Returns an MV data structure in which the instMag of the IN data structure is scaled based on the ranges provided.

Examples in ST:

```
VarMV := TRANSLATE_MV (VarInMV, VarMinIn, VarMaxIn,
VarMinOut, VarMaxOut);
```

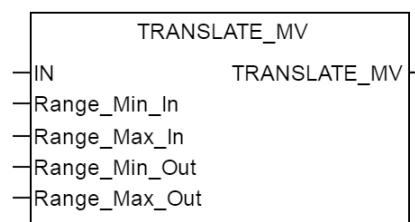

**Figure B.77 TRANSLATE\_MV Example in CFC**

## TRANSLATE\_INS

Operator: Translates the input value to a new value by scaling it by the ratio between Range In and Range Out. The quality and time attributes are transferred from the IN INS data structure to the returned INS data structure.


Inputs:

```
IN : INS;
Range_Min_In : DINT;
Range_Max_In : DINT;
Range_Min_Out : DINT;
Range_Max_Out : DINT;
```

Outputs: Returns an INS data structure in which the stVal of the IN data structure is scaled based on the ranges provided.

Examples in ST:

```
VarINS := TRANSLATE_INS (VarInINS, VarMinIn, VarMaxIn,
                           VarMinOut, VarMaxOut);
```

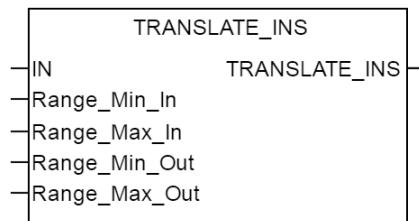

**Figure B.78 TRANSLATE\_INS Example in CFC**

## TS\_DIFF

This function subtracts two time stamps.

Inputs:

```
T1_val, T2_val : dateTIme_t
```

Output:

Returns the REAL number result, in seconds, from subtracting T2\_val from T1\_val. Any resultant millisecond quantity of the difference is represented in the decimal component of the REAL number. For example, a returned REAL of 3.650 represents a time stamp difference of 3 seconds and 650 milliseconds.

Example in Tag Processor:

| Destination Tag Name | DT Data Type | Source Expression  | SE Data Type |
|----------------------|--------------|--|--------------|
| my_REAL_var          | REAL         | TS_DIFF (Feeder1_DNP.BI_0000.t.value, Feeder1_DNP.BI_0001.t.value) | REAL         |

**Figure B.79 TS\_DIFF in Tag Processor**

Example in ST (TsDiffResult is '90.550'):

```

PROGRAM TS_DIFF_Example
VAR
    dateTime1 : dateTime_t;
    dateTime2 : dateTime_t;
    TsDiffResult : REAL;
END_VAR

// Determine the time stamp difference
dateTime1.dateTime := DT#2024-08-21-12:00:00;
dateTime1.uSec := 250000;
dateTime2.dateTime := DT#2024-08-21-12:01:30;
dateTime2.uSec := 800000;
TsDiffResult := TS_DIFF(dateTime2, dateTime1);

```

**Figure B.80 TS\_DIFF() Example**

## ValidityCheck

ValidityCheck examines the detail quality attributes and sets the validity attribute to questionable or invalid depending on the detail quality attributes.

The ValidityCheck function accepts a quality\_t variable as an input/output parameter. The function returns a BOOL result but calling programs can ignore it.

A logical OR of the following detail quality flags will set the validity to **invalid**:


- ▶ overflow
- ▶ badReference
- ▶ failure

A logical OR of the following detail quality flags (and the existing validity not already being equal to invalid) will set the validity to **questionable**:

- ▶ oldData
- ▶ outOfRange
- ▶ oscillatory
- ▶ inconsistent
- ▶ inaccurate

Example in ST:


```
ValidityCheck(tq := VarQuality.q);
```

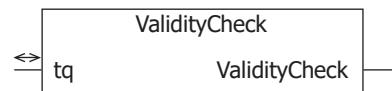**Figure B.81 ValidityCheck Example in CFC, LD**

## Predefined Function Blocks

The RTAC has several predefined function blocks that you can use to accelerate code completion of a custom logic project. To use a predefined function block, you must declare an instance of that function block with a user-defined name, as shown in *Figure B.82*. See *Section 9: Custom Logic* for more information on declaring an instance of a function block.

These predefined function blocks are timers, counters, and other routines where intermediate values must be retained between function block calls.

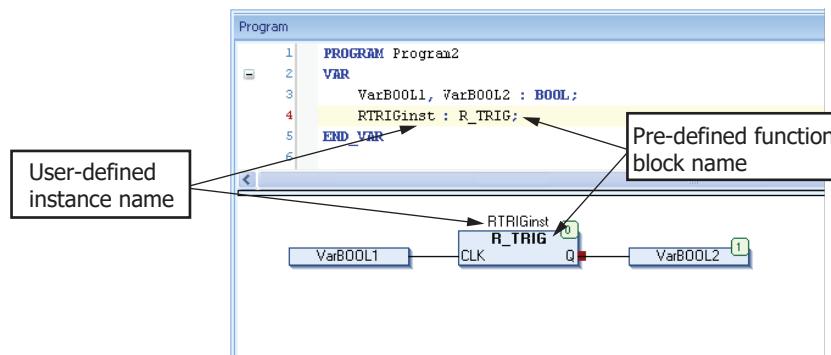

**Figure B.82 Creating a Function Block Instance**

## Audit Utilities

### NetworkAudit

This function block manages starting audit utilities from the RTAC logic engine. The `fb_init` method of this function block must be called in the program variable declaration. This sets the scanning settings and cannot be changed during runtime. The function block takes arrays of variable sizes for IP addresses to include or exclude in the scan. The size is determined by the user. IP addresses in the arrays can be changed during runtime.

#### Function Block

Inputs:

`EN : BOOL;` (Enables the function block allowing audits to be triggered)

Outputs:

`ENO : BOOL;` (Function block is enabled and is ready to trigger network audits)

`InProgress : BOOL;` (Asserted when a network audit is in progress)

`LastReportFilePath : POINTER TO STRING(255);` (File path of the last completed network audit report)

#### Methods

##### Cancel

Inputs : None

Returns : `BOOL;` (Returns true if the active audit was canceled successfully)

##### Start

Inputs:

`IdSuffix : STRING(64);` (String to be appended to the audit report name)

Returns : `BOOL;` (\* Returns true if the audit starts successfully \*)

**fb\_init (must be called in the declaration)**

IdPrefix : STRING(175); (\* Identifies a network audit scan \*)

SelfAsTarget : BOOL; (\* When true, the RTAC itself will be scanned \*)

ForceAllTargets : BOOL; (\* When true, forces all targets to be scanned even if they are non-responsive \*)

Timing : TimeTemplate; (\* Determines how quickly scan queries are issued \*)

OsDetection : BOOL; (\* When true, attempts to determine the OS of the target IP \*)

PortScanType : PortScan; (\* Control the type of port scanning that is executed \*)

IncludeTargets : ARRAY[\*] OF STRING(255); (\* Assign to an array of any length of STRING(255) values that lists the IP addresses to scan. It is important that the array variable is declared prior to the fb\_init call. See *Figure B.83.* \*)

ExcludeTargets : ARRAY[\*] OF STRING(255); (\* Assign to an array of any length of STRING(255) values that lists the IP addresses to exclude from scan. It is important that the array variable is declared prior to the fb\_init call. See *Figure B.83.* \*)

Returns : None

**TimingTemplate**

Used to determine how quickly the RTAC scans the network.

| Name    | Value |
|---------|-------|
| Slower  | 0     |
| Normal  | 1     |
| Faster  | 2     |
| Fastest | 3     |

**PortScan**

Used to define which ports to scan when triggering a network audit.

| Name       | Value |
|------------|-------|
| Disabled   | 0     |
| Open_Only  | 1     |
| All_States | 2     |

## Example

```

2   VAR
3     IncludeArray : ARRAY[1..1] OF STRING(255) := ['192.168.25.1/24'];
4     ExcludeArray : ARRAY[1..1] OF STRING(255) := [''];
5     auditReport : networkAudit(IDPrefix := 'auditStartTest',
6                               SelfAsTarget := FALSE,
7                               ForceAllTargets := false,
8                               Timing := timingTemplate.NORMAL,
9                               OSDetection := TRUE,
10                              PortScanType := PortScan.OPEN_ONLY,
11                              IncludeTargets := IncludeArray,
12                              ExcludeTargets := ExcludeArray);
13     triggerAudit : BOOL;
14     runAudit : R_TRIG;
15     triggerCancel : BOOL;
16     cancelAudit : R_TRIG;
17   END_VAR
18

1 auditReport();
2
3 runAudit(CLK := triggerAudit);
4
5 IF NOT auditReport.InProgress AND runAudit.Q THEN
6   auditReport.start(IdSuffix := 'auditEndTest');
7 END_IF
8
9 cancelAudit(CLK := triggerCancel);
10 IF cancelAudit.Q THEN
11   auditReport.Cancel();
12 END_IF

```

Figure B.83 NetworkAudit Example

## CTD

This function block is a decrementing counter.

Inputs:

CD : BOOL; (\* A rising edge at this input starts the incrementing of CV \*)

LOAD : BOOL; (\* If TRUE, CV will be reset to the upper limit given by PV \*)

PV : WORD; (\* Upper limit, i.e., start value for decrementing of CV \*)

Outputs:

Q : BOOL; (\* Gets TRUE as soon as CV is 0 \*)

CV : WORD; (\* Value to be decremented by 1, starting with PV until 0 is reached \*)

When LOAD becomes TRUE, the counter variable CV is initialized with the upper limit PV. Each time CD has a rising edge change (from FALSE to TRUE), CV will be lowered by 1, provided CV is greater than 0. CV will not count below 0.

Q returns TRUE when CV is equal 0.

Declaration example:


```
CTDInst : CTD;
```

Example in ST:

```
CTDInst(CD := VarBOOL1, LOAD := VarBOOL2, PV := VarINT1);
```

```
VarBOOL3 := CTDInst.Q;
```

```
VarINT2 := CTDInst.CV;
```

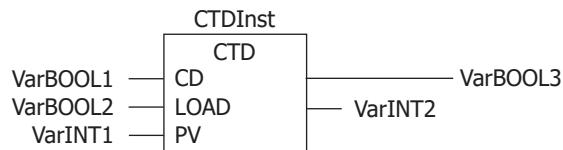

**Figure B.84 CTD Example in CFC, LD**

## CTU

This function block is an incrementing counter:

Inputs:

CU : BOOL; (\* A rising edge at this input starts the incrementing of CV \*)

RESET : BOOL; (\* If TRUE, CV will be reset to 0 \*)

PV : WORD; (\* Upper limit for the incrementing of CV \*)

Outputs:

Q : BOOL; (\* Gets TRUE as soon as CV has reached the limit given by PV \*)

CV : WORD; (\* Value to be counted up until it reaches PV \*)

The counter variable CV will be initialized to 0 if RESET is TRUE. If CU has a rising edge from FALSE to TRUE, CV will increase by 1. Q will return TRUE when CV is greater than or equal to the upper limit PV.

Declaration example:


```
CTUInst : CTU;
```

Example in ST:

```
CTUInst(CU := VarBOOL1, RESET := VarBOOL2, PV := VarINT1);
```

```
VarBOOL3 := CTUInst.Q;
```

```
VarINT2 := CTUInst.CV;
```

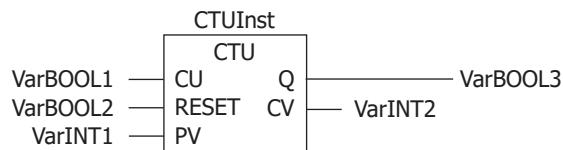

**Figure B.85 CTU Example in CFC, LD**

## CTUD

This function block is an incrementing and decrementing counter.

Inputs:

CU : BOOL; (\* If a rising edge occurs at CU, incrementing of CV will be started \*)

CD : BOOL; (\* If a rising edge occurs at CD, decrementing of CV will be started \*)

RESET : BOOL; (\* If TRUE, CV will be set to 0 \*)

LOAD : BOOL; (\* If TRUE, CV will be set to PV \*)

PV : WORD; (\* Upper limit for incrementing or decrementing CV \*)

Outputs:

QU : BOOL; (\* Returns TRUE when CV has been incremented to  $\geq$  PV \*)

QD : BOOL; (\* Returns TRUE when CV has been decremented to 0 \*)

CV : WORD; (\* Value to be incremented or decremented \*)

If RESET is TRUE, the counter variable CV will initialize to 0. If LOAD is TRUE, CV will initialize to the value of PV.

If CU has a rising-edge change from FALSE to TRUE, CV will increase by 1. If CD has a rising-edge change from FALSE to TRUE, CV will decrease by 1 provided this does not cause the value to fall below 0.

QU returns TRUE when CV has become greater than or equal to PV.

QD returns TRUE when CV has become equal to 0.

Declaration example:

```
CTUDInst : CTUD;
```


Example in ST:

```
CTUDInst(CU := VarBOOL1, CD := VarBOOL2, RESET := VarBOOL3,  
LOAD := VarBOOL4, PV := VarINT1);
```

```
VarBOOL5 := CTUDInst.QU;
```

```
VarBOOL6 := CTUDInst.QD;
```

```
VarINT2 := CTUDInst.CV;
```

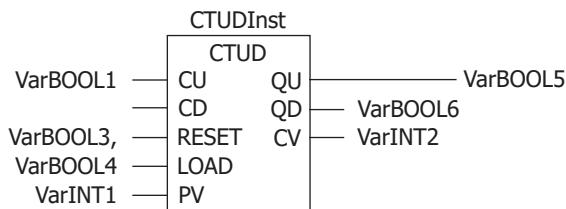

**Figure B.86 CTUD Example in CFC, LD**

## Ethernet\_Interface\_Control

This function block provides online control over the enabling and disabling and a simple logical interface for control and status monitoring of the physical Ethernet interfaces of the RTAC as well as assignment of IP and default gateway addresses. For applications that require greater control and monitoring flexibility, you can leverage the Ethernet interface control functions described in this section.

Declaration Inputs:

Interface\_Name : Enum\_interface\_id; (\*The name of the interface on which to operate. See Enum\_interface\_id for a description of the Enum\_interface\_id enumeration\*)

Inputs:

Set\_Enable\_State : BOOL; (\*On the rising edge of this input, the New\_Enable\_State will be applied to the interface specified by Interface\_Name\*)

New\_Enable\_State : BOOL; (\*The new state of the interface will be set when the operation is triggered by the Set\_Enable\_State input\*)

Set\_IP\_Address : BOOL; (\*On the rising edge of this input, the New\_IP\_Address will be applied to the interface specified by Interface\_Name\*)

New\_IP\_Address : STRING; (\*This input should be an IP address and subnet mask specified in CIDR notation; for example, 192.168.0.2/32\*)

Set\_Gateway\_IP : BOOL; (\*On the rising edge of this input, the New\_Gateway\_IP will be set on the interface specified by Interface\_Name\*)

New\_Gateway\_IP : STRING; (\*This input should be an IPv4 address; for example, 192.168.0.1\*)

Primary\_Gateway : BOOL; (\*The new gateway IP will be designated as the gateway used for all outgoing connections to remote networks\*)

Outputs:

Interface\_Enabled : BOOL; (\*Indicates whether the interface selected by the Interface\_Name input is currently enabled.\*)

Set\_Enable\_State\_Pending : BOOL; (\*True while the enable state of the interface is being changed, false otherwise.\*)

Set\_Enable\_State\_DN : BOOL; (\*Pulses for one processing interval when the enable state of the interface completes.\*)

IP\_Address : STRING; (\*Indicates the current IP address configured on the interface specified by the Interface\_Name input. This information is only available when the interface is enabled.\*)

Set\_IP\_Address\_Pending : BOOL; (\*True while the IP address of the interface is being changed, false otherwise.\*)

Set\_IP\_Address\_DN : BOOL; (\*Pulses for one processing interval when the IP address of the interface completes.\*)

Gateway\_IP : STRING; (\*Indicates the current gateway IP configured on the interface specified by the Interface\_Name input. This information is only available when the interface is enabled.\*)

Set\_Gateway\_IP\_Pending : BOOL; (\*True while the IP address of the interface is being changed, false otherwise.\*)

Set\_Gateway\_IP\_DN : BOOL; (\*Pulses for one processing interval when an attempt to change the IP address of the interface completes.\*)

Interface\_Not\_Present : BOOL; (\*Pulses for one processing interval when the requested operation fails because the interface is not present.\*)

Interface\_Busy : BOOL; (\*Pulses for one processing interval when the requested operation fails because the interface cannot presently be modified.\*)

Invalid\_IP\_Address : BOOL; (\*Pulses for one processing interval when the requested operation fails because the provided IP address is not valid.\*)

Invalid\_Gateway\_IP : BOOL; (\*Pulses for one processing interval when the requested operation fails because the provided gateway IP is not valid.\*)

Enumerations: See *Ethernet\_Interface\_Control* on page 1115 for a description of the Enum\_interface\_id enumeration.

Declaration example:

```
E1Cont : Ethernet_Interface_Control (Interface_Name := Eth_01);
```

Example in ST:

```
E1Cont(Set_Enable_State := VarBOOL1, New_Enable_State :=  
VarBOOL2,  
Set_IP_Address := VarBOOL3, New_IP_Address := '192.168.1.4/24',  
Set_Gateway_IP := VarBOOL4,  
New_Gateway_IP := '192.168.1.1', Primary_Gateway := VarBOOL5,);  
VarBOOL6 := E1Cont.Interface_Enabled;  
VarBOOL7 := E1Cont.Interface_Busy;
```

## F\_TRIG

This function block detects a falling edge.

Inputs:

CLK : BOOL; (\* Incoming Boolean signal to be checked for falling edge \*)

Outputs:

Q : BOOL; (\* Becomes TRUE if a falling edge occurs at CLK \*)

The output Q will remain FALSE as long as the input variable CLK returns TRUE. When CLK changes to FALSE, Q will return TRUE. Each time F\_TRIG is called, it must detect a falling edge of CLK followed by a rising edge of CLK to trigger Q to TRUE.


Declaration example:

```
FTRIGInst : F_TRIG;
```

Example in ST:

```
FTRIGInst(CLK := VarBOOL1);
```

```
VarBOOL2 := FTRIGInst.Q;
```

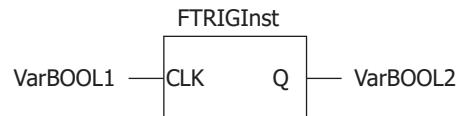

**Figure B.87 F\_TRIG Example in CFC, LD**

## PulseDecoder

This function block decodes pulseConfig attributes associated with an operSPC value. The output, Q, pulses as described by the pulseConfig attribute.

Example in Structured Text:

```
Program Test
```

```
VAR
```

```
PulseDecoderInst : PulseDecoder;
```

```
IN : operSPC;
```

```
OUT : BOOL;
```


```
ElapsedPulseCnt : USINT;
```

```
END_VAR
```

```
PulseDecoderInst (CTRL := IN);
```

```
OUT := PulseDecoderInst.Q;
```

```
ElapsedPulseCnt := PulseDecoderInst.EC_PulseCount;
```

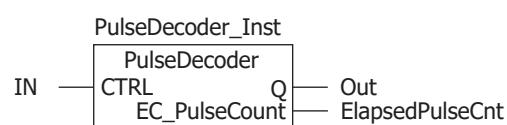

**Figure B.88 PulseDecoder Example in CFC, LD**

## RS

This is a resetting bistable function block.

Inputs:

```
SET : BOOL;
```

```
RESET1 : BOOL;
```

Outputs:

```
Q1 : BOOL;
```

Q1 is set to TRUE only if RESET1 is FALSE and SET becomes TRUE. Q1 becomes FALSE when RESET1 is TRUE, regardless of the value of SET.

$Q1 = RS(SET, RESET1)$  means:

$Q1 = \text{NOT } RESET1 \text{ AND } (Q1 \text{ OR } SET)$


Declaration example:

RSInst : RS;

Example in ST:

```
RSInst(SET := VarBOOL1, RESET1 := VarBOOL2);
```

```
VarBOOL3 := RSInst.Q1;
```

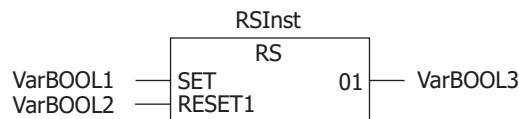

**Figure B.89 RS Example in CFC, LD**

## RTC

The Run-Time Clock function block returns the current date and time at a given date and time.

Inputs:

EN : BOOL; (\* At a rising edge starts counting up the time in PDT \*)

PDT : DATE\_AND\_TIME; (\* Date and time from which the counting up should be started \*)

Outputs:

Q : BOOL; (\* Is TRUE as long as CDT is counting up \*)

CDT : DATE\_AND\_TIME; (\* Current state of counted date and time \*)


VarBOOL2 := RTC(EN, PDT, Q, CDT) means:

When EN is FALSE, the output variables Q and CDT are FALSE and DT#1970-01-01-00:00:00, respectively.

When EN becomes TRUE (rising edge), CDT is set to the value of PDT and counted up in seconds as long as EN is TRUE. As soon as EN is reset to FALSE, CDT is reset to the initial value DT#1970-01-01-00:00:00.

Example in ST:

```
RTC(EN := VarBOOL1, PDT := DT#2006-03-30-14:00:00, Q =>
VarBOOL2, CDT => VarTimeCur);
```

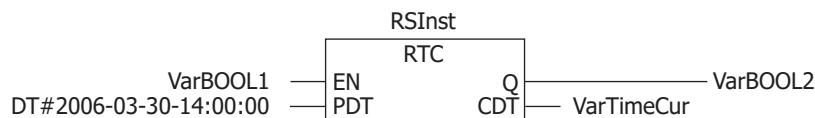

**Figure B.90 RTC Example in CFC, LD**

## R\_TRIG

This function block detects a rising edge.

Inputs:

CLK : BOOL; (\* Incoming Boolean signal to be checked for rising edge \*)

Outputs:

Q : BOOL; (\* Becomes TRUE if a rising edge occurs at CLK \*)

The output Q will remain FALSE as long as the input variable CLK is FALSE. When CLK changes to TRUE, Q will become TRUE for one processing interval, then return FALSE, even if CLK stays TRUE. Q is only set to TRUE when R\_TRIG detects a rising edge on CLK.


Declaration example:

```
RTRIGInst : R_TRIG;
```

Example in ST:

```
RTRIGInst(CLK := VarBOOL1);
```

```
VarBOOL2 := RTRIGInst.Q;
```

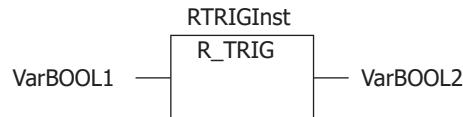

**Figure B.91 R\_TRIG Example in CFC, LD**

## SR

This is a dominant bistable function block.

Inputs:

SET1 : BOOL;

RESET : BOOL;

Output:

Q1 : BOOL;

Q1 is set to TRUE only if RESET is FALSE and SET1 becomes TRUE. Q1 remains TRUE until SET1 is FALSE and RESET is TRUE.

Q1 = SR (SET1, RESET) means:

$$Q1 = (\text{NOT RESET AND } Q1) \text{ OR } SET1$$


Declaration example:

```
SRInst : SR;
```

Example in ST:

```
SRInst(SET1 := VarBOOL1, RESET := VarBOOL2);
```

```
VarBOOL3 := SRInst.Q1;
```

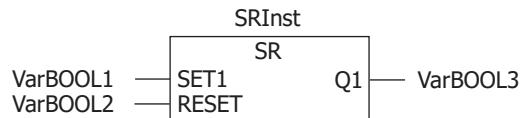

**Figure B.92 SR Example in CFC, LD**

## TEX

This function block is an expiration timer. When the input changes from False to True, the counter ET begins counting in milliseconds to PT. When ET = PT, output Q is set to True for one processing cycle and ET remains at a constant value until a rising edge on IN is detected.

Inputs:

IN : BOOL;  
PT : TIME;

Outputs:


Q : BOOL;  
ET : TIME;

Declaration:

TEXinst : TEX;

Example in ST:

```
TEXinst(IN := VarBOOL1, PT := T#5s,
        Q => VarBOOL3, ET => VarTIME);
```

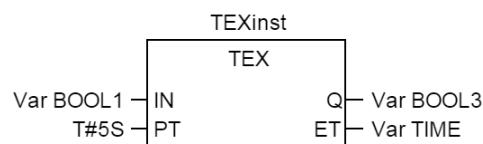

**Figure B.93 TEX Example in CFC**

## TI

This function block is an interval timer. Effectively it is a self-initiating TON function block with a Boolean input override.

Timer ET will count up in milliseconds until it reaches the value of PT. At that time, output Q is forced TRUE. The timer is then reset and started again. Once Q is forced TRUE, it is reset to FALSE automatically at the next processing interval.

If IN goes TRUE at any time, Q will become TRUE regardless of the value of ET.

Inputs:

IN : BOOL: (\* Rising edge forces Q to TRUE. \*)


PT : TIME: (\* Upper limit of ET (time interval) \*)

Outputs:


Q : BOOL: (\* Forced to TRUE as soon as ET has reached the value of PT or on the rising edge of IN \*)

ET : TIME: (\* Present value of the interval timer \*)

*Figure B.94* shows Q forced high because the value of timer ET reaches the limit PT. *Figure B.95* shows the rising edge on IN forces Q high. Notice the expiration of the ET timer is overridden by the IN rising-edge event. *Figure B.94* assumes the period PT is greater than the RTAC processing interval.

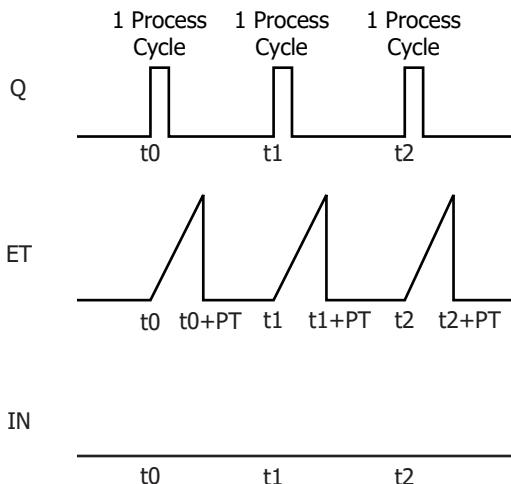

**Figure B.94** Display of TI Behavior Over Time

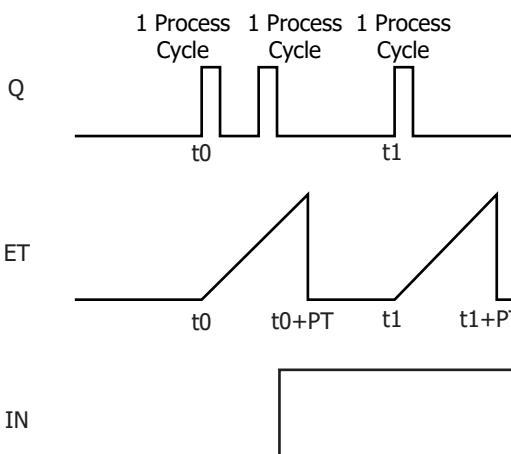


**Figure B.95** Display of TI Behavior Triggered by IN

Declaration example:

TIinst : TI;

Example in ST:

TIinst(IN := VarBOOL1, PT := T#5s);

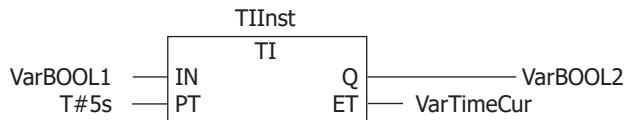

**Figure B.96 TI Example in CFC, LD**

## TIV

This function block is a TI timer that also validates the input values. Functionally, TIV is the same as TI except for the two additional inputs and one additional output. The two inputs provide a range for input PT. If PT is greater than PT\_MAX or less than PT\_MIN, BOOL output invalid\_input is forced TRUE.

Inputs:

- IN : BOOL; (\* Rising edge forces Q to TRUE \*)
- PT : TIME; (\* Upper limit of ET (time interval) \*)
- PT\_MAX : TIME; (\* Maximum allowed value of PT \*)
- PT\_MIN : TIME; (\* Minimum allowed value of PT \*)

Outputs:


- Q : BOOL: (\* Forced to TRUE as soon as ET has reached the value of PT \*)
- Invalid\_input : BOOL: (\* Forced to TRUE if PT < PT\_MIN or PT > PT\_MAX \*)

Declaration example:

```

TInst : TI;
TIVInst(IN := VarBOOL1, PT := T#5s, PT_MAX := 10, PT_MIN := 2);

```

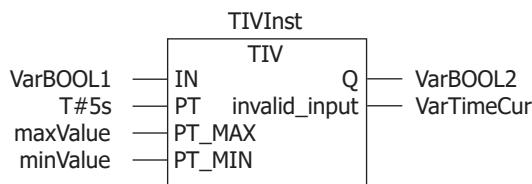

**Figure B.97 TIV Example in CFC, LD**

## TOF

This function block is a turn-off delay.

When the input changes from TRUE to FALSE (falling edge), counter ET will begin counting in milliseconds to PT. When ET = PT, output Q is set FALSE and ET remains a constant value.

Inputs:

- IN : BOOL; (\* Falling edge starts counting up ET \*)

PT : TIME; (\* Upper limit for counting up ET (delay time) \*)

Outputs:


Q : BOOL; (\* Gets a falling edge as soon as ET has reached the upper limit PV (delay time is over) \*)

ET : current value of delay time

TOF(IN, PT, Q, ET) means:

If IN is TRUE, the outputs are TRUE and 0, respectively.

Q is FALSE when IN is FALSE and ET equal PT. Otherwise it is TRUE.

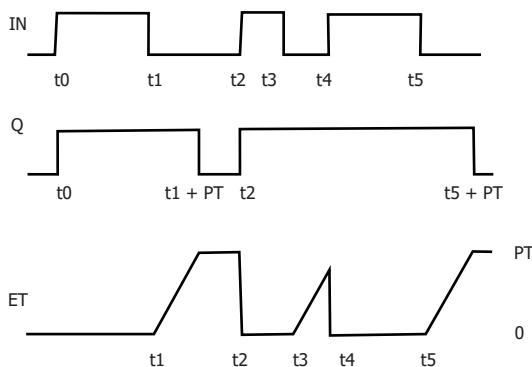

**Figure B.98 Display of TOF Behavior Over Time**


Declaration example:

TOFInst : TOF;

Example in ST:

TOFInst(IN := VarBOOL1, PT := T#5s);

VarBOOL2 := TOFInst.Q;

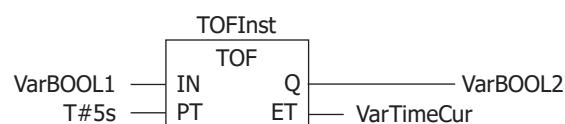

**Figure B.99 TOF Example in CFC, LD**

## TON

This function block is a turn-on delay.

When the input changes from FALSE to TRUE, counter ET will begin counting in milliseconds to PT. When ET = PT, output Q is set TRUE and ET remains a constant value.

Inputs:

IN : BOOL; (\* Rising edge starts counting up ET \*)

PT : TIME; (\* Upper limit for counting up ET (delay time) \*)

Outputs:


**Q** : BOOL; (\* Gets a rising edge as soon as ET has reached the upper limit PV (delay time is over) \*)

**ET** : (\* Current state of delay time \*)

TON(IN, PT, Q, ET) means:

If IN is FALSE, Q is FALSE and ET is 0.

Q is TRUE when IN is TRUE and ET is equal to PT. Otherwise it is FALSE.

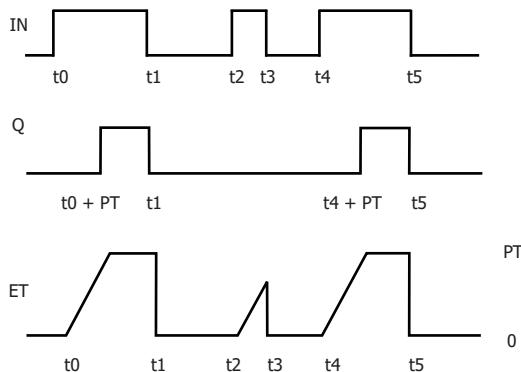


**Figure B.100 Display of TON Behavior Over Time**

Declaration example:

TONInst : TON;

Example in ST:

TONInst(IN := VarBOOL1, PT := T#5s);

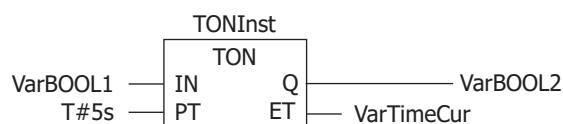

**Figure B.101 TON Example in CFC, LD**

## TP

This function block triggers on a timer value.

A timer is counted up until a given limit is reached. During counting up a pulse variable is TRUE, otherwise it is FALSE.

Inputs:

**IN** : BOOL; (\* A rising edge will start ET to count up in time \*)

**PT** : TIME; (\* Upper limit of the time \*)

Outputs:

**Q** : BOOL; (\* TRUE as long as the time is being counted up in ET (pulse) \*)

ET : TIME; (\* Current state of the time \*)


TP(IN, PT, Q, ET) means:

If IN is FALSE, Q is FALSE and ET is 0.

When IN becomes TRUE, the time ET will begin to count up in milliseconds until ET = PT. It will then remain constant.

Q is TRUE when IN is TRUE and ET is less than or equal to PT. Otherwise it is FALSE.

Q returns a signal for the time period given in PT.

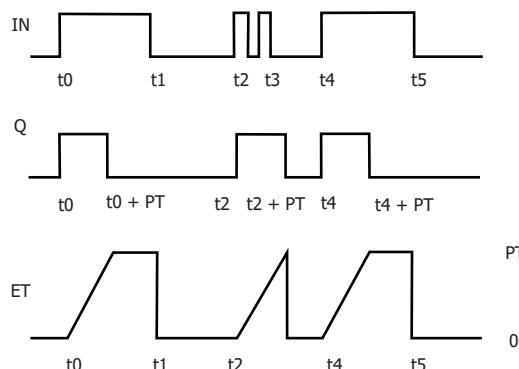

**Figure B.102 Display of the TP Time Sequence**


Declaration example:

TPIinst : TP;

Example in ST:

TPIinst(IN := VarBOOL1, PT := T#5s);


VarBOOL2 := TPIinst.Q;

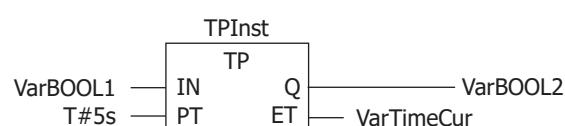

**Figure B.103 TP Example in CFC, LD**

## TPUDO

This function block is a pickup dropout timer. When the input changes from False to True, the counter ET<sub>p</sub> begins counting in milliseconds to PUp. When ET<sub>p</sub> = PUp, output Q is set to True, and ET remains at a constant value. When the input then changes from True to False, the counter ET<sub>d</sub> begins counting in milliseconds to DOut. When ET<sub>d</sub> = DOut, output Q is set to False, and ET remains at a constant value.

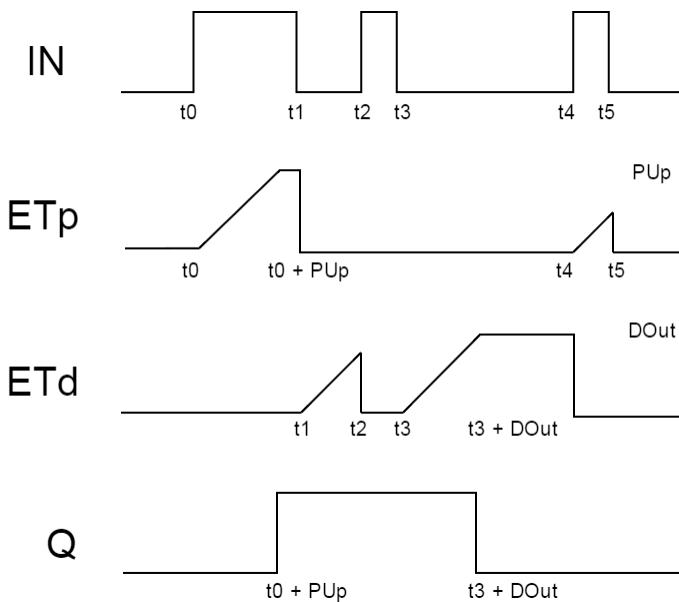

**Figure B.104 TPUDO Diagram**

Inputs:

IN : BOOL;

PUp : TIME;

DOut : TIME;

Outputs:

Q : BOOL;

ETp : TIME;


ETd : TIME;

Declaration:

TPUDOinst : TPUDO;

Example in ST:

TPUDOinst (IN := VarBOOL1, PUp:= T#5s, DOut := T#15s);

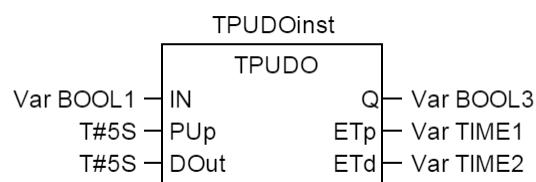

**Figure B.105 TPUDO Example in CFC**

# Instructions

---

You can use the following instruction types in Structured Text.

**Table B.9 Structured Text Instruction List**

| Instruction Type  | Example   |
|---|---|
| Assignment (see also <i>Assignment Operators on page 1065</i> ) | A := B; CV := CV + 1; C := SIN(X);  |
| Calling a function block and use of the FB output               | CMD_TMR(IN := °IX5, PT := 300); A := CMD_TMR.Q  |
| RETURN  | RETURN;   |
| IF  | D := B * B;<br>IF D < 0.0 THEN<br>C := A;<br>ELSIF D = 0.0 THEN<br>C := B;<br>ELSE<br>C := D;<br>END_IF;          |
| CASE  | CASE INT1 OF<br>1: BOOL1 := TRUE;<br>2: BOOL2 := TRUE;<br>ELSE<br>BOOL1 := FALSE;<br>BOOL2 := FALSE;<br>END_CASE; |
| FOR   | J := 101;<br>FOR I := 1 TO 100 BY 2 DO<br>IF ARR[I] = 70 THEN<br>J := I;<br>EXIT;<br>END_IF;<br>END_FOR;          |
| WHILE   | J := 1;<br>WHILE J <= 100 AND ARR[J] <> 70 DO<br>J := J + 2;<br>END WHILE;  |
| REPEAT  | J := 1;<br>REPEAT<br>J := J + 2;<br>UNTIL J = 101 OR ARR[J] = 70<br>END_REPEAT;                                   |
| EXIT  | EXIT;   |
| CONTINUE  | CONTINUE;   |
| Empty instruction   | ;   |

## RETURN

You can use the RETURN instruction to leave a POU. You might want to do this, for example, in cases that depend on a condition.

Syntax:

```
RETURN;
```

Example:

```
IF b := TRUE THEN  
    RETURN;  
    END_IF;  
    a := a + 1;
```

If b is TRUE, instruction a := a + 1 will not be executed and the POU will be left immediately.

## IF

With the IF instruction, you can check a condition and, depending upon this condition, execute instructions.

Syntax:

```
IF <Boolean_expression1> THEN  
    <IF_instructions>  
    {ELSIF <Boolean_expression2> THEN  
        <ELSIF_instructions1>  
        •  
        •  
        •  
    ELSIF <Boolean_expression n> THEN  
        <ELSIF_instructions n-1>  
    ELSE  
        <ELSE_instructions>}  
    END_IF;
```

The part in braces is optional.

If the <Boolean\_expression1> returns TRUE, then only the <IF\_Instructions> are executed. Otherwise, the software evaluates the Boolean expressions, beginning with <Boolean\_expression2>, one after the other until one of the expressions returns TRUE. Then only those instructions after this Boolean expression and before the next ELSE or ELSIF are evaluated.

If none of the Boolean expressions produce TRUE, then only the <ELSE\_instructions> are evaluated.

Example:

```
IF temp<17  
    THEN heating_on := TRUE;
```

```
ELSE heating_on := FALSE;
END_IF;
```

Here the heating in the example turns on when the temperature drops below 17 degrees. Otherwise, it remains off.

## CASE

With the CASE instructions, you can combine several conditioned instructions with the same condition variable in one construct.

Syntax:

```
CASE <var1> OF
  <Value1> : <Instruction 1>
  <Value2> : <Instruction 2>
  <Value3, Value4, Value5> : <Instruction 3>
  <Value6 ..., Value10> : <Instruction 4>
  .
  .
  .
  <Value n> : <Instruction n>
ELSE <ELSE instruction>
END_CASE;
```

A CASE instruction is processed according to the following model:

- ▶ If the variable in <var1> has the value <Value i>, then the instruction <Instruction i> is executed.
- ▶ If <Var1> has none of the indicated values, then the <ELSE Instruction> is executed.
- ▶ To execute the same instruction for several values of the variables, write these values one after the other separated by commas.
- ▶ To execute the same instruction for a value range of a variable, write the initial value and the end value separated by two periods.

Example:

```
CASE INT1 OF
  1, 5 : BOOL1 := TRUE;
  BOOL3 := FALSE;
  2 : BOOL2 := FALSE;
  BOOL3 := TRUE;
  10..20 : BOOL1 := TRUE;
  BOOL3 := TRUE;
```

```
ELSE
    BOOL1 := NOT BOOL1;
    BOOL2 := BOOL1 OR BOOL2;
END_CASE;
```

## FOR Loop

With the FOR loop, you can program repeated processes.

Syntax:

```
INT_Var : INT;
FOR <INT_Var> := <INIT_VALUE> TO <END_VALUE> {BY <Step
size>} DO
    <Instructions>
END_FOR;
```

The part in braces {} is optional.

The <Instructions> are executed as long as the counter <INT\_Var> is not greater than the <END\_VALUE>. This evaluation occurs first so that the <instructions> are never executed if <INIT\_VALUE> is greater than <END\_VALUE>.

When <Instructions> are executed, <INT\_Var> is incremented by <Step size>. The step size can have any integer value. If it is missing, then it is set to 1.

### NOTE

If <END\_VALUE> is equal to the limit value of counter <INT\_VAR>, e.g., if Counter—used in the previous example—is of type SINT and if <END\_VALUE> is 127, then you will get an endless loop. Therefore, <END\_VALUE> must not be equal to the limit value of the counter.

Example:

```
FOR Counter := 1 TO 5 BY 1 DO
    var1 := var1 * 2;
END_FOR;
Erg := var1;
```

Let us assume that the default setting for var1 is "1". Then, it will have the value 32 after the FOR loop.

You can use the CONTINUE instruction within a FOR loop.

## WHILE Loop

You can use the WHILE loop in a manner similar to the FOR loop, but the break-off condition can be any Boolean expression. This means that you must indicate a condition that will cause the loop to execute.

Syntax:

```
WHILE <Boolean expression>
```

&lt;Instructions&gt;

END\_WHILE;

The <Instructions> are executed repeatedly as long as the <Boolean\_expression> returns TRUE. If the <Boolean\_expression> is already FALSE at the first evaluation, then the <Instructions> are never executed. If <Boolean\_expression> never is evaluated to the value FALSE, then the <Instructions> repeat endlessly. Endless tight loops will starve the RTAC of CPU resources and cause a watchdog timer violation.

**NOTE**

You must ensure that no endless loop develops. You can do this by changing the condition in the instruction part of the loop. One method, for example, might be to count up or down one counter.

Example:

```
WHILE counter<>0 DO
    var1 := var1 * 2;
    Counter := Counter - 1;
END WHILE
```

The WHILE and REPEAT loops are, in a certain sense, more powerful than the FOR loop because you do not need to know the number of cycles before executing the loop. In some cases, therefore, you will only be able to work with these two loop types. If, however, you know the number of the loop cycles, then a FOR loop is preferable because it prevents inadvertent endless loops.

You can use the CONTINUE instruction within a WHILE loop.

## REPEAT Loop

The REPEAT loop differs from the WHILE loop because the break-off condition is checked only after execution of the loop. This means that the loop will run through at least once, regardless of the wording of the break-off condition.

Syntax:

```
REPEAT
    <Instructions>
    UNTIL <Boolean expression>
END_REPEAT;
```

The <Instructions> are executed until the <Boolean expression> returns TRUE.

If <Boolean expression> is evaluated as TRUE in the first pass, then <Instructions> are executed only once. If <Boolean\_expression> is never evaluated as TRUE, then the <Instructions> repeat endlessly.

Example:

```
REPEAT
    var1 := var1 * 2;
```

```
Counter := Counter - 1;  
UNTIL  
Counter = 0  
END_REPEAT;
```

You can use the CONTINUE instruction within a REPEAT loop.

## EXIT

If the EXIT instruction appears in a FOR, WHILE, or REPEAT loop, then the innermost loop ends, regardless of the break-off condition.

## CONTINUE

As an extension to the IEC 61131-3 standard, the CONTINUE instruction is supported within FOR, WHILE and REPEAT loops. CONTINUE effectively ends the present iteration of the loop as though the loop completed normally and the next iteration began. The difference is that all instructions following the CONTINUE statement in the presently executing loop are skipped.

Example:

```
FOR Counter := 1 TO 5 BY 1 DO  
IF var1 = 0 THEN  
CONTINUE; (* to avoid division by zero, skip to END_FOR *)  
END_IF  
var1 := var1*2; (* only executed, if var1 is not "0" *)  
END_FOR;  
Erg := var1;
```

## Declarations

---

You must declare all tags (variables) properly within an RTAC project either in a POU, GVL, or the DTE. In most cases, the ACCELERATOR RTAC software will declare the tags for you automatically. For example, when you add a tag to a protocol, ACCELERATOR RTAC automatically generates and declares the data type all the time, quality, and other variables associated with that tag.

You can also enter tag declarations directly into the declaration portion of a POU, a GVL window, or the DTE.

Note the difference between a data type and a tag type. As you will see in following examples, the tag type declarations are in blocks prefaced by the <Type> command and suffixed with END\_<Type>. The common tag types are as follows:

- VAR
- VAR\_INPUT

- ▶ VAR\_OUTPUT
- ▶ VAR\_IN\_OUT
- ▶ VAR\_GLOBAL
- ▶ VAR\_TEMP
- ▶ VAR\_STAT

## Attributes

You can also supplement the tag type keywords with attributes, which are also keywords. For instance, RETAIN (VAR\_INPUT RETAIN) is an attribute that will enable the tag to keep its value even through a power cycle. The declaration of a tag must match the following rules.

Syntax:

<Identifier> : <Type> {:= <initialization>};

Items in braces {} are optional. See *Data Types on page 1137* and *Tag Initialization on page 1136*.

## Identifiers

An identifier is the name of a tag. The following list includes basic identifier naming rules:

- ▶ Must not contain spaces or special characters.
- ▶ Not case-sensitive; VAR1, Var1, and var1 are all the same tag.
- ▶ "S" and "R" are reserved names in IEC 61131-3 and cannot be used for single-character tag names.
- ▶ The underscore character is recognized; A\_BCD and AB\_CD are two different tags. An identifier must not have more than one underscore character sequentially.
- ▶ Length is not limited.

## Namespaces–Scope of Tag Identifiers

You can use the same tag identifier more than once in a project, but ACSELERATOR RTAC requires that a complete tag name (including namespace) be unique. This means that two tags can have the same tag name if you declare these tags and use them in two different programs. This is because the tags are local to the individual programs in which you declare them, so their namespace is different. Two tag names cannot have the same name if they reside in the same namespace or program. The software will verify the following rules:

- ▶ An identifier must not be used locally more than once.
- ▶ An identifier must not be identical to any IEC 61131-3 keyword.
- ▶ A local identifier can be the same as a global identifier; in this case, the local instance will take priority within the context of the POU in which you create the local identifier. The global scope operator "." is an exception to this rule. If you reference a global tag ivar that shares a name with a local tag by using the global scope operator .ivar, the code will reference the global instance.

- Tags that you define in two different GVLs can have the same identifier. Use the following to distinguish these tags.
- Use the name of the GVL as a namespace for the included tags. In this way, you can access tags you have declared with the same name in different GVLs by entering the list name, separated by a period, before a tag name. For example, gvl1.myVar is distinguished from gvl2.myVar because the namespace of the GVL is specified.
- You can access tags defined in GVLs of included libraries by using the syntax <library namespace>.<name of GVL>.<tag name>.
- A library is also a namespace within your project, so you can access a library module or tag by using the syntax <library namespace>.<modulename|tagname>.

## Local Tags—VAR

Declare all local tags for a POU between the keywords VAR and END\_VAR. These tags cannot be read or written to from outside the POU in which they are declared.

You can add *Attributes* to a VAR. Example:

```
VAR
    iLoc1 : INT; (* 1. Local Tag *)
END_VAR
```

## Input Tags—VAR\_INPUT

Declare all local tags that serve as inputs for a POU between the keywords VAR\_INPUT and END\_VAR. Assign the value of these tags within the POU calling statement.

You can add *Attributes* to a VAR\_INPUT.

Example:

```
VAR_INPUT
    iIn1 : INT; (* 1. Input Tag *)
END_VAR
```

## Output Tags—VAR\_OUTPUT

Declare all tags that serve as outputs of a POU between the keywords VAR\_OUTPUT and END\_VAR. These values are referenced to the calling POU.

You can add *Attributes* to a VAR\_OUTPUT.

Example:

```
VAR_OUTPUT
    iOut1 : INT; (* 1. Output Tag *)
```

```
END_VAR
```

#### Output tags in functions and methods

According to IEC 61131-3 draft 2, functions (and methods) can have additional outputs. You must assign these in the call of the function in a manner similar to the following:

```
fun(iIn1 := 1, iIn2 := 2, iOut1 => iLoc1, iOut2 => iLoc2);
```

ACSELERATOR RTAC will write the return value of the function fun to the locally declared tags iLoc1 and iLoc2.

## Input and Output Tags—VAR\_IN\_OUT

Declare all tags that serve as inputs and outputs for a POU between the keywords VAR\_IN\_OUT and END\_VAR.

#### NOTE

With tags of this type, the value of the transferred tag changes (i.e., transferred as a pointer, Call-by-Reference). That means that the input value for such tags cannot be a constant. For this reason, you cannot read or write the VAR\_IN\_OUT tags of a function block directly from outside via <functionblockinstance><in/outputtag>.

Example:

```
VAR_IN_OUT
    iInOut1 : INT; (* 1. InputOutput Tag *)
END_VAR
```

## Global Tags—VAR\_GLOBAL

Use the GVL to declare tags or constants global if you need them to be recognized throughout the project.

#### NOTE


A tag that you define locally in a POU with the same name as a global tag will have priority within the POU.

Use GVLs to structure and handle global tags within a project. Insert a GVL from the IEC 61131-3 ribbon tab and declare the global tags between the keywords VAR\_GLOBAL and END\_VAR. You can add Attributes to a VAR\_GLOBAL.

ACSELERATOR RTAC recognizes a tag as global by a preceding dot, e.g., .iGlobVar1, which identifies a global scope operator.

#### NOTE

If you define a GVL but do not use any of the variables in the project, the compile will optimize the GVL out of the project build. As a result, when you are online you cannot force or watch those variables.

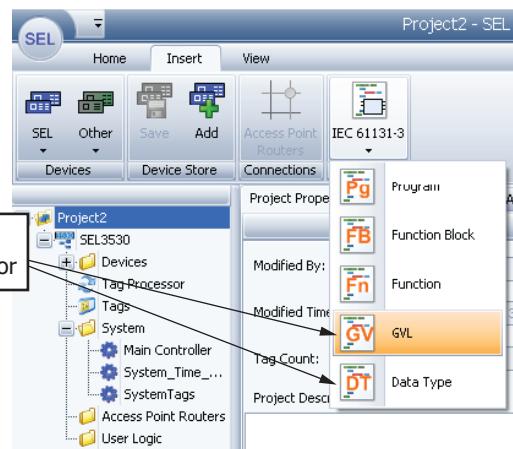

**Figure B.106 GVL and DTE**

## Temporary Tags—VAR\_TEMP

This feature is an extension to the IEC 61131-3 standard.

VAR\_TEMP declarations are possible only within programs and function blocks. You can access temporary tags only within the body of the program or function block in which they are declared. VAR\_TEMP declared tags are (re)initialized every time the POU is called.

Declare the temporary tag declarations locally between the keywords VAR\_TEMP and END\_VAR.

## Static Tags—VAR\_STAT

This feature is an extension to the IEC 61131-3 standard.

Use static tags in function blocks, methods, and functions. Declare these tags locally between the keywords VAR\_STAT and END\_VAR; they will be initialized at the first call of the respective POU.

While you can access static tags only within the scope in which you declare these tags (such as a static variable in C), these tags retain a value even after the system switches context. For example, a function might use such a tag as a counter for the number of function calls.

You can add *Attributes* to a VAR\_STAT.

## Tag Initialization

The default initialization value is 0 for all declarations, but you can add user-defined initialization values in the declaration of each tag and data type.

Use the assignment operator ":=" to create user-defined initialization, which can be any valid Structured Text expression. Use constant values as well as other tags or functions to define the initial value. Verify that a tag you use for the initialization of another tag is already initialized itself.

Examples for valid tag initializations:

VAR

```

var1 : INT := 12; (* Integer tag with initial value of 12 *)

x : INT := 13 + 8; (* initialization value defined by an expression with
constants *)

y : INT := x + fun(4); (* initialization value defined by an expression
containing a function call; be aware of the order in this case! *)

END_VAR

```

You can initialize a tag with any valid Structured Text expression by accessing tags outside of the scope of the tag you are initializing, even by calling functions. However, ensure first that a tag you use for initialization of another tag is already initialized.

Examples for valid tag initializations:

```

VAR
  x : INT := 13 + 8;
  y : INT := x + fun(4);
END_VAR

```

## Data Types

---

Standard types are defined explicitly as part of the IEC 61131-3 standard; extended types are not. The data type assigned to each tag dictates the amount of reserved memory space will be reserved for the tag and the type of values it stores.

### Standard Data Types

ACCELERATOR RTAC supports all data types the IEC 61131-3 standard describes. Standard data types include the following: BOOL, Integer Data Types, REAL/LREAL, STRING, Time Data Types.

#### BOOL

BOOL type variables can take either of the two values TRUE (1) and FALSE (0). Eight bits of memory space are reserved for each BOOL type variable.

See also *BOOL Constants on page 1060*.

#### Integer Data Types

See *Table B.10* for a list of all available integer data types. Each of the different number types covers a different range of values. The following range limitations apply to the integer data types:

**Table B.10 Integer Data Types**

| Type | Lower Limit | Upper Limit | Memory Space |
|------|-------------|-------------|--------------|
| BYTE | 0           | 255         | 8 Bit        |
| WORD | 0           | 65535       | 16 Bit       |

| Type  | Lower Limit     | Upper Limit        | Memory Space |
|-------|-----------------|--------------------|--------------|
| DWORD | 0               | 4294967295         | 32 Bit       |
| LWORD | 0               | $(2^{63}) - 1$     | 64 Bit       |
| SINT  | -128            | 127                | 8 Bit        |
| USINT | 0               | 255                | 8 Bit        |
| INT   | -32768          | 32767              | 16 Bit       |
| UINT  | 0               | 65535              | 16 Bit       |
| DINT  | -2147483648     | 2147483647         | 32 Bit       |
| UDINT | 0               | 4294967295         | 32 Bit       |
| LINT  | $(-2^{64}) / 2$ | $(2^{64}) / 2 - 1$ | 64 Bit       |
| ULINT | 0               | $2^{64} - 1$       | 64 Bit       |

Note on date type names: D = double, L = long, S = short, U = unsigned

See also *Number Constants on page 1062*.

#### NOTE

A type conversion from a larger to smaller type can cause loss of information.

## REAL/LREAL

REAL and LREAL are floating-point types. They must represent rational numbers. The RTAC reserves 32 bits of memory space for REAL and 64 bits for LREAL types.

Value range for REAL: 1.175494351e-38F to 3.402823466e+38F

Value range for LREAL: 2.2250738585072014e-308 to 1.7976931348623158e +308

See also *REAL Constants on page 1063*.

## STRING

A STRING type variable can contain any string of characters. The size entry in the declaration determines how much memory space is reserved for the variable. You can place this entry, which refers to the number of characters in the string, in parentheses or square brackets. If you provide no size specification, the default size will be 80 characters. The maximum string size is 255 characters in one string variable.

Example of a string declaration with 35 characters:

```
str : STRING(35) := 'This is a String';
```

See also *WSTRING on page 1140* and *STRING Constants on page 1063*.

## Time Data Types

The data types TIME, TIME\_OF\_DAY (abb. TOD), DATE, and DATE\_AND\_TIME (abb. DT) are handled internally, similarly to DWORD.

Time is in milliseconds in TIME and TOD. Time in TOD begins at 12:00 a.m.

Time is in seconds in DATE and DT and begins with January 1, 1970, at 12:00 a.m.

See also *LTIME on page 1139* (which in extension to the IEC 61131-3 standard is available as a 32-bit time data type), *TIME Constants on page 1060*, *DATE Constants on page 1061*, *TIME\_OF\_DAY Constants on page 1061*, and *DATE\_AND\_TIME Constants on page 1062*.

## Extended Data Types and Data Classes

In addition to the data types listed in the IEC 61131-3 standard, there are some extended data types available implicitly in ACSELERATOR RTAC:

- *UNION on page 1139*
- *LTIME on page 1139*
- *WSTRING on page 1140*

## UNION

An extension to the IEC 61131-3 standard makes it possible to declare unions in user-defined types.

In a union, all components have the same offset; they all occupy the same storage location. Thus, assuming a union definition as in the following example, an assignment to name.a would also manipulate name.b. The storage location for a union will be the size of the largest member of the union.

Example:

```
TYPE name : UNION
  a : LREAL;
  b : LINT;
END_UNION
END_TYPE
```

## LTIME

ACSELERATOR RTAC supports LTIME as an extension to the IEC 61131-3 to provide a time base for high-resolution timers. LTIME is 64 bits in size and has resolution in nanoseconds.

Syntax:

```
LTIME#<time declaration>
```

Include in the time declaration all of the time units necessary for the TIME constant and the following:

us : microseconds

ns : nanoseconds

Example:

```
LTIME1 := LTIME#1000d15h23m12s34ms2us44ns
```

Compare to TIME : 32-bit size and resolution in milliseconds.

## WSTRING

This string data type is an extension to the IEC 61131-3 standard.

It differs from the standard STRING type (ASCII), in that it is interpreted in Unicode format.

Example:

```
wstr : WSTRING := "This is a WString";
```

See also *STRING* on page 1138 and *STRING Constants* on page 1063.

## ACSELERATOR RTAC Data Types and Data Classes

ACSELERATOR RTAC has some special extended data types and data classes that follow the IEC 61850 specification closely. Each data class has attributes such as time, quality, and status that define the data further. You can define all protocol data and system tags by one of these data types.

ACSELERATOR RTAC supports the following data classes:

- ▶ *APC (Controllable Analog Set Point)* on page 1141
- ▶ *BCR (Binary Counter Reading)* on page 1141
- ▶ *BSC (Binary Controlled Step Position Information)* on page 1142
- ▶ *CMV (Complex Measured Value)* on page 1142
- ▶ *CRC (Cyclic Redundancy Check)* on page 1143
- ▶ *CSM (Checksum)* on page 1143
- ▶ *DNPC (DNP Controllable Single Point)* on page 1144
- ▶ *DPC (Controllable Double Point)* on page 1145
- ▶ *DPS (Double Point Status)* on page 1145
- ▶ *I870SC (Single Command Control)* on page 1146
- ▶ *I870DC (Double Command Control)* on page 1146
- ▶ *INC (Controllable Integer)* on page 1146
- ▶ *INS (Integer Status)* on page 1147
- ▶ *IOC (Input/Output Control)* on page 1147
- ▶ *LBCR (Long Binary Counter Reading)* on page 1148
- ▶ *LEDC (LED Indication Lamp Control)* on page 1149
- ▶ *MDBC (Modbus Coil Control)* on page 1149
- ▶ *MRBC (MIRRORED BITS Control)* on page 1150
- ▶ *MV (Measured Value)* on page 1151
- ▶ *orCat\_t* on page 1151
- ▶ *SPC (Controllable Single Point)* on page 1152
- ▶ *SBRC (SEL Breaker Bit Control)* on page 1152
- ▶ *SPS (Single Point Status)* on page 1153
- ▶ *SRBC (SEL Remote Bit Control)* on page 1153

- *STR (String) on page 1154*
- *TIM (Time) on page 1155*

## APC (Controllable Analog Set Point)

This data class is an extension to the IEC 61131-3 standard. APC is a data structure with the following elements. When the RTAC detects a rising-edge change on trigger, it sends the setMag value.

**Table B.11 APC Attributes**

| Attributes | Type              | Default Value Enumeration                   |
|------------|-------------------|---|
| oper       | operAPC           |   |
| setMag     | REAL              | 0   |
| trigger    | BOOL              |   |
| q          | quality_t         | See <i>q (quality_t) on page 1155</i>       |
| t          | timeStamp_t       | See <i>timeAccuracy_t on page 1156</i>      |
| origin     | originator_t      | See <i>orCat_t on page 1151</i>             |
| status     | MV                | See <i>MV (Measured Value) on page 1151</i> |
| instMag    | REAL              | 0   |
| mag        | REAL              | 0   |
| range      | range_t           | normal, high, low, high_high, low_low       |
| q          | quality_t         | See <i>q (quality_t) on page 1155</i>       |
| t          | timeStamp_t       | See <i>timeAccuracy_t on page 1156</i>      |
| db         | REAL              | 100   |
| zeroDb     | REAL              | 2   |
| rangeC     | rangeConfigReal_t |   |
| hhLim      | REAL              | 1E+36                                       |
| hLIM       | REAL              | 1E+35                                       |
| lLim       | REAL              | -1E+35                                      |
| llLim      | REAL              | -1E+36                                      |
| minVal     | REAL              | -1E+37                                      |
| maxVal     | REAL              | 1E+37                                       |
| origin     | originator_t      | See <i>orCat_t on page 1151</i>             |

## BCR (Binary Counter Reading)

This data class is an extension to the IEC 61131-3 standard. BCR is a data structure with the following elements.

**Table B.12 BCR Attributes**

| Attributes | Type  | Default Value Enumeration |
|------------|-------|---------------------------|
| actVal     | UDINT | 0                         |
| frVal      | UDINT | 0                         |

| Attributes            | Type           | Default Value Enumeration  |
|-----------------------|----------------|--|
| frTm                  | timeStamp_t    |  |
| value                 | dateTime_t     |  |
| dateTime              | DATE_AND_TIME  | DT#2000-8-3-20:2:3   |
| uSec                  | UDINT          | 369704   |
| quality               | timeQuality_t  |  |
| leapSecondsKnown      | BOOL           | TRUE, FALSE  |
| clockFailure          | BOOL           | TRUE, FALSE  |
| clockNotSynchronized  | BOOL           | TRUE, FALSE  |
| accuracy              | timeAccuracy_t | unspecified<br>See <i>timeAccuracy_t</i> on page 1156            |
| daylight_savings_time | DST_t          |  |
| enabled               | BOOL           | TRUE, FALSE  |
| activated             | BOOL           | TRUE, FALSE  |
| offset                | INT            | 0  |
| UTC_Offset            | INT            | 0  |
| source                | timeSource     |  |
| value                 | timeSource_t   | Null, IRIG_B, NTP, DNP, Free_Running,<br>IED_Protocol, i870, PTP |
| priority              | USINT          | 0  |
| q                     | quality_t      | See <i>q (quality_t)</i> on page 1155                            |
| t                     | timeStamp_t    | See <i>timeAccuracy_t</i> on page 1156                           |
| frRs                  | BOOL           | TRUE, FALSE  |

## BSC (Binary Controlled Step Position Information)

This data class is intended to facilitate a mapping between objects within the IEC 61131-3 logic engine and IEC 61850 control objects of the BSC controllable data class defined in the IEC 61850 7-3 standard.

**Table B.13 BSC Attributes**

| Attributes | Type         | Default Value Enumeration          |
|------------|--------------|------------------------------------|
| oper       | operBSC      | stop, lower, higher, tcmd_reserved |
| status     | INS          |                                    |
| origin     | originator_t | See <i>orCat_t</i> on page 1151    |

## CMV (Complex Measured Value)

This data class is an extension to the IEC 61131-3 standard. CMV is a data structure with the element shown in *Table B.14*. The angle in CMV is provided in degrees. The built-in IEC 61131-3 trigonometry functions in the RTAC use radians. Use the following functions to convert from degrees to radians:

`deg_to_rad()` returns degrees as a REAL

`rad_to_deg()`

returns radians as a REAL

**Table B.14 CMV Attributes**

| Attributes | Type          | Default Value Enumerations              |
|------------|---------------|---|
| instCVal   | vector_t      |   |
| mag        | REAL          |   |
| ang        | REAL          | 0                                       |
| cVal       | vector_t      |   |
| mag        | REAL          |   |
| ang        | REAL          | 0                                       |
| range      | range_t       | normal, high, low, high_low, low_low    |
| q          | quality_t     | See <i>q (quality_t)</i> on page 1155   |
| t          | timeStamp_t   | See <i>t (timeStamp_t)</i> on page 1155 |
| db         | REAL          | 0                                       |
| zeroDb     | REAL          | 0                                       |
| rangeC     | RangeConfig_t |   |
| hhLim      | REAL          | 0                                       |
| hLim       | REAL          | 0                                       |
| lLim       | REAL          | 0                                       |
| llLim      | REAL          | 0                                       |
| minVal     | REAL          | 0                                       |
| maxVal     | REAL          | 0                                       |

## CRC (Cyclic Redundancy Check)

This data class is an extension to the IEC 61131-3 standard. CRC is a data structure with the following elements.

**Table B.15 CRC Attributes**

| Attributes         | Type       | Default Value Enumerations |
|--------------------|------------|----------------------------|
| width              | crcWidth_t | 8, 16, 32                  |
| polynomial         | STRING     |                            |
| initial            | STRING     |                            |
| revDataByteOrder   | BOOL       | TRUE, FALSE                |
| revResultByteOrder | BOOL       | TRUE, FALSE                |
| final XOR          | STRING     |                            |

## CSM (Checksum)

This data class is an extension to the IEC 61131-3 standard. CSM is a data structure with the following elements.

**Table B.16 CSM Attributes**

| Attributes           | Type       | Default Value Enumeration                    |
|----------------------|------------|--|
| Enumeration CSM_type | checksum_t | checksum, checksum_16_bit_byte, checksum_xor |
| initVal              | UDINT      | 0  |

## DNPC (DNP Controllable Single Point)

This data class is an extension to the IEC 61131-3 standard. DNPC is a data structure with the following elements.

**Table B.17 DNPC Attributes**

| Attributes   | Type          | Default Value Enumeration               |
|--------------|---------------|---|
| operPulse    | operSPC       |   |
| ctlVal       | BOOL          | TRUE, FALSE                             |
| q            | quality_t     | See <i>q (quality_t) on page 1155</i>   |
| t            | timeStamp_t   | See <i>t (timeStamp_t) on page 1155</i> |
| pulseConfig  | pulseConfig_t |   |
| cmdQual      | cmdQual_t     | pulse, persist                          |
| onDur        | UDINT         | 2000 (ms)                               |
| offDur       | UDINT         | 2000 (ms)                               |
| numPls       | UDINT         | 1                                       |
| origin       | originator_t  | See <i>orCat_t on page 1151</i>         |
| operLatchOn  | operSPC       |   |
| ctlVal       | BOOL          | TRUE, FALSE                             |
| q            | quality_t     | See <i>q (quality_t) on page 1155</i>   |
| t            | timeStamp_t   | See <i>t (timeStamp_t) on page 1155</i> |
| pulseConfig  | pulseConfig_t |   |
| cmdQual      | cmdQual_t     | pulse, persist                          |
| onDur        | UDINT         | 1000 (ms)                               |
| offDur       | UDINT         | 1000 (ms)                               |
| numPls       | UDINT         | 1                                       |
| origin       | originator_t  | See <i>orCat_t on page 1151</i>         |
| operLatchOff | operSPC       |   |
| ctlVal       | BOOL          | TRUE, FALSE                             |
| q            | quality_t     | See <i>q (quality_t) on page 1155</i>   |
| t            | timeStamp_t   | See <i>t (timeStamp_t) on page 1155</i> |
| pulseConfig  | pulseConfig_t |   |
| cmdQual      | cmdQual_t     | pulse, persist                          |
| onDur        | UDINT         | 1000 (ms)                               |
| offDur       | UDINT         | 1000 (ms)                               |

| <b>Attributes</b> |             | <b>Type</b>   | <b>Default Value Enumeration</b>                  |
|-------------------|-------------|---------------|---|
| operTrip          | numPls      | UDINT         | 1   |
|                   | origin      | originator_t  | See <i>orCat_t</i> on page 1151                   |
|                   |             | operSPC       |   |
|                   | ctlVal      | BOOL          | TRUE, FALSE                                       |
|                   | q           | quality_t     | See <i>q (quality_t)</i> on page 1155             |
|                   | t           | timeStamp_t   | See <i>t (timeStamp_t)</i> on page 1155           |
|                   | pulseConfig | pulseConfig_t |   |
|                   |             | cmdQual       | pulse, persistent                                 |
|                   |             | onDur         | 2000 (ms)   |
|                   |             | offDur        | 2000 (ms)   |
|                   |             | numPls        | 1   |
|                   |             | origin        | originator_5                                      |
|                   |             |               | See <i>orCat_t</i> on page 1151                   |
|                   |             | operSPC       |   |
| operClose         | ctlVal      | BOOL          | TRUE, FALSE                                       |
|                   | q           | quality_t     | See <i>q (quality_t)</i> on page 1155             |
|                   | t           | timeStamp_t   | See <i>t (timeStamp_t)</i> on page 1155           |
|                   | pulseConfig | pulseConfig_t |   |
|                   |             | cmdQual       | pulse, persistent                                 |
|                   |             | onDur         | 2000 (ms)   |
|                   |             | offDur        | 2000 (ms)   |
|                   |             | numPls        | 1   |
| origin            |             | originator_t  | See <i>orCat_t</i> on page 1151                   |
| status            |             | SPS           | See <i>SPS (Single Point Status)</i> on page 1153 |

## DPC (Controllable Double Point)

This data class is for a double point controllable output.

**Table B.18 DPC Attributes**

| <b>Attributes</b> | <b>Type</b>  | <b>Default Value Enumerations</b> |
|-------------------|--------------|-----------------------------------|
| operSet           | operSPC      | persist                           |
| operClear         | operSPC      | persist                           |
| status            | DPS          |                                   |
| origin            | originator_t | See <i>orCat_t</i> on page 1151   |

## DPS (Double Point Status)

This data class is intended to model the DPS common data class as defined in the IEC 61850-7-3 standard.

**Table B.19 DPS Attributes**

| Attributes | Type        | Default Value Enumerations                               |
|------------|-------------|--|
| stVal      | dbpos_t     | dbpos_intermediate,<br>dbpos_off, dbpos_on,<br>dbpos_bad |
| q          | quality_t   | See <i>q (quality_t)</i> on page 1155                    |
| t          | timeStamp_t | See <i>timeAccuracy_t</i> on page 1156                   |

## I870SC (Single Command Control)

This data class is based on the IEC 60870-5 standard and is used for single command control.

**Table B.20 I870SC Attributes**

| Attributes | Type         | Default Value Enumerations      |
|------------|--------------|---------------------------------|
| operSet    | operSPC      | persist                         |
| operClear  | operSPC      | persist                         |
| operPulse  | operSPC      | pulse                           |
| status     | SPS          |                                 |
| origin     | originator_t | See <i>orCat_t</i> on page 1151 |

## I870DC (Double Command Control)

This data class is based on the IEC 60870-5 standard and is used for double command control.

**Table B.21 I870DC Attributes**

| Attributes | Type         | Default Value Enumerations      |
|------------|--------------|---------------------------------|
| operSet    | operSPC      | persist                         |
| operClear  | operSPC      | persist                         |
| operPulse  | operSPC      | pulse                           |
| status     | DPS          |                                 |
| origin     | originator_t | See <i>orCat_t</i> on page 1151 |

## INC (Controllable Integer)

This data class is an extension to the IEC 61131-3 standard. INC is a data structure with the following elements. When the RTAC detects a rising-edge change on trigger, it sends the ctlVal value.

**Table B.22 INC Attributes**

| <b>Attributes</b> | <b>Type</b>  | <b>Default Value Enumerations</b>            |
|-------------------|--------------|--|
| operINC           | operINC      |  |
| ctlVal            | DINT         | 0  |
| trigger           | BOOL         |  |
| q                 | quality_t    | See <i>q (quality_t) on page 1155</i>        |
| t                 | timeStamp_t  | See <i>t (timeStamp_t) on page 1155</i>      |
| status            | INS          | See <i>INS (Integer Status) on page 1147</i> |
| origin            | originator_t | See <i>orCat_t on page 1151</i>              |

## INS (Integer Status)

This data class is an extension to the IEC 61131-3 standard. INS is a data structure with the following elements.

**Table B.23 INS Attributes**

| <b>Attributes</b> | <b>Type</b>       | <b>Default Value Enumerations</b>       |
|-------------------|-------------------|---|
| stVal             | DINT              | 0                                       |
| range             | range_t           | normal, high, low, high_high, low_low   |
| q                 | quality_t         | See <i>q (quality_t) on page 1155</i>   |
| t                 | timeStamp_t       | See <i>t (timeStamp_t) on page 1155</i> |
| rangeC            | rangeConfigDint_t |   |
| hhLim             | DINT              | 1932735282                              |
| hLim              | DINT              | 1717986918                              |
| lLim              | DINT              | -1717986918                             |
| llLim             | DINT              | -1932735282                             |
| minVal            | DINT              | -2147483648                             |
| maxVal            | DINT              | 2147483647                              |

## IOC (Input/Output Control)

This data class is an extension to the IEC 61131-3 standard. IOC is a data structure with the following elements.

**Table B.24 IOC Attributes**

| <b>Attributes</b> | <b>Type</b>   | <b>Default Value Enumerations</b>       |
|-------------------|---------------|---|
| operSet           | operSPC       |   |
| ctlVal            | BOOL          | TRUE, FALSE                             |
| q                 | quality_t     | See <i>q (quality_t) on page 1155</i>   |
| t                 | timeStamp_t   | See <i>t (timeStamp_t) on page 1155</i> |
| pulseConfig       | pulseConfig_t |   |
| cmdQual           | CMDQUAL_T     | pulse, persistent                       |

| <b>Attributes</b> |             | <b>Type</b>   | <b>Default Value Enumerations</b>                 |
|-------------------|-------------|---------------|---|
| operClear         | onDur       | UDINT         | 1000 (ms)   |
|                   | offDur      | UDINT         | 1000 (ms)   |
|                   | numPls      | UDINT         | 1   |
|                   | operSPC     |               |   |
|                   | ctlVal      | BOOL          | TRUE, FALSE                                       |
|                   | q           | quality_t     | See <i>q (quality_t) on page 1155</i>             |
|                   | t           | timeStamp_t   | See <i>t (timeStamp_t) on page 1155</i>           |
|                   | pulseConfig | pulseConfig_t |   |
|                   | cmdQual     | CMDQUAL_T     | pulse, persistent                                 |
|                   | onDur       | UDINT         | 1000 (ms)   |
| operPulse         | offDur      | UDINT         | 1000 (ms)   |
|                   | numPls      | UDINT         | 1   |
|                   | operSPC     |               |   |
|                   | ctlVal      | BOOL          | TRUE, FALSE                                       |
|                   | q           | quality_t     | See <i>q (quality_t) on page 1155</i>             |
|                   | t           | timeStamp_t   | See <i>t (timeStamp_t) on page 1155</i>           |
|                   | pulseConfig | pulseConfig_t |   |
|                   | cmdQual     | cmdQual_t     | pulse, persist                                    |
|                   | onDur       | UDINT         | 1000 (ms)   |
|                   | offDur      | UDINT         | 1000 (ms)   |
| status            | numPls      | UDINT         | 1   |
|                   | SPS         |               | See <i>SPS (Single Point Status) on page 1153</i> |

## LBCR (Long Binary Counter Reading)

This data class is intended to model the BCR binary counter reading data class as defined in the IEC 61850-7-3 Ed. 2 standard.

**Table B.25 LBCR Attributes**

| <b>Attributes</b>                     | <b>Type</b> | <b>Default Value Enumerations</b>      |
|---------------------------------------|-------------|--|
| actVal                                | LINT        |  |
|                                       | frVal       | LINT                                   |
|                                       | frTm        | timeStamp_t                            |
|                                       | q           | quality_t                              |
|                                       | t           | timeStamp_t                            |
|                                       | frRs        | BOOL                                   |
|                                       |             | See <i>timeAccuracy_t on page 1156</i> |
| See <i>q (quality_t) on page 1155</i> |             |  |
|                                       |             | See <i>timeAccuracy_t on page 1156</i> |
| False                                 |             |  |

## LEDC (LED Indication Lamp Control)

This data class is an extension to the IEC 61131-3 standard. LEDC is a data structure with the following elements.

**Table B.26 LEDC Attributes**

| Attributes  | Type          | Default Value Enumerations                        |
|-------------|---------------|---|
| onColor     | ledColor_t    | off, red, green, amber                            |
| offColor    | ledColor_t    | off, red, green, amber                            |
| operSet     | operSPC       |   |
| ctlVal      | BOOL          | TRUE, FALSE                                       |
| q           | quality_t     | See <i>q (quality_t) on page 1155</i>             |
| t           | timeStamp_t   | See <i>t (timeStamp_t) on page 1155</i>           |
| pulseConfig | pulseConfig_t |   |
| cmdQual     | CMDQUAL_T     | pulse, persistent                                 |
| onDur       | UDINT         | 1000 (ms)   |
| offDur      | UDINT         | 1000 (ms)   |
| numPls      | UDINT         | 1   |
| operClear   | operSPC       |   |
| ctlVal      | BOOL          | TRUE, FALSE                                       |
| q           | quality_t     | See <i>q (quality_t) on page 1155</i>             |
| t           | timeStamp_t   | See <i>t (timeStamp_t) on page 1155</i>           |
| pulseConfig | pulseConfig_t |   |
| cmdQual     | cmdQual_t     | pulse, persistent                                 |
| onDur       | UDINT         | 1000 (ms)   |
| offDur      | UDINT         | 1000 (ms)   |
| numPls      | UDINT         | 1   |
| status      | SPS           | See <i>SPS (Single Point Status) on page 1153</i> |

## MDBC (Modbus Coil Control)

This data class is an extension to the IEC 61131-3 standard. MDBC is a data structure with the following elements.

**Table B.27 MDBC Attributes**

| Attributes  | Type          | Default Value Enumerations              |
|-------------|---------------|---|
| operSet     | operSPC       |   |
| ctlVal      | BOOL          | TRUE, FALSE                             |
| q           | quality_t     | See <i>q (quality_t) on page 1155</i>   |
| t           | timeStamp_t   | See <i>t (timeStamp_t) on page 1155</i> |
| pulseConfig | pulseConfig_t |   |
| cmdQual     | CMDQUAL_T     | pulse, persistent                       |

| <b>Attributes</b> |             | <b>Type</b>   | <b>Default Value Enumerations</b>                 |
|-------------------|-------------|---------------|---|
|                   | onDur       | UDINT         | 1000 (ms)   |
|                   | offDur      | UDINT         | 1000 (ms)   |
|                   | numPls      | UDINT         | 1   |
| origin            |             | originator_t  | See <i>orCat_t</i> on page 1151                   |
| operClear         |             | operSPC       |   |
|                   | ctlVal      | BOOL          | TRUE, FALSE                                       |
|                   | q           | quality_t     | See <i>q (quality_t)</i> on page 1155             |
|                   | t           | timeStamp_t   | See <i>t (timeStamp_t)</i> on page 1155           |
|                   | pulseConfig | pulseConfig_t |   |
|                   |             | cmdQual       | cmdQual_t   |
|                   |             | onDur         | UDINT   |
|                   |             | offDur        | UDINT   |
|                   |             | numPls        | UDINT   |
| origin            |             | originator_t  | See <i>orCat_t</i> on page 1151                   |
| status            |             | SPS           | See <i>SPS (Single Point Status)</i> on page 1153 |

## MRBC (MIRRORED BITS Control)

This data class is an extension to the IEC 61131-3 standard. MRBC is a data structure with the following elements.

**Table B.28 MRBC Attributes**

| <b>Attributes</b> |             | <b>Type</b>   | <b>Default Value Enumerations</b>       |
|-------------------|-------------|---------------|---|
| operSet           |             | operSPC       |   |
|                   | ctlVal      | BOOL          | TRUE, FALSE                             |
|                   | q           | quality_t     | See <i>q (quality_t)</i> on page 1155   |
|                   | t           | timeStamp_t   | See <i>t (timeStamp_t)</i> on page 1155 |
|                   | pulseConfig | pulseConfig_t |   |
|                   |             | cmdQual       | CMDQUAL_T                               |
|                   |             | onDur         | UDINT                                   |
|                   |             | offDur        | UDINT                                   |
|                   |             | numPls        | UDINT                                   |
| origin            |             | originator_t  | See <i>orCat_t</i> on page 1151         |
| operClear         |             | operSPC       |   |
|                   | ctlVal      | BOOL          | TRUE, FALSE                             |
|                   | q           | quality_t     | See <i>q (quality_t)</i> on page 1155   |
|                   | t           | timeStamp_t   | See <i>t (timeStamp_t)</i> on page 1155 |
|                   | pulseConfig | pulseConfig_t |   |
|                   |             | cmdQual       | cmdQual_t                               |

| <b>Attributes</b> |        | <b>Type</b>  | <b>Default Value Enumerations</b>                 |
|-------------------|--------|--------------|---|
|                   | onDur  | UDINT        | 1000 (ms)   |
|                   | offDur | UDINT        | 1000 (ms)   |
|                   | numPls | UDINT        | 1   |
| origin            |        | originator_t | See <i>orCat_t</i> on page 1151                   |
| status            |        | SPS          | See <i>SPS (Single Point Status)</i> on page 1153 |

## MV (Measured Value)

This data class is an extension to the IEC 61131-3 standard. MV is a data structure with the following elements.

**Table B.29 MV Attributes**

| <b>Attributes</b> |  | <b>Type</b>       | <b>Different Value Enumerations</b>     |
|-------------------|--|-------------------|---|
| instMag           |  | REAL              |   |
| mag               |  | REAL              |   |
| range             |  | range_t           | normal, high, low, high_high, low_low   |
| q                 |  | quality_t         | See <i>q (quality_t)</i> on page 1155   |
| t                 |  | timeStamp_t       | See <i>t (timeStamp_t)</i> on page 1155 |
| db                |  | REAL              | 0                                       |
| zeroDb            |  | REAL              | 0                                       |
| rangeC            |  | rangeConfigReal_t |   |
| hhLim             |  | REAL              | 1E+36                                   |
| hLim              |  | REAL              | 1E+35                                   |
| lLim              |  | REAL              | -1E+35                                  |
| llLim             |  | REAL              | -1E+36                                  |
| minVal            |  | REAL              | -1E+37                                  |
| maxVal            |  | REAL              | 1E+37                                   |

## orCat\_t

The attribute orCAT\_t is an enumerated attribute of originator\_t. The undefined\_origin value is not defined by the standard and is therefore interpreted as an initialized variable or variable with an unknown state. The enumerated values of this attribute are as follows:

- orcat\_UNDEFINED\_ORIGIN := -1,
- orcat\_NOT\_SUPPORTED := 0,
- orcat\_BAY\_CONTROL := 1,
- orcat\_STATION\_CONTROL := 2,
- orcat\_REMOTE\_CONTROL := 3,
- orcat\_AUTOMATIC\_BAY := 4,
- orcat\_AUTOMATIC\_STATION := 5,

- orcat\_automatic\_remote := 6,
- orcat\_maintenance := 7,
- orcat\_process := 8

## SPC (Controllable Single Point)

This data class is an extension to the IEC 61131-3 standard. SPC is a data structure with the following elements.

**Table B.30 SPC Attributes**

| Attributes  | Type          | Default Value Enumerations                        |  |
|-------------|---------------|---|--|
| operSet     | operSPC       |   |  |
| ctlVal      | BOOL          | TRUE, FALSE                                       |  |
| q           | quality_t     | See <i>q (quality_t) on page 1155</i>             |  |
| t           | timeStamp_t   | See <i>t (timeStamp_t) on page 1155</i>           |  |
| pulseConfig | pulseConfig_t |   |  |
| cmdQual     | cmdQual_t     | pulse, persistent                                 |  |
| onDur       | UDINT         | 1000 (ms)   |  |
| offDur      | UDINT         | 1000 (ms)   |  |
| numPls      | UDINT         | 1   |  |
| origin      | originator_t  | See <i>orCat_t on page 1151</i>                   |  |
| operClear   | operSPC       |   |  |
| ctlVal      | BOOL          | TRUE, FALSE                                       |  |
| q           | quality_t     | See <i>q (quality_t) on page 1155</i>             |  |
| t           | timeStamp_t   | See <i>t (timeStamp_t) on page 1155</i>           |  |
| pulseConfig | pulseConfig_t |   |  |
| cmdQual     | cmdQual_t     | pulse, persistent                                 |  |
| onDur       | UDINT         | 1000 (ms)   |  |
| offDur      | UDINT         | 1000 (ms)   |  |
| numPls      | UDINT         | 1   |  |
| origin      | originator_t  | See <i>orCat_t on page 1151</i>                   |  |
| status      | SPS           | See <i>SPS (Single Point Status) on page 1153</i> |  |

## SBRC (SEL Breaker Bit Control)

This data class is an extension to the IEC 61131-3 standard. SBRC is a data structure with the following elements.

**Table B.31 SBRC Attributes**

| Attributes | Type      | Default Value Enumerations            |  |
|------------|-----------|---------------------------------------|--|
| operTrip   | operSPC   |                                       |  |
| ctlVal     | BOOL      | TRUE, FALSE                           |  |
| q          | quality_t | See <i>q (quality_t) on page 1155</i> |  |

| <b>Attributes</b> |             | <b>Type</b>   | <b>Default Value Enumerations</b>       |
|-------------------|-------------|---------------|---|
| t                 |             | timeStamp_t   | See <i>t (timeStamp_t) on page 1155</i> |
| pulseConfig       |             | pulseConfig_t |   |
|                   | cmdQual     | cmdQual_t     | pulse, persistent                       |
|                   | onDur       | UDINT         | 1000 (ms)                               |
|                   | offDur      | UDINT         | 1000 (ms)                               |
|                   | numPls      | UDINT         | 1                                       |
| origin            |             | originator_t  | See <i>orCat_t on page 1151</i>         |
| operClose         |             | operSPC       |   |
|                   | ctlVal      | BOOL          | TRUE, FALSE                             |
|                   | q           | quality_t     | See <i>q (quality_t) on page 1155</i>   |
|                   | t           | timeStamp_t   | See <i>t (timeStamp_t) on page 1155</i> |
|                   | pulseConfig | pulseConfig_t |   |
|                   | cmdQual     | cmdQual_t     | pulse, persistent                       |
|                   | onDur       | UDINT         | 1000 (ms)                               |
|                   | offDur      | UDINT         | 1000 (ms)                               |
|                   | numPls      | UDINT         | 1                                       |
| origin            |             | originator_t  | See <i>orCat_t on page 1151</i>         |

## SPS (Single Point Status)

This data class is an extension to the IEC 61131-3 standard. SPS is a data structure with the following elements.

**Table B.32 SPS Attributes**

| <b>Attributes</b> | <b>Type</b> | <b>Default Value Enumerations</b>       |
|-------------------|-------------|---|
| stVal             | BOOL        | TRUE, FALSE                             |
| q                 | quality_t   | See <i>q (quality_t) on page 1155</i>   |
| t                 | timeStamp_t | See <i>t (timeStamp_t) on page 1155</i> |

## SRBC (SEL Remote Bit Control)

This data class is an extension to the IEC 61131-3 standard. SRBC is a data structure with the following elements.

**Table B.33 SRBC Attributes**

| <b>Attributes</b> | <b>Type</b> | <b>Default Value Enumerations</b>     |
|-------------------|-------------|---------------------------------------|
| operSet           | operSPC     |                                       |
| ctlVal            | BOOL        | TRUE, FALSE                           |
| q                 | quality_t   | See <i>q (quality_t) on page 1155</i> |

| <b>Attributes</b> |         | <b>Type</b>   | <b>Default Value Enumerations</b>       |
|-------------------|---------|---------------|---|
| t                 |         | timeStamp_t   | See <i>t (timeStamp_t) on page 1155</i> |
| pulseConfig       |         | pulseConfig_t |   |
|                   | cmdQual | cmdQual_t     | pulse, persistent                       |
|                   | onDur   | UDINT         | 1000 (ms)                               |
|                   | offDur  | UDINT         | 1000 (ms)                               |
|                   | numPls  | UDINT         | 1                                       |
| origin            |         | originator_t  | See <i>orCat_t on page 1151</i>         |
| operClear         |         | operSPC       |   |
|                   | ctlVal  | BOOL          | TRUE, FALSE                             |
|                   | q       | quality_t     | See <i>q (quality_t) on page 1155</i>   |
|                   | t       | timeStamp_t   | See <i>t (timeStamp_t) on page 1155</i> |
| pulseConfig       |         | pulseConfig_t |   |
|                   | cmdQual | cmdQual_t     | pulse, persistent                       |
|                   | onDur   | UDINT         | 1000 (ms)                               |
|                   | offDur  | UDINT         | 1000 (ms)                               |
|                   | numPls  | UDINT         | 1                                       |
| origin            |         | originator_t  | See <i>orCat_t on page 1151</i>         |
| operPulse         |         | operSPC       |   |
|                   | ctlVal  | BOOL          | TRUE, FALSE                             |
|                   | q       | quality_t     | See <i>q (quality_t) on page 1155</i>   |
|                   | t       | timeStamp_t   | See <i>t (timeStamp_t) on page 1155</i> |
| pulseConfig       |         | pulseConfig_t |   |
|                   | cmdQual | cmdQual_t     | pulse, persistent                       |
|                   | onDur   | UDINT         | 1000 (ms)                               |
|                   | offDur  | UDINT         | 1000 (ms)                               |
|                   | numPls  | UDINT         | 1                                       |
| origin            |         | originator_t  | See <i>orCat_t on page 1151</i>         |

## STR (String)

This data class is an extension to the IEC 61131-3 standard. STR is a data structure with the following elements.

**Table B.34 STR Attributes**

| <b>Attributes</b> | <b>Type</b> | <b>Default Value Enumerations</b>      |
|-------------------|-------------|--|
| strVal            | STRING(255) |  |
| q                 | quality_t   | See <i>q (quality_t) on page 1155</i>  |
| t                 | timeStamp_t | See <i>timeAccuracy_t on page 1156</i> |

## TIM (Time)

This data class is an extension to the IEC 61131-3 standard. TIM is a data structure with the following elements.

**Table B.35 TIM Attributes**

| Attributes | Type        | Default Value Enumerations             |
|------------|-------------|--|
| timeVal    | TIME        |  |
| q          | quality_t   | See <i>q (quality_t) on page 1155</i>  |
| t          | timeStamp_t | See <i>timeAccuracy_t on page 1156</i> |

## Data Attributes

Some data attributes such as quality (q) and time (t) have their own data type, specified with an underscore and lowercase "t" (\_t). The attributes listed in the following tables provide greater specification about each tag value.

### q (quality\_t)

**Table B.36 quality\_t Attributes**

| Attributes      | Type         | Default Value Enumerations            |
|-----------------|--------------|---------------------------------------|
| q               | quality_t    |                                       |
| validity        | validity_t   | good, invalid, reserved, questionable |
| detailQual      | detailQual_t |                                       |
| overflow        | BOOL         | TRUE, FALSE                           |
| outOfRange      | BOOL         | TRUE, FALSE                           |
| badReference    | BOOL         | TRUE, FALSE                           |
| oscillatory     | BOOL         | TRUE, FALSE                           |
| failure         | BOOL         | TRUE, FALSE                           |
| oldData         | BOOL         | TRUE, FALSE                           |
| inconsistent    | BOOL         | TRUE, FALSE                           |
| inaccurate      | BOOL         | TRUE, FALSE                           |
| source          | source_t     | process, substituted                  |
| test            | BOOL         | TRUE, FALSE                           |
| operatorBlocked | BOOL         | TRUE, FALSE                           |

### t (timeStamp\_t)

**Table B.37 timeStamp\_t Attributes**

| Attributes | Type        | Default Value Enumerations |
|------------|-------------|----------------------------|
| t          | timeStamp_t |                            |
| value      | dateTime_t  |                            |

| Attributes            | Type           | Default Value  | Enumerations |
|-----------------------|----------------|--|--------------|
| dateTime              | DT             | 1970-1-1-0:0:0   |              |
| uSec                  | UDINT          | 0  |              |
| quality               | timeQuality_t  |  |              |
| leapSecondsKnown      | BOOL           | TRUE, FALSE  |              |
| clockFailure          | BOOL           | TRUE, FALSE  |              |
| clockNotSynchronized  | BOOL           | TRUE, FALSE  |              |
| accuracy              | timeAccuracy_t | unspecified<br>(See <i>timeAccuracy_t</i> on page 1156)          |              |
| daylight_savings_time | DST_t          |  |              |
| enabled               | BOOL           | TRUE, FALSE  |              |
| activated             | BOOL           | TRUE, FALSE  |              |
| offset                | DINT           | 0  |              |
| UTC_Offset            | INT            | 0  |              |
| source                | timeSource     |  |              |
| value                 | timeSource_t   | Null, IRIG_B, NTP, DNP, Free_Running,<br>IED_Protocol, i870, PTP |              |
| priority              | USINT          | 0  |              |


## timeAccuracy\_t

This data class is an extension to the IEC 61131-3 standard. The attribute *timeAccuracy\_t* is an enumerated attribute of many data custom data classes. The enumerated values of this attribute are as follows:

- T0 := 7 (10 ms)
- T1 := 10 (1 ms)
- T2 := 14 (0.1 ms)
- T3 := 16 (0.025 ms)
- T4 := 18 (0.004 ms)
- T5 := 20 (0.001 ms)
- unspecified := 31

## Create Custom Data Type Structures and Enumerations

Select **Insert > User Logic > Data Type** to create your own data type structure or enumeration.

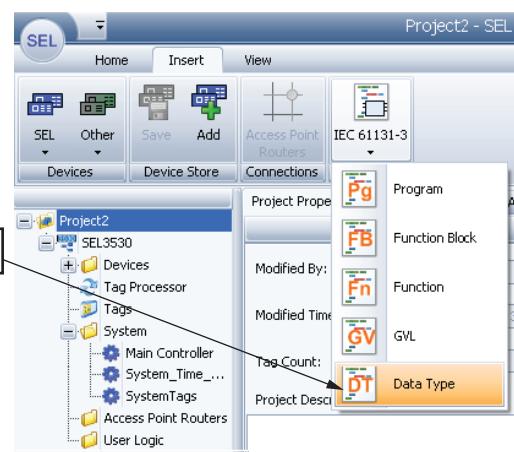

**Figure B.107 Data Type Editor**

## Structures

From the **Insert** ribbon, select the IEC 61131-3 icon to create structures as Data Type Unit (DUT) objects.

Structures begin with the keywords **TYPE** and **STRUCT** and end with **END\_STRUCT** and **END\_TYPE**.

The syntax for structure declarations is as follows:

```

TYPE <structurename>:
  STRUCT
    <declaration of variables 1>
    .
    .
    .
    <declaration of variables n>
  END_STRUCT
END_TYPE

```

<structurename> is a type that ACSELERATOR RTAC recognizes throughout the project. You can use this type similarly to a standard data type.

ACSELERATOR RTAC allows interlocking structures, but variables cannot be assigned to addresses (ACSELERATOR RTAC does not allow the AT declaration).

Example for a structure definition named polygonline:

```

TYPE Polygonline:
  STRUCT
    Start : ARRAY [1..2] OF INT;
    Point1 : ARRAY [1..2] OF INT;
    Point2 : ARRAY [1..2] OF INT;

```

```
Point3 : ARRAY [1..2] OF INT;  
Point4 : ARRAY [1..2] OF INT;  
End : ARRAY [1..2] OF INT;  
END_STRUCT  
END_TYPE
```

## Initialization of Structures

Example for the initialization of a structure:

```
Poly_1 : polygonline := (Start := 3,3, Point1 := 5,2, Point2 := 7,3, Point3 :=  
8,5, Point4 := 5,7, End := 3,5);
```

Initializations with variables are not possible. See an example of the initialization of an array of a structure under Arrays.

## Access on Structure Components

Use the following syntax to gain access to structure components:

```
<Structure_Name>.<Componentname>
```

For the above mentioned example of the structure polygonline, you can access the component start by Poly\_1.Start.

## Enumerations

An enumeration is a user-defined data type that consists of a number of string constants. We refer to these constants as enumeration values.

Enumeration values are recognized globally in all areas of the project, even if the values were declared within a POU.

From the **Insert** ribbon, select the IEC 61131-3 icon to create an enumeration as a DUT object.

Syntax:

```
TYPE <Identifier> : (<Enum_0>, <Enum_1>, ..., <Enum_n>) |<base data  
type>;  
END_TYPE
```

A variable of type <Identifier> can take on one of the enumeration values <Enum\_...> and will be initialized with the first enumeration value. These values are compatible with whole numbers, so you can perform operations with these values just as you would do with integer variables. You can assign a number  $x$  to the variable. If the enumeration values are not initialized with specific values within the declaration, counting will begin with 0. When initializing, ensure that the initial values increase within the row of components. The validity of the number will be checked at the time it runs.

Example:

```
TYPE TRAFFIC_SIGNAL : (red, yellow, green := 10); (* The initial value  
for each of the colors is red 0, yellow 1, green 10 *)
```

```

END_TYPE

TRAFFIC_SIGNAL1 : TRAFFIC_SIGNAL;
TRAFFIC_SIGNAL1 := 0; (* The value of the traffic signal is red *)

FOR i := red TO green DO
    i := i + 1;
END_FOR;

```

Extensions to the IEC 61131-3 standard:

1. You can use the type name of enumerations to disambiguate access to an enumeration constant.

It becomes possible, then, to use the same constant in different enumerations.

Example:

Definition of two enumerations:

```

TYPE COLORS_1 : (red, blue);
END_TYPE
TYPE COLORS_2 : (green, blue, yellow);
END_TYPE

```

Use of enumeration value blue in a POU:

Declaration:

```

colorvar1 : COLORS_1;
colorvar2 : COLORS_2;

```

Implementation:

```

(* possible: *)
    colorvar1 := colors_1.blue;
    colorvar2 := colors_2.blue;
(* not possible: *)
    colorvar1 := blue;
    colorvar2 := blue;

```

2. The base data type of the enumeration, which per default is INT, can be specified explicitly.

Example:

The base data type for enumeration BigEnum should be DINT:

```

TYPE BigEnum : (yellow, blue, green := 16#8000) DINT;
END_TYPE

```

## Arrays

ACSELERATOR RTAC supports one-, two-, and three-dimensional fields (arrays) as elementary data types. You can define arrays both in the declaration part of a POU and in the GVLs.

Syntax:

```
<Field_Name> : ARRAY [<ll1>...<ul1>,<ll2>...<ul2>] OF <elem. Type>
```

ll1, ll2, ll3 identify the lower limit of the field range; ul1, ul2, and ul3 identify the upper limit. The range values must be integers.

Example:

```
Card_game : ARRAY [1..13, 1..4] OF INT;
```

## Initializing Arrays

Example for complete initialization of an array:

```
arr1 : ARRAY [1..5] OF INT := [1, 2, 3, 4, 5];  
arr2 : ARRAY [1..2, 3..4] OF INT := [1, 3(7)]; (* short for 1, 7, 7, 7 *)  
arr3 : ARRAY [1..2, 2..3, 3..4] OF INT := [2(0), 4(4), 2, 3];  
(* short for 0, 0, 4, 4, 4, 4, 2, 3 *)
```

Example of the initialization of an array of a structure:

Structure definition:

```
TYPE STRUCT1  
STRUCT  
    p1 : int;  
    p2 : int;  
    p3 : dword;  
END_STRUCT  
END_TYPE
```

## Array Initialization

```
ARRAY[1..3] OF STRUCT1 := [(p1 := 1, p2 := 10, p3 := 4723), (p1 := 2,  
p2 := 0, p3 := 299), (p1 := 14, p2 := 5, p3 := 112)];
```

Example of the partial initialization of an Array:

```
arr1 : ARRAY [1..10] OF INT := [1,2];
```

If you do not initialize the array elements explicitly, they will be initialized with the default value of the basic data type. In the previous example above, the software therefore initializes the elements arr1[6] through arr1[10] to a value of 0.

## Accessing Array Components

Use the following syntax to access array components in a two-dimensional array:

```
<Field_Name>[Index1,Index2]
```

Example:

```
Card_game [9,2]
```

---

---

## A P P E N D I X    C

---

# Firmware Upgrade Instructions

## Overview

---

These instructions guide you through the process of upgrading firmware in the device. The firmware upgrade will be either a standard release or a point release. A standard release adds new functionality to the firmware beyond the specifications of the existing version. A point release is reserved for modifying firmware functionality to conform to the specifications of the existing version.

A standard release is identified by a change in the R-number of the device firmware identification (FID) string.

Existing firmware: SEL-2241-**R100-V0**

Standard release firmware: SEL-2241-**R101-V0**

A point release is identified by a change in the V-number of the device FID string.

Existing firmware: SEL-2241-R100-**V0**

Point release firmware: SEL-2241-R100-**V1**

The instructions that follow explain how to read settings, upgrade the firmware, and restore the settings. These instructions also apply to updating the licensed options of an RTAC. Licensed options define capabilities of a particular RTAC and enable optional firmware applications, such as specific protocols (IEC 61850, Ethernet/IP, etc.), library extensions (FileIo, Dynamic Disturbance Recorder, etc.), and the web-based RTAC HMI. RTAC hardware running firmware version R153-V0 or later has the capability to accept temporary licensed features, allowing for free demonstration periods of licensed libraries and protocols for as many as 90 days.

All firmware versions support using a local user account on the RTAC to perform a firmware upgrade. In firmware versions R152 and later, you can also use a remotely managed user account controlled by LDAP or RADIUS to perform a firmware upgrade.

### NOTE

Note that legacy RTAC hardware models (SEL-2241, SEL-3505, SEL-3505-3, SEL-3530, and SEL-3530-4) with a present firmware version of R136 or earlier may require upgrades to intermediate firmware revisions when upgrading to firmware version R150 or later. For example, any RTAC models that are updated to R154 or later should first be updated to a version of at least R144-V2. Contact SEL technical support for additional details.

### NOTE

When updating original SEL-3555-1 hardware to firmware version R154 or later, you must also select a BIOS boot option that supports UEFI (i.e., UEFI Only; Legacy, then UEFI; or UEFI, then Legacy).

## Settings Read

---

A firmware upgrade clears some existing RTAC settings. This includes the present project, Sequence of Events logs, event collection, content in file manager, and RAID configurations. Specific settings that are preserved during a firmware upgrade include the following:

- ▶ User Accounts and Roles
- ▶ Ethernet Interface Settings
- ▶ Hosts
- ▶ LDAP Settings
- ▶ RADIUS Settings
- ▶ SSH Authorized Keys and Host Keys
- ▶ Web Site Dashboard Settings
- ▶ X509 Certificates
- ▶ CA Certificates
- ▶ URL Whitelist Settings
- ▶ Web Proxies
- ▶ Syslog Settings

The local account of the user performing the upgrade is also preserved. Note that not all firmware update paths (e.g., downgrades) will successfully restore all settings.

Use the following steps to read the settings before the upgrade so that you can restore them after the upgrade. A licensed options upgrade does not overwrite existing RTAC settings, so you do not have to perform this step if you are only updating the licensed options.


- Step 1. Ensure that your PC is connected to the RTAC through Ethernet or, where applicable (with an SEL-3530, SEL-3505, or SEL-2241 model), a USB connection.
- Step 2. Click the read icon to read the existing settings from the RTAC.



- Step 3. Set **RTAC Address** to either of the following:


- ▶ the fixed IP address of 172.29.131.1 if using the front USB-B port (SEL-3530, SEL-3505, and SEL-2241 only)  
or
- ▶ the IP address of the RTAC Ethernet port to which you are attached.

Step 4. Enter the local account login information for the RTAC and click **Login**.

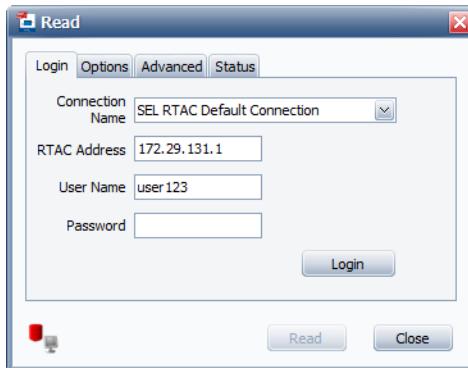

Step 5. After the status indicates connected, do the following:

- Select the **Advanced** tab.
- Click the check boxes for items you want to restore later.
- Click **Read**.

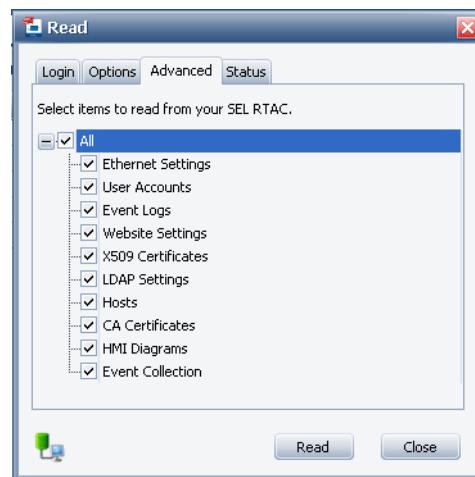


This reads the existing project from the RTAC along with all Ethernet, certificate, usernames and other RTAC settings. The downloaded settings are stored in a new project. If the project name already exists in the ACSELERATOR RTAC database, it will be stored under a new project name with a 0, 1, etc. appended to indicate the instance of that project name. You can now upgrade the firmware.

## **ACSELERATOR RTAC Upgrade Procedure**

---

Step 1. With ACSELERATOR RTAC SEL-5033 Software closed, run the new setup.exe to install the updated RTAC software. You can download the latest setup.exe file from the SEL website, or use Compass to update your software.

Step 2. Open the RTAC software and click the **SEL Application** button, then **Options** to access the update function.

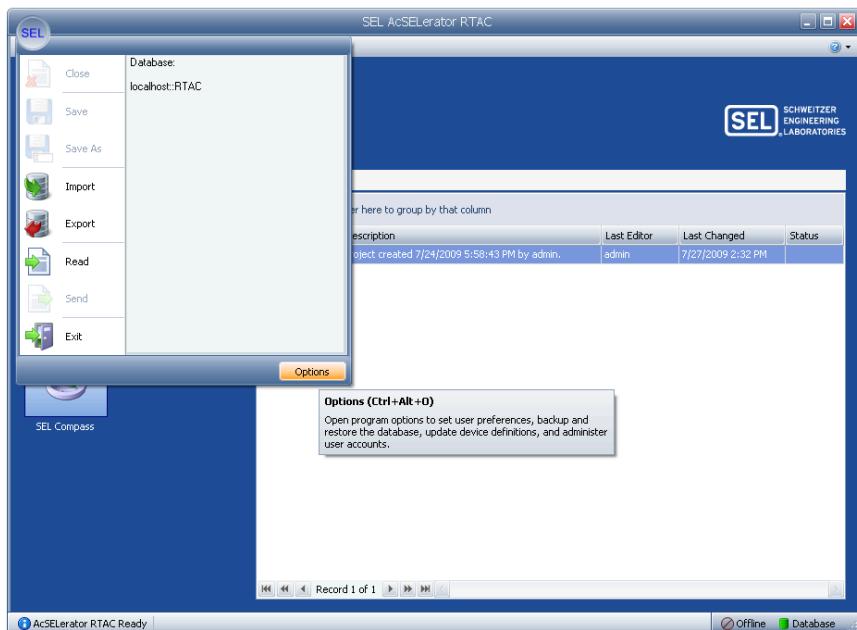


### NOTE

The update function will not start if the RTAC is not connected to the computer with a communications cable or the RTAC is not powered.


### NOTE

Do not perform a firmware upgrade while the factory reset jumper is set.

Step 3. Begin the update process by clicking **RTAC Firmware Update**.

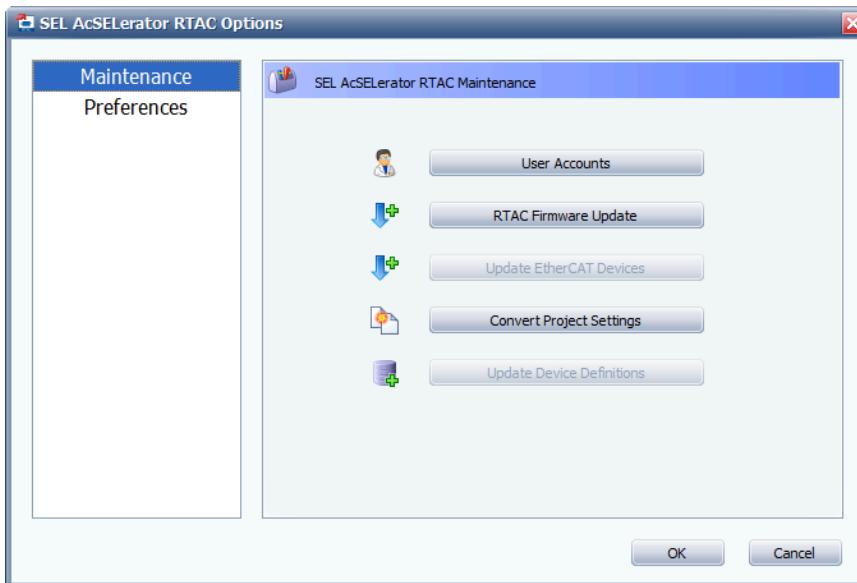

Step 4. Enter local account **User Name** and **Password** and click **Login**.

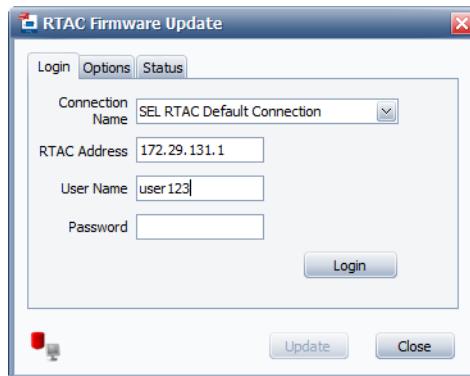


Step 5. Begin browsing for the package file by clicking **Select Firmware**.



Step 6. Browse to the directory you want, click on the package (.upg or .zip) file to be loaded, and then click **Open**. Use the .upg file for a firmware upgrade and the .zip file for an MOT upgrade.

#### NOTE


Although SEL-3530 firmware is shown here as an example, ensure you select the correct firmware package for the product you are upgrading.

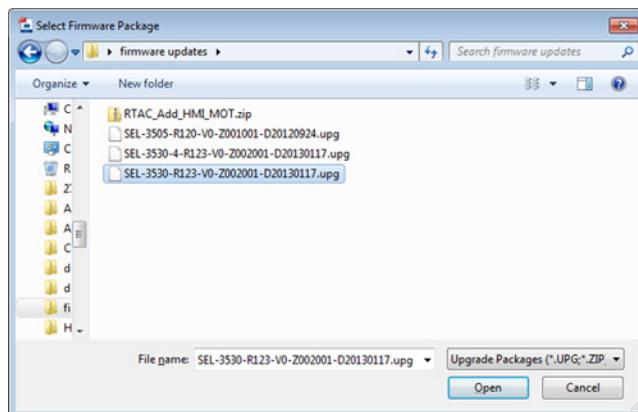

Step 7. Click **Update** to begin the loading process.

**! CAUTION**

Do not disconnect or remove and restore RTAC power during the firmware upgrade process.

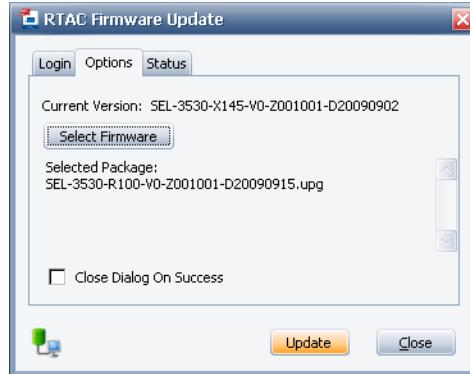

The software goes through several stages. The first stage drives the RTAC into SELBOOT mode, the **ENABLED** LED extinguishes, and the **ALARM** LED illuminates.



The second stage transfers the firmware package file to the RTAC.



Once the package file has been transferred, several more stages prepare the RTAC to use the new firmware or MOT (or part number). The RTAC then reboots, the **ENABLED** LED illuminates, and the **ALARM** LED extinguishes.




Step 8. Finish the update process by clicking **Close**.




Step 9. Verify RTAC operation by first using **https** to access the RTAC homepage. In your web browser, enter the address **https://** followed by:

- **172.29.131.1** if using the front USB-B port (SEL-3530, SEL-3505, and SEL-2241 only)  
or
- the IP address of the RTAC Ethernet port to which you are joined.

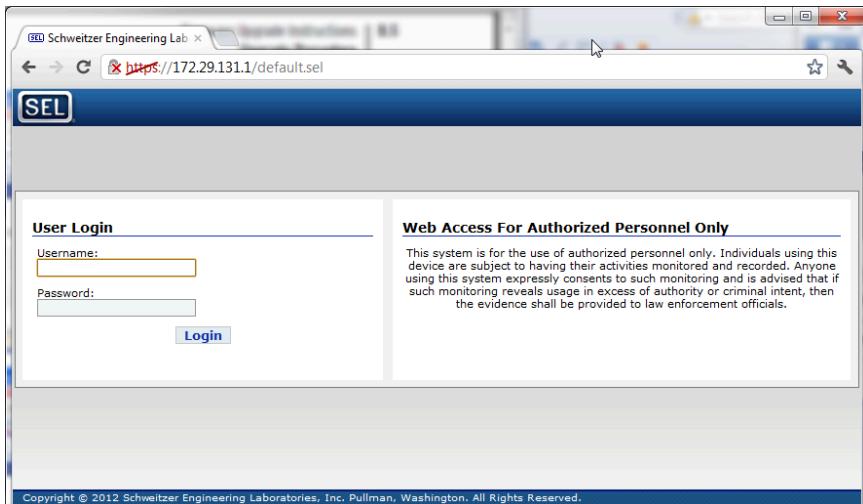

Step 10. Enter your local account username and password.

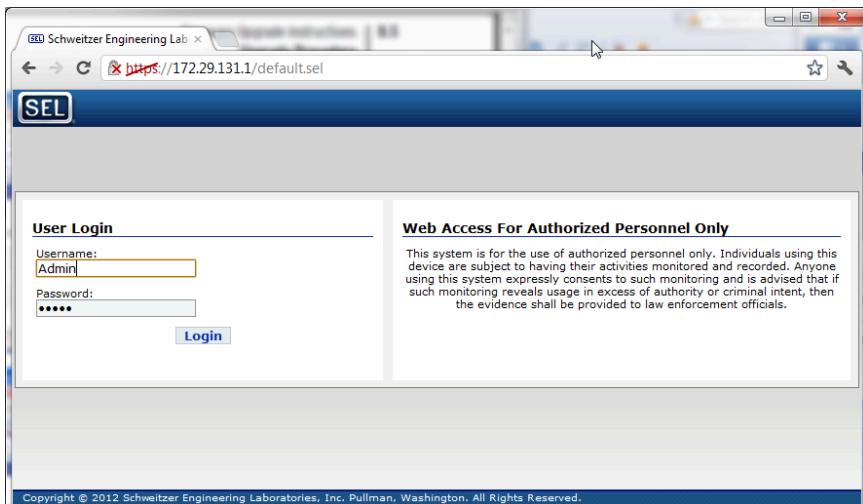

Step 11. Verify the **Firmware Version** and **Part Number** on the RTAC Dashboard page.

## RTAC Web Upgrade Procedure

Step 1. Navigate to the RTAC web interface and log in to the RTAC with administrator-level credentials.




Step 2. Navigate to the **Device Management** tab.

Step 3. In the **Firmware Upgrade** section, click **Choose File** and browse to the directory you want, click on the package (.upg or .zip) file to be uploaded, and click **Open**.

Step 4. After selecting the correct file, click **Upload** and wait for confirmation that the file has been successfully uploaded.

Step 5. When the file is uploaded, a firmware confirmation appears in yellow. Click **OK**.

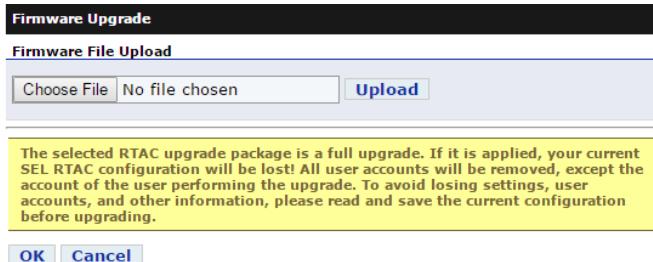

Step 6. Firmware upgrade commences. After completion, you will see the login screen for the web browser. The firmware upgrade is complete at this stage.

## Analog Module Upgrade Procedure

---

From time to time, SEL issues firmware upgrades for the SEL-2245 analog modules. The instructions that follow explain how to upgrade the firmware. The RTAC project contains the device settings. No additional steps are necessary to back up or restore settings. You must use a local user account on the RTAC and not log using LDAP when you perform the firmware upgrade.


### NOTE

Downgrading analog module firmware is supported in RTAC firmware R125 and higher.


**1170 Firmware Upgrade Instructions**  
**Analog Module Upgrade Procedure**

Step 1. Open an existing ACSELERATOR RTAC project or create a new one.  
If you are creating a new project, you will have to configure the EtherCAT Network properly first by adding all modules.

Step 2. Select **Go Online** and wait for the project to deploy.

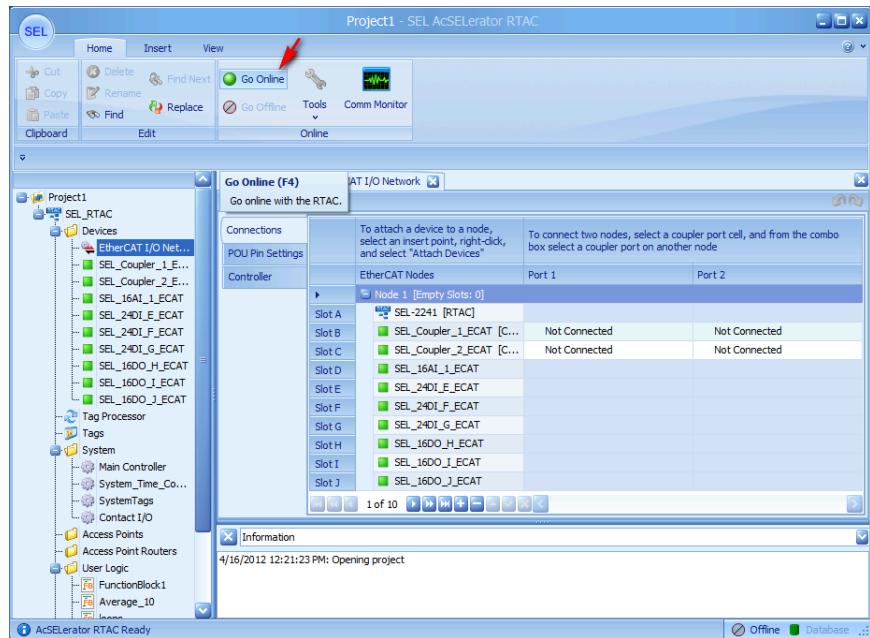


Step 3. Select the **SEL Application** button and then **Options** to access the update function.

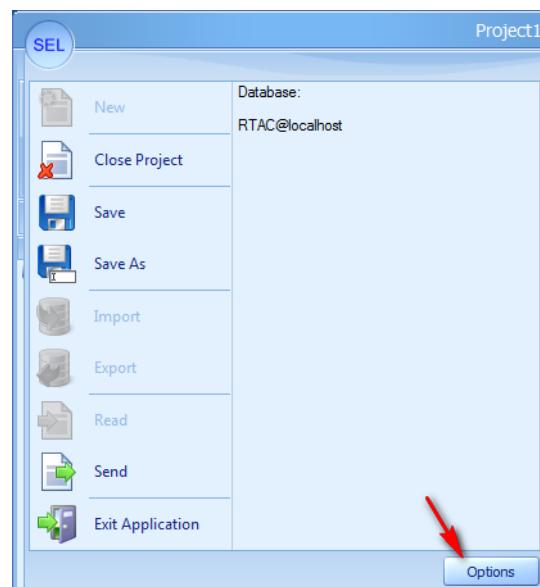


Step 4. Begin the update process by selecting **Update EtherCAT Devices**.

Step 5. Click the **Open File** button to the right of the module being upgraded.

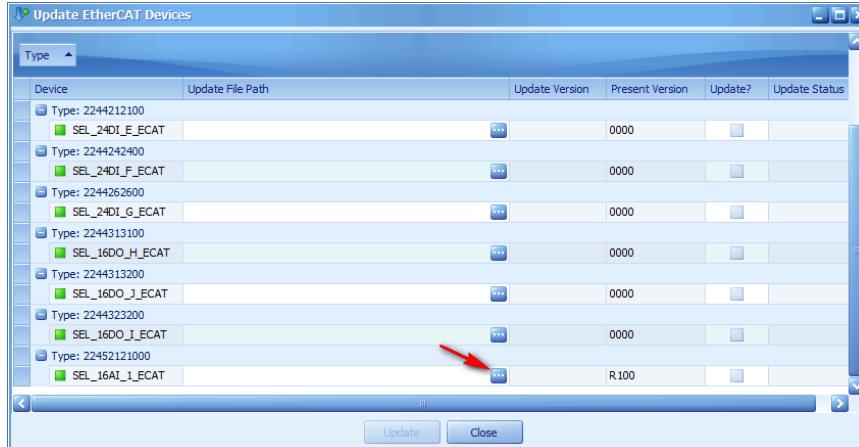

Step 6. Browse to the location of the upgrade file. Select it and click **Open**.

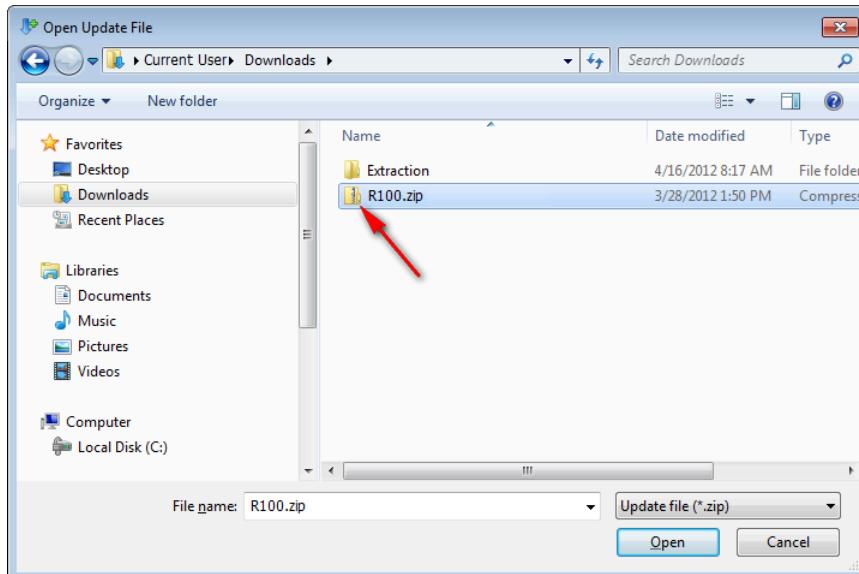

Step 7. Select **Update**.

#### NOTE

Disabling the system is necessary to update module firmware.  
Ensure the system is in a safe state prior to upgrading.


Step 8. Wait while the upgrade completes. The green **ENABLED** LED will blink slowly and the **ALARM** LED will illuminate while the update is in progress.

Step 9. After the update finishes, a green check mark will appear in the Update Status column and the **ENABLED** LED will illuminate. Close the **Update EtherCAT Devices** window and click **OK** on the Options window to return to your project.

# Settings Restore

After completing the firmware upgrade, you can restore your RTAC to its previous configured settings. *Do not perform this step if you only performed an MOT update.*

- Step 1. Click SEL Application > Options > Convert Project Settings to convert the project settings for compatibility with the newly updated firmware.
- Step 2. The software lists all projects that were created with previous software versions. For each project you want to convert, change the **Convert?** field from **No** to **Yes**.

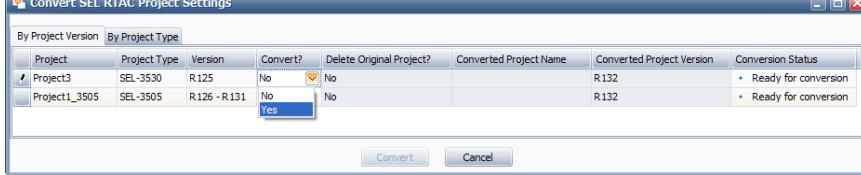


- Step 3. Click the **Convert** button. This takes several minutes because the software makes a copy of each selected project, converts the settings for compatibility with the new firmware, and saves the new project settings.

## NOTE


You can also convert a project to work on a different RTAC model by clicking the **By Project Type** tab.

- Step 4. Open the project you read from the RTAC in *Settings Read on page 1162*. You can do this from the RTAC start page by double-clicking on the project name.

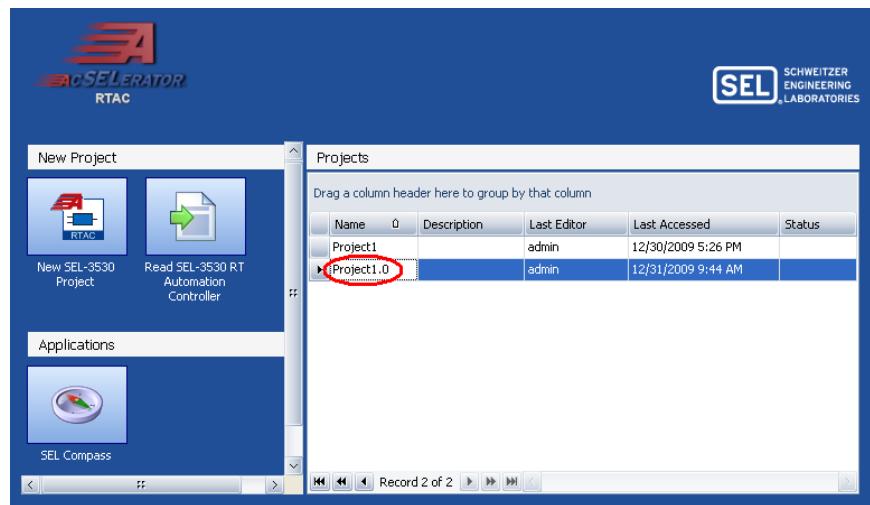


- Step 5. Click the send icon to send the project to the RTAC.

Step 6. Enter the local account login information for the RTAC and click **Login**.

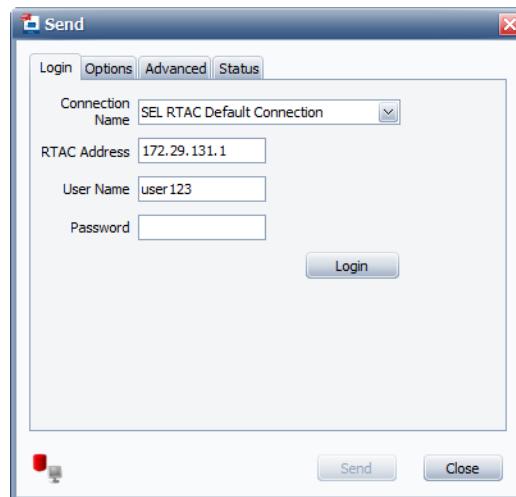

Step 7. After the status indicates connected, do the following:

- Select the **Advanced** tab.
- Click the **All** check box.
- Click **Send**.

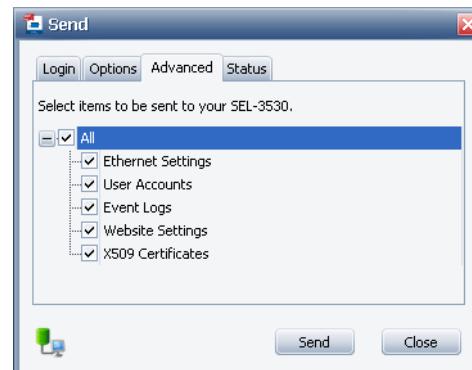

The previous project and settings are restored to the RTAC.

If a RAID configuration existed prior to firmware upgrade, reconfigure RAID following the below steps:

- Remove all RAID disks.
- Reboot the RTAC and wait for the **ENABLED** LED to illuminate.
- Replace the RAID disks.

Follow the setting and initialization steps provided in *RAID Support and Configuration on page 651* for configuration specifics.

## **Technical Support**

---

We appreciate your interest in SEL products and services. If you have questions or comments, please contact us at:

Schweitzer Engineering Laboratories, Inc.  
2350 NE Hopkins Court  
Pullman, WA 99163-5603 U.S.A.  
Tel: +1.509.338.3838  
Fax: +1.509.332.7990  
Internet: [selinc.com/support](http://selinc.com/support)  
Email: [info@selinc.com](mailto:info@selinc.com)

---

---

## A P P E N D I X    D

---

# Configure Dynamic Disturbance and Fault Recording Systems

## Overview

---

The SEL-3555/SEL-3560, SEL-3350, and SEL-2241-2 RTAC variants with SEL-2240 Axion® modules are designed to implement powerful recording solutions that exceed all the requirements of NERC Standard PRC-002 - *Disturbance Monitoring and Reporting Requirements*. The current draft standard of PRC-002 requires a minimum of 10 days of storage for the following data:

- ▶ Event reports (with a minimum resolution of 16 samples per cycle)
- ▶ Dynamic Disturbance Recording (DDR) records (with a minimum resolution of 30 samples per second)
- ▶ Digital values (with a time-stamp accuracy within 4 ms)

The SEL-3555 and SEL-3350 RTAC variants with larger solid-state drives (SSDs) have more than enough storage to accommodate the higher-resolution measurements from SEL Axion modules for this 10-day period. SEL Axion modules are capable of recording at 24 kHz for event reports, continuously recording 3 kHz sample data and measured quantities as high as 120 samples per second, and providing an SOE accuracy of 1 ms. This section provides a high-level outline of the configuration steps required for creating Dynamic Disturbance and Fault Recording systems with the SEL-3555, SEL-3350, and SEL-2241-2 RTAC variants and SEL Axion I/O modules. In RTAC firmware versions R152 and later, the Digital Fault Recorder extension greatly simplifies configuration of Dynamic Disturbance and Fault Recording systems.

Dynamic Disturbance and Fault Recording systems are intended for applications using an SEL-3555 or SEL-3350 RTAC. Continuous Recording Groups, available in firmware versions R152 and later, are only supported on the SEL-3555/SEL-3560 and SEL-3350 RTACs. Due to limited onboard storage, the SEL-2241-2 RTAC is best suited for streaming its phasor measurement quantities to PDCs such as SEL-5703 Synchrowave® Monitoring or other PDC software where data can be stored long-term.

Recording Group configuration is supported on all RTAC platforms that support EtherCAT, but less storage and lower processing power limits how many modules can be included in recording. *Table D.1* shows expected performance from the time triggered event records are generated on the Axion modules to the time the Recording Group event record is available in the RTAC event collection database. Understanding this time is important when downloading or transferring events from the RTAC database is time-sensitive. Additionally, RTAC libraries such as File I/O and FaultLocation begin processing these COMTRADE records once they are stored in the RTAC's event collection database.

**NOTE**

Recording Groups configured at 24 kHz for 24 seconds on the legacy RTACs (SEL-2241, SEL-3530, and SEL-3530-4) with more than two SEL-2245-42 modules will time out before they are complete. An SEL-3555/SEL-3560, SEL-3350, or SEL-2241-2 RTAC should be used for any systems with more than two modules recording at 24 kHz for 24 seconds.

**NOTE**

The configured RTAC task interval will significantly affect how long recording groups take to combine events. Table D.1 has a configured RTAC task interval of 20 ms.

**Table D.1 Recording Group Event Grouping Times**

| <b>Number of SEL-2245-42 Modules</b>                     | <b>Sample Rate (kHz)</b> | <b>Length of Event (seconds)</b> | <b>Time to Store in Event Collection Database (minutes)</b> |
|--|--------------------------|----------------------------------|---|
| <b>SEL-3555 RTAC</b>                                     |                          |                                  |   |
| 16   | 24                       | 24                               | 11  |
| 16   | 1                        | 576                              | 11  |
| 16   | 24                       | 4                                | 2   |
| 16   | 8                        | 4                                | 1   |
| <b>SEL-2241-2, SEL-3350 RTAC</b>                         |                          |                                  |   |
| 1  | 24                       | 24                               | 1   |
| 4  | 24                       | 24                               | 1.5   |
| 4  | 1                        | 120                              | 2   |
| 16   | 24                       | 24                               | 13  |
| 16   | 1                        | 576                              | 13  |
| 16   | 24                       | 4                                | 2.5   |
| 16   | 8                        | 4                                | 1   |
| <b>Legacy RTACs (SEL-2241, SEL-3530, and SEL-3530-4)</b> |                          |                                  |   |
| 1  | 24                       | 24                               | 21  |
| 4  | 24                       | 5                                | 17  |
| 4  | 1                        | 120                              | 11  |

## **System Components**

- ▶ SEL-3555/SEL-3560 or SEL-3350 RTAC (with the Continuous Recorder licensed option)
- ▶ SEL-2242 Backplane(s)
- ▶ SEL-2243 Power Coupler(s)
- ▶ SEL-2244-2 Digital Input Module(s)
- ▶ SEL-2244-3 Digital Output Module(s) (Optional)

- SEL-2244-5 Fast High-Current Digital Output Module(s) (Optional)
- SEL-2245-42 AC Protection Module(s)



**Figure D.1 Dynamic Disturbance and Fault Recording System Components**

## RTAC and Axion Configuration

Starting with a new SEL-3555/SEL-3560, SEL-3350, or SEL-2241-2 RTAC project, add the SEL Axion components you have selected for your PRC-002 recording solution. Refer to the SEL-3555 RTAC instruction manual, SEL-2240 Axion instruction manual, and *EtherCAT* on page 196 for more details on the individual configuration options of the RTAC and Axion components.

The Digital Fault Recorder ACCELERATOR RTAC extension available in RTAC firmware versions R152 and later simplifies the configuration required when building Dynamic Disturbance and Fault Recording systems. The extension automatically adds recording devices, configures trigger logic, builds continuous recording records, configures data streaming, and generates SOE records based on settings for substation assets. For more information, see *Digital Fault Recorder* on page 786.

## Configure a Recording Group

Refer to *EtherCAT on page 196* for details on configuring single or multiple recording groups. Recording Group configuration is essential to consolidate multiple event reports if you have more than one SEL-2245-42 AC Protection module in your Axion and include inputs from the SEL-2244-2 Digital Input modules in the same COMTRADE file. This simplifies fault analysis so that all information pertaining to a fault is in the same file. Additionally, custom digital and analog tags and channel calculations can be mapped from the RTAC to include in the resulting COMTRADE file if desired. Recording Group settings override the individual SEL-2245-42 AC Protection module oscillography settings so that all oscillography data in the recording group is recorded at the same rate. Be sure to enable SOE tags on the SEL-2244 Digital Input modules so that state changes that occur faster than the RTAC processing interval will be recorded. After you configure a recording group, assert Recording-GroupX.Event\_Trigger to control the individual event report triggers of all SEL-2245-42 AC Protection modules included in the recording group.

## Configure Event Triggers for Recording Groups

Event\_Trigger for each recording group is a binary trigger that begins the recording of a new COMTRADE event report. As this is simply a binary trigger, you must configure the logic to determine when an event report should be recorded. Common inputs that determine when recording is needed are breaker operation (digital input), overcurrent, over- or undervoltage, or other abnormal conditions. Download the Recording Triggers Extension from the SEL website for basic pre-built protection elements to detect these abnormal conditions. The Recording Triggers Extension includes instructions to configure each protection element for proper use. Add as many Recording Triggers as necessary in the Extension to configure triggers for each Recording Group.

## Configure Dynamic Disturbance Records

The optional DDR extension allows you to record time-aligned synchrophasor data from SEL-2245-42 AC Protection modules on the RTAC's SSD drive for DDR archiving. Any of the analog tags of the SEL-2245-42 AC Protection modules can be recorded using the DDR library, but the synchrophasor tags are best suited because they are precisely time-aligned values at up to 60 messages per second. Refer to the instructions included in the DDR extension for more details on how to configure DDR recording.

## Configure Dynamic Disturbance Recording With Continuous Recording Groups

Continuous Recording Groups provides the ability to continuously record the following data to a COMTRADE formatted record:

- ▶ SEL-2245-42 AC Protection module 3 kHz sample data
- ▶ Channels contained within a PMU Tag list at the PMU's data rate
- ▶ Custom channels from the RTAC logic engine including REAL, vector\_t, or BOOL quantities
- ▶ Calculations from the SEL-2245-42 3 kHz channels

Continuous Recording Group COMTRADE records are generated on demand and can be downloaded via the RTAC webpage. Continuous Recording Groups can be used in place of the Dynamic Disturbance Recorder in RTAC firmware versions R152 and later. See *Continuous Recording Groups* on page 275 for more information.

## Configure SOE Recording

Configure SOE records for the SEL-2244-2 or SEL-2244-4 Digital Input modules by enabling the SOE tags on each module and enabling logging for those SOE tags in the tag processor. Enabling these SOE tags is necessary for 1 ms accurate time-stamping of the digital inputs. Without the SOE tags, only the status tags, which update at the RTAC processing interval, are available. Refer to *EtherCAT* on page 196 for more details on configuring SOE recording on Axion Digital Input modules.

## Data Collection

Multiple options are available for collecting the SOE, DDR, and Fault Record data outlined in this section. ACCELERATOR TEAM SEL-5045 Software is one option to set up automatic collection of these data. The FTP server in the RTAC is another option for remote collection of these data. Additionally, these data can be manually collected from the RTAC web interface. Refer to the corresponding sections documentation of each method for more details on configuration. After collection, use SEL-5601-2 SYNCHROWAVE Event Software to analyze the COMTRADE data.

**This page intentionally left blank**

---

---

## A P P E N D I X    E

---

# EtherCAT Overview

## Evolution of Fieldbus I/O Networks

---

### NOTE

This section is a brief introduction to EtherCAT®. For more detailed information, visit [ethercat.org](http://ethercat.org).

More than 30 years ago, process control systems began transitioning from hard-wired relay logic and single-function loop controllers to programmable logic controller (PLC) based systems. The limited computing capability of early PLCs supported a relatively small number of field inputs and outputs. Because of that limitation, I/O wiring could be economically terminated within the same cabinet as the PLC. However, as automation vendors developed more advanced PLCs that accommodated many more field points—and a larger variety of signal types—users needed an alternative I/O networking method to avoid terminating hundreds or thousands of points directly in the controller cabinet.

In response, equipment vendors developed I/O devices that could communicate with a PLC via a specialized network, or fieldbus. Fieldbus networks were based on EIA-232 or EIA-485 communications and provided a means for a controller to read and write large quantities of I/O points via a single communications cable. Early fieldbus implementations were based on proprietary network protocols. In the 1990s, however, a number of standard protocols, such as FOUNDATION™ fieldbus, became popular in the industry.

## Development of EtherCAT

---

The serial networking that process control systems used for fieldbuses in the 1990s became bandwidth limited as controllers with larger and larger processing capabilities entered the market. Use of Ethernet technology as a second generation fieldbus was a natural evolution, but the inherently nondeterministic nature of Ethernet created difficult new problems. Additionally, most Ethernet equipment was not designed for industrial use, which made the adoption of Ethernet-based fieldbuses even slower.

There exist a number of Ethernet protocol standards that operate under constraints intended to make them more deterministic. Some standards use messaging rules to eliminate collisions and reduce signal jitter. Others take advantage of Ethernet switches that use virtual local area networks (VLANs) to reduce network burden within a subnet to only messages sent from or meant for devices within that subnet.

While these methods improve network determinism, they still do not use bandwidth efficiently. Most of these protocols adhere to an Ethernet paradigm that demands that each device send an entire Ethernet frame for each message and that every message delivered to a device consist of an entire Ethernet frame.

Each frame can be as long as 1,500 bytes, even if the usable process information (either inputs or control outputs) only requires a few bytes. The result, even when using multicast messages, is that administrative information consumes a large amount of the network traffic.

## EtherCAT Technology

---

The developers of EtherCAT® created solutions for both the time and efficiency challenges of Ethernet. The fundamental difference between EtherCAT and other Ethernet fieldbus protocols is that a single EtherCAT frame contains I/O point updates from many devices in a network, not just a single device. Existing transport protocols could not accomplish this, so developers defined a new EtherType explicitly for the EtherCAT protocol. As we will see, this approach provides complete compatibility with Ethernet standards.

## Development Objectives and Requirements

Although it is an open standard protocol today, EtherCAT began as the invention of Beckhoff Automation. The main development objectives were as follows:

- ▶ Deterministic network operation
- ▶ Fast network update time
- ▶ Efficient use of network bandwidth
- ▶ Compatibility with existing controller Ethernet hardware
- ▶ Full conformity with the Ethernet standard
- ▶ Economical implementation for small and large I/O devices

## Definition of EtherType for EtherCAT Messages

Developers designed the EtherCAT frame (shown in *Figure E.1*) specifically to incorporate process data from many Ethernet nodes into a single message. The telegram can extend to multiple frames and accommodate a maximum size of 4 gigabytes. The developers configured individual devices in the network to read and write data from specific regions of the telegram, which means that the telegram mapping sequence has no direct relation to the physical network configuration.

| Ethernet Header |    |      | ECAT         | EtherCAT Telegram |            |     |            | Ethernet |
|-----------------|----|------|--------------|-------------------|------------|-----|------------|----------|
| DA              | SA | Type | Frame Header | Datagram 1        | Datagram 2 | ... | Datagram n | CRC      |

ECAT - EtherCAT


DA - Destination Address

SA - Source Address

CRC - Cyclic Redundancy Check

**Figure E.1 Standard Ethernet Frame for EtherCAT Messages**

As shown in *Figure E.2*, the independent data mapping allows designers to create telegrams based on specific process sequences or mapping preferences in the PLC or other Level 1 controllers.

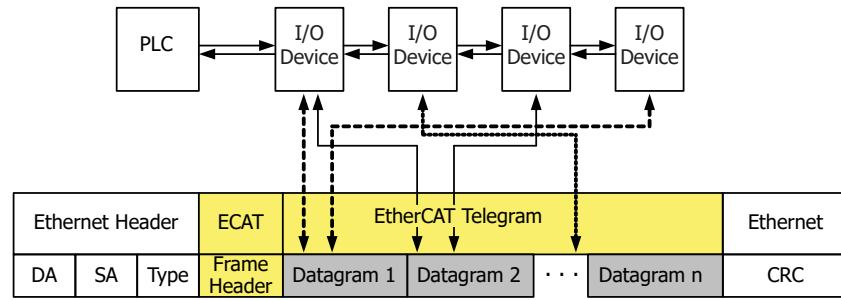

**Figure E.2 Standard Ethernet Frame for EtherCAT Messages**

## How On-the-Fly Processing Works

To achieve the network speed necessary for critical applications, EtherCAT devices use a low-level, on-the-fly processing method in which all devices within a network segment receive the entire EtherCAT message. The PLC, or EtherCAT master, begins the sequence by sending a message with updated output control data and input status from the previous data cycle.

As the first I/O device in the network starts receiving the frame, it automatically reads the proper control data from the telegram and writes updated process data into the telegram. The first device also automatically forwards the updated telegram to the next I/O device with a delay of only 1 to 2 ns. Each subsequent device similarly reads and writes portions of the telegram; the last device returns the completed message to the PLC. Even in very large systems, completion of the entire round trip can occur in less than 100 µs.

The hardware interface for each device consists of standard Ethernet ports. However, each I/O device has a field-programmable gate array (FPGA) or low-cost application-specific integrated circuit (ASIC) that reads and writes the EtherCAT telegram to maintain the incredibly short signal delay. Automatic configuration of a fieldbus memory management unit (FMMU) process in the FPGA or ASIC occurs upon network initialization to establish relevant input and output locations in the EtherCAT telegram. Once the network enters normal operating mode and begins transmitting telegrams, it wastes no time in evaluating an entire telegram. The FPGA or ASIC can quickly read and write just the necessary memory locations and forward the telegram. After sending a telegram, the device acts internally on new control commands it receives and updates inputs before the next telegram arrives.

The PLC, or in this case the RTAC module, maintains overall control system determinism by starting each telegram transmission on a fixed schedule. Low processor jitter in modern control hardware enables a repeatable schedule.

**This page intentionally left blank**

---

---

## A P P E N D I X   F

---

# Cybersecurity Features

Cybersecurity is becoming increasingly more important for IEDs that will be on customer networks. In the RTAC, connectivity and security are balanced by disabling unused ports (virtual and physical) and by applying regular firmware upgrades. The RTAC uses exe-GUARD® to greatly reduce exposure to cybersecurity risks. This appendix provides detailed information about the cybersecurity features available in the RTAC.

## exe-GUARD

---

SEL integrates embedded exe-GUARD antivirus technology for devices running the RTAC operating system. exe-GUARD provides Host Intrusion Prevention (HIP) protection against past, present, and future malware threats via a potent whitelist defensive architecture. This technology eliminates the need for signature updates and adds zero settings to the device.

SEL designed and built exe-GUARD as part of a cooperative project with the U.S. Department of Energy, Dominion Virginia Power, and Sandia National Laboratories. exe-GUARD provides protection against rootkits, contains kernel-level whitelisting with secured memory privileges, and implements mandatory access controls (MACs). exe-GUARD also provides powerful resistance to code injection with executable whitelisting. exe-GUARD helps support NERC CIP compliance efforts.

For RTAC devices, exe-GUARD is permanently enabled in firmware versions R134-V1 and later. The status of exe-GUARD can be verified on the Diagnostics page of the RTAC's local or web interface. If you see that exe-GUARD is not enabled, contact an SEL representative immediately.

## Introduction and Security Environment

---

### Product Function

The security features of the RTAC operating system limit the RTAC's exposure to local and remote attackers that attempt to gain unauthorized access or execute malicious code.

### Security Requirements

The integrated stateful, deny-by-default firewall prevents unauthorized communications from entering the network through the RTAC interfaces. The RTAC filters incoming and outgoing TCP, UDP, and ICMP communications based on a user-configurable set of rules that are defined by the device configuration (e.g., what protocols are enabled). The RTAC enables limited ports by default from the factory; for more information and instructions for manually disabling ports, see *Logical Ports on page 1188*.

# Version Information

## Obtaining Version Information

The RTAC firmware identification (FID) number can be obtained through the RTAC's local or web interface. The firmware is provided in a digitally signed file. The RTAC will validate the digital signature of the firmware before upgrading.

## Integrity Indicators

The RTAC firmware protects the integrity of the operating system firmware through validation of digital signatures.

# Commissioning and Decommissioning

## Commissioning

There are no default service accounts in the RTAC. On the first startup, the landing page of the RTAC user interface requires entry of the local administrator username and password. To ensure that the latest security measures and updates are in place, SEL notifies customers through the Security Bulletin process when a security issue or high-risk vulnerability is detected. All other vulnerabilities are documented with a [Cybersecurity] or [Cybersecurity Enhancement] designation in the release notes.

## Secure Operation Recommendations

SEL recommends performing the following to ensure secure operation of ACCELERATOR RTAC:

- ▶ Enable web and database access only on the required number of network interfaces.
- ▶ Do not remove the default SystemTags logged in the Tag Processor.
- ▶ Perform regular firmware updates to minimize CVEs affecting the RTAC operating system and device BIOS.

A restricted BIOS was introduced in the RTAC firmware version R151-V0 released on November 9, 2022, for SEL-3555, SEL-3560, and SEL-3350 RTAC devices. The restricted BIOS is used for all R200 firmware versions for SEL-2241, SEL-3350, SEL-3555, and SEL-3560 RTAC devices. All subsequent firmware releases will automatically upgrade to the more secure restricted BIOS.

## Decommissioning

To remove all RTAC configurations and return the device to factory-default settings, either use the factory reset option in the Device Management page of the RTAC web interface or follow the factory reset jumper procedure in the *Factory Reset* appendix of the instruction manual for each respective RTAC device.

# External Interfaces

---

## Ports and Services

### Physical Ports

#### Serial Ports

Serial ports are individually enabled for serial protocols. A complete list of serial protocols can be found in the *Specifications* section of the instruction manual for each respective RTAC device.

#### USB Ports

The USB ports can be used to connect peripheral input devices such as a keyboard and mouse. For x86 devices (i.e., the SEL-3555, SEL-3560, SEL-3350, and SEL-2241-2), the USB ports are disabled until the RTAC operating system has started up. Additionally, the BIOS interface is restricted in RTAC firmware versions R151-V0 and later for these devices.

#### NOTE

Removable mass storage connected via USB is not supported by RTAC hardware.

#### Ethernet Ports

RTAC devices have a minimum of two Ethernet ports that can be ordered from the factory with RJ45 or LC fiber interfaces. All Ethernet interfaces are assigned with default IPv4 IP addresses as listed in the instruction manual for each respective device. Once the initial user account is established, the RTAC web interface is used to configure each Ethernet port. *Table F.1* shows the configurable Ethernet settings and their default values.

**Table F.1 Ethernet Port Configurable Settings**

| ETH Interface Setting | Description   | Default Value   | Applicable Device(s) |
|-----------------------|---|---|----------------------|
| Enable IPv4           | Allows for IPv4 Address Settings to be set  | Selected (TRUE)   | All RTAC Variations  |
| Enable IPv6           | Allows for IPv6 Address Settings to be set  | Deselected (FALSE)  | All RTAC Variations  |
| Enable Bonding        | Allows for bond interface, mode, link frequency, and down delay to be set                                       | Deselected (FALSE)  | All RTAC Variations  |
| Enable Bridge         | Allows for bridged interface to be set, enabling use of Spanning Tree Protocol (STP)                            | Deselected (FALSE)  | All RTAC Variations  |
| Enable PRP Pairing    | Allows user to set PRP paired interface, Supervisor Frame Destination Address LSB, Interval, and Timeout values | Deselected (FALSE)  | All RTAC Variations  |
| Enable Web Access     | Allows HTTPS access to the RTAC via web interface   | Mainboard ETH: Selected (TRUE)<br><br>PCI expansion ETH: Deselected (FALSE) | All RTAC Variations  |

| <b>ETH Interface Setting</b>    | <b>Description</b>   | <b>Default Value</b>  | <b>Applicable Device(s)</b>                                      |
|---------------------------------|--|---|--|
| Enable Database Access          | Allows for ACSELERATOR RTAC access to the database   | Mainboard ETH: Selected (TRUE)<br>PCI expansion ETH: Deselected (FALSE) | All RTAC Variations  |
| Enable Ping                     | Allows for response to an ARP request  | Deselected (FALSE)  | All RTAC Variations  |
| Enable DHCP                     | Will broadcast a request to available DHCP servers   | Deselected (FALSE)  | All RTAC Variations  |
| Enable EtherCAT                 | Disables Ethernet-based packet processing and allows for EtherCAT connections to Axion nodes | Deselected (FALSE)  | SEL-2241, SEL-3350, SEL-3530, SEL-3530-4, SEL-3555, and SEL-3560 |
| IP Address (IPv4)               | For setting static IP address, subnet mask, and default gateway                              | 192.168.x.x <sup>a</sup>  | All RTAC Variations  |
| IP Address (IPv6)               | For setting static IP address, subnet mask, and default gateway                              | N/A   | All RTAC Variations  |
| Default Gateway (IPv4 and IPv6) | Defines the IP address of the intended Default Gateway                                       | N/A   | All RTAC Variations  |
| Primary Gateway (IPv4 and IPv6) | Defines the Default Gateway as the Primary Gateway   | Deselected (FALSE)  | All RTAC Variations  |

<sup>a</sup> Values in octets 3 and 4 are dependent on the RTAC device and port number.

## IPv6 Profile

The IPv6 profile uses the unique local address (ULA) assigned during initial startup of the RTAC operating system when IPv6 is enabled from the RTAC web interface.

## Logical Ports

By default, the RTAC opens a number of TCP ports, each for a specific purpose. *Table F.2*, *Table F.3*, and *Default Open UDP Ports on page 1189* lists ports that are open by default, how they are used, and how they can be disabled via settings configuration.

**Table F.2 Default Open TCP Ports**

| <b>TCP Port</b> | <b>Description</b>  |
|-----------------|---|
| 123             | This port is opened to facilitate SNTP; see <i>Default Open UDP Ports on page 1189</i> for more information.  |
| 443             | This port is opened for HTTPS connections for accessing the RTAC web interface, including RTAC API calls. This port can be disabled individually for each Ethernet interface via the RTAC web interface by navigating to the Interface section, selecting <b>Edit</b> for the desired Ethernet port, clearing the <b>Enable Web Access</b> check box, and selecting <b>Submit</b> . |
| 1217            | This port is opened after a successful connection has been established via ACSELERATOR RTAC, and it remains open and locked to the specific IP address that initiated the request on port 5432. Port 1217 is closed once ACSELERATOR RTAC disconnects. There is no user setting to close this port.   |

| TCP Port | Description  |
|----------|--|
| 5432     | This port is opened by ACSELERATOR RTAC to facilitate uploading and downloading of RTAC configuration projects. This port can be disabled individually for each Ethernet interface via the RTAC web interface by navigating to the Interface section, selecting <b>Edit</b> for the desired Ethernet port, clearing the <b>Enable Database Access</b> check box, and selecting <b>Submit</b> . |
| 5433     | This port is temporarily opened by ACSELERATOR RTAC for performing RTAC firmware upgrades.   |
| 15453    | This port is opened when the RTAC Comm Monitor Ethernet capture tool is in use. This port remains open while actively capturing Ethernet packets and closes when not active.   |

**Table F.3 Common User-Configurable Open TCP Ports**

| TCP Port | Description   |
|----------|---|
| 502      | This is the default port for Modbus TCP server sessions. The port designation is configurable. The port does not open if no Modbus session is configured. |
| 4840     | This is the default port for the OPC UA server. The port designation is configurable via project settings.  |
| 20000    | This is the default port for the DNP server. The port designation is configurable. The port is not opened if no DNP server is configured.                 |

## Default Open UDP Ports

By default, the RTAC opens UDP port 123 for SNTP traffic. This port can be closed in the System\_Time\_Control POU by setting **Enable\_NTP\_Time\_In** to FALSE and loading the project.

UDP ports 319 and 320 are opened when **Enable\_PTP\_Time\_In** is set to TRUE in the System\_Time\_Control POU.

## Application Interfaces

Each RTAC device family variant has at least two Ethernet ports that are configured on different subnets by default. While configured on different subnets, the interfaces are isolated with no Ethernet traffic between them. In the RTAC web interface, two or more Ethernet interfaces can be configured in various bridged and bonded modes that can create a primary/backup pair or aggregate pair or provide functionality that mimics an unmanaged switch. Access Points and Web Proxies are two other, optional configurations that allow for Ethernet routing functionality.

Access points can be added and access point routers can be configured in the RTAC project settings. The use of access points enables the RTAC to accept a connection on a specific TCP listening port on one interface and remotely connect to a separate IP with a designated port on a different interface. See *Section 4: Engineering Access* for details and configuration examples.

Web proxies can be configured to allow a user to connect to a defined URL on one interface of the RTAC and establish a web session on a separate defined URL path on a different interface. See *Section 5: Web Interface and Reports* for more information on setting up web proxies.

## File System Interfaces

The RTAC family is composed of embedded devices that support access to a sequestered file system using SEL-developed extensions and project settings that are configured by authorized users.

## Access Controls

---

User-based accounts increase logging granularity and make password management easy and effective. The RTAC operating system includes support for centralized authentication and authorization to simplify management and enforcement of user accounts, strong passwords, and user privileges for all connected devices from an active directory server.

### Privilege Levels

Users can be created from the RTAC web interface. The initial user account is configured as part of the commissioning process and has Administrator privileges by default. New users can be added by an existing user that has the appropriate system role. See *RTAC Web Interface User Accounts on page 702* for details on managing user accounts and system roles.

### Centrally Managed Accounts

The authentication technology integrated into the RTAC enables single sign-on engineering access to IEDs. The authentication includes centralized user-based credentials with LDAP or RADIUS. Thorough logging of user activities provides a simple audit report of non-repudiation.

### Local Accounts

A local account must be setup before changing any default factory settings or loading an RTAC project. Details for the initial setup of an RTAC is found in *RTAC Web Interface User Accounts* section.

### Passwords

See *ACCELERATOR RTAC Software Passwords and User Accounts on page 698* for details on passwords and access.

### X.509 Certificates

By default, the RTAC contains a single unsigned X.509 certificate used for HTTPS and open database connectivity (ODBC) through Transport Layer Security (TLS). The RTAC supports base64 (.cer files) X.509 and CA certificates; it does *not* support any of the binary formats. CA certificates are used by the RTAC for authentication of LDAP and TLS/SSL Ethernet Tunneled Serial connections and are explained more in *CA Certificates on page 1193*. Perform the following to create an X.509 certificate:

- Step 1. Log in to the RTAC web interface.
- Step 2. Select **Security**.

Step 3. Choose **X.509 Certificates**.

Step 4. Select **Generate**.

Step 5. Enter the required information.

Note that the Country name must be two characters, and the Common Name must *exactly* match the IP address or hostname that you are using in the address bar to access this RTAC. In addition, most web browsers also require the IP address or hostname to be populated in the Subject Alternative Name (SAN) fields. Do not leave this field unspecified.

Step 6. Select **Submit**.


After you have created a certificate, you can either activate it and mark it as trusted for your PC or give the certificate to your information services group to sign. Perform the following steps to install certificates into the Windows certificate store. After the certificate is installed in the trusted root store, all web browsers from that computer should show a trusted connection.

Step 1. On the X.509 Certificates page, select **Activate** to begin using the new certificate. In firmware versions prior to R147-V0, the RTAC restarts after a certificate is activated. In R147-V0 and later, the certificate becomes active without needing a restart. Once the certificate becomes active, the web browser will show that there is still a certificate error.


Step 2. Select **Continue to this website (not recommended)** from the certificate error prompt.

Step 3. On the login page, select **Certificate Error** at the top of the page. Many web browsers provide an option to view the certificate. If your web browser does not offer an option to view or inspect the certificate, use another browser, perform a web search on how to view certificates from your specific browser, or download the certificate from the RTAC X.509 Certificate page after logging into the RTAC webpage.

Step 4. Select **View Certificates** from the pop-up window. The certificate should appear in a new window. Select the **Details** tab, which should provide an option to copy the certificate to the local file system of the computer. Copy the file encoded as either DER or base64.

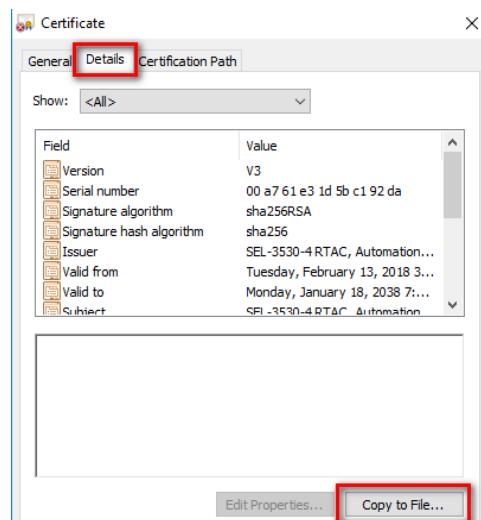

- Step 5. (*Optional*) Alternatively, the certificate can be downloaded by navigating to the X.509 certificate after logging into the RTAC, copying the entire certificate into a text editor, and saving the file with a .cer extension. This accomplishes the same objective as Step 4. The certificate will be saved on the computer as base64.
- Step 6. When the certificate is on the local file system, right-click the certificate file and select **Install Certificates**.
- Step 7. Select **Place all certificates in the following store** and browse to **Trusted Root Certification Authorities**.

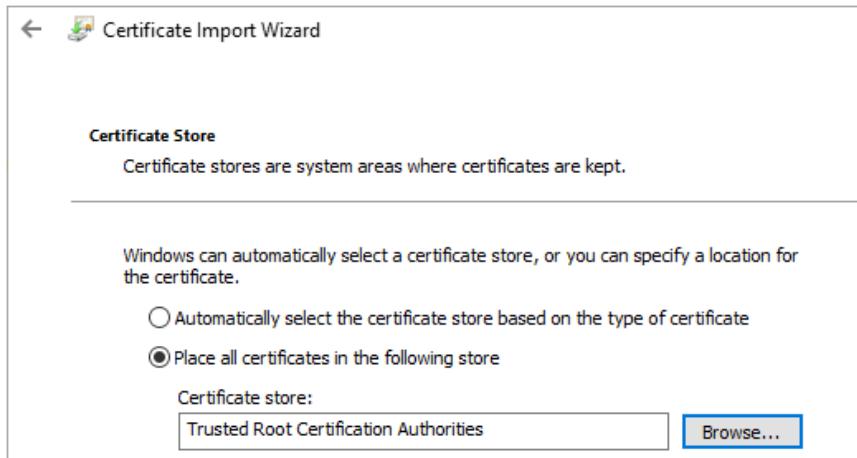

- Step 8. Finish the Wizard. When the Wizard tells you the import was successful, close and restart the web browser to verify a trusted connection to the RTAC.

If your company has a signing authority CA, perform the following steps to place your company's certificate signature on the new X.509 certificate.

- Step 1. After creating the certificate on the RTAC web interface, select the **C.S.R.** button.
- Step 2. Copy the entire text into a text-editing software such as Notepad. Do not attempt to edit the text and do not place it in an advanced word editor (such as Microsoft Word); doing so might change the contents of the file.
- Step 3. Select **Done** and give the text file to your signing authority.
- Step 4. When the signing is complete, select **Import** for that X.509 entry in the RTAC web interface.
- Step 5. Paste the entire text contents into the space provided. Ensure that you paste the entire contents and have not inadvertently altered the contents in any way.
- Step 6. Select **Submit**.
- Step 7. Select **Activate** to begin using the new certificate.

The default self-signed certificate is not editable or viewable. If you reset the RTAC to default settings, all certificates are erased except the default unsigned certificate.

## CA Certificates

During the initial stages of establishing a TLS/SSL encrypted communications session, client and server devices exchange public keys. To verify the server's ownership of the public key, CAs digitally sign the certificates used by the server. CA certificates are issued by the CA and contain the public key mathematically related to the private key used to sign an X.509 certificate. The entity verifying the X.509 certificate cross-references the installed CA certificates to verify that the X.509 certificate is signed by a trusted institution. An X.509 certificate may be signed by multiple CAs to create a chain of trust. To successfully validate an X.509 certificate, all CA certificates in the chain of trust must be installed in the CA Certificate page on the RTAC web interface.

- Step 1. From the CA Certificates page in the RTAC web interface, select **Add New CA Certificate** and then enter the name of the certificate in the **Name** field.
- Step 2. Open the certificate for the LDAP server (or any other server) in Notepad or another simple word processor. Ensure that the word processor you use does *not* reformat the certificate file in any way.
- Step 3. Copy the contents from the certificate file and paste it into the **Certificate** field in the RTAC web interface.
- Step 4. Select **Submit**. The RTAC will install the certificate and begin using the certificate for LDAP and for X.509 authentication for other connections.



Figure F.1 Accept New Certificate

## Physical Access Controls

The RTAC family of devices does not include any tamper evident protections. RTAC devices are designed to be difficult to open without disconnecting communications or power cables, which would result in a loss of communications that would trigger an incident response.

# Logging Features

## Security Events

The RTAC stores security events in nonvolatile memory, and it can be configured to forward these logs in Syslog format to multiple destinations. These logs contain several fields that indicate event severity, event origin, the type of event that occurred, and details regarding the cause of the event. Additionally, the event message contains event tracking information such as the entity that triggered the event and the time and date of the event.

## Internal Log Storage

The RTAC can store SOE logs and event reports in nonvolatile memory. Individual SOE logs can be acknowledged or deleted from the SOE page of the RTAC web interface. If all logs are deleted, a new time-stamped log is created that indicates which user has deleted the logs. The collected event reports, both CEV and COMTRADE files, are saved on the RTAC file system. They can be retrieved from the Event Collection section of the RTAC web interface.

## Syslog

The RTAC formats, stores, and forwards logs according to the Syslog specification to enable quick notifications, central collection, and reporting of security events. These events are time-synchronized by the active time source, shown in the System\_Time\_Control of the RTAC. The RTAC records IED user activity to provide auditable tracking within the system. Internal storage can hold as many as 30,000 to 500,000 events (depending on the hardware platform) in nonvolatile memory. When storage is full, new events replace the oldest Syslog entries. For additional details and configuration steps, refer to *Syslog on page 721* and *Section 3: Tag Processor*.

## Alarm Contact

Refer to *Example 7.6* for instructions on how to use an RTAC SystemTags variable to trigger the alarm contact.

## Usage Policy

The usage policy is always displayed before entering user account credentials for logging into the RTAC's local or web interface. *Figure F.2* shows the default usage policy.

The phrasing of the usage policy can be configured per RTAC device via the Usage Policy section of the RTAC web interface. After editing the text, select **Submit** to commit the changes.

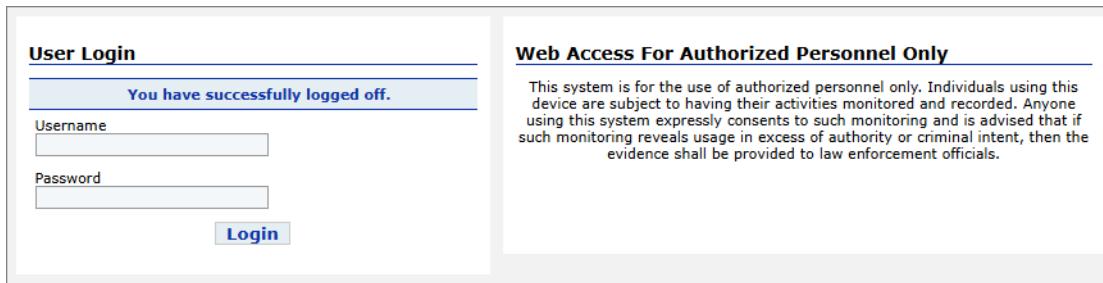


Figure F.2 Default Usage Policy

## Vulnerability Notification Process

### Security Vulnerability Process

SEL provides security disclosure alerts to customers, and SEL instruction manuals document all releases. SEL security vulnerability disclosures are described in the SEL Process for Disclosing Security Vulnerabilities located at [selinc.com](http://selinc.com).

### Emailed Security Process

You can sign up to receive email notifications when SEL releases security vulnerability notices and service bulletins at [selinc.com/support/security-notifications/](http://selinc.com/support/security-notifications/).

## Backup and Restore

---

### Saving and Restoring Settings

Backing up and restoring RTAC projects can be performed from the RTAC web interface or in ACCELERATOR RTAC. In RTAC firmware versions R134-V0 and later, the RTAC project is listed on the RTAC dashboard under **Current Project**, as shown in *Figure F.3*. A project can be downloaded by clicking on the project name. The project will be downloaded as an encrypted .exp file on the computer's file system.

| System Statistics         |                     |
|---------------------------|---------------------|
| Main Task Usage           | 1%                  |
| Automation Task Usage     | 0%                  |
| Memory Usage (RAM)        | 160492 KB           |
| Memory Available (RAM)    | 611868 KB           |
| Storage Usage             | 153700 KB           |
| Storage Available         | 1747424 KB          |
| Number of Users Logged In | 1                   |
| USB A Port In Use         | False               |
| USB B Port In Use         | False               |
| Current Project           | Project1            |
| Modified Time of Project  | 2024-08-02T16:31:52 |
| Power Source Voltage      | -130.036983         |

Figure F.3 Current Project in RTAC Dashboard


A single file can be exported from ACCELERATOR RTAC by right-clicking the project and selecting **Export**. The whole RTAC project database can also be backed up as a zipped file on the computer's file system by selecting the **Backup Projects** button in the ACCELERATOR RTAC header, as shown in *Figure F.4*.



**Figure F.4 Back Up All Projects**


The RTAC project backup provides the entire RTAC configuration, connection directory, and managed passwords as a single encrypted file that can be imported into another ACSELERATOR RTAC installation or uploaded to the RTAC operating system and activated using the RTAC web interface.

ACSELERATOR RTAC can also retrieve a project that is running on an RTAC. The project will be saved to the RTAC project database. Select **Read** to retrieve a project, as shown in *Figure F.5*.

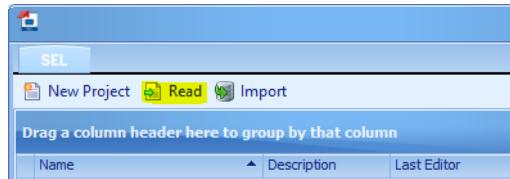

**Figure F.5 Retrieve a Project**

You will be prompted for the **RTAC Address**, **User Name**, and **Password** of the RTAC running the project, as shown in *Figure F.6*. When the project read is complete, the project name will be present in the RTAC database. Additional settings can be included in the project read; see *Settings Read on page 1162* for more information.

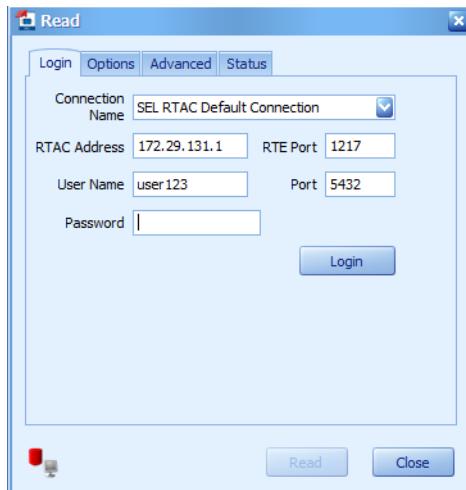

**Figure F.6 Project Read Configuration**

# Malware Protection Features

---

## Firmware Hash Verification

SEL provides firmware hashes as an additional tool to verify the integrity of an SEL firmware upgrade file. This helps ensure that the firmware received from the factory is complete and unaltered prior to sending the firmware to the SEL device. Verify that the firmware file in your possession is a known good SEL firmware release by comparing the calculated hash value of the firmware in your possession with the hash value provided at [selinc.com/products/firmware/](http://selinc.com/products/firmware/).

## Operating System/Firmware

The RTAC family of devices does not allow additional software to be installed. RTAC devices include a self-test that continually checks running code against the known good baseline version of code in nonvolatile memory. This process is outlined in more detail in the document titled The SEL Process for Mitigating Malware Risk to Embedded Devices located at [selinc.com/mitigating\\_malware/](http://selinc.com/mitigating_malware/).

## Software/Firmware Verification

The RTAC family of devices allows for installation of firmware updates in the field. Authenticity and integrity of firmware updates can be verified by using the Firmware Hash page at [selinc.com/products/firmware](http://selinc.com/products/firmware).

## Product Updates

---

ACCELERATOR RTAC software and devices running the RTAC operating system should be routinely updated to bring in important enhancements that may be related to cybersecurity. These enhancements are described in the Appendix A release notes for firmware and software.

## Obtaining Updates

Routine updates for ACCELERATOR RTAC are available for download at [selinc.com/products/5033](http://selinc.com/products/5033) and through SEL Compass®. RTAC firmware updates are received from your local SEL customer service representative or application engineers.

## Update Verification

ACCELERATOR RTAC software installation files have a digital signature that is used to verify that the file was created by SEL and has not been modified or corrupted. The procedure to verify the installation file can be found at [selinc.com/company/verifying-software-downloads/](http://selinc.com/company/verifying-software-downloads/). To ensure the integrity of the RTAC firmware file, SEL provides SHA-1 and SHA-256 firmware hashes on the SEL website. Steps for verifying the RTAC firmware file are found in Firmware Tools of the SEL website.

## Contact SEL

---

For further questions or concerns about product security, contact SEL at [security@selinc.com](mailto:security@selinc.com) or +1.509.332.1890.





SCHWEITZER ENGINEERING LABORATORIES, INC.

2350 NE Hopkins Court • Pullman, WA 99163-5603 U.S.A.

Phone: +1.509.332.1890 • Fax: +1.509.332.7990

[selinc.com](http://selinc.com) • [info@selinc.com](mailto:info@selinc.com)