


Serial Communications Between Two Arduinos

Chao-Chin Wu

<https://linuxhint.com/serial-uart-communication-between-two-arduino/>

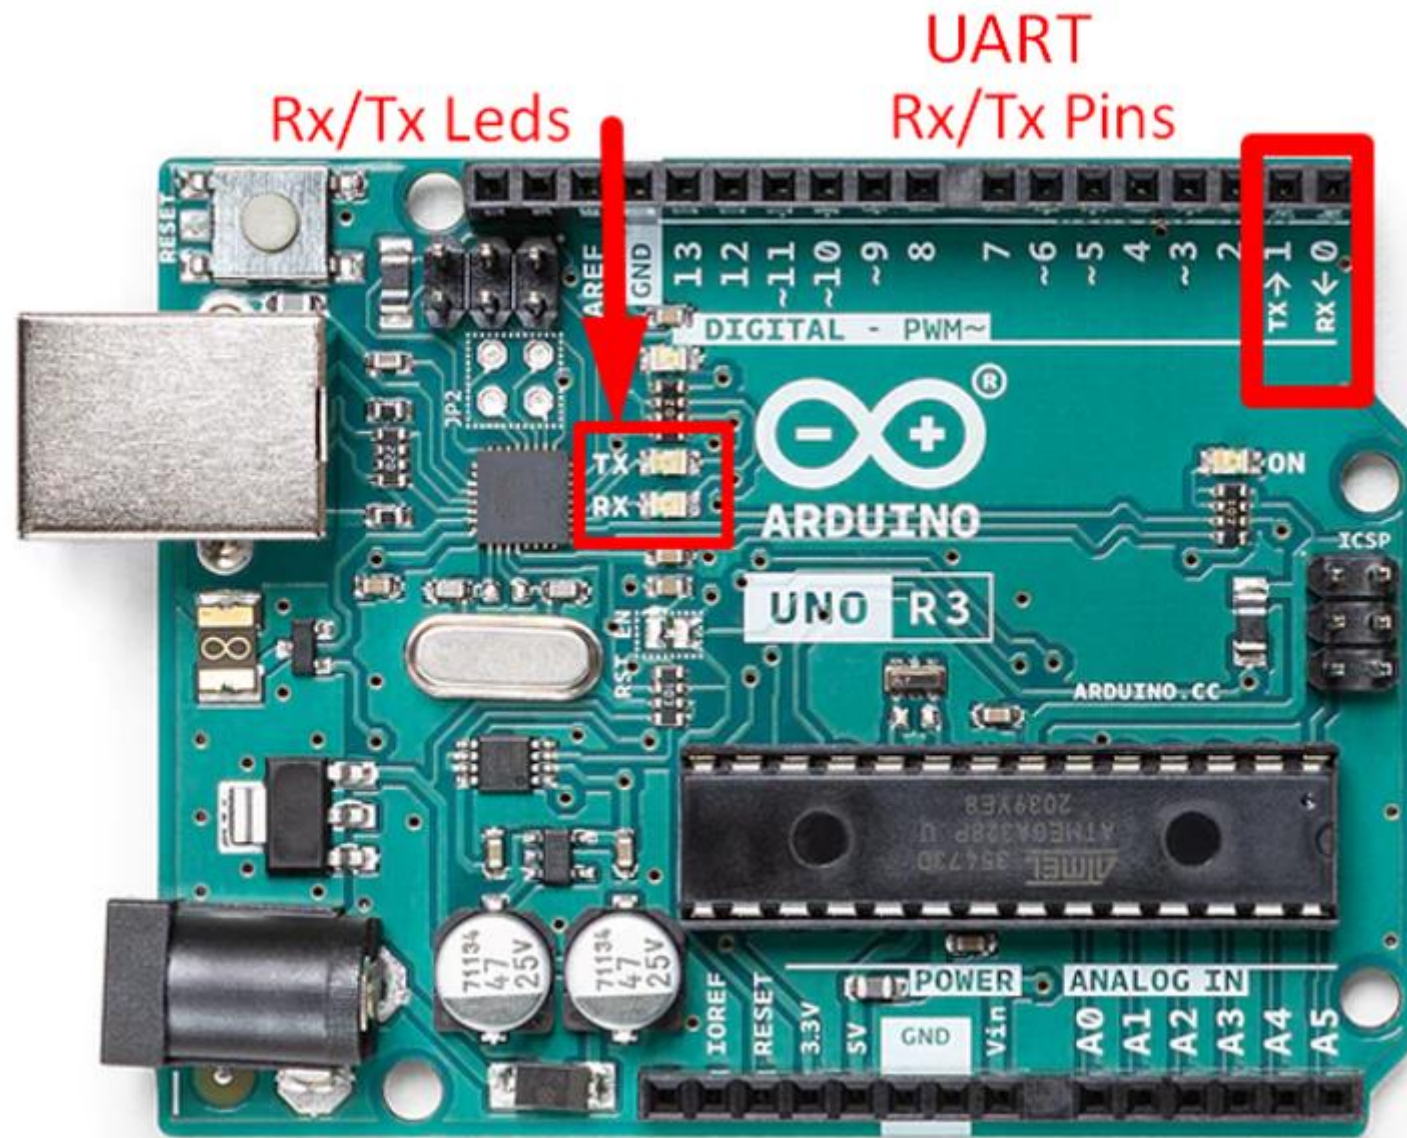

Master and Slave configuration

- Master: sending data
- Slave: receiving data

Example 1

- **Passing a String from One Arduino to Other through UART Communication**
- **Step 1: Connect Master Arduino**
 - Using a USB B cable connects the Arduino board which is acting as Master to the PC.
 - Upload the master code below

Master Code

```
//Sender Arduino Board Code (Master)
char mystring[15] = "LinuxHint.com "; //String data which is to be sent
void setup() {
    Serial.begin(9600);                // Begin the Serial at 9600 Baud rate
}
void loop() {
    Serial.write(mystring,15);          //Write the serial data
    delay(1000);
}
```

- **Step 2: Connect Slave Arduino**

- Connect the Slave board at any PC port **other than** the port used in the previous step by the Master Arduino board if you use the same PC simultaneously.
- Upload the slave code below

Slave Code

```
//Receiver Arduino Board Code
char mystring[20];           //Initialized variable to store receive
void setup() {
  Serial.begin(9600);        // Begin the Serial at 9600 Baud
}
void loop() {
  Serial.readBytes(mystring,15); //Read the serial data
  Serial.println(mystring);      //Print data on Serial Monitor
  Serial.println(" RECEIVER");
  delay(1000);
}
```

- **Step 3: Connect Both Arduino Using TX and Rx Pins**

- Upload the master code below
- Connect Tx pin of the master Arduino with Rx pin of the slave Arduino similarly Rx pin of master Arduino with Tx pin of slave Arduino.
- **Remember** while uploading code in both these Arduino do not connect Tx and Rx pins otherwise serial communication will not be possible.

