B523 Datasheet ⁰⁰²



Functional description

OVERVIEW

The B Series System-on-a-Module (SoM) is a LTE Cat 1 cellular device with support for BLE (Bluetooth LE). It is based on the Nordic nRF52840 micro-controller.


The B Series is designed to be integrated into your circuit board design, plugging into a M.2 NGFF connector on your board, allowing the module to be changed or upgraded easily.

FEATURES

- Quectel EG91-E modem
 - LTE category 1 module for EMEAA region
 - 3GPP E-UTRA Release 13
 - o Cat 1 bands supported: 1, 3, 7, 8, 20, 28A
 - Support for Europe only at this time
- Nordic Semiconductor nRF52840 SoC
 - o ARM Cortex-M4F 32-bit processor @ 64MHz
 - 1MB flash, 256KB RAM
 - o Bluetooth 5: 2 Mbps, 1 Mbps, 500 Kbps, 125 Kbps
 - Supports DSP instructions, HW accelerated Floating Point Unit (FPU) calculations
 - ARM TrustZone CryptoCell-310 Cryptographic and security module
 - o Up to +8 dBm TX power (down to -20 dBm in 4 dB steps)
 - NFC-A tag
- On-module additional 8MB SPI flash
- 24 mixed signal GPIO (8 x Analog, 4 x PWM), UART, I2C, SPI
- USB 2.0 full speed (12 Mbps)
- JTAG (SWD) pins
- RGB status pins for LED
- Reset and Mode pins for buttons
- On-module MFF2 Particle SIM
- Two on-module U.FL connectors for external antennas
- M.2 interface
- CE certified
- RoHS compliant (lead-free)

Interfaces

BLOCK DIAGRAM

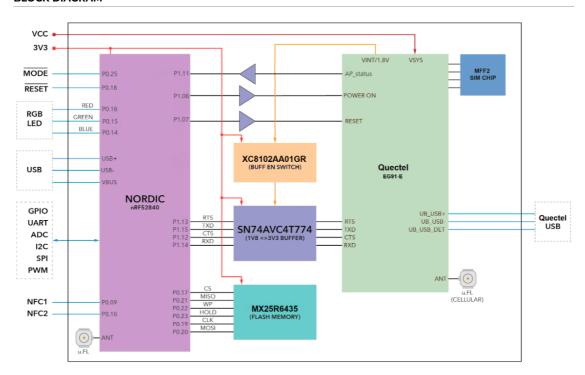

POWER

VCC

VCC is used to supply power to the Quectel EG91-E cellular module. The recommended input voltage range on this pin is between 3.6V to 4.3V DC. Make sure that the supply can handle currents of at least 2 A.

Note: The limit on the B402 (u-blox LTE Cat M1) is 4.2V, so you should limit VCC to 4.2V to preserve compatibility with both modules.

3V3

3V3 is used to supply power to nRF52840, logic ICs, memory, etc. and 3.3v is recommended. VCC input voltage range is between 3V to 3.6V DC. Make sure that the supply can handle currents of at least 150mA.

VBus

VBus is connected to the USB detect pin of nRF52840 to enables the USB interface. The recommended input voltage range is between 4.35V to 5.5V DC.

There are two radios on the B523 module. A BLE radio (nRF52840) and a cellular radio (Quectel). We have provided two u.FL connectors to plug in the cellular and BLE antenna. These are required if you wish to use the cellular and BLE. If you do not need BLE, you do not need to connect the BLE antenna.



Number	Label	Purpose
1	ВТ	Bluetooth antenna (optional)
2	CELL	Quectel cellular modem antenna
3	ANT DIV	LTE cellular receive diversity antenna

The third connector is the LTE cellular receive diversity antenna. A second cellular antenna can be connected to this connector to improve performance when the device will be moving at high speeds. It is only used for LTE Cat 1 connections and is not supported when in 2G or 3G mode. This antenna is not necessary in most cases and is not included in evaluation kits. (The B402 does not have this connector as receive diversity is not supported in LTE Cat M1 mode.)

Certified Cellular Antenna

SKU	Description
ANTCW2EA	Particle Cellular Flex Antenna 2G/3G/LTE [x1]
ANTCW2TY	Particle Cellular Flex Antenna 2G/3G/LTE Tray of 50 [x50]

- Type: LTE Ultra Wide Band Flex Antenna
- Frequency/band: 698 MHz-2690 MHz
- RoHS Compliant
- Mechanical Specs:
 - o Dimensions: 97 x 21 x 0.2 mm
 - Mounting: 3M adhesive backed for application on non-metallic surfaces
 - o Connector type: FPC + IPEX connector
 - o Cable length: 210 mm

General Antenna Guidance

- The antenna placement needs to follow some basic rules, as any antenna is sensitive to its environment. Mount the antenna at least 10mm from metal components or surfaces, ideally 20mm for best radiation efficiency, and try to maintain a minimum of three directions free from obstructions to be able to operate effectively.
- Needs tuning with actual product enclosure and all components.
- For the BLE antenna, it is recommended to use a 2.4 GHz single-frequency antenna and not a 2.4 GHz + 5 GHz antenna, so as to avoid large gain at the frequency twice of 2.4 GHz which can cause the second harmonic radiation of 2.4 GHz to exceed standards.

PERIPHERALS AND GPIO

Peripheral Type	Qty	Input(I) / Output(O)
Digital	24 (max)	I/O
Analog (ADC)	8 (max)	I
UART	1	I/O
SPI	2	1/0
I2C	2	1/0
USB	1	1/0
PWM	7 (max)	0
NFC	1	0


There are some optional B523 module specific I/O:

- Quectel USB and VBUS (for modem firmware upgrades)
- Quectel Ring Indicator (RI) output

Note: All GPIOs are only rated at 3.3VDC max.

JTAG AND SWD

The B523 module has 4 pads at the bottom exposing the SWD interface of the nRF52840. This interface can be used to debug your code or reprogram your E402 bootloader, device OS, or the user firmware. We use 4 pogo-pins connecting to these pads during production for firmware flashing.

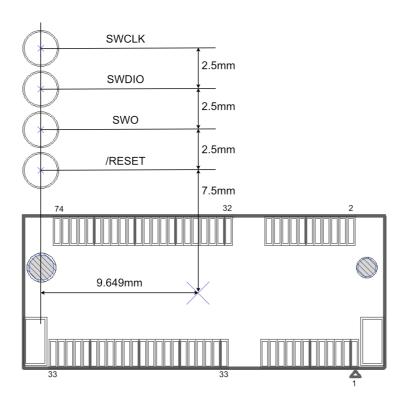

Memory map

NRF52840 FLASH LAYOUT OVERVIEW

- Bootloader (48KB, @0xF4000)
- User Application (128KB, @0xD4000)
- System (656KB, @0x30000)
- SoftDevice (192KB)

EXTERNAL SPI FLASH LAYOUT OVERVIEW (DFU OFFSET: 0X80000000)

- Reserved (4MB, @0x0040000)
- OTA (1500KB, @0x00289000)
- Reserved (420KB, @0x00220000)
- FAC (128KB, @0x00200000)
- LittleFS (2M, @0x0000000)

Pins and button definitions

PINOUT DIAGRAM

H1	PARTICLE MESH SOM							
H5								
VCC		H1	H3					
VCC		H5						
VCC 6 5 GND	VCC	2	1	GND				
NCC 8	vcc	4	3	GND				
3V3 10 9 GND	vcc	6	5	GND				
3V3 12	VCC	8	7	GND				
RESERVED	3V3	10	9	GND				
VUSB	3V3	12	11	USB D+				
18	RESERVED	14	13	USB D-				
SCL 20	VUSB	16	15	GND				
NOP 22 21 GND		18	17	NFC1				
NODE 32 33 ADC0	SCL	20	19	NFC2				
MODE 32 33 ADC1 RESET 34 35 ADC2 TX 36 37 ADC3 RX 38 39 AGND CT5 40 41 ADC4 RT5 42 43 ADC5 EG91 USB+ 44 45 ADC6 EG91 USB- 46 47 ADC7 CS 48 49 AGND MISO 50 51 RESERVED MOSI 52 53 RESERVED SCK 54 55 RESERVED GND 56 57 RESERVED RESERVED 58 59 RESERVED RESERVED 60 61 RED GPI00 62 63 GREEN GRIOU 64 65 BLUE PWM0 66 67 SIM_VCC	SDA	22	21	GND				
MODE 32 33 ADC1 RESET 34 35 ADC2 TX 36 37 ADC3 RX 38 39 AGND CTS 40 41 ADC4 RTS 42 43 ADC5 EG91 USB+ 44 45 ADC6 EG91 USB+ 46 47 ADC7 CS 48 49 AGND MISO 50 51 RESERVED MOSI 52 53 RESERVED SCK 54 55 RESERVED GND 56 57 RESERVED RESERVED 58 59 RESERVED RESERVED 60 61 RED GPI00 62 63 GREEN GPI01 64 65 BLUE PWM0 66 67 SIM_VCC		KEA	23	ADC0				
RESET 34 35 ADC2 TX 36 37 ADC3 RX 38 39 AGND CTS 40 41 ADC4 RTS 42 43 ADC5 EG91 USB+ 44 45 ADC6 EG91 USB- 46 47 ADC7 CS 48 49 AGND MISO 50 51 RESERVED MOSI 52 53 RESERVED SCK 54 55 RESERVED GND 56 57 RESERVED RESERVED 58 59 RESERVED RESERVED 60 61 RED RESERVED GPIO0 62 63 GREEN GPIO1 64 65 BLUE PWM0 66 67 SIM_VCC		KEY						
TX 36 37 ADC3 RX 38 39 AGND CTS 40 41 ADC4 RTS 42 43 ADC5 EG91 USB+ 44 45 ADC6 CS 48 49 AGND MISO 50 51 RESERVED MOSI 52 53 RESERVED SCK 54 55 RESERVED RESERVED 56 57 RESERVED RESERVED 60 61 RED RESERVED 60 61 RED GPIO1 64 65 BLUE PWM0 66 67 SIM_VCC	MODE	32	33	ADC1				
RX 38 39 AGND	RESET	34	35	ADC2				
CTS 40 41 ADC4 RTS 42 43 ADC5 EG91 USB+ 44 45 ADC7 CS 48 49 AGND MISO 50 51 RESERVED MOSI 52 53 RESERVED SCK 54 55 RESERVED GND 56 57 RESERVED RESERVED 58 59 RESERVED RESERVED 60 61 RED GPI00 62 63 GREEN GPI01 64 65 BLUE PWM0 66 67 SIM_VCC	TX	36	37	ADC3				
RTS	RX	38	39	AGND				
EG91 USB+	CTS	40	41	ADC4				
EG91 USB- 46 47 ADC7 CS 48 49 AGND MISO 50 51 RESERVED MOSI 52 53 RESERVED SCK 54 55 RESERVED GND 56 57 RESERVED RESERVED 58 59 RESERVED RESERVED 60 61 RED GPI00 62 63 GREEN GPI01 64 65 BLUE PWM0 66 67 SIM_VCC	RTS	42	43	ADC5				
CS 48 49 AGND MISO 50 51 RESERVED MOSI 52 53 RESERVED SCK 54 55 RESERVED GND 56 57 RESERVED RESERVED 58 59 RESERVED RESERVED 60 61 RED GPI00 62 63 GREEN GPI01 64 65 BLUE PWM0 66 67 SIM_VCC	EG91 USB+	44	45	ADC6				
MISO 50 51 RESERVED MOSI 52 53 RESERVED SCK 54 55 RESERVED FOR STANDARD FOR STANDAR	EG91 USB-	46	47	ADC7				
MOSI 52 53 RESERVED SCK 54 55 RESERVED GND 56 57 RESERVED RESERVED 58 59 RESERVED RESERVED 60 61 RED GPI00 62 63 GREEN GPI01 64 65 BLUE PWM0 66 67 SIM_VCC	CS	48	49	AGND				
SCK 54 55 RESERVED GND 56 57 RESERVED RESERVED 58 59 RESERVED RESERVED 60 61 RED GPI00 62 63 GREEN GPI01 64 65 BLUE PWM0 66 67 SIM_VCC	MISO	50	51	RESERVED				
GND 56 57 RESERVED RESERVED 58 59 RESERVED RESERVED 60 61 RED GPI00 62 63 GREEN GPI01 64 65 BLUE PWM0 66 67 SIM_VCC	MOSI	52	53	RESERVED				
RESERVED 58 59 RESERVED RESERVED 60 61 RED GPI00 62 63 GREEN GPI01 64 65 BLUE PWM0 66 67 SIM_VCC	SCK	54	55	RESERVED				
RESERVED 60 61 RED GPI00 62 63 GREEN GPI01 64 65 BLUE PWM0 66 67 SIM_VCC	GND	56	57	RESERVED				
GPI00 62 63 GREEN GPI01 64 65 BLUE PWM0 66 67 SIM_VCC	RESERVED	58	59	RESERVED				
GPI01 64 65 BLUE PWM0 66 67 SIM_VCC	RESERVED	60	61	RED				
PWM0 66 67 SIM_VCC	GPI00	62	63	GREEN				
_	GPI01	64	65	BLUE				
DV444 CO	PWM0	66	67	SIM_VCC				
PWM1 68 69 SIM_RST	PWM1	68	69	SIM_RST				
PWM2 70 71 SIM_CLK	PWM2	70	71	SIM_CLK				
PWM3 72 73 SIM_DATA	PWM3	72	73	SIM_DATA				
EG91 VBUS 74 75 EG91_RI	EG91 VBUS	74	75	EG91_RI				
H2 H4		H2	H4					

Pins SOM0 to SOM9 will vary across various SoM modules. For example, cellular-specific pins exists in this range.

Additionally there are RESERVED³ pins, whose functions vary depending on the SoM. For example, nRF52 MCU-based modules use some of these pins for additional ADC and GPIO. They are able to be used as described on the B523, but their function may be be different on future modules.

For maximum cross-module flexibility, you should try to use only the common pins when possible.

PIN DESCRIPTION

#	Pin	Common	Function nRF52	Description
1	GND	GND	POWER	System ground.
2	VCC	VCC ⁵	POWER	System power in, connect to the +LiPo or supply a fixed 3.6-4.3v power.
3	GND	GND	POWER	System ground.
4	VCC	VCC	POWER	System power in, connect to the +LiPo or supply a fixed 3.6-4.3v power.
5	GND	GND	POWER	System ground.
6	VCC	VCC	POWER	System power in, connect to the +LiPo or supply a fixed 3.6-4.3v power.
7	GND	GND	POWER	System ground.
8	VCC	VCC	POWER	System power in, connect to the +LiPo or supply a fixed 3.6-4.3v power.
9	GND	GND	POWER	System ground.
10	3V3	3V3	POWER	System power in, supply a fixed 3.0-3.6v power.

11	USB D+	USB D+	Ю		Data+ pin of the NRF52840 USB port.
12	3V3	3V3	POWER		System power in, supply a fixed 3.0-3.6v power.
13	USB D-	USB D-	Ю		Data- pin of the NRF52840 USB port.
14	NC	RESERVED ³	NC		Leave unconnected.
15	GND	GND	POWER		System ground.
16	VUSB	VUSB	POWER		System power in, USB detect pin for nRF52840. 5V on this pin enables the USB interface.
17	NFC1	SOM3 ³	NFC input	P0.9	NFC antenna connection.
18	NC	RESERVED ³	NC		Leave unconnected.
19	NFC2	SOM4 ³	NFC input	P0.10	NFC antenna connection.
20	D1	SCL	Ю	P0.27	I2C SCL, and digital only GPIO.
21	GND	GND	POWER		System ground.
22	D0	SDA	Ю	P0.26	I2C SDA, and digital only GPIO.
23	Α0	ADC0	Ю	P0.3	Analog input ADC0 ² , and digital GPIO.
32	MODE	MODE	Ю	P0.11	Connected to the MODE button input, and digital only GPIO.
33	A1	ADC1	Ю	P0.4	Analog input ADC1 ² , and digital GPIO.
34	RESET	RESET	I		Active-low reset input.
35	A2	ADC2	Ю	P0.28	Analog input ADC2 ² , and digital GPIO.
36	D9	TX	Ю	P0.6	Primarily used as UART TX, but can also be used as a digital GPIO.
37	A3	ADC3	Ю	P0.29	Analog input ADC3 ² , and digital GPIO.
38	D10	RX	Ю	P0.08	Primarily used as UART RX, but can also be used as a digital GPIO.
39	AGND	AGND	POWER		System analog ground.
40	D3	RESERVED ³	Ю	P1.1	UART flow control interface CTS, SCL1 (Wire1), SPI1 MOSI, and digital only GPIO.
41	A4	RESERVED ³	Ю	P0.30	Analog input ADC4 ² , and digital GPIO.
42	D2	RESERVED ³	Ю	P1.2	UART flow control interface RTS, SDA1 (Wire1), SPI1 SCK, and digital only GPIO.
43	A5	RESERVED ³	Ю	P0.31	Analog input ADC5 ² , and digital GPIO.
44	Quectel USB D+	SOM0	Ю		Data+ pin of the R410M USB port.
45	A6	RESERVED ³	Ю	P0.5	Analog input ADC6 ² , and digital GPIO.
46	Quectel USB D-	SOM1	IO		Data- pin of the R410M USB port.
47	A7	RESERVED ³	Ю	P0.2	Analog input ADC7 ² , and digital GPIO.
48	D8	CS	Ю	P1.3	SPI interface CS, and digital only GPIO.
49	AGND	AGND	POWER		System analog ground.
50	DII	MISO	Ю	P1.14	SPI interface MISO, and digital only GPIO.
51	NC	RESERVED ³	NC		Leave unconnected.
52	D12	MOSI	Ю	P1.13	SPI interface MOSI, and digital only GPIO.
53	NC	RESERVED ³	NC		Leave unconnected.
54	D13	SCK	Ю	P1.15	SPI interface SCK, and digital only GPIO.
55	NC	RESERVED ³	NC		Leave unconnected.
56	GND	GND	POWER		System analog ground.

57	NC	RESERVED ³	NC		Leave unconnected.
58	NC	RESERVED ³	NC		Leave unconnected.
59	NC	RESERVED ³	NC		Leave unconnected.
60	NC	RESERVED ³	NC		Leave unconnected.
61	RGBR	RED	Ю	P0.13	Red pin of the RGB LED.
62	D22	GPIO0	Ю	P0.24	GPIO0, digital only.
63	RGBG	GREEN	Ю	P0.14	Green pin of the RGB LED.
64	D23	GPIO1	Ю	P1.9	GPIO1, digital only.
65	RGBB	BLUE	Ю	P0.15	Blue pin of the RGB LED.
66	D4	PWM0	Ю	P1.8	SPI1 MISO, Digital only GPIO, and PWM0.
67	SIM_VCC ¹	SOM5 ³	POWER		Leave unconnected, 1.8V/3V SIM Supply Output from R410M.
67 68	SIM_VCC ¹	SOM5 ³ PWM1	POWER	P1.10	Leave unconnected, 1.8V/3V SIM Supply Output from R410M. Digital only GPIO, and PWM1.
				P1.10	,
68	D5	PWM1	Ю	P1.10	Digital only GPIO, and PWM1.
68 69	D5 SIM_RST ¹	PWM1 SOM6 ³	10		Digital only GPIO, and PWM1. Leave unconnected, 1.8V/3V SIM Reset Output from R410M.
68 69 70	D5 SIM_RST ¹ D6	PWM1 SOM6 ³ PWM2	10 10		Digital only GPIO, and PWM1. Leave unconnected, 1.8V/3V SIM Reset Output from R410M. Digital only GPIO, and PWM2.
68 69 70 71	D5 SIM_RST ¹ D6 SIM_CLK ¹	PWM1 SOM6 ³ PWM2 SOM7 ³	10 10 10	P1.11	Digital only GPIO, and PWM1. Leave unconnected, 1.8V/3V SIM Reset Output from R410M. Digital only GPIO, and PWM2. Leave unconnected, 1.8V/3V SIM Clock Output from R410M.
68 69 70 71 72	D5 SIM_RST ¹ D6 SIM_CLK ¹	PWM1 SOM6 ³ PWM2 SOM7 ³ PWM3	10 10 10 10	P1.11	Digital only GPIO, and PWM1. Leave unconnected, 1.8V/3V SIM Reset Output from R410M. Digital only GPIO, and PWM2. Leave unconnected, 1.8V/3V SIM Clock Output from R410M. Digital only GPIO, and PWM3. Leave unconnected, 1.8V/3V SIM Data I/O of R410m with

¹These pins are connected to the internal MFF2 SIM and should be left open.

³SoM-specific and Reserved pins will vary depending on module. They are able to be used on the B523, but their function may be be different on future modules.

LED STATUS

System RGB LED

Unlike the Boron, the B523 module does not have an on-module RGB system status LED. We have provided its individual control pins for you to connect an LED of your liking. This will allow greater flexibility in the end design of your products.

A detailed explanation of different color codes of the RGB system LED can be found here.

²A0-A7 are 12-bit Analog-to-Digital (A/D) inputs (0-4095).

 $^{^4}$ RI is available on the B523 (Quectel) but not on the B402 (u-blox LTE M1)

⁵The VCC maximum is 4.3V on the B523 (Quectel) but is 4.2V on the B402 (u-blox LTE M1). For compatibility across modules, limit this to 4.2V.

Technical specifications

ABSOLUTE MAXIMUM RATINGS [1]

Supply voltages

Parameter	Symbol	Min Typ	Max	Unit
Supply voltages				
Supply Input Voltage	VCC	-0.3	+4.7	V
Supply Input Voltage	3V3	-0.3	+3.9	V
VBUS USB supply voltage	VUSB	-0.3	+5.8	V
I/O pin voltage				
VI/O, VDD ≤ 3.6 V	IO	-0.3	VDD + 0.3	V
VI/O, VDD > 3.6 V	IO	-0.3	+3.9	V
NFC antenna pin current				
I _{NFC1/2}	NFC1/NFC2		80	mA
Radio				
BT RF input level (52840)			10	dBm
Environmental				
Storage temperature		-40	+85	°C

[1] Stresses beyond those listed under absolute maximum ratings may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated under recommended operating conditions is not implied. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

RECOMMENDED OPERATING CONDITIONS

Parameter	Symbol	Min	Тур	Max	Unit
Supply voltages					
Supply Input Voltage	VCC	+3.6	+3.8	+4.3	V
Supply Input Voltage	3V3	+3.0	+3.3	+3.6	V
VBUS USB supply voltage	VUSB	+4.35	+5.0	+5.5	V
Environmental					
Normal operating temperature ¹		-20	+25	+75 ³	°C
Extended operating temperature ²		-40		+85	°C
Humidity Range Non condensing, relative humidity				95	%

Notes:

¹ Normal operating temperature range (fully functional and meet 3GPP specifications).

² Extended operating temperature range (RF performance may be affected outside normal operating range, though module is fully functional)

³ The maximum operating temperature is 75°C on the B523 (Quectel) but is 65°C on the B402 (ublox LTE M1). For compatibility across modules, limit this to 65°C.

Boron has two radio modules.

nRF52840

- Bluetooth® 5, 2.4 GHz
 - o 95 dBm sensitivity in 1 Mbps Bluetooth® low energy mode
 - \circ 103 dBm sensitivity in 125 kbps Bluetooth® low energy mode (long range)
 - \circ 20 to +8 dBm TX power, configurable in 4 dB steps

4G LTE cellular characteristics for EG91-E

Parameter	Value
Protocol stack	3GPP Release 13
RAT	LTE Cat 1
LTE FDD Bands	Band 28A (700 MHz)
	Band 20 (800 MHz)
	Band 8 (900 MHz)
	Band 3 (1800 MHz)
	Band 1 (2100 MHz)
	Band 7 (2600 MHz)
WCDMA Bands	Band 8 (900 MHz)
	Band 1 (2100)
GSM Bands	EGSM900 (900 MHz)
	DCS1800 (1800 MHz)
Power class	Class 4 (33dBm ± 2dB) for EGSM900
	Class 1 (30dBm ± 2dB) for DCS1800
	Class E2 (27dBm ± 3dB) for EGSM900 8-PSK
	Class E2 (26dBm ± 3dB) for DCS1800 8-PSK
	Class 3 (24dBm ± 3dB) for WCDMA bands
	Class 3 (23dBm ± 2dB) for LTE FDD bands

These specifications are based on the nRF52840 datasheet.

Symbol	Parameter	Min	Тур	Max	Unit
VIH	Input high voltage	0.7 xVDD		VDD	V
VIL	Input low voltage	VSS		0.3 xVDD	V
VOH,SD	Output high voltage, standard drive, 0.5 mA, VDD ≥1.7	VDD - 0.4		VDD	V
VOH,HDH	Output high voltage, high drive, 5 mA, VDD \geq 2.7 V	VDD - 0.4		VDD	V
VOH,HDL	Output high voltage, high drive, 3 mA, VDD \geq 1.7 V	VDD - 0.4		VDD	V
VOL,SD	Output low voltage, standard drive, 0.5 mA, VDD \geq 1.7	VSS		VSS + 0.4	V
VOL,HDH	Output low voltage, high drive, 5 mA, VDD \geq 2.7 V	VSS		VSS + 0.4	V
VOL,HDL	Output low voltage, high drive,3 mA, VDD \geq 1.7 V	VSS		VSS + 0.4	V
IOL,SD	Current at VSS+0.4 V, output set low, standard drive, VDD≥1.7	1	2	4	mA
IOL,HDH	Current at VSS+0.4 V, output set low, high drive, VDD >= 2.7V	6	10	15	mA
IOL,HDL	Current at VSS+0.4 V, output set low, high drive, VDD >= 1.7V	3			mA
IOH,SD	Current at VDD-0.4 V, output set high, standard drive, VDD≥1.7	1	2	4	mA
IOH,HDH	Current at VDD-0.4 V, output set high, high drive, VDD >= 2.7V	6	9	14	mA
IOH,HDL	Current at VDD-0.4 V, output set high, high drive, VDD >= 1.7V	3			mA
tRF,15pF	Rise/fall time, standard drivemode, 10-90%, 15 pF load ¹		9		ns
tRF,25pF	Rise/fall time, standard drive mode, 10-90%, 25 pF load ¹		13		ns
tRF,50pF	Rise/fall time, standard drive mode, 10-90%, 50 pF load ¹		25		ns
tHRF,15pF	Rise/Fall time, high drive mode, 10-90%, 15 pF load ¹		4		ns
tHRF,25pF	Rise/Fall time, high drive mode, 10-90%, 25 pF load ¹		5		ns
tHRF,50pF	Rise/Fall time, high drive mode, 10-90%, 50 pF load ¹		8		ns
RPU	Pull-up resistance	11	13	16	kΩ
RPD	Pull-down resistance	11	13	16	kΩ
CPAD	Pad capacitance		3		рF
CPAD_NFC	Pad capacitance on NFC pads		4		рF
INFC_LEAK	Leakage current between NFC pads when driven to different states		1	10	μΑ


¹Rise and fall times based on simulations

Mechanical specifications

DIMENSIONS AND WEIGHT

Parameters	Value	Unit
Width	30	mm
Height	42	mm
Thickness	5.5	mm
Weight	6.2	grams

MECHANICAL DRAWING

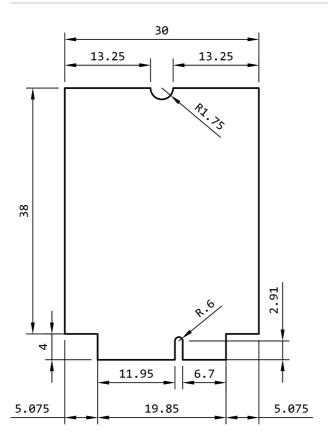

Dimensions are in millimeters.

The mating connector is a an M.2 (NGFF) type 4. Note that there are several different key configurations for the M.2, and type 4 is different than is commonly used on SSDs.

One compatible connector is the TE 2199230-4. It is widely available including at suppliers such as DigiKey.





We recommend this screw assembly to securely affix the B series SoM to your circuit board. From top to bottom:

- M3 screw, 3mm long
- M3 washer
- M3 standoff, 2.45mm



• Mounting hole, 2.6 mm metal hole, 3.1mm metal ring diameter (picture is of the bottom side of the circuit board)



- An <u>alternative design</u> uses a <u>JAE SM3ZS067U410-NUTI-R1200</u> standoff. It's reflow soldered to your base board and has a threaded hole for a M2*3 screw to hold down the SoM. This may be easier to obtain.
- Note that a hold-down screw is required because the M.2 connector does not have integrated locks and the SoM will pop up if not attached to the base board.

DESIGN CONSIDERATIONS

We strongly recommend against placing components under the SOM board because there is not enough height.



Product Handling

ESD PRECAUTIONS


The B series contains highly sensitive electronic circuitry and is an Electrostatic Sensitive Device (ESD). Handling an B series without proper ESD protection may destroy or damage it permanently. Proper ESD handling and packaging procedures must be applied throughout the processing, handling and operation of any application that incorporates the B series module. ESD precautions should be implemented on the application board where the B series is mounted. Failure to observe these precautions can result in severe damage to the B series!

CONNECTORS


The U.FL antenna connector is not designed to be constantly plugged and unplugged. The antenna pin is static sensitive and you can destroy the radio with improper handling. A tiny dab of glue (epoxy, rubber cement, liquid tape or hot glue) on the connector can be used securely hold the plug in place.


The M.2 edge connector is static sensitive and should be handled carefully. The M.2 connector is not designed for repeated removal and insertion of the module.

MICROCONTROLLER

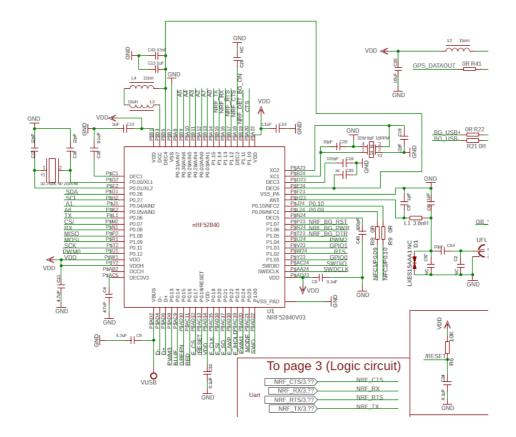



QUECTEL CELLULAR MODEM

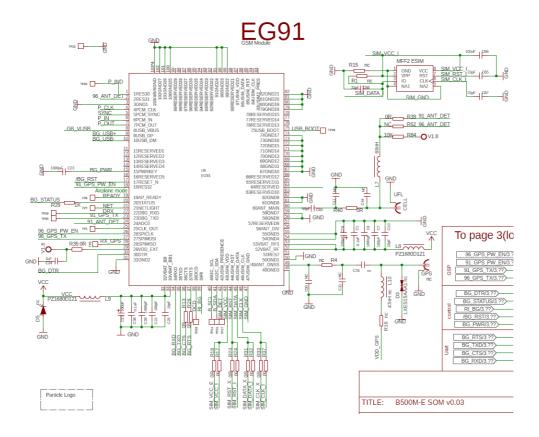

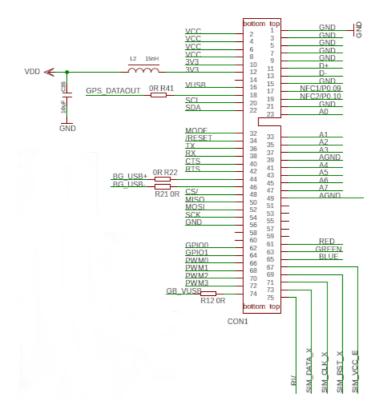



SIM AND FLASH

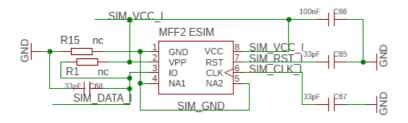


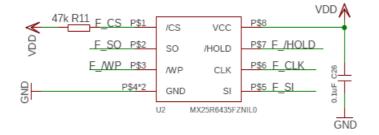

BUFFERS

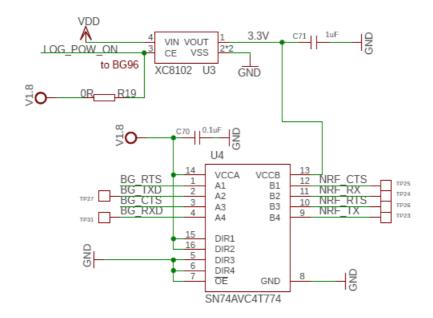

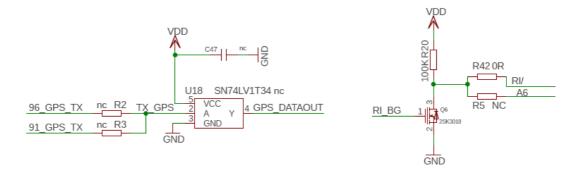

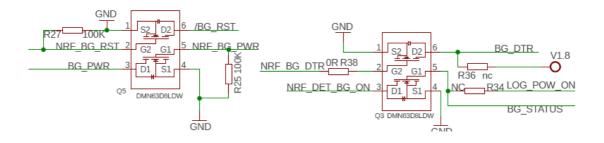

Default settings

The B series comes pre-programmed with a bootloader and a user application called Tinker. This application works with an iOS and Android app also named Tinker that allows you to very easily toggle digital pins, take analog and digital readings and drive variable PWM outputs.

The bootloader allows you to easily update the user application via several different methods, USB, OTA, Serial Y-Modem, and also internally via the Factory Reset procedure. All of these methods have multiple tools associated with them as well.

Revision history

Revision	Date	Author	Comments
001	27 Apr 2020	RK	First Release
002	30 Jul 2020	RK	Added explanation of DIV connector