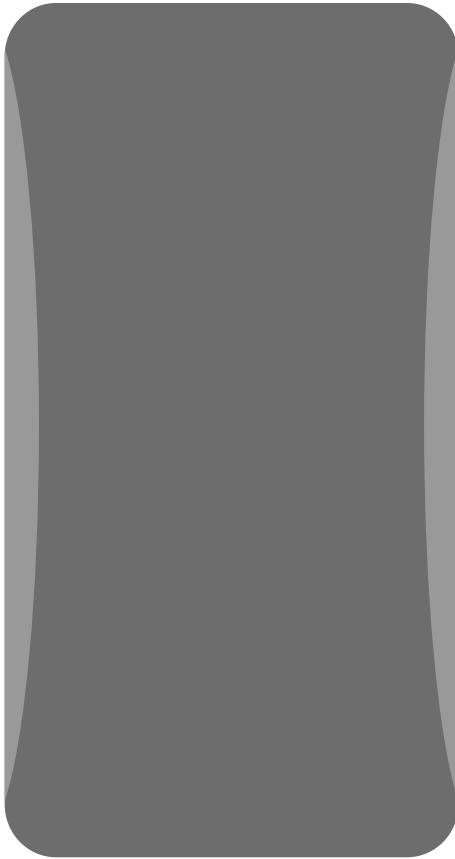
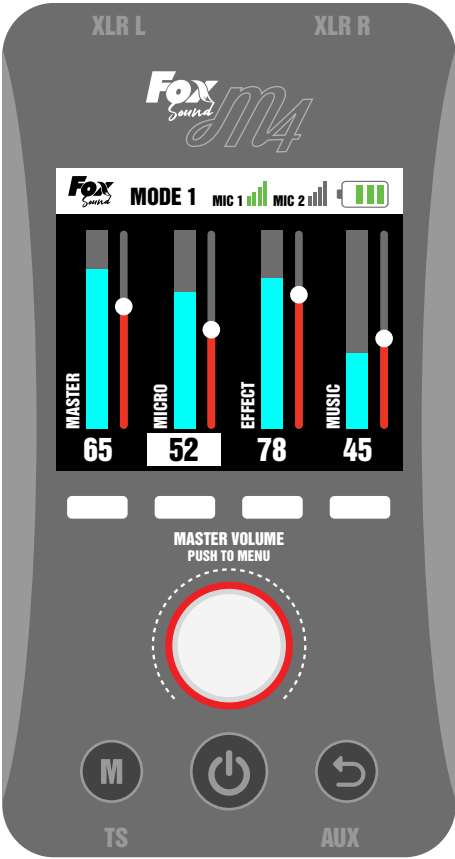
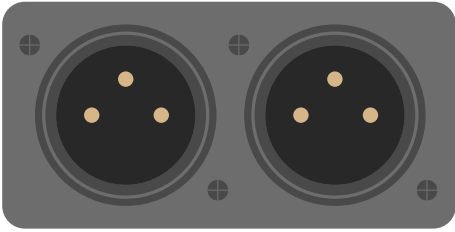


ĐÂY LÀ MENU BÊN TRONG CỦA TỪNG KÊNH

MASTER

MASTER

MODE:

HIGH:

MID:

LOW:

FBX:

SAVE:

RECALL:

FACTORY RESET

POP

+5

-2

+3

ON

MODE 1

MODE 1

MASTER

MODE:

HIGH:

MID:

LOW:

FBX:

SAVE:

RECALL:

FACTORY RESET

POP

+5

-2

+3

ON

MODE 1

MODE 1

MASTER

Would you like to save it?

YES

NO

MICRO

MICRO

MICRO 1 VOL:

MICRO 2 VOL:

COMPRESSOR:

NOSIE GATE:

LOW CUT:

HIGH CUT:

HIGH:

MID:

0

0

12%

-60dB

80Hz

12kHz

+3

0

MICRO

LOW:

FBX EQ:

FBX EQ GAIN:

DUCKER:

IR MICRO

-3

11.100Hz

0

OFF

MICRO

Paring micro...

EFFECT

EFFECT

ECHO VOL:

PRE DELAY:

DELAY:

REPEAT:

REVERB VOL:

REVERB TIME:

HIGH CUT:

LOW CUT:

85

15ms

230ms

57%

35

3260ms

10kHz

120Hz

EFFECT

ECHO VOL:

PRE DELAY:

DELAY:

REPEAT:

REVERB VOL:

REVERB TIME:

HIGH CUT:

LOW CUT:

85

15ms

230ms

57%

35

3260ms

10kHz

120Hz

MUSIC

MUSIC

STYLE:

HIGH:

MID:

LOW:

BLUETOOTH:

POP

+3

-3

0

ON

MUSIC

STYLE:

HIGH:

MID:

LOW:

BLUETOOTH:

POP


+3

-3

0

ON

POP
ACOUSTIC
DANCE/ DJ

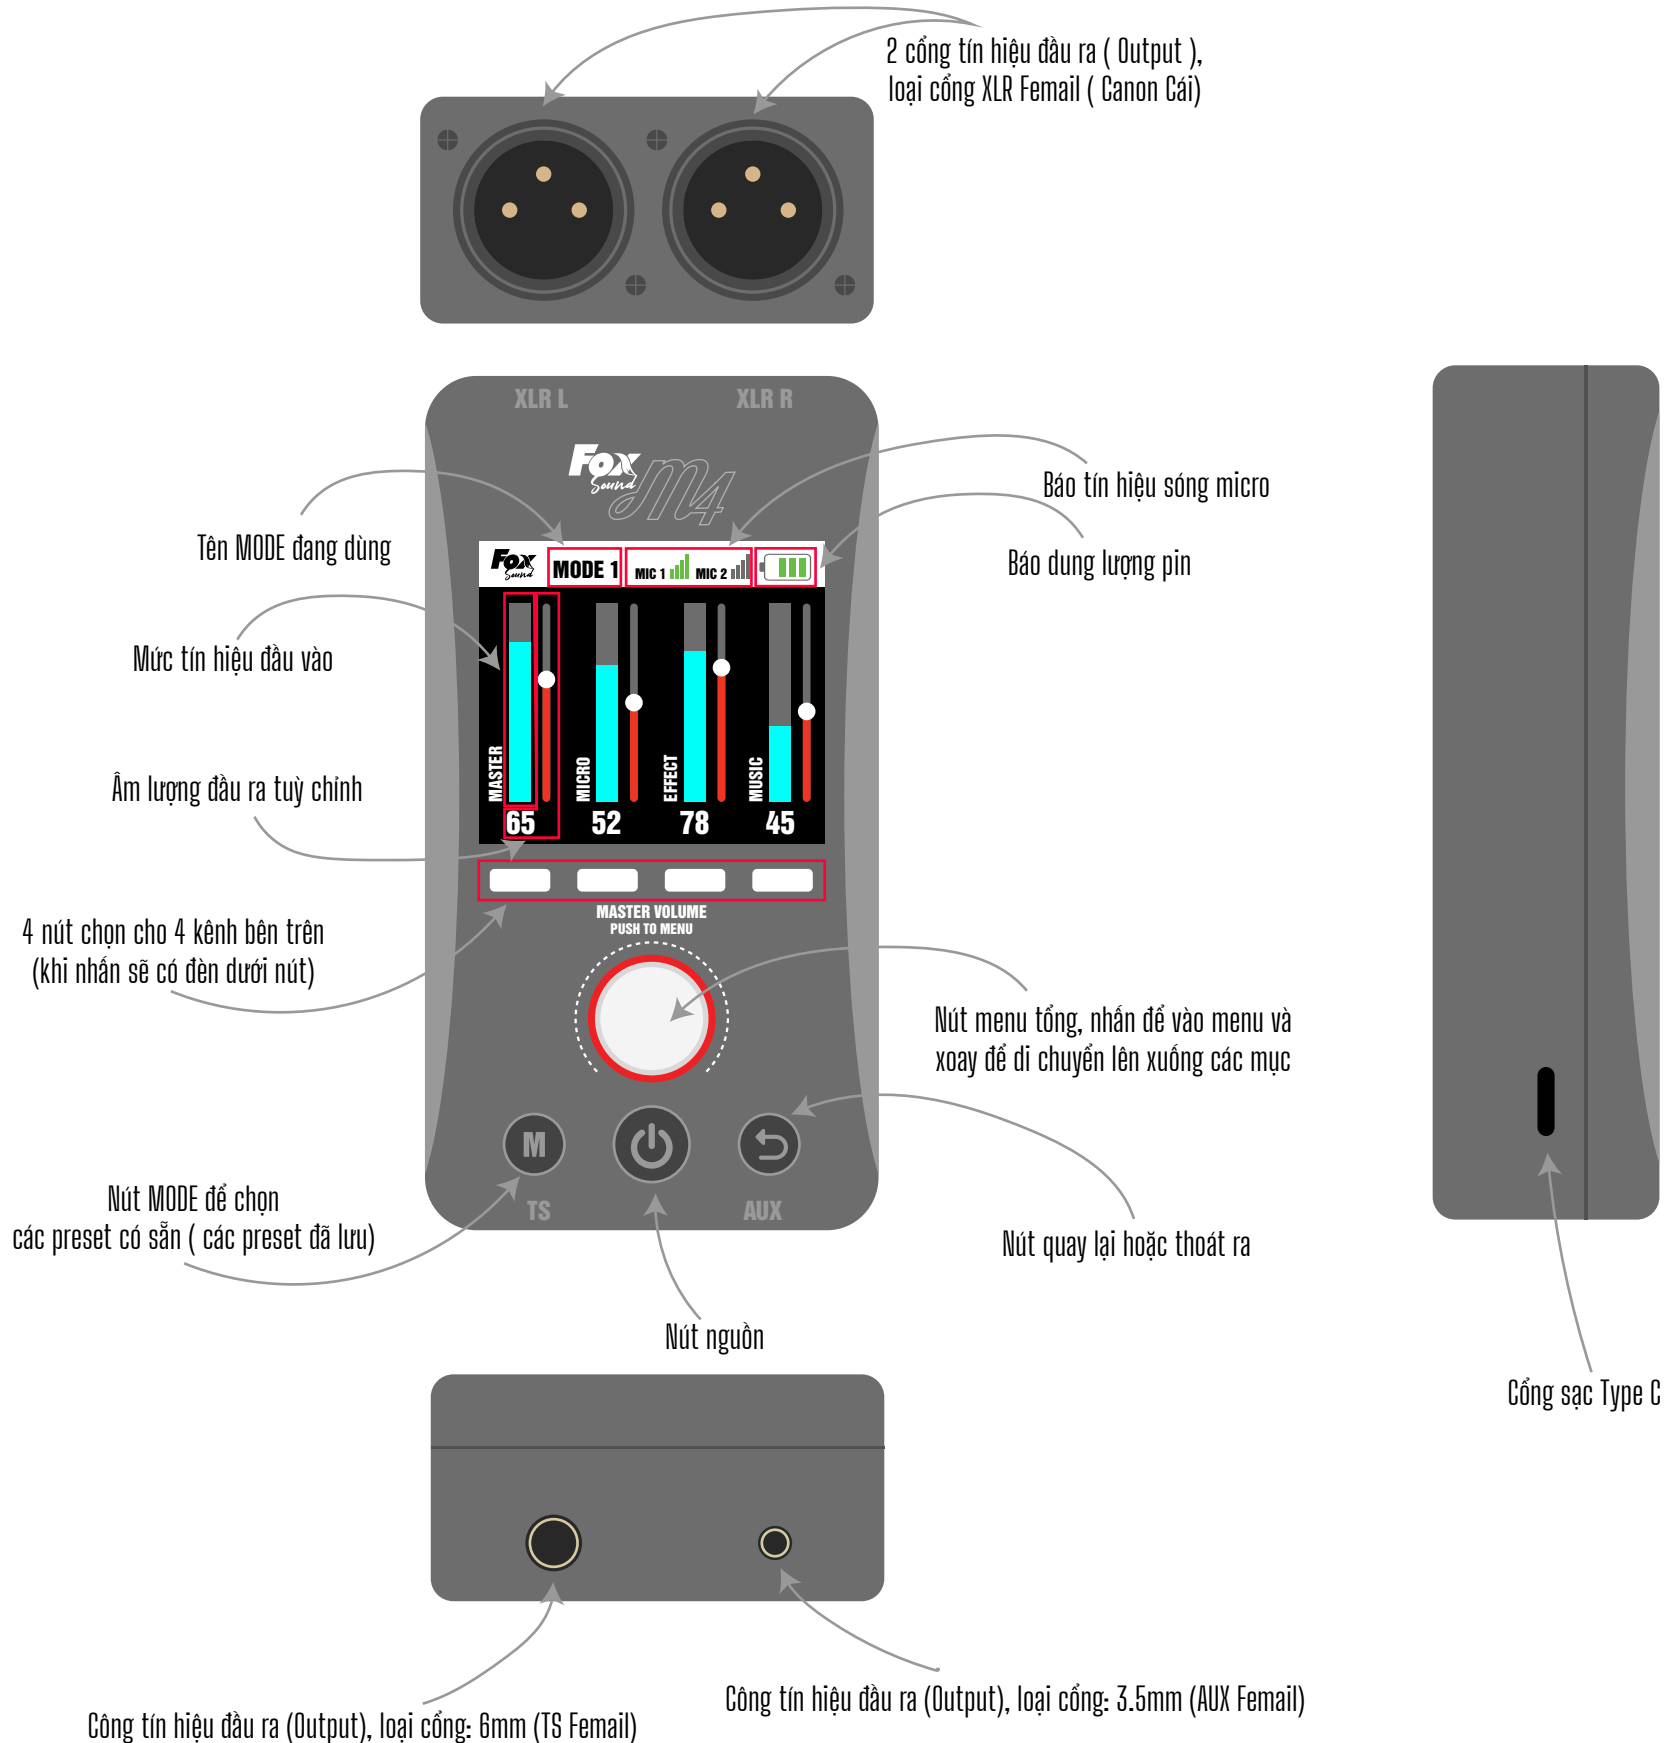

YÊU CẦU VỀ TÍNH NĂNG BÊN TRONG:

- 1/ THỜI LƯỢNG PIN CỦA ĐẦU THU KHOẢNG 8 TIẾNG/ THỜI GIAN SẠC KHOẢNG 3 TIẾNG
- 2/ CÓ CÔNG NGHỆ CHỐNG HÚ, COMPRESOR (BỘ NÉN), DUCKER, NOISE GATE (CHỐNG NHIỄU)
- 3/ CÓ THỂ LƯU ĐƯỢC 8 PRESET LÀ CÁC THÔNG SỐ ĐÃ CHỈNH
- 4/ ĐIỀU CHỈNH ĐƯỢC DẢI ÂM BASS, MID , TREBLE CHO 4 KÊNH
- 5/ ĐẦU THU VÀ TAY MICRO SÓNG ỔN ĐỊNH TRỌNG PHẠM VI 30M
- 6/ KÊNH HIỆU ỨNG (EFFECT) CÓ ĐỦ CÁC HIỆU ỨNG ECHO, DELAY, REVERB
- 7/ DÒ TẦN SỐ ĐỂ KẾT NỐI LẠI MICRO KHI MICRO BỊ LỆCH TẦN SỐ SÓNG
- 8/ CÔNG NGHỆ BLUETOOTH 5.3 TRỞ LÊN
- 9/ MÀN HÌNH LCD ĐA ĐIỂM