Vehicle Location (AVL) Interface Chart
(Version 4.1.6 Release, August 31, 2012)
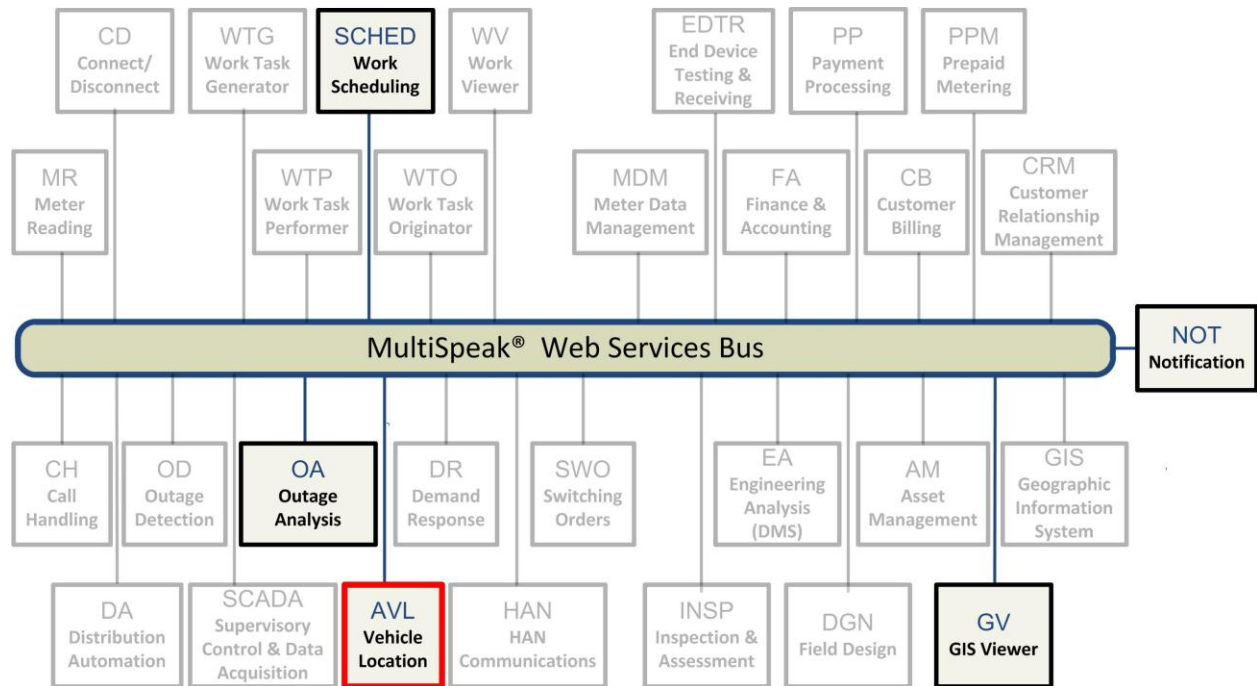
Method	AVL-OA	AVL-GV	AVL-SCHED	NOT
GetAVLMessages	REC	REC	REC	
GetAVLMessagesByAVLID	REC	REC	REC	
GetAVLMessagesByVehicleName	REC	REC	REC	
GetAVLPositionsByAVLID	REC	REC	REC	
GetAVLPositionsByVehicleName	REC	REC	REC	
GetAVLSupportedVehicles	REC	REC	REC	
GetLastAVLMessages	REC	REC	REC	
GetLastAVLPositionByAVLID	REC	REC	REC	
GetLastAVLPositions	REC	REC	REC	
InitiateAVLUpdateRequest	REC	REC	REC	
Discovery				
DomainMembersChangedNotification	OPT	OPT	OPT	
DomainNamesChangedNotification	OPT	OPT	OPT	
GetDomainMembers	OPT	OPT	OPT	
GetDomainNames	OPT	OPT	OPT	
GetMethods	REQ	REQ	REQ	REQ
GetPublishMethods	REC	REC	REC	
Subscription and Network Management				
GetRegistrationInfoByID	REC	REC	REC	
RegisterForService	REC	REC	REC	
RequestRegistrationID	REC	REC	REC	
UnregisterForService	REC	REC	REC	
PingURL	REQ	REQ	REQ	REQ

REQ - Inclusion is required for this interface.
REC - Inclusion is recommended for this interface.
OPT - Inclusion is optional for this interface.