

 3D PRINTER	DATE: 7/04/2018 PAGES: 5 FILE NAME: OQD08024.doc REVISION : A
TITLE: How to flash D9/300 firmware motherboard and LCD display?	INITIATE BY: Mikey APPROVED BY: Gary Chen

1.0 Purpose

D9 firmware need to flash the mother board and LED display separately. This instruction would guide you to flash both of them.

2.0 Scope

This document establishes the specifications required for Duplicator 9/300.

3.0 Flashing motherboard

3.1 Download the firmware.

Download the firmware first from the link below;

<http://www.wanhao3dprinter.com/Down/ShowArticle.asp?ArticleID=94>



D9/300-LCD-firmware-V0.161



D9/300_printer_firmware_v0.61

3.2 Decompress the zip file.

Note: don't change the file name.



D9/300-LCD-firmware-V0.161




3.3 Update the motherboard firmware.


3.3.1 Turn on the printer

Connect the printer with the computer through the USB cable. Computer would install the driver automatically.


3.3.2 Open CURA---Machine---Machine settings

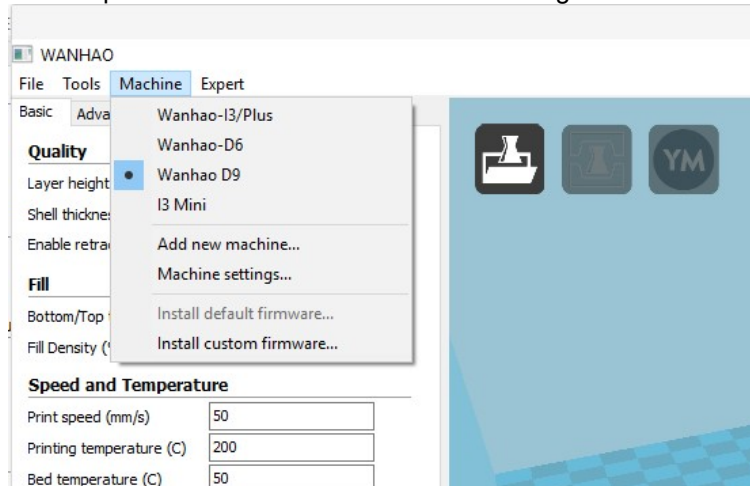


Choose the current Serial port
 Choose the baudrate **115200**
 Then Press OK

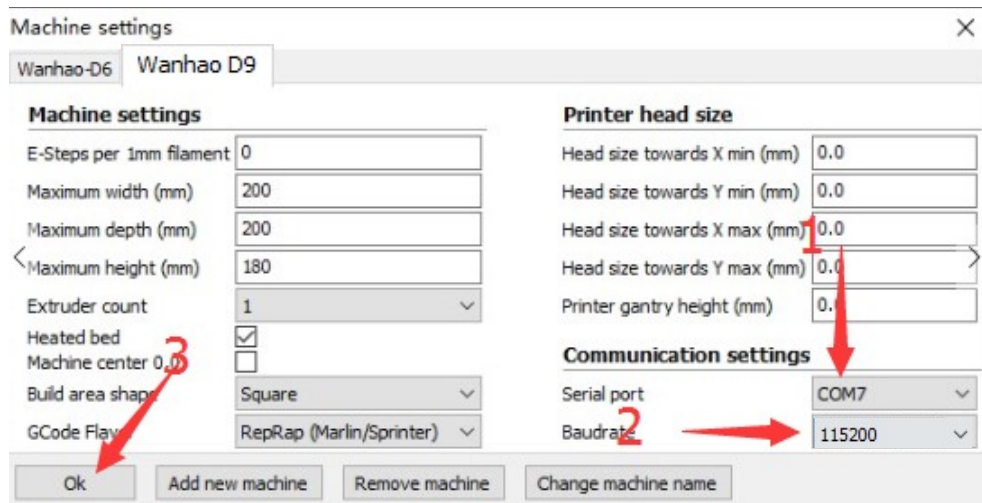

3.3.3 Navigate to Machine—Install custom firmware— D9/300_printer_firmware_v0.61.hex

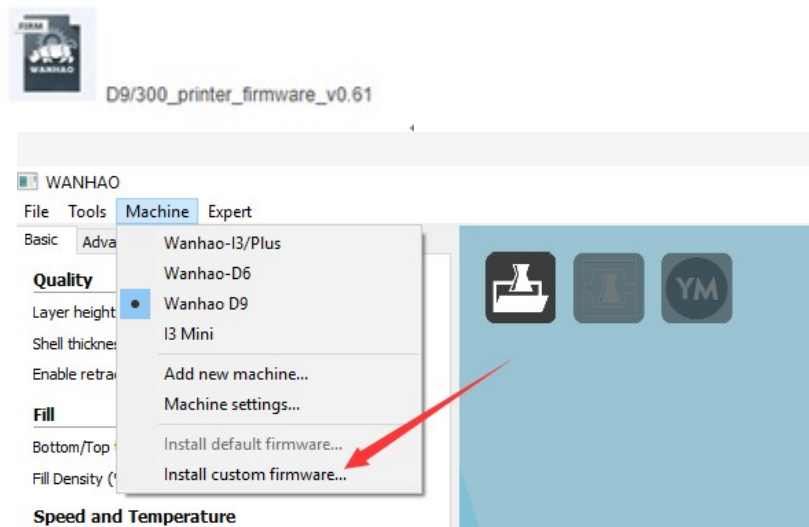


It takes 1 minute to finish updating.

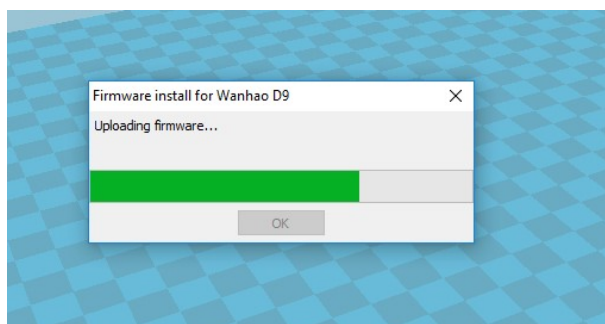

4.0. Update the LCD display firmware

4.1 Format the TF card(Micro SD card).


Note: file system: FAT32, with 4096 byte

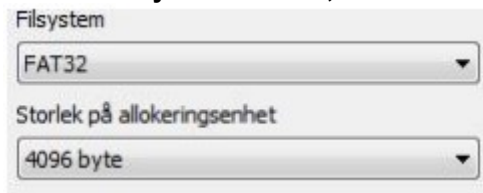


4.2 Copy the The file, DWIN_SET, to Micro SD card (The screen support Max 8G TF card)




4.3 Turn off printer and Un-screw the bolts on the bottom of printer in order to access the screen controller board.

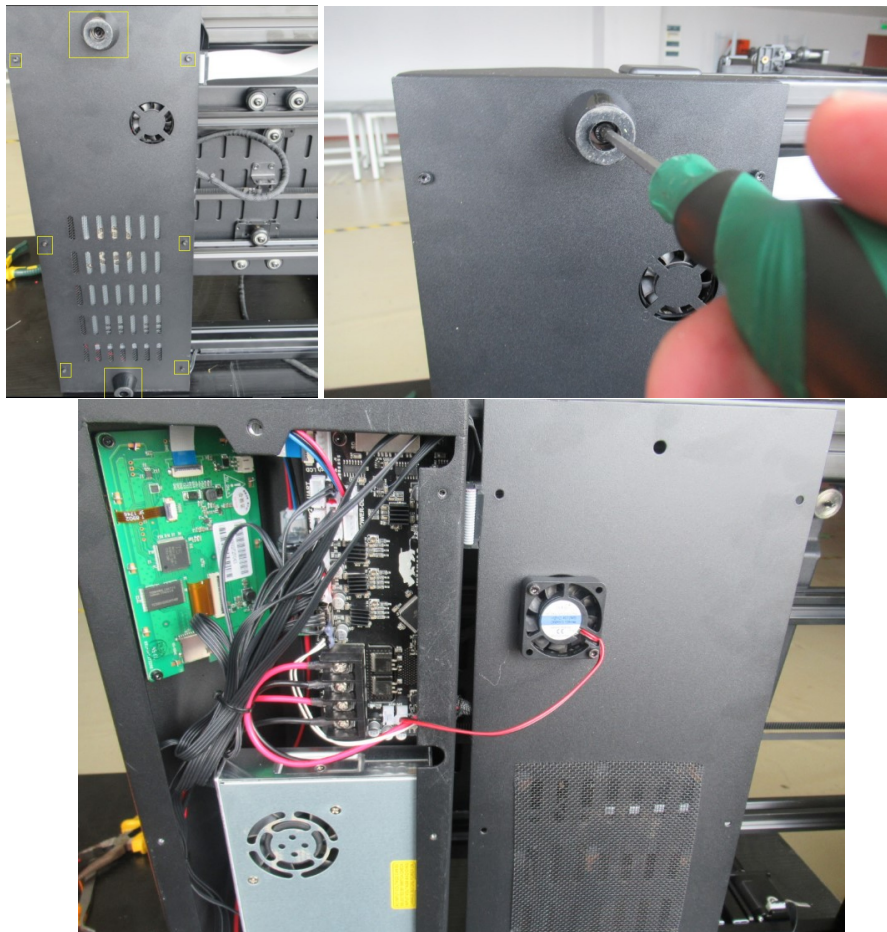

5.8. Insert the micro SD card into the card slot. Note: the Micro SD card face with letters towards you. Until you heard Kata, the card installed.

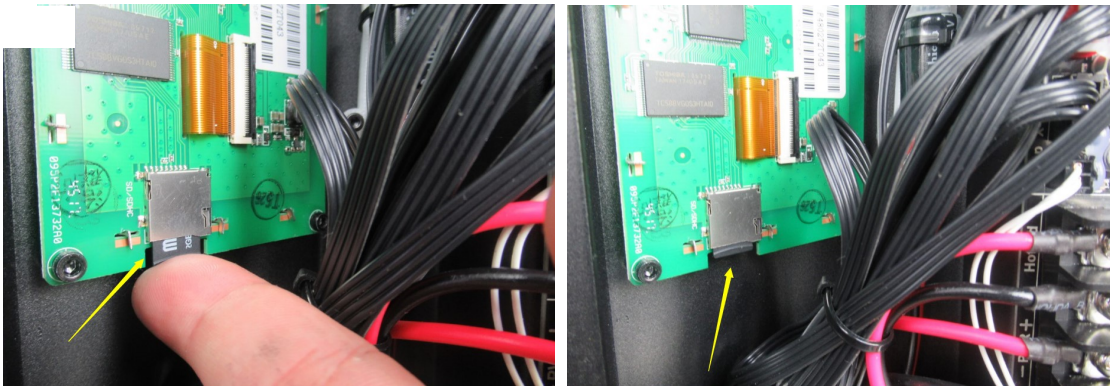

5.9. Turn on the printer. The printer would start flashing the firmware automatically and starts to read files. It takes 2 minutes to flash the LCD board. When the flashing process is finish the message SD Card Process... END! Displays on the screen.

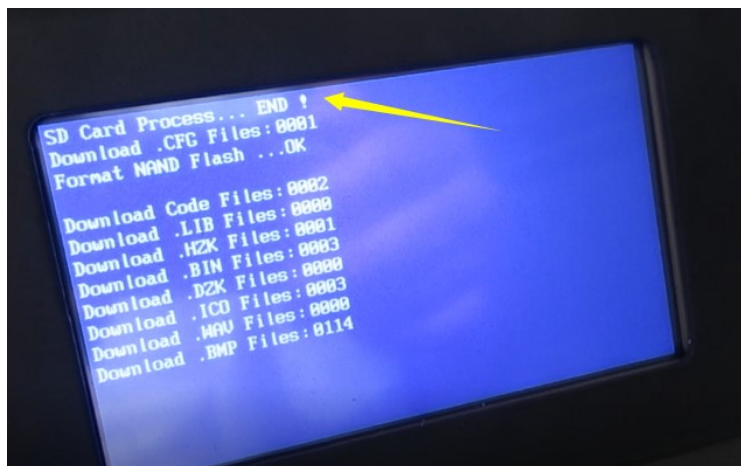

5.10 Push to remove the Micro SD card and turn on the printer to make sure the screen has flashed completely and you can operate the printer.

6.0 Revisions

A – Initiate: 07/04/18 by: Mikey