



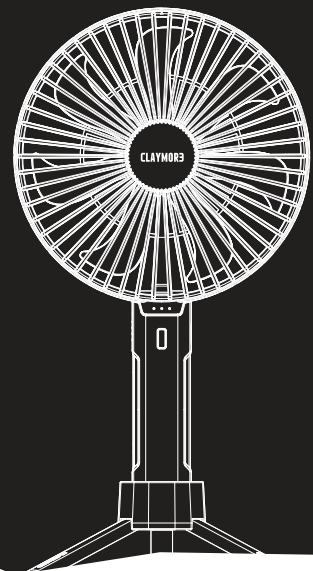

• Components

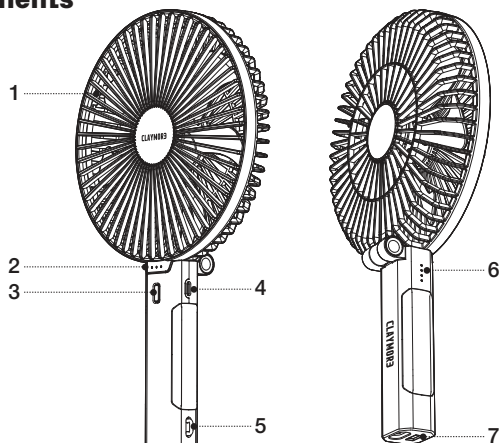


No.	Name
1	Safety cage
2	Wind speed indicator
3	Power On & Off / Fan speed control button
4	Power IN Port (Charging port for main unit)
5	Hand Strap Ring
6	Battery indicator
7	USB OUT Port (For Power bank)

• Contents




HANDY A

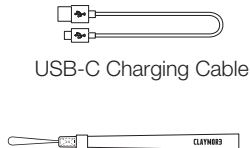

USB-C Charging Cable

Hand Strap



User manual

Accessories (Sold Separately)



Charging cradle



Pouch

※ This product has a built-in lithium-ion rechargeable battery.
Please follow the user manual before use. If any abnormality is found in the product,
discontinue the use and contact the dealer or a service center where the product was purchased.

⚠ Caution


- When using the product for the first time or storing for an extended period, please fully charge the battery.
- Overheating due to continuous use for an extended time may cause safety accidents such as product failure, fire, etc. After 3-4 hours of continuous use, give some time to allow products to cool down.
- Do not put objects or fingers into the operating fans. (Be careful of hair getting caught.)
- Keep it out of reach of children. (For children under the age of 10, please use it under adult supervision.)
- Do not disassemble, modify or repair on your own.
- Be careful in wet environments. Discontinue the use if it has water damage.
- If the temperature rises or the outer appearance deforms during charging, discontinue the use and contact a service center.
- Do not use it in high-temperature environments (near fires or heating appliances). It may cause an explosion or ignition.
- Be careful of foreign objects when the wings are rotating and ensure that children does not play with the product.
- Do not bend more than the permitted angle adjustment. This may cause damage to the product.
- Do not use if it exceeds the operating temperature range (-10°C -40°C).
- Avoid storing or using in vehicles that are exposed to direct sunlight. It may cause an explosion or product malfunction.
- Do not charge it in contact with easily flammable materials like carpets or blankets.
- After use, be sure to turn off the power for storage.
- If the product is dropped or exposed to physical shock, damage may accumulate inside the product and unexpected malfunctions may occur even during normal use. Be careful not to apply physical shocks to the product.

• Instructions

Power Button and Wind Speed Control


- Press the wind button to adjust speed in the order of level 1 – 2 – 3 – OFF.
- When the fan is operating, the indicator light at the top will turn on.

Wind Speed Indicator	Button control	Time
● ○ ○	1 time	Level 1 (Low)
● ● ○	2 times	Level 2 (Medium)
● ● ●	3 times	Level 3 (High)
○ ○ ○	4 times	OFF

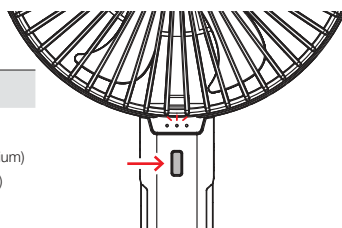

Quiet Mode Settings


Press the wind speed button when the fan power is ON for 2.5 seconds, the indicator (Level 1) on the top will flash and convert to Quiet Mode.

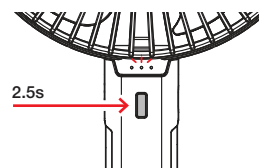

Charging the Product


The charging port is on the side of the main unit and charging cradle. Connect the USB-C charging cable to the charging port to start charging. When charging the product, the battery status indicator will blink and show its charging level. If the indicator stops blinking and all the bars are full, the charging is complete.

Remaining Battery Indicator	Charging Level	Action
● ● ● ● ●	~25%	Blinking
● ● ● ● ○	25~50%	
● ● ● ● ●	50~75%	
● ● ● ● ●	75%~	
● ● ● ● ●	Full Charge	Stops blinking

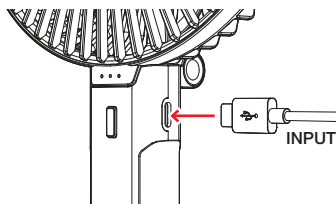

Checking Battery Level

The battery status on the side displayed for 30 seconds, when you press the POWER ON/OFF button.

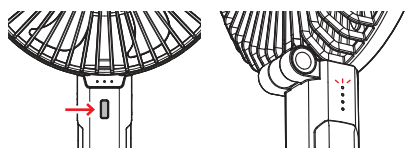


Power bank function (For charging external USB Devices)

Connect the provided charging cable or the one provided with USB devices (including smartphones, tablets, PCs and others) to the USB-OUT port of the product to start charging the product.

(Charging: Battery status indicator will be on).




※ Charging time may vary depending on the product's & external device's battery capacity and external environment.

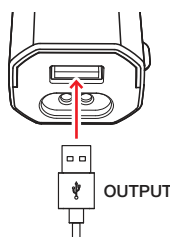

• Adjusting Angle of Fan Head and Using Charging Stand


Adjusting Angle of Fan Head

Hold the fan head and flip it backwards, which will release the hinge with 'click' sound. And adjust the desired angle for using it as a table fan like the image below.

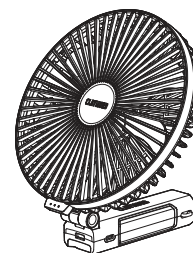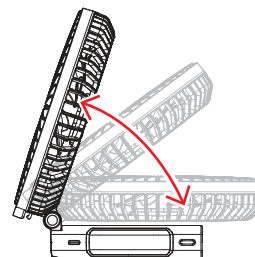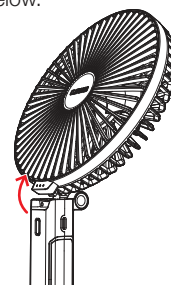


• Disassembling the safety cage and cleaning

Hold the fan head as above picture and separate the outer part of safety cage by rotating in an anti-clockwise direction.

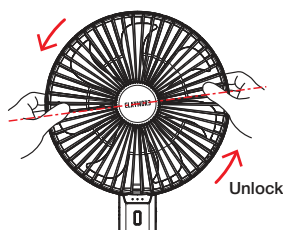


Fix the safety cage to the fan head by rotating in a clockwise direction

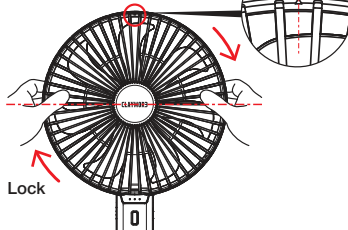

The safety cage can be washed with water after disassembling. Clean and dry thoroughly before securing it to the main unit. The main unit cannot be washed with water. Please clean with tissue or a dry towel.


※ Be sure to turn off the power, before disassembling the safety cage.
※ The blade cannot be disassembled.

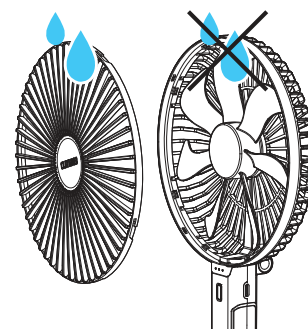

• How to use the accessories

Connecting the hand strap


Connect a Hand Strap to the ring at the bottom of the fan for convenience.

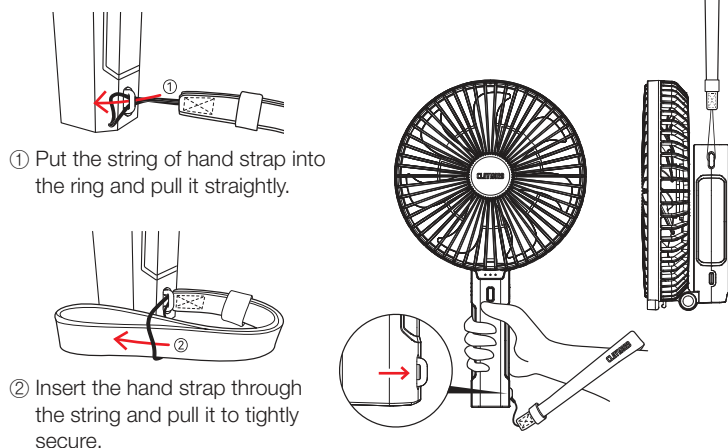

Using charging cradle

Place the main unit appropriately to the Pogo pin of the charging stand for using it as a table fan. Connect the cable to the charging port on the cradle to use and charge at the same time.

※ Charging cradle can be purchased separately.

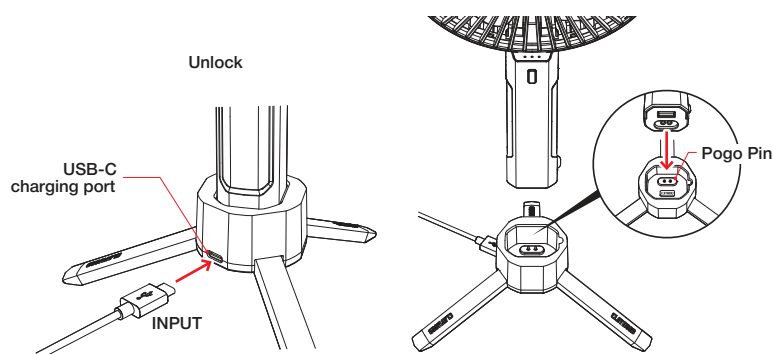

CLAYMORE

Specification

Product Name	CLAYMORE Fan HANDY A
Model No.	CLFN-H100A
Run Time	Max. 3 hours – Min. 10 hours
Charging Time	3.3 hours
Battery	Li-ion 3.6V 4,900mAh (17.64Wh)
Power	USB-C port (input): 5V 2A / USB-A port (Output): 5V 2A
Power Consumption	6W
Speed Setting	3 steps
Dimensions	170 x 43 x 290 mm
Weight	270g
In the box	HANDY A, Hand Strap, USB-C Charging Cable

※ Operating time may vary depending on the battery capacity and external environment.

Warranty

Item	CLAYMORE Fan HANDY A
Model No.	CLFN-H100A

- 1) Any functional defectives by normal use within the warranty period will be repaired free of charge. If repair is not possible, we will give you the replacement.
- 2) Warranty period: 1 year

Charged Service

- 1) Any defects or malfunctions that occur after the warranty period.
- 2) Defects caused intentionally or negligently by the consumer.
- 3) Defects caused by repairs or modifications performed by individuals or centers other than official servicing centers of Claymore.
- 4) Malfunction due to power failure or defective connecting devices.
- 5) Defects or malfunction caused by natural disasters.

※ The exterior and specifications of the products may be subject to change without prior notice for product development.



Headquarter

Prism Inc.
221, Pyeongcheon-ro, Bupyeong-gu, Incheon 21314, Republic of Korea

R&D Center


Prism Inc.
20, Magokjungang 8-ro 1-gil, Gangseo-gu, Seoul 07795, Republic of Korea

Claymore USA Inc.


6 Centerpointe Drive, Suite 700, La Palma, CA 90623, USA
info@claymoreoutdoor.com · www.claymoreoutdoor.com



Origin : Designed by Prism in Korea / Made in China

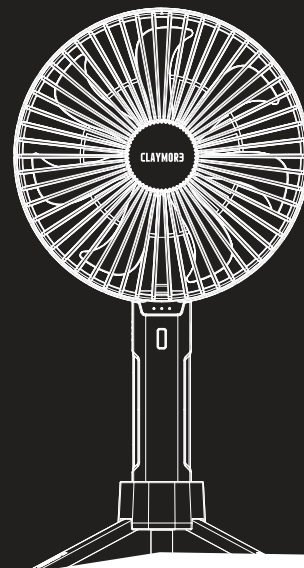

•各部位名稱

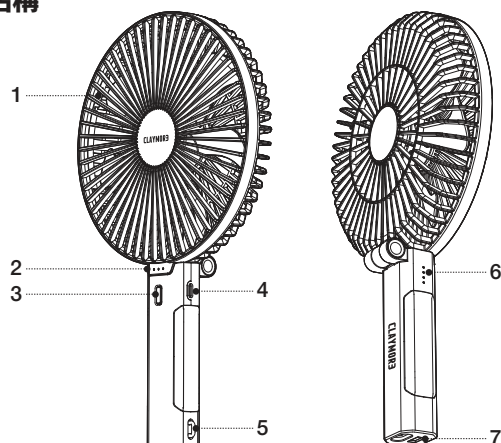


No.	Name
1	安全網罩
2	風速指示燈
3	電源(風速)按鈕
4	充電孔 (主體充電)
5	吊繩孔
6	電量指示燈
7	USB輸出接口 (行動電源)

•內容物



風扇

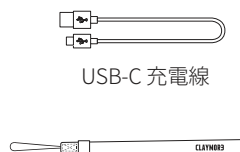

USB-C 充電線



吊繩



使用說明書(保卡)

單獨販售



充電座



收納袋

※ 本產品內建鋰離子充電電池。
使用產品前請務必閱讀使用手冊並妥善保存。
如果發現產品有問題請停止使用並聯絡原購買商店。

⚠ 注意事項


- 1) 首次使用或長期不使用時，請將電池充滿電。
- 2) 長時間連續運轉時出現過熱可能會導致產品故障或火災等安全事故。連續使用3至4小時後請短暫停止操作。
- 3) 注意不要將異物或手指插入正在運轉的風扇中。(小心不要夾住頭髮。)
- 4) 請注意放置於兒童接觸不到的地方。(10歲以下兒童請在監護人監護下使用。)
- 5) 禁止任意拆卸、改裝、修理。
- 6) 注意潮濕環境(如浴室)或浸水，如遇水請停止使用。
- 7) 充電過程中若出現溫度升高或外觀變形，請停止使用並聯絡客服。
- 8) 請勿在火源、暖氣器具等高溫附近使用，否則可能會引起爆炸或著火。
- 9) 機翼旋轉時要小心異物，特別注意不要讓兒童玩耍。
- 10) 調整角度時，請勿過度彎曲，否則會導致產品損壞。
- 11) 請勿在超過使用溫度範圍(-10°C~40°C)的條件下使用。
- 12) 請勿在陽光直射的車輛內存放或使用，可能會導致爆炸或故障。
- 13) 請勿在易燃物上充電，例如地毯或毯子。
- 14) 使用完畢後，請務必關閉電源並存放。
- 15) 如果產品主體掉落或受到衝擊，損壞可能會累積在產品內部，即使在正常使用期間也可能導致意外故障，請注意不要讓主體受到任何震動。

• 產品使用方法

電源及風速調節


按下風速按鈕，
依序選擇1-2-3段，然後選擇OFF。
當風扇運轉時，按鈕頂部的指示燈亮起。

風速指示燈	按鈕操作	風速
● ○ ○	按1下	最小風速
● ● ○	按2下	第2階段
● ● ●	按3下	第3階段
○ ○ ○	按4下	關閉

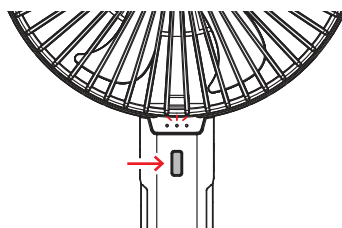

超微風設定


在風扇電源開啟的狀態下，長按風速按鈕 2.5 秒，
上端的指示燈(1段)會閃爍，並轉換為超微風模式。

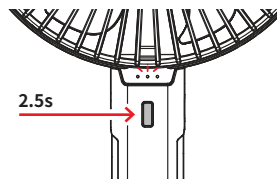

為產品充電


充電孔位於主體側邊，
當USB-C充電線連接到充電孔即可開始充電。
在充電過程中，電池電量指示燈會閃爍，並以四個階段顯示充電狀態。
當指示燈停止閃爍並持續亮起時，表示充電已完成。

風速指示燈	充電量	顯示狀態
● ● ● ○	~25%	閃爍
● ● ● ●	25~50%	
● ● ● ●	50~75%	
● ● ● ●	75%~	
● ● ● ●	滿電時	恆亮

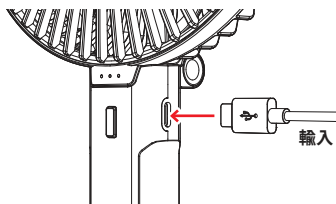

檢查電池電量


當您按下風扇上的電源(風速)按鈕時，
剩餘電池電量會在側邊指示燈上顯示 30 秒。

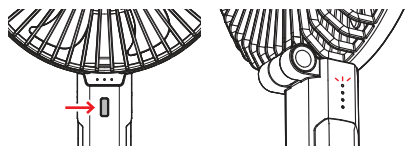

行動電源功能(外部USB裝置充電)

將產品附帶的充電線，或使用外部USB裝置(智慧型手機、
平板電腦、桌上型電腦等)所提供的充電線插入產品的USB輸出埠，
即可為外部USB裝置進行充電。
(充電時：電池剩餘電量指示燈會亮起)


※ 根據產品與外部裝置的電池容量以及外部環境，充電時間可能有所差異。

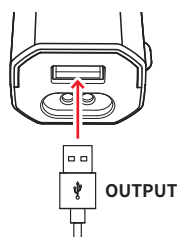

• 可調角度


頭部角度調節

握住主機頭部並將其向後翻轉，您會聽到咔嗒聲，
固定裝置即鬆開。
可以透過沿著箭頭方向移動來調整到所需的角度的，
並且可以用於桌面使用，如下圖所示。

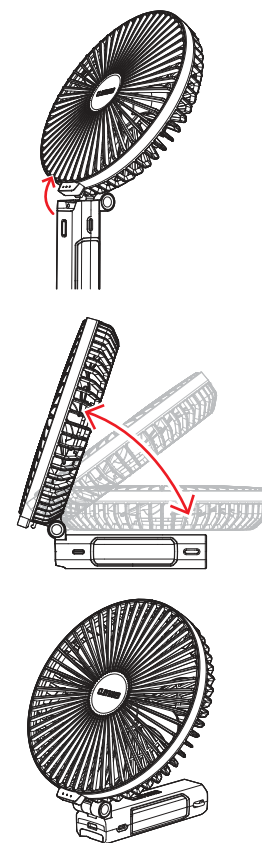


• 安全網罩分離與清洗

將雙手固定在安全網罩兩側，
向左旋轉(逆時針)可輕鬆分離。

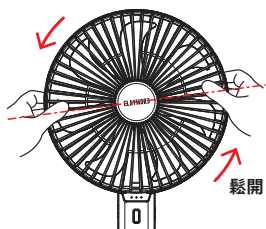

將安全網罩放入風扇正面，
向右轉動(順時針)，
聽到"卡"聲即完成安裝。

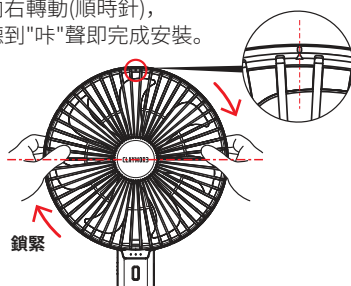


安全網罩分離後可以水洗，
請在清洗並晾乾後將其安裝到主機上。

※ 拆卸安全網前請確認已切斷電源。

風扇主體無法水洗，
請用濕紙巾擦拭即可。


※ 葉片無法分離。

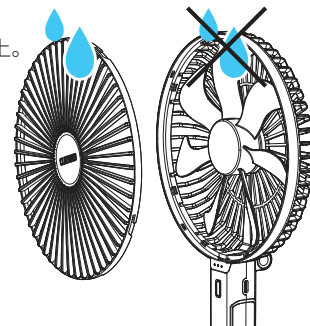


• 配件使用方法

連接吊繩


將吊繩穿入吊繩孔，攜帶更方便。

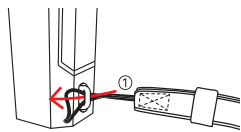

① 將吊繩的一端插入吊繩孔，並拉緊吊繩，確保其穩固並沒有多餘的繩子。

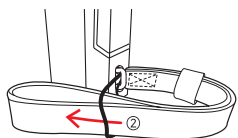


② 將吊繩穿過拉繩之間並拉動將其牢固固定。

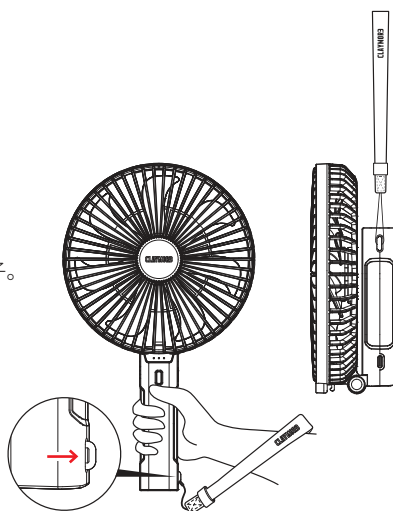

充電座的使用

當主體安裝在充電座的彈簧針位置時，可以將其用作桌面，並透過將連接線連接到充電座的充電孔，實現同時對產品進行充電和使用的功能。

※ 充電座需單獨購買。

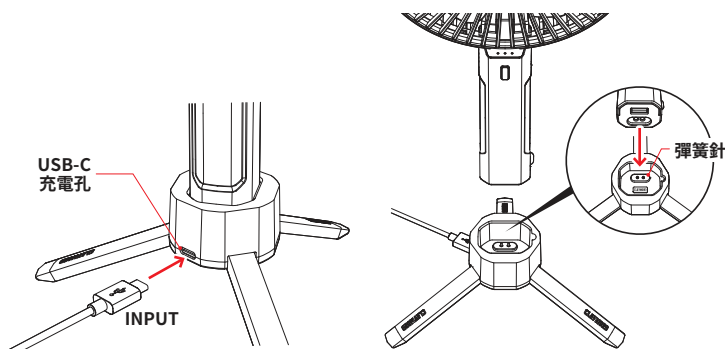

CLAYMORE

產品規格

產品名稱	CLAYMORE FAN HANDY A
型號	CLFN-H100A
使用時間	Max. 3 hours – Min. 10 hours
充電時間	3.3 hours
電池	Li-ion 3.6V 4,900mAh (17.64Wh)
電源	USB-C port (Input): 5V 2A / USB-A port (Output): 5V 2A
輸出功率	6W
速度設定	3 steps
尺寸	170 x 43 x 290 mm
重量	270g
內容物	HANDY A, Hand Strap, USB-C Charging Cable

※ 根據產品及外部設備的電池容量及外部環境，充電時間和使用時間可能不同。

產品保證書

Item	CLAYMORE FAN HANDY A
Model No.	CLFN-H100A

免費維修

- 1) 在保固期內正常使用過程中發生性能或功能上的缺陷和故障。
我們將免費維修產品，無法維修的，我們將更換新產品。
- 2) 非人為保固期間為1年。

付費維修

- 1) 超過保固期後發生的性能或功能上的缺陷和故障。
- 2) 因消費者故意或疏忽所造成的故障。
- 3) 非經本公司而自行加以修理、改裝後，所引發之一切故障。
- 4) 使用非原廠規格電源，所導致的故障。
- 5) 外部環境造成的故障，如颱風、大雨、地震等等。
- 6) 因故障品送修時未妥善包裝，導致運送過程損壞。

※ 請妥善保存此卡，未加蓋店章則無保固，遺失恕無法補發。
※ 由於產品開發，產品外觀及規格可能會有變更，恕不另行通知。



Headquarter

Prism Inc.

221, Pyeongcheon-ro, Bupyeong-gu, Incheon 21314, Republic of Korea

R&D Center

Prism Inc.

20, Magokjungang 8-ro 1-gil, Gangseo-gu, Seoul 07795, Republic of Korea

Claymore Taiwan


進口商：敦遠國際有限公司 地址：台中市豐原區綠山二街38號

電話：04-25158669


www.claymore.com.tw



Origin : Designed by Prism in Korea / Made in China

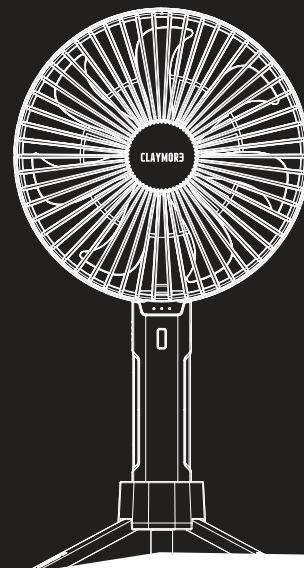

•各部分名称

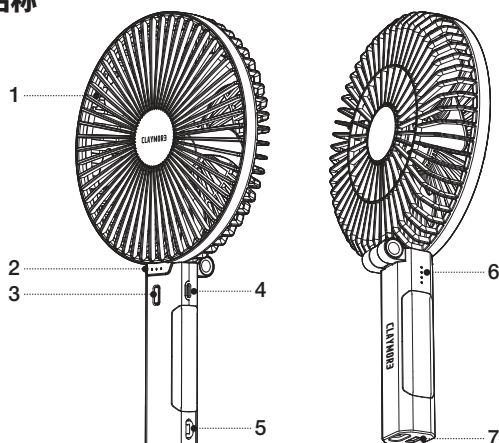


No.	Name
1	保护罩
2	风速指示灯
3	电源(风速)按键
4	充电接口 (风扇充电)
5	挂绳扣
6	电池指示灯
7	USB输出接口 (移动电源)

•包装组成



风扇



USB-C充电线



挂绳



使用说明书

配件(另卖)



充电底座



专用收纳包

※ 本产品内置锂离子充电电池。

在使用产品之前务必仔细阅读并妥善保管使用说明书。如产品出现异常，请立即停止使用并联系购买产品的销售网点或售后服务中心。

⚠ 注意事项


- 1) 在首次使用或使用长期未使用的产品前请先电池完全充满电。
- 2) 长时间连续使用可能导致产品过热引起故障或火灾等安全事故，连续使用3~4小时后请关闭电源暂时停止使用。
- 3) 不要把杂物或手指放进正在转动的风扇里。(谨防头发被风扇夹住。)
- 4) 避免幼小儿童触碰。(10岁以下儿童应在监护人的监督下使用。)
- 5) 禁止随意拆卸、改造、修理。
- 6) 避免潮湿的环境(例如：浴室)或浸水，产品进水时请停止使用。
- 7) 充电时若温度过高或产品出现外观变形，则立即停止并联系客服中心。
- 8) 禁止在热源或取暖设备等高温环境使用，可能导致产品爆炸或起火。
- 9) 谨防物体触碰旋转的叶片，尤其避免儿童拿风扇玩耍。
- 10) 调节倾角时不要过于用力弯曲，可能损坏产品。
- 11) 禁止在超出工作温度范围(-10℃~40℃)的环境使用。
- 12) 避免在阳光直射的车辆内部保管和使用，可能导致产品爆炸或故障。
- 13) 不要放在地毯或被褥等容易着火的物体上进行充电。
- 14) 使用后务必关闭电源保管。
- 15) 避免产品受到冲击，风扇掉落或受到冲击可能导致产品内部损伤积累，在正常使用的过程中出现意想不到的故障。

• 产品操作方法

电源及风速调节


每按一次风速按键，按照一档→二档→三档→关闭电源的顺序调节风速。
风扇转动时按键上面的指示灯亮灯。

风速指示灯	按键操作	风速档位
● ○ ○	按一次	一档(微风)
● ● ○	按两次	二档(弱风)
● ● ●	按三次	三档(强风)
○ ○ ○	按四次	关闭电源

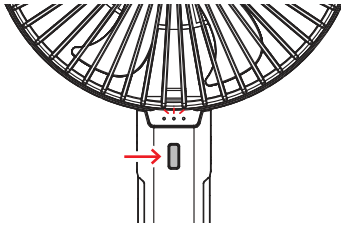

超微风设置


在开启电源(ON)的状态下长按风速按钮约2.5秒钟，则上面的指示灯(一档)闪烁并转为超微风。

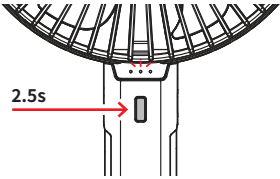

充电

充电接口位于风扇和充电底座的侧面，把USB-C充电线插到充电接口即可开始充电。
充电时电池剩余电量指示灯闪烁，并用四格显示电量。
指示灯全部亮灯并不再闪烁，则表示充满电。




电池剩余电量指示灯	电量	状态
● ● ● ●	~25%	闪烁
● ● ● ○	25~50%	
● ● ○ ●	50~75%	
● ● ○ ○	75%~	
● ● ● ●	充满	全亮

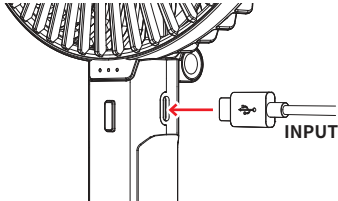

• 倾角调节


倾角调节

抓住风扇头部向后折，则随着‘嘎达’声锁扣解开。可以根据需要向箭头方向转动风扇头部调节角度，也可以像右图折成一定角度放在桌子上使用。

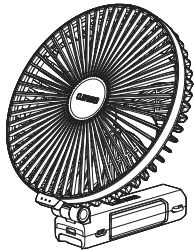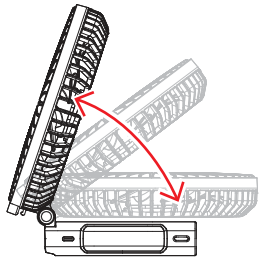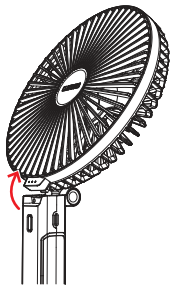

电池剩余电量检查


按风扇的电源(风速)按键，则侧面指示灯显示剩余电量约30秒钟。

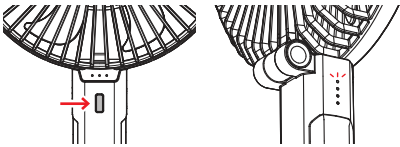

移动电源功能(外部USB设备充电)


把产品附带的充电线或外部USB设备(智能手机、平板电脑、台式电脑等)提供的充电线插到产品的USB输出接口即可给外部USB设备进行充电。
(充电时：电池剩余电量指示灯亮灯)

※ 根据产品及外部设备的电池容量和外部环境充电时间有差异。

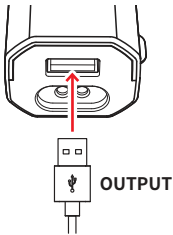


• 保护罩的拆卸及清洁方法

如图抓住风扇头部向逆时针方向转开保护罩卸下。

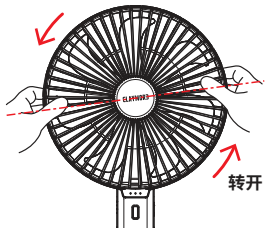


把卸下的保护罩装在风扇上向顺时针方向转动即可固定在风扇上。

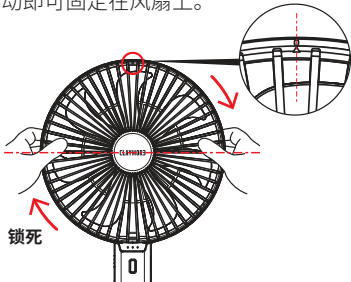

保护罩可以水洗。
清洗的保护罩请完全干燥后再安装。
风扇不能水洗。
请使用湿巾或干抹布擦拭干净。


※ 卸下保护罩时请务必关闭电源。
※ 叶片不能卸下。

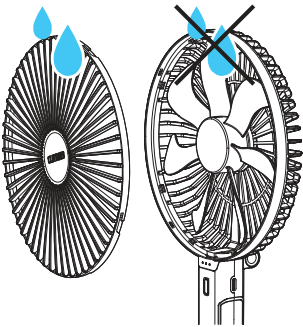

• 配件使用方法

挂绳系法


把挂绳系在风扇手柄底部使用，则移动时使用风扇更加方便。

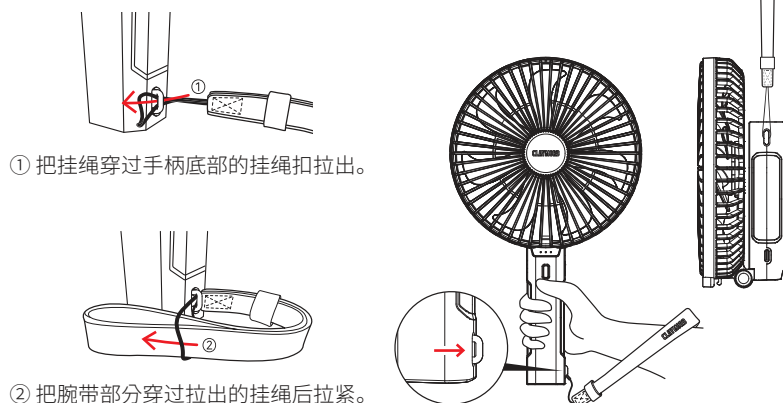

充电底座的使用

把风扇的手柄部分按照探针位置插到充电底座上，
则可以把风扇置于桌子上使用。
把电源线插到充电底座的充电接口即可一边充电一边使用风扇

※ 充电底座需要另买。

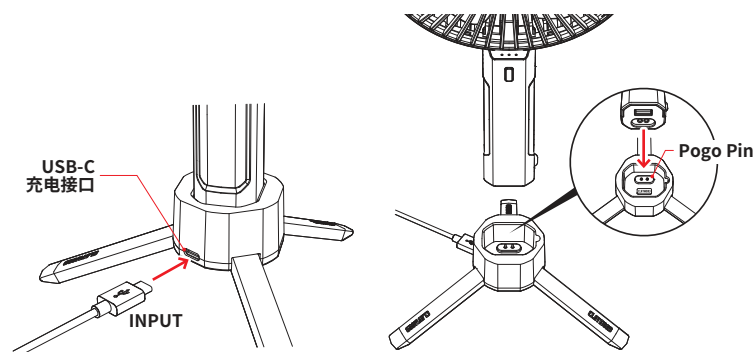

CLAYMORE

产品规格

产品名	CLAYMORE Fan HANDY A
型号	CLFN-H100A
使用时间	Max. 3 hours – Min. 10 hours
充电时间	3.3 hours
电池	Li-ion 3.6V 4,900mAh (17.64Wh)
电源	USB-C port (Input): 5V 2A / USB-A port (Output): 5V 2A
耗电	6W
速度设定	3 steps
尺寸	170 x 43 x 290 mm
重量	270g
产品组成	HANDY A, Hand Strap, USB-C Charging Cable

※ 根据产品及外部设备的电池容量及外部环境，充电时间和使用时间可能不同。

保修卡

Item	CLAYMORE Fan HANDY A
Model No.	CLFN-H100A

- 1) 对于在质保期内正常使用的过程中产生的功能上的瑕疵，提供免费修理。如无法修理，则更换为新品。
- 2) 质保期：一年/零部件保留期：三年

有偿维修

- 1) 质保期过后出现的故障或性能不良
- 2) 因消费者的过失或故意造成的故障
- 3) 因不在本公司售后服务中心进行修理或改造造成的产品不良
- 4) 因使用的电源异常或连接设备的不良造成的故障
- 5) 自然灾害造成的产品不良或缺陷

※ 为了产品的研发，产品的外观、规格等可能不事先发布通告而变更。



Headquarter

Prism Inc.

221, Pyeongcheon-ro, Bupyeong-gu, Incheon 21314, Republic of Korea

R&D Center

Prism Inc.

20, Magokjungang 8-ro 1-gil, Gangseo-gu, Seoul 07795, Republic of Korea

Claymore USA Inc.

6 Centerpointe Drive, Suite 700, La Palma, CA 90623, USA

info@claymoreoutdoor.com · www.claymoreoutdoor.com



Origin : Designed by Prism in Korea / Made in China