

212E

Control unit for 230V automations with 1 or 2 motors

Instructions for use and warnings

Content

1	Summary of Warnings	7	6	System Inspection	12
2	Product Description	7	7	Disposal of the Product	12
3	Technical Specifications	8			
4	Electrical Connections	8			
5	Instructions for use	9			

1 SUMMARY OF WARNINGS

Read carefully: lack of compliance with the following warnings could be dangerous.

⚠ WARNING PRODUCT USE IN ABNORMAL CONDITIONS NOT FORESEEN BY THE MANUFACTURER MAY GENERATE HAZARDOUS SITUATIONS; MEET THE CONDITIONS INDICATED IN THESE INSTRUCTIONS.

⚠ WARNING Do NOT LET INDIVIDUALS WITH LIMITED PHYSICAL, SENSORY OR MENTAL ABILITIES HANDLE CONTROL SYSTEMS. PREVENT CHILDREN FROM PLAYING IN THE NEAR VICINITY OF THE AUTOMATION.

⚠ WARNING **DEA** SYSTEM REMINDS YOU THAT THE CHOICE, LAYOUT AND INSTALLATION OF ALL DEVICES AND MATERIALS IN THE COMPLETE CLOSURE ASSAY MUST MEET EUROPEAN DIRECTIVES 2006/42/CE (MACHINERY DIRECTIVE), 2014/30/EU (ELECTROMAGNETIC COMPATIBILITY), 2014/35/EU (LOW VOLTAGE ELECTRICAL EQUIPMENT). FOR ALL NON EU COUNTRIES, IN ADDITION TO NATIONAL REGULATIONS IN EFFECT, WE RECOMMEND YOU ALSO MEET THE INSTRUCTIONS CONTAINED IN THE ABOVE MENTIONED DIRECTIVES FOR A SUFFICIENT LEVEL OF SAFETY.

⚠ WARNING IN NO CASE SHOULD YOU USE THE PRODUCT IN EXPLOSIVE ATMOSPHERES OR IN ENVIRONMENTS THAT CAN BE AGGRESSIVE AND DAMAGE PRODUCT PARTS.

⚠ WARNING ANY INSTALLATION, MAINTENANCE, CLEANING OR REPAIRS ON THE ENTIRE SYSTEM MUST ONLY BE PERFORMED BY QUALIFIED PERSONNEL, ALWAYS WORKING WITHOUT POWER AND STRICTLY FOLLOWING ALL THE REGULATIONS CONCERNING ELECTRICAL SYSTEMS IN FORCE IN THE COUNTRY OF INSTALLATION.

⚠ WARNING FOLLOW THE INSTRUCTIONS PROVIDED IN THE ILLUSTRATION FOR CORRECT UNIT INSTALLATION SUPPLIED IN BOX. SHOULD THE CONTROL UNIT BE INCORPORATED IN THE DRIVE UNIT, REFER TO THE RELEVANT INSTRUCTION MANUAL FOR ANY FURTHER INSTRUCTIONS ON ASSEMBLY AND WIRING (FOR EXAMPLE, INSTRUCTIONS ON WIRE PASS-THROUGH HOLES, WIRE CLAMP USE, ETC.). FAILURE TO OBSERVE THESE INSTRUCTIONS CAN COMPROMISE THE ADEQUATE ELECTRICAL PROTECTION LEVEL.

⚠ WARNING THE USE OF SPARE PARTS NOT INDICATED BY **DEA** SYSTEM AND/OR INCORRECT ASSEMBLY MAY CAUSE HAZARDOUS SITUATIONS TO PEOPLE, ANIMALS AND PROPERTY; THEY MAY ALSO CAUSE PRODUCT MALFUNCTIONS; ALWAYS USE THE PARTS INDICATED BY **DEA** SYSTEM AND FOLLOW THE ASSEMBLY INSTRUCTIONS.

⚠ WARNING THE INCORRECT EVALUATION OF IMPACT FORCES CAN CAUSE SERIOUS DAMAGES TO PEOPLE, ANIMALS AND PROPERTY. **DEA** SYSTEM REMINDS YOU THAT THE INSTALLER MUST CHECK THAT THESE IMPACT FORCES, MEASURED AS PER THAT INDICATED BY STANDARD EN 12445, ARE ACTUALLY LOWER THAN THOSE SET BY STANDARD EN12453.

⚠ WARNING ANY EXTERNAL SAFETY DEVICES USED TO MEET THE IMPACT FORCE LIMITS MUST COMPLY WITH STANDARD EN12978.

⚠ WARNING IN COMPLIANCE WITH EU DIRECTIVE 2012/19/EU ON ELECTRICAL AND ELECTRONIC EQUIPMENT WASTE (WEEE), THIS ELECTRICAL PRODUCT MUST NOT BE DISPOSED OF AS UNSORTED MUNICIPAL WASTE. PLEASE DISPOSE OF THE PRODUCT BY BRINGING IT TO YOUR LOCAL MUNICIPAL COLLECTION POINT FOR APPROPRIATE RECYCLING.

2 PRODUCT DESCRIPTION

The 212E control panel was exclusively designed to control **DEA** System automations with one or 2 230V ~ motors. The environment for which it was designed and tested is the "normal" residential hinged, sliding and overhead door opening situation; the control panel is equipped with a built-in 433.92 MHz radio receiver for HCS or HT12E encoding and is characterised by extremely simple installation that allows all operating parameters to be set with 2 keys and signal LED. Should the control unit be supplied in BOX, the protection grade is IP55 if correctly installed.

3 TECHNICAL SPECIFICATIONS

Power voltage (V)	230V ~ ±10% (50Hz)
Flashing output 230V	230 V ~ max 75mA art. LED230AI
Auxiliary power output (24Vaux)	24 V ~ max 200mA (24Vaux + 24Vsic)
Safety power output (24Vsic)	
Max motor power	2 x 500W max
Fuse F1	T5A 250V
Fuse F2	F100mA 250V
Operating temperature limit	-20÷50 °C
Radio receiver frequency	433,92 MHz rolling code encoding/dipswitch
Max. no. radio controls managed	30

4 ELECTRICAL CONNECTIONS

Complete the electrical connections following the indications in “Table 1” and the diagram on page 49-50.

WARNING Connect to the 230V ~ 50 Hz mains using an omnipolar switch or other device that ensure omnipolar mains cut-off, with a 3,5 mm contact opening distance.

WARNING For adequate electrical safety, keep low safety voltage wires (controls, electro-locks, antenna, auxiliary power) clearly separate from 230V ~ power wires (**minimum 4 mm in air or 1 mm via supplementary insulation**) placing them in plastic raceways and securing them with adequate clamps near terminal boards.

WARNING All wires must be striped and unsheathed in the immediate vicinity of terminals. Keep wires slightly longer to subsequently eliminate any excess.

Table 1 “terminal board connection”

1-2	Power input 230 V ~ - 50Hz (L = phase, N = neutral)
3-4	Flashing output 230 V ~ 50 Hz max 40W
5-6-7	Motor output 2 max 500W (5 = open, 6 = shared, 7 = closed)
8-9-10	Motor output 1 max 500W (8 = open, 9 = shared, 10 = closed)
11-13	Output 24 V ~ controlled safety device power. To be used for TX photocell and safety device power when checking their operations at the beginning of every manoeuvre.
12-13	Output 24 V ~ auxiliary and uncontrolled safety device power. To be used for auxiliary device, RX photocell (in any case) and safety device power when checking their operations at the beginning of every manoeuvre.
14	WARNING operations with 1 motor: N.C. input closing limit switch. If not used, short circuit to terminal no. 19
	WARNING operations with 2 motors: Input not used, short circuit to terminal no. 19
15	WARNING operations with 1 motor: N.C. input opening limit switch. If not used, short circuit to terminal no. 19
	WARNING operations with 2 motors: N.C. input external safety device. If triggered it reverses drive. If not used, short circuit to terminal no. 19
16	N.C. input external safety device. If triggered it reverses drive. If not used, short circuit to terminal no. 19
17	N.C. input photocell. If triggered during closing, it reverses drive. If not used, short circuit to terminal no. 19
18	N.O. input start. If triggered, it opens or closes. It can operate in “reverse” or “jog” mode. It can also be used to connect a timed contact.
19	Shared inputs
20	Antenna signal
21	Antenna grounding

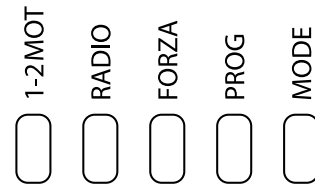
5 INSTRUCTIONS FOR USE

Bridge “normally closed” inputs not used, power the control unit.

WARNING Make sure you connect the phase wire to terminal “L” and neutral to terminal “N”.

WARNING only used thermally protected motors and with maximum 400V resonance voltage.

All control unit settings and programs are entered using the two SET and SEL keys and indicator LED, as described below. All programming functions can be run when the control unit is turned on or at the end of a closing manoeuvre.



	LED off		LED on
	LED slowly flashing		LED quickly flashing

1 Selecting the number of motors

Commands	Function	LED status
	1. Press SEL repeatedly until the “1-2MOT” LED turns on	
	2. Press SET and immediately release it: the “1-2MOT” LED starts to flash indicating the currently selected setting: - Slow flashing = 1-motor operations; - Fast flashing = 2-motor operations.	
	3. Press SEL to change the operating program type.	
	4. Press SET and immediately release it: the “1-2MOT” LED turns back on (new settings saved).	
	5. At this point, press SEL to select any other programming function or exit programming (all LED off).	

WARNING With 1-motor operations, “FCA/SIC2” and “FCC” inputs operate as opening and closing limit switches respectively. With 2-motor operations on the other hand, the “FCA/SIC2” input acts as an input for the sensitive edge installed on door no. 2, “FCC” is not active. In any case, bridge inputs not used to shared.

2 Built-in 433.92 Mhz receiver

2.1 Radio control learning




Commands	Function	LED status
	1. Press SEL repeatedly until the “RADIO” LED turns on	
	2. Press SET and immediately release: the “RADIO” LED starts to flash indicating the receiver learning status.	
	3. Press the radio control key to be learnt. The LED remains on for one second and then resumes flashing (key learnt).	
	4. Repeat point 3 for any other keys or radio controls to be learnt.	
	5. Wait until the LED turns on again (learning completed).	
	6. At this point, press SEL to select any other programming function or exit programming (all LED off).	

WARNING The unit automatically recognises the type of radio control at first learning (dipswitch or rolling code) and will later only receive other radio controls with the same encoding.


2.2 Radio control memory reset

Commands	Function	LED status
	1. Press SEL repeatedly until the “RADIO” LED turns on.	
	2. Press SET and hold down until the LED starts to quickly flash (deleting).	
	3. Release the SET key. Wait until the LED turns on again (deleting completed).	
	4. At this point, press SEL to select any other programming function or exit programming (all LED off).	





3 Motor drive adjustment

Commands	Function		LED status							
	1.	Press SEL repeatedly until the “FORZA” LED turns on.								
	2.	Press SET and immediately release: the currently set drive value is displayed (8 levels available as per the table).								
	Drive level <table><tr><td>30% </td><td>50% </td><td>70% </td><td>90% </td></tr><tr><td>40% </td><td>60% </td><td>80% </td><td>100% </td></tr></table>			30% 	50% 	70% 	90% 	40% 	60% 	80% 
30% 	50% 	70% 	90% 							
40% 	60% 	80% 	100% 							
	3.	Press SEL until the LED configuration matches the required drive value.								
	4.	Press SET and immediately release it: the “FORZA” LED turns back on (new drive value saved).								
	5.	At this point, press SEL to select any other programming function or exit programming (all LED off).								

4 Learning work times with 1-motor operations

Commands	Function	LED status
	1. Run the gear motor release operation, manually move the door to the fully closed position and lock the gear motor again.	
	2. If electromechanical limit switches are installed, adjust the relevant cam so that the closing limit switch, in this position, is triggered.	
 SEL	3. Press SEL repeatedly until the "PROG" LED turns on.	
 SET	4. Press and hold down the SET key until the "PROG" LED starts to quickly flash indicating that work time learning has started.	
 SET	5. Release the SET key.	
	6. Press START: motor 1 starts opening.	
	When motor 1 reaches limit stop, press START: motor 1 stops. WARNING: Even if installed, the opening limit switch is not read in this phase. The door MUST be stopped in any case by pressing START at the required point. Adjust the relevant cam so that the opening limit switch is triggered in this position.	
	Press START: automatic closing time countdown starts. WARNING: To disable automatic closing, hold down until motor 1 closing starts and skip directly to point 11.	
	9. Wait for the required automatic closing time.	
	10. Press START: motor 1 starts closing.	
	11. After several sec. from reaching limit stop (or when reaching any closing limit switch) the motor automatically stops. The "PROG" LED turns back on, work time learning has completed.	
 SEL	12. At this point, press SEL to select any other programming function or exit programming (all LED off).	

5 Learning work times with 2-motor operations

Commands	Function	LED status
	1. Run the gear motor release operation, manually move the door to the fully closed position and lock the gear motor again.	
	2. Press SEL repeatedly until the "PROG" LED turns on.	0000●00
	3. Press and hold down the SET key until the "PROG" LED starts to quickly flash indicating that work time learning has started.	0000●00
	4. Release the SET key.	0000x2●00
	5. Press START: motor 1 starts opening. 	0000x2●00
	6. Wait for the required door offset time.	0000x2●00
	7. Press START: motor 2 starts opening. 	0000x2●00
	8. When motor 1 reaches limit stop, press START: motor 1 stops. 	0000x2●00
	9. When motor 2 reaches limit stop, press START: motor 2 stops. 	0000x2●00
	10. Press START: automatic closing time countdown starts. WARNING: To disable automatic closing, hold down until motor 2 closing starts and skip directly to point 13.	0000x2●00
	11. Wait for the required automatic closing time.	0000x2●00
	12. Press START: motor 2 starts closing. 	0000x2●00
	13. Wait for the required door offset time.	0000x2●00
	14. Press START: motor 1 starts closing. 	0000x2●00
	15. Several sec. after reaching the relevant limit stop, both motors automatically stop. The "PROG" LED turns back on, work time learning has completed. 	0000●00
	16. At this point, press SEL to select any other programming function or exit programming (all LED off).	000000

6 Program mode selection (reverse or step by step)

Commands	Function	LED status
	1. Press SEL repeatedly until the "MODE" LED turns on.	00000●
	2. Press SET and immediately release it: the "MODE" LED starts to flash indicating the currently selected program: - slow flashing = step by step; - fast flashing = reverse.	00000x2●
	3. Press SEL to change the operating program type.	
	4. Press SET and immediately release it: the "MODE" LED turns back on (new program saved).	00000●
	5. At this point, press SEL to select any other programming function or exit programming (all LED off).	000000

Once unit programming is completed, press SEL repeatedly until all LED turn off. At this point the unit is ready to receive controls.

6 SYSTEM INSPECTION

Inspection is essential to check correct system installation. **DEA** System summarises the correct inspection of all automation in 4 simple steps:

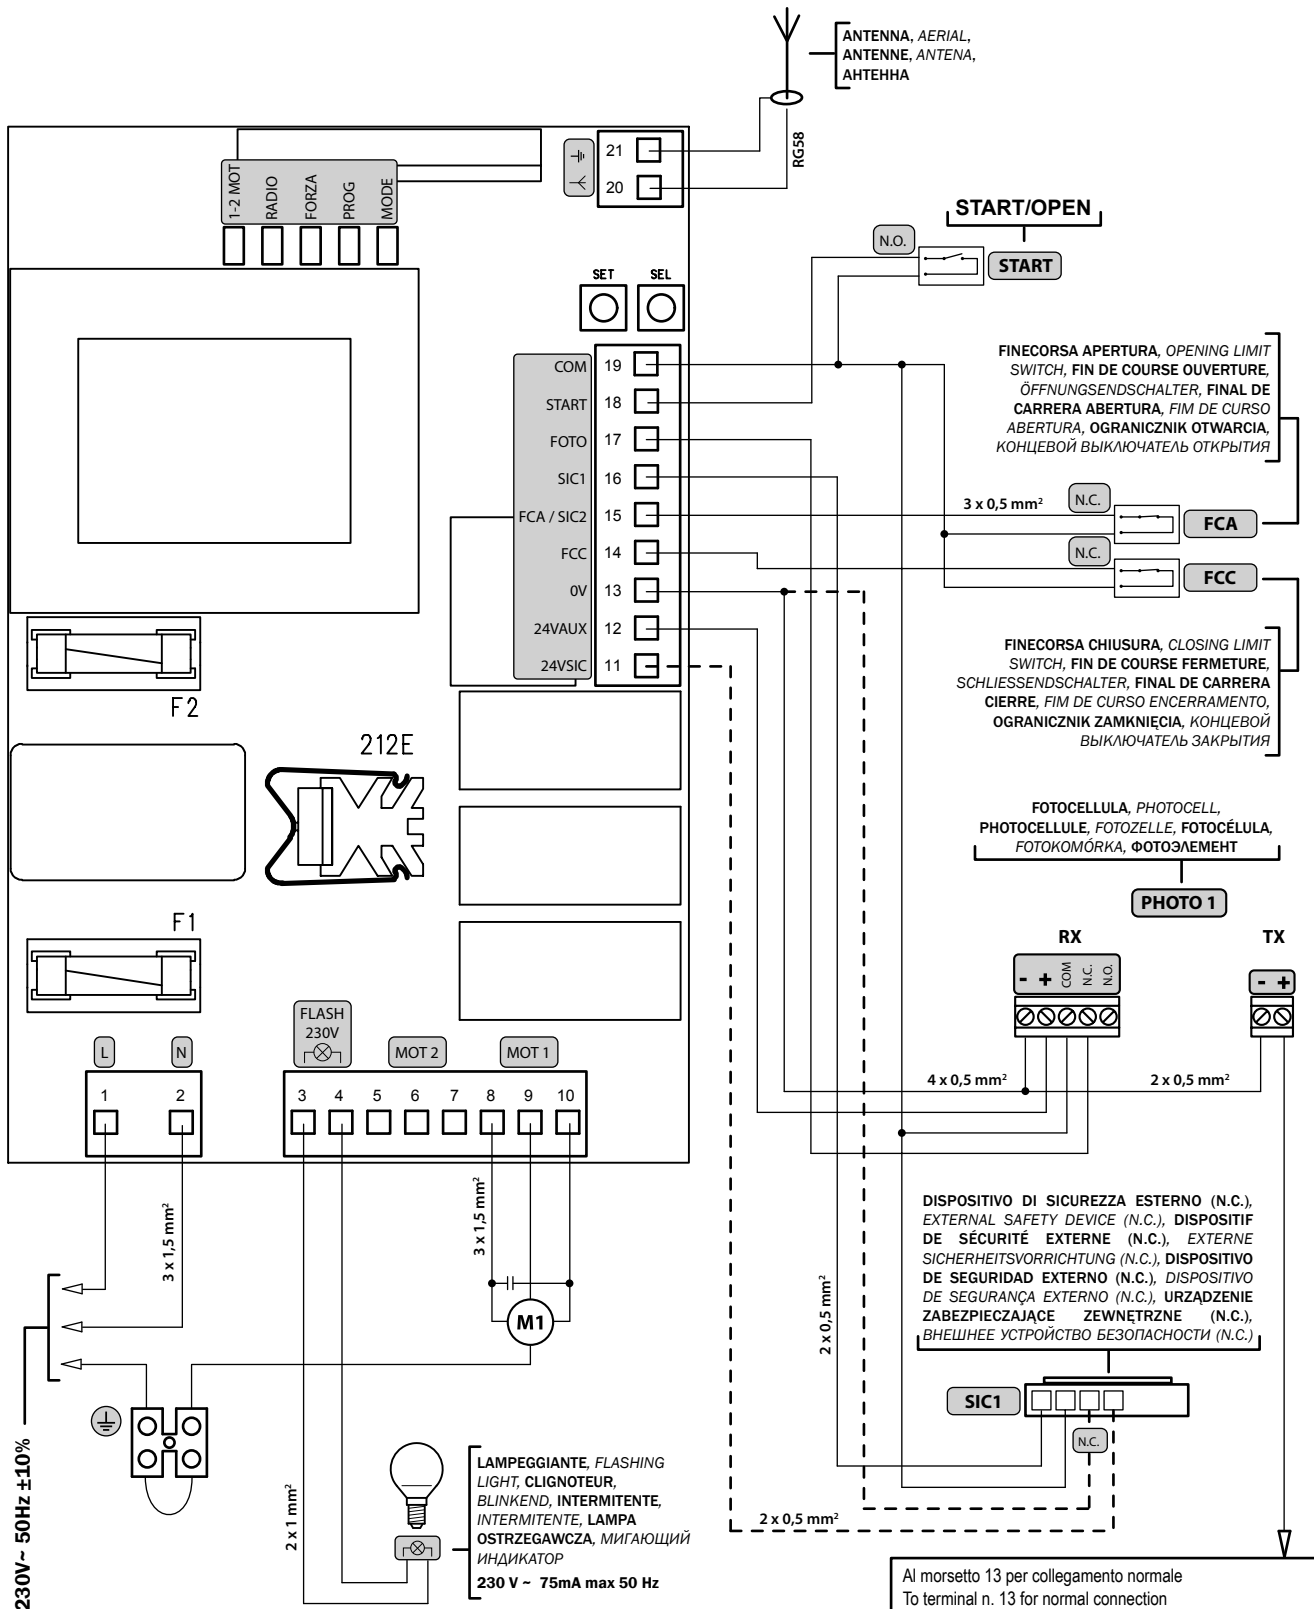
- Make sure that described in paragraph 1 “SUMMARY OF WARNINGS” is strictly observed;
- Run automation opening and closing trials making sure movement corresponds to that foreseen. To this regard, we recommend you run several trials to evaluate any assembly or adjustment defects;
- Make sure all safety devices connected to the system correctly operate;
- Measure the impact force as per standard EN12445 until the regulation ensures the limits set by standard EN12453 are met.

7 DISPOSAL OF THE PRODUCT



WARNING In compliance with EU Directive 2012/19/EU on electrical and electronic equipment waste (WEEE), this electrical product must not be disposed of as unsorted municipal waste. Please dispose of the product by bringing it to your local municipal collection point for appropriate recycling.

Schema elettrico con funzionamento ad 1 motore, 1 motor Electrical diagram, Schéma électrique avec fonctionnement à 1 moteur, Anschlussplan für einen Motor, Esquema eléctrico con funcionamiento a 1 motor, Esquema eléctrico para funcionamiento a 1 motor, Schemat elektryczny 1 silnik, Электрическая схема для 1 двигателя




Alimentazione 24V ~ necessaria solo per accessori controllati Art. 130N, 131N, 123N, 124N, 24 V ~ power supply necessary only for accessory as art. 130N, 131N, 123N, 124N, Alimentation 24 V ~ nécessaire seulement pour accessoires contrôlés art. 130N, 131N, 123N, 124N, 24V ~ Versorgung nur notwendig für kontrollierte Zubehörfteile Art. 130N, 131N, Alimentación 24V ~ necesaria solamente para accesorios controlados art. 130N, 131N, 123N, 124N, Alimentação 24V ~ necessária apenas para os acessórios art. 130N, 131N, 123N, 124N 124N, Zasilanie 24V ~ wymagane tylko dla akcesoriów kontrolowanych Art. 130N, 131N, 123N, 124N, Напряжение питания 24 В ~ необходимо только для комплектующих, регулируемых Ст. 130N, 131N, 123N, 124N

Al morsetto 13 per collegamento normale
To terminal n. 13 for normal connection
À la borne 13 pour connexion normale
An Klemme 13 für Normalanschluss
Al terminal 13 para una conexión normal
Do zacisku 13 dla podłączenia normalnego
К клемме 13 для нормального подключения

Al morsetto 12 per sicurezze controllate
To terminal n. 12 for controlled safety devices
À la borne 12 pour sécurités contrôlées
An Klemme 12 für geprüfte Sicherheitsvorrichtungen
El borne 12 para seguridades controladas
Ao terminal 12 para dispositivos de segurança controlados
Do zacisku 12 dla kontrolowanych zabezpieczeń
К клемме 12 для управляемых устройств безопасности

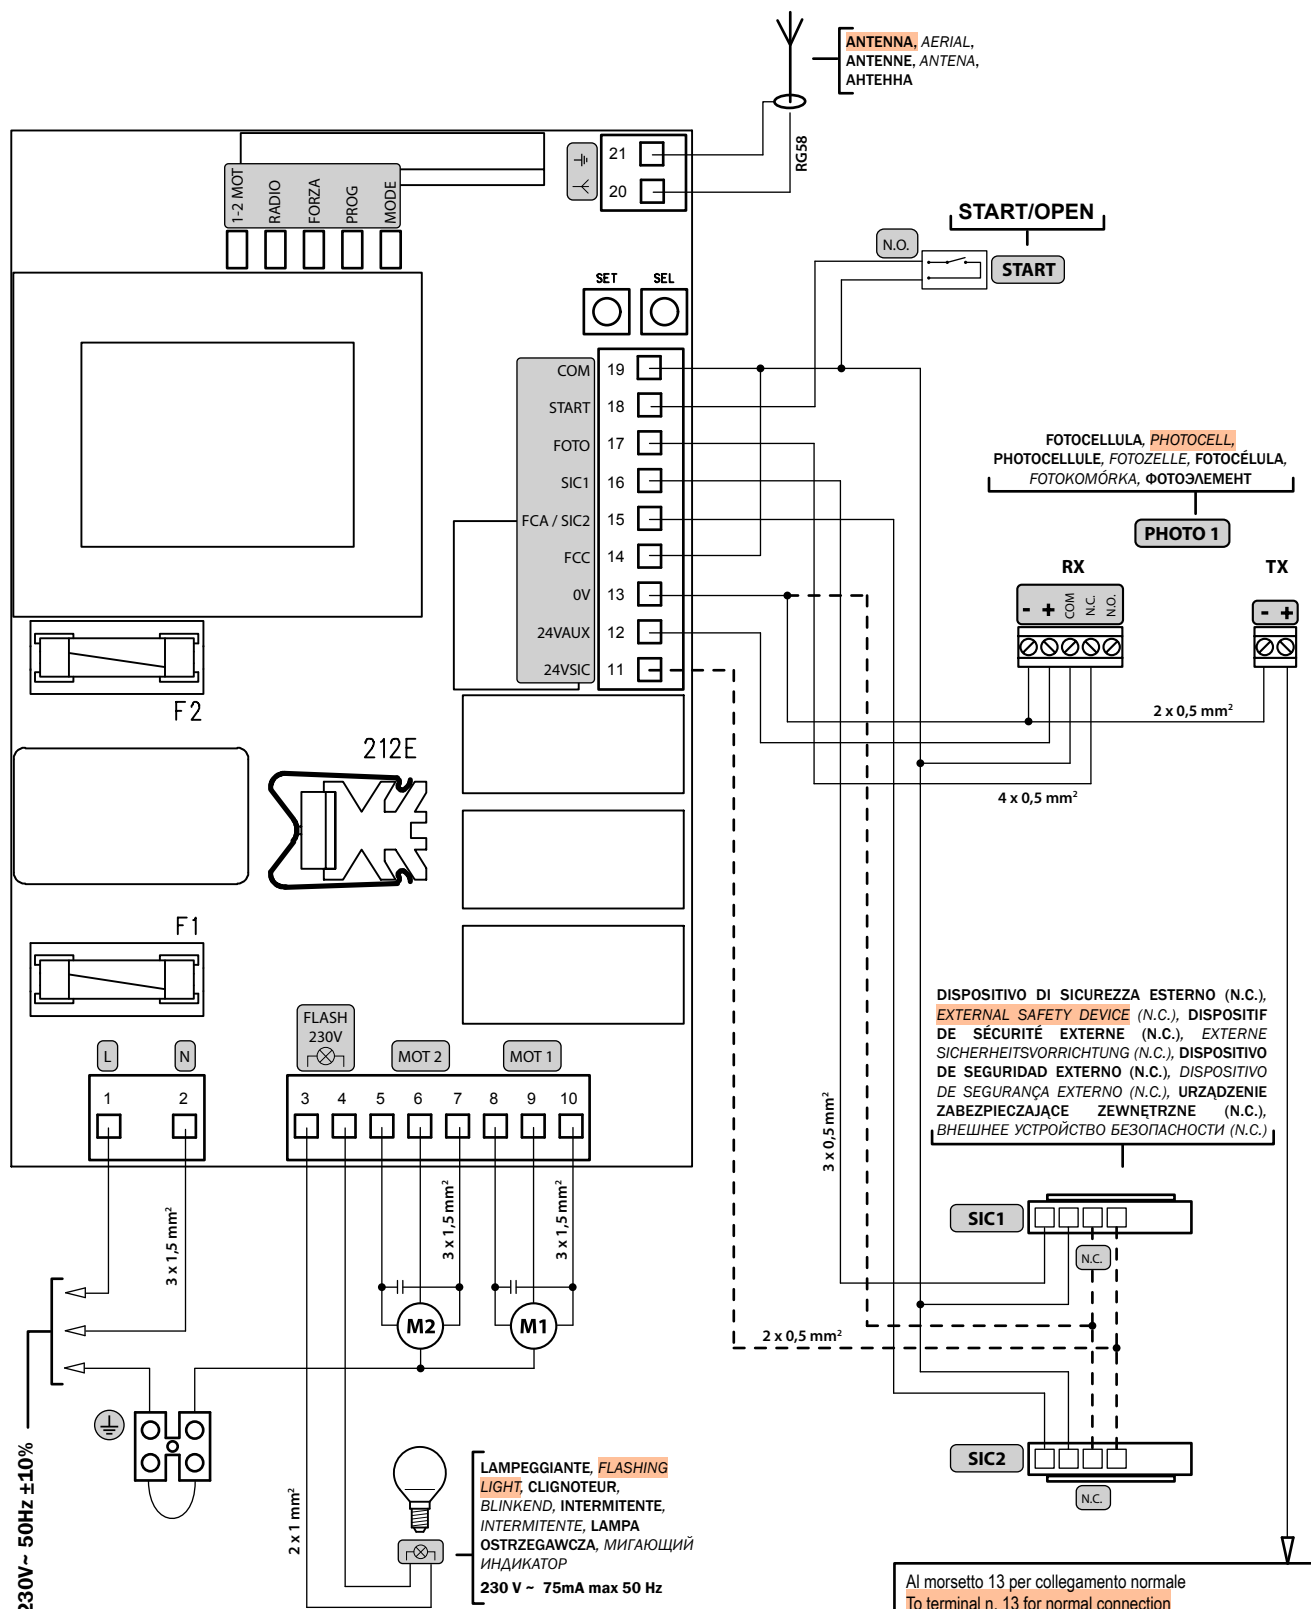Schema elettrico con funzionamento a 2 motori, 2 motors Electrical diagram, Schéma électrique avec fonctionnement à 2 moteurs, Anschlussplan für 2 Motoren, Esquema eléctrico con funcionamiento a 2 motores, Esquema eléctrico para funcionamiento a 2 motores, Schemat elektryczny 2 silniki, Схема для 2 моторов




Alimentazione 24V ~ necessaria solo per accessori controllati Art. 130N, 131N, 123N, 124N, 24 V ~ power supply necessary only for accessory as art. Art. 130N, 131N, 123N, 124N, Alimentation 24 V ~ nécessaire seulement pour accessoires contrôlés art. 130N, 131N, 123N, 124N, 24V ~ Versorgung nur notwendig für kontrollierte Zubehörteile Art. 130N, 131N, 123N, 124N, Alimentación 24V ~ necesaria solamente para accesorios controlados art. 130N, 131N, 123N, 124N, Alimentação 24V ~ necessária apenas para os acessórios art. 130N, 131N, 123N, 124N, Zasilanie 24V ~ wymagane tylko dla akcesoriów kontrolowanych Art. 130N, 131N, 123N, 124N, Напряжение питания 24 В ~ необходимо только для комплектующих, регулируемых Ст. 130N, 131N, 123N, 124N

Al morsetto 13 per collegamento normale
To terminal n. 13 for normal connection
À la borne 13 pour connexion normale
An Klemme 13 für Normalanschluss
Al terminal 13 para una conexión normal
Para o terminal nº 13 para ligação normal
Do zacisku 13 dla podłączenia normalnego
К клемме 13 для нормального подключения


Al morsetto 12 per sicurezze controllate
To terminal n. 12 for controlled safety devices
À la borne 12 pour sécurités contrôlées
An Klemme 12 für geprüfte Sicherheitsvorrichtungen
El borne 12 para seguridades controladas
Ao terminal 12 para dispositivos de segurança controlados
Do zacisku 12 dla kontrolowanych zabezpieczeń
К клемме 12 для управляемых устройств безопасности

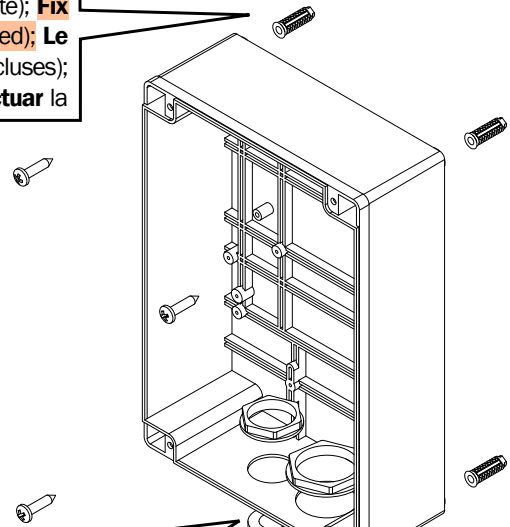Eseguire il fissaggio alla parete usando opportuni tasselli per viti Ø5 (non fornite); **Fix** the box on the wall with appropriate bushings to anchor screws Ø5 (not included); **Le** fixer au mur en utilisant des douilles à expansion pour vis adéquates Ø5 (pas incluses); **Befestigen** Sie das Feld, um mit Dübeln Ø5 der Wand (nicht mitgeliefert); **Efectuar** la fijación a la pared utilizando adecuados tacos para tornillos de Ø5 (no incluidos); **Executar** a fixação a parede usando apropriadas rolhas para parafusos Ø5 (não fornecidas); **Zamocować** do ściany, przy pomocy odpowiednich kołków do śrub Ø5 (nie na wyposażeniu); **Выполнить** крепление к стене с помощью соответствующих дюбелей для болтов Ø 5 (не входят в комплект).



Passaggio cavi 230V ~ all'interno di una canaletta Ø16 raccordata con fermatubi PG21 (non forniti); **Pass** 230V ~ cables inside a grommet Ø16 connected with tube fastening PG21 (items not included); **Passage** des fils 230V ~ dans un passe-fil Ø16 raccordée avec un bloque tube PG21 (ces outils ne sont pas inclus); **Führen** Drähte 230V ~ innerhalb eines Kanals Ø16 mit PG21-Verschraubungen verbunden (nicht mitgeliefert); **Paso** de los cables 230V ~ por el interior de una canaletta de Ø16 unida con pasacable PG21 (no incluidos); **Passagem** cabos 230V ~ ao interno de um cano Ø16 com fixação do tubo PG21 (não fornecidos); **Przejście** kabli 230V ~ wewnątrz kanaliku Ø16 połączonego z zaciskami przewodów PG21 (nie na wyposażeniu); **Проклад** кабелей 230 В ~ внутри канала Ø16, связанного с фиксаторами PG21 (не входят в комплект).

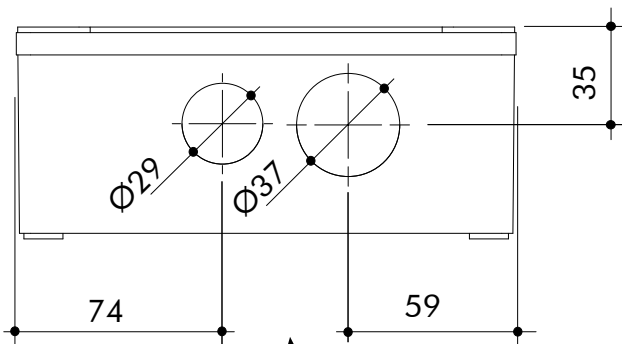
VISTA DA "A"
VIEW FROM "A"
VUE DE "A"
BLICK VON "A"
VISTA DESDE "A"
VISTA DE "A"
WIDOK Z "A"
ВИД ИЗ "A"



VISTA DA "A" Fori da eseguire sul fondo della scatola con seghe a tazza Ø29 e Ø37 per l'inserimento dei fermatubi; **VIEW FROM "A"** Holes to be drilled on the bottom of the box with a hole saw Ø29 and Ø37 to introduce tube fastening; **VUE DE "A"** Trous à percer au fond du boîtier avec une scie-cloche Ø29 et Ø37 afin d'introduire des bloque tube; **BLICK VON "A"** Bohrungen im Boden der Box mit Lochsäge Ø29 und Ø37 für das Einsetzen der Kabelverschraubungen; **VISTA DESDE "A"** Agujeros que deben hacerse en la base de la caja con sierras cilíndricas de Ø29 y Ø37 para la introducción de los paratubo; **VISTA DE "A"** Furos pra executar no fundo da caixa com serra a xicara Ø29 e Ø37 para inserimento dos fixação do tubo; **WIDOK Z "A"** Otwory do wykonania na dnie skrzynki z wiertłami Ø29 i Ø37 dla włożenia zacisku; **ВИД ИЗ "A"** Отверстия для выполнения в нижнем основании ящика с помощью кольцевой пилы Ø29 и Ø37 для установки фиксаторов.

Pas-

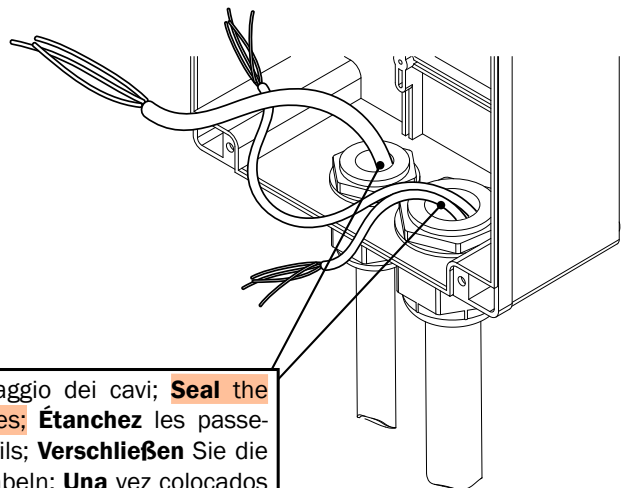saggio cavi a bassissima tensione all'interno di una canaletta Ø20 raccordata con fermatubi PG29 (non forniti); **Pass** very low tension cables inside a grommet Ø20 connected with tube fastening PG29 (items not included); **Passage** des fils à très basse tension dans un passe-fil Ø20 raccordée avec un bloque tube PG29 (ces outils ne sont pas inclus); **Klein-spannungs** Leitungen innerhalb eines Kanals Ø20 mit PG29-Verschraubungen verbunden (nicht mitgeliefert); **Paso** de los cables de tensión muy baja por el interior de una canaletta de Ø20 unida con paratubo PG29 (no incluidos); **Passagem** cabos a baixíssima tensão ao interno de um cano Ø20 com fixação do tubo PG29 (não fornecidos); **Przejście** kabli bardzo niskiego napięcia wewnątrz kanaliku Ø20 połączonego z zaciskami przewodów PG29 (nie na wyposażeniu); **Проклад** кабелей очень низкого напряжения внутри канала Ø20, связанного с фиксаторами PG29 (не входят в комплект).



Sigillare le canalette dopo il passaggio dei cavi; **Seal the** tubing trays after installing the wires; **Étanchez** les passe-fils après que vous avez passé des fils; **Verschließen** Sie die Kanäle nach dem Durchgang von Kabeln; **Una** vez colocados los cables, tapar las canaletas; **Tapar** os cabos depois de passar os fios elétricos; **Zapiecztować** kanały po przejściu kabli; **Плотно** закрыть каналы после выполнения прохода кабелей.

EU Declaration of Conformity (DoC)

Company name:	DEA SYSTEM S.p.A.
Postal address:	Via Della Tecnica, 6
Postcode and City:	36013 Piovene Rocchette (VI) - ITALY
Telephone number:	+39 0445 550789
E-Mail address:	deasystem@deasystem.com

declare that the DoC is issued under our sole responsibility and belongs to the following product:

Apparatus model/Product:	212E - 212E/C
Type:	230V programmable control board
Batch:	See the label on the back of the user manual

The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

2014/53/CE (RED)
2011/65/EU (RoHS)

The following harmonised standards and technical specifications have been applied:

Title:	Date of standard/specification
EN 50581	2012
EN 61000-6-2	2005+AC:2005
EN 61000-6-3	2007+A1:2011+AC:2012
ETSI EN 301 489-1	2017 v2.1.1
ETSI EN 301 489-3	2017 v2.1.1
EN 60335-1	2012+AC:2014+A11:2014+A13:2017
ETSI EN 300 220-1	2017 v3.1.1
ETSI EN 300 220-2	2017 v3.1.1

Additional information

Signed for and on behalf of:		
Revision:	Place and date of issue:	Name, function, signature
0	Piovene Rocchette (VI) 14/01/2019	Tiziano Lievore (Administrator) 