

200MPS



FAAC

CONTROL UNIT 200MPS

CE DECLARATION OF CONFORMITY

Manufacturer: FAAC S.p.A.

Address: via Benini, 1 - 40069 Zola Predosa BOLOGNA - ITALY

Declares that:

The 200MPS control unit conforms to the essential safety requirements of the following directives:

73/23/EEC and subsequent amendment 93/68/EEC.
89/336/EEC and subsequent amendments 92/31/EEC and 93/68/EEC

Additional note:

This product underwent tests in a typical uniform configuration (all products manufactured by FAAC S.p.A.).

Bologna, 13 December 2007

The Managing Director
A. Bassi

1. WARNINGS

Before attempting any work on the control unit (connections, maintenance), always turn off power.

Install, upstream of the system, a 10A differential thermal breaker with tripping threshold of 0.03A

Always separate power cables from control and safety cables (push-button, receiver, photocells, etc.). To avoid any electrical disturbance, use separate sheaths or a screened cable (with the screen earthed).

2. TECHNICAL SPECIFICATIONS

Power supply voltage	230V ~ - 50HZ
Max. motor load	800 VA
Accessories max. current	200MA
Operating ambient temperature	-20°C - +70°C
Protection fuses	F1 = 10A-250V F3 = 0,5A-250V
Function logics	A, EP
Pause time	Adjustable with TR1 from 0 to 60 sec
Inputs on terminal-board	Open, Close, Stop, Safety devices in CH, Power supply
Outputs on terminal-board	Motor, flashing lamp,

3. LAYOUT AND COMPONENTS

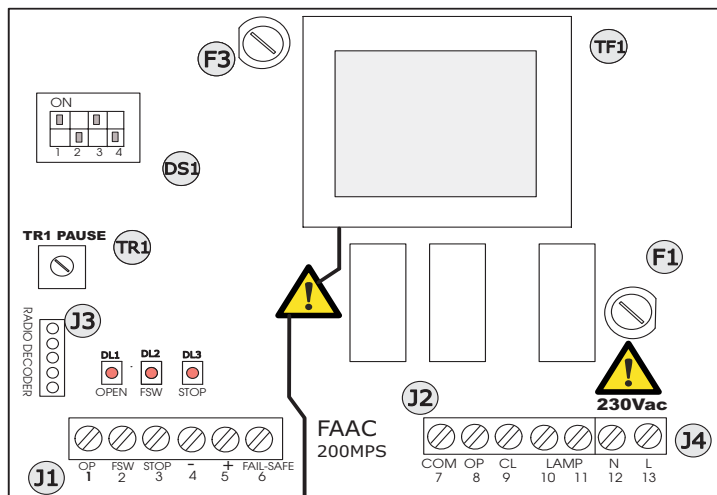


Fig. 1



The 200MPS control board makes it possible to pilot the gearmotors for rolling gates in FAAC series 226, 227, R180 and R280. Control of the travel limit devices must be specified on the motor. The board is compatible with all FAAC command and safety components.



A RP1 type single channel receiver can be connected to the J3 connector, so that the OPEN facility of the automated system can be commanded directly with a single channel radio control.

Description of components

J1	Inputs terminal board and power supply to accessories
J2	motor and flashing lamp outputs terminal-board
J3	connector for radio receiver (see Note)
J4	230Vac power supply terminal board
TR1	trimmer for adjusting pause time from 0 to 60 sec.
DS1	programming microswitches
DL1,2,3	status signalling LEDs
TF1	transformer
F1	10A - 250V (motor protection)
F3	500mA 250 V (protection for accessories)

4. CONNECTIONS

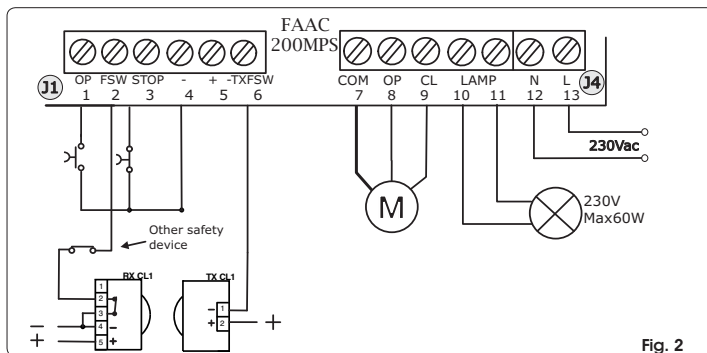


Fig. 2

DESCRIPTION OF TERMINAL-BOARDS

Terminal	Description	Device connected
1	OPEN	Device with NO contact. (chap. FUNCTION LOGICS)
2	FSW	Device with NC contact. shuts down automated system
3	STOP	Device with NC contact. shuts down automated system
4	- 24Vdc	Power supply to accessories
5	+ 24Vdc	
6	FAIL SAFE	Negative controlled for photocells (see fail safe function)
7	C	Motor common contact
8	OP	Motor Opening stage
9	CL	Motor Closure stage
10 11	LAMP	Flashing lamp output 230Vac max 60W

DESCRIPTION OF INPUTS

1. OPEN command.

Any pulse generator with NO contact which opens the gate when activated. In EP logic, it also commands closure.

2. FSW safety devices and/or other safety devices.

All devices, such as photocells or sensitive edges etc with an NC contact - if they are activated, they generate an opening or shut-down of the automated system according to programming.

3. STOP command.

Any NC pulse generator, which commands instant shut down of the automated system until a new OPEN command is given.

4. FAIL SAFE.

When using this terminal for connecting the negative wire to power the transmitters and photocells, you can use the FAILSAFE function. If this function is enabled, the unit verifies the operation of the photocells before every closing cycle.

If you do not intend connecting any device to terminals 2 and 3, you must jumper connect them to terminal 4.

5. LOGIC AND FUNCTIONS PROGRAMMING

The function logic and the relevant functions can be selected by configuring the DS1 microswitches group as per table below.

	ON	OFF	
	ON	OFF	1 2 3 4
SW1	ACTIVE 5 sec	INACTIVE	FLASHING LAMP PRE-FLASHING
SW2	Logic A	Logic EP	FUNCTION LOGICS
SW3	Reopens immediately	Reopens when disengaged	SAFETY DEVICES TRIPPED
SW4	FSW control active	FSW control inactive	FAIL SAFE

Pause time adjustment

Pause time can be adjusted with trimmer TR1, varying the pause from 0 to 60 secs. Turn the trimmer clockwise to increase time.

6. FUNCTION LOGICS

The automatic or semi-automatic function logic can be selected with the SW2 microswitch, as shown in fig. 3.

A AUTOMATIC Logic

Status	Open (pulse)	Stop	Safe(FSW)
Closed	Opens and closes after pause time	Disables Open and Close	/
Opening	/	Blocks	/
Open	Recharges pause time	Blocks	Recharges pause time
Closure	Opens	Blocks	Opens
Blocked	Opens	Disables Open and Close	Inhibits closure

EP SEMI-AUTOMATIC Logic

Status	Open (pulse)	Stop	Safe(FSW)
Closed	Opens	/	/
Opening	/	Blocks	/
Open	CLOSES	Blocks	Blocks
Closure	Opens	Blocks	Opens
Blocked	Opens/closes	/	/

8. MAINTENANCE

The 200MPS control board does not require any special periodic controls. In the event of faults, it is important to control the fuses and the status LEDs.

Le descrizioni e le illustrazioni del presente manuale non sono impegnative. La FAAC si riserva il diritto, lasciando inalterate le caratteristiche essenziali dell'apparecchiatura, di apportare in qualunque momento e senza impegnarsi ad aggiornare la presente pubblicazione, le modifiche che essa ritiene convenienti per miglioramenti tecnici o per qualsiasi altra esigenza di carattere costruttivo o commerciale.


The descriptions and illustrations contained in the present manual are not binding. FAAC reserves the right, whilst leaving the main features of the equipments unaltered, to undertake any modifications it holds necessary for either technical or commercial reasons, at any time and without revising the present publication.

Les descriptions et les illustrations du présent manuel sont fournies à titre indicatif. FAAC se réserve le droit d'apporter à tout moment les modifications qu'elle jugera utiles sur ce produit tout en conservant les caractéristiques essentielles, sans devoir pour autant mettre à jour cette publication.

Die Beschreibungen und Abbildungen in vorliegendem Handbuch sind unverbindlich. FAAC behält sich das Recht vor, ohne die wesentlichen Eigenschaften dieses Gerätes zu verändern und ohne Verbindlichkeiten in Bezug auf die Neufassung der vorliegenden Anleitungen, technisch bzw. konstruktiv/kommerziell bedingte Verbesserungen vorzunehmen.

Las descripciones y las ilustraciones de este manual no comportan compromiso alguno. FAAC se reserva el derecho, dejando inmutadas las características esenciales de los aparatos, de aportar, en cualquier momento y sin comprometerse a poner al día la presente publicación, todas las modificaciones que considere oportunas para el perfeccionamiento técnico o para cualquier otro tipo de exigencia de carácter constructivo o comercial.

De beschrijvingen in deze handleiding zijn niet bindend. FAAC behoudt zich het recht voor op elk willekeurig moment de veranderingen aan te brengen die het bedrijf nuttig acht met het oog op technische verbeteringen of alle mogelijke andere productie- of commerciële eisen, waarbij de fundamentele eigenschappen van de apparaat gehandhaafd blijven, zonder zich daardoor te verplichten deze publicatie bij te werken.

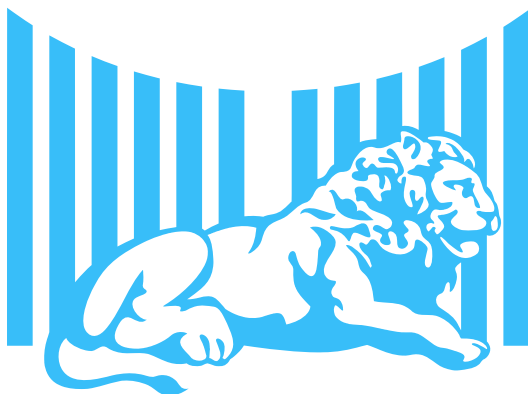

FAAC



Timbro del Rivenditore:/ Distributor's Stamp:/ Timbre de l'Agent:/ Fachhändlerstempel:/ Sello del Revendedor:/
Stempel van de dealer:

