
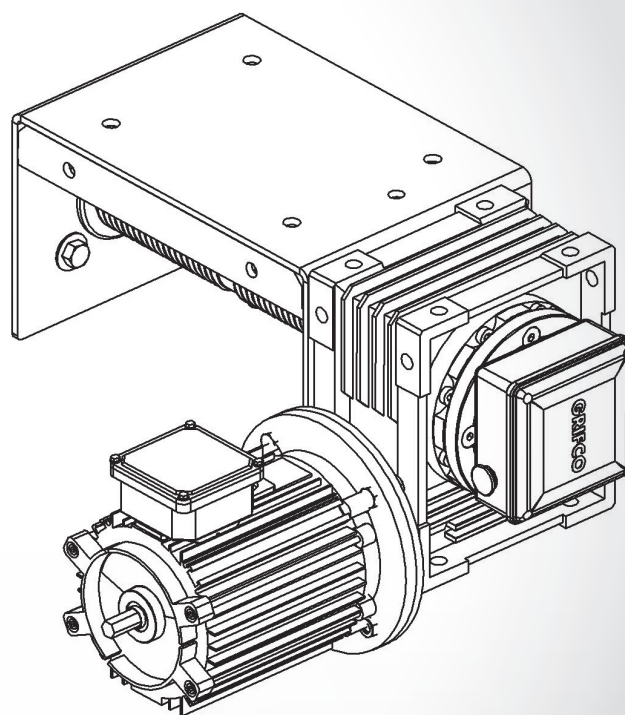


Poultry Cable Winch INSTALLATION MANUAL

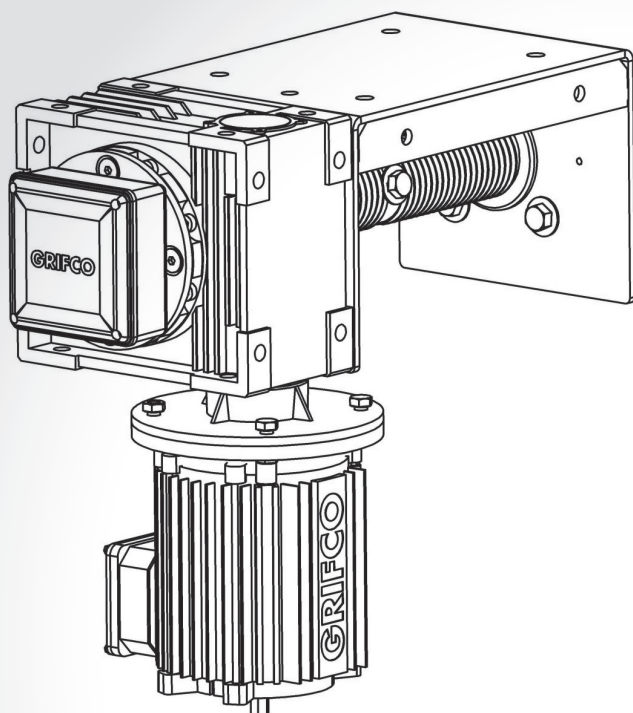

W800C

Installation and Users Manual for W800C Poultry Cable Winch

Chamberlain Australia Pty Ltd
Unit 1, 75 Epping Rd
North Ryde NSW 2113
Ph: 1800 GRIFCO
www.grifco.com.au

Ref: D-M-PSA-027_D

Chamberlain New Zealand Ltd
17B Arrenway Drive, Rosedale 0623
Auckland
Ph: 0800 653 667
www.grifco.co.nz



GRIFCO®

SAFETY INSTRUCTIONS



WARNING: THESE ARE IMPORTANT SAFETY INSTRUCTIONS.
FOLLOW ALL INSTRUCTIONS AS INCORRECT INSTALLATION CAN LEAD TO SEVERE INJURY OR DEATH
SAVE these instructions

This commercial roller door operator has been designed and tested to offer safe service provided it is installed, operated, maintained and tested in strict accordance with the instructions and warnings contained in this manual.



WARNING

Mechanical

When you see this Safety Symbol and Signal Words on the following pages, they will alert you to the possibility of serious injury or death if you do not comply with the warnings that accompany them. The hazard may come from something mechanical.

- Sticking or binding doors must be repaired. Commercial doors, brackets and their hardware are under extreme tension and can cause serious personal injury. Do not attempt to loosen, move or adjust them. Call for commercial door service.
- Do not wear rings, watches or loose clothing while installing or servicing a commercial door operator.
- To avoid serious personal injury from entanglement, remove all ropes connected to the commercial door before installing the door operator.
- After the installation a final test of the full function of the system and the full function of the safety devices must be done.
- When operating a biased-off switch, make sure that other persons are kept away.
- The operator cannot be used with a driven part incorporating a wicket door (unless the operator cannot be operated with the wicket door open).
- Operator may become hot during operation. Appropriate clearance and/or shielding should be supplied by the installer to ensure any cabling, wiring and/or other items cannot come in contact with the operator. If temperature rise exceeds 50°C all fixed wiring insulation must be protected, for example, by insulating sleeving having an appropriate temperature rating.
- Do not allow children to play with operator wall controls or remote controls. Keep remote controls away from children.
- Permanently fasten all supplied labels adjacent to the wall control as a convenient reference and reminder of safe operating procedures.
- Disengage all existing commercial door locks to avoid damage to commercial door. Install the wall control (or any additional push buttons) in a location where the commercial door is visible during operation. Do not allow children to operate push button(s) or remote transmitter(s). Serious personal injury from a closing commercial door may result from misuse of the operator.
- Activate operator only when the door is in full view, free of obstructions and operator is properly adjusted. No one should enter or leave the building while the door is in motion.
- The actuating member of a biased-off switch is to be located within direct sight of the door but away from moving parts. Unless it is key operated, it is to be installed at a minimum height of 1500mm and not accessible to the public.
- Make sure that people who install, maintain or operate the door follow these instructions. Keep these instructions in a safe place so that you can refer to them quickly when you need to.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Use the operator for its intended purpose. The operator is designed lifting non-spring balanced roller doors.
- Automatic Drive - Keep away from the area of the door as it may operate unexpectedly.
- Ensure that entrapment when operating the door in the open direction is avoided.
- This product is for indoor use only.
- If the opener is installed at a height less than 2.5 metres from floor level or any other level from which the opener can be accessed (eg mezzanine) the installer is responsible to fit guards as appropriate to prevent access to moving mechanisms to reduce risk of entrapment.



WARNING

Electrical

When you see this Safety Symbol and Signal Words on the following pages, they will alert you to the possibility of serious injury or death if you do not comply with the warnings that accompany them. The hazard may come from electric shock.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Installation and wiring must be in compliance with your local building and electrical codes. Connect the power supply cord only to properly earthed mains.
- Moisture and water can destroy the electronic components. Make sure under all circumstances that water moisture or storage moisture cannot penetrate the electronics. The same applies for openings and cable entries.
- An electrician must disconnect electric power to the commercial door operator before making repairs or removing covers.



CAUTION

When you see this Signal Word on the following pages, it will alert you to the possibility of damage to your commercial door and/or the commercial door operator if you do not comply with the cautionary statements that accompany it.

CONTENTS

INTRODUCTION	4
INSTALLATION.....	4
OPERATION	9
SPECIFICATIONS.....	13
MAINTENANCE.....	14
TROUBLESHOOTING	14
WARRANTY.....	16
NOTES	17

INTRODUCTION

Congratulations on your purchase of the Grifco® Feeder Cable Winch. This winch stands alone in the market as the fastest and most robust winch of its kind. The installation of a Grifco Feeder Cable Winch ensures extreme longevity and trouble free operation.

INSTALLATION

The W800C / W1200C is designed to be installed inside livestock buildings to hoist feeder lines (and other similar systems) between the ground level and ceiling space.

The W800C / W1200C features a single or three phase motor coupled to a drive system comprising two cam activated limit switches to allow stopping at the fully lowered and raised positions.


Suitable controls will be required to switch the motor direction and accept the limits switch inputs. Grifco manufactures both single and multi-line control stations for the W800C / W1200C.

Contact 1800 GRIFCO or your local dealer for more information.

HANDLING


Ensure you wear personal protection equipment (proper clothing, gloves, dust masks). Never use your hands at dangerous locations (eg cables, sharp edges etc). In order to safely lift the W800C / W1200C, use an approved M12 lifting eye or strap as shown below:

Use an M12 lifting eye as shown to allow lifting into the proximity of the final mounting location

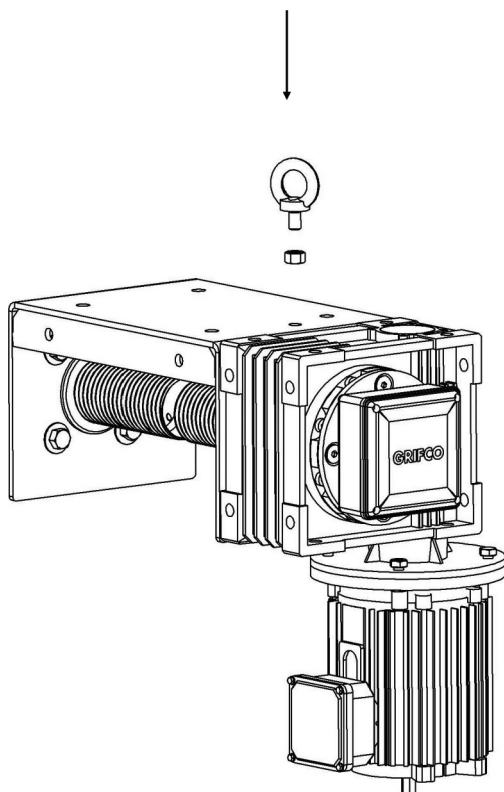

OR

Use a suitably rated lifting strap as shown to allow lifting into the proximity of the final mounting location

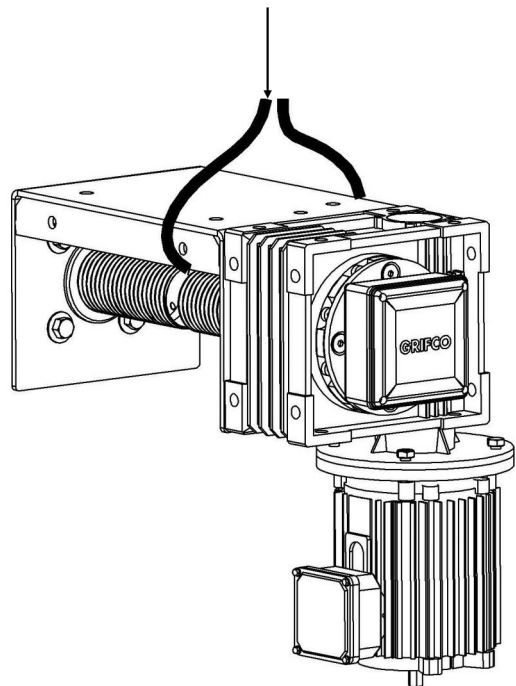


WARNING MECHANICAL

When using the lifting strap method, be aware that the winch may not hang in a balanced orientation.

INSTALLATION


HANDLING OF W800C-H AND W1200C-H

Use an M12 lifting eye as shown to allow lifting into the proximity of the final mounting location

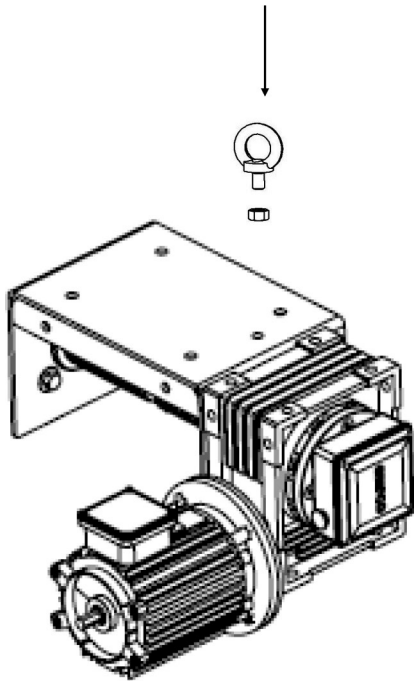

OR

Use a suitably rated lifting strap as shown to allow lifting into the proximity of the final mounting location

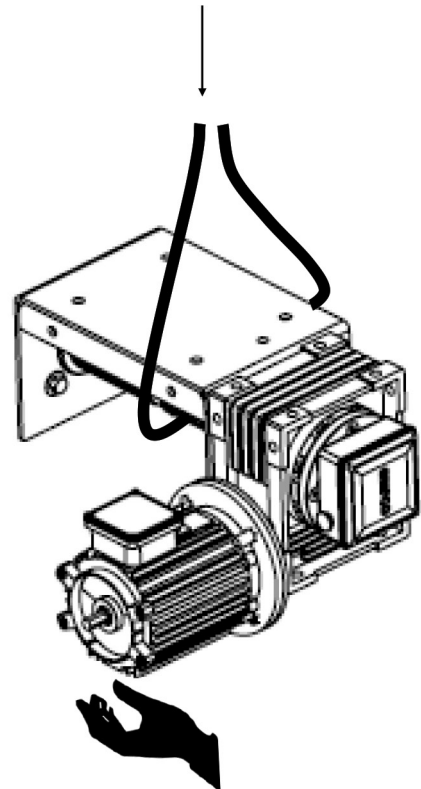

When using the lifting strap method, be aware that the winch may not hang in a balanced orientation.

INSTALLATION




WARNING



Electrical

An electrician must disconnect electric power to the winch and control before removing or opening covers.

The W800C / W1200C is designed to be mounted to a concealed or web truss structure in livestock buildings. The roof truss structure **must be engineered** to ensure mounting of the winch and the relevant applied loads will be adequately supported. Refer to page 4 for mounting bolt hole spacing and size for fabrication of a suitable mounting structure. Refer below for mounting examples.

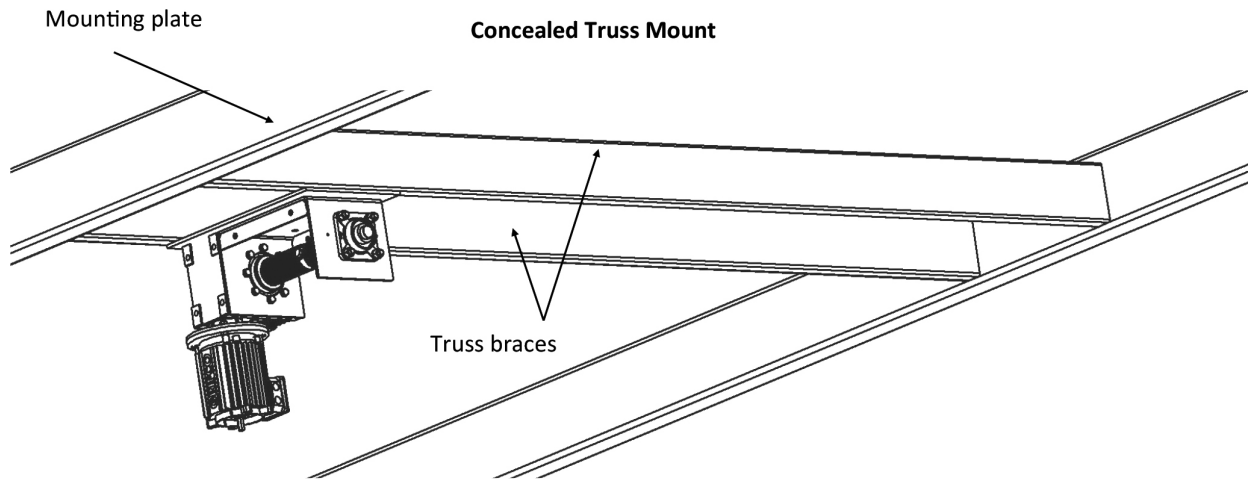


Web Truss Mount

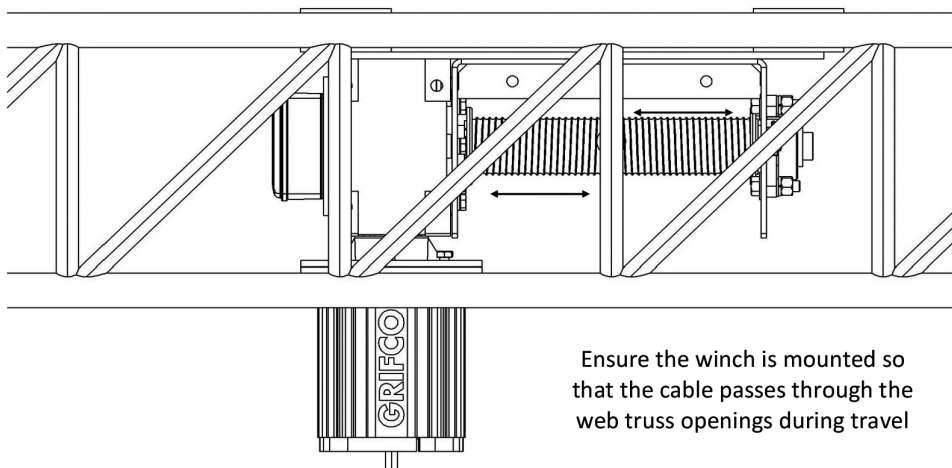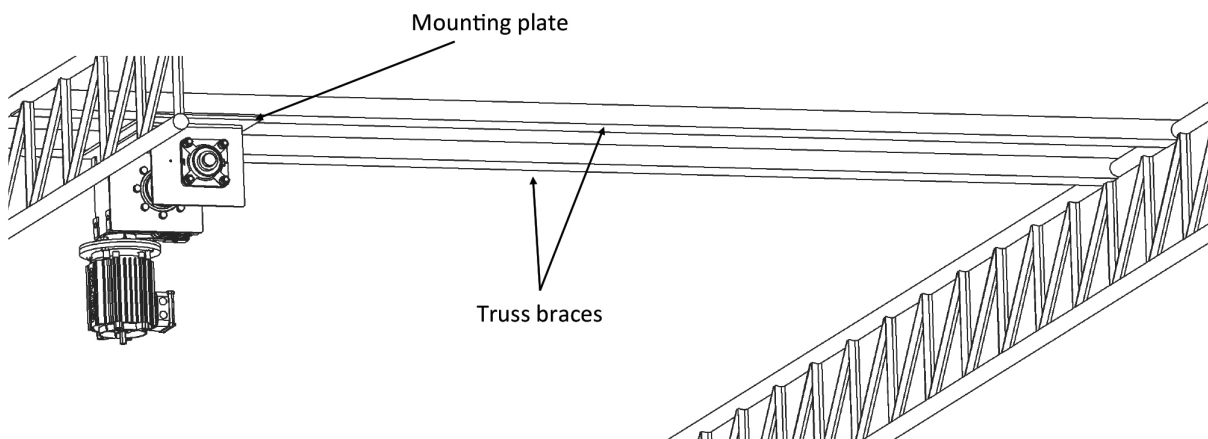



Ensure the winch is mounted so that the cable passes through the web truss openings during travel

INSTALLATION

W800C-H AND W1200C-H MOUNTING :

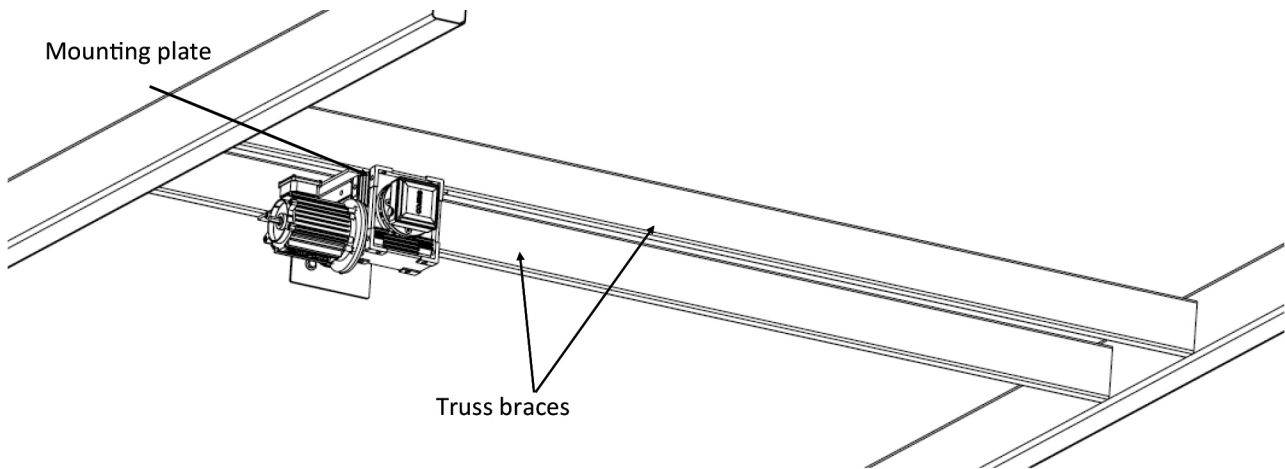

Web Truss Mount

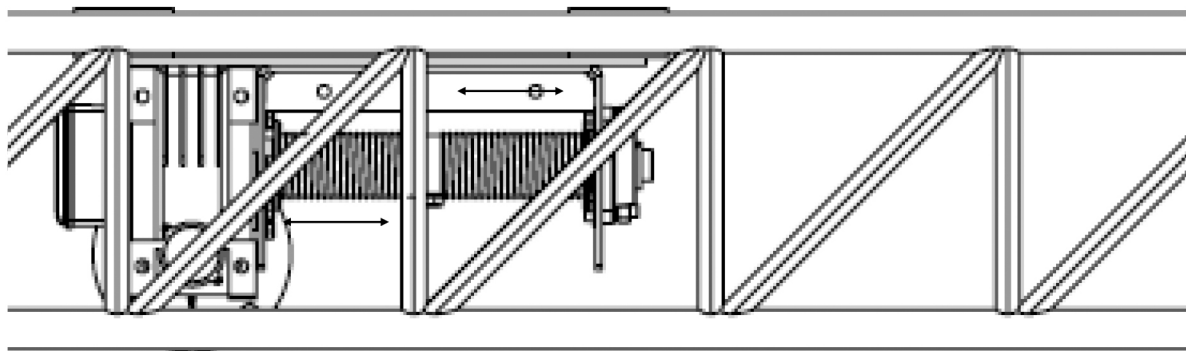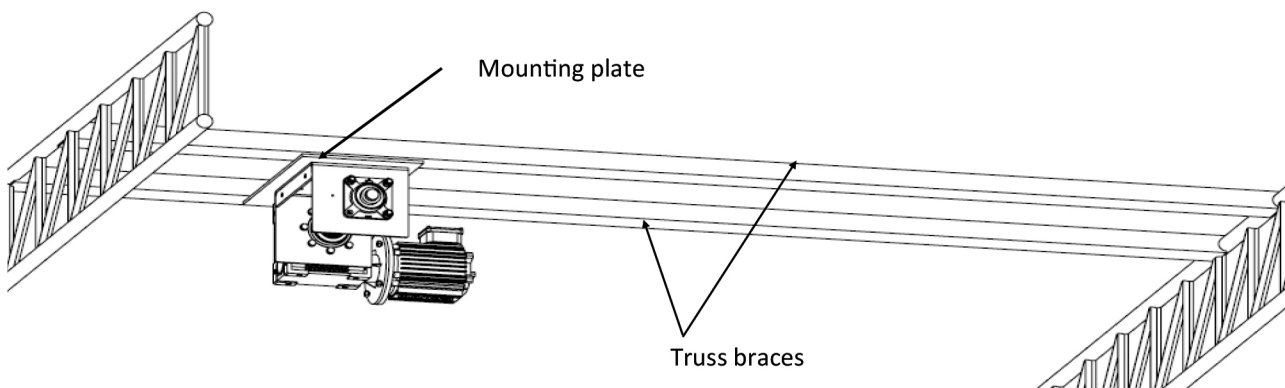


Ensure the winch is mounted so that the cable passes through the web truss openings during travel


INSTALLATION

MOUNTING

Mount the W800C / W1200C using 4 x M12 High Tensile (Grade 8.8) bolts and nuts to secure the winch in place as shown below. Ensure spring washers are used and a tightening torque of 40-45Nm.

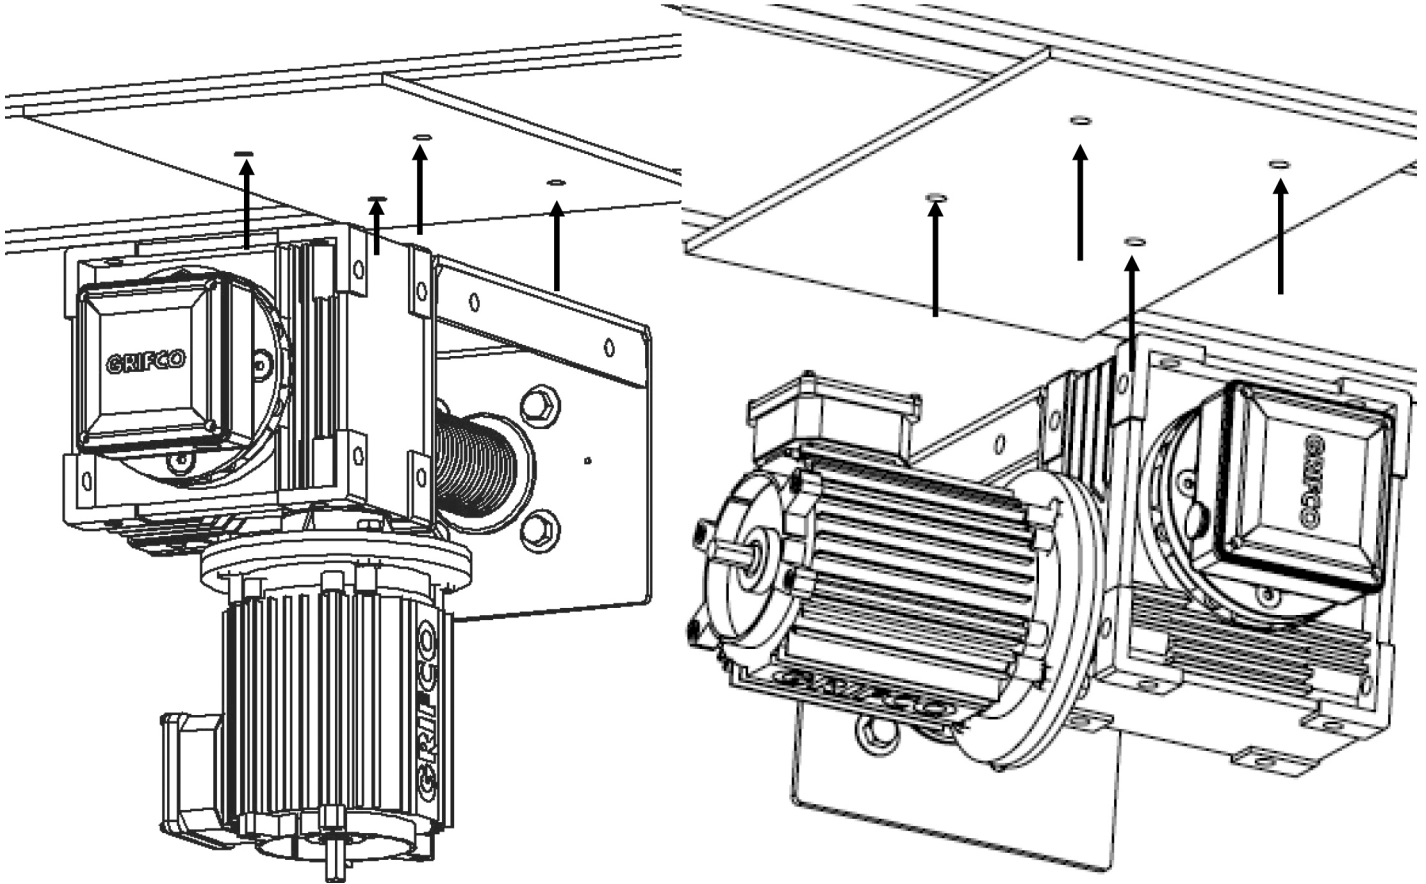

Set up the winch cable as shown below. You should have at least one turn of cable on the drum in each direction before the load is applied. Clamp the cable firmly beneath the bolt head and washer. Note: The manual crank coupling can be used during set up to assist cable wrapping and other adjustment (refer page 13). Guiding pulleys may need to be installed to ensure correct tracking of the cable.

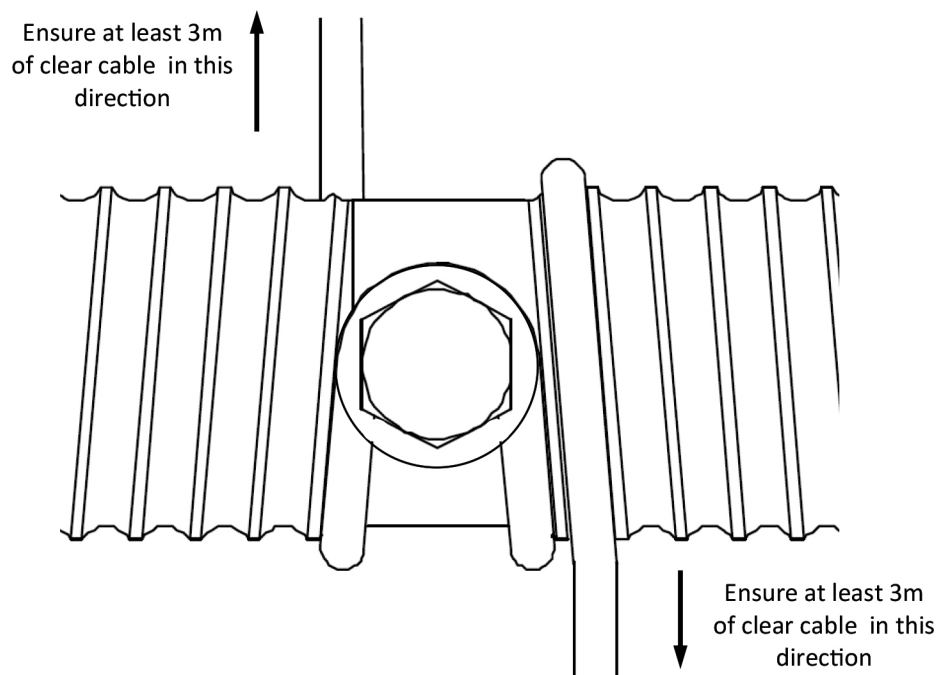

OPERATION



WARNING



Electrical

The **W800C / W1200C** must:

- be connected in accordance with the wiring rules of the country in which it is installed
- not have enclosures left open for extended periods (excess dust will void warranty)


CONTROL PANEL

The W800C / W1200C is designed to be operated with Grifco reversing starter controls. The internal connection diagram for both single and three phase types are shown below:

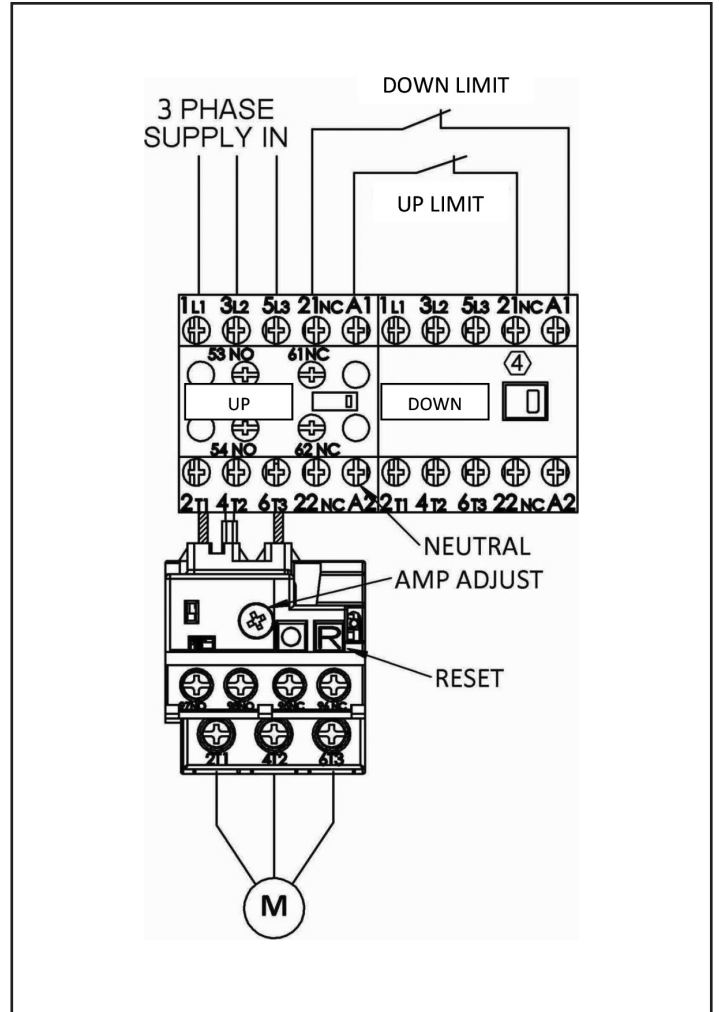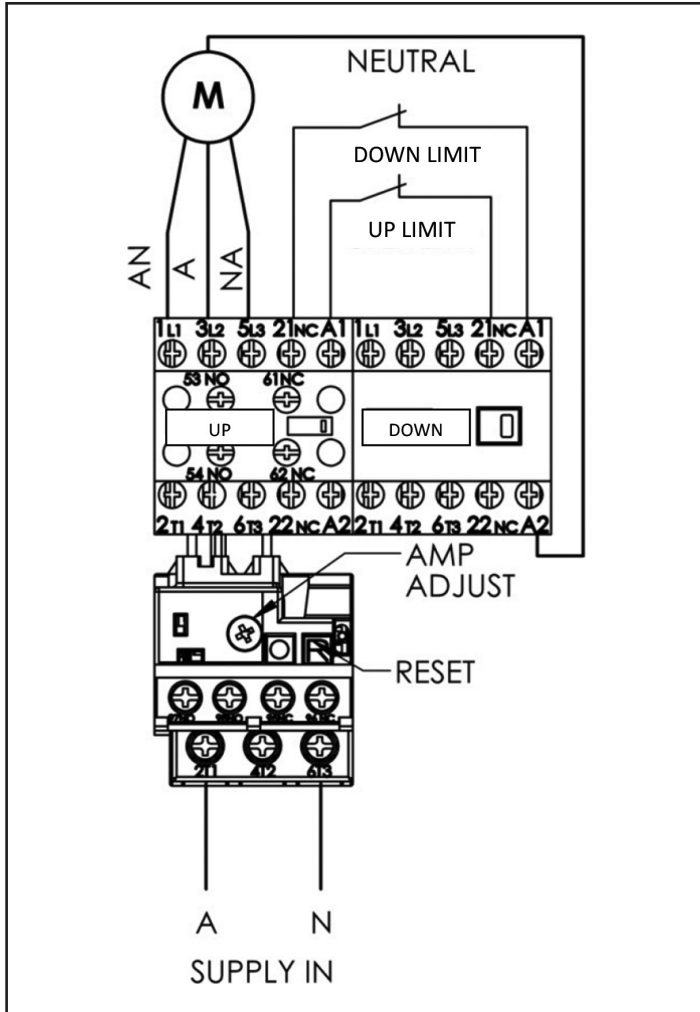


Operation of the above control panels is via a simple two position control as shown below. Turn and hold the toggle switch to lift up or lower down as shown:

Reversing Starter Specification	
W800C1	RG3769P
W800C3	RG3747P
W1200C3	RG3748P

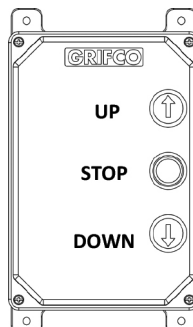

Single controller

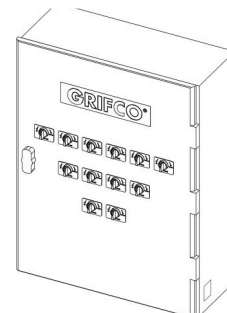

Multi station controller

OPERATION



WARNING


Electrical

The **W800C / W1200C** must:


- be connected in accordance with the wiring rules of the country in which it is installed
- not have enclosures left open for extended periods (excess dust will void warranty)

MOTOR CONNECTION


W800C3 / W1200C3 Motor

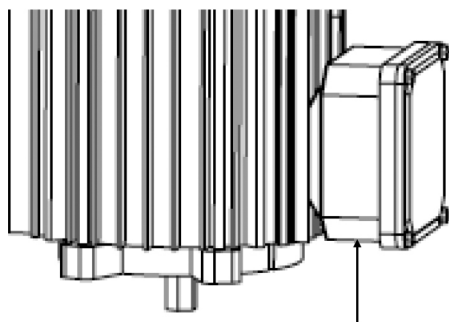


Connect with min. 0.75mm^2 wire using conduit or gland to meet minimum IP55

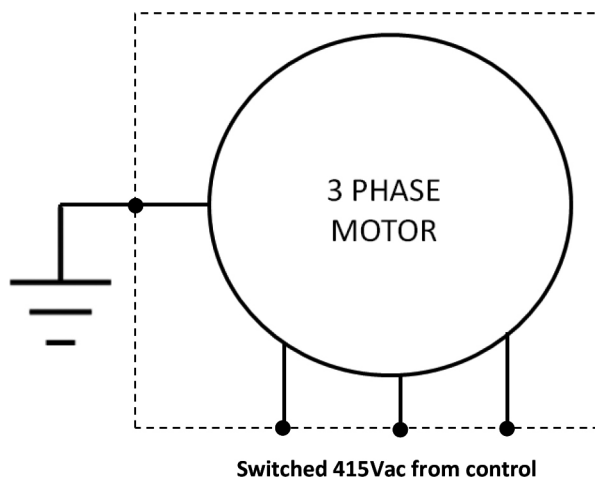


W800C1 Motor Connection

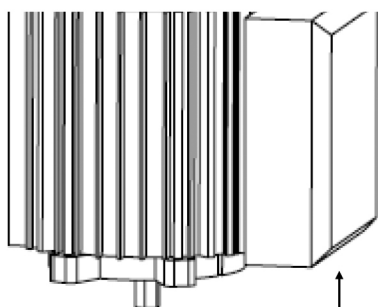


Connect with min. 0.75mm^2 wire using conduit or gland to meet minimum IP55

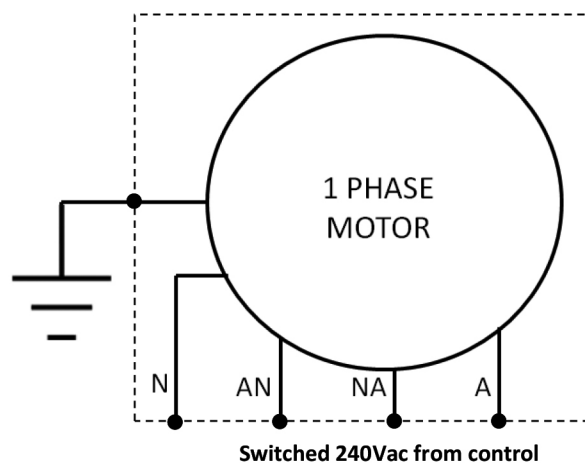

Limit Switch Connection

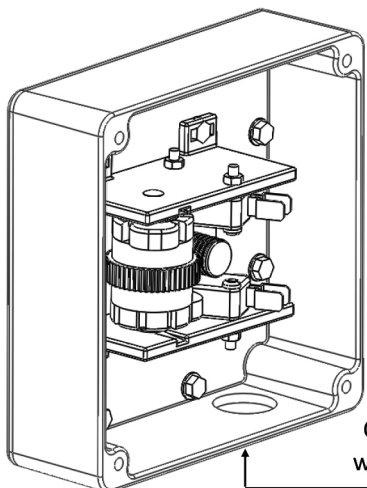

Connect with min. 0.75mm^2 wire using conduit or gland to meet minimum IP55

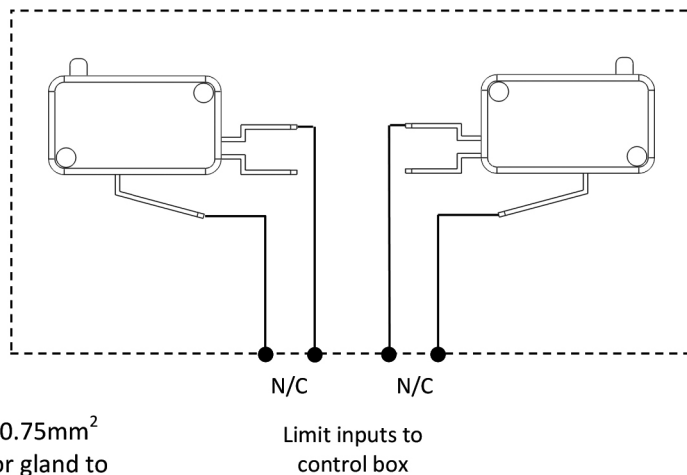

SETUP AND ADJUSTMENT

With primary connection of the W800C / W1200C complete in accordance with relevant control box, it is time to test the operation. Carefully follow the next steps to ensure safe setup:

- 1) Ensure the winch is properly secured and the lift cables clamped accordingly.
- 2) Check and make sure both limit cams are positioned away from their relevant micro switches.
- 3) Secure all covers, and supply mains power.

Checking Operational Direction

- 4) Operate the winch momentarily in one direction to check that the UP switch will lift the load.
- 5) If incorrect, isolate mains power and proceed as follows: (ref page 10)
 - Swap any two phases on the 3 phase model W800C3 and W1200C3
 - Swap AN and NA on the single phase model W800C1
- 6) Secure covers, supply power to the system, and check for correct operational direction.

Setting Limits

WARNING: Limits are sensitive; a small cam movement may correspond to a large amount winch travel.


Position one cam to depress a switch (the other should be well clear of the switch)

- Note the switch that you have activated

Supply power and activate in up direction momentarily

- If the winch hoists up then the limit switch noted above is the lower limit
- If the winch doesn't move it is the upper limit (momentarily activate in the close direction to confirm this)


Proceed to adjust each friction held cam and operate the winch to achieve the required set positions.

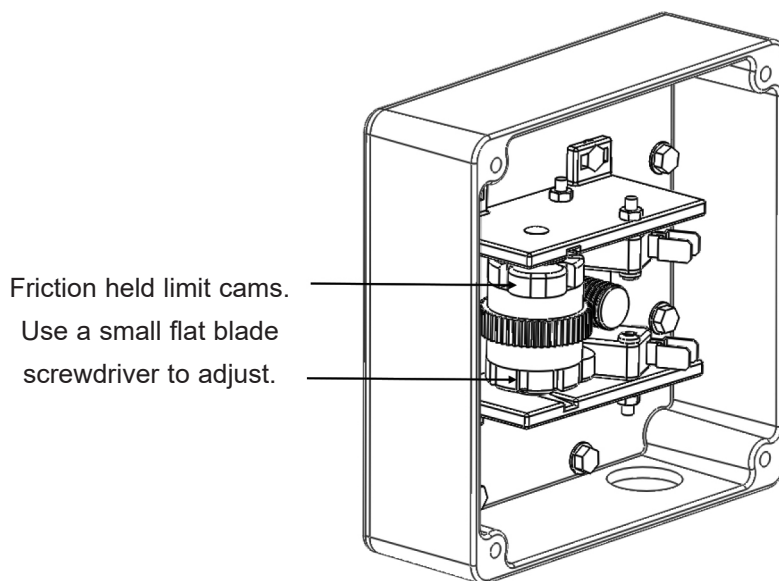

OPERATION

MANUAL OPERATION

Isolate mains power before using the manual crank feature as shown below. Use a 13mm hex socket with a suitable drive bit (not included) to operate the winch manually. Rotation of the socket will operate the winch in either direction.

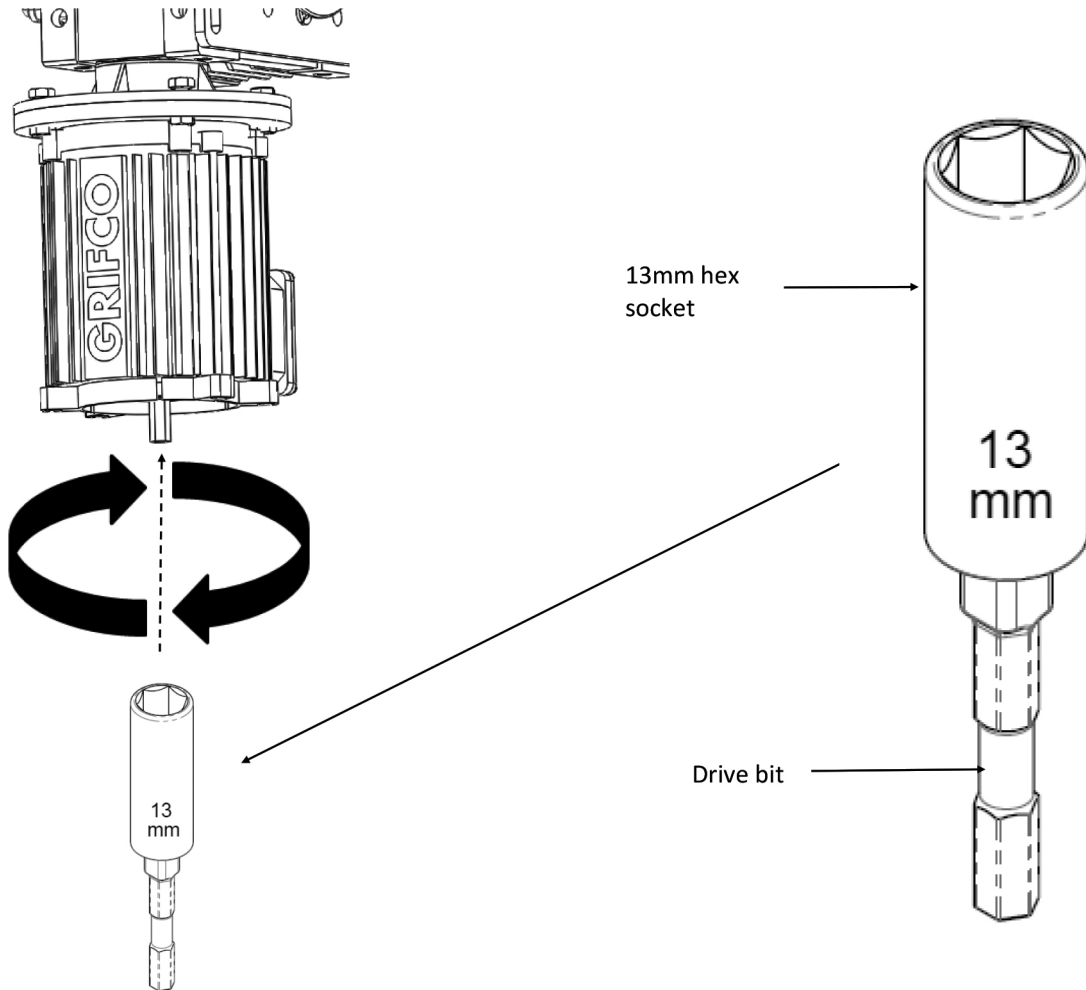

NOTE: 13mm hex socket and drive bit are NOT SUPPLIED with the winch

ELECTRICAL OPERATION

In operation the W800C / W1200C will require the user to hold the controlling switch to raise or lower the load. During operation the cable must lay neatly into the tracking grooves as shown on page 9.

The winch should operate quietly with only the hum of the motor, and perhaps some pulley noise depending on the condition and/or lubrication of the various pulleys connected to the load.

If the winch produces any abnormal noises such as grinding, rattling or squeaking, cease use immediately and isolate the power. Refer to Troubleshooting on page 14, and/or contact a suitably qualified technician to inspect and/or repair.

SPECIFICATIONS


W800C General Specification	
Rated Load	800Kg
Max Travel	3.9m
Lifting Cable	6mm 7-19WSC
Lift Speed	2.8m/min
Drum RPM	14
Limits	2 x N/C Micro Switch
Unit Weight	40Kg
Protection	IP55

W1200C General Specification	
Rated Load	1200Kg
Max Travel	3.9m
Lifting Cable	6mm 7-19WSC
Lift Speed	2.8m/min
Drum RPM	14
Limits	2 x N/C Micro Switch
Unit Weight	45Kg
Protection	IP55

W800C3 Power Specification	
KW	0.75
Full Load Current	2.3A
Volts (AC)	415
Phase	3


W1200C3 Power Specification	
KW	1.5
Full Load Current	3.6A
Volts (AC)	415
Phase	3

W800C1 Power Specification	
KW	0.75
Full Load Current	4.5A
Volts (AC)	240
Phase	1

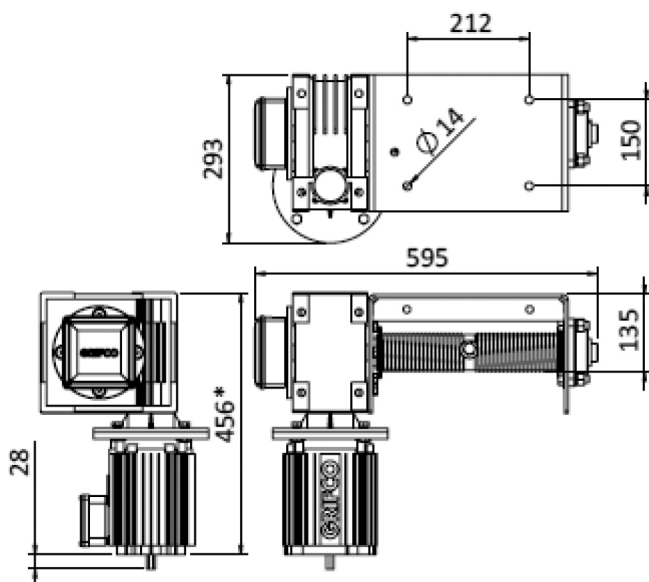

* This Dim. is 476 mm for W1200C

W800 / W1200

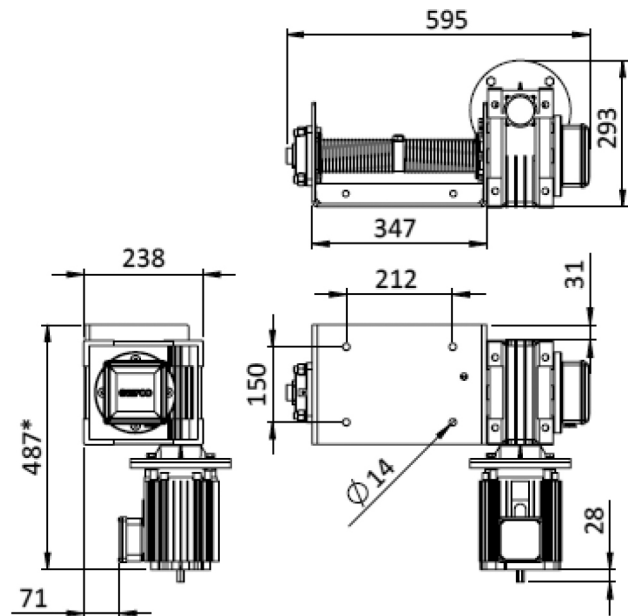

* This Dim. is 507mm for W1200C

W800 – H / W1200 – H

MAINTENANCE



WARNING

Electrical

DANGER! Power **MUST** be turned off before servicing or adjusting the winch. Isolate the supply when cleaning! Any works requiring access to electrical connections or junction boxes must be carried out by a qualified electrician!

The **W800C / W1200C** is built for extreme service life and does not need any internal maintenance. Only trained and competent persons should carry out maintenance.

Certain mechanical aspects of the installation should be routinely checked and rectified by a **qualified fitter or electrician** as below:

Monthly
Inspect for signs of wear or damage to lifting cables
Check proper operation of the winch (lift/lower)
Quarterly
Check tightness of fixing bolts and tighten if needed (ref page 7)
Check mounting structure, including welds / fasteners etc
Check for any abnormal noises
Brush down and wipe over the winch with a damp cloth

Refer to page 15 for a suitable maintenance log form

Any works requiring access to electrical connections or junction boxes must be carried out by a qualified electrician!

If the winch has exceeded the stated working life, replacement is recommended. All inspections must be monthly beyond the working life.

Disposal

If disposal is required, it should be done using the most up-to-date recycling technology according to local regulations and laws.

Drain oil via the plug provided on the gearbox, and contain it for safe disposal at a suitable recycling yard.

It is recommended that the winch be taken to a scrap metal recycling yard.

TROUBLESHOOTING

Problem	Possible Cause	Action
Winch does not raise or lower	No power	Restore power supply
	Both limit cams activated	Check / adjust limit switches
	Excess load - thermal overload tripped	Reduce load, reset / adjust overload in control
	Excess use - motor overheated	Allow to cool
	Electrical fault	Check all electrical connections
Winch does not raise	Upper limit activated	Check / adjust limit switch
	Electrical fault	Check all electrical connections
Winch does not lower	Lower limit activated	Check / adjust limit switch
	Electrical fault	Check all electrical connections
Winch makes noise	Cable misalignment	Check/adjust cable alignment as it lays on to the drum
	Motor to gearbox coupling loose	Remove winch and return to Grifco for inspection
	Internal gearbox noise	Remove winch and return to Grifco for inspection

MAINTENANCE

(Copy multiples of this blank form for future record keeping)

MAINTENANCE LOG

Winch Description: (e.g. model/location)

Monthly	Date	Checked / Complete (Sign)
Inspect for signs of wear or damage to lifting cables		
Check proper operation of the winch (lift/lower)		
Monthly	Date	Checked / Complete (Sign)
Inspect for signs of wear or damage to lifting cables		
Check proper operation of the winch (lift/lower)		
Monthly	Date	Checked / Complete (Sign)
Inspect for signs of wear or damage to lifting cables		
Check proper operation of the winch (lift/lower)		
Quarterly		
Check tightness of fixing bolts and tighten if needed (ref pg 7)		
Check mounting structure, including welds / fasteners etc		
Check for any abnormal noises		
Brush down and wipe over the winch with a damp cloth		
Monthly	Date	Checked / Complete (Sign)
Inspect for signs of wear or damage to lifting cables		
Check proper operation of the winch (lift/lower)		
Monthly	Date	Checked / Complete (Sign)
Inspect for signs of wear or damage to lifting cables		
Check proper operation of the winch (lift/lower)		
Monthly	Date	Checked / Complete (Sign)
Inspect for signs of wear or damage to lifting cables		
Check proper operation of the winch (lift/lower)		
Quarterly		
Check tightness of fixing bolts and tighten if needed (ref pg 7)		
Check mounting structure, including welds / fasteners etc		
Check for any abnormal noises		
Brush down and wipe over the winch with a damp cloth		

WARRANTY

Chamberlain 24 Month Limited Warranty Commercial Door Operators

Chamberlain Australia Pty Limited / Chamberlain New Zealand Limited (Chamberlain) is committed to manufacturing and supplying high quality goods. As part of this commitment, we seek to provide reliable service and support for our goods and are pleased to provide you, the original purchaser, with this Chamberlain Limited Warranty.

We also provide the following statement as required by the Australian Consumer Law: In Australia, in addition to your rights under this Chamberlain Limited Warranty, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Chamberlain's warranty

Chamberlain warrants to the original purchaser of the Grifco product (Unit) that:

- 1 The Commercial Door Operator found in this book is free from defects in materials and workmanship for a period of 24 months from the date of purchase or, when a particular operator states a cycle-count warranty, that cycle-count is reached (whichever comes first).
- 2 Genuine accessories are free from defects in materials and workmanship for a period of 12 months from the date of purchase.
- 3 Genuine spare parts are free from defects in materials and workmanship for a period of 6 months from the date of purchase.

During the applicable Chamberlain Warranty period, if you are concerned that the Unit may be defective, call our service centre on the toll free number below before removing the Unit and a Chamberlain technician will diagnose the problem. Once the problem has been diagnosed, subject to your rights under the Australian Consumer Law with respect to major failures, Chamberlain will provide you with:

- 1 parts for repair by a qualified or authorised repairer; or
- 2 shipping instructions for a factory repair or replacement.

If a factory repair or replacement is required, provided the defective part or Unit is returned to Chamberlain well-packaged and in accordance with Chamberlain's shipping instructions, Chamberlain will, subject to your rights under the Australian Consumer Law with respect to major failures:

- 1 in relation to the Unit (excluding the electric motor), repair or, at its option where permissible, replace any defective part or Unit (excluding the electric motor) and return it to you at no cost; and
- 2 in relation to the electric motor, replace the electric motor and return it to you at no cost.

Where the Unit has been installed by an authorised installer, you must call them for prompt on-site service. Chamberlain will furnish replacement parts free of charge through the authorised installer. A service fee for on-site service may apply.

Repairs and replacement parts provided under this Chamberlain Limited Warranty are provided free of charge and are warranted for the remaining portion of the original warranty period.

This Chamberlain Limited Warranty provides benefits which are in addition to your other rights and remedies as a consumer.

Exclusions

If our service centre determines that a warranty claim has been made in respect of a failure or defect arising under or out of any exclusion detailed below such that the claim is not covered under this Chamberlain Limited Warranty, we may, subject to your other rights and remedies as a consumer, charge you a fee to repair, replace and/or return the Unit to you.

This Chamberlain Limited Warranty does not cover any failure of, or defect in, the Unit due to:

- 1 non-compliance with the instructions regarding installation, operation, maintenance and testing of the Unit or of any product with which the Unit is used;
- 2 any attempt by a person other than an authorised installer to change settings, repair, dismantle, reinstall or move the Unit to another location once it has been installed;
- 3 tampering, neglect, abuse, wear and tear, accident, electrical storm, excessive use or conditions other than normal commercial use;
- 4 use of the Unit in conjunction with controls which have not been supplied, or pre-approved, by Chamberlain;
- 5 problems with, or relating to, the commercial door or commercial door hardware, including but not limited to the door springs, door rollers, door alignment, hinges, guides, slats and drums; or
- 6 problems caused by electrical faults.

If this Chamberlain Limited Warranty does not apply, you may have rights available to you under the Australian Consumer Law.

Liability - Australia only

Except as set out in the Australian Consumer Law (being Schedule 2 of the Competition and Consumer Act 2010) (as amended, consolidated or replaced):

- 1 all other guarantees, warranties and representations in relation to the Unit or its supply are excluded to the extent that Chamberlain can lawfully exclude them; and
- 2 under no circumstances will Chamberlain be liable for consequential, incidental or special damages arising in connection with the use, or inability to use, the Unit, other than those which were reasonably foreseeable as liable to result from the failure.

Liability - New Zealand only

Except as set out in the Fair Trading Act 1986 and the Consumer Guarantees Act 1993 (as amended, consolidated or replaced):

- 1 all other guarantees, warranties and representations in relation to the Unit or its supply are excluded to the extent that Chamberlain can lawfully exclude them; and
- 2 under no circumstances will Chamberlain be liable for consequential, incidental or special damages arising in connection with the use, or inability to use, the Unit, other than those which were reasonably foreseeable as liable to result from the failure.

Note

We request that you retain your sales docket or invoice as proof-of-purchase and attach it to this manual to enable you to establish the date of purchase in the unlikely event of a warranty service being required. Chamberlain reserves the right to change the design and specifications of the Unit without prior notification. Some features or accessories of the Unit may not be available in certain markets or areas. Please check with your distributor.

CHAMBERLAIN SERVICE CENTRE CONTACT DETAILS

Australia Phone toll free 1800 474 326
Fax toll free 1800 888 121
Unit 1, 75 Epping Road
North Ryde, NSW 2113

New Zealand Phone toll free 0800 653 667
Auckland phone 09 477 2823
Fax toll free 0800 653 663

Email customerservice@chamberlainnz.com
Website www.grifco.com.au

Email chamberlainnz@chamberlainnz.com
Website www.grifco.co.nz

NOTES

NOTES

NOTES

Chamberlain Australia Pty Ltd
Unit 1, 75 Epping Rd
North Ryde NSW 2113
Ph: 1800 GRIFCO
www.grifco.com.au

Chamberlain New Zealand Ltd
17B Arrenway Drive, Rosedale 0623
Auckland
Ph: 0800 653 667
www.grifco.co.nz

GRIFCO®