



CELL.P

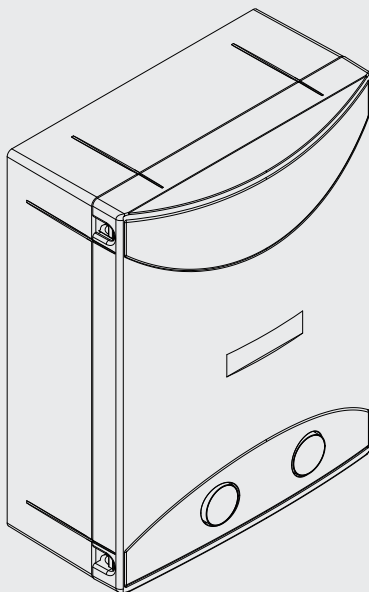

BENINCA[®]
TECHNOLOGY TO OPEN



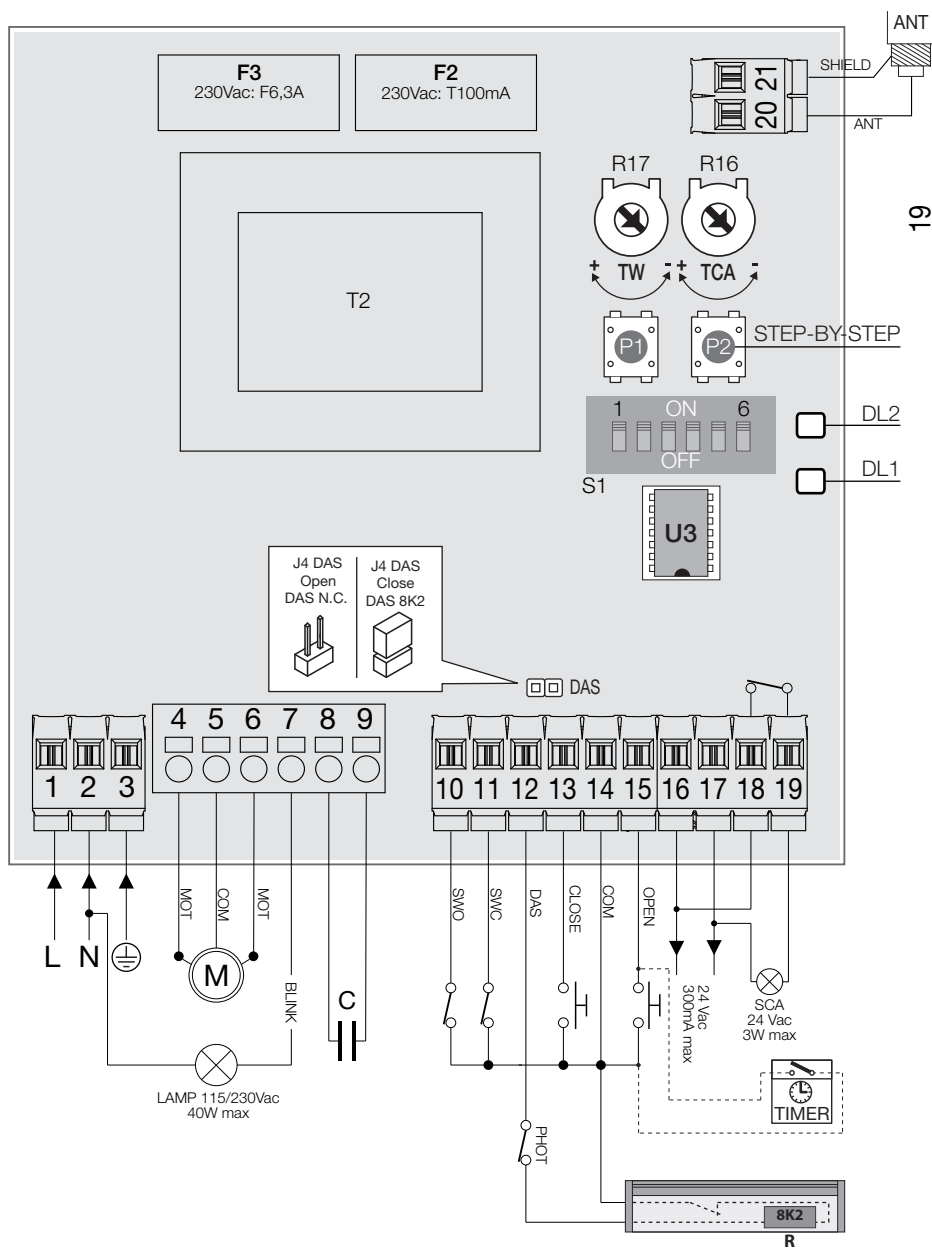



The product shall not be used for purposes or in ways other than those for which the product is intended for and as described in this manual. Incorrect uses can damage the product and cause injuries and damages.

The company shall not be deemed responsible for the non-compliance with a good manufacture technique of gates as well as for any deformation, which might occur during use. Keep this manual for further use.



This manual has been especially written to be use by qualified fitters.

Installation must be carried out by qualified personnel (professional installer, according to EN 12635), in compliance with Good Practice and current code.

Make sure that the structure of the gate is suitable for automation.

The installer must supply all information on the automatic, manual and emergency operation of the automatic system and supply the end user with instructions for use.



Packaging must be kept out of reach of children, as it can be hazardous. For disposal, packaging must be divided the various types of waste (e.g. carton board, polystyrene) in compliance with regulations in force.

Do not allow children to play with the fixed control devices of the product. Keep the remote controls out of reach of children.

This product is not to be used by persons (including children) with reduced physical, sensory or mental capacity, or who are unfamiliar with such equipment, unless under the supervision of or following training by persons responsible for their safety.

Apply all safety devices (photocells, safety edges, etc.) required to keep the area free of impact, crushing, dragging and shearing hazard. Bear in mind the standards and directives in force, Good Practice criteria, intended use, the installation environment, the operating logic of the system and forces generated by the automated system.

Installation must be carried out using safety devices and controls that meet standards EN 12978 and EN 12453.



An omnipolar switch/section switch with remote contact opening equal to, or higher than 3mm must be provided on the power supply mains.

Make sure that before wiring an adequate differential switch and an overcurrent protection is provided.

Pursuant to safety regulations in force, some types of installation require that the gate connection be earthed.

During installation, maintenance and repair, cut off power supply before accessing to live parts.

Also disconnect buffer batteries, if any are connected.

The electrical installation and the operating logic must comply with the regulations in force.

The leads fed with different voltages must be physically separate, or they must be suitably insulated with additional insulation of at least 1 mm.

The leads must be secured with an additional fixture near the terminals.

During installation, maintenance and repair, interrupt the power supply before opening the lid to access the electrical parts

Check all the connections again before switching on the power.

The unused N.C. inputs must be bridged.



WASTE DISPOSAL

As indicated by the symbol shown, it is forbidden to dispose this product as normal urban waste as some parts might be harmful for environment and human health, if they are disposed of incorrectly. Therefore, the device should be disposed in special collection platforms or given back to the reseller if a new and similar device is purchased. An incorrect disposal of the device will result in fines applied to the user, as provided for by regulations in force.

Descriptions and figures in this manual are not binding. While leaving the essential characteristics of the product unchanged, the manufacturer reserves the right to modify the same under the technical, design or commercial point of view without necessarily update this manual.

CELL.P control unit with microcontroller

INPUT/OUTPUT FUNCTIONS

Terminals	Function	Description
1, 2, 3	Power supply	Input, 230VAC 50/60Hz (1-Phase/2-Neutral/GND-Ground connection)
4, 5, 6	Motor	Connection to motor: (MOT-move/COM-Common/MOT-move)
7	LAMP	Output, connection to Flashing light: 230 Vac 40W max.
8-9	Capacitor	Connection to capacitor
10	SWO	Input, OPENING limit switch (Normally Closed contact)
11	SWC	Input, CLOSING limit switch (Normally Closed contact)
12	DAS/ PHOT	Safety edge or photocell Input See DIP-SWITCH 3.
13	CLOSE	Input, CLOSE key (N.C. contact)
14	COM	Common, all control inputs.
15	OPEN	Input, OPEN key (N.O. contact). <i>It is possible to connect a timer for opening in time slots. Contact CLOSED:gate open, Contact open:normal operation.</i>
16,17	24Vac	Output, 24Vac/400mA max accessory power supply.
18,19	SCA	Contact free from voltage, not insulated for the connection of open gate indicator lamp. Open contact with closed door leaf. Flashing light during the door leaf movement. With open door leaf, the contact is closed.
20,21	Antenna	Connection of the antenna to the incorporated radio-receiver module (SHIELD-screen/ANT-signal).

CHECKING CONNECTIONS

- 1) Cut off power supply.
- 2) Manually release the door, move it at around half stroke and lock it again.
- 3) Reset power supply.
- 4) Send an opening control signal through the OPEN input.
- 5) The door leaves should open. If not, with stopped motor, it is sufficient to invert the move wires of the motor (MOT/MOT) of the motor and the limit switches (SWO/SWC), if used.
- 6) Adjust Times and operating Logics.

TRIMMER FUNCTIONS

- TW** It allows the maximum duration of opening and closing.
It must be preset approx. 4s more with respect to the actual stroke time of the system.
The adjustment ranges from 3s to 180s maximum.
- TCA** It allows to adjust the automatic closure time.
The adjustment ranges from 3s to 180s maximum.

DIP-SWITCH FUNCTION

Dip-Switches	Function	Description
DIP1	TORQUE	To be used for the programming of the torque, as shown hereunder. After presetting the parameters, move to OFF again.
DIP2	TCA	The automatic closure is enabled or disabled. Off: disabled automatic closure. On: enabled automatic closure.
DIP3	DAS/PHOT	The operating mode of input DAS/PHOT is selected: Off: partial reversion (3s) at activation of safety edge. On: total reversion at activation of edge/photocell.
DIP4	SWC MODE	Off: during closure, if SWC is pressed, the motor is blocked. On: during closure, if SWC is pressed, the motor continues its closing movement for further 2 seconds or until the SAFETY EDGE is activated.
DIP5	BLI	Select how OPEN input (15) works: ON: during opening an OPEN command is ignored During closing an OPEN command reverse the motion. OFF: Works according DIP 6 setting
DIP6	OPEN/PP	The operating mode of input 15 (Open) is selected. Available only with DIP 5 OFF On: PP Operation: OPEN > STOP > CLOSE > STOP>. Off: OPEN operation always.

SERVICE MAN MODE

With all DIPs on ON, the control unit switches to SERVICE MAN mode.

The SWO and SWC inputs are deactivated.

The OPEN/CLOSE push-buttons must be kept pressed during operation. The opening of the STOP input stops the motor.

ADJUSTMENT OF THE TORQUE (DIP1:ON)

When DIP1 is moved to ON, the board indicates that the torque has been applied during a number of flashes (from 1 to 4) of the DL2 green LED, followed by a 3-s interval.

The max torque is indicated with DL2 green LED with fixed light.

To increase the torque, press P1. The DL2 LED changes the number of flashes to indicate the selected torque value.

Once the desired torque is selected, move DIP 1 to OFF to memorise this presetting.

Note: with actuators for rolling shutters, preset torque at the maximum value.

RADIO SELF-LEARNING (DIP1:OFF)

The radio receiver in this product is compatible with the new ARC (Advanced Rolling Code) transmitters which, thanks to 128-bit encryption ensure superior copy-security.

Storing new ARC transmitters may only be used in conjunction with Rolling code HCS transmitters, bringing the logic CVAR OFF. They are, therefore, not usable in combination with the ARC transmitters.

- 1) ARC transmitters and Rolling Code HCS can not be stored in a single receiver.
- 2) The first transmitter memorized determines the type of transmitters to be used later. If the first transmitter memorized is ARC, you can not store Rolling code HCS transmitters, and vice versa.
- 3) Fixed code transmitters may only be used in conjunction with Rolling code HCS transmitters, bringing the logic CVAR OFF. They are, therefore, not usable in combination with the ARC transmitters. If the first rolling code transmitter stored is an ARC CVAR the logic is inoperative.
- 4) If you want to change the type of transmitters it is necessary to proceed with a receiver reset.

To use a remote control, it is first necessary to store its code in memory. The memorisation procedure is described hereunder. The device is able to store up to 64 different codes in memory.

By pressing P1, the control unit enters the radio learning phase: DL1 red LED flashes 1 time per second, awaiting the key to be matched to the Step-by-Step/OPEN function (see DIP6);

When the key is stored in memory, exit from the programming mode;

By pressing P1 twice, the control unit enters the radio learning phase: DL1 red LED flashes 2 time per second, awaiting the key to be matched to the CLOSE function;

When the key to be matched is memorised, exit from the programming mode.

If the programming mode must be left without storing any remote control signal, press P1 key until DL1 red LED starts to flash in "power on" mode (see LED diagnostics on page 7).

To reset the memory of the receiver, press and keep P1 and P2 keys pressed for around 10 seconds (during this period of time, both DL1 and DL2 flash rapidly).

After 10 seconds, when the two LEDs are switched on with fixed light, release the push-buttons.

When the LEDs switch back again to the original configuration, the control unit has completed the memory reset.

NOTE:

The transmitters are memorised on an EPROM memory (U2), which can be extracted from the control unit and inserted in a new CELL.P control unit should a replacement is required.




For safety reasons, the transmitters can be stored in memory during the opening/closing of the motor.

LED DIAGNOSTICS

The red LED DL1 indicates the activation of inputs according to the legend hereunder:		The green LED DL2 indicates the movement direction of the motor and the status of the gate according to the legend hereunder:	
The Unit is Powered	flashing slowly	OPENING	1 blinking per second
STOP	on with fixed light	CLOSING	2 more than 1 blinking per sec.
DAS/PHOT	rapid flashing	Open gate without TCA	on with fixed light
SWO	1 flash with 2-second interval	Open gate with TCA	rapid flash
SWC	2 flashes with 2-second interval	Closed gate	LED off

SPECIFICATIONS

Mains power supply	230 Vac 50/60 Hz
Output, Motor	1 motor, 230 VAC
Motor maximum power	1000 W
Output, power supply of accessories	24Vac 300mA max.
Protection level	IP50
Operating temperature	-20°C / +50°C
Radio receiver	433.92 MHz, incorporated and configurable (rolling-code or fixed+rolling-code+ ARC Advanced Rolling Code)
No. of codes storable in memory	64

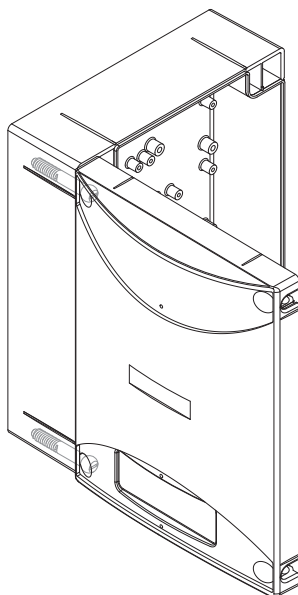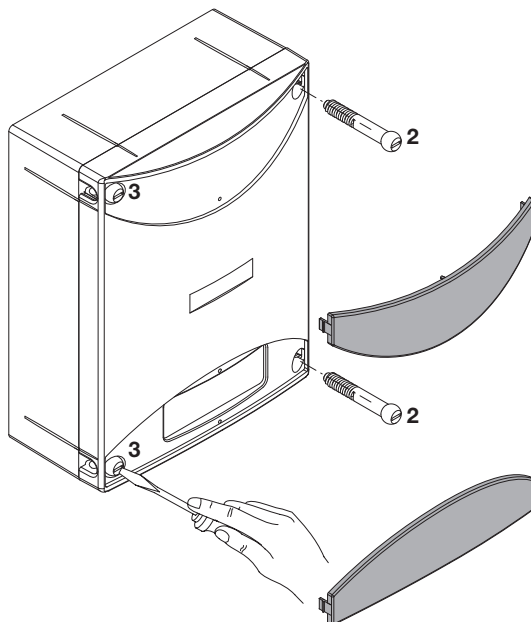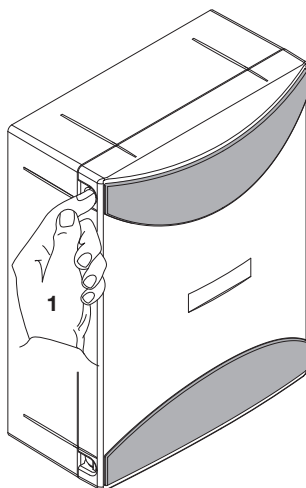

1. Premere le alette sui fianchi per sganciare le due maschere copriviti.
2. Rimuovere le due viti sul lato di apertura desiderato.
3. Allentare le viti con funzione di cerniera senza rimuoverle, in modo da consentire l'apertura del coperchio.

1. Press the tabs on the sides to release the two masks that cover the screws.
2. Remove the two screws on the desired opening side.
3. Slacken the two screws that act as a hinge without removing them, so as to allow opening the cover.

1. Auf die seitlichen Laschen drücken, so dass die beiden Schraubenblenden befreit werden.
2. Die beiden Schrauben an der gewünschten Öffnungsseite ausbauen.
3. Zuletzt die beiden als Scharnier dienenden Schrauben lockern, aber nicht ausbauen, damit der Deckel geöffnet werden kann.

1. Presser les deux ailettes latérales pour décrocher les deux cache-vis.
2. Enlever les deux vis sur le côté d'ouverture désiré.
3. Desserrer les deux vis faisant fonction de charnière sans les enlever, de manière à permettre l'ouverture du couvercle.

1. Presionar las aletas en los lados para desenganchar las dos tapas cubretornillos.
2. Extraer los dos tornillos del lado de apertura deseado.
3. Afojar los dos tornillos con función de bisagra sin extraerlos, a fin de poder abrir la tapa.

1. Nacisnąć boczne klapki w celu odhaczania dwóch masek nakrywających śruby.
2. Wyciągnąć dwie śruby po wybranej do otwierania stronie.
3. Poluzować dwie śruby blokujące bez wyciągania ich, w sposób umożliwiający otwarcie nakrywki.

BENINCA'

AUTOMATISMI BENINCA' SpA - Via Capitello, 45 - 36066 Sandrigo (VI) - Tel. 0444 751030 r.a. - Fax 0444 759728
