


L8542621
10/2020 rev. 3

BENINCA®

CENTRALINA A MICROPROCESSORE
CONTROL UNIT WITH MICROCONTROLLER
MIKROCONTROLLER-STEUERUNG
CENTRALE A MICROCONTRÔLEUR
CENTRALITA A MICROPROCESADOR

DA.S04

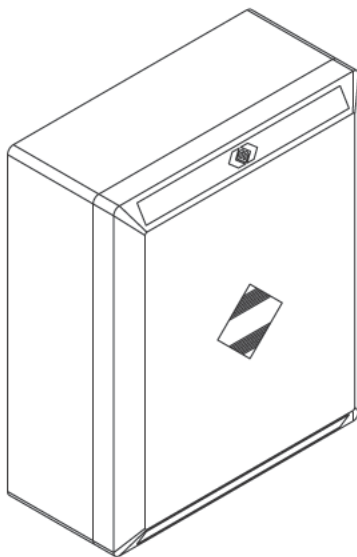

Libro istruzioni
Operating instructions
Betriebsanleitung
Livret d'instructions
Manuale de instrucciones
Książeczka z instrukcjami



UNIONE NAZIONALE COSTRUTTORI
AUTOMATISMI PER CANCELLI, PORTE,
SERRANDE ED AFFINI

DA.SO4

The cabinet "DA.SO4" can be used to control power motors not greater than 20W.

Extension module DA.E

(1,2) Motor = Output, 24VDC motor

(3,4) P.P. = Input, control push button

Operating mode "open – close"

Trimmer P.M. = Adjustment of current limiter activation threshold

Important: Before inserting or replacing the cards "DA.E", cut-off power supply to the basic board.

Check that the connectors are correctly aligned before powering the circuit.

Mother board

(1,2) 230VAC = Input, power supply 230VAC - 50/60Hz

(3,4) 24VDC = Output, auxiliary 24VDC – Max consumption 1A ("3" negative, "4" positive)

(5,6) Antenna = Input, antenna for radio receiver.

J1,J2,J3,J4 = Connectors for control cards DA.E.

The cards are inserted at random.

Cut-off power supply to the mother board before inserting or removing the various cards.

J5 =

Connector for battery charging card DA.RB.

Connect the negative pole of the battery to terminal "0V" and the positive to terminal "+24V"; it is not necessary to connect the intermediate terminal "+12V".


J6,J7,J8 =

Channel selection of the radio receiver towards the connectors J1, J2, J3, J4.

Example: To connect the 1st channel of the receiver to the connector J3, short circuit J7-J8 in correspondence with column No. 3.

Four-channel radio receiver: in a four-channel receiver, each channel must be connected directly to inputs "P.P." of the modules DA.E to be controlled. Selections J6, J7, J8 are valid only if a receiver connected to connector JRX is used.

The selections J6, J7, J8 are valid only if a receiver connected to the JRX connector is used and must be removed if a external receiver is used.

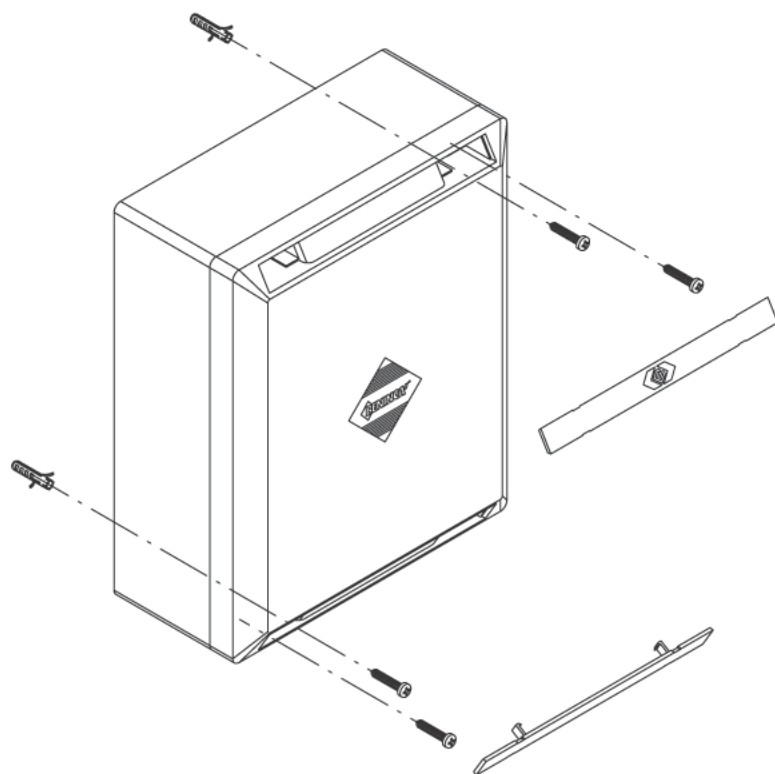

BENINCA®

AUTOMATISMI BENINCÀ SpA - Via Capitello, 45 - 36066 Sandrigo (VI) - Tel. 0444 751030 r.a. - Fax 0444 759728