

A3 - A3F

Unit for controlling 2 motors



EN - Instructions and warnings for installation and use

IT - Istruzioni ed avvertenze per l'installazione e l'uso

FR - Instructions et avertissements pour l'installation et l'utilisation


ES - Instrucciones y advertencias para la instalación y el uso

DE - Installierungs-und Gebrauchsanleitungen und Hinweise

Nice

SWITCH 1: Off	Automatic closing on	SWITCH 6: On	} Mode 3 pass-by-pass operation (open - stop - close - open)
SWITCH 1: On	Automatic closing off	SWITCH 7: On	
SWITCH 2: Off	Warning time off	SWITCH 8: Off	
SWITCH 2: On	Warning time on		
SWITCH 3: Off	Temporary pause off	SWITCH 6: Off	} Shared property operation
SWITCH 3: On	Temporary pause on	SWITCH 7: Off	
SWITCH 4: Off	Pause time with safety device off	SWITCH 8: On	
SWITCH 4: On	Enable pause time with safety device on		
SWITCH 5: Off	Courtesy light on	SWITCH 9: Off	Gate open without limit switch warning light
SWITCH 5: On	Flashing light on	SWITCH 9: On	Gate open with limit switch warning light
		SWITCH 10: Off	Temporary stop on
		SWITCH 10: On	Temporary stop off
		SWITCH 11: Off	Water hammer off
		SWITCH 11: On	Water hammer on
SWITCH 6: Off	} Standard pass-by-pass operation (open - close - open)		
SWITCH 7: Off			
SWITCH 8: Off			
SWITCH 6: On	} Mode 2 pass-by-pass operation (open - pause - close - open)	SWITCH 12: Off	1st motor opening delay off
SWITCH 7: Off		SWITCH 12: On	1st motor opening delay on
SWITCH 8: Off			

Fig. 1

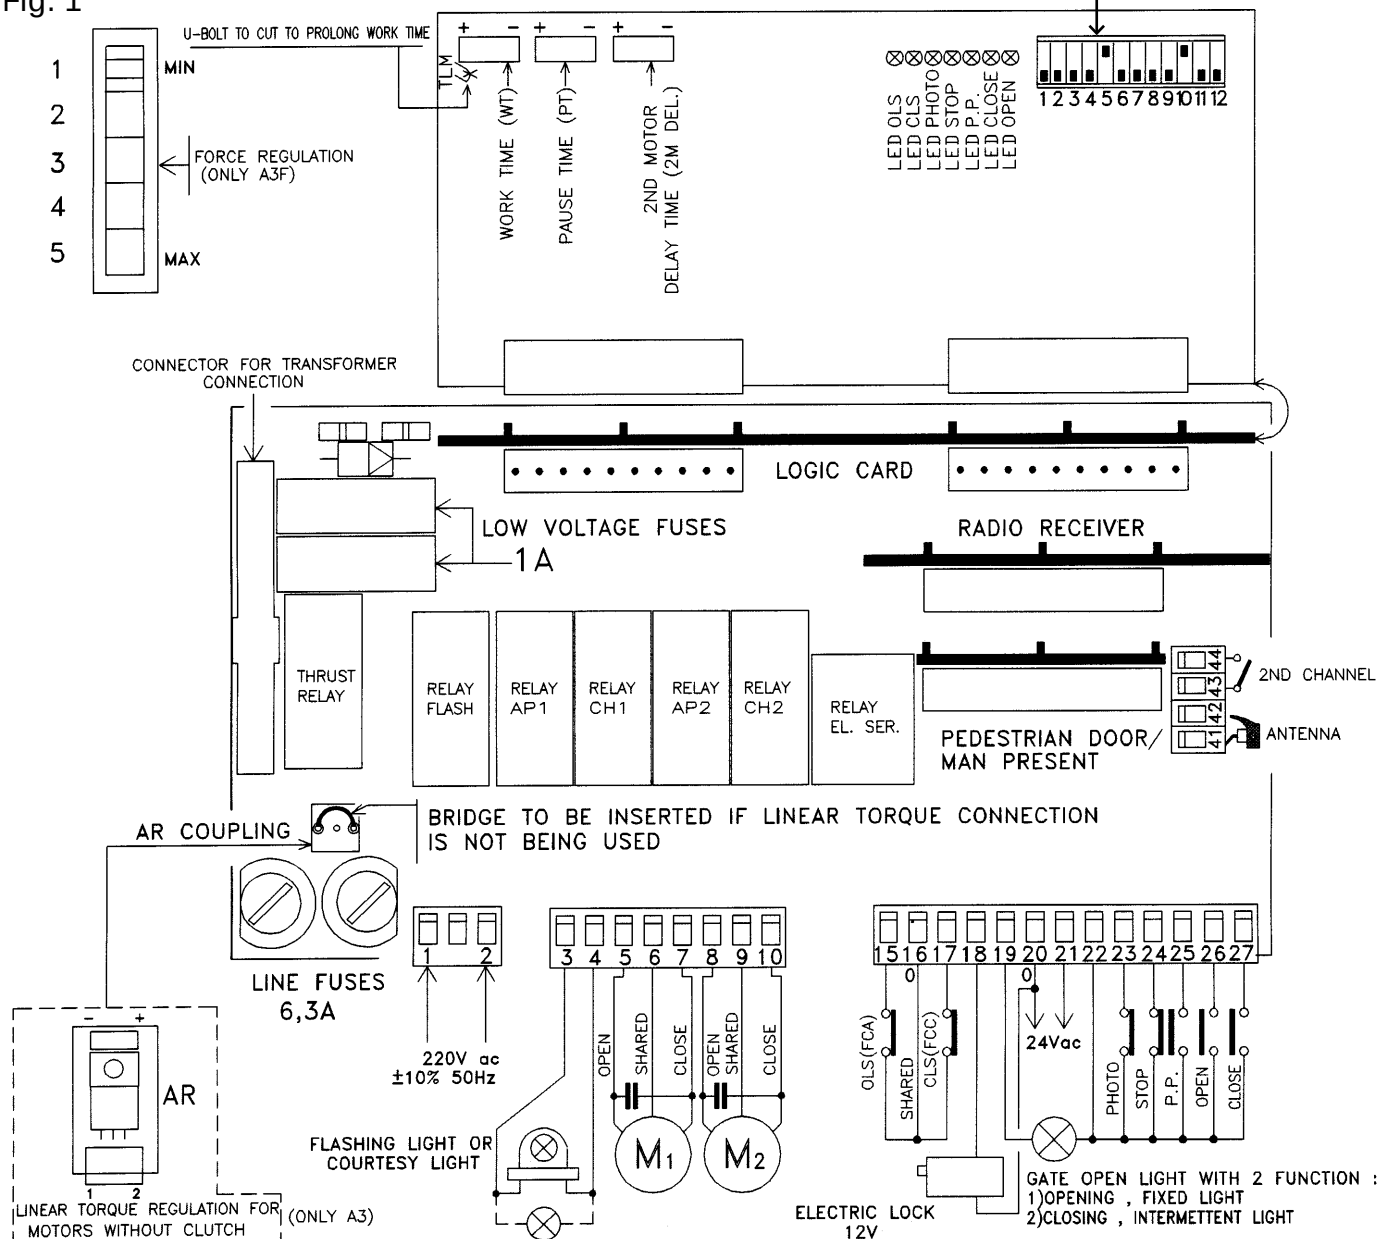

NB.: 1) on all A3 units with torque regulation a force thrust of about 1 sec is envisaged in order to overcome inertia in any movement of the gate.

2) If the installation needs an electro-block, connect it to terminal 3 - 4 (parallel to the flashing light).

A: TERMINAL BOARD DESCRIPTION

A1	Terminals 1- 2	• Line input 220 V ac protected with fuses to guard against short circuits and overload dischargers
A2	Terminals 3 - 4	• Flashing light output
A3	Terminals 5 - 6 - 7	• 1st motor output terminal 6 is common for 1st motor
A4	Terminals 8 - 9 - 10	• 2nd motor output terminal 9 is common for 2nd motor
A5	Terminal 15	• Opening limit switch input (OLS) N.C. contact
A6	Terminal 16 (0v)	• Common input for opening limit switch (OLS) and closing limit switch (CLS) N.C. contact
A7	Terminal 17	• Closing limit switch input (CLS) N.C. contact
A8	Terminal 18	• 12V electric lock control output.
A9	Terminal 19	• Open gate pilot light output.
A10	Terminals 20 (0V)-21(24V)	• 24 V ac output, max. 1A for safety devices protected with fuse
A11	Terminal 22	• Common input for STOP, step-by-step, open & close buttons for safety devices and open gate light
A12	Terminal 23	• Safety device input (FOTO) N.C. contact
A13	Terminal 24	• Stop button input (STOP) N.C. contact
A14	Terminal 25	• Step-by-step button input (PP) N.A. contact
A15	Terminal 26	• Open button input (OPEN) N.A. contact
A16	Terminal 27	• Close button input (CLOSE) N.A. contact

B: ANTENNA TERMINAL BOARD DESCRIPTION

B1	Terminal 41	• Antenna unit
B2	Terminal 42	• Antenna sock
B3	Terminal 43	• 2nd radio channel output
B4	Terminal 44	• 2nd radio channel output

NOTE: Terminal board can be completely removed to make it easier to install the unit. While securing connections and coupling the various cards, the A3 units must not be on. If the N.C. controls or buttons are not used, join the jumpers on their related terminals.

INSTALLATION INSTRUCTIONS

A) After completing connections as outlined above and installing all safety and warning devices that UNI 8612 standard requires, switch on the A3 unit checking the right voltage and make sure that there is no humming or irregular excitations. Make sure that the STOP/PHOTO/OLS/CLS LED's are on the LED's switch off when one of the single input is enabled. If the LED's are off, check their respective connections at the inputs.

B) Safety devices must be perfectly aligned to ensure efficient operation of the A3 units.

C) If you wish to regulate the motor torque, in the A3 version you need to plug in the AR card in the connector provided. If this device is not used, make sure that the jumper is fitted on the connector whereas for the A3F version, regulate by setting the 5 positions on the switch, see fig. 1.

D) Press the open button displaying the control with its related LED and make sure of the exact opening movements. If this is not so, reserve the phases of the motor(s). If automation requires some limit switches, make sure they are working properly and necessary, swap the opening limit switch (OLS) and closing limit switch (CLS).

E) Set the operating time WT for motor 2 closing time T2M and, if required, set the pause PT. See fig. 1.

F) Insert the radio receiver provided, in the connector and check the radio control and all safety devices and control circuits are working properly.

STANDARD OPERATION

With the dip switch pre-set as in fig. 1 to first step-by-step pulse or radio control, the A3 unit opens as its first operation preceded by an electric lock release pulse, if installed. This operation is interrupted by the opening limit switch, if installed (OLS), the operational timeout, or stop pulse. Throughout this operation the flashing light and pilot light are operational. When the operation is stopped is completed, the flashing light switches off and the open gate pilot light remains on. After the pause time has elapsed, the gate is closed and then the flashing light is switched on. The end of this operation is interrupted by the closing limit switch (CLS), if installed, the stop button or the end of operating time. At the end of this operation, the flashing light and open gate pilot light are switched off.

PROGRAMMABLE FUNCTIONS

- **SWITCH 1:** disables automatic closing.
 - **SWITCH 1: off** automatic closing is enabled.
- The gate is automatically closed after the set pause time.

- **SWITCH 1: on** automatic closing is disabled.
- After opening the gate, the A3 unit remains paused until another pulse is given.
- **SWITCH 2:** enables warning time.

- **SWITCH 2: off** warning time is disabled.
- **SWITCH 2: on** warning time is enabled.

Before starting the opening or closing cycle, the flashing light switches on 4 seconds early.

- **SWITCH 3:** enables temporary pause.
- **SWITCH 3: off** temporary pause is disabled.

While closing the gate, enabling of the photocell reverses opening motion. While opening the gate the photocell enabling is ignored.

- **SWITCH 3: on** temporary pause is enabled.

While closing the gate, enabling of the photocell causes a temporary pause in motion, when the range of the photocells is vacant, motion is reversed causing the gate to open. While opening the gate, enabling of the photocell causes a temporary pause in motion, if the photocell range is vacant, the opening operation will continue until it is paused.

- **SWITCH 4:** enables temporary pause with safety devices.
- **SWITCH 4: off** standard operation.
- **SWITCH 4: on-** temporary pause with safety devices is enabled.

Every time the photocell range is interrupted during pause, the set pause time is reset and restart timing. This particular function can be adopted where automation is used very frequently (e.g. apartment blocks, public property, car parks etc).

- **SWITCH 5:** enables courtesy or flashing light.
- **SWITCH 5: off** courtesy light is enabled

This condition allows you to connect the courtesy light, that remains on during the end of any operation for approx. another 20 sec., to the same terminals (3/4) as the flashing light.

- **SWITCH 5: on** flashing light is enabled.

The flashing light is switch on only while the gate is opened or closed.

- **SWITCH 6: off - SWITCH 7: off - SWITCH 8: off: standard step-by-step operation.**
- When the first step-by-step or radio pulse is sent, the gate is opened, upon the second pulse the gate is closed and upon the third pulse, the gate is opened (1st OPEN, 2nd CLOSE, 3rd OPEN).

- **SWITCH 6: on - SWITCH 7: off - SWITCH 8: off: mode 2 step-by-step operation.**
- When the first step-by-step or radio pulse is sent, the gate is opened, pause at the second pulse, upon the third pulse the gate is closed and upon the fourth, the gate is opened (1st OPEN, 2nd PAUSE 3rd CLOSE, 4th OPEN).

- **SWITCH 6: on - SWITCH 7: on - SWITCH 8: off: mode 3 step-by-step operation.**
- When the first step-by-step or radio pulse is sent, the gate is opened, upon the second pulse motion is stopped, upon the third pulse, the gate is closed and upon the fourth, the gate is opened (1st OPEN, 2nd STOP 3rd CLOSE, 4th OPEN).

- **SWITCH 6: off - SWITCH 7: off - SWITCH 8: on: apartment block operation.**

After sending the first step-by-step pulse, motion cannot be reversed during the opening operation. Motion can only be varied in the pause or closing stages. This allows you to stop several consecutive commands transmitted during the opening stage from further away than the visible range from ending the operating cycle that has just begun.

- **SWITCH 9: off** open gate pilot light without limit switches. If the system is not fitted with limit switches, use this configuration.

- **SWITCH 9: on** open gate pilot light with limit switches.

If the system requires limit switches, use this configuration.

- **SWITCH 10:** enables temporary stop

- **SWITCH 10: off** temporary stop is enabled.

In the opening stage, movement can be temporarily stopped with the button, thus starting the pause stage, after which the gate is closed. When closing the gate, the stop button stops movement until another step-by-step pulse is sent.

- **SWITCH 10: on** standard operation.
- **SWITCH 11:** enables water hammer.
- **SWITCH 11: off** standard operation.
- **SWITCH 11: on** water hammer is enabled.

The opening stage is preceded by a closing pulse to release the electric lock. This function is useful when environmental conditions are somewhat harsh (winter, in snow, ice etc.) A water hammer is not induced if the warning time is enabled.

- **SWITCH 12:** enables 1st motor delay in opening.

- **SWITCH 12:** off Standard operation.

- **SWITCH 12: on** 1st motor delay in opening is enabled.

In the opening stage, the 1st motor is delayed 2/3 sec. This particular function is applied if the electric lock is used or where there are very thick doors.

TECHNICAL SPECIFICATIONS

- PAWER SUPPLY	: 220 Vac ± 10% 50Hz
- OPERATING TEMPERATURE	: -20°C to + 70°C
- MAX.: MOTOR RATING	: 1/2 HP single phase
- MAX.: GATE LIGHT RATING	: 5W 24V
- MAX.: 24V. OUTPUT CURRENT	: 1A
- OPERATING TIME	: 8 to 42 sec. (can be increased from 8 to 118 sec.)
- PAUSE TIME	: 2 to 20 sec.
- 2nd MOTOR DELAY	: 0 to 20 sec.
- OPENING PHASE SHIFT TIME	: 0 to 2 sec.
- BOX DIMENSIONS	: 280 x 220 x 110 mm.

NICE spa reserves the right to make modifications at any time without prior notice.

 For A3/1 end A3F/1 versions do not use

I Istruzioni per il montaggio della centrale MINDY.

F Instructions pour le montage de l'unité MINDY.

E Instrucciones para el montaje de la central MINDY.

GB Instructions for assembly of the MINDY control unit.

D Anweisungen für die Montage der Steuerzentrale MINDY.


- I** Inserire le due viti negli appositi fori superiori facendole scorrere sulla guida, come fig. A avvitandole parzialmente. Ruotare di 180° la centrale e ripetere la stessa operazione con le altre 2 viti.
Fissare a parete la centrale.

- GB** Insert the two screws in the upper holes provided, sliding them on the guide as in fig. A and partly screwing them in. Turn the control unit through 180° and perform the same operation with the other 2 screws.
Fix the control unit on to the wall.

- F** Introduire les deux vis dans les trous supérieurs en les faisant coulisser sur la glissière, comme l'indique la Fig. A, en les vissant partiellement. Tourner l'unité sur 180° et répéter même opération avec les 2 autres vis.
Fixer l'unité au mur.

- D** Die zwei Schrauben in ihre oberen Löcher einfügen und wie in Abb. A gezeigt auf der Führung gleiten lassen, dann teilweise anschrauben. Die Zentrale um 180° drehen und das gleiche mit den zwei anderen Schrauben ausführen.
Die Zentrale an der Wand befestigen.

- E** Introduzca los dos tornillos en los respectivos agujeros superiores haciéndolos deslizar sobre la guía como muestra la Fig. A, atornillándolos parcialmente, gire 180° la central y repita la misma operación con los otros dos tornillos.
Fije la central a la pared.

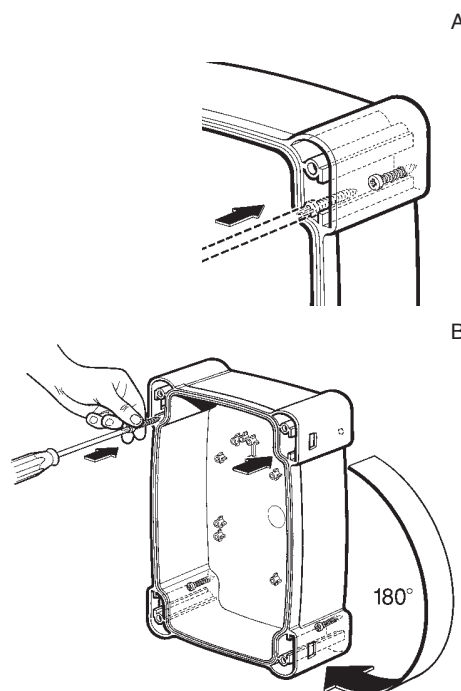


- I** Inserire il coperchio dalla parte desiderata (con apertura a destra o sinistra), premere con forza in corrispondenza delle frecce.

- GB** Fix the cover on the desired part (with opening on the right or left), press firmly on the arrows.

- F** Placer le couvercle dans la position voulue (avec l'ouverture à droite ou à gauche), appuyer fortement au niveau des flèches.

- D** Den Deckel wie gewünscht aufsetzen (mit Rechts- oder Linksöffnung). Kräftig drücken, wo die Pfeile vorhanden sind.

- E** Introduzca la tapa en la parte deseada (con apertura a derecha o izquierda), apriete con fuerza en correspondencia de las flechas.

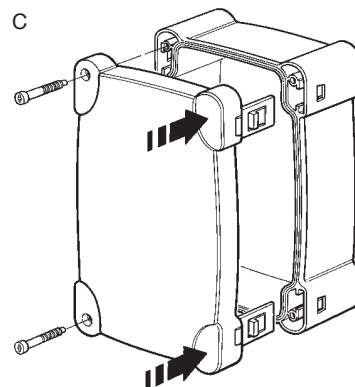

- I** Per togliere il coperchio premere con un cacciavite sul punto di incastro e contemporaneamente spingere verso l'alto.

- GB** To remove the cover, press with a screwdriver on the join and push upwards at the same time.

- F** Pour enlever le couvercle, appuyer avec un tournevis sur le point d'encastrement et en même temps pousser vers le haut.

- D** Zum Abnehmen des Deckels mit einem Schraubenzieher auf den Einspannpunkt A drücken und gleichzeitig nach oben schieben.

- E** Para quitar la tapa apriete con un destornillador en el punto de encastramiento y contemporáneamente empuje hacia arriba.

