


MINDY

A824

CE

Control unit

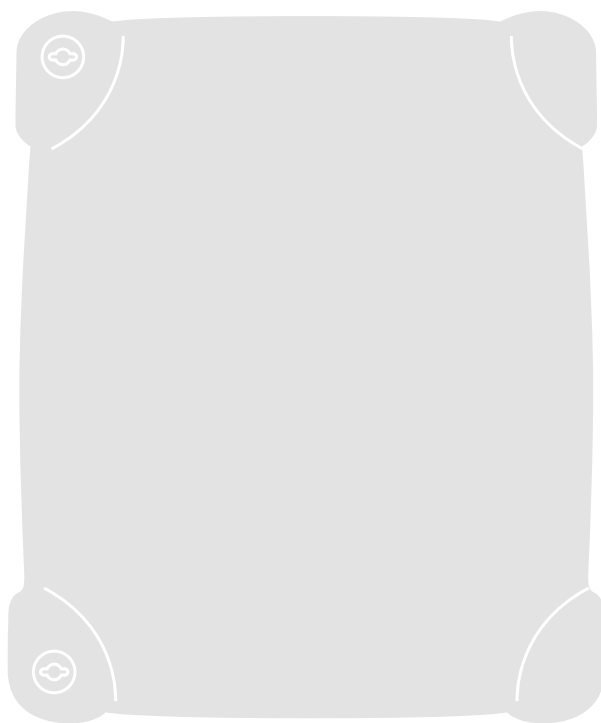

IT - Istruzioni ed avvertenze per l'installazione e l'uso

EN - Instructions and warnings for installation and use

FR - Instructions et avertissements pour l'installation et l'utilisation

DE - Installierungs-und Gebrauchsanleitungen und Hinweise

ES - Instrucciones y advertencias para la instalación y el uso

NL - Aanwijzingen en aanbevelingen voor installatie en gebruik

RU - Инструкции и важная информация для технических специалистов

Nice

This manual is for use only by technical personnel qualified to carry out the installation.
No information given in this manual can be considered of any interest to the end user!

INDEX:

Quick guide

- 1 Introduction
 - 1.1 Description
- 2 Installation instructions
 - 2.1 Installation
 - 2.2 Wiring diagram
 - 2.3 Description of connections
 - 2.4 Connection testing
- 3 Connecting the photocells
 - 3.1 Photocell testing
- 4 Travel limits
- 5 Initial search for distances
- 6 Programming
- 7 Functioning test
 - 7.1 Functions that can be selected
 - 7.2 Description of the functioning modes
- 8 Adjustments
- 9 Accessories
 - 9.1 "Carica" card
 - 9.2 "Per" Card
 - 9.3 Radio card
- 10 Maintenance
 - 10.1 Information for safeguarding the environment
 - 10.2 Technical specifications

IMPORTANT NOTICE:

It is our duty to remind you that you are carrying out operations on machine systems classified in the "Automatic gates and doors" category and as such are considered particularly "hazardous"; it is your job to make them as "Safe" as is **reasonably possible!** Only qualified personnel should install and service the equipment. It is the responsibility of the installer to ensure that the equipment is correctly and professionally installed in compliance with all relevant regulations and standards applicable in the country of installation. We draw your attention to the following most important European directives - it is the installer's responsibility to check what other regulations apply in the country of installation.

- EEC 89/392 (Machine Directive)
- EEC 89/336 (EMC Directive)
- EEC 73/23 (Low Voltage Directive)
- PrEN 12453 (Safety in using motorised doors - requirements and classifications)
- PrEN 12445 (Safety in using motorised doors - testing methods)

Nice products are designed and manufactured to meet all current European standards and it is essential that the installer also installs the equipment in accordance with all local and European requirements.

Unqualified personnel or those who do not know the standards applicable to the "Automatic gates and doors" category:

Must under no circumstances attempt to install or service the equipment!

Personnel who install or service the equipment without observing all the applicable standards:


Will be held responsible for any damage the system may cause!

QUICK GUIDE

Do not install the unit unless you have read all the instructions through at least once!
Do not install the unit without the “Mechanical travel stops”!

Once the gearmotors, control devices (key selector or push button panel) and safety devices (emergency stop, photocells, sensitive edges and flashing lights) have been installed, connect the unit as illustrated in the following diagram:

If the gate has only one motor, connect it to motor 2 output on the unit and cut the jumper; leave the terminals of motor 1 and relative encoder free.

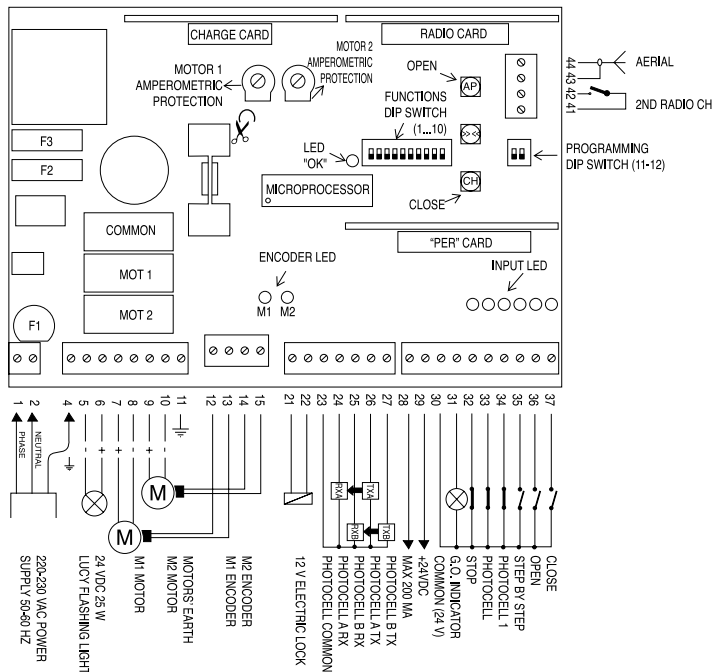

Turn the unit on and check that voltage between terminals 1-2 is 230 Vac and 24 Vdc between terminals 28-29. The LEDs on the active inputs should be on and the OK LED should flash at 1-second intervals. The encoder LEDs signal each movement of the 2 motors.

Check movement direction by pressing the CLOSE button on the card: **Wait for motors 1 and 2 to start in closing (motor 2 starts after motor 1 has finished the manoeuvre).**


Should either or both motors start the opening manoeuvre, reverse motor connections (terminals 7-8 or 9-10).

Activate the automatic distance search by setting the dip switches as indicated:

Press the CLOSE button on the card and wait for the automatic distance search procedure to be carried out.



Switch 10 "OFF" recommended for "PLUTO" (Slowing down during closing manoeuvres short)



Switch 10 "ON" recommended for "METRO" (Slowing down during closing manoeuvres long)

Once finished, set the PROGRAMMING dip switches OFF and the FUNCTIONS dip switch as required (ON activates the function)

Switch 1-2 :	Off Of	= "Hold to Run Control" Functioning
	On Of	= "Semiautomatic" Functioning
	Off On	= "Automatic" Functioning (Automatic Closing)
	On On	= "Automatic + Close Always" Functioning
Switch 3	On	= Condominium Functioning (Not available in the Manual mode)
Switch 4	On	= Preflashing
Switch 5	On	= Water hammer
Switch 6	On	= Closes immediately after Photocell if in Automatic or closes after semiautomatic Photocell
Switch 7	On	= Photocell1 safety also in opening
Switch 8	On	= Photocell test activation (only with photocells connected to terminals 23..27)
Switch 9	On	= CLOSE becomes Pedestrian Open
Switch 10	On	= Courtesy light on flashing light

In the automatic functioning mode, pause time is set at 30 seconds (Switch 2 ON). To change it see Chap. 6.7

Adjust the 2 amperometric trimmers until the triggering thresholds of the anti-crush clutch are reached, as required by law.

1) INTRODUCTION:

The electronic card is designed to control two 24 Vdc motors like, for instance, **PLUTO** or **METRO** con built-in movement encoder. This is a state-of-the-art product: opening of the actuator does not depend on working time but on a system that controls functioning position by means of a magnetic sensor that detects shaft rotation degrees (encoder); this makes functions possible that were impossible with traditional controlling systems.

The stop point is reached by slowing down, achieved with millimetric precision.

Speed is constantly controlled during movement and any obstacles are promptly signalled and movement is reversed (anti-crushing).

Programming is “child’s play” and is completely automatic.

Once the unit is installed, press a button and wait until all the limit measurements have been taken within which movement occurs.

The most advanced technologies have been used for this product to guarantee maximum immunity against interference, greater flexibility of use and the widest possible range of programmable functions.

Three functioning modes are possible: “hold to run control”, semiautomatic” and “automatic”.

There are also some sophisticated functions like “Close immediately after Photocell”, and other special operating functions like “Gradual start” and “Slowing Down” added as standard features.

The whole range of **Nice** radio receivers can be plugged into the control card as well as the “PER” card, with additional functions, and the “CHARGE” card for recharging the optional batteries.

1.1) DESCRIPTION OF THE PRODUCT:

This unit uses new control techniques for direct current motors with movement encoder so it is necessary, prior to installation, to analyse the basic parts it is made of so as to minimise possible installation problems.

1.1.1) MOVEMENT ENCODER:

Gate movement is detected by a movement control system on the gearmotor that works by means of a magnetic sensor installed on the motor shaft.

This new magnetic reading system is immune to problems related to dirt, humidity etc. which means it is ideal for using in extremely severe environmental conditions.

We can see if the two encoders (one for each motor) are working properly by their 2 LEDs which should come on each time the motor shaft turns; the LEDs can come on more or less quickly depending on movement speed. When the motors are not moving the LED can be on or off depending on the point at which the shaft stopped.

1.1.2) ANTI-CRUSH CLUTCH:

The movement encoder is used to control the position and speed of the gate constantly during movement.

If an obstacle is detected the gate is stopped.

If one of the automatic functioning modes is active, a movement in the opposite direction will be started.

To increase the level of safety still further, if the clutch triggers three consecutive times without ever reaching the natural end of movement, movement will be stopped without reversal.

1.1.3) INPUTS:

When the unit is turned on and the input is active the pilot light on that input will come on.

Normally the LEDs on the safety inputs, STOP, PHOTOCCELL and PHOTOCCELL1 are on while those on the command inputs, STEP-BY-STEP, OPEN and CLOSE are normally off.

1.1.4) KEYS:

During installation it is necessary to open or close the gate. The most natural way is of course with the commands. The three keys “AP” (OPEN), “CH” (CLOSE) and “<<>>” are used for this purpose. Open the gate with “AP”, close it with “CH” and increase speed with “<<>>” when movement is slow. These same keys are used during programming for storing.

1.1.5) “OK” LED:

The “OK” LED signals that the internal logic is working properly: a regular flash at 1 second intervals means the internal microprocessor is active and everything is in order. Quick flashing at 5 pulses a second means that the supply voltage is not enough or a wrong programme has been selected.

Whenever an alteration is made on the STEP-BY-STEP, OPEN, CLOSE, PHOTOCCELL inputs, etc., or if a dip switch is moved, the OK LED will flash twice quickly signalling that the microprocessor has acquired the new state.

2) **INSTALLATION INSTRUCTIONS:**

When installing the gearmotors strictly follow all the instructions given in the relevant instruction manuals. It is necessary to underline that the gate must be equipped with the necessary mechanical travel stops which are essential for the correct functioning of the "Travel limit search" and are required in order to comply with point 5.2.1 of the prEN 12453

Do not install the unit without the "Mechanical travel stops"!

These mechanical stopping devices must be able to stop gate movement under any conditions. Make absolutely certain that the mechanical stop is able to withstand and absorb, without any deformation whatsoever, all the kinetic energy accumulated by the gate's movement!

We advise verifying that the reaching of the mechanical stop point does not lead to hazardous situations and that the safety margins are always complied with!

Do not install the unit if you have not read all the instructions of the unit and the actuators!

Before starting installation, verify that the gate to be automated is in a sound condition and that the mechanics are in good working order and observe the safety margins and minimum distances.

Carefully analyse all the risks relating to the automation you are about to install, evaluate with particular care the safety devices to be installed and always install an emergency stop device, which should be a category 0 stop device.

Remember that there are specific requirements to be strictly observed regarding both the safety of electrical installations and automatic gates!

As well as the legal requirements and standards that must be adhered to, please take note of the following points to ensure maximum safety and reliability in your installation:

- The power line to the unit must always be protected with a circuit breaker or a pair of 5A fuses, an RCD is recommended but not essential if there is already one on the mains supply.
- Power the unit with a 3 x 1.5 mm² cable (phase + neutral + earth). If the distance between the unit and earth connection exceeds 30 m, install an earth plate near the unit.
- If the motors have no cable use a 5 x 0.75 mm² type (Motor +, Motor -, Encoder, Encoder, earth). These cables must never be longer than 3 m.
- Avoid, at all costs, connecting cables in buried boxes even if they are completely watertight.
- When connecting the low safety voltage part use wires with an 0.25 mm² minimum cross section. For the electric lock only use a wire with a cross section of at least 1.5 mm². Used screened wire if length exceeds 30 m, earthing the braided wire only on the unit side.
- Always and only use cables (individually insulated wires plus an additional general insulation) and never single wires even if they are protected inside ducts.

Make sure you have all the material needed and that it is suitable for this kind of use.

2.1) INSTALLATION:

A correct choice in installing the unit is fundamental to guarantee safety and good protection from the weather. Remember that the unit has parts powered by the mains as well as electronic components that are particularly fragile.


The unit comes in a container that, if properly installed, will guarantee a protection level of IP 55 (in accordance with CEI 70-1 and IEC 529) which means it is suitable for outdoor installation as well.

It is, however, necessary to observe a few simple but basic rules:

- Install the unit on a permanent surface, perfectly flat and adequately protected against knocks.
- Fix the unit's container so the bottom is at least 40 cm from the ground. For fixing follow the instructions given at the end of this manual.
- Fit grommets only on the bottom of the unit. Never drill holes in the sides or top. The cables must enter the unit only from underneath!

If pipes are used that could fill with water or if they lead from a buried pit, the cables must first be made to go through a junction box installed at the same height as the unit and then into the unit's container, always from underneath. This will prevent any evaporation of water in the pipes from forming condensation inside the unit.

Once all the parts have been installed, it should look like the following drawing:

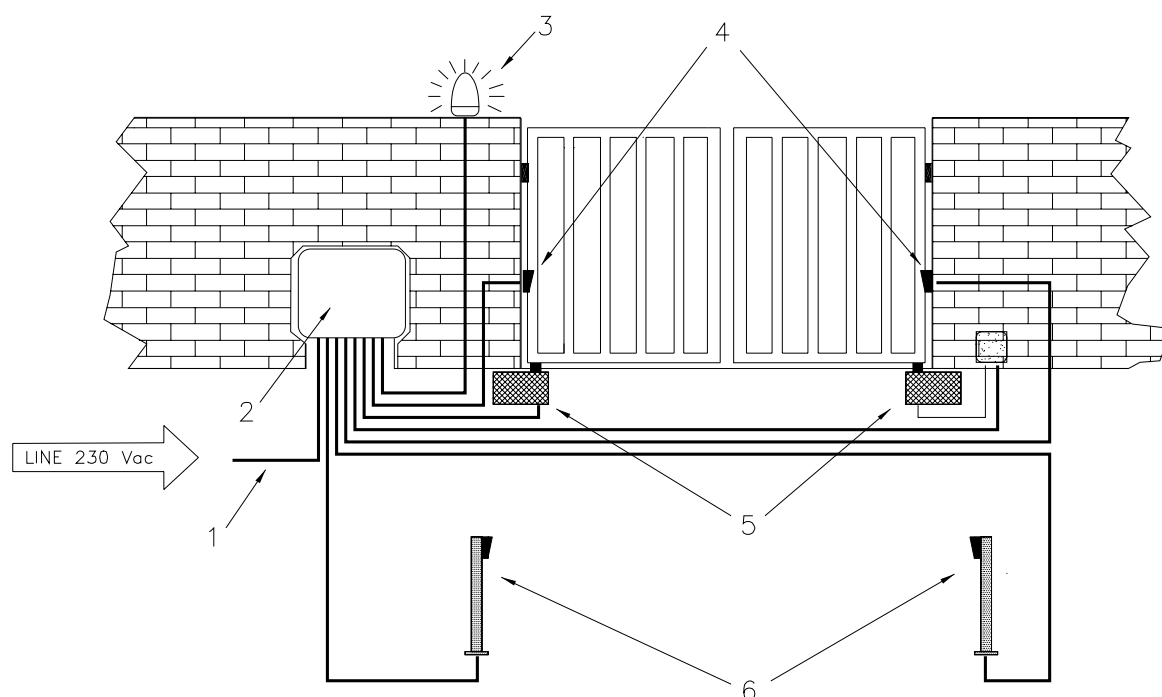

- 1) 230Vac power line
- 2) A824 unit
- 3) LUCY 24V flashing light
- 4) Pair of photocells (PHOTOCELL)
- 5) 24 Vdc electromechanical actuators with movement encoder
- 6) Pair of photocells (PHOTOCELL1)

2.2) WIRING DIAGRAM:

To safeguard the operator and to avoid damaging components while wiring, both low (230 V) and very low (24 V) voltages, or plugging in the various cards:


Disconnect the unit from all power sources when working on it.

We recommend waiting until installation is complete and the system tested before plugging in any optional cards like "RADIO", "PER" or "CHARGE". The optional cards are not necessary for the working of the system and if they are used they make troubleshooting more complex.

Check polarity (positive-negative) before connecting the motors, flashing light and accessories. The encoders have no polarity.

If the inputs of the NC (Normally Closed) contacts are not used they should be linked out; if there is more than one then they should be placed in SERIES with one another; if the inputs of the NO (Normally Open) contacts are not used they should be left free. The inputs must be of the voltage free mechanical type; DO NOT USE Open Collector type inputs ("PNP", "NPN" etc.).

If the gate has only one motor, connect it to motor 2 output on the unit and cut the jumper; leave the terminals of motor 1 and relative encoder free.

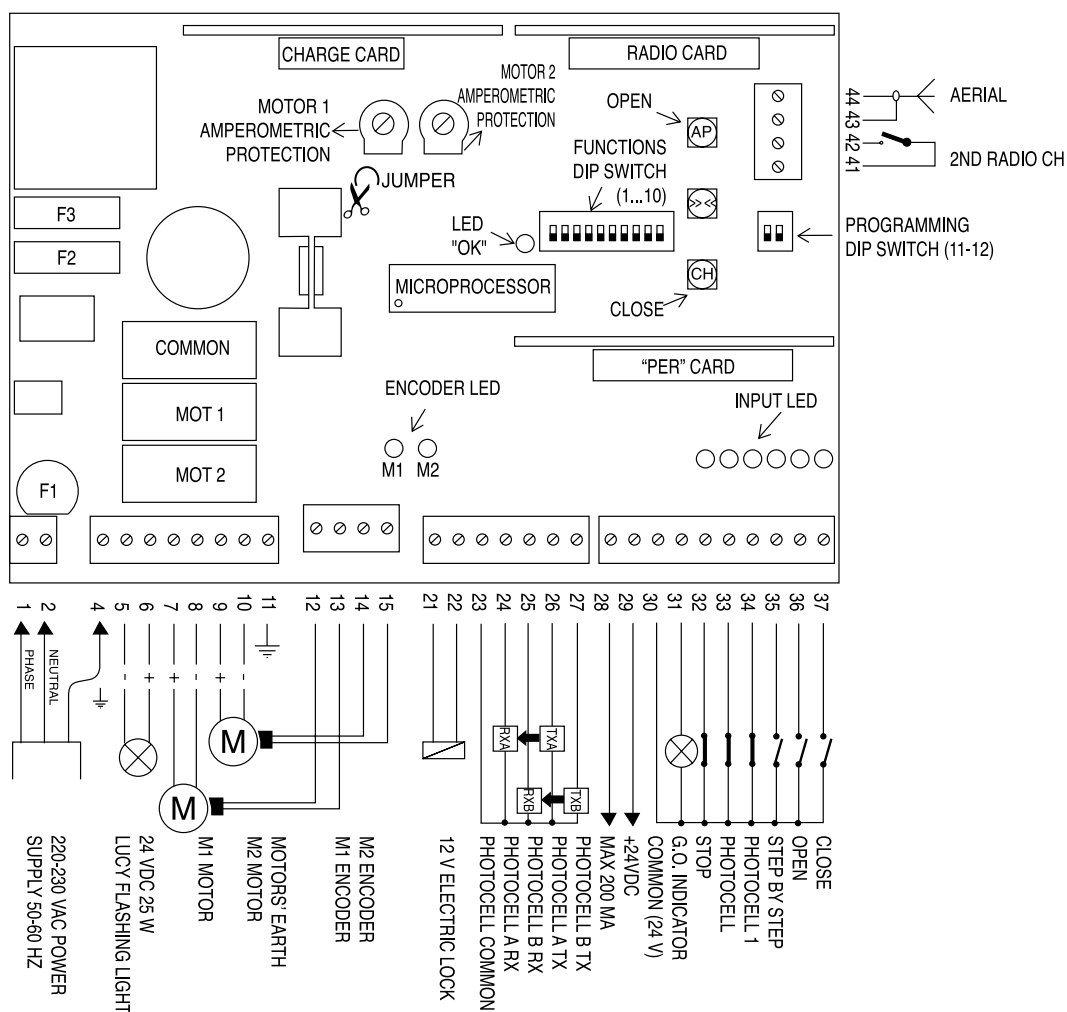

NOTE:

Only qualified personnel must carry out the installation and subsequent maintenance, expertly and in total conformity with the machine directive 89/392 and, in particular, with EN 60204 regarding electrical wiring of machines. Whoever carries out these jobs will be held responsible for any damage caused.

2.3) DESCRIPTION OF CONNECTIONS:

Here is a brief description of the possible external unit connections:

1-2	:	230 Vac	= Electric power 230 Vac 50-60 Hz
4	:	Earth	= Unit connection to earth
5-6	:	Flashing light	= Flashing light connection 24 Vdc max 25W (5 poles - and 6 poles +)
7-8	:	Motor 1	= Motor no. 1 power supply 24Vdc
9-10	:	Motor 2	= Motor no. 2 power supply 24Vdc
11	:	Earth	= Connection of motors
12-13	:	Encoder 1	= Motor no. 1 Encoder connection
14-15	:	Encoder 2	= Motor no. 2 Encoder connection
21-22	:	Electric lock	= Electric lock connection 12 V
23	:	Photocell Common	= Common for connecting photocells
24	:	Rx photocell A	= Photocell A receiver
25	:	Rx photocell B	= Photocell B receiver
26	:	Tx photocell A	= Photocell A transmitter
27	:	Tx photocell B	= Photocell B transmitter
28-29	:	24 Vdc	= Accessories power supply 24 Vdc (Photocell, Radio, etc.) max 200mA
30	:	Common	= Common for all inputs
31	:	C.A. (G.O.) pilot light	= Gate Open pilot light 24 Vdc max. 2W
32	:	Stop	= Input with STOP function (Emergency, shutdown or extreme safety)
33	:	Photocell	= Input for safety devices (Photocells, pneumatic edges)
34	:	Photocell 1	= Input for other safety devices (Photocells, pneumatic edges)
35	:	Step-by-step	= Input for cyclic functioning (OPEN STOP CLOSE STOP)
36	:	Open	= Input for opening movement
37	:	Close	= Input for closing movement
41-42	:	2nd Radio Ch	= Output for a second radio receiver channel
43-44	:	Aerial	= Input for the radio receiver aerial

There are an additional 3 slots for the following optional cards:

RADIO CARD	= Slot for NICE radio receivers
"CHARGE" CARD	= Slot for battery charge card
"PER" CARD	= Slot for the "PER" card with additional functions

2.4) TESTING CONNECTIONS:

A) Make the necessary connections following the diagram in Fig. 1

Remember there are specific standards that must be complied with both as regards the safety of electrical systems and as regards automatic gates and doors.

B) Power the gates and position them halfway, turn power off. The gates can now be opened or closed.

Do not turn the unit on unless the necessary "Mechanical travel stops" are installed!

C) Turn the unit on and check immediately that voltage between terminals 1-2 is 230 Vac and 24 Vdc between terminals 28-29. As soon as the unit is turned on the indicator lights (LEDs) on the active inputs should come on. In addition, shortly after the "OK" LED should start flashing regularly at 1 second intervals. If none of this happens, turn the unit off immediately and check connections more carefully.

D) Now check that the LEDs relative to the NC contacts are on (all safety devices active) and that the LEDs relative to the NO inputs are off (no command present); if this is not the case, check connections and effectiveness of the various devices

E) Check that all the unit's safety devices are in proper working order (emergency stop, photocells, pneumatic edges, etc.): each time they trigger the relative STOP, PHOTOCCELL or PHOTOCCELL2 LEDs, should go off.

Do not move the gearmotor unless the necessary "Mechanical travel stops" have been installed!

F) The last thing to do is to check if movement of the 2 gates is in the right direction. To check that this is so, just press the small "CLOSE" key wait for motors 1 and 2 to start in closing (motor 2 starts after motor 1 has finished the manoeuvre).

Whether the direction of movement is right or not, it is advisable to stop the manoeuvre immediately by pressing the small "CLOSE" key again. Now, if movement was not in the direction it should be then proceed as follows:


1 - Turn power off

2 - Disconnect the motor and **reverse two of the wires** of the motor that is turning in the wrong direction.

Once this is done we suggest testing rotation direction once more repeating step "F".

3) CONNECTING THE PHOTOCELLS:

Normal connection of the photocells foresees a power supply common for all transmitters and receivers and connection of the contact on the relevant inputs PHOTOCELL and PHOTOCELL1, as shown in Fig. 2A

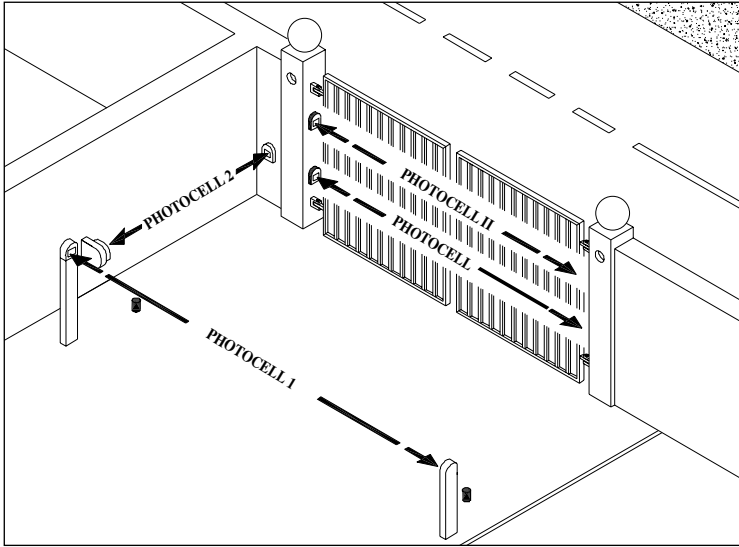

When several photocells are installed near each other they could interfere with one another.

To avoid such a problem, **Nice** has developed a system called SYNCHRONISM that works on an alternating current basis.

The accessories' output on the A824 unit is in direct current which means that synchronised operation is not possible. For this reason some specific outputs have been prepared "Rx A , Rx B, Tx A and Tx B" on which alternating current has been recreated, thus rendering possible synchronism on Nice photocells.

To use this system connect the photocells as indicated in Fig. 2B and cut the jumper of the TX.

3.1) PHOTOCELL TESTING:

This particular device deserves a detailed description.

It is the best possible solution, in terms of reliability, for safety devices.

Each time a manoeuvre is activated the relevant safety devices are checked and only if everything is in proper working order, will the manoeuvre start.

If the result of the test is negative (photocell blinded by the sun, wires short circuiting, etc.) the trouble is found and the manoeuvre is not performed.

All this is only possible by using the connections given in Fig. 2B if two pairs of photocells are used (PHOTOCELL + PHOTOCELL1), while if three (PHOTOCELL + PHOTOCELL II + PHOTOCELL1) or four pairs of photocells are used (PHOTOCELL + PHOTOCELL II + PHOTOCELL1 + PHOTOCELL2) please refer to the diagram in Fig. 2C.

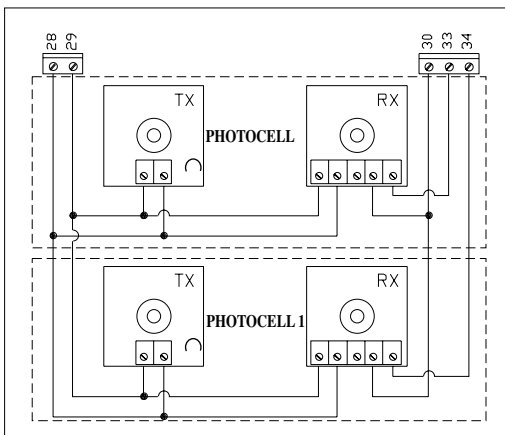


Fig. 2A

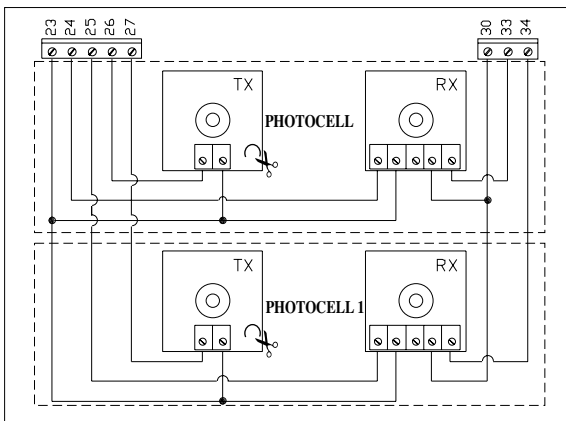


Fig. 2B

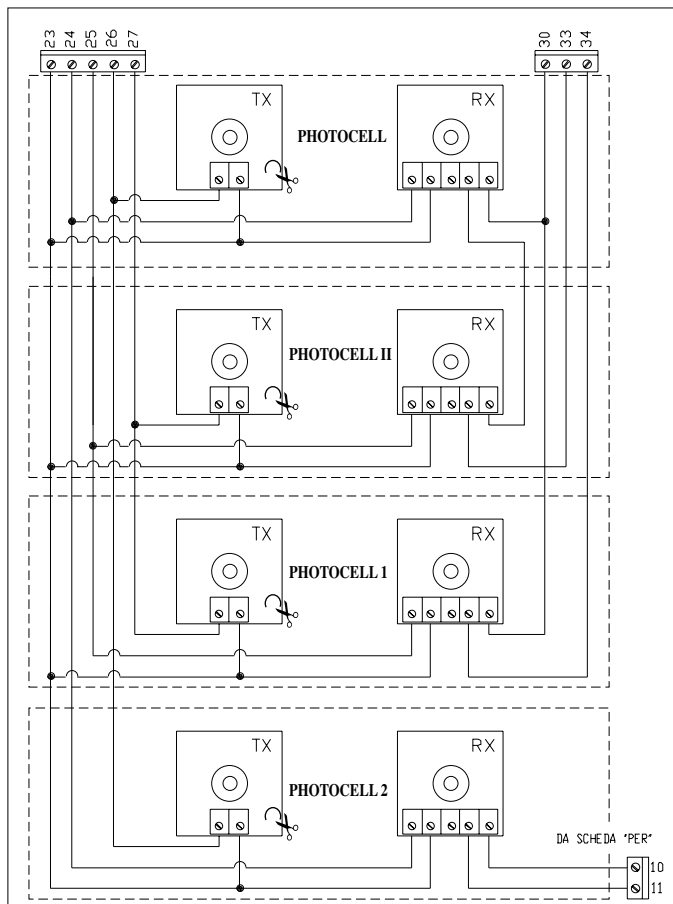


Fig. 2C

4) TRAVEL LIMITS:

Once you have reached this point of the installation you can now set the travel limits within which the gate has to move. As described in the introduction, the unit has a position control system that works with a movement encoder. This system can constantly control the position of the gate.

Of course the internal logic has to be instructed as to the distances within which movement must occur; these distances are shown in the following drawings as well as their meaning.

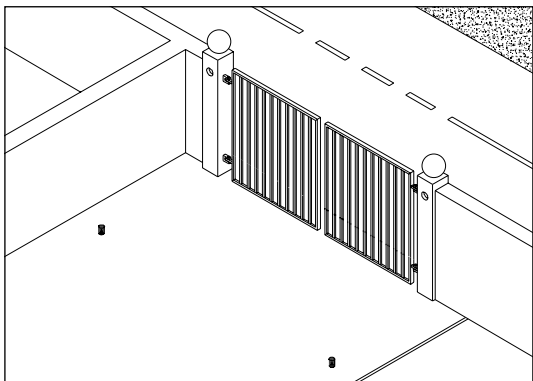


Fig. 2A

← **DISTANCE "0"**

Distance "0" is the point in which the two gates are when closed (in line), coinciding with the mechanical stop in closing.

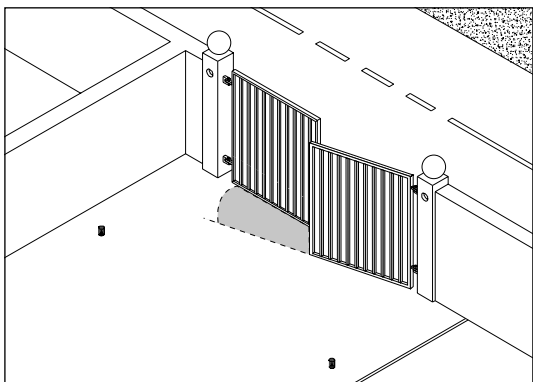


Fig. 2B

← **DISTANCE "S"**

Distance "S" is the point the gate has to reach moved by the 2nd motor in opening before the gate moved by the 1st motor can start.

This is used if the gates could get stuck when opening or to have a safety margin in closing, specified by law.

Distance "S" can also be close to distance "0" in which case both motors start together.

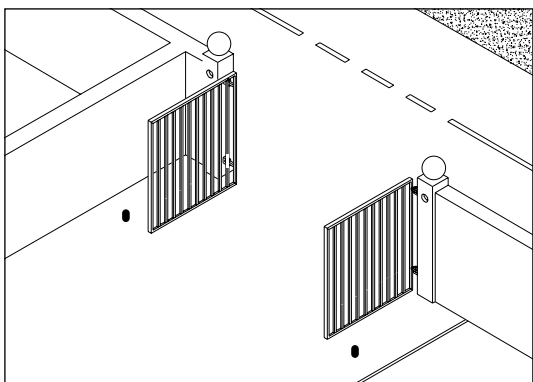


Fig. 2C

← **DISTANCE "A"**

Distance "A" is the point in which both gates are open to the extent required (NOT necessarily coinciding with the mechanical stops in opening).

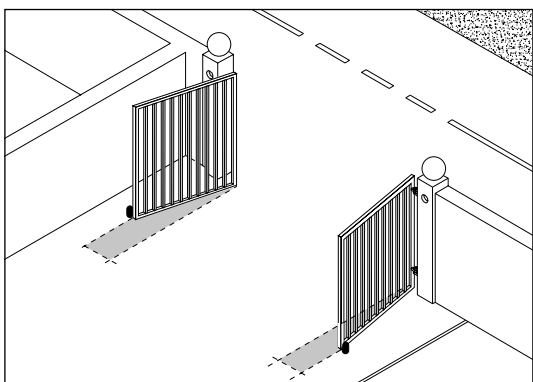


Fig. 2D

← **DISTANCE "1"**

Distance "1" is the point in which both gates are open to the maximum extent coinciding with the mechanical stops in opening.

5) INITIAL SEARCH FOR DISTANCES:

The “initial search for distances” procedure is automatically carried out as the first manoeuvre after installation and entails the following phases:

- 1) Turn the unit on and check that all the safety devices are active and effective.
- 2) We recommend powering the gates and moving them until they are half open and then turn power off.
In this way the “initial search for distances” procedure will be much quicker.
- 3) Briefly press the small OPEN or CLOSE key on the control card or give the inputs a command pulse.

The gearmotor will now carry out a series of manoeuvres to define the travel limits.

The maximum travel limits have been measured with these procedures. With a mathematical operation we can calculate the required opening point “A” just a few centimetres from maximum opening and the gates’ out-of-synchronisation distance “S” about 50 cm from distance “O”.

All the distances are memorised and the gates will now move quickly until they reach distance “O”.

- 4) the “initial search” procedure for the distances is now completed.
Set the function dip switches on the mode required and the gearmotor is ready to use.


The procedure described memorises the distances that have just been measured, hence no other operations are necessary.

If, during the “initial search for the distances”, an external event occurs (another small key is pressed, the Photocell triggers or there is a Step-by-Step pulse) gate movement will be stopped immediately and the procedure described in point (3) has to be repeated. Subsequent to an initial search you can, if you so wish, modify any of the distances measured (except for distance 0 which is a reference value for the other distances) by means of the manual search.

6) PROGRAMMING:

As an alternative to the “initial search for the distances”, which only takes place if the gearmotor has never been installed before, it is possible, at any time, to activate an “automatic distances search” or to establish each single distance directly with the manual distances search.

The various distances to programme are selected with the two sets of dip switches on the card and called “FUNCTIONS” and “PROGRAMMING”.



PROGRAMMING: It activates the various possible programmes.

In the normal functioning mode the two dip switches must be in the “OFF” position


FUNCTIONS : In “normal” use it is used to set the functioning modes required
In the programming phase it is used to select which parameter to memorise

In the unit’s normal functioning mode the “PROGRAMMING” dip switch must be turned “Off” and the functioning modes can be selected with the “FUNCTIONS” dip switch. If one of the “PROGRAMMING” dip switches is turned “On” you enter the PROGRAMMING phase and in this case the “FUNCTIONS” dip switch will be used to select the parameter to be memorised. If the PROGRAMMING phase is active and an incorrect parameter is selected with the “FUNCTIONS” dip switch, the “OK” LED will start flashing quickly to signal the error.

6.1) MEMORISING THE PARAMETERS:

The manual parameter programming phases end when what has been selected is memorised. You will find that the **“Memorising procedure”** will be referred to several times in the following chapters: in these cases it is necessary to proceed as follows:

- 1) Press the blue coloured “<<>>” key for at least 2 seconds.

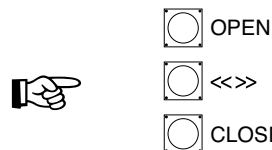


The OK LED will now flash quickly

- 2) Take your finger off the “<<>>” key

The OK LED will continue flashing quickly for another 3 seconds and while it is flashing

- 3) Press the two small yellow keys simultaneously and only for an instant

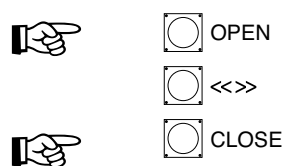

The OK LED will stay on for 2 seconds to confirm correct memorising

At this point the parameter selected has been permanently memorised.


6.2) AUTOMATIC SEARCH FOR THE DISTANCES:

This is extremely easy. In fact, the search for the closing distance “0” and opening distance “1” is done automatically.


To start the search:

- 1) Set the Dip Switches as follows:

- 2) Press the CLOSE key



Switch 10 “OFF” recommended for “PLUTO”
(Slowing down during closing manoeuvres short)



Switch 10 “ON” recommended for “METRO”
(Slowing down during closing manoeuvres long)



Immediately after having pressed the CLOSE key a series of manoeuvres will be carried out to define the gates’ travel limits. With these distances and a mathematical operation we can calculate required opening point “A” just a few centimetres from maximum opening and the gates’ out-of-synchronisation distance “S” about 50 cm from distance “0”.

6.3) **MANUAL SEARCH FOR DISTANCE “0”:**


The “manual search for distance 0” is carried out with this procedure, that is, you programme the maximum closing point.
This point must always be defined first as it is used as a reference for all the other distances.

As distance “0” is defined in both motors, dip switch configuration will vary according to the motor wanted.

1) Set the dip switches selecting **first one** motor and then **the other** in the following way



2) Press the OPEN or CLOSE key (and the <<>> key to increase speed of the motor selected) until the distance wanted is reached.

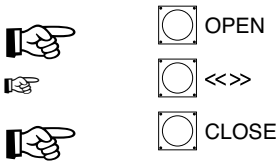


3) Once the distance wanted is reached for the first motor and then for the second, carry out the **“Memorising procedure” Chap. 6.1**


6.4) **MANUAL SEARCH FOR DISTANCE “S”:**

With this procedure you carry out the “manual search for distance “S” which is the point the gate (moved by the 2nd motor) must reach in opening before the gate moved by the 1st motor can start.
This search is only done with the 2nd motor because it is the first that starts in opening.
If you would like the motors to start together (S=0), memorise without moving the motors.

1) Set the dip switches as follows:

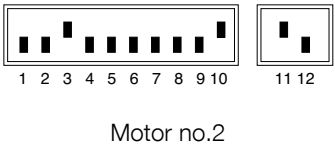

2) Press the OPEN or CLOSE key (and the <<>> key to increase speed of the motor selected) until the distance wanted is reached.

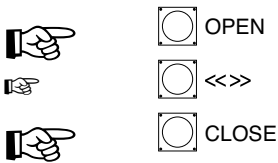


3) Once the distance wanted is reached carry out the **“Memorising procedure” Chap. 6.1**

6.5) MANUAL SEARCH FOR DISTANCE "A":


With this procedure you carry out the "manual search for distance "A", in other words, you programme the stopping point in opening. Distance "A" can coincide with distance "1", but to avoid the gate bumping each time against the mechanical stop we recommend leaving a margin of a few inches.

As distance "A" is defined in both motors, dip switch configuration will vary according to the motor wanted.

1) Set the dip switches selecting first one motor and then the other in the following way:



Motor no.1



Motor no.2

2) Press the OPEN or CLOSE key (and the <<>> key to increase motor speed) until the distance wanted is reached in both motors.



 OPEN



 <<>>



 CLOSE


3) Once the distance wanted is reached first for one motor and then for the other, carry out the **"Memorising procedure"** Chap. 6.1

6.6) MANUAL SEARCH FOR THE DISTANCE "1":

With this procedure you carry out the "manual search for distance "1", in other words, you programme the maximum opening point.

As distance "1" is defined in both motors, dip switch configuration will vary according to the motor wanted.

1) Set the dip switches selecting first one motor and then the other in the following way:



Motor no.1



Motor no.2

2) Press the OPEN or CLOSE key (and the <<>> key to increase motor speed) until the distance wanted is reached in both motors.



 APRE



 <<>>



 CHIUDE


3) Once the distance wanted is reached first for one motor and then for the other, carry out the **"Memorising procedure"** Chap. 6.1

6.7) PROGRAMMING PAUSE TIME:

When the automatic closing function is selected with the specific dip switch, a timer is activated that controls "Pause Time" after an opening manoeuvre. At the end of this time a closing manoeuvre is automatically activated. If this time has never been programmed it is set at 30 seconds but any time can be selected from 1 to 1023 seconds (about 17 minutes) following a certain procedure.

To set "Pause Time" proceed as follows:

- 1) Set the 2-way dip switches as indicated; in this way "Pause Time Programming" is selected.



- 2) Select the time wanted with the 10-way dip switch:

Dip 1 On	= 1 Second
Dip 2 On	= 2 Seconds
Dip 3 On	= 4 "
Dip 4 On	= 8 "
Dip 5 On	= 16 "
Dip 6 On	= 32 "
Dip 7 On	= 64 "
Dip 8 On	= 128 "
Dip 9 On	= 256 "
Dip 10 On	= 512 "


So if you want a pause time of, let's say, 25 seconds, turn dip switches 5, 4 and 1 ON (the sum of 16+8+1=25).

- 3) Once you have selected the time you can proceed with the **"Memorising procedure" Chap. 6.1.**

"Pause Time" for automatic manoeuvres is memorised with this procedure.

6.8) CANCELLING THE MEMORY:

All the programmable parameters are stored on a permanent memory on the card; it could happen that you need to cancel all what is stored in one go and to do this you have to proceed as follows:



- 1) Set the dip switches as indicated; in this way "Cancelling the Memory" is selected".
- 2) Now proceed to memorisation which, in this case, confirms cancellation.

With this operation all the parameters contained in the memory are cancelled. ATTENTION! with the memory reset it is as if the gearmotor has never been installed so it will be impossible to move the gate normally; in this case, the first command to reach the inputs or if the "OPEN" or "CLOSE" keys are pressed, an **"Initial search for distances"** procedure will be activated immediately.

7) FUNCTIONING TEST:

Once the connections have been checked and the travel limits programmed, actuator movement can be tested.

We recommend working in the "hold to run control" functioning mode with all functions deactivated (all switches off). In all cases if the control key is released in the "hold to run control" mode the motor will stop immediately. If the Step-by-Step input is used as the first movement command (after having switched on) it should be an opening manoeuvre. At this stage it is particularly easy to use the small keys "AP" (Open) and "CH" (Close) on the card. By means of the command inputs, move the gates up to the desired opening point "A", before which the "braking" phase should intervene so the gate reaches the set point at a speed reduced by about 30%. Now carry out a closing movement until the closing point is reached. In this case too the gate should start slowing before coming to a stop. Now test triggering of the safety devices: PHOTOCCELL and PHOTOCCELL1 in opening have no effect while in closing they will stop movement.

The devices connected to the STOP input act both in the opening and closing manoeuvres, stopping movement.

If the automatic functioning mode is selected, at the end of the opening manoeuvre there is a "pause time" followed automatically by a closing manoeuvre. Pause time, if not programmed, will be 30 seconds

Only now, when all the adjustments have been made and with the electricity off, do we advise you to connect the radio receiver.

7.1) FUNCTIONS THAT CAN BE SELECTED:

The FUNCTIONS dip switch lets you select the various possible functioning modes and to enable the functions you want.

Switch 1-2 :	Off Off	= "Hold to Run Control" Functioning
	On Off	= "Semiautomatic" Functioning
	Off On	= "Automatic" Functioning (Automatic Closing)
	On On	= "Automatic + Close Always" Functioning
Switch 3:	On	= Condominium Functioning (Not available in the Manual mode)
Switch 4:	On	= Preflashing
Switch 5:	On	= Water hammer
Switch 6:	On	= Closes immediately after Photocell if in Automatic or closes after Photocell if in semi-automatic
Switch 7:	On	= Photocell1 safety also in opening
Switch 8:	On	= Photocell test activation (only with photocells connected to terminals 23..27)
Switch 9:	On	= CLOSE becomes Pedestrian Open
Switch 10:	On	= Courtesy light on flashing light

Naturally each Switch that is "Off" will not activate the corresponding function.

Switch 1-2:	Off Off	= "Hold to Run Control" Functioning
	On Off	= "Semiautomatic" Functioning
	Off On	= "Automatic" Functioning (Automatic Closing)
	On On	= "Automatic + Close Always" Functioning

When in the "Manual" functioning mode the gate will only be moved if a command is given (a key pressed).

When in the "Semi-automatic" mode, a complete movement will be carried out by giving a command up to the set distance.

In the "Automatic" functioning mode, an opening is followed by a pause time and then a closing manoeuvre.

The "Close Always" function works if, subsequent to a temporary power cut, the gate was open. In such a case a closing manoeuvre starts automatically preceded by 5 seconds of preflashing.

Switch 3:	On	= Condominium Functioning
------------------	----	---------------------------

In the Condominium functioning mode, once an opening manoeuvre has started, for instance with a Step-by-Step command, it cannot be interrupted by any other command until the gate has finished opening. During a closing manoeuvre, a new command will stop the gate and reverse direction, opening it.

Switch 4:	On	= Preflashing
------------------	----	---------------

With a command pulse, flashing is activated first and after 5 seconds (2 seconds if on manual) movement starts.

Switch 5:	On	= Water hammer
------------------	----	----------------

When reversible actuators are used or when the gates are very long and do not remain closed with only the thrust of the motors, an electric lock should be installed.

The natural thrust on the electric lock might keep the gates slightly open and sometimes this thrust is so powerful that it could block the electric lock's release mechanism.

If the water hammer function is on there will be a short closing cycle before the opening cycle starts but in actual fact no movement can be detected seeing as the gates are already against the mechanical closing stop.

In this way, when the electric lock is applied, it will have absolutely no force and, consequently, free to be released.

Switch 6:	On	= Closes immediately after Photocell if in Automatic or closes after Photocell if semi-automatic)
------------------	----	---

In automatic this function will hold the gates open only for the necessary transit time. In fact, they will close automatically 5 seconds after the last object has passed by the "Photocell", regardless of the programmed Pause Time.

In semi-automatic, after the photocells or amperometric protection have triggered, switch 6 activates automatic closing of the gates.

Switch 7:	On	= Photocell 1 also in opening
------------------	----	-------------------------------

As a rule the safety "Photocell" and "Photocell 1" will only trigger in the closing manoeuvre. If switch no. 7 is "ON", triggering of the safety "PHOTOCELL1" will stop movement also in opening. If in the semi-automatic or automatic functioning mode, movement will start again and the gate will open immediately after the last object has passed by the photocell..

Switch 8:	On	= Photocell test activation (only with photocells connected to terminals 23..27)
------------------	----	--

This function is used to check photocell effectiveness each time a manoeuvre starts which enhances system safety.

Switch 9: On = CLOSE becomes PEDESTRIAN OPEN

You might not always want to open the gate completely, as in the case of a person on foot. In this case the PEDESTRIAN OPEN function is useful, opening just the one gate connected to the 2nd motor, leaving the other one shut.

This manoeuvre is activated by the CLOSE input that loses its original function, becoming the STEP-BY-STEP input but only for the opening of one gate.

ATTENTION! The Pedestrian Open cycle can only be activated when the gates are closed.

Switch 10: On = Courtesy light on flashing light

It might sometimes be necessary to illuminate the gate movement area and often a light that will switch itself off automatically shortly after the manoeuvre has finished is needed.

This function is commonly called "Courtesy Light".

By connecting lamps to the same output as the flashing light (for a total power of 25 Watt) and activating this function, the output will remain active, illuminating the area during movement and 60 seconds after.

7.2) DESCRIPTION OF THE FUNCTIONING MODES:

In the "hold to run control" functioning mode the OPEN input allows movement up to the desired opening point while the Step-by-step input allows an alternating opening and closing movement. As soon as the command in input stops, so does movement.

When the gate is opening, movement will stop if the "Photocell also in Open" is activated.

In the closing phase movement will also stop if the PHOTOCELL input is interrupted. If a STOP command is given it will stop movement immediately both in opening and closing. Once movement has stopped the command in input has to be stopped as well before any new movement can be started.

In any of the automatic functioning modes (semi-automatic - automatic or Close always) a command on the OPEN input will cause an opening manoeuvre. If the command persists after the gate has opened movement remains "frozen" in an infinite pause; only when the command stops can the gate be closed. A pulse on the STEP-BY-STEP causes alternating opening and closing manoeuvres. A second pulse on the STEP-BY-STEP or on the same input that started the movement, will cause a Stop.

STOP will cause movement to stop immediately both in opening and closing.

If the automatic functioning mode is being used, subsequent to an opening manoeuvre there will be a pause time followed by a closing manoeuvre. If, during the pause the PHOTOCELL triggers, the timer will be reset with a new time; if, on the other hand, a STOP intervenes during the pause, the closing function is cancelled and there will be a STOP condition.


If dip switch no.6 is ON, the pause will also be activated in the movement in the semi-automatic mode when, in closing, a safety device triggers or the anti-crushing clutch causes a reversal in opening.

8) ADJUSTMENTS:

Once the first checks on the system have been done you can now make the few, essential adjustments to ensure the automation will work properly and safely.



The recent European standards, prEN 12453: safety in using motorised doors - requirements and classifications and prEN 12445: safety in using motorised doors - testing methods; (not yet approved but they will be in 1999) require certain measures to be taken to limit the forces involved in moving automatic doors, equal to a maximum of 1400N as the force of impact and a maximum residual static force of 150N that must become nil within 5 seconds from impact.

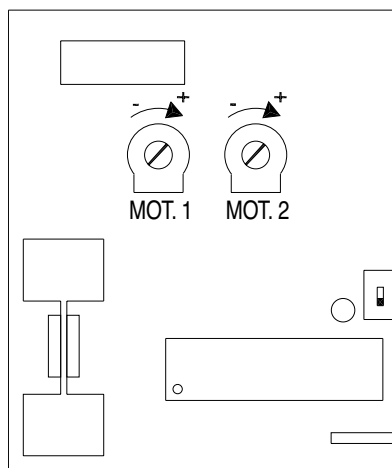

There are two adjustment trimmers in the unit used to vary the triggering threshold of each motor's amperometric protection.

These trimmers must be adjusted (one for each motor) so they are in line with the above mentioned standards.

9.1) **CHARGE CARD (Optional ACCESSORY):**

The unit is equipped with a power transformer that can provide the motor's power requirement and that of the electronic card when it is all powered directly by the mains.

If you want the system to continue working in the case of a power cut then you have to add a suitable battery and relative battery charge card.

The battery recommended can be placed inside the unit and connected to the two terminals on the battery charge card while the latter is plugged into the connector on the unit.

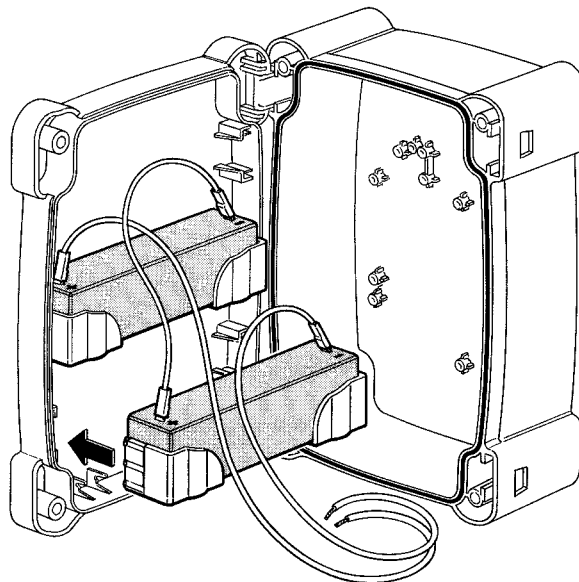


Fig.: Fitting the optional batteries.

9.2) **"PER" CARD (Optional ACCESSORY):**

The unit already has all the functions used in a normal installation but to meet the demands of use in particular installations NICE has designed an optional card "PER" used to add new functions like traffic light signalling, courtesy light, lock, Photocell2, partial opening of the two gates, and so on.

9.3) **"RADIO" CARD (Optional ACCESSORY):**

There is a connector in the unit for plugging in a radio card used to act on the STEP-BY-STEP input and thus control the unit remotely by means of a transmitter.

10) **MAINTENANCE:**

The card, being electronic, needs no particular maintenance. However check periodically, at least twice a year, the perfect efficiency and adjustment of the device that controls maximum motor force and, if necessary, adjust with the trimmers. Check effectiveness of the safety devices (photoelectric cells, pneumatic edges, etc.) and correct functioning of the flashing light.

10.1) **INFORMATION ON MEASURES TO PROTECT THE ENVIRONMENT:**

This product is made with different types of recyclable materials. Inquire about recycling or disposal methods of the product, complying with the current local laws.

10.2) **TECHNICAL SPECIFICATIONS:**


Mains power	: 230 Vac $\pm$ 10%, 50-60Hz
Battery power	: 21 $\div$ 28 Vdc
Max current to motors	: 5A
Max. accessory 24 Vdc and photocell test outputs power	: 500mA
Max. photocell test outputs power	: 300mA
Max flashing light power	: 25 W (24 Vdc)
Max gate open power indicator power	: 2 W (24 Vdc)
Pause time	: from 1 to 1023 seconds
Working temperature	: -20 $\div$ 70 °C

8) НАСТРОЙКА:

После первых проверок системы следует произвести несколько важных регулировок, чтобы гарантировать надлежащее рабочее состояние автоматики и обеспечить ее правильную и безопасную работу.



Последние европейские стандарты prEN 12453 “Безопасность при использовании механизированных дверей - требования и классификация” и prEN 12445 “Безопасность при использовании механизированных дверей - методы испытаний” (пока не одобрены, но будут приняты в 1999 г.) требуют применения мер ограничения силы при движении автоматизированных дверей до 1400 Н макс. в качестве ударной силы и до 150 Н макс. в качестве статической остаточной силы, которая должна стать равной нулю спустя 5 секунд после удара.

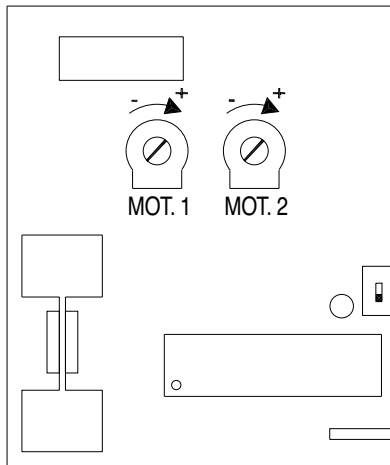

В устройстве, которое используется для изменения порога срабатывания токовой защиты каждого электродвигателя, имеется два регулировочных триммера.

Эти триммеры (по одному на каждый электродвигатель) таким образом, чтобы они отвечали требованиям вышеупомянутых стандартов

9.1) ПЛАТА “CARICA” (ДОПОЛНИТЕЛЬНЫЙ АКСЕССУАР):

Блок управления оборудован силовым трансформатором, который может обеспечивать питание, необходимое как для электродвигателя, так и для электронной платы, когда он целиком питается непосредственно от сети.

Если Вы хотите, чтобы система продолжала работать при временном прекращении подачи электроэнергии, Вам следует добавить подходящую батарею и соответствующую плату подзарядки аккумуляторных батарей.

Рекомендуемые аккумуляторные батареи могут быть помещены внутрь устройства и подсоединены к обеим клеммам платы подзарядки аккумуляторных батарей, тогда как последняя вставляется в разъем на устройстве.

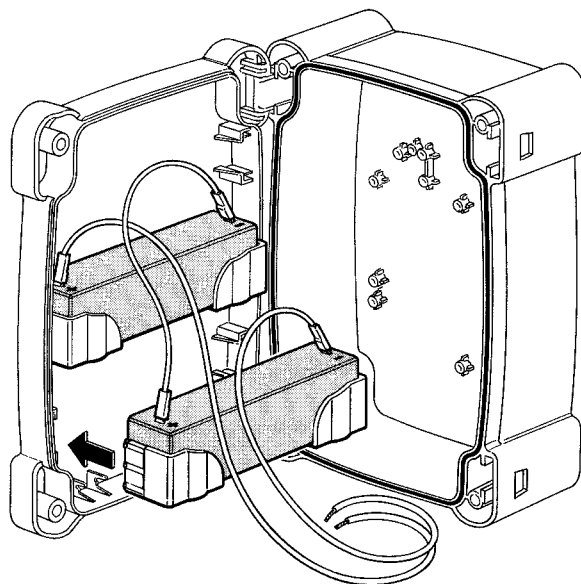


Рис.: Установка дополнительных аккумуляторов

9.2) ПЛАТА “PER” (ДОПОЛНИТЕЛЬНЫЙ АКСЕССУАР):

Устройство уже имеет все функции, используемые в нормальной установке, однако для удовлетворения эксплуатационных потребностей особых установок фирма Nice разработала дополнительную плату “PER”, позволяющую добавлять новые функции, например сигнализация светофора, автоматическое освещение, замок, фотоэлемент 2, частичное открывание обеих створок ворот и т.д.

9.3) ПЛАТА “RADIO” (ДОПОЛНИТЕЛЬНЫЙ АКСЕССУАР):

В устройстве имеется дополнительный разъем для вставки платы радиоприемника, используемой для воздействия на вход ПОШАГОВО, что дает, таким образом, возможность управлять устройством дистанционно с помощью передатчика.

10) ОБСЛУЖИВАНИЕ:

Поскольку плата электронная не требует особого технического обслуживания. Однако следует периодически, по крайней мере два раза в год, проводить проверку эффективности работы и регулировку устройств, которые управляют максимальной силой электродвигателя, и подстраивать с помощью триммера, если необходимо. Проверяйте эффективность устройств безопасности (фотоэлектрических элементов, пневматических кромок и т. д.) и правильность функционирования проблесковой лампы.

10.1) ИНФОРМАЦИЯ О МЕРАХ ЗАЩИТЫ ОКРУЖАЮЩЕЙ СРЕДЫ:

Это изделие изготовлено из различных видов повторно используемых материалов. Узнайте о методах переработки или утилизации продукта в соответствии с действующим местным законодательством.

10.2) ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ БЛОКА УПРАВЛЕНИЯ:

Питание от сети	: 230 В перем.тока +_10%, 50-60Гц
Питание от аккумулятора	: 21 ÷ 28 В пост.тока
Максимальный ток на электродвигатели	: 5А
Макс.ток для вспомогательного оборудования	
24 В пост.тока и выходы фототеста	: 500мА
Макс.ток на выходы фототеста	: 300мА
Макс.мощность проблесковой лампы	: 25 Вт (24 В пост.тока)
Макс.мощность сигнальной СА	: 2 Вт (24 В пост.тока)
Время паузы	: От 1 до 1023 секунд
Рабочая температура	: -20 ÷ 70 °C

RU

IT - Istruzioni per il montaggio della centrale MINDY
EN - Instructions for assembly of the MINDY control unit
FR - Instructions pour le montage de l'unité MINDY
ES - Instrucciones para el montaje de la central MINDY

DE - Anweisungen für die Montage der Steuerzentrale MINDY
NL - Aanwijzingen voor montage van de besturingseenheid MINDY
RU - Инструкция по монтажу блока управления MINDY

IT - Inserire le due viti negli appositi fori superiori facendole scorrere sulla guida, come fig. A avvitandole parzialmente. Ruotare di 180° la centrale e ripetere la stessa operazione con le altre 2 viti. Fissare a parete la centrale.

EN - Insert the two screws in the upper holes provided, sliding them on the guide as in fig. A and partly screwing them in. Turn the control unit through 180° and perform the same operation with the other 2 screws. Fix the control unit on to the wall.


FR - Introduire les deux vis dans les trous supérieurs en les faisant coulisser sur la glissière, comme l'indique la Fig. A, en les vissant partiellement. Tourner l'unité sur 180° et répéter même opération avec les 2 autres vis. Fixer l'unité au mur.

DE - Die zwei Schrauben in ihre oberen Löcher einfügen und wie in Abb. A gezeigt auf der Führung gleiten lassen, dann teilweise anschrauben. Die Zentrale um 180° drehen und das gleiche mit den zwei anderen Schrauben ausführen. Die Zentrale an der Wand befestigen.

ES - Introduzca los dos tornillos en los respectivos agujeros superiores haciéndolos deslizar sobre la guía como muestra la Fig. A, atornillándolos parcialmente, gire 180° la central y repita la misma operación con los otros dos tornillos. Fije la central a la pared.

NL - Steek de twee schroeven in de daarvoor bestemde bovenste openingen en laat ze over de geleider lopen zoals dat op afb. A te zien is, waarbij u ze gedeeltelijk vast draait. Draai de besturingseenheid 180° en doe hetzelfde met de 2 andere schroeven. Bevestig de besturingseenheid aan de muur.

RU - Вставьте два винта в верхние отверстия, продвигая их по направляющей, как показано на Рис. А, и закрутите не до конца. Поверните блок управления на 180° и выполните ту же операцию с остальными двумя винтами. Укрепите блок управления на стене.

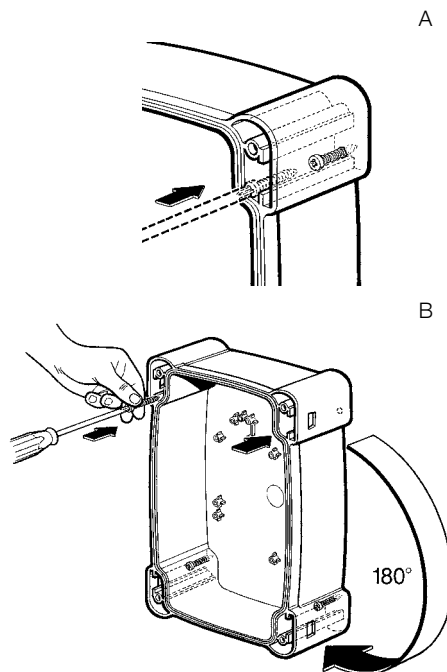

IT - Inserire il coperchio dalla parte desiderata (con apertura a destra o sinistra), premere con forza in corrispondenza delle frecce.

EN - Fix the cover on the desired part (with opening on the right or left), press firmly on the arrows.


FR - Placer le couvercle dans la position voulue (avec l'ouverture à droite ou à gauche), appuyer fortement au niveau des flèches.

DE - Den Deckel wie gewünscht aufsetzen (mit Rechts- oder Linksöffnung). Kräftig drücken, wo die Pfeile vorhanden sind.

ES - Introduzca la tapa en la parte deseada (con apertura a derecha o izquierda), apriete con fuerza en correspondencia de las flechas.

NL - Breng de dekplaat vanaf de gewenste zijde (met de opening rechts of links) aan en druk stevig in de richting die de pijlen aangeven.

RU - Поместите крышку в желаемое положение (отверстие справа или слева), нажмите с силой там, где показано стрелками.

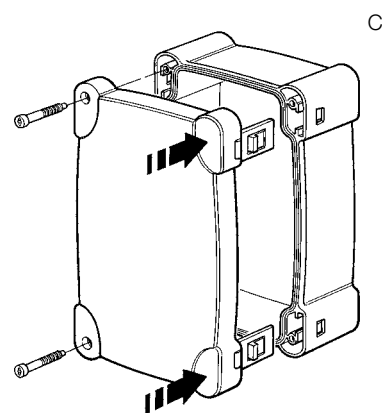

IT - Per togliere il coperchio premere con un cacciavite sul punto di incastro e contemporaneamente spingere verso l'alto.

EN - To remove the cover, press with a screwdriver on the join and push upwards at the same time.


FR - Pour enlever le couvercle, appuyer avec un tournevis sur le point d'encastrement et en même temps pousser vers le haut.

DE - Zum Abnehmen des Deckels mit einem Schraubenzieher auf den Einspannpunkt A drücken und gleichzeitig nach oben schieben.

ES - Para quitar la tapa apriete con un destornillador en el punto de encastre y contemporáneamente empuje hacia arriba.

NL - Om de dekplaat te verwijderen dient u met een schroevendraaier op het daarvoor bestemde punt te drukken en tegelijkertijd omhoog te duwen

RU - Для того чтобы снять крышку, нажмите отверткой в паз и одновременно толкните вверх.

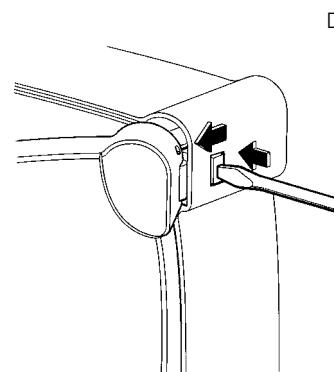

CE declaration of conformity

and declaration of incorporation of partly-completed machinery

Declaration in accordance with the following Directives: 2004/108/EC (EMC); 2006/42/EC (MD) annex II, part B

Note - The content of this declaration corresponds to that specified in the official document deposited at the Nice S.p.A. headquarters and, in particular, to the latest revised edition available prior to the publishing of this manual. The text herein has been re-edited for editorial purposes. A copy of the original declaration can be requested from Nice S.p.A. (TV) I.

Number: 105/A824

Revision: 8

Language: EN

Manufacturer's Name:

Nice s.p.a.

Address:

Via Pezza Alta 13, 31046 Rustignè di Oderzo (TV) Italy

Person authorized to compile the technical documentation:

Nice s.p.a.

Type of product:

Control unit for 2 24V DC motors

Model:

A824

Accessories:

Optional radio receiver model K, BIO, FLO, FLOR, CHARGE card

The undersigned Mauro Sordini as Chief Executive Officer, hereby declares under his own responsibility that the product identified above complies with the provisions of the following directives:

- DIRECTIVE 2004/108/EC OF THE EUROPEAN PARLIAMENT AND COUNCIL of 15 December 2004 on the approximation of the laws of Member States relating to electromagnetic compatibility and repealing Directive 89/336/EEC, in accordance with the following harmonised standards: EN 61000-6-2:2005, EN 61000-6-3:2007 + A1:2011

In addition, the product conforms to the following directive in accordance with the provisions applicable to partly-completed machinery:

Directive 2006/42/EC OF THE EUROPEAN PARLIAMENT AND COUNCIL of 17 May 2006 regarding machines and amending directive 95/16/EC (consolidated text)

- It is hereby declared that the pertinent technical documentation has been drafted in accordance with Annex VII B of Directive 2006/42/EC and that the following essential requirements have been met: 1.1.1- 1.1.2- 1.1.3- 1.1.5- 1.2.1-1.2.6- 1.3.1- 1.3.2- 1.3.3- 1.3.4- 1.3.7-1.3.9- 1.5.1-1.5.2- 1.5.4- 1.5.5- 1.5.6- 1.5.7- 1.5.8- 1.5.10- 1.5.11- 1.5.13-1.6.1- 1.6.2-1.6.4- 1.7.2- 1.7.3- 1.7.4- 1.7.4.1- 1.7.4.2- 1.7.4.3
- The manufacturer agrees to send the national authorities any pertinent information on partly-completed machinery, in response to a motivated request, without affecting its intellectual property rights.
- If the partly-completed machinery is operated in a European country with an official language other than the language used in this declaration, the importer must include a translation with this declaration.
- The partly-completed machinery must not be operated until the final machine in which it is to be incorporated is declared to conform to the provisions of Directive 2006/42/EC, if applicable.

The product also complies with the following standards:

EN 60335-1:2012 EN 60335-2-103:2003 + A11:2009

The parts of the product which are subject to the following standards comply with them:

EN 13241-1:2003 + A1:2011, EN 12445:2002, EN 12453:2002, EN 12978:2003 + A1:2009

Oderzo, 03 July 2014

Mr. Mauro Sordini
(Chief Executive Officer)



Dichiarazione CE di conformità e dichiarazione di incorporazione di “quasi macchina”

Dichiarazione in accordo alle Direttive: 2004/108/CE (EMC); 2006/42/CE (MD) allegato II, parte B

Nota - Il contenuto di questa dichiarazione corrisponde a quanto dichiarato nel documento ufficiale depositato presso la sede di Nice S.p.a., e in particolare, alla sua ultima revisione disponibile prima della stampa di questo manuale. Il testo qui presente è stato riadattato per motivi editoriali. Copia della dichiarazione originale può essere richiesta a Nice S.p.a. (TV) I.

Numero: 105/A824

Revisione: 8

Lingua: IT

Nome produttore:

Nice s.p.a.

Indirizzo:

Via Pezza Alta N°13, 31046 Rustignè di Oderzo (TV) Italy

Persona autorizzata a costituire

la documentazione tecnica:

Nice s.p.a.

Tipo di prodotto:

Centrale di comando a 2 motori 24Vd.c.

Modello:

A824

Accessori:

Ricevitore radio opzionale mod. K, BIO, FLO, FLOR, scheda PER, CARICA

Il sottoscritto Mauro Sordini in qualità di Amministratore Delegato, dichiara sotto la propria responsabilità che il prodotto sopra indicato risulta conforme alle disposizioni imposte dalle seguenti direttive:

- DIRETTIVA 2004/108/CE DEL PARLAMENTO EUROPEO E DEL CONSIGLIO del 15 dicembre 2004 concernente il ravvicinamento delle legislazioni degli Stati membri relative alla compatibilità elettromagnetica e che abroga la direttiva 89/336/CEE, secondo le seguenti norme armonizzate: EN 61000-6-2:2005, EN 61000-6-3:2007+A1:2011

Inoltre il prodotto risulta essere conforme alla seguente direttiva secondo i requisiti previsti per le “quasi macchine”:

Direttiva 2006/42/CE DEL PARLAMENTO EUROPEO E DEL CONSIGLIO del 17 maggio 2006 relativa alle macchine e che modifica la direttiva 95/16/CE (rifusione)

- Si dichiara che la documentazione tecnica pertinente è stata compilata in conformità all'allegato VII B della direttiva 2006/42/CE e che sono stati rispettati i seguenti requisiti essenziali: 1.1.1- 1.1.2- 1.1.3- 1.1.5- 1.2.1-1.2.6- 1.3.1- 1.3.2- 1.3.3- 1.3.4- 1.3.7-1.3.9- 1.5.1-1.5.2- 1.5.4- 1.5.5- 1.5.6- 1.5.7- 1.5.8- 1.5.10- 1.5.11- 1.5.13-1.6.1- 1.6.2-1.6.4- 1.7.2- 1.7.3- 1.7.4- 1.7.4.1- 1.7.4.2- 1.7.4.3
- Il produttore si impegna a trasmettere alle autorità nazionali, in risposta ad una motivata richiesta, le informazioni pertinenti sulla “quasi macchina”, mantenendo impregiudicati i propri diritti di proprietà intellettuale.
- Qualora la “quasi macchina” sia messa in servizio in un paese europeo con lingua ufficiale diversa da quella usata nella presente dichiarazione, l'importatore ha l'obbligo di associare alla presente dichiarazione la relativa traduzione.
- Si avverte che la “quasi macchina” non dovrà essere messa in servizio finché la macchina finale in cui sarà incorporata non sarà a sua volta dichiarata conforme, se del caso, alle disposizioni della direttiva 2006/42/CE.

Inoltre il prodotto risulta conforme alle seguenti norme:


EN 60335-1:2012 EN 60335-2-103:2003+A11:2009

Il prodotto risulta conforme, limitatamente alle parti applicabili, alle seguenti norme:

EN 13241-1:2003+A1:2011, EN 12445:2002, EN 12453:2002, EN 12978:2003+A1:2009

Oderzo, 3 luglio 2014

Ing. Mauro Sordini
(Amministratore Delegato)





Nice SpA
Oderzo TV Italia
info@niceforyou.com

www.niceforyou.com