FLOW 8 Web Remote

User manual · Version of 12 Nov 2026 · Unofficial, not affiliated with Behringer / Music Tribe

> **Note on the language of the screen.** The app itself is in German, and so are the screenshots in this manual. Button names are therefore shown as they appear on screen, with the English meaning in brackets, e.g. **Farben** (Colors). The table below lists the most important labels.

On screen	Meaning
MIDI aktivieren	Enable MIDI
Ausgang	Output
Senden erlaubt	Sending allowed
.syx laden	Load .syx file
Farben	Colors
Global	Global settings
Audio	Audio (levels and RTA)
Bluetooth verbinden / trennen	Connect / disconnect Bluetooth
Dump jetzt	Dump now (fetch the mixer state now)
Alle Parameter	All parameters
Dynamik & Filter	Dynamics & filter
Rohbytes	Raw bytes
Standardfarben	Default colors

Contents

1. What is this?
2. Starting on Windows
3. Starting on Mac and Linux
4. Orientation: the screen at a glance
5. Connecting: the buttons at the top
6. The channel strips
7. The detail area
8. The Global window
9. The Audio window
10. The Colors window
11. If something does not work

1 What is this?

With this page you control your Behringer FLOW 8 from a computer, like in the FLOW app but on a big screen: faders, mute, solo, EQ, sends and snapshots. It also shows level meters and a frequency picture (RTA) of your signal.

What you need

- Your FLOW 8, switched on and connected to the computer with a USB cable.
- A computer with the browser **Edge** (Windows) or **Chrome** (Mac, Linux). Firefox and Safari do not work.
- For Bluetooth: Bluetooth on the computer. It also works without Bluetooth, but with fewer controls (see chapter 5).
- The files `flow8-mixer-ble.html` and, on Windows only, `start-mixer.bat`. Put both in the same folder.

> **Do not worry, nothing happens on its own.** The page does not change anything on the mixer unless you touch a control. Phantom power (48 V) and the reset snapshot 16 are never sent automatically, and there is no factory reset at all.

2 Starting on Windows

On Windows you get everything: controls, level meters and RTA.

1. Switch on the FLOW 8 and connect it to the computer with the USB cable.
2. Double-click `start-mixer.bat`. A small window runs minimised in the taskbar and Edge opens the page by itself. If Windows says “Windows protected your PC”, click **More info** and then **Run anyway**.
3. The first time, Edge asks for permission for **MIDI** and for the **microphone**. Click **Allow** each time. The “microphone” here is just the audio signal of your FLOW 8, which is needed for the level meters.
4. An **orange banner** appears at the top: “BT: beliebiger Klick auf die Seite verbindet” (BT: any click on the page connects). Click anywhere on the page. Edge then connects Bluetooth. If Edge shows a device list, choose the FLOW 8.
5. Done. As soon as the faders move and are no longer grey, you can start.

Quitting: just close the Edge tab. The small window in the taskbar closes by itself after a few seconds.

No level meters? Open the Windows sound settings and check that all seven FLOW 8 recording devices (Mic 1, Mic 2, Mic/Line 3, Mic/Line 4, Line 5/6, Line 7/8, Main L/R) are enabled. Then click once on the page.

3 Starting on Mac and Linux

You only need the file `flow8-mixer-ble.html`. The bat file is not needed. You then only miss the **level meters and the RTA**; everything else works.

1. Install **Google Chrome** if you do not have it yet.
2. Switch on the FLOW 8 and connect it with the USB cable.
3. Drag `flow8-mixer-ble.html` into a Chrome window, or right-click the file and choose **Open with → Chrome**.
4. Click **MIDI aktivieren** (Enable MIDI) at the top and **Allow** in the Chrome window, unless the page already asks by itself.
5. Click **Bluetooth verbinden** (Connect Bluetooth) and choose the FLOW 8 in the list.
6. As soon as the faders move and are no longer grey, you can start.

Mac: if macOS asks for permission to use Bluetooth, answer **OK**. You can find the permission later under System Settings → Privacy & Security → Bluetooth.

Linux: if Chrome finds no Bluetooth device, type `chrome://flags` in the address bar, search for **Experimental Web Platform features**, set it to **Enabled** and restart Chrome.

Why no level meters? Chrome does not show the names of the audio devices to a locally opened file. The page therefore cannot find the FLOW 8, and the top shows “Audio: FLOW 8 nicht gefunden” (FLOW 8 not found). This is normal and does not affect the control.

4 Orientation: the screen at a glance

The screen has three areas: the **header** at the top, the **channel strips** on the left like on a mixing desk, and below them the **detail area** for the currently selected channel.

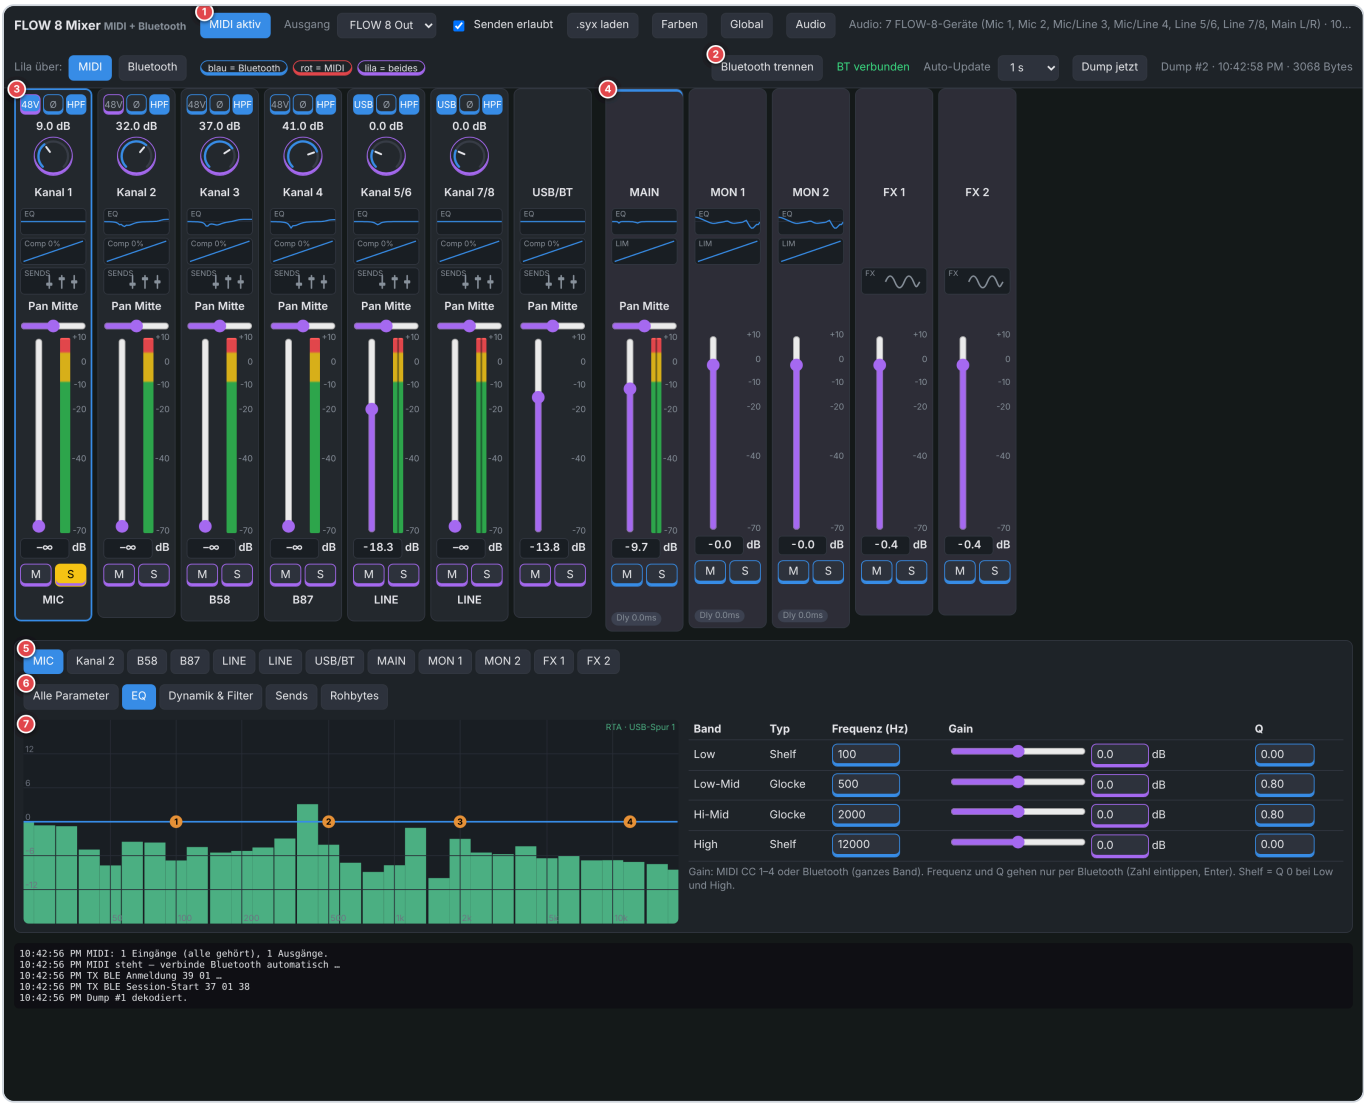


Fig. 1: The whole screen. The numbers belong to the list below.

	Area	Purpose
1	Header, first row	Connect and open windows (chapter 5)
2	Header, second row	MIDI/Bluetooth switch, color legend, Bluetooth, refresh (chapter 5)
3	Channel strips	Fader, mute, solo, gain for every input (chapter 6)

	Area	Purpose
4	Buses	MAIN, MON 1, MON 2, FX 1, FX 2: the mixes and outputs (chapter 6)
5	Selection buttons	Choose here which channel or bus is shown in the detail area below (chapter 7)
6	Tabs	Switch between EQ, dynamics, sends and more (chapter 7)
7	Tab content	The actual settings, here the EQ (chapter 7)

5 Connecting: the buttons at the top

The header has two rows. Normally you do not need to press anything here, the page connects by itself. The table shows what each button does.

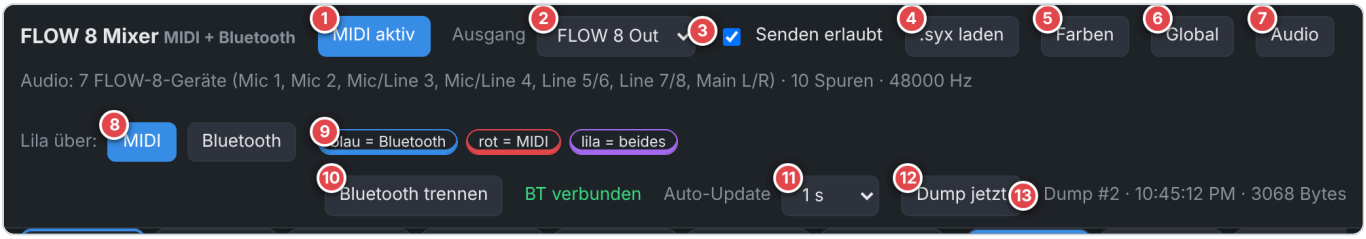


Fig. 2: The header with numbered buttons.

	Button / field	What it does
1	**MIDI aktivieren** (Enable MIDI)	Switches the USB connection on. Press it if the page does not already ask by itself. After connecting it says “MIDI aktiv” (MIDI active).
2	**Ausgang** (Output)	Shows the FLOW 8 as the target for MIDI commands. Chosen automatically.
3	**Senden erlaubt** (Sending allowed)	The safety switch. Without the tick the page sends nothing to the mixer, so you can click around without risk.
4	**.syx laden** (Load .syx)	Loads a saved mixer file (.syx) and displays it, without needing the mixer.
5	**Farben** (Colors)	Opens the window where you set the colors (chapter 10).
6	**Global**	Opens the mixer settings and snapshots (chapter 8).
7	**Audio**	Opens the window for level meters and RTA (chapter 9). Next to it you can see what is currently running.
8	**MIDI / Bluetooth** (next to “… über:” = “… via:”)	The switch. It decides over which route the controls in the mixed color send.
9	**Color legend**	Shows which color means what (see below).
10	**Bluetooth verbinden / trennen** (Connect / disconnect)	Connects the FLOW 8 via Bluetooth or disconnects it again. Next to it you can see whether it is connected.
11	**Auto-Update**	How often the mixer sends its current state to the page: off, every 0.5, 1 or 2 seconds. One second is almost always right.
12	**Dump jetzt** (Dump now)	Fetches the mixer state immediately, without waiting for the interval.

	Button / field	What it does
13	**Status display, far right**	Shows when the state last came from the mixer.

MIDI or Bluetooth – and what the colors mean

The FLOW 8 understands both routes, but not every control works over both. That is why the controls are colored:

- **Blue:** works over Bluetooth only.
- **Red:** works over MIDI only.
- **Mixed color (purple at first):** works over both. Which route the page uses is decided by the switch at the top (MIDI or Bluetooth).

Recommendation for beginners: connect both and leave the switch on MIDI. Then everything works. If Bluetooth is currently used by your phone, use only MIDI on the PC: the blue controls then have no effect on the PC.

6 The channel strips

On the left the channel strips stand side by side like on a mixing desk: channels 1 to 4, the stereo channels 5/6 and 7/8, and **USB/BT** (playback from a computer or phone). To the right of them are the buses **MAIN**, **MON 1**, **MON 2**, **FX 1** and **FX 2**. Every strip is built the same way from top to bottom.

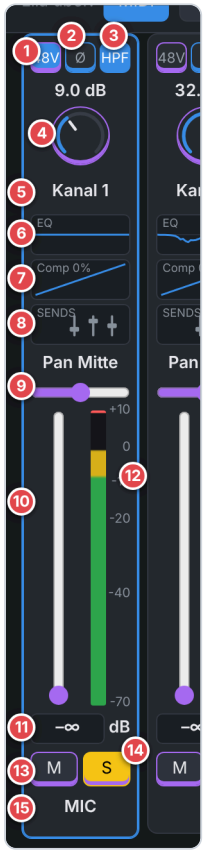


Fig. 3: A channel strip (channel 1).

	Element	What it does
1	**48V / USB**	**48V** switches phantom power on for condenser microphones (only channels with a microphone input). Never switch it on with ribbon microphones or devices that cannot handle it. On channels 5/6 and 7/8 this shows **USB** instead: it sends the channel to the USB output (5/6 → USB 1/2, 7/8 → USB 3/4).
2	**Ø**	Inverts the phase. Helps when two microphones make each other sound thin.
3	**HPF**	Low cut: removes low frequencies (footsteps, hum, wind).
4	**Gain knob**	The input sensitivity. Drag the knob, or click the number above it and type.
5	**Number**	One click selects the channel for the detail area below.
6	**EQ tile**	Shows the tone curve in small. One click opens the EQ.
7	**Comp tile**	Compressor (limiter on buses). One click opens it.
8	**SENDS tile**	How loud the channel is in each mix.

	Element	What it does
9	**Pan control**	Left/right in the stereo image. Double-click sets it to center.
10	**Fader**	The volume. Drag or click, fine-tune with the arrow keys.
11	**dB value**	Shows the value. Click it, type a number, press Enter. “-inf” = completely silent.
12	**Level meter**	Shows the signal live (green normal, yellow loud, red too loud). Only with audio (Windows).
13	**M**	Mute: silences the channel.
14	**S**	Solo: you only listen to this channel.
15	**Channel name**	The name assigned in the mixer.

The buses

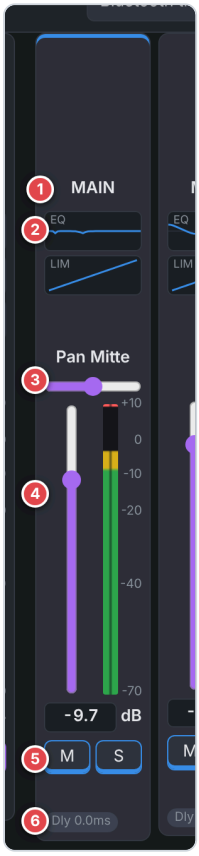


Fig. 4: The MAIN bus.

	Element	What it does
1	**Bus name**	MAIN, MON 1, MON 2, FX 1, FX 2. One click selects the bus (see the note below).
2	**EQ and LIM tile**	The graphic EQ and the limiter of the bus. On the effect buses FX 1/2 the FX tile appears here instead.
3	**Balance**	On MAIN the pan control is called balance.
4	**Fader**	The overall volume of the bus.
5	**M / S**	Mute and solo of the bus.
6	**Dly**	Shows the delay that is set. Grey at 0 ms, colored as soon as a delay is set.

Important, so that you are not surprised: the channel faders always show the volume **into one particular mix**. You choose which one with a click on a bus (MAIN, MON 1, MON 2, FX 1 or FX 2). The selected bus is highlighted. If you click MON 1, the channel faders control what you hear in monitor 1. The bus fader itself controls the overall volume of that bus.

7 The detail area

Below the channel strips you see all settings of the currently selected channel or bus. At the top there are buttons for every channel and every bus: click one to switch. Below them there are tabs.

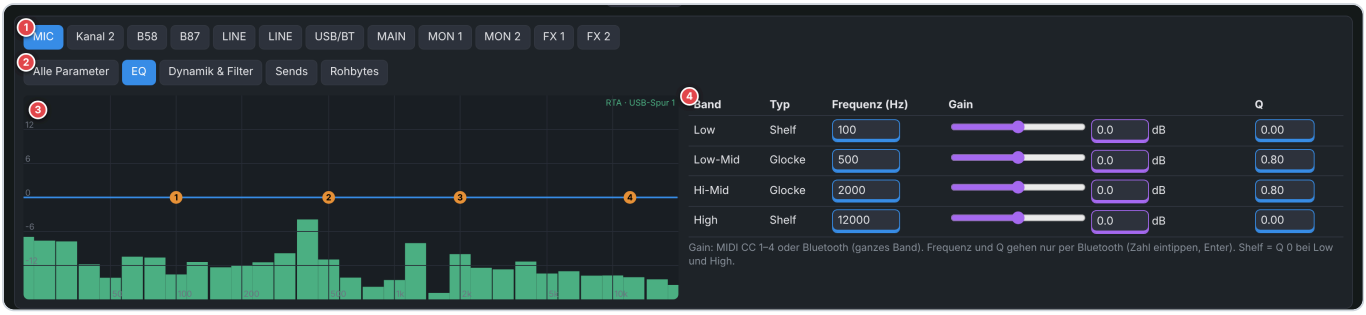


Fig. 5: The detail area with the EQ tab. 1 selection buttons, 2 tabs, 3 EQ curve with points, 4 number fields of the bands.

Tab	What you find there
Alle Parameter (All parameters)	Everything on one page: gain, low cut, phase, 48V, compressor and more. Handy for an overview.
EQ (channels)	The tone control with four bands.
Dynamik & Filter (channels)	Compressor, low cut and gain.
Sends (channels)	How loud the channel is in every mix (MAIN, MON 1, MON 2, FX 1, FX 2).
9-Band-EQ (MAIN, MON 1, MON 2)	The graphic EQ of the buses with nine frequency bands.
Limiter & Delay (MAIN, MON 1, MON 2)	The limiter protects against peaks that are too loud. Delay delays the signal, handy for aligning speakers.
Effekt (FX 1, FX 2) (Effect)	Choose the effect (preset) and three parameters.
Rohbytes (Raw bytes)	Raw data from the mixer. There is nothing to do here, you can ignore this tab.

The EQ in detail

The curve shows how the sound is changed. Each band has a numbered point on the curve.

- **Drag a point with the mouse:** up and down changes the volume of the band (gain), left and right changes the frequency.
- **Mouse wheel on the point:** makes the band wider or narrower (Q).
- **Double-click a point** (or the row of the band): resets the band to its starting value (gain 0, Q 1, factory frequency).
- **Number fields under the curve:** frequency, gain and Q. You can type a number and press Enter. Or: put the mouse on the field, **hold the mouse button and drag up or down**. When the field has focus, the mouse wheel works as well.
- The **RTA** can appear behind the curve, the frequency picture of your signal (chapter 9).
- Frequency and Q values can only be changed over **Bluetooth**. The gain also works over MIDI.
- **Low-Mid and Hi-Mid** are bells. **Low and High** can be a bell or a shelf (raises or lowers everything above or below a frequency).

8 The Global window

Click **Global** at the top. A window opens with the settings that affect the whole mixer. A second click on the button closes it again. The channel selection stays as it was.



Fig. 6: The Global window.

Setting	What it does
Kopfhörer-Pegel (Headphone level)	The volume at the headphone output.
Kopfhörer-Quelle (Headphone source)	What you hear in the headphones: monitor mix 1/2 or the main mix.
Monitor Tap Point	Whether the monitor takes the signal after (post) or before (pre) the fader.
USB/BT-Wiedergabe (USB/BT playback)	Whether music from a computer or phone goes only to the headphones (nur Phones) or into the main mix (Main Mix).
Monitor Stereo-Link	Couples the two monitor paths into a stereo pair.
Main −10 dBV Pad	Lowers the main output by 10 dB (for devices with a sensitive input). The page asks first because the volume changes noticeably.
Monitor −10 dBV Pad	The same for the monitor outputs.
Monitor-Quelle (Monitor source)	What is on monitor 1/2: the monitor mix, USB 1/2 or USB 3/4.
Snapshots 1–15	Saved mixer settings. One click on a number loads it. A safety question comes first because **this overwrites many values in the mixer**. If you hover over the number you see the name.

The reset snapshot number 16 and saving or deleting snapshots are deliberately not available here, so that nothing is lost by accident. The tab **Rohbytes (global)** is only for technical enthusiasts.

9 The Audio window: levels and RTA

Only available on Windows with the bat file. For this the page listens at the USB connection. It does not change anything on the mixer.

- **Level meters** next to each fader show how loud the signal currently is.

- The **RTA** is a picture like a mountain landscape behind the EQ curve. It shows which frequencies are loud right now. This tells you where to apply the EQ.

Click **Audio** at the top to open or close the window. Normally you do not need to set anything here.

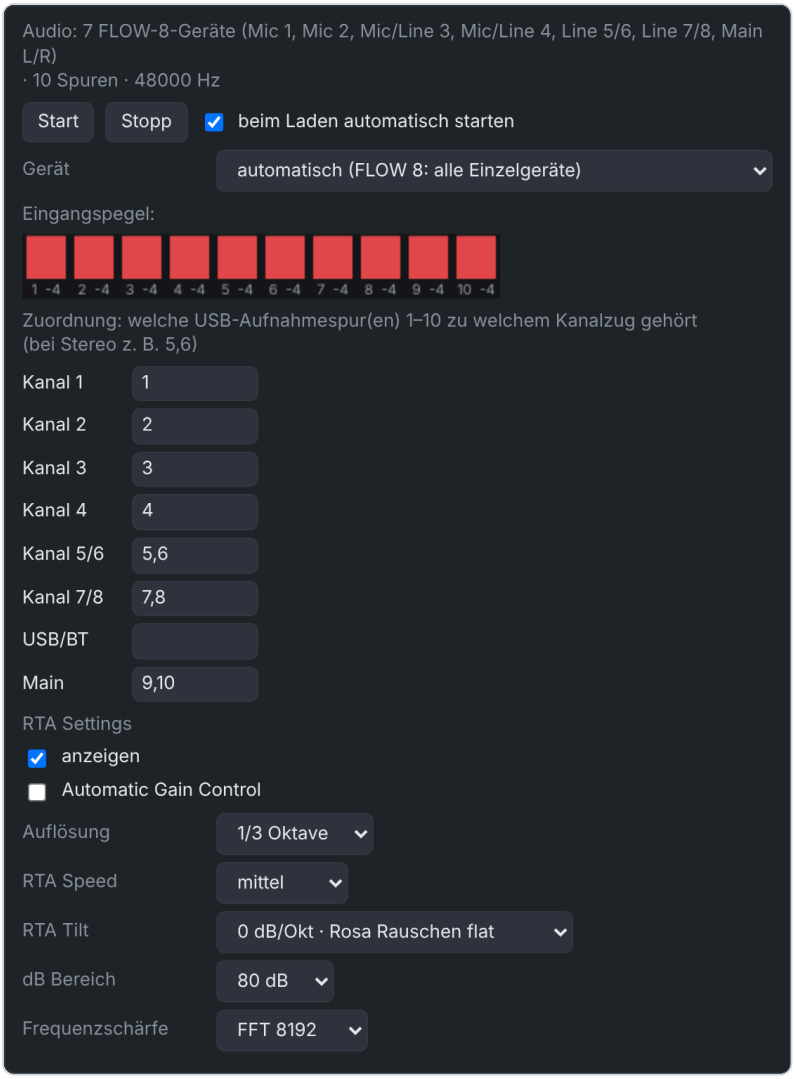


Fig. 7: The Audio window.

Setting	What it does
Start / Stopp (Start / Stop)	Switches listening on or off.
beim Laden automatisch starten (start automatically on load)	With the tick it starts by itself when you open the page.
Gerät (Device)	The FLOW 8, chosen automatically.
Eingangspegel (Input level)	Ten bars, one per USB track of the FLOW 8. To check whether any signal arrives at all.
Zuordnung (Assignment)	Which track belongs to which channel strip. This is already correct. Only change it if a bar is attached to the wrong channel. For stereo you enter two numbers, e.g. 5,6.
anzeigen (show)	Switches the RTA behind the EQ curve on or off.

Setting	What it does
Automatic Gain Control	With the tick the RTA adapts to the volume: the picture stays in the middle whether it is quiet or loud. You then see the shape of the sound but no longer how loud it is.
Auflösung (Resolution)	**1/3 Oktave** (octave): few wide bars, good for an overview. **1/12 Oktave**: many narrow bars, more precise. **Fein** (fine): one continuous line.
RTA Speed	How fast the display reacts. Fast looks hectic, slow looks calm.
RTA Tilt	Tilts the picture so that higher frequencies do not look smaller than they sound. When you play pink noise for measuring, choose “Rosa Rauschen flat” (pink noise flat): the picture is then flat for a balanced sound. If in doubt, leave the default value.
dB Bereich (dB range)	How many dB the picture shows downwards: 60, 80 or 100.
Frequenzschärfe (Frequency sharpness)	How precisely the frequencies are separated, especially in the bass. More precision makes the display a little slower.

The switch “RTA Source Main”

You only find it in the EQ of channels **5/6** and **7/8**, next to the word “EQ”. These channels are fed from the computer over USB. Without the switch the RTA there shows the jacks on the mixer, not the computer signal. With the tick it shows the signal of the main mix instead and calculates out the fader of the channel. If the fader is at −10 dB, it raises the display by 10 dB. The main fader itself plays no role.

10 The Colors window

Click **Farben** (Colors) at the top to color the page to your taste. Each row has a color field (to click) and next to it a text field for the color code, e.g. `#3a8ee6`. Your colors are saved.

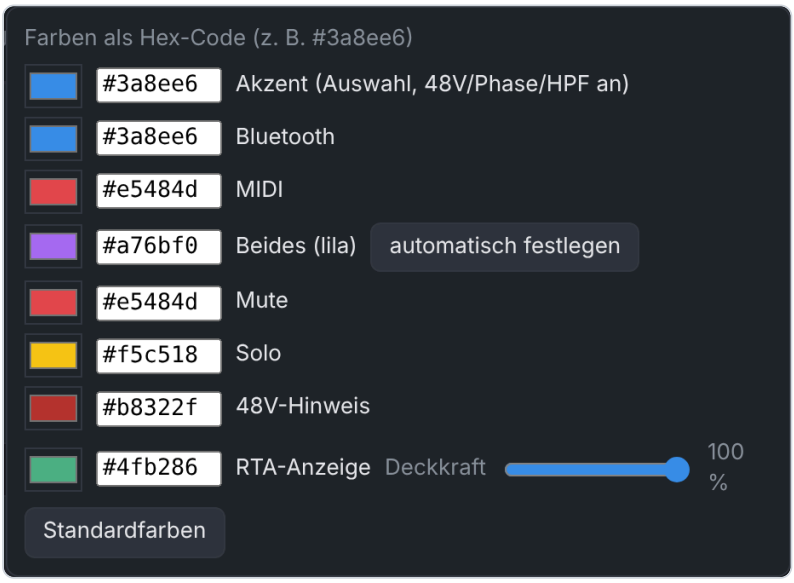


Fig. 8: The Colors window.

Row	What it colors
Akzent (Accent)	The selection and everything that is “on”: selected channel, 48V, phase and HPF when active, and the EQ curve.
Bluetooth	All controls that work over Bluetooth only.
MIDI	All controls that work over MIDI only.
Beides (Both)	The controls that work over both routes. Behind it is the button **automatisch festlegen** (set automatically): with it the page mixes the color from Bluetooth and MIDI by itself. The color field is then locked.
Mute	The M when the channel is muted.
Solo	The S when solo is on, and the Dly display of the buses when a delay is set.
48V-Hinweis (48V warning)	The warning color when phantom power is active.
RTA-Anzeige (RTA display)	The color of the RTA behind the EQ. Next to it a slider **Deckkraft** (opacity): 100 % is full color, less makes it more transparent.
Standardfarben (Default colors)	Resets all colors to the starting values.

The color names in the legend at the top (e.g. “blue = Bluetooth”) adapt automatically to the colors you have chosen. The background cannot be recolored.

11 If something does not work

What you see	What helps
Everything is grey, the controls cannot be moved, the top says “Noch kein Mixerzustand” (no mixer state yet).	Click **MIDI aktivieren** and **Bluetooth verbinden**. Alternatively choose **MIDI dump → Yes** in the FLOW app on your phone. Is the FLOW 8 switched on and the USB cable plugged in?
The orange banner “BT: beliebiger Klick auf die Seite verbindet” stays.	Click anywhere on the page. Edge and Chrome only allow Bluetooth after a click from you.
Bluetooth does not connect.	Close the FLOW app on your phone or switch Bluetooth off there. The FLOW 8 connects to only one device over Bluetooth. Phone Bluetooth and PC MIDI at the same time do work, though. If the PC should use Bluetooth, disconnect it on the phone. Then click **Bluetooth verbinden** again.
A control moves but nothing happens on the mixer.	Check the tick at **Senden erlaubt**. Check the color of the control: if it is blue it needs Bluetooth, if it is red it needs MIDI. For the mixed color the switch at the top decides.
The mixer shows a different value than the page.	Click **Dump jetzt** so that the page fetches the current state.
No level meters, no RTA.	This only works on Windows with `start-mixer.bat`. Check there: was the microphone allowed? Are the seven FLOW 8 recording devices active in the Windows sound settings? Click once on the page and then **Start** in the Audio window.

What you see	What helps
The color settings are gone after a restart.	On Windows always start with `start-mixer.bat`, not with a different address, and do not use an InPrivate window.
Edge shows “This page can’t be reached”.	Close the tab and start `start-mixer.bat` again.