
M470A ·RTO-144 CONNECTIONS

PREAMP ·series L-PRE ·line in 600 Ω, out 600 Ω

REAR CONNECTOR


P1 — REAR VIEW · CARD EDGE · 44 CONTACTS


TOP ROW 1–22: COMPONENT SIDE · BOTTOM ROW A–Z: SOLDER SIDE

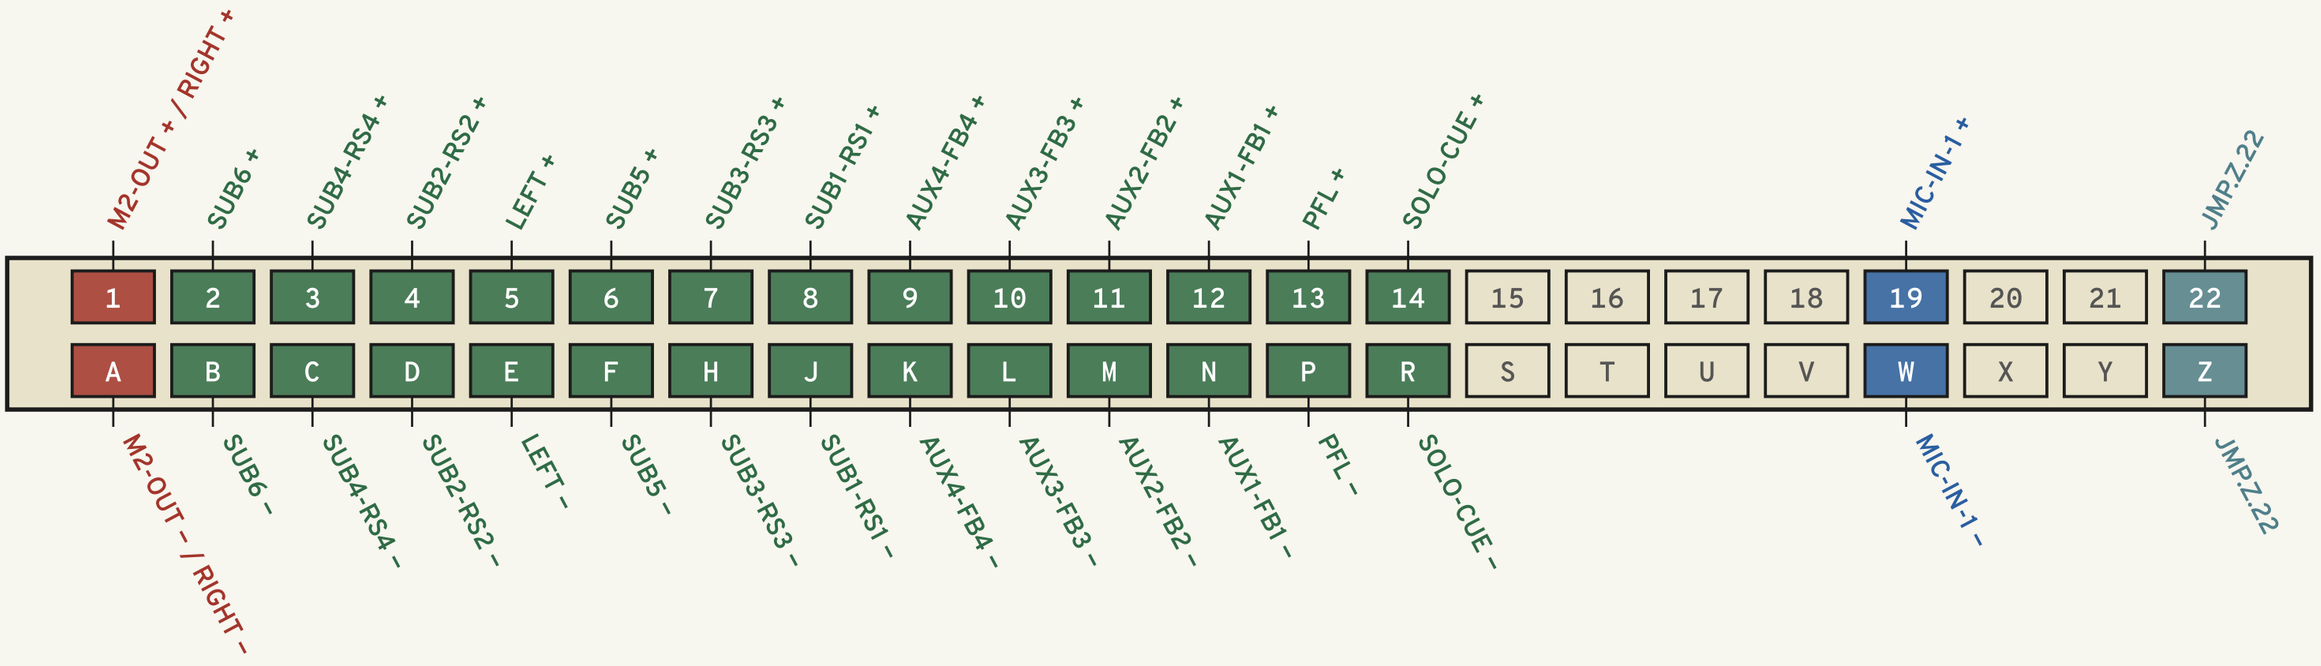

P2 — REAR VIEW · CARD EDGE · 44 CONTACTS

TOP ROW 1–22: COMPONENT SIDE · BOTTOM ROW A–Z: SOLDER SIDE

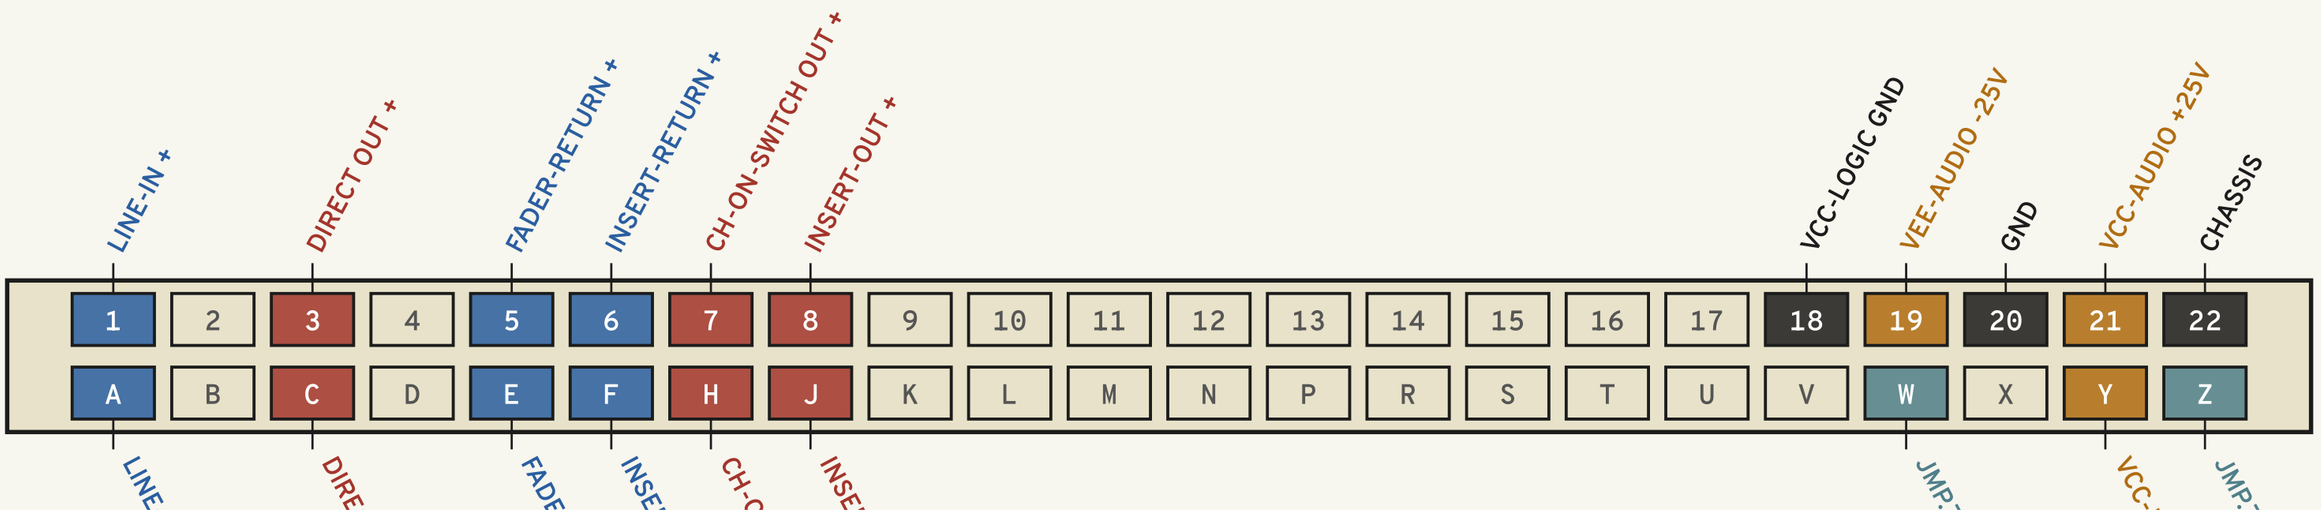

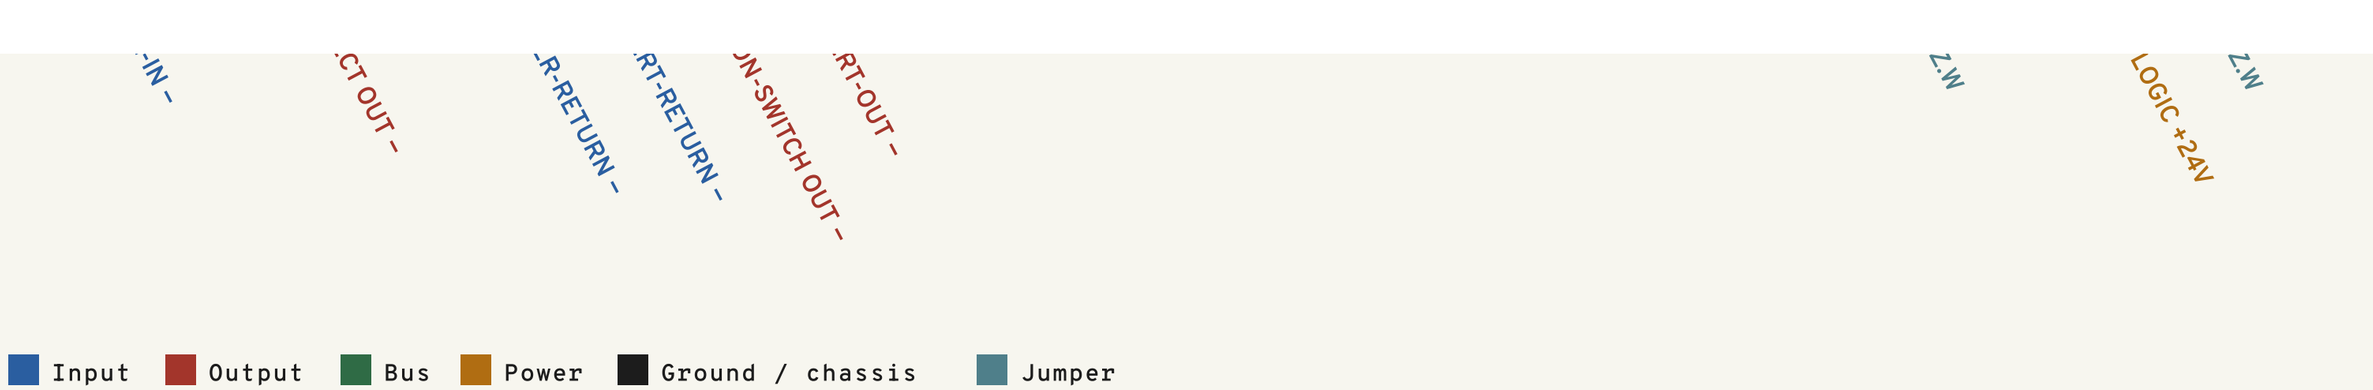

INPUTS AND OUTPUTS

INPUTS

LINE-IN
A1 P2-1 / P2-A

MIC-IN-1
A2 P1-19 / P1-W

INSERT-RETURN
B2 P2-6 / P2-F

FADER-RETURN
B4 P2-5 / P2-E

- JMP.Z.W P2-Z↔P2-W
- JMP.2 P2-W↔P2-18
- JMP.Y.21 P2-Y↔P2-21
- JMP.20.18 P2-20↔P2-18
- JMP.8.6 P2-8↔P2-6
- JMP.J.F P2-J↔P2-F
- JMP.7.5 P2-7↔P2-5
- JMP.H.E P2-H↔P2-E
- JMP.Z.22 P1-Z↔P1-22

M470A

PREAMP

OUTPUTS

M2-OUT
A3 P1-1 / P1-A

DIRECT OUT
A4 P2-3 / P2-C

INSERT-OUT
B1 P2-8 / P2-J

CH-ON-SWITCH OUT
B3 P2-7 / P2-H

LEFT BUS
P1-5 / P1-E

RIGHT BUS
P1-1 / P1-A

SUB1-RS1 BUS
P1-8 / P1-J

SUB2-RS2 BUS
P1-4 / P1-D

SUB3-RS3 BUS
P1-7 / P1-H

SUB4-RS4 BUS
P1-3 / P1-C


SUB5 BUS
P1-6 / P1-F

SUB6 BUS
P1-2 / P1-B

AUX1-FB1 BUS
P1-12 / P1-N

AUX2-FB2 BUS
P1-11 / P1-M

AUX3-FB3 BUS

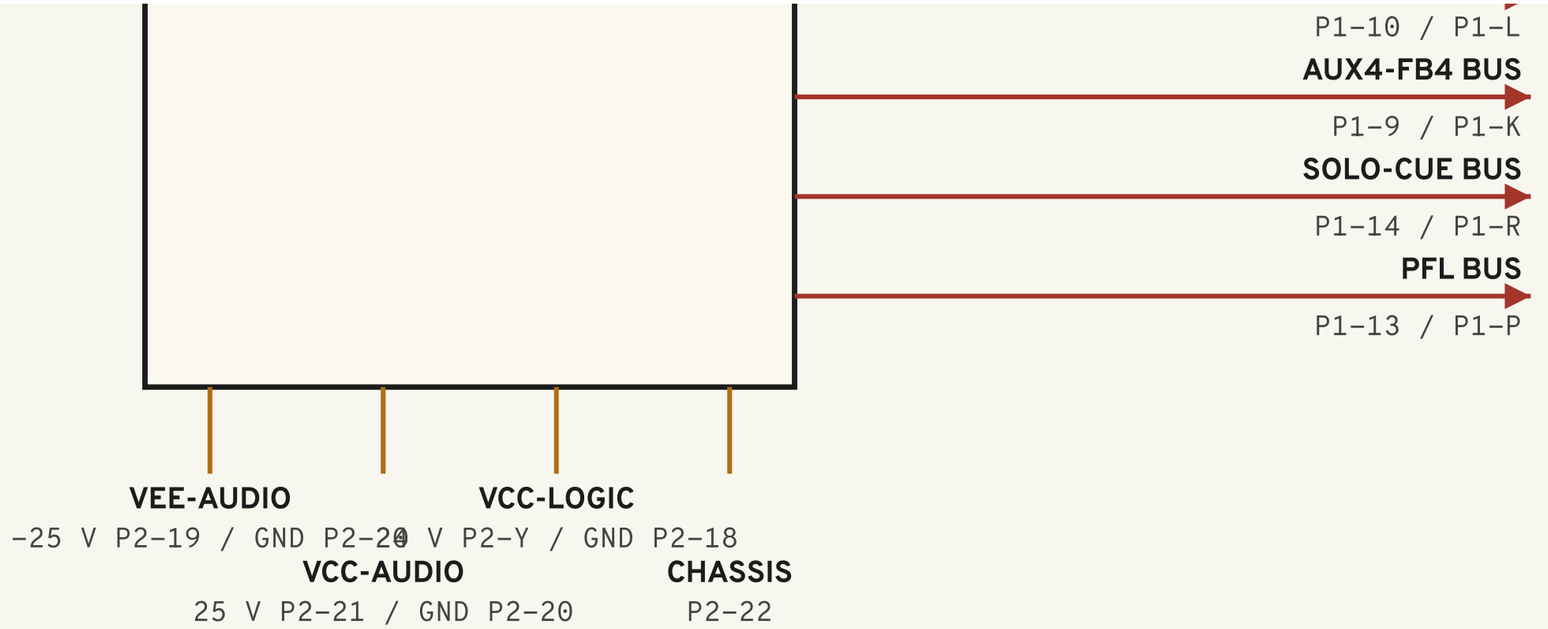

AUDIO CONNECTIONS · RTO-144 A / B

PORT	SIGNAL	DIR	PIN +	PIN –	PAD +	PAD –
A1	LINE-IN	in	P2-1	P2-A	P2-1.A.1.P	P2-A.A.1.N
A2	MIC-IN-1	in	P1-19	P1-W	P1-19.A.2.P	P1-W.A.2.N
A3	M2-OUT	out	P1-1	P1-A	P1-1.A.3.P	P1-A.A.3.N
A4	DIRECT OUT	out	P2-3	P2-C	P2-3.A.4.P	P2-C.A.4.N
B1	INSERT-OUT	out	P2-8	P2-J	P2-8.B.1.P	P2-J.B.1.N
B2	INSERT-RETURN	in	P2-6	P2-F	P2-6.B.2.P	P2-F.B.2.N
B3	CH-ON-SWITCH OUT	out	P2-7	P2-H	P2-7.B.3.P	P2-H.B.3.N
B4	FADER-RETURN	in	P2-5	P2-E	P2-5.B.4.P	P2-E.B.4.N

JUMPERS

FUNCTION	DESIGNATION	FROM	TO
CH ON LAMP	JMP.Z.W	P2-Z	P2-W
CH ON GND	JMP.2	P2-W	P2-18
24V Jumper	JMP.Y.21	P2-Y	P2-21
CH ON GND	JMP.20.18	P2-20	P2-18
Insert +	JMP.8.6	P2-8	P2-6
Insert –	JMP.J.F	P2-J	P2-F

BUS CONNECTIONS

BUS	DIR	SIGNAL	PIN +	PIN –
LEFT	out	BUS-LEFT-OUT	P1-5	P1-E
RIGHT	out	BUS-RIGHT-OUT	P1-1	P1-A
SUB1-RS1	out	BUS-SUB1	P1-8	P1-J
SUB2-RS2	out	BUS-SUB2	P1-4	P1-D
SUB3-RS3	out	BUS-SUB3	P1-7	P1-H
SUB4-RS4	out	BUS-SUB4	P1-3	P1-C
SUB5	out	BUS-SUB5	P1-6	P1-F
SUB6	out	BUS-SUB6	P1-2	P1-B
AUX1-FB1	out	BUS-AUX1	P1-12	P1-N
AUX2-FB2	out	BUS-AUX2	P1-11	P1-M
AUX3-FB3	out	BUS-AUX3	P1-10	P1-L
AUX4-FB4	out	BUS-AUX4	P1-9	P1-K
SOLO-CUE	out	BUS-SOLO-CUE-OUT	P1-14	P1-R
PFL	out	BUS-PFL	P1-13	P1-P

POWER · BENCH PSU

RAIL	STYLE	VOLTS	MAX A	SUPPLY	GROUND	LINK
VEE-AUDIO	NEW	-25	0.2	P2-19	P2-20	2
VCC-AUDIO	NEW	25	0.2	P2-21	P2-20	1
VCC-LOGIC	NEW	24	0.2	P2-Y	P2-18	—

FUNCTION	DESIGNATION	FROM	TO
Fader +	JMP.7.5	P2-7	P2-5
Fader -	JMP.H.E	P2-H	P2-E
EQ BYPASS	JMP.Z.22	P1-Z	P1-22

Source: Ward-Beck Systems - Module RTO-144 Jumper calculator.xlsx (Database tab). Pin direction is inferred from the signal name. Verify against the module schematic before wiring.

WBS	WARD-BECK SYSTEMS LTD.		
TITLE	M470A RTO-144 CONNECTIONS		
DRN.	MAKE_RTO144.PY	DATE	OCT 17 2026