


Tela Boot Robôs FANUC

- ❑ TECLA FCTN
- ❑ 0 NEXT
- ❑ CICLE POWER > YES
- ❑ Quando Robô estiver em processo de reinicialização apertar simultaneamente as teclas F1 e F5

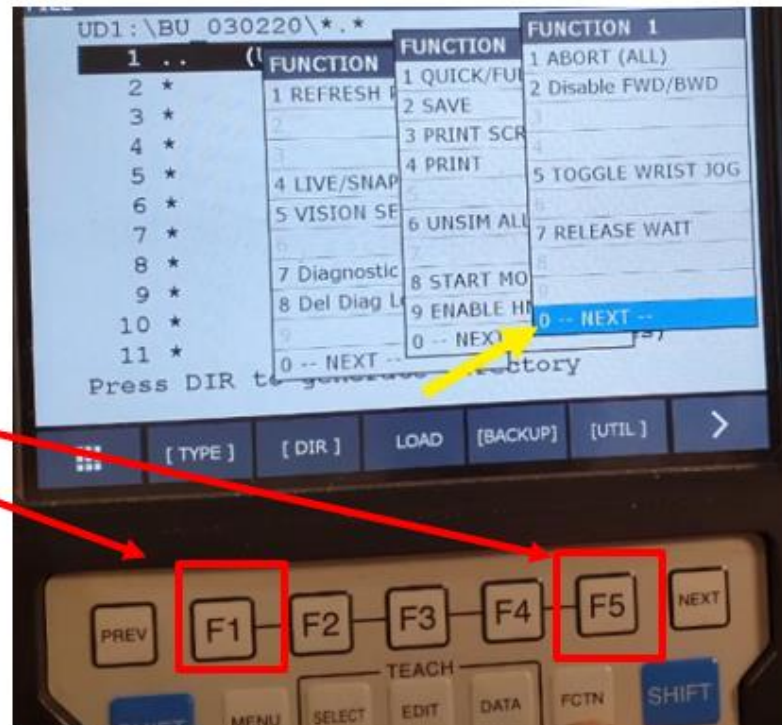

Tela Boot Robôs FANUC

*** BOOT MONITOR *** UD
Base version V8.30P/31 [Release 3]
***** BMON MENU *****
1. Configuration menu
2. All software installation(MC:)
3. INIT start
4. Controller backup/restore
5. Hardware diagnosis
6. Maintenance
7. All software installation(Ethernet)
8. All software installation(USB)

Select :