



BENDIGO FLYING CLUB

Members' Manual

Reach for the Sky

Bendigo Flying Club Members' Manual is
Copyright © 2024 Bendigo Flying Club
Vista Road, Bendigo Airport,
Bendigo VIC 3550
(PO Box 504, Bendigo Central 3550)
Telephone: 03 5443 8395
www.bendigoflyingclub.com.au

Copyright is retained by individual authors.
The moral rights of the authors have been asserted.
All rights reserved.

First published in Australia in 2019.
Second edition published in 2024.

Printed by:
Mulqueen Creative & Print
www.mulqueenprinters.com.au

Design, layout and illustrations by
Peter Wiseman – pwiseman@mediaust.com.au.



CONTENTS

WELCOME TO THE BENDIGO FLYING CLUB	1
Contacts	1
About Bendigo Flying Club	2
Code of Conduct	4
BEFORE YOU FLY	6
Booking Administration	6
Pilot Readiness	7
Weather and Notams	9
Weight and Balance	11
Take off and Landing Performance	12
Flight Planning – summary of requirements	13
Fuel	15
Care of the Aircraft	17
AIRCRAFT & FLIGHT OPERATIONS	19
CHECKLISTS	19
Pre Flight check	19
Prestart	20
Pre-Start Checks	20
After Start	20
After Start	21
Pre-Landing	22
Piper Archer	22
Tecnam	22
REQUIRED FLIGHT DOCUMENTATION	23
For flights that take off and land at Bendigo	23
For flights to different airports	23



BENDIGO AERODROME	23
Bendigo Airport YBDG	24
BFC AIRCRAFT SPECIFICATIONS	26
Fuel consumption and capacity	26
Speeds	26
Empty weights of BFC aircraft	26
WeightS and Balance	27
NORMAL FLIGHT PROCEDURES	28
RADIO PROCEDURES	28
Circuit Calls - Advisory	28
Inbound Calls	28
Transponder Codes	29
CIRCUIT PROCEDURES	30
At Familiar Airstrips	30
At Unfamiliar Airstrips	30
Circuit Departure	30
AFTER LANDING	30
SHUT DOWN	30
SPECIAL PROCEDURES	32
Cross wind take-off	32
Cross wind landing	32
Flying through turbulence	32
Short field take-off	32
Short field landing	32
Navigation Procedures	33
In-Flight Check	33



EMERGENCY PROCEDURES 34


 Forced Landings 34

EMERGENCY LOCATOR BEACONS 36

BFC EMERGENCY RESPONSE 38

 Medical Emergency Response Procedures 39

 Secondary Response Procedures 39

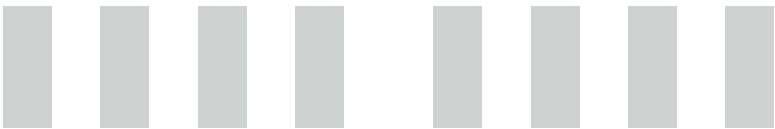

WELCOME TO THE BENDIGO FLYING CLUB

Welcome to the exciting world of aviation.

This booklet has been prepared by the Bendigo Flying Club as a guide to operations when using the club's facilities and services.

This manual outlines policies, procedures and airmanship guidance for members.

We aim to make your flying as safe and enjoyable as possible.

BFC President and Chief Flying Instructor

CONTACTS

Contact the club landline – it's always forwarded to an instructor:
03 5443 8395.

CLUB MANAGER

(for bookings, information, advice, student enquiries)
0497 977 974

CHIEF FLYING INSTRUCTOR

Linda Beilharz – 0409 940 184

Email:	bfc@bendigoflyingclub.com.au accounts@bendigoflyingclub.com.au
Website:	www.bendigoflyingclub.com.au

Disclaimer

Please note that this booklet is not a Pilot's Operating Handbook or Aeroplane Flight Manual. The information in this booklet is general in nature and based on operations recommended as being suitable for the aircraft. For exact and detailed aircraft specifications, pilots need to make themselves aware of the information contained in the plane's flight manuals. We acknowledge the illustrations created by Peter Wiseman included in this manual.



ABOUT BENDIGO FLYING CLUB

MEMBERSHIP BENEFITS

Membership of the Bendigo Flying Club has many benefits:

- ✪ RAAus Flying Training School – RA Pilot certificate, Cross Country and Passenger endorsements, RA BFRs (Bi-annual Flight Reviews).
- ✪ “BFC Flying Scholarship” awarded annually for aspiring pilots aged 15 – 23 enabling attainment of a Pilot Certificate.
- ✪ Aircraft Hire – Archer and Tecnams at very reasonable rates.
- ✪ Membership of AOPA
- ✪ Licensed bar, lounge and club rooms, briefing room and tea and coffee facilities. Child friendly. Great views of the airport and local flying activity. Members gather every Friday evening and drop in for a chat and a cuppa during the week.
- ✪ Bendigo Airport free parking zone.
- ✪ Instructors and members are happy to provide information and support to visiting and local aviators.
- ✪ Free WIFI in the clubrooms.
- ✪ Bendigo Airport's brand new runway.
- ✪ Flyaway cross-country adventures, visits to other clubs by plane and other club activities
- ✪ Great flying in scenic central Victoria with mostly sunny weather.

Junior memberships are available to people 18 and under.

Associate memberships are available for members of Kyneton and Mildura Aeroclubs.

Bendigo Flying Club is a public company limited by Guarantee. Members are welcome to attend, vote and stand for committee at the AGM.

The AGM and Annual Wings Night are held in October each year.

Further information is available at www.bendigoflyingclub.com.au.



COMMUNICATION

BFC communicates in the following ways:

- ✪ Finance – emailed flight, purchase and membership invoices, and monthly statements.
- ✪ News – monthly e-newsletter.
- ✪ Social Media – Facebook and Instagram posts – airport and flying news, stories about flights by our members, upcoming events.
- ✪ Individual – phone and sms communication with students and members about bookings.
- ✪ Website – key services and information about the club, hire and training costs, scholarship, event information.

Let us know if your contact details change or if you have other communication needs.

RECORD KEEPING AND PRIVACY

BFC maintains a Membership List with names, postal addresses, email addresses, and phone numbers. Incorporation law and our Liquor Licence require that this list is available for inspection, however, it is possible to request privacy of details – let us know if you require this.

Your name and contact details are also in our newsletter data base (you can opt out), in Goboko (you manage this information) and in our bookkeeping program.

The Flying School holds information about pilots endorsed to hire aircraft including information about flying qualifications, check flights and date of birth. Members 18 years and under are required to have parental consent to be a student or authorised hiring pilot.

The membership list is available for member scrutiny and all other information is kept in secure filing cabinets or in cloud-based programmes.



CODE OF CONDUCT

We aim to run a flying club that is welcoming, family friendly, active and encouraging of aviation. A friendly, respectful and professional club and flying school culture will ensure this is the case. All members contribute to this culture.

MEMBERS HAVE A RIGHT TO:

- ✳ Be treated fairly, equally and with respect by the club, its committee and other members.
- ✳ Use club facilities and services in an environment free from all forms of harassment and discrimination.
- ✳ Privacy and confidentiality concerning records, documentation and any other communication containing a member's personal information, unless consent is otherwise provided.
- ✳ Be informed and actively involved in all club events and offerings.
- ✳ Voice their opinions, requirements and suggestions to the Committee.
- ✳ Nominate for committee and vote on motions put to the membership.

MEMBERS MUST:

- ✳ Treat other members, guests, flying club staff and others fairly, equally and with respect and courtesy.
- ✳ Behave responsibly and ensure they conduct themselves in a manner which will not injure the reputation of the Bendigo Flying Club, RAAus, their events, organisers, participants or sponsors.
- ✳ Adhere to club rules such as the responsible serving of alcohol guidelines.
- ✳ Respect the property, venue and other assets of the club, taking responsibility for use of the facilities and goods by ensuring cleanliness and payment for purchases.
- ✳ Not harass others – verbally, physically, sexually, online.



- ✧ Report any inappropriate behaviour of a member to the Committee of the Association for action and follow up.
- ✧ Abide by and uphold the Constitution and Code of Conduct.
- ✧ Pay any fees in relation to membership, aircraft hire, or an event which that member has committed to, regardless of whether the member attends the event or not.
- ✧ Notify the CFI or club administrator of any changes to address or other contact details.
- ✧ Respect the responsibilities and roles of the committee and flying school staff.

AIRCRAFT HIRERS MUST:

- ✧ Ensure they are fit to fly (IMSAFE), current (three take offs and landings in the past three months prior to taking passengers, have had a flight review within the past two years) and authorised (have current BFC membership and RAA membership for RA aircraft hire) prior to flying.
- ✧ Check bookings on Goboko to ensure the aircraft is available. Observe time of return for next user.
- ✧ Enter flight details, legibly, in the *Flying Record and Authorisation Sheet* before and after the flight.
- ✧ Conduct a preflight check.
- ✧ Sign the maintenance log/release if first flight of that aircraft for the day, note time out and in on the flight log.
- ✧ Refuel the aircraft on return. Tecnams full, Archer to the tabs.
- ✧ Remove equipment and rubbish after the flight, leaving it clean and ready for the next pilot.
- ✧ Notify the CFI if there are any equipment or operating concerns.
- ✧ Report any incidents to RAAus or CASA as required of a pilot in command and inform the CFI.



BEFORE YOU FLY

Considerations & processes.

Access the clubhouse using the front door security code. Obtain the code from an instructor.



BOOKING ADMINISTRATION


Book via Goboko – Book your aircraft on the online Goboko booking system. When booking, allow time for aircraft preparation and ensure you can return the aircraft by the specified time. www.goboko.com

New users need to register on the site. Please include a phone number and your full name (not preferred name).

Select Bendigo Flying Club as your flying school. Your request will then be approved by the club.

FLYING RECORD AND AUTHORISATION SHEET

Planned flight details must be entered on the *Aircraft Hire Sheet* (located on the glass counter with aircraft folders containing aircraft, fuel and hangar keys, with maintenance and flight logs).

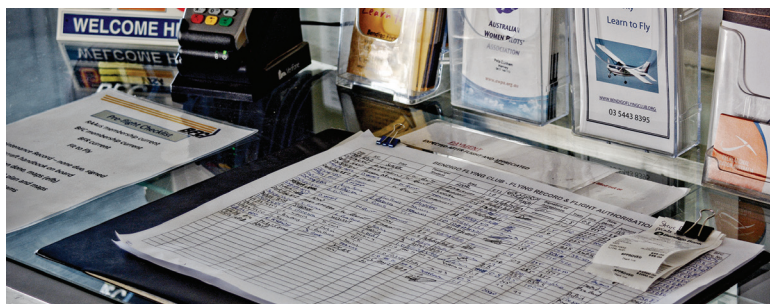

PREFLIGHT CHECK AND MAINTENANCE LOG CHECK

Prior to commencement of any flight, the Pilot-in-Command must ensure a daily inspection has been carried out by an authorised person and check that the aircraft is certified on the Maintenance Log. Record any oil added.

COMPLETE FLIGHT LOG

Record the time at the start and the end of your flight on the Aircraft Flight Log Sheet (in each aircraft folder). Note the fuel on board prior to the flight. Note the number of landings.

Payment is expected after each flight.

Payment can be made using the EFTPOS terminal.

Use the pricing chart to identify the payment rate for your plane and flight type (training, local/nav, etc).

Swipe your card and follow the on-screen prompts.

Note your name on the Merchant Copy receipt and clip it onto the *Flying Record and Authorisation Sheet* noting the invoice number.

Retain the customer copy of the invoice

PILOT READINESS

I'm Safe

Before you fly evaluate your own fitness to fly. **IMSAFE** check.

Illness: Do I have any symptoms?

Medication: Have I been taking prescription or over-the-counter drugs?

Stress: Am I under psychological pressure from the job? Am I worried about financial matters, health problems, or family discord?

Alcohol: Have I been drinking within eight hours of flying? Within 24 hours of flying?

Fatigue: Am I tired and not adequately rested?

Emotion: Am I emotionally upset?



Qualified, Current & Recent

- ✧ **Maintain Currency** – you are required to have done three take-offs and landings in the previous 90 days before flying with passengers.
- ✧ **Health** - RA pilots must also ensure that their health is equivalent to that required for a private motor vehicle licence.
 - ➔ If in doubt, check with your GP.
 - ➔ GA pilots must have a current Class 5, 2 or 1 medical.
- ✧ A **Flight Review** is required every two years.

SAFE FLYING PRACTICE

Regularly practice your flying to maintain your skills.

A good habit is to fly every couple of weeks – if only for a few circuits. Continue to practice landings.

Instructors can do a circuit or two with you to assist you to refresh your skills.

Talk to instructors about any queries or concerns you have – their job is to help you.

Enjoyable flying is all about following set requirements and developing your own high standards of safe flying practices.



WEATHER AND NOTAMS

All pilots are required to check that the weather is going to be suitable for the flight.

Use an authorised source of information. Airservices has NAIPS which provides pilot briefing information including area weather forecasts, location weather forecasts, Graphical Area Forecasts (GAFS) and Grid Wind Tables (GRWT).

NAIPS requires setting up an account on the Airservices website. The information can then be accessed online, through an efb (Avplan or Ozrunways) or through phone apps.

The Bureau of Meteorology (BOM) has an excellent weather section and has guides to acronyms and forecast structure in the Knowledge Section - *read them*.

- ★ Check the forecast covers the time you will be flying. You may need the current and the next forecast.
- ★ Check that the wind, cloud and visibility are suitable for the heights you need to fly, for approach to your airport and the limitations of the aircraft. *Note if there will be changes and what that means for your flight.*
- ★ Use the AWIS to get the current weather conditions to assist runway selection for Take Off and Landing.

Further information can be obtained from other sources such as Willy Weather (long range trends) and Windy (comparison of actual vs forecast wind conditions at the airport) or airport webcams. These are helpful but are not official sources for flight planning.

- ★ Check Notams for the airports you will be using for your flight,

Notams alert you to closed runways, displaced thresholds, hazards or events that affect the airport. Don't forget to check your departure airport as well. Notams are issued for Danger or Restricted areas to let you know if they are active.

Notams are available on NAIPS (Not on the BOM aviation section)



WEATHER FORECASTS

Weather conditions for the duration of your flight must meet legal and personal minimums.

Wind direction and strength	
Cloud base	
QNH	
Temperature	
Visibility	
Rain, storms	

VMC airport minimums

- ✧ Cloud—no more than scattered cloud below a ceiling of 1,500 ft AGL
- ✧ Wind—no more than aircraft crosswind max (15 kts)
- ✧ Visibility—minimum 8,000 m

Personal minimums

- ✧ What are your personal minimums?
- ✧ Do the conditions meet these?



WEIGHT AND BALANCE

Check that the load in the plane is within the centre of gravity envelope and at or below the Maximum Take Off Weight.

Each aircraft manufacturer designs their own information and method for these calculations. This information is specified in the Pilot Operating Handbook.

BFC has extracted some information for easy pilot access and has these guides available on the website.

Actual empty weights of BFC aircraft are:

Reg	Aircraft	Empty weight kg	MTOW (kg)
24-4851	Tecnam	323.82	600.00
24-4852	Tecnam	323.09	600.00
24-5420	Tecnam	335.00	600.00
24-8078	Tecnam	366.00	600.00
23-1560	Tecnam	396.00	600.00
VH-BIU	Piper Archer	700.90	1156.00

SIGNING IN TO BFC'S WEBSITE MEMBER'S AREA

Use a link

- ✦ In the address bar of your browser enter:
<https://www.bendigoflyingclub.com.au/memberresources>
- ✦ Follow the instructions on the screen to finish signing in.



TAKE OFF AND LANDING PERFORMANCE

Take off and landing distance is usually given in two measurements:

- ✧ The distance required to reach the rotate speed and leave the ground (Ground Roll).
- ✧ The distance required to also climb to 50 feet above the runway.

The climb to 50 feet can be up to double the ground roll distance.

Aircraft manufacturers also calculate the distance each aircraft model requires to land.

Aircraft characteristics make a difference.

- ✧ **Weight:** greater weight – longer distance required.
- ✧ **Flaps:** reduce the take-off ground roll but reduce the climb performance, reduce the landing roll.

So do weather and runway strip characteristics.

- ✧ **Wind:** Greater headwind reduces distance required; a tail wind greatly increases distance required.
- ✧ **Surface:** Long, wet grass reduces acceleration requiring a longer take off run. Short dry grass is faster and a sealed runway even quicker. Take off distance is reduced but landing distance increased as there is less friction to slow the plane down. A wet surface, or grass will slow the aircraft down more.
- ✧ **Air Pressure:** High air pressure increases aircraft performance and reduces the distance required; low air pressure increases distance required.

Make sure the runways you will be using, on the day you are doing the flight, are sufficient for your aircraft's performance.



FLIGHT PLANNING – SUMMARY OF REQUIREMENTS

Identify route:

- ✧ Start.
- ✧ End.
- ✧ Waypoints.

Draw on map:

- ✧ Measure distance.
- ✧ Measure track.
- ✧ Mark 10 mile inbound call to each airport.

Identify airspace and terrain:

- ✧ Control steps – mark when you have to be at a particular height.
- ✧ Radio-list airport CTAFs within 10 mile of track, area frequencies and airport CTAFs.
- ✧ Elevation of terrain for route.

Airports:

- ✧ Elevation.
- ✧ Runway directions.
- ✧ Runway distances and surfaces.
- ✧ CTAF, AWIS if applicable.
- ✧ Fly neighbourly and airport rules.
- ✧ Fuel availability.
- ✧ Permission – is it required?



Weather – GAF, GW, ARFOR (obtain current information from authorised sources):

- ✧ Does it meet minimum requirements (VMC)?
- ✧ Crosswind limitations – can you land?
- ✧ Your own limitations – are you comfortable to fly in these conditions?
- ✧ Wind –calculate ground speed and heading for each leg.
- ✧ Time required.
- ✧ Fuel required.

Fuel Plan:

- ✧ Fuel for each leg.
- ✧ Fixed reserve of 30 mins.
- ✧ Alternate or holding fuel – do you need it?
- ✧ Allowance for taxi or circuits – approx. 6 minutes for each circuit.



FUEL

It is recommended that Tecnams be fuelled with unleaded petrol at the BFC fuel tank. Piper Archer uses Avgas.

If on a cross-country flight when unleaded petrol is not available, Avgas 100LL may be used for Tecnams.

Fuel cards are available for use on cross-country flights. Check the plane folder for appropriate cards before departure.

Bendigo Airport Public Bowser

Bendigo Airport Avgas is currently supplied by SkyFuel. A card is in BFC's fuel card wallet in BIU.

1. Park.
2. Set up earth wire.
3. Swipe the fuel card and follow prompts to select the correct bowser (number 1. Avgas).
4. Lift off handle, (pump will start).
5. Pull hose out to reach the plane, refuel each tank.
6. When full return the handle to the holder (pump will stop).
7. Wind hose neatly.
8. Swipe the fuel card again (follow prompts) to get the receipt.
9. Rewind earth wire.
10. Test fuel before flying again.

BFC Fuel Tank – Unleaded Petrol

1. Taxi Tecnam to (BFC) fuel tank and turn engine off 30 metres from the fuel tank.
2. Manually pull the aircraft to the filling station and chock the front wheel. *Leave brakes off.*
3. Unlock the fuel tank cabinet (*continued overleaf*).



4. Attach the static electricity discharge earth cable to the aircraft exhaust pipe (metal).
5. Position the step ladder near the wing fuel tank cap, roll out the hose and turn on the electric pump (lift the handle).
6. Reset the gauge on the pump – press and hold (briefly) the upper button.
7. Re-fuel aircraft, ensuring the fuel level is five millimetres below the bottom of the filler-neck.
8. When filling is complete, shut-off the electric pump, then roll up the hose and the earth cable.
9. Record the amount of fuel taken and lock the cabinet securely.
10. Return the step ladder to the trailer ladder-holder.
11. Check for fuel contamination in wing tanks with fuel drain.
12. Push the aircraft back, orient to direction of travel, start engine and taxi away.
13. Report any issues to the BFC Office.

NB: After re-fuelling, use the Tecnam's left-hand tank, close the right-hand tank to prevent siphoning.

Refueling at other airports

1. Check ERSA for fuel company details before departure to ensure access to a fuel bowser at another airport.
2. BFC has fuel cards available for many companies – take the correct ones with you. Many now take Visa or Mastercard but not all.



CARE OF THE AIRCRAFT

These aircraft belong to you, the members of the Bendigo Flying Club.

It is your responsibility to ensure the aircraft you are flying is kept in the best condition possible for your enjoyment and the enjoyment of all BFC members.

To achieve this:

- ✪ Please inspect the aircraft thoroughly prior to your flight. If you have any concerns at all, please contact instructors directly or on 0497 977 974.
- ✪ At the end of your flight, ensure the aircraft is refuelled and ready for the next pilot.
- ✪ Remove rubbish and dispose of rags used for oil.
- ✪ If any damage has occurred, it is your responsibility to inform the Chief Flying Instructor.
- ✪ Do not place items on the dash as they may scratch the windscreen.
- ✪ Take particular care of the headphones.
 - ➔ Ensure they are working correctly prior to any flight.
 - ➔ Avoid tangles with the leads.



QUALIFIED, CURRENT & RECENT

- ★ **Aviation Flight Review** (or BFR) – you must have done a flight review within two years of your flight.
- ★ **Passengers** – you are required to have done three take-offs and landings in the previous 90 days before flying with passengers.
- ★ **Current Medical** - RA pilots must ensure their health is equivalent to that required for a private motor vehicle licence.
 - ➔ If in doubt, check with your GP.
 - ➔ GA pilots must have a current Class 5, 2 or 1 medical.

SAFE FLYING PRACTICE

Flying skills get rusty if not used.

A good habit is to fly every couple of weeks – if only for a few circuits. Continue to practice landings.

Instructors can do a circuit or two with you to assist you to refresh your skills.

Talk to instructors about any queries or concerns you have – their job is to help you.

Enjoyable flying is all about following set requirements and developing your own high standards of safe flying practices.



AIRCRAFT & FLIGHT OPERATIONS

CHECKLISTS

PRE FLIGHT CHECK

- ✱ Manually check fuel tanks and compare fuel levels with the gauges.
- ✱ Conduct fuel contamination checks on wing tanks and fuel filters.
- ✱ Check around the aircraft. Follow the same sequence each time you fly to ensure nothing is missed.
 - ➔ Propeller, spinner.
 - ➔ Tyres, brakes, brake lines and spats.
 - ➔ Wing, aileron and flap examination.
 - ➔ Pitot tube and static ports.
 - ➔ Fuselage.
 - ➔ Elevators, trim tabs, rudder.
 - ➔ Check airframe general condition.
- ✱ Check engine oil level and in the Tecnams, “burp” the engine (if level seems low) by rotating the propeller anticlockwise as seen from the front. Oil should rise part-way up the flat section on the dipstick in Tecnams and show between four to six litres in BIU. Replace the cap securely. Add oil (100 mls is often enough for a Tecnam, 500 mls for BIU) and make a note on the maintenance log.
- ✱ Visually inspect engine components noting the coolant level.
- ✱ Ensure cowl clips are properly secured.
- ✱ Check windscreen is clean (clean it with a soft cloth only).

First flight of the day must sign the maintenance log checking that the plane is not due for a service or other maintenance.



PRESTART

Colour code: **Piper Archer** / **Tecnam**s

Pre-Start Checks

Ensure the aircraft is parked in a suitable position over firm ground which is free of loose stones.

Adjust seat and fasten harness.

Brakes ON.

Radio and Electrics OFF.

Fuel ON.

Mixture **RICH.**

Throttle SET.

Choke (cold start) IF REQUIRED.

Primer **FIVE PUMPS.**

Carburetor Heat **COLD.**

Master ON.

Magnetos (both) ON.

Electric pump ON for five seconds then OFF.

Call "Clear Prop" and turn the key to START.

After Start

RPM set to **1,000** / **2,000.**

Oil pressure in **GREEN** within 30 seconds.

Avionics ON - check frequencies and volume.

Listen for traffic.

Determine runway direction.

Taxi call.



AFTER START

Colour code: **Piper Archer** / **Tecnam**s

Taxi aircraft to the apron and face nose into the wind.

Engage handbrake.

T Trim set for take-off.

Throttle nut set to FIRM.

M Master on.

Magnetos on (Ignition switches)

Mixture RICH

P **Primer - LOCKED**

Choke off.

F **Fuel on and sufficient,**

Fuel pump on.

Flaps set to T/O position.

I **Instruments - check L to R - all set as required.**

S **Switches- all required on - beacon & lights**

Check annunciator panel

RPM to **1700** / **3800** and check mag drop - L & R.

Carburetor Heat - Hot, check magneto drop.

Check temps and oil pressure.

Check suction and ammeter.

Throttle to idle and then to **1000** / **2000**.

Carburetor Heat - COLD

C **Controls full, free and correct.**

H **Hatches and Harnesses secure.**

PRE-LANDING

Piper Archer

- B** Brakes OFF.
- U** (U)ndercarriage DOWN & LOCKED.)
- M** Mixture - RICH.
- F** Fuel ON & sufficient.
Fuel pump ON.
- O** Oil pressure and temperatures.
- H** Hatches and Harnesses secure.

Tecnams

- B** Brakes OFF and pressure available.
- F** Fuel pump ON, sufficient.
- E** Engine gauges in the green.
- T** Traffic – see or hear traffic in the circuit.
- C** Circuit position and height.
- H** Hatches and Harnesses Secure.



REQUIRED FLIGHT DOCUMENTATION

- ✧ Current weather forecasts and Notams.

Pilots must carry the following documents with them in the aircraft:

FOR FLIGHTS THAT TAKE OFF AND LAND AT BENDIGO

- ✧ License/RAAus membership card.
- ✧ Aircraft flight manual.
- ✧ Maintenance log and flight log.

FOR FLIGHTS TO DIFFERENT AIRPORTS

In addition to the documents listed above:

- ✧ Current maps (for the intended flying region and alternates).
- ✧ Current ERSA.

Note: an electronic flight bag on an ipad or similar is acceptable means for carrying ERSA, maps and Flight log. Back up is required.


BENDIGO AERODROME

- | | |
|--------------------|--|
| ✧ Elevation | 710 AMSL |
| ✧ Circuit Height | 1710 AMSL |
| ✧ CTAF | 119.3 |
| ✧ AWIS (weather) | 128.15 |
| ✧ Melbourne Centre | 126.8 (Area Frequency) |
| ✧ Runways | 17/35 1600m.
05/23 767m. |
| ✧ NOTE: | Right Hand Circuits on Runway 35 and 05. |



BENDIGO AIRPORT YBDG

- ★ Elevation 710 feet
- ★ 230° 2 16NM
- ★ Bendigo

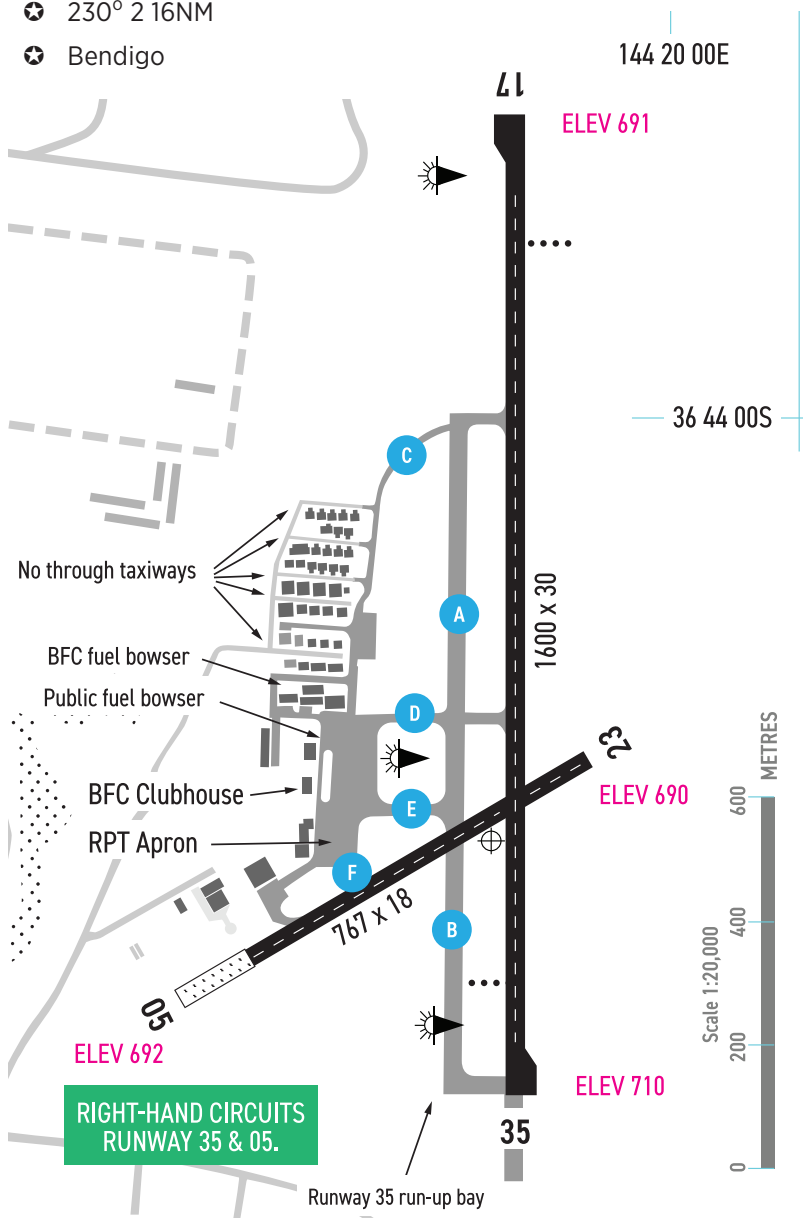

Bendigo is a certified airport – high visibility vests are required. ASICS are required two hours before, during and two hours after RPT (regular public transport) is present.

Regular Public Transport (RPT) uses Bendigo Airport. These aircraft follow CTAF rules and will give way to aircraft in the circuit. The larger aircraft can only exit or enter the runway from holding point Delta. Allow time for them to back track.

They will often give a call 10 minutes before arrival, though they may be still more than 30 miles away.

If traffic at the airport can make space for a straight in approach it will be appreciated, however is not required. Traffic in the circuit has right of way.

Being able to provide concise information about your location and intentions assists RPT to manage their approach while you are there.

For example:

- ✧ *"Qlink109, Tecnam 5420 is 5 miles to the NW, 2500, positioning for crosswind join runway 17."*
- ✧ *"Qlink109, Tecnam 1560 on downwind, rwy 35. Will be conducting a touch and go."*

OPTIONAL RADIO CALLS AND ACTIONS.

- ✧ *"Qlink 109, Tecnam 5420 can orbit on the deadside at 2000 ft, until you have landed." or*
- ✧ *"Qlink 109, Tecnam 4852 is 7 miles NE of the training area. Will track west of the 35 centreline to continue airwork at 3,500 ft."*

STRATEGIES FOR BFC STUDENTS:

- ✧ Talk to larger aircraft as you would to small aircraft – the same rules apply
- ✧ Fly your standard route unless it is easy for you to vary it to create space for an RPT arrival.
- ✧ **Never** change your flight under pressure.



BFC AIRCRAFT SPECIFICATIONS

FUEL CONSUMPTION AND CAPACITY

	Tecnam P92	Tecnam P2008	Piper Archer
Fuel consumption	18 l/hr	18 l/hr	38 l/hr
Fuel capacity	90 litres	110 litres	181 litres

SPEEDS

	Tecnam P92	Tecnam P2008	Piper Archer
Stall speed clean	44 kts	45 kts	55 kts
Best glide	68 kts	65 kts	76 kts
Max flap extended	68 kts	68 kts	102 kts
Best rate of climb - clean	68 kts	69 kts	80 kts
Best climb angle	60 kts	65 kts	64 kts
Landing final approach	60 kts	60 kts	70 kts
Max crosswind	15 kts	15 kts	17 kts

EMPTY WEIGHTS OF BFC AIRCRAFT

✱ 4851	.323.82	(W&B 7/9/2007)
✱ 4852	.323.09	(W&B 15/1/2007)
✱ 5420	.335.0	(POH 2007)
✱ 8078	.366.0	(POH)
✱ 1560	.396.0	(W&B 30/9/2018)
✱ BIU	.700.9	(POH)



WEIGHTS AND BALANCE

Weight and balance calculations are required for every flight.
Aircraft POH has detailed information about how to calculate this.

WEIGHTS

	Tecnam P92	Tecnam P2008	Piper Archer
Empty weight	325 kgs	355 kgs	700.5 kgs
Max T/O weight	600 kgs	600 kgs	1156 kgs



NORMAL FLIGHT PROCEDURES

RADIO PROCEDURES

CIRCUIT CALLS - ADVISORY

Taxiing, entering & backtracking, downwind, base, final, clear of all runways.

NOTE: When the circuit is busy reduce calls to *joining* and *base*.

INBOUND CALLS

At **10nm** - *position & height.*

At **3nm** - (optional) *position, height & joining intentions.*

At **circuit entry** - *position & height.*

EXAMPLES:

10 mile inbound: *"Bendigo Traffic, Tecnam 4851 is one zero miles to the north-east, on descent through two-thousand feet, inbound, Bendigo."*

Joining circuit: *"Bendigo Traffic, Tecnam 4851 joining midfield crosswind runway one-seven. Bendigo."*

Positioning to join crosswind: *"Bendigo Traffic, Tecnam 4851 three miles north east at two thousand five hundred feet positioning to join crosswind from deadside, runway three-five. Bendigo."*

Joining downwind: *"Bendigo Traffic, Tecnam 4851 joining mid-downwind for runway three-five. Bendigo."*

Turning Base: *"Bendigo traffic, Tecnam 4851 turning base runway three-five, number two, for touch and go. Bendigo."*

Departing circuit: *"Bendigo Traffic, Tecnam 4851 departing downwind runway three-five, tracking north-east, passing one thousand eight hundred, climbing three thousand five hundred feet. Bendigo."*



TRANSPONDER CODES

Many aircraft are now fitted with transponders that broadcast altitude, position and identification to Air Services via ADS-B.


Codes are used to convey the status of the flight.

- 1200** VFR flight in Class G airspace
- 2000** IFR flight in Class G airspace or IFR flights into Class E airspace
- 3000** Flight into controlled airspace
- 7700** Emergency – Mayday
- 7600** Radio failure

OPERATING THE TRANSPONDER

- ✱ Transponders should be on **ground mode** on the apron and on **Alt** when in flight.

Each brand has a sequence to get to Alt – check the instructions for the unit in your aircraft.

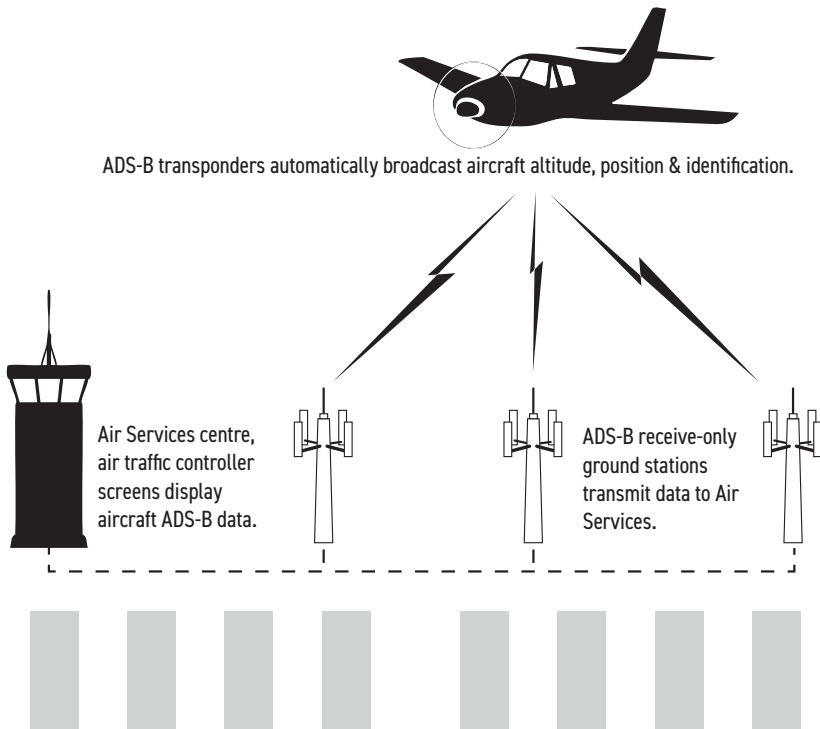

CIRCUIT PROCEDURES

AT FAMILIAR AIRSTRIPS

Enter from the “dead-side” or upwind side at circuit height and join at mid-crosswind.

To join on downwind, approach at circuit height, at 45 degrees to the downwind leg and join abeam long or mid-crosswind.

AT UNFAMILIAR AIRSTRIPS

Overfly the aerodrome at 1,000 feet above circuit height, noting wind direction, circuit traffic, the active runway and serviceability of the aerodrome (special procedures, animals and other obstructions).

Descend to circuit height on the “dead-side” and turn onto mid-crosswind.

CIRCUIT DEPARTURE

Track an extension of a circuit leg.

Track upwind 3 miles before turning against circuit direction.


AFTER LANDING

- ★ Radio call clear of all runways.
- ★ Turn off transponder, fuel pump, landing lights and raise flaps.
- ★ Taxi the aircraft to the parking bay or hangar. Refuel.

SHUT DOWN

- ★ Turn off all switches including the radio.
- ★ **Mixture fully off**
- ★ Turn off magneto switches one at a time and then ignition key.
- ★ Secure controls if parked outside and tie down if necessary.
- ★ Enter post-flight details on the *Aircraft Booking Sheet* in the clubrooms.
- ★ Pay.



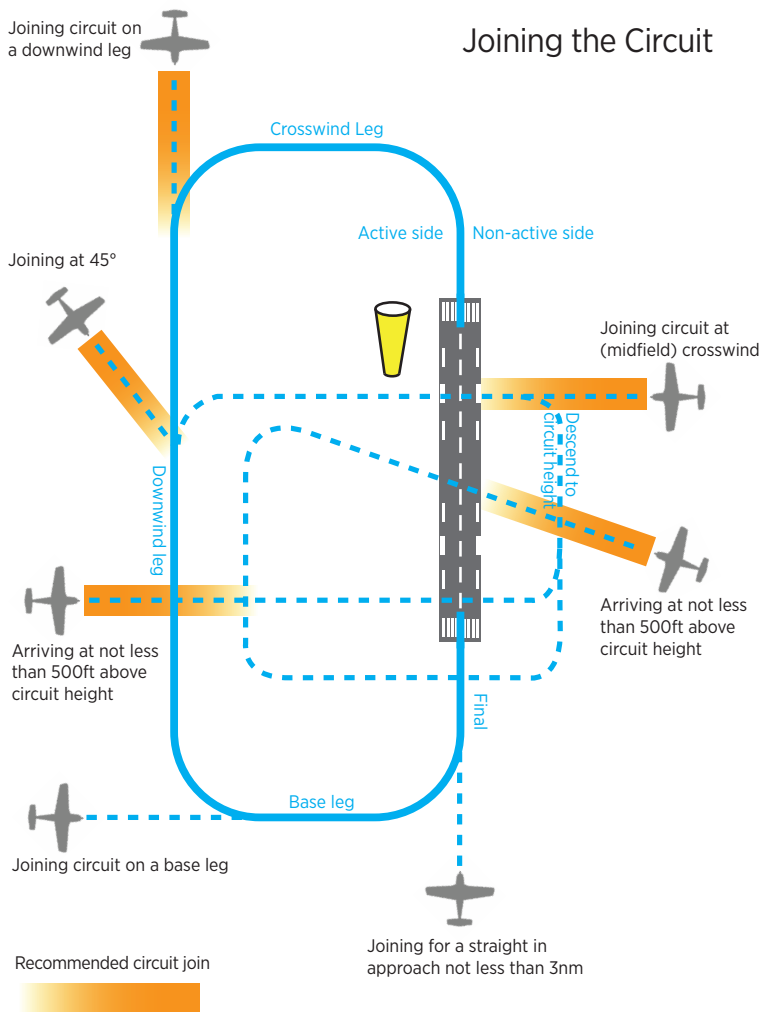

SPECIAL PROCEDURES

CROSS WIND TAKE-OFF

- ✧ Hold aileron into the wind.
- ✧ Hold aircraft on runway with forward stick until slightly above normal take-off speed.
- ✧ Lift off cleanly.
- ✧ Allow aircraft to weathercock but maintain track along runway.

CROSS WIND LANDING

- ✧ On final, bank into the wind, wing down.
- ✧ Keep nose aligned along runway with rudder.
- ✧ Touch down on one wheel.

FLYING THROUGH TURBULENCE

- ✧ Reduce power to minimise discomfort.
- ✧ ASI should be in the green arc.

SHORT FIELD TAKE-OFF

- ✧ Line up on runway.
- ✧ Set flaps for take-off.
- ✧ Apply handbrake.
- ✧ Run up to full throttle.
- ✧ Release handbrake.
- ✧ Accelerate to **55/45** knots and begin rotation.
- ✧ Hold **80/68** knots with nose attitude until 300 feet AGL.
- ✧ Raise flaps and resume normal climb.

SHORT FIELD LANDING

- ✧ Apply first stage of flap on Base.
- ✧ Set aircraft up on final slightly lower than usual.
- ✧ Extend full flaps maintaining **65/55** knots.
- ✧ Once over threshold, bring engine back to idle.
- ✧ When aircraft settles on runway, apply brakes firmly.



NAVIGATION PROCEDURES

- ✧ Obtain the weather forecast from an authorised source – NAIPS, AvPlan or Ozrunways. Check both GAF and GPWT.
- ✧ Obtain TAFs for each destination airport.
- ✧ Check the NOTAMS including the status of danger or restricted zones.
- ✧ Further information can be obtained from other sources such as **Willy Weather** (long range trends), **Windy** (comparison of actual vs forecast conditions on the ground) or **airport webcams**.
- ✧ Make sure your maps (electronic or paper) are current.
- ✧ Draw in flight tracks, heading boxes, airfield details, frequencies and 10 nautical mile markers.
- ✧ Prepare your flight plan.
- ✧ Check times and distances.
- ✧ Work out fuel needs.
- ✧ Allow for headwinds, getting lost and weather diversions.

IN-FLIGHT CHECK

- F** - Fuel management
- C** - Compass, Headings
- L** - Log relevant detail
- E** - Engine, temperatures and pressures
- A** - Altimetry, check altitude and sub-scale setting
- R** - Radio, correct frequency, volume, calls required



EMERGENCY PROCEDURES

FORCED LANDINGS

(Aviate, Navigate, Communicate)

Colour code: **Piper Archer** / **Tecnam**s

FLY THE AIRCRAFT

1. Set attitude and trim for best glide speed – **75** / **68** kts.
2. Quick checks – can this be fixed?
 - F** – Fuel pump on, check fuel taps and quantity.
 - F** – Fire – check for smoke behind you.
 - M** – Mixture (check choke or move mixture to rich).
 - O** – Oil and CHT temps and pressures – check in the green.
 - S** – Switches (check magneto switches and ignition).
 - T** – Throttle can be moved in and out – may assist.
3. Move in or out depending on height.
4. Locate landing site - within a 45 degree radius.

FLY THE AIRCRAFT


- ☆ Plan a **Downwind**, **Base** and **Final** circuit.
- ☆ Note wind direction and obstacles.

FLY THE AIRCRAFT

4. Give a **MAYDAY** call – to Melbourne Centre.
5. Brief passengers, secure loose items and unlatch doors.
6. On Base, adjust height, turn **OFF** fuel and magnetos.
7. Extend flaps only when you're confident of making the field.

When ready to land, turn **Master Switch** / **Ignition Key OFF**.



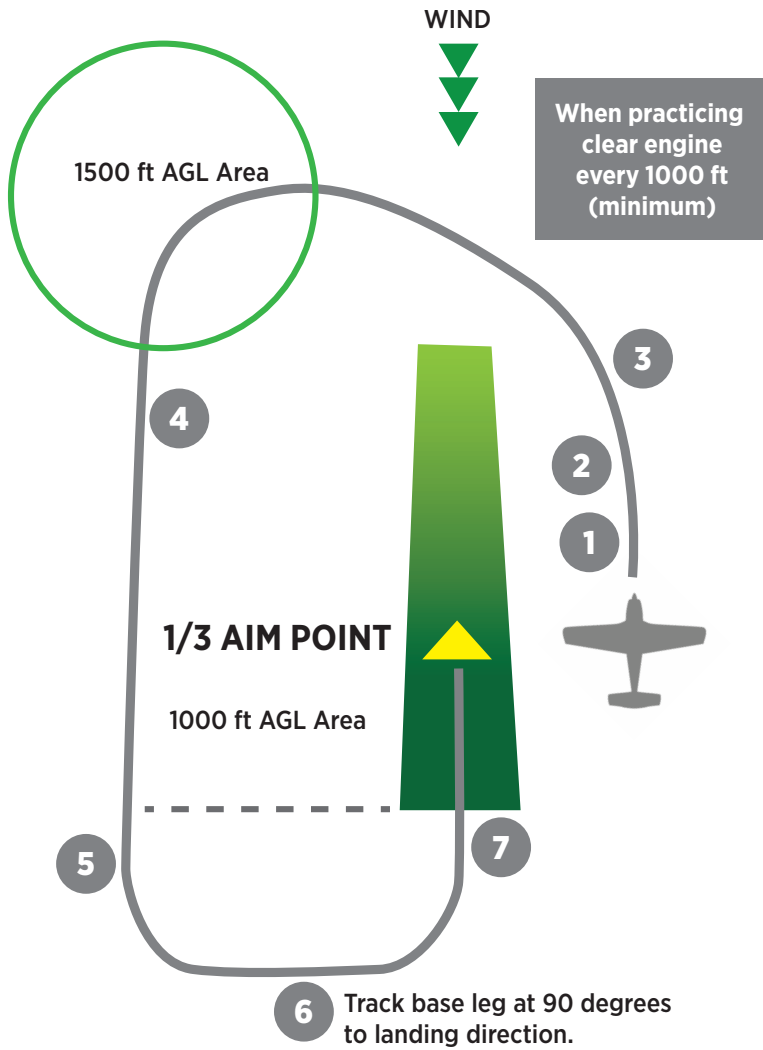

EMERGENCY LOCATOR BEACONS

When an emergency locator beacon is activated it transmits a distress signal which is detected by a network of satellites. The information transmitted is used by search and rescue authorities to locate the beacon and find the aircraft and people in distress.

ResQLink Personal Locator Beacon

To activate your ResQLink beacon in a distress situation, follow these steps:


1. Unclip the antenna latch from the case and move the antenna into the upright position.

2. Depress the ON/OFF button for one full second.

You will see a strobe light flash once every second while a RED light will flash once every three seconds to let you know the beacon has been activated.

After the First Minute: While transmitting your distress signal, the RED light and Strobe light each will flash once every three seconds, alerting you that your beacon is active.

When the RED light is replaced by the GREEN light, this indicates that your beacon has successfully downloaded your GPS coordinates and is transmitting them along with your distress signal.

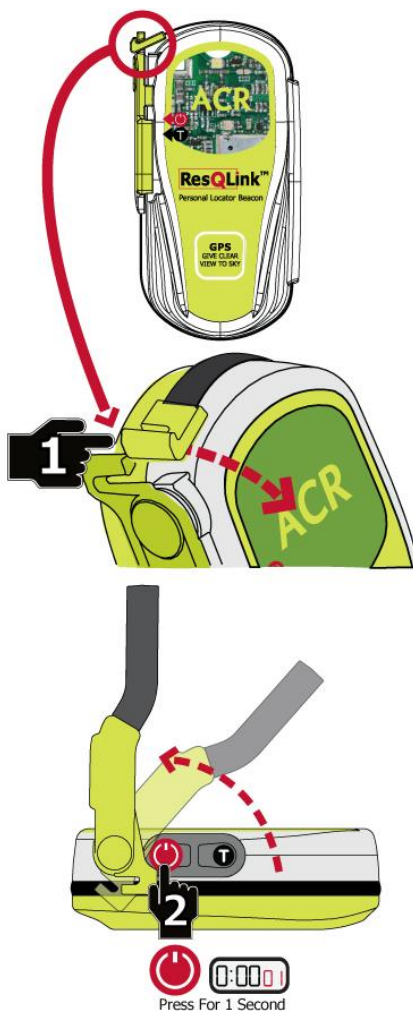


EACH BFC AIRCRAFT HAS AN EMERGENCY BEACON. KNOW WHERE THEY ARE AND HOW TO ACTIVATE THEM.

ACCUSAT PLB

To activate the ACCUSAT Personal Locator Beacon:


- 1. Hold the beacon firmly and release the antenna by pushing the black arm (where marked by a yellow triangle) inwards then upwards. The antenna will quickly uncoil and extend.**
- 2. Swing the antenna fully upwards 180 degrees clockwise, breaking the safety seal. The antenna arm will click into place.**

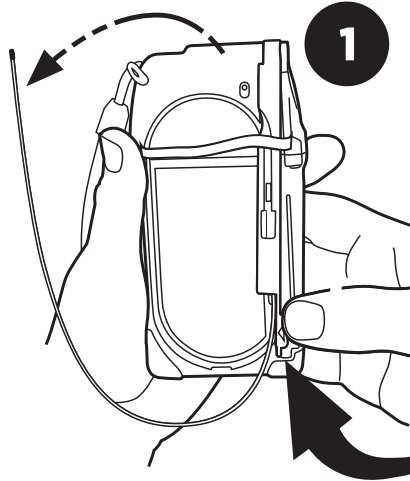

The PLB is now active.

The beacon will 'beep' and pulse the inbuilt light 20-21 times per minute and emit a rapid series of 'beeps' and light flashes for a period of six seconds, indicating it has acquired a GPS position fix and is relaying this position along with the distress signal and the unique personal identifier to the satellite system.

After six seconds the beacon will continue to 'beep' and pulse the light 20-21 times per minute.

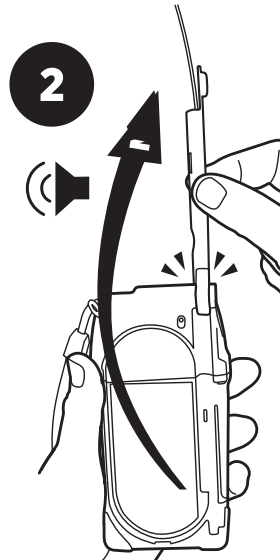

BFC EMERGENCY RESPONSE

Dial 000 and request emergency assistance if an aircraft accident is witnessed or has likely occurred and the accident location is known.

Dial 1800 815 257 for the Joint Rescue Coordination Centre (JRCC) and **0499 700 128** for the Aerodrome Reporting Officer (ARO) if an aircraft is missing or likely crashed but the position is unknown.

Dial 000 if a medical emergency [non-aircraft accident] is reported.

AVIATION ACCIDENT EMERGENCY RESPONSE

EMERGENCY000

JRCC 1800 815 257

ARO0499 700 128

BFC CFI 0409 940 184

Provide the following information:

1. Number and location of victim(s).
2. Nature of injury or illness.
3. Hazards involved (including existence of ballistic parachutes).
4. First aid care being administered.
5. Address and nearest entrance (emergency access point/aerodrome crash gates etc.).
6. Any other pertinent information.

Medical Emergency Response Procedures

- ✧ Alert any first aid, CPR trained employees, club members to also respond to victim's location with a first aid kit. A first aid kit is located by the apron side external door of the clubhouse.
- ✧ If an ambulance is called, direct it to the nearest entrance/emergency access point to the incident. Guide paramedics to victim(s). (Public access gate code 1818#).
- ✧ Individuals onsite who are trained in administering first aid should respond and provide assistance if possible. **WARNING:** Some aircraft have ballistic parachutes!
- ✧ Control access to the scene.
- ✧ Take precautions to prevent contact with body fluids.
- ✧ Handover to emergency services as soon as they arrive.

Secondary Response Procedures

- ✧ Preserve wreckage/equipment as found for ATSB investigation.
- ✧ If the ATSB decides not to investigate the wreckage/equipment becomes the property of Victoria Police.

RA registered pilots are required to report incidents to RAAus

- ✧ RAAus reporting system: <https://oms.raa.asn.au/lodge/>
- ✧ Further information: safety@raaus.asn.au or 02 6280 4700
- ✧ **IRM:** Immediately reportable matters (death and serious injury, aircraft or property destroyed or seriously damaged, missing aircraft). Report within 24 hours.
- ✧ **RRM:** Routinely reportable matters (airspace or runway incursions, loss of control not resulting in injury or damage, communication issues, near miss in controlled airspace, declaration of emergencies). Report within 72 hours.

Inform the BFC CFI of any reports submitted relating to BFC aircraft.

BENDIGO FLYING CLUB**Members' Manual****Reach for the Sky**

Phone: 03 5443 8395

Email: bfc@bendigoflyingclub.com.au

Website: www.bendigoflyingclub.com.au

